




---

Junos<sup>®</sup> OS

## Getting Started Guide



---

Modified: 2019-06-11



Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Junos® OS Getting Started Guide*

Copyright © 2019 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

	About the Documentation . . . . .	ix
	Documentation and Release Notes . . . . .	ix
	Using the Examples in This Manual . . . . .	ix
	Merging a Full Example . . . . .	x
	Merging a Snippet . . . . .	x
	Documentation Conventions . . . . .	xi
	Documentation Feedback . . . . .	xiii
	Requesting Technical Support . . . . .	xiii
	Self-Help Online Tools and Resources . . . . .	xiv
	Creating a Service Request with JTAC . . . . .	xiv
<b>Chapter 1</b>	<b>Accessing a Junos OS Device . . . . .</b>	<b>15</b>
	Initial Configuration Overview for Junos OS Devices . . . . .	15
	Understanding the Console Port . . . . .	16
	Accessing a Junos OS Device the First Time . . . . .	17
<b>Chapter 2</b>	<b>Understanding the Junos OS . . . . .</b>	<b>19</b>
	Understanding Junos OS Infrastructure and Processes . . . . .	19
	Routing Engine and Packet Forwarding Engine . . . . .	19
	Junos OS Processes . . . . .	20
	Understanding Software Infrastructure and Processes on EX Series	
	Switches . . . . .	22
	Routing Engine and Packet Forwarding Engine . . . . .	22
	Junos OS Processes . . . . .	22
<b>Chapter 3</b>	<b>Configuring the Root Password . . . . .</b>	<b>25</b>
	Understanding the Root Password . . . . .	25
	Protecting Network Security by Configuring the Root Password . . . . .	25
<b>Chapter 4</b>	<b>Configuring the Hostname . . . . .</b>	<b>29</b>
	Understanding Hostnames . . . . .	29
	Configuring the Hostname of a Router or Switch by Using a Configuration	
	Group . . . . .	30
<b>Chapter 5</b>	<b>Configuring DNS . . . . .</b>	<b>33</b>
	DNS Overview . . . . .	33
	DNS Components . . . . .	33
	DNS Server Caching . . . . .	33
	Configuring a DNS Name Server for Resolving a Hostname into Addresses . . . . .	34
	Example: Configuring the TTL Value for DNS Server Caching . . . . .	37
	Example: Configuring the Unique Identity of a Router for Making it Accessible	
	on the Network . . . . .	38

<b>Chapter 6</b>	<b>Configuring Management and Loopback Interfaces . . . . .</b>	<b>43</b>
	Understanding Management Ethernet Interfaces . . . . .	43
	Management Interface in a Nondefault Instance . . . . .	44
	Why Use a Non-Default Management Interface . . . . .	44
	Applications and Processes That Are VRF Aware . . . . .	44
	Understanding the Loopback Interface . . . . .	46
	Configuring the Loopback Interface . . . . .	46
	Configuring the Loopback Interface . . . . .	47
	Example: Configuring Two Addresses on the Loopback Interface with Host Routes . . . . .	48
	Example: Configuring Two Addresses on the Loopback Interface with Subnetwork Routes . . . . .	48
	Example: Configuring an IPv4 and an IPv6 Address on the Loopback Interface with Subnetwork Routes . . . . .	49
<b>Chapter 7</b>	<b>Configuring User Accounts . . . . .</b>	<b>51</b>
	Junos OS User Accounts Overview . . . . .	51
	Configuring Junos OS User Accounts by Using a Configuration Group . . . . .	53
	Enabling Remote Access . . . . .	56
<b>Chapter 8</b>	<b>Configuring Backup Routers . . . . .</b>	<b>59</b>
	Understanding Backup Routers . . . . .	59
	Configuring a Backup Router . . . . .	60
	Configuring a Backup Router Running IPv4 . . . . .	61
	Configuring a Backup Router Running IPv6 . . . . .	62
<b>Chapter 9</b>	<b>Configuration Statements . . . . .</b>	<b>65</b>
	backup-router . . . . .	66
	cli . . . . .	67
	domain-name . . . . .	68
	domain-search . . . . .	69
	host-name . . . . .	70
	inet6-backup-router . . . . .	71
	load-key-file . . . . .	72
	management-instance . . . . .	73
	name-server . . . . .	74
	non-subscriber-no-reply . . . . .	75
	root-authentication . . . . .	76
	static-host-mapping . . . . .	78

# List of Figures

<b>Chapter 1</b>	<b>Accessing a Junos OS Device . . . . .</b>	<b>15</b>
	Figure 1: Connecting to the Console Port on a Junos OS Device . . . . .	16
<b>Chapter 8</b>	<b>Configuring Backup Routers . . . . .</b>	<b>59</b>
	Figure 2: Backup Router Sample Topology . . . . .	61



# List of Tables

	<b>About the Documentation . . . . .</b>	<b>ix</b>
	Table 1: Notice Icons . . . . .	xi
	Table 2: Text and Syntax Conventions . . . . .	xii
<b>Chapter 2</b>	<b>Understanding the Junos OS . . . . .</b>	<b>19</b>
	Table 3: Junos OS Processes . . . . .	20
	Table 4: Junos OS Processes . . . . .	23
<b>Chapter 5</b>	<b>Configuring DNS . . . . .</b>	<b>33</b>
	Table 5: Values to Use in Example . . . . .	39





# About the Documentation

- Documentation and Release Notes on page ix
- Using the Examples in This Manual on page ix
- Documentation Conventions on page xi
- Documentation Feedback on page xiii
- Requesting Technical Support on page xiii

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

## Documentation Conventions

Table 1 on page xi defines notice icons used in this guide.

*Table 1: Notice Icons*







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> <b>show chassis alarms</b>  No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Introduces or emphasizes important new terms.</li> <li>Identifies guide names.</li> <li>Identifies RFC and Internet draft titles.</li> </ul>	<ul style="list-style-type: none"> <li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li><i>Junos OS CLI User Guide</i></li> <li>RFC 1997, <i>BGP Communities Attribute</i></li> </ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> <li>To configure a stub area, include the <b>stub</b> statement at the [edit protocols <b>ospf area area-id</b>] hierarchy level.</li> <li>The console port is labeled <b>CONSOLE</b>.</li> </ul>
< > (angle brackets)	Encloses optional keywords or variables.	<b>stub</b> <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast</b>   <b>multicast</b>  ( <i>string1</i>   <i>string2</i>   <i>string3</i> )
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<b>community name members</b> [ <b>community-ids</b> ]
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	

## GUI Conventions

Table 2: Text and Syntax Conventions (continued)

Convention	Description	Examples
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> <li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li> <li>To cancel the configuration, click <b>Cancel</b>.</li> </ul>
<b>&gt;</b> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:



- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active Juniper Care or Partner Support Services support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Create a service request online: <https://myjuniper.juniper.net>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

## Creating a Service Request with JTAC

You can create a service request with JTAC on the Web or by telephone.

- Visit <https://myjuniper.juniper.net>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://support.juniper.net/support/requesting-support/>.

## CHAPTER 1

# Accessing a Junos OS Device

- [Initial Configuration Overview for Junos OS Devices on page 15](#)
- [Understanding the Console Port on page 16](#)
- [Accessing a Junos OS Device the First Time on page 17](#)

### Initial Configuration Overview for Junos OS Devices

---

After you install and power on the Junos OS device, you are ready to begin initial configuration. The Junos OS is preinstalled on all devices. The procedures in this guide show you how to connect the router to the network but do not enable it to forward traffic. For complete information about enabling the router to forward traffic, including examples, see the Junos OS configuration guides. For information about how to upgrade or reinstall software, see the *Junos OS Installation and Upgrade Guide*.

Gather the following information before configuring the device:

- Name the device will use on the network.
- Domain name the device will use.
- IP address and prefix length information for the Ethernet interface.
- IP address of a default device.
- IP address of a DNS server
- Password for the root user

You configure the device by issuing Junos OS CLI commands, either on a console device attached to the console port on the Routing Engine or over a Telnet connection to a network connected to the management port on the Routing Engine.



**NOTE:** Only console access to the device is enabled by default. Use a console port to connect to the device initially.

#### Related Documentation

- [Junos OS Overview](#)
- [Understanding the Console Port on page 16](#)

- [Accessing a Junos OS Device the First Time on page 17](#)

## Understanding the Console Port


We recommend that you upgrade all individual software packages using an out-of-band connection from the console or management Ethernet interface, because in-band connections can be lost during the upgrade process.

Console ports allow root access to the Junos operating system (Junos OS) devices through a terminal or laptop interface, regardless of the state of the Junos OS device, unless it is completely powered off. By connecting to the console port, you can access the root level of the Junos OS device without using the network to which the device might or might not be connected. This creates a secondary path to the Junos OS device without relying on the network.

Using the terminal interface provides a technician sitting in a Network Operations Center a long distance away the ability to restore a Junos OS device or perform an initialization configuration securely, using a modem, even if the primary network has failed. Without a connection to the console port, a technician would have to visit the site to perform repairs or initialization. A remote connection to the Junos OS device through a modem requires the cable and connector (provided in the device accessory box), plus a DB-9 male to DB-25 male (or similar) adapter for your modem, which you must purchase separately. For more information about connecting to the console port, see the administration guide for your particular router or switch.

To configure the device initially, you must connect a terminal or laptop computer to the device through the console port, as shown in [Figure 1 on page 16](#).

*Figure 1: Connecting to the Console Port on a Junos OS Device*

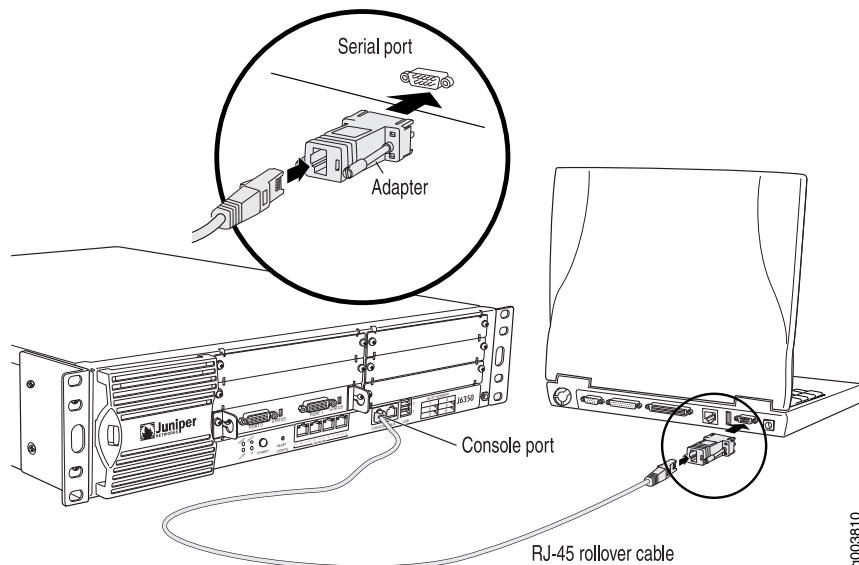



- Related Documentation**
- [Initial Configuration Overview for Junos OS Devices on page 15](#)
  - [Accessing a Junos OS Device the First Time on page 17](#)

## Accessing a Junos OS Device the First Time

When you power on a Junos OS device the first time, Junos OS automatically boots and starts.

To configure the device initially, you must connect a terminal or laptop computer to the device through the console port—a serial port on the front of the router. Only console access to the device is enabled by default. Remote management access to the router and all management access protocols, including Telnet, FTP, and SSH, are disabled by default.

To access a Junos OS device the first time:

1. Connect a terminal or laptop computer to the Junos OS device through the console port—a serial port on the front of the device.

2. Power on the device and wait for it to boot.

Junos OS boots automatically. The boot process is complete when you see the **login:** prompt on the console.

3. Log in as the user **root**.

Initially, the root user account requires no password. You can see that you are the **root** user, because the prompt on the device shows the username **root@%**.

4. Start the Junos OS command-line interface (CLI).

```
root@% cli
root@>
```

5. Enter Junos OS configuration mode.

```
cli> configure
[edit]
root@#
```

- Related Documentation**
- [Initial Configuration Overview for Junos OS Devices on page 15](#)
  - [Understanding the Root Password on page 25](#)
  - [Protecting Network Security by Configuring the Root Password on page 25](#)
  - [Recovering the Root Password](#)



## CHAPTER 2

# Understanding the Junos OS

- [Understanding Junos OS Infrastructure and Processes on page 19](#)
- [Understanding Software Infrastructure and Processes on EX Series Switches on page 22](#)

## Understanding Junos OS Infrastructure and Processes

---

Junos OS includes processes for Internet Protocol (IP) routing and for managing interfaces, networks, and the switch.

Junos OS runs on the Routing Engine. The Routing Engine kernel coordinates communication among the Junos OS processes and provides a link to the Packet Forwarding Engine.

Using the Junos OS command-line interface (CLI), you configure switching features and set the properties of network interfaces. After activating a software configuration, use either the Junos Space or CLI user interface to monitor, manage operations, and diagnose protocol and network connectivity problems.

- [Routing Engine and Packet Forwarding Engine on page 19](#)
- [Junos OS Processes on page 20](#)

## Routing Engine and Packet Forwarding Engine

A switch has two primary software processing components:

- Packet Forwarding Engine—Processes packets; applies filters, routing policies, and other features; and forwards packets to the next hop along the route to their final destination.
- Routing Engine—Provides three main functions:
  - Creates the packet forwarding switch, which provides route lookup, filtering, and switching on incoming data packets, and then directs outbound packets to the appropriate interface for transmission to the network.
  - Maintains the routing tables used by the switch and controls the routing protocols that run on the switch.
  - Provides control and monitoring functions for the switch, including controlling power and monitoring system status.

## Junos OS Processes

Junos OS running on the Routing Engine and Packet Forwarding Engine consists of multiple processes that are responsible for individual functions.

The separation of functions provides operational stability, because each process accesses its own protected memory space. In addition, because each process is a separate software package, you can selectively upgrade all or part of the Junos OS for added flexibility.

[Table 3 on page 20](#) describes the primary Junos OS processes.

**Table 3: Junos OS Processes**

Process	Name	Description
Chassis process	chassisd	<p>Detects hardware on the system that is used to configure network interfaces.</p> <p>Monitors the physical status of hardware components and field-replaceable units (FRUs), detecting when environment sensors such as temperature sensors are triggered.</p> <p>Relays signals and interrupts—for example, when devices are taken offline, so that the system can close sessions and shut down gracefully.</p>
DNS server process	named-service	Resolves hostnames into addresses.
Dynamic Host Configuration Protocol (DHCP) process	dhcp-service	Enables a DHCP server to allocate network IP addresses and deliver configuration settings to client hosts without user intervention.
Ethernet switching process	eswd	<p>Handles Layer 2 switching functionality such as MAC address learning, Spanning Tree Protocol, and access port security.</p> <p>Manages Ethernet switching interfaces, VLANs, and VLAN interfaces.</p>
Firewall management process	firewall	Manages the firewall configuration and helps accept or reject packets that are transiting an interface on a switch.
Forwarding process	pfem	Defines how routing protocols operate on the partition. The overall performance of the partition is largely determined by the effectiveness of the forwarding process.
Interface process	dcd	Configures and monitors network interfaces by defining physical characteristics such as link encapsulation, hold times, and keepalive timers.
Integrated Local Management Interface (ILMI) process	ilmi	Provides bidirectional exchange of management information between two ATM interfaces across a physical connection.
Link Management Protocol (LMP) process	link-management	Establishes and maintains LMP control channels.

Table 3: Junos OS Processes (continued)

Process	Name	Description
Management process	mgd	<p>Provides communication between the other processes and an interface to the configuration database.</p> <p>Populates the configuration database with configuration information and retrieves the information when queried by other processes to ensure that the system operates as configured.</p> <p>Interacts with the other processes when commands are issued through one of the user interfaces on the partition.</p> <p>If a process terminates or fails to start when called, the management process attempts to restart it a limited number of times to prevent thrashing and logs any failure information for further investigation.</p>
Multicast snooping process	<del>multicast-snooping</del>	Makes Layer 2 devices, such as VLAN switches, aware of Layer 3 information, such as the media access control (MAC) addresses of members of a multicast group.
Secure Neighbor Discovery (SEND) protocol process	send	Protects Neighbor Discovery Protocol (NDP) messages.
Simple Network Management Protocol (SNMP) process	snmp	Enables the monitoring of network devices from a central location and provides the switch's SNMP master agent.
Tunnel OAM process	tunnel-oamd	Enables the Operation, Administration, and Maintenance of Layer 2 tunneled networks. Layer 2 protocol tunneling (L2PT) allows service providers to send Layer 2 protocol data units (PDUs) across the provider's cloud and deliver them to Juniper Networks EX Series Ethernet Switches that are not part of the local broadcast domain.
Virtual Router Redundancy Protocol (VRRP) process	vrrp	Enables hosts on a LAN to make use of redundant routing platforms on that LAN without requiring more than the static configuration of a single default route on the hosts.

**Related Documentation**

- *Junos OS Baseline Network Operations Guide*
- *Junos OS Administration Library*

## Understanding Software Infrastructure and Processes on EX Series Switches

---

Each switch runs the Juniper Networks Junos operating system (Junos OS) for Juniper Networks EX Series Ethernet Switches on its general-purpose processors. Junos OS includes processes for Internet Protocol (IP) routing and for managing interfaces, networks, and the chassis.

Junos OS runs on the Routing Engine. The Routing Engine kernel coordinates communication among the Junos OS processes and provides a link to the Packet Forwarding Engine.

With the J-Web interface and the command-line interface (CLI) to Junos OS, you configure switching features and routing protocols and set the properties of network interfaces on your switch. After activating a software configuration, use either the J-Web or CLI user interface to monitor the switch, manage operations, and diagnose protocol and network connectivity problems.

- [Routing Engine and Packet Forwarding Engine on page 22](#)
- [Junos OS Processes on page 22](#)

### Routing Engine and Packet Forwarding Engine

A switch has two primary software processing components:

- Packet Forwarding Engine—Processes packets; applies filters, routing policies, and other features; and forwards packets to the next hop along the route to their final destination.
- Routing Engine—Provides three main functions:
  - Creates the packet forwarding switch fabric for the switch, providing route lookup, filtering, and switching on incoming data packets, then directing outbound packets to the appropriate interface for transmission to the network
  - Maintains the routing tables used by the switch and controls the routing protocols that run on the switch.
  - Provides control and monitoring functions for the switch, including controlling power and monitoring system status.

### Junos OS Processes

The Junos OS running on the Routing Engine and Packet Forwarding Engine consists of multiple processes that are responsible for individual functions.

The separation of functions provides operational stability, because each process accesses its own protected memory space. In addition, because each process is a separate software package, you can selectively upgrade all or part of the Junos OS, for added flexibility.

[Table 3 on page 20](#) describes the primary Junos OS processes.

Table 4: Junos OS Processes

Process	Name	Description
Chassis process	chassisd	<p>Detects hardware on the system that is used to configure network interfaces.</p> <p>Monitors the physical status of hardware components and field-replaceable units (FRUs), detecting when environment sensors such as temperature sensors are triggered.</p> <p>Relays signals and interrupts—for example, when devices are taken offline, so that the system can close sessions and shut down gracefully.</p>
Ethernet switching process	eswd	<p>Handles Layer 2 switching functionality such as MAC address learning, Spanning Tree Protocol and access port security. The process is also responsible for managing Ethernet switching interfaces, VLANs, and VLAN interfaces.</p> <p>Manages Ethernet switching interfaces, VLANs, and VLAN interfaces.</p> <p><b>NOTE:</b> The process is not applicable for EX2300 and EX3400 switches</p>
Forwarding process	pfem	Defines how routing protocols operate on the switch. The overall performance of the switch is largely determined by the effectiveness of the forwarding process.
Interface process	dcd	Configures and monitors network interfaces by defining physical characteristics such as link encapsulation, hold times, and keepalive timers.
Management process	mgd	<p>Provides communication between the other processes and an interface to the configuration database.</p> <p>Populates the configuration database with configuration information and retrieves the information when queried by other processes to ensure that the system operates as configured.</p> <p>Interacts with the other processes when commands are issued through one of the user interfaces on the switch.</p> <p>If a process terminates or fails to start when called, the management process attempts to restart it a limited number of times to prevent thrashing and logs any failure information for further investigation.</p>
Routing protocol process	rpd	Defines how routing protocols such as RIP, OSPF, and BGP operate on the device, including selecting routes and maintaining forwarding tables.

**Related Documentation** • *EX Series Ethernet Switches*





## CHAPTER 3

# Configuring the Root Password

- [Understanding the Root Password on page 25](#)
- [Protecting Network Security by Configuring the Root Password on page 25](#)

### Understanding the Root Password

---

The root user has complete privileges to operate and configure the Junos OS device, perform upgrades, and manage files in the file system. Initially, the root password is not defined on the Junos OS device. To ensure basic security, you must define the root password during initial configuration. If a root password is not defined, you cannot commit configuration settings on the device.



**NOTE:** If you use a plain text password, Junos OS displays the password as an encrypted string so that users viewing the configuration cannot see it.

The root password must meet the following conditions:

- Be at least six characters long. Most character classes can be included in a password (alphabetic, numeric, and special characters), except control characters.
- Contain at least one change of case or character class.

#### Related Documentation

- [Protecting Network Security by Configuring the Root Password on page 25](#)

### Protecting Network Security by Configuring the Root Password

---

Configuring the root password on your Junos OS-enabled router helps prevent unauthorized users from making changes to your network. The root user (also referred to as superuser) has unrestricted access and full permissions within the system, so it is crucial to protect these functions by setting a strong password when setting up a new router.

After a new router is initially powered on, you log in as the user **root** with no password. Junos OS requires configuration of the root password before it accepts a commit operation. On a new device, the root password must always be a part of the configuration submitted with your initial commit.

To set the root password, you have a few options as shown in Step 1 of the following procedure.

- Enter a plain-text password that Junos OS encrypts.
- Enter a password that is already encrypted.
- Enter a secure shell (ssh) public key string.

The most secure options of these three are using an already encrypted password or an ssh public key string. Pre-encrypting your password or using a ssh public key string means the plain-text version of your password will never be transferred over the internet, protecting it from being intercepted by a man-in-the-middle attack.



**BEST PRACTICE:** Optionally, instead of configuring the root password at the `[edit system]` hierarchy level, you can use a configuration group to strengthen security, as shown in Step 2 of this procedure. This step uses a group called `global` as an example.

To set the root password:

1. Use one of these methods to configure the root password:
  - To enter a plain-text password that the system encrypts for you:

```
[edit groups global system]
root@# set root-authentication plain-text-password
New Password: type password here
Retype new password: retype password here
```

If you use a plain-text password, Junos OS displays the password as an encrypted string so that users viewing the configuration cannot see it. As you enter the password in plain text, Junos OS encrypts it immediately. You do not have to configure Junos OS to encrypt the password as in some other systems. Plain-text passwords are hidden and marked as **## SECRET-DATA** in the configuration.

- To enter a password that is already encrypted:



**CAUTION:** Do not use the `encrypted-password` option unless the password is *already* encrypted, and you are entering the encrypted version of the password.

If you accidentally configure the `encrypted-password` option with a plain-text password or with blank quotation marks (`" "`), you will not be able to log in to the device as root, and you will need to complete the root password recovery process.

```
[edit groups global system]
root@# set root-authentication encrypted-password password
```

- To enter an ssh public key string:

```
[edit groups global system]
root@# set root-authentication (ssh-dsa | ssh-eccdsa | ssh-rsa key)
```

2. If you used a configuration group in Step 2, apply the configuration group, substituting **global** with the appropriate group name.

```
[edit]
user@host# set apply-groups global
```

3. Commit the changes.

```
root@# commit
```

**Related  
Documentation**

- [Accessing a Junos OS Device the First Time on page 17](#)



## CHAPTER 4

# Configuring the Hostname

- [Understanding Hostnames on page 29](#)
- [Configuring the Hostname of a Router or Switch by Using a Configuration Group on page 30](#)

## Understanding Hostnames

---

Almost all devices in your network have a hostname.

The hostname is the name that identifies the device on the network and is easier to remember than an IP address. When you first power on a Juniper Networks router, switch, or security device, the default hostname is *Amnesiac*. The *Amnesiac* prompt is indicative of a device that is booting from a factory-fresh Junos OS software load, which, by definition, does not have a hostname configured.

Administrators often follow conventions for naming devices. One such convention is to name the device based on its location, for example: *germany-berlin-R1*. The hostname should be unique within your network infrastructure, but there is no need for the local hostname to be globally unique.

A device's hostname usually has a corresponding entry in the domain name system (DNS) so that administrators can connect to the device using the hostname. The fully qualified domain name (FQDN), which is used in DNS, includes the hostname and the domain name. The hostname and the domain name labels are separated by periods or dots, as follows: *hostname.domain*. For example, if the hostname is *germany-berlin-R1* and the domain name is *emea*, the FQDN is *germany-berlin-R1.emea*. If the *emea* domain is registered and can be reached as *emea.net* on the Internet, the FQDN for the device is *germany-berlin-R1.emea.net*. The FQDN is globally unique.

In Junos OS, the hostname can contain any combination of alphabetic characters, numbers, dashes, and underscores. No other special characters are allowed.

Although Junos OS allows hostnames to contain up to 255 characters, keep in mind that the total length of the hostname as an FQDN cannot exceed 255 characters (including the delimiting dots), with each domain name label having a maximum length of 63 characters. In any case, an overly long hostname is difficult to type and to remember, so short and meaningful hostnames are a best practice.

Related • [Getting Started Guide](#)  
Documentation

## Configuring the Hostname of a Router or Switch by Using a Configuration Group

---

The hostname of a device is its identification. A router or switch must have its identity established to be accessible on the network to other devices. That is perhaps the most important reason to have a hostname, but a hostname has other purposes: Junos OS uses the configured hostname as part of the command prompt, to prepend log files and other accounting information, as well as in other places where knowing the device identity is useful. We recommend that the hostname be descriptive and memorable.

You can configure the hostname at the **[edit system]** hierarchy level, a procedure shown in [“Example: Configuring the Unique Identity of a Router for Making it Accessible on the Network” on page 38](#). Optionally, instead of configuring the hostname at the **[edit system]** hierarchy level, you can use a configuration group, as shown in this procedure. This is a recommended best practice for configuring the hostname, especially if the device has dual Routing Engines. This procedure uses groups called **re0** and **re1** as an example.



**NOTE:** Starting with Junos OS Release 13.2R3, if you configure hostnames that are longer than the CLI screen width, regardless of the terminal screen width setting, the commit operation occurs successfully. Even if the terminal screen width is less than the hostname length, commit is successful. In Junos OS releases earlier than Release 13.2R3, if you configured such hostnames by using the `host-name hostname` statement at the **[edit system]** hierarchy level and the terminal screen width was less than the length of the hostname by using the `set cli screen-width` statement, a foreign file propagation (ffp) failure error message is displayed when you attempt to commit the configuration. In such a case, because of the ffp failure, the commit operation does not complete and you cannot recover the router unless you make the modification in the backend in the `juniper.conf.gz` file and commit the change from the shell prompt.

To set the hostname using a configuration group:

1. Include the **host-name** statement in the configuration at the **[edit groups group-name system]** hierarchy level.

The name value must be less than 256 characters.

```
[edit groups group-name system]
host-name hostname;
```

For example:

```
[edit groups re0 system]
root@# set host-name san-jose-router0
```

```
[edit groups re1 system]
```

```
root@# set host-name san-jose-router1
```

- If you used one or more configuration groups, apply the configuration groups, substituting the appropriate group names.

For example:

```
[edit]
user@host# set apply-groups [re0 re1]
```

- Commit the changes.

```
[edit]
root@# commit
```

The hostname subsequently appears in the device CLI prompt.

```
san-jose-router0#
```

**Release History Table**

Release	Description
13.2R3	Starting with Junos OS Release 13.2R3, if you configure hostnames that are longer than the CLI screen width, regardless of the terminal screen width setting, the commit operation occurs successfully.





## CHAPTER 5

# Configuring DNS

- [DNS Overview on page 33](#)
- [Configuring a DNS Name Server for Resolving a Hostname into Addresses on page 34](#)
- [Example: Configuring the TTL Value for DNS Server Caching on page 37](#)
- [Example: Configuring the Unique Identity of a Router for Making it Accessible on the Network on page 38](#)

## DNS Overview

---

A Domain Name System (DNS) is a distributed hierarchical system that converts hostnames to IP addresses. The DNS is divided into sections called zones. Each zone has name servers that respond to the queries belonging to their zones.

This topic includes the following sections:

- [DNS Components on page 33](#)
- [DNS Server Caching on page 33](#)

## DNS Components

DNS includes three main components:

- **DNS resolver** — Resides on the client side of the DNS. When a user sends a hostname request, the resolver sends a DNS query request to the name servers to request the hostname's IP address.
- **Name servers** — Processes the DNS query requests received from the DNS resolver and returns the IP address to the resolver.
- **Resource records** — Data elements that define the basic structure and content of the DNS.

## DNS Server Caching

DNS name servers are responsible for providing the hostname IP address to users. The TTL field in the resource record defines the period for which DNS query results are cached. When the TTL value expires, the name server sends a fresh DNS query and updates the cache.

**Related  
Documentation**

- [Example: Configuring the TTL Value for DNS Server Caching on page 37](#)

---

## Configuring a DNS Name Server for Resolving a Hostname into Addresses

---

Domain name system (DNS) servers are used for resolving hostnames to IP addresses.

For redundancy, it is a best practice to configure access to multiple DNS servers. You can configure a maximum of three DNS servers. The approach is similar to the way Web browsers resolve the names of a Web site to its network address. Additionally, Junos OS enables you configure one or more domain names, which it uses to resolve hostnames that are not fully qualified (in other words, the domain name is missing). This is convenient because you can use a hostname in configuring and operating Junos OS without the need to reference the full domain name. After adding DNS server addresses and domain names to your Junos OS configuration, you can use DNS resolvable hostnames in your configuration and commands instead of IP addresses.

Optionally, instead of configuring the name server at the **[edit system]** hierarchy level, you can use a configuration group, as shown in this procedure. This is a recommended best practice for configuring the name server.

Starting in Junos OS Release 19.2R1, DNS configuration can be made routing instance aware. If you configure a routing instance at the **[edit system name-server server-ip-address]** hierarchy level, the name server becomes reachable through this routing instance. Previously, in Junos OS, DNS used the default routing table, inet.0. To fully enable this routing instance, configure the following:

- `user@host# set system management-instance`
- `user@host# set routing-instances mgmt_junos description description`
- `user@host# set system name-server server-ip-address routing-instance mgmt_junos`

If you have configured the name server using a configuration group, use the **[edit groups *group-name* system name-server]** hierarchy level, which is a recommended best practice for configuring the name server.

Before you begin, configure your DNS servers with the hostname and an IP address for your Junos OS device. It does not matter which IP address you assign as the address of your Junos OS device in the DNS server, as long it is an address that reaches your device. Normally, you would use the management interface IP address, but you can choose the loopback interface IP address, or a network interface IP address, or even configure multiple addresses on the DNS server.

To configure the router or switch to resolve hostnames into addresses:

1. Reference the IP addresses of your DNS servers.

```
[edit groups group-name system]
name-server {
```

```
address;
}
```

The following example shows how to reference two DNS servers:

```
[edit groups global system]
user@host# set name-server 192.168.1.253
user@host# set name-server 192.168.1.254
user@host# show
name server {
  192.168.1.253;
  192.168.1.254;
}
```

2. (Optional) Configure the routing instance for DNS.

The following example shows how to configure the routing-instance for one of the DNS servers:

```
[edit groups global system]
user@host# set name-server 192.168.1.253 routing-instance mgmt_junos
```

Remember to also configure the following:

- **management-instance** statement at the **[edit system]** hierarchy level
  - **routing-instance** statement at the **[edit routing-instances]** hierarchy level.
3. (Optional) Configure the name of the domain in which the device itself is located.

This is a good practice. Junos OS then uses this configured domain name as the default domain name to append to hostnames that are not fully qualified.

```
[edit system]
domain-name domain-name;
```

The following example shows how to configure the domain name:

```
[edit groups global system]
user@host# set domain-name company.net
user@host# show
domain-name company.net;
```

4. (Optional) Configure a list of domains to be searched.

If your device can reach several different domains, you can configure these as a list of domains to be searched. Junos OS then uses this list to set an order in which it appends domain names when searching for the IP address of a host.

```
[edit groups global system]
domain-search [ domain-list ];
```

The domain list can contain up to six domain names, with a total of up to 256 characters.

The following example shows how to configure two domains to be searched. This example configures Junos OS to search the company.net domain and then the domainone.net domain and then the domainonealternate.com domain when attempting to resolve unqualified hosts.

```
[edit groups global system]
domain-search [ company.net domainone.net domainonealternate.com ]
```

5. If you used a configuration group, apply the configuration group, substituting **global** with the appropriate group name.

```
[edit]
user@host# set apply-groups global
```

6. Commit the configuration.

```
user@host# commit
```

7. Verify the configuration.

If you have configured your DNS server with the hostname and an IP address for your Junos OS device, you can issue the following commands to confirm that DNS is working and reachable. You can either use the configured hostname to confirm resolution to the IP address or use the IP address of your device to confirm resolution to the configured hostname.

```
user@host> show host host-name
user@host> show host host-ip-address
```

For example:

```
user@host> show host device.example.net
device.example.net
device.example.net has address 192.168.187.1
```

```
user@host> show host 192.168.187.1
10.187.168.192.in-addr.arpa domain name pointer device.example.net.
```

- Related Documentation
- [name-server on page 74](#)
  - [domain-search on page 69](#)

---

## Example: Configuring the TTL Value for DNS Server Caching

---

This example shows how to configure the TTL value for a DNS server cache to define the period for which DNS query results are cached.

- [Requirements on page 37](#)
- [Overview on page 37](#)
- [Configuration on page 37](#)
- [Verification on page 37](#)

### Requirements

No special configuration beyond device initialization is required before performing this task.

### Overview

The DNS name server stores DNS query responses in its cache for the TTL period specified in the TTL field of the resource record. When the TTL value expires, the name server sends a fresh DNS query and updates the cache. You can configure the TTL value from 0 to 604,800 seconds. You can also configure the TTL value for cached negative responses. Negative caching is the storing of the record that a value does not exist. In this example, you set the maximum TTL value for cached (and negative cached) responses to 86,400 seconds.

### Configuration

#### Step-by-Step Procedure

To configure the TTL value for a DNS server cache:

1. Specify the maximum TTL value for cached responses, in seconds.

```
[edit]  
user@host# set system services dns max-cache-ttl 86400
```

2. Specify the maximum TTL value for negative cached responses, in seconds.

```
[edit]  
user@host# set system services dns max-ncache-ttl 86400
```

3. If you are done configuring the device, commit the configuration.

```
[edit]  
user@host# commit
```

### Verification

To verify the configuration is working properly, enter the **show system services** command.

**Related Documentation** • [DNS Overview](#)

## Example: Configuring the Unique Identity of a Router for Making it Accessible on the Network

---

To use a router in a network, you must configure the router's identity. Configuring a router's identity makes the router accessible on the network and so that other users can log in to it. You can refer to any Internet-connected machine in either of two ways:

- By its IP address
- By its hostname

Once you have a hostname, you can find the IP address, you can use the Domain Name System (DNS) to resolve an IP address from a hostname, or you can manually map the hostname to a static IP address. Although using the DNS is an easier and more scalable way to resolve IP addresses from hostnames, you might not have a DNS entry for the router, or you might not want the computer to contact the DNS server to resolve a particular IP address (perhaps you use this particular IP address a lot, or you might be using it only for testing or development purposes and do not want to give it a DNS entry).

To configure a router's unique identity, you might need to include all or part of the following: the hostname of the router, its IP address, the domain name, two or three name servers, mapping of the hostname to the IP address.

- [Requirements on page 38](#)
- [Overview on page 38](#)
- [Configuration on page 39](#)
- [Verification on page 40](#)

### Requirements

No special configuration beyond device initialization is required before configuring this example.

### Overview

A hostname is the router's name. It is easier for most people to remember a hostname than an IP address. Junos OS uses the configured hostname as part of the command prompt, to prepend log files and other accounting information, as well as in other places where knowing the device identity is useful. You can use the hostname to telnet to a router.

The domain name is the string appended to hostnames that are not fully qualified. The domain name is the name of a network associated with an organization. For sites in the United States, domain names typically take the form of *org-name.org-type*.

The mapping of hostnames to IP addresses is handled through a service called the Domain Name System (DNS). A series of special DNS servers across the world known as name servers keep track of the hostname and IP address information for all the devices

on the Internet. Applications that need to determine an IP address from a hostname (or vice versa) contact the local name server to get this information. You can set a few name servers.

In case your hostname and IP address do not have a DNS entry in a name server, configure a static mapping.

In this example, the values given in [Table 5 on page 39](#) are used to configure each of these variables. You need to substitute data pertinent to your router and network for these values.

*Table 5: Values to Use in Example*

Name of Variable	Value Used in Example	Value You Substitute
domain-name <i>domain-name</i>	domain-name device.example.net	
host-name <i>host-name</i>	host-name example-re0	
inet <i>ip-address</i>	inet 172.22.147.39	
name-server <i>ip-address</i>	name-server 172.24.16.115 name-server 192.0.2.0	

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands and paste them in a text file, remove any line breaks, change the values used to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```
set system domain-name device.example.net
set system host-name example-re0
set system name-server 172.24.16.115
set system name-server 192.0.2.0
set system static-host-mapping example-re0 inet 172.22.147.39
```

## Configuring the Router's Identity

### Step-by-Step Procedure

To configure the identity settings of a device:

1. Configure the domain name of your network.

```
[edit]
user@host# set system domain-name device.example.net
```

2. Configure the hostname, using the **set system host-name** command.

```
[edit]
user@host# set system host-name example-re0
```

3. Configure from one to three name servers.

```
[edit]
user@host# set system name-server 172.24.16.115
user@host# set system name-server 192.0.2.0
```

4. Map from the hostname to the IP address, using the **set system static-host-mapping** command.

```
[edit]
user@host# set system static-host-mapping example-re0 inet 172.22.147.39
```

## Results

---

To check the configuration, use the configuration mode **show system** command.

```
[edit]
user@host# show system
domain-name device.example.net;
host-name example-re0;
name-server {
  172.24.16.115;
  192.0.2.0;
}
static-host-mapping {
  example-re0 {
    inet 172.22.147.39;
  }
}
```

When you have the correct configuration, enter **commit**.

## Verification

### Verifying the Hostname and IP Address of a Device

---

**Purpose** Verify the hostname and IP address of a device.

**Action** Issue the **show host *host-name*** operational command.

```
user@example-re0> show host newton

newton.device.example.net is an alias for example-re0.device.example.net.
example-re0.device.example.net has address 172.22.147.39
```



- Related Documentation**
- [Understanding Hostnames on page 29](#)
  - [Configuring a DNS Name Server for Resolving a Hostname into Addresses on page 34](#)



## CHAPTER 6

# Configuring Management and Loopback Interfaces

- [Understanding Management Ethernet Interfaces on page 43](#)
- [Management Interface in a Nondefault Instance on page 44](#)
- [Understanding the Loopback Interface on page 46](#)
- [Configuring the Loopback Interface on page 46](#)

### Understanding Management Ethernet Interfaces

Management interfaces are the primary interfaces for accessing the device remotely. Typically, a management interface is not connected to the in-band network, but is connected instead to the device's internal network. Through a management interface you can access the device over the network using utilities such as **ssh** and **telnet** and configure the device from anywhere, regardless of its physical location. SNMP can use the management interface to gather statistics from the device.

A management interface lets authorized users and management systems connect to the device over the network. Some Juniper Networks devices have a dedicated management port on the front panel. For other types of platforms, you can configure a management interface on one of the network interfaces. This interface can be dedicated to management or shared with other traffic. Before users can access the management interface, you must configure it. Information required to set up the management interface includes its IP address and prefix. In many types of Junos OS devices (or recommended configurations), it is not possible to route traffic between the management interface and the other ports. Therefore, you should select an IP address in a separate (logical) network, with a separate prefix (netmask).

For Junos OS Evolved, use `re0:mgmt-*` for Routing Engine 0 and `re1:mgmt-*` for Routing Engine 1 management interfaces.

**Related  
Documentation**

## Management Interface in a Nondefault Instance

---

- [Why Use a Non-Default Management Interface on page 44](#)
- [Applications and Processes That Are VRF Aware on page 44](#)

### Why Use a Non-Default Management Interface

By default, in Junos OS, the management Ethernet interface (usually named fxp0 or em0) provides the out-of-band management network for the device. There is no clear separation between either out-of-band management traffic and in-band protocol control traffic, or user traffic at the routing-instance or routing-table level. Instead, all traffic is handled through the default routing instance, giving rise to concerns over security, performance, and how to troubleshoot.

Starting with Junos OS Release 17.3R1, you can confine the management interface in a non-default virtual routing and forwarding (VRF) instance, the `mgmt_junos` routing instance. Once you configure this management routing instance as described in *Configuring the mgmt\_junos Routing Instance*, management traffic no longer has to share a routing table (that is, the default `inet.0` routing table) with other control or protocol traffic in the system.

However, for the non-default management instance to support all processes that communicate through the management interface, these processes must have support for a management VRF. In many cases, the new configuration to make these systems work with the non-default VRF instance is to add the name of this new management routing instance (`mgmt_junos`) to these features. For more on processes that are so supported, see [“Applications and Processes That Are VRF Aware” on page 44](#).

### Applications and Processes That Are VRF Aware

Starting with Junos OS Release 17.3R1, you can confine the management interface in a non-default virtual routing and forwarding (VRF) instance, the `mgmt_junos` routing instance. Once you configure this management routing instance as described in *Configuring the mgmt\_junos Routing Instance*, management traffic no longer has to share a routing table (that is, the default `inet.0` table) with other control or protocol traffic in the system.

However, for the non-default management instance to support all processes that communicate through the management interface, these processes must have support for a management VRF. In many cases, the new configuration to make these systems work with the non-default VRF instance is to add the name of this new management routing instance (`mgmt_junos`) to these features. The following applications can share use of the non-default management VRF instance:

- **Automation scripts**—Starting in Junos OS Release 18.1R1, configuration of commit, event, JET, op, and SNMP scripts is upgraded to support the non-default management routing instance `mgmt_junos` as an option when specifying the source URL for refreshing or downloading Automation scripts. You can also specify some other routing instance (not a management instance) for refreshing or downloading Automation scripts. See *Using an Alternate Source Location for a Script* or *Configuring and Using a Master Source Location for a Script*.
- **BGP Monitoring Protocol (BMP)**—Starting in Junos OS Release 18.3R1, a BMP station is now reachable over the management VRF instance. See *Configuring BGP Monitoring Protocol Version 3*.
- **NTP**—Starting in Junos OS 18.1R1, NTP clients can support the non-default management routing instance `mgmt_junos` when specifying the routing instance that is used to reach a server for NTP time synchronization. For more information on NTP, see *Configuring the NTP Time Server and Time Services*.
- **RADIUS**—Starting in Junos OS 18.1R1, existing RADIUS support is enhanced to support a management interface in a non-default VRF instance. For more information on RADIUS, see *Configuring RADIUS Server Authentication* and *Configuring RADIUS System Accounting*.
- **syslog**—In Junos OS 17.3R1, the syslog-/event daemon was able to handle the dedicated management routing instance for IPv4 addressed remote host. As of Junos 18.1R1, the syslog-event daemon supports IPv6-based configuration when connecting to a remote host or an archival site, when the default management interface is moved to the dedicated management instance `mgmt_junos`. Statements at the `[edit system syslog]` hierarchy level support IPv6 addresses, too. See *syslog (System)*.
- **TACACS+**—Starting in Junos OS Release 17.4R1, existing TACACS+ behavior is enhanced to support a management interface in a non-default VRF instance. For more information on TACACS+, see *Configuring TACACS+ Authentication* and *Configuring TACACS+ System Accounting*.

Release History Table

Release	Description
17.4R1	Starting in Junos OS Release 17.4R1, existing TACACS+ behavior is enhanced to support a management interface in a non-default VRF instance.
17.3R1	Starting with Junos OS Release 17.3R1, you can confine the management interface in a non-default virtual routing and forwarding (VRF) instance, the <code>mgmt_junos</code> routing instance.
17.3R1	Starting with Junos OS Release 17.3R1, you can confine the management interface in a non-default virtual routing and forwarding (VRF) instance, the <code>mgmt_junos</code> routing instance.

**Related  
Documentation**

- [routing-instance](#)
- [management-instance on page 73](#)

## Understanding the Loopback Interface

---

The loopback address (**lo0**) has several uses, depending on the particular Junos feature being configured. It can perform the following functions:

- Device identification—The loopback interface is used to identify the device. While any interface address can be used to determine if the device is online, the loopback address is the preferred method. Whereas interfaces might be removed or addresses changed based on network topology changes, the loopback address never changes.

When you ping an individual interface address, the results do not always indicate the health of the device. For example, a subnet mismatch in the configuration of two endpoints on a point-to-point link makes the link appear to be inoperable. Pinging the interface to determine whether the device is online provides a misleading result. An interface might be unavailable because of a problem unrelated to the device's configuration or operation.

- Routing information—The loopback address is used by protocols such as OSPF to determine protocol-specific properties for the device or network. Further, some commands such as **ping mpls** require a loopback address to function correctly.
- Packet filtering—Stateless firewall filters can be applied to the loopback address to filter packets originating from, or destined for, the Routing Engine.

The Internet Protocol (IP) specifies a loopback network with the (IPv4) address **127.0.0.0/8**. Most IP implementations support a loopback interface (**lo0**) to represent the loopback facility. Any traffic that a computer program sends on the loopback network is addressed to the same computer. The most commonly used IP address on the loopback network is **127.0.0.1** for IPv4 and **::1** for IPv6. The standard domain name for the address is **localhost**.

The device also includes an internal loopback address (**lo0.16384**). The internal loopback address is a particular instance of the loopback address with the logical unit number 16384. Junos OS creates the loopback interface for the internal routing instance. This interface prevents any filter on **lo0.0** from disrupting internal traffic.

**Related Documentation**

- [Understanding Interfaces](#)

## Configuring the Loopback Interface

---

- [Configuring the Loopback Interface on page 47](#)
- [Example: Configuring Two Addresses on the Loopback Interface with Host Routes on page 48](#)
- [Example: Configuring Two Addresses on the Loopback Interface with Subnetwork Routes on page 48](#)
- [Example: Configuring an IPv4 and an IPv6 Address on the Loopback Interface with Subnetwork Routes on page 49](#)

## Configuring the Loopback Interface

When specifying the loopback address, do not include a destination prefix. Also, in most cases, do not specify a loopback address on any unit other than unit 0.



**NOTE:** For Layer 3 virtual private networks (VPNs), you can configure multiple logical units for the loopback interface. This allows you to configure a logical loopback interface for each virtual routing and forwarding (VRF) routing instance. For more information, see the *Junos OS VPNs Library for Routing Devices*.

For some applications, such as SSL for Junos XML protocol, the address for the interface lo0.0 must be 127.0.0.1.

You can configure loopback interfaces using a subnetwork address for both inet and inet6 address families. Many protocols require a subnetwork address as their source address. Configuring a subnetwork loopback address as a donor interface enables these protocols to run on unnumbered interfaces.

If you configure the loopback interface, it is automatically used for unnumbered interfaces. If you do not configure the loopback interface, the router chooses the first interface to come online as the default. If you configure more than one address on the loopback interface, we recommend that you configure one to be the primary address to ensure that it is selected for use with unnumbered interfaces. By default, the primary address is used as the source address when packets originate from the interface.

For more information about unnumbered interfaces, see *Configuring an Unnumbered Interface*. For more information about primary addresses, see *Configuring the Interface Address*.

On the router, you can configure one physical loopback interface, lo0, and one or more addresses on the interface.

1. To configure the physical loopback interface, include the following statements at the **[edit interfaces]** hierarchy level:

```
[edit interfaces]
lo0 {
  unit 0 {
    family inet {
      address loopback-address;
      address <loopback-address2>;
      ...
    }
    family inet6 {
      address loopback-address;
    }
  }
}
```

### Example: Configuring Two Addresses on the Loopback Interface with Host Routes

To configure two addresses on the loopback interface with host routes:

```
[edit]
user@host# edit interfaces lo0 unit 0 family inet
[edit interfaces lo0 unit 0 family inet]
user@host# set address 172.16.0.1
[edit interfaces lo0 unit 0 family inet]
user@host# set address 10.0.0.1
[edit interfaces lo0 unit 0 family inet]
user@host# top
[edit]
user@host# show
interfaces {
  lo0 {
    unit 0 {
      family inet {
        10.0.0.1;
        127.0.0.1;
        172.16.0.1;
      }
    }
  }
}
```

### Example: Configuring Two Addresses on the Loopback Interface with Subnetwork Routes

To configure two addresses on the loopback interface with subnetwork routes:

```
[edit]
user@host# edit interfaces lo0 unit 0 family inet
[edit interfaces lo0 unit 0 family inet]
user@host# set address 192.16.0.1/24
[edit interfaces lo0 unit 0 family inet]
user@host# set address 10.2.0.1/16
[edit interfaces lo0 unit 0 family inet]
user@host# top
[edit]
user@host# show
interfaces {
  lo0 {
    unit 0 {
      family inet {
        10.2.0.1/16;
        127.0.0.1/32;
        192.16.0.1/24;
      }
    }
  }
}
```



## Example: Configuring an IPv4 and an IPv6 Address on the Loopback Interface with Subnetwork Routes

To configure an IPv4 and an IPv6 address on the loopback interface with subnetwork routes:

```
[edit]
user@host# edit interfaces lo0 unit 0 family inet
[edit interfaces lo0 unit 0 family inet]
user@host# set address 192.16.0.1/24
[edit interfaces lo0 unit 0 family inet]
user@host# up
[edit interfaces lo0 unit 0 family]
user@host# edit interfaces lo0 unit 0 family inet6
[edit interfaces lo0 unit 0 family inet6]
user@host# set address 3ffe::1:200:f8ff:fe75:50df/64
[edit interfaces lo0 unit 0 family inet6]
user@host# top
[edit]
user@host# show
interfaces {
  lo0 {
    unit 0 {
      family inet {
        127.0.0.1/32;
        192.16.0.1/24;
      }
      family inet6 {
        3ffe::1:200:f8ff:fe75:50df/64;
      }
    }
  }
}
```

- Related Documentation**
- *Junos OS VPNs Library for Routing Devices*
  - *Configuring an Unnumbered Interface*
  - *Configuring the Interface Address*



## CHAPTER 7

# Configuring User Accounts

- [Junos OS User Accounts Overview on page 51](#)
- [Configuring Junos OS User Accounts by Using a Configuration Group on page 53](#)
- [Enabling Remote Access on page 56](#)

### Junos OS User Accounts Overview

---

User accounts provide one way for users to access the device. (Users can access the device without accounts if you configured RADIUS or TACACS+ servers, as described in *Junos OS User Authentication Methods*.) For each account, you define the login name for the user and, optionally, information that identifies the user. After you have created an account, the software creates a home directory for the user.

For each user account, you can define the following:

- Username—Name that identifies the user. It must be unique within the device. Do not include spaces, colons, or commas in the username. The username can be up to 64 characters long.
- User's full name—(Optional) If the full name contains spaces, enclose it in quotation marks. Do not include colons or commas.
- User identifier (UID)—(Optional) Numeric identifier that is associated with the user account name. The identifier must be in the range from 100 through 64,000 and must be unique within the device. If you do not assign a UID to a username, the software assigns one when you commit the configuration, preferring the lowest available number.

You must ensure that the UID is unique. However, it is possible to assign the same UID to different users. If you do this, the CLI displays a warning when you commit the configuration and then assigns the duplicate UID.

- User's access privilege—(Required) One of the login classes you defined in the **class** statement at the **[edit system login]** hierarchy level, or one of the default classes listed in *Regular Expressions for Allowing and Denying Junos OS Operational Mode Commands, Configuration Statements, and Hierarchies*.
- Authentication method or methods and passwords that the user can use to access the device—(Optional) You can use SSH or a Message Digest 5 (MD5) password, or you can enter a plain-text password that the Junos OS encrypts using MD5-style encryption before entering it in the password database. For each method, you can

specify the user's password. If you configure the **plain-text-password** option, you are prompted to enter and confirm the password:

```
[edit system login user username]  
user@host# set authentication plain-text-password  
New password: type password here  
Retype new password: retry password here
```

The default requirements for plain-text passwords are:

- The password must be between 6 and 128 characters long.
- You can include most character classes in a password (uppercase letters, lowercase letters, numbers, punctuation marks, and other special characters). Control characters are not recommended.
- Valid passwords must contain at least one change of case or character class.

Junos-FIPS and Common Criteria have special password requirements. FIPS and Common Criteria passwords must be between 10 and 20 characters in length. Passwords must use at least three of the five defined character sets (uppercase letters, lowercase letters, digits, punctuation marks, and other special characters). If Junos-FIPS is installed on the device, you cannot configure passwords unless they meet this standard.

For SSH authentication, you can copy the contents of an SSH key file into the configuration or directly configure SSH key information. Use the **load-key-file** *URL filename* command to load an SSH key file that was previously generated, e.g. by using **ssh-keygen**. The *URL filename* is the path to the file's location and name. This command loads RSA (SSH version 1 and SSH version 2) and DSA (SSH version 2) public keys. The contents of the SSH key file are copied into the configuration immediately after you enter the **load-key-file** statement. Optionally, you can use the **ssh-dsa public key** *<from hostname>* and the **ssh-rsa public key** *<from hostname>* statements to directly configure SSH keys.

Starting in Junos OS Release 18.3R1, the **ssh-dss** and **ssh-dsa** hostkey algorithms are deprecated— rather than immediately removed—to provide backward compatibility and a chance to bring your configuration into compliance with the new configuration.

For each user account and for root logins, you can configure more than one public RSA or DSA key for user authentication. When a user logs in using a user account or as root, the configured public keys are referenced to determine whether the private key matches any of them.

To view the SSH keys entries, use the configuration mode **show** command. For example:

```
[edit system login user boojum]  
user@host# set authentication load-key-file my-host::ssh/id_dsa.pub  
.file.19692 | 0 KB | 0.3 kB/s | ETA: 00:00:00 | 100%  
[edit system]  
user@host# show  
root-authentication {  
  ssh-rsa "$ABC123"; # SECRET-DATA  
}
```

An account for the user **root** is always present in the configuration. You configure the password for **root** using the **root-authentication** statement, as described in *Configuring the Root Password*.

Release History Table

Release	Description
18.3R1	Starting in Junos OS Release 18.3R1, the <b>ssh-dss</b> and <b>ssh-dsa</b> hostkey algorithms are deprecated—rather than immediately removed—to provide backward compatibility and a chance to bring your configuration into compliance with the new configuration.

## Configuring Junos OS User Accounts by Using a Configuration Group

User accounts provide a way for users to access a router or switch. Junos OS requires that all users have a predefined user account before they can log in to the device. For each user account, you define the login name for the user and, optionally, information that identifies the user. After you have created an account, the software creates a home directory for the user.

It is a common practice to use remote authentication servers to centrally store information about users. Even so, it is also a good practice to configure at least one nonroot user directly on each device, in case access to the remote authentication server is disrupted. This one nonroot user commonly has a generic name, such as **admin**.

Because user accounts are configured on multiple devices, they are commonly configured inside of a configuration group. As such, the examples shown here are in a configuration group called **global**. Using a configuration group for your user accounts is optional.

To create a user account:

1. Add a new user, using the user's assigned account login name.

```
[edit groups global]
user@host# edit system login user username
```

2. (Optional) Configure a full descriptive name for the account.

If the full name includes spaces, enclose the entire name in quotation marks.

```
[edit groups global system login user user-name]
user@host# set full-name complete-name
```

For example:

```
user@host# show groups
global {
  system {
    login {
      user admin {
        full-name "general administrator";
```

```
    }  
  }  
}
```

3. (Optional) Set the user identifier (UID) for the account.

As with UNIX systems, the UID enforces user permissions and file access. If you do not set the UID, Junos OS assigns one for you. The format of the UID is a number in the range of 100 to 64000.

```
[edit groups global system login user user-name]  
user@host# set uid uid-value
```

For example:

```
user@host# show groups  
global {  
  system {  
    login {  
      user admin {  
        uid 9999;  
      }  
    }  
  }  
}
```

4. Assign the user to a login class.

You can define your own login classes or assign one of the predefined Junos OS login classes.

The predefined login classes are as follows:

- super-user—all permissions
- operator—clear, network, reset, trace, and view permissions
- read-only—view permissions
- unauthorized—no permissions

```
[edit groups global system login user user-name]  
user@host# set class class-name
```

For example:

```
user@host# show groups  
global {  
  system {  
    login {  
      user admin {  
        class super-user;
```

```

    }
  }
}

```

5. Use one of the following methods to configure the user password.

- To enter a clear-text password that the system encrypts for you, use the following command to set the user password:

```

[edit groups global system login user user-name]
user@host# set authentication plain-text-password password
New Password: type password here
Retype new password: retry password here

```

As you enter the password in plain text, Junos OS encrypts it immediately. You do not have to configure Junos OS to encrypt the password as in some other systems. Plain-text passwords are therefore hidden and marked as ## SECRET-DATA in the configuration.

- To enter a password that is already encrypted, use the following command to set the user password:



**CAUTION:** Do not use the encrypted-password option unless the password is *already* encrypted, and you are entering the encrypted version of the password.

If you accidentally configure the encrypted-password option with a plain-text password or with blank quotation marks (" "), you will not be able to log in to the device as this user.

```

[edit groups global system login user user-name]
user@host# set authentication encrypted-password "password"
New Password: type password here
Retype new password: retry password here

```

- To load previously generated public keys from a named file at a specified URL location, use the following command to set the user password:

```

[edit groups global system login user user-name]
user@host# set authentication load-key-file URL filename

```

- To enter an ssh public string, use the following command to set the user password:

```

[edit groups global system login user user-name]
user@host# set authentication (ssh-dsa | ssh-eccdsa | ssh-rsa) authorized-key

```

6. At the top level of the configuration, apply the configuration group.

If you use a configuration group, you must apply it for it to take effect.

```
[edit]  
user@host# set apply-groups global
```

7. Commit the configuration.

```
user@host# commit
```

8. To verify the configuration, log out and log back in as the new user.

---

## Enabling Remote Access

SSH, telnet, and FTP are widely used standards for remotely logging into network devices and exchanging files between systems. Before authorized users can access your device, or your device can exchange data with other systems, you must configure one or more of these enabling services. They are all disabled by default in Junos OS.

SSH is a protocol that uses strong authentication and encryption for remote access across a nonsecure network. SSH provides remote login, remote program execution, file copy, and other functions. SSH is telnet's successor and is the recommended method for remote access. SSH encrypts all traffic, including passwords, to effectively eliminate eavesdropping, connection hijacking, and other attacks. The SSH utility includes SCP (secure copy), a file transfer program that uses SSH and is the recommended method for secure file exchange.

Because both telnet and FTP are legacy applications that use clear text passwords (therefore creating a potential security vulnerability), we recommend that you use SSH (and SCP). If you do not intend to use FTP or telnet, you do not need to configure them on your device. However, do not forget to consider that some users might use FTP to store configuration templates, retrieve software, or other administrative tasks.

To set up remote access and file transfer services:

1. Enable SSH access.

```
[edit groups global]  
user@host# set system services ssh
```

2. Enable telnet access.

```
[edit groups global]  
user@host# set system services telnet
```

3. Enable FTP.

```
[edit groups global]  
user@host# set system services ftp
```



4. At the top level of the configuration, apply the configuration group.

If you use a configuration group, you must apply it for it to take effect.

```
[edit]  
user@host# set apply-groups global
```

5. Commit the configuration.

```
user@host# commit
```

**Related  
Documentation**

- *Configuring SSH Service for Remote Access to the Router or Switch*
- *Configuring Telnet Service for Remote Access to a Router or Switch*
- *Configuring FTP Service for Remote Access to the Router or Switch*



## CHAPTER 8

# Configuring Backup Routers

- [Understanding Backup Routers on page 59](#)
- [Configuring a Backup Router on page 60](#)

### Understanding Backup Routers

---

If Junos OS is running on a routing device, you might want to specify a backup router. The purpose of the backup router is not to forward transit traffic. It is for local management of the routing device, by way of the out-of-band management interface (fxp0 or me0, for example). Traffic is not forwarded between the Packet Forwarding Engine and the management interface. You cannot route traffic between the management interface and the physical interfaces in the chassis.

The Junos OS process responsible for establishing routes is known as the routing protocol process (rpd). The backup router allows the routing device to install a route to a management network, before the routing protocol process is up and running. A backup router can be used during the initial boot process of Junos OS, before any routing protocols have converged. It allows the device to establish a Layer 3 connection quickly, thus keeping management unavailability to a minimum. In selecting a backup router, it is common practice to choose the default gateway of the management network that is directly connected to your routing device.

It is important to make sure that the specified backup router address is reachable and directly connected. The backup router address should be an address that is directly connected to the management interface. Also, the **destination prefix** under backup-router configuration cannot overlap with the **destination prefix** learned from routing protocol process (rpd).



**NOTE:** Router A can be the backup router for Router B, and Router B can be the backup router for Router A if the management interface of each router is connected to an interface on the other router, thus providing the necessary reachability.

When the routing protocol process starts, the backup route (the route created by the backup router) is removed, and any default, static, or protocol-learned routes are installed.

Backup-router configurations can alter the backup routing engine kernel forwarding table even with nonstop active (NSR) enabled.

**Related Documentation**

- [Configuring a Backup Router on page 60](#)

---

## Configuring a Backup Router

---

The backup router allows the routing device to install a route to the management network, before the routing protocol process (rpd) is up and running. This allows the device to establish a Layer 3 connection quickly, thus keeping management unavailability to a minimum.

When a routing device is booting, the routing protocol process is not running. Therefore, the router or switch has no routes. To ensure that the router or switch is reachable for management purposes while it boots or if the routing protocol process fails to start properly, configure a backup router, which is a router that is directly connected to the local router or switch (that is, on the same subnet) through its private management interface (for example, fxp0 or me0).

To achieve network reachability while loading, configuring, and recovering the router or switch, but without installing a default route in the forwarding table, include the **destination** option, specifying an address that is reachable through the backup router. Specify the address in the format **network/mask-length**.

Any destinations defined by the backup router are not visible in the routing table. They are only visible in the local forwarding table when the routing protocol process is not running. Therefore, a recommended best practice is to also include the destinations of the backup router configured as static routes with the **retain** option. The **retain** option is necessary to allow the static route to remain in the forwarding table when the routing protocol process stops running, because the routing table does not exist if the routing protocol process is not running.

On systems with dual redundant Routing Engines, the backup Routing Engine's reachability through the private management interface is based only on the functionality of the **backup-router** configuration. It is not based on whether the routing protocol process is running. On both Routing Engines, the **backup-router** statement adds the destination prefix upon bootup. On the master Routing Engine, a static route requires the routing protocol process to be running first before installing the destination prefix to the routing and forwarding tables.

Due to a system limitation, do not configure the destination address specified in the backup-router as 0.0.0.0/0 or ::/0. The mask has to be a nonzero value.

Active routes and more specific routes take precedence over destination prefixes defined with the **backup-router** statement.

If you have a backup router configuration in which multiple static routes point to a gateway from the management Ethernet interface, you must configure prefixes that are more specific than the static routes or include the **retain** option at the **[edit routing-options static route]** hierarchy level.

For example, if you configure the static route 172.16.0.0/12 from the management Ethernet interface for management purposes, you must specify the backup router configuration as follows:


```
backup-router 172.29.201.62 destination [172.16.0.0/13 172.16.128.0/13]
```

## Configuring a Backup Router Running IPv4

In the example shown in [Figure 2 on page 61](#), the backup router is the default gateway of the management network.

As required, the backup router address is reachable and directly connected to the management interfaces on the two routing devices (fxp0 and me0).

*Figure 2: Backup Router Sample Topology*

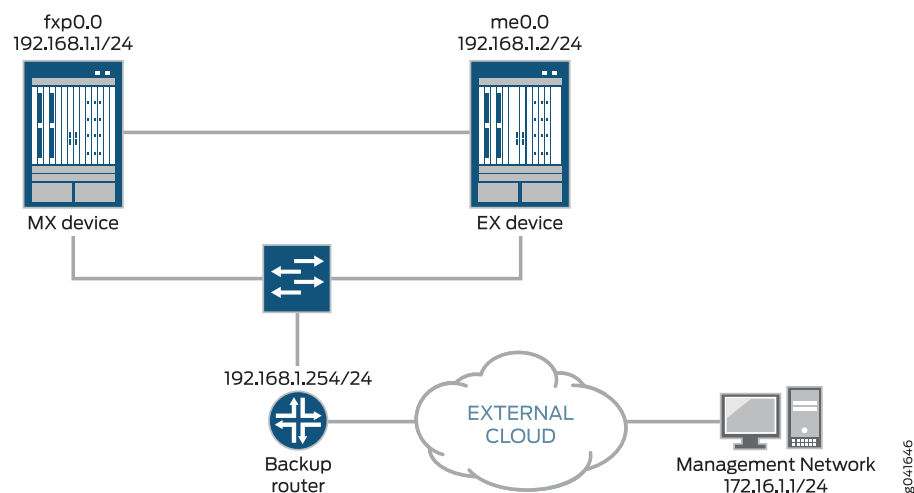

Optionally, instead of configuring the backup router at the **[edit system]** hierarchy level, you can use a configuration group, as shown in this procedure. This is a recommended best practice for configuring the backup router, especially if the device has dual Routing Engines. This procedure uses groups called **re0** and **re1** as an example.

To configure a backup router running IPv4:

1. Include the **backup-router** statement at the **[edit system]** hierarchy level.

```
[edit groups group-name system]
backup-router address <destination destination-address>;
```

For example:

```
[edit groups re0 system]
backup-router 192.168.1.254 destination 172.16.1.0/24;
```

```
[edit groups re1 system]
backup-router 192.168.1.254 destination 172.16.1.0/24;
```

2. (Optional) Configure a static route to the management network.

Junos OS only uses the backup router during the boot sequence. If you want to configure a backup router for use after startup, you can set up a static route. The static route goes into effect when the routing protocol process is running.

```
routing-options {  
  static {  
    route 172.16.1.0/24 {  
      next-hop 192.168.1.254;  
      retain;  
    }  
  }  
}
```

3. If you used one or more configuration groups, apply the configuration groups, substituting the appropriate group names.

For example:

```
[edit]  
user@host# set apply-groups [re0 re1]
```

4. Commit the changes:

```
[edit]  
root@# commit
```

## Configuring a Backup Router Running IPv6

To configure a backup router running IPv6:

1. Include the **inet6-backup-router** statement at the **[edit system]** hierarchy level.

```
[edit groups group-name system]  
inet6-backup-router address <destination destination-address>;
```

For example:

```
[edit groups re0 system]  
inet6-backup-router 8:3::1 destination abcd::/48;
```

```
[edit groups re1 system]  
inet6-backup-router 8:3::1 destination abcd::/48;
```

2. (Optional) Configure a static route to the management network.

Junos OS only uses the backup router during the boot sequence. If you want to configure a backup router for use after startup, you can set up a static route. The static route goes into effect when the routing protocol process is running.

```

routing-options {
  rib inet6.0 {
    static {
      route abcd::/48 {
        next-hop 8:3::1;
        retain;
      }
    }
  }
}

```

3. If you used one or more configuration groups, apply the configuration groups, substituting the appropriate group names.

For example:

```

[edit]
user@host# set apply-groups [re0 re1]

```

4. Commit the changes:

```

[edit]
root@# commit

```

#### Related Documentation

- [Understanding Backup Routers on page 59](#)
- *Configuring Junos OS for the First Time on a Router or Switch with a Single Routing Engine*
- *Configuring Junos OS for the First Time on a Device with Dual Routing Engines*
- *Requirements for Routers with a Backup Router Configuration.*





## CHAPTER 9

# Configuration Statements

- [backup-router on page 66](#)
- [cli on page 67](#)
- [domain-name on page 68](#)
- [domain-search on page 69](#)
- [host-name on page 70](#)
- [inet6-backup-router on page 71](#)
- [load-key-file on page 72](#)
- [management-instance on page 73](#)
- [name-server on page 74](#)
- [non-subscriber-no-reply on page 75](#)
- [root-authentication on page 76](#)
- [static-host-mapping on page 78](#)

## backup-router

---

Syntax	<code>backup-router <i>address</i> &lt;destination <i>destination-address</i>&gt;;</code>
Hierarchy Level	[edit system]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Set a default router (running IP version 4 [IPv4]) to use while the local router (running IPv4) is booting and if the routing protocol processes fail to start. The Junos OS removes the route to this router as soon as the software starts.
Options	<p><b><i>address</i></b>—Address of the default router.</p> <p><b><i>destination destination-address</i></b>—(Optional) Destination address that is reachable through the backup router. You can include this option to achieve network reachability while loading, configuring, and recovering the router, but without the risk of installing a default route in the forwarding table.</p> <p><b>Default:</b> All hosts (default route) are reachable through the backup router.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Configuring a Backup Router on page 60</a></li></ul>

---


**cli**

---

<b>Syntax</b>	<code>set cli prompt <i>prompt</i></code>
<b>Hierarchy Level</b>	<code>[edit system login class <i>class-name</i>],</code> <code>[edit system login user <i>user-name</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 17.3R1.
<b>Description</b>	Set the CLI prompt specified for a specified login user or specified login class. The prompt set for the login user has precedence.
<b>Options</b>	<b>prompt <i>prompt</i></b> —Specify the prompt string you want to see displayed in the CLI prompt.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <code>set cli prompt</code></li></ul>

## domain-name

---

Syntax	<code>domain-name <i>domain-name</i>;</code>
Hierarchy Level	[edit system]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	Configure the name of the domain in which the router or switch is located. This is the default domain name that is appended to hostnames that are not fully qualified.
Options	<i>domain-name</i> —Name of the domain.
<div> <b>NOTE:</b> The length of the domain name cannot exceed 255 characters.</div>	
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Configuring a DNS Name Server for Resolving a Hostname into Addresses on page 34</a></li></ul>

## domain-search

<b>Syntax</b>	<code>domain-search [domain-list ];</code>
<b>Hierarchy Level</b>	<code>[edit system],</code> <code>[edit system services dhcp],</code> <code>[edit system services dhcp],</code> <code>[edit system services dhcp pool],</code> <code>[edit system services dhcp static-binding]</code>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	Configure a list of domains to search (in the case where you want to configure access to multiple DNS servers for redundancy, and/or to resolve hosts that the previous server could not).
<b>Options</b>	<p><b>domain-list</b>—List of domain servers to search. The list can contain up to six domain names, separated by a space, with a total of up to 256 characters.</p> <p>For example to search <b>domain1.net</b>, and if it fails to resolve the host, <b>domain2.net</b>, and if fails to resolve the host, <b>domain3.net</b>, you would configure the following domain list at the <b>domain-search</b> hierarchy level:</p> <pre>[edit system] set domain-search [domain1.net domain2.net domain3.net]</pre>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Configuring a Domain Name and Domain Search List for a DHCP Server Host</li> <li>Configuring a DNS Name Server for Resolving a Hostname into Addresses on page 34</li> </ul>

## host-name

---


Syntax	<code>host-name <i>hostname</i>;</code>
Hierarchy Level	[edit system]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	<p>Set the hostname of the router or switch.</p> <p>For Junos OS Evolved, when you specify the <b>host-name</b> statement, the Routing Engine name where the configuration is committed is appended to the hostname you specify. For example, on Routing Engine 0, <b>set system host-name my-host</b> sets the hostname to my-host-re0. You can also use <b>%s</b> to designate where to substitute the Routine Engine name. For example, on Routine Engine 1, <b>set system host-name %s_my-host</b> sets the hostname to re1_my-host.</p>
Options	<b>hostname</b> —Name of the router or switch.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Understanding Hostnames on page 29</a></li><li>• <a href="#">Configuring the Hostname of a Router or Switch by Using a Configuration Group on page 30</a></li></ul>

## inet6-backup-router

<b>Syntax</b>	<code>inet6-backup-router <i>address</i> &lt;destination <i>destination-address</i>&gt;;</code>
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Set a default router (running IP version 6 [IPv6]) to use while the local router or switch (running IPv6) is booting and if the routing protocol processes fail to start. The Junos OS removes the route to this router or switch as soon as the software starts.
<b>Options</b>	<p><b>address</b>—Address of the default router.</p> <p><b>destination <i>destination-address</i></b>—(Optional) Destination address that is reachable through the backup router. You can include this option to achieve network reachability while loading, configuring, and recovering the router or switch, but without the risk of installing a default route in the forwarding table.</p> <p><b>Default:</b> All hosts (default route) are reachable through the backup router.</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring a Backup Router on page 60</a></li> </ul>


## load-key-file

---


Syntax	load-key-file <i>URL filename</i> ;
Hierarchy Level	[edit system root-authentication], [edit system login user <i>username</i> authentication]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<div> <b>NOTE:</b> ECDSA is not supported on the QFabric system.</div> <p>Load RSA (SSH version 2) and DSA or ECDSA (SSH version 2) public keys from a previously-generated named file at a specified URL location or local path. The file contains one or more SSH keys that are copied into the configuration when the command is issued.</p>
Options	<i>URL filename</i> —The URL filename of the key file to be loaded.
Required Privilege Level	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Root Password</a></li><li>• <a href="#">Configuring the Root Password</a></li><li>• <a href="#">Configuring Junos OS User Accounts by Using a Configuration Group on page 53</a></li></ul>



## management-instance

Syntax	management-instance;
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 17.3R1.
Description	<p>Enable a dedicated management virtual routing and forwarding (VRF) instance.</p> <p>The management Ethernet interface (usually named <b>fxp0</b> or <b>em0</b>) provides the out-of-band management network for the router. There is no clear separation between either out-of-band management traffic and in-band protocol control traffic, or user traffic at the routing-instance or routing table level. The <b>management-instance</b> configuration statement confines the management interface in a dedicated management instance, and it enables an administrative routing table dedicated to management tasks for the network device.</p> <p>The name of the dedicated management instance is reserved and hardcoded as <b>mgmt_junos</b>; you cannot configure any other routing instance by the name <b>mgmt_junos</b>.</p> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;"> <p> <b>NOTE:</b> You must also configure the <b>mgmt_junos</b> routing instance at the [edit routing-instances] hierarchy level to use it.</p> </div>
Options	This command has no options.
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> <li>• <a href="#">Management Interface in a Nondefault Instance on page 44</a></li> </ul>

## name-server

Syntax	<pre>name-server {   address {     routing-instance routing-instance;   } }</pre>
Hierarchy Level	<pre>[edit system], [edit system services dhcp], [edit system services dhcp], [edit system services dhcp pool], [edit system services dhcp static-binding]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>routing-instance</b> options introduced in Junos OS Release 19.2R1 under the <b>[edit system]</b> hierarchy level only.</p>
Description	Configure one or more Domain Name System (DNS) name servers.
Options	<p><b>address</b>—Address of the name server. To configure multiple name servers, include a maximum of three <b>address</b> options.</p> <p><b>routing-instance</b> <i>routing-instance</i>—Configure name of the routing instance through which the name server is reachable.</p>
<div>  <p><b>NOTE:</b> The only routing instance supported is <code>mgmt_junos</code>.</p> </div>	
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <li><a href="#">Configuring a DNS Name Server for Resolving a Hostname into Addresses on page 34</a></li> </ul>

## non-subscriber-no-reply

<b>Syntax</b>	non-subscriber-no-reply;
<b>Hierarchy Level</b>	[edit system arp]
<b>Release Information</b>	Statement introduced in Junos OS Release 13.3R9 for the MX Series.
<b>Description</b>	Enable this option to drop ARP requests from non-subscribers when a user route is dynamically added for a subscriber. Configuring this statement suppresses the ARP response from the kernel when there is an ARP request for a loopback interface from static DHCP subscribers using a common LAN segment between two devices. However, this configuration might not be effective if the subscriber configuration has suppressed either a destination Layer 2 route or an access Layer 3 route.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>autoinstallation</i></li></ul>

## root-authentication

<b>Syntax</b>	<pre> root-authentication {   (encrypted-password "password";   no-public-keys   ssh-eccdsa name {     from from;   }   ssh-ed25519 name {     from from;   }   ssh-rsa name {     from from;   } } </pre>
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	<p>Configure the authentication methods for the root-level user, whose username is <b>root</b>.</p> <p>You can use the <b>ssh-eccdsa</b>, <b>ssh-ed25519</b>, or <b>ssh-rsa</b> statements to directly configure SSH ECDSA, ED25519, or RSA keys to authenticate root logins. You can configure more than one public key for SSH authentication of root logins as well as for user accounts. When a user logs in as root, the public keys are referenced to determine whether the private key matches any of them.</p>
<b>Options</b>	<p><b>encrypted-password "password"</b>—Specify the MD5 or other password. You can specify only one encrypted password. You cannot configure a blank password using blank quotation marks (" "). You must configure a password whose number of characters range from 1 through 128 characters and enclose the password in quotation marks.</p> <p><b>no-public-keys</b>—Disable SSH public key-based authentication.</p> <p><b>ssh-eccdsa name from from</b>—Use an SSH ECDSA public key. You can specify one or more public keys.</p> <p><b>ssh-ed25519 name from from</b>—Use an SSH ED25519 public key. You can specify one or more public keys.</p> <p><b>ssh-rsa name from from</b>—Use an SSH RSA public key. You can specify one or more public keys.</p>
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>

- Related Documentation**
- [Junos OS User Accounts Overview on page 51](#)
  - [Protecting Network Security by Configuring the Root Password on page 25](#)
  - *Recovering the Root Password*
  - *authentication*

## static-host-mapping

Syntax	<pre>static-host-mapping {   hostname {     alias [ <i>aliases</i> ];     inet [ <i>addresses</i> ];     inet6 [ <i>addresses</i> ];     sysid <i>system-identifier</i>;   } }</pre>
Hierarchy Level	[edit system]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	(Optional) Statically map a hostname to one or more IP addresses and aliases, and configure an International Organization for Standardization (ISO) system identifier (system ID).
Default	If you do not statically map the hostname, the mapping is generated dynamically, based on the system configuration. For instance, if you omit the <b>static-host-mapping hostname sysid</b> statement, the IS-IS system ID is dynamically generated from the host portion of the ISO address configured on the loopback interface (lo0) and is mapped to the <b>host-name</b> statement configured at the [edit system] hierarchy level.
Options	<p><b>alias <i>alias</i></b>—Alias for the hostname.</p> <p><b>hostname</b>—Fully qualified hostname.</p> <p><b>inet <i>address</i></b>—IP address. You can specify one or more IP addresses for the host.</p> <p><b>sysid <i>system-identifier</i></b>—ISO system identifier (system ID). This is the 6-byte portion of the Intermediate System-to-Intermediate System (IS-IS) network service access point (NSAP). We recommend that you use the host's IP address represented in binary-coded decimal (BCD) format. For example, the IP address 208.197.169.18 is 2081.9716.9018 in BCD.</p>
Required Privilege Level	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <li><a href="#">Configuring the Hostname of a Router or Switch by Using a Configuration Group on page 30</a></li> </ul>