




---

# System Management and Monitoring Feature Guide for Switches



Modified: 2019-06-18





Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*System Management and Monitoring Feature Guide for Switches*  
Copyright © 2019 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.



# Table of Contents

	About the Documentation . . . . .	xi
	Documentation and Release Notes . . . . .	xi
	Using the Examples in This Manual . . . . .	xi
	Merging a Full Example . . . . .	xii
	Merging a Snippet . . . . .	xii
	Documentation Conventions . . . . .	xiii
	Documentation Feedback . . . . .	xv
	Requesting Technical Support . . . . .	xv
	Self-Help Online Tools and Resources . . . . .	xvi
	Creating a Service Request with JTAC . . . . .	xvi
<b>Chapter 1</b>	<b>Manage and Monitor . . . . .</b>	<b>17</b>
	System Settings . . . . .	17
	Specifying the Physical Location of the Switch . . . . .	17
	Modifying the Default Time Zone for a Router or Switch Running Junos OS . . . . .	18
	Configuring Junos OS to Extend the Default Port Address Range . . . . .	19
	Configuring Junos OS to Select a Fixed Source Address for Locally Generated TCP/IP Packets . . . . .	20
	Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses . . . . .	20
	Rebooting and Halting a Device . . . . .	21
	Hostnames . . . . .	22
	Configuring the Hostname of a Router or Switch by Using a Configuration Group . . . . .	22
	Mapping the Hostname of the Switch to IP Addresses . . . . .	24
	Example: Configuring the Name of the Switch, IP Address, and System ID . . . . .	24
	DNS . . . . .	25
	DNS Overview . . . . .	25
	DNS Components . . . . .	25
	DNS Server Caching . . . . .	25
	Configuring a DNS Name Server for Resolving a Hostname into Addresses . . . . .	25
	ICMP . . . . .	28
	Understanding the Protocol Redirect Mechanism on Switches . . . . .	29
	Configuring Junos OS to Disable Sending Protocol Redirect Messages on Switches (CLI Procedure) . . . . .	29
	Configuring Junos OS to Disable the Routing Engine Response to Multicast Ping Packets . . . . .	30



	Configuring Junos OS ICMPv4 Rate Limit for ICMPv4 Routing Engine Messages . . . . .	30
	Alarms . . . . .	31
	System Alarms . . . . .	31
	Configuring Junos OS to Determine Conditions That Trigger Alarms on Different Interface Types . . . . .	31
	System-Wide Alarms and Alarms for Each Interface Type . . . . .	32
	System Troubleshooting . . . . .	33
	Saving Core Files Generated by Junos OS Processes . . . . .	34
	Viewing Core Files from Junos OS Processes . . . . .	34
	Device Monitoring . . . . .	35
	Monitoring System Properties . . . . .	35
	Monitoring System Process Information . . . . .	36
	Monitoring Interfaces . . . . .	37
	Other Tools to Configure and Monitor Devices Running Junos OS . . . . .	39
	Passive Monitoring . . . . .	40
	Understanding Passive Monitoring on QFX10000 Switches . . . . .	40
	Passive Monitoring Benefits . . . . .	40
	Guidelines for Configuring Passive Monitoring . . . . .	40
	Example: Configuring Passive Monitoring on QFX10000 Switches . . . . .	41
<b>Chapter 2</b>	<b>Configuration Statements . . . . .</b>	<b>47</b>
	arp (Interfaces) . . . . .	49
	auxiliary . . . . .	53
	checksum . . . . .	54
	compress-configuration-files (System) . . . . .	55
	console (Physical Port) . . . . .	56
	default-address-selection . . . . .	57
	domain-name . . . . .	58
	domain-search . . . . .	58
	enhanced-hash-key . . . . .	59
	ethernet (Alarm) . . . . .	63
	hardware-timestamp . . . . .	63
	host-name . . . . .	64
	icmpv4-rate-limit . . . . .	65
	inet (enhanced-hash-key) . . . . .	66
	inet6-backup-router . . . . .	68
	inet6 (enhanced-hash-key) . . . . .	69
	internet-options . . . . .	71
	internet-options . . . . .	72
	lcd-menu . . . . .	76
	location . . . . .	78
	location (System) . . . . .	80
	max-configurations-on-flash . . . . .	81
	menu-item . . . . .	82
	no-multicast-echo . . . . .	85
	no-ping-record-route . . . . .	85
	no-ping-time-stamp . . . . .	86
	no-redirects (IPv4 Traffic) . . . . .	87



	optional . . . . .	88
	passive-monitor-mode . . . . .	89
	ports . . . . .	90
	ports . . . . .	91
	power . . . . .	92
	processes . . . . .	93
	saved-core-context . . . . .	94
	saved-core-files . . . . .	95
	static-host-mapping . . . . .	96
	time-format . . . . .	97
	time-zone . . . . .	98
	traceoptions (Layer 2 Learning) . . . . .	101
	traceoptions (SBC Configuration Process) . . . . .	103
	use-imported-time-zones . . . . .	105
<b>Chapter 3</b>	<b>Operational Commands . . . . .</b>	<b>107</b>
	clear log . . . . .	109
	clear chassis display message . . . . .	111
	clear system commit . . . . .	114
	clear system reboot . . . . .	115
	request chassis beacon . . . . .	118
	request chassis cb . . . . .	120
	request chassis fabric plane . . . . .	124
	request chassis fpc . . . . .	127
	request chassis pic . . . . .	134
	request chassis routing-engine master . . . . .	140
	request system halt . . . . .	146
	request system logout . . . . .	152
	request system power-off . . . . .	153
	request system reboot . . . . .	158
	set chassis display message . . . . .	167
	set date . . . . .	170
	show chassis alarms . . . . .	171
	show chassis beacon . . . . .	191
	show chassis environment . . . . .	193
	show chassis environment fpc . . . . .	278
	show chassis environment pem . . . . .	338
	show chassis environment power-supply-unit . . . . .	353
	show chassis environment psu . . . . .	354
	show chassis environment routing-engine . . . . .	356
	show chassis ethernet-switch . . . . .	365
	show chassis fan . . . . .	413
	show chassis firmware . . . . .	431
	show chassis fpc . . . . .	448
	show chassis fabric fpcs . . . . .	502
	show chassis fabric map . . . . .	553
	show chassis fabric plane . . . . .	561
	show chassis fabric plane-location . . . . .	616
	show chassis fabric sibs . . . . .	627



show chassis fabric summary . . . . .	641
show chassis hardware . . . . .	651
show chassis lcd . . . . .	666
show chassis led . . . . .	680
show chassis location . . . . .	691
show chassis mac-addresses . . . . .	696
show chassis pic . . . . .	705
show chassis routing-engine . . . . .	733
show chassis temperature-thresholds . . . . .	762
show chassis zones . . . . .	806
show forwarding-options enhanced-hash-key . . . . .	814
show host . . . . .	819
show interfaces diagnostics optics . . . . .	821
show subscribers . . . . .	827
show system alarms . . . . .	863
show system audit . . . . .	867
show system buffers . . . . .	875
show system certificate . . . . .	882
show system commit . . . . .	884
show system connections . . . . .	887
show system core-dumps . . . . .	894
show system directory-usage . . . . .	909
show system firmware . . . . .	913
show system reboot . . . . .	916
show system software . . . . .	920
show system statistics . . . . .	928
show system storage . . . . .	941
show system uptime . . . . .	947
show system virtual-memory . . . . .	952
show version . . . . .	1025
start shell . . . . .	1030
test configuration . . . . .	1032



# List of Figures

<b>Chapter 1</b>	<b>Manage and Monitor</b> .....	<b>17</b>
	Figure 1: Passive Monitoring Topology .....	41







# List of Tables

	<b>About the Documentation</b> . . . . .	<b>xi</b>
	Table 1: Notice Icons . . . . .	xiii
	Table 2: Text and Syntax Conventions . . . . .	xiv
<b>Chapter 1</b>	<b>Manage and Monitor</b> . . . . .	<b>17</b>
	Table 3: Configurable PIC Alarm Conditions . . . . .	32
	Table 4: Summary of Key System Properties Output Fields . . . . .	35
	Table 5: Summary of System Process Information Output Fields . . . . .	37
<b>Chapter 2</b>	<b>Configuration Statements</b> . . . . .	<b>47</b>
	Table 6: Menu Options of the LCD Menus Supported on the Switches . . . . .	83
<b>Chapter 3</b>	<b>Operational Commands</b> . . . . .	<b>107</b>
	Table 7: show chassis alarms Output Fields . . . . .	179
	Table 8: show chassis led Output Fields . . . . .	192
	Table 9: show chassis environment Output Fields . . . . .	202
	Table 10: show chassis environment fpc Output Fields . . . . .	282
	Table 11: show chassis environment pem Output Fields . . . . .	341
	Table 12: show chassis environment power-supply-unit Output Fields . . . . .	353
	Table 13: show chassis environment psu Output Fields . . . . .	354
	Table 14: show chassis environment routing-engine Output Fields . . . . .	359
	Table 15: show chassis ethernet-switch Output Fields . . . . .	368
	Table 16: show chassis fan Output Fields . . . . .	416
	Table 17: show chassis firmware Output Fields . . . . .	435
	Table 18: show chassis fpc Output Fields . . . . .	459
	Table 19: show chassis fabric fpcs Output Fields . . . . .	505
	Table 20: show chassis fabric map Output Fields . . . . .	554
	Table 21: show chassis fabric plane Output Fields . . . . .	564
	Table 22: show chassis fabric plane-location Output Fields . . . . .	618
	Table 23: show chassis fabric sibs Output Fields . . . . .	628
	Table 24: show chassis fabric summary Output Fields . . . . .	642
	Table 25: Routing Engines Displaying DIMM Information . . . . .	654
	Table 26: show chassis hardware Output Fields . . . . .	656
	Table 27: show chassis lcd Output Fields . . . . .	668
	Table 28: show chassis led Output Fields . . . . .	682
	Table 29: show chassis location Output Fields . . . . .	693
	Table 30: show chassis mac-addresses Output Fields . . . . .	699
	Table 31: show chassis pic Output Fields . . . . .	710
	Table 32: show chassis routing-engine Output Fields . . . . .	737
	Table 33: show chassis temperature-thresholds Output Fields . . . . .	765
	Table 34: show chassis zones Output Fields . . . . .	807



Table 35: show forwarding-options enhanced-hash-key Output Fields . . . . .	814
Table 36: show interfaces diagnostics optics Output Fields . . . . .	821
Table 37: show subscribers Output Fields . . . . .	832
Table 38: show system alarms Output Fields . . . . .	864
Table 39: show system buffers Output Fields . . . . .	878
Table 40: show system certificate Output Fields . . . . .	882
Table 41: show system commit Output Fields . . . . .	885
Table 42: show system connections Output Fields . . . . .	890
Table 43: show system core-dumps Output Fields . . . . .	897
Table 44: show system directory-usage Output Fields . . . . .	911
Table 45: show system firmware Output Fields . . . . .	913
Table 46: show system storage Output Fields . . . . .	944
Table 47: show system uptime Output Fields . . . . .	950
Table 48: show system virtual-memory Output Fields . . . . .	955
Table 49: Common Package Prefixes for Junos OS . . . . .	1026



# About the Documentation

- Documentation and Release Notes on page xi
- Using the Examples in This Manual on page xi
- Documentation Conventions on page xiii
- Documentation Feedback on page xv
- Requesting Technical Support on page xv

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.



## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```



2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

## Documentation Conventions

Table 1 on page xiii defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xiv defines the text and syntax conventions used in this guide.



Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> <b>show chassis alarms</b>  No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Introduces or emphasizes important new terms.</li> <li>Identifies guide names.</li> <li>Identifies RFC and Internet draft titles.</li> </ul>	<ul style="list-style-type: none"> <li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li><i>Junos OS CLI User Guide</i></li> <li>RFC 1997, <i>BGP Communities Attribute</i></li> </ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> <li>To configure a stub area, include the <b>stub</b> statement at the [edit protocols ospf area area-id] hierarchy level.</li> <li>The console port is labeled <b>CONSOLE</b>.</li> </ul>
< > (angle brackets)	Encloses optional keywords or variables.	<b>stub</b> <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast</b>   <b>multicast</b>  ( <i>string1</i>   <i>string2</i>   <i>string3</i> )
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<b>community name members</b> [ <i>community-ids</i> ]
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	

## GUI Conventions



Table 2: Text and Syntax Conventions (continued)

Convention	Description	Examples
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> <li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li> <li>To cancel the configuration, click <b>Cancel</b>.</li> </ul>
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:



- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active Juniper Care or Partner Support Services support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.



## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Create a service request online: <https://myjuniper.juniper.net>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

## Creating a Service Request with JTAC

You can create a service request with JTAC on the Web or by telephone.

- Visit <https://myjuniper.juniper.net>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://support.juniper.net/support/requesting-support/>.



## CHAPTER 1

# Manage and Monitor

- [System Settings on page 17](#)
- [Hostnames on page 22](#)
- [DNS on page 25](#)
- [ICMP on page 28](#)
- [Alarms on page 31](#)
- [System Troubleshooting on page 33](#)
- [Device Monitoring on page 35](#)
- [Passive Monitoring on page 40](#)

## System Settings

---

- [Specifying the Physical Location of the Switch on page 17](#)
- [Modifying the Default Time Zone for a Router or Switch Running Junos OS on page 18](#)
- [Configuring Junos OS to Extend the Default Port Address Range on page 19](#)
- [Configuring Junos OS to Select a Fixed Source Address for Locally Generated TCP/IP Packets on page 20](#)
- [Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses on page 20](#)
- [Rebooting and Halting a Device on page 21](#)

## Specifying the Physical Location of the Switch

To specify the physical location of the switch, specify the following options for the **location** statement at the **[edit system]** hierarchy level:

- **altitude** *feet*—Number of feet above sea level.
- **building** *name*—Name of the building, 1 to 28 characters in length. If the string contains spaces, enclose it in quotation marks (" ").
- **country-code** *code*—Two-letter country code.
- **floor** *number*—Floor in the building.
- **hcoord** *horizontal-coordinate*—Bellcore Horizontal Coordinate.



- **lata *service-area***—Long-distance service area.
- **latitude *degrees***—Latitude in degree format.
- **longitude *degrees***—Longitude in degree format.
- **npa-nxx *number***—First six digits of the phone number (area code and exchange).
- **postal-code *postal-code***—Postal code.
- **rack *number***—Rack number.
- **vcoord *vertical-coordinate***—Bellcore Vertical Coordinate.

The following example shows how to specify the physical location of the switch:

```
[edit system]
location {
  altitude feet;
  building name;
  country-code code;
  floor number;
  hcoord horizontal-coordinate;
  lata service-area;
  latitude degrees;
  longitude degrees;
  npa-nxx number;
  postal-code postal-code;
  rack number;
  vcoord vertical-coordinate;
}
```

**See Also**   • [Example: Configuring the Name of the Switch, IP Address, and System ID on page 24](#)

## Modifying the Default Time Zone for a Router or Switch Running Junos OS

The default local time zone on the router or switch is UTC (Coordinated Universal Time, formerly known as Greenwich Mean Time, or GMT).

- To modify the local time zone, include the **time-zone** statement at the **[edit system]** hierarchy level:

```
[edit system]
time-zone (GMT hour-offset | time-zone);
```

You can use the **GMT *hour-offset*** option to set the time zone relative to UTC (GMT) time. By default, ***hour-offset*** is 0. You can configure this to be a value from -14 to +12.

You can also specify the ***time-zone*** value as a string such as PDT (Pacific Daylight Time) or WET (Western European Time), or specify the continent and major city.





**NOTE:** Junos OS complies with the POSIX time-zone standard, which is counter-intuitive to the way time zones are generally indicated relative to UTC. A time zone ahead of UTC (east of the Greenwich meridian) is commonly indicated as GMT +*n*; for example, the Central European Time (CET) zone is indicated as GMT +1. However, this is not true for POSIX time zone designations. POSIX indicates CET as GMT-1. If you include the `set system time-zone GMT+1` statement for a router in the CET zone, your router time will be set to one hour behind GMT, or two hours behind the actual CET time. For this reason, you might find it easier to use the POSIX time-zone strings, which you can list by entering `set system time-zone ?`.

For the time zone change to take effect for all processes running on the router or switch, you must reboot the router or switch.

The following example shows how to change the current time zone to **America/New\_York**:

```
[edit]
user@host# set system time-zone America/New_York
[edit]
user@host# show
system {
    time-zone America/New_York;
}
```

- See Also**
- *Understanding NTP Time Servers*
  - *Updating the IANA Time Zone Database on Junos OS Devices*

## Configuring Junos OS to Extend the Default Port Address Range

By default, the upper range of a port address is 5000. You can increase the range from which the port number can be selected to decrease the probability that someone can determine your port number.

- To configure Junos OS to extend the default port address range, include the **source-port** statement at the `[edit system internet-options]` hierarchy level:

```
[edit system internet-options]
source-port upper-limit upper-limit;
```

**upper-limit *upper-limit*** is the upper limit of a source port address and can be a value from 5000 through 65,355.

- See Also**
- *Configuring Junos OS to Disable TCP RFC 1323 Extensions*
  - *Configuring Junos OS ARP Learning and Aging Options for Mapping IPv4 Network Addresses to MAC Addresses*



## Configuring Junos OS to Select a Fixed Source Address for Locally Generated TCP/IP Packets

By default, the source address included in locally generated Transmission Control Protocol/IP (TCP/IP) packets, such as FTP traffic, and in User Datagram Protocol (UDP) and IP packets, such as Network Time Protocol (NTP) requests, is chosen as the local address for the interface on which the traffic is transmitted. This means that the local address chosen for packets to a particular destination might change from connection to connection based on the interface that the routing protocol has chosen to reach the destination when the connection is established. If multiple equal-cost next hops are present for a destination, locally generated packets use the **lo0** address as a source.

- To configure the software to select a fixed address to use as the source for locally generated IP packets, include the **default-address-selection** statement at the **[edit system]** hierarchy level:

```
[edit system]
default-address-selection;
```

If you include the **default-address-selection** statement in the configuration, the Junos OS chooses the system default address as the source for most locally generated IP packets. The default address is usually an address configured on the **lo0** loopback interface. For example, if you specified that SSH and telnet use a particular address, but you also have **default-address selection** configured, the system default address is used.

## Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses

When you issue the **ping** command with the **record-route** option, the Routing Engine displays the path of the ICMP echo request packets and timestamps in the ICMP echo responses by default.

You can configure the Routing Engine to disable the setting of the **record-route** option in the IP header of the ping request packets. Disabling the **record-route** option prevents the Routing Engine from recording and displaying the path of the ICMP echo request packets in the response.

- To configure the Routing Engine to disable the setting of the **record route** option, include the **no-ping-record-route** statement at the **[edit system]** hierarchy level:

```
[edit system]
no-ping-record-route;
```

- To disable the reporting of timestamps in the ICMP echo responses, include the **no-ping-time-stamp** option at the **[edit system]** hierarchy level:

```
[edit system]
no-ping-time-stamp;
```

By configuring the **no-ping-record-route** and **no-ping-timestamp** options, you can prevent unauthorized persons from discovering information about the provider edge (PE) router or switch and its loopback address.



- See Also**
- [Configuring Junos OS to Disable the Routing Engine Response to Multicast Ping Packets on page 30](#)

## Rebooting and Halting a Device

To reboot the switch, issue the **request system reboot** command.

```
user@switch> request system reboot ?
```

Possible completions:

<[Enter]>	Execute this command
all-members	Reboot all virtual chassis members
at	Time at which to perform the operation
both-routing-engines	Reboot both the Routing Engines
fast-boot	Enable fast reboot
hypervisor	Reboot Junos OS, host OS, and Hypervisor
in	Number of minutes to delay before operation
local	Reboot local virtual chassis member
member	Reboot specific virtual chassis member (0..9)
message	Message to display to all users
other-routing-engine	Reboot the other Routing Engine
	Pipe through a command

```
{master:0}
```

```
user@switch> request system reboot
```

```
Reboot the system ? [yes,no] (no) yes
Rebooting switch
```



**NOTE:** Not all options shown in the preceding command output are available on all QFX Series, OCX Series, and EX4600 switches. See the documentation for the [request system reboot](#) command for details about options.



**NOTE:** When you issue the **request system reboot hypervisor** command on QFX10000 switches, the reboot takes longer than a standard Junos OS reboot.

Similarly, to halt the switch, issue the **request system halt** command.



**CAUTION:** Before entering this command, you must have access to the switch's console port in order to bring up the Routing Engine.

```
user@switch> request system halt ?
```

Possible completions:

<[Enter]>	Execute this command
all-members	Halt all virtual chassis members
at	Time at which to perform the operation
backup-routing-engine	Halt backup Routing Engine
both-routing-engines	Halt both Routing Engines



<code>in</code>	Number of minutes to delay before operation
<code>local</code>	Halt local virtual chassis member
<code>member</code>	Halt specific virtual chassis member (0..9)
<code>message</code>	Message to display to all users
<code>other-routing-engine</code>	Halt other Routing Engine
<code> </code>	Pipe through a command



**NOTE:** When you issue this command on an individual component in a QFabric system, you will receive a warning that says “Hardware-based members will halt, Virtual Junos Routing Engines will reboot.” If you want to halt only one member, use the `member` option. You cannot issue this command from the QFabric CLI.

Issuing the **`request system halt`** command on the switch halts the Routing Engine. To reboot a Routing Engine that has been halted, you must connect through the console.

- See Also
- [clear system reboot on page 115](#)
  - [request system halt on page 146](#)
  - [request system power-off on page 153](#)
  - [Connecting a QFX Series Device to a Management Console](#)

---

## Hostnames

- [Configuring the Hostname of a Router or Switch by Using a Configuration Group on page 22](#)
- [Mapping the Hostname of the Switch to IP Addresses on page 24](#)
- [Example: Configuring the Name of the Switch, IP Address, and System ID on page 24](#)

### Configuring the Hostname of a Router or Switch by Using a Configuration Group

The hostname of a device is its identification. A router or switch must have its identity established to be accessible on the network to other devices. That is perhaps the most important reason to have a hostname, but a hostname has other purposes: Junos OS uses the configured hostname as part of the command prompt, to prepend log files and other accounting information, as well as in other places where knowing the device identity is useful. We recommend that the hostname be descriptive and memorable.

You can configure the hostname at the **[edit system]** hierarchy level, a procedure shown in *Example: Configuring the Unique Identity of a Router for Making it Accessible on the Network*. Optionally, instead of configuring the hostname at the **[edit system]** hierarchy level, you can use a configuration group, as shown in this procedure. This is a recommended best practice for configuring the hostname, especially if the device has dual Routing Engines. This procedure uses groups called **re0** and **re1** as an example.





**NOTE:** Starting with Junos OS Release 13.2R3, if you configure hostnames that are longer than the CLI screen width, regardless of the terminal screen width setting, the commit operation occurs successfully. Even if the terminal screen width is less than the hostname length, commit is successful. In Junos OS releases earlier than Release 13.2R3, if you configured such hostnames by using the `host-name hostname` statement at the `[edit system]` hierarchy level and the terminal screen width was less than the length of the hostname by using the `set cli screen-width` statement, a foreign file propagation (ffp) failure error message is displayed when you attempt to commit the configuration. In such a case, because of the ffp failure, the commit operation does not complete and you cannot recover the router unless you make the modification in the backend in the `juniper.conf.gz` file and commit the change from the shell prompt.

To set the hostname using a configuration group:

1. Include the **host-name** statement in the configuration at the `[edit groups group-name system]` hierarchy level.

The name value must be less than 256 characters.

```
[edit groups group-name system]
host-name hostname;
```

For example:

```
[edit groups re0 system]
root@# set host-name san-jose-router0
```

```
[edit groups re1 system]
root@# set host-name san-jose-router1
```

2. If you used one or more configuration groups, apply the configuration groups, substituting the appropriate group names.

For example:

```
[edit]
user@host# set apply-groups [re0 re1]
```

3. Commit the changes.

```
[edit]
root@# commit
```

The hostname subsequently appears in the device CLI prompt.

```
san-jose-router0#
```



## Mapping the Hostname of the Switch to IP Addresses

To map a hostname of a switch to one or more IP addresses, include the **inet** statement at the **[edit system static-host-mapping hostname]** hierarchy level:

```
[edit system]
static-host-mapping {
  hostname {
    inet [ addresses ];
    alias [ aliases ];
  }
}
```

**hostname** is the name specified by the **host-name** statement at the **[edit system]** hierarchy level.

For each host, you can specify one or more aliases.

- See Also**
- [Configuring a DNS Name Server for Resolving a Hostname into Addresses on page 25](#)
  - *Example: Configuring the Unique Identity of a Router for Making it Accessible on the Network*
  - [static-host-mapping on page 96](#)

## Example: Configuring the Name of the Switch, IP Address, and System ID

The following example shows how to configure the switch name, map the name to an IP address and alias, and configure a system identifier:

```
[edit]
user@switch# set system host-name switch1
[edit]
user@switch# set system static-host-mapping switch1 inet 192.168.1.77
[edit]
user@switch# set system static-host-mapping switch1 alias sjl
[edit]
user@switch# set system static-host-mapping switch1 sysid 1921.6800.1077
[edit]
user@switch# show
system {
  host-name switch-sjl;
  static-host-mapping {
    switch-sjl {
      inet 192.168.1.77;
      alias sjl;
      sysid 1921.6800.1077;
    }
  }
}
```



---

## DNS

---

- [DNS Overview on page 25](#)
- [Configuring a DNS Name Server for Resolving a Hostname into Addresses on page 25](#)

### DNS Overview

A Domain Name System (DNS) is a distributed hierarchical system that converts hostnames to IP addresses. The DNS is divided into sections called zones. Each zone has name servers that respond to the queries belonging to their zones.

This topic includes the following sections:

- [DNS Components on page 25](#)
- [DNS Server Caching on page 25](#)

---

#### DNS Components

DNS includes three main components:

- DNS resolver — Resides on the client side of the DNS. When a user sends a hostname request, the resolver sends a DNS query request to the name servers to request the hostname's IP address.
- Name servers — Processes the DNS query requests received from the DNS resolver and returns the IP address to the resolver.
- Resource records — Data elements that define the basic structure and content of the DNS.

---

#### DNS Server Caching

DNS name servers are responsible for providing the hostname IP address to users. The TTL field in the resource record defines the period for which DNS query results are cached. When the TTL value expires, the name server sends a fresh DNS query and updates the cache.

**See Also** • [Example: Configuring the TTL Value for DNS Server Caching](#)

### Configuring a DNS Name Server for Resolving a Hostname into Addresses

Domain name system (DNS) servers are used for resolving hostnames to IP addresses.

For redundancy, it is a best practice to configure access to multiple DNS servers. You can configure a maximum of three DNS servers. The approach is similar to the way Web browsers resolve the names of a Web site to its network address. Additionally, Junos OS enables you configure one or more domain names, which it uses to resolve hostnames that are not fully qualified (in other words, the domain name is missing). This is convenient because you can use a hostname in configuring and operating Junos OS without the need to reference the full domain name. After adding DNS server addresses and domain names



to your Junos OS configuration, you can use DNS resolvable hostnames in your configuration and commands instead of IP addresses.

Optionally, instead of configuring the name server at the **[edit system]** hierarchy level, you can use a configuration group, as shown in this procedure. This is a recommended best practice for configuring the name server.

Starting in Junos OS Release 19.2R1, DNS configuration can be made routing instance aware. If you configure a routing instance at the **[edit system name-server server-ip-address]** hierarchy level, the name server becomes reachable through this routing instance. Previously, in Junos OS, DNS used the default routing table, inet.0. To fully enable this routing instance, configure the following:

- `user@host# set system management-instance`
- `user@host# set routing-instances mgmt_junos description description`
- `user@host# set system name-server server-ip-address routing-instance mgmt_junos`

If you have configured the name server using a configuration group, use the **[edit groups group-name system name-server]** hierarchy level, which is a recommended best practice for configuring the name server.

Before you begin, configure your DNS servers with the hostname and an IP address for your Junos OS device. It does not matter which IP address you assign as the address of your Junos OS device in the DNS server, as long it is an address that reaches your device. Normally, you would use the management interface IP address, but you can choose the loopback interface IP address, or a network interface IP address, or even configure multiple addresses on the DNS server.

To configure the router or switch to resolve hostnames into addresses:

1. Reference the IP addresses of your DNS servers.

```
[edit groups group-name system]
name-server {
  address;
}
```

The following example shows how to reference two DNS servers:

```
[edit groups global system]
user@host# set name-server 192.168.1.253
user@host# set name-server 192.168.1.254
user@host# show
name server {
  192.168.1.253;
  192.168.1.254;
}
```

2. (Optional) Configure the routing instance for DNS.



The following example shows how to configure the routing-instance for one of the DNS servers:

```
[edit groups global system]
user@host# set name-server 192.168.1.253 routing-instance mgmt_junos
```

Remember to also configure the following:

- **management-instance** statement at the **[edit system]** hierarchy level
  - **routing-instance** statement at the **[edit routing-instances]** hierarchy level.
3. (Optional) Configure the name of the domain in which the device itself is located.

This is a good practice. Junos OS then uses this configured domain name as the default domain name to append to hostnames that are not fully qualified.

```
[edit system]
domain-name domain-name;
```

The following example shows how to configure the domain name:

```
[edit groups global system]
user@host# set domain-name company.net
user@host# show
domain-name company.net;
```

4. (Optional) Configure a list of domains to be searched.

If your device can reach several different domains, you can configure these as a list of domains to be searched. Junos OS then uses this list to set an order in which it appends domain names when searching for the IP address of a host.

```
[edit groups global system]
domain-search [ domain-list ];
```

The domain list can contain up to six domain names, with a total of up to 256 characters.

The following example shows how to configure two domains to be searched. This example configures Junos OS to search the company.net domain and then the domainone.net domain and then the domainonealternate.com domain when attempting to resolve unqualified hosts.

```
[edit groups global system]
domain-search [ company.net domainone.net domainonealternate.com ]
```

5. If you used a configuration group, apply the configuration group, substituting **global** with the appropriate group name.

```
[edit]
user@host# set apply-groups global
```



6. Commit the configuration.

```
user@host# commit
```

7. Verify the configuration.

If you have configured your DNS server with the hostname and an IP address for your Junos OS device, you can issue the following commands to confirm that DNS is working and reachable. You can either use the configured hostname to confirm resolution to the IP address or use the IP address of your device to confirm resolution to the configured hostname.

```
user@host> show host host-name
user@host> show host host-ip-address
```

For example:

```
user@host> show host device.example.net
device.example.net
device.example.net has address 192.168.187.1
```

```
user@host> show host 192.168.187.1
10.187.168.192.in-addr.arpa domain name pointer device.example.net.
```

- See Also**
- *name-server*
  - *domain-search*

- Related Documentation**
- *Understanding Hostnames*
  - *DNSSEC Overview*
  - *Getting Started Guide*

---

## ICMP

- [Understanding the Protocol Redirect Mechanism on Switches on page 29](#)
- [Configuring Junos OS to Disable Sending Protocol Redirect Messages on Switches \(CLI Procedure\) on page 29](#)
- [Configuring Junos OS to Disable the Routing Engine Response to Multicast Ping Packets on page 30](#)
- [Configuring Junos OS ICMPv4 Rate Limit for ICMPv4 Routing Engine Messages on page 30](#)



## Understanding the Protocol Redirect Mechanism on Switches

Internet Control Message Protocol (ICMP) redirect, also known as protocol redirect, is a mechanism used by switches and routers to convey routing information to hosts. ICMP redirect messages are used by switches and routers to notify the hosts on the same data link of the best route available for a given destination. All EX series switches support sending ICMP redirect messages for both IPv4 and IPv6 traffic.



**NOTE:** Switches do not send ICMP redirect messages if the data packet contains routing information.

The ICMP redirect messages inform a host to update its routing information and to send packets on an alternate route. Suppose a host tries to send a data packet through a switch (say, S1) and S1 sends the data packet to another switch (say, S2). Also, suppose that a direct path from the host to S2 is available (that is, the host and S2 are on the same Ethernet segment). S1 then sends a protocol redirect message to inform the host that the best route for the destination is the direct route to S2. The host should then send packets directly to S2 instead of sending them through S1. S2 still sends the original packet that it received from S1 to the intended destination. Refer to [RFC-1122](#) and [RFC-4861](#) for more details on ICMP redirecting.

By default, the switch sends protocol redirect messages. For security reasons, you might want to disable the switch from sending protocol redirect messages.

## Configuring Junos OS to Disable Sending Protocol Redirect Messages on Switches (CLI Procedure)

Switches support sending ICMP redirect messages for both IPv4 and IPv6 traffic. By default, the switch sends protocol redirect messages. For security reasons, you may want to disable the switch from sending protocol redirect messages.

To disable the sending of redirect messages by the switch:

- Disable sending protocol redirect messages for the entire switch:

For IPv4 traffic:

```
[edit system]
user@switch# set no-redirects
```

For IPv6 traffic:

```
[edit system]
user@switch# set no-redirects
```

- Disable sending the protocol redirect messages on a specific interface:

For IPv4 traffic:

```
[edit interfaces interface-name unit logical-unit-number family family]
user@switch# set no-redirects
```



For IPv6 traffic:

```
[edit interfaces interface-name unit logical-unit-number family family]  
user@switch# set no-redirects
```

To re-enable the sending of redirect messages on the switch, delete the **no-redirects** statement (for IPv4 traffic) or the **no-redirects-ipv6** statement (for IPv6 traffic) from the configuration.

- See Also**
- [Configuring Junos OS to Ignore ICMP Source Quench Messages](#)
  - [Junos OS Network Interfaces Library for Routing Devices](#)

## Configuring Junos OS to Disable the Routing Engine Response to Multicast Ping Packets

By default, the Routing Engine responds to Internet Control Message Protocol (ICMP) echo requests sent to multicast group addresses. To disable the Routing Engine from responding to ICMP echo requests sent to multicast group addresses, include the **no-multicast-echo** statement at the **[edit system]** hierarchy level:

```
[edit system]  
no-multicast-echo;
```

By configuring the Routing Engine to ignore multicast ping packets, you can prevent unauthorized persons from discovering the list of provider edge (PE) routers or switches in the network.

- See Also**
- [Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses on page 20](#)

## Configuring Junos OS ICMPv4 Rate Limit for ICMPv4 Routing Engine Messages

To limit the rate at which ICMPv4 messages can be generated and received by the Routing Engine, include the **icmpv4-rate-limit** statement at the **[edit system internet-options]** hierarchy level:

```
icmpv4-rate-limit bucket-size bucket-size packet-rate packet-rate;
```

The bucket size is the number of seconds in the rate-limiting bucket. The packet rate is the rate-limiting packets earned per second. Specify a **bucket-size** from 0 through 4294967295 seconds. The default value is 5 seconds. Specify a **packet-rate** from 0 through 4,294,967,295. The default value is 1000.



## Alarms

- [System Alarms on page 31](#)
- [Configuring Junos OS to Determine Conditions That Trigger Alarms on Different Interface Types on page 31](#)
- [System-Wide Alarms and Alarms for Each Interface Type on page 32](#)

### System Alarms

Switches provide predefined system alarms that can be triggered by a missing rescue configuration, failure to install a license for a licensed software feature, or high disk usage. You can display alarm messages by issuing the **show system alarms** operational mode command.

For example: The switch might trigger an alarm when disk usage in the `/var` partition exceeds 75 percent. A usage level between 76 and 90 percent indicates high usage and raises a minor alarm condition, whereas a usage level above 90 percent indicates that the partition is full and raises a major alarm condition.

The following sample output shows the system alarm messages that are displayed when disk usage is exceeded on the switch.

```
user@host> show system alarms
```

```
4 alarms currently active
Alarm time      Class  Description
2013-10-08 20:08:20 UTC  Minor  RE 0 /var partition usage is high
2013-10-08 20:08:20 UTC  Major  RE 0 /var partition is full
2013-10-08 20:08:08 UTC  Minor  FPC 1 /var partition usage is high
2013-10-08 20:08:08 UTC  Major  FPC 1 /var partition is full
```



**BEST PRACTICE:** We recommend that you regularly request a system file storage cleanup to optimize the performance of the switch and prevent generating system alarms.

### See Also

## Configuring Junos OS to Determine Conditions That Trigger Alarms on Different Interface Types

For the different types of PICs, you can configure which conditions trigger alarms and whether they trigger a red or yellow alarm. Red alarm conditions light the **RED ALARM** LED and trigger an audible alarm if one is connected. Yellow alarm conditions light the **YELLOW ALARM** LED and trigger an audible alarm if one is connected.



**NOTE:** By default, any failure condition on the integrated-services interface (Adaptive Services PIC) triggers a red alarm.



To configure conditions that trigger alarms and that can occur on any interface of the specified type, include the **alarm** statement at the **[edit chassis]** hierarchy level.

```
[edit chassis]
alarm {
  interface-type {
    alarm-name (red | yellow | ignore);
  }
}
```

**alarm-name** is the name of an alarm.

## System-Wide Alarms and Alarms for Each Interface Type

Table 3 on page 32 lists the system-wide alarms and the alarms for each interface type.

**Table 3: Configurable PIC Alarm Conditions**

Interface/System	Alarm Condition	Configuration Option
SONET/SDH and ATM	Link alarm indication signal	<b>ais-l</b>
	Path alarm indication signal	<b>ais-p</b>
	Signal degrade (SD)	<b>ber-sd</b>
	Signal fail (SF)	<b>ber-sf</b>
	Loss of cell delineation (ATM only)	<b>locd</b>
	Loss of framing	<b>lof</b>
	Loss of light	<b>lol</b>
	Loss of pointer	<b>lop-p</b>
	Loss of signal	<b>los</b>
	Phase-locked loop out of lock	<b>pll</b>
	Synchronous transport signal (STS) payload label (C2) mismatch	<b>plm-p</b>
	Line remote failure indication	<b>rfl-l</b>
	Path remote failure indication	<b>rfl-p</b>
	STS path (C2) unequipped	<b>uneq-p</b>



**Table 3: Configurable PIC Alarm Conditions (continued)**

Interface/System	Alarm Condition	Configuration Option
E3/T3	Alarm indicator signal	<b>ais</b>
	Excessive numbers of zeros	<b>exz</b>
	Failure of the far end	<b>ferf</b>
	Idle alarm	<b>idle</b>
	Line code violation	<b>lcv</b>
	Loss of frame	<b>lof</b>
	Loss of signal	<b>los</b>
	Phase-locked loop out of lock	<b>pll</b>
	Yellow alarm	<b>ylw</b>
Ethernet	Link has gone down	<b>link-down</b>
DS1	Alarm indicator signal	<b>ais</b>
	Yellow alarm	<b>ylw</b>
Integrated services	Hardware or software failure	<b>failure</b>
Management Ethernet	Link has gone down	<b>link-down</b>

**Related Documentation**

- *Chassis Conditions That Trigger Alarms*
- *Understanding Alarms*
- *Network Management and Monitoring Guide*
- *Freeing Up System Storage Space*
- [show system alarms on page 863](#)

## System Troubleshooting

- [Saving Core Files Generated by Junos OS Processes on page 34](#)
- [Viewing Core Files from Junos OS Processes on page 34](#)



## Saving Core Files Generated by Junos OS Processes

By default, when an internal Junos OS process generates a core file, the file and associated context information are saved for debugging purposes in a compressed tar file named `/var/tmp/process-name.core.core-number.tgz`. The contextual information includes the configuration and system log message files.

- To disable the saving of core files and associated context information:

```
[edit system]
no-saved-core-context;
```

- To save the core files only:

```
[edit system]
saved-core-files number;
```

Where *number* is the number of core files to save and can be a value from 1 through 10.

- To save the core files along with the contextual information:

```
[edit system]
saved-core-context;
```

## Viewing Core Files from Junos OS Processes

When an internal Junos OS process generates a core file, you can find the output at `/var/crash/` and `/var/tmp/`. For Junos OS Evolved, you can find the output core files at `/var/core/` for Routing Engine core files and `/var/lib/ftp/in/` for FPC core files. Using these directories provides a quick method of finding core issues across large networks.

Use the CLI command `show system core-dumps` to view core files.

```
root@host> show system core-dumps
-rw----- 1 root  wheel  268369920 Jun 18 17:59 /var/crash/vmcore.0
-rw-rw---- 1 root  field   3371008 Jun 18 17:53 /var/tmp/rpd.core.0
-rw-r--r-- 1 root  wheel   27775914 Jun 18 17:59 /var/crash/kernel.0
```

**See Also** • [show system core-dumps on page 894](#)

- *Saving Core Files from Junos OS Processes*

**Related Documentation** • [Day One: Monitoring and Troubleshooting](#)

- *Troubleshooting and Monitoring for QFabric Systems*



## Device Monitoring

- [Monitoring System Properties on page 35](#)
- [Monitoring System Process Information on page 36](#)
- [Monitoring Interfaces on page 37](#)
- [Other Tools to Configure and Monitor Devices Running Junos OS on page 39](#)

### Monitoring System Properties

**Purpose** View system properties such as the name, IP address, and resource usage.

**Action** To monitor system properties in the CLI, enter the following commands:

- `show system uptime`
- `show system users`
- `show system storage`

**Meaning** [Table 4 on page 35](#) summarizes key output fields in the system properties display.

*Table 4: Summary of Key System Properties Output Fields*

Field	Values	Additional Information
General Information		
Serial Number	Serial number of device.	
Junos OS Version	Version of Junos OS active on the switch, including whether the software is for domestic or export use.	Export software is for use outside the USA and Canada.
Hostname	Name of the device.	
IP Address	IP address of the device.	
Loopback Address	Loopback address.	
Domain Name Server	Address of the domain name server.	
Time Zone	Time zone on the device.	
Time		
Current Time	Current system time, in Coordinated Universal Time (UTC).	
System Booted Time	Date and time when the device was last booted and how long it has been running.	



Table 4: Summary of Key System Properties Output Fields (continued)

Field	Values	Additional Information
Protocol Started Time	Date and time when the protocols were last started and how long they have been running.	
Last Configured Time	Date and time when a configuration was last committed. This field also shows the name of the user who issued the last <b>commit</b> command.	
Load Average	CPU load average for 1, 5, and 15 minutes.	
<b>Storage Media</b>		
Internal Flash Memory	Usage details of internal flash memory.	
External Flash Memory	Usage details of external USB flash memory.	
<b>Logged in Users Details</b>		
User	Username of any user logged in to the switch.	
Terminal	Terminal through which the user is logged in.	
From	System from which the user has logged in. A hyphen indicates that the user is logged in through the console.	
Login Time	Time when the user logged in.	This is the <b>user@switch</b> field in <b>show system users</b> command output.
Idle Time	How long the user has been idle.	

**See Also** • *show system processes*

## Monitoring System Process Information

**Purpose** View the processes running on the device.

**Action** To view the software processes running on the device:

```
user@switch> show system processes
```

**Meaning** [Table 5 on page 37](#) summarizes the output fields in the system process information display.



The display includes the total CPU load and total memory utilization.

*Table 5: Summary of System Process Information Output Fields*

Field	Values
PID	Identifier of the process.
Name	Owner of the process.
State	Current state of the process.
CPU Load	Percentage of the CPU that is being used by the process.
Memory Utilization	Amount of memory that is being used by the process.
Start Time	Time of day when the process started.

**See Also** • [show system uptime on page 947](#)

## Monitoring Interfaces

**Purpose** View general information about all physical and logical interfaces for a device.

**Action** Enter the following **show** commands in the CLI to view interface status and traffic statistics.

- **show interfaces terse**



**NOTE:** On SRX Series devices, when configuring identical IPs on a single interface, you will not see a warning message; instead, you will see a syslog message.

- **show interfaces extensive**
- **show interfaces *interface-name***



**NOTE:** If you are using the J-Web user interfaces, select **Monitor>Interfaces** in the J-Web user interface. The J-Web Interfaces page displays the following details about each device interface:

- **Port**—Indicates the interface name.
- **Admin Status**—Indicates whether the interface is enabled (Up) or disabled (Down).



- Link Status—Indicates whether the interface is linked (Up) or not linked (Down).
- Address—Indicates the IP address of the interface.
- Zone—Indicates whether the zone is an untrust zone or a trust zone.
- Services—Indicates services that are enabled on the device, such as HTTP and SSH.
- Protocols—Indicates protocols that are enabled on the device, such as BGP and IGMP.
- Input Rate graph—Displays interface bandwidth utilization. Input rates are shown in bytes per second.
- Output Rate graph—Displays interface bandwidth utilization. Output rates are shown in bytes per second.
- Error Counters chart—Displays input and output error counters in the form of a bar chart.
- Packet Counters chart—Displays the number of broadcast, unicast, and multicast packet counters in the form of a pie chart. (Packet counter charts are supported only for interfaces that support MAC statistics.)

To change the interface display, use the following options:

- Port for FPC—Controls the member for which information is displayed.
- Start/Stop button—Starts or stops monitoring the selected interfaces.
- Show Graph—Displays input and output packet counters and error counters in the form of charts.
- Pop-up button—Displays the interface graphs in a separate pop-up window.
- Details—Displays extensive statistics about the selected interface, including its general status, traffic information, IP address, I/O errors, class-of-service data, and statistics.
- Refresh Interval—Indicates the duration of time after which you want the data on the page to be refreshed.
- Clear Statistics—Clears the statistics for the selected interface.

**See Also**   • *Interfaces Feature Guide for Security Devices*



## Other Tools to Configure and Monitor Devices Running Junos OS

Starting in Junos OS Release 15.1, apart from the command-line interface, Junos OS also supports the following applications, scripts, and utilities that enable you to configure and monitor devices running Junos OS:

- Junos XML Management Protocol Application Programming Interface (API)—Application programmers can use the Junos XML Management Protocol API to monitor and configure Juniper Networks devices. Juniper Networks provides a Perl module with the API to help you more quickly and easily develop custom Perl scripts for configuring and monitoring the devices.
- NETCONF Application Programming Interface (API)—Application programmers can also use the NETCONF API to monitor and configure Juniper Networks devices.
- Junos OS commit scripts—You can define scripts to enforce custom configuration tasks, enforce consistency, prevent common mistakes, and more. Every time you commit a new candidate configuration, the active commit scripts are called to inspect the new candidate configuration. If a configuration violates your custom rules, the script can instruct the Junos OS to perform various actions, including making changes to the configuration and generating custom, warning, and system log messages.
- Junos OS Op scripts—You can add your own commands to the operation-mode CLI. You can use these scripts to automate troubleshooting of known network problems and correct them.
- Junos OS event scripts—You can use event scripts to diagnose and fix issues, monitor the overall status of the system, and examine errors periodically. Event scripts are similar to op scripts except that certain events on the switch will trigger these scripts.
- CHEF—You can use CHEF automate the provisioning and management of compute, networking, and storage resources. Chef for Junos OS provides support for Chef on selected Junos OS devices, allowing you to automate common switching network configurations.
- Puppet—You can use PUPPET for configuration management. Puppet provides an efficient and scalable solution for managing the configurations of large numbers of devices. System administrators take advantage of Puppet to manage compute resources such as physical and virtual servers.

- See Also**
- *CLI User Interface Overview*
  - *NETCONF XML Management Protocol Developer Guide*



**Release History Table**

Release	Description
15.1	Starting in Junos OS Release 15.1, apart from the command-line interface, Junos OS also supports the following applications, scripts, and utilities that enable you to configure and monitor devices running Junos OS:

**Related Documentation**

- [Understanding Device and Network Management Features](#)
- [Day One: Monitoring and Troubleshooting](#)

---

## Passive Monitoring

- [Understanding Passive Monitoring on QFX10000 Switches on page 40](#)
- [Example: Configuring Passive Monitoring on QFX10000 Switches on page 41](#)

### Understanding Passive Monitoring on QFX10000 Switches

Passive monitoring is a type of network monitoring used to passively capture traffic from monitoring interfaces. When you enable passive monitoring, the switch does not route packets from the monitoring interface or run any routing protocols related to those interfaces. It only receives traffic flows, collects intercepted traffic, and exports it to monitoring tools like IDS servers and packet analyzers, or other devices such as routers or end node hosts. Starting in Junos OS Release 18.4R1, you can configure passive monitoring on QFX10000 switches.

---

#### Passive Monitoring Benefits

- Provides filtering capabilities for monitoring ingress and egress traffic at the Internet point of presence (PoP) where security networks are attached.

---

#### Guidelines for Configuring Passive Monitoring

- Passive monitoring can only be configured at the interface level. Configuration per VLAN or logical interface is not supported.
- A passive monitoring interface cannot be an aggregated Ethernet (AE) interface.
- Monitoring tools or devices must be directly connected to the switch.
- Packets with more than two MPLS labels and more than two VLAN tags are dropped.
- Exception packets such as IP packet options, router alert, and TTL expiry packets are treated as regular traffic.
- Ethernet encapsulation is not supported.
- MPLS family filter configuration is not supported.
- Link Aggregation Control Protocol (LACP) is not supported on the AE bundle connected to the monitoring tool or device.



## Example: Configuring Passive Monitoring on QFX10000 Switches

This example shows how to configure passive monitoring on QFX10000 switches.

- [Requirements on page 41](#)
- [Overview on page 41](#)
- [Configuration on page 42](#)
- [Verification on page 43](#)

### Requirements

This example uses the following hardware and software components:

- Two routers (R1 and R2)
- One QFX10002 switch
- Two devices, directly connected to the switch
- Junos OS Release 18.4R1 or later

### Overview


This example describes how to configure passive monitoring on the switch.

In [Figure 1 on page 41](#), **et-0/0/2** and **et-0/0/4** are configured as passive monitoring interfaces. Packets coming into the network are exchanged between Router 1 (R1) and Router 2 (R2) in two directions (R1 to R2, R2 to R1) and are sent to the monitored interfaces. When traffic is received, a firewall filter transfers all packets to a routing instance and forwards the packets to the monitoring tools. The interfaces are then grouped into a single logical interface, known as a link aggregation group (LAG) or AE bundle. This enables the traffic to be evenly distributed across the monitoring tools effectively increasing the uplink bandwidth. If one interface fails, the bundle continues to carry traffic over the remaining interfaces.

Optionally, you can apply symmetric hashing over the passive monitor interfaces for load balancing traffic to the monitoring tools. This allows ingress and egress traffic of the same flow to be sent out through the same monitored interface. To configure symmetric hashing, include the **no-incoming-port** option under the **[edit forwarding-options enhanced-hash-key]** hierarchy. Symmetric hashing is enabled and disabled at the global level only. Per protocol hashing is not supported.

### Topology

*Figure 1: Passive Monitoring Topology*

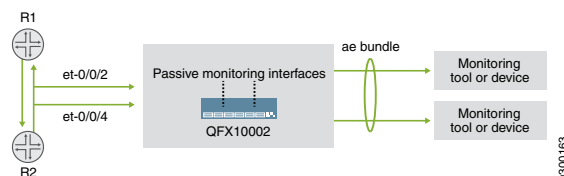



## Configuration

The following example requires you to navigate various levels in the CLI hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

- [Configuring Passive Monitoring on page 42](#)

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```
set interfaces et-0/0/2 passive-monitor-mode
set interfaces et-0/0/2 unit 0 family inet filter input pm
set interfaces et-0/0/4 passive-monitor-mode
set interfaces et-0/0/4 unit 0 family inet filter input pm1
set firewall family inet filter pm1 term t1 from interface et-0/0/4.0
set firewall family inet filter pm1 term t1 then count c1
set firewall family inet filter pm1 term t1 then routing-instance pm_inst
set firewall family inet filter pm term t1 from interface et-0/0/2.0
set firewall family inet filter pm term t1 then count c3
set firewall family inet filter pm term t1 then routing-instance pm_inst
set routing-instances pm_inst instance-type virtual-router
set routing-instances pm_inst interface ae0.0
set routing-instances pm_inst routing-options static route 0.0.0.0/0 next-hop 198.51.1.1
set interfaces xe-0/0/9:0 ether-options 802.3ad ae0
set interfaces xe-0/0/9:1 ether-options 802.3ad ae0
set interfaces ae0 unit 0 family inet address 198.51.1.2/24 arp 198.51.1.1 mac
00:10:94:00:00:05
set routing-instances pm_inst interface ae0.0
set forwarding-options enhanced-hash-key inet no-incoming-port
```

### Configuring Passive Monitoring

#### Step-by-Step Procedure

To configure passive monitoring:

1. Configure passive-monitor mode on the switch interfaces:

```
[edit]
user@switch#
set interfaces et-0/0/2 passive-monitor-mode
set interfaces et-0/0/2 unit 0 family inet filter input pm
set interfaces et-0/0/4 passive-monitor-mode
set interfaces et-0/0/4 unit 0 family inet filter input pm1
```

2. Configure a **family inet** firewall filter on the passive monitor interfaces to forward the traffic to a routing instance. Supported filter actions are **accept**, **reject**, **count**, **routing-instance**.

```
[edit]
user@switch#
```



```

set firewall family inet filter pm1 term t1 from interface et-0/0/4.0
set firewall family inet filter pm1 term t1 then count c1
set firewall family inet filter pm1 term t1 then routing-instance pm_inst
set firewall family inet filter pm term t1 from interface et-0/0/2.0
set firewall family inet filter pm term t1 then count c3
set firewall family inet filter pm term t1 then routing-instance pm_inst

```

3. Create a routing-instance with a static route that points to the devices.

```

[edit]
user@switch#
set routing-instances pm_inst instance-type virtual-router
set routing-instances pm_inst interface ae0.0
set routing-instances pm_inst routing-options static route 0.0.0.0/0 next-hop
  198.1.1.1

```

4. Configure an AE bundle on the passive monitoring interfaces.

```

[edit]
user@switch#
set interfaces xe-0/0/9:0 ether-options 802.3ad ae0
set interfaces xe-0/0/9:1 ether-options 802.3ad ae0
set interfaces ae0 unit 0 family inet address 198.51.1.2/24 arp 198.51.1.1 mac
  00:10:94:00:00:05
set routing-instances pm_inst interface ae0.0

```

5. (Optional) Configure symmetric hashing.

```

[edit]
user@switch#
set forwarding-options enhanced-hash-key inet no-incoming-port

```

6. From configuration mode, confirm your configuration by entering the **show interfaces** command. If the command output does not display the intended configuration, repeat the instructions in this example to correct it.
7. If you are done configuring the interfaces, enter **commit** from configuration mode.

## Verification

Confirm that the configuration is working properly.

- [Verify the Passive Monitoring Configuration on page 44](#)
- [Verify Symmetric Hashing on page 45](#)



**Verify the Passive Monitoring Configuration**

**Purpose** Verify that passive monitoring is working on the interfaces. If the interface output shows **No-receive** and **No-transmit**, this means that passive monitoring is working.

**Action** From operational mode, enter the **show interfaces** command to view the passive monitoring interfaces.

```
user@host> show interfaces et-0/0/2
```

```
Physical interface: et-0/0/2, Enabled, Physical link is Up
  Interface index: 146, SNMP ifIndex: 515
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 40Gbps, BPDU Error:
  None, Loop Detect PDU Error: None, Ethernet-Switching Error: None, MAC-REWRITE
  Error: None,
  Loopback: Disabled, Source filtering: Disabled, Flow control: Disabled, Media
  type: Fiber
  Device flags      : Present Running
  Interface flags:  SNMP-Traps No-receive No-transmit Internal: 0x4000
  Link flags       : None
  CoS queues       : 8 supported, 8 maximum usable queues
  Current address:  3c:61:04:75:3c:5d, Hardware address: 3c:61:04:75:3c:5d
  Last flapped     : 2018-05-17 11:19:05 PDT (00:17:55 ago)
  Input rate       : 0 bps (0 pps)
  Output rate      : 0 bps (0 pps)
  Active alarms    : None
  Active defects   : None
  PCS statistics
    Bit errors          Seconds
    Errored blocks      0
    Ethernet FEC Mode   : NONE
  Ethernet FEC statistics
    FEC Corrected Errors      0
    FEC Uncorrected Errors    0
    FEC Corrected Errors Rate 0
    FEC Uncorrected Errors Rate 0
  PRBS Statistics : Disabled
  Interface transmit statistics: Disabled
```

```
user@host show interfaces et-0/0/4
```

```
Physical interface: et-0/0/4, Enabled, Physical link is Up
  Interface index: 146, SNMP ifIndex: 515
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 40Gbps, BPDU Error:
  None, Loop Detect PDU Error: None, Ethernet-Switching Error: None, MAC-REWRITE
  Error: None,
  Loopback: Disabled, Source filtering: Disabled, Flow control: Disabled, Media
  type: Fiber
  Device flags      : Present Running
  Interface flags:  SNMP-Traps No-receive No-transmit Internal: 0x4000
  Link flags       : None
  CoS queues       : 8 supported, 8 maximum usable queues
  Current address:  3c:61:04:75:3c:5d, Hardware address: 3c:61:04:75:3c:5d
  Last flapped     : 2018-05-17 11:19:05 PDT (00:18:17 ago)
  Input rate       : 0 bps (0 pps)
  Output rate      : 0 bps (0 pps)
  Active alarms    : None
  Active defects   : None
```



```
PCS statistics                      Seconds
  Bit errors                        0
  Errored blocks                    0
Ethernet FEC Mode :                 NONE
Ethernet FEC statistics            Errors
  FEC Corrected Errors              0
  FEC Uncorrected Errors            0
  FEC Corrected Errors Rate         0
  FEC Uncorrected Errors Rate       0
PRBS Statistics : Disabled
Interface transmit statistics: Disabled
```

### *Verify Symmetric Hashing*

**Purpose** Verify the output for symmetric hashing. The incoming port fields for **inet**, **inet6** and **L2** should all be set to No.



**Action** From configuration mode, enter the `show forwarding-options enhanced-hash-key` command.

Slot 0

```
Seed value for Hash function      0: 3626023417
Seed value for Hash function      1: 3626023417
Seed value for Hash function      2: 3626023417
Seed value for Hash function      3: 3626023417
```

Inet settings:

-----

```
IPV4 dest address:  Yes
IPV4 source address: Yes
L4 Dest Port:      Yes
L4 Source Port:     Yes
```

Incoming port: No

Inet6 settings:

-----

```
IPV6 dest address:  Yes
IPV6 source address: Yes
L4 Dest Port:      Yes
L4 Source Port:     Yes
```

Incoming port: No

L2 settings:

-----

```
Dest Mac address:  No
Source Mac address: No
Vlan Id:           Yes
Inner-vlan Id:     No
Incoming port:     No
```

GRE settings:

-----

```
Key:               No
Protocol:          No
```

MPLS settings:

-----

MPLS Enabled: Yes

VXLAN settings:

-----

```
VXLAN VNID:        No
```

## Release History Table

Release	Description
18.4R1	Starting in Junos OS Release 18.4R1, you can configure passive monitoring on QFX10000 switches.



## CHAPTER 2

# Configuration Statements

- [arp \(Interfaces\) on page 49](#)
- [auxiliary on page 53](#)
- [checksum on page 54](#)
- [compress-configuration-files \(System\) on page 55](#)
- [console \(Physical Port\) on page 56](#)
- [default-address-selection on page 57](#)
- [domain-name on page 58](#)
- [domain-search on page 58](#)
- [enhanced-hash-key on page 59](#)
- [ethernet \(Alarm\) on page 63](#)
- [hardware-timestamp on page 63](#)
- [host-name on page 64](#)
- [icmpv4-rate-limit on page 65](#)
- [inet \(enhanced-hash-key\) on page 66](#)
- [inet6-backup-router on page 68](#)
- [inet6 \(enhanced-hash-key\) on page 69](#)
- [internet-options on page 71](#)
- [internet-options on page 72](#)
- [lcd-menu on page 76](#)
- [location on page 78](#)
- [location \(System\) on page 80](#)
- [max-configurations-on-flash on page 81](#)
- [menu-item on page 82](#)
- [no-multicast-echo on page 85](#)
- [no-ping-record-route on page 85](#)
- [no-ping-time-stamp on page 86](#)
- [no-redirects \(IPv4 Traffic\) on page 87](#)
- [optional on page 88](#)



- [passive-monitor-mode](#) on page 89
- [ports](#) on page 90
- [ports](#) on page 91
- [power](#) on page 92
- [processes](#) on page 93
- [saved-core-context](#) on page 94
- [saved-core-files](#) on page 95
- [static-host-mapping](#) on page 96
- [time-format](#) on page 97
- [time-zone](#) on page 98
- [traceoptions \(Layer 2 Learning\)](#) on page 101
- [traceoptions \(SBC Configuration Process\)](#) on page 103
- [use-imported-time-zones](#) on page 105



## arp (Interfaces)

**Syntax** `arp ip-address (mac | multicast-mac) mac-address publish;`

```
arp {
  aging-timer minutes;
  gratuitous-arp-delayseconds;
  gratuitous-arp-on-ifup;
  interfaces {
    interface-name {
      aging-timer minutes;
    }
  }
  passive-learning;
  purging;
}
```

**Syntax (EX Series)** `arp {
 aging-timer minutes;
}`

**Hierarchy Level** `[edit system]`

`[edit interfaces interface-name unit logical-unit-number family inet address address],`

`[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family inet address address]`



**NOTE:** The edit logical-systems hierarchy is not available on QFabric systems.

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 9.0 for EX Series switches.  
Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** For Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only, configure Address Resolution Protocol (ARP) table entries, mapping IP addresses to MAC addresses. You can enable backup VRRP routers to learn ARP requests for VRRP-IP to VRRP-MAC address translation. You can also set the time interval between ARP updates.



**NOTE:** By default, an ARP policer is installed that is shared among all the Ethernet interfaces on which you have configured the family inet statement. By including the arp statement at the `[edit interfaces interface-name unit`



*logical-unit-number* family inet policer] hierarchy level, you can apply a specific ARP-packet policer to an interface. This feature is not available on EX Series switches.

When you need to conserve IP addresses, you can configure an Ethernet interface to be unnumbered by including the unnumbered-address statement at the [edit interfaces *interface-name* unit *logical-unit-number* family inet] hierarchy level.



**NOTE:** For EX-Series switches, set only the time interval between ARP updates.

---



**Options** **ip-address**—IP address to map to the MAC address. The IP address specified must be part of the subnet defined in the enclosing **address** statement.

**mac mac-address**—MAC address to map to the IP address. Specify the MAC address as six hexadecimal bytes in one of the following formats: *nnnn.nnnn.nnnn* or *nn:nn:nn:nn:nn:nn*. For example, **0000.5e00.5355** or **00:00:5e:00:53:55**.

**multicast-mac mac-address**—Multicast MAC address to map to the IP address. Specify the multicast MAC address as six hexadecimal bytes in one of the following formats: *nnnn.nnnn.nnnn* or *nn:nn:nn:nn:nn:nn*. For example, **0000.5e00.5355** or **00:00:5e:00:53:55**.

**publish**—(Optional) Have the router or switch reply to ARP requests for the specified IP address. If you omit this option, the router or switch uses the entry to reach the destination but does not reply to ARP requests.



**NOTE:** For unicast MAC addresses only, if you include the **publish** option, the router or switch replies to proxy ARP requests.

**aging-timer**—Time interval in minutes between ARP updates. In environments where the number of ARP entries to update is high (for example, on routers only, metro Ethernet environments), increasing the time between updates can improve system performance.

**gratuitous-arp-delay**—(T Series only) Configure a delay for gratuitous ARP requests at the system level. By default, Junos OS sends gratuitous ARP requests immediately after network-related configuration changes are made on an interface (for example, a VLAN ID, MAC address, or IP address change). This might lead to the Packet Forwarding Engine dropping some initial request packets if the configuration updates have not been fully processed. To avoid such request packets being dropped, you can configure a delay in gratuitous ARP requests.

**Values:**

- *seconds*—Configure the ARP request delay in seconds. We recommend configuring a value in the range of 3 through 6 seconds.

**gratuitous-arp-on-ifup**—(ACX Series, SRX Series, T Series only) Add this statement to the **[edit system arp]** hierarchy to configure Junos OS to automatically issue a gratuitous ARP announcement when an interface is online.

**interfaces**—(T Series only) Specify the ARP aging timer in minutes for a logical interface of family type **inet**.

**Values:** aging-timer *minutes*—Time between ARP updates, in minutes.

**Default:** 20

**Range:** 1 through 6,00,000



**passive-learning**—(M Series, MX Series, PTX Series, SRX Series, T Series only) Configure backup VRRP routers or switches to learn the ARP mappings (IP-to-MAC address) for hosts sending the requests. By default, the backup VRRP router drops these requests; therefore, if the master router fails, the backup router must learn all entries present in the ARP cache of the master router. Configuring passive learning reduces transition delay when the backup router is activated. Learning of ARP mappings (IP-to-MAC address) by backup VRRP routers or switches for hosts sending the requests is disabled unless this statement is configured.

**purging**—(M Series, MX Series, PTX Series, SRX Series, T Series only) Purge obsolete ARP entries from the cache when an interface or link goes offline.

<b>Required Privilege Level</b>	interface—To view this statement in the configuration.
	interface-control—To add this statement to the configuration.
	system—To view this statement in the configuration.
	system-control—To add this statement to the configuration.

<b>Related Documentation</b>	• <i>Configuring Static ARP Table Entries For Mapping IP Addresses to MAC Addresses</i>
	• <i>Configuring Junos OS ARP Learning and Aging Options for Mapping IPv4 Network Addresses to MAC Addresses</i>
	• <i>Junos OS Network Interfaces Library for Routing Devices</i>
	• <a href="#">Junos OS System Basics Configuration Guide</a> .
	• <i>Adjusting the ARP Aging Timer</i>



## auxiliary

<b>Syntax</b>	<pre> auxiliary {   disable;   insecure;   type <i>terminal-type</i>; } </pre>
<b>Hierarchy Level</b>	[edit system ports]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Configure the characteristics of the auxiliary port.
<b>Default</b>	The auxiliary port is disabled.
<b>Options</b>	<p><b>disable</b>—Disable the port.</p> <p><b>insecure</b>—Disable superuser access or root logins to establish a terminal connection.</p> <p><b>type <i>terminal-type</i></b>—Type of terminal that is connected to the port.</p> <p><b>Range:</b> <code>ansi</code>, <code>vt100</code>, <code>small-xterm</code>, <code>xterm</code></p> <p><b>Default:</b> The terminal type is unknown, and the user is prompted for the terminal type.</p>
<b>Required Privilege Level</b>	<p><code>system</code>—To view this statement in the configuration.</p> <p><code>system-control</code>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring Console and Auxiliary Port Properties</i></li> </ul>




## checksum

---

Syntax	<code>checksum (md5   sha-256   sha1) hash;</code>
Hierarchy Level	<code>[edit event-options event-script file <i>filename</i>],</code> <code>[edit system scripts commit file <i>filename</i>],</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	For Junos commit scripts and op scripts, specify the MD5, SHA-1, or SHA-256 checksum hash. When it executes a local event or commit script, the Junos OS verifies the authenticity of the script by using the configured checksum hash.
Options	<b>md5 hash</b> —MD5 checksum of this script.  <b>sha-256 hash</b> —SHA-256 checksum of this script.  <b>sha1 hash</b> —SHA-1 checksum of this script.
Required Privilege Level	<b>maintenance</b> —To view this statement in the configuration. <b>maintenance-control</b> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <i>Configuring Checksum Hashes for a Commit Script</i></li><li>• <i>Configuring Checksum Hashes for an Event Script</i></li><li>• <i>Configuring Checksum Hashes for an Op Script</i></li><li>• <i>file checksum md5</i></li><li>• <i>file checksum sha-256</i></li><li>• <i>file checksum sha1</i></li></ul>



## compress-configuration-files (System)

<b>Syntax</b>	(compress-configuration-files   no-compress-configuration-files);
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Compress the current operational configuration file. The file is stored in the file <b>juniper.conf</b> , in the <b>/config</b> file system, along with the last three committed versions of the configuration. However, with large networks, the current configuration file might exceed the available space in the <b>/config</b> file system. Compressing the current configuration file allows the file to fit in the file system, typically reducing the size of the file by 90 percent. The current configuration file is compressed on the second commit of the configuration after the first commit is made to include the <b>compress-configuration-files</b> statement.
<div>  <p><b>NOTE:</b> We recommend that you enable compression of the configuration files to minimize the amount of disk space that they require.</p> </div>	
<b>Default</b>	The current operational configuration file is uncompressed.
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Compressing the Current Configuration File</i></li> </ul>



## console (Physical Port)

---

Syntax	<pre>console {   disable;   insecure;   log-out-on-disconnect;   type <i>terminal-type</i>; }</pre>
Hierarchy Level	[edit system ports]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure the characteristics of the console port.
Default	The console port is enabled and its speed is 9600 baud.
Options	<p><b>disable</b>—Disable console login connections.</p> <p><b>insecure</b>—Disable root login connections to the console and auxiliary ports. Configuring the console port as insecure also prevents superusers and anyone with a user identifier (UID) of 0 from establishing terminal connections in multiuser mode. This option can be used to prevent a user from attempting password recovery by booting into single-user mode, if the user does not know the root password.</p> <p><b>log-out-on-disconnect</b>—Log out the session when the data carrier on the console port is lost.</p> <p><b>type <i>terminal-type</i></b>—Type of terminal that is connected to the port: <b>ansi</b>, <b>vt100</b>, <b>small-xterm</b>, or <b>xterm</b>.</p>
Required Privilege Level	<p><b>system</b>—To view this statement in the configuration.</p> <p><b>system-control</b>—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"><li><i>Configuring Console and Auxiliary Port Properties</i></li></ul>



## default-address-selection

<b>Syntax</b>	default-address-selection;
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Use the loopback interface, lo0, as the source address for all locally generated IP packets when the packet is sent through a routed interface, but not when the packet is sent through a local interface such as fxp0. The lo0 interface is the interface to the switch's Routing Engine.
<b>Default</b>	<p>The default address is used as the source address for all locally generated IP packets on outgoing interfaces that are unnumbered. If an outgoing interface is numbered, the default address is chosen using the following sequence:</p> <ul style="list-style-type: none"> <li>• The primary address on the loopback interface lo0 that is <i>not</i> 127.0.0.1 is used.</li> <li>• The primary address for the primary interface or the preferred address (if configured) for the primary interface is used.</li> </ul> <p>By default, the primary address on an interface is selected as the numerically lowest local address configured on the interface.</p> <p>An interface's <i>primary address</i> is used by default as the local address for broadcast and multicast packets sourced locally and sent out through the interface. An interface's <i>preferred address</i> is the default local address used for packets sourced by the local switch to destinations on the subnet. By default, the numerically lowest local address configured for the interface is chosen as the preferred address on the subnet.</p> <p>To configure a different primary address or preferred address, include the primary or preferred statement at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i>] or [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i>] hierarchy levels.</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Junos OS to Select a Fixed Source Address for Locally Generated TCP/IP Packets on page 20</a></li> <li>• <i>Junos OS Network Interfaces Library for Routing Devices</i></li> </ul>



## domain-name

---

<b>Syntax</b>	<code>domain-name <i>domain-name</i>;</code>
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure the name of the domain in which the switch is located. This is the default domain name that is appended to hostnames that are not fully qualified.
<b>Options</b>	<i>domain-name</i> —Name of the domain.
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring a DNS Name Server for Resolving a Hostname into Addresses on page 25</a></li></ul>

## domain-search

---

<b>Syntax</b>	<code>domain-search <i>domain-list</i>;</code>
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure a list of domains to be searched.
<b>Options</b>	<i>domain-list</i> —List of domain names to search. The list can contain up to 6 domain names, with a total of up to 256 characters.
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring a DNS Name Server for Resolving a Hostname into Addresses on page 25</a></li></ul>



## enhanced-hash-key

- List of Syntax**    [Syntax \(EX Series\) on page 59](#)  
                           [Syntax \(QFX5000 Line of Switches\) on page 59](#)  
                           [Syntax \(QFX10000 Series Switches\) on page 61](#)

**Syntax (EX Series)**

```

enhanced-hash-key {
  ecmp-resilient-hash;
  fabric-load-balance {
    flowlet {
      inactivity-interval interval;
    }
    per-packet;
  }
  hash-mode {
    layer2-header;
    layer2-payload;
  }
  family inet {
    no-ipv4-destination-address;
    no-ipv4-source-address;
    no-l4-destination-port;
    no-l4-source-port;
    no-protocol;
    vlan-id;
  }
  family inet6 {
    no-ipv6-destination-address;
    no-ipv6-source-address;
    no-l4-destination-port;
    no-l4-source-port;
    no-next-header;
    vlan-id;
  }
  layer2 {
    no-destination-mac-address;
    no-ether-type;
    no-source-mac-address;
    vlan-id;
  }
}

```

**Syntax (QFX5000 Line of Switches)**

```

enhanced-hash-key {
  ecmp-resilient-hash;
  fabric-load-balance {
    flowlet {
      inactivity-interval interval;
    }
    per-packet;
  }
  hash-mode {
    layer2-header;

```



```
    layer2-payload;
    gtp-header-offset offset-value;
  }
  hash-parameters {
    ecmp {
      function {
        (crc16-bisync | crc16-ccitt | crc32-hi | crc32-lo);
      }
      offset offset;
      preprocess;
    }
    lag {
      function {
        (crc16-bisync | crc16-ccitt | crc32-hi | crc32-lo);
      }
      offset offset;
      preprocess;
    }
  }
}
family inet {
  gtp-tunnel-endpoint-identifier;
  no-ipv4-destination-address;
  no-ipv4-source-address;
  no-l4-destination-port;
  no-l4-source-port;
  no-protocol;
  vlan-id;
}
family inet6 {
  no-ipv6-destination-address;
  no-ipv6-source-address;
  no-l4-destination-port;
  no-l4-source-port;
  no-next-header;
  vlan-id;
}
layer2 {
  no-destination-mac-address;
  no-ether-type;
  no-source-mac-address;
  vlan-id;
}
}
```



### Syntax (QFX10000 Series Switches)

```

enhanced-hash-key {
  hash-seed seed-value;
  family inet {
    gtp-tunnel-endpoint-identifier;
    no-ipv4-destination-address;
    no-ipv4-source-address;
    no-l4-destination-port;
    no-l4-source-port;
    no-incoming-port;
  }
  family inet6 {
    gtp-tunnel-endpoint-identifier;
    ipv6-flow-label;
    no-ipv6-destination-address;
    no-ipv6-source-address;
    no-l4-destination-port;
    no-l4-source-port;
    no-incoming-port;
  }
  layer2 {
    destination-mac-address
    inner-vlan-id;
    no-ether-type;
    no-vlan-id;
    source-mac-address;
  }
  no-mpls;
  gre {
    key;
    protocol;
  }
  vxlan-vnid
}

```

### Hierarchy Level

[edit forwarding-options]

### Release Information

Statement introduced in Junos OS Release 13.2X51-D15 for EX Series switches.  
Statement introduced in Junos OS Release 13.2X51-D20 for QFX Series devices.  
The **fabric-load-balance** statement introduced in Junos OS Release 14.1X53-D10.  
The **fabric-load-balance** statement deprecated starting in Junos OS Releases 14.1X53-D46, 15.1R7, 16.1R6, 17.1R3, 17.2R2, 17.3R2, and 17.4R1.  
The **hash-seed** statement introduced in Junos OS Release 15.1X53-D30.



**Description** Configure the hashing key used to hash link aggregation group (LAG) and equal-cost multipath (ECMP) traffic, or enable adaptive load balancing (ALB) in a Virtual Chassis Fabric (VCF).



**NOTE:** Starting in Junos OS Release 14.1X53-D46, 15.1R7, 16.1R6, 17.1R3, 17.2R2, 17.3R2, and 17.4R1, the ALB feature is deprecated. If **fabric-load-balance** is enabled in the configuration for a VCF, delete the configuration item upon upgrading Junos OS.

The hashing algorithm is used to make traffic-forwarding decisions for traffic entering a LAG bundle or for traffic exiting a switch when ECMP is enabled.

For LAG bundles, the hashing algorithm determines how traffic entering a LAG bundle is placed onto the bundle's member links. The hashing algorithm tries to manage bandwidth by evenly load-balancing all incoming traffic across the member links in the bundle.

When ECMP is enabled, the hashing algorithm determines how incoming traffic is forwarded to the next-hop device.

On QFX10000 Series switches, you can configure the hash seed for load balancing. By default, the QFX10000 Series switches use the system MAC address to generate a hash seed value. You can configure the hash seed value using the **hash-seed** statement at the [edit forwarding-options enhanced-hash-key] hierarchy level. Set a value between 0 and 4294967295. If you do not configure a hash seed value, the system generates a hash seed value based on the system MAC address.

The remaining statements are explained separately. See [CLI Explorer](#).

Starting in Junos OS Release 18.4R1, symmetric hashing is supported on the QFX10000 Series switches. You configure the include the **no-incoming-port** option under the [edit forwarding-options enhanced-hash-key] hierarchy. By default, Dynamic IP (DIP), SIP, Layer 4 source and destination ports, and the incoming port are used for hashing. You can only configure symmetric hashing at the global level.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic (CLI Procedure)*
- *Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic*
- [Understanding Passive Monitoring on QFX10000 Switches on page 40](#)
- *Understanding Per-Packet Load Balancing*
- [show forwarding-options enhanced-hash-key on page 814](#)



## ethernet (Alarm)

<b>Syntax</b>	ethernet { link-down (red   yellow   ignore); }
<b>Hierarchy Level</b>	[edit chassis alarm], [edit chassis interconnect-device <i>name</i> alarm], [edit chassis node-group <i>name</i> alarm]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure alarms for an Ethernet interface.
<b>Options</b>	The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

## hardware-timestamp

<b>Syntax</b>	hardware-timestamp;
<b>Hierarchy Level</b>	[edit services rpm probe <i>owner</i> test <i>test-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1. Statement applied to MX Series routers in Junos OS Release 10.0. Statement introduced in Junos OS Release 10.3 for EX Series switches. Statement introduced in Junos OS Release 19.1 for PTX Series routers. Statement introduced in Junos OS Release 19.2R1 for MPC10E-15C-MRATE on MX240, MX480, and MX960 routers. Statement introduced in Junos OS Release 19.2R1 for MPC11E on MX2008, MX2010, and MX2020 routers.
<b>Description</b>	Enable timestamping of RPM probe messages in the Packet Forwarding Engine host processor. This feature is supported only with <b>icmp-ping</b> , <b>icmp-ping-timestamp</b> , <b>udp-ping</b> , and <b>udp-ping-timestamp</b> probe types.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.



## host-name

---

<b>Syntax</b>	<code>host-name <i>hostname</i>;</code>
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Set the hostname of the switch.
<b>Options</b>	<i>hostname</i> —Name of the switch.
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Hostname of a Router or Switch by Using a Configuration Group on page 22</a></li></ul>



## icmpv4-rate-limit

<b>Syntax</b>	<pre>icmpv4-rate-limit {   bucket-size <i>seconds</i>;   packet-rate <i>pps</i>; }</pre>
<b>Hierarchy Level</b>	[edit system internet-options]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Configure rate-limiting parameters for ICMPv4 messages sent.
<b>Options</b>	<p><b>bucket-size <i>seconds</i></b>—Number of seconds in the rate-limiting bucket.  <b>Range:</b> 0 through 4294967295 seconds  <b>Default:</b> 5</p> <p><b>packet-rate <i>pps</i></b>—Rate-limiting packets earned per second.  <b>Range:</b> 0 through 4294967295 pps  <b>Default:</b> 1000</p>
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Rate Limiting ICMPv4 and ICMPv6 Traffic</i></li> <li>• <i>Configuring Junos OS ICMPv6 Rate Limit for ICMPv6 Routing Engine Messages</i></li> </ul>



## inet (enhanced-hash-key)

<b>List of Syntax</b>	<a href="#">Syntax (EX Series and QFX5100 Switch) on page 66</a> <a href="#">Syntax (QFX10000 Series Switches) on page 66</a>
<b>Syntax (EX Series and QFX5100 Switch)</b>	<pre>inet {   gtp-tunnel-endpoint-identifier;   no-ipv4-destination-address;   no-ipv4-source-address;   no-l4-destination-port;   no-l4-source-port;   no-protocol;   vlan-id; }</pre>
<b>Syntax (QFX10000 Series Switches)</b>	<pre>inet {   gtp-tunnel-endpoint-identifier;   no-ipv4-destination-address;   no-ipv4-source-address;   no-l4-destination-port;   no-l4-source-port;   no-incoming-port; }</pre>
<b>Hierarchy Level</b>	[edit forwarding-options <a href="#">enhanced-hash-key</a> family]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 13.2X51-D15 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2X51-D20 for QFX Series devices.</p> <p>Statement introduced in Junos OS Release 15.1X53-D30 on QFX10000 Series Switches.</p>
<b>Description</b>	<p>Select the payload fields in IPv4 traffic used by the hashing algorithm to make hashing decisions.</p> <p>When IPv4 traffic enters a LAG and the hash mode is set to Layer 2 payload, the hashing algorithm checks the fields configured using the <b>inet</b> statement and uses the information in the fields to decide how to place traffic onto the LAG bundle's member links or how to forward traffic to the next hop device when ECMP is enabled.</p> <p>The hashing algorithm, when used to hash LAG bundle traffic, always tries to manage bandwidth by evenly load-balancing all incoming traffic across the member links in the bundle.</p> <p>The hashing algorithm only inspects the IPv4 fields in the payload to make hashing decisions when the hash mode is set to <b>layer2-payload</b>. The hash mode is set to Layer 2 payload by default. You can set the hash mode to Layer 2 payload using the <b>set forwarding-options enhanced-hash-key hash-mode layer2-payload</b> statement.</p>



**Default** The following fields are used by the hashing algorithm to make hashing decisions for IPv4 traffic:

- IP destination address
- IP source address
- Layer 4 destination port
- Layer 4 source port
- Protocol

**Options** **no-ipv4-destination-address**—Exclude the IPv4 destination address field from the hashing algorithm.

**no-ipv4-source-address**—Exclude the IPv4 source address field from the hashing algorithm.

**no-l4-destination-port**—Exclude the Layer 4 destination port field from the hashing algorithm.

**no-l4-source-port**—Exclude the Layer 4 source port field from the hashing algorithm.

**no-protocol**—Exclude the protocol field from the hashing algorithm.

**no-incoming-port**—Exclude the incoming port number from the hashing algorithm.

**vlan-id**—Include the VLAN ID field in the hashing algorithm.



**NOTE:** The **vlan-id** option is not supported and should not be configured on a Virtual Chassis or Virtual Chassis Fabric (VCF) that contains any of the following switches as members: EX4300, EX4600, QFX3500, QFX3600, QFX5100, or QFX5110 switches.

**Required Privilege** interface—To view this statement in the configuration.

**Level** interface-control—To add this statement to the configuration.



<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic (CLI Procedure)</i></li><li>• <i>Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic</i></li><li>• <i>Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic (QFX 10002 and QFX 10008 Switches)</i></li><li>• <i>Understanding Per-Packet Load Balancing</i></li><li>• <i>hash-seed</i></li><li>• <a href="#">enhanced-hash-key on page 59</a></li><li>• <i>hash-mode</i></li><li>• <a href="#">inet6 on page 69</a></li></ul>
------------------------------	---

---

## inet6-backup-router

---

<b>Syntax</b>	<code>inet6-backup-router <i>address</i> &lt;destination <i>destination-address</i>&gt;;</code>
<b>Hierarchy Level</b>	<code>[edit system]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Set a default router (running IP version 6 [IPv6]) to use while the local router or switch (running IPv6) is booting and if the routing protocol processes fail to start. The Junos OS removes the route to this router or switch as soon as the software starts.
<b>Options</b>	<p><b>address</b>—Address of the default router.</p> <p><b>destination <i>destination-address</i></b>—(Optional) Destination address that is reachable through the backup router. You can include this option to achieve network reachability while loading, configuring, and recovering the router or switch, but without the risk of installing a default route in the forwarding table.</p> <p><b>Default:</b> All hosts (default route) are reachable through the backup router.</p>
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring a Backup Router</i></li></ul>



## inet6 (enhanced-hash-key)

**List of Syntax**    [Syntax \(EX Series and QFX5100 Switch\) on page 69](#)  
[Syntax \(QFX10000 Series Switches\) on page 69](#)

### Syntax (EX Series and QFX5100 Switch)

```
inet6 {
  no-ipv6-destination-address;
  no-ipv6-source-address;
  no-l4-destination-port;
  no-l4-source-port;
  no-next-header;
  vlan-id;
}
```

### Syntax (QFX10000 Series Switches)

```
inet6 {
  gtp-tunnel-endpoint-identifier;
  ipv6-flow-label;
  no-ipv6-destination-address;
  no-ipv6-source-address;
  no-l4-destination-port;
  no-l4-source-port;
  no-incoming-port;
}
```

**Hierarchy Level**    [edit forwarding-options [enhanced-hash-key](#) family]

**Release Information**    Statement introduced in Junos OS Release 13.2X51-D15 on EX Series switches.  
Statement introduced in Junos OS Release 13.2X51-D20 on QFX Series devices.  
Statement introduced in Junos OS Release 15.1X53-D30 on QFX10000 Series switches.

**Description**    Select the payload fields in an IPv6 packet used by the hashing algorithm to make hashing decisions.

When IPv6 traffic enters a LAG and the hash mode is set to Layer 2 payload, the hashing algorithm checks the fields configured using this statement and uses the information in the fields to decide how to place traffic onto the LAG bundle's member links or to forward traffic to the next hop device when ECMP is enabled.

The hashing algorithm, when used to hash LAG traffic, always tries to manage bandwidth by evenly load-balancing all incoming traffic across the member links in the bundle.

The hashing algorithm only inspects the IPv6 fields in the payload to make hashing decisions when the hash mode is set to Layer 2 payload. The hash mode is set to Layer 2 payload by default. You can set the hash mode to Layer 2 payload using the **set forwarding-options enhanced-hash-key hash-mode layer2-payload** statement.



<b>Default</b>	<p>The data in the following fields are used by the hashing algorithm to make hashing decisions for IPv6 traffic:</p> <ul style="list-style-type: none"><li>• IP destination address</li><li>• IP source address</li><li>• Layer 4 destination port</li><li>• Layer 4 source port</li><li>• Next header</li></ul>
<b>Options</b>	<p><b>no-ipv6-destination-address</b>—Exclude the IPv6 destination address field from the hashing algorithm.</p> <p><b>no-ipv6-source-address</b>—Exclude the IPv6 source address field from the hashing algorithm.</p> <p><b>no-l4-destination-port</b>—Exclude the Layer 4 destination port field from the hashing algorithm.</p> <p><b>no-l4-source-port</b>—Exclude the Layer 4 source port field from the hashing algorithm.</p> <p><b>no-incoming-port</b>—Exclude the incoming port number from the hashing algorithm.</p> <p><b>no-next-header</b>—Exclude the Next Header field from the hashing algorithm.</p> <p><b>vlan-id</b>—Include the VLAN ID field in the hashing algorithm.</p>
<b>Required Privilege Level</b>	<p><b>interface</b>—To view this statement in the configuration.</p> <p><b>interface-control</b>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic (CLI Procedure)</i></li><li>• <i>Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic</i></li><li>• <i>Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic (QFX 10002 and QFX 10008 Switches)</i></li><li>• <i>Understanding Per-Packet Load Balancing</i></li><li>• <i>hash-seed</i></li><li>• <a href="#">enhanced-hash-key on page 59</a></li><li>• <i>hash-mode</i></li><li>• <a href="#">inet on page 66</a></li></ul>



## internet-options

<b>Syntax</b>	<pre>internet-options {   icmpv4-rate-limit bucket-size <i>bucket-size</i> packet-rate <i>packet-rate</i>; }</pre>
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<p>Configure system IP options to protect against certain types of denial-of-service (DoS) attacks.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>admin—To view this statement in the configuration.</p> <p>admin-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Junos OS ICMPv4 Rate Limit for ICMPv4 Routing Engine Messages on page 30</a></li> <li>• <a href="#">Configuring Junos OS to Extend the Default Port Address Range on page 19</a></li> </ul>



## internet-options

**Syntax**

```
internet-options {
  (gre-path-mtu-discovery | no-gre-path-mtu-discovery);
  icmpv4-rate-limit bucket-size bucket-size packet-rate packet-rate;
  icmpv6-rate-limit bucket-size bucket-size packet-rate packet-rate;
  (ipip-path-mtu-discovery | no-ipip-path-mtu-discovery);
  ipv6-duplicate-addr-detection-transmits;
  (ipv6-reject-zero-hop-limit | no-ipv6-reject-zero-hop-limit);
  (ipv6-path-mtu-discovery | no-ipv6-path-mtu-discovery);
  ipv6-path-mtu-discovery-timeout;
  no-tcp-reset
  no-tcp-rfc1323;
  no-tcp-rfc1323-paws;
  (path-mtu-discovery | no-path-mtu-discovery);
  source-port upper-limit <upper-limit>;
  (source-quench | no-source-quench);
  tcp-drop-synfin-set;
  tcp-mss mss-value;
}
```

**Hierarchy Level** [edit system]

**Release Information** Statement introduced before Junos OS Release 7.4.  
 Statement introduced in Junos OS Release 9.0 for EX Series switches.  
 Statement introduced in Junos OS Release 11.1 for SRX Series devices.  
**no-tcp-reset** introduced in Junos OS Release 11.1 for SRX Series and vSRX devices.  
**source-port** introduced in Junos OS Release 11.1 for the QFX Series and Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Configure system IP options to protect against certain types of DoS attacks.

**Options** **gre-path-mtu-discovery**—(ACX Series, EX Series, Junos Fusion, OCX Series, PTX Series, QFX Series, SRX Series, T Series) Configure path MTU discovery for outgoing GRE tunnel connections. By default, path MTU discovery is enabled.

**Values:**

- gre-path-mtu-discovery—Path MTU discovery is enabled.
- no-gre-path-mtu-discovery—Path MTU discovery is disabled.

**icmpv4-rate-limit**—(EX Series, M Series, MX Series, PTX Series, SRX Series, T Series only) Configure rate-limiting parameters for ICMPv4 messages sent.

**Values:**

- bucket-size *seconds*—Number of seconds in the rate-limiting bucket. Range: 0 through 4294967295 seconds. Default: 5.



- **packet-rate *pps***—Rate-limiting packets earned per second. Range: 0 through 4294967295 pps. Default: 1000.

**icmpv6-rate-limit**—(ACX Series, MX Series, SRX Series only) Configure rate-limiting parameters for ICMPv6 messages sent.

**Values:**

- **bucket-size *seconds***—Number of seconds in the rate-limiting bucket. Range: 0 through 4294967295 seconds. Default: 5.
- **packet-rate *pps***—Rate-limiting packets earned per second. Range: 0 through 4294967295 pps. Default: 1000.

**ipip-path-mtu-discovery**—(ACX Series, EX Series, Junos Fusion, OCX Series, PTX Series, QFX Series, SRX Series, T Series) Configure path MTU discovery for outgoing IP-IP tunnel connections. By default, path MTU discovery is enabled.

**Values:**

- **ipip-path-mtu-discovery**—Path MTU discovery is enabled.
- **no-ipip-path-mtu-discovery**—Path MTU discovery is disabled.

**ipv6-duplicate-addr-detection-transmits**—(EX Series, M Series, MX Series, PTX Series, SRX Series, T Series only) Control the number of attempts for IPv6 duplicate address detection.

**Range:** 0 to 20

**Default:** 3

**ipv6-path-mtu-discovery**—(ACX Series, EX Series, Junos Fusion, OCX Series, PTX Series, QFX Series, SRX Series, T Series) Configure path MTU discovery for IPv6 packets. By default, IPv6 path MTU discovery is enabled.

**Values:**

- **ipv6-path-mtu-discovery**—IPv6 path MTU discovery is enabled.
- **no-ipv6-path-mtu-discovery**—IPv6 path MTU discovery is disabled.

**ipv6-path-mtu-discovery-timeout**—(ACX Series, EX Series, Junos Fusion, OCX Series, PTX Series, QFX Series, SRX Series, T Series) Set the IPv6 path MTU discovery timeout interval.

**Values:** *minutes*—IPv6 path MTU discovery timeout.

**Default:** 10 minutes.



**ipv6-reject-zero-hop-limit**—(EX Series, M Series, MX Series, PTX Series, SRX Series, T Series only) Enable and disable rejecting incoming IPv6 packets with a zero hop limit value in their header.

**Values:**

- **ipv6-reject-zero-hop-limit**—Incoming IPv6 packets with a zero hop limit value in their header are rejected.
- **no-ipv6-reject-zero-hop-limit**—Incoming IPv6 packets with a zero hop limit value in their header are allowed.

**no-tcp-reset**—(SRX Series, vSRX only) When **no-tcp-reset** is enabled and non-listening ports receive TCP packets, the device does not send back RESET TCP packets. Statement introduced in Junos OS Release 11.1.

By default, a device sends a TCP packet with the RESET flag when a TCP packet is received on a non-listening port. This might lead to a security risk. Configuring this statement prevents the sending of RESET TCP packets to non-listening ports. This is accomplished through one of the following methods:

- When a TCP SYN segment is received on a port where there is no socket accepting connections, the device send back RESET segment and drops the connection. The device attempting to connect is refused connection.
- When a TCP packet with a SYN bit is received on a port, the device drops the packet and does not send back RESET segment, which makes the device appear as a black hole.
- When a TCP segment without a SYN bit received on a closed port, the device drops the packet and does not send back RESET segment. This helps to protect against stealth port scans.

**Values:**

- **drop-all-tcp**—Drop all TCP packets.
- **drop-tcp-with-syn-only**—Drop TCP packets with a SYN bit.

**no-tcp-rfc1323**—(EX Series, PTX Series, SRX Series only) Configure the Junos OS to disable RFC 1323 TCP extensions.

**no-tcp-rfc1323-paws**—(EX Series, M Series, MX Series, PTX Series, SRX Series, T Series only) Configure the Junos OS to disable the RFC 1323 Protection Against Wrapped Sequence (PAWS) number extension.

**path-mtu-discovery**—(ACX Series, EX Series, Junos Fusion, OCX Series, PTX Series, QFX Series, SRX Series, T Series) Configure path MTU discovery for outgoing Transmission Control Protocol (TCP). By default, path MTU discovery is enabled.

**Values:**

- **path-mtu-discovery**—Path MTU discovery is enabled.
- **no-path-mtu-discovery**—Path MTU discovery is disabled.



**source-port**—(SRX Series only) Configure the range of port addresses starting in Junos OS Release 11.1 for the QFX Series and Junos OS Release 14.1X53-D20 for the OCX Series.

**Values:**

- upper-limit *upper-limit*—(Optional) The range of port addresses can be a value from 5000 through 65,355.

**source-quench**—(M Series, MX Series, SRX Series, T Series only) Configure how the Junos OS handles Internet Control Message Protocol (ICMP) source quench messages. By default, the Junos OS reacts to ICMP source quench messages.

**Values:**

- source-quench—React to incoming ICMP source quench messages.
- no-source-quench—Do not react to incoming ICMP source quench messages.

**tcp-drop-synfin-set**—(EX Series, M Series, MX Series, PTX Series, SRX Series, T Series only) Configure the router or switch to drop packets that have both the SYN and FIN bits set.

The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.

**Required Privilege Level** admin—To view this statement in the configuration.  
admin-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Junos OS ICMPv4 Rate Limit for ICMPv4 Routing Engine Messages*
- *Configuring Junos OS ICMPv6 Rate Limit for ICMPv6 Routing Engine Messages*
- *Configuring Junos OS for IP-IP Path MTU Discovery on IP-IP Tunnel Connections*
- *Configuring Junos OS for Path MTU Discovery on Outgoing GRE Tunnel Connections*
- *Configuring Junos OS for Path MTU Discovery on Outgoing TCP Connections*
- *Configuring Junos OS for IPv6 Duplicate Address Detection Attempts*
- *Configuring Junos OS for Acceptance of IPv6 Packets with a Zero Hop Limit*
- *Configuring Junos OS to Ignore ICMP Source Quench Messages*
- *Configuring Junos OS to Enable the Router or Switch to Drop Packets with the SYN and FIN Bits Set*
- *Configuring Junos OS to Disable TCP RFC 1323 Extensions*
- *Configuring Junos OS to Disable the TCP RFC 1323 PAWS Extension*
- [Configuring Junos OS to Extend the Default Port Address Range on page 19](#)
- *Rate Limiting ICMPv4 and ICMPv6 Traffic*
- *Understanding Traffic Processing on Security Devices*
- *TCP Headers with SYN and FIN Flags Set*



## lcd-menu

**Syntax** EX3200, EX3300, EX4200, or EX4500 switch:

```
lcd-menu fpc slot-number {
  menu-item (menu-name | menu-option) <disable>;
}
```

EX6200 or EX8200 switch or XRE200 External Routing Engine:

```
lcd-menu {
  menu-item (menu-name | menu-option) <disable>;
}
```

**Hierarchy Level** [edit chassis]

**Release Information** Statement introduced in Junos OS Release 10.2 for EX Series switches.

**Description** Disable or enable the Maintenance menu or the Status menu in the LCD panel.

**Options** none—(EX6200 and EX8200 switches and XRE200 External Routing Engines only) Disable or enable the specified menu or menu options.

**fpc slot-number**—(EX3200, EX3300, EX4200, and EX4500 switches only) Disable or enable the specified menu or menu options, where **slot-number** is:

- 0—On standalone switches.
- 0–9—On a device in a Virtual Chassis. The value is the member ID of the device.



**NOTE:** This option is not available on an EX8200 Virtual Chassis. The LCD panel on an XRE200 External Routing Engine provides information for the XRE200 External Routing Engine only.

**disable**—(Optional) Disable the specified menu.

The remaining statement is explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-level—To add this statement to the configuration.

**Related Documentation**

- *Configuring the LCD Panel on EX Series Switches (CLI Procedure)*
- *LCD Panel in EX3200 Switches*
- *LCD Panel in EX3300 Switches*



- *LCD Panel in EX4200 Switches*
- *LCD Panel in EX4500 Switches*
- *LCD Panel in an EX6200 Switch*
- *LCD Panel in an EX8200 Switch*
- *LCD Panel in an XRE200 External Routing Engine*



## location

**Syntax**

```
location {
  altitude feet;
  building name;
  country-code code;
  floor number;
  hcoord horizontal-coordinate;
  lata service-area;
  latitude degrees;
  longitude degrees;
  npa-nxx number;
  postal-code postal-code;
  rack number;
  vcoord vertical-coordinate;
}
```

**Hierarchy Level** [edit system]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Configure the system location.

**Options**

- altitude *feet***—Number of feet above sea level.
- building *name***—Name of the building. The name of the building can be 1 to 28 characters in length. If the string contains spaces, enclose it in quotation marks (" ").
- country-code *code***—Two-letter country code.
- floor *number***—Floor in the building.
- hcoord *horizontal-coordinate***—Bellcore Horizontal Coordinate.
- lata *service-area***—Long-distance service area.
- latitude *degrees***—Latitude in degree format.
- longitude *degrees***—Longitude in degree format.
- npa-nxx *number***—First six digits of the phone number (area code and exchange).
- postal-code *postal-code***—Postal code.
- rack *number***—Rack number.
- vcoord *vertical-coordinate***—Bellcore Vertical Coordinate.



<b>Required Privilege</b>	system—To view this statement in the configuration.
<b>Level</b>	system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Specifying the Physical Location of the Switch on page 17</a></li></ul>



## location (System)

Syntax	<pre>location {   altitude <i>feet</i>;   building <i>name</i>;   country-code <i>code</i>;   floor <i>number</i>;   hcoord <i>horizontal-coordinate</i>;   lata <i>transport-area</i>;   latitude <i>degrees</i>;   longitude <i>degrees</i>;   npa-nxx <i>number</i>;   postal-code <i>postal-code</i>;   rack <i>number</i>;   vcoord <i>vertical-coordinate</i>; }</pre>
Hierarchy Level	[edit system]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	Configure the system location in various formats.
Options	<p><b>altitude <i>feet</i></b>—Number of feet above sea level.</p> <p><b>building <i>name</i></b>—Name of building. The name of the building can be 1 to 28 characters in length. If the string contains spaces, enclose it in quotation marks (" ").</p> <p><b>country-code <i>code</i></b>—Two-letter country code.</p> <p><b>floor <i>number</i></b>—Floor in the building.</p> <p><b>hcoord <i>horizontal-coordinate</i></b>—Bellcore Horizontal Coordinate.</p> <p><b>lata <i>transport-area</i></b>—Local Access Transport Area.</p> <p><b>latitude <i>degrees</i></b>—Latitude in degree format.</p> <p><b>longitude <i>degrees</i></b>—Longitude in degree format.</p> <p><b>npa-nxx <i>number</i></b>—First six digits of the phone number (area code and exchange).</p> <p><b>postal-code <i>postal-code</i></b>—Postal code.</p> <p><b>rack <i>number</i></b>—Rack number.</p> <p><b>vcoord <i>vertical-coordinate</i></b>—Bellcore Vertical Coordinate.</p>



**Required Privilege Level** system—To view this statement in the configuration.  
 system-control—To add this statement to the configuration.

**Related Documentation**

- *Specifying the Physical Location of the Router or Switch*

## max-configurations-on-flash

**Syntax** max-configurations-on-flash *number*;

**Hierarchy Level** [edit system]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
 Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Specify the number of configurations stored on the internal fixed media storage (for example, USB device).

**Options** *number*—The number of configurations stored on the CompactFlash card.  
**Range:** 0 through 49. The most recently saved configuration is number 0, and the oldest saved configuration is number 49.

**Required Privilege Level** system—To view this statement in the configuration.  
 system-control—To add this statement to the configuration.

**Related Documentation**

- *Saving a Configuration to a File*
- *Setting or Deleting the Rescue Configuration*
- *Uploading a Configuration File*
- *Uploading a Configuration File*



## menu-item

---

Syntax	<code>menu-item (<i>menu-name</i>   <i>menu-option</i>) &lt;disable&gt;;</code>
Hierarchy Level	<code>[edit chassis <b>lcd-menu</b>],</code> <code>[edit chassis <b>lcd-menu</b> fpc <i>slot-number</i>]</code>
Release Information	Statement introduced in Junos OS Release 10.2 for EX Series switches.
Description	<p>Disable or enable the Maintenance menu, the Status menu, or an individual option in one of those menus in the LCD panel.</p> <p>On EX3200, EX3300, EX4200, and EX4500 switches, you use <b>menu-item</b> at the <code>[edit chassis <b>lcd-menu</b> fpc <i>slot-number</i>]</code> hierarchy level.</p> <p>On EX6200 and EX8200 switches, and on XRE200 External Routing Engines, you use <b>menu-item</b> at the <code>[edit chassis <b>lcd-menu</b>]</code> hierarchy level.</p>
Options	<p><b>menu-name</b>—Name of the LCD menu:</p> <ul style="list-style-type: none"><li>• <b>maintenance-menu</b></li><li>• <b>status-menu</b></li></ul> <p><b>menu-option</b>—Specific option on one of the LCD menus. You must include the quotation marks when you type the option. <a href="#">Table 6 on page 83</a> describes the different menu options of the LCD menus supported on the switches.</p>



Table 6: Menu Options of the LCD Menus Supported on the Switches

Menu	Menu Options	Option Descriptions	Platforms Supported
maintenance-menu	"maintenance-menu halt-menu"	System halt option	All switches except EX2200
	"maintenance-menu system-reboot"	System reboot option	All switches except EX2200
	"maintenance-menu rescue-config"	Load rescue option	All switches except EX2200
	"maintenance-menu vc-uplink-config"	Request VC port option for a device in a Virtual Chassis configuration	EX3300, EX4200, and EX4500 switches and XRE200 External Routing Engines only
	"maintenance-menu factory-default"	Factory default option	All switches except EX2200
status-menu	"status-menu vcp-status"	Virtual Chassis port (VCP) status for a device in a Virtual Chassis configuration	EX3300, EX4200, and EX4500 switches and XRE200 External Routing Engines only
	"status-menu sf-status1-menu"	Status of the switch fabric on the Switch Fabric and Routing Engine (SRE) module in slot SRE0 on EX8208 switches	EX8208 and EX8216 switches only
		Status of the switch fabric on the Switch Fabric (SF) modules in slots SF0 and SF1 on EX8216 switches	
	"status-menu sf-status2-menu"	Status of the switch fabric on the SRE module in slot SRE1 on EX8208 switches	EX8208 and EX8216 switches only
		Status of the switch fabric on the SF modules in slots SF2–SF5 on EX8216 switches	
	"status-menu sf-status3-menu"	Status of the switch fabric on the SF modules in slots SF6 and SF7 on EX8216 switches	EX8216 switches only
	"status-menu power-status"	Status of the power supply or power supplies	EX3200, EX3300, EX4200, and EX4500 switches



Table 6: Menu Options of the LCD Menus Supported on the Switches (continued)

Menu	Menu Options	Option Descriptions	Platforms Supported
			and XRE200 External Routing Engines only
	"status-menu psu-status1-menu"	Status of the power supplies in slots P0 and P1	EX8208 and EX8216 switches only
	"status-menu psu-status2-menu"	Status of the power supplies in slots P2–P5	EX8208 and EX8216 switches only
	"status-menu environ-menu"	Status of the fan; current chassis temperature	All switches (except EX2200) and XRE200 External Routing Engine
	"status-menu show-version"	The version of Junos OS loaded on the switch	All switches except EX2200

**disable**—(Optional) Disable the specified menu.

**Required Privilege Level** view-level—To view this statement in the configuration.  
control-level—To add this statement to the configuration.

**Related Documentation**

- *Configuring the LCD Panel on EX Series Switches (CLI Procedure)*
- *LCD Panel in EX3200 Switches*
- *LCD Panel in EX3300 Switches*
- *LCD Panel in EX4200 Switches*
- *LCD Panel in EX4500 Switches*
- *LCD Panel in EX4550 Switches*
- *LCD Panel in an EX6200 Switch*
- *LCD Panel in an EX8200 Switch*
- *LCD Panel in an XRE200 External Routing Engine*



## no-multicast-echo

<b>Syntax</b>	no-multicast-echo
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1.
<b>Description</b>	Disable the Routing Engine from responding to ICMP echo requests sent to multicast group addresses.
<b>Default</b>	The Routing Engine responds to ICMP echo requests sent to multicast group addresses.
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Junos OS to Disable the Routing Engine Response to Multicast Ping Packets on page 30</a></li> </ul>

## no-ping-record-route

<b>Syntax</b>	no-ping-record-route;
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 9.4 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure the Junos OS to disable the reporting of the IP address in ping responses.
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses on page 20</a></li> </ul>



## no-ping-time-stamp

---

<b>Syntax</b>	no-ping-time-stamp;
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 9.4 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure the Junos OS to disable the recording of timestamps in ping responses.
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Junos OS to Disable the Reporting of IP Address and Timestamps in Ping Responses on page 20</a></li></ul>



## no-redirects (IPv4 Traffic)

<b>Syntax</b>	no-redirects;
<b>Hierarchy Level</b>	[edit system], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 12.3 for EX Series switches. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>Stop protocol redirect messages for IPv4 traffic from being sent on the entire switch or on an interface on the router or switch.</p> <p>To disable the sending of protocol redirect messages for the entire router or switch, include the <b>no-redirects</b> statement at the <b>[edit system]</b> hierarchy level.</p> <p>To disable the sending of protocol redirect messages on a specific interface, include the <b>no-redirects</b> statement at the <b>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]</b> hierarchy level.</p>
<b>Default</b>	The router or switch sends redirect messages.
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Junos OS to Disable Protocol Redirect Messages on the Router or Switch</a></li> <li>• <a href="#">Understanding the Protocol Redirect Mechanism on Switches on page 29</a></li> <li>• <a href="#">Configuring Junos OS to Disable Sending Protocol Redirect Messages on Switches (CLI Procedure) on page 29</a></li> <li>• <a href="#">Junos OS Network Interfaces Library for Routing Devices</a></li> </ul>



## optional

---

<b>Syntax</b>	optional;
<b>Hierarchy Level</b>	[edit system scripts commit file <i>filename</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	For Junos OS commit scripts, allow a commit operation to succeed even if the script specified in the <b>file</b> statement is missing from the <b>/var/db/scripts/commit</b> directory on the router.
<b>Required Privilege Level</b>	maintenance—To view this statement in the configuration. maintenance-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Controlling Execution of Commit Scripts During Commit Operations</i></li></ul>



## passive-monitor-mode

<b>Syntax</b>	<code>passive-monitor-mode;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Monitor packet flows from another router. If you include this statement in the configuration, the interface does not send keepalives or alarms, and does not participate actively on the network.</p> <p>This statement is supported on ATM, Ethernet, and SONET/SDH interfaces. For more information, see <i>ATM Interfaces Feature Guide for Routing Devices</i>.</p> <p>For ATM and Ethernet interfaces, you can include this statement on the physical interface only.</p> <p>For SONET/SDH interfaces, you can include this statement on the logical interface only.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Enabling Passive Monitoring on ATM Interfaces</i></li> <li>• <i>Passive Monitoring on Ethernet Interfaces Overview</i></li> <li>• <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i></li> <li>• <i>multiservice-options</i></li> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>



## ports

---

<b>Syntax</b>	<pre>ports {   auxiliary {     disable;     insecure;     type <i>terminal-type</i>;     port-type (mini-usb   rj45);   }   console {     disable;     insecure;     log-out-on-disconnect;     type <i>terminal-type</i>;   } }</pre>
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	<p>Configure the properties of the console and auxiliary ports. The ports are located on the router's craft interface.</p> <p>See the switch's hardware documentation for port locations.</p>
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Junos OS to Set Console and Auxiliary Port Properties</i></li></ul>




## ports

<b>Syntax</b>	<pre> ports {   auxiliary {     disable;     insecure;     type <i>terminal-type</i>;   }   console {     disable;     insecure;     log-out-on-disconnect;     type <i>terminal-type</i>;   } } </pre>
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<p>Configure the properties of the console and auxiliary ports. The ports are located on the craft interface.</p> <p>See the switch hardware documentation for port locations.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring Console and Auxiliary Port Properties</i></li> </ul>




## power

<b>Syntax</b>	<code>power (off   on);</code>
<b>Hierarchy Level</b>	<code>[edit chassis (EX Series) fpc slot]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4 for EX Series switches.
<b>Description</b>	On an EX6200 or EX8200 switch, turn a specified Flexible PIC Concentrator (FPC) on or off.
	<div>  <p><b>NOTE:</b> On an EX6200 switch, the power statement has no effect when you configure it for an uplink port FPC on the Switch Fabric and Routing Engine (SRE) module. If you configure the statement for those FPCs, the configuration will be committed, but a message that informs you that the configuration has no effect is logged in the system log. You cannot turn the power on and off for these FPCs.</p> </div>
<b>Options</b>	<ul style="list-style-type: none"> <li>• <code>on</code>—Turn on the specified FPC.</li> <li>• <code>off</code>—Turn off the specified FPC.</li> </ul>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Removing a Line Card from an EX6200 Switch</i></li> <li>• <i>EX8208 Switch Hardware and CLI Terminology Mapping</i></li> <li>• <i>EX8216 Switch Hardware and CLI Terminology Mapping</i></li> <li>• <i>EX6210 Switch Hardware and CLI Terminology Mapping</i></li> </ul>



## processes

<b>Syntax</b>	<pre>processes {   process-name (enable   disable) failover (alternate-media   other-routing-engine);   timeout seconds; }</pre>
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	Configure which Junos OS processes are running on the router or switch.
	<div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p><b>CAUTION:</b> Never disable any of the software processes unless instructed to do so by a customer support engineer.</p> </div> </div>
<b>Default</b>	All processes are enabled by default.
<b>Options</b>	<p><b>(enable   disable)</b>—(Optional) Enable or disable a specified process.</p> <p><b>failover (alternate-media   other-routing-engine)</b>—(Optional) For routers or switches with redundant Routing Engines only, switch to backup media if a process fails repeatedly. If a process fails four times within 30 seconds, the router or switch reboots from the alternate media or the other Routing Engine.</p> <p><b>process-name</b>—One of the valid process names. You can obtain a complete list of process names by using the CLI command completion feature. After specifying a process name, command completion also indicates any additional options for that process.</p> <p><b>timeout seconds</b>—(Optional) How often the system checks the watchdog timer, in seconds. If the watchdog timer has not been checked in the specified number of seconds, the system reloads. If you set the time value too low, it is possible for the system to reboot immediately after it loads.</p> <p><b>Values:</b> 15, 60, or 180</p> <p><b>Default:</b> 180 seconds (rounded up to 291 seconds by the Junos kernel)</p>
<b>Required Privilege Level</b>	<p>system—To view this statement in the configuration.</p> <p>system-control—To add this statement to the configuration.</p>



- Related Documentation**
- *Disabling Junos OS Processes*

## **saved-core-context**

---

<b>Syntax</b>	(saved-core-context   no-saved-core-context);
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>Configure whether the switch saves core files generated by internal Junos OS processes, along with contextual information (system log files and a copy of the current configuration):</p> <ul style="list-style-type: none"><li>• <b>saved-core-context</b>—The switch saves each core file and its associated context in a compressed tar file named <code>/var/tmp/process-name.core.core-number.tgz</code>.</li><li>• <b>no-saved-core-context</b>—The switch does not save core files and their associated context.</li></ul>
<b>Default</b>	The switch saves core files.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Saving Core Files from Junos OS Processes</i></li><li>• <a href="#">saved-core-files on page 95</a></li></ul>



## saved-core-files

<b>Syntax</b>	<code>saved-core-files <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Save core files generated by internal Junos OS processes, but not the associated contextual information (configuration and system log files).
<b>Options</b>	<i>number</i> —Maximum number of core files to save. <b>Range:</b> 1 through 10
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Saving Core Files from Junos OS Processes</i></li><li>• <a href="#">saved-core-context on page 94</a></li></ul>




## static-host-mapping

---

Syntax	<pre>static-host-mapping {   hostname {     alias [ <i>alias</i> ];     inet [ <i>address</i> ];     sysid <i>system-identifier</i>;   } }</pre>
Hierarchy Level	[edit system]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Map a hostname to one or more IP addresses and aliases, and configure an International Organization for Standardization (ISO) system identifier (system ID).
Options	<p><b>alias</b> <i>alias</i>—Alias for the hostname.</p> <p><b>hostname</b>—Fully qualified hostname.</p> <p><b>inet</b> <i>address</i>—IP address. You can specify one or more IP addresses for the host.</p> <p><b>sysid</b> <i>system-identifier</i>—ISO system identifier (system ID). This is the 6-byte portion of the Intermediate System-to-Intermediate System (IS-IS) network service access point (NSAP). We recommend that you use the host's IP address represented in binary-coded decimal (BCD) format.</p>
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Hostname of a Router or Switch by Using a Configuration Group on page 22</a></li></ul>



## time-format

<b>Syntax</b>	<code>time-format (year   millisecond   year millisecond);</code>
<b>Hierarchy Level</b>	<code>[edit system syslog]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Include the year, the millisecond, or both, in the timestamp on every standard-format system log message. The additional information is included for messages directed to each destination configured by a <b>file</b> , <b>console</b> , or <b>user</b> statement at the <code>[edit system syslog]</code> hierarchy level, but not to destinations configured by a <b>host</b> statement.
<b>Default</b>	The timestamp specifies the month, date, hour, minute, and second when the message was logged—for example, <b>Aug 21 12:36:30</b> .
<div>  <p><b>NOTE:</b> When the <b>structured-data</b> statement is included at the <code>[edit system syslog file <i>filename</i>]</code> hierarchy level, this statement is ignored for the file.</p> </div>	
<b>Options</b>	<p><b>millisecond</b>—Include the millisecond in the timestamp.</p> <p><b>year</b>—Include the year in the timestamp.</p>
<b>Required Privilege Level</b>	<p><b>system</b>—To view this statement in the configuration.</p> <p><b>system-control</b>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Including the Year or Millisecond in Timestamps</i></li> </ul>



## time-zone

Syntax	<code>time-zone (GMT <i>hour-offset</i>   <i>time-zone</i>);</code>
Hierarchy Level	<code>[edit system]</code>
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set the local time zone. To have the time zone change take effect for all processes running on the switch, you must reboot the switch.
Default	UTC
Options	<p><b>GMT <i>hour-offset</i></b>—Set the time zone relative to UTC time.</p> <p><b>Range:</b> –14 through +12</p> <p><b>Default:</b> 0</p> <p><b><i>time-zone</i></b>—Specify the time zone as <b>UTC</b>, which is the default time zone, or as a string such as PDT (Pacific Daylight Time), or use one of the following continents and major cities:</p> <p>Africa/Abidjan, Africa/Accra, Africa/Addis_Ababa, Africa/Algiers, Africa/Asmera, Africa/Bamako, Africa/Bangui, Africa/Banjul, Africa/Bissau, Africa/Blantyre, Africa/Brazzaville, Africa/Bujumbura, Africa/Cairo, Africa/Casablanca, Africa/Ceuta, Africa/Conakry, Africa/Dakar, Africa/Dar_es_Salaam, Africa/Djibouti, Africa/Douala, Africa/EL_Aaiun, Africa/Freetown, Africa/Gaborone, Africa/Harare, Africa/Johannesburg, Africa/Kampala, Africa/Khartoum, Africa/Kigali, Africa/Kinshasa, Africa/Lagos, Africa/Libreville, Africa/Lome, Africa/Luanda, Africa/Lubumbashi, Africa/Lusaka, Africa/Malabo, Africa/Maputo, Africa/Maseru, Africa/Mbabane, Africa/Mogadishu, Africa/Monrovia, Africa/Nairobi, Africa/Ndjamena, Africa/Niamey, Africa/Nouakchott, Africa/Ouagadougou, Africa/Porto-Novo, Africa/Sao_Tome, Africa/Timbuktu, Africa/Tripoli, Africa/Tunis, Africa/Windhoek</p> <p>America/Adak, America/Anchorage, America/Anguilla, America/Antigua, America/Aruba, America/Asuncion, America/Barbados, America/Belize, America/Bogota, America/Boise, America/Buenos_Aires, America/Caracas, America/Catamarca, America/Cayenne, America/Cayman, America/Chicago, America/Cordoba, America/Costa_Rica, America/Cuiaba, America/Curacao, America/Dawson, America/Dawson_Creek, America/Denver, America/Detroit, America/Dominica, America/Edmonton, America/EL_Salvador, America/Ensenada, America/Fortaleza, America/Glace_Bay, America/Godthab, America/Goose_Bay, America/Grand_Turk, America/Grenada, America/Guadeloupe, America/Guatemala, America/Guayaquil, America/Guyana, America/Halifax, America/Havana, America/Indiana/Knox, America/Indiana/Marengo, America/Indiana/Vevay, America/Indianapolis, America/Inuvik, America/Iqaluit, America/Jamaica, America/Jujuy, America/Juneau, America/La_Paz, America/Lima, America/Los_Angeles, America/Louisville, America/Maceio, America/Managua, America/Manaus, America/Martinique, America/Mazatlan, America/Mendoza,</p>



America/Menominee, America/Mexico\_City, America/Miquelon, America/Montevideo,  
 America/Montreal, America/Montserrat, America/Nassau, America/New\_York,  
 America/Nipigon, America/Nome, America/Noronha, America/Panama,  
 America/Pangnirtung, America/Paramaribo, America/Phoenix, America/Port-au-Prince,  
 America/Port\_of\_Spain, America/Porto\_Acre, America/Puerto\_Rico, America/Rainy\_River,  
 America/Rankin\_Inlet, America/Regina, America/Rosario, America/Santiago,  
 America/Santo\_Domingo, America/Sao\_Paulo, America/Scoresbysund,  
 America/Shiprock, America/St\_Johns, America/St\_Kitts, America/St\_Lucia,  
 America/St\_Thomas, America/St\_Vincent, America/Swift\_Current, America/Tegucigalpa,  
 America/Thule, America/Thunder\_Bay, America/Tijuana, America/Tortola,  
 America/Vancouver, America/Whitehorse, America/Winnipeg, America/Yakutat,  
 America/Yellowknife  
 Antarctica/Casey, Antarctica/DumontDURville, Antarctica/Mawson, Antarctica/McMurdo,  
 Antarctica/Palmer, Antarctica/South\_Pole  
 Arctic/Longyearbyen  
 Asia/Aden, Asia/Alma-Ata, Asia/Amman, Asia/Anadyr, Asia/Aqtau, Asia/Aqtobe,  
 Asia/Ashkhabad, Asia/Baghdad, Asia/Bahrain, Asia/Baku, Asia/Bangkok, Asia/Beirut,  
 Asia/Bishkek, Asia/Brunei, Asia/Calcutta, Asia/Chungking, Asia/Colombo, Asia/Dacca,  
 Asia/Damascus, Asia/Dubai, Asia/Dushanbe, Asia/Gaza, Asia/Harbin, Asia/Hong\_Kong,  
 Asia/Irkutsk, Asia/Ishigaki, Asia/Jakarta, Asia/Jayapura, Asia/Jerusalem, Asia/Kabul,  
 Asia/Kamchatka, Asia/Karachi, Asia/Kashgar, Asia/Katmandu, Asia/Krasnoyarsk,  
 Asia/Kuala\_Lumpur, Asia/Kuching, Asia/Kuwait, Asia/Macao, Asia/Magadan, Asia/Manila,  
 Asia/Muscat, Asia/Nicosia, Asia/Novosibirsk, Asia/Omsk, Asia/Phnom\_Penh,  
 Asia/Pyongyang, Asia/Qatar, Asia/Rangoon, Asia/Riyadh, Asia/Saigon, Asia/Seoul,  
 Asia/Shanghai, Asia/Singapore, Asia/Taipei, Asia/Tashkent, Asia/Tbilisi, Asia/Tehran,  
 Asia/Thimbu, Asia/Tokyo, Asia/Ujung\_Pandang, Asia/Ulan\_Bator, Asia/Urumqi,  
 Asia/Vientiane, Asia/Vladivostok, Asia/Yakutsk, Asia/Yekaterinburg, Asia/Yerevan  
 Atlantic/Azores, Atlantic/Bermuda, Atlantic/Canary, Atlantic/Cape\_Verde, Atlantic/Faeroe,  
 Atlantic/Jan\_Mayen, Atlantic/Madeira, Atlantic/Reykjavik, Atlantic/South\_Georgia,  
 Atlantic/St\_Helena, Atlantic/Stanley  
 Australia/Adelaide, Australia/Brisbane, Australia/Broken\_Hill, Australia/Darwin,  
 Australia/Hobart, Australia/Lindeman, Australia/Lord\_Howe, Australia/Melbourne,  
 Australia/Perth, Australia/Sydney  
 Europe/Amsterdam, Europe/Andorra, Europe/Athens, Europe/Belfast, Europe/Belgrade,  
 Europe/Berlin, Europe/Bratislava, Europe/Brussels, Europe/Bucharest, Europe/Budapest,  
 Europe/Chisinau, Europe/Copenhagen, Europe/Dublin, Europe/Gibraltar, Europe/Helsinki,  
 Europe/Istanbul, Europe/Kaliningrad, Europe/Kiev, Europe/Lisbon, Europe/Ljubljana,  
 Europe/London, Europe/Luxembourg, Europe/Madrid, Europe/Malta, Europe/Minsk,  
 Europe/Monaco, Europe/Moscow, Europe/Oslo, Europe/Paris, Europe/Prague,  
 Europe/Riga, Europe/Rome, Europe/Samara, Europe/San\_Marino, Europe/Sarajevo,  
 Europe/Simferopol, Europe/Skopje, Europe/Sofia, Europe/Stockholm, Europe/Tallinn,  
 Europe/Tirane, Europe/Vaduz, Europe/Vatican, Europe/Vienna, Europe/Vilnius,  
 Europe/Warsaw, Europe/Zagreb, Europe/Zurich  
 Indian/Antananarivo, Indian/Chagos, Indian/Christmas, Indian/Cocos, Indian/Comoro,  
 Indian/Kerguelen, Indian/Mahe, Indian/Maldives, Indian/Mauritius, Indian/Mayotte,  
 Indian/Reunion  
 Pacific/Apia, Pacific/Auckland, Pacific/Chatham, Pacific/Easter, Pacific/Efate,  
 Pacific/Enderbury, Pacific/Fakaofu, Pacific/Fiji, Pacific/Funafuti, Pacific/Galapagos,  
 Pacific/Gambier, Pacific/Guadacanal, Pacific/Guam, Pacific/Honolulu, Pacific/Johnston,  
 Pacific/Kiritimati, Pacific/Kosrae, Pacific/Kwajalein, Pacific/Majuro, Pacific/Marquesas,  
 Pacific/Midway, Pacific/Nauru, Pacific/Niue, Pacific/Norfolk, Pacific/Noumea,  
 Pacific/Pago\_Pago, Pacific/Palau, Pacific/Pitcairn, Pacific/Ponape, Pacific/Port\_Moresby,  
 Pacific/Rarotonga, Pacific/Saipan, Pacific/Tahiti, Pacific/Tarawa, Pacific/Tongatapu,  
 Pacific/Truk, Pacific/Wake, Pacific/Wallis, Pacific/Yap



**Required Privilege Level**    system—To view this statement in the configuration.  
   system-control—To add this statement to the configuration.

**Related Documentation**    • [Modifying the Default Time Zone for a Router or Switch Running Junos OS on page 18](#)



## traceoptions (Layer 2 Learning)

Syntax	<pre> traceoptions {   file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;   flag <i>flag</i> (detail   disable   receive   send);   in-memory-debug;   level;   no-remote-trace; } </pre>
Hierarchy Level	[edit protocols l2-learning]
Release Information	Statement introduced in Junos OS Release 13.2 for the QFX Series.
Description	Define tracing operations for Layer 2 learning.
Default	The <b>traceoptions</b> feature is disabled by default.
Options	<p><b>file <i>filename</i></b>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <b>/var/log</b>.</p> <p>You can specify the following options:</p> <ul style="list-style-type: none"> <li>• <b>no-world-readable</b>—(Optional) Restrict file access to the user who created the file.</li> <li>• <b>size <i>size</i></b> —(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b>, then <b>trace-file.1</b>, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum number of files, you also must specify a maximum file size with the <b>files</b> option. Use <b>xk</b> to specify KB, <b>xm</b> to specify MB, or <b>xg</b> to specify gigabytes.</li> <li>• <b>world-readable</b>—(Optional) Enable unrestricted file access.</li> </ul> <p><b>flag <i>flag</i></b> —Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. You can include the following flags:</p> <ul style="list-style-type: none"> <li>• <b>all</b>—All tracing operations.</li> <li>• <b>bmac-next-hop</b>—Trace backbone MAC next hop operations.</li> <li>• <b>bridge-bmac-next-hop</b>—Trace backbone MAC next hop bridge operations.</li> <li>• <b>bridging-interface</b>—Trace interface bridge operations.</li> <li>• <b>bridging-domain</b>—Trace bridging domain operations.</li> <li>• <b>configuration</b>—Trace configuration operations.</li> <li>• <b>flood-next-hop</b>—Trace flood next hop operations.</li> </ul>



- **initialization**—Trace initialization operations.
- **interface-device**—Trace interface device operations.
- **interface-family**—Trace interface family operations.
- **interface-logical**—Trace logical interface operations.
- **ipc**—Trace inter-process communications operations.
- **irb**—Trace integrated routing and bridging operations.
- **isid**—Trace i-tagged service ID operations.
- **kack**—Trace kernel-acknowledgment.
- **learning-domain**—Trace learning domain operations.
- **logical-system**—Trace logical system operations.
- **mac-learning**—Trace MAC address learning.
- **mc-ae**—Trace multichassis aggregated Ethernet interface operations.
- **redundant-trunk-group**—Trace redundant trunk group operations.
- **routing-instance**—Trace routing instance operations.
- **routing-socket**—Trace routing socket operations.
- **storm-control**—Trace storm control operations.
- **unknown-unicast-forwarding**—Trace unknown unicast forwarding events.
- **vpls-ping**—Trace Virtual Private VLAN Service (VPLS) ping operations.

**in-memory-debug**—Enable trace parameters in the memory.

**level**—Specify level of debugging output.

**no-remote-trace**—Disable remote tracing.

<b>Required Privilege Level</b>	<b>routing</b> —To view this statement in the configuration.
	<b>routing-control</b> —To add this statement to the configuration.



## traceoptions (SBC Configuration Process)

Syntax	<pre> traceoptions {   file <i>filename</i> &lt;files <i>number</i>&gt; &lt;match <i>regex</i>&gt; &lt;size <i>size</i>&gt;   &lt;world-readable   no-world-readable&gt;;   flag <i>flag</i>; } </pre>
Hierarchy Level	[edit system processes sbc-configuration-process]
Release Information	<p>Statement introduced in Junos OS Release 9.5.</p> <p>Statement introduced in Junos OS Release 9.5 for EX Series switches.</p>
Description	Configure trace options for the session border controller (SBC) process of the border signaling gateway (BSG).
Options	<p><b>file <i>filename</i></b>—Name of the file that receives the output of the tracing operation. Enclose the name in quotation marks. All files are placed in the directory <b>/var/log</b>. You can include the following file options:</p> <ul style="list-style-type: none"> <li><b>files <i>number</i></b>—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b>, then <b>trace-file.1</b>, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</li> </ul> <p>If you specify a maximum number of files, you must also specify a maximum file size with the <b>size</b> option and a filename.</p> <p><b>Range:</b> 2 through 1000</p> <p><b>Default:</b> 3 files</p> <ul style="list-style-type: none"> <li><b>match <i>regex</i></b>—(Optional) Refine the output to include lines that contain the regular expression.</li> <li><b>no-world-readable</b>—(Optional) Disable unrestricted file access.</li> <li><b>size <i>size</i></b>—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named <b>trace-file</b> reaches this size, it is renamed <b>trace-file.0</b>. When the trace-file again reaches its maximum size, <b>trace-file.0</b> is renamed <b>trace-file.1</b> and <b>trace-file</b> is renamed <b>trace-file.0</b>. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum file size, you also must specify a maximum number of trace files with the files option and filename.</li> </ul> <p><b>Syntax:</b> <b>xk</b> to specify KB, <b>xm</b> to specify MB, or <b>xg</b> to specify GB.</p> <p><b>Range:</b> 10 KB through 1 GB</p> <p><b>Default:</b> 128 KB</p>



- **world-readable**—(Optional) Enable unrestricted file access.

**flag flag**—Tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements. You can include the following flags:

- **all trace-level**—Trace all SBC process operations.
- **common trace-level**—Trace common events.
- **configuration trace-level**—Trace configuration events.
- **device-monitor trace-level**—Trace device monitor events.
- **ipc trace-level**—Trace IPC events.
- **memory—pool trace-level**—Trace memory pool events.
- **trace-level**—Trace level options are related to the severity of the event being traced. When you choose a trace level, messages at that level and higher levels are captured. Enter one of the following trace levels as the **trace-level**:
  - **debug**—Log all code flow of control.
  - **error**—Log failures with a short-term effect.
  - **info**—Log summary for normal operations, such as the policy decisions made for a call.
  - **trace**—Log program trace START and EXIT macros.
  - **warning**—Log failure recovery events or failure of an external entity.
- **ui trace-level**—Trace user interface operations.

<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
---------------------------------	---

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• See “Troubleshooting the IMSG” in the <i>Junos Multiplay Solutions Guide</i></li><li>• <i>System Management Configuration Statements</i></li></ul>
------------------------------	--



## use-imported-time-zones

<b>Syntax</b>	use-imported-time-zones;
<b>Hierarchy Level</b>	[edit system]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure a custom time zone from a locally generated time zone database.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Updating the IANA Time Zone Database on Junos OS Devices</i></li></ul>







## CHAPTER 3

# Operational Commands

- clear log
- clear chassis display message
- clear system commit
- clear system reboot
- request chassis beacon
- request chassis cb
- request chassis fabric plane
- request chassis fpc
- request chassis pic
- request chassis routing-engine master
- request system halt
- request system logout
- request system power-off
- request system reboot
- set chassis display message
- set date
- show chassis alarms
- show chassis beacon
- show chassis environment
- show chassis environment fpc
- show chassis environment pem
- show chassis environment power-supply-unit
- show chassis environment psu
- show chassis environment routing-engine
- show chassis ethernet-switch
- show chassis fan
- show chassis firmware
- show chassis fpc



- `show chassis fabric fpcs`
- `show chassis fabric map`
- `show chassis fabric plane`
- `show chassis fabric plane-location`
- `show chassis fabric sibs`
- `show chassis fabric summary`
- `show chassis hardware`
- `show chassis lcd`
- `show chassis led`
- `show chassis location`
- `show chassis mac-addresses`
- `show chassis pic`
- `show chassis routing-engine`
- `show chassis temperature-thresholds`
- `show chassis zones`
- `show forwarding-options enhanced-hash-key`
- `show host`
- `show interfaces diagnostics optics`
- `show subscribers`
- `show system alarms`
- `show system audit`
- `show system buffers`
- `show system certificate`
- `show system commit`
- `show system connections`
- `show system core-dumps`
- `show system directory-usage`
- `show system firmware`
- `show system reboot`
- `show system software`
- `show system statistics`
- `show system storage`
- `show system uptime`
- `show system virtual-memory`
- `show version`
- `start shell`
- `test configuration`



## clear log

<b>Syntax</b>	<code>clear log <i>filename</i></code> <code>&lt;all&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.
<b>Description</b>	Remove contents of a log file.
<b>Options</b>	<b><i>filename</i></b> —Name of the specific log file to delete. Note that the file name cannot contain any special characters, including: <code>! [= ;   ( ) { } ]</code>  <b><i>all</i></b> —(Optional) Delete the specified log file and all archived versions of it.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><code>show log</code></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear log on page 109</a>
<b>Output Fields</b>	See <i>file list</i> for an explanation of output fields.

## Sample Output

### clear log

The following sample commands list log file information, clear the contents of a log file, and then display the updated log file information:

```
user@host> file list lcc0-re0:/var/log/sampled detail
```

```
lcc0-re0:
```

```
-----
-rw-r----- 1 root  wheel      26450 Jun 23 18:47 /var/log/sampled
total 1
```

```
user@host> clear log lcc0-re0:sampled
```

```
lcc0-re0:
```

```
user@host> file list lcc0-re0:/var/log/sampled detail
```

```
lcc0-re0:
```



```
-rw-r----- 1 root wheel      57 Sep 15 03:44 /var/log/sampled  
total 1
```



## clear chassis display message

<b>List of Syntax</b>	<a href="#">Syntax on page 111</a> <a href="#">Syntax (TX Matrix Router) on page 111</a> <a href="#">Syntax (TX Matrix Plus Router) on page 111</a> <a href="#">Syntax (QFabric Systems) on page 111</a>
<b>Syntax</b>	clear chassis display message
<b>Syntax (TX Matrix Router)</b>	clear chassis display message <lcc <i>number</i>   scc>
<b>Syntax (TX Matrix Plus Router)</b>	clear chassis display message <lcc <i>number</i>   sfc <i>number</i> >
<b>Syntax (QFabric Systems)</b>	clear chassis display message <node-device <i>name</i>   interconnect-device <i>name</i> >
<b>Release Information</b>	<p>Command introduced in Junos OS Release 7.5.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option for the TX Matrix Plus routers introduced in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<p>(M40e, M160, M320, T Series routers, EX Series, and QFabric systems only) Clear or stop a text message on the craft interface display, which is on the front of the router or switch or on the LCD panel display on the router or switch. The craft interface alternates the display of text messages with standard craft interface messages, switching between messages every 2 seconds. By default, on both the router and the switch, the text message is displayed for 5 minutes. The craft interface display has four 20-character lines. The LCD panel display has two 16-character lines, and text messages appear only on the second line.</p>
<b>Options</b>	<p><b>none</b>—Clear or stop a text message on the craft interface display.</p> <p><b>interconnect-device <i>name</i></b>—(QFabric systems only) (Optional) On a QFabric system, clear or stop a text message on the LCD panel display on the specified Interconnect device.</p> <p><b>lcc <i>number</i></b>—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.</p>



Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**node-device *name***—(QFabric systems only) (Optional) On a QFabric system, clear or stop a text message on the LCD panel display on the specified Node device in a Node group.

**scc**—(TX Matrix routers only) (Optional) Clear or stop a text message on the craft interface on the TX Matrix router (switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) Clear or stop a text message on the craft interface on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

**Required Privilege Level** clear

**Related Documentation**

- [Configuring the LCD Panel on EX Series Switches \(CLI Procedure\)](#)
- [set chassis display message on page 167](#)
- [show chassis craft-interface](#)

**List of Sample Output** [clear chassis display message on page 112](#)

**Output Fields** See [show chassis craft-interface](#) for an explanation of output fields.

## Sample Output

### clear chassis display message

The following example displays and then clears the text message on the craft interface display:

```
user@host> show chassis craft-interface
Red alarm:      LED off, relay off
Yellow alarm:   LED off, relay off
Host OK LED:    On
Host fail LED:  Off
FPCs           0  1  2  3  4  5  6  7
```



```

-----
Green .. *.. * *.
Red .....

```

```
LCD screen:
```

```

+-----+
|NOC contact Dusty |
|(888) 526-1234    |
+-----+

```

```
user@host> clear chassis display message
```

```
user@host> show chassis craft-interface
```

```

Red alarm:      LED off, relay off
Yellow alarm:   LED off, relay off
Host OK LED:    On
Host fail LED:  Off
FPCs           0 1 2 3 4 5 6 7

```

```

-----
Green .. *.. * *.
Red .....

```

```
LCD screen:
```

```

+-----+
|host      |
|Up: 0+17:05:47|
|          |
|Temperature OK|
+-----+

```



## clear system commit

---

<b>Syntax</b>	clear system commit
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Clear any pending commit operation.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	maintenance (or the actual user who scheduled the commit)
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show system commit on page 884</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear system commit on page 114</a> <a href="#">clear system commit (None Pending) on page 114</a> <a href="#">clear system commit (User Does Not Have Required Privilege Level) on page 114</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear system commit

```
user@host> clear system commit
Pending commit cleared.
```

### clear system commit (None Pending)

```
user@host> clear system commit
No commit scheduled.
```

### clear system commit (User Does Not Have Required Privilege Level)

```
user@host> clear system commit
error: Permission denied
```



## clear system reboot

<b>List of Syntax</b>	<a href="#">Syntax on page 115</a> <a href="#">Syntax (EX Series Switches) on page 115</a> <a href="#">Syntax (TX Matrix Router) on page 115</a> <a href="#">Syntax (TX Matrix Plus Router) on page 115</a> <a href="#">Syntax (QFX Series) on page 115</a>
<b>Syntax</b>	<pre>clear system reboot &lt;both-routing-engines&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>clear system reboot &lt;all-members&gt; &lt;both-routing-engines&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt;</pre>
<b>Syntax (TX Matrix Router)</b>	<pre>clear system reboot &lt;both-routing-engines&gt; &lt;all-chassis   all-lcc   lcc <i>number</i>   scc&gt;</pre>
<b>Syntax (TX Matrix Plus Router)</b>	<pre>clear system reboot &lt;both-routing-engines&gt; &lt;all-chassis   all-lcc   lcc <i>number</i>   sfc <i>number</i>&gt;</pre>
<b>Syntax (QFX Series)</b>	<pre>clear system reboot &lt;infrastructure <i>name</i>&gt; &lt;interconnect-device <i>name</i>&gt; &lt;node-group <i>name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<p>Clear any pending system software reboots or halts. When issued on a TX Matrix router without any options, the default behavior clears all pending system software reboots or halts on all T640 routers connected to the TX Matrix router. When issued on a TX Matrix Plus router without any options, the default behavior clears all pending system software reboots or halts on all T1600 or T4000 routers connected to the TX Matrix Plus router.</p>
<b>Options</b>	<p><b>none</b>—Clear all pending system software reboots or halts.</p>



**all-chassis**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Clear all halt or reboot requests for all the Routing Engines in the chassis.

**all-lcc**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, clear all halt or reboot requests for all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus router, clear all halt or reboot requests on the l connected T1600 or T4000 LCCs.

**all-members**—(EX4200 switches only) (Optional) Clear all halt or reboot requests on all members of the Virtual Chassis configuration.

**both-routing-engines**—(Systems with multiple Routing Engines) (Optional) Clear all halt or reboot requests on both Routing Engines. On a TX Matrix router, clear both Routing Engines on all chassis connected to the TX Matrix router. Likewise, on a TX Matrix Plus router, clear both Routing Engines on all chassis connected to the TX Matrix Plus router.

**infrastructure *name***—(QFabric systems) (Optional) Clear all halt or reboot requests on the fabric control Routing Engines or fabric manager Routing Engines.

**interconnect-device *name***—(QFabric systems) (Optional) Clear all halt or reboot requests on the Interconnect device.

**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, clear all halt or reboot requests for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, clear all halt or reboot requests for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(EX4200 switches only) (Optional) Clear all halt or reboot requests on the local Virtual Chassis member.

**member *member-id***—(EX4200 switches only) (Optional) Clear all halt or reboot requests on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value from 0 through 9.

**node-group *name***—(QFabric systems) (Optional) Clear all halt or reboot requests on the Node group.



**scc**—(TX Matrix routers only) (Optional) Clear all halt or reboot requests for the TX Matrix router (or switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) Clear all halt or reboot requests for the TX Matrix Plus router. Replace *number* with 0.

**Required Privilege Level** maintenance

**Related Documentation**

- [request system reboot on page 158](#)
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

**List of Sample Output**

- [clear system reboot on page 117](#)
- [clear system reboot \(TX Matrix Router\) on page 117](#)
- [clear system reboot \(QFX Series\) on page 117](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear system reboot

```
user@host> clear system reboot
reboot requested by root at Sat Dec 12 19:37:34 1998
[process id 17855]
Terminating...
```

### clear system reboot (TX Matrix Router)

```
user@host> clear system reboot
scc-re0:
-----
No shutdown/reboot scheduled.
lcc0-re0:
-----
No shutdown/reboot scheduled.
lcc2-re0:
-----
No shutdown/reboot scheduled.
```

### clear system reboot (QFX Series)

```
user@switch> clear system reboot node-group node1
No shutdown/reboot scheduled.
```



## request chassis beacon

<b>List of Syntax</b>	<a href="#">Syntax (QFX Series) on page 118</a> <a href="#">Syntax (PTX Series) on page 118</a>
<b>Syntax (QFX Series)</b>	<pre>request chassis beacon &lt;all (off   on)&gt; &lt;fpc slot-number (off   on)&gt; &lt;interconnect-device name (cb slot-number   fpc slot-number   (off   on)&gt; &lt;node-device name (off   on)&gt;</pre>
<b>Syntax (PTX Series)</b>	<pre>request chassis beacon &lt;all (off   on)&gt; &lt;fpc slot-number (off   on)&gt; &lt;interconnect-device name (cb slot-number   fpc slot-number   (off   on)&gt; &lt;node-device name (off   on)&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p>
<b>Description</b>	(QFX Series only) Enable or disable the beacon LED on a QFX Series device.
<b>Options</b>	<p><b>all</b>—Turn the beacon LED either <b>on</b> or <b>off</b> on all QFabric system Interconnect and Node devices.</p> <p><b>cb slot-number</b>—Turn the beacon LED either <b>on</b> or <b>off</b> on the Control Board of the QFX3008-I Interconnect device.</p> <p><b>fpc slot-number</b>—Turn the beacon LED either <b>on</b> or <b>off</b> on the Flexible PIC Concentrator on the standalone QFX3500 switch or the Interconnect device.</p> <p><b>interconnect-device name</b>—Turn the beacon LED either <b>on</b> or <b>off</b> on the Interconnect device.</p> <p><b>node-device name</b>—Turn the beacon LED either <b>on</b> or <b>off</b> on the Node device.</p> <p><b>off</b>—Turn the beacon LED <b>off</b>.</p> <p><b>on</b>—Turn the beacon LED <b>on</b>.</p>
<b>Required Privilege Level</b>	maintenance
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">show chassis beacon on page 191</a></li> </ul>



**List of Sample Output**    [request chassis beacon fpc 0 on \(QFX Series\) on page 119](#)  
[request chassis beacon node-device \(QFabric System\) on page 119](#)  
[request chassis beacon on interconnect-device fpc \(QFabric System\) on page 119](#)  
[request chassis beacon fpc 0 on \(PTX Router\) on page 119](#)

**Output Fields**    When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### [request chassis beacon fpc 0 on \(QFX Series\)](#)

```
user@switch> request chassis beacon fpc 0 on
```

```
Beacon set to ON
```

### [request chassis beacon node-device \(QFabric System\)](#)

```
user@switch> request chassis beacon node-device node1 on
```

```
node1                ON
```

### [request chassis beacon on interconnect-device fpc \(QFabric System\)](#)

```
user@switch> request chassis beacon on interconnect-device fpc 2
```

```
FPC 2                ON
```

### [request chassis beacon fpc 0 on \(PTX Router\)](#)

```
user@switch> request chassis beacon fpc 0 on
```

```
FPC 0                ON
```



## request chassis cb

<b>List of Syntax</b>	<a href="#">Syntax on page 120</a> <a href="#">Syntax (TX Matrix Router) on page 120</a> <a href="#">Syntax (TX Matrix Plus Router) on page 120</a> <a href="#">Syntax (QFabric System) on page 120</a> <a href="#">Syntax (EX9253 Switches) on page 120</a>
<b>Syntax</b>	request chassis cb (offline   online) slot <i>slot-number</i>
<b>Syntax (TX Matrix Router)</b>	request chassis cb (offline   online) <slot <i>slot-number</i>   lcc <i>number</i> slot <i>cb-slot-number</i>   scc <i>number</i> slot <i>cb-slot-number</i> >
<b>Syntax (TX Matrix Plus Router)</b>	request chassis cb (offline   online) <slot <i>slot-number</i>   lcc <i>number</i> slot <i>cb-slot-number</i>   sfc <i>number</i> slot <i>cb-slot-number</i> >
<b>Syntax (QFabric System)</b>	request chassis cb (offline   online) interconnect-device <i>name</i> slot <i>slot-number</i> <interconnect-device <i>name</i> slot <i>slot-number</i> (offline   online)>
<b>Syntax (EX9253 Switches)</b>	request chassis cb (offline   online) <i>name</i> slot <i>slot-number</i>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS 9.4 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS 11.3 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Series Switches.</p>
<b>Description</b>	(M120, M320, and MX Series routers and T Series routers, QFabric systems, and EX8200 switches only) Control the operation of the Control Board (CB).
<b>Options</b>	<b>offline</b> —Take the Control Board offline.



**NOTE:** On a QFabric system, to bring the backup Control Board on a QFX3008-I Interconnect device offline, issue the request chassis cb slot *backup-slot-number* offline command.





**NOTE:** Only backup Control Board can be turned offline or online. To turn a Control Board offline or to bring it back online, the Routing Engine should be turned offline first.

**online**—Bring the Control Board online.

**interconnect-device *name***—(QFabric systems only) (Optional) Bring the QFX3008-I Interconnect device Control Board either offline or online:

**slot *slot-number***—Control Board slot number:

- (TX Matrix and TX Matrix Plus routers only) On a TX Matrix router, if you specify the number of the T640 router by using the *lcc number* option (the recommended method), replace *cb-slot-number* with a value from 0 through 1.

Likewise, on a TX Matrix Plus router, if you specify the number of the T1600 or T4000 router by using the *lcc number* option (the recommended method), replace *cb-slot-number* with a value from 0 through 1.

- M320 router—Replace *slot-number* with a value from 0 through 1.
- MX480/MX240 routers—Replace *slot-number* with a value from 0 through 1.
- MX960 router—Replace *slot-number* with a value from 0 through 2.
- MX2020, MX2010, and MX2008 routers—Replace *slot-number* with 0 or 1.
- EX8208 switch—Replace *slot-number* with a value from 0 through 2.
- EX8216 switch—Replace *slot-number* with a value from 0 through 1.
- QFabric System—Replace *slot-number* with a value from 0 through 1.

**lcc *number***—(TX Matrix, TX Matrix Plus routers only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**sfc *number***—(TX Matrix Plus routers only) (Optional) Change the CB status for the TX Matrix Plus router (switch-fabric chassis). Replace *number* with 0.



**Required Privilege Level** maintenance

**Related Documentation**

- *show chassis environment cb*
- *Understanding Switching Control Board Redundancy*

**List of Sample Output**

[request chassis cb on page 122](#)  
[request chassis cb interconnect-device \(QFabric System\) on page 122](#)  
[request chassis cb \(MX2020 Router\) on page 122](#)  
[request chassis cb \(MX2010 Router\) on page 122](#)  
[request chassis cb \(MX2008 Router\) on page 122](#)  
[request chassis cb \(MX10003 Router\) on page 122](#)  
[request chassis cb \(EX9253 Switch\) on page 123](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### `request chassis cb`

```
user@host> request chassis cb offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

### `request chassis cb interconnect-device (QFabric System)`

```
user@switch> request chassis cb interconnect-device interconnect1 offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

### `request chassis cb (MX2020 Router)`

```
user@host> request chassis cb offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

### `request chassis cb (MX2010 Router)`

```
user@host> request chassis cb offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

### `request chassis cb (MX2008 Router)`

```
user@host> request chassis cb offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

### `request chassis cb (MX10003 Router)`

```
user@host> request chassis cb online slot 1
CB 1 appears to be online already
```



### request chassis cb (EX9253 Switch)

```
user@switch>request chassis cb offline slot 1
```

```
Offline initiated, use "show chassis environment cb" to verify
```



## request chassis fabric plane

**List of Syntax**   [Syntax on page 124](#)  
[Syntax \(EX9253 Switches\) on page 124](#)

**Syntax**   `request chassis fabric plane plane-number (offline | online)`

**Syntax (EX9253 Switches)**   `request chassis fabric plane plane-number (offline | online)`

**Release Information**   Command introduced in Junos OS Release 8.0.  
 Command introduced in Junos OS Release 9.4 for EX Series switches.  
 Command introduced in Junos OS Release 12.3 for MX2020 Universal Routing Platforms.  
 Command introduced in Junos OS Release 12.3 for MX2010 Universal Routing Platforms.  
 Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.  
 Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.  
 Command introduced in Junos OS Release 18.2 for EX9253 Switches.

**Description**   (M120 and MX Series routers and EX8200 switches only) Control the operation of the specified fabric plane.

On an MX480 or MX240 series router, you can configure the active control board for redundancy mode or increased bandwidth mode. When running in increased bandwidth mode, MX series routers with Trio chips and the MPC3E will use all eight active fabric planes.

To take both plane 0 and plane 1 offline on a MX480 and MX240 series routers with one or more MPC4E MICs installed, a X86 Media Service Blade, and/or 100G PFE, and where redundancy-mode is configured for "increased-bandwidth", Juniper recommends taking plane 1 offline before plane 0. Likewise, when the router is configured for increased-bandwidth mode, taking fabric planes 0, 2, 4, and 6 offline can cause the chassis to run in a reduced fabric bandwidth mode. Plane 7 may remain in a "spare" state (as seen in the "show chassis fabric summary" command output) until plane 3 is taken offline and then brought back up.

**Options**   **offline**—Take the fabric plane offline. Use the `request chassis fabric plane plane-number offline` command to clear a FAULT state on a fabric plane. To bring the fabric plane back online, use the `request chassis fabric plane plane-number online` command.

**online**—Bring the fabric plane online.

**plane *plane-number***—Fabric plane number.

- For the M120 router, replace *plane-number* with a value from 0 through 3.
- For the MX480 and MX240 routers, replace *plane-number* with a value from 0 through 7.



- For the MX2020, MX2010, and MX2008 routers, replace *plane-number* with a value from 0 through 7.
- For the MX960 router, replace *plane-number* with a value from 0 through 5.
- For the EX8208 switch, replace *plane-number* with a value from 0 through 11.
- For the EX8216 switch, replace *plane-number* with a value from 0 through 7.

**Required Privilege Level** maintenance

**Related Documentation**

- [show chassis fabric plane on page 561](#)
- [show chassis fabric plane-location on page 616](#)
- [show chassis fabric summary on page 641](#)

**List of Sample Output**

- [request chassis fabric plane 0 online on page 125](#)
- [request chassis fabric plane 0 offline on page 125](#)
- [request chassis fabric plane 0 online \(EX8200 switch\) on page 125](#)
- [request chassis fabric plane \(MX2020 Router\) on page 126](#)
- [request chassis fabric plane \(MX2010 Router\) on page 126](#)
- [request chassis fabric plane \(MX2008 Router\) on page 126](#)
- [request chassis fabric plane \(MX10003 Router\) on page 126](#)
- [request chassis fabric plane \(EX9253 Switch\) on page 126](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### request chassis fabric plane 0 online

```
user@host> request chassis fabric plane 0 online
Online initiated, use "show chassis fabric plane" to verify
```

### request chassis fabric plane 0 offline

```
user@host> request chassis fabric plane 0 offline
Offline initiated, use "show chassis fabric plane" to verify
```

### request chassis fabric plane 0 online (EX8200 switch)

```
user@host> request chassis fabric plane 0 online
Plane 0 is already active
```



#### request chassis fabric plane (MX2020 Router)

```
user@host> request chassis fabric plane 2 online  
Plane 2 is already active
```

#### request chassis fabric plane (MX2010 Router)

```
user@host> request chassis fabric plane 4 online  
Plane 4 is already active
```

#### request chassis fabric plane (MX2008 Router)

```
user@host>request chassis fabric plane 4 online  
Plane 4 is already active
```

#### request chassis fabric plane (MX10003 Router)

```
user@host>request chassis fabric plane 4 online  
Plane 4 is already active
```

#### request chassis fabric plane (EX9253 Switch)

```
user@switch>request chassis fabric plane 0 online  
Plane 0 is already active
```



## request chassis fpc

<b>List of Syntax</b>	<a href="#">Syntax on page 127</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Routers) on page 127</a> <a href="#">Syntax (MX Series Routers) on page 127</a> <a href="#">Syntax (MX2020 Universal Routing Platforms) on page 127</a> <a href="#">Syntax (MX204, MX2010, MX2008, and MX10003 Universal Routing Platforms) on page 127</a> <a href="#">Syntax (EX9200, EX9251, EX9253 Switches) on page 127</a> <a href="#">Syntax (QFabric System) on page 127</a> <a href="#">Syntax (PTX Series Packet Transport Routers) on page 127</a>
<b>Syntax</b>	<code>request chassis fpc (offline   online   restart) slot <i>slot-number</i></code>
<b>Syntax (TX Matrix and TX Matrix Plus Routers)</b>	<code>request chassis fpc (offline   online   restart) slot <i>slot-number</i> &lt;lcc <i>number</i>&gt;</code>
<b>Syntax (MX Series Routers)</b>	<code>request chassis fpc (offline   online   restart) slot <i>slot-number</i> &lt;all-members&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt;</code>
<b>Syntax (MX2020 Universal Routing Platforms)</b>	<code>request chassis fpc (offline   online   restart) slot <i>slot-number</i></code>
<b>Syntax (MX204, MX2010, MX2008, and MX10003 Universal Routing Platforms)</b>	<code>request chassis fpc (offline   online   restart) slot <i>slot-number</i></code>
<b>Syntax (EX9200, EX9251, EX9253 Switches)</b>	<code>request chassis fpc (offline   online   restart) slot <i>slot-number</i></code>
<b>Syntax (QFabric System)</b>	<code>request chassis fpc &lt;interconnect-device <i>name</i> slot <i>slot-number</i> (offline   online)&gt; &lt;(offline   online) interconnect-device <i>name</i> slot <i>slot-number</i>&gt; &lt;slot <i>slot-number</i> interconnect-device <i>name</i> (offline   online)&gt;</code>
<b>Syntax (PTX Series Packet Transport Routers)</b>	<code>request chassis fpc (offline   online   restart) slot <i>slot-number</i></code>



<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS 11.3 for QFX Series. Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers. Command introduced in Junos OS Release 12.3 for MX2020 Universal Routing Platforms. Command introduced in Junos OS Release 12.3 for MX2010 Universal Routing Platforms. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series. Command introduced in Junos OS Release 16.1R1 for EX9200 switches. Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms. Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms. Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms. Command introduced in Junos OS Release 18.1R1 for EX9251 Switches. Command introduced in Junos OS Release 18.2 for EX9253 Switches.
<b>Description</b>	(M20, M40, M40e, M120, M160, M320, MX Series, and T Series routers, QFabric systems, EX Series switches, and PTX Series Packet Transport Routers only) Control the operation of the Flexible PIC Concentrator (FPC).



**NOTE:** Starting with Junos OS Release 12.3, it is possible that FPCs brought offline by using the `request chassis fpc slot fpc-slot offline` operational-mode CLI command can come online during a configuration commit or power-supply replacement procedure. As an alternative, use the `set fpc fpc-slot power off` configuration-mode command at the `[edit chassis]` hierarchy level to ensure that the FPCs remain offline.



**NOTE:** In releases earlier than Junos OS Release 15.1F3 and Junos OS Release 16.1, offline FPCs in the PTX5000 router might be powered on by the router during a reboot, or when triggered by other power management events on the router, such as when you take another FPC offline.

Starting with Junos OS Release 15.1F3 and Junos OS Release 16.1, offline FPCs do not come online during reboots or other power management events. To bring such an FPC online:

1. Delete the `fpc fpc-slot power off` statement from the `[edit chassis]` hierarchy level, if that statement is configured, and commit the configuration.
2. Either issue the `request chassis fpc online slot fpc-slot` operational-mode CLI command or press and hold the FPC ONLINE/OFFLINE button for about 5 seconds until the green OK LED next to the button lights steadily.





**NOTE:** If a CLI-based firmware upgrade is in progress, the specified FPC does not restart. Starting with Junos OS Release 15.1, the following message is displayed when this occurs:

```
user@host> request chassis fpc slot 0 restart
FPC 0 Firmware update in progress. Wait!!!
```



**NOTE:** The command `request chassis fpc (offline | online) slot slot-number` is not supported on PTX1000 router. Whereas, `request chassis fpc restart slot slot-number` is supported on PTX1000 router

**Options** **offline**—Take the FPC offline.

**online**—Bring the FPC online.

**interconnect-device *name***—(QFabric systems only) Bring the FPC on the QFX3008-I Interconnect device either offline or online:

- (QFabric System) On a QFabric system, specify the name of the QFX3008-I Interconnect device containing the FPC you want to bring either offline or online.

**restart**—Restart the FPC.

**slot *slot-number***—FPC slot number:

- M20 router—0 through 3.
- M120 router—0 through 5.
- MX240 router—0 through 2. On the MX240 router, slot-number corresponds to the (DPC slot number. If an MPC is installed, slot-number corresponds to the MPC slot number.
- MX480 router—0 through 5. On the MX480 router, slot-number corresponds to the DPC slot number. If an MPC is installed, slot-number corresponds to the MPC slot number.
- MX960 router—0 through 11. On the MX960 router, slot-number corresponds to the DPC slot number. If an MPC is installed, slot-number corresponds to the MPC slot number.
- MX2020 router—0 through 19.
- MX2010 router—0 through 9.
- MX2008 router—0 through 9.



- TX Matrix and TX Matrix Plus routers only—On the TX Matrix router, if you specify the number of the T640 router by using the *lcc number* option (the recommended method), replace *slot-number* with a value from 0 through 7. Otherwise, replace *slot-number* with a value from 0 through 31.

Likewise, on a TX Matrix Plus router, if you specify the number of the T1600 or T4000 router by using the *lcc number* option (the recommended method), replace *slot-number* with a value from 0 through 7. Otherwise, replace *slot-number* with a value from 0 through 31. In case of TX Matrix Plus router with 3D SIBs, replace *slot-number* with a value from 0 through 63. For example, the following commands have the same result:

```
user@host> request chassis fpc lcc 1 slot 1 offline
user@host> request chassis fpc slot 9 offline
```

- Other routers—0 through 7.
- QFabric System—Replace *slot-number* with a value from 0 through 2.
- EX Series switches:
  - EX4200 switches in a Virtual Chassis configuration—Replace *slot-number* with a value from 0 through 9.
  - EX6210 switches—Replace *slot-number* with a value from 0 through 9.



**NOTE:** These commands are not supported for slots 4 and 5 when a Switch Fabric and Routing Engine (SRE) module is installed in those slots. These commands are supported for slots 4 and 5 only if a line card is installed in them.

- EX8208 switches—Replace *slot-number* with a value from 0 through 7.
- EX8216 switches—Replace *slot-number* with a value from 0 through 15.
- EX9204 switches—Replace *slot-number* with a value from 0 through 2.
- EX9208 switches—Replace *slot-number* with a value from 0 through 5.
- EX9214 switches—Replace *slot-number* with a value from 0 through 11.
- PTX5000 Packet Transport Router—Replace *slot-number* with a value from 0 through 7.

**all-members**—(MX Series routers only) (Optional) Change FPC status of all members of the Virtual Chassis configuration.

**local**—(MX Series routers only) (Optional) Change FPC status of the local Virtual Chassis member.



**member *member-id***—(MX Series routers only) (Optional) Change FPC status of the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**lcc *number***—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**Required Privilege Level** maintenance

**Related Documentation**

- [show chassis fpc on page 448](#)
- *show chassis fpc-feb-connectivity*
- [show chassis fabric fpcs on page 502](#)
- *Configuring a FPC to Stay Offline*
- *Resynchronizing FPC Sequence Numbers with Active FPCs when an FPC Comes Online*
- *MX960 Flexible PIC Concentrator Description*

**List of Sample Output**

[request chassis fpc on page 132](#)  
[request chassis fpc \(MX Series Routers with Media Services Blade \[MSB\]\) on page 132](#)  
[request chassis fpc \(MX2020 Router\) on page 132](#)  
[request chassis fpc \(MX2010 Router\) on page 132](#)  
[request chassis fpc \(MX2008 Router\) on page 132](#)  
[request chassis fpc \(MX10003 Router\) on page 132](#)  
[request chassis fpc \(MX204 Router\) on page 132](#)  
[request chassis fpc \(EX9200 Switch\) on page 132](#)  
[request chassis fpc \(EX9251 Switch\) on page 133](#)  
[request chassis fpc \(EX9253 Switch\) on page 133](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.



## Sample Output

### request chassis fpc

```
user@host> request chassis fpc online slot 0
FPC 0 already online
```

### request chassis fpc (MX Series Routers with Media Services Blade [MSB])

```
user@host> request chassis fpc slot 0
Possible completions:
  offline          Take FPC offline
  online           Bring FPC online
  restart          Restart FPC
```

### request chassis fpc (MX2020 Router)

```
user@host >request chassis fpc online slot 2
FPC 2 already online
```

### request chassis fpc (MX2010 Router)

```
user@host >request chassis fpc offline slot 5
Offline initiated, use "show chassis fpc" to verify
```

### request chassis fpc (MX2008 Router)

```
user@host >request chassis fpc online slot 5
FPC 5 already online
```

### request chassis fpc (MX10003 Router)

```
user@host>request chassis fpc online slot 1
FPC 1 already online
```

### request chassis fpc (MX204 Router)

```
user@host>request chassis fpc online slot 0
FPC 0 already online
```

### request chassis fpc (EX9200 Switch)

```
user@host> request chassis fpc slot 0
Possible completions:
  offline          Take FPC offline
  online           Bring FPC online
  restart          Restart FPC
```



**request chassis fpc (EX9251 Switch)**

```
user@switch> request chassis fpc online slot 0  
FPC 0 already online
```

**request chassis fpc (EX9253 Switch)**

```
user@switch> request chassis online fpc slot 0  
FPC 0 already online
```



## request chassis pic

<b>List of Syntax</b>	<a href="#">Syntax on page 134</a> <a href="#">Syntax (ACX4000 Series Routers) on page 134</a> <a href="#">Syntax (MX Series Routers) on page 134</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Routers) on page 134</a>
<b>Syntax</b>	<code>request chassis pic (offline   online) fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
<b>Syntax (ACX4000 Series Routers)</b>	<code>request chassis pic (offline   online) fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
<b>Syntax (MX Series Routers)</b>	<code>request chassis pic (offline   online) fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i> &lt;member <i>member-id</i>&gt;</code>
<b>Syntax (TX Matrix and TX Matrix Plus Routers)</b>	<code>request chassis pic (offline   online) fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i> &lt;lcc <i>number</i>&gt;</code>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.3 for ACX4000 Routers.</p> <p>Command introduced in Junos OS Release 13.2 for the QFX Series.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Option <b>member</b> introduced in Junos OS Release 14.2 for MX Series routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 3D Universal Edge Routers.</p>
<b>Description</b>	Control the operation of the PIC.



**NOTE:** Starting with Junos OS Release 12.3, it is possible that PICs brought offline by using the `request chassis fpc slot fpc-slot pic pic-slot offline` operational mode command can come online during a configuration commit or power-supply replacement procedure. (See the following note about difference in behavior on Junos OS Evolved.) As an alternative, use the `set fpc fpc-slot pic pic-slot power off` configuration mode command at the [edit chassis] hierarchy level to ensure that PICs remain offline.



**NOTE:** On Junos OS Evolved, a PIC does not restart when you enter a commit command that configures an element of that PIC.





**NOTE:** The request chassis pic (offline | online) fpc-slot *slot number* pic-slot *slot-number* command is not supported for built-in PICs on MX Series routers.

To view a list of built-in PICs on the router or switch chassis, use the show chassis hardware command.



**NOTE:** This command is not supported on MX960 and MX2020 routers with MPC5EQ.



**NOTE:** T1600 routers and TX Matrix Plus routers with 100-Gigabit Ethernet PICs require two adjacent PIC slots, 0 and 1, for each PIC. Therefore, only online and offline command options to PIC slot 0 are allowed. Use of the online and offline command options for PIC slot 1 with the described router and PIC combination is not allowed.



**NOTE:** In T Series routers, when the PIC state is set from offline to online or vice-versa before the processing is complete for the previous command, you are provided feedback on the status of your request. The following sample messages are displayed if you try to set a PIC offline or online:

```
user@switch> request chassis pic fpc-slot 1 pic-slot 0 online
```

```
fpc 1 pic 0 online initiated, use "show chassis fpc pic-status" to verify
```

```
user@switch> request chassis pic fpc-slot 1 pic-slot 0 online
```

```
FPC 1 PIC 0 already transitioning to online
```

When the same PIC is set to a different state while the transition is in progress, you are provided feedback on the status of your request.

```
user@switch> request chassis pic fpc-slot 1 pic-slot 0 offline
```

```
FPC 1, PIC 0 already transitioning to online. Please retry later.
```





**NOTE:** If a CLI-based firmware upgrade is in progress, it prevents the specified PIC from restarting. Starting in Junos OS Release 15.1, the following message is displayed:

```
user@host> request chassis pic fpc-slot 0 pic-slot 1 offline
PIC's Firmware update in progress. Wait!!!
```

**Options**    **offline**—Take the PIC offline.

**online**—Bring the PIC online.

**fpc-slot****slot-number**—Flexible PIC Concentrator (FPC) slot number. Replace **slot-number** with a value appropriate for your router or switch:

- ACX4000 routers—1 or 2.
- EX Series switches:
  - EX3200 switches and EX4200 standalone switches—0.
  - EX4200 switches in a Virtual Chassis configuration—0 through 9 (switch's member ID).
  - EX8208 switches—0 through 7 (line card).
  - EX8216 switches—0 through 15 (line card).
- M5, M7i, M10, and M10i routers—0 or 1.
- M20 routers—0 through 3.
- M40 and M40e routers—0 through 7.
- M120 routers—0 through 5.
- M160 routers—0 through 7.
- M320 routers—0 through 7.
- MX 5, MX10, and MX40 routers—0 or 1.
- MX80 routers—0 or 1.
- MX240 routers—0 through 2
- MX480 routers—0 through 5
- MX2020 routers—0 through 19.
- MX2010 routers—0 through 9.
- MX960 routers—0 through 11.
- MX10003 routers—0 or 1.
- MX204 routers—0.



- PTX5000 routers—0 or 1.
- T Series routers—0 through 7.
- TX Matrix and TX Matrix Plus routers only—On a TX Matrix router, if you specify the number of the T640 router by using the **lcc number** option (the recommended method), replace **slot-number** with a value from 0 through 7. Otherwise, replace **slot-number** with a value from 0 through 31.

Likewise, on a TX Matrix Plus router, if you specify the **number** of the T1600 or T4000 router by using the lcc number option (the recommended method), replace **slot-number** with a value from 0 through 7. Otherwise, for the FPC slot number, replace **slot-number** with a value from 0 through 31. On a TX Matrix Plus router with 3D SIBs to assign the FPC slot number, replace **slot-number** with a value from 0 through 63. For example, the following commands have the same result:

```
user@host> request chassis pic fpc-slot 1 lcc 1 pic-slot 0 offline
user@host> request chassis pic fpc-slot 9 pic-slot 0 offline
```

- QFX5100 standalone switches—0.

**lcc number**—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace **number** with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**member member-id**—(MX Series routers only) (Optional) Change the PIC status on the specified member of the Virtual Chassis configuration. Replace **member-id** with the value that is assigned to the specified member.

**offline**—Take the PIC offline.

**online**—Bring the PIC online.

**pic-slot slot-number**—PIC slot number.

- EX3200 and EX4200 switches—0 for built-in network interfaces and 1 for interfaces on uplink modules.
- EX8208 and EX8216 switches—0.
- M Series routers—0, 1, 2, or 3



- MX960 router—**slot-number** corresponds to the slot number of the Packet Forwarding Engine.
- MX204 router—0 or 1.
- PTX5000 routers—0 or 1.
- T320 router—0 or 1.
- T640 router—0, 1, 2, or 3.
- T1600 router —0, 1, 2, or 3.
- T4000 router—0, 1, 2, or 3.
- QFX5100 standalone switches—0, 1, or 2. PIC 0 is used for all interfaces that are not configured on expansion modules, and PIC 1 and PIC 2 are used for interfaces configured on expansion modules.

**Required Privilege Level** maintenance

**Related Documentation**

- [show chassis hardware on page 651](#)
- [show chassis pic on page 705](#)

**List of Sample Output**

- [request chassis pic on page 138](#)
- [request chassis pic online member \(MX Series Routers\) on page 138](#)
- [request chassis pic offline member \(MX Series Routers\) on page 138](#)
- [request chassis pic \(MX10003 Router\) on page 139](#)
- [request chassis pic online member \(PTX10008 Router\) on page 139](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### `request chassis pic`

```
user@host> request chassis pic pic-slot 0 online fpc-slot 0
FPC 0, PIC 0 is already online
```

### `request chassis pic online member (MX Series Routers)`

```
user@host> request chassis pic online member 1 fpc-slot 11 pic-slot 3
fpc 11 pic 3 online initiated
```

### `request chassis pic offline member (MX Series Routers)`

```
user@host> request chassis pic offline member 1 fpc-slot 11 pic-slot 3
fpc 11 pic 3 offline initiated
```



**request chassis pic (MX10003 Router)**

```
user@host> request chassis pic online pic-slot 1 fpc-slot 0  
FPC 0 is not online
```

**request chassis pic online member (PTX10008 Router)**

```
user@host> request chassis pic online pic-slot 1 fpc-slot 0  
FPC 0, PIC 1 is empty
```



## request chassis routing-engine master

<b>List of Syntax</b>	<a href="#">Syntax on page 140</a> <a href="#">Syntax (M Series, MX Series, T Series Routers) on page 140</a> <a href="#">Syntax (TX Matrix Routers) on page 140</a> <a href="#">Syntax (TX Matrix Plus Routers) on page 140</a> <a href="#">Syntax (MX Series Virtual Chassis) on page 140</a> <a href="#">Syntax (QFX Series) on page 140</a>
<b>Syntax</b>	request chassis routing-engine master (acquire   release   switch) <no-confirm>
<b>Syntax (M Series, MX Series, T Series Routers)</b>	request chassis routing-engine master (acquire   release   switch) <no-confirm> <check>
<b>Syntax (TX Matrix Routers)</b>	request chassis routing-engine master (acquire   release   switch) (lcc <i>number</i>   scc   all-chassis) <no-confirm>
<b>Syntax (TX Matrix Plus Routers)</b>	request chassis routing-engine master (acquire   release   switch) (lcc <i>number</i>   sfc   all-chassis   all-lcc) <no-confirm>
<b>Syntax (MX Series Virtual Chassis)</b>	request chassis routing-engine master (acquire   release   switch) <all-members> <check> <local> <member <i>member-id</i> > <no-confirm>
<b>Syntax (QFX Series)</b>	request chassis routing-engine master (release   switch) <check> <interconnect-device <i>name</i> > <node-group <i>name</i> > <no-confirm>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p><b>all-chassis</b> option added in Junos OS Release 8.0.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.3 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p>



Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.  
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
 Command introduced in Junos OS Release 17.2 for MX2008 3D Universal Edge Routers.  
 Command introduced in Junos OS Release 17.2 for PTX10008 Routers.

**Description** For routers or switches with multiple Routing Engines, control which Routing Engine is the master.



**CAUTION:** (Routing matrix based on the TX Matrix or TX Matrix Plus routers only) Within the routing matrix, we recommend that all Routing Engines run the same Junos OS Release. If you run different releases on the Routing Engines and a change in mastership occurs on any backup Routing Engine in the routing matrix, one or all routers (in a routing matrix based on the TX Matrix router or in a routing matrix based on a TX Matrix Plus router) might become logically disconnected from the TX Matrix router and cause data loss. For more information, see the [TX Matrix Router Hardware Guide](#) or the [High Availability Feature Guide](#).



**NOTE:** Successive graceful Routing Engine switchover events must be a minimum of 240 seconds (4 minutes) apart after both Routing Engines have come up.

If the router or switch displays a warning message similar to “Standby Routing Engine is not ready for graceful switchover. Packet Forwarding Engines that are not ready for graceful switchover might be reset,” do not attempt switchover. If you choose to proceed with switchover, only the Packet Forwarding Engines that were not ready for graceful switchover are reset. None of the Flexible PIC concentrators (FPCs) should spontaneously restart. We recommend that you wait until the warning no longer appears and then proceed with the switchover.

You will receive an error message stating “Command aborted. Not ready for mastership switch, try after n seconds” when this command is re-entered before 240 seconds have elapsed on EX Series switches.



**NOTE:** On a QFabric system, to avoid traffic loss on the network Node group, switch mastership of the routing engine to the backup routing engine, and then reboot.

**Options** **acquire**—(Not available for Junos OS Evolved) Attempt to become the master Routing Engine.



**release**—(Not available for Junos OS Evolved) Request that the other Routing Engine become the master.

**switch**—Toggle mastership between Routing Engines.



**NOTE:** The **acquire** option should be used with caution because acquiring a Routing Engine may result in a corrupted database. If possible, use the **switch** option instead.

The **acquire**, **release**, and **switch** options have the following suboptions:

**all-chassis**—(TX Matrix and TX Matrix Plus routers only) On a routing matrix composed of a TX Matrix router and the attached T640 routers, switch mastership on all the Routing Engines in the routing matrix. Likewise, on a routing matrix composed of a TX Matrix Plus router and the attached T1600 or T4000 routers, switch mastership on all the Routing Engines in the routing matrix.

**all-lcc**—(TX Matrix Plus routers only) Request to acquire mastership for all line-card chassis (LCC).

**all-members**—(MX Series routers only) (Optional) Control Routing Engine mastership on the Routing Engines in all member routers of the Virtual Chassis configuration.

**check**—(QFabric systems, MX104, MX480, MX960, MX2010, MX2020, and MX2008 routers, and PTX5000 routers only) (Optional) Available with the **switch**, **release**, and **acquire** options. Check graceful switchover status of the standby Routing Engine before toggling mastership between Routing Engines.

**interconnect-device *name***—(QFabric systems only) (Optional) Control Routing Engine mastership on the Routing Engines on an Interconnect device.

**lcc *number***—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Control Routing Engine mastership on the Routing Engines in the local Virtual Chassis member.



**member *member-id***—(MX Series routers only) (Optional) Control Routing Engine mastership on the Routing Engines of the specified member in the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**no-confirm**—(Optional) Do not request confirmation for the switch.

**node-group *name***—(QFabric systems only) (Optional) Control Routing Engine mastership on the Routing Engines on a Node group.

**scc**—(TX Matrix routers only) TX Matrix (switch-card chassis).

**sfc**—(TX Matrix Plus routers only) TX Matrix Plus router (or switch-fabric chassis).

**Additional Information** Because both Routing Engines are always running, the transition from one to the other as the master Routing Engine is immediate. However, the changeover interrupts communication to the System and Switch Board (SSB). The SSB takes several seconds to reinitialize the Flexible PIC Concentrators (FPCs) and restart the PICs. Interior gateway protocol (IGP) and BGP convergence times depend on the specific network environment.

By default, the Routing Engine in slot 0 (**RE0**) is the master and the Routing Engine in slot 1 (**RE1**) is the backup. To change the default master Routing Engine, include the **routing-engine** statement at the **[edit chassis redundancy]** hierarchy level in the configuration. For more information, see the *Junos OS Administration Library*

To have the backup Routing Engine become the master Routing Engine, use the **request chassis routing-engine master switch** command. If you use this command to change the master and then restart the chassis software for any reason, the master reverts to the default setting.



**NOTE:** Although the configurations on the two Routing Engines do not have to be the same and are not automatically synchronized, we recommend making both configurations the same.

**Required Privilege Level** maintenance

**Related Documentation**

- [show chassis routing-engine on page 733](#)
- *Configuring Routing Engine Redundancy*
- *Switching the Global Master and Backup Roles in a Virtual Chassis Configuration*

**List of Sample Output**

- [request chassis routing-engine master acquire on page 144](#)
- [request chassis routing-engine master switch on page 144](#)
- [request chassis routing-engine master switch \(Junos OS Evolved\) on page 144](#)
- [request chassis routing-engine master switch check on page 145](#)



**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### request chassis routing-engine master acquire

```
user@host> request chassis routing-engine master acquire
```

```
warning: Traffic will be interrupted while the PFE is re-initialized
```

```
warning: The other routing engine's file system could be corrupted
```

```
Reset other routing engine and become master ? [yes,no] (no)
```

### request chassis routing-engine master switch

```
user@host> request chassis routing-engine master switch
```

```
warning: Traffic will be interrupted while the PFE is re-initialized
```

```
Toggle mastership between Routing Engines ? [yes,no] (no) yes
```

```
Resolving mastership...
```

```
Complete. The other Routing Engine becomes the master.
```

Switch mastership back to the local Routing Engine:

```
user@host> request chassis routing-engine master switch
```

```
warning: Traffic will be interrupted while the PFE is re-initialized
```

```
Toggle mastership between routing engines ? [yes,no] (no) yes
```

```
Resolving mastership...
```

```
Complete. The local routing engine becomes the master.
```

### request chassis routing-engine master switch (Junos OS Evolved)

```
user@host> request chassis routing-engine master switch
```

```
Resolving mastership...
```

```
Complete. The other Routing Engine becomes the master.
```

Switching back to primary router:

```
user@host> request chassis routing-engine master switch
```

```
Resolving mastership...
```

```
Complete. The local Routing Engine becomes the master.
```

If you did not switch back and tried to enter configuration mode, you would get the following error message:

```
user@host> configure
```

```
error: unknown command: configure
```

```
Configuration is allowed only from the master Routing Engine.
```



### request chassis routing-engine master switch check

Usage shown for M Series, MX Series, and T Series routers.

```
{master}[edit]
```

```
user@host> request chassis routing-engine master switch check
```

```
warning: Standby Routing Engine is not ready for graceful switchover.
```

```
{master}[edit]
```

```
user@host> request chassis routing-engine master switch check
```

```
Switchover Ready
```

You can similarly check the backup Routing Engine.



## request system halt

- List of Syntax**
- Syntax on page 146
  - Syntax (EX Series Switches) on page 146
  - Syntax (PTX Series) on page 146
  - Syntax (TX Matrix Router) on page 146
  - Syntax (TX Matrix Plus Router) on page 147
  - Syntax (MX Series Router) on page 147
  - Syntax (QFX Series) on page 147

**Syntax**

```
request system halt
<at time>
<backup-routing-engine>
<both-routing-engines>
<other-routing-engine>
<in minutes>
<media (compact-flash | disk | removable-compact-flash | usb)>
<message "text">
```

**Syntax (EX Series Switches)**

```
request system halt
<all-members>
<at time>
<backup-routing-engine>
<both-routing-engines>
<in minutes>
<local>
<media (external | internal)>
<member member-id>
<message "text">
<other-routing-engine>
<slice slice>
```

**Syntax (PTX Series)**

```
request system halt
<at time>
<backup-routing-engine>
<both-routing-engines>
<other-routing-engine>
<in minutes>
<media (compact-flash | disk)>
<message "text">
```

**Syntax (TX Matrix Router)**

```
request system halt
<all-lcc | lcc number | scc>
<at time>
<backup-routing-engine>
<both-routing-engines>
<other-routing-engine>
<in minutes>
```



	<pre> &lt;media (compact-flash   disk)&gt; &lt;message "text"&gt; </pre>
Syntax (TX Matrix Plus Router)	<pre> request system halt &lt;all-chassis   all-lcc   lcc <i>number</i>   sfc <i>number</i>&gt; &lt;at <i>time</i>&gt; &lt;backup-routing-engine&gt; &lt;both-routing-engines&gt; &lt;other-routing-engine&gt; &lt;in <i>minutes</i>&gt; &lt;media (compact-flash   disk)&gt; &lt;message "text"&gt; </pre>
Syntax (MX Series Router)	<pre> request system halt &lt;all-members&gt; &lt;at <i>time</i>&gt; &lt;backup-routing-engine&gt; &lt;both-routing-engines&gt; &lt;in <i>minutes</i>&gt; &lt;local&gt; &lt;media (external   internal)&gt; &lt;member <i>member-id</i>&gt; &lt;message "text"&gt; &lt;other-routing-engine&gt; </pre>
Syntax (QFX Series)	<pre> request system halt &lt;all-members&gt; &lt;at <i>time</i>&gt; &lt;both-routing-engines&gt; &lt;director-device <i>director-device-id</i>&gt; &lt;in <i>minutes</i>&gt; &lt;local&gt; &lt;media &gt; &lt;member <i>member-id</i>&gt; &lt;message "text"&gt; &lt;other-routing-engine&gt; &lt;slice <i>slice</i>&gt; </pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p><b>other-routing-engine</b> option introduced in Junos OS Release 8.0.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p><b>director-device</b> option introduced for QFabric systems in Junos OS Release 12.2.</p> <p><b>backup-routing-engine</b> option introduced in Junos OS Release 13.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Stop the router or switch software.





**NOTE:** When you issue this command on an individual component—for example, a Node device—in a QFabric system, you will receive a warning that says “Hardware-based members will halt, Virtual Junos Routing Engines will reboot.” If you want to halt only one member of a Node group, issue this command with the `member` option on the Node device CLI, because you cannot issue this command from the QFabric CLI. Also, issuing this command might cause traffic loss on an individual component.

When you issue this command on a QFX5100 switch, you are not prompted to reboot. You must power cycle the switch to reboot.



**NOTE:** For the routers with the Routing Engines RE-S-2x00x6, RE-PTX-2x00x8, and RE-S-2x00x8, this command is deprecated and might be removed completely in a future release.

On these routers, this command is replaced with the `request vmhost halt` command which provides similar functionality.

**Options** **none**—Stop the router or switch software immediately.

**all-chassis**—(TX Matrix and TX Matrix Plus routers only) (Optional) Halt all chassis.

**all-lcc**—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, halt all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus router, halt all T1600 routers (or line-card chassis) connected to the TX Matrix Plus router.

**all-members**—(Optional) Halt all members of the Virtual Chassis configuration.

**at time** —(Optional) Time at which to stop the software, specified in one of the following ways:

- **now**—Stop the software immediately. This is the default.
- **+minutes**—Number of minutes from now to stop the software.
- **yyymmddhhmm**—Absolute time at which to stop the software, specified as year, month, day, hour, and minute.
- **hh:mm**—Absolute time on the current day at which to stop the software.

**backup-routing-engine**—(Optional) Halt the backup Routing Engine. This command halts the backup Routing Engine, regardless from which Routing Engine the command is executed. For example, if you issue the command from the master Routing Engine, the backup Routing Engine is halted. If you issue the command from the backup Routing Engine, the backup Routing Engine is halted.



**both-routing-engines**—(Optional) Halt both Routing Engines at the same time.

**director-device *director-device-id***—(QFabric systems only) Halt a specific Director device.

**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, halt a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, halt a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(Optional) Halt the local Virtual Chassis member.

**in *minutes***—(Optional) Number of minutes from now to stop the software. This option is an alias for the at *+minutes* option.

**media (compact-flash | disk)**—(Optional) Boot medium for the next boot.

**media (external | internal)**—(EX Series and QFX Series switches and MX Series routers only) (Optional) Halt the boot media:

- **external**—Halt the external mass storage device.
- **internal**—Halt the internal flash device.

**member *member-id***—(Optional) Halt the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, *member-id* can only be 0 or 1.

**message "*text*"**—(Optional) Message to display to all system users before stopping the software.

**other-routing-engine**—(Optional) Halt the other Routing Engine from which the command is issued. For example, if you issue the command from the master Routing Engine, the backup Routing Engine is halted. Similarly, if you issue the command from the backup Routing Engine, the master Routing Engine is halted.

**scc**—(TX Matrix routers only) (Optional) Halt the TX Matrix router (or switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) Halt the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.



**slice *slice***—(EX Series and QFX Series switches only) (Optional) Halt a partition on the boot media. This option has the following suboptions:

- 1—Halt partition 1.
- 2—Halt partition 2.
- **alternate**—Reboot from the alternate partition.

**Additional Information** On the M7i router, the **request system halt** command does not immediately power down the Packet Forwarding Engine. The power-down process can take as long as 5 minutes.

On a TX Matrix router and TX Matrix Plus router if you issue the **request system halt** command on the master Routing Engine, all the master Routing Engines connected to the routing matrix are halted. If you issue this command on the backup Routing Engine, all the backup Routing Engines connected to the routing matrix are halted.



**NOTE:** If you have a router or switch with two Routing Engines and you want to shut the power off to the router or switch or remove a Routing Engine, you must first halt the backup Routing Engine (if it has been upgraded), and then halt the master Routing Engine. To halt a Routing Engine, issue the **request system halt** command. You can also halt both Routing Engines at the same time by issuing the **request system halt both-routing-engines** command.

**Required Privilege Level** maintenance

**Related Documentation**

- [clear system reboot on page 115](#)
- [request system power-off on page 153](#)
- *request vmhost halt*
- *show virtual-chassis*
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

**List of Sample Output**

- [request system halt on page 151](#)
- [request system halt \(In 2 Hours\) on page 151](#)
- [request system halt \(Immediately\) on page 151](#)
- [request system halt \(At 1:20 AM\) on page 151](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.



## Sample Output

### request system halt

```
user@host> request system halt
Halt the system ? [yes,no] (no) yes

*** FINAL System shutdown message from root@section2 ***
System going down IMMEDIATELY
Terminated
...
syncing disks... 11 8 done
The operating system has halted.
Please press any key to reboot.
```

### request system halt (In 2 Hours)

The following example, which assumes that the time is 5 PM (1700), illustrates three different ways to request that the system stop 2 hours from now:

```
user@host> request system halt at +120
user@host> request system halt in 120
user@host> request system halt at 19:00
```

### request system halt (Immediately)

```
user@host> request system halt at now
```

### request system halt (At 1:20 AM)

To stop the system at 1:20 AM, enter the following command. Because 1:20 AM is the next day, you must specify the absolute time.

```
user@host> request system halt at yymmdd120

request system halt at 120
Halt the system at 120? [yes,no] (no) yes
```



## request system logout

---

Syntax	<code>request system logout (pid <i>pid</i>   terminal <i>terminal</i>   user <i>username</i>) &lt;all&gt;</code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Log out users from the router or switch and the configuration database. If a user held the <b>configure exclusive</b> lock, this command clears the exclusive lock.
Options	<p><b>all</b>—(Optional) Log out all sessions owned by a particular PID, terminal session, or user. (On a TX Matrix or TX Matrix Plus router, this command is broadcast to all chassis.)</p> <p><b>pid <i>pid</i></b>—Log out the user session using the specified management process identifier (PID). The PID type must be management process.</p> <p><b>terminal <i>terminal</i></b>—Log out the user for the specified terminal session.</p> <p><b>user <i>username</i></b>—Log out the specified user.</p>
Required Privilege Level	configure
Related Documentation	<ul style="list-style-type: none"><li>• <i>Log a User Out of the Router</i></li></ul>
List of Sample Output	<a href="#">request system logout on page 152</a>
Output Fields	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### request system logout

```
user@host> request system logout user test all
Connection closed by foreign host.
```



## request system power-off

**List of Syntax**

- [Syntax on page 153](#)
- [Syntax \(EX Series Switches\) on page 153](#)
- [Syntax \(TX Matrix Router\) on page 153](#)
- [Syntax \(TX Matrix Plus Router\) on page 153](#)
- [Syntax \(MX Series Router\) on page 154](#)
- [Syntax \(QFX Series\) on page 154](#)

**Syntax**

```
request system power-off
<both-routing-engines>
<other-routing-engine>
<at time>
<in minutes>
<media (compact-flash | disk | removable-compact-flash | usb)>
<message "text">
```

**Syntax (EX Series Switches)**

```
request system power-off
<all-members>
<at time>
<both-routing-engines>
<in minutes>
<local>
<media (external | internal)>
<member member-id>
<message "text">
<other-routing-engine>
<slice slice>
```

**Syntax (TX Matrix Router)**

```
request system power-off
<all-chassis | all-lcc | lcc number | scc>
<both-routing-engines>
<other-routing-engine>
<at time>
<in minutes>
<media (compact-flash | disk)>
<message "text">
```

**Syntax (TX Matrix Plus Router)**

```
request system power-off
<all-chassis | all-lcc | lcc number | sfc number>
<both-routing-engines>
<other-routing-engine>
<at time>
<in minutes>
<media (compact-flash | disk)>
<message "text">
```



**Syntax (MX Series Router)**

```
request system power-off
<all-members>
<at time>
<both-routing-engines>
<in minutes>
<local>
<media (external | internal)>
<member member-id>
<message "text">
<other-routing-engine>
```

**Syntax (QFX Series)**

```
request system power-off
<at time>
<in minutes>
<media (external | internal)>
<message "text">
<slice slice>
```

**Release Information**

Command introduced in Junos OS Release 8.0.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
 Command introduced in Junos OS Release 11.1 for the QFX Series.  
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**

Power off the Routing Engines.



**NOTE:** When you issue this command on an individual component in a QFabric system, you will receive a warning that says “Hardware-based members will halt, Virtual Junos Routing Engines will reboot.” If you want to halt only one member, use the `member` option. You cannot issue this command from the QFabric CLI.



**NOTE:** For a standalone chassis (such as MX Series, PTX Series, and T Series routers), the request to power off the system is applicable only to the Routing Engines. When you request to power off both Routing Engines, all the FPCs in the chassis shut down after approximately 10 minutes and the chassis fans run at full speed. The FPCs shut down because they no longer have communication with the Routing Engines and an Inter-Integrated Circuit (I2C) timeout occurred.





**NOTE:** For the routers with Routing Engines RE-S-2x00x6, RE-PTX-2x00x8, and RE-S-2x00x8, this command is deprecated and might be removed completely in a future release.

On these routers, this command is replaced with the **request vmhost power-off** command which provides similar functionality.

**Options** **none**—Power off the router or switch software immediately.

**all-chassis**—(Optional) (TX Matrix and TX Matrix Plus router only) Power off all Routing Engines in the chassis.

**all-lcc**—(Optional) (TX Matrix and TX Matrix Plus router only) On a TX Matrix router, power off all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus router, power off all T1600 routers (or line-card chassis) connected to the TX Matrix Plus router.

**all-members**—(EX4200 switches and MX Series routers only) (Optional) Power off all members of the Virtual Chassis configuration.

**at time**—(Optional) Time at which to power off the software, specified in one of the following ways:

- **now**—Power off the software immediately. This is the default.
- **+minutes**—Number of minutes from now to power off the software.
- **yymmddhhmm**—Absolute time at which to power off the software, specified as year, month, day, hour, and minute.
- **hh:mm**—Absolute time on the current day at which to power off the software.

**both-routing-engines**—(Optional) Power off both Routing Engines at the same time.

**in minutes**—(Optional) Number of minutes from now to power off the software. This option is an alias for the **at +minutes** option.

**lcc number**—(Optional) (TX Matrix and TX Matrix Plus router only) On a TX Matrix router, power off a T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, power off a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.



- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(EX4200 switches and MX Series routers only) (Optional) Power off the local Virtual Chassis member.

**media (compact-flash | disk)**—(Optional) Boot medium for the next boot.

**media (external | internal)**—(EX Series and QFX Series switches and MX Series routers only) (Optional) Power off the boot media:

- **external**—Power off the external mass storage device.
- **internal**—Power off the internal flash device.

**member *member-id***—(EX4200 switches and MX Series routers only) (Optional) Power off the specified member of the Virtual Chassis configuration. For EX4200 switches, replace ***member-id*** with a value from 0 through 9. For an MX Series Virtual Chassis, replace ***member-id*** with a value of 0 or 1.

**message "*text*"**—(Optional) Message to display to all system users before powering off the software.

**other-routing-engine**—(Optional) Power off the other Routing Engine from which the command is issued. For example, if you issue the command from the master Routing Engine, the backup Routing Engine is halted. Similarly, if you issue the command from the backup Routing Engine, the master Routing Engine is halted.

**scc**—(Optional) (TX Matrix router only) Power off only the master Routing Engine or the backup Routing Engine on the TX Matrix router (or switch-card chassis). If you issue the command from the master Routing Engine, the master SCC is powered off. If you issue the command from the backup Routing Engine, the backup SCC is powered off.

**sfc *number***—(Optional) (TX Matrix Plus router only) Power off only the master Routing Engine or the backup Routing Engine on the TX Matrix Plus router (or switch-fabric chassis). If you issue the command from the master Routing Engine, the master SFC is powered off. If you issue the command from the backup Routing Engine, the backup SFC is powered off. Replace ***number*** with zero.

**slice *slice***—(EX Series and QFX Series switches only) (Optional) Power off a partition on the boot media. This option has the following suboptions:

- **1**—Power off partition 1.
- **2**—Power off partition 2.
- **alternate**—Reboot from the alternate partition.



**Additional Information** On a routing matrix composed of a TX Matrix router and T640 routers, if you issue the **request system power-off** command on the TX Matrix master Routing Engine, all the master Routing Engines connected to the routing matrix are powered off. If you issue this command on the backup Routing Engine, all the backup Routing Engines connected to the routing matrix are powered off.

Likewise, on a routing matrix composed of a TX Matrix Plus router and T1600 routers, if you issue the **request system power-off** command on the TX Matrix Plus master Routing Engine, all the master Routing Engines connected to the routing matrix are powered off. If you issue this command on the backup Routing Engine, all the backup Routing Engines connected to the routing matrix are powered off.

If you issue the **request system power-off both-routing-engines** command on the TX Matrix or TX Matrix Plus router, all the Routing Engines on the routing matrix are powered off.

**Required Privilege Level** maintenance

**List of Sample Output** [request system power-off on page 157](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### [request system power-off](#)

```
user@host> request system power-off message "This router will be powered off in 30 minutes.
Please save your data and log out immediately;"
```

```
warning: This command will not halt the other routing-engine.
If planning to switch off power, use the both-routing-engines option.
Power Off the system ? [yes,no] (no) yes
```

```
*** FINAL System shutdown message from remote@nutmeg ***
System going down IMMEDIATELY
```

```
This router will be powered off in 30 minutes. Please save your data and log out
immediately.
```

```
Shutdown NOW!
[pid 5177]
```



## request system reboot

<b>List of Syntax</b>	<a href="#">Syntax on page 158</a> <a href="#">Syntax (EX Series Switches and EX Series Virtual Chassis) on page 158</a> <a href="#">Syntax (MX Series Routers and MX Series Virtual Chassis, EX9200 Switches and EX9200 Virtual Chassis) on page 158</a> <a href="#">Syntax (QFabric Systems) on page 158</a> <a href="#">Syntax (QFX Series Switches and QFX Series Virtual Chassis, Virtual Chassis Fabric) on page 159</a> <a href="#">Syntax (TX Matrix Router) on page 159</a> <a href="#">Syntax (TX Matrix Plus Router) on page 159</a>
<b>Syntax</b>	<pre>request system reboot &lt;at <i>time</i>&gt; &lt;both-routing-engines&gt; &lt;in <i>minutes</i>&gt; &lt;media (compact-flash   disk   removable-compact-flash   usb)&gt; &lt;message "<i>text</i>"&gt; &lt;other-routing-engine&gt;</pre>
<b>Syntax (EX Series Switches and EX Series Virtual Chassis)</b>	<pre>request system reboot &lt;all-members   local   member <i>member-id</i>&gt; &lt;at <i>time</i>&gt; &lt;in <i>minutes</i>&gt; &lt;media (external   internal)&gt;   &lt;media (compact-flash   disk   removable-compact-flash   usb)&gt; &lt;message "<i>text</i>"&gt; &lt;slice <i>slice</i>&gt;</pre>
<b>Syntax (MX Series Routers and MX Series Virtual Chassis, EX9200 Switches and EX9200 Virtual Chassis)</b>	<pre>request system reboot &lt;all-members   local   member <i>member-id</i>&gt; &lt;at <i>time</i>&gt; &lt;both-routing-engines&gt; &lt;in <i>minutes</i>&gt; &lt;media (external   internal)&gt;   &lt;media (compact-flash   disk   usb)&gt;   &lt;junos   network   oam   usb&gt; &lt;message "<i>text</i>"&gt; &lt;other-routing-engine&gt;</pre>
<b>Syntax (QFabric Systems)</b>	<pre>request system reboot &lt;all &lt;graceful&gt;&gt; &lt;at <i>time</i>&gt; &lt;director-device <i>name</i>&gt; &lt;director-group &lt;graceful&gt;&gt; &lt;fabric &lt;graceful&gt;&gt; &lt;in <i>minutes</i>&gt; &lt;in-service&gt; &lt;media&gt;</pre>



	<pre> &lt;message "text"&gt; &lt;node-group name&gt; &lt;slice slice&gt; </pre>
<b>Syntax (QFX Series Switches and QFX Series Virtual Chassis, Virtual Chassis Fabric)</b>	<pre> request system reboot &lt;all-members   local   member member-id&gt; &lt;at time&gt; &lt;in minutes&gt; &lt;in-service&gt; &lt;hypervisor&gt; &lt;junos   network   oam   usb&gt; &lt;message "text"&gt; &lt;slice slice&gt; </pre>
<b>Syntax (TX Matrix Router)</b>	<pre> request system reboot &lt;all-chassis   all-lcc   lcc number   scc&gt; &lt;at time&gt; &lt;both-routing-engines&gt; &lt;in minutes&gt; &lt;media (compact-flash   disk)&gt; &lt;message "text"&gt; &lt;other-routing-engine&gt; </pre>
<b>Syntax (TX Matrix Plus Router)</b>	<pre> request system reboot &lt;all-chassis   all-lcc   lcc number   sfc number&gt; &lt;at time&gt; &lt;both-routing-engines&gt; &lt;in minutes&gt; &lt;media (compact-flash   disk)&gt; &lt;message "text"&gt; &lt;other-routing-engine&gt; &lt;partition (1   2   alternate)&gt; </pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Option <b>other-routing-engine</b> introduced in Junos OS Release 8.0.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Option <b>sfc</b> introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Option <b>partition</b> changed to <b>slice</b> in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Option <b>both-routing-engines</b> introduced in Junos OS Release 12.1.</p>
<b>Description</b>	<p>Reboot the software.</p> <p>This command can be used on standalone devices and on devices supported in a Virtual Chassis, Virtual Chassis Fabric, or QFabric system.</p>





**NOTE:** Starting with Junos OS Release 15.1F3, the statement `request system reboot` reboots only the guest operating system on the PTX5000 with RE-PTX-X8-64G and, MX240, MX480, and MX960 with RE-S-X6-64G.

Starting with Junos OS Release 15.1F5, the statement `request system reboot` reboots only the guest operating system on the MX2010, and MX2020 with REMX2K-X8-64G.



**NOTE:** Starting from Junos OS Release 17.2R1, PTX10008 routers do not support the `request system reboot` command. Starting from Junos OS Release 17.4R1, PTX10016 routers do not support the `request system reboot` command. Use the `request vmhost reboot` command instead of the `request system reboot` command on the PTX10008 and PTX10016 routers to reboot the Junos OS software package or bundle on the router. See *request vmhost reboot*.



**NOTE:** On a QFabric system, to avoid traffic loss on the network Node group, switch mastership of the Routing Engine to the backup Routing Engine, and then reboot.

**Options** The options described here are not all supported on every platform or release of Junos OS. Refer to the Syntax sections for the options commonly available on each type of platform.

**none**—Reboot the software immediately.

**all-chassis**—(Optional) On a TX Matrix router or TX Matrix Plus router, reboot all routers connected to the TX Matrix or TX Matrix Plus router, respectively.

**all-lcc**—(Optional) On a TX Matrix router or TX Matrix Plus router, reboot all line card chassis connected to the TX Matrix or TX Matrix Plus router, respectively.

**all-members | local | member *member-id***—(Optional) Specify which member of the Virtual Chassis to reboot:

- **all-members**—Reboots each switch that is a member of the Virtual Chassis.
- **local**—Reboots only the local switch (switch where you are logged in).
- **member *member-id***—Reboots the specified member switch of the Virtual Chassis

**at *time***—(Optional) Time at which to reboot the software, specified in one of the following ways:



- **now**—Stop or reboot the software immediately. This is the default.
- **+minutes**—Number of minutes from now to reboot the software.
- **yymmddhhmm**—Absolute time at which to reboot the software, specified as year, month, day, hour, and minute.
- **hh:mm**—Absolute time on the current day at which to stop the software, specified in 24-hour time.

**both-routing-engines**—(Optional) Reboot both Routing Engines at the same time.

**hypervisor**—(Optional) Reboot Junos OS, host OS, and any installed guest VMs.

**in minutes**—(Optional) Number of minutes from now to reboot the software. This option is an alias for the **at +minutes** option.

**in-service**—(Optional) Enables you to reset the software state (no software version change) of the system with minimal disruption in data and control traffic.

**junos**—(Optional) Reboot from the Junos OS (main) volume.

**lcc number**—(Optional) Line-card chassis (LLC) number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**media (compact-flash | disk | removable-compact-flash | usb)**—(Optional) Use the indicated boot medium for the next boot.

**media (external | internal)**—(Optional) Use the indicated boot medium for the next boot:

- **external**—Reboot the device using a software package stored on an external boot source, such as a USB flash drive.
- **internal**—Reboot the device using a software package stored in an internal memory source.

**message "text"**—(Optional) Message to display to all system users before stopping or rebooting the software.



**network**—(Optional) Reboot using the Preboot Execution Environment (PXE) boot method over the network.

**oam**—(Optional) Reboot from the maintenance volume (OAM volume, usually the compact flash drive).

**other-routing-engine**—(Optional) Reboot the other Routing Engine from which the command is issued. For example, if you issue the command from the master Routing Engine, the backup Routing Engine is rebooted. Similarly, if you issue the command from the backup Routing Engine, the master Routing Engine is rebooted.

**partition *partition***—(Optional) Reboot using the specified partition on the boot media. This option is equivalent to the **slice** option that is supported on some devices. Specify one of the following *partition* values:

- **1**—Reboot from partition 1.
- **2**—Reboot from partition 2.
- **alternate**—Reboot from the alternate partition.

**scc**—(Optional) Reboot the Routing Engine on the TX Matrix switch-card chassis. If you issue the command from *re0*, *re0* is rebooted. If you issue the command from *re1*, *re1* is rebooted.

**sfc *number***—(Optional) Reboot the Routing Engine on the TX Matrix Plus switch-fabric chassis. If you issue the command from *re0*, *re0* is rebooted. If you issue the command from *re1*, *re1* is rebooted. Replace *number* with 0.

**slice *slice***—(Optional) Reboot using the specified partition on the boot media. This option was originally the **partitiion** option but was renamed to **slice** on EX Series and QFX Series switches. Specify one of the following *slice* values:

- **1**—Reboot from partition 1.
- **2**—Reboot from partition 2.
- **alternate**—Reboot from the alternate partition (which did not boot the switch at the last bootup).



**NOTE:** The slice option is not supported on QFX Series switches that have no alternate slice when Junos OS boots as a Virtual Machine (VM). To switch to the previous version of Junos OS, issue the **request system software rollback** command.

---

**usb**—(Optional) Reboot from a USB device.



The following options are available only on QFabric Systems:

- all**—(Optional) Reboots the software on the Director group, fabric control Routing Engines, fabric manager Routing Engines, Interconnect devices, and network and server Node groups.
- director-device *name***—(Optional) Reboots the software on the Director device and the default partition (QFabric CLI).
- director-group**—(Optional) Reboots the software on the Director group and the default partition (QFabric CLI).
- fabric**—(Optional) Reboots the fabric control Routing Engines and the Interconnect devices.
- node-group *name***—(Optional) Reboots the software on a server Node group or a network Node group.
- graceful**—(Optional) Enables the QFabric component to reboot with minimal impact to network traffic. This sub-option is only available for the **all**, **fabric**, and **director-group** options.

**Additional Information** Reboot requests are recorded in the system log files, which you can view with the **show log** command (see *show log*). Also, the names of any running processes that are scheduled to be shut down are changed. You can view the process names with the **show system processes** command (see *show system processes*).

On a TX Matrix or TX Matrix Plus router, if you issue the **request system reboot** command on the master Routing Engine, all the master Routing Engines connected to the routing matrix are rebooted. If you issue this command on the backup Routing Engine, all the backup Routing Engines connected to the routing matrix are rebooted.



**NOTE:** Before issuing the **request system reboot** command on a TX Matrix Plus router with no options or the **all-chassis**, **all-lcc**, **lcc *number***, or **sfc** options, verify that master Routing Engine for all routers in the routing matrix are in the same slot number. If the master Routing Engine for a line-card chassis is in a different slot number than the master Routing Engine for a TX Matrix Plus router, the line-card chassis might become logically disconnected from the routing matrix after the **request system reboot** command.



**NOTE:** To reboot a router that has two Routing Engines, reboot the backup Routing Engine (if you have upgraded it) first, and then reboot the master Routing Engine.



**Required Privilege Level** maintenance

**Related Documentation**

- [clear system reboot on page 115](#)
- [request system halt on page 146](#)
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)
- [request vmhost reboot](#)

**List of Sample Output**

- [request system reboot on page 164](#)
- [request system reboot \(at 2300\) on page 164](#)
- [request system reboot \(in 2 Hours\) on page 164](#)
- [request system reboot \(Immediately\) on page 164](#)
- [request system reboot \(at 1:20 AM\) on page 164](#)
- [request system reboot in-service on page 165](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### request system reboot

```
user@host> request system reboot
Reboot the system ? [yes,no] (no)
```

### request system reboot (at 2300)

```
user@host> request system reboot at 2300 message ?Maintenance time!?
Reboot the system ? [yes,no] (no) yes

shutdown: [pid 186]
*** System shutdown message from root@test.example.net ***
System going down at 23:00
```

### request system reboot (in 2 Hours)

The following example, which assumes that the time is 5 PM (17:00), illustrates three different ways to request the system to reboot in two hours:

```
user@host> request system reboot at +120
user@host> request system reboot in 120
user@host> request system reboot at 19:00
```

### request system reboot (Immediately)

```
user@host> request system reboot at now
```

### request system reboot (at 1:20 AM)

To reboot the system at 1:20 AM, enter the following command. Because 1:20 AM is the next day, you must specify the absolute time.



```

user@host> request system reboot at 06060120

request system reboot at 120
Reboot the system at 120? [yes,no] (no) yes

```

### request system reboot in-service

```

user@switch> request system reboot in-service

Reboot the system ? [yes,no]
[Feb 22 02:37:04]:ISSU: Validating Image

PRE ISSR CHECK:
-----
PFE Status                : Online
Member Id zero             : Valid
VC not in mixed or fabric mode : Valid
Member is single node vc   : Valid
BFD minimum-interval check done : Valid
GRES enabled               : Valid
NSR enabled                : Valid
drop-all-tcp not configured : Valid
Ready for ISSR             : Valid

warning: Do NOT use /user during ISSR. Changes to /user during ISSR may get lost!
Current image is jinstall-jcp-i386-flex-18.1.img
[Feb 22 02:37:14]:ISSU: Preparing Backup RE
Prepare for ISSR
[Feb 22 02:37:19]:ISSU: Backup RE Prepare Done
Spawning the backup RE
Spawn backup RE, index 1 successful
Starting secondary dataplane
Second dataplane container started
GRES in progress
Waiting for backup RE switchover ready
GRES operational
Copying home directories
Copying home directories successful
Initiating Chassis In-Service-Upgrade for ISSR
Chassis ISSU Started
[Feb 22 02:42:55]:ISSU: Preparing Daemons
[Feb 22 02:43:00]:ISSU: Daemons Ready for ISSU
[Feb 22 02:43:05]:ISSU: Starting Upgrade for FRUs
[Feb 22 02:43:15]:ISSU: FPC Warm Booting
[Feb 22 02:44:16]:ISSU: FPC Warm Booted
[Feb 22 02:44:27]:ISSU: Preparing for Switchover
[Feb 22 02:44:31]:ISSU: Ready for Switchover
Checking In-Service-Upgrade status
  Item          Status          Reason
  FPC 0         Online (ISSU)
Send ISSR done to chassisd on backup RE
Chassis ISSU Completed
Removing dcpfe0 eth1 128.168.0.16 IP
Bringing down bme00
Post Chassis ISSU processing done
[Feb 22 02:44:33]:ISSU: IDLE
Stopping primary dataplane
Clearing ISSU states
Console and management sessions will be disconnected. Please login again.

```




```
device_handoff successful ret: 0
Shutdown NOW!
[pid 14305]

*** FINAL System shutdown message from root@sw-duckhorn-01 ***

System going down IMMEDIATELY
```



## set chassis display message

<b>List of Syntax</b>	<a href="#">Syntax on page 167</a> <a href="#">Syntax (TX Matrix Router) on page 167</a> <a href="#">Syntax (TX Matrix Plus Router) on page 167</a>
<b>Syntax</b>	<pre>set chassis display message "message" &lt;permanent&gt;</pre>
<b>Syntax (TX Matrix Router)</b>	<pre>set chassis display message "message" (lcc number   scc) &lt;permanent&gt;</pre>
<b>Syntax (TX Matrix Plus Router)</b>	<pre>set chassis display message "message" (fpc-slot slot-number   lcc number   sfc number) &lt;permanent&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option for TX Matrix Plus router introduced in Junos OS Release 9.6.</p>
<b>Description</b>	<p>Display or stop a text message on the craft interface display, which is on the front of the router, or on the LCD panel display on the switch. The craft interface alternates the display of text messages with standard craft interface messages three times, switching between messages every 60 seconds.</p>
	<p> <b>NOTE:</b> On T Series routers, when this command is executed with the <b>permanent</b> option, the display of the text message alternates with that of the standard craft interface message continuously every 60 seconds.</p>
	<p>By default, on both the router and the switch, the text message is displayed for 5 minutes. The craft interface display has four 20-character lines. The LCD panel display has two 16-character lines, and text messages appear only on the second line.</p>
<b>Options</b>	<p><b>"message"</b>—Message to display. On the craft interface display, if the message is longer than 20 characters, it wraps onto the next line. If a word does not fit on one line, the entire word moves down to the next line. Any portion of the message that does not fit on the display is truncated. An empty pair of quotation marks (" ") deletes the text message from the craft interface display. On the LCD panel display, the message is limited to 16 characters.</p> <p><b>fpc-slot slot-number</b>—(TX Matrix Plus routers and EX4200 and QFX Series only) On the router or switch, display the text message on the craft interface for a specific Flexible PIC Concentrator (FPC). Replace <b>slot-number</b> with a value from <b>0</b> through <b>31</b>. On the switch, display the text message for a specific member of a Virtual Chassis, where</p>



**fpc-slot slot-number** corresponds to the member ID. Replace **slot-number** with a value from 0 through 9. On the QFX Series, the **slot-number** is always 0. On a TX Matrix Plus router with 3D SIBs replace **slot-number** with a value from 0 through 63.

**lcc number**—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**permanent**—(Optional) Display a text message on the craft interface display or LCD panel display permanently.

**scc**—(TX Matrix routers only) Display the text message on the craft interface display of the TX Matrix router (switch-card chassis).

**sfc number**—(TX Matrix Plus routers only) Display the text message on the craft interface display of the TX Matrix Plus router (or switch-fabric chassis).

**Required Privilege Level** clear

**Related Documentation**

- [Configuring the LCD Panel on EX Series Switches \(CLI Procedure\)](#)
- [clear chassis display message on page 111](#)
- [show chassis craft-interface](#)

**List of Sample Output** [set chassis display message \(Creating\) on page 168](#)  
[set chassis display message \(Deleting\) on page 169](#)

**Output Fields** See *show chassis craft-interface* for an explanation of output fields.

## Sample Output

### set chassis display message (Creating)

The following example shows how to set the display message and verify the result:

```
user@host> set chassis display message "NOC contact Dusty (888) 555-1234"
```



```
message sent
```

```
user@host> show chassis craft-interface
```

```
Red alarm:    LED off, relay off
Yellow alarm: LED off, relay off
Host OK LED:  On
Host fail LED: Off
FPCs         0 1 2 3 4 5 6 7
```

```
-----
Green .. *.. * *.
Red      .....
```

```
LCD screen:
```

```
+-----+
|NOC contact Dusty |
|(888) 555-1234    |
+-----+
```

### set chassis display message (Deleting)

The following example shows how to delete the display message and verify that the message is removed:

```
user@host> set chassis display message ""
```

```
message sent
```

```
user@host> show chassis craft-interface
```

```
Red alarm:    LED off, relay off
Yellow alarm: LED off, relay off
Host OK LED:  On
Host fail LED: Off
FPCs         0 1 2 3 4 5 6 7
```

```
-----
Green .. *.. * *.
Red      .....
```

```
LCD screen:
```

```
+-----+
|host      |
|Up: 0+17:05:47|
|          |
|Temperature OK|
+-----+
```



## set date

---

Syntax	<code>set date (<i>date-time</i> ntp &lt;<i>key authentication-key number</i>&gt; &lt;<i>servers</i>&gt; &lt;<i>source-address source-address</i>&gt;)</code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p><b>key</b> option introduced in Junos OS Release 12.1R2</p>
Description	Set the date and time.
Options	<p><b><i>date-time</i></b>—Date and time. Enter this string inside quotation marks.</p> <p><b>ntp</b>—Use a Network Time Protocol (NTP) server to synchronize the current date and time setting on the router or switch.</p> <p><b><i>key authentication-key number</i></b>—(Optional) Specify a key number to authenticate the NTP server used to synchronize the date and time. You must specify the same key number used to authenticate the server configured at the <b>[edit system ntp authentication-key <i>number</i>]</b> hierarchy level.</p> <p><b><i>servers</i></b>—(Optional) Specify the IP address of one or more NTP servers.</p> <p><b>source-address <i>source-address</i></b>—Specify the source address that the router or switch uses to contact the remote NTP server.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li>• <i>Setting the Date and Time</i></li></ul>
List of Sample Output	<a href="#">set date on page 170</a>
Output Fields	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### set date

```
user@host> set date ntp
21 Apr 17:22:02 ntpdate[3867]: step time server 172.17.27.46 offset 8.759252 sec
```



## show chassis alarms

**List of Syntax**

- Syntax on page 171
- Syntax (TX Matrix Routers) on page 171
- Syntax (TX Matrix Plus Routers) on page 171
- Syntax (MX Series Routers) on page 171
- Syntax (MX104, MX2010, MX2020, and MX2008 Universal Routing Platforms) on page 171
- Syntax (MX10003, MX204, and MX10008) on page 171
- Syntax (QFX Series) on page 171
- Syntax (OCX Series) on page 171
- Syntax (PTX Series Packet Transport Routers) on page 172
- Syntax (ACX Series Universal Metro Routers) on page 172
- Syntax (EX9251, EX9253 Switches) on page 172

**Syntax** show chassis alarms

**Syntax (TX Matrix Routers)** show chassis alarms  
<lcc *number* | scc>

**Syntax (TX Matrix Plus Routers)** show chassis alarms  
<lcc *number* | sfc *number*>

**Syntax (MX Series Routers)** show chassis alarms  
<all-members>  
<local>  
<member *member-id*>

**Syntax (MX104, MX2010, MX2020, and MX2008 Universal Routing Platforms)** show chassis alarms  
<satellite [slot-id *slot-id*]>

**Syntax (MX10003, MX204, and MX10008)** show chassis alarms

**Syntax (QFX Series)** show chassis alarms  
<interconnect-device *name*>  
<node-device *name*>

**Syntax (OCX Series)** show chassis alarms



Syntax (PTX Series Packet Transport Routers)	show chassis alarms
Syntax (ACX Series Universal Metro Routers)	show chassis alarms
Syntax (EX9251, EX9253 Switches)	show chassis alarms
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX 2010 and MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3 for Junos Fusion.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Universal Routing Platforms.</p>
Description	Display information about the conditions that have been configured to trigger alarms.
Options	<p><b>none</b>—Display information about the conditions that have been configured to trigger alarms.</p> <p><b>all-members</b>—(MX Series routers only) (Optional) Display information about alarm conditions for all the member routers of the Virtual Chassis configuration.</p> <p><b>interconnect-device <i>name</i></b>—(QFabric systems only) (Optional) Display information about alarm conditions for the Interconnect device.</p> <p><b>lcc <i>number</i></b>—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.</p>



Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display information about alarm conditions for the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display information about alarm conditions for the specified member of the Virtual Chassis configuration. Replace *member-id* variable with a value of 0 or 1.

**node-device *name***—(QFabric systems only) (Optional) Display information about alarm conditions for the Node device.

**satellite [*slot-id slot-id*]**—(Junos Fusion only) (Optional) Display information about alarm conditions for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scc**—(TX Matrix router only) (Optional) Show information about the TX Matrix router (switch-card chassis).

**sfc *number***—(TX Matrix Plus router only) (Optional) Show information about the respective TX Matrix Plus router, which is the switch-fabric chassis. Replace *number* variable with 0.

**Additional Information** Chassis alarms are preset. You cannot modify them.

You cannot clear the alarms for chassis components. Instead, you must remedy the cause of the alarm. When a chassis alarm LED is lit, it indicates that you are running the router or switch in a manner that we do not recommend.

On routers, you can manually silence external devices connected to the alarm relay contacts by pressing the alarm cutoff button, located on the craft interface. Silencing the device does not remove the alarm messages from the display (if present on the router) or extinguish the alarm LEDs. In addition, new alarms that occur after you silence an external device reactivate the external device.



**NOTE:** MX10003 routers do not support craft interface.



In Junos OS release 11.1 and later, alarms for fans also show the slot number of the fans in the CLI output.

In Junos OS Release 11.2 and later, the command output on EX8200 switches shows the detailed location (**Plane/FPC/PFE**) for link errors in the chassis.

In Junos OS Release 10.2 and later, an alarm is shown on T Series routers for a standby SONET Clock Generator (SCG) that is offline or absent.

You may often see the following error messages, in which only the error code is shown and no other information is provided:

```
Apr 12 08:04:10 send: red alarm set, device FPC 6, reason FPC 6 Major Errors
- Error code: 257
Apr 12 08:04:19 send: red alarm set, device FPC 1, reason FPC 1 Major Errors
- Error code: 559
```

To understand what CM\_ALARM error codes mean, you need to first identify the structure of the CM Alarm codes. A CM\_ALARM code has the following structure:

Bits:	Error type:
1-31	Major (1)
0	Minor (0)

According to the table above, the LSB (bit 0) identifies the **Error Type** (major alarm, if the bit is set and minor alarm if the bit is unset). The rest of the bits (1 - 31) identify the actual error code.

Take an example of the following error code, which was logged on a T1600:

```
Apr 12 08:04:10 send: red alarm set, device FPC 1, reason FPC 1 Major Errors
- Error code: 559
```

First, you have to convert 559 to binary; that is **1000101111**. The LSB in this case is 1, which means that this is a major alarm. After removing the LSB, you are left with **100010111**, which is equal to 279 in decimal. This is the actual error code, its meaning can be found from the following list:

Chip Type: L Chip	Code
CMALARM_LCHIP_LOUT_DESRD_PARITY_ERR	1
CMALARM_LCHIP_LOUT_DESRD_UNINIT_ERR	2
CMALARM_LCHIP_LOUT_DESRD_ILLEGALLINK_ERR	3
CMALARM_LCHIP_LOUT_DESRD_ILLEGALSIZE_ERR	4
CMALARM_LCHIP_LOUT_HDRF_TOERR_ERR	5



CMALARM_LCHIP_LOUT_HDRF_PARITY_ERR	6
CMALARM_LCHIP_LOUT_HDRF_UCERR_ERR	7
CMALARM_LCHIP_LOUT_NLIF_CRCDROP_ERR	8
CMALARM_LCHIP_LOUT_NLIF_CRCERR_ERR	9
CMALARM_LCHIP_UCODE_TIMEOUT_ERR	10
CMALARM_LCHIP_LIN_SRCTL_ACCT_DROP_ERR	11
CMALARM_LCHIP_LIN_SRCTL_ACCT_ADDR_SIZE_ERR	12
CMALARM_LCHIP_SRAM_PARITY_ERR	13
CMALARM_LCHIP_UCODE_OVFLW_ERR	14
CMALARM_LCHIP_LOUT_HDRF_MTU_ERR	15

Chip Type: M Chip	Code
CMALARM_MCHIP_ECC_UNCORRECT_ERR	128

Chip Type: N Chip	Code
CMALARM_NCHIP_RDDMA_JBUS_TIMEOUT_ERR	256
CMALARM_NCHIP_RDDMA_FIFO_OVFLW_ERR	257
CMALARM_NCHIP_RDDMA_FIFO_UNFLW_ERR	258
CMALARM_NCHIP_RDDMA_SIZE_ERR	259
CMALARM_NCHIP_RDDMA_JBUS_CRC_ERR	260
CMALARM_NCHIP_WRDMA_PKTR_ERR	261
CMALARM_NCHIP_WRDMA_PKT_CRC_ERR	262
CMALARM_NCHIP_WRDMA_JBUS_TIMEOUT_ERR	263
CMALARM_NCHIP_WRDMA_FIFO_OVFLW_ERR	264
CMALARM_NCHIP_WRDMA_FIFO_UNFLW_ERR	265
CMALARM_NCHIP_WRDMA_PKT_LEN_ERR	266
CMALARM_NCHIP_WRDMA_JBUS_CRC_ERR	267



CMALARM_NCHIP_PKTR_DMA_AGE_ERR	268
CMALARM_NCHIP_PKTR_ICELLSIG_ERR	269
CMALARM_NCHIP_PKTR_FTTL_ERR	270
CMALARM_NCHIP_RODR_OFFSET_OVFLW_ERR	271
CMALARM_NCHIP_PKTR_TMO_CELL_ERR	272
CMALARM_NCHIP_PKTR_TMO_OUTRANGE_ERR	273
CMALARM_NCHIP_PKTR_MD_REQUEST_Q_OVFLW_ERR	274
CMALARM_NCHIP_PKTR_DMA_BUFFER_OVFLW_ERR	275
CMALARM_NCHIP_PKTR_GRT_OVFLW_ERR	276
CMALARM_NCHIP_FRQ_ERR	277
CMALARM_NCHIP_RODR_IN_Q_OVFLW_ERR	278
CMALARM_NCHIP_DBUF_CRC_ERR	279

Chip Type: R Chip	Code
CMALARM_RCHIP_SRAM_PARITY_ERR	512

Chip Type: R Chip	Code
CMALARM_ICHIP_WO_DESRD_ID_ERR	601
CMALARM_ICHIP_WO_DESRD_DATA_ERR	602
CMALARM_ICHIP_WO_DESRD_OFLOW_ERR	603
CMALARM_ICHIP_WO_HDRF_UCERR_ERR	604
CMALARM_ICHIP_WO_HDRF_MTUERR_ERR	605
CMALARM_ICHIP_WO_HDRF_PARITY_ERR	606
CMALARM_ICHIP_WO_HDRF_TOERR_ERR	607
CMALARM_ICHIP_WO_IP_CRC_ERR	608
CMALARM_ICHIP_WO_IP_INTER_ERR	609
CMALARM_ICHIP_WI_WAN_TIMEOUT_ERR	625



CMALARM_ICHIP_WI_FAB_TIMEOUT_ERR	626
CMALARM_ICHIP_RLDRAM_BIST_ERR	630
CMALARM_ICHIP_SDRAM_BIST_ERR	631
CMALARM_ICHIP_RLDRAM_PARITY_ERR	632
CMALARM_ICHIP_SDRAM_UNCORRECT_ERR	633
CMALARM_ICHIP_SDRAM_CORRECT_ERR	634
CMALARM_ICHIP_FUSE_DONE_ERR	635

According to the table above, the **279** error code corresponds to **CMALARM\_NCHIP\_DBUF\_CRC\_ERR**; this means that new CRC errors were seen on the NCHIP of this particular FPC, which is FPC as per the logs.

If you do not want to convert decimal to binary and vice versa, you may use the following shortcut:

For major alarms, the **Actual Error Code = (Error Code - 1)/2**, where **Error Code** is the code that you get in the log message. For example, if you get the following log:

```
Apr 12 08:04:10 send: red alarm set, device FPC 6, reason FPC 6 Major
Errors - Error code: 257
```

Actual Error Code =  $(257-1)/2 = 128$ . Similarly, for minor alarms, Actual Error Code =  $(\text{Error Code})/2$



**NOTE:** Starting in Junos OS Release 18.2R1, on MX Series routers, the **show chassis alarms** output does not display error codes for PFE-related errors. You can use the following commands to view more details of the errors that caused the alarms:

- **show chassis errors active**
- **show chassis errors active detail**

**Required Privilege Level** view

**Related Documentation**

- *Configuring an RMON Alarm Entry and Its Attributes*
- *Chassis Conditions That Trigger Alarms*



<b>List of Sample Output</b>	<a href="#">show chassis alarms (Alarms Active) on page 179</a>
	<a href="#">show chassis alarms (No Alarms Active) on page 179</a>
	<a href="#">show chassis alarms (Fan Tray) on page 179</a>
	<a href="#">show chassis alarms (MX150) on page 179</a>
	<a href="#">show chassis alarms (MX104 Router) on page 179</a>
	<a href="#">show chassis alarms (MX2010 Router) on page 180</a>
	<a href="#">show chassis alarms (MX2020 Router) on page 180</a>
	<a href="#">show chassis alarms (MX10003 Router) on page 180</a>
	<a href="#">show chassis alarms (MX204 Router) on page 180</a>
	<a href="#">show chassis alarms (MX2008 Router) on page 181</a>
	<a href="#">show chassis alarms (MX960, MX480, and MX240 Routers showing Major CB Failure) on page 181</a>
	<a href="#">show chassis alarms (PTX10008 Router) on page 181</a>
	<a href="#">show chassis alarms (T4000 Router) on page 181</a>
	<a href="#">show chassis alarms (Unreachable Destinations Present on a T Series Router) on page 182</a>
	<a href="#">show chassis alarms (FPC Offline Due to Unreachable Destinations on a T Series Router) on page 182</a>
	<a href="#">show chassis alarms (SCG Absent on a T Series Router) on page 182</a>
	<a href="#">show chassis alarms (Alarms Active on a TX Matrix Router) on page 182</a>
	<a href="#">show chassis alarms (TX Matrix Plus router with 3D SIBs) on page 183</a>
	<a href="#">show chassis alarms (Alarms on a T4000 Router After the enhanced-mode Statement is Enabled) on page 185</a>
	<a href="#">show chassis alarms (Backup Routing Engine) on page 185</a>
	<a href="#">show chassis alarms (EX Series Switch) on page 185</a>
	<a href="#">show chassis alarms (Alarms Active on the QFX Series and OCX Series Switches) on page 185</a>
	<a href="#">show chassis alarms node-device (Alarms Active on the QFabric System) on page 186</a>
	<a href="#">show chassis alarms (Alarms Active on the QFabric System) on page 186</a>
	<a href="#">show chassis alarms (Alarms Active on an EX8200 Switch) on page 186</a>
	<a href="#">show chassis alarms (EX9251 Switch) on page 186</a>
	<a href="#">show chassis alarms (EX9253 Switch) on page 187</a>
	<a href="#">show chassis alarms (Alarms Active on a PTX5000 Packet Transport Router) on page 187</a>
	<a href="#">show chassis alarms (Mix of PDUs Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA) on page 187</a>
	<a href="#">show chassis alarms (PDU Converter Failed Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA) on page 187</a>
	<a href="#">show chassis alarms (No Power for System Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA) on page 188</a>
	<a href="#">show chassis alarms (Alarms Active on an ACX2000 Universal Metro Router) on page 188</a>
	<a href="#">show chassis alarms (Active Alarm to Indicate Status of the Bad SCB Clock on MX Series) on page 188</a>
	<a href="#">show chassis alarms (Alarms active on a PTX1000 Packet Transport Router) on page 188</a>
	<a href="#">show chassis alarms (MX10003 Router) on page 189</a>
	<a href="#">show chassis alarms (Alarms active on a MX10008 Router) on page 190</a>



**Output Fields** Table 7 on page 179 lists the output fields for the **show chassis alarms** command. Output fields are listed in the approximate order in which they appear.

*Table 7: show chassis alarms Output Fields*

Field Name	Field Description
Alarm time	Date and time the alarm was first recorded.
Class	Severity class for this alarm: <b>Minor</b> or <b>Major</b> .
Description	Information about the alarm.

## Sample Output

### show chassis alarms (Alarms Active)

```
user@host> show chassis alarms
3 alarms are currently active
Alarm time      Class  Description
2000-02-07 10:12:22 UTC Major fxp0: ethernet link down
2000-02-07 10:11:54 UTC Minor YELLOW ALARM - PEM 1 Removed
2000-02-07 10:11:03 UTC Minor YELLOW ALARM - Lower Fan Tray Removed
```

### show chassis alarms (No Alarms Active)

```
user@host> show chassis alarms
No alarms are currently active
```

### show chassis alarms (Fan Tray)

```
user@host> show chassis alarms
4 alarms currently active
Alarm time      Class  Description
2010-11-11 20:27:38 UTC Major Side Fan Tray 7 Failure
2010-11-11 20:27:13 UTC Minor Side Fan Tray 7 Overspeed
2010-11-11 20:27:13 UTC Major Side Fan Tray 5 Failure
2010-11-11 20:27:13 UTC Major Side Fan Tray 0 Failure
```

### show chassis alarms (MX150)

```
user@host > show chassis alarms
1 alarms currently active
Alarm time      Class  Description
2016-06-04 01:49:43 PDT Major Fan Tray 1 Fan 0 failed
```

### show chassis alarms (MX104 Router)

```
user@host >show chassis alarms
```



```

1 alarms currently active
Alarm time      Class  Description
2013-06-05 14:43:31 IST  Minor Backup RE Active

```

### show chassis alarms (MX2010 Router)

```

user@host> show chassis alarms

7 alarms currently active
Alarm time      Class  Description
2012-08-07 00:46:06 PDT  Major Fan Tray 2 Failure
2012-08-06 18:24:36 PDT  Minor Redundant feed missing for PSM 6
2012-08-06 07:41:04 PDT  Minor Redundant feed missing for PSM 8
2012-08-04 02:42:06 PDT  Minor Redundant feed missing for PSM 5
2012-08-03 21:14:24 PDT  Minor Loss of communication with Backup RE
2012-08-03 12:26:03 PDT  Minor Redundant feed missing for PSM 4
2012-08-03 10:40:18 PDT  Minor Redundant feed missing for PSM 7

```

### show chassis alarms (MX2020 Router)

```

user@host> show chassis alarms

1 alarms currently active
Alarm time Class Description
2012-10-03 12:14:59 PDT Minor Plane 0 not online

```

### show chassis alarms (MX10003 Router)

```

user@host> show chassis alarms

9 alarms currently active
Alarm time      Class  Description
2017-07-13 21:50:31 PDT  Major FPC 1 Temperature Hot
2017-07-13 21:50:04 PDT  Minor FPC 1 PIC 1 Invalid port profile configuration
2017-07-13 21:49:13 PDT  Minor FPC 1 PIC 0 Invalid port profile configuration
2017-07-13 21:48:54 PDT  Major FPC 0 Temperature Hot
2017-07-13 21:43:54 PDT  Minor CB 1 Voltage Sensor ADS7830_0x4B Sensor Failed
2017-07-13 21:43:54 PDT  Minor CB 0 Voltage Sensor ADS7830_0x4B Sensor Failed
2017-07-13 21:43:31 PDT  Minor Loss of communication with Backup RE

```

Starting in Junos OS Release 19.2R1, the MX10003 routers do not raise an alarm if a Power Entry Module (PEM) slot is empty. However, when the number of operational PEMs goes below 2, the router raises a major alarm. This alarm is cleared when the required number of PEMs are made available.

### show chassis alarms (MX204 Router)

```

user@host> show chassis alarms

1 alarms currently active
Alarm time      Class  Description
2017-11-05 22:13:03 PST  Major PEM 0 Not Present

```



**show chassis alarms (MX2008 Router)**

```
user@host>show chassis alarms
```

```
No alarms currently active
```

**show chassis alarms (MX960, MX480, and MX240 Routers showing Major CB Failure)**

A major CB 0 failure alarm occurs in the event of a bad CB (unknown or mismatched CBs do not trigger this alarm in Junos Release OS 12.3R9 and later). Following GRES or recovery, if the hardware issue persists, the traffic moves to the good CB and continues. If the alarm was triggered by something transient like a power zone budget on GRES, bringing the CB back online can clear the alarm. Otherwise, replace the bad CB. Note that fabric link speed is not impacted by an offline SCB. The alarm might be raised on CB0, CB1, and CB2.

```
user@host> show chassis alarms
```

```
6 alarms currently active
```

Alarm time	Class	Description
2014-10-31 16:49:41 EDT	Major	PEM 3 Not OK
2014-10-31 16:49:41 EDT	Major	PEM 2 Not OK
2014-10-31 16:49:31 EDT	Major	CB 0 Failure
2014-10-31 16:49:31 EDT	Minor	CB 0 Fabric Chip 0 Not Online
2014-10-31 16:49:31 EDT	Minor	CB 0 Fabric Chip 1 Not Online
2014-10-31 16:49:31 EDT	Minor	Backup RE Active

**show chassis alarms (PTX10008 Router)**

```
user@host>show chassis alarms
```

```
12 alarms currently active
```

Alarm time	Class	Description
2017-05-09 01:38:55 PDT	Minor	Loss of communication with Backup RE
2017-05-05 06:49:57 PDT	Major	FPC 5 LCPU Temp Sensor Access Failed
2017-05-05 06:49:57 PDT	Major	FPC 5 PE2 Temp Sensor Hot
2017-05-05 06:49:57 PDT	Major	FPC 5 PE1 Temp Sensor Hot
2017-05-05 06:49:57 PDT	Major	FPC 5 PE0 Temp Sensor Hot
2017-05-05 06:49:57 PDT	Major	FPC 5 Exhaust-C Temp Sensor Hot
2017-05-05 06:49:57 PDT	Major	FPC 5 Exhaust-B Temp Sensor Hot
2017-05-05 06:49:57 PDT	Major	FPC 5 Exhaust-A Temp Sensor Hot
2017-05-05 06:49:57 PDT	Major	FPC 5 Intake-B Temp Sensor Access Failed
2017-05-05 06:49:57 PDT	Major	FPC 5 Intake-A Temp Sensor Access Failed
2017-05-05 06:49:57 PDT	Major	Fan Tray 0 Fan 5 running at lower speed
2017-05-05 06:49:57 PDT	Major	Fan Tray 0 Fan 4 running at lower speed

**show chassis alarms (T4000 Router)**

```
user@host> show chassis alarms
```

```
9 alarms currently active
```

Alarm time	Class	Description
2007-06-02 01:41:10 UTC	Minor	RE 0 Not Supported
2007-06-02 01:41:10 UTC	Minor	CB 0 Not Supported
2007-06-02 01:41:10 UTC	Minor	Mixed Master and Backup RE types
2007-05-30 19:37:33 UTC	Major	SPMB 1 not online
2007-05-30 19:37:29 UTC	Minor	Front Bottom Fan Tray Absent
2007-05-30 19:37:13 UTC	Major	PEM 1 Input Failure



```

2007-05-30 19:37:13 UTC Major PEM 0 Not OK
2007-05-30 19:37:03 UTC Major PEM 0 Improper for Platform
2007-05-30 19:37:03 UTC Minor Backup RE Active

```

#### show chassis alarms (Unreachable Destinations Present on a T Series Router)

```

user@host> show chassis alarms

10 alarms currently active
Alarm time      Class Description
2011-08-30 18:43:53 PDT Major FPC 7 has unreachable destinations
2011-08-30 18:43:53 PDT Major FPC 5 has unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 3 has unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 2 has unreachable destinations
2011-08-30 18:43:52 PDT Minor SIB 0 Not Online
2011-08-30 18:43:33 PDT Minor SIB 4 Not Online
2011-08-30 18:43:28 PDT Minor SIB 3 Not Online
2011-08-30 18:43:05 PDT Minor SIB 2 Not Online
2011-08-30 18:43:28 PDT Minor SIB 1 Not Online
2011-08-30 18:43:05 PDT Major PEM 1 Not Ok

```

#### show chassis alarms (FPC Offline Due to Unreachable Destinations on a T Series Router)

```

user@host> show chassis alarms

10 alarms currently active
Alarm time      Class Description
2011-08-30 18:43:53 PDT Major FPC 7 offline due to unreachable destinations
2011-08-30 18:43:53 PDT Major FPC 5 offline due to unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 3 offline due to unreachable destinations
2011-08-30 18:43:52 PDT Major FPC 2 offline due to unreachable destinations
2011-08-30 18:43:52 PDT Minor SIB 0 Not Online
2011-08-30 18:43:33 PDT Minor SIB 4 Not Online
2011-08-30 18:43:28 PDT Minor SIB 3 Not Online
2011-08-30 18:43:05 PDT Minor SIB 2 Not Online
2011-08-30 18:43:28 PDT Minor SIB 1 Not Online
2011-08-30 18:43:05 PDT Major PEM 1 Not Ok

```

#### show chassis alarms (SCG Absent on a T Series Router)

```

user@host> show chassis alarms

4 alarms currently active
Alarm time      Class Description
2011-01-23 21:42:46 PST Major SCG 0 NO EXT CLK MEAS-BKUP SCG ABS

```

#### show chassis alarms (Alarms Active on a TX Matrix Router)

```

user@host> show chassis alarms

scc-re0:
-----
8 alarms currently active
Alarm time      Class Description
2004-08-05 18:43:53 PDT Minor LCC 0 Minor Errors
2004-08-05 18:43:53 PDT Minor SIB 3 Not Online
2004-08-05 18:43:52 PDT Major SIB 2 Absent
2004-08-05 18:43:52 PDT Major SIB 1 Absent
2004-08-05 18:43:52 PDT Major SIB 0 Absent

```



```

2004-08-05 18:43:33 PDT Major LCC 2 Major Errors
2004-08-05 18:43:28 PDT Major LCC 0 Major Errors
2004-08-05 18:43:05 PDT Minor LCC 2 Minor Errors
lcc0-re0:

```

```
-----
5 alarms currently active

```

Alarm time	Class	Description
2004-08-05 18:43:53 PDT	Minor	SIB 3 Not Online
2004-08-05 18:43:49 PDT	Major	SIB 2 Absent
2004-08-05 18:43:49 PDT	Major	SIB 1 Absent
2004-08-05 18:43:49 PDT	Major	SIB 0 Absent
2004-08-05 18:43:28 PDT	Major	PEM 0 Not OK

```

lcc2-re0:

```

```
-----
5 alarms currently active

```

Alarm time	Class	Description
2004-08-05 18:43:35 PDT	Minor	SIB 3 Not Online
2004-08-05 18:43:33 PDT	Major	SIB 2 Absent
2004-08-05 18:43:33 PDT	Major	SIB 1 Absent
2004-08-05 18:43:33 PDT	Major	SIB 0 Absent
2004-08-05 18:43:05 PDT	Minor	PEM 1 Absent

### show chassis alarms (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis alarms

```

```
sfc0-re0:

```

```
-----
Alarm time                Class  Description
2014-04-08 14:35:13 IST   Minor  FPM 0 SFC Config Size Changed
2014-04-08 14:32:58 IST   Major  Fan Tray Failure
2014-04-08 14:31:53 IST   Major  SIB F13 6 Fault
2014-04-08 14:31:43 IST   Major  SIB F13 11 Fault
2014-04-08 14:31:08 IST   Minor  Check SIB F13 12 CXP 14 Fbr Cbl
2014-04-08 14:31:08 IST   Minor  Check SIB F13 12 CXP 8 Fbr Cbl
2014-04-08 14:31:08 IST   Minor  Check SIB F13 12 CXP 3 Fbr Cbl
2014-04-08 14:31:08 IST   Major  SIB F13 12 CXP 15 fault
2014-04-08 14:31:08 IST   Minor  SIB F13 12 CXP 14 LOL
2014-04-08 14:31:08 IST   Minor  Check SIB F13 12 CXP 14
2014-04-08 14:31:08 IST   Major  SIB F13 12 CXP 10 fault
2014-04-08 14:31:08 IST   Minor  SIB F13 12 CXP 8 LOL
2014-04-08 14:31:08 IST   Minor  Check SIB F13 12 CXP 8
2014-04-08 14:31:08 IST   Major  SIB F13 12 CXP 7 fault
2014-04-08 14:31:08 IST   Major  SIB F13 12 CXP 4 fault
2014-04-08 14:31:08 IST   Minor  SIB F13 12 CXP 3 LOL
2014-04-08 14:31:08 IST   Minor  Check SIB F13 12 CXP 3
2014-04-08 14:31:08 IST   Minor  Check SIB F13 6 CXP 14 Fbr Cbl
2014-04-08 14:31:08 IST   Minor  Check SIB F13 6 CXP 12 Fbr Cbl
2014-04-08 14:31:08 IST   Minor  Check SIB F13 6 CXP 8 Fbr Cbl
2014-04-08 14:31:08 IST   Minor  Check SIB F13 6 CXP 6 Fbr Cbl
2014-04-08 14:31:08 IST   Minor  Check SIB F13 6 CXP 4 Fbr Cbl
2014-04-08 14:31:08 IST   Minor  Check SIB F13 6 CXP 2 Fbr Cbl
2014-04-08 14:31:08 IST   Minor  Check SIB F13 6 CXP 0 Fbr Cbl
2014-04-08 14:31:08 IST   Minor  SIB F13 6 CXP 14 LOL
2014-04-08 14:31:08 IST   Minor  Check SIB F13 6 CXP 14
2014-04-08 14:31:08 IST   Minor  SIB F13 6 CXP 12 LOL
2014-04-08 14:31:08 IST   Minor  Check SIB F13 6 CXP 12
2014-04-08 14:31:08 IST   Major  SIB F13 6 CXP 10 fault
2014-04-08 14:31:08 IST   Minor  SIB F13 6 CXP 8 LOL

```



```

2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 8
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 6 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 6
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 4 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 4
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 2 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 2
2014-04-08 14:31:08 IST Minor SIB F13 6 CXP 0 LOL
2014-04-08 14:31:08 IST Minor Check SIB F13 6 CXP 0
2014-04-08 14:31:08 IST Minor SIB F13 12 CXP 14 XC HSL Link Error
2014-04-08 14:29:27 IST Minor LCC 0 Minor Errors
2014-04-08 14:28:37 IST Major LCC 0 Major Errors
2014-04-08 14:28:37 IST Major LCC 2 Major Errors
2014-04-08 14:28:37 IST Minor LCC 2 Minor Errors
2014-04-08 14:28:24 IST Major SIB F2S 4/6 Absent
2014-04-08 14:28:24 IST Major SIB F2S 4/4 Absent
2014-04-08 14:28:24 IST Major SIB F2S 4/2 Absent
2014-04-08 14:28:24 IST Major SIB F2S 4/0 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/6 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/4 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/2 Absent
2014-04-08 14:28:24 IST Major SIB F2S 3/0 Absent
2014-04-08 14:28:24 IST Major SIB F13 9 Absent
2014-04-08 14:28:24 IST Major SIB F13 8 Absent
2014-04-08 14:28:24 IST Major SIB F13 7 Absent
2014-04-08 14:28:24 IST Major SIB F13 4 Absent
2014-04-08 14:28:24 IST Major SIB F13 1 Absent
2014-04-08 14:28:22 IST Major PEM 0 Input Failure
2014-04-08 14:28:22 IST Major PEM 0 Not OK

```

lcc0-re0:

-----

12 alarms currently active

Alarm time	Class	Description
2014-04-08 14:36:08 IST Minor	CB 1	M/S Switch Changed
2014-04-08 14:36:08 IST Minor	CB 1	CHASSIS ID Changed
2014-04-08 14:35:43 IST Minor	CB 0	M/S Switch Changed
2014-04-08 14:35:43 IST Minor	CB 0	CHASSIS ID Changed
2014-04-08 14:29:30 IST Minor	SIB 4	Not Online
2014-04-08 14:29:30 IST Minor	SIB 3	Not Online
2014-04-08 14:29:30 IST Minor	SIB 2	Not Online
2014-04-08 14:29:24 IST Major		Rear Fan Tray Failure
2014-04-08 14:29:24 IST Major		Front Bottom Fan Tray Improper for Platform
2014-04-08 14:29:24 IST Major		Front Top Fan Tray Improper for Platform
2014-04-08 14:28:37 IST Major	SIB 4	Absent
2014-04-08 14:28:37 IST Major	SIB 3	Absent

lcc2-re0:

-----

12 alarms currently active

Alarm time	Class	Description
2014-04-08 14:36:02 IST Minor	CB 1	M/S Switch Changed
2014-04-08 14:36:02 IST Minor	CB 1	CHASSIS ID Changed
2014-04-08 14:35:42 IST Minor	CB 0	M/S Switch Changed
2014-04-08 14:34:42 IST Minor	CB 0	CHASSIS ID Changed
2014-04-08 14:29:29 IST Minor	SIB 0	CXP 7 Unsupported Optics
2014-04-08 14:29:27 IST Major		Front Bottom Fan Tray Improper for Platform
2014-04-08 14:29:27 IST Major		Front Top Fan Tray Improper for Platform
2014-04-08 14:29:25 IST Minor	SIB 4	Not Online
2014-04-08 14:29:25 IST Minor	SIB 3	Not Online



```

2014-04-08 14:28:47 IST Major PEM 0 Not OK
2014-04-08 14:28:36 IST Major SIB 2 Absent
2014-04-08 14:28:36 IST Minor Host 0 Boot from alternate media

```

```
lcc6-re0:
```

```
-----
2 alarms currently active
```

Alarm time	Class	Description
2013-11-06 04:03:56 PST	Minor	SIB 1 CXP 0 XC HSL Link Error
2013-11-06 03:49:32 PST	Major	PEM 1 Not OK

### show chassis alarms (Alarms on a T4000 Router After the enhanced-mode Statement is Enabled)

To enable improved virtual private LAN service (VPLS) MAC address learning on T4000 routers, you must include the **enhanced-mode** statement at the **[edit chassis network-services]** hierarchy level and reboot the router. When router reboots, only the T4000 Type 5 FPCs are required to be present on the router. If there are any other FPCs (apart from T4000 Type 5 FPCs) on the T4000 router, such FPCs become offline, and FPC misconfiguration alarms are generated. The **show chassis alarm** command output displays FPC misconfiguration (**FPC *fpc-slot* misconfig**) as the reason for the generation of the alarms.

```
user@host> show chassis alarms
```

```
2 alarms currently active
```

Alarm time	Class	Description
2011-10-22 10:10:47 PDT	Major	FPC 1 misconfig
2011-10-22 10:10:46 PDT	Major	FPC 0 misconfig

### show chassis alarms (Backup Routing Engine)

```
user@host> show chassis alarms
```

```
2 alarms are currently active
```

Alarm time	Class	Description
2005-04-07 10:12:22 PDT	Minor	Host 1 Boot from alternate media
2005-04-07 10:11:54 PDT	Major	Host 1 compact-flash missing in Boot List

### show chassis alarms (EX Series Switch)

```
user@switch> show chassis alarms
```

```
4 alarms currently active
```

Alarm time	Class	Description
2014-03-12 15:36:09 UTC	Minor	Require a Fan Tray upgrade
2014-03-12 15:00:02 UTC	Major	PEM 0 Input Failure
2014-03-12 15:00:02 UTC	Major	PEM 0 Not OK
2014-03-12 14:59:51 UTC	Minor	Host 1 Boot from alternate media

### show chassis alarms (Alarms Active on the QFX Series and OCX Series Switches)

```
user@switch> show chassis alarms
```

```
1 alarms currently active
```

Alarm time	Class	Description
2012-03-05 2:10:24 UTC	Major	FPC 0 PEM 0 Airflow not matching Chassis Airflow



**show chassis alarms node-device (Alarms Active on the QFabric System)**

```

user@switch> show chassis alarms node-device Test
node-device ED3694
3 alarms currently active
Alarm time          Class  Description
2011-08-24 16:04:15 UTC Major  Test:fte-0/1/2: Link down
2011-08-24 16:04:14 UTC Major  Test:fte-0/1/0: Link down
2011-08-24 14:21:14 UTC Major  Test PEM 0 is not supported/powered

```

**show chassis alarms (Alarms Active on the QFabric System)**

```

user@switch> show chassis alarms
IC-1:
-----
1 alarms currently active
Alarm time          Class  Description
2011-08-24 16:04:15 UTC Minor  Backup RE Active

Test:
-----
3 alarms currently active
Alarm time          Class  Description
2011-08-24 16:04:15 UTC Major  Test:fte-0/1/2: Link down
2011-08-24 16:04:14 UTC Major  Test:fte-0/1/0: Link down
2011-08-24 14:21:14 UTC Major  Test PEM 0 is not supported/powered

SNG-0:
-----

NW-NG-0:
-----
1 alarms currently active
Alarm time          Class  Description
2011-08-24 15:49:27 UTC Major  Test PEM 0 is not supported/powered

```

**show chassis alarms (Alarms Active on an EX8200 Switch)**

```

user@switch> show chassis alarms

6 alarms currently active
Alarm time          Class  Description
2010-12-02 19:15:22 UTC Major  Fan Tray Failure
2010-12-02 19:15:22 UTC Major  Fan Tray Failure
2010-12-02 19:15:14 UTC Minor  Check CB 0 Fabric Chip 1 on Plane/FPC/PFE: 1/5/0,
1/5/1, 1/5/2, 1/5/3, 1/7/0, 1/7/1, 1/7/2, 1/7/3, 2/5/0, 2/5/1, ...
2010-12-02 19:15:14 UTC Minor  Check CB 0 Fabric Chip 0 on Plane/FPC/PFE: 1/5/0,
1/5/1, 1/5/2, 1/5/3, 1/7/0, 1/7/1, 1/7/2, 1/7/3, 2/5/0, 2/5/1, ...
2010-12-02 19:14:18 UTC Major  PSU 1 Output Failure
2010-12-02 19:14:18 UTC Minor  Loss of communication with Backup RE

```

**show chassis alarms (EX9251 Switch)**

```

user@switch> show chassis alarms

```



```

2 alarms currently active
Alarm time      Class  Description
2018-03-08 05:13:10 PST Major PEM 0 Not Powered
2018-03-08 05:13:10 PST Major Fan Tray 2 is not present

```

### show chassis alarms (EX9253 Switch)

```
user@switch> show chassis alarms
```

```

6 alarms currently active
Alarm time      Class  Description
2018-03-07 01:09:01 PST Major Power Budget:Insufficient Power
2018-03-06 23:56:34 PST Minor Loss of communication with Backup RE
2018-02-15 00:48:10 PST Minor PEM 3 Not Present
2018-02-15 00:48:10 PST Minor PEM 2 Not Present
2018-02-15 00:48:07 PST Major PEM 4 Not Powered
2018-02-15 00:48:07 PST Major PEM 1 Not Powered

```

### show chassis alarms (Alarms Active on a PTX5000 Packet Transport Router)

```
user@host> show chassis alarms
```

```

23 alarms currently active
Alarm time      Class  Description
2011-07-12 16:22:05 PDT Minor No Redundant Power for Rear Chassis
2011-07-12 16:22:05 PDT Major PDU 0 PSM 1 Not OK
2011-07-12 16:21:57 PDT Minor No Redundant Power for Fan 0-2
2011-07-12 16:21:57 PDT Major PDU 0 PSM 0 Not OK
2011-07-12 15:56:06 PDT Major PDU 1 PSM 2 Not OK
2011-07-12 15:56:06 PDT Minor No Redundant Power for FPC 0-7
2011-07-12 15:56:06 PDT Major PDU 0 PSM 3 Not OK
2011-07-12 15:28:20 PDT Major PDU 0 PSM 2 Not OK
2011-07-12 15:19:14 PDT Minor Backup RE Active

```

### show chassis alarms (Mix of PDUs Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA)

All PDUs installed on a PTX5000 router must be of the same type. The **Mix of PDUs** or **Power Manager Non Operational** alarm is raised when different types of PDUs are installed on a PTX5000 router.

```
user@host> show chassis alarms
```

```

15 alarms currently active
Alarm time      Class  Description
2013-03-19 23:03:53 PDT Minor No Redundant Power
2013-03-19 23:03:48 PDT Minor Mix of PDUs
2013-03-19 23:03:47 PDT Minor PDU 1 PSM 3 Absent
2013-03-19 23:03:47 PDT Minor PDU 1 PSM 2 Absent
2013-03-19 23:03:47 PDT Minor PDU 1 PSM 1 Absent
2013-03-19 23:03:47 PDT Minor PDU 1 PSM 0 Absent
2013-03-19 23:03:46 PDT Major No CG Online

```

### show chassis alarms (PDU Converter Failed Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-PIA)

The **PDU Converter Failed** alarm is raised when one or more 36 V booster converter of a DC PDU fails. If two or more 36 V booster converter fails, fan trays fail and the router



might get over heated. Therefore, when this alarm is raised, check the PDU and replace it, if required.

```
user@host> show chassis alarms
```

```
11 alarms currently active
Alarm time          Class Description
2013-12-11 22:14:13 PST Minor No Redundant Power for System
2013-12-11 22:14:10 PST Major PDU 0 PSM 7 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 6 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 5 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 4 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 3 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 2 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 1 Not OK
2013-12-11 22:14:10 PST Major PDU 0 PSM 0 Not OK
2013-12-11 22:14:10 PST Major PDU 0 Not OK
2013-12-11 22:14:01 PST Major PDU 0 Converter Failed
```

#### show chassis alarms (No Power for System Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis alarms
```

```
8 alarms currently active
Alarm time          Class Description
2013-11-19 01:58:41 PST Major No Power for System
2013-11-19 01:58:37 PST Major PDU 0 PSM 1 Not OK
2013-11-19 01:56:46 PST Major PDU 0 PSM 2 Not OK
2013-11-19 01:54:26 PST Major PDU 0 PSM 3 Not OK
2013-11-19 01:53:30 PST Major PDU 1 PSM 3 Not OK
2013-11-19 01:53:29 PST Major PDU 1 PSM 2 Not OK
2013-11-19 01:53:29 PST Major PDU 1 PSM 1 Not OK
2013-11-19 01:53:29 PST Major PDU 1 PSM 0 Not OK
```

#### show chassis alarms (Alarms Active on an ACX2000 Universal Metro Router)

```
user@host> show chassis alarms
```

```
7 alarms currently active
Alarm time          Class Description
2012-05-22 11:19:09 UTC Major xe-0/3/1: Link down
2012-05-22 11:19:09 UTC Major xe-0/3/0: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/7: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/6: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/3: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/2: Link down
2012-05-22 11:19:09 UTC Major ge-0/1/1: Link down
```

#### show chassis alarms (Active Alarm to Indicate Status of the Bad SCB Clock on MX Series)

```
user@host> show chassis alarms
```

```
1 alarm currently active
Alarm time          Class Description
2013-08-06 07:48:35 PDT Major CB 0 19.44 MHz clock failure
```

#### show chassis alarms (Alarms active on a PTX1000 Packet Transport Router)

```
user@host> show chassis alarms
```



```

2 alarms currently active
Alarm time      Class  Description
2004-08-10 00:55:49 UTC  Major  PEM 1 Not Present
2004-08-10 00:55:49 UTC  Major  PEM 0 Not Present

```

### show chassis alarms (MX10003 Router)

If LCMD is down on the backup RE, then the following alarm is seen on the Master.

```
user@host> show chassis alarms
```

```

1 alarm currently active
Alarm time      Class  Description
2017-05-09 13:26:27 PDT  Major  VMHost RE 1 host application failed

```

If LCMD is down on the master, then following alarms are displayed.

```
user@host> show chassis alarms
```

```

3 alarms currently active
Alarm time      Class  Description
2017-05-10 14:12:21 PDT  Major  VMHost RE 0 host application failed
2017-05-10 14:12:16 PDT  Minor  LCM Peer Absent
2017-05-09 13:26:27 PDT  Major  VMHost RE 1 host application failed

```

If the LCMD process is crashing on the master, the system will switchover after one minute provided the backup RE LCMD connection is stable. The system will not switchover under the following conditions: if the backup RE LCMD connection is unstable or if the current master just gained mastership. When the master has just gained mastership, the switchover happens only after four minutes.

The LCM peer connection un-stable alarm is raised when the LCMD-CHASD IPC communication flaps three times within a small interval of two to three minutes. Once LCM peer connection un-stable alarm is raised, the connection status is monitored for two minutes.

```
user@host> show chassis alarms
```

```

7 alarms currently active
Alarm time      Class  Description
2017-05-29 10:12:17 PDT  Minor  LCM Peer Connection un-stable
2017-05-29 09:04:17 PDT  Minor  PEM 8 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 9 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 7 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 3 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 0 Not Powered
2017-05-29 09:04:08 PDT  Minor  Loss of communication with Backup RE

```

If there are no more connection flaps within this two minutes time interval, the LCM peer connection un-stable alarm is cleared.

```

6 alarms currently active
Alarm time      Class  Description
2017-05-29 09:04:17 PDT  Minor  PEM 8 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 9 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 7 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 3 Not Powered

```



```
2017-05-29 09:04:17 PDT Minor PEM 0 Not Powered
2017-05-29 09:04:08 PDT Minor Loss of communication with Backup RE
```

A major alarm is raised even if there is on one PLL lock error, and this alarm can be cleared only through an FPC restart.

```
user@host> show chassis alarms
```

```
4 alarms currently active
Alarm time          Class Description
2017-02-16 09:06:06 PDT Major FPC 0 Major Errors
2017-02-16 09:08:40 PDT Major FPC 1 Major Errors
2017-02-16 09:11:47 PST Minor Fan Tray 3 Pair 1 Outer Fan running at over speed
2017-02-16 09:11:47 PST Minor Fan Tray 3 Pair 1 Inner Fan running at over speed
```

#### show chassis alarms (Alarms active on a MX10008 Router)

```
user@host> show chassis alarms
```

```
13 alarms currently active
Alarm time          Class Description
2018-07-17 05:48:08 PDT Major FPC 2 I2C Failure
2018-07-17 05:47:02 PDT Minor Mixed Master and Backup RE types
2018-07-17 05:47:01 PDT Major Fan Tray 0 Fan 5 Failed
2018-07-17 05:47:01 PDT Major Fan Tray 0 Fan 4 Failed
2018-07-17 05:47:01 PDT Minor PEM 5 Not Powered
2018-07-17 05:47:01 PDT Minor PEM 5 Feed 2 has no input source
2018-07-17 05:47:01 PDT Minor PEM 5 Feed 1 has no input source
2018-07-17 05:47:01 PDT Minor PEM 4 Not Powered
2018-07-17 05:47:01 PDT Minor PEM 4 Feed 2 has no input source
2018-07-17 05:47:01 PDT Minor PEM 4 Feed 1 has no input source
2018-07-17 05:47:01 PDT Minor PEM 3 Not Powered
2018-07-17 05:47:01 PDT Minor PEM 3 Feed 2 has no input source
2018-07-17 05:47:01 PDT Minor PEM 3 Feed 1 has no input source
```



## show chassis beacon

<b>show chassis beacon</b> (QFX Series)	<pre>show chassis beacon &lt;cb slot-number&gt; &lt;fpc slot-number&gt; &lt;interconnect-device name (cb slot-number   fpc slot-number)&gt; &lt;node-device name&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display the beacon LED status on a QFX3500, QFX3600, QFX5100, EX4600, OCX Series standalone switch, Node device, and an Interconnect device. You can also display the beacon LED status of the Control Boards and Flexible PIC Concentrators on the Interconnect device.
<b>Options</b>	<p><b>cb slot-number</b>— (QFabric systems only) (Optional) Display the status of the beacon LEDs for the Control Board on the Interconnect device.</p> <p><b>fpc slot-number</b> — (QFabric systems only) (Optional) Display the status of the beacon LEDs for the Flexible PIC Concentrator (FPC) on the Interconnect device. (Optional) Display the status of the beacon LEDs for the Flexible PIC Concentrator on the standalone switch.</p> <p><b>interconnect-device name</b>— (QFabric systems only) (Optional) Display the status of the beacon LEDs for the Interconnect device.</p> <p><b>node-device name</b>— (QFabric systems only) (Optional) Display the status of the beacon LEDs for the Node device.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">request chassis beacon on page 118</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show chassis beacon (QFX Series and OCX Series) on page 192</a></p> <p><a href="#">show chassis beacon interconnect-device (QFabric System) on page 192</a></p> <p><a href="#">show chassis beacon interconnect-device fpc (QFabric System) on page 192</a></p> <p><a href="#">show chassis beacon node-device (QFabric System) on page 192</a></p> <p><a href="#">show chassis beacon node-device fpc (QFabric System) on page 192</a></p>
<b>Output Fields</b>	<a href="#">Table 8 on page 192</a> lists the output fields for the <b>show chassis beacon</b> command. Output fields are listed in the approximate order in which they appear.



Table 8: show chassis led Output Fields

Field Name	Field Description
Slot	FPC slot number of the device whose content is being displayed. On QFX3500 standalone switches, the number is always 0.
Beacon State	Status of the beacon state: <ul style="list-style-type: none"> <li>Off—The beacon is <b>OFF</b>.</li> <li>On—The beacon is <b>ON</b>.</li> </ul>

## Sample Output

### show chassis beacon (QFX Series and OCX Series)

```
user@switch> show chassis beacon
```

```
Slot      Beacon State
FPC       0      OFF
```

### show chassis beacon interconnect-device (QFabric System)

```
user@switch> show chassis beacon interconnect-device interconnect1
```

```
Chassis      OFF
CB 0          OFF
CB 1          OFF
FC 0 FPC 0    OFF
FC 1 FPC 1    OFF
RC 0 FPC 8    OFF
RC 1 FPC 9    OFF
```

### show chassis beacon interconnect-device fpc (QFabric System)

```
user@switch> show chassis beacon interconnect-device interconnect1 fpc 0
```

```
FPC 0      ON
```

### show chassis beacon node-device (QFabric System)

```
user@switch> show chassis beacon node-device node1
```

```
node1      ON
```

### show chassis beacon node-device fpc (QFabric System)

```
user@switch> show chassis beacon node-device node1 fpc 0
```

```
FPC 0      ON
```



## show chassis environment

<b>List of Syntax</b>	Syntax on page 193
	Syntax (T320, T640, T1600, and T4000 Routers) on page 193
	Syntax (TX Matrix Routers) on page 193
	Syntax (TX Matrix Plus Routers) on page 193
	Syntax (MX Series Routers) on page 194
	Syntax (MX104 Universal Routing Platforms) on page 194
	Syntax (MX150 Router Appliance) on page 194
	Syntax (MX2010, MX2020, and MX2008 Universal Routing Platforms) on page 194
	Syntax (MX10003 and MX204 Universal Routing Platforms) on page 194
	Syntax (EX8200 Switches) on page 194
	Syntax (EX Series Switches except EX8200) on page 195
	Syntax (QFX Series) on page 195
	Syntax (OCX Series) on page 195
	Syntax (PTX Series Packet Transport Routers) on page 195
	Syntax (ACX Series Universal Metro Routers) on page 195
	Syntax (ACX5048 and ACX5096 Routers) on page 195
	Syntax (ACX500 Routers) on page 195

<b>Syntax</b>	<b>show chassis environment</b>
---------------	---------------------------------

<b>Syntax (T320, T640, T1600, and T4000 Routers)</b>	show chassis environment <cb <i>cb-slot-number</i> > <fpc <i>fpc-slot-number</i> > <fpm> <pem <i>pem-slot-number</i> > <routing-engine <i>re-slot-number</i> > <scg <i>scg-slot-number</i> > <sib <i>sib-slot-number</i> >
--	---

<b>Syntax (TX Matrix Routers)</b>	show chassis environment <lcc <i>number</i>   scc>
-----------------------------------	---

<b>Syntax (TX Matrix Plus Routers)</b>	show chassis environment <cb <i>cb-slot-number</i> > <cip <i>cip-slot-number</i> > <fpc <i>fpc-slot-number</i> > <fpm> <lcc <i>number</i> > <pem <i>pem-slot-number</i> > <routing-engine <i>re-slot-number</i> > <scg <i>scg-slot-number</i> > < sfc <i>number</i> > <sib <i>sib-slot-number</i> >
--	---



Syntax (MX Series Routers)	<pre>show chassis environment &lt;all-members&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt;</pre>
Syntax (MX104 Universal Routing Platforms)	<pre>show chassis environment &lt;cb&gt; &lt;pem <i>pem-slot-number</i>&gt; &lt;routing-engine <i>re-slot-number</i>&gt;</pre>
Syntax (MX150 Router Appliance)	<pre>show chassis environment &lt;pem <i>pem-slot-number</i>&gt; &lt;routing-engine <i>re-slot-number</i>&gt;</pre>
Syntax (MX2010, MX2020, and MX2008 Universal Routing Platforms)	<pre>show chassis environment &lt;adc <i>adc-slot-number</i>&gt; &lt;all-members&gt; &lt;cb <i>cb-slot-number</i>&gt; &lt;fan <i>fantray-slot-number</i>&gt; &lt;fpc <i>fpc-slot-number</i>&gt; &lt;fpm&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt; &lt;monitored&gt; &lt;psm <i>psm-slot-number</i>&gt; &lt;routing-engine <i>re-slot-number</i>&gt; &lt;sfb <i>sfb-slot-number</i>&gt; &lt;satellite [<i>fpc-slot slot-id</i> [<i>device-alias alias-name</i>]]&gt;</pre>
Syntax (MX10003 and MX204 Universal Routing Platforms)	<pre>show chassis environment &lt;cb <i>cb-slot-number</i>&gt; &lt;fpc <i>fpc-slot-number</i>&gt; &lt;pem <i>pem-slot-number</i>&gt; &lt;routing-engine <i>re-slot-number</i>&gt;</pre>
Syntax (EX8200 Switches)	<pre>show chassis environment &lt;all-members&gt; &lt;cb <i>cb-slot-number</i>&gt; &lt;fpc <i>fpc-slot-number</i>&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt; &lt;psu <i>psu-slot-number</i>&gt; &lt;routing-engine <i>re-slot-number</i>&gt;</pre>



Syntax (EX Series Switches except EX8200)	<pre> show chassis environment &lt;all-members&gt; &lt;fpc fpc-slot-number&gt; &lt;local&gt; &lt;member member-id&gt; &lt;power-supply-unit&gt; &lt;routing-engine&gt; &lt;satellite [fpc-slot slot-id  device-alias alias-name]&gt; </pre>
Syntax (QFX Series)	<pre> show chassis environment &lt;cb slot-number &lt;interconnect-device name&gt;&gt; &lt;fpc slot-number &lt;interconnect-device name&gt;&gt; &lt;interconnect-device name &lt;slot-number&gt; &lt;node-device name&gt; &lt;pem slot-number (interconnect-device name slot-number)   (node-device name)&gt; &lt;routing-engine name &lt;interconnect-device name slot-number&gt;&gt; </pre>
Syntax (OCX Series)	<pre> show chassis environment </pre>
Syntax (PTX Series Packet Transport Routers)	<pre> show chassis environment &lt;cb cb-slot-number&gt; &lt;ccg ccg-slot-number &gt; &lt;fpc fpc-slot-number&gt; &lt;fpm&gt; &lt;monitored&gt; &lt;pdu pdu-slot-number&gt; &lt;routing-engine re-slot-number&gt; &lt;sib sib-slot-number&gt; </pre>
Syntax (ACX Series Universal Metro Routers)	<pre> show chassis environment &lt;cb cb-slot-number&gt; &lt;pem pem-slot-number&gt; &lt;routing-engine re-slot-number&gt; </pre>
Syntax (ACX5048 and ACX5096 Routers)	<pre> show chassis environment &lt;fpc slot-number&gt; &lt;pem&gt; &lt;routing-engine&gt; </pre>
Syntax (ACX500 Routers)	<pre> show chassis environment &lt;cb cb-slot-number&gt; &lt;routing-engine re-slot-number&gt; </pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>



**sfc** option introduced for the TX Matrix Plus router in Junos OS Release 9.6.  
Command introduced in Junos OS Release 11.1 for QFX Series.  
Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.  
**monitored** option added in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.  
Command introduced in Junos OS Release 12.1 for T4000 Core Routers.  
Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.  
Command introduced in Junos OS Release 12.3 for MX 2020 and MX2010 Universal Routing Platforms.  
**pem** option introduced in Junos OS Release 12.3 for ACX4000 Universal Metro Routers.  
**satellite** option introduced in Junos OS Release 14.2R3.  
**all-members**, **local**, and **member** *member-id* options introduced in Junos OS Release 15.1 for MX2010 and MX2020 routers.  
Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.  
Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.  
Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.  
Command introduced in Junos OS Release 17.2 for PTX10008 Routers.  
Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.  
Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.  
Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.  
Command introduced in Junos OS Release 18.2 for EX9253 Switches.  
Command introduced in Junos OS Release 18.2R1 for MX10008 Routers.

- Description** Display environmental information about the router or switch chassis, including the temperature and information about the fans, power supplies, and Routing Engine.
- In addition, on ACX4000 routers, display temperature information about the different channels of a Modular Interface Card (MIC). The number of channels displayed depends on the type of MIC installed.
- Starting with Junos OS Release 14.1, the **show chassis environment cb *cb-slot-number* | ccg *ccg-slot-number* | fpc *fpc-slot-number* | fpm | monitored | pdu *pdu-slot-number* | routing-engine *re-slot-number* | sib *sib-slot-number*** operational mode command output displays environmental information for the new DC power supply module (PSM) and power distribution unit (PDU) that are added to provide power to the high-density FPC (FPC2-PTX-PIA) and other components in a PTX5000 Packet Transport Router.
- Options** **none**—Display environmental information about the router or switch chassis. On a TX Matrix router, display environmental information about the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about the TX Matrix Plus router and its attached routers.
- all-members**—(MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for all the members of the Virtual Chassis configuration.
- adc *adc-slot-number***—(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the adapter cards. For MX2020 routers, replace



**adc-slot-number** with a value from 0 through 19. For MX2010 and MX2008 routers, replace **adc-slot-number** with a value from 0 through 9.

**cb cb-slot-number**—(ACX Series Universal Metro Routers, EX Series switches, M120, M320, and M40e routers, MX Series routers, MX2020 routers, MX2010 routers, MX2008 routers, PTX Series Packet Transport Routers, QFX Series, and T Series routers, and TX Matrix Plus routers only) (Optional) Display chassis environmental information for the Control Board. On devices other than EX Series switches, replace **cb-slot** with 0 or 1.

**cip cip-slot-number**—(TX Matrix Plus routers only) (Optional) Display chassis environmental information for the Connection Interface Panel (CIP). Replace the **cip-slot-number** variable with a value of 0 or 1.

**cb interconnect-device name**—(QFabric systems only) (Optional) Display chassis environmental information for the Control Board on an Interconnect device.

**ccg ccg-slot-number**—(PTX Series only) (Optional) Display chassis environmental information for the Centralized Clock Generator. Replace **cb-slot** with a value of 0 or 1.

**fan fantray-slot-number**—(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the fan trays. Replace **fantray-slot-number** with a value from 0 through 3.

**fpc fpc-slot**—(EX Series switches, M120, M320, and M40e routers, MX Series routers, MX2010 routers, MX2020 routers, MX2008 routers, PTX Series Packet Transport Routers, QFX Series, QFX3500 switches, QFabric systems, T Series routers, and TX Matrix Plus routers) (Optional) Display chassis environmental information for a specified Flexible PIC Concentrator. For MX2010 and MX2008 routers, replace **fpc-slot** with a value from 0 through 9. For MX2020 routers, replace **fpc-slot** with a value from 0 through 19. For information about FPC numbering, see [show chassis environment fpc](#). On a QFabric system, display chassis environmental information for a specified Flexible PIC Concentrator on an Interconnect device. On an EX Series switch, display chassis environmental information for a specified Flexible PIC Concentrator; see the hardware documentation for your switch for information on FPC numbering. On a TX Matrix Plus router with 3D SIBs replace **fpc-slot** with a value from 0 through 63.

**fpm**—(M120, M320, and M40e routers, MX2010 routers, MX2020 routers, MX2008 routers, PTX Series, Packet Transport Routers, T Series routers, and TX Matrix Plus routers only) (Optional) Display chassis environmental information for the craft interface (FPM).

**interconnect-device name**—(QFabric systems only) (Optional) Display chassis environmental information for the Interconnect device.

**lcc number**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Line-card chassis number.



Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for the local Virtual Chassis member.

**member *member-id***—(MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for the specified member of the Virtual Chassis configuration. On MX Series routers, replace *member-id* with a value of **0** or **1**. For EX Series switches, see *member* for member ID values.

**monitored**—(MX2020 routers and PTX Series Packet Transport Routers only) (Optional) Display chassis environmental information for monitored temperatures only. Temperatures that are not included in temperature alarm computations are not displayed.

**node-device *name***—(QFabric systems only) (Optional) Display chassis environmental information for the Node device.

**pdu *pdu-slot-number***—(PTX Series only) (Optional) Display chassis environmental information for the specified power distribution unit.

**pem**—(QFX3500 switches and QFabric systems only) (Optional) Display chassis environmental information for the Power Entry Module on the specified Interconnect device or Node device.

**pem *pem-slot-number***—(ACX Series Universal Metro Routers, M120, M320, and M40e routers, MX Series routers, MX104 routers, QFX Series, and T Series routers only) (Optional) Display chassis environmental information for the Power Entry Module on the specified Power Entry Module. For information about the options, see [show chassis environment pem](#).

**psm *psm-slot-number***—(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the power supply module. For MX2020 routers, replace *psm-slot-number* with a value from **0** through **17**. For MX2010 and MX2008 routers, replace *psm-slot-number* with a value from **0** through **8**.

**psu *psu-slot-number***—(EX Series switches only) (Optional) Display chassis environmental information for a specified power supply.



**routing-engine**—(QFX3500 switches and QFabric systems only) (Optional) Display chassis environmental information for the Routing Engine on the specified Interconnect device.

**routing-engine re-slot-number**—(Optional) Display chassis environmental information for the specified Routing Engine. For information about the options, see [show chassis environment routing-engine](#).

**satellite [fpc-slot slot-id | device-alias alias-name]**—(Junos Fusion only)(Optional) Display chassis environmental information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scg**—(T Series routers only) (Optional) Display chassis environmental information about the SONET Clock Generator.

**scc**—(TX Matrix routers only) (Optional) Display chassis environmental information about the TX Matrix router (switch-card chassis).

**sfb sfb-slot-number**—(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the switch fabric board. Replace **sfb-slot-number** with a value from 0 through 7.

**sfc number**—(TX Matrix Plus routers only) (Optional) Display chassis environmental information about the respective TX Matrix Plus router ( switch-fabric chassis). Replace **number** variable with 0.

**sib sib-slot-number**—(M320 routers, PTX Series Packet Transport Routers, and T Series routers only) (Optional) Display chassis environmental information about the specified switch interface board. For information about the options, see [show chassis environment sib](#).

**Required Privilege Level** view

**Related Documentation**

- [show chassis environment adc](#)
- [show chassis environment cb](#)
- [show chassis environment ccg](#)
- [show chassis environment cip](#)
- [show chassis environment fpc on page 278](#)
- [show chassis environment fpm](#)
- [show chassis environment lcc](#)
- [show chassis environment mcs](#)
- [show chassis environment monitored](#)
- [show chassis environment pcg](#)



- *show chassis environment pdu*
- [show chassis environment pem on page 338](#)
- *show chassis environment psm*
- [show chassis environment psu on page 354](#)
- [show chassis environment routing-engine on page 356](#)
- *show chassis environment scg*
- *show chassis environment sfb*
- *show chassis environment sib*
- *show chassis environment sfc*

**List of Sample Output**

[show chassis environment \(M5 Router\) on page 203](#)  
[show chassis environment \(M7i Router\) on page 203](#)  
[show chassis environment \(M10 Router\) on page 204](#)  
[show chassis environment \(M10i Router\) on page 204](#)  
[show chassis environment \(M20 Router\) on page 205](#)  
[show chassis environment \(M40 Router\) on page 205](#)  
[show chassis environment \(M40e Router\) on page 205](#)  
[show chassis environment \(M120 Router\) on page 206](#)  
[show chassis environment \(M160 Router\) on page 207](#)  
[show chassis environment \(M320 Router\) on page 208](#)  
[show chassis environment \(MX150\) on page 208](#)  
[show chassis environment \(MX104 Router\) on page 209](#)  
[show chassis environment \(MX240 Router\) on page 209](#)  
[show chassis environment \(MX240 Router with SCBE\) on page 210](#)  
[show chassis environment \(MX480 Router\) on page 211](#)  
[show chassis environment \(MX480 Router with SCBE\) on page 212](#)  
[show chassis environment \(MX960 Router\) on page 213](#)  
[show chassis environment \(MX960 Router with SCBE\) on page 214](#)  
[show chassis environment \(MX960 Router with MPC5EQ\) on page 216](#)  
[show chassis environment \(MX2020 Router\) on page 220](#)  
[show chassis environment \(MX2020 Router with MPC5EQ and MPC6E\) on page 230](#)  
[show chassis environment \(MX2010 Router\) on page 234](#)  
[show chassis environment \(MX2008 Router\) on page 239](#)  
[show chassis environment \(T320 Router\) on page 243](#)  
[show chassis environment \(MX10003 Router\) on page 244](#)  
[show chassis environment \(MX10008 Router\) on page 245](#)  
[show chassis environment \(MX204 Router\) on page 249](#)  
[show chassis environment \(T640 Router\) on page 250](#)  
[show chassis environment \(T4000 Router\) on page 251](#)  
[show chassis environment \(TX Matrix Router\) on page 252](#)  
[show chassis environment \(T1600 Router\) on page 254](#)  
[show chassis environment \(TX Matrix Plus Router\) on page 255](#)  
[show chassis environment \(TX Matrix Plus router with 3D SIBs\) on page 257](#)  
[show chassis environment \(EX4200 Standalone Switch\) on page 260](#)



[show chassis environment \(EX8216 Switch\) on page 261](#)  
[show chassis environment \(EX9200 Switch\) on page 261](#)  
[show chassis environment \(EX9251 Switch\) on page 262](#)  
[show chassis environment \(EX9253 Switch\) on page 262](#)  
[show chassis environment \(QFX Series and OCX Series\) on page 263](#)  
[show chassis environment interconnect-device \(QFabric System\) on page 264](#)  
[show chassis environment node-device \(QFabric System\) on page 266](#)  
[show chassis environment pem node-device \(QFabric System\) on page 266](#)  
[show chassis environment \(PTX5000 Packet Transport Router\) on page 266](#)  
[show chassis environment \(PTX5000 Packet Transport Router with FPC2-PTX-P1A\) on page 269](#)  
[show chassis environment \(PTX1000 Packet Transport Router\) on page 269](#)  
[show chassis environment \(PTX10008 Router\) on page 270](#)  
[show chassis environment \(PTX10016 Router\) on page 272](#)  
[show chassis environment \(ACX2000 Universal Metro Router\) on page 275](#)  
[show chassis environment \(ACX4000 Universal Metro Router\) on page 275](#)  
[show chassis environment \(ACX5048 Router\) on page 276](#)  
[show chassis environment \(ACX5096 Router\) on page 276](#)  
[show chassis environment \(ACX500 Router\) on page 277](#)

**Output Fields** [Table 9 on page 202](#) lists the output fields for the **show chassis environment** command. Output fields are listed in the approximate order in which they appear.



Table 9: show chassis environment Output Fields

Field Name	Field Description
<b>Class</b>	<p>Information about the category or class of chassis component:</p> <ul style="list-style-type: none"> <li>• <b>Power:</b> Power information: <ul style="list-style-type: none"> <li>• (M5, M10, M20, and M40 routers and EX Series switches only) Power supply status: <b>OK</b>, <b>Testing</b>, (during initial power-on), <b>Failed</b>, or <b>Absent</b>.</li> <li>• (M7i, M10i, M40e, M120, M160, M320, and T Series routers and EX Series switches only) Power Entry Modules status: <b>OK</b>, <b>Testing</b>, (during initial power-on), <b>Check</b>, <b>Failed</b>, or <b>Absent</b>.</li> <li>• (PTX Series only) Power information is reported in PDU or PSM combinations. The status is: <b>OK</b>, <b>Testing</b>, (during initial power-on), <b>Check</b>, <b>Failed</b>, or <b>Absent</b>.</li> </ul> </li> <li>• <b>Temp:</b> Temperature of air flowing through the chassis in degrees Celsius (C) and Fahrenheit (F). <ul style="list-style-type: none"> <li>• On PTX Series Packet Transport Routers and MX2010, MX2020, and MX2008 Routers, multiple cooling zones are supported. FRU temperatures in each zone are coordinated with the fan speed of fan trays in those zones.</li> <li>• EX2200 switches have a side-to-rear cooling system. The <b>Local Intake</b> temperature is measured by the sensor on the right side of the chassis, and the <b>Remote Intake</b> temperature is measured by the sensor on the left side of the chassis.</li> </ul> </li> <li>• <b>Pic:</b> On ACX4000 routers, multiple temperature channels on a MIC. The status is: <b>OK</b> and the <b>Measurement</b> is in degrees Celsius (C) and Fahrenheit (F).</li> <li>• <b>Fan:</b> Fan status: <b>OK</b>, <b>Testing</b> (during initial power-on), <b>Failed</b>, or <b>Absent</b>. On PTX Series Packet Transport Routers and MX2010, MX2020, and MX2008 Routers, multiple fan trays are supported. Fan status is reported in Fan Tray or Fan combinations. <b>Measurement</b> indicates actual fan RPM (PTX and MX2010, MX2020, and MX2008 Routers only).</li> <li>• <b>Misc:</b> Information about other components of the chassis. <ul style="list-style-type: none"> <li>• On some routers, this field indicates the status of one or more additional components.</li> <li>• On the M40e, M160, and M320 router, <b>Misc</b> includes <b>CIP</b> (Connector Interface Panel). <b>OK</b> indicates that the CIP is present. <b>Absent</b> indicates that the CIP is not present.</li> <li>• On T Series routers, <b>Misc</b> includes <b>CIP</b> and <b>SPMB</b> (Switch Processor Mezzanine Board). <b>OK</b> indicates that the <b>CIP</b> or <b>SPMB</b> is present. <b>Absent</b> indicates that the <b>CIP</b> or <b>SPMB</b> is not present.</li> <li>• On PTX Series Packet Transport Routers, <b>Misc</b> includes the <b>SPMB</b> (Switch Processor Mezzanine Board). The SPMB is located on the control boards. <b>OK</b> indicates that the control board is present. <b>Absent</b> indicates that the control board is not present.</li> </ul> </li> </ul>
<b>Item</b>	<p>(MX2010, MX2020, and MX2008 Routers) Information about the chassis component: Routing Engines, Controls Boards (CBs), Switch Fabric Boards (SFBs), PICs, Flexible PIC Concentrators (FPCs), and Adapter Cards (ADCs).</p> <p>(MX104 Routers) Information about the chassis components: Routing Engines, Control Board (CB), Power Entry Module (PEM), and Compact Forwarding Engine Board (AFEB).</p> <p>(QFabric Systems) Information about the chassis component: Control Boards, Routing Engines, Flexible PIC Concentrators (FPCs), and Power Entry Modules (PEMs), Node Devices, and Interconnect Devices.</p> <p>(QFX Series) Information about the chassis component: Flexible PIC Concentrators (FPCs), and Power Entry Modules (PEMs).</p>



Table 9: show chassis environment Output Fields (continued)

Field Name	Field Description
<b>Status</b>	<p>(MX104, MX2010, MX2020, and MX2008 Routers) Status of the specified chassis component. For example, if the Class is Fan, the fan status can be:</p> <ul style="list-style-type: none"> <li>• <b>OK:</b> The fans are operational.</li> <li>• <b>Testing:</b> The fans are being tested during initial power-on.</li> <li>• <b>Failed:</b> The fans have failed or the fans are not spinning.</li> <li>• <b>Absent:</b> The fan tray is not installed.</li> </ul> <p>If the Class is Power, the power supply status can be:</p> <ul style="list-style-type: none"> <li>• <b>OK:</b> The power component is operational.</li> <li>• <b>Testing:</b> The power component is being tested during initial power-on.</li> <li>• <b>Check:</b> There is insufficient power---that is, fewer than the minimum required feeds are connected.</li> <li>• <b>Failed:</b> The inputs leads have failed.</li> <li>• <b>Absent:</b> The power component is not installed.</li> </ul>
<b>Measurement</b>	<p>(MX104, MX2010, MX2020, and MX2008 Routers) Dependant on the Class. For example, if the Class is Temp, indicates the temperature in degree Celsius and degrees Fahrenheit. If the Class is Fan, indicates actual fan RPM.</p>

## Sample Output

### show chassis environment (M5 Router)

```

user@host> show chassis environment

Class Item                Status    Measurement
Power Power Supply A        OK
      Power Supply B      Absent
Temp  FPC 0                 OK        30 degrees C / 86 degrees F
      FEB                  OK        33 degrees C / 91 degrees F
      PS Intake            OK        27 degrees C / 80 degrees F
      PS Exhaust           OK        27 degrees C / 80 degrees F
      Routing Engine       OK        34 degrees C / 93 degrees F
Fans  Left Fan 1           OK        Spinning at normal speed
      Left Fan 2           OK        Spinning at normal speed
      Left Fan 3           OK        Spinning at normal speed
      Left Fan 4           OK        Spinning at normal speed
Misc  Craft Interface      OK

```

### show chassis environment (M7i Router)

```

user@host> show chassis environment

Class Item                Status    Measurement
Power Power Supply 0        OK
      Power Supply 1      Absent
Temp  Intake               OK        22 degrees C / 71 degrees F
      FPC 0               OK        23 degrees C / 73 degrees F
      Power Supplies      OK        23 degrees C / 73 degrees F
      CFEB Intake         OK        24 degrees C / 75 degrees F
      CFEB Exhaust        OK        29 degrees C / 84 degrees F

```



Fans	Routing Engine	OK	26 degrees C / 78 degrees F
	Fan 1	OK	Spinning at normal speed
	Fan 2	OK	Spinning at normal speed
	Fan 3	OK	Spinning at normal speed
	Fan 4	OK	Spinning at normal speed

**show chassis environment (M10 Router)**

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	Power Supply A	OK	
	Power Supply B	Failed	
Temp	FPC 0	OK	36 degrees C / 96 degrees F
	FPC 1	OK	35 degrees C / 95 degrees F
	FEB	OK	34 degrees C / 93 degrees F
	PS Intake	OK	31 degrees C / 87 degrees F
	PS Exhaust	OK	34 degrees C / 93 degrees F
	Routing Engine	OK	35 degrees C / 95 degrees F
Fans	Left Fan 1	OK	Spinning at normal speed
	Left Fan 2	OK	Spinning at normal speed
	Left Fan 3	OK	Spinning at normal speed
	Left Fan 4	OK	Spinning at normal speed
Misc	Craft Interface	OK	

**show chassis environment (M10i Router)**

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	Power Supply 0	OK	
	Power Supply 1	OK	
	Power Supply 2	Absent	
	Power Supply 3	Absent	
Temp	Intake	OK	26 degrees C / 78 degrees F
	FPC 0	OK	27 degrees C / 80 degrees F
	FPC 1	OK	28 degrees C / 82 degrees F
	Lower Power Supplies	OK	29 degrees C / 84 degrees F
	Upper Power Supplies	OK	28 degrees C / 82 degrees F
	CFEB Intake	OK	27 degrees C / 80 degrees F
	CFEB Exhaust	OK	36 degrees C / 96 degrees F
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 1	OK	27 degrees C / 80 degrees F
Fans	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 0 Fan 7	OK	Spinning at normal speed
	Fan Tray 0 Fan 8	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	Absent	
	Fan Tray 1 Fan 2	Absent	
	Fan Tray 1 Fan 3	Absent	
	Fan Tray 1 Fan 4	Absent	
	Fan Tray 1 Fan 5	Absent	
	Fan Tray 1 Fan 6	Absent	



Fan Tray 1 Fan 7	Absent
Fan Tray 1 Fan 8	Absent

### show chassis environment (M20 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	Power Supply A	OK	
	Power Supply B	Absent	
Temp	FPC 0	OK	28 degrees C / 82 degrees F
	FPC 1	OK	27 degrees C / 80 degrees F
	Power Supply A	OK	22 degrees C / 71 degrees F
	Power Supply B	Absent	
	SSB 0	OK	30 degrees C / 86 degrees F
	Backplane	OK	22 degrees C / 71 degrees F
	Routing Engine 0	OK	26 degrees C / 78 degrees F
Fans	Routing Engine 1	Testing	
	Rear Fan	OK	Spinning at normal speed
	Front Upper Fan	OK	Spinning at normal speed
	Front Middle Fan	OK	Spinning at normal speed
	Front Bottom Fan	OK	Spinning at normal speed
Misc	Craft Interface	OK	

### show chassis environment (M40 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	Power Supply A	OK	
	Power Supply B	Absent	
Temp	FPC 3	OK	24 degrees C / 75 degrees F
	FPC 6	OK	26 degrees C / 78 degrees F
	SCB	OK	26 degrees C / 78 degrees F
	Backplane @ A1	OK	28 degrees C / 82 degrees F
	Backplane @ A2	OK	23 degrees C / 73 degrees F
	Routing Engine	OK	26 degrees C / 78 degrees F
Fans	Top Impeller	OK	Spinning at normal speed
	Bottom impeller	OK	Spinning at normal speed
	Rear Left Fan	OK	Spinning at normal speed
	Rear Center Fan	OK	Spinning at normal speed
	Rear Right Fan	OK	Spinning at normal speed
Misc	Craft Interface	OK	

### show chassis environment (M40e Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	PEM 0	OK	
	PEM 1	Absent	
Temp	PCG 0	OK	44 degrees C / 111 degrees F
	PCG 1	OK	47 degrees C / 116 degrees F
	Routing Engine 0	OK	40 degrees C / 104 degrees F
	Routing Engine 1	OK	37 degrees C / 98 degrees F
	MCS 0	OK	45 degrees C / 113 degrees F



	MCS 1	OK	42 degrees C / 107 degrees F
	SFM 0 SPP	OK	40 degrees C / 104 degrees F
	SFM 0 SPR	OK	44 degrees C / 111 degrees F
	SFM 1 SPP	OK	43 degrees C / 109 degrees F
	SFM 1 SPR	OK	45 degrees C / 113 degrees F
	FPC 0	OK	38 degrees C / 100 degrees F
	FPC 1	OK	40 degrees C / 104 degrees F
	FPC 2	OK	38 degrees C / 100 degrees F
	FPC 4	OK	34 degrees C / 93 degrees F
	FPC 5	OK	43 degrees C / 109 degrees F
	FPC 6	OK	41 degrees C / 105 degrees F
	FPC 7	OK	43 degrees C / 109 degrees F
	FPM CMB	OK	28 degrees C / 82 degrees F
	FPM Display	OK	28 degrees C / 82 degrees F
Fans	Rear Bottom Blower	OK	Spinning at normal speed
	Rear Top Blower	OK	Spinning at normal speed
	Front Top Blower	OK	Spinning at normal speed
	Fan Tray Rear Left	OK	Spinning at normal speed
	Fan Tray Rear Right	OK	Spinning at normal speed
	Fan Tray Front Left	OK	Spinning at normal speed
	Fan Tray Front Right	OK	Spinning at normal speed
Misc	CIP	OK	

### show chassis environment (M120 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	
	PEM 1	OK	
	Routing Engine 0	OK	43 degrees C / 109 degrees F
	Routing Engine 1	OK	44 degrees C / 111 degrees F
	CB 0 Intake	OK	33 degrees C / 91 degrees F
	CB 0 Exhaust A	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust B	OK	35 degrees C / 95 degrees F
	CB 1 Intake	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust A	OK	38 degrees C / 100 degrees F
	CB 1 Exhaust B	OK	35 degrees C / 95 degrees F
	FEB 3 Intake	OK	35 degrees C / 95 degrees F
	FEB 3 Exhaust A	OK	37 degrees C / 98 degrees F
	FEB 3 Exhaust B	OK	39 degrees C / 102 degrees F
	FEB 4 Intake	OK	33 degrees C / 91 degrees F
	FEB 4 Exhaust A	OK	39 degrees C / 102 degrees F
	FEB 4 Exhaust B	OK	36 degrees C / 96 degrees F
	FPC 2 Exhaust A	OK	32 degrees C / 89 degrees F
	FPC 2 Exhaust B	OK	31 degrees C / 87 degrees F
	FPC 3 Exhaust A	OK	32 degrees C / 89 degrees F
	FPC 3 Exhaust B	OK	33 degrees C / 91 degrees F
	FPC 4 Exhaust A	OK	32 degrees C / 89 degrees F
	FPC 4 Exhaust B	OK	30 degrees C / 86 degrees F
Fans	Front Top Tray Fan 1	OK	Spinning at normal speed
	Front Top Tray Fan 2	OK	Spinning at normal speed
	Front Top Tray Fan 3	OK	Spinning at normal speed
	Front Top Tray Fan 4	OK	Spinning at normal speed
	Front Top Tray Fan 5	OK	Spinning at normal speed
	Front Top Tray Fan 6	OK	Spinning at normal speed
	Front Top Tray Fan 7	OK	Spinning at normal speed
	Front Top Tray Fan 8	OK	Spinning at normal speed
	Front Bottom Tray Fan 1	OK	Spinning at normal speed



Front Bottom Tray Fan 2	OK	Spinning at normal speed
Front Bottom Tray Fan 3	OK	Spinning at normal speed
Front Bottom Tray Fan 4	OK	Spinning at normal speed
Front Bottom Tray Fan 5	OK	Spinning at normal speed
Front Bottom Tray Fan 6	OK	Spinning at normal speed
Front Bottom Tray Fan 7	OK	Spinning at normal speed
Front Bottom Tray Fan 8	OK	Spinning at normal speed
Rear Top Tray Fan 1	OK	Spinning at normal speed
Rear Top Tray Fan 2	OK	Spinning at normal speed
Rear Top Tray Fan 3	OK	Spinning at normal speed
Rear Top Tray Fan 4	OK	Spinning at normal speed
Rear Top Tray Fan 5	OK	Spinning at normal speed
Rear Top Tray Fan 6	OK	Spinning at normal speed
Rear Top Tray Fan 7	OK	Spinning at normal speed
Rear Top Tray Fan 8	OK	Spinning at normal speed
Rear Bottom Tray Fan 1	OK	Spinning at normal speed
Rear Bottom Tray Fan 2	OK	Spinning at normal speed
Rear Bottom Tray Fan 3	OK	Spinning at normal speed
Rear Bottom Tray Fan 4	OK	Spinning at normal speed
Rear Bottom Tray Fan 5	OK	Spinning at normal speed
Rear Bottom Tray Fan 6	OK	Spinning at normal speed
Rear Bottom Tray Fan 7	OK	Spinning at normal speed
Rear Bottom Tray Fan 8	OK	Spinning at normal speed

### show chassis environment (M160 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	PEM 0	OK	PEM 1
Temp	PCG 0	OK	45 degrees C / 113 degrees F
	PCG 1	Absent	
	Routing Engine 0	OK	35 degrees C / 95 degrees F
	Routing Engine 1	Absent	
	MCS 0	OK	50 degrees C / 122 degrees F
	SFM 0 SPP	OK	47 degrees C / 116 degrees F
	SFM 0 SPR	OK	49 degrees C / 120 degrees F
	SFM 1 SPP	OK	50 degrees C / 122 degrees F
	SFM 1 SPR	OK	50 degrees C / 122 degrees F
	SFM 2 SPP	OK	51 degrees C / 123 degrees F
	SFM 2 SPR	OK	52 degrees C / 125 degrees F
	SFM 3 SPP	OK	52 degrees C / 125 degrees F
	SFM 3 SPR	OK	48 degrees C / 118 degrees F
	FPC 0	OK	45 degrees C / 113 degrees F
	FPC 6	OK	43 degrees C / 109 degrees F
	FPM CMB	OK	31 degrees C / 87 degrees F
	FPM Display	OK	33 degrees C / 91 degrees F
Fans	Rear Bottom Blower	OK	Spinning at normal speed
	Rear Top Blower	OK	Spinning at normal speed
	Front Top Blower	OK	Spinning at normal speed
	Fan Tray Rear Left	OK	Spinning at normal speed
	Fan Tray Rear Right	OK	Spinning at normal speed
	Fan Tray Front Left	OK	Spinning at normal speed
	Fan Tray Front Right	OK	Spinning at normal speed
Misc	CIP	OK	



## show chassis environment (M320 Router)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	Absent	
	PEM 2	OK	
	PEM 3	OK	
	Routing Engine 0	OK	33 degrees C / 91 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	CB 0	OK	36 degrees C / 96 degrees F
	CB 1	OK	36 degrees C / 96 degrees F
	SIB 0	OK	38 degrees C / 100 degrees F
	SIB 1	OK	29 degrees C / 84 degrees F
	SIB 2	OK	38 degrees C / 100 degrees F
	SIB 3	OK	41 degrees C / 105 degrees F
	FPC 0 Intake	OK	28 degrees C / 82 degrees F
	FPC 0 Exhaust	OK	40 degrees C / 104 degrees F
	FPC 1 Intake	OK	29 degrees C / 84 degrees F
	FPC 1 Exhaust	OK	39 degrees C / 102 degrees F
	FPC 2 Intake	OK	28 degrees C / 82 degrees F
	FPC 2 Exhaust	OK	38 degrees C / 100 degrees F
	FPC 3 Intake	OK	28 degrees C / 82 degrees F
	FPC 3 Exhaust	OK	39 degrees C / 102 degrees F
	FPC 6 Intake	OK	27 degrees C / 80 degrees F
	FPC 6 Exhaust	OK	39 degrees C / 102 degrees F
	FPC 7 Intake	OK	27 degrees C / 80 degrees F
	FPC 7 Exhaust	OK	42 degrees C / 107 degrees F
	FPM GBUS	OK	30 degrees C / 86 degrees F
Fan	Top Left Front fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Rear Fan 1 (TOP)	OK	Spinning at normal speed
	Rear Fan 2	OK	Spinning at normal speed
	Rear Fan 3	OK	Spinning at normal speed
	Rear Fan 4	OK	Spinning at normal speed
	Rear Fan 5	OK	Spinning at normal speed
	Rear Fan 6	OK	Spinning at normal speed
	Rear Fan 7 (Bottom)	OK	Spinning at normal speed
Misc	CIP	OK	

## show chassis environment (MX150)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	OK	
Temp	FPC 0 Sensor 1	OK	42 degrees C / 107 degrees F
	FPC 0 Sensor 2	OK	39 degrees C / 102 degrees F
	FPC 0 Coretemp	OK	75 degrees C / 167 degrees F
Fans	FPC 0 Fan Tray 0	OK	Spinning at normal speed
	FPC 0 Fan Tray 1	OK	Spinning at normal speed



## show chassis environment (MX104 Router)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	34 degrees C / 93 degrees F
	PEM 1	Absent	
	ABB 0 Intake	OK	33 degrees C / 91 degrees F
	ABB 0 Exhaust A	OK	42 degrees C / 107 degrees F
	ABB 0 Exhaust B	OK	43 degrees C / 109 degrees F
	ABB 1 Intake	Absent	
	ABB 1 Exhaust A	Absent	
	ABB 1 Exhaust B	Absent	
	Routing Engine 0	OK	34 degrees C / 93 degrees F
	Routing Engine 0 CPU	OK	46 degrees C / 114 degrees F
	Routing Engine 1	Absent	
	Routing Engine 1 CPU	Absent	
	AFEB 0 AFEB Processor	OK	33 degrees C / 91 degrees F
	Fan 1	OK	Spinning at normal speed
Fans	Fan 2	OK	Spinning at normal speed
	Fan 3	OK	Spinning at normal speed
	Fan 4	OK	Spinning at normal speed
	Fan 5	OK	Spinning at normal speed

## show chassis environment (MX240 Router)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	40 degrees C / 104 degrees F
	PEM 1	OK	45 degrees C / 113 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	37 degrees C / 98 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 0 Exhaust B	OK	38 degrees C / 100 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 SF A	OK	49 degrees C / 120 degrees F
	CB 0 SF B	OK	41 degrees C / 105 degrees F
	CB 1 Intake	OK	37 degrees C / 98 degrees F
	CB 1 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 1 ACBC	OK	38 degrees C / 100 degrees F
	CB 1 SF A	OK	47 degrees C / 116 degrees F
	CB 1 SF B	OK	41 degrees C / 105 degrees F
	FPC 1 Intake	OK	33 degrees C / 91 degrees F
	FPC 1 Exhaust A	OK	38 degrees C / 100 degrees F
	FPC 1 Exhaust B	OK	53 degrees C / 127 degrees F
	FPC 1 I3 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 1 I3 0 Chip	OK	53 degrees C / 127 degrees F
	FPC 1 I3 1 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	47 degrees C / 116 degrees F
	FPC 1 I3 2 Chip	OK	49 degrees C / 120 degrees F
	FPC 1 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 1 IA 0 Chip	OK	44 degrees C / 111 degrees F



	FPC 1 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 Intake	OK	32 degrees C / 89 degrees F
	FPC 2 Exhaust A	OK	40 degrees C / 104 degrees F
	FPC 2 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 2 I3 1 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 1 Chip	OK	55 degrees C / 131 degrees F
	FPC 2 I3 2 TSensor	OK	49 degrees C / 120 degrees F
	FPC 2 I3 2 Chip	OK	52 degrees C / 125 degrees F
	FPC 2 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 2 I3 3 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 2 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 2 IA 1 Chip	OK	53 degrees C / 127 degrees F
Fans	Front Fan	OK	Spinning at normal speed
	Middle Fan	OK	Spinning at normal speed
	Rear Fan	OK	Spinning at normal speed

#### show chassis environment (MX240 Router with SCBE)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	40 degrees C / 104 degrees F
	PEM 1	OK	45 degrees C / 113 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	37 degrees C / 98 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 0 Exhaust B	OK	38 degrees C / 100 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 XF A	OK	49 degrees C / 120 degrees F
	CB 0 XF B	OK	41 degrees C / 105 degrees F
	CB 1 Intake	OK	37 degrees C / 98 degrees F
	CB 1 Exhaust A	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 1 ACBC	OK	38 degrees C / 100 degrees F
	CB 1 XF A	OK	47 degrees C / 116 degrees F
	CB 1 XF B	OK	41 degrees C / 105 degrees F
	FPC 1 Intake	OK	33 degrees C / 91 degrees F
	FPC 1 Exhaust A	OK	38 degrees C / 100 degrees F
	FPC 1 Exhaust B	OK	53 degrees C / 127 degrees F
	FPC 1 I3 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 1 I3 0 Chip	OK	53 degrees C / 127 degrees F
	FPC 1 I3 1 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	47 degrees C / 116 degrees F
	FPC 1 I3 2 Chip	OK	49 degrees C / 120 degrees F
	FPC 1 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 1 IA 0 Chip	OK	44 degrees C / 111 degrees F
	FPC 1 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 1 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 Intake	OK	32 degrees C / 89 degrees F



	FPC 2 Exhaust A	OK	40 degrees C / 104 degrees F
	FPC 2 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 2 I3 1 TSensor	OK	52 degrees C / 125 degrees F
	FPC 2 I3 1 Chip	OK	55 degrees C / 131 degrees F
	FPC 2 I3 2 TSensor	OK	49 degrees C / 120 degrees F
	FPC 2 I3 2 Chip	OK	52 degrees C / 125 degrees F
	FPC 2 I3 3 TSensor	OK	44 degrees C / 111 degrees F
	FPC 2 I3 3 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 2 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 2 IA 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 2 IA 1 Chip	OK	53 degrees C / 127 degrees F
Fans	Front Fan	OK	Spinning at normal speed
	Middle Fan	OK	Spinning at normal speed
	Rear Fan	OK	Spinning at normal speed

### show chassis environment (MX480 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	35 degrees C / 95 degrees F
	PEM 1	OK	40 degrees C / 104 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	44 degrees C / 111 degrees F
	Routing Engine 1	OK	45 degrees C / 113 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	38 degrees C / 100 degrees F
	CB 0 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 SF A	OK	51 degrees C / 123 degrees F
	CB 0 SF B	OK	44 degrees C / 111 degrees F
	CB 1 Intake	OK	36 degrees C / 96 degrees F
	CB 1 Exhaust A	OK	39 degrees C / 102 degrees F
	CB 1 Exhaust B	OK	40 degrees C / 104 degrees F
	CB 1 ACBC	OK	37 degrees C / 98 degrees F
	CB 1 SF A	OK	50 degrees C / 122 degrees F
	CB 1 SF B	OK	43 degrees C / 109 degrees F
	FPC 0 Intake	OK	36 degrees C / 96 degrees F
	FPC 0 Exhaust A	OK	39 degrees C / 102 degrees F
	FPC 0 Exhaust B	OK	51 degrees C / 123 degrees F
	FPC 0 I3 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 0 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 I3 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 0 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 0 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 0 I3 2 Chip	OK	48 degrees C / 118 degrees F
	FPC 0 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 0 I3 3 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 0 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 Intake	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust A	OK	41 degrees C / 105 degrees F
	FPC 1 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 1 I3 0 TSensor	OK	51 degrees C / 123 degrees F



	FPC 1 I3 0 Chip	OK	57 degrees C / 134 degrees F
	FPC 1 I3 1 TSensor	OK	48 degrees C / 118 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 I3 2 Chip	OK	50 degrees C / 122 degrees F
	FPC 1 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 IA 1 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 IA 1 Chip	OK	50 degrees C / 122 degrees F
Fans	Top Rear Fan	OK	Spinning at normal speed
	Bottom Rear Fan	OK	Spinning at normal speed
	Top Middle Fan	OK	Spinning at normal speed
	Bottom Middle Fan	OK	Spinning at normal speed
	Top Front Fan	OK	Spinning at normal speed
	Bottom Front Fan	OK	Spinning at normal speed

## show chassis environment (MX480 Router with SCBE)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	35 degrees C / 95 degrees F
	PEM 1	OK	40 degrees C / 104 degrees F
	PEM 2	Absent	
	PEM 3	Absent	
	Routing Engine 0	OK	44 degrees C / 111 degrees F
	Routing Engine 1	OK	45 degrees C / 113 degrees F
	CB 0 Intake	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust A	OK	38 degrees C / 100 degrees F
	CB 0 Exhaust B	OK	39 degrees C / 102 degrees F
	CB 0 ACBC	OK	37 degrees C / 98 degrees F
	CB 0 XF A	OK	51 degrees C / 123 degrees F
	CB 0 XF B	OK	44 degrees C / 111 degrees F
	CB 1 Intake	OK	36 degrees C / 96 degrees F
	CB 1 Exhaust A	OK	39 degrees C / 102 degrees F
	CB 1 Exhaust B	OK	40 degrees C / 104 degrees F
	CB 1 ACBC	OK	37 degrees C / 98 degrees F
	CB 1 XF A	OK	50 degrees C / 122 degrees F
	CB 1 XF B	OK	43 degrees C / 109 degrees F
	FPC 0 Intake	OK	36 degrees C / 96 degrees F
	FPC 0 Exhaust A	OK	39 degrees C / 102 degrees F
	FPC 0 Exhaust B	OK	51 degrees C / 123 degrees F
	FPC 0 I3 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 0 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 I3 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 0 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 0 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 0 I3 2 Chip	OK	48 degrees C / 118 degrees F
	FPC 0 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 0 I3 3 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 0 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 Intake	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust A	OK	41 degrees C / 105 degrees F
	FPC 1 Exhaust B	OK	52 degrees C / 125 degrees F
	FPC 1 I3 0 TSensor	OK	51 degrees C / 123 degrees F



	FPC 1 I3 0 Chip	OK	57 degrees C / 134 degrees F
	FPC 1 I3 1 TSensor	OK	48 degrees C / 118 degrees F
	FPC 1 I3 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 1 I3 2 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 I3 2 Chip	OK	50 degrees C / 122 degrees F
	FPC 1 I3 3 TSensor	OK	42 degrees C / 107 degrees F
	FPC 1 I3 3 Chip	OK	46 degrees C / 114 degrees F
	FPC 1 IA 0 TSensor	OK	49 degrees C / 120 degrees F
	FPC 1 IA 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 IA 1 TSensor	OK	46 degrees C / 114 degrees F
	FPC 1 IA 1 Chip	OK	50 degrees C / 122 degrees F
Fans	Top Rear Fan	OK	Spinning at normal speed
	Bottom Rear Fan	OK	Spinning at normal speed
	Top Middle Fan	OK	Spinning at normal speed
	Bottom Middle Fan	OK	Spinning at normal speed
	Top Front Fan	OK	Spinning at normal speed
	Bottom Front Fan	OK	Spinning at normal speed

### show chassis environment (MX960 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	Absent	
	PEM 2	Check	
	PEM 3	OK	35 degrees C / 95 degrees F
	Routing Engine 0	OK	37 degrees C / 98 degrees F
	Routing Engine 1	Absent	
	CB 0 Intake	OK	24 degrees C / 75 degrees F
	CB 0 Exhaust A	OK	30 degrees C / 86 degrees F
	CB 0 Exhaust B	OK	27 degrees C / 80 degrees F
	CB 1 Intake	Absent	
	CB 1 Exhaust A	Absent	
	CB 1 Exhaust B	Absent	
	CB 1 ACBC	Absent	
	CB 1 SF A	Absent	
	CB 1 SF B	Absent	
	CB 2 Intake	Absent	
	CB 2 Exhaust A	Absent	
	CB 2 Exhaust B	Absent	
	CB 2 ACBC	Absent	
	CB 2 SF A	Absent	
	CB 2 SF B	Absent	
	FPC 4 Intake	OK	24 degrees C / 75 degrees F
	FPC 4 Exhaust A	OK	36 degrees C / 96 degrees F
	FPC 4 Exhaust B	OK	38 degrees C / 100 degrees F
	FPC 7 Intake	OK	24 degrees C / 75 degrees F
	FPC 7 Exhaust A	OK	36 degrees C / 96 degrees F
	FPC 7 Exhaust B	OK	42 degrees C / 107 degrees F
Fans	Top Fan Tray Temp	Failed	
	Top Tray Fan 1	OK	Spinning at normal speed
	Top Tray Fan 2	OK	Spinning at normal speed
	Top Tray Fan 3	OK	Spinning at normal speed
	Top Tray Fan 4	OK	Spinning at normal speed
	Top Tray Fan 5	OK	Spinning at normal speed
	Top Tray Fan 6	OK	Spinning at normal speed
	Bottom Fan Tray Temp	Failed	
	Bottom Tray Fan 1	OK	Spinning at normal speed
	Bottom Tray Fan 2	OK	Spinning at normal speed



Bottom Tray Fan 3	OK	Spinning at normal speed
Bottom Tray Fan 4	OK	Spinning at normal speed
Bottom Tray Fan 5	OK	Spinning at normal speed
Bottom Tray Fan 6	OK	Spinning at normal speed

### show chassis environment (MX960 Router with SCBE)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	OK	50 degrees C / 122 degrees F
	PEM 2	OK	50 degrees C / 122 degrees F
	PEM 3	OK	50 degrees C / 122 degrees F
	Routing Engine 0	OK	42 degrees C / 107 degrees F
	Routing Engine 0 CPU	OK	51 degrees C / 123 degrees F
	Routing Engine 1	OK	39 degrees C / 102 degrees F
	Routing Engine 1 CPU	OK	44 degrees C / 111 degrees F
	CB 0 Intake	OK	35 degrees C / 95 degrees F
	CB 0 Exhaust A	OK	36 degrees C / 96 degrees F
	CB 0 Exhaust B	OK	43 degrees C / 109 degrees F
	CB 0 ACBC	OK	38 degrees C / 100 degrees F
	CB 0 XF A	OK	53 degrees C / 127 degrees F
	CB 0 XF B	OK	47 degrees C / 116 degrees F
	CB 1 Intake	OK	35 degrees C / 95 degrees F
	CB 1 Exhaust A	OK	35 degrees C / 95 degrees F
	CB 1 Exhaust B	OK	41 degrees C / 105 degrees F
	CB 1 ACBC	OK	38 degrees C / 100 degrees F
	CB 1 XF A	OK	52 degrees C / 125 degrees F
	CB 1 XF B	OK	47 degrees C / 116 degrees F
	CB 2 Intake	OK	32 degrees C / 89 degrees F
	CB 2 Exhaust A	OK	30 degrees C / 86 degrees F
	CB 2 Exhaust B	OK	35 degrees C / 95 degrees F
	CB 2 ACBC	OK	33 degrees C / 91 degrees F
	CB 2 XF A	OK	51 degrees C / 123 degrees F
	CB 2 XF B	OK	50 degrees C / 122 degrees F
	FPC 0 Intake	OK	35 degrees C / 95 degrees F
	FPC 0 Exhaust A	OK	39 degrees C / 102 degrees F
	FPC 0 Exhaust B	OK	50 degrees C / 122 degrees F
	FPC 0 I3 0 TSensor	OK	50 degrees C / 122 degrees F
	FPC 0 I3 0 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 I3 1 TSensor	OK	47 degrees C / 116 degrees F
	FPC 0 I3 1 Chip	OK	50 degrees C / 122 degrees F
	FPC 0 I3 2 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 I3 2 Chip	OK	48 degrees C / 118 degrees F
	FPC 0 I3 3 TSensor	OK	41 degrees C / 105 degrees F
	FPC 0 I3 3 Chip	OK	44 degrees C / 111 degrees F
	FPC 0 IA 0 TSensor	OK	45 degrees C / 113 degrees F
	FPC 0 IA 0 Chip	OK	45 degrees C / 113 degrees F
	FPC 0 IA 1 TSensor	OK	44 degrees C / 111 degrees F
	FPC 0 IA 1 Chip	OK	48 degrees C / 118 degrees F
	FPC 1 Intake	OK	36 degrees C / 96 degrees F
	FPC 1 Exhaust A	OK	47 degrees C / 116 degrees F
	FPC 1 Exhaust B	OK	43 degrees C / 109 degrees F
	FPC 1 LU 0 TCAM TSensor	OK	53 degrees C / 127 degrees F
	FPC 1 LU 0 TCAM Chip	OK	57 degrees C / 134 degrees F
	FPC 1 LU 0 TSensor	OK	53 degrees C / 127 degrees F
	FPC 1 LU 0 Chip	OK	60 degrees C / 140 degrees F
	FPC 1 MQ 0 TSensor	OK	53 degrees C / 127 degrees F
	FPC 1 MQ 0 Chip	OK	56 degrees C / 132 degrees F



FPC 1 LU 1 TCAM TSensor	OK	51 degrees C / 123 degrees F
FPC 1 LU 1 TCAM Chip	OK	52 degrees C / 125 degrees F
FPC 1 LU 1 TSensor	OK	51 degrees C / 123 degrees F
FPC 1 LU 1 Chip	OK	53 degrees C / 127 degrees F
FPC 1 MQ 1 TSensor	OK	51 degrees C / 123 degrees F
FPC 1 MQ 1 Chip	OK	58 degrees C / 136 degrees F
FPC 2 Intake	OK	35 degrees C / 95 degrees F
FPC 2 Exhaust A	OK	39 degrees C / 102 degrees F
FPC 2 Exhaust B	OK	54 degrees C / 129 degrees F
FPC 2 I3 0 TSensor	OK	52 degrees C / 125 degrees F
FPC 2 I3 0 Chip	OK	59 degrees C / 138 degrees F
FPC 2 I3 1 TSensor	OK	48 degrees C / 118 degrees F
FPC 2 I3 1 Chip	OK	52 degrees C / 125 degrees F
FPC 2 I3 2 TSensor	OK	47 degrees C / 116 degrees F
FPC 2 I3 2 Chip	OK	49 degrees C / 120 degrees F
FPC 2 I3 3 TSensor	OK	41 degrees C / 105 degrees F
FPC 2 I3 3 Chip	OK	44 degrees C / 111 degrees F
FPC 2 IA 0 TSensor	OK	47 degrees C / 116 degrees F
FPC 2 IA 0 Chip	OK	46 degrees C / 114 degrees F
FPC 2 IA 1 TSensor	OK	45 degrees C / 113 degrees F
FPC 2 IA 1 Chip	OK	49 degrees C / 120 degrees F
FPC 3 Intake	OK	34 degrees C / 93 degrees F
FPC 3 Exhaust A	OK	34 degrees C / 93 degrees F
FPC 3 Exhaust B	OK	47 degrees C / 116 degrees F
FPC 3 I3 0 TSensor	OK	48 degrees C / 118 degrees F
FPC 3 I3 0 Chip	OK	52 degrees C / 125 degrees F
FPC 3 I3 1 TSensor	OK	46 degrees C / 114 degrees F
FPC 3 I3 1 Chip	OK	48 degrees C / 118 degrees F
FPC 3 IA 0 TSensor	OK	41 degrees C / 105 degrees F
FPC 3 IA 0 Chip	OK	40 degrees C / 104 degrees F
FPC 5 Intake	OK	42 degrees C / 107 degrees F
FPC 5 Exhaust A	OK	42 degrees C / 107 degrees F
FPC 5 Exhaust B	OK	53 degrees C / 127 degrees F
FPC 5 LU 0 TSensor	OK	53 degrees C / 127 degrees F
FPC 5 LU 0 Chip	OK	54 degrees C / 129 degrees F
FPC 5 LU 1 TSensor	OK	53 degrees C / 127 degrees F
FPC 5 LU 1 Chip	OK	61 degrees C / 141 degrees F
FPC 5 LU 2 TSensor	OK	53 degrees C / 127 degrees F
FPC 5 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 5 LU 3 TSensor	OK	53 degrees C / 127 degrees F
FPC 5 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 5 MQ 0 TSensor	OK	47 degrees C / 116 degrees F
FPC 5 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 5 MQ 1 TSensor	OK	47 degrees C / 116 degrees F
FPC 5 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 5 MQ 2 TSensor	OK	47 degrees C / 116 degrees F
FPC 5 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 5 MQ 3 TSensor	OK	47 degrees C / 116 degrees F
FPC 5 MQ 3 Chip	OK	45 degrees C / 113 degrees F
FPC 7 Intake	OK	36 degrees C / 96 degrees F
FPC 7 Exhaust A	OK	35 degrees C / 95 degrees F
FPC 7 Exhaust B	OK	33 degrees C / 91 degrees F
FPC 7 QX 0 TSensor	OK	42 degrees C / 107 degrees F
FPC 7 QX 0 Chip	OK	47 degrees C / 116 degrees F
FPC 7 LU 0 TCAM TSensor	OK	42 degrees C / 107 degrees F
FPC 7 LU 0 TCAM Chip	OK	44 degrees C / 111 degrees F
FPC 7 LU 0 TSensor	OK	42 degrees C / 107 degrees F
FPC 7 LU 0 Chip	OK	46 degrees C / 114 degrees F
FPC 7 MQ 0 TSensor	OK	42 degrees C / 107 degrees F
FPC 7 MQ 0 Chip	OK	45 degrees C / 113 degrees F



	FPC 8 Intake	OK	33 degrees C / 91 degrees F
	FPC 8 Exhaust A	OK	33 degrees C / 91 degrees F
	FPC 8 Exhaust B	OK	36 degrees C / 96 degrees F
	FPC 8 I3 0 TSensor	OK	38 degrees C / 100 degrees F
	FPC 8 I3 0 Chip	OK	43 degrees C / 109 degrees F
	FPC 8 BDS 0 TSensor	OK	37 degrees C / 98 degrees F
	FPC 8 BDS 0 Chip	OK	36 degrees C / 96 degrees F
	FPC 8 IA 0 TSensor	OK	37 degrees C / 98 degrees F
	FPC 8 IA 0 Chip	OK	37 degrees C / 98 degrees F
	FPC 10 Intake	OK	38 degrees C / 100 degrees F
	FPC 10 Exhaust A	OK	36 degrees C / 96 degrees F
	FPC 10 Exhaust B	OK	41 degrees C / 105 degrees F
	FPC 10 I3 0 TSensor	OK	40 degrees C / 104 degrees F
	FPC 10 I3 0 Chip	OK	42 degrees C / 107 degrees F
	FPC 10 I3 1 TSensor	OK	40 degrees C / 104 degrees F
	FPC 10 I3 1 Chip	OK	44 degrees C / 111 degrees F
	FPC 10 I3 2 TSensor	OK	42 degrees C / 107 degrees F
	FPC 10 I3 2 Chip	OK	43 degrees C / 109 degrees F
	FPC 10 I3 3 TSensor	OK	39 degrees C / 102 degrees F
	FPC 10 I3 3 Chip	OK	44 degrees C / 111 degrees F
	FPC 10 IA 0 TSensor	OK	36 degrees C / 96 degrees F
	FPC 10 IA 0 Chip	OK	36 degrees C / 96 degrees F
	FPC 10 IA 1 TSensor	OK	43 degrees C / 109 degrees F
	FPC 10 IA 1 Chip	OK	42 degrees C / 107 degrees F
Fans	Top Fan Tray Temp	OK	37 degrees C / 98 degrees F
	Top Tray Fan 1	OK	Spinning at normal speed
	Top Tray Fan 2	OK	Spinning at normal speed
	Top Tray Fan 3	OK	Spinning at normal speed
	Top Tray Fan 4	OK	Spinning at normal speed
	Top Tray Fan 5	OK	Spinning at normal speed
	Top Tray Fan 6	OK	Spinning at normal speed
	Bottom Fan Tray Temp	OK	28 degrees C / 82 degrees F
	Bottom Tray Fan 1	OK	Spinning at normal speed
	Bottom Tray Fan 2	OK	Spinning at normal speed
	Bottom Tray Fan 3	OK	Spinning at normal speed
	Bottom Tray Fan 4	OK	Spinning at normal speed
	Bottom Tray Fan 5	OK	Spinning at normal speed
	Bottom Tray Fan 6	OK	Spinning at normal speed

### show chassis environment (MX960 Router with MPC5EQ)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	50 degrees C / 122 degrees F
	PEM 1	OK	45 degrees C / 113 degrees F
	PEM 2	OK	45 degrees C / 113 degrees F
	PEM 3	Absent	
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 0 CPU	OK	30 degrees C / 86 degrees F
	Routing Engine 1	Present	
	Routing Engine 1 CPU	Present	
	CB 0 Intake	OK	29 degrees C / 84 degrees F
	CB 0 Exhaust A	OK	29 degrees C / 84 degrees F
	CB 0 Exhaust B	OK	34 degrees C / 93 degrees F
	CB 0 ACBC	OK	32 degrees C / 89 degrees F
	CB 0 XF A	OK	49 degrees C / 120 degrees F
	CB 0 XF B	OK	45 degrees C / 113 degrees F
	CB 1 Intake	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust A	OK	26 degrees C / 78 degrees F



CB 1 Exhaust B	OK	27 degrees C / 80 degrees F
CB 1 ACBC	OK	26 degrees C / 78 degrees F
CB 1 XF A	OK	32 degrees C / 89 degrees F
CB 1 XF B	OK	32 degrees C / 89 degrees F
CB 2 Intake	OK	28 degrees C / 82 degrees F
CB 2 Exhaust A	OK	27 degrees C / 80 degrees F
CB 2 Exhaust B	OK	33 degrees C / 91 degrees F
CB 2 ACBC	OK	30 degrees C / 86 degrees F
CB 2 XF A	OK	48 degrees C / 118 degrees F
CB 2 XF B	OK	46 degrees C / 114 degrees F
FPC 0 Intake	OK	38 degrees C / 100 degrees F
FPC 0 Exhaust A	OK	48 degrees C / 118 degrees F
FPC 0 Exhaust B	OK	49 degrees C / 120 degrees F
FPC 0 XL TSen	OK	48 degrees C / 118 degrees F
FPC 0 XL Chip	OK	50 degrees C / 122 degrees F
FPC 0 XL_XR0 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XL_XR0 Chip	OK	53 degrees C / 127 degrees F
FPC 0 XL_XR1 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XL_XR1 Chip	OK	54 degrees C / 129 degrees F
FPC 0 XQ TSen	OK	48 degrees C / 118 degrees F
FPC 0 XQ Chip	OK	52 degrees C / 125 degrees F
FPC 0 XQ_XR0 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XQ_XR0 Chip	OK	62 degrees C / 143 degrees F
FPC 0 XQ_XR1 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XQ_XR1 Chip	OK	62 degrees C / 143 degrees F
FPC 0 XM 0 TSen	OK	53 degrees C / 127 degrees F
FPC 0 XM 0 Chip	OK	63 degrees C / 145 degrees F
FPC 0 XM 1 TSen	OK	53 degrees C / 127 degrees F
FPC 0 XM 1 Chip	OK	46 degrees C / 114 degrees F
FPC 0 PLX PCIe Switch TSe	OK	53 degrees C / 127 degrees F
FPC 0 PLX PCIe Switch Chi	OK	66 degrees C / 150 degrees F
FPC 1 Intake	OK	31 degrees C / 87 degrees F
FPC 1 Exhaust A	OK	38 degrees C / 100 degrees F
FPC 1 Exhaust B	OK	49 degrees C / 120 degrees F
FPC 1 LU 0 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 0 Chip	OK	47 degrees C / 116 degrees F
FPC 1 LU 1 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 1 Chip	OK	42 degrees C / 107 degrees F
FPC 1 LU 2 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 2 Chip	OK	46 degrees C / 114 degrees F
FPC 1 LU 3 TSen	OK	41 degrees C / 105 degrees F
FPC 1 LU 3 Chip	OK	51 degrees C / 123 degrees F
FPC 1 XM 0 TSen	OK	41 degrees C / 105 degrees F
FPC 1 XM 0 Chip	OK	49 degrees C / 120 degrees F
FPC 1 XF 0 TSen	OK	41 degrees C / 105 degrees F
FPC 1 XF 0 Chip	OK	63 degrees C / 145 degrees F
FPC 1 PLX Switch TSen	OK	41 degrees C / 105 degrees F
FPC 1 PLX Switch Chip	OK	43 degrees C / 109 degrees F
FPC 3 Intake	OK	31 degrees C / 87 degrees F
FPC 3 Exhaust A	OK	37 degrees C / 98 degrees F
FPC 3 Exhaust B	OK	43 degrees C / 109 degrees F
FPC 3 LU 0 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 0 Chip	OK	43 degrees C / 109 degrees F
FPC 3 LU 1 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 1 Chip	OK	46 degrees C / 114 degrees F
FPC 3 LU 2 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 2 Chip	OK	40 degrees C / 104 degrees F
FPC 3 LU 3 TSen	OK	42 degrees C / 107 degrees F
FPC 3 LU 3 Chip	OK	41 degrees C / 105 degrees F
FPC 3 MQ 0 TSen	OK	37 degrees C / 98 degrees F



FPC 3 MQ 0 Chip	OK	37 degrees C / 98 degrees F
FPC 3 MQ 1 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 1 Chip	OK	40 degrees C / 104 degrees F
FPC 3 MQ 2 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 2 Chip	OK	36 degrees C / 96 degrees F
FPC 3 MQ 3 TSen	OK	37 degrees C / 98 degrees F
FPC 3 MQ 3 Chip	OK	38 degrees C / 100 degrees F
FPC 4 Intake	OK	34 degrees C / 93 degrees F
FPC 4 Exhaust A	OK	45 degrees C / 113 degrees F
FPC 4 Exhaust B	OK	47 degrees C / 116 degrees F
FPC 4 XL TSen	OK	44 degrees C / 111 degrees F
FPC 4 XL Chip	OK	47 degrees C / 116 degrees F
FPC 4 XL_XR0 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XL_XR0 Chip	OK	48 degrees C / 118 degrees F
FPC 4 XL_XR1 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XL_XR1 Chip	OK	47 degrees C / 116 degrees F
FPC 4 XQ TSen	OK	44 degrees C / 111 degrees F
FPC 4 XQ Chip	OK	47 degrees C / 116 degrees F
FPC 4 XQ_XR0 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XQ_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 4 XQ_XR1 TSen	OK	44 degrees C / 111 degrees F
FPC 4 XQ_XR1 Chip	OK	58 degrees C / 136 degrees F
FPC 4 XM 0 TSen	OK	51 degrees C / 123 degrees F
FPC 4 XM 0 Chip	OK	61 degrees C / 141 degrees F
FPC 4 XM 1 TSen	OK	51 degrees C / 123 degrees F
FPC 4 XM 1 Chip	OK	47 degrees C / 116 degrees F
FPC 4 PLX PCIe Switch TSe	OK	51 degrees C / 123 degrees F
FPC 4 PLX PCIe Switch Chi	OK	60 degrees C / 140 degrees F
FPC 5 Intake	OK	34 degrees C / 93 degrees F
FPC 5 Exhaust A	OK	45 degrees C / 113 degrees F
FPC 5 Exhaust B	OK	47 degrees C / 116 degrees F
FPC 5 XL TSen	OK	45 degrees C / 113 degrees F
FPC 5 XL Chip	OK	47 degrees C / 116 degrees F
FPC 5 XL_XR0 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XL_XR0 Chip	OK	49 degrees C / 120 degrees F
FPC 5 XL_XR1 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XL_XR1 Chip	OK	49 degrees C / 120 degrees F
FPC 5 XQ TSen	OK	45 degrees C / 113 degrees F
FPC 5 XQ Chip	OK	48 degrees C / 118 degrees F
FPC 5 XQ_XR0 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XQ_XR0 Chip	OK	60 degrees C / 140 degrees F
FPC 5 XQ_XR1 TSen	OK	45 degrees C / 113 degrees F
FPC 5 XQ_XR1 Chip	OK	58 degrees C / 136 degrees F
FPC 5 XM 0 TSen	OK	50 degrees C / 122 degrees F
FPC 5 XM 0 Chip	OK	48 degrees C / 118 degrees F
FPC 5 XM 1 TSen	OK	50 degrees C / 122 degrees F
FPC 5 XM 1 Chip	OK	47 degrees C / 116 degrees F
FPC 5 PLX PCIe Switch TSe	OK	50 degrees C / 122 degrees F
FPC 5 PLX PCIe Switch Chi	OK	59 degrees C / 138 degrees F
FPC 7 Intake	OK	32 degrees C / 89 degrees F
FPC 7 Exhaust A	OK	32 degrees C / 89 degrees F
FPC 7 Exhaust B	OK	33 degrees C / 91 degrees F
FPC 7 LU 0 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 0 Chip	OK	44 degrees C / 111 degrees F
FPC 7 LU 1 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 1 Chip	OK	47 degrees C / 116 degrees F
FPC 7 LU 2 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 2 Chip	OK	39 degrees C / 102 degrees F
FPC 7 LU 3 TSen	OK	49 degrees C / 120 degrees F
FPC 7 LU 3 Chip	OK	43 degrees C / 109 degrees F



FPC 7 XM 0 TSen	OK	49 degrees C / 120 degrees F
FPC 7 XM 0 Chip	OK	57 degrees C / 134 degrees F
FPC 7 XM 1 TSen	OK	49 degrees C / 120 degrees F
FPC 7 XM 1 Chip	OK	48 degrees C / 118 degrees F
FPC 7 PLX Switch TSen	OK	49 degrees C / 120 degrees F
FPC 7 PLX Switch Chip	OK	45 degrees C / 113 degrees F
FPC 8 Intake	OK	36 degrees C / 96 degrees F
FPC 8 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 8 Exhaust B	OK	46 degrees C / 114 degrees F
FPC 8 XL TSen	OK	46 degrees C / 114 degrees F
FPC 8 XL Chip	OK	47 degrees C / 116 degrees F
FPC 8 XL_XR0 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XL_XR0 Chip	OK	53 degrees C / 127 degrees F
FPC 8 XL_XR1 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XL_XR1 Chip	OK	52 degrees C / 125 degrees F
FPC 8 XQ TSen	OK	46 degrees C / 114 degrees F
FPC 8 XQ Chip	OK	46 degrees C / 114 degrees F
FPC 8 XQ_XR0 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XQ_XR0 Chip	OK	59 degrees C / 138 degrees F
FPC 8 XQ_XR1 TSen	OK	46 degrees C / 114 degrees F
FPC 8 XQ_XR1 Chip	OK	57 degrees C / 134 degrees F
FPC 8 XM 0 TSen	OK	52 degrees C / 125 degrees F
FPC 8 XM 0 Chip	OK	61 degrees C / 141 degrees F
FPC 8 XM 1 TSen	OK	52 degrees C / 125 degrees F
FPC 8 XM 1 Chip	OK	47 degrees C / 116 degrees F
FPC 8 PLX PCIe Switch TSe	OK	52 degrees C / 125 degrees F
FPC 8 PLX PCIe Switch Chi	OK	63 degrees C / 145 degrees F
FPC 9 Intake	OK	31 degrees C / 87 degrees F
FPC 9 Exhaust A	OK	34 degrees C / 93 degrees F
FPC 9 Exhaust B	OK	35 degrees C / 95 degrees F
FPC 9 QX 0 TSen	OK	42 degrees C / 107 degrees F
FPC 9 QX 0 Chip	OK	45 degrees C / 113 degrees F
FPC 9 LU 0 TCAM TSen	OK	42 degrees C / 107 degrees F
FPC 9 LU 0 TCAM Chip	OK	41 degrees C / 105 degrees F
FPC 9 LU 0 TSen	OK	42 degrees C / 107 degrees F
FPC 9 LU 0 Chip	OK	43 degrees C / 109 degrees F
FPC 9 MQ 0 TSen	OK	42 degrees C / 107 degrees F
FPC 9 MQ 0 Chip	OK	43 degrees C / 109 degrees F
FPC 9 QX 1 TSen	OK	38 degrees C / 100 degrees F
FPC 9 QX 1 Chip	OK	40 degrees C / 104 degrees F
FPC 9 LU 1 TCAM TSen	OK	38 degrees C / 100 degrees F
FPC 9 LU 1 TCAM Chip	OK	38 degrees C / 100 degrees F
FPC 9 LU 1 TSen	OK	38 degrees C / 100 degrees F
FPC 9 LU 1 Chip	OK	41 degrees C / 105 degrees F
FPC 9 MQ 1 TSen	OK	38 degrees C / 100 degrees F
FPC 9 MQ 1 Chip	OK	41 degrees C / 105 degrees F
FPC 10 Intake	OK	35 degrees C / 95 degrees F
FPC 10 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 10 Exhaust B	OK	46 degrees C / 114 degrees F
FPC 10 XL TSen	OK	42 degrees C / 107 degrees F
FPC 10 XL Chip	OK	44 degrees C / 111 degrees F
FPC 10 XL_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 10 XL_XR0 Chip	OK	47 degrees C / 116 degrees F
FPC 10 XL_XR1 TSen	OK	42 degrees C / 107 degrees F
FPC 10 XL_XR1 Chip	OK	48 degrees C / 118 degrees F
FPC 10 XQ TSen	OK	42 degrees C / 107 degrees F
FPC 10 XQ Chip	OK	46 degrees C / 114 degrees F
FPC 10 XQ_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 10 XQ_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 10 XQ_XR1 TSen	OK	42 degrees C / 107 degrees F



	FPC 10 XQ_XR1 Chip	OK	53 degrees C / 127 degrees F
	FPC 10 XM 0 TSen	OK	51 degrees C / 123 degrees F
	FPC 10 XM 0 Chip	OK	61 degrees C / 141 degrees F
	FPC 10 XM 1 TSen	OK	51 degrees C / 123 degrees F
	FPC 10 XM 1 Chip	OK	49 degrees C / 120 degrees F
	FPC 10 PLX PCIe Switch TSe	OK	51 degrees C / 123 degrees F
	FPC 10 PLX PCIe Switch Chi	OK	61 degrees C / 141 degrees F
	FPC 11 Intake	OK	33 degrees C / 91 degrees F
	FPC 11 Exhaust A	OK	33 degrees C / 91 degrees F
	FPC 11 Exhaust B	OK	34 degrees C / 93 degrees F
	FPC 11 LU 0 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 0 Chip	OK	48 degrees C / 118 degrees F
	FPC 11 LU 1 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 1 Chip	OK	50 degrees C / 122 degrees F
	FPC 11 LU 2 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 2 Chip	OK	41 degrees C / 105 degrees F
	FPC 11 LU 3 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 LU 3 Chip	OK	48 degrees C / 118 degrees F
	FPC 11 XM 0 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 XM 0 Chip	OK	57 degrees C / 134 degrees F
	FPC 11 XM 1 TSen	OK	50 degrees C / 122 degrees F
	FPC 11 XM 1 Chip	OK	52 degrees C / 125 degrees F
	FPC 11 PLX Switch TSen	OK	50 degrees C / 122 degrees F
	FPC 11 PLX Switch Chip	OK	45 degrees C / 113 degrees F
Fans	Top Fan Tray Temp	OK	42 degrees C / 107 degrees F
	Top Tray Fan 1	OK	Spinning at high speed
Top Tray Fan 2		OK	Spinning at high speed
	Top Tray Fan 3	OK	Spinning at high speed
	Top Tray Fan 4	OK	Spinning at high speed
	Top Tray Fan 5	OK	Spinning at high speed
	Top Tray Fan 6	OK	Spinning at high speed
	Top Tray Fan 7	OK	Spinning at high speed
	Top Tray Fan 8	OK	Spinning at high speed
	Top Tray Fan 9	OK	Spinning at high speed
	Top Tray Fan 10	OK	Spinning at high speed
	Top Tray Fan 11	OK	Spinning at high speed
	Top Tray Fan 12	OK	Spinning at high speed
	Bottom Fan Tray Temp	OK	33 degrees C / 91 degrees F
	Bottom Tray Fan 1	OK	Spinning at high speed
	Bottom Tray Fan 2	OK	Spinning at high speed
	Bottom Tray Fan 3	OK	Spinning at high speed
	Bottom Tray Fan 4	OK	Spinning at high speed
	Bottom Tray Fan 5	OK	Spinning at high speed
	Bottom Tray Fan 6	OK	Spinning at high speed
	Bottom Tray Fan 7	OK	Spinning at high speed
	Bottom Tray Fan 8	OK	Spinning at high speed
	Bottom Tray Fan 9	OK	Spinning at high speed
	Bottom Tray Fan 10	OK	Spinning at high speed
	Bottom Tray Fan 11	OK	Spinning at high speed
	Bottom Tray Fan 12	OK	Spinning at high speed

## show chassis environment (MX2020 Router)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Temp	PSM 0	Absent	
	PSM 1	Absent	
	PSM 2	OK	41 degrees C / 105 degrees F
	PSM 3	OK	39 degrees C / 102 degrees F



PSM 4	OK	39 degrees C / 102 degrees F
PSM 5	OK	38 degrees C / 100 degrees F
PSM 6	OK	38 degrees C / 100 degrees F
PSM 7	OK	38 degrees C / 100 degrees F
PSM 8	OK	37 degrees C / 98 degrees F
PSM 9	Absent	
PSM 10	Absent	
PSM 11	OK	47 degrees C / 116 degrees F
PSM 12	OK	45 degrees C / 113 degrees F
PSM 13	OK	44 degrees C / 111 degrees F
PSM 14	OK	44 degrees C / 111 degrees F
PSM 15	OK	43 degrees C / 109 degrees F
PSM 16	OK	42 degrees C / 107 degrees F
PSM 17	OK	41 degrees C / 105 degrees F
PDM 0	OK	
PDM 1	Absent	
PDM 2	Absent	
PDM 3	OK	
CB 0 IntakeA-Zone0	OK	45 degrees C / 113 degrees F
CB 0 IntakeB-Zone1	OK	34 degrees C / 93 degrees F
CB 0 IntakeC-Zone0	OK	48 degrees C / 118 degrees F
CB 0 ExhaustA-Zone0	OK	45 degrees C / 113 degrees F
CB 0 ExhaustB-Zone1	OK	37 degrees C / 98 degrees F
CB 0 TCBC-Zone0	OK	41 degrees C / 105 degrees F
CB 1 IntakeA-Zone0	OK	46 degrees C / 114 degrees F
CB 1 IntakeB-Zone1	OK	42 degrees C / 107 degrees F
CB 1 IntakeC-Zone0	OK	49 degrees C / 120 degrees F
CB 1 ExhaustA-Zone0	OK	46 degrees C / 114 degrees F
CB 1 ExhaustB-Zone1	OK	41 degrees C / 105 degrees F
CB 1 TCBC-Zone0	OK	46 degrees C / 114 degrees F
SPMB 0 Intake	OK	33 degrees C / 91 degrees F
SPMB 1 Intake	OK	42 degrees C / 107 degrees F
Routing Engine 0	OK	35 degrees C / 95 degrees F
Routing Engine 0 CPU	OK	34 degrees C / 93 degrees F
Routing Engine 1	OK	44 degrees C / 111 degrees F
Routing Engine 1 CPU	OK	42 degrees C / 107 degrees F
SFB 0 Intake-Zone0	OK	55 degrees C / 131 degrees F
SFB 0 Exhaust-Zone1	OK	48 degrees C / 118 degrees F
SFB 0 IntakeA-Zone0	OK	50 degrees C / 122 degrees F
SFB 0 IntakeB-Zone1	OK	40 degrees C / 104 degrees F
SFB 0 Exhaust-Zone0	OK	52 degrees C / 125 degrees F
SFB 0 SFB-XF2-Zone1	OK	61 degrees C / 141 degrees F
SFB 0 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 0 SFB-XF0-Zone0	OK	68 degrees C / 154 degrees F
SFB 1 Intake-Zone0	OK	56 degrees C / 132 degrees F
SFB 1 Exhaust-Zone1	OK	47 degrees C / 116 degrees F
SFB 1 IntakeA-Zone0	OK	51 degrees C / 123 degrees F
SFB 1 IntakeB-Zone1	OK	40 degrees C / 104 degrees F
SFB 1 Exhaust-Zone0	OK	51 degrees C / 123 degrees F
SFB 1 SFB-XF2-Zone1	OK	62 degrees C / 143 degrees F
SFB 1 SFB-XF1-Zone0	OK	67 degrees C / 152 degrees F
SFB 1 SFB-XF0-Zone0	OK	69 degrees C / 156 degrees F
SFB 2 Intake-Zone0	OK	56 degrees C / 132 degrees F
SFB 2 Exhaust-Zone1	OK	47 degrees C / 116 degrees F
SFB 2 IntakeA-Zone0	OK	51 degrees C / 123 degrees F
SFB 2 IntakeB-Zone1	OK	40 degrees C / 104 degrees F
SFB 2 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 2 SFB-XF2-Zone1	OK	65 degrees C / 149 degrees F
SFB 2 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 2 SFB-XF0-Zone0	OK	70 degrees C / 158 degrees F



SFB 3 Intake-Zone0	OK	57 degrees C / 134 degrees F
SFB 3 Exhaust-Zone1	OK	48 degrees C / 118 degrees F
SFB 3 IntakeA-Zone0	OK	52 degrees C / 125 degrees F
SFB 3 IntakeB-Zone1	OK	41 degrees C / 105 degrees F
SFB 3 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 3 SFB-XF2-Zone1	OK	66 degrees C / 150 degrees F
SFB 3 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 3 SFB-XF0-Zone0	OK	71 degrees C / 159 degrees F
SFB 4 Intake-Zone0	OK	58 degrees C / 136 degrees F
SFB 4 Exhaust-Zone1	OK	49 degrees C / 120 degrees F
SFB 4 IntakeA-Zone0	OK	54 degrees C / 129 degrees F
SFB 4 IntakeB-Zone1	OK	42 degrees C / 107 degrees F
SFB 4 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 4 SFB-XF2-Zone1	OK	64 degrees C / 147 degrees F
SFB 4 SFB-XF1-Zone0	OK	68 degrees C / 154 degrees F
SFB 4 SFB-XF0-Zone0	OK	71 degrees C / 159 degrees F
SFB 5 Intake-Zone0	OK	58 degrees C / 136 degrees F
SFB 5 Exhaust-Zone1	OK	50 degrees C / 122 degrees F
SFB 5 IntakeA-Zone0	OK	53 degrees C / 127 degrees F
SFB 5 IntakeB-Zone1	OK	43 degrees C / 109 degrees F
SFB 5 Exhaust-Zone0	OK	54 degrees C / 129 degrees F
SFB 5 SFB-XF2-Zone1	OK	66 degrees C / 150 degrees F
SFB 5 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 5 SFB-XF0-Zone0	OK	74 degrees C / 165 degrees F
SFB 6 Intake-Zone0	OK	58 degrees C / 136 degrees F
SFB 6 Exhaust-Zone1	OK	49 degrees C / 120 degrees F
SFB 6 IntakeA-Zone0	OK	53 degrees C / 127 degrees F
SFB 6 IntakeB-Zone1	OK	43 degrees C / 109 degrees F
SFB 6 Exhaust-Zone0	OK	53 degrees C / 127 degrees F
SFB 6 SFB-XF2-Zone1	OK	65 degrees C / 149 degrees F
SFB 6 SFB-XF1-Zone0	OK	68 degrees C / 154 degrees F
SFB 6 SFB-XF0-Zone0	OK	72 degrees C / 161 degrees F
SFB 7 Intake-Zone0	OK	57 degrees C / 134 degrees F
SFB 7 Exhaust-Zone1	OK	50 degrees C / 122 degrees F
SFB 7 IntakeA-Zone0	OK	53 degrees C / 127 degrees F
SFB 7 IntakeB-Zone1	OK	43 degrees C / 109 degrees F
SFB 7 Exhaust-Zone0	OK	54 degrees C / 129 degrees F
SFB 7 SFB-XF2-Zone1	OK	68 degrees C / 154 degrees F
SFB 7 SFB-XF1-Zone0	OK	69 degrees C / 156 degrees F
SFB 7 SFB-XF0-Zone0	OK	73 degrees C / 163 degrees F
FPC 0 Intake	OK	41 degrees C / 105 degrees F
FPC 0 Exhaust A	OK	48 degrees C / 118 degrees F
FPC 0 Exhaust B	OK	62 degrees C / 143 degrees F
FPC 0 LU 0 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 0 Chip	OK	62 degrees C / 143 degrees F
FPC 0 LU 1 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 1 Chip	OK	64 degrees C / 147 degrees F
FPC 0 LU 2 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 0 LU 3 TSen	OK	59 degrees C / 138 degrees F
FPC 0 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 0 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 0 Chip	OK	49 degrees C / 120 degrees F
FPC 0 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 1 Chip	OK	51 degrees C / 123 degrees F
FPC 0 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 0 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 0 MQ 3 Chip	OK	45 degrees C / 113 degrees F
FPC 1 Intake	OK	40 degrees C / 104 degrees F



FPC 1 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 1 Exhaust B	OK	58 degrees C / 136 degrees F
FPC 1 LU 0 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 0 Chip	OK	56 degrees C / 132 degrees F
FPC 1 LU 1 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 1 Chip	OK	58 degrees C / 136 degrees F
FPC 1 LU 2 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 2 Chip	OK	49 degrees C / 120 degrees F
FPC 1 LU 3 TSen	OK	55 degrees C / 131 degrees F
FPC 1 LU 3 Chip	OK	51 degrees C / 123 degrees F
FPC 1 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 0 Chip	OK	48 degrees C / 118 degrees F
FPC 1 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 1 Chip	OK	50 degrees C / 122 degrees F
FPC 1 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 1 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 1 MQ 3 Chip	OK	44 degrees C / 111 degrees F
FPC 2 Intake	OK	39 degrees C / 102 degrees F
FPC 2 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 2 Exhaust B	OK	61 degrees C / 141 degrees F
FPC 2 LU 0 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 0 Chip	OK	60 degrees C / 140 degrees F
FPC 2 LU 1 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 1 Chip	OK	65 degrees C / 149 degrees F
FPC 2 LU 2 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 2 LU 3 TSen	OK	58 degrees C / 136 degrees F
FPC 2 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 2 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 0 Chip	OK	50 degrees C / 122 degrees F
FPC 2 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 2 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 2 Chip	OK	45 degrees C / 113 degrees F
FPC 2 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 2 MQ 3 Chip	OK	46 degrees C / 114 degrees F
FPC 3 Intake	OK	40 degrees C / 104 degrees F
FPC 3 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 3 Exhaust B	OK	61 degrees C / 141 degrees F
FPC 3 LU 0 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 0 Chip	OK	61 degrees C / 141 degrees F
FPC 3 LU 1 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 1 Chip	OK	62 degrees C / 143 degrees F
FPC 3 LU 2 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 3 LU 3 TSen	OK	58 degrees C / 136 degrees F
FPC 3 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 3 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 0 Chip	OK	50 degrees C / 122 degrees F
FPC 3 MQ 1 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 1 Chip	OK	54 degrees C / 129 degrees F
FPC 3 MQ 2 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 2 Chip	OK	45 degrees C / 113 degrees F
FPC 3 MQ 3 TSen	OK	48 degrees C / 118 degrees F
FPC 3 MQ 3 Chip	OK	48 degrees C / 118 degrees F
FPC 4 Intake	OK	40 degrees C / 104 degrees F
FPC 4 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 4 Exhaust B	OK	62 degrees C / 143 degrees F
FPC 4 LU 0 TSen	OK	59 degrees C / 138 degrees F



FPC 4 LU 0 Chip	OK	62 degrees C / 143 degrees F
FPC 4 LU 1 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 1 Chip	OK	65 degrees C / 149 degrees F
FPC 4 LU 2 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 2 Chip	OK	51 degrees C / 123 degrees F
FPC 4 LU 3 TSen	OK	59 degrees C / 138 degrees F
FPC 4 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 4 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 4 MQ 1 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 1 Chip	OK	53 degrees C / 127 degrees F
FPC 4 MQ 2 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 4 MQ 3 TSen	OK	48 degrees C / 118 degrees F
FPC 4 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 5 Intake	OK	41 degrees C / 105 degrees F
FPC 5 Exhaust A	OK	50 degrees C / 122 degrees F
FPC 5 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 5 LU 0 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 0 Chip	OK	63 degrees C / 145 degrees F
FPC 5 LU 1 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 1 Chip	OK	66 degrees C / 150 degrees F
FPC 5 LU 2 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 2 Chip	OK	56 degrees C / 132 degrees F
FPC 5 LU 3 TSen	OK	60 degrees C / 140 degrees F
FPC 5 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 5 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 5 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 1 Chip	OK	53 degrees C / 127 degrees F
FPC 5 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 2 Chip	OK	48 degrees C / 118 degrees F
FPC 5 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 5 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 6 Intake	OK	42 degrees C / 107 degrees F
FPC 6 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 6 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 6 LU 0 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 0 Chip	OK	64 degrees C / 147 degrees F
FPC 6 LU 1 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 1 Chip	OK	66 degrees C / 150 degrees F
FPC 6 LU 2 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 2 Chip	OK	56 degrees C / 132 degrees F
FPC 6 LU 3 TSen	OK	61 degrees C / 141 degrees F
FPC 6 LU 3 Chip	OK	56 degrees C / 132 degrees F
FPC 6 MQ 0 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 0 Chip	OK	56 degrees C / 132 degrees F
FPC 6 MQ 1 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 1 Chip	OK	59 degrees C / 138 degrees F
FPC 6 MQ 2 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 2 Chip	OK	49 degrees C / 120 degrees F
FPC 6 MQ 3 TSen	OK	50 degrees C / 122 degrees F
FPC 6 MQ 3 Chip	OK	49 degrees C / 120 degrees F
FPC 7 Intake	OK	41 degrees C / 105 degrees F
FPC 7 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 7 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 7 LU 0 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 0 Chip	OK	61 degrees C / 141 degrees F
FPC 7 LU 1 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 1 Chip	OK	65 degrees C / 149 degrees F



FPC 7 LU 2 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 2 Chip	OK	54 degrees C / 129 degrees F
FPC 7 LU 3 TSen	OK	60 degrees C / 140 degrees F
FPC 7 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 7 MQ 0 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 0 Chip	OK	53 degrees C / 127 degrees F
FPC 7 MQ 1 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 1 Chip	OK	54 degrees C / 129 degrees F
FPC 7 MQ 2 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 2 Chip	OK	47 degrees C / 116 degrees F
FPC 7 MQ 3 TSen	OK	50 degrees C / 122 degrees F
FPC 7 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 8 Intake	OK	41 degrees C / 105 degrees F
FPC 8 Exhaust A	OK	50 degrees C / 122 degrees F
FPC 8 Exhaust B	OK	62 degrees C / 143 degrees F
FPC 8 LU 0 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 0 Chip	OK	62 degrees C / 143 degrees F
FPC 8 LU 1 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 1 Chip	OK	64 degrees C / 147 degrees F
FPC 8 LU 2 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 2 Chip	OK	55 degrees C / 131 degrees F
FPC 8 LU 3 TSen	OK	59 degrees C / 138 degrees F
FPC 8 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 8 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 0 Chip	OK	51 degrees C / 123 degrees F
FPC 8 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 8 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 8 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 8 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 9 Intake	OK	42 degrees C / 107 degrees F
FPC 9 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 9 Exhaust B	OK	63 degrees C / 145 degrees F
FPC 9 LU 0 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 0 Chip	OK	65 degrees C / 149 degrees F
FPC 9 LU 1 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 1 Chip	OK	67 degrees C / 152 degrees F
FPC 9 LU 2 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 2 Chip	OK	54 degrees C / 129 degrees F
FPC 9 LU 3 TSen	OK	60 degrees C / 140 degrees F
FPC 9 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 9 MQ 0 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 0 Chip	OK	55 degrees C / 131 degrees F
FPC 9 MQ 1 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 1 Chip	OK	59 degrees C / 138 degrees F
FPC 9 MQ 2 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 2 Chip	OK	49 degrees C / 120 degrees F
FPC 9 MQ 3 TSen	OK	51 degrees C / 123 degrees F
FPC 9 MQ 3 Chip	OK	49 degrees C / 120 degrees F
FPC 10 Intake	OK	44 degrees C / 111 degrees F
FPC 10 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 10 Exhaust B	OK	55 degrees C / 131 degrees F
FPC 10 LU 0 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 0 Chip	OK	55 degrees C / 131 degrees F
FPC 10 LU 1 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 1 Chip	OK	59 degrees C / 138 degrees F
FPC 10 LU 2 TSen	OK	54 degrees C / 129 degrees F
FPC 10 LU 2 Chip	OK	52 degrees C / 125 degrees F
FPC 10 LU 3 TSen	OK	54 degrees C / 129 degrees F



FPC 10 LU 3 Chip	OK	51 degrees C / 123 degrees F
FPC 10 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 0 Chip	OK	49 degrees C / 120 degrees F
FPC 10 MQ 1 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 1 Chip	OK	52 degrees C / 125 degrees F
FPC 10 MQ 2 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 2 Chip	OK	47 degrees C / 116 degrees F
FPC 10 MQ 3 TSen	OK	48 degrees C / 118 degrees F
FPC 10 MQ 3 Chip	OK	47 degrees C / 116 degrees F
FPC 11 Intake	OK	30 degrees C / 86 degrees F
FPC 11 Exhaust A	OK	35 degrees C / 95 degrees F
FPC 11 Exhaust B	OK	30 degrees C / 86 degrees F
FPC 11 LU 0 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 0 Chip	OK	58 degrees C / 136 degrees F
FPC 11 LU 1 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 1 Chip	OK	62 degrees C / 143 degrees F
FPC 11 LU 2 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 11 LU 3 TSen	OK	57 degrees C / 134 degrees F
FPC 11 LU 3 Chip	OK	54 degrees C / 129 degrees F
FPC 11 MQ 0 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 0 Chip	OK	52 degrees C / 125 degrees F
FPC 11 MQ 1 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 1 Chip	OK	57 degrees C / 134 degrees F
FPC 11 MQ 2 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 2 Chip	OK	48 degrees C / 118 degrees F
FPC 11 MQ 3 TSen	OK	52 degrees C / 125 degrees F
FPC 11 MQ 3 Chip	OK	52 degrees C / 125 degrees F
FPC 12 Intake	OK	40 degrees C / 104 degrees F
FPC 12 Exhaust A	OK	47 degrees C / 116 degrees F
FPC 12 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 12 LU 0 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 0 Chip	OK	52 degrees C / 125 degrees F
FPC 12 LU 1 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 1 Chip	OK	55 degrees C / 131 degrees F
FPC 12 LU 2 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 2 Chip	OK	47 degrees C / 116 degrees F
FPC 12 LU 3 TSen	OK	51 degrees C / 123 degrees F
FPC 12 LU 3 Chip	OK	50 degrees C / 122 degrees F
FPC 12 MQ 0 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 0 Chip	OK	46 degrees C / 114 degrees F
FPC 12 MQ 1 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 1 Chip	OK	50 degrees C / 122 degrees F
FPC 12 MQ 2 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 12 MQ 3 TSen	OK	46 degrees C / 114 degrees F
FPC 12 MQ 3 Chip	OK	46 degrees C / 114 degrees F
FPC 13 Intake	OK	40 degrees C / 104 degrees F
FPC 13 Exhaust A	OK	48 degrees C / 118 degrees F
FPC 13 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 13 LU 0 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 0 Chip	OK	52 degrees C / 125 degrees F
FPC 13 LU 1 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 1 Chip	OK	55 degrees C / 131 degrees F
FPC 13 LU 2 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 2 Chip	OK	48 degrees C / 118 degrees F
FPC 13 LU 3 TSen	OK	51 degrees C / 123 degrees F
FPC 13 LU 3 Chip	OK	48 degrees C / 118 degrees F
FPC 13 MQ 0 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 0 Chip	OK	46 degrees C / 114 degrees F



FPC 13 MQ 1 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 1 Chip	OK	50 degrees C / 122 degrees F
FPC 13 MQ 2 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 2 Chip	OK	44 degrees C / 111 degrees F
FPC 13 MQ 3 TSen	OK	46 degrees C / 114 degrees F
FPC 13 MQ 3 Chip	OK	46 degrees C / 114 degrees F
FPC 14 Intake	OK	40 degrees C / 104 degrees F
FPC 14 Exhaust A	OK	50 degrees C / 122 degrees F
FPC 14 Exhaust B	OK	51 degrees C / 123 degrees F
FPC 14 LU 0 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 0 Chip	OK	50 degrees C / 122 degrees F
FPC 14 LU 1 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 1 Chip	OK	54 degrees C / 129 degrees F
FPC 14 LU 2 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 2 Chip	OK	47 degrees C / 116 degrees F
FPC 14 LU 3 TSen	OK	50 degrees C / 122 degrees F
FPC 14 LU 3 Chip	OK	49 degrees C / 120 degrees F
FPC 14 MQ 0 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 0 Chip	OK	46 degrees C / 114 degrees F
FPC 14 MQ 1 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 1 Chip	OK	51 degrees C / 123 degrees F
FPC 14 MQ 2 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 2 Chip	OK	45 degrees C / 113 degrees F
FPC 14 MQ 3 TSen	OK	47 degrees C / 116 degrees F
FPC 14 MQ 3 Chip	OK	48 degrees C / 118 degrees F
FPC 15 Intake	OK	44 degrees C / 111 degrees F
FPC 15 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 15 Exhaust B	OK	60 degrees C / 140 degrees F
FPC 15 LU 0 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 0 Chip	OK	56 degrees C / 132 degrees F
FPC 15 LU 1 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 1 Chip	OK	50 degrees C / 122 degrees F
FPC 15 LU 2 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 2 Chip	OK	58 degrees C / 136 degrees F
FPC 15 LU 3 TSen	OK	50 degrees C / 122 degrees F
FPC 15 LU 3 Chip	OK	63 degrees C / 145 degrees F
FPC 15 XM 0 TSen	OK	50 degrees C / 122 degrees F
FPC 15 XM 0 Chip	OK	56 degrees C / 132 degrees F
FPC 15 XF 0 TSen	OK	50 degrees C / 122 degrees F
FPC 15 XF 0 Chip	OK	68 degrees C / 154 degrees F
FPC 15 PLX Switch TSen	OK	50 degrees C / 122 degrees F
FPC 15 PLX Switch Chip	OK	56 degrees C / 132 degrees F
FPC 16 Intake	OK	42 degrees C / 107 degrees F
FPC 16 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 16 Exhaust B	OK	53 degrees C / 127 degrees F
FPC 16 LU 0 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 0 Chip	OK	52 degrees C / 125 degrees F
FPC 16 LU 1 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 1 Chip	OK	55 degrees C / 131 degrees F
FPC 16 LU 2 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 2 Chip	OK	48 degrees C / 118 degrees F
FPC 16 LU 3 TSen	OK	51 degrees C / 123 degrees F
FPC 16 LU 3 Chip	OK	49 degrees C / 120 degrees F
FPC 16 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 0 Chip	OK	48 degrees C / 118 degrees F
FPC 16 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 1 Chip	OK	53 degrees C / 127 degrees F
FPC 16 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 16 MQ 2 Chip	OK	46 degrees C / 114 degrees F
FPC 16 MQ 3 TSen	OK	49 degrees C / 120 degrees F



FPC 16 MQ 3 Chip	OK	49 degrees C / 120 degrees F
FPC 17 Intake	OK	43 degrees C / 109 degrees F
FPC 17 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 17 Exhaust B	OK	55 degrees C / 131 degrees F
FPC 17 LU 0 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 0 Chip	OK	57 degrees C / 134 degrees F
FPC 17 LU 1 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 1 Chip	OK	60 degrees C / 140 degrees F
FPC 17 LU 2 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 17 LU 3 TSen	OK	54 degrees C / 129 degrees F
FPC 17 LU 3 Chip	OK	53 degrees C / 127 degrees F
FPC 17 MQ 0 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 0 Chip	OK	50 degrees C / 122 degrees F
FPC 17 MQ 1 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 1 Chip	OK	54 degrees C / 129 degrees F
FPC 17 MQ 2 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 2 Chip	OK	47 degrees C / 116 degrees F
FPC 17 MQ 3 TSen	OK	49 degrees C / 120 degrees F
FPC 17 MQ 3 Chip	OK	51 degrees C / 123 degrees F
FPC 18 Intake	OK	44 degrees C / 111 degrees F
FPC 18 Exhaust A	OK	53 degrees C / 127 degrees F
FPC 18 Exhaust B	OK	57 degrees C / 134 degrees F
FPC 18 LU 0 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 0 Chip	OK	57 degrees C / 134 degrees F
FPC 18 LU 1 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 1 Chip	OK	62 degrees C / 143 degrees F
FPC 18 LU 2 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 2 Chip	OK	53 degrees C / 127 degrees F
FPC 18 LU 3 TSen	OK	56 degrees C / 132 degrees F
FPC 18 LU 3 Chip	OK	55 degrees C / 131 degrees F
FPC 18 MQ 0 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 0 Chip	OK	54 degrees C / 129 degrees F
FPC 18 MQ 1 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 1 Chip	OK	58 degrees C / 136 degrees F
FPC 18 MQ 2 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 2 Chip	OK	50 degrees C / 122 degrees F
FPC 18 MQ 3 TSen	OK	51 degrees C / 123 degrees F
FPC 18 MQ 3 Chip	OK	53 degrees C / 127 degrees F
FPC 19 Intake	OK	48 degrees C / 118 degrees F
FPC 19 Exhaust A	OK	56 degrees C / 132 degrees F
FPC 19 Exhaust B	OK	64 degrees C / 147 degrees F
FPC 19 LU 0 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 0 Chip	OK	64 degrees C / 147 degrees F
FPC 19 LU 1 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 1 Chip	OK	70 degrees C / 158 degrees F
FPC 19 LU 2 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 2 Chip	OK	61 degrees C / 141 degrees F
FPC 19 LU 3 TSen	OK	63 degrees C / 145 degrees F
FPC 19 LU 3 Chip	OK	62 degrees C / 143 degrees F
FPC 19 MQ 0 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 0 Chip	OK	60 degrees C / 140 degrees F
FPC 19 MQ 1 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 1 Chip	OK	62 degrees C / 143 degrees F
FPC 19 MQ 2 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 2 Chip	OK	56 degrees C / 132 degrees F
FPC 19 MQ 3 TSen	OK	56 degrees C / 132 degrees F
FPC 19 MQ 3 Chip	OK	57 degrees C / 134 degrees F
ADC 0 Intake	OK	40 degrees C / 104 degrees F
ADC 0 Exhaust	OK	52 degrees C / 125 degrees F



ADC 0 ADC-XF1	OK	59 degrees C / 138 degrees F
ADC 0 ADC-XF0	OK	66 degrees C / 150 degrees F
ADC 1 Intake	OK	38 degrees C / 100 degrees F
ADC 1 Exhaust	OK	50 degrees C / 122 degrees F
ADC 1 ADC-XF1	OK	59 degrees C / 138 degrees F
ADC 1 ADC-XF0	OK	63 degrees C / 145 degrees F
ADC 2 Intake	OK	37 degrees C / 98 degrees F
ADC 2 Exhaust	OK	52 degrees C / 125 degrees F
ADC 2 ADC-XF1	OK	53 degrees C / 127 degrees F
ADC 2 ADC-XF0	OK	61 degrees C / 141 degrees F
ADC 3 Intake	OK	40 degrees C / 104 degrees F
ADC 3 Exhaust	OK	51 degrees C / 123 degrees F
ADC 3 ADC-XF1	OK	61 degrees C / 141 degrees F
ADC 3 ADC-XF0	OK	64 degrees C / 147 degrees F
ADC 4 Intake	OK	39 degrees C / 102 degrees F
ADC 4 Exhaust	OK	51 degrees C / 123 degrees F
ADC 4 ADC-XF1	OK	60 degrees C / 140 degrees F
ADC 4 ADC-XF0	OK	63 degrees C / 145 degrees F
ADC 5 Intake	OK	38 degrees C / 100 degrees F
ADC 5 Exhaust	OK	54 degrees C / 129 degrees F
ADC 5 ADC-XF1	OK	56 degrees C / 132 degrees F
ADC 5 ADC-XF0	OK	67 degrees C / 152 degrees F
ADC 6 Intake	OK	39 degrees C / 102 degrees F
ADC 6 Exhaust	OK	52 degrees C / 125 degrees F
ADC 6 ADC-XF1	OK	59 degrees C / 138 degrees F
ADC 6 ADC-XF0	OK	66 degrees C / 150 degrees F
ADC 7 Intake	OK	39 degrees C / 102 degrees F
ADC 7 Exhaust	OK	54 degrees C / 129 degrees F
ADC 7 ADC-XF1	OK	62 degrees C / 143 degrees F
ADC 7 ADC-XF0	OK	70 degrees C / 158 degrees F
ADC 8 Intake	OK	39 degrees C / 102 degrees F
ADC 8 Exhaust	OK	52 degrees C / 125 degrees F
ADC 8 ADC-XF1	OK	61 degrees C / 141 degrees F
ADC 8 ADC-XF0	OK	65 degrees C / 149 degrees F
ADC 9 Intake	OK	41 degrees C / 105 degrees F
ADC 9 Exhaust	OK	51 degrees C / 123 degrees F
ADC 9 ADC-XF1	OK	63 degrees C / 145 degrees F
ADC 9 ADC-XF0	OK	63 degrees C / 145 degrees F
ADC 10 Intake	OK	48 degrees C / 118 degrees F
ADC 10 Exhaust	OK	53 degrees C / 127 degrees F
ADC 10 ADC-XF1	OK	67 degrees C / 152 degrees F
ADC 10 ADC-XF0	OK	66 degrees C / 150 degrees F
ADC 12 Intake	OK	49 degrees C / 120 degrees F
ADC 12 Exhaust	OK	54 degrees C / 129 degrees F
ADC 12 ADC-XF1	OK	67 degrees C / 152 degrees F
ADC 12 ADC-XF0	OK	67 degrees C / 152 degrees F
ADC 13 Intake	OK	49 degrees C / 120 degrees F
ADC 13 Exhaust	OK	57 degrees C / 134 degrees F
ADC 13 ADC-XF1	OK	66 degrees C / 150 degrees F
ADC 13 ADC-XF0	OK	69 degrees C / 156 degrees F
ADC 14 Intake	OK	51 degrees C / 123 degrees F
ADC 14 Exhaust	OK	59 degrees C / 138 degrees F
ADC 14 ADC-XF1	OK	69 degrees C / 156 degrees F
ADC 14 ADC-XF0	OK	74 degrees C / 165 degrees F
ADC 15 Intake	OK	50 degrees C / 122 degrees F
ADC 15 Exhaust	OK	59 degrees C / 138 degrees F
ADC 15 ADC-XF1	OK	68 degrees C / 154 degrees F
ADC 15 ADC-XF0	OK	69 degrees C / 156 degrees F
ADC 16 Intake	OK	52 degrees C / 125 degrees F
ADC 16 Exhaust	OK	58 degrees C / 136 degrees F



Fans	ADC 16 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 16 ADC-XF0	OK	70 degrees C / 158 degrees F
	ADC 17 Intake	OK	52 degrees C / 125 degrees F
	ADC 17 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 17 ADC-XF1	OK	69 degrees C / 156 degrees F
	ADC 17 ADC-XF0	OK	71 degrees C / 159 degrees F
	ADC 18 Intake	OK	53 degrees C / 127 degrees F
	ADC 18 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 18 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 18 ADC-XF0	OK	73 degrees C / 163 degrees F
	ADC 19 Intake	OK	50 degrees C / 122 degrees F
	ADC 19 Exhaust	OK	59 degrees C / 138 degrees F
	ADC 19 ADC-XF1	OK	68 degrees C / 154 degrees F
	ADC 19 ADC-XF0	OK	72 degrees C / 161 degrees F
	Fan Tray 0 Fan 1	OK	7440 RPM
	Fan Tray 0 Fan 2	OK	7200 RPM
	Fan Tray 0 Fan 3	OK	6960 RPM
	Fan Tray 0 Fan 4	OK	7200 RPM
	Fan Tray 0 Fan 5	OK	7080 RPM
	Fan Tray 0 Fan 6	OK	6840 RPM
	Fan Tray 1 Fan 1	OK	6840 RPM
	Fan Tray 1 Fan 2	OK	6960 RPM
	Fan Tray 1 Fan 3	OK	6960 RPM
	Fan Tray 1 Fan 4	OK	7080 RPM
	Fan Tray 1 Fan 5	OK	6960 RPM
	Fan Tray 1 Fan 6	OK	6960 RPM
	Fan Tray 2 Fan 1	OK	8640 RPM
	Fan Tray 2 Fan 2	OK	8640 RPM
	Fan Tray 2 Fan 3	OK	8760 RPM
	Fan Tray 2 Fan 4	OK	8760 RPM
	Fan Tray 2 Fan 5	OK	8640 RPM
	Fan Tray 2 Fan 6	OK	8640 RPM
	Fan Tray 3 Fan 1	OK	8520 RPM
	Fan Tray 3 Fan 2	OK	8520 RPM
	Fan Tray 3 Fan 3	OK	8640 RPM
	Fan Tray 3 Fan 4	OK	8640 RPM
	Fan Tray 3 Fan 5	OK	8520 RPM
	Fan Tray 3 Fan 6	OK	8520 RPM

## show chassis environment (MX2020 Router with MPC5EQ and MPC6E)

Class	Item	Status	Measurement
Temp	PSM 0	OK	32 degrees C / 89 degrees F
	PSM 1	OK	32 degrees C / 89 degrees F
	PSM 2	OK	32 degrees C / 89 degrees F
	PSM 3	OK	32 degrees C / 89 degrees F
	PSM 4	OK	32 degrees C / 89 degrees F
	PSM 5	OK	33 degrees C / 91 degrees F
	PSM 6	OK	32 degrees C / 89 degrees F
	PSM 7	OK	32 degrees C / 89 degrees F
	PSM 8	OK	32 degrees C / 89 degrees F
	PSM 9	Absent	
	PSM 10	Absent	
	PSM 11	Absent	
	PSM 12	OK	33 degrees C / 91 degrees F
	PSM 13	OK	33 degrees C / 91 degrees F
	PSM 14	OK	34 degrees C / 93 degrees F
	PSM 15	OK	34 degrees C / 93 degrees F
	PSM 16	OK	33 degrees C / 91 degrees F



PSM 17	OK	33 degrees C / 91 degrees F
PDM 0	OK	
PDM 1	OK	
PDM 2	OK	
PDM 3	OK	
CB 0 IntakeA-Zone0	OK	34 degrees C / 93 degrees F
CB 0 IntakeB-Zone1	OK	26 degrees C / 78 degrees F
CB 0 IntakeC-Zone0	OK	38 degrees C / 100 degrees F
CB 0 ExhaustA-Zone0	OK	34 degrees C / 93 degrees F
CB 0 ExhaustB-Zone1	OK	27 degrees C / 80 degrees F
CB 0 TCBC-Zone0	OK	32 degrees C / 89 degrees F
CB 1 IntakeA-Zone0	OK	24 degrees C / 75 degrees F
CB 1 IntakeB-Zone1	OK	22 degrees C / 71 degrees F
CB 1 IntakeC-Zone0	OK	34 degrees C / 93 degrees F
CB 1 ExhaustA-Zone0	OK	31 degrees C / 87 degrees F
CB 1 ExhaustB-Zone1	OK	24 degrees C / 75 degrees F
CB 1 TCBC-Zone0	OK	27 degrees C / 80 degrees F
SPMB 0 Intake	OK	25 degrees C / 77 degrees F
SPMB 1 Intake	OK	23 degrees C / 73 degrees F
Routing Engine 0	OK	28 degrees C / 82 degrees F
Routing Engine 0 CPU	OK	25 degrees C / 77 degrees F
Routing Engine 1	OK	25 degrees C / 77 degrees F
Routing Engine 1 CPU	OK	24 degrees C / 75 degrees F
SFB 0 Intake-Zone0	OK	45 degrees C / 113 degrees F
SFB 0 Exhaust-Zone1	OK	34 degrees C / 93 degrees F
SFB 0 IntakeA-Zone0	OK	32 degrees C / 89 degrees F
SFB 0 IntakeB-Zone1	OK	28 degrees C / 82 degrees F
SFB 0 Exhaust-Zone0	OK	36 degrees C / 96 degrees F
SFB 0 SFB-XF2-Zone1	OK	46 degrees C / 114 degrees F
SFB 0 SFB-XF1-Zone0	OK	48 degrees C / 118 degrees F
SFB 0 SFB-XF0-Zone0	OK	60 degrees C / 140 degrees F
SFB 1 Intake-Zone0	OK	44 degrees C / 111 degrees F
SFB 1 Exhaust-Zone1	OK	34 degrees C / 93 degrees F
SFB 1 IntakeA-Zone0	OK	35 degrees C / 95 degrees F
SFB 1 IntakeB-Zone1	OK	27 degrees C / 80 degrees F
SFB 1 Exhaust-Zone0	OK	37 degrees C / 98 degrees F
SFB 1 SFB-XF2-Zone1	OK	47 degrees C / 116 degrees F
SFB 1 SFB-XF1-Zone0	OK	49 degrees C / 120 degrees F
SFB 1 SFB-XF0-Zone0	OK	56 degrees C / 132 degrees F
SFB 2 Intake-Zone0	OK	41 degrees C / 105 degrees F
SFB 2 Exhaust-Zone1	OK	34 degrees C / 93 degrees F
SFB 2 IntakeA-Zone0	OK	35 degrees C / 95 degrees F
SFB 2 IntakeB-Zone1	OK	28 degrees C / 82 degrees F
SFB 2 Exhaust-Zone0	OK	37 degrees C / 98 degrees F
SFB 2 SFB-XF2-Zone1	OK	47 degrees C / 116 degrees F
SFB 2 SFB-XF1-Zone0	OK	55 degrees C / 131 degrees F
SFB 2 SFB-XF0-Zone0	OK	55 degrees C / 131 degrees F
SFB 3 Intake-Zone0	OK	43 degrees C / 109 degrees F
SFB 3 Exhaust-Zone1	OK	33 degrees C / 91 degrees F
SFB 3 IntakeA-Zone0	OK	35 degrees C / 95 degrees F
SFB 3 IntakeB-Zone1	OK	27 degrees C / 80 degrees F
SFB 3 Exhaust-Zone0	OK	36 degrees C / 96 degrees F
SFB 3 SFB-XF2-Zone1	OK	46 degrees C / 114 degrees F
SFB 3 SFB-XF1-Zone0	OK	46 degrees C / 114 degrees F
SFB 3 SFB-XF0-Zone0	OK	57 degrees C / 134 degrees F
SFB 4 Intake-Zone0	OK	36 degrees C / 96 degrees F
SFB 4 Exhaust-Zone1	OK	32 degrees C / 89 degrees F
SFB 4 IntakeA-Zone0	OK	31 degrees C / 87 degrees F
SFB 4 IntakeB-Zone1	OK	26 degrees C / 78 degrees F
SFB 4 Exhaust-Zone0	OK	32 degrees C / 89 degrees F



SFB 4 SFB-XF2-Zone1	OK	44 degrees C / 111 degrees F
SFB 4 SFB-XF1-Zone0	OK	45 degrees C / 113 degrees F
SFB 4 SFB-XF0-Zone0	OK	52 degrees C / 125 degrees F
SFB 5 Intake-Zone0	OK	31 degrees C / 87 degrees F
SFB 5 Exhaust-Zone1	OK	30 degrees C / 86 degrees F
SFB 5 IntakeA-Zone0	OK	26 degrees C / 78 degrees F
SFB 5 IntakeB-Zone1	OK	24 degrees C / 75 degrees F
SFB 5 Exhaust-Zone0	OK	29 degrees C / 84 degrees F
SFB 5 SFB-XF2-Zone1	OK	43 degrees C / 109 degrees F
SFB 5 SFB-XF1-Zone0	OK	47 degrees C / 116 degrees F
SFB 5 SFB-XF0-Zone0	OK	49 degrees C / 120 degrees F
SFB 6 Intake-Zone0	OK	30 degrees C / 86 degrees F
SFB 6 Exhaust-Zone1	OK	29 degrees C / 84 degrees F
SFB 6 IntakeA-Zone0	OK	25 degrees C / 77 degrees F
SFB 6 IntakeB-Zone1	OK	24 degrees C / 75 degrees F
SFB 6 Exhaust-Zone0	OK	29 degrees C / 84 degrees F
SFB 6 SFB-XF2-Zone1	OK	43 degrees C / 109 degrees F
SFB 6 SFB-XF1-Zone0	OK	44 degrees C / 111 degrees F
SFB 6 SFB-XF0-Zone0	OK	45 degrees C / 113 degrees F
SFB 7 Intake-Zone0	OK	31 degrees C / 87 degrees F
SFB 7 Exhaust-Zone1	OK	30 degrees C / 86 degrees F
SFB 7 IntakeA-Zone0	OK	26 degrees C / 78 degrees F
SFB 7 IntakeB-Zone1	OK	24 degrees C / 75 degrees F
SFB 7 Exhaust-Zone0	OK	28 degrees C / 82 degrees F
SFB 7 SFB-XF2-Zone1	OK	50 degrees C / 122 degrees F
SFB 7 SFB-XF1-Zone0	OK	43 degrees C / 109 degrees F
SFB 7 SFB-XF0-Zone0	OK	47 degrees C / 116 degrees F
FPC 0 Intake	OK	31 degrees C / 87 degrees F
FPC 0 Exhaust A	OK	49 degrees C / 120 degrees F
FPC 0 Exhaust B	OK	43 degrees C / 109 degrees F
FPC 0 XL TSen	OK	42 degrees C / 107 degrees F
FPC 0 XL Chip	OK	46 degrees C / 114 degrees F
FPC 0 XL_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XL_XR0 Chip	OK	48 degrees C / 118 degrees F
FPC 0 XL_XR1 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XL_XR1 Chip	OK	48 degrees C / 118 degrees F
FPC 0 XQ TSen	OK	42 degrees C / 107 degrees F
FPC 0 XQ Chip	OK	44 degrees C / 111 degrees F
FPC 0 XQ_XR0 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XQ_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 0 XQ_XR1 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XQ_XR1 Chip	OK	55 degrees C / 131 degrees F
FPC 0 XM 0 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XM 0 Chip	OK	62 degrees C / 143 degrees F
FPC 0 XM 1 TSen	OK	48 degrees C / 118 degrees F
FPC 0 XM 1 Chip	OK	44 degrees C / 111 degrees F
FPC 0 PLX PCIe Switch TSe	OK	48 degrees C / 118 degrees F
FPC 0 PLX PCIe Switch Chi	OK	57 degrees C / 134 degrees F
FPC 1 Intake	OK	29 degrees C / 84 degrees F
FPC 1 Exhaust A	OK	36 degrees C / 96 degrees F
FPC 1 Exhaust B	OK	44 degrees C / 111 degrees F
FPC 1 LU 0 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 0 Chip	OK	45 degrees C / 113 degrees F
FPC 1 LU 1 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 1 Chip	OK	38 degrees C / 100 degrees F
FPC 1 LU 2 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 2 Chip	OK	42 degrees C / 107 degrees F
FPC 1 LU 3 TSen	OK	38 degrees C / 100 degrees F
FPC 1 LU 3 Chip	OK	47 degrees C / 116 degrees F
FPC 1 XM 0 TSen	OK	38 degrees C / 100 degrees F



FPC 1 XM 0 Chip	OK	44 degrees C / 111 degrees F
FPC 1 XF 0 TSen	OK	38 degrees C / 100 degrees F
FPC 1 XF 0 Chip	OK	54 degrees C / 129 degrees F
FPC 1 PLX Switch TSen	OK	38 degrees C / 100 degrees F
FPC 1 PLX Switch Chip	OK	41 degrees C / 105 degrees F
FPC 2 Intake	OK	28 degrees C / 82 degrees F
FPC 2 Exhaust A	OK	28 degrees C / 82 degrees F
FPC 2 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 2 LU 0 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 0 Chip	OK	40 degrees C / 104 degrees F
FPC 2 LU 1 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 1 Chip	OK	41 degrees C / 105 degrees F
FPC 2 LU 2 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 2 Chip	OK	34 degrees C / 93 degrees F
FPC 2 LU 3 TSen	OK	40 degrees C / 104 degrees F
FPC 2 LU 3 Chip	OK	38 degrees C / 100 degrees F
FPC 2 XM 0 TSen	OK	40 degrees C / 104 degrees F
FPC 2 XM 0 Chip	OK	47 degrees C / 116 degrees F
FPC 2 XM 1 TSen	OK	40 degrees C / 104 degrees F
FPC 2 XM 1 Chip	OK	42 degrees C / 107 degrees F
FPC 2 PLX Switch TSen	OK	40 degrees C / 104 degrees F
FPC 2 PLX Switch Chip	OK	39 degrees C / 102 degrees F
FPC 3 Intake	OK	27 degrees C / 80 degrees F
FPC 3 Exhaust A	OK	38 degrees C / 100 degrees F
FPC 3 Exhaust B	OK	31 degrees C / 87 degrees F
FPC 3 QX 0 TSen	OK	38 degrees C / 100 degrees F
FPC 3 QX 0 Chip	OK	42 degrees C / 107 degrees F
FPC 3 LU 0 TCAM TSen	OK	38 degrees C / 100 degrees F
FPC 3 LU 0 TCAM Chip	OK	43 degrees C / 109 degrees F
FPC 3 LU 0 TSen	OK	38 degrees C / 100 degrees F
FPC 3 LU 0 Chip	OK	42 degrees C / 107 degrees F
FPC 3 MQ 0 TSen	OK	38 degrees C / 100 degrees F
FPC 3 MQ 0 Chip	OK	39 degrees C / 102 degrees F
FPC 3 QX 1 TSen	OK	32 degrees C / 89 degrees F
FPC 3 QX 1 Chip	OK	36 degrees C / 96 degrees F
FPC 3 LU 1 TCAM TSen	OK	32 degrees C / 89 degrees F
FPC 3 LU 1 TCAM Chip	OK	35 degrees C / 95 degrees F
FPC 3 LU 1 TSen	OK	32 degrees C / 89 degrees F
FPC 3 LU 1 Chip	OK	37 degrees C / 98 degrees F
FPC 3 MQ 1 TSen	OK	32 degrees C / 89 degrees F
FPC 3 MQ 1 Chip	OK	36 degrees C / 96 degrees F
FPC 4 Intake	OK	29 degrees C / 84 degrees F
FPC 4 Exhaust A	OK	36 degrees C / 96 degrees F
FPC 4 Exhaust B	OK	40 degrees C / 104 degrees F
FPC 4 XL TSen	OK	39 degrees C / 102 degrees F
FPC 4 XL Chip	OK	42 degrees C / 107 degrees F
FPC 4 XL_XR0 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XL_XR0 Chip	OK	45 degrees C / 113 degrees F
FPC 4 XL_XR1 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XL_XR1 Chip	OK	46 degrees C / 114 degrees F
FPC 4 XQ TSen	OK	39 degrees C / 102 degrees F
FPC 4 XQ Chip	OK	42 degrees C / 107 degrees F
FPC 4 XQ_XR0 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XQ_XR0 Chip	OK	54 degrees C / 129 degrees F
FPC 4 XQ_XR1 TSen	OK	39 degrees C / 102 degrees F
FPC 4 XQ_XR1 Chip	OK	53 degrees C / 127 degrees F
FPC 4 XM 0 TSen	OK	45 degrees C / 113 degrees F
FPC 4 XM 0 Chip	OK	59 degrees C / 138 degrees F
FPC 4 XM 1 TSen	OK	45 degrees C / 113 degrees F
FPC 4 XM 1 Chip	OK	41 degrees C / 105 degrees F



```

FPC 4 PLX PCIe Switch TSe      OK      45 degrees C / 113 degrees F
FPC 4 PLX PCIe Switch Chi      OK      58 degrees C / 136 degrees F
FPC 5 Intake                    OK      29 degrees C / 84 degrees F
FPC 5 Exhaust A                 OK      33 degrees C / 91 degrees F
FPC 5 Exhaust B                 OK      39 degrees C / 102 degrees F
FPC 5 LU 0 TSen                 OK      40 degrees C / 104 degrees F
FPC 5 LU 0 Chip                 OK      40 degrees C / 104 degrees F
FPC 5 LU 1 TSen                 OK      40 degrees C / 104 degrees F
FPC 5 LU 1 Chip                 OK      45 degrees C / 113 degrees F
FPC 5 LU 2 TSen                 OK      40 degrees C / 104 degrees F
FPC 5 LU 2 Chip                 OK      40 degrees C / 104 degrees F
FPC 5 LU 3 TSen                 OK      40 degrees C / 104 degrees F
FPC 5 LU 3 Chip                 OK      46 degrees C / 114 degrees F
FPC 5 MQ 0 TSen                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 0 Chip                 OK      33 degrees C / 91 degrees F
FPC 5 MQ 1 TSen                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 1 Chip                 OK      35 degrees C / 95 degrees F
FPC 5 MQ 2 TSen                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 2 Chip                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 3 TSen                 OK      32 degrees C / 89 degrees F
FPC 5 MQ 3 Chip                 OK      32 degrees C / 89 degrees F
FPC 9 Intake                    OK      25 degrees C / 77 degrees F
FPC 9 Exhaust A                 OK      37 degrees C / 98 degrees F
FPC 9 Exhaust B                 OK      40 degrees C / 104 degrees F
FPC 9 XL 0 TSen                 OK      40 degrees C / 104 degrees F
...

```

### show chassis environment (MX2010 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PSM 0	OK	7 degrees C / 44 degrees F
	PSM 1	OK	7 degrees C / 44 degrees F
	PSM 2	OK	7 degrees C / 44 degrees F
	PSM 3	OK	6 degrees C / 42 degrees F
	PSM 4	OK	6 degrees C / 42 degrees F
	PSM 5	OK	6 degrees C / 42 degrees F
	PSM 6	OK	6 degrees C / 42 degrees F
	PSM 7	OK	7 degrees C / 44 degrees F
	PSM 8	OK	7 degrees C / 44 degrees F
	PDM 0	OK	
	PDM 1	Absent	
	CB 0 IntakeA-Zone0	OK	14 degrees C / 57 degrees F
	CB 0 IntakeB-Zone1	OK	7 degrees C / 44 degrees F
	CB 0 IntakeC-Zone0	OK	22 degrees C / 71 degrees F
	CB 0 ExhaustA-Zone0	OK	14 degrees C / 57 degrees F
	CB 0 ExhaustB-Zone1	OK	9 degrees C / 48 degrees F
	CB 0 TCBC-Zone0	OK	11 degrees C / 51 degrees F
	CB 1 IntakeA-Zone0	OK	9 degrees C / 48 degrees F
	CB 1 IntakeB-Zone1	OK	5 degrees C / 41 degrees F
	CB 1 IntakeC-Zone0	OK	20 degrees C / 68 degrees F
	CB 1 ExhaustA-Zone0	OK	12 degrees C / 53 degrees F
	CB 1 ExhaustB-Zone1	OK	7 degrees C / 44 degrees F
	CB 1 TCBC-Zone0	OK	10 degrees C / 50 degrees F
	SPMB 0 Intake	OK	5 degrees C / 41 degrees F
	SPMB 1 Intake	OK	4 degrees C / 39 degrees F
	Routing Engine 0	OK	9 degrees C / 48 degrees F
	Routing Engine 0 CPU	OK	9 degrees C / 48 degrees F
	Routing Engine 1	OK	6 degrees C / 42 degrees F



Routing Engine 1 CPU	OK	6 degrees C / 42 degrees F
SFB 0 Intake-Zone0	OK	26 degrees C / 78 degrees F
SFB 0 Exhaust-Zone1	OK	17 degrees C / 62 degrees F
SFB 0 IntakeA-Zone0	OK	16 degrees C / 60 degrees F
SFB 0 IntakeB-Zone1	OK	11 degrees C / 51 degrees F
SFB 0 Exhaust-Zone0	OK	18 degrees C / 64 degrees F
SFB 0 SFB-XF2-Zone1	OK	25 degrees C / 77 degrees F
SFB 0 SFB-XF1-Zone0	OK	23 degrees C / 73 degrees F
SFB 0 SFB-XF0-Zone0	OK	33 degrees C / 91 degrees F
SFB 1 Intake-Zone0	OK	27 degrees C / 80 degrees F
SFB 1 Exhaust-Zone1	OK	15 degrees C / 59 degrees F
SFB 1 IntakeA-Zone0	OK	20 degrees C / 68 degrees F
SFB 1 IntakeB-Zone1	OK	10 degrees C / 50 degrees F
SFB 1 Exhaust-Zone0	OK	19 degrees C / 66 degrees F
SFB 1 SFB-XF2-Zone1	OK	26 degrees C / 78 degrees F
SFB 1 SFB-XF1-Zone0	OK	27 degrees C / 80 degrees F
SFB 1 SFB-XF0-Zone0	OK	32 degrees C / 89 degrees F
SFB 2 Intake-Zone0	OK	21 degrees C / 69 degrees F
SFB 2 Exhaust-Zone1	OK	13 degrees C / 55 degrees F
SFB 2 IntakeA-Zone0	OK	18 degrees C / 64 degrees F
SFB 2 IntakeB-Zone1	OK	9 degrees C / 48 degrees F
SFB 2 Exhaust-Zone0	OK	16 degrees C / 60 degrees F
SFB 2 SFB-XF2-Zone1	OK	24 degrees C / 75 degrees F
SFB 2 SFB-XF1-Zone0	OK	21 degrees C / 69 degrees F
SFB 2 SFB-XF0-Zone0	OK	26 degrees C / 78 degrees F
SFB 4 Intake-Zone0	OK	28 degrees C / 82 degrees F
SFB 4 Exhaust-Zone1	OK	16 degrees C / 60 degrees F
SFB 4 IntakeA-Zone0	OK	18 degrees C / 64 degrees F
SFB 4 IntakeB-Zone1	OK	11 degrees C / 51 degrees F
SFB 4 Exhaust-Zone0	OK	19 degrees C / 66 degrees F
SFB 4 SFB-XF2-Zone1	OK	27 degrees C / 80 degrees F
SFB 4 SFB-XF1-Zone0	OK	27 degrees C / 80 degrees F
SFB 4 SFB-XF0-Zone0	OK	32 degrees C / 89 degrees F
SFB 5 Intake-Zone0	OK	22 degrees C / 71 degrees F
SFB 5 Exhaust-Zone1	OK	14 degrees C / 57 degrees F
SFB 5 IntakeA-Zone0	OK	18 degrees C / 64 degrees F
SFB 5 IntakeB-Zone1	OK	10 degrees C / 50 degrees F
SFB 5 Exhaust-Zone0	OK	17 degrees C / 62 degrees F
SFB 5 SFB-XF2-Zone1	OK	22 degrees C / 71 degrees F
SFB 5 SFB-XF1-Zone0	OK	29 degrees C / 84 degrees F
SFB 5 SFB-XF0-Zone0	OK	27 degrees C / 80 degrees F
SFB 6 Intake-Zone0	OK	27 degrees C / 80 degrees F
SFB 6 Exhaust-Zone1	OK	13 degrees C / 55 degrees F
SFB 6 IntakeA-Zone0	OK	19 degrees C / 66 degrees F
SFB 6 IntakeB-Zone1	OK	10 degrees C / 50 degrees F
SFB 6 Exhaust-Zone0	OK	20 degrees C / 68 degrees F
SFB 6 SFB-XF2-Zone1	OK	24 degrees C / 75 degrees F
SFB 6 SFB-XF1-Zone0	OK	32 degrees C / 89 degrees F
SFB 6 SFB-XF0-Zone0	OK	33 degrees C / 91 degrees F
SFB 7 Intake-Zone0	OK	25 degrees C / 77 degrees F
SFB 7 Exhaust-Zone1	OK	13 degrees C / 55 degrees F
SFB 7 IntakeA-Zone0	OK	14 degrees C / 57 degrees F
SFB 7 IntakeB-Zone1	OK	8 degrees C / 46 degrees F
SFB 7 Exhaust-Zone0	OK	17 degrees C / 62 degrees F
SFB 7 SFB-XF2-Zone1	OK	21 degrees C / 69 degrees F
SFB 7 SFB-XF1-Zone0	OK	21 degrees C / 69 degrees F
SFB 7 SFB-XF0-Zone0	OK	33 degrees C / 91 degrees F
FPC 0 Intake	OK	13 degrees C / 55 degrees F
FPC 0 Exhaust A	OK	13 degrees C / 55 degrees F
FPC 0 Exhaust B	OK	14 degrees C / 57 degrees F



FPC 0 LU 0 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 0 Chip	OK	25 degrees C / 77 degrees F
FPC 0 LU 1 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 1 Chip	OK	27 degrees C / 80 degrees F
FPC 0 LU 2 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 2 Chip	OK	19 degrees C / 66 degrees F
FPC 0 LU 3 TSen	OK	28 degrees C / 82 degrees F
FPC 0 LU 3 Chip	OK	23 degrees C / 73 degrees F
FPC 0 XM 0 TSen	OK	28 degrees C / 82 degrees F
FPC 0 XM 0 Chip	OK	33 degrees C / 91 degrees F
FPC 0 XM 1 TSen	OK	28 degrees C / 82 degrees F
FPC 0 XM 1 Chip	OK	26 degrees C / 78 degrees F
FPC 0 PLX Switch TSen	OK	28 degrees C / 82 degrees F
FPC 0 PLX Switch Chip	OK	26 degrees C / 78 degrees F
FPC 1 Intake	OK	10 degrees C / 50 degrees F
FPC 1 Exhaust A	OK	24 degrees C / 75 degrees F
FPC 1 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 1 LU 0 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 0 Chip	OK	31 degrees C / 87 degrees F
FPC 1 LU 1 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 1 Chip	OK	21 degrees C / 69 degrees F
FPC 1 LU 2 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 2 Chip	OK	25 degrees C / 77 degrees F
FPC 1 LU 3 TSen	OK	22 degrees C / 71 degrees F
FPC 1 LU 3 Chip	OK	33 degrees C / 91 degrees F
FPC 1 XM 0 TSen	OK	22 degrees C / 71 degrees F
FPC 1 XM 0 Chip	OK	30 degrees C / 86 degrees F
FPC 1 XF 0 TSen	OK	22 degrees C / 71 degrees F
FPC 1 XF 0 Chip	OK	37 degrees C / 98 degrees F
FPC 1 PLX Switch TSen	OK	22 degrees C / 71 degrees F
FPC 1 PLX Switch Chip	OK	22 degrees C / 71 degrees F
FPC 2 Intake	OK	9 degrees C / 48 degrees F
FPC 2 Exhaust A	OK	10 degrees C / 50 degrees F
FPC 2 Exhaust B	OK	10 degrees C / 50 degrees F
FPC 2 LU 0 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 0 Chip	OK	25 degrees C / 77 degrees F
FPC 2 LU 1 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 1 Chip	OK	26 degrees C / 78 degrees F
FPC 2 LU 2 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 2 Chip	OK	17 degrees C / 62 degrees F
FPC 2 LU 3 TSen	OK	26 degrees C / 78 degrees F
FPC 2 LU 3 Chip	OK	22 degrees C / 71 degrees F
FPC 2 XM 0 TSen	OK	26 degrees C / 78 degrees F
FPC 2 XM 0 Chip	OK	34 degrees C / 93 degrees F
FPC 2 XM 1 TSen	OK	26 degrees C / 78 degrees F
FPC 2 XM 1 Chip	OK	26 degrees C / 78 degrees F
FPC 2 PLX Switch TSen	OK	26 degrees C / 78 degrees F
FPC 2 PLX Switch Chip	OK	20 degrees C / 68 degrees F
FPC 3 Intake	OK	12 degrees C / 53 degrees F
FPC 3 Exhaust A	OK	16 degrees C / 60 degrees F
FPC 3 Exhaust B	OK	26 degrees C / 78 degrees F
FPC 3 LU 0 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 0 Chip	OK	26 degrees C / 78 degrees F
FPC 3 LU 1 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 1 Chip	OK	27 degrees C / 80 degrees F
FPC 3 LU 2 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 2 Chip	OK	22 degrees C / 71 degrees F
FPC 3 LU 3 TSen	OK	23 degrees C / 73 degrees F
FPC 3 LU 3 Chip	OK	21 degrees C / 69 degrees F
FPC 3 MQ 0 TSen	OK	15 degrees C / 59 degrees F



FPC 3 MQ 0 Chip	OK	18 degrees C / 64 degrees F
FPC 3 MQ 1 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 1 Chip	OK	20 degrees C / 68 degrees F
FPC 3 MQ 2 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 2 Chip	OK	17 degrees C / 62 degrees F
FPC 3 MQ 3 TSen	OK	15 degrees C / 59 degrees F
FPC 3 MQ 3 Chip	OK	16 degrees C / 60 degrees F
FPC 4 Intake	OK	11 degrees C / 51 degrees F
FPC 4 Exhaust A	OK	22 degrees C / 71 degrees F
FPC 4 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 4 LU 0 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 0 Chip	OK	33 degrees C / 91 degrees F
FPC 4 LU 1 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 1 Chip	OK	21 degrees C / 69 degrees F
FPC 4 LU 2 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 2 Chip	OK	26 degrees C / 78 degrees F
FPC 4 LU 3 TSen	OK	22 degrees C / 71 degrees F
FPC 4 LU 3 Chip	OK	33 degrees C / 91 degrees F
FPC 4 XM 0 TSen	OK	22 degrees C / 71 degrees F
FPC 4 XM 0 Chip	OK	30 degrees C / 86 degrees F
FPC 4 XF 0 TSen	OK	22 degrees C / 71 degrees F
FPC 4 XF 0 Chip	OK	37 degrees C / 98 degrees F
FPC 4 PLX Switch TSen	OK	22 degrees C / 71 degrees F
FPC 4 PLX Switch Chip	OK	23 degrees C / 73 degrees F
FPC 5 Intake	OK	12 degrees C / 53 degrees F
FPC 5 Exhaust A	OK	12 degrees C / 53 degrees F
FPC 5 Exhaust B	OK	12 degrees C / 53 degrees F
FPC 5 LU 0 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 0 Chip	OK	28 degrees C / 82 degrees F
FPC 5 LU 1 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 1 Chip	OK	27 degrees C / 80 degrees F
FPC 5 LU 2 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 2 Chip	OK	19 degrees C / 66 degrees F
FPC 5 LU 3 TSen	OK	27 degrees C / 80 degrees F
FPC 5 LU 3 Chip	OK	22 degrees C / 71 degrees F
FPC 5 XM 0 TSen	OK	27 degrees C / 80 degrees F
FPC 5 XM 0 Chip	OK	36 degrees C / 96 degrees F
FPC 5 XM 1 TSen	OK	27 degrees C / 80 degrees F
FPC 5 XM 1 Chip	OK	26 degrees C / 78 degrees F
FPC 5 PLX Switch TSen	OK	27 degrees C / 80 degrees F
FPC 5 PLX Switch Chip	OK	24 degrees C / 75 degrees F
FPC 6 Intake	OK	12 degrees C / 53 degrees F
FPC 6 Exhaust A	OK	17 degrees C / 62 degrees F
FPC 6 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 6 LU 0 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 0 Chip	OK	29 degrees C / 84 degrees F
FPC 6 LU 1 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 1 Chip	OK	30 degrees C / 86 degrees F
FPC 6 LU 2 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 2 Chip	OK	24 degrees C / 75 degrees F
FPC 6 LU 3 TSen	OK	24 degrees C / 75 degrees F
FPC 6 LU 3 Chip	OK	22 degrees C / 71 degrees F
FPC 6 MQ 0 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 0 Chip	OK	19 degrees C / 66 degrees F
FPC 6 MQ 1 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 1 Chip	OK	20 degrees C / 68 degrees F
FPC 6 MQ 2 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 2 Chip	OK	17 degrees C / 62 degrees F
FPC 6 MQ 3 TSen	OK	16 degrees C / 60 degrees F
FPC 6 MQ 3 Chip	OK	16 degrees C / 60 degrees F



FPC 7 Intake	OK	10 degrees C / 50 degrees F
FPC 7 Exhaust A	OK	10 degrees C / 50 degrees F
FPC 7 Exhaust B	OK	11 degrees C / 51 degrees F
FPC 7 LU 0 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 0 Chip	OK	26 degrees C / 78 degrees F
FPC 7 LU 1 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 1 Chip	OK	29 degrees C / 84 degrees F
FPC 7 LU 2 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 2 Chip	OK	19 degrees C / 66 degrees F
FPC 7 LU 3 TSen	OK	26 degrees C / 78 degrees F
FPC 7 LU 3 Chip	OK	24 degrees C / 75 degrees F
FPC 7 XM 0 TSen	OK	26 degrees C / 78 degrees F
FPC 7 XM 0 Chip	OK	34 degrees C / 93 degrees F
FPC 7 XM 1 TSen	OK	26 degrees C / 78 degrees F
FPC 7 XM 1 Chip	OK	32 degrees C / 89 degrees F
FPC 7 PLX Switch TSen	OK	26 degrees C / 78 degrees F
FPC 7 PLX Switch Chip	OK	22 degrees C / 71 degrees F
FPC 8 Intake	OK	10 degrees C / 50 degrees F
FPC 8 Exhaust A	OK	22 degrees C / 71 degrees F
FPC 8 Exhaust B	OK	28 degrees C / 82 degrees F
FPC 8 LU 0 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 0 Chip	OK	33 degrees C / 91 degrees F
FPC 8 LU 1 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 1 Chip	OK	23 degrees C / 73 degrees F
FPC 8 LU 2 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 2 Chip	OK	26 degrees C / 78 degrees F
FPC 8 LU 3 TSen	OK	20 degrees C / 68 degrees F
FPC 8 LU 3 Chip	OK	33 degrees C / 91 degrees F
FPC 8 XM 0 TSen	OK	20 degrees C / 68 degrees F
FPC 8 XM 0 Chip	OK	29 degrees C / 84 degrees F
FPC 8 XF 0 TSen	OK	20 degrees C / 68 degrees F
FPC 8 XF 0 Chip	OK	38 degrees C / 100 degrees F
FPC 8 PLX Switch TSen	OK	20 degrees C / 68 degrees F
FPC 8 PLX Switch Chip	OK	24 degrees C / 75 degrees F
FPC 9 Intake	OK	11 degrees C / 51 degrees F
FPC 9 Exhaust A	OK	11 degrees C / 51 degrees F
FPC 9 Exhaust B	OK	11 degrees C / 51 degrees F
FPC 9 LU 0 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 0 Chip	OK	24 degrees C / 75 degrees F
FPC 9 LU 1 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 1 Chip	OK	26 degrees C / 78 degrees F
FPC 9 LU 2 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 2 Chip	OK	16 degrees C / 60 degrees F
FPC 9 LU 3 TSen	OK	25 degrees C / 77 degrees F
FPC 9 LU 3 Chip	OK	21 degrees C / 69 degrees F
FPC 9 XM 0 TSen	OK	25 degrees C / 77 degrees F
FPC 9 XM 0 Chip	OK	32 degrees C / 89 degrees F
FPC 9 XM 1 TSen	OK	25 degrees C / 77 degrees F
FPC 9 XM 1 Chip	OK	25 degrees C / 77 degrees F
FPC 9 PLX Switch TSen	OK	25 degrees C / 77 degrees F
FPC 9 PLX Switch Chip	OK	21 degrees C / 69 degrees F
ADC 0 Intake	OK	12 degrees C / 53 degrees F
ADC 0 Exhaust	OK	20 degrees C / 68 degrees F
ADC 0 ADC-XF1	OK	26 degrees C / 78 degrees F
ADC 0 ADC-XF0	OK	32 degrees C / 89 degrees F
ADC 1 Intake	OK	11 degrees C / 51 degrees F
ADC 1 Exhaust	OK	21 degrees C / 69 degrees F
ADC 1 ADC-XF1	OK	24 degrees C / 75 degrees F
ADC 1 ADC-XF0	OK	31 degrees C / 87 degrees F
ADC 2 Intake	OK	14 degrees C / 57 degrees F



ADC 2 Exhaust	OK	21 degrees C / 69 degrees F
ADC 2 ADC-XF1	OK	28 degrees C / 82 degrees F
ADC 2 ADC-XF0	OK	34 degrees C / 93 degrees F
ADC 3 Intake	OK	13 degrees C / 55 degrees F
ADC 3 Exhaust	OK	19 degrees C / 66 degrees F
ADC 3 ADC-XF1	OK	24 degrees C / 75 degrees F
ADC 3 ADC-XF0	OK	31 degrees C / 87 degrees F
ADC 4 Intake	OK	9 degrees C / 48 degrees F
ADC 4 Exhaust	OK	22 degrees C / 71 degrees F
ADC 4 ADC-XF1	OK	28 degrees C / 82 degrees F
ADC 4 ADC-XF0	OK	35 degrees C / 95 degrees F
ADC 5 Intake	OK	12 degrees C / 53 degrees F
ADC 5 Exhaust	OK	22 degrees C / 71 degrees F
ADC 5 ADC-XF1	OK	28 degrees C / 82 degrees F
ADC 5 ADC-XF0	OK	34 degrees C / 93 degrees F
ADC 6 Intake	OK	11 degrees C / 51 degrees F
ADC 6 Exhaust	OK	21 degrees C / 69 degrees F
ADC 6 ADC-XF1	OK	26 degrees C / 78 degrees F
ADC 6 ADC-XF0	OK	35 degrees C / 95 degrees F
ADC 7 Intake	OK	14 degrees C / 57 degrees F
ADC 7 Exhaust	OK	22 degrees C / 71 degrees F
ADC 7 ADC-XF1	OK	26 degrees C / 78 degrees F
ADC 7 ADC-XF0	OK	34 degrees C / 93 degrees F
ADC 8 Intake	OK	14 degrees C / 57 degrees F
ADC 8 Exhaust	OK	21 degrees C / 69 degrees F
ADC 8 ADC-XF1	OK	24 degrees C / 75 degrees F
ADC 8 ADC-XF0	OK	31 degrees C / 87 degrees F
ADC 9 Intake	OK	10 degrees C / 50 degrees F
ADC 9 Exhaust	OK	22 degrees C / 71 degrees F
ADC 9 ADC-XF1	OK	28 degrees C / 82 degrees F
ADC 9 ADC-XF0	OK	36 degrees C / 96 degrees F
Fans Fan Tray 0 Fan 1	OK	3480 RPM
Fan Tray 0 Fan 2	OK	3480 RPM
Fan Tray 0 Fan 3	OK	3480 RPM
Fan Tray 0 Fan 4	OK	3360 RPM
Fan Tray 0 Fan 5	OK	3360 RPM
Fan Tray 0 Fan 6	OK	3480 RPM
Fan Tray 1 Fan 1	OK	3360 RPM
Fan Tray 1 Fan 2	OK	3360 RPM
Fan Tray 1 Fan 3	OK	3360 RPM
Fan Tray 1 Fan 4	OK	3480 RPM
Fan Tray 1 Fan 5	OK	3480 RPM
Fan Tray 1 Fan 6	OK	3480 RPM
Fan Tray 2 Fan 1	OK	3360 RPM
Fan Tray 2 Fan 2	OK	3360 RPM
Fan Tray 2 Fan 3	OK	3480 RPM
Fan Tray 2 Fan 4	OK	3480 RPM
Fan Tray 2 Fan 5	OK	3360 RPM
Fan Tray 2 Fan 6	OK	3480 RPM
Fan Tray 3 Fan 1	OK	3360 RPM
Fan Tray 3 Fan 2	OK	3360 RPM
Fan Tray 3 Fan 3	OK	3480 RPM
Fan Tray 3 Fan 4	OK	3480 RPM
Fan Tray 3 Fan 5	OK	3480 RPM
Fan Tray 3 Fan 6	OK	3360 RPM

**show chassis environment (MX2008 Router)**

```
user@host>show chassis environment
```



Class	Item	Status	Measurement
Temp	PSM 0	Absent	
	PSM 1	OK	29 degrees C / 84 degrees F
	PSM 2	OK	30 degrees C / 86 degrees F
	PSM 3	OK	29 degrees C / 84 degrees F
	PSM 4	OK	29 degrees C / 84 degrees F
	PSM 5	OK	30 degrees C / 86 degrees F
	PSM 6	OK	29 degrees C / 84 degrees F
	PSM 7	OK	31 degrees C / 87 degrees F
	PSM 8	Absent	
	PDM 0	OK	
	PDM 1	OK	
	CB 0 Inlet1	OK	37 degrees C / 98 degrees F
	CB 0 Inlet2	OK	45 degrees C / 113 degrees F
	CB 0 Inlet3	OK	44 degrees C / 111 degrees F
	CB 0 Inlet4	OK	41 degrees C / 105 degrees F
	CB 0 Exhaust1	OK	30 degrees C / 86 degrees F
	CB 0 Exhaust2	OK	40 degrees C / 104 degrees F
	CB 0 Exhaust3	OK	48 degrees C / 118 degrees F
	CB 0 Exhaust4	OK	46 degrees C / 114 degrees F
	CB 1 Inlet1	OK	30 degrees C / 86 degrees F
	CB 1 Inlet2	OK	31 degrees C / 87 degrees F
	CB 1 Inlet3	OK	29 degrees C / 84 degrees F
	CB 1 Inlet4	OK	32 degrees C / 89 degrees F
	CB 1 Exhaust1	OK	30 degrees C / 86 degrees F
	CB 1 Exhaust2	OK	33 degrees C / 91 degrees F
	CB 1 Exhaust3	OK	34 degrees C / 93 degrees F
	CB 1 Exhaust4	OK	34 degrees C / 93 degrees F
	Routing Engine 0	OK	
	Routing Engine 0 CPU	OK	75 degrees C / 167 degrees F
	Routing Engine 1	OK	
	Routing Engine 1 CPU	OK	46 degrees C / 114 degrees F
	SFB 0 Inlet2	OK	44 degrees C / 111 degrees F
	SFB 0 Exhaust1	OK	39 degrees C / 102 degrees F
	SFB 0 Inlet1	OK	41 degrees C / 105 degrees F
	SFB 0 Exhaust2	OK	45 degrees C / 113 degrees F
	SFB 0 SFB2-PF-loc1	OK	45 degrees C / 113 degrees F
	SFB 0 SFB2-PF-die	OK	51 degrees C / 123 degrees F
	SFB 1 Inlet2	OK	30 degrees C / 86 degrees F
	SFB 1 Exhaust1	OK	27 degrees C / 80 degrees F
	SFB 1 Inlet1	OK	28 degrees C / 82 degrees F
	SFB 1 Exhaust2	OK	31 degrees C / 87 degrees F
	SFB 1 SFB2-PF-loc1	OK	30 degrees C / 86 degrees F
	SFB 1 SFB2-PF-die	OK	37 degrees C / 98 degrees F
	SFB 2 Inlet2	OK	28 degrees C / 82 degrees F
	SFB 2 Exhaust1	OK	26 degrees C / 78 degrees F
	SFB 2 Inlet1	OK	27 degrees C / 80 degrees F
	SFB 2 Exhaust2	OK	28 degrees C / 82 degrees F
	SFB 2 SFB2-PF-loc1	OK	27 degrees C / 80 degrees F
	SFB 2 SFB2-PF-die	OK	33 degrees C / 91 degrees F
	SFB 3 Inlet2	OK	28 degrees C / 82 degrees F
	SFB 3 Exhaust1	OK	26 degrees C / 78 degrees F
	SFB 3 Inlet1	OK	26 degrees C / 78 degrees F
	SFB 3 Exhaust2	OK	28 degrees C / 82 degrees F
	SFB 3 SFB2-PF-loc1	OK	27 degrees C / 80 degrees F
	SFB 3 SFB2-PF-die	OK	33 degrees C / 91 degrees F
	SFB 4 Inlet2	OK	28 degrees C / 82 degrees F
	SFB 4 Exhaust1	OK	26 degrees C / 78 degrees F
	SFB 4 Inlet1	OK	26 degrees C / 78 degrees F
	SFB 4 Exhaust2	OK	28 degrees C / 82 degrees F



SFB 4 SFB2-PF-local	OK	27 degrees C / 80 degrees F
SFB 4 SFB2-PF-die	OK	32 degrees C / 89 degrees F
SFB 5 Inlet2	OK	29 degrees C / 84 degrees F
SFB 5 Exhaust1	OK	27 degrees C / 80 degrees F
SFB 5 Inlet1	OK	28 degrees C / 82 degrees F
SFB 5 Exhaust2	OK	29 degrees C / 84 degrees F
SFB 5 SFB2-PF-local	OK	28 degrees C / 82 degrees F
SFB 5 SFB2-PF-die	OK	34 degrees C / 93 degrees F
SFB 6 Inlet2	OK	33 degrees C / 91 degrees F
SFB 6 Exhaust1	OK	32 degrees C / 89 degrees F
SFB 6 Inlet1	OK	32 degrees C / 89 degrees F
SFB 6 Exhaust2	OK	34 degrees C / 93 degrees F
SFB 6 SFB2-PF-local	OK	33 degrees C / 91 degrees F
SFB 6 SFB2-PF-die	OK	40 degrees C / 104 degrees F
SFB 7 Inlet2	OK	29 degrees C / 84 degrees F
SFB 7 Exhaust1	OK	28 degrees C / 82 degrees F
SFB 7 Inlet1	OK	29 degrees C / 84 degrees F
SFB 7 Exhaust2	OK	29 degrees C / 84 degrees F
SFB 7 SFB2-PF-local	OK	28 degrees C / 82 degrees F
SFB 7 SFB2-PF-die	OK	33 degrees C / 91 degrees F
FPC 0 Intake	OK	29 degrees C / 84 degrees F
FPC 0 Exhaust A	OK	42 degrees C / 107 degrees F
FPC 0 Exhaust B	OK	42 degrees C / 107 degrees F
FPC 0 XL 0 TSen	OK	38 degrees C / 100 degrees F
FPC 0 XL 0 Chip	OK	53 degrees C / 127 degrees F
FPC 0 XL 0 XR2 0 TSen	OK	38 degrees C / 100 degrees F
FPC 0 XL 0 XR2 0 Chip	OK	59 degrees C / 138 degrees F
FPC 0 XL 0 XR2 1 TSen	OK	38 degrees C / 100 degrees F
FPC 0 XL 0 XR2 1 Chip	OK	59 degrees C / 138 degrees F
FPC 0 XL 1 TSen	OK	30 degrees C / 86 degrees F
FPC 0 XL 1 Chip	OK	42 degrees C / 107 degrees F
FPC 0 XL 1 XR2 0 TSen	OK	30 degrees C / 86 degrees F
FPC 0 XL 1 XR2 0 Chip	OK	49 degrees C / 120 degrees F
FPC 0 XL 1 XR2 1 TSen	OK	30 degrees C / 86 degrees F
FPC 0 XL 1 XR2 1 Chip	OK	50 degrees C / 122 degrees F
FPC 0 XM 0 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XM 0 Chip	OK	49 degrees C / 120 degrees F
FPC 0 XM 1 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XM 1 Chip	OK	42 degrees C / 107 degrees F
FPC 0 XM 2 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XM 2 Chip	OK	42 degrees C / 107 degrees F
FPC 0 XM 3 TSen	OK	42 degrees C / 107 degrees F
FPC 0 XM 3 Chip	OK	40 degrees C / 104 degrees F
FPC 0 PCIe Switch TSen	OK	42 degrees C / 107 degrees F
FPC 0 PCIe Switch Chip	OK	22 degrees C / 71 degrees F
FPC 1 Intake	OK	29 degrees C / 84 degrees F
FPC 1 Exhaust A	OK	52 degrees C / 125 degrees F
FPC 1 Exhaust B	OK	44 degrees C / 111 degrees F
FPC 1 EA0 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA0 Chip	OK	47 degrees C / 116 degrees F
FPC 1 EA0_XR0 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA0_XR0 Chip	OK	56 degrees C / 132 degrees F
FPC 1 EA0_XR1 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA0_XR1 Chip	OK	53 degrees C / 127 degrees F
FPC 1 EA1 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA1 Chip	OK	49 degrees C / 120 degrees F
FPC 1 EA1_XR0 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA1_XR0 Chip	OK	57 degrees C / 134 degrees F
FPC 1 EA1_XR1 TSen	OK	54 degrees C / 129 degrees F
FPC 1 EA1_XR1 Chip	OK	58 degrees C / 136 degrees F



FPC 1 PEX TSen	OK	54 degrees C / 129 degrees F
FPC 1 PEX Chip	OK	39 degrees C / 102 degrees F
FPC 1 EA2 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA2 Chip	OK	39 degrees C / 102 degrees F
FPC 1 EA2_XR0 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA2_XR0 Chip	OK	45 degrees C / 113 degrees F
FPC 1 EA2_XR1 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA2_XR1 Chip	OK	42 degrees C / 107 degrees F
FPC 1 EA3 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA3 Chip	OK	40 degrees C / 104 degrees F
FPC 1 EA3_XR0 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA3_XR0 Chip	OK	50 degrees C / 122 degrees F
FPC 1 EA3_XR1 TSen	OK	43 degrees C / 109 degrees F
FPC 1 EA3_XR1 Chip	OK	46 degrees C / 114 degrees F
FPC 1 EA0_HMC0 Logic die	OK	60 degrees C / 140 degrees F
FPC 1 EA0_HMC0 DRAM botm	OK	57 degrees C / 134 degrees F
FPC 1 EA0_HMC1 Logic die	OK	61 degrees C / 141 degrees F
FPC 1 EA0_HMC1 DRAM botm	OK	58 degrees C / 136 degrees F
FPC 1 EA0_HMC2 Logic die	OK	57 degrees C / 134 degrees F
FPC 1 EA0_HMC2 DRAM botm	OK	54 degrees C / 129 degrees F
FPC 1 EA1_HMC0 Logic die	OK	65 degrees C / 149 degrees F
FPC 1 EA1_HMC0 DRAM botm	OK	62 degrees C / 143 degrees F
FPC 1 EA1_HMC1 Logic die	OK	64 degrees C / 147 degrees F
FPC 1 EA1_HMC1 DRAM botm	OK	61 degrees C / 141 degrees F
FPC 1 EA1_HMC2 Logic die	OK	61 degrees C / 141 degrees F
FPC 1 EA1_HMC2 DRAM botm	OK	58 degrees C / 136 degrees F
FPC 1 EA2_HMC0 Logic die	OK	50 degrees C / 122 degrees F
FPC 1 EA2_HMC0 DRAM botm	OK	47 degrees C / 116 degrees F
FPC 1 EA2_HMC1 Logic die	OK	54 degrees C / 129 degrees F
FPC 1 EA2_HMC1 DRAM botm	OK	51 degrees C / 123 degrees F
FPC 1 EA2_HMC2 Logic die	OK	51 degrees C / 123 degrees F
FPC 1 EA2_HMC2 DRAM botm	OK	48 degrees C / 118 degrees F
FPC 1 EA3_HMC0 Logic die	OK	51 degrees C / 123 degrees F
FPC 1 EA3_HMC0 DRAM botm	OK	48 degrees C / 118 degrees F
FPC 1 EA3_HMC1 Logic die	OK	51 degrees C / 123 degrees F
FPC 1 EA3_HMC1 DRAM botm	OK	48 degrees C / 118 degrees F
FPC 1 EA3_HMC2 Logic die	OK	51 degrees C / 123 degrees F
FPC 1 EA3_HMC2 DRAM botm	OK	48 degrees C / 118 degrees F
FPC 7 Intake	OK	30 degrees C / 86 degrees F
FPC 7 Exhaust A	OK	45 degrees C / 113 degrees F
FPC 7 Exhaust B	OK	38 degrees C / 100 degrees F
FPC 7 QX 0 TSen	OK	48 degrees C / 118 degrees F
FPC 7 QX 0 Chip	OK	51 degrees C / 123 degrees F
FPC 7 LU 0 TCAM TSen	OK	48 degrees C / 118 degrees F
FPC 7 LU 0 TCAM Chip	OK	51 degrees C / 123 degrees F
FPC 7 LU 0 TSen	OK	48 degrees C / 118 degrees F
FPC 7 LU 0 Chip	OK	50 degrees C / 122 degrees F
FPC 7 MQ 0 TSen	OK	48 degrees C / 118 degrees F
FPC 7 MQ 0 Chip	OK	54 degrees C / 129 degrees F
FPC 7 QX 1 TSen	OK	41 degrees C / 105 degrees F
FPC 7 QX 1 Chip	OK	42 degrees C / 107 degrees F
FPC 7 LU 1 TCAM TSen	OK	41 degrees C / 105 degrees F
FPC 7 LU 1 TCAM Chip	OK	43 degrees C / 109 degrees F
FPC 7 LU 1 TSen	OK	41 degrees C / 105 degrees F
FPC 7 LU 1 Chip	OK	46 degrees C / 114 degrees F
FPC 7 MQ 1 TSen	OK	41 degrees C / 105 degrees F
FPC 7 MQ 1 Chip	OK	47 degrees C / 116 degrees F
ADC 7 Intake	OK	32 degrees C / 89 degrees F
ADC 7 Exhaust	OK	39 degrees C / 102 degrees F
ADC 7 ADC-XF1	OK	46 degrees C / 114 degrees F



	ADC 7 ADC-XF0	OK	54 degrees C / 129 degrees F
Fans	Fan Tray 0 Fan 1	OK	6240 RPM
	Fan Tray 0 Fan 2	OK	6120 RPM
	Fan Tray 0 Fan 3	OK	6120 RPM
	Fan Tray 0 Fan 4	OK	5760 RPM
	Fan Tray 0 Fan 5	OK	5880 RPM
	Fan Tray 0 Fan 6	OK	6000 RPM
	Fan Tray 1 Fan 1	OK	5880 RPM
	Fan Tray 1 Fan 2	OK	5880 RPM
	Fan Tray 1 Fan 3	OK	6000 RPM
	Fan Tray 1 Fan 4	OK	6000 RPM
	Fan Tray 1 Fan 5	OK	6000 RPM
	Fan Tray 1 Fan 6	OK	6000 RPM

### show chassis environment (T320 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	PEM 0	OK	
	PEM 1	Absent	
Temp	SCG 0	OK	28 degrees C / 82 degrees F
	SCG 1	OK	28 degrees C / 82 degrees F
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 1	OK	30 degrees C / 86 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	32 degrees C / 89 degrees F
	SIB 0	OK	33 degrees C / 91 degrees F
	SIB 1	OK	33 degrees C / 91 degrees F
	SIB 2	OK	34 degrees C / 93 degrees F
	FPC 0 Top	OK	38 degrees C / 100 degrees F
	FPC 0 Bottom	OK	32 degrees C / 89 degrees F
	FPC 1 Top	OK	38 degrees C / 100 degrees F
	FPC 1 Bottom	OK	33 degrees C / 91 degrees F
	FPC 2 Top	OK	36 degrees C / 96 degrees F
	FPC 2 Bottom	OK	31 degrees C / 87 degrees F
	FPM GBUS	OK	26 degrees C / 78 degrees F
	FPM Display	OK	29 degrees C / 84 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	



## show chassis environment (MX10003 Router)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Temp	CB 0 Exhaust Temp Sensor 0x49	OK	36 degrees C / 96 degrees F
	CB 0 Inlet Temp Sensor 0x49	OK	29 degrees C / 84 degrees F
	CB 1 Exhaust Temp Sensor 0x49	OK	36 degrees C / 96 degrees F
	CB 1 Inlet Temp Sensor 0x49	OK	31 degrees C / 87 degrees F
	FPC 0 Intake Temp Sensor	OK	29 degrees C / 84 degrees F
	FPC 0 Exhaust-A Temp Sensor	OK	55 degrees C / 131 degrees F
	FPC 0 Exhaust-B Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 0 EA0 Chip	OK	58 degrees C / 136 degrees F
	FPC 0 EA0-XR0 Chip	OK	61 degrees C / 141 degrees F
	FPC 0 EA0-XR1 Chip	OK	62 degrees C / 143 degrees F
	FPC 0 EA1 Chip	OK	67 degrees C / 152 degrees F
	FPC 0 EA1-XR0 Chip	OK	71 degrees C / 159 degrees F
	FPC 0 EA1-XR1 Chip	OK	72 degrees C / 161 degrees F
	FPC 0 PEX Chip	OK	75 degrees C / 167 degrees F
	FPC 0 EA2 Chip	OK	49 degrees C / 120 degrees F
	FPC 0 EA2-XR0 Chip	OK	55 degrees C / 131 degrees F
	FPC 0 EA2-XR1 Chip	OK	56 degrees C / 132 degrees F
	FPC 0 PF Chip	OK	68 degrees C / 154 degrees F
	FPC 0 EA0_HMC0 Logic die	OK	72 degrees C / 161 degrees F
	FPC 0 EA0_HMC0 DRAM botm	OK	69 degrees C / 156 degrees F
	FPC 0 EA0_HMC1 Logic die	OK	72 degrees C / 161 degrees F
	FPC 0 EA0_HMC1 DRAM botm	OK	69 degrees C / 156 degrees F
	FPC 0 EA0_HMC2 Logic die	OK	75 degrees C / 167 degrees F
	FPC 0 EA0_HMC2 DRAM botm	OK	72 degrees C / 161 degrees F
	FPC 0 EA1_HMC0 Logic die	OK	81 degrees C / 177 degrees F
	FPC 0 EA1_HMC0 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 0 EA1_HMC1 Logic die	OK	79 degrees C / 174 degrees F
	FPC 0 EA1_HMC1 DRAM botm	OK	76 degrees C / 168 degrees F
	FPC 0 EA1_HMC2 Logic die	OK	82 degrees C / 179 degrees F
	FPC 0 EA1_HMC2 DRAM botm	OK	79 degrees C / 174 degrees F
	FPC 0 EA2_HMC0 Logic die	OK	61 degrees C / 141 degrees F
	FPC 0 EA2_HMC0 DRAM botm	OK	58 degrees C / 136 degrees F
	FPC 0 EA2_HMC1 Logic die	OK	62 degrees C / 143 degrees F
	FPC 0 EA2_HMC1 DRAM botm	OK	59 degrees C / 138 degrees F
	FPC 0 EA2_HMC2 Logic die	OK	64 degrees C / 147 degrees F
	FPC 0 EA2_HMC2 DRAM botm	OK	61 degrees C / 141 degrees F
	FPC 1 Intake Temp Sensor	OK	28 degrees C / 82 degrees F
	FPC 1 Exhaust-A Temp Sensor	OK	58 degrees C / 136 degrees F
	FPC 1 Exhaust-B Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 1 EA0 Chip	OK	64 degrees C / 147 degrees F
	FPC 1 EA0-XR0 Chip	OK	67 degrees C / 152 degrees F
	FPC 1 EA0-XR1 Chip	OK	68 degrees C / 154 degrees F
	FPC 1 EA1 Chip	OK	70 degrees C / 158 degrees F
	FPC 1 EA1-XR0 Chip	OK	74 degrees C / 165 degrees F
	FPC 1 EA1-XR1 Chip	OK	74 degrees C / 165 degrees F
	FPC 1 PEX Chip	OK	88 degrees C / 190 degrees F
	FPC 1 EA2 Chip	OK	50 degrees C / 122 degrees F
	FPC 1 EA2-XR0 Chip	OK	54 degrees C / 129 degrees F
	FPC 1 EA2-XR1 Chip	OK	56 degrees C / 132 degrees F
	FPC 1 PF Chip	OK	71 degrees C / 159 degrees F
	FPC 1 EA0_HMC0 Logic die	OK	74 degrees C / 165 degrees F
	FPC 1 EA0_HMC0 DRAM botm	OK	71 degrees C / 159 degrees F
	FPC 1 EA0_HMC1 Logic die	OK	78 degrees C / 172 degrees F
	FPC 1 EA0_HMC1 DRAM botm	OK	75 degrees C / 167 degrees F



	FPC 1 EA0_HMC2 Logic die	OK	78 degrees C / 172 degrees F
	FPC 1 EA0_HMC2 DRAM botm	OK	75 degrees C / 167 degrees F
	FPC 1 EA1_HMC0 Logic die	OK	84 degrees C / 183 degrees F
	FPC 1 EA1_HMC0 DRAM botm	OK	81 degrees C / 177 degrees F
	FPC 1 EA1_HMC1 Logic die	OK	81 degrees C / 177 degrees F
	FPC 1 EA1_HMC1 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 1 EA1_HMC2 Logic die	OK	85 degrees C / 185 degrees F
	FPC 1 EA1_HMC2 DRAM botm	OK	82 degrees C / 179 degrees F
	FPC 1 EA2_HMC0 Logic die	OK	63 degrees C / 145 degrees F
	FPC 1 EA2_HMC0 DRAM botm	OK	60 degrees C / 140 degrees F
	FPC 1 EA2_HMC1 Logic die	OK	60 degrees C / 140 degrees F
	FPC 1 EA2_HMC1 DRAM botm	OK	57 degrees C / 134 degrees F
	FPC 1 EA2_HMC2 Logic die	OK	66 degrees C / 150 degrees F
	FPC 1 EA2_HMC2 DRAM botm	OK	63 degrees C / 145 degrees F
Power	PEM 0	OK	
	PEM 1	OK	
	PEM 2	OK	
	PEM 3	OK	
	PEM 4	Absent	
	PEM 5	Absent	
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 0	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 3 Fan 0	OK	Spinning at normal speed
	Fan Tray 3 Fan 1	OK	Spinning at normal speed
	Fan Tray 3 Fan 2	OK	Spinning at normal speed
	Fan Tray 3 Fan 3	OK	Spinning at normal speed

### show chassis environment (MX10008 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	Routing Engine 0 CPU	OK	41 degrees C / 105 degrees F
	Routing Engine 1 CPU	OK	40 degrees C / 104 degrees F
	CB 0 Intake A Temp Sensor	OK	24 degrees C / 75 degrees F
	CB 0 Intake B Temp Sensor	OK	24 degrees C / 75 degrees F
	CB 0 Exhaust A Temp Sensor	OK	28 degrees C / 82 degrees F
	CB 0 Exhaust B Temp Sensor	OK	30 degrees C / 86 degrees F
	CB 0 Middle Temp Sensor	OK	28 degrees C / 82 degrees F
	CB 1 Intake A Temp Sensor	OK	24 degrees C / 75 degrees F
	CB 1 Intake B Temp Sensor	OK	23 degrees C / 73 degrees F
	CB 1 Exhaust A Temp Sensor	OK	27 degrees C / 80 degrees F
	CB 1 Exhaust B Temp Sensor	OK	29 degrees C / 84 degrees F
	CB 1 Middle Temp Sensor	OK	28 degrees C / 82 degrees F
	FPC 0 Intake-A Temp Sensor	OK	32 degrees C / 89 degrees F
	FPC 0 Exhaust-A Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 0 Exhaust-B Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 0 EA0 Temp Sensor	OK	66 degrees C / 150 degrees F
	FPC 0 EA0_XR0 Temp Sensor	OK	69 degrees C / 156 degrees F
	FPC 0 EA0_XR1 Temp Sensor	OK	73 degrees C / 163 degrees F



FPC 0 EA1 Temp Sensor	OK	60 degrees C / 140 degrees F
FPC 0 EA1_XR0 Temp Sensor	OK	64 degrees C / 147 degrees F
FPC 0 EA1_XR1 Temp Sensor	OK	63 degrees C / 145 degrees F
FPC 0 EA2 Temp Sensor	OK	68 degrees C / 154 degrees F
FPC 0 EA2_XR0 Temp Sensor	OK	73 degrees C / 163 degrees F
FPC 0 EA2_XR1 Temp Sensor	OK	72 degrees C / 161 degrees F
FPC 0 EA3 Temp Sensor	OK	63 degrees C / 145 degrees F
FPC 0 EA3_XR0 Temp Sensor	OK	66 degrees C / 150 degrees F
FPC 0 EA3_XR1 Temp Sensor	OK	65 degrees C / 149 degrees F
FPC 0 EA4 Temp Sensor	OK	68 degrees C / 154 degrees F
FPC 0 EA4_XR0 Temp Sensor	OK	71 degrees C / 159 degrees F
FPC 0 EA4_XR1 Temp Sensor	OK	70 degrees C / 158 degrees F
FPC 0 EA5 Temp Sensor	OK	56 degrees C / 132 degrees F
FPC 0 EA5_XR0 Temp Sensor	OK	61 degrees C / 141 degrees F
FPC 0 EA5_XR1 Temp Sensor	OK	63 degrees C / 145 degrees F
FPC 0 EA0_HMC0 Logic die	OK	75 degrees C / 167 degrees F
FPC 0 EA0_HMC0 DRAM botm	OK	72 degrees C / 161 degrees F
FPC 0 EA0_HMC1 Logic die	OK	75 degrees C / 167 degrees F
FPC 0 EA0_HMC1 DRAM botm	OK	72 degrees C / 161 degrees F
FPC 0 EA0_HMC2 Logic die	OK	77 degrees C / 170 degrees F
FPC 0 EA0_HMC2 DRAM botm	OK	74 degrees C / 165 degrees F
FPC 0 EA1_HMC0 Logic die	OK	72 degrees C / 161 degrees F
FPC 0 EA1_HMC0 DRAM botm	OK	69 degrees C / 156 degrees F
FPC 0 EA1_HMC1 Logic die	OK	73 degrees C / 163 degrees F
FPC 0 EA1_HMC1 DRAM botm	OK	70 degrees C / 158 degrees F
FPC 0 EA1_HMC2 Logic die	OK	72 degrees C / 161 degrees F
FPC 0 EA1_HMC2 DRAM botm	OK	69 degrees C / 156 degrees F
FPC 0 EA2_HMC0 Logic die	OK	80 degrees C / 176 degrees F
FPC 0 EA2_HMC0 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 0 EA2_HMC1 Logic die	OK	80 degrees C / 176 degrees F
FPC 0 EA2_HMC1 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 0 EA2_HMC2 Logic die	OK	79 degrees C / 174 degrees F
FPC 0 EA2_HMC2 DRAM botm	OK	76 degrees C / 168 degrees F
FPC 0 EA3_HMC0 Logic die	OK	77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 DRAM botm	OK	74 degrees C / 165 degrees F
FPC 0 EA3_HMC1 Logic die	OK	78 degrees C / 172 degrees F
FPC 0 EA3_HMC1 DRAM botm	OK	75 degrees C / 167 degrees F
FPC 0 EA3_HMC2 Logic die	OK	77 degrees C / 170 degrees F
FPC 0 EA3_HMC2 DRAM botm	OK	74 degrees C / 165 degrees F
FPC 0 EA4_HMC0 Logic die	OK	80 degrees C / 176 degrees F
FPC 0 EA4_HMC0 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 0 EA4_HMC1 Logic die	OK	81 degrees C / 177 degrees F
FPC 0 EA4_HMC1 DRAM botm	OK	78 degrees C / 172 degrees F
FPC 0 EA4_HMC2 Logic die	OK	80 degrees C / 176 degrees F
FPC 0 EA4_HMC2 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 0 EA5_HMC0 Logic die	OK	68 degrees C / 154 degrees F
FPC 0 EA5_HMC0 DRAM botm	OK	65 degrees C / 149 degrees F
FPC 0 EA5_HMC1 Logic die	OK	68 degrees C / 154 degrees F
FPC 0 EA5_HMC1 DRAM botm	OK	65 degrees C / 149 degrees F
FPC 0 EA5_HMC2 Logic die	OK	67 degrees C / 152 degrees F
FPC 0 EA5_HMC2 DRAM botm	OK	64 degrees C / 147 degrees F
FPC 2 Intake-A Temp Sensor	OK	32 degrees C / 89 degrees F
FPC 2 Exhaust-A Temp Sensor	OK	52 degrees C / 125 degrees F
FPC 2 Exhaust-B Temp Sensor	OK	50 degrees C / 122 degrees F
FPC 2 EA0 Temp Sensor	OK	71 degrees C / 159 degrees F
FPC 2 EA0_XR0 Temp Sensor	OK	75 degrees C / 167 degrees F
FPC 2 EA0_XR1 Temp Sensor	OK	78 degrees C / 172 degrees F
FPC 2 EA1 Temp Sensor	OK	64 degrees C / 147 degrees F
FPC 2 EA1_XR0 Temp Sensor	OK	67 degrees C / 152 degrees F
FPC 2 EA1_XR1 Temp Sensor	OK	65 degrees C / 149 degrees F



FPC 2 EA2 Temp Sensor	OK	75 degrees C / 167 degrees F
FPC 2 EA2_XR0 Temp Sensor	OK	80 degrees C / 176 degrees F
FPC 2 EA2_XR1 Temp Sensor	OK	80 degrees C / 176 degrees F
FPC 2 EA3 Temp Sensor	OK	66 degrees C / 150 degrees F
FPC 2 EA3_XR0 Temp Sensor	OK	69 degrees C / 156 degrees F
FPC 2 EA3_XR1 Temp Sensor	OK	69 degrees C / 156 degrees F
FPC 2 EA4 Temp Sensor	OK	75 degrees C / 167 degrees F
FPC 2 EA4_XR0 Temp Sensor	OK	76 degrees C / 168 degrees F
FPC 2 EA4_XR1 Temp Sensor	OK	75 degrees C / 167 degrees F
FPC 2 EA5 Temp Sensor	OK	60 degrees C / 140 degrees F
FPC 2 EA5_XR0 Temp Sensor	OK	64 degrees C / 147 degrees F
FPC 2 EA5_XR1 Temp Sensor	OK	64 degrees C / 147 degrees F
FPC 2 EA0_HMC0 Logic die	OK	84 degrees C / 183 degrees F
FPC 2 EA0_HMC0 DRAM botm	OK	81 degrees C / 177 degrees F
FPC 2 EA0_HMC1 Logic die	OK	85 degrees C / 185 degrees F
FPC 2 EA0_HMC1 DRAM botm	OK	82 degrees C / 179 degrees F
FPC 2 EA0_HMC2 Logic die	OK	83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 DRAM botm	OK	80 degrees C / 176 degrees F
FPC 2 EA1_HMC0 Logic die	OK	76 degrees C / 168 degrees F
FPC 2 EA1_HMC0 DRAM botm	OK	73 degrees C / 163 degrees F
FPC 2 EA1_HMC1 Logic die	OK	76 degrees C / 168 degrees F
FPC 2 EA1_HMC1 DRAM botm	OK	73 degrees C / 163 degrees F
FPC 2 EA1_HMC2 Logic die	OK	76 degrees C / 168 degrees F
FPC 2 EA1_HMC2 DRAM botm	OK	73 degrees C / 163 degrees F
FPC 2 EA2_HMC0 Logic die	OK	86 degrees C / 186 degrees F
FPC 2 EA2_HMC0 DRAM botm	OK	83 degrees C / 181 degrees F
FPC 2 EA2_HMC1 Logic die	OK	87 degrees C / 188 degrees F
FPC 2 EA2_HMC1 DRAM botm	OK	84 degrees C / 183 degrees F
FPC 2 EA2_HMC2 Logic die	OK	87 degrees C / 188 degrees F
FPC 2 EA2_HMC2 DRAM botm	OK	84 degrees C / 183 degrees F
FPC 2 EA3_HMC0 Logic die	OK	80 degrees C / 176 degrees F
FPC 2 EA3_HMC0 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 2 EA3_HMC1 Logic die	OK	80 degrees C / 176 degrees F
FPC 2 EA3_HMC1 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 2 EA3_HMC2 Logic die	OK	80 degrees C / 176 degrees F
FPC 2 EA3_HMC2 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 2 EA4_HMC0 Logic die	OK	88 degrees C / 190 degrees F
FPC 2 EA4_HMC0 DRAM botm	OK	85 degrees C / 185 degrees F
FPC 2 EA4_HMC1 Logic die	OK	89 degrees C / 192 degrees F
FPC 2 EA4_HMC1 DRAM botm	OK	86 degrees C / 186 degrees F
FPC 2 EA4_HMC2 Logic die	OK	80 degrees C / 176 degrees F
FPC 2 EA4_HMC2 DRAM botm	OK	77 degrees C / 170 degrees F
FPC 2 EA5_HMC0 Logic die	OK	72 degrees C / 161 degrees F
FPC 2 EA5_HMC0 DRAM botm	OK	69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 Logic die	OK	69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 DRAM botm	OK	66 degrees C / 150 degrees F
FPC 2 EA5_HMC2 Logic die	OK	72 degrees C / 161 degrees F
FPC 2 EA5_HMC2 DRAM botm	OK	69 degrees C / 156 degrees F
FPC 3 Intake-A Temp Sensor	OK	30 degrees C / 86 degrees F
FPC 3 Exhaust-A Temp Sensor	OK	48 degrees C / 118 degrees F
FPC 3 Exhaust-B Temp Sensor	OK	44 degrees C / 111 degrees F
FPC 3 EA0 Temp Sensor	OK	60 degrees C / 140 degrees F
FPC 3 EA0_XR0 Temp Sensor	OK	65 degrees C / 149 degrees F
FPC 3 EA0_XR1 Temp Sensor	OK	67 degrees C / 152 degrees F
FPC 3 EA1 Temp Sensor	OK	54 degrees C / 129 degrees F
FPC 3 EA1_XR0 Temp Sensor	OK	59 degrees C / 138 degrees F
FPC 3 EA1_XR1 Temp Sensor	OK	58 degrees C / 136 degrees F
FPC 3 EA2 Temp Sensor	OK	62 degrees C / 143 degrees F
FPC 3 EA2_XR0 Temp Sensor	OK	66 degrees C / 150 degrees F
FPC 3 EA2_XR1 Temp Sensor	OK	66 degrees C / 150 degrees F



Copyright © 2019, Juniper Networks, Inc.



Fan Tray 0 Fan 9	OK	Spinning at normal speed
Fan Tray 0 Fan 10	OK	Spinning at normal speed
Fan Tray 1 Fan 0	OK	Spinning at normal speed
Fan Tray 1 Fan 1	OK	Spinning at normal speed
Fan Tray 1 Fan 2	OK	Spinning at normal speed
Fan Tray 1 Fan 3	OK	Spinning at normal speed
Fan Tray 1 Fan 4	OK	Spinning at normal speed
Fan Tray 1 Fan 5	OK	Spinning at normal speed
Fan Tray 1 Fan 6	OK	Spinning at normal speed
Fan Tray 1 Fan 7	OK	Spinning at normal speed
Fan Tray 1 Fan 8	OK	Spinning at normal speed
Fan Tray 1 Fan 9	OK	Spinning at normal speed
Fan Tray 1 Fan 10	OK	Spinning at normal speed
SFB 0 Intake-A	OK	32 degrees C / 89 degrees F
SFB 0 Intake-B	OK	21 degrees C / 69 degrees F
SFB 0 Exhaust-A	OK	27 degrees C / 80 degrees F
SFB 0 Exhaust-B	OK	32 degrees C / 89 degrees F
SFB 0 PF0	OK	39 degrees C / 102 degrees F
SFB 0 PF1	OK	29 degrees C / 84 degrees F
SFB 1 Intake-A	OK	43 degrees C / 109 degrees F
SFB 1 Intake-B	OK	20 degrees C / 68 degrees F
SFB 1 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 1 Exhaust-B	OK	44 degrees C / 111 degrees F
SFB 1 PF0	OK	50 degrees C / 122 degrees F
SFB 1 PF1	OK	29 degrees C / 84 degrees F
SFB 2 Intake-A	OK	39 degrees C / 102 degrees F
SFB 2 Intake-B	OK	20 degrees C / 68 degrees F
SFB 2 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 2 Exhaust-B	OK	38 degrees C / 100 degrees F
SFB 2 PF0	OK	45 degrees C / 113 degrees F
SFB 2 PF1	OK	30 degrees C / 86 degrees F
SFB 3 Intake-A	OK	36 degrees C / 96 degrees F
SFB 3 Intake-B	OK	20 degrees C / 68 degrees F
SFB 3 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 3 Exhaust-B	OK	35 degrees C / 95 degrees F
SFB 3 PF0	OK	42 degrees C / 107 degrees F
SFB 3 PF1	OK	29 degrees C / 84 degrees F
SFB 4 Intake-A	OK	30 degrees C / 86 degrees F
SFB 4 Intake-B	OK	20 degrees C / 68 degrees F
SFB 4 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 4 Exhaust-B	OK	31 degrees C / 87 degrees F
SFB 4 PF0	OK	41 degrees C / 105 degrees F
SFB 4 PF1	OK	29 degrees C / 84 degrees F
SFB 5 Intake-A	OK	30 degrees C / 86 degrees F
SFB 5 Intake-B	OK	21 degrees C / 69 degrees F
SFB 5 Exhaust-A	OK	25 degrees C / 77 degrees F
SFB 5 Exhaust-B	OK	30 degrees C / 86 degrees F
SFB 5 PF0	OK	35 degrees C / 95 degrees F
SFB 5 PF1	OK	34 degrees C / 93 degrees F

### show chassis environment (MX204 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	CB 0 Top Right Inlet Sensor	OK	35 degrees C / 95 degrees F
	CB 0 Top Left Inlet Sensor	OK	37 degrees C / 98 degrees F
	CB 0 Top Right Exhaust Sensor	OK	43 degrees C / 109 degrees F
	CB 0 Top Left Exhaust Sensor	OK	50 degrees C / 122 degrees F



Power	CB 0 CPU Core-0 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-1 Temp	OK	48 degrees C / 118 degrees F
	CB 0 CPU Core-2 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-3 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-4 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-5 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-6 Temp	OK	47 degrees C / 116 degrees F
	CB 0 CPU Core-7 Temp	OK	47 degrees C / 116 degrees F
	FPC 0 EAO_HMC0 Logic die	OK	77 degrees C / 170 degrees F
	FPC 0 EAO_HMC0 DRAM botm	OK	74 degrees C / 165 degrees F
	FPC 0 EAO_HMC1 Logic die	OK	81 degrees C / 177 degrees F
	FPC 0 EAO_HMC1 DRAM botm	OK	78 degrees C / 172 degrees F
	FPC 0 EAO Chip	OK	94 degrees C / 201 degrees F
	FPC 0 EAO-XR0 Chip	OK	64 degrees C / 147 degrees F
	FPC 0 EAO-XR1 Chip	OK	65 degrees C / 149 degrees F
	PEM 0	Absent	
	PEM 1	OK	48 degrees C / 118 degrees F
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 0	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed

### show chassis environment (T640 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	OK	22 degrees C / 71 degrees F
	SCG 0	OK	30 degrees C / 86 degrees F
	SCG 1	OK	30 degrees C / 86 degrees F
	Routing Engine 0	Present	
	Routing Engine 1	OK	27 degrees C / 80 degrees F
	CB 0	Present	
	CB 1	OK	33 degrees C / 91 degrees F
	SIB 0	Absent	
	SIB 1	Absent	
	SIB 2	Absent	
	SIB 3	Absent	
	SIB 4	Absent	
	FPC 4 Top	Testing	
	FPC 4 Bottom	Testing	
	FPC 5 Top	Testing	
	FPC 5 Bottom	Testing	
	FPC 6 Top	Testing	
	FPC 6 Bottom	Testing	
	FPM GBUS	OK	23 degrees C / 73 degrees F
	FPM Display	Absent	
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed



	Bottom Right Middle fan OK	Spinning at normal speed
	Bottom Right Rear fan OK	Spinning at normal speed
	Fourth Blower from top OK	Spinning at normal speed
	Bottom Blower OK	Spinning at normal speed
	Middle Blower OK	Spinning at normal speed
	Top Blower OK	Spinning at normal speed
	Second Blower from top OK	Spinning at normal speed
Misc	CIP OK	
	SPMB 0 OK	
	SPMB 1 OK	

### show chassis environment (T4000 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	33 degrees C / 91 degrees F
	PEM 1	Absent	
	SCG 0	OK	33 degrees C / 91 degrees F
	SCG 1	OK	33 degrees C / 91 degrees F
	Routing Engine 0	OK	33 degrees C / 91 degrees F
	Routing Engine 0 CPU	OK	50 degrees C / 122 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	Routing Engine 1 CPU	OK	46 degrees C / 114 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	33 degrees C / 91 degrees F
	SIB 0	OK	42 degrees C / 107 degrees F
	SIB 1	OK	42 degrees C / 107 degrees F
	SIB 2	OK	42 degrees C / 107 degrees F
	SIB 3	OK	43 degrees C / 109 degrees F
	SIB 4	OK	45 degrees C / 113 degrees F
	FPC 0 Fan Intake	OK	34 degrees C / 93 degrees F
	FPC 0 Fan Exhaust	OK	48 degrees C / 118 degrees F
	FPC 0 PMB	OK	47 degrees C / 116 degrees F
	FPC 0 LMB0	OK	50 degrees C / 122 degrees F
	FPC 0 LMB1	OK	41 degrees C / 105 degrees F
	FPC 0 LMB2	OK	35 degrees C / 95 degrees F
	FPC 0 PFE1 LU2	OK	46 degrees C / 114 degrees F
	FPC 0 PFE1 LU0	OK	41 degrees C / 105 degrees F
	FPC 0 PFE0 LU0	OK	57 degrees C / 134 degrees F
	FPC 0 XF1	OK	46 degrees C / 114 degrees F
	FPC 0 XF0	OK	52 degrees C / 125 degrees F
	FPC 0 XM1	OK	41 degrees C / 105 degrees F
	FPC 0 XM0	OK	50 degrees C / 122 degrees F
	FPC 0 PFE0 LU1	OK	56 degrees C / 132 degrees F
	FPC 0 PFE0 LU2	OK	45 degrees C / 113 degrees F
	FPC 0 PFE1 LU1	OK	37 degrees C / 98 degrees F
	FPC 3 Fan Intake	OK	36 degrees C / 96 degrees F
	FPC 3 Fan Exhaust	OK	51 degrees C / 123 degrees F
	FPC 3 PMB	OK	43 degrees C / 109 degrees F
	FPC 3 LMB0	OK	57 degrees C / 134 degrees F
	FPC 3 LMB1	OK	54 degrees C / 129 degrees F
	FPC 3 LMB2	OK	38 degrees C / 100 degrees F
	FPC 3 PFE1 LU2	OK	63 degrees C / 145 degrees F
	FPC 3 PFE1 LU0	OK	45 degrees C / 113 degrees F
	FPC 3 PFE0 LU0	OK	69 degrees C / 156 degrees F
	FPC 3 XF1	OK	62 degrees C / 143 degrees F
	FPC 3 XF0	OK	63 degrees C / 145 degrees F
	FPC 3 XM1	OK	43 degrees C / 109 degrees F



	FPC 3 XM0	OK	67 degrees C / 152 degrees F
	FPC 3 PFE0 LU1	OK	63 degrees C / 145 degrees F
	FPC 3 PFE0 LU2	OK	66 degrees C / 150 degrees F
	FPC 3 PFE1 LU1	OK	41 degrees C / 105 degrees F
	FPC 5 Top	OK	39 degrees C / 102 degrees F
	FPC 5 Bottom	OK	38 degrees C / 100 degrees F
	FPC 6 Fan Intake	OK	33 degrees C / 91 degrees F
	FPC 6 Fan Exhaust	OK	49 degrees C / 120 degrees F
	FPC 6 PMB	OK	40 degrees C / 104 degrees F
	FPC 6 LMB0	OK	60 degrees C / 140 degrees F
	FPC 6 LMB1	OK	58 degrees C / 136 degrees F
	FPC 6 LMB2	OK	40 degrees C / 104 degrees F
	FPC 6 PFE1 LU2	OK	69 degrees C / 156 degrees F
	FPC 6 PFE1 LU0	OK	45 degrees C / 113 degrees F
	FPC 6 PFE0 LU0	OK	71 degrees C / 159 degrees F
	FPC 6 XF1	OK	58 degrees C / 136 degrees F
	FPC 6 XF0	OK	65 degrees C / 149 degrees F
	FPC 6 XM1	OK	39 degrees C / 102 degrees F
	FPC 6 XM0	OK	66 degrees C / 150 degrees F
	FPC 6 PFE0 LU1	OK	69 degrees C / 156 degrees F
	FPC 6 PFE0 LU2	OK	69 degrees C / 156 degrees F
	FPC 6 PFE1 LU1	OK	42 degrees C / 107 degrees F
	FPM GBUS	OK	24 degrees C / 75 degrees F
	FPM Display	OK	27 degrees C / 80 degrees F
Fans	Top Left Front fan	OK	Spinning at high speed
	Top Left Middle fan	OK	Spinning at high speed
	Top Left Rear fan	OK	Spinning at high speed
	Top Right Front fan	OK	Spinning at high speed
	Top Right Middle fan	OK	Spinning at high speed
	Top Right Rear fan	OK	Spinning at high speed
	Bottom Left Front fan	OK	Spinning at high speed
	Bottom Left Middle fan	OK	Spinning at high speed
	Bottom Left Rear fan	OK	Spinning at high speed
	Bottom Right Front fan	OK	Spinning at high speed
	Bottom Right Middle fan	OK	Spinning at high speed
	Bottom Right Rear fan	OK	Spinning at high speed
	Rear Tray Top fan	OK	Spinning at high speed
	Rear Tray Second fan	OK	Spinning at high speed
	Rear Tray Third fan	OK	Spinning at high speed
	Rear Tray Fourth fan	OK	Spinning at high speed
	Rear Tray Fifth fan	OK	Spinning at high speed
	Rear Tray Sixth fan	OK	Spinning at high speed
	Rear Tray Seventh fan	OK	Spinning at high speed
	Rear Tray Bottom fan	OK	Spinning at high speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

### show chassis environment (TX Matrix Router)

```
user@host> show chassis environment
```

-----			
Class	Item	Status	Measurement
Temp	PEM 0	Absent	
	PEM 1	OK	29 degrees C / 84 degrees F
	Routing Engine 0	OK	34 degrees C / 93 degrees F
	Routing Engine 1	OK	34 degrees C / 93 degrees F
	CB 0	OK	32 degrees C / 89 degrees F



	CB 1	OK	32 degrees C / 89 degrees F
	SIB 0	OK	44 degrees C / 111 degrees F
	SIB 0 (B)	OK	44 degrees C / 111 degrees F
	FPM GBUS	OK	27 degrees C / 80 degrees F
	FPM Display	OK	32 degrees C / 89 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP 0	OK	
	CIP 1	OK	
	SPMB 0	OK	
	SPMB 1	OK	

1cc0-re0:

Class	Item	Status	Measurement
Temp	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	Absent	
	SCG 0	OK	35 degrees C / 95 degrees F
	SCG 1	Absent	
Fans	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	36 degrees C / 96 degrees F
	CB 0	OK	32 degrees C / 89 degrees F
	CB 1	OK	32 degrees C / 89 degrees F
	SIB 0	OK	40 degrees C / 104 degrees F
	SIB 0 (B)	OK	51 degrees C / 123 degrees F
	FPC 0 Top	OK	45 degrees C / 113 degrees F
	FPC 0 Bottom	OK	31 degrees C / 87 degrees F
	FPC 1 Top	OK	34 degrees C / 93 degrees F
	FPC 1 Bottom	OK	31 degrees C / 87 degrees F
	FPM GBUS	OK	30 degrees C / 86 degrees F
	FPM Display	OK	34 degrees C / 93 degrees F
	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed



	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	
lcc2-re0:			
-----			
Class	Item	Status	Measurement
Temp	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	Absent	
	SCG 0	OK	32 degrees C / 89 degrees F
	SCG 1	Absent	
	Routing Engine 0	OK	31 degrees C / 87 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	CB 0	OK	30 degrees C / 86 degrees F
	SIB 0	OK	38 degrees C / 100 degrees F
	SIB 0 (B)	OK	49 degrees C / 120 degrees F
	FPC 0 Top	OK	45 degrees C / 113 degrees F
	FPC 0 Bottom	OK	33 degrees C / 91 degrees F
	FPC 1 Top	OK	37 degrees C / 98 degrees F
	FPC 1 Bottom	OK	33 degrees C / 91 degrees F
	FPM GBUS	OK	30 degrees C / 86 degrees F
	FPM Display	OK	34 degrees C / 93 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
...			

### show chassis environment (T1600 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Temp	PEM 0	OK	27 degrees C / 80 degrees F
	PEM 1	Absent	
	SCG 0	OK	31 degrees C / 87 degrees F
	SCG 1	OK	35 degrees C / 95 degrees F
	Routing Engine 0	OK	30 degrees C / 86 degrees F
	Routing Engine 1	OK	30 degrees C / 86 degrees F
	CB 0	OK	31 degrees C / 87 degrees F
	CB 1	OK	31 degrees C / 87 degrees F
	SIB 0	OK	41 degrees C / 105 degrees F
	SIB 0 (B)	OK	34 degrees C / 93 degrees F
	SIB 1	OK	0 degrees C / 32 degrees F
	SIB 1 (B)	OK	0 degrees C / 32 degrees F
	SIB 2	OK	0 degrees C / 32 degrees F
	SIB 2 (B)	OK	0 degrees C / 32 degrees F
	SIB 3	OK	0 degrees C / 32 degrees F
	SIB 3 (B)	OK	0 degrees C / 32 degrees F
	SIB 4	OK	0 degrees C / 32 degrees F
	SIB 4 (B)	OK	0 degrees C / 32 degrees F
	FPC 0 Top	OK	49 degrees C / 120 degrees F
	FPC 0 Bottom	OK	50 degrees C / 122 degrees F



Fans	FPC 1 Top	OK	48 degrees C / 118 degrees F
	FPC 1 Bottom	OK	49 degrees C / 120 degrees F
	FPM GBUS	OK	27 degrees C / 80 degrees F
	FPM Display	OK	30 degrees C / 86 degrees F
	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
Misc	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

### show chassis environment (TX Matrix Plus Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	28 degrees C / 82 degrees F
	PEM 1	Absent	
	Routing Engine 0	OK	27 degrees C / 80 degrees F
	Routing Engine 1	OK	29 degrees C / 84 degrees F
	CB 0 Intake	OK	26 degrees C / 78 degrees F
	CB 0 Exhaust A	OK	25 degrees C / 77 degrees F
	CB 0 Exhaust B	OK	25 degrees C / 77 degrees F
	CB 1 Intake	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust A	OK	26 degrees C / 78 degrees F
	CB 1 Exhaust B	OK	26 degrees C / 78 degrees F
	SIB F13 0	OK	47 degrees C / 116 degrees F
	SIB F13 0 (B)	OK	48 degrees C / 118 degrees F
	SIB F13 1	OK	38 degrees C / 100 degrees F
	SIB F13 1 (B)	OK	37 degrees C / 98 degrees F
	SIB F2S 0/0	OK	27 degrees C / 80 degrees F
	SIB F2S 0/2	OK	28 degrees C / 82 degrees F
	SIB F2S 0/4	OK	27 degrees C / 80 degrees F
	SIB F2S 0/6	OK	28 degrees C / 82 degrees F
	SIB F2S 1/0	OK	26 degrees C / 78 degrees F
	SIB F2S 1/2	OK	26 degrees C / 78 degrees F
	SIB F2S 1/4	OK	26 degrees C / 78 degrees F
	SIB F2S 1/6	OK	26 degrees C / 78 degrees F
	SIB F2S 2/0	OK	25 degrees C / 77 degrees F
	SIB F2S 2/2	OK	25 degrees C / 77 degrees F
	SIB F2S 2/4	OK	23 degrees C / 73 degrees F



	CIP 0 Intake	OK	23 degrees C / 73 degrees F
	CIP 0 Exhaust A	OK	24 degrees C / 75 degrees F
	CIP 0 Exhaust B	OK	24 degrees C / 75 degrees F
	CIP 1 Intake	OK	24 degrees C / 75 degrees F
	CIP 1 Exhaust A	OK	25 degrees C / 77 degrees F
	CIP 1 Exhaust B	OK	25 degrees C / 77 degrees F
Fans	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 4	OK	Spinning at normal speed
	Fan Tray 1 Fan 5	OK	Spinning at normal speed
	Fan Tray 1 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 4	OK	Spinning at normal speed
	Fan Tray 2 Fan 5	OK	Spinning at normal speed
	Fan Tray 2 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 7	OK	Spinning at normal speed
	Fan Tray 2 Fan 8	OK	Spinning at normal speed
	Fan Tray 2 Fan 9	OK	Spinning at normal speed
	Fan Tray 3 Fan 1	OK	Spinning at normal speed
	Fan Tray 3 Fan 2	OK	Spinning at normal speed
	Fan Tray 3 Fan 3	OK	Spinning at normal speed
	Fan Tray 3 Fan 4	OK	Spinning at normal speed
	Fan Tray 3 Fan 5	OK	Spinning at normal speed
	Fan Tray 3 Fan 6	OK	Spinning at normal speed
	Fan Tray 3 Fan 7	OK	Spinning at normal speed
	Fan Tray 3 Fan 8	OK	Spinning at normal speed
	Fan Tray 3 Fan 9	OK	Spinning at normal speed
	Fan Tray 4 Fan 1	OK	Spinning at normal speed
	Fan Tray 4 Fan 2	OK	Spinning at normal speed
	Fan Tray 4 Fan 3	OK	Spinning at normal speed
	Fan Tray 4 Fan 4	OK	Spinning at normal speed
	Fan Tray 4 Fan 5	OK	Spinning at normal speed
	Fan Tray 4 Fan 6	OK	Spinning at normal speed
	Fan Tray 4 Fan 7	OK	Spinning at normal speed
	Fan Tray 4 Fan 8	OK	Spinning at normal speed
	Fan Tray 4 Fan 9	OK	Spinning at normal speed
	Fan Tray 5 Fan 1	OK	Spinning at normal speed
	Fan Tray 5 Fan 2	OK	Spinning at normal speed
	Fan Tray 5 Fan 3	OK	Spinning at normal speed
	Fan Tray 5 Fan 4	OK	Spinning at normal speed
	Fan Tray 5 Fan 5	OK	Spinning at normal speed
	Fan Tray 5 Fan 6	OK	Spinning at normal speed
	Fan Tray 5 Fan 7	OK	Spinning at normal speed
	Fan Tray 5 Fan 8	OK	Spinning at normal speed
	Fan Tray 5 Fan 9	OK	Spinning at normal speed
Misc	SPMB 0	OK	
	SPMB 1	OK	

1cc0-re0:

Class	Item	Status	Measurement
-------	------	--------	-------------



Temp	PEM 0	OK	27 degrees C / 80 degrees F
	PEM 1	Absent	
	SCG 0	OK	31 degrees C / 87 degrees F
	SCG 1	OK	35 degrees C / 95 degrees F
	Routing Engine 0	OK	30 degrees C / 86 degrees F
	Routing Engine 1	OK	30 degrees C / 86 degrees F
	CB 0	OK	31 degrees C / 87 degrees F
	CB 1	OK	31 degrees C / 87 degrees F
	SIB 0	OK	41 degrees C / 105 degrees F
	SIB 0 (B)	OK	34 degrees C / 93 degrees F
	SIB 1	OK	0 degrees C / 32 degrees F
	SIB 1 (B)	OK	0 degrees C / 32 degrees F
	SIB 2	OK	0 degrees C / 32 degrees F
	SIB 2 (B)	OK	0 degrees C / 32 degrees F
	SIB 3	OK	0 degrees C / 32 degrees F
	SIB 3 (B)	OK	0 degrees C / 32 degrees F
	SIB 4	OK	0 degrees C / 32 degrees F
	SIB 4 (B)	OK	0 degrees C / 32 degrees F
	FPC 0 Top	OK	49 degrees C / 120 degrees F
	FPC 0 Bottom	OK	50 degrees C / 122 degrees F
	FPC 1 Top	OK	48 degrees C / 118 degrees F
	FPC 1 Bottom	OK	49 degrees C / 120 degrees F
	FPM GBUS	OK	27 degrees C / 80 degrees F
	FPM Display	OK	30 degrees C / 86 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray Top fan	OK	Spinning at normal speed
	Rear Tray Second fan	OK	Spinning at normal speed
	Rear Tray Third fan	OK	Spinning at normal speed
	Rear Tray Fourth fan	OK	Spinning at normal speed
	Rear Tray Fifth fan	OK	Spinning at normal speed
	Rear Tray Sixth fan	OK	Spinning at normal speed
	Rear Tray Seventh fan	OK	Spinning at normal speed
	Rear Tray Bottom fan	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

### show chassis environment (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	Check	30 degrees C / 86 degrees F
	PEM 1	OK	33 degrees C / 91 degrees F
	Routing Engine 0	OK	28 degrees C / 82 degrees F
	Routing Engine 0 CPU	OK	42 degrees C / 107 degrees F
	Routing Engine 1	OK	29 degrees C / 84 degrees F



	Routing Engine 1 CPU	OK	44 degrees C / 111 degrees F
	CB 0 Intake	OK	30 degrees C / 86 degrees F
	CB 0 Exhaust A	OK	28 degrees C / 82 degrees F
	CB 0 Exhaust B	OK	30 degrees C / 86 degrees F
	CB 1 Intake	OK	31 degrees C / 87 degrees F
	CB 1 Exhaust A	OK	27 degrees C / 80 degrees F
	CB 1 Exhaust B	OK	31 degrees C / 87 degrees F
	SIB F13 0 Board	OK	44 degrees C / 111 degrees F
	SIB F13 0 XF Junction	OK	62 degrees C / 143 degrees F
	SIB F13 3 Board	OK	45 degrees C / 113 degrees F
	SIB F13 3 XF Junction	OK	60 degrees C / 140 degrees F
	SIB F13 6 Board	OK	47 degrees C / 116 degrees F
	SIB F13 6 XF Junction	OK	62 degrees C / 143 degrees F
	SIB F2S 0/0 Board	OK	32 degrees C / 89 degrees F
	SIB F2S 0/0 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 0/2 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 0/2 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 0/4 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 0/4 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 0/6 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 0/6 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 1/0 Board	OK	31 degrees C / 87 degrees F
	SIB F2S 1/0 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 1/2 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 1/2 XF Junction	OK	39 degrees C / 102 degrees F
	SIB F2S 1/4 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 1/4 XF Junction	OK	35 degrees C / 95 degrees F
	SIB F2S 1/6 Board	OK	30 degrees C / 86 degrees F
	SIB F2S 1/6 XF Junction	OK	41 degrees C / 105 degrees F
	SIB F2S 2/0 Board	OK	30 degrees C / 86 degrees F
	SIB F2S 2/0 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 2/2 Board	OK	28 degrees C / 82 degrees F
	SIB F2S 2/2 XF Junction	OK	39 degrees C / 102 degrees F
	SIB F2S 2/4 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 2/4 XF Junction	OK	42 degrees C / 107 degrees F
	SIB F2S 2/6 Board	OK	29 degrees C / 84 degrees F
	SIB F2S 2/6 XF Junction	OK	41 degrees C / 105 degrees F
	CIP 0 Intake	OK	25 degrees C / 77 degrees F
	CIP 0 Exhaust A	OK	26 degrees C / 78 degrees F
	CIP 0 Exhaust B	OK	26 degrees C / 78 degrees F
	CIP 1 Intake	OK	26 degrees C / 78 degrees F
	CIP 1 Exhaust A	OK	27 degrees C / 80 degrees F
	CIP 1 Exhaust B	OK	27 degrees C / 80 degrees F
Fans	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 4	OK	Spinning at normal speed
	Fan Tray 1 Fan 5	OK	Spinning at normal speed
	Fan Tray 1 Fan 6	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 4	OK	Spinning at normal speed
	Fan Tray 2 Fan 5	OK	Spinning at normal speed



Fan Tray 2 Fan 6	OK	Spinning at normal speed
Fan Tray 2 Fan 7	OK	Spinning at normal speed
Fan Tray 2 Fan 8	OK	Spinning at normal speed
Fan Tray 2 Fan 9	OK	Spinning at normal speed
Fan Tray 3 Fan 1	OK	Spinning at normal speed
Fan Tray 3 Fan 2	OK	Spinning at normal speed
Fan Tray 3 Fan 3	OK	Spinning at normal speed
Fan Tray 3 Fan 4	OK	Spinning at normal speed
Fan Tray 3 Fan 5	OK	Spinning at normal speed
Fan Tray 3 Fan 6	OK	Spinning at normal speed
Fan Tray 3 Fan 7	OK	Spinning at normal speed
Fan Tray 3 Fan 8	OK	Spinning at normal speed
Fan Tray 3 Fan 9	OK	Spinning at normal speed
Fan Tray 4 Fan 1	OK	Spinning at normal speed
Fan Tray 4 Fan 2	OK	Spinning at normal speed
Fan Tray 4 Fan 3	OK	Spinning at normal speed
Fan Tray 4 Fan 4	OK	Spinning at normal speed
Fan Tray 4 Fan 5	OK	Spinning at normal speed
Fan Tray 4 Fan 6	OK	Spinning at normal speed
Fan Tray 4 Fan 7	OK	Spinning at normal speed
Fan Tray 4 Fan 8	OK	Spinning at normal speed
Fan Tray 4 Fan 9	OK	Spinning at normal speed
Fan Tray 5 Fan 1	OK	Spinning at normal speed
Fan Tray 5 Fan 2	OK	Spinning at normal speed
Fan Tray 5 Fan 3	OK	Spinning at normal speed
Fan Tray 5 Fan 4	OK	Spinning at normal speed
Fan Tray 5 Fan 5	OK	Spinning at normal speed
Fan Tray 5 Fan 6	OK	Spinning at normal speed
Fan Tray 5 Fan 7	OK	Spinning at normal speed
Fan Tray 5 Fan 8	OK	Spinning at normal speed
Fan Tray 5 Fan 9	Check	
Misc SPMB 0	OK	
SPMB 1	OK	

1cc0-re0:

Class	Item	Status	Measurement
Temp	PEM 0	OK	29 degrees C / 84 degrees F
	PEM 1	Check	29 degrees C / 84 degrees F
	SCG 0	OK	32 degrees C / 89 degrees F
	SCG 1	OK	33 degrees C / 91 degrees F
	Routing Engine 0	OK	32 degrees C / 89 degrees F
	Routing Engine 0 CPU	OK	51 degrees C / 123 degrees F
	Routing Engine 1	OK	32 degrees C / 89 degrees F
	Routing Engine 1 CPU	OK	49 degrees C / 120 degrees F
	CB 0	OK	34 degrees C / 93 degrees F
	CB 1	OK	34 degrees C / 93 degrees F
	SIB 0	OK	39 degrees C / 102 degrees F
	SIB 0 (B)	Absent	
	SIB 1	OK	39 degrees C / 102 degrees F
	SIB 1 (B)	Absent	
	SIB 2	OK	39 degrees C / 102 degrees F
	SIB 2 (B)	Absent	
	FPC 4 Top	OK	43 degrees C / 109 degrees F
	FPC 4 Bottom	OK	43 degrees C / 109 degrees F
	FPC 7 Fan Intake	OK	35 degrees C / 95 degrees F
	FPC 7 Fan Exhaust	OK	50 degrees C / 122 degrees F
	FPC 7 PMB	OK	50 degrees C / 122 degrees F
	FPC 7 LMB0	OK	55 degrees C / 131 degrees F
	FPC 7 LMB1	OK	49 degrees C / 120 degrees F



	FPC 7 LMB2	OK	39 degrees C / 102 degrees F
	FPC 7 PFE1 LU2	OK	55 degrees C / 131 degrees F
	FPC 7 PFE1 LU0	OK	45 degrees C / 113 degrees F
	FPC 7 PFE0 LU0	OK	62 degrees C / 143 degrees F
	FPC 7 XF1	OK	52 degrees C / 125 degrees F
	FPC 7 XF0	OK	61 degrees C / 141 degrees F
	FPC 7 XM1	OK	39 degrees C / 102 degrees F
	FPC 7 XM0	OK	56 degrees C / 132 degrees F
	FPC 7 PFE0 LU1	OK	60 degrees C / 140 degrees F
	FPC 7 PFE0 LU2	OK	55 degrees C / 131 degrees F
	FPC 7 PFE1 LU1	OK	41 degrees C / 105 degrees F
	FPM GBUS	OK	24 degrees C / 75 degrees F
	FPM Display	OK	28 degrees C / 82 degrees F
Fans	Top Left Front fan	OK	Spinning at normal speed
	Top Left Middle fan	OK	Spinning at normal speed
	Top Left Rear fan	OK	Spinning at normal speed
	Top Right Front fan	OK	Spinning at normal speed
	Top Right Middle fan	OK	Spinning at normal speed
	Top Right Rear fan	OK	Spinning at normal speed
	Bottom Left Front fan	OK	Spinning at normal speed
	Bottom Left Middle fan	OK	Spinning at normal speed
	Bottom Left Rear fan	OK	Spinning at normal speed
	Bottom Right Front fan	OK	Spinning at normal speed
	Bottom Right Middle fan	OK	Spinning at normal speed
	Bottom Right Rear fan	OK	Spinning at normal speed
	Rear Tray fan 1 (Top)	OK	Spinning at normal speed
	Rear Tray fan 2	OK	Spinning at normal speed
	Rear Tray fan 3	OK	Spinning at normal speed
	Rear Tray fan 4	OK	Spinning at normal speed
	Rear Tray fan 5	OK	Spinning at normal speed
	Rear Tray fan 6	OK	Spinning at normal speed
	Rear Tray fan 7	OK	Spinning at normal speed
	Rear Tray fan 8	OK	Spinning at normal speed
	Rear Tray fan 9	OK	Spinning at normal speed
	Rear Tray fan 10	OK	Spinning at normal speed
	Rear Tray fan 11	OK	Spinning at normal speed
	Rear Tray fan 12	OK	Spinning at normal speed
	Rear Tray fan 13	OK	Spinning at normal speed
	Rear Tray fan 14	OK	Spinning at normal speed
	Rear Tray fan 15	OK	Spinning at normal speed
	Rear Tray fan 16 (Bottom)	OK	Spinning at normal speed
Misc	CIP	OK	
	SPMB 0	OK	
	SPMB 1	OK	

### show chassis environment (EX4200 Standalone Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	OK	
	FPC 0 Power Supply 1	Absent	
Temp	FPC 0 CPU	OK	41 degrees C / 105 degrees F
	FPC 0 EX-PFE1	OK	42 degrees C / 107 degrees F
	FPC 0 EX-PFE2	OK	46 degrees C / 114 degrees F
	FPC 0 GEPHY Front Left	OK	25 degrees C / 77 degrees F
	FPC 0 GEPHY Front Right	OK	27 degrees C / 80 degrees F
Fans	FPC 0 Uplink Conn	OK	29 degrees C / 84 degrees F
	FPC 0 Fan 1	OK	Spinning at normal speed



FPC 0 Fan 2	OK	Spinning at normal speed
FPC 0 Fan 3	OK	Spinning at normal speed

### show chassis environment (EX8216 Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Power	PSU 0	OK	
	PSU 1	OK	
	PSU 2	OK	
	PSU 3	Check	
	PSU 4	Absent	
	PSU 5	Absent	
Temp	CB 0 Intake	OK	23 degrees C / 73 degrees F
	CB 0 Exhaust	OK	26 degrees C / 78 degrees F
	CB 1 Intake	OK	22 degrees C / 71 degrees F
	CB 1 Exhaust	OK	25 degrees C / 77 degrees F
	FPC 4 Intake	OK	49 degrees C / 120 degrees F
	FPC 4 Exhaust	OK	59 degrees C / 138 degrees F
	SIB 5 Intake	OK	25 degrees C / 77 degrees F
	SIB 5 Exhaust	OK	35 degrees C / 95 degrees F
	SIB 6 Intake	OK	25 degrees C / 77 degrees F
	SIB 6 Exhaust	OK	38 degrees C / 100 degrees F
Fans	Top Fan 1	OK	Spinning at normal speed
	Top Fan 2	OK	Spinning at normal speed
	Top Fan 3	OK	Spinning at normal speed
	Top Fan 4	OK	Spinning at normal speed
	Top Fan 5	OK	Spinning at normal speed
	Top Fan 6	OK	Spinning at normal speed
	Top Fan 7	OK	Spinning at normal speed
	Top Fan 8	OK	Spinning at normal speed
	Top Fan 9	OK	Spinning at normal speed
	Bottom Fan 1	OK	Spinning at normal speed
	Bottom Fan 2	OK	Spinning at normal speed
	Bottom Fan 3	OK	Spinning at normal speed
	Bottom Fan 4	OK	Spinning at normal speed
	Bottom Fan 5	OK	Spinning at normal speed
	Bottom Fan 6	OK	Spinning at normal speed
	Bottom Fan 7	OK	Spinning at normal speed
	Bottom Fan 8	OK	Spinning at normal speed
	Bottom Fan 9	OK	Spinning at normal speed

### show chassis environment (EX9200 Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	Check	
	PEM 1	OK	40 degrees C / 104 degrees F
	PEM 2	OK	40 degrees C / 104 degrees F
	PEM 3	Absent	
	Routing Engine 0	OK	35 degrees C / 95 degrees F
	Routing Engine 0 CPU	OK	33 degrees C / 91 degrees F
	Routing Engine 1	OK	38 degrees C / 100 degrees F
	Routing Engine 1 CPU	OK	33 degrees C / 91 degrees F
	CB 0 Intake	OK	35 degrees C / 95 degrees F
	CB 0 Exhaust A	OK	33 degrees C / 91 degrees F
	CB 0 Exhaust B	OK	40 degrees C / 104 degrees F



CB 0 ACBC	OK	39 degrees C / 102 degrees F
CB 0 XF A	OK	49 degrees C / 120 degrees F
CB 0 XF B	OK	46 degrees C / 114 degrees F
CB 1 Intake	OK	37 degrees C / 98 degrees F
CB 1 Exhaust A	OK	32 degrees C / 89 degrees F
CB 1 Exhaust B	OK	39 degrees C / 102 degrees F
CB 1 ACBC	OK	41 degrees C / 105 degrees F
CB 1 XF A	OK	49 degrees C / 120 degrees F
CB 1 XF B	OK	49 degrees C / 120 degrees F
FPC 2 Intake	OK	37 degrees C / 98 degrees F
FPC 2 Exhaust A	OK	40 degrees C / 104 degrees F
FPC 2 Exhaust B	OK	34 degrees C / 93 degrees F
FPC 2 LU 0 TCAM TSen	OK	44 degrees C / 111 degrees F
FPC 2 LU 0 TCAM Chip	OK	48 degrees C / 118 degrees F
FPC 2 LU 0 TSen	OK	44 degrees C / 111 degrees F
FPC 2 LU 0 Chip	OK	60 degrees C / 140 degrees F
FPC 2 MQ 0 TSen	OK	44 degrees C / 111 degrees F
FPC 2 MQ 0 Chip	OK	51 degrees C / 123 degrees F
FPC 3 Intake	OK	39 degrees C / 102 degrees F
FPC 3 Exhaust A	OK	51 degrees C / 123 degrees F
[...Output truncated...]		
Fans Top Rear Fan	OK	Spinning at intermediate-speed
Bottom Rear Fan	OK	Spinning at intermediate-speed
Top Middle Fan	OK	Spinning at intermediate-speed
Bottom Middle Fan	OK	Spinning at intermediate-speed
Top Front Fan	OK	Spinning at intermediate-speed
Bottom Front Fan	OK	Spinning at intermediate-speed

### show chassis environment (EX9251 Switch)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Temp	CB 0 Top Right Inlet Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Top Left Inlet Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Top Right Exhaust Sensor	OK	40 degrees C / 104 degrees F
	CB 0 Top Left Exhaust Sensor	OK	59 degrees C / 138 degrees F
	CB 0 CPU Core-0 Temp	OK	45 degrees C / 113 degrees F
	CB 0 CPU Core-1 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-2 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-3 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-4 Temp	OK	45 degrees C / 113 degrees F
	CB 0 CPU Core-5 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-6 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-7 Temp	OK	43 degrees C / 109 degrees F
Power	PEM 0	Check	
	PEM 1	OK	36 degrees C / 96 degrees F
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 0	Absent	
	Fan Tray 2 Fan 1	Absent	

### show chassis environment (EX9253 Switch)

```
user@switch> show chassis environment
```



Class	Item	Status	Measurement
Temp	CB 0 Exhaust Temp Sensor	OK	37 degrees C / 98 degrees F
	CB 0 Inlet Temp Sensor	OK	31 degrees C / 87 degrees F
	CB 0 CPU DIE Temp Sensor	OK	42 degrees C / 107 degrees F
	CB 1 Exhaust Temp Sensor	OK	31 degrees C / 87 degrees F
	CB 1 Inlet Temp Sensor	OK	28 degrees C / 82 degrees F
	CB 1 CPU DIE Temp Sensor	OK	42 degrees C / 107 degrees F
	FPC 0 Intake Temp Sensor	OK	31 degrees C / 87 degrees F
	FPC 0 Exhaust-A Temp Sensor	OK	58 degrees C / 136 degrees F
	FPC 0 Exhaust-B Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 1 Intake Temp Sensor	OK	29 degrees C / 84 degrees F
	FPC 1 Exhaust-A Temp Sensor	OK	59 degrees C / 138 degrees F
	FPC 1 Exhaust-B Temp Sensor	OK	48 degrees C / 118 degrees F
Power	PEM 0	OK	54 degrees C / 129 degrees F
	PEM 1	Check	
	PEM 2	Absent	
	PEM 3	Absent	
	PEM 4	Check	
	PEM 5	OK	61 degrees C / 141 degrees F
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 2 Fan 0	OK	Spinning at normal speed
	Fan Tray 2 Fan 1	OK	Spinning at normal speed
	Fan Tray 2 Fan 2	OK	Spinning at normal speed
	Fan Tray 2 Fan 3	OK	Spinning at normal speed
	Fan Tray 3 Fan 0	OK	Spinning at normal speed
	Fan Tray 3 Fan 1	OK	Spinning at normal speed
	Fan Tray 3 Fan 2	OK	Spinning at normal speed
	Fan Tray 3 Fan 3	OK	Spinning at normal speed

### show chassis environment (QFX Series and OCX Series)

```
user@switch> show chassis environment
```

Class	Item	Status	Measurement
Temp	CB 0 Top Right Inlet Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Top Left Inlet Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Top Right Exhaust Sensor	OK	40 degrees C / 104 degrees F
	CB 0 Top Left Exhaust Sensor	OK	59 degrees C / 138 degrees F
	CB 0 CPU Core-0 Temp	OK	45 degrees C / 113 degrees F
	CB 0 CPU Core-1 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-2 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-3 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-4 Temp	OK	45 degrees C / 113 degrees F
	CB 0 CPU Core-5 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-6 Temp	OK	44 degrees C / 111 degrees F
	CB 0 CPU Core-7 Temp	OK	43 degrees C / 109 degrees F
Power	PEM 0	Check	
	PEM 1	OK	36 degrees C / 96 degrees F
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed



Fan Tray 2 Fan 0	Absent
Fan Tray 2 Fan 1	Absent

**show chassis environment interconnect-device (QFabric System)**

user@switch&gt; show chassis environment interconnect-device IC-A0004

Class	Item	Status	Measurement
	CB 0		
	CB 0 L Intake	OK	30 degrees C / 86 degrees F
	CB 0 R Intake	OK	31 degrees C / 87 degrees F
	CB 0 L Exhaust	OK	32 degrees C / 89 degrees F
	CB 0 R Exhaust	OK	33 degrees C / 91 degrees F
	Routing Engine 0 CPU temp	OK	51 degrees C / 123 degrees F
	CB 1		
	CB 1 L Intake	OK	27 degrees C / 80 degrees F
	CB 1 R Intake	OK	29 degrees C / 84 degrees F
	CB 1 L Exhaust	OK	31 degrees C / 87 degrees F
	CB 1 R Exhaust	OK	32 degrees C / 89 degrees F
	Routing Engine 1 CPU temp	OK	40 degrees C / 104 degrees F
	FC 0 FPC 0		
	FPC 0 L Intake	OK	25 degrees C / 77 degrees F
	FPC 0 R Intake	OK	28 degrees C / 82 degrees F
	FPC 0 L Exhaust	OK	28 degrees C / 82 degrees F
	FPC 0 R Exhaust	OK	29 degrees C / 84 degrees F
	FC 7 FPC 7		
	FPC 7 L Intake	OK	25 degrees C / 77 degrees F
	FPC 7 R Intake	OK	26 degrees C / 78 degrees F
	FPC 7 L Exhaust	OK	28 degrees C / 82 degrees F
	FPC 7 R Exhaust	OK	29 degrees C / 84 degrees F
	RC 0 FPC 8		
	FPC 8 L Intake	OK	25 degrees C / 77 degrees F
	FPC 8 R Intake	OK	26 degrees C / 78 degrees F
	FPC 8 L Exhaust	OK	32 degrees C / 89 degrees F
	FPC 8 R Exhaust	OK	30 degrees C / 86 degrees F
	RC 7 FPC 15		
	FPC 15 L Intake	OK	24 degrees C / 75 degrees F
	FPC 15 R Intake	OK	25 degrees C / 77 degrees F
	FPC 15 L Exhaust	OK	33 degrees C / 91 degrees F
	FPC 15 R Exhaust	OK	31 degrees C / 87 degrees F
Fans	TFT 0 Fan 0	OK	Spinning at normal speed
Fans	TFT 0 Fan 1	OK	Spinning at normal speed
Fans	TFT 0 Fan 2	OK	Spinning at normal speed
Fans	TFT 0 Fan 3	OK	Spinning at normal speed
Fans	TFT 0 Fan 4	OK	Spinning at normal speed
Fans	TFT 0 Fan 5	OK	Spinning at normal speed
Fans	BFT 1 Fan 0	OK	Spinning at normal speed
Fans	BFT 1 Fan 1	OK	Spinning at normal speed
Fans	BFT 1 Fan 2	OK	Spinning at normal speed
Fans	BFT 1 Fan 3	Check	
Fans	BFT 1 Fan 4	OK	Spinning at normal speed
Fans	BFT 1 Fan 5	OK	Spinning at normal speed
Fans	SFT 0 Fan 0 Rotor 0	OK	Spinning at normal speed
Fans	SFT 0 Fan 0 Rotor 1	OK	Spinning at normal speed
Fans	SFT 0 Fan 1 Rotor 0	OK	Spinning at normal speed
Fans	SFT 0 Fan 1 Rotor 1	OK	Spinning at normal speed
Fans	SFT 0 Fan 2 Rotor 0	OK	Spinning at normal speed
Fans	SFT 0 Fan 2 Rotor 1	OK	Spinning at normal speed
Fans	SFT 0 Fan 3 Rotor 0	OK	Spinning at normal speed
Fans	SFT 0 Fan 3 Rotor 1	OK	Spinning at normal speed



Fans	SFT 1	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 1	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 1	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 1	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 1	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 1	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 1	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 1	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 2	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 2	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 2	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 2	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 2	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 2	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 2	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 2	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 3	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 3	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 3	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 3	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 3	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 3	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 3	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 3	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 4	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 4	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 4	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 4	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 4	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 4	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 4	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 4	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 5	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 5	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 5	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 5	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 5	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 5	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 5	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 5	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 6	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 6	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 6	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 6	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 6	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 6	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 6	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 6	Fan 3	Rotor 1	OK	Spinning at normal speed
Fans	SFT 7	Fan 0	Rotor 0	OK	Spinning at normal speed
Fans	SFT 7	Fan 0	Rotor 1	OK	Spinning at normal speed
Fans	SFT 7	Fan 1	Rotor 0	OK	Spinning at normal speed
Fans	SFT 7	Fan 1	Rotor 1	OK	Spinning at normal speed
Fans	SFT 7	Fan 2	Rotor 0	OK	Spinning at normal speed
Fans	SFT 7	Fan 2	Rotor 1	OK	Spinning at normal speed
Fans	SFT 7	Fan 3	Rotor 0	OK	Spinning at normal speed
Fans	SFT 7	Fan 3	Rotor 1	OK	Spinning at normal speed
Power	PEM 0			OK	30 degrees C / 86 degrees F
Power	PEM 1			OK	30 degrees C / 86 degrees F
Power	PEM 2			OK	30 degrees C / 86 degrees F
Power	PEM 3			Absent	



Power	PEM 4	Absent
Power	PEM 5	Absent

### show chassis environment node-device (QFabric System)

```
user@switch> show chassis environment node-device node1
```

Class	Item	Status	Measurement
Power	node1 Power Supply 0	Absent	
	node1 Power Supply 1	Absent	
Fans	node1 Fan Tray 0	Testing	
	node1 Fan Tray 1	Testing	
	node1 Fan Tray 2	Testing	

### show chassis environment pem node-device (QFabric System)

```
user@switch> show chassis environment pem node-device node1
```

```
FPC 0 PEM 0 status:
  State           Check
  Airflow         Front to Back
  Temperature      OK
  AC Input:       OK
  DC Output       Voltage(V) Current(A) Power(W) Load(%)
                  12          10       120     18

FPC 0 PEM 1 status:
  State           Online
  Airflow         Back to Front
  Temperature      OK
  AC Input:       OK
  DC Output       Voltage(V) Current(A) Power(W) Load(%)
                  11          10       110     17
```

### show chassis environment (PTX5000 Packet Transport Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PDU 0	OK	
	PDU 0 PSM 0	OK	36 degrees C / 96 degrees F
	PDU 0 PSM 1	OK	38 degrees C / 100 degrees F
	PDU 0 PSM 2	OK	38 degrees C / 100 degrees F
	PDU 0 PSM 3	OK	37 degrees C / 98 degrees F
	PDU 1	Absent	
	CCG 0	OK	44 degrees C / 111 degrees F
	CCG 1	OK	44 degrees C / 111 degrees F
	Routing Engine 0	OK	62 degrees C / 143 degrees F
	Routing Engine 0 CPU	OK	75 degrees C / 167 degrees F
	Routing Engine 1	OK	51 degrees C / 123 degrees F
	Routing Engine 1 CPU	OK	64 degrees C / 147 degrees F
	CB 0 Intake	OK	38 degrees C / 100 degrees F
	CB 0 Exhaust A	OK	46 degrees C / 114 degrees F
	CB 0 Exhaust B	OK	42 degrees C / 107 degrees F
	CB 1 Intake	OK	35 degrees C / 95 degrees F
	CB 1 Exhaust A	OK	39 degrees C / 102 degrees F
	CB 1 Exhaust B	OK	36 degrees C / 96 degrees F
	SIB 0 Exhaust	OK	47 degrees C / 116 degrees F
	SIB 0 Junction	OK	45 degrees C / 113 degrees F
	SIB 1 Exhaust	OK	44 degrees C / 111 degrees F



SIB 1 Junction	OK	43 degrees C / 109 degrees F
SIB 2 Exhaust	OK	47 degrees C / 116 degrees F
SIB 2 Junction	OK	42 degrees C / 107 degrees F
SIB 3 Exhaust	OK	43 degrees C / 109 degrees F
SIB 3 Junction	OK	43 degrees C / 109 degrees F
SIB 4 Exhaust	OK	47 degrees C / 116 degrees F
SIB 4 Junction	OK	42 degrees C / 107 degrees F
SIB 5 Exhaust	OK	42 degrees C / 107 degrees F
SIB 5 Junction	OK	40 degrees C / 104 degrees F
SIB 6 Exhaust	OK	46 degrees C / 114 degrees F
SIB 6 Junction	OK	42 degrees C / 107 degrees F
SIB 7 Exhaust	OK	43 degrees C / 109 degrees F
SIB 7 Junction	OK	39 degrees C / 102 degrees F
SIB 8 Exhaust	OK	44 degrees C / 111 degrees F
SIB 8 Junction	OK	41 degrees C / 105 degrees F
FPC 0 PMB	OK	35 degrees C / 95 degrees F
FPC 0 Intake	OK	33 degrees C / 91 degrees F
FPC 0 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 0 Exhaust B	OK	43 degrees C / 109 degrees F
FPC 0 TL0	OK	48 degrees C / 118 degrees F
FPC 0 TQ0	OK	53 degrees C / 127 degrees F
FPC 0 TL1	OK	56 degrees C / 132 degrees F
FPC 0 TQ1	OK	58 degrees C / 136 degrees F
FPC 0 TL2	OK	55 degrees C / 131 degrees F
FPC 0 TQ2	OK	56 degrees C / 132 degrees F
FPC 0 TL3	OK	59 degrees C / 138 degrees F
FPC 0 TQ3	OK	59 degrees C / 138 degrees F
FPC 2 PMB	OK	35 degrees C / 95 degrees F
FPC 2 Intake	OK	34 degrees C / 93 degrees F
FPC 2 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 2 Exhaust B	OK	52 degrees C / 125 degrees F
FPC 2 TL0	OK	53 degrees C / 127 degrees F
FPC 2 TQ0	OK	53 degrees C / 127 degrees F
FPC 2 TL1	OK	57 degrees C / 134 degrees F
FPC 2 TQ1	OK	58 degrees C / 136 degrees F
FPC 2 TL2	OK	54 degrees C / 129 degrees F
FPC 2 TQ2	OK	59 degrees C / 138 degrees F
FPC 2 TL3	OK	60 degrees C / 140 degrees F
FPC 2 TQ3	OK	64 degrees C / 147 degrees F
PIC 2/0 Ambient	OK	49 degrees C / 120 degrees F
FPC 3 PMB	OK	34 degrees C / 93 degrees F
FPC 3 Intake	OK	35 degrees C / 95 degrees F
FPC 3 Exhaust A	OK	54 degrees C / 129 degrees F
FPC 3 Exhaust B	OK	49 degrees C / 120 degrees F
FPC 3 TL0	OK	49 degrees C / 120 degrees F
FPC 3 TQ0	OK	55 degrees C / 131 degrees F
FPC 3 TL1	OK	56 degrees C / 132 degrees F
FPC 3 TQ1	OK	58 degrees C / 136 degrees F
FPC 3 TL2	OK	56 degrees C / 132 degrees F
FPC 3 TQ2	OK	59 degrees C / 138 degrees F
FPC 3 TL3	OK	62 degrees C / 143 degrees F
FPC 3 TQ3	OK	63 degrees C / 145 degrees F
PIC 3/1	Absent	
FPC 5 PMB	OK	35 degrees C / 95 degrees F
FPC 5 Intake	OK	34 degrees C / 93 degrees F
FPC 5 Exhaust A	OK	51 degrees C / 123 degrees F
FPC 5 Exhaust B	OK	53 degrees C / 127 degrees F
FPC 5 TL0	OK	54 degrees C / 129 degrees F
FPC 5 TQ0	OK	52 degrees C / 125 degrees F
FPC 5 TL1	OK	61 degrees C / 141 degrees F



	FPC 5 TQ1	OK	60 degrees C / 140 degrees F
	FPC 5 TL2	OK	55 degrees C / 131 degrees F
	FPC 5 TQ2	OK	55 degrees C / 131 degrees F
	FPC 5 TL3	OK	59 degrees C / 138 degrees F
	FPC 5 TQ3	OK	58 degrees C / 136 degrees F
	PIC 5/0 Ambient	OK	51 degrees C / 123 degrees F
	PIC 5/1 Ambient	OK	34 degrees C / 93 degrees F
	PIC 5/1 cfp-5/1/0	OK	34 degrees C / 93 degrees F
	PIC 5/1 cfp-5/1/1	OK	36 degrees C / 96 degrees F
	FPC 6 PMB	OK	36 degrees C / 96 degrees F
	FPC 6 Intake	OK	33 degrees C / 91 degrees F
	FPC 6 Exhaust A	OK	51 degrees C / 123 degrees F
	FPC 6 Exhaust B	OK	39 degrees C / 102 degrees F
	FPC 6 TL0	OK	44 degrees C / 111 degrees F
	FPC 6 TQ0	OK	54 degrees C / 129 degrees F
	FPC 6 TL1	OK	59 degrees C / 138 degrees F
	FPC 6 TQ1	OK	58 degrees C / 136 degrees F
	FPC 6 TL2	OK	60 degrees C / 140 degrees F
	FPC 6 TQ2	OK	57 degrees C / 134 degrees F
	FPC 6 TL3	OK	65 degrees C / 149 degrees F
	FPC 6 TQ3	OK	60 degrees C / 140 degrees F
	FPC 7 PMB	OK	35 degrees C / 95 degrees F
	FPC 7 Intake	OK	33 degrees C / 91 degrees F
	FPC 7 Exhaust A	OK	53 degrees C / 127 degrees F
	FPC 7 Exhaust B	OK	40 degrees C / 104 degrees F
	FPC 7 TL0	OK	46 degrees C / 114 degrees F
	FPC 7 TQ0	OK	58 degrees C / 136 degrees F
	FPC 7 TL1	OK	53 degrees C / 127 degrees F
	FPC 7 TQ1	OK	59 degrees C / 138 degrees F
	FPC 7 TL2	OK	56 degrees C / 132 degrees F
	FPC 7 TQ2	OK	61 degrees C / 141 degrees F
	FPC 7 TL3	OK	63 degrees C / 145 degrees F
	FPC 7 TQ3	OK	63 degrees C / 145 degrees F
	FPM I2CS	OK	37 degrees C / 98 degrees F
Fans	Fan Tray 0 Fan 1	OK	3042 RPM
	Fan Tray 0 Fan 2	OK	3042 RPM
	Fan Tray 0 Fan 3	OK	3000 RPM
	Fan Tray 0 Fan 4	OK	3042 RPM
	Fan Tray 0 Fan 5	OK	3000 RPM
	Fan Tray 0 Fan 6	OK	3042 RPM
	Fan Tray 0 Fan 7	OK	3085 RPM
	Fan Tray 0 Fan 8	OK	3042 RPM
	Fan Tray 0 Fan 9	OK	3042 RPM
	Fan Tray 0 Fan 10	OK	3085 RPM
	Fan Tray 0 Fan 11	OK	3085 RPM
	Fan Tray 0 Fan 12	OK	3128 RPM
	Fan Tray 0 Fan 13	OK	3128 RPM
	Fan Tray 0 Fan 14	OK	3042 RPM
	Fan Tray 1 Fan 1	OK	2299 RPM
	Fan Tray 1 Fan 2	OK	2399 RPM
	Fan Tray 1 Fan 3	OK	2299 RPM
	Fan Tray 1 Fan 4	OK	2266 RPM
	Fan Tray 1 Fan 5	OK	2266 RPM
	Fan Tray 1 Fan 6	OK	2366 RPM
	Fan Tray 2 Fan 1	OK	2199 RPM
	Fan Tray 2 Fan 2	OK	2133 RPM
	Fan Tray 2 Fan 3	OK	2366 RPM
	Fan Tray 2 Fan 4	OK	2233 RPM
	Fan Tray 2 Fan 5	OK	2399 RPM
	Fan Tray 2 Fan 6	OK	2233 RPM



Misc	SPMB 0 Intake	OK	50 degrees C / 122 degrees F
	SPMB 1 Intake	OK	40 degrees C / 104 degrees F

### show chassis environment (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PDU 0	OK	
	PDU 0 PSM 0	OK	41 degrees C / 105 degrees F
	PDU 0 PSM 1	Absent	
	PDU 0 PSM 2	OK	43 degrees C / 109 degrees F
	PDU 0 PSM 3	Absent	
	PDU 0 PSM 4	OK	44 degrees C / 111 degrees F
	PDU 0 PSM 5	Absent	
	PDU 0 PSM 6	OK	45 degrees C / 113 degrees F
	PDU 0 PSM 7	Absent	
	PDU 1	OK	
	PDU 1 PSM 0	Absent	
	PDU 1 PSM 1	OK	45 degrees C / 113 degrees F
	PDU 1 PSM 2	Absent	
	PDU 1 PSM 3	OK	43 degrees C / 109 degrees F
	PDU 1 PSM 4	Absent	
	PDU 1 PSM 5	OK	46 degrees C / 114 degrees F
	PDU 1 PSM 6	Absent	
	PDU 1 PSM 7	OK	46 degrees C / 114 degrees F
	CCG 0	OK	27 degrees C / 80 degrees F
	CCG 1	OK	29 degrees C / 84 degrees F
	...		

### show chassis environment (PTX1000 Packet Transport Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	Absent	
	FPC 0 Power Supply 1	Absent	
	FPC 0 Power Supply 2	OK	
	FPC 0 Power Supply 3	OK	
Temp	FPC 0 Intake Temp Sensor	OK	25 degrees C / 77 degrees F
	FPC 0 Exhaust Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 0 Mezz Temp Sensor 0	OK	25 degrees C / 77 degrees F
	FPC 0 Mezz Temp Sensor 1	OK	34 degrees C / 93 degrees F
	FPC 0 PE2 Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 0 PE1 Temp Sensor	OK	32 degrees C / 89 degrees F
	FPC 0 PF0 Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 0 PE0 Temp Sensor	OK	33 degrees C / 91 degrees F
	FPC 0 PE5 Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 0 PE4 Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 0 PF1 Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 0 PE3 Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 0 CPU Die Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 0 OCX0 Temp Sensor	OK	37 degrees C / 98 degrees F
Fans	FPC 0 Fan Tray 0	OK	Spinning at normal speed
	FPC 0 Fan Tray 1	OK	Spinning at normal speed
	FPC 0 Fan Tray 2	OK	Spinning at normal speed



## show chassis environment (PTX10008 Router)

user@host&gt; show chassis environment

Class	Item	Status	Measurement
Temp	Routing Engine 0 CPU	OK	40 degrees C / 104 degrees F
	Routing Engine 1 CPU	OK	40 degrees C / 104 degrees F
	CB 0 Intake Temp Sensor	OK	29 degrees C / 84 degrees F
	CB 0 Exhaust Temp Sensor	OK	33 degrees C / 91 degrees F
	CB 1 Intake Temp Sensor	OK	28 degrees C / 82 degrees F
	CB 1 Exhaust Temp Sensor	OK	32 degrees C / 89 degrees F
	FPC 0 Intake-A Temp Sensor	OK	38 degrees C / 100 degrees F
	FPC 0 Intake-B Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 0 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 0 Exhaust-B Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 0 Exhaust-C Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 0 PE0 Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 0 PE1 Temp Sensor	OK	42 degrees C / 107 degrees F
	FPC 0 PE2 Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 0 LCPU Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 1 Intake-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 1 Intake-B Temp Sensor	OK	33 degrees C / 91 degrees F
	FPC 1 Exhaust-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust-B Temp Sensor	OK	38 degrees C / 100 degrees F
	FPC 1 Exhaust-C Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 1 PE0 Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 1 PE1 Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 1 PE2 Temp Sensor	OK	45 degrees C / 113 degrees F
	FPC 1 LCPU Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 2 Intake-A Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 2 Intake-B Temp Sensor	OK	30 degrees C / 86 degrees F
	FPC 2 Exhaust-A Temp Sensor	OK	52 degrees C / 125 degrees F
	FPC 2 Exhaust-B Temp Sensor	OK	54 degrees C / 129 degrees F
	FPC 2 Exhaust-C Temp Sensor	OK	52 degrees C / 125 degrees F
	FPC 2 PE0 Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 2 PE1 Temp Sensor	OK	59 degrees C / 138 degrees F
	FPC 2 PE2 Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 2 PE3 Temp Sensor	OK	60 degrees C / 140 degrees F
	FPC 2 PE4 Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 2 PE5 Temp Sensor	OK	63 degrees C / 145 degrees F
	FPC 2 LCPU Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 3 Intake-A Temp Sensor	OK	42 degrees C / 107 degrees F
	FPC 3 Intake-B Temp Sensor	OK	30 degrees C / 86 degrees F
	FPC 3 Exhaust-A Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 3 Exhaust-B Temp Sensor	OK	48 degrees C / 118 degrees F
	FPC 3 Exhaust-C Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 3 PE0 Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 3 PE1 Temp Sensor	OK	53 degrees C / 127 degrees F
	FPC 3 PE2 Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 3 PE3 Temp Sensor	OK	53 degrees C / 127 degrees F
	FPC 3 PE4 Temp Sensor	OK	48 degrees C / 118 degrees F
	FPC 3 PE5 Temp Sensor	OK	57 degrees C / 134 degrees F
	FPC 3 LCPU Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 5 Intake-A Temp Sensor	Failed	
	FPC 5 Intake-B Temp Sensor	Failed	
	FPC 5 Exhaust-A Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 5 Exhaust-B Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 5 Exhaust-C Temp Sensor	OK	41 degrees C / 105 degrees F
	FPC 5 PE0 Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 5 PE1 Temp Sensor	OK	48 degrees C / 118 degrees F
	FPC 5 PE2 Temp Sensor	OK	51 degrees C / 123 degrees F



	FPC 5 LCPu Temp Sensor	Failed	
	FPC 6 Intake-A Temp Sensor	OK	40 degrees C / 104 degrees F
	FPC 6 Intake-B Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 6 Exhaust-A Temp Sensor	OK	39 degrees C / 102 degrees F
	FPC 6 Exhaust-B Temp Sensor	OK	39 degrees C / 102 degrees F
	FPC 6 Exhaust-C Temp Sensor	OK	39 degrees C / 102 degrees F
	FPC 6 PE0 Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 6 PE1 Temp Sensor	OK	45 degrees C / 113 degrees F
	FPC 6 PE2 Temp Sensor	OK	50 degrees C / 122 degrees F
	FPC 6 LCPu Temp Sensor	OK	40 degrees C / 104 degrees F
	SIB 0 Intake-A Temp Sensor	OK	37 degrees C / 98 degrees F
	SIB 0 Intake-B Temp Sensor	OK	30 degrees C / 86 degrees F
	SIB 0 Exhaust-A Temp Sensor	OK	33 degrees C / 91 degrees F
	SIB 0 Exhaust-B Temp Sensor	OK	38 degrees C / 100 degrees F
	SIB 0 PF0 Temp Sensor	OK	46 degrees C / 114 degrees F
	SIB 0 PF1 Temp Sensor	OK	39 degrees C / 102 degrees F
	SIB 1 Intake-A Temp Sensor	OK	43 degrees C / 109 degrees F
	SIB 1 Intake-B Temp Sensor	OK	34 degrees C / 93 degrees F
	SIB 1 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	SIB 1 Exhaust-B Temp Sensor	OK	44 degrees C / 111 degrees F
	SIB 1 PF0 Temp Sensor	OK	54 degrees C / 129 degrees F
	SIB 1 PF1 Temp Sensor	OK	41 degrees C / 105 degrees F
	SIB 2 Intake-A Temp Sensor	OK	46 degrees C / 114 degrees F
	SIB 2 Intake-B Temp Sensor	OK	35 degrees C / 95 degrees F
	SIB 2 Exhaust-A Temp Sensor	OK	37 degrees C / 98 degrees F
	SIB 2 Exhaust-B Temp Sensor	OK	47 degrees C / 116 degrees F
	SIB 2 PF0 Temp Sensor	OK	55 degrees C / 131 degrees F
	SIB 2 PF1 Temp Sensor	OK	42 degrees C / 107 degrees F
	SIB 3 Intake-A Temp Sensor	OK	45 degrees C / 113 degrees F
	SIB 3 Intake-B Temp Sensor	OK	35 degrees C / 95 degrees F
	SIB 3 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	SIB 3 Exhaust-B Temp Sensor	OK	45 degrees C / 113 degrees F
	SIB 3 PF0 Temp Sensor	OK	54 degrees C / 129 degrees F
	SIB 3 PF1 Temp Sensor	OK	42 degrees C / 107 degrees F
	SIB 4 Intake-A Temp Sensor	OK	46 degrees C / 114 degrees F
	SIB 4 Intake-B Temp Sensor	OK	34 degrees C / 93 degrees F
	SIB 4 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	SIB 4 Exhaust-B Temp Sensor	OK	46 degrees C / 114 degrees F
	SIB 4 PF0 Temp Sensor	OK	54 degrees C / 129 degrees F
	SIB 4 PF1 Temp Sensor	OK	41 degrees C / 105 degrees F
	SIB 5 Intake-A Temp Sensor	OK	38 degrees C / 100 degrees F
	SIB 5 Intake-B Temp Sensor	OK	31 degrees C / 87 degrees F
	SIB 5 Exhaust-A Temp Sensor	OK	34 degrees C / 93 degrees F
	SIB 5 Exhaust-B Temp Sensor	OK	39 degrees C / 102 degrees F
	SIB 5 PF0 Temp Sensor	OK	44 degrees C / 111 degrees F
	SIB 5 PF1 Temp Sensor	OK	42 degrees C / 107 degrees F
Power	Power Supply 0	OK	
	Power Supply 1	OK	
	Power Supply 2	OK	
	Power Supply 3	OK	
	Power Supply 4	Check	
	Power Supply 5	OK	
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	Failed	
	Fan Tray 0 Fan 5	Failed	
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 0 Fan 7	OK	Spinning at normal speed



Fan Tray 0 Fan 8	OK	Spinning at normal speed
Fan Tray 0 Fan 9	OK	Spinning at normal speed
Fan Tray 0 Fan 10	OK	Spinning at normal speed
Fan Tray 1 Fan 0	OK	Spinning at normal speed
Fan Tray 1 Fan 1	OK	Spinning at normal speed
Fan Tray 1 Fan 2	OK	Spinning at normal speed
Fan Tray 1 Fan 3	OK	Spinning at normal speed
Fan Tray 1 Fan 4	OK	Spinning at normal speed
Fan Tray 1 Fan 5	OK	Spinning at normal speed
Fan Tray 1 Fan 6	OK	Spinning at normal speed
Fan Tray 1 Fan 7	OK	Spinning at normal speed
Fan Tray 1 Fan 8	OK	Spinning at normal speed
Fan Tray 1 Fan 9	OK	Spinning at normal speed
Fan Tray 1 Fan 10	OK	Spinning at normal speed

### show chassis environment (PTX10016 Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	Routing Engine 0 CPU	OK	34 degrees C / 93 degrees F
	Routing Engine 1 CPU	OK	34 degrees C / 93 degrees F
	CB 0 Intake Temp Sensor	OK	20 degrees C / 68 degrees F
	CB 0 Exhaust Temp Sensor	OK	24 degrees C / 75 degrees F
	CB 1 Intake Temp Sensor	OK	20 degrees C / 68 degrees F
	CB 1 Exhaust Temp Sensor	OK	23 degrees C / 73 degrees F
	FPC 1 Intake-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 1 Intake-B Temp Sensor	OK	32 degrees C / 89 degrees F
	FPC 1 Exhaust-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 1 Exhaust-B Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 1 Exhaust-C Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 1 PE0 Temp Sensor	OK	45 degrees C / 113 degrees F
	FPC 1 PE1 Temp Sensor	OK	46 degrees C / 114 degrees F
	FPC 1 PE2 Temp Sensor	OK	54 degrees C / 129 degrees F
	FPC 1 LCPU Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 3 Intake-A Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 3 Intake-B Temp Sensor	OK	31 degrees C / 87 degrees F
	FPC 3 Exhaust-A Temp Sensor	OK	36 degrees C / 96 degrees F
	FPC 3 Exhaust-B Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 3 Exhaust-C Temp Sensor	OK	33 degrees C / 91 degrees F
	FPC 3 PE0 Temp Sensor	OK	43 degrees C / 109 degrees F
	FPC 3 PE1 Temp Sensor	OK	45 degrees C / 113 degrees F
	FPC 3 PE2 Temp Sensor	OK	49 degrees C / 120 degrees F
	FPC 3 LCPU Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 6 Intake-A Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 6 Intake-B Temp Sensor	OK	31 degrees C / 87 degrees F
	FPC 6 Exhaust-A Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 6 Exhaust-B Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 6 Exhaust-C Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 6 PE0 Temp Sensor	OK	43 degrees C / 109 degrees F
	FPC 6 PE1 Temp Sensor	OK	43 degrees C / 109 degrees F
	FPC 6 PE2 Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 6 LCPU Temp Sensor	OK	35 degrees C / 95 degrees F
	FPC 8 Intake-A Temp Sensor	OK	34 degrees C / 93 degrees F
	FPC 8 Intake-B Temp Sensor	OK	31 degrees C / 87 degrees F
	FPC 8 Exhaust-A Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 8 Exhaust-B Temp Sensor	OK	37 degrees C / 98 degrees F
	FPC 8 Exhaust-C Temp Sensor	OK	38 degrees C / 100 degrees F
	FPC 8 PE0 Temp Sensor	OK	42 degrees C / 107 degrees F
	FPC 8 PE1 Temp Sensor	OK	44 degrees C / 111 degrees F



	FPC 8 PE2 Temp Sensor	OK	47 degrees C / 116 degrees F
	FPC 8 LCPU Temp Sensor	OK	33 degrees C / 91 degrees F
	FPC 9 Intake-A Temp Sensor	OK	44 degrees C / 111 degrees F
	FPC 9 Intake-B Temp Sensor	OK	28 degrees C / 82 degrees F
	FPC 9 Exhaust-A Temp Sensor	OK	51 degrees C / 123 degrees F
	FPC 9 Exhaust-B Temp Sensor	OK	52 degrees C / 125 degrees F
	FPC 9 Exhaust-C Temp Sensor	OK	48 degrees C / 118 degrees F
	FPC 9 PE0 Temp Sensor	OK	52 degrees C / 125 degrees F
	FPC 9 PE1 Temp Sensor	OK	66 degrees C / 150 degrees F
	FPC 9 PE2 Temp Sensor	OK	50 degrees C / 122 degrees F
	FPC 9 PE3 Temp Sensor	OK	65 degrees C / 149 degrees F
	FPC 9 PE4 Temp Sensor	OK	51 degrees C / 123 degrees F
	FPC 9 PE5 Temp Sensor	OK	68 degrees C / 154 degrees F
	FPC 9 LCPU Temp Sensor	OK	46 degrees C / 114 degrees F
Power	Power Supply 0	OK	22 degrees C / 71 degrees F
	Power Supply 1	OK	23 degrees C / 73 degrees F
	Power Supply 2	OK	23 degrees C / 73 degrees F
	Power Supply 3	OK	21 degrees C / 69 degrees F
	Power Supply 4	OK	22 degrees C / 71 degrees F
	Power Supply 5	OK	25 degrees C / 77 degrees F
	Power Supply 6	OK	21 degrees C / 69 degrees F
	Power Supply 7	Absent	
	Power Supply 8	Absent	
	Power Supply 9	Absent	
Fans	Fan Tray 0 Fan 0	OK	Spinning at normal speed
	Fan Tray 0 Fan 1	OK	Spinning at normal speed
	Fan Tray 0 Fan 2	OK	Spinning at normal speed
	Fan Tray 0 Fan 3	OK	Spinning at normal speed
	Fan Tray 0 Fan 4	OK	Spinning at normal speed
	Fan Tray 0 Fan 5	OK	Spinning at normal speed
	Fan Tray 0 Fan 6	OK	Spinning at normal speed
	Fan Tray 0 Fan 7	OK	Spinning at normal speed
	Fan Tray 0 Fan 8	OK	Spinning at normal speed
	Fan Tray 0 Fan 9	OK	Spinning at normal speed
	Fan Tray 0 Fan 10	OK	Spinning at normal speed
	Fan Tray 0 Fan 11	OK	Spinning at normal speed
	Fan Tray 0 Fan 12	OK	Spinning at normal speed
	Fan Tray 0 Fan 13	OK	Spinning at normal speed
	Fan Tray 0 Fan 14	OK	Spinning at normal speed
	Fan Tray 0 Fan 15	OK	Spinning at normal speed
	Fan Tray 0 Fan 16	OK	Spinning at normal speed
	Fan Tray 0 Fan 17	OK	Spinning at normal speed
	Fan Tray 0 Fan 18	OK	Spinning at normal speed
	Fan Tray 0 Fan 19	OK	Spinning at normal speed
	Fan Tray 0 Fan 20	OK	Spinning at normal speed
	Fan Tray 1 Fan 0	OK	Spinning at normal speed
	Fan Tray 1 Fan 1	OK	Spinning at normal speed
	Fan Tray 1 Fan 2	OK	Spinning at normal speed
	Fan Tray 1 Fan 3	OK	Spinning at normal speed
	Fan Tray 1 Fan 4	OK	Spinning at normal speed
	Fan Tray 1 Fan 5	OK	Spinning at normal speed
	Fan Tray 1 Fan 6	OK	Spinning at normal speed
	Fan Tray 1 Fan 7	OK	Spinning at normal speed
	Fan Tray 1 Fan 8	OK	Spinning at normal speed
	Fan Tray 1 Fan 9	OK	Spinning at normal speed
	Fan Tray 1 Fan 10	OK	Spinning at normal speed
	Fan Tray 1 Fan 11	OK	Spinning at normal speed
	Fan Tray 1 Fan 12	OK	Spinning at normal speed
	Fan Tray 1 Fan 13	OK	Spinning at normal speed
	Fan Tray 1 Fan 14	OK	Spinning at normal speed



Fan Tray 1 Fan 15	OK	Spinning at normal speed
Fan Tray 1 Fan 16	OK	Spinning at normal speed
Fan Tray 1 Fan 17	OK	Spinning at normal speed
Fan Tray 1 Fan 18	OK	Spinning at normal speed
Fan Tray 1 Fan 19	OK	Spinning at normal speed
Fan Tray 1 Fan 20	OK	Spinning at normal speed
SIB 0 Intake-A Temp Sensor	OK	20 degrees C / 68 degrees F
SIB 0 Intake-B Temp Sensor	OK	20 degrees C / 68 degrees F
SIB 0 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 0 Exhaust-A Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 0 Exhaust-B Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 0 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 0 PF0 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 0 PF1 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 0 PF2 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 0 PF3 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 0 PF4 Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 0 PF5 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 1 Intake-A Temp Sensor	OK	22 degrees C / 71 degrees F
SIB 1 Intake-B Temp Sensor	OK	22 degrees C / 71 degrees F
SIB 1 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 1 Exhaust-A Temp Sensor	OK	29 degrees C / 84 degrees F
SIB 1 Exhaust-B Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 1 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 1 PF0 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 1 PF1 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 1 PF2 Temp Sensor	OK	33 degrees C / 91 degrees F
SIB 1 PF3 Temp Sensor	OK	38 degrees C / 100 degrees F
SIB 1 PF4 Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 1 PF5 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 2 Intake-A Temp Sensor	OK	24 degrees C / 75 degrees F
SIB 2 Intake-B Temp Sensor	OK	21 degrees C / 69 degrees F
SIB 2 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 2 Exhaust-A Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 2 Exhaust-B Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 2 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 2 PF0 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 2 PF1 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 2 PF2 Temp Sensor	OK	33 degrees C / 91 degrees F
SIB 2 PF3 Temp Sensor	OK	41 degrees C / 105 degrees F
SIB 2 PF4 Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 2 PF5 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 3 Intake-A Temp Sensor	OK	22 degrees C / 71 degrees F
SIB 3 Intake-B Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 3 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 3 Exhaust-A Temp Sensor	OK	29 degrees C / 84 degrees F
SIB 3 Exhaust-B Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 3 Exhaust-C Temp Sensor	OK	24 degrees C / 75 degrees F
SIB 3 PF0 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 3 PF1 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 3 PF2 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 3 PF3 Temp Sensor	OK	39 degrees C / 102 degrees F
SIB 3 PF4 Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 3 PF5 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 4 Intake-A Temp Sensor	OK	22 degrees C / 71 degrees F
SIB 4 Intake-B Temp Sensor	OK	25 degrees C / 77 degrees F
SIB 4 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 4 Exhaust-A Temp Sensor	OK	29 degrees C / 84 degrees F
SIB 4 Exhaust-B Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 4 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F



SIB 4 PF0 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 4 PF1 Temp Sensor	OK	31 degrees C / 87 degrees F
SIB 4 PF2 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 4 PF3 Temp Sensor	OK	40 degrees C / 104 degrees F
SIB 4 PF4 Temp Sensor	OK	26 degrees C / 78 degrees F
SIB 4 PF5 Temp Sensor	OK	25 degrees C / 77 degrees F
SIB 5 Intake-A Temp Sensor	OK	21 degrees C / 69 degrees F
SIB 5 Intake-B Temp Sensor	OK	20 degrees C / 68 degrees F
SIB 5 Intake-C Temp Sensor	OK	16 degrees C / 60 degrees F
SIB 5 Exhaust-A Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 5 Exhaust-B Temp Sensor	OK	27 degrees C / 80 degrees F
SIB 5 Exhaust-C Temp Sensor	OK	23 degrees C / 73 degrees F
SIB 5 PF0 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 5 PF1 Temp Sensor	OK	29 degrees C / 84 degrees F
SIB 5 PF2 Temp Sensor	OK	30 degrees C / 86 degrees F
SIB 5 PF3 Temp Sensor	OK	32 degrees C / 89 degrees F
SIB 5 PF4 Temp Sensor	OK	28 degrees C / 82 degrees F
SIB 5 PF5 Temp Sensor	OK	27 degrees C / 80 degrees F

### show chassis environment (ACX2000 Universal Metro Router)

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
	PCB Left	OK	44 degrees C / 111 degrees F
	SFP+ Xcvr	OK	50 degrees C / 122 degrees F
	FEB	OK	70 degrees C / 158 degrees F
	PCB Up	OK	63 degrees C / 145 degrees F
	PCB Mid	OK	66 degrees C / 150 degrees F
	Telecom Mod	OK	65 degrees C / 149 degrees F
	Routing Engine	OK	54 degrees C / 129 degrees F
	Heater off		

### show chassis environment (ACX4000 Universal Metro Router)

On the ACX4000 router, the MIC output of the **show chassis environment** command varies depending on the number of temperature channels present in the installed MIC.

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	33 degrees C / 91 degrees F
	PEM 1	Absent	
	PCB Bottom	OK	30 degrees C / 86 degrees F
	PCB Middle	OK	34 degrees C / 93 degrees F
	BCM56445	OK	33 degrees C / 91 degrees F
	SFP+ Xcvr	OK	32 degrees C / 89 degrees F
	Fan tray inlet	OK	39 degrees C / 102 degrees F
	Exhaust	OK	30 degrees C / 86 degrees F
	Routing Engine	OK	32 degrees C / 89 degrees F
	Heater off		
Pic	PIC 0/0 Channel 0	OK	28 degrees C / 82 degrees F
	PIC 0/0 Channel 1	OK	29 degrees C / 84 degrees F
	PIC 0/0 Channel 2	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 3	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 4	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 5	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 6	OK	0 degrees C / 32 degrees F



	PIC 0/0 Channel 7	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 8	OK	0 degrees C / 32 degrees F
	PIC 0/0 Channel 9	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 0	OK	33 degrees C / 91 degrees F
	PIC 1/0 Channel 1	OK	31 degrees C / 87 degrees F
	PIC 1/0 Channel 2	OK	30 degrees C / 86 degrees F
	PIC 1/0 Channel 3	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 4	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 5	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 6	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 7	OK	0 degrees C / 32 degrees F
	PIC 1/0 Channel 8	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 0	OK	31 degrees C / 87 degrees F
	PIC 1/1 Channel 1	OK	29 degrees C / 84 degrees F
	PIC 1/1 Channel 2	OK	28 degrees C / 82 degrees F
	PIC 1/1 Channel 3	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 4	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 5	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 6	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 7	OK	0 degrees C / 32 degrees F
	PIC 1/1 Channel 8	OK	0 degrees C / 32 degrees F
Fans	Fan 1	OK	Spinning at normal speed
	Fan 2	OK	Spinning at normal speed

### show chassis environment (ACX5048 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	Absent	
	FPC 0 Power Supply 1	OK	
Temp	FPC 0 Sensor TopMiddle E	OK	23 degrees C / 73 degrees F
	FPC 0 Sensor TopRight C	OK	18 degrees C / 64 degrees F
	FPC 0 Sensor TopLeft C	OK	21 degrees C / 69 degrees F
	FPC 0 Sensor TopRight E	OK	20 degrees C / 68 degrees F
	FPC 0 Sensor CPURight C	OK	23 degrees C / 73 degrees F
	FPC 0 Sensor CPULeft E	OK	22 degrees C / 71 degrees F
	FPC 0 Sensor CPU Die Temp	OK	39 degrees C / 102 degrees F
Fans	FPC 0 Fan Tray 0	OK	Spinning at normal speed
	FPC 0 Fan Tray 1	OK	Spinning at normal speed
	FPC 0 Fan Tray 2	OK	Spinning at normal speed
	FPC 0 Fan Tray 3	OK	Spinning at normal speed
	FPC 0 Fan Tray 4	OK	Spinning at normal speed

### show chassis environment (ACX5096 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
Power	FPC 0 Power Supply 0	OK	
	FPC 0 Power Supply 1	OK	
Temp	FPC 0 Sensor TopMiddle E	OK	32 degrees C / 89 degrees F
	FPC 0 Sensor TopRight I	OK	29 degrees C / 84 degrees F
	FPC 0 Sensor TopLeft I	OK	23 degrees C / 73 degrees F
	FPC 0 Sensor TopRight E	OK	28 degrees C / 82 degrees F
	FPC 0 Sensor CPURight I	OK	30 degrees C / 86 degrees F
	FPC 0 Sensor CPULeft I	OK	29 degrees C / 84 degrees F



	FPC 0 Sensor Die Temp	OK	46 degrees C / 114 degrees F
	FPC 0 Mezz Temp	OK	23 degrees C / 73 degrees F
Fans	FPC 0 Fan Tray 0	OK	Spinning at normal speed
	FPC 0 Fan Tray 1	OK	Spinning at normal speed
	FPC 0 Fan Tray 2	OK	Spinning at normal speed

### show chassis environment (ACX500 Router)

user@host> show chassis environment

Class	Item	Status	Measurement
	Power Mod	OK	47 degrees C / 116 degrees F
	BCM54610	OK	46 degrees C / 114 degrees F
	DPLL31404	OK	45 degrees C / 113 degrees F
	CPLD	OK	42 degrees C / 107 degrees F
	1588-FPGA	OK	43 degrees C / 109 degrees F
	NPU	OK	62 degrees C / 143 degrees F
	MAC sensor 1	OK	40 degrees C / 104 degrees F
	MAC sensor 2	OK	38 degrees C / 100 degrees F
	SFP PHY	OK	38 degrees C / 100 degrees F
	Combo/RJ45 PHY	OK	37 degrees C / 98 degrees F
	SFP sensor 1	OK	35 degrees C / 95 degrees F
	SFP sensor 2	OK	33 degrees C / 91 degrees F
	SFP sensor 3	OK	32 degrees C / 89 degrees F
	Routing Engine	OK	54 degrees C / 129 degrees F
	Heater off		



## show chassis environment fpc

<b>List of Syntax</b>	<a href="#">Syntax on page 278</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Routers) on page 278</a> <a href="#">Syntax (MX Series Routers) on page 278</a> <a href="#">Syntax (MX2010, MX10003, MX204, MX2008, and MX10008 Universal Routing Platforms) on page 278</a> <a href="#">Syntax (MX2020 Universal Routing Platforms) on page 278</a> <a href="#">Syntax (QFX Series) on page 278</a> <a href="#">Syntax (OCX Series) on page 278</a> <a href="#">Syntax (PTX3000 Series) on page 279</a> <a href="#">Syntax (PTX10008 Series) on page 279</a> <a href="#">Syntax (Junos OS Evolved) on page 279</a>
<b>Syntax</b>	show chassis environment fpc <slot>
<b>Syntax (TX Matrix and TX Matrix Plus Routers)</b>	show chassis environment fpc <lcc number> <slot>
<b>Syntax (MX Series Routers)</b>	show chassis environment fpc <slot> <all-members> <local> <member member-id>
<b>Syntax (MX2010, MX10003, MX204, MX2008, and MX10008 Universal Routing Platforms)</b>	show chassis environment fpc <slot>
<b>Syntax (MX2020 Universal Routing Platforms)</b>	show chassis environment fpc <slot> <satellite [fpc-slot slot-id  device-alias alias-name]
<b>Syntax (QFX Series)</b>	show chassis environment fpc <fpc-slot> interconnect-device name
<b>Syntax (OCX Series)</b>	show chassis environment fpc <fpc-slot>



<b>Syntax (PTX3000 Series)</b>	<code>show chassis environment fpc &lt;fpc-slot&gt;</code>
<b>Syntax (PTX10008 Series)</b>	<code>show chassis environment fpc &lt;fpc-slot&gt;</code>
<b>Syntax (Junos OS Evolved)</b>	<code>show chassis environment fpc &lt;fpc-slot&gt;</code>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.1 for T4000 Core Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX 2010 and MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Universal Routing Platforms.</p>
<b>Description</b>	(M40e, M120, M160, M320, MX Series, T Series routers, EX Series, QFX Series, and PTX Series routers only) Display environmental information about Flexible PIC Concentrators (FPCs).
<b>Options</b>	<p><b>none</b>—Display environmental information about all FPCs. On a TX Matrix router, display environmental information about all FPCs on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about all FPCs on the TX Matrix Plus router and its attached routers.</p> <p><b>all-members</b>—(MX Series routers only) (Optional) Display environmental information for the FPCs in all the members of the Virtual Chassis configuration.</p> <p><b>interconnect-device <i>name</i></b>—(QFabric systems only) (Optional) Display chassis environmental information for the Interconnect device.</p> <p><b>lcc <i>number</i></b>—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.</p>



Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display environmental information for the FPCs in the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display environmental information for the FPCs in the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**satellite [*fpc-slot slot-id* | *device-alias alias-name*]**—(Junos Fusion only)(Optional) Display environmental information for the FPCs in the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

***slot* or *fpc-slot***—(Optional) Display environmental information about an individual FPC:

- (TX Matrix and TX Matrix Plus routers only) On a TX Matrix router, if you specify the number of the T640 router by using only the **lcc *number*** option (the recommended method), replace ***slot*** with a value from 0 through 7. Similarly, on a TX Matrix Plus router, if you specify the number of the router by using only the **lcc *number*** option (the recommended method), replace ***slot*** with a value from 0 through 7. Otherwise, replace ***slot*** with a value from 0 through 31. For example, the following commands have the same result:

```
user@host> show chassis environment fpc 1 lcc 1
user@host> show chassis environment fpc 9
```

- M120 router—Replace ***slot*** with a value from 0 through 5.
- MX240 router—Replace ***slot*** with a value from 0 through 2.
- MX480 router—Replace ***slot*** with a value from 0 through 5.
- MX960 router—Replace ***slot*** with a value from 0 through 11.
- MX2010 router—Replace ***slot*** with a value from 0 through 9.
- MX2020 router—Replace ***slot*** with a value from 0 through 19.
- MX2008 router—Replace ***slot*** with a value from 0 through 9.
- Other routers—Replace ***slot*** with a value from 0 through 7.



- EX Series switches:
  - EX3200 switches and EX4200 standalone switches—Replace **slot** with 0.
  - EX4200 switches in a Virtual Chassis configuration—Replace **slot** with a value from 0 through 9 (switch's member ID).
  - EX6210 switches—Replace **slot** with a value from 0 through 3 (line card only), 4 or 5 (line card or Switch Fabric and Rotuing Engine (SRE) module), or 6 through 9 (line card only).
  - EX8208 switches—Replace **slot** with a value from 0 through 7 (line card).
  - EX8216 switches—Replace **slot** with a value from 0 through 15 (line card).
- QFX3500 switches —Replace **fpc-slot** with 0 through 15.
- PTX5000 Packet Transport Router—Replace **fpc-slot** with 0 through 7.
- PTX3000 Packet Transport Router—Replace **fpc-slot** with 0 through 15.

**Required Privilege Level** view

**Related Documentation**

- [request chassis fpc on page 127](#)
- [show chassis fpc on page 448](#)
- *show chassis fpc-feb-connectivity*
- *Resynchronizing FPC Sequence Numbers with Active FPCs when an FPC Comes Online*
- *MX960 Flexible PIC Concentrator Description*

**List of Sample Output**

- [show chassis environment fpc \(M120 Router\) on page 283](#)
- [show chassis environment fpc \(M160 Router\) on page 284](#)
- [show chassis environment fpc \(M320 Router\) on page 285](#)
- [show chassis environment fpc \(MX2020 Router\) on page 285](#)
- [show chassis environment fpc \(MX2010 Router\) on page 288](#)
- [show chassis environment fpc \(MX2008 Router\) on page 291](#)
- [show chassis environment fpc \(MX240 Router\) on page 294](#)
- [show chassis environment fpc \(MX480 Router\) on page 296](#)
- [show chassis environment fpc \(MX960 Router MPC10E-15C-MRATE\) on page 296](#)
- [show chassis environment fpc \(MX960 Router\) on page 299](#)
- [show chassis environment fpc \(MX480 Router with 100-Gigabit Ethernet CFP\) on page 300](#)
- [show chassis environment fpc \(MX240, MX480, MX960 with Application Services Modular Line Card on page 302](#)
- [show chassis environment fpc \(MX10003 Router\) on page 302](#)
- [show chassis environment fpc \(MX204 Router\) on page 306](#)
- [show chassis environment fpc \(MX10008 Router\) on page 306](#)
- [show chassis environment fpc \(T320, T640, and T1600 Routers\) on page 313](#)



[show chassis environment fpc \(T4000 Router\) on page 314](#)  
[show chassis environment fpc lcc \(TX Matrix Router\) on page 319](#)  
[show chassis environment fpc lcc \(TX Matrix Plus Router\) on page 319](#)  
[show chassis environment fpc \(QFX Series and OCX Series\) on page 320](#)  
[show chassis environment fpc interconnect-device \(QFabric Systems\) on page 320](#)  
[show chassis environment fpc 5 \(PTX3000 Packet Transport Router\) on page 321](#)  
[show chassis environment fpc 0 \(PTX5000 Packet Transport Router\) on page 321](#)  
[show chassis environment fpc 07 \(PTX5000 Packet Transport Router with FPC2-PTX-PIA\) on page 322](#)  
[show chassis environment fpc \(PTX10008 router\) on page 323](#)  
[show chassis environment fpc \(PTX10016 router\) on page 327](#)  
[show chassis environment FPC 1 \(MX Routers with Media Services Blade \[MSB\]\) on page 330](#)  
[show chassis environment FPC \(Junos OS Evolved\) on page 330](#)

**Output Fields** Table 10 on page 282 lists the output fields for the **show chassis environment fpc** command. Output fields are listed in the approximate order in which they appear.

*Table 10: show chassis environment fpc Output Fields*

Field Name	Field Description
<b>State</b>	Status of the FPC: <ul style="list-style-type: none"> <li>• <b>Unknown</b>—FPC is not detected by the router.</li> <li>• <b>Empty</b>—No FPC is present.</li> <li>• <b>Present</b>—FPC is detected by the chassis daemon but is either not supported by the current version of the Junos OS, or the FPC is coming up but not yet online.</li> <li>• <b>Ready</b>—FPC is in intermediate or transition state.</li> <li>• <b>Announce online</b>—Intermediate state during which the FPC is coming up but not yet online, and the chassis manager acknowledges the chassisd FPC online initiative.</li> <li>• <b>Online</b>—FPC is online and running.</li> <li>• <b>Offline</b>—FPC is powered down.</li> <li>• <b>Diagnostics</b>—FPC is set to operate in diagnostics mode.</li> </ul>
<b>Temperature</b>	(M40e and M160 routers and QFX Series only) Temperature of the air flowing past the FPC.
<b>PMB Temperature</b>	(PTX Series only) Temperature of the air flowing past the PMB (bottom of the FPC).  The PTX5000 Packet Transport Router with FPC2-PTX-PIA include multiple temperatures for PMB ( <b>TEMPO</b> and <b>TEMP1</b> ).
<b>PMB CPU Temperature</b>	(PTX5000 Packet Transport Router with FPC2-PTX-PIA only) Temperature of the air flowing past the PMB CPU.
<b>Temperature Intake</b>	(M320 routers, MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series only) Temperature of the air flowing into the chassis.
<b>Temperature Top</b>	(T Series routers only) Temperature of the air flowing past the top of the FPC.



Table 10: show chassis environment fpc Output Fields (continued)

Field Name	Field Description
<b>Temperature Exhaust</b>	(M120 and M320 routers, MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series only) Temperature of the air flowing out of the chassis.  The PTX Series Packet Transport Routers, and the MX2010, MX2020, and MX2008 routers include exhaust temperatures for multiple zones ( <b>Exhaust A</b> and <b>Exhaust B</b> ).
<b>Temperature Bottom</b>	(T Series routers only) Temperature of the air flowing past the bottom of the FPC.
<b>TL n Temperature</b>	(PTX Series only) Temperature of the air flowing past the specified TL area of the packet forwarding engine (PFE) on the FPC.
<b>TQ n Temperature</b>	(PTX Series only) Temperature of the air flowing past the specified TQ area of the packet forwarding engine (PFE) on the FPC.
<b>Temperature MMBO</b>	(T640 router only) Temperature of the air flowing past the type 3 FPC.
<b>Temperature MMB1</b>	(M320 and T Series routers only) Temperature of the air flowing past the type 1, type 2, and type 3 FPC.
<b>Power</b>	Information about the voltage supplied to the FPC. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
<b>CMB Revision or BUS revision</b>	Revision level of the chassis management bus device (M Series router) or bus (T Series routers).

## Sample Output

### show chassis environment fpc (M120 Router)

```

user@host> show chassis environment fpc

FPC 2 status:
  State                Online
  Temperature Exhaust A 32 degrees C / 89 degrees F
  Temperature Exhaust B 31 degrees C / 87 degrees F
  Power A-Board
    1.2 V                1202 mV
    1.5 V                1508 mV
    1.8 V                1798 mV
    2.5 V                2507 mV
    3.3 V                3351 mV
    5.0 V                4995 mV
    3.3 V bias           3296 mV
    1.2 V Rocket IO      1205 mV
    1.5 V Rocket IO      1501 mV
  I2C Slave Revision    12
FPC 3 status:
  State                Online
  Temperature Exhaust A 31 degrees C / 87 degrees F
  Temperature Exhaust B 33 degrees C / 91 degrees F
  Power A-Board
    1.2 V                1211 mV

```



```

1.5 V          1501 mV
1.8 V          1798 mV
2.5 V          2471 mV
3.3 V          3293 mV
5.0 V          4930 mV
3.3 V bias     3296 mV
1.2 V Rocket IO 1205 mV
1.5 V Rocket IO 1501 mV
Power B-Board
1.2 V          1214 mV
1.5 V          1501 mV
2.5 V          2471 mV
3.3 V          3300 mV
5.0 V          4943 mV
3.3 V bias     3296 mV
1.2 V Rocket IO 1205 mV
1.5 V Rocket IO 1501 mV
I2C Slave Revision 12
FPC 4 status:
State          Online
Temperature Exhaust A 32 degrees C / 89 degrees F
Temperature Exhaust B 30 degrees C / 86 degrees F
Power A-Board
1.2 V          1195 mV
1.5 V          1504 mV
1.8 V          1801 mV
2.5 V          2504 mV
3.3 V          3293 mV
5.0 V          4917 mV
3.3 V bias     3296 mV
1.2 V Rocket IO 1202 mV
1.5 V Rocket IO 1492 mV
I2C Slave Revision 12

```

### show chassis environment fpc (M160 Router)

```

user@host> show chassis environment fpc

FPC 0 status:
State          Online
Temperature          42 degrees C / 107 degrees F
Power:
1.5 V          1500 mV
2.5 V          2509 mV
3.3 V          3308 mV
5.0 V          4991 mV
5.0 V bias     4952 mV
8.0 V bias     8307 mV
CMB Revision     12
FPC 1 status:
State          Online
Temperature          45 degrees C / 113 degrees F
Power:
1.5 V          1498 mV
2.5 V          2501 mV
3.3 V          3319 mV
5.0 V          5020 mV
5.0 V bias     5025 mV
8.0 V bias     8307 mV
CMB Revision     12

```



**show chassis environment fpc (M320 Router)**

```

user@host> show chassis environment fpc

FPC 0 status:
  State                Online
  Temperature Intake    27 degrees C / 80 degrees F
  Temperature Exhaust   38 degrees C / 100 degrees F
  Temperature MMB1      31 degrees C / 87 degrees F
  Power:
    1.5 V                1487 mV
    1.5 V *              1494 mV
    1.8 V                1821 mV
    2.5 V                2533 mV
    3.3 V                3323 mV
    5.0 V                5028 mV
    3.3 V bias           3296 mV
    5.0 V bias           4984 mV
  CMB Revision          16
FPC 1 status:
  State                Online
  Temperature Intake    27 degrees C / 80 degrees F
  Temperature Exhaust   37 degrees C / 98 degrees F
  Temperature MMB1      32 degrees C / 89 degrees F
  Power:
    1.5 V                1504 mV
    1.5 V *              1499 mV
    1.8 V                1820 mV
    2.5 V                2529 mV
    3.3 V                3328 mV
    5.0 V                5013 mV
    3.3 V bias           3294 mV
    5.0 V bias           4984 mV
  CMB Revision          16
FPC 2 status:
  State                Online
  Temperature Intake    28 degrees C / 82 degrees F
  Temperature Exhaust   38 degrees C / 100 degrees F
  Temperature MMB1      32 degrees C / 89 degrees F
  Power:
    1.5 V                1498 mV
    1.5 V *              1487 mV
    1.8 V                1816 mV
    2.5 V                2531 mV
    3.3 V                3324 mV
    5.0 V                5025 mV
    3.3 V bias           3277 mV
    5.0 V bias           5013 mV
  CMB Revision          17
FPC 3 status:
...

```

**show chassis environment fpc (MX2020 Router)**

```

user@host> show chassis environment fpc

FPC 0 status:
  State                Online
  Temperature Intake    41 degrees C / 105 degrees F
  Temperature Exhaust A 48 degrees C / 118 degrees F

```



Temperature Exhaust B	60 degrees C / 140 degrees F
Temperature LU 0 TSen	56 degrees C / 132 degrees F
Temperature LU 0 Chip	59 degrees C / 138 degrees F
Temperature LU 1 TSen	56 degrees C / 132 degrees F
Temperature LU 1 Chip	61 degrees C / 141 degrees F
Temperature LU 2 TSen	56 degrees C / 132 degrees F
Temperature LU 2 Chip	52 degrees C / 125 degrees F
Temperature LU 3 TSen	56 degrees C / 132 degrees F
Temperature LU 3 Chip	52 degrees C / 125 degrees F
Temperature MQ 0 TSen	49 degrees C / 120 degrees F
Temperature MQ 0 Chip	49 degrees C / 120 degrees F
Temperature MQ 1 TSen	49 degrees C / 120 degrees F
Temperature MQ 1 Chip	52 degrees C / 125 degrees F
Temperature MQ 2 TSen	49 degrees C / 120 degrees F
Temperature MQ 2 Chip	45 degrees C / 113 degrees F
Temperature MQ 3 TSen	49 degrees C / 120 degrees F
Temperature MQ 3 Chip	46 degrees C / 114 degrees F
Power	
AS-BIAS3V3-z12105	3299 mV
AS-VDD1V8-z12006	1807 mV
AS-VDD2V5-z12006	2512 mV
AS-AVDD1V0-z12004	997 mV
AS-PCIE_1V0-z12004	996 mV
AS-VDD3V3-z12004	3294 mV
AS-VDD_1V5A-z12004	1501 mV
AS-VDD_1V5B-z12004	1498 mV
AS-LU0_1V0-z12004	998 mV
AS-LU1_1V0-z12004	1002 mV
AS-MQ0_1V0-z12004	999 mV
AS-MQ1_1V0-z12004	994 mV
AS-LU2_1V0-z12004	1000 mV
AS-LU3_1V0-z12004	998 mV
AS-MQ2_1V0-z12004	1002 mV
AS-MQ3_1V0-z12004	999 mV
AS-PMB_1V1-z12006	1096 mV
I2C Slave Revision	68
FPC 1 status:	
State	Online
Temperature Intake	39 degrees C / 102 degrees F
Temperature Exhaust A	48 degrees C / 118 degrees F
Temperature Exhaust B	55 degrees C / 131 degrees F
Temperature LU 0 TSen	52 degrees C / 125 degrees F
Temperature LU 0 Chip	54 degrees C / 129 degrees F
Temperature LU 1 TSen	52 degrees C / 125 degrees F
Temperature LU 1 Chip	56 degrees C / 132 degrees F
Temperature LU 2 TSen	52 degrees C / 125 degrees F
Temperature LU 2 Chip	49 degrees C / 120 degrees F
Temperature LU 3 TSen	52 degrees C / 125 degrees F
Temperature LU 3 Chip	50 degrees C / 122 degrees F
Temperature MQ 0 TSen	48 degrees C / 118 degrees F
Temperature MQ 0 Chip	48 degrees C / 118 degrees F
Temperature MQ 1 TSen	48 degrees C / 118 degrees F
Temperature MQ 1 Chip	51 degrees C / 123 degrees F
Temperature MQ 2 TSen	48 degrees C / 118 degrees F
Temperature MQ 2 Chip	45 degrees C / 113 degrees F
Temperature MQ 3 TSen	48 degrees C / 118 degrees F
Temperature MQ 3 Chip	45 degrees C / 113 degrees F
Power	
AS-BIAS3V3-z12105	3291 mV
AS-VDD1V8-z12006	1786 mV



```

AS-VDD2V5-z12006      2496 mV
AS-AVDD1V0-z12004     1000 mV
AS-PCIE_1V0-z12004     1000 mV
AS-VDD3V3-z12004      3294 mV
AS-VDD_1V5A-z12004    1500 mV
AS-VDD_1V5B-z12004    1498 mV
AS-LU0_1V0-z12004     1003 mV
AS-LU1_1V0-z12004     1000 mV
AS-MQ0_1V0-z12004     1000 mV
AS-MQ1_1V0-z12004      995 mV
AS-LU2_1V0-z12004     1002 mV
AS-LU3_1V0-z12004      997 mV
AS-MQ2_1V0-z12004     1000 mV
AS-MQ3_1V0-z12004      998 mV
AS-PMB_1V1-z12006     1096 mV
I2C Slave Revision    68
FPC 2 status:
State                  Online
Temperature Intake     39 degrees C / 102 degrees F
Temperature Exhaust A  48 degrees C / 118 degrees F
Temperature Exhaust B  58 degrees C / 136 degrees F
Temperature LU 0 TSen  55 degrees C / 131 degrees F
Temperature LU 0 Chip  57 degrees C / 134 degrees F
Temperature LU 1 TSen  55 degrees C / 131 degrees F
Temperature LU 1 Chip  63 degrees C / 145 degrees F
Temperature LU 2 TSen  55 degrees C / 131 degrees F
Temperature LU 2 Chip  51 degrees C / 123 degrees F
Temperature LU 3 TSen  55 degrees C / 131 degrees F
Temperature LU 3 Chip  52 degrees C / 125 degrees F
Temperature MQ 0 TSen  48 degrees C / 118 degrees F
Temperature MQ 0 Chip  50 degrees C / 122 degrees F
Temperature MQ 1 TSen  48 degrees C / 118 degrees F
Temperature MQ 1 Chip  52 degrees C / 125 degrees F
Temperature MQ 2 TSen  48 degrees C / 118 degrees F
Temperature MQ 2 Chip  47 degrees C / 116 degrees F
Temperature MQ 3 TSen  48 degrees C / 118 degrees F
Temperature MQ 3 Chip  47 degrees C / 116 degrees F
Power
AS-BIAS3V3-z12105     3299 mV
AS-VDD1V8-z12006     1805 mV
AS-VDD2V5-z12006     2510 mV
AS-AVDD1V0-z12004      999 mV
AS-PCIE_1V0-z12004      998 mV
AS-VDD3V3-z12004      3296 mV
AS-VDD_1V5A-z12004    1492 mV
AS-VDD_1V5B-z12004    1497 mV
AS-LU0_1V0-z12004      997 mV
AS-LU1_1V0-z12004     1000 mV
AS-MQ0_1V0-z12004      998 mV
AS-MQ1_1V0-z12004     1001 mV
AS-LU2_1V0-z12004      996 mV
AS-LU3_1V0-z12004      995 mV
AS-MQ2_1V0-z12004      998 mV
AS-MQ3_1V0-z12004      997 mV
AS-PMB_1V1-z12006     1100 mV
I2C Slave Revision    68
FPC 3 status:
State                  Online
Temperature Intake     41 degrees C / 105 degrees F
Temperature Exhaust A  48 degrees C / 118 degrees F

```



```

Temperature Exhaust B      58 degrees C / 136 degrees F
Temperature LU 0 TSen      56 degrees C / 132 degrees F
Temperature LU 0 Chip      59 degrees C / 138 degrees F
Temperature LU 1 TSen      56 degrees C / 132 degrees F
Temperature LU 1 Chip      61 degrees C / 141 degrees F
Temperature LU 2 TSen      56 degrees C / 132 degrees F
Temperature LU 2 Chip      51 degrees C / 123 degrees F
Temperature LU 3 TSen      56 degrees C / 132 degrees F
Temperature LU 3 Chip      53 degrees C / 127 degrees F
Temperature MQ 0 TSen      50 degrees C / 122 degrees F
Temperature MQ 0 Chip      51 degrees C / 123 degrees F
Temperature MQ 1 TSen      50 degrees C / 122 degrees F
Temperature MQ 1 Chip      55 degrees C / 131 degrees F
Temperature MQ 2 TSen      50 degrees C / 122 degrees F
Temperature MQ 2 Chip      47 degrees C / 116 degrees F
Temperature MQ 3 TSen      50 degrees C / 122 degrees F
Temperature MQ 3 Chip      50 degrees C / 122 degrees F
Power
  AS-BIAS3V3-z12105        3305 mV
  AS-VDD1V8-z12006         1810 mV
  AS-VDD2V5-z12006         2508 mV
  AS-AVDD1V0-z12004         999 mV
  AS-PCIE_1V0-z12004        1001 mV
  AS-VDD3V3-z12004         3294 mV
  AS-VDD_1V5A-z12004        1500 mV
  AS-VDD_1V5B-z12004        1498 mV
  AS-LU0_1V0-z12004         998 mV
  AS-LU1_1V0-z12004         998 mV
  AS-MQ0_1V0-z12004         999 mV
  AS-MQ1_1V0-z12004         998 mV
  AS-LU2_1V0-z12004        1000 mV
  AS-LU3_1V0-z12004        1001 mV
  AS-MQ2_1V0-z12004         996 mV
  AS-MQ3_1V0-z12004         998 mV
  AS-PMB_1V1-z12006        1098 mV
I2C Slave Revision        68
FPC 4 status:
...
```

### show chassis environment fpc (MX2010 Router)

```
user@host> show chassis environment fpc
```

```

FPC 0 status:
State      Online
Temperature Intake      36 degrees C / 96 degrees F
Temperature Exhaust A   42 degrees C / 107 degrees F
Temperature Exhaust B   51 degrees C / 123 degrees F
Temperature LU 0 TSen    49 degrees C / 120 degrees F
Temperature LU 0 Chip    50 degrees C / 122 degrees F
Temperature LU 1 TSen    49 degrees C / 120 degrees F
Temperature LU 1 Chip    54 degrees C / 129 degrees F
Temperature LU 2 TSen    49 degrees C / 120 degrees F
Temperature LU 2 Chip    45 degrees C / 113 degrees F
Temperature LU 3 TSen    49 degrees C / 120 degrees F
Temperature LU 3 Chip    46 degrees C / 114 degrees F
Temperature MQ 0 TSen    40 degrees C / 104 degrees F
Temperature MQ 0 Chip    41 degrees C / 105 degrees F
Temperature MQ 1 TSen    40 degrees C / 104 degrees F
Temperature MQ 1 Chip    44 degrees C / 111 degrees F
```



```

Temperature MQ 2 TSen      40 degrees C / 104 degrees F
Temperature MQ 2 Chip      38 degrees C / 100 degrees F
Temperature MQ 3 TSen      40 degrees C / 104 degrees F
Temperature MQ 3 Chip      41 degrees C / 105 degrees F
Power
  AS-BIAS3V3-z12105      3300 mV
  AS-VDD1V8-z12006      1805 mV
  AS-VDD2V5-z12006      2505 mV
  AS-AVDD1V0-z12004      998 mV
  AS-PCIE_1V0-z12004      999 mV
  AS-VDD3V3-z12004      3303 mV
  AS-VDD_1V5A-z12004      1497 mV
  AS-VDD_1V5B-z12004      1497 mV
  AS-LU0_1V0-z12004      998 mV
  AS-LU1_1V0-z12004      1003 mV
  AS-MQ0_1V0-z12004      998 mV
  AS-MQ1_1V0-z12004      998 mV
  AS-LU2_1V0-z12004      997 mV
  AS-LU3_1V0-z12004      1001 mV
  AS-MQ2_1V0-z12004      996 mV
  AS-MQ3_1V0-z12004      994 mV
  AS-PMB_1V1-z12006      1097 mV
I2C Slave Revision      68
FPC 1 status:
  State      Online
  Temperature Intake      34 degrees C / 93 degrees F
  Temperature Exhaust A    46 degrees C / 114 degrees F
  Temperature Exhaust B    54 degrees C / 129 degrees F
  Temperature LU 0 TSen    45 degrees C / 113 degrees F
  Temperature LU 0 Chip    55 degrees C / 131 degrees F
  Temperature LU 1 TSen    45 degrees C / 113 degrees F
  Temperature LU 1 Chip    44 degrees C / 111 degrees F
  Temperature LU 2 TSen    45 degrees C / 113 degrees F
  Temperature LU 2 Chip    50 degrees C / 122 degrees F
  Temperature LU 3 TSen    45 degrees C / 113 degrees F
  Temperature LU 3 Chip    58 degrees C / 136 degrees F
  Temperature XM 0 TSen    45 degrees C / 113 degrees F
  Temperature XM 0 Chip    51 degrees C / 123 degrees F
  Temperature XF 0 TSen    45 degrees C / 113 degrees F
  Temperature XF 0 Chip    63 degrees C / 145 degrees F
  Temperature PLX Switch TSen 45 degrees C / 113 degrees F
  Temperature PLX Switch Chip 47 degrees C / 116 degrees F
Power
  MPC-BIAS3V3-z12105      3300 mV
  MPC-VDD3V3-z16100      3294 mV
  MPC-VDD2V5-z16100      2505 mV
  MPC-VDD1V8-z12004      1796 mV
  MPC-AVDD1V0-z12004      991 mV
  MPC-VDD1V2-z16100      1196 mV
  MPC-VDD1V5A-z12004      1491 mV
  MPC-VDD1V5B-z12004      1492 mV
  MPC-XF_0V9-z12004      996 mV
  MPC-PCIE_1V0-z16100      1003 mV
  MPC-LU0_1V0-z12004      996 mV
  MPC-LU1_1V0-z12004      996 mV
  MPC-LU2_1V0-z12004      998 mV
  MPC-LU3_1V0-z12004      994 mV
  MPC-12VA-BMR453      12031 mV
  MPC-12VB-BMR453      12003 mV
  MPC-PMB_1V1-z12006      1104 mV

```



```

MPC-PMB_1V2-z12106      1194 mV
MPC-XM_OV9-vt273m       911 mV
I2C Slave Revision      110
FPC 8 status:
State                    Online
Temperature Intake       32 degrees C / 89 degrees F
Temperature Exhaust A    44 degrees C / 111 degrees F
Temperature Exhaust B    37 degrees C / 98 degrees F
Temperature LU 0 TCAM TSen 41 degrees C / 105 degrees F
Temperature LU 0 TCAM Chip 49 degrees C / 120 degrees F
Temperature LU 0 TSen     41 degrees C / 105 degrees F
Temperature LU 0 Chip     52 degrees C / 125 degrees F
Temperature MQ 0 TSen     41 degrees C / 105 degrees F
Temperature MQ 0 Chip     47 degrees C / 116 degrees F
Temperature LU 1 TCAM TSen 39 degrees C / 102 degrees F
Temperature LU 1 TCAM Chip 42 degrees C / 107 degrees F
Temperature LU 1 TSen     39 degrees C / 102 degrees F
Temperature LU 1 Chip     46 degrees C / 114 degrees F
Temperature MQ 1 TSen     39 degrees C / 102 degrees F
Temperature MQ 1 Chip     45 degrees C / 113 degrees F
Power
MPC-BIAS3V3-z12105      3296 mV
MPC-VDD3V3-z12006       3298 mV
MPC-VDD2V5-z12006       2505 mV
MPC-TCAM_1V0-z12004      997 mV
MPC-AVDD1V0-z12006       1007 mV
MPC-VDD1V8-z12006       1803 mV
MPC-PCIE_1V0-z12006      1004 mV
MPC-LU0_1V0-z12004       1000 mV
MPC-MQ0_1V0-z12004       999 mV
MPC-VDD_1V5-z12004       1498 mV
MPC-PMB_1V1-z12006       1102 mV
MPC-9VA-BMR453           9009 mV
MPC-9VB-BMR453           8960 mV
MPC-PMB_1V2-z12105       1202 mV
MPC-LU1_1V0-z12004       1005 mV
MPC-MQ1_1V0-z12004       1000 mV
I2C Slave Revision      70
FPC 9 status:
State                    Online
Temperature Intake       34 degrees C / 93 degrees F
Temperature Exhaust A    41 degrees C / 105 degrees F
Temperature Exhaust B    54 degrees C / 129 degrees F
Temperature LU 0 TSen     51 degrees C / 123 degrees F
Temperature LU 0 Chip     52 degrees C / 125 degrees F
Temperature LU 1 TSen     51 degrees C / 123 degrees F
Temperature LU 1 Chip     55 degrees C / 131 degrees F
Temperature LU 2 TSen     51 degrees C / 123 degrees F
Temperature LU 2 Chip     47 degrees C / 116 degrees F
Temperature LU 3 TSen     51 degrees C / 123 degrees F
Temperature LU 3 Chip     47 degrees C / 116 degrees F
Temperature MQ 0 TSen     40 degrees C / 104 degrees F
Temperature MQ 0 Chip     42 degrees C / 107 degrees F
Temperature MQ 1 TSen     40 degrees C / 104 degrees F
Temperature MQ 1 Chip     44 degrees C / 111 degrees F
Temperature MQ 2 TSen     40 degrees C / 104 degrees F
Temperature MQ 2 Chip     38 degrees C / 100 degrees F
Temperature MQ 3 TSen     40 degrees C / 104 degrees F
Temperature MQ 3 Chip     40 degrees C / 104 degrees F
Power

```



```

AS-BIAS3V3-z12105      3302 mV
AS-VDD1V8-z12006      1808 mV
AS-VDD2V5-z12006      2513 mV
AS-AVDD1V0-z12004      997 mV
AS-PCIE_1V0-z12004      999 mV
AS-VDD3V3-z12004      3294 mV
AS-VDD_1V5A-z12004     1503 mV
AS-VDD_1V5B-z12004     1502 mV
AS-LU0_1V0-z12004      996 mV
AS-LU1_1V0-z12004      999 mV
AS-MQ0_1V0-z12004      997 mV
AS-MQ1_1V0-z12004      999 mV
AS-LU2_1V0-z12004      997 mV
AS-LU3_1V0-z12004      998 mV
AS-MQ2_1V0-z12004     1000 mV
AS-MQ3_1V0-z12004     1000 mV
AS-PMB_1V1-z12006     1102 mV
I2C Slave Revision      68

```

### show chassis environment fpc (MX2008 Router)

```
user@host> show chassis environment fpc
```

```

FPC 0 status:
State                               Online
Temperature Intake                  29 degrees C / 84 degrees F
Temperature Exhaust A               43 degrees C / 109 degrees F
Temperature Exhaust B               42 degrees C / 107 degrees F
Temperature XL 0 TSen                38 degrees C / 100 degrees F
Temperature XL 0 Chip                53 degrees C / 127 degrees F
Temperature XL 0 XR2 0 TSen          38 degrees C / 100 degrees F
Temperature XL 0 XR2 0 Chip          60 degrees C / 140 degrees F
Temperature XL 0 XR2 1 TSen          38 degrees C / 100 degrees F
Temperature XL 0 XR2 1 Chip          60 degrees C / 140 degrees F
Temperature XL 1 TSen                30 degrees C / 86 degrees F
Temperature XL 1 Chip                43 degrees C / 109 degrees F
Temperature XL 1 XR2 0 TSen          30 degrees C / 86 degrees F
Temperature XL 1 XR2 0 Chip          50 degrees C / 122 degrees F
Temperature XL 1 XR2 1 TSen          30 degrees C / 86 degrees F
Temperature XL 1 XR2 1 Chip          50 degrees C / 122 degrees F
Temperature XM 0 TSen                42 degrees C / 107 degrees F
Temperature XM 0 Chip                49 degrees C / 120 degrees F
Temperature XM 1 TSen                42 degrees C / 107 degrees F
Temperature XM 1 Chip                42 degrees C / 107 degrees F
Temperature XM 2 TSen                42 degrees C / 107 degrees F
Temperature XM 2 Chip                42 degrees C / 107 degrees F
Temperature XM 3 TSen                42 degrees C / 107 degrees F
Temperature XM 3 Chip                40 degrees C / 104 degrees F
Temperature PCIE Switch TSen         42 degrees C / 107 degrees F
Temperature PCIE Switch Chip         22 degrees C / 71 degrees F
Power
MPC-VDD_3V3-vt273m                 3304 mV
MPC-VDD_2V5-vt273m                 2503 mV
MPC-VDD_1V5-vt273m                 1499 mV
MPC-PCIE_0V9-vt273m                 900 mV
MPC-VDD_1V8-vt273m                 1799 mV
MPC-VDD_1V2-vt273m                 1203 mV
MPC-XM01_AVDD_1V0-vt273             1001 mV
MPC-XM23_AVDD_1V0-vt273             1001 mV
MPC-XM0_0V9-vt273m                 900 mV

```



```

MPC-XM1_0V9-vt273m      901 mV
MPC-XM2_0V9-vt273m      903 mV
MPC-XM3_0V9-vt273m      899 mV
MPC-XL0_XR0_0V9-vt273m  899 mV
MPC-XL0_XR1_0V9-vt273m  903 mV
MPC-XL0_0V9-vt273m      899 mV
MPC-XL0_AVDD_1V0-vt273m 1000 mV
MPC-XL0_VDD_1V5-vt273m  1498 mV
MPC-XL0_XR_1V2-vt273m   1200 mV
MPC-XL1_XR0_0V9-vt273m  899 mV
MPC-XL1_XR1_0V9-vt273m  899 mV
MPC-XL1_0V9-vt273m      900 mV
MPC-XL1_AVDD_1V0-vt273m 1000 mV
MPC-XL1_VDD_1V5-vt273m  1501 mV
MPC-XL1_XR_1V2-vt273m   1199 mV
MPC-PMB-1V05-ltc2978    1049 mV
MPC-PMB-1V5-ltc2978     1500 mV
MPC-PMB-2V5-ltc2978     2500 mV
MPC-PMB-3V3-ltc2978     3298 mV
I2C Slave Revision      20
FPC 1 status:
State                   Online
Temperature Intake      29 degrees C / 84 degrees F
Temperature Exhaust A   52 degrees C / 125 degrees F
Temperature Exhaust B   44 degrees C / 111 degrees F
Temperature EA0 TSen     55 degrees C / 131 degrees F
Temperature EA0 Chip     48 degrees C / 118 degrees F
Temperature EA0_XR0 TSen 55 degrees C / 131 degrees F
Temperature EA0_XR0 Chip 57 degrees C / 134 degrees F
Temperature EA0_XR1 TSen 55 degrees C / 131 degrees F
Temperature EA0_XR1 Chip 54 degrees C / 129 degrees F
Temperature EA1 TSen     55 degrees C / 131 degrees F
Temperature EA1 Chip     50 degrees C / 122 degrees F
Temperature EA1_XR0 TSen 55 degrees C / 131 degrees F
Temperature EA1_XR0 Chip 59 degrees C / 138 degrees F
Temperature EA1_XR1 TSen 55 degrees C / 131 degrees F
Temperature EA1_XR1 Chip 59 degrees C / 138 degrees F
Temperature PEX TSen     55 degrees C / 131 degrees F
Temperature PEX Chip     39 degrees C / 102 degrees F
Temperature EA2 TSen     43 degrees C / 109 degrees F
Temperature EA2 Chip     39 degrees C / 102 degrees F
Temperature EA2_XR0 TSen 43 degrees C / 109 degrees F
Temperature EA2_XR0 Chip 45 degrees C / 113 degrees F
Temperature EA2_XR1 TSen 43 degrees C / 109 degrees F
Temperature EA2_XR1 Chip 43 degrees C / 109 degrees F
Temperature EA3 TSen     43 degrees C / 109 degrees F
Temperature EA3 Chip     41 degrees C / 105 degrees F
Temperature EA3_XR0 TSen 43 degrees C / 109 degrees F
Temperature EA3_XR0 Chip 50 degrees C / 122 degrees F
Temperature EA3_XR1 TSen 43 degrees C / 109 degrees F
Temperature EA3_XR1 Chip 46 degrees C / 114 degrees F
Temperature EA0_HMC0 Logic die 61 degrees C / 141 degrees F
Temperature EA0_HMC0 DRAM botm 58 degrees C / 136 degrees F
Temperature EA0_HMC1 Logic die 62 degrees C / 143 degrees F
Temperature EA0_HMC1 DRAM botm 59 degrees C / 138 degrees F
Temperature EA0_HMC2 Logic die 59 degrees C / 138 degrees F
Temperature EA0_HMC2 DRAM botm 56 degrees C / 132 degrees F
Temperature EA1_HMC0 Logic die 67 degrees C / 152 degrees F
Temperature EA1_HMC0 DRAM botm 64 degrees C / 147 degrees F
Temperature EA1_HMC1 Logic die 65 degrees C / 149 degrees F

```



```

Temperature EA1_HMC1 DRAM botm 62 degrees C / 143 degrees F
Temperature EA1_HMC2 Logic die 63 degrees C / 145 degrees F
Temperature EA1_HMC2 DRAM botm 60 degrees C / 140 degrees F
Temperature EA2_HMC0 Logic die 51 degrees C / 123 degrees F
Temperature EA2_HMC0 DRAM botm 48 degrees C / 118 degrees F
Temperature EA2_HMC1 Logic die 55 degrees C / 131 degrees F
Temperature EA2_HMC1 DRAM botm 52 degrees C / 125 degrees F
Temperature EA2_HMC2 Logic die 52 degrees C / 125 degrees F
Temperature EA2_HMC2 DRAM botm 49 degrees C / 120 degrees F
Temperature EA3_HMC0 Logic die 51 degrees C / 123 degrees F
Temperature EA3_HMC0 DRAM botm 48 degrees C / 118 degrees F
Temperature EA3_HMC1 Logic die 52 degrees C / 125 degrees F
Temperature EA3_HMC1 DRAM botm 49 degrees C / 120 degrees F
Temperature EA3_HMC2 Logic die 52 degrees C / 125 degrees F
Temperature EA3_HMC2 DRAM botm 49 degrees C / 120 degrees F
Power
MPC-EA0_OV9-vt1527mb          950 mV
MPC-EA1_OV9-vt1527mb          950 mV
MPC-EA2_OV9-vt1527mb          925 mV
MPC-EA3_OV9-vt1527mb          924 mV
MAX20751-1V0                   1020 mV
MAX20731-OV9                    891 mV
MAX20751-EA0-AVDD1V0           1000 mV
MAX20731-EA0-1V2               1189 mV
MAX20731-EA0-HMC-1V2          1182 mV
MAX20731-EA0-OV906             899 mV
MAX20731-EA0-HMC-OV9           891 mV
MAX20751-EA1-AVDD1V0           1000 mV
MAX20731-EA1-1V2               1189 mV
MAX20731-EA1-HMC-1V2          1182 mV
MAX20731-EA1-OV906             899 mV
MAX20731-EA1-HMC-OV9           889 mV
MAX20751-EA2-AVDD1V0           1000 mV
MAX20731-EA2-1V2               1186 mV
MAX20731-EA2-HMC-1V2          1193 mV
MAX20731-EA2-OV906             899 mV
MAX20731-EA2-HMC-OV9           889 mV
MAX20751-EA3-AVDD1V0           1000 mV
MAX20731-EA3-1V2               1186 mV
MAX20731-EA3-HMC-1V2          1193 mV
MAX20731-EA3-OV906             897 mV
MAX20731-EA3-HMC-OV9           894 mV
MAX20731-3V3                   3268 mV
UCD9090_0-CH_1-EA0_PLL_        1010 mV
UCD9090_0-CH_2-EA0_1V04        1038 mV
UCD9090_0-CH_3-EA0_2V5         2499 mV
UCD9090_0-CH_4-EA0_1V5         1494 mV
UCD9090_0-CH_5-EA1_PLL_        1012 mV
UCD9090_0-CH_6-EA1_1V04        1038 mV
UCD9090_0-CH_7-EA1_2V5         2497 mV
UCD9090_0-CH_8-EA1_1V5         1498 mV
UCD9090_0-CH_9-VDD_1V8         1804 mV
UCD9090_0-CH_10-VDD_2V5        2499 mV
UCD9090_1-CH_1-EA2_PLL_        1017 mV
UCD9090_1-CH_2-EA2_1V04        1041 mV
UCD9090_1-CH_3-EA2_2V5         2499 mV
UCD9090_1-CH_4-EA2_1V5         1503 mV
UCD9090_1-CH_5-EA3_PLL_        1015 mV
UCD9090_1-CH_6-EA3_1V04        1048 mV
UCD9090_1-CH_7-EA3_2V5         2499 mV

```



```

UCD9090_1-CH_8-EA3_1V5      1500 mV
UCD9090_1-CH_9-VDD_1V5      1497 mV
UCD9090_1-CH_10-VDD_1V2     1216 mV
PMB PVCC 0.7V - 1.05V       802 mV
PMB PVNN 0V - 1.02V         976 mV
PMB 1.0V                     1002 mV
PMB 1.1V                     1076 mV
PMB 1.35V                    1347 mV
PMB VDDQ 1.5V               1504 mV
PMB 1.8V                     1804 mV
PMB VDD 3.3V                3292 mV
PMB BIAS 5.0V               5008 mV
PMB USB 5.0V                5000 mV
PMB 12V                     10866 mV
I2C Slave Revision          112
FPC 7 status:
State                        Online
Temperature Intake           31 degrees C / 87 degrees F
Temperature Exhaust A        46 degrees C / 114 degrees F
Temperature Exhaust B        38 degrees C / 100 degrees F
Temperature QX 0 TSen         49 degrees C / 120 degrees F
Temperature QX 0 Chip         52 degrees C / 125 degrees F
Temperature LU 0 TCAM TSen    49 degrees C / 120 degrees F
Temperature LU 0 TCAM Chip    52 degrees C / 125 degrees F
Temperature LU 0 TSen         49 degrees C / 120 degrees F
Temperature LU 0 Chip         51 degrees C / 123 degrees F
Temperature MQ 0 TSen         49 degrees C / 120 degrees F
Temperature MQ 0 Chip         55 degrees C / 131 degrees F
Temperature QX 1 TSen         41 degrees C / 105 degrees F
Temperature QX 1 Chip         42 degrees C / 107 degrees F
Temperature LU 1 TCAM TSen    41 degrees C / 105 degrees F
Temperature LU 1 TCAM Chip    43 degrees C / 109 degrees F
Temperature LU 1 TSen         41 degrees C / 105 degrees F
Temperature LU 1 Chip         46 degrees C / 114 degrees F
Temperature MQ 1 TSen         41 degrees C / 105 degrees F
Temperature MQ 1 Chip         47 degrees C / 116 degrees F
Power
MPC-BIAS3V3-z12105          3302 mV
MPC-VDD3V3-z12006           3307 mV
MPC-VDD2V5-z12006           2505 mV
MPC-TCAM_1V0-z12004          1000 mV
MPC-AVDD1V0-z12006           1006 mV
MPC-VDD1V8-z12006           1800 mV
MPC-PCIE_1V0-z12006          1000 mV
MPC-LU0_1V0-z12004           997 mV
MPC-MQ0_1V0-z12004           999 mV
MPC-VDD_1V5-z12004           1495 mV
MPC-PMB_1V1-z12006           1096 mV
MPC-9VA-BMR453               9051 mV
MPC-9VB-BMR453               8990 mV
MPC-PMB_1V2-z12106           1200 mV
MPC-LU1_1V0-z12004           997 mV
MPC-MQ1_1V0-z12004           998 mV
MPC-QXM0_1V0-z12006          1000 mV
MPC-QXM1_1V0-z12006          999 mV
I2C Slave Revision          70

```

### show chassis environment fpc (MX240 Router)

```
user@host> show chassis environment fpc
```



## FPC 1 status:

State	Online
Temperature Intake	34 degrees C / 93 degrees F
Temperature Exhaust A	39 degrees C / 102 degrees F
Temperature Exhaust B	53 degrees C / 127 degrees F
Temperature I3 0 TSensor	51 degrees C / 123 degrees F
Temperature I3 0 Chip	54 degrees C / 129 degrees F
Temperature I3 1 TSensor	50 degrees C / 122 degrees F
Temperature I3 1 Chip	53 degrees C / 127 degrees F
Temperature I3 2 TSensor	48 degrees C / 118 degrees F
Temperature I3 2 Chip	51 degrees C / 123 degrees F
Temperature I3 3 TSensor	45 degrees C / 113 degrees F
Temperature I3 3 Chip	48 degrees C / 118 degrees F
Temperature IA 0 TSensor	45 degrees C / 113 degrees F
Temperature IA 0 Chip	45 degrees C / 113 degrees F
Temperature IA 1 TSensor	45 degrees C / 113 degrees F
Temperature IA 1 Chip	49 degrees C / 120 degrees F
Power	
1.5 V	1492 mV
2.5 V	2507 mV
3.3 V	3306 mV
1.8 V PFE 0	1801 mV
1.8 V PFE 1	1804 mV
1.8 V PFE 2	1798 mV
1.8 V PFE 3	1798 mV
1.2 V PFE 0	1169 mV
1.2 V PFE 1	1189 mV
1.2 V PFE 2	1182 mV
1.2 V PFE 3	1176 mV

I2C Slave Revision	42
--------------------	----

## FPC 2 status:

State	Online
Temperature Intake	33 degrees C / 91 degrees F
Temperature Exhaust A	41 degrees C / 105 degrees F
Temperature Exhaust B	53 degrees C / 127 degrees F
Temperature I3 0 TSensor	53 degrees C / 127 degrees F
Temperature I3 0 Chip	58 degrees C / 136 degrees F
Temperature I3 1 TSensor	52 degrees C / 125 degrees F
Temperature I3 1 Chip	56 degrees C / 132 degrees F
Temperature I3 2 TSensor	50 degrees C / 122 degrees F
Temperature I3 2 Chip	52 degrees C / 125 degrees F
Temperature I3 3 TSensor	46 degrees C / 114 degrees F
Temperature I3 3 Chip	49 degrees C / 120 degrees F
Temperature IA 0 TSensor	51 degrees C / 123 degrees F
Temperature IA 0 Chip	49 degrees C / 120 degrees F
Temperature IA 1 TSensor	48 degrees C / 118 degrees F
Temperature IA 1 Chip	53 degrees C / 127 degrees F
Power	
1.5 V	1492 mV
2.5 V	2445 mV
3.3 V	3293 mV
1.8 V PFE 0	1827 mV
1.8 V PFE 1	1775 mV
1.8 V PFE 2	1788 mV
1.8 V PFE 3	1798 mV
1.2 V PFE 0	1250 mV
1.2 V PFE 1	1234 mV
1.2 V PFE 2	1231 mV
1.2 V PFE 3	1192 mV

I2C Slave Revision	42
--------------------	----



**show chassis environment fpc (MX480 Router)**

```
user@host> show chassis environment fpc
```

```
FPC 1 status:
State                Online
Temperature Intake    36 degrees C / 96 degrees F
Temperature Exhaust A 41 degrees C / 105 degrees F
Temperature Exhaust B 55 degrees C / 131 degrees F
Temperature I3 0 TSensor 55 degrees C / 131 degrees F
Temperature I3 0 Chip  57 degrees C / 134 degrees F
Temperature I3 1 TSensor 53 degrees C / 127 degrees F
Temperature I3 1 Chip  53 degrees C / 127 degrees F
Temperature I3 2 TSensor 52 degrees C / 125 degrees F
Temperature I3 2 Chip  49 degrees C / 120 degrees F
Temperature I3 3 TSensor 47 degrees C / 116 degrees F
Temperature I3 3 Chip  47 degrees C / 116 degrees F
Temperature IA 0 TSensor 54 degrees C / 129 degrees F
Temperature IA 0 Chip  58 degrees C / 136 degrees F
Temperature IA 1 TSensor 48 degrees C / 118 degrees F
Temperature IA 1 Chip  53 degrees C / 127 degrees F
Power
  1.5 V                1479 mV
  2.5 V                2542 mV
  3.3 V                3319 mV
  1.8 V PFE 0          1811 mV
  1.8 V PFE 1          1804 mV
  1.8 V PFE 2          1804 mV
  1.8 V PFE 3          1814 mV
  1.2 V PFE 0          1192 mV
  1.2 V PFE 1          1202 mV
  1.2 V PFE 2          1205 mV
  1.2 V PFE 3          1189 mV
I2C Slave Revision    40
```

**show chassis environment fpc (MX960 Router MPC10E-15C-MRATE)**

```
user@router> show chassis environment fpc 8
```

```
FPC 8 status:
State                Online
Temperature Intake    37 degrees C / 98 degrees F
Temperature Exhaust A 50 degrees C / 122 degrees F
Temperature Exhaust B 56 degrees C / 132 degrees F
Temperature ZT0 Chip  83 degrees C / 181 degrees F
Temperature ZT1 Chip  80 degrees C / 176 degrees F
Temperature ZT2 Chip  81 degrees C / 177 degrees F
Temperature PCIE_SW Chip 64 degrees C / 147 degrees F
Temperature ZT0 TestMacro 73 degrees C / 163 degrees F
Temperature ZT0 hbmio_grp3 74 degrees C / 165 degrees F
```



Temperature ZT0 hbmio_grp0	76 degrees C / 168 degrees F
Temperature ZT0 gumem1	78 degrees C / 172 degrees F
Temperature ZT0 llm	80 degrees C / 176 degrees F
Temperature ZT0 wanio_sd	78 degrees C / 172 degrees F
Temperature ZT0 fabio_sd	84 degrees C / 183 degrees F
Temperature ZT0 flexmem	84 degrees C / 183 degrees F
Temperature ZT1 TestMacro	70 degrees C / 158 degrees F
Temperature ZT1 hbmio_grp3	71 degrees C / 159 degrees F
Temperature ZT1 hbmio_grp0	74 degrees C / 165 degrees F
Temperature ZT1 gumem1	75 degrees C / 167 degrees F
Temperature ZT1 llm	78 degrees C / 172 degrees F
Temperature ZT1 wanio_sd	76 degrees C / 168 degrees F
Temperature ZT1 fabio_sd	78 degrees C / 172 degrees F
Temperature ZT1 flexmem	82 degrees C / 179 degrees F
Temperature ZT2 TestMacro	71 degrees C / 159 degrees F
Temperature ZT2 hbmio_grp3	72 degrees C / 161 degrees F
Temperature ZT2 hbmio_grp0	75 degrees C / 167 degrees F
Temperature ZT2 gumem1	76 degrees C / 168 degrees F
Temperature ZT2 llm	78 degrees C / 172 degrees F
Temperature ZT2 wanio_sd	78 degrees C / 172 degrees F
Temperature ZT2 fabio_sd	80 degrees C / 176 degrees F
Temperature ZT2 flexmem	76 degrees C / 168 degrees F
Temperature ZT0 HBMO	74 degrees C / 165 degrees F
Temperature ZT0 HBM1	74 degrees C / 165 degrees F
Temperature ZT1 HBMO	74 degrees C / 165 degrees F
Temperature ZT1 HBM1	75 degrees C / 167 degrees F
Temperature ZT2 HBMO	73 degrees C / 163 degrees F
Temperature ZT2 HBM1	73 degrees C / 163 degrees F
Temperature FAB RT1.0	73 degrees C / 163 degrees F
Temperature FAB RT2.0	75 degrees C / 167 degrees F



Temperature FAB RT3.0	73 degrees C / 163 degrees F
Temperature FAB RT4.0	70 degrees C / 158 degrees F
Temperature FAB RT5.0	67 degrees C / 152 degrees F
Temperature FAB RT6.0	67 degrees C / 152 degrees F
Temperature FAB RT7.0	65 degrees C / 149 degrees F
Temperature FAB RT8.0	66 degrees C / 150 degrees F
Temperature WAN RT9.0	64 degrees C / 147 degrees F
Temperature WAN RT9.1	62 degrees C / 143 degrees F
Temperature WAN RT10.0	65 degrees C / 149 degrees F
Temperature WAN RT10.1	63 degrees C / 145 degrees F
Temperature WAN RT11.0	51 degrees C / 123 degrees F
Temperature WAN RT11.1	49 degrees C / 120 degrees F
Temperature PIM4820 T1	72 degrees C / 161 degrees F
Temperature BMR456-12V-BRICK-A T1	83 degrees C / 181 degrees F
Temperature BMR456-12V-BRICK-B T1	91 degrees C / 195 degrees F
Temperature MAX20730-ZT0-AVDDH T1	72 degrees C / 161 degrees F
Temperature MAX20730-ZT0-HBM-VDDQ T1	64 degrees C / 147 degrees F
Temperature MAX20730-ZT0-HBM-VDDC T1	65 degrees C / 149 degrees F
Temperature MAX20730-ZT1-AVDDH T1	65 degrees C / 149 degrees F
Temperature MAX20730-ZT1-HBM-VDDQ T1	60 degrees C / 140 degrees F
Temperature MAX20730-ZT1-HBM-VDDC T1	57 degrees C / 134 degrees F
Temperature MAX20730-ZT2-AVDDH T1	65 degrees C / 149 degrees F
Temperature MAX20730-ZT2-HBM-VDDQ T1	58 degrees C / 136 degrees F
Temperature MAX20730-ZT2-HBM-VDDC T1	55 degrees C / 131 degrees F
Temperature CPU0_PMB	61 degrees C / 141 degrees F
Temperature CPU7_PMB	61 degrees C / 141 degrees F
Temperature DDR4 A	38 degrees C / 100 degrees F
Temperature DDR4 B	37 degrees C / 98 degrees F
Power	
PIM4820	56967 mV
BMR456-12V-BRICK-A	12016 mV
BMR456-12V-BRICK-B	12039 mV



MAX20743-RT01-DVDD	724 mV
MAX20743-RT234-DVDD	724 mV
MAX20743-RT567-DVDD	724 mV
MAX20754-ZT0-VDD	750 mV
MAX20754-ZT0-VDDM	799 mV
MAX20743-ZT0-AVDD	904 mV
MAX20730-ZT0-AVDDH	1103 mV
MAX20730-ZT0-HBM-VDDQ	1198 mV
MAX20730-ZT0-HBM-VDDC	1202 mV
MAX20730-VDD-1V25	1246 mV
MAX20754-ZT1-VDD	724 mV
MAX20754-ZT1-VDDM	800 mV
MAX20743-ZT1-AVDD	904 mV
MAX20730-ZT1-AVDDH	1103 mV
MAX20730-ZT1-HBM-VDDQ	1202 mV
MAX20730-ZT1-HBM-VDDC	1198 mV
MAX20730-PCIE-0V9	901 mV
MAX20754-ZT2-VDD	724 mV
MAX20754-ZT2-VDDM	799 mV
MAX20743-ZT2-AVDD	904 mV
MAX20730-ZT2-AVDDH	1103 mV
MAX20730-ZT2-HBM-VDDQ	1198 mV
MAX20730-ZT2-HBM-VDDC	1198 mV
MAX20730-VDD3V3	3308 mV
MAX20754-WAN-VDD3V3	3301 mV
MAX20754-WAN-DVDD0V8	799 mV
MAX20743-WAN-VDD1V0A	1003 mV
MAX20743-WAN-AVDD0V8	800 mV
MAX20743-WAN-VDD1V0C	1003 mV
TPS53631-1V2-VDDQ-PMB	1225 mV
TPS53641-VCCIN-PMB	1770 mV
TPS53641-VCCSBUS-PMB	1040 mV
MAX20730-BIAS3P30-PMB	3308 mV
MAX20730-BIAS5P0-PMB	5063 mV
MAX20730-VPP-V2P5-PMB	2503 mV
MAX20730-VDD1V2	1195 mV
MAX20730-VDD1V5	1496 mV
MAX20730-VDD1V8	1799 mV
MAX20730-VDD2V5	2511 mV
MAX20754-RT-AVDD-0V8	800 mV
MAX20743-XGE-VDD-AVS	1012 mV
PMB VCC1P05_PCH_SW	1048 mV
PMB VCC1P3	1294 mV
PMB VCC1P5	1485 mV
PMB VCC1P7	1705 mV
PMB DDR4_VPP	2519 mV
PMB VCC3P3	3336 mV
PMB VCC3P3_PCH	3332 mV
I2C Slave Revision	124

### show chassis environment fpc (MX960 Router)

```
user@host> show chassis environment fpc
```

```
FPC 5 status:
```

State	Online
Temperature Intake	27 degrees C / 80 degrees F
Temperature Exhaust A	34 degrees C / 93 degrees F
Temperature Exhaust B	40 degrees C / 104 degrees F
Temperature I3 0 TSensor	39 degrees C / 102 degrees F



```

Temperature I3 0 Chip      41 degrees C / 105 degrees F
Temperature I3 1 TSensor   38 degrees C / 100 degrees F
Temperature I3 1 Chip      37 degrees C / 98 degrees F
Temperature I3 2 TSensor   37 degrees C / 98 degrees F
Temperature I3 2 Chip      34 degrees C / 93 degrees F
Temperature I3 3 TSensor   32 degrees C / 89 degrees F
Temperature I3 3 Chip      33 degrees C / 91 degrees F
Temperature IA 0 TSensor   39 degrees C / 102 degrees F
Temperature IA 0 Chip      44 degrees C / 111 degrees F
Temperature IA 1 TSensor   36 degrees C / 96 degrees F
Temperature IA 1 Chip      44 degrees C / 111 degrees F
Power
  1.5 V                    1479 mV
  2.5 V                    2523 mV
  3.3 V                    3254 mV
  1.8 V PFE 0              1798 mV
  1.8 V PFE 1              1798 mV
  1.8 V PFE 2              1807 mV
  1.8 V PFE 3              1791 mV
  1.2 V PFE 0              1173 mV
  1.2 V PFE 1              1179 mV
  1.2 V PFE 2              1179 mV
  1.2 V PFE 3              1185 mV
I2C Slave Revision        6
FPC 6 status:
State                     Online
Temperature Intake         25 degrees C / 77 degrees F
Temperature Exhaust A      38 degrees C / 100 degrees F
Temperature Exhaust B      38 degrees C / 100 degrees F
Temperature I3 0 TSensor   40 degrees C / 104 degrees F
Temperature I3 0 Chip      40 degrees C / 104 degrees F
Temperature I3 1 TSensor   40 degrees C / 104 degrees F
Temperature I3 1 Chip      38 degrees C / 100 degrees F
Temperature I3 2 TSensor   37 degrees C / 98 degrees F
Temperature I3 2 Chip      32 degrees C / 89 degrees F
Temperature I3 3 TSensor   34 degrees C / 93 degrees F
Temperature I3 3 Chip      33 degrees C / 91 degrees F
Temperature IA 0 TSensor   45 degrees C / 113 degrees F
Temperature IA 0 Chip      47 degrees C / 116 degrees F
Temperature IA 1 TSensor   37 degrees C / 98 degrees F
Temperature IA 1 Chip      42 degrees C / 107 degrees F
Power
  1.5 V                    1485 mV
  2.5 V                    2510 mV
  3.3 V                    3332 mV
  1.8 V PFE 0              1801 mV
  1.8 V PFE 1              1814 mV
  1.8 V PFE 2              1804 mV
  1.8 V PFE 3              1820 mV
  1.2 V PFE 0              1192 mV
  1.2 V PFE 1              1189 mV
  1.2 V PFE 2              1202 mV
  1.2 V PFE 3              1156 mV
I2C Slave Revision        40

```

**show chassis environment fpc (MX480 Router with 100-Gigabit Ethernet CFP)**

```
user@host> show chassis environment fpc
```



## FPC 0 status:

State	Online
Temperature Intake	32 degrees C / 89 degrees F
Temperature Exhaust A	39 degrees C / 102 degrees F
Temperature Exhaust B	37 degrees C / 98 degrees F
Temperature QX 0 TSen	44 degrees C / 111 degrees F
Temperature QX 0 Chip	48 degrees C / 118 degrees F
Temperature LU 0 TCAM TSen	44 degrees C / 111 degrees F
Temperature LU 0 TCAM Chip	47 degrees C / 116 degrees F
Temperature LU 0 TSen	44 degrees C / 111 degrees F
Temperature LU 0 Chip	48 degrees C / 118 degrees F
Temperature MQ 0 TSen	44 degrees C / 111 degrees F
Temperature MQ 0 Chip	47 degrees C / 116 degrees F
Power	
MPC-BIAS3V3-z12105	3297 mV
MPC-VDD3V3-z12105	3306 mV
MPC-VDD2V5-z12105	2498 mV
MPC-TCAM_1V0-z12004	999 mV
MPC-AVDD1V0-z12006	999 mV
MPC-VDD1V8-z12006	1796 mV
MPC-PCIE_1V0-z12006	1002 mV
MPC-LU0_1V0-z12004	997 mV
MPC-MQ0_1V0-z12004	995 mV
MPC-VDD_1V5-z12004	1496 mV
MPC-PMB_1V1-z12006	1094 mV
MPC-9VA-BMR453	9054 mV
MPC-9VB-BMR453	9037 mV
MPC-PMB_1V2-z12106	1191 mV
MPC-QXM0_1V0-z12006	1000 mV
I2C Slave Revision	66

## FPC 1 status:

State	Online
Temperature Intake	35 degrees C / 95 degrees F
Temperature Exhaust A	50 degrees C / 122 degrees F
Temperature Exhaust B	56 degrees C / 132 degrees F
Temperature LU 0 TSen	46 degrees C / 114 degrees F
Temperature LU 0 Chip	59 degrees C / 138 degrees F
Temperature LU 1 TSen	46 degrees C / 114 degrees F
Temperature LU 1 Chip	45 degrees C / 113 degrees F
Temperature LU 2 TSen	46 degrees C / 114 degrees F
Temperature LU 2 Chip	60 degrees C / 140 degrees F
Temperature LU 3 TSen	46 degrees C / 114 degrees F
Temperature LU 3 Chip	71 degrees C / 159 degrees F
Temperature XM 0 TSen	46 degrees C / 114 degrees F
Temperature XM 0 Chip	-18 degrees C / 0 degrees F
Temperature XF 0 TSen	46 degrees C / 114 degrees F
Temperature XF 0 Chip	76 degrees C / 168 degrees F
Power	
MPC-BIAS3V3-z12105	3292 mV
MPC-VDD3V3-z16100	3303 mV
MPC-VDD2V5-z16100	2501 mV
MPC-VDD1V8-z12004	1801 mV
MPC-AVDD1V0-z12006	996 mV
MPC-VDD1V2-z16100	1199 mV
MPC-VDD1V5A-z12004	1493 mV
MPC-VDD1V5B-z12004	1498 mV
MPC-XF_0V9-z12006	996 mV
MPC-PCIE_1V0-z16100	1000 mV
MPC-LU0_1V0-z12004	994 mV
MPC-LU1_1V0-z12004	994 mV



```

MPC-LU2_1V0-z12004      992 mV
MPC-LU3_1V0-z12004      993 mV
MPC-12VA-BMR453         12003 mV
MPC-12VB-BMR453         12043 mV
MPC-PMB_1V1-z12006      1091 mV
MPC-PMB_1V2-z12106      1196 mV
MPC-XM_0V9-vt273m       899 mV
I2C Slave Revision      106

```

### show chassis environment fpc (MX240, MX480, MX960 with Application Services Modular Line Card)

```
user@host>show chassis environment fpc 1
```

```

FPC 1 status:
State                               Online
Temperature Intake                  36 degrees C / 96 degrees F
Temperature Exhaust A               39 degrees C / 102 degrees F
Temperature LU TSen                  52 degrees C / 125 degrees F
Temperature LU Chip                  54 degrees C / 129 degrees F
Temperature XM TSen                  52 degrees C / 125 degrees F
Temperature XM Chip                  60 degrees C / 140 degrees F
Temperature PCIe TSen               52 degrees C / 125 degrees F
Temperature PCIe Chip               69 degrees C / 156 degrees F
Power
MPC-BIAS3V3-z12106                 3302 mV
MPC-VDD3V3-z16100                  3325 mV
MPC-AVDD1V0-z16100                 1007 mV
MPC-PCIE_1V0-z16100                 904 mV
MPC-LU0_1V0-z12004                 996 mV
MPC-VDD_1V5-z12004                 1498 mV
MPC-12VA-BMR453                    11733 mV
MPC-12VB-BMR453                    11728 mV
MPC-XM_0V9-vt273m                  900 mV
I2C Slave Revision                  81

```

### show chassis environment fpc (MX10003 Router)

```
user@host> show chassis environment fpc
```

```

FPC 0 status:
State                               Online
FPC 0 Intake Temp Sensor            29 degrees C / 84 degrees F
FPC 0 Exhaust-A Temp Sensor          56 degrees C / 132 degrees F
FPC 0 Exhaust-B Temp Sensor          44 degrees C / 111 degrees F
FPC 0 EA0 Chip                       58 degrees C / 136 degrees F
FPC 0 EA0-XR0 Chip                   61 degrees C / 141 degrees F
FPC 0 EA0-XR1 Chip                   62 degrees C / 143 degrees F
FPC 0 EA1 Chip                       67 degrees C / 152 degrees F
FPC 0 EA1-XR0 Chip                   72 degrees C / 161 degrees F
FPC 0 EA1-XR1 Chip                   72 degrees C / 161 degrees F
FPC 0 PEX Chip                       77 degrees C / 170 degrees F
FPC 0 EA2 Chip                       48 degrees C / 118 degrees F
FPC 0 EA2-XR0 Chip                   54 degrees C / 129 degrees F
FPC 0 EA2-XR1 Chip                   56 degrees C / 132 degrees F
FPC 0 PF Chip                       68 degrees C / 154 degrees F
FPC 0 EA0_HMC0 Logic die             72 degrees C / 161 degrees F
FPC 0 EA0_HMC0 DRAM botm            69 degrees C / 156 degrees F
FPC 0 EA0_HMC1 Logic die             71 degrees C / 159 degrees F

```



FPC 0 EA0_HMC1 DRAM botm	68 degrees C / 154 degrees F
FPC 0 EA0_HMC2 Logic die	75 degrees C / 167 degrees F
FPC 0 EA0_HMC2 DRAM botm	72 degrees C / 161 degrees F
FPC 0 EA1_HMC0 Logic die	81 degrees C / 177 degrees F
FPC 0 EA1_HMC0 DRAM botm	78 degrees C / 172 degrees F
FPC 0 EA1_HMC1 Logic die	80 degrees C / 176 degrees F
FPC 0 EA1_HMC1 DRAM botm	77 degrees C / 170 degrees F
FPC 0 EA1_HMC2 Logic die	82 degrees C / 179 degrees F
FPC 0 EA1_HMC2 DRAM botm	79 degrees C / 174 degrees F
FPC 0 EA2_HMC0 Logic die	60 degrees C / 140 degrees F
FPC 0 EA2_HMC0 DRAM botm	57 degrees C / 134 degrees F
FPC 0 EA2_HMC1 Logic die	61 degrees C / 141 degrees F
FPC 0 EA2_HMC1 DRAM botm	58 degrees C / 136 degrees F
FPC 0 EA2_HMC2 Logic die	63 degrees C / 145 degrees F
FPC 0 EA2_HMC2 DRAM botm	60 degrees C / 140 degrees F

## Power

LTC3887-PF-VDD0V9-RAIL	898 mV
LTC3887-PF-VDD0V9-DEV0-	898 mV
LTC3887-PF-VDD0V9-DEV0-	900 mV
LTC3887-PF-VDD0V9-DEV1-	899 mV
LTC3887-PF-VDD0V9-DEV1-	901 mV
LTC3887-PF-AVDD1V0-RAIL	998 mV
LTC3887-PF-AVDD1V0-CH0	998 mV
LTC3887-PF-AVDD1V0-CH1	999 mV
LTC3887-ETHSW-VDD1V0	1000 mV
LTC3887-VDD2V5	2499 mV
LTC3887-PCIE-VDD0V9	899 mV
LTC3887-V1P0	999 mV
LTC3887-PHY-VDD1V0-A	999 mV
LTC3887-3V3	3300 mV
LTC3887-VDD1V8	1799 mV
UCD9090_0-CH_1-EA0_PLL_	1005 mV
UCD9090_0-CH_2-EA0_1V4	1049 mV
UCD9090_0-CH_3-EA0_2V5	2499 mV
UCD9090_0-CH_4-EA0_1V5	1499 mV
UCD9090_0-CH_5-EA1_PLL_	999 mV
UCD9090_0-CH_6-EA1_1V4	1037 mV
UCD9090_0-CH_7-EA1_2V5	2499 mV
UCD9090_0-CH_8-EA1_1V5	1510 mV
UCD9090_0-CH_9-PVCC	797 mV
UCD9090_0-CH_10-PVNN	991 mV
UCD9090_1-CH_1-EA2_PLL_	1008 mV
UCD9090_1-CH_2-EA2_1V4	1009 mV
UCD9090_1-CH_3-EA2_2V5	2499 mV
UCD9090_1-CH_4-EA2_1V5	1513 mV
UCD9090_1-CH_5-1V0_PFP1	1009 mV
UCD9090_1-CH_6-V1P1	1075 mV
UCD9090_1-CH_7-V1P5	1531 mV
UCD9090_1-CH_8-V1P35	1359 mV
UCD9090_1-CH_9-VDD1V5	1511 mV
UCD9090_1-CH_10-VDD1V2	1210 mV
LTC3887-EA0-VDD0V9-RAIL	949 mV
LTC3887-EA0-VDD0V9-DEV0	949 mV
LTC3887-EA0-VDD0V9-DEV0	951 mV
LTC3887-EA0-VDD0V9-DEV1	949 mV
LTC3887-EA0-VDD0V9-DEV1	951 mV
LTC3887-EA0-VDD0V9R2-RA	947 mV
LTC3887-EA0-VDD0V9R2-CH	947 mV
LTC3887-EA0-VDD0V9R2-CH	949 mV
LTC3887-EA0-VDD1V0-RAIL	999 mV



```

LTC3887-EA0-VDD1V0-CH0      999 mV
LTC3887-EA0-VDD1V0-CH1      1001 mV
LTC3887-EA0-XR-VDD0V9        900 mV
LTC3887-EA0-XR-VDD1V2        1199 mV
LTC3887-EA0-HM1-VDD0V9        899 mV
LTC3887-EA0-HM-VDD1V2        1200 mV
LTC3887-EA0-HM-VDDM1V2        1199 mV
LTC3887-EA1-VDD0V9-RAIL       949 mV
LTC3887-EA1-VDD0V9-DEV0       952 mV
LTC3887-EA1-VDD0V9-DEV0       952 mV
LTC3887-EA1-VDD0V9-DEV1       951 mV
LTC3887-EA1-VDD0V9-DEV1       951 mV
LTC3887-EA1-VDD0V9R2-RA       948 mV
LTC3887-EA1-VDD0V9R2-CH       948 mV
LTC3887-EA1-VDD0V9R2-CH       950 mV
LTC3887-EA1-VDD1V0-RAIL       1000 mV
LTC3887-EA1-VDD1V0-CH0        1000 mV
LTC3887-EA1-VDD1V0-CH1        1001 mV
I2C Slave Revision            13
FPC 1 status:
State                          Online
FPC 1 Intake Temp Sensor      27 degrees C / 80 degrees F
FPC 1 Exhaust-A Temp Sensor60 degrees C / 140 degrees F
FPC 1 Exhaust-B Temp Sensor46 degrees C / 114 degrees F
FPC 1 EA0 Chip                 63 degrees C / 145 degrees F
FPC 1 EA0-XR0 Chip             67 degrees C / 152 degrees F
FPC 1 EA0-XR1 Chip             68 degrees C / 154 degrees F
FPC 1 EA1 Chip                 70 degrees C / 158 degrees F
FPC 1 EA1-XR0 Chip             75 degrees C / 167 degrees F
FPC 1 EA1-XR1 Chip             75 degrees C / 167 degrees F
FPC 1 PEX Chip                 89 degrees C / 192 degrees F
FPC 1 EA2 Chip                 49 degrees C / 120 degrees F
FPC 1 EA2-XR0 Chip             53 degrees C / 127 degrees F
FPC 1 EA2-XR1 Chip             56 degrees C / 132 degrees F
FPC 1 PF Chip                  71 degrees C / 159 degrees F
FPC 1 EA0_HMC0 Logic die       74 degrees C / 165 degrees F
FPC 1 EA0_HMC0 DRAM botm       71 degrees C / 159 degrees F
FPC 1 EA0_HMC1 Logic die       78 degrees C / 172 degrees F
FPC 1 EA0_HMC1 DRAM botm       75 degrees C / 167 degrees F
FPC 1 EA0_HMC2 Logic die       78 degrees C / 172 degrees F
FPC 1 EA0_HMC2 DRAM botm       75 degrees C / 167 degrees F
FPC 1 EA1_HMC0 Logic die       84 degrees C / 183 degrees F
FPC 1 EA1_HMC0 DRAM botm       81 degrees C / 177 degrees F
FPC 1 EA1_HMC1 Logic die       82 degrees C / 179 degrees F
FPC 1 EA1_HMC1 DRAM botm       79 degrees C / 174 degrees F
FPC 1 EA1_HMC2 Logic die       85 degrees C / 185 degrees F
FPC 1 EA1_HMC2 DRAM botm       82 degrees C / 179 degrees F
FPC 1 EA2_HMC0 Logic die       62 degrees C / 143 degrees F
FPC 1 EA2_HMC0 DRAM botm       59 degrees C / 138 degrees F
FPC 1 EA2_HMC1 Logic die       60 degrees C / 140 degrees F
FPC 1 EA2_HMC1 DRAM botm       57 degrees C / 134 degrees F
FPC 1 EA2_HMC2 Logic die       65 degrees C / 149 degrees F
FPC 1 EA2_HMC2 DRAM botm       62 degrees C / 143 degrees F
Power
LTC3887-PF-VDD0V9-RAIL       899 mV
LTC3887-PF-VDD0V9-DEV0-      899 mV
LTC3887-PF-VDD0V9-DEV0-      901 mV
LTC3887-PF-VDD0V9-DEV1-      899 mV
LTC3887-PF-VDD0V9-DEV1-      901 mV
LTC3887-PF-AVDD1V0-RAIL      998 mV

```



LTC3887-PF-AVDD1V0-CH0	998 mV
LTC3887-PF-AVDD1V0-CH1	999 mV
LTC3887-ETHSW-VDD1V0	999 mV
LTC3887-VDD2V5	2499 mV
LTC3887-PCIE-VDD0V9	900 mV
LTC3887-V1P0	1000 mV
LTC3887-PHY-VDD1V0-A	1000 mV
LTC3887-3V3	3300 mV
LTC3887-VDD1V8	1799 mV
UCD9090_0-CH_1-EA0_PLL_	1004 mV
UCD9090_0-CH_2-EA0_1V4	1004 mV
UCD9090_0-CH_3-EA0_2V5	2499 mV
UCD9090_0-CH_4-EA0_1V5	1511 mV
UCD9090_0-CH_5-EA1_PLL_	999 mV
UCD9090_0-CH_6-EA1_1V4	1008 mV
UCD9090_0-CH_7-EA1_2V5	2499 mV
UCD9090_0-CH_8-EA1_1V5	1510 mV
UCD9090_0-CH_9-PVCC	839 mV
UCD9090_0-CH_10-PVNN	1016 mV
UCD9090_1-CH_1-EA2_PLL_	1011 mV
UCD9090_1-CH_2-EA2_1V4	1046 mV
UCD9090_1-CH_3-EA2_2V5	2499 mV
UCD9090_1-CH_4-EA2_1V5	1501 mV
UCD9090_1-CH_5-1V0_PFP_L	1000 mV
UCD9090_1-CH_6-V1P1	1037 mV
UCD9090_1-CH_7-V1P5	1530 mV
UCD9090_1-CH_8-V1P35	1360 mV
UCD9090_1-CH_9-VDD1V5	1513 mV
UCD9090_1-CH_10-VDD1V2	1217 mV
LTC3887-EA0-VDD0V9-RAIL	949 mV
LTC3887-EA0-VDD0V9-DEV0	949 mV
LTC3887-EA0-VDD0V9-DEV0	951 mV
LTC3887-EA0-VDD0V9-DEV1	949 mV
LTC3887-EA0-VDD0V9-DEV1	952 mV
LTC3887-EA0-VDD0V9R2-RA	947 mV
LTC3887-EA0-VDD0V9R2-CH	947 mV
LTC3887-EA0-VDD0V9R2-CH	949 mV
LTC3887-EA0-VDD1V0-RAIL	1000 mV
LTC3887-EA0-VDD1V0-CH0	1000 mV
LTC3887-EA0-VDD1V0-CH1	1001 mV
LTC3887-EA0-XR-VDD0V9	899 mV
LTC3887-EA0-XR-VDD1V2	1200 mV
LTC3887-EA0-HM1-VDD0V9	899 mV
LTC3887-EA0-HM-VDD1V2	1199 mV
LTC3887-EA0-HM-VDDM1V2	1199 mV
LTC3887-EA1-VDD0V9-RAIL	948 mV
LTC3887-EA1-VDD0V9-DEV0	950 mV
LTC3887-EA1-VDD0V9-DEV0	950 mV
LTC3887-EA1-VDD0V9-DEV1	951 mV
LTC3887-EA1-VDD0V9-DEV1	951 mV
LTC3887-EA1-VDD0V9R2-RA	947 mV
LTC3887-EA1-VDD0V9R2-CH	947 mV
LTC3887-EA1-VDD0V9R2-CH	949 mV
LTC3887-EA1-VDD1V0-RAIL	1000 mV
LTC3887-EA1-VDD1V0-CH0	1000 mV
LTC3887-EA1-VDD1V0-CH1	1002 mV
I2C Slave Revision	99



**show chassis environment fpc (MX204 Router)**

```
user@host> show chassis environment fpc
```

```
FPC 0 status:
State                               Online
FPC 0 EA0_HMC0 Logic die           77 degrees C / 170 degrees F
FPC 0 EA0_HMC0 DRAM botm            74 degrees C / 165 degrees F
FPC 0 EA0_HMC1 Logic die           80 degrees C / 176 degrees F
FPC 0 EA0_HMC1 DRAM botm            77 degrees C / 170 degrees F
FPC 0 EA0 Chip                      93 degrees C / 199 degrees F
FPC 0 EA0-XR0 Chip                  63 degrees C / 145 degrees F
FPC 0 EA0-XR1 Chip                  64 degrees C / 147 degrees F
Power
I2C Slave Revision                 0
```

**show chassis environment fpc (MX10008 Router)**

```
user@host> show chassis environment fpc
```

```
FPC 0 status:
State                               Online
FPC 0 Intake-A Temp Sensor          32 degrees C / 89 degrees F
FPC 0 Exhaust-A Temp Sensor         44 degrees C / 111 degrees F
FPC 0 Exhaust-B Temp Sensor         50 degrees C / 122 degrees F
FPC 0 EA0 Temp Sensor               67 degrees C / 152 degrees F
FPC 0 EA0_XR0 Temp Sensor           69 degrees C / 156 degrees F
FPC 0 EA0_XR1 Temp Sensor           73 degrees C / 163 degrees F
FPC 0 EA1 Temp Sensor               61 degrees C / 141 degrees F
FPC 0 EA1_XR0 Temp Sensor           65 degrees C / 149 degrees F
FPC 0 EA1_XR1 Temp Sensor           63 degrees C / 145 degrees F
FPC 0 EA2 Temp Sensor               69 degrees C / 156 degrees F
FPC 0 EA2_XR0 Temp Sensor           73 degrees C / 163 degrees F
FPC 0 EA2_XR1 Temp Sensor           72 degrees C / 161 degrees F
FPC 0 EA3 Temp Sensor               64 degrees C / 147 degrees F
FPC 0 EA3_XR0 Temp Sensor           66 degrees C / 150 degrees F
FPC 0 EA3_XR1 Temp Sensor           66 degrees C / 150 degrees F
FPC 0 EA4 Temp Sensor               70 degrees C / 158 degrees F
FPC 0 EA4_XR0 Temp Sensor           72 degrees C / 161 degrees F
FPC 0 EA4_XR1 Temp Sensor           72 degrees C / 161 degrees F
FPC 0 EA5 Temp Sensor               58 degrees C / 136 degrees F
FPC 0 EA5_XR0 Temp Sensor           61 degrees C / 141 degrees F
FPC 0 EA5_XR1 Temp Sensor           64 degrees C / 147 degrees F
FPC 0 EA0_HMC0 Logic die            75 degrees C / 167 degrees F
FPC 0 EA0_HMC0 DRAM botm            72 degrees C / 161 degrees F
FPC 0 EA0_HMC1 Logic die            76 degrees C / 168 degrees F
FPC 0 EA0_HMC1 DRAM botm            73 degrees C / 163 degrees F
FPC 0 EA0_HMC2 Logic die            77 degrees C / 170 degrees F
FPC 0 EA0_HMC2 DRAM botm            74 degrees C / 165 degrees F
FPC 0 EA1_HMC0 Logic die            72 degrees C / 161 degrees F
FPC 0 EA1_HMC0 DRAM botm            69 degrees C / 156 degrees F
FPC 0 EA1_HMC1 Logic die            73 degrees C / 163 degrees F
FPC 0 EA1_HMC1 DRAM botm            70 degrees C / 158 degrees F
FPC 0 EA1_HMC2 Logic die            72 degrees C / 161 degrees F
FPC 0 EA1_HMC2 DRAM botm            69 degrees C / 156 degrees F
FPC 0 EA2_HMC0 Logic die            80 degrees C / 176 degrees F
FPC 0 EA2_HMC0 DRAM botm            77 degrees C / 170 degrees F
FPC 0 EA2_HMC1 Logic die            81 degrees C / 177 degrees F
```



FPC 0 EA2_HMC1 DRAM botm	78 degrees C / 172 degrees F
FPC 0 EA2_HMC2 Logic die	80 degrees C / 176 degrees F
FPC 0 EA2_HMC2 DRAM botm	77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 Logic die	77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 DRAM botm	74 degrees C / 165 degrees F
FPC 0 EA3_HMC1 Logic die	78 degrees C / 172 degrees F
FPC 0 EA3_HMC1 DRAM botm	75 degrees C / 167 degrees F
FPC 0 EA3_HMC2 Logic die	77 degrees C / 170 degrees F
FPC 0 EA3_HMC2 DRAM botm	74 degrees C / 165 degrees F
FPC 0 EA4_HMC0 Logic die	80 degrees C / 176 degrees F
FPC 0 EA4_HMC0 DRAM botm	77 degrees C / 170 degrees F
FPC 0 EA4_HMC1 Logic die	81 degrees C / 177 degrees F
FPC 0 EA4_HMC1 DRAM botm	78 degrees C / 172 degrees F
FPC 0 EA4_HMC2 Logic die	80 degrees C / 176 degrees F
FPC 0 EA4_HMC2 DRAM botm	77 degrees C / 170 degrees F
FPC 0 EA5_HMC0 Logic die	69 degrees C / 156 degrees F
FPC 0 EA5_HMC0 DRAM botm	66 degrees C / 150 degrees F
FPC 0 EA5_HMC1 Logic die	68 degrees C / 154 degrees F
FPC 0 EA5_HMC1 DRAM botm	65 degrees C / 149 degrees F
FPC 0 EA5_HMC2 Logic die	68 degrees C / 154 degrees F
FPC 0 EA5_HMC2 DRAM botm	65 degrees C / 149 degrees F
Power	
12V SS 1	12259 mV 9841 mA 120642 mW
12V SS 2	12259 mV 21054 mA 258104 mW
12V SS 3	12285 mV 9841 mA 120902 mW
12V SS 4	12232 mV 20968 mA 256496 mW
12V SS 5	12179 mV 14993 mA 182614 mW
VDD 1.0V_A	1000 mV 95375 mA 95375 mW
VDD 1.0V_B	0 mV 0 mA 0 mW
VDD 3.3V	3298 mV 12500 mA 41235 mW
VDD 0.9V	894 mV 3569 mA 3192 mW
ETH SW 1V	980 mV 4500 mA 4410 mW
VDD 1.8V	1809 mV 895 mA 1619 mW
PVCC	951 mV 0 mA 0 mW
PVNN	1009 mV 0 mA 0 mW
V1P0	1006 mV 0 mA 0 mW
V1P1	1070 mV 0 mA 0 mW
V1P3	1351 mV 0 mA 0 mW
VDDQ	1500 mV 0 mA 0 mW
V1P8	1816 mV 0 mA 0 mW
VDD3V3	3296 mV 0 mA 0 mW
V5V0_BIAS	5025 mV 0 mA 0 mW
VDD12V0	12174 mV 0 mA 0 mW
EA0 Core 0.9V	900 mV 40625 mA 36578 mW
EA0 AVDD 1.0V	1000 mV 32500 mA 32500 mW
EA0 HMC Core 0.9V	894 mV 10081 mA 9017 mW
EA0 1.2V	1189 mV 15081 mA 17945 mW
EA01_HMC_VDDM 1.2V	1193 mV -151 mA -180 mW
EA0_XR 0.906V	905 mV 13802 mA 12496 mW
EA1 Core 0.9V	900 mV 41000 mA 36916 mW
EA1 AVDD 1.0V	1000 mV 28000 mA 28000 mW
EA1 HMC Core 0.9V	897 mV 9848 mA 8835 mW
EA1 1.2V	1197 mV 15313 mA 18332 mW
EA0_PLL_1V0	1003 mV 0 mA 0 mW
EA0_1V04	1032 mV 0 mA 0 mW
EA0_2V5	2445 mV 0 mA 0 mW
EA0_1V5	1512 mV 0 mA 0 mW
EA1_PLL_1V0	1000 mV 0 mA 0 mW
EA1_1V04	1051 mV 0 mA 0 mW
EA1_2V5	2516 mV 0 mA 0 mW



EA1_1V5	1503 mV	0 mA	0 mW
EA1_XR 0.906V	908 mV	14151 mA	12850 mW
EA2 Core 0.9V	899 mV	40625 mA	36538 mW
EA2 AVDD 1.0V	1000 mV	27250 mA	27276 mW
EA2 HMC Core 0.9V	897 mV	9616 mA	8627 mW
EA2 1.2V	1193 mV	15779 mA	18832 mW
EA23_HMC_VDDM 1.2V	1197 mV	81 mA	97 mW
EA2_XR 0.906V	908 mV	14848 mA	13484 mW
EA3 Core 0.9V	899 mV	40625 mA	36538 mW
EA3 AVDD 1.0V	1000 mV	28000 mA	28000 mW
EA3 HMC Core 0.9V	897 mV	10546 mA	9461 mW
EA3 1.2V	1197 mV	15895 mA	19028 mW
EA2_PLL_1V0	1025 mV	0 mA	0 mW
EA2_1V04	1048 mV	0 mA	0 mW
EA2_2V5	2516 mV	0 mA	0 mW
EA2_1V5	1500 mV	0 mA	0 mW
EA3_PLL_1V0	1009 mV	0 mA	0 mW
EA3_1V04	1032 mV	0 mA	0 mW
EA3_2V5	2551 mV	0 mA	0 mW
EA3_1V5	1496 mV	0 mA	0 mW
EA3_XR 0.906V	908 mV	15895 mA	14434 mW
EA4 Core 0.9V	900 mV	41000 mA	36916 mW
EA4 AVDD 1.0V	999 mV	31250 mA	31219 mW
EA4 HMC Core 0.9V	894 mV	9965 mA	8913 mW
EA4 1.2V	1197 mV	15779 mA	18889 mW
EA45_HMC_VDDM 1.2V	1197 mV	546 mA	654 mW
EA4_XR 0.906V	908 mV	15197 mA	13801 mW
EA5 Core 0.9V	900 mV	39750 mA	35790 mW
EA5 AVDD 1.0V	1000 mV	28000 mA	28000 mW
EA5 HMC Core 0.9V	897 mV	9965 mA	8940 mW
EA5 1.2V	1197 mV	15546 mA	18610 mW
EA4_PLL_1V0	1003 mV	0 mA	0 mW
EA4_1V04	1041 mV	0 mA	0 mW
EA4_2V5	2541 mV	0 mA	0 mW
EA4_1V5	1506 mV	0 mA	0 mW
EA5_PLL_1V0	1022 mV	0 mA	0 mW
EA5_1V04	1048 mV	0 mA	0 mW
EA5_2V5	2532 mV	0 mA	0 mW
EA5_1V5	1509 mV	0 mA	0 mW
VDD2V5	2503 mV	0 mA	0 mW
VDD1V5	1509 mV	0 mA	0 mW
VDD1V2	1206 mV	0 mA	0 mW
EA5_XR 0.906V	902 mV	14500 mA	13088 mW

## FPC 2 status:

State	Online	
FPC 2 Intake-A Temp Sensor	33 degrees C / 91 degrees F	
FPC 2 Exhaust-A Temp Sensor	52 degrees C / 125 degrees F	
FPC 2 Exhaust-B Temp Sensor	50 degrees C / 122 degrees F	
FPC 2 EA0 Temp Sensor	72 degrees C / 161 degrees F	
FPC 2 EA0_XR0 Temp Sensor	76 degrees C / 168 degrees F	
FPC 2 EA0_XR1 Temp Sensor	79 degrees C / 174 degrees F	
FPC 2 EA1 Temp Sensor	64 degrees C / 147 degrees F	
FPC 2 EA1_XR0 Temp Sensor	68 degrees C / 154 degrees F	
FPC 2 EA1_XR1 Temp Sensor	66 degrees C / 150 degrees F	
FPC 2 EA2 Temp Sensor	75 degrees C / 167 degrees F	
FPC 2 EA2_XR0 Temp Sensor	81 degrees C / 177 degrees F	
FPC 2 EA2_XR1 Temp Sensor	81 degrees C / 177 degrees F	
FPC 2 EA3 Temp Sensor	67 degrees C / 152 degrees F	
FPC 2 EA3_XR0 Temp Sensor	69 degrees C / 156 degrees F	
FPC 2 EA3_XR1 Temp Sensor	69 degrees C / 156 degrees F	



FPC 2 EA4 Temp Sensor	76 degrees C / 168 degrees F
FPC 2 EA4_XR0 Temp Sensor	77 degrees C / 170 degrees F
FPC 2 EA4_XR1 Temp Sensor	76 degrees C / 168 degrees F
FPC 2 EA5 Temp Sensor	60 degrees C / 140 degrees F
FPC 2 EA5_XR0 Temp Sensor	65 degrees C / 149 degrees F
FPC 2 EA5_XR1 Temp Sensor	65 degrees C / 149 degrees F
FPC 2 EA0_HMC0 Logic die	84 degrees C / 183 degrees F
FPC 2 EA0_HMC0 DRAM botm	81 degrees C / 177 degrees F
FPC 2 EA0_HMC1 Logic die	86 degrees C / 186 degrees F
FPC 2 EA0_HMC1 DRAM botm	83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 Logic die	83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 DRAM botm	80 degrees C / 176 degrees F
FPC 2 EA1_HMC0 Logic die	76 degrees C / 168 degrees F
FPC 2 EA1_HMC0 DRAM botm	73 degrees C / 163 degrees F
FPC 2 EA1_HMC1 Logic die	77 degrees C / 170 degrees F
FPC 2 EA1_HMC1 DRAM botm	74 degrees C / 165 degrees F
FPC 2 EA1_HMC2 Logic die	76 degrees C / 168 degrees F
FPC 2 EA1_HMC2 DRAM botm	73 degrees C / 163 degrees F
FPC 2 EA2_HMC0 Logic die	87 degrees C / 188 degrees F
FPC 2 EA2_HMC0 DRAM botm	84 degrees C / 183 degrees F
FPC 2 EA2_HMC1 Logic die	89 degrees C / 192 degrees F
FPC 2 EA2_HMC1 DRAM botm	86 degrees C / 186 degrees F
FPC 2 EA2_HMC2 Logic die	88 degrees C / 190 degrees F
FPC 2 EA2_HMC2 DRAM botm	85 degrees C / 185 degrees F
FPC 2 EA3_HMC0 Logic die	80 degrees C / 176 degrees F
FPC 2 EA3_HMC0 DRAM botm	77 degrees C / 170 degrees F
FPC 2 EA3_HMC1 Logic die	81 degrees C / 177 degrees F
FPC 2 EA3_HMC1 DRAM botm	78 degrees C / 172 degrees F
FPC 2 EA3_HMC2 Logic die	81 degrees C / 177 degrees F
FPC 2 EA3_HMC2 DRAM botm	78 degrees C / 172 degrees F
FPC 2 EA4_HMC0 Logic die	88 degrees C / 190 degrees F
FPC 2 EA4_HMC0 DRAM botm	85 degrees C / 185 degrees F
FPC 2 EA4_HMC1 Logic die	90 degrees C / 194 degrees F
FPC 2 EA4_HMC1 DRAM botm	87 degrees C / 188 degrees F
FPC 2 EA4_HMC2 Logic die	81 degrees C / 177 degrees F
FPC 2 EA4_HMC2 DRAM botm	78 degrees C / 172 degrees F
FPC 2 EA5_HMC0 Logic die	73 degrees C / 163 degrees F
FPC 2 EA5_HMC0 DRAM botm	70 degrees C / 158 degrees F
FPC 2 EA5_HMC1 Logic die	69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 DRAM botm	66 degrees C / 150 degrees F
FPC 2 EA5_HMC2 Logic die	73 degrees C / 163 degrees F
FPC 2 EA5_HMC2 DRAM botm	70 degrees C / 158 degrees F

## Power

12V SS 1	12285 mV	9408 mA	115582 mW
12V SS 2	12338 mV	20881 mA	257637 mW
12V SS 3	12351 mV	10317 mA	127430 mW
12V SS 4	12285 mV	21054 mA	258660 mW
12V SS 5	12153 mV	13954 mA	169591 mW
VDD 1.0V_A	1000 mV	91000 mA	91000 mW
VDD 1.0V_B	0 mV	0 mA	0 mW
VDD 3.3V	3298 mV	9125 mA	30101 mW
VDD 0.9V	897 mV	3337 mA	2993 mW
ETH SW 1V	0 mV	0 mA	0 mW
VDD 1.8V	1809 mV	1127 mA	2040 mW
PVCC	835 mV	0 mA	0 mW
PVNN	1000 mV	0 mA	0 mW
V1P0	1003 mV	0 mA	0 mW
V1P1	1070 mV	0 mA	0 mW
V1P3	1348 mV	0 mA	0 mW
VDDQ	1493 mV	0 mA	0 mW



V1P8	1806 mV	0 mA	0 mW
VDD3V3	3303 mV	0 mA	0 mW
V5V0_BIAS	5000 mV	0 mA	0 mW
VDD12V0	12116 mV	0 mA	0 mW
EA0 Core 0.9V	900 mV	38875 mA	35002 mW
EA0 AVDD 1.0V	999 mV	31875 mA	31843 mW
EA0 HMC Core 0.9V	894 mV	9034 mA	8081 mW
EA0 1.2V	1197 mV	15430 mA	18471 mW
EA01_HMC_VDDM 1.2V	1200 mV	-267 mA	-321 mW
EA0_XR 0.906V	908 mV	15430 mA	14012 mW
EA1 Core 0.9V	900 mV	38875 mA	35002 mW
EA1 AVDD 1.0V	1000 mV	28250 mA	28250 mW
EA1 HMC Core 0.9V	899 mV	8802 mA	7920 mW
EA1 1.2V	1197 mV	15081 mA	18054 mW
EA0_PLL_1V0	1003 mV	0 mA	0 mW
EA0_1V04	1048 mV	0 mA	0 mW
EA0_2V5	2425 mV	0 mA	0 mW
EA0_1V5	1483 mV	0 mA	0 mW
EA1_PLL_1V0	1019 mV	0 mA	0 mW
EA1_1V04	1019 mV	0 mA	0 mW
EA1_2V5	2490 mV	0 mA	0 mW
EA1_1V5	1480 mV	0 mA	0 mW
EA1_XR 0.906V	908 mV	14965 mA	13590 mW
EA2 Core 0.9V	900 mV	44000 mA	39617 mW
EA2 AVDD 1.0V	1000 mV	28625 mA	28625 mW
EA2 HMC Core 0.9V	891 mV	10546 mA	9404 mW
EA2 1.2V	1200 mV	15313 mA	18387 mW
EA23_HMC_VDDM 1.2V	1193 mV	-267 mA	-319 mW
EA2_XR 0.906V	908 mV	15197 mA	13801 mW
EA3 Core 0.9V	900 mV	39750 mA	35790 mW
EA3 AVDD 1.0V	1000 mV	27750 mA	27750 mW
EA3 HMC Core 0.9V	897 mV	9267 mA	8314 mW
EA3 1.2V	1197 mV	15430 mA	18471 mW
EA2_PLL_1V0	1009 mV	0 mA	0 mW
EA2_1V04	1041 mV	0 mA	0 mW
EA2_2V5	2496 mV	0 mA	0 mW
EA2_1V5	1493 mV	0 mA	0 mW
EA3_PLL_1V0	1003 mV	0 mA	0 mW
EA3_1V04	1041 mV	0 mA	0 mW
EA3_2V5	2490 mV	0 mA	0 mW
EA3_1V5	1500 mV	0 mA	0 mW
EA3_XR 0.906V	908 mV	15081 mA	13695 mW
EA4 Core 0.9V	899 mV	45750 mA	41148 mW
EA4 AVDD 1.0V	1000 mV	32250 mA	32250 mW
EA4 HMC Core 0.9V	897 mV	10779 mA	9670 mW
EA4 1.2V	1193 mV	16011 mA	19110 mW
EA45_HMC_VDDM 1.2V	1200 mV	-267 mA	-321 mW
EA4_XR 0.906V	905 mV	15779 mA	14286 mW
EA5 Core 0.9V	900 mV	38375 mA	34552 mW
EA5 AVDD 1.0V	1000 mV	27750 mA	27777 mW
EA5 HMC Core 0.9V	899 mV	8453 mA	7606 mW
EA5 1.2V	1200 mV	14732 mA	17689 mW
EA4_PLL_1V0	1012 mV	0 mA	0 mW
EA4_1V04	1029 mV	0 mA	0 mW
EA4_2V5	2496 mV	0 mA	0 mW
EA4_1V5	1490 mV	0 mA	0 mW
EA5_PLL_1V0	1003 mV	0 mA	0 mW
EA5_1V04	1032 mV	0 mA	0 mW
EA5_2V5	2503 mV	0 mA	0 mW
EA5_1V5	1480 mV	0 mA	0 mW



VDD2V5	2461 mV	0 mA	0 mW
VDD1V5	1490 mV	0 mA	0 mW
VDD1V2	1212 mV	0 mA	0 mW
EA5_XR 0.906V	910 mV	13686 mA	12466 mW

FPC 3 status:

State	Online	
FPC 3 Intake-A Temp Sensor		30 degrees C / 86 degrees F
FPC 3 Exhaust-A Temp Sensor		48 degrees C / 118 degrees F
FPC 3 Exhaust-B Temp Sensor		45 degrees C / 113 degrees F
FPC 3 EA0 Temp Sensor		60 degrees C / 140 degrees F
FPC 3 EA0_XR0 Temp Sensor		65 degrees C / 149 degrees F
FPC 3 EA0_XR1 Temp Sensor		67 degrees C / 152 degrees F
FPC 3 EA1 Temp Sensor		54 degrees C / 129 degrees F
FPC 3 EA1_XR0 Temp Sensor		60 degrees C / 140 degrees F
FPC 3 EA1_XR1 Temp Sensor		58 degrees C / 136 degrees F
FPC 3 EA2 Temp Sensor		62 degrees C / 143 degrees F
FPC 3 EA2_XR0 Temp Sensor		67 degrees C / 152 degrees F
FPC 3 EA2_XR1 Temp Sensor		67 degrees C / 152 degrees F
FPC 3 EA3 Temp Sensor		55 degrees C / 131 degrees F
FPC 3 EA3_XR0 Temp Sensor		57 degrees C / 134 degrees F
FPC 3 EA3_XR1 Temp Sensor		57 degrees C / 134 degrees F
FPC 3 EA4 Temp Sensor		69 degrees C / 156 degrees F
FPC 3 EA4_XR0 Temp Sensor		71 degrees C / 159 degrees F
FPC 3 EA4_XR1 Temp Sensor		70 degrees C / 158 degrees F
FPC 3 EA5 Temp Sensor		55 degrees C / 131 degrees F
FPC 3 EA5_XR0 Temp Sensor		58 degrees C / 136 degrees F
FPC 3 EA5_XR1 Temp Sensor		59 degrees C / 138 degrees F
FPC 3 EA0_HMC0 Logic die		69 degrees C / 156 degrees F
FPC 3 EA0_HMC0 DRAM botm		66 degrees C / 150 degrees F
FPC 3 EA0_HMC1 Logic die		70 degrees C / 158 degrees F
FPC 3 EA0_HMC1 DRAM botm		67 degrees C / 152 degrees F
FPC 3 EA0_HMC2 Logic die		70 degrees C / 158 degrees F
FPC 3 EA0_HMC2 DRAM botm		67 degrees C / 152 degrees F
FPC 3 EA1_HMC0 Logic die		68 degrees C / 154 degrees F
FPC 3 EA1_HMC0 DRAM botm		65 degrees C / 149 degrees F
FPC 3 EA1_HMC1 Logic die		65 degrees C / 149 degrees F
FPC 3 EA1_HMC1 DRAM botm		62 degrees C / 143 degrees F
FPC 3 EA1_HMC2 Logic die		64 degrees C / 147 degrees F
FPC 3 EA1_HMC2 DRAM botm		61 degrees C / 141 degrees F
FPC 3 EA2_HMC0 Logic die		74 degrees C / 165 degrees F
FPC 3 EA2_HMC0 DRAM botm		71 degrees C / 159 degrees F
FPC 3 EA2_HMC1 Logic die		77 degrees C / 170 degrees F
FPC 3 EA2_HMC1 DRAM botm		74 degrees C / 165 degrees F
FPC 3 EA2_HMC2 Logic die		74 degrees C / 165 degrees F
FPC 3 EA2_HMC2 DRAM botm		71 degrees C / 159 degrees F
FPC 3 EA3_HMC0 Logic die		70 degrees C / 158 degrees F
FPC 3 EA3_HMC0 DRAM botm		67 degrees C / 152 degrees F
FPC 3 EA3_HMC1 Logic die		68 degrees C / 154 degrees F
FPC 3 EA3_HMC1 DRAM botm		65 degrees C / 149 degrees F
FPC 3 EA3_HMC2 Logic die		68 degrees C / 154 degrees F
FPC 3 EA3_HMC2 DRAM botm		65 degrees C / 149 degrees F
FPC 3 EA4_HMC0 Logic die		82 degrees C / 179 degrees F
FPC 3 EA4_HMC0 DRAM botm		79 degrees C / 174 degrees F
FPC 3 EA4_HMC1 Logic die		80 degrees C / 176 degrees F
FPC 3 EA4_HMC1 DRAM botm		77 degrees C / 170 degrees F
FPC 3 EA4_HMC2 Logic die		81 degrees C / 177 degrees F
FPC 3 EA4_HMC2 DRAM botm		78 degrees C / 172 degrees F
FPC 3 EA5_HMC0 Logic die		69 degrees C / 156 degrees F
FPC 3 EA5_HMC0 DRAM botm		66 degrees C / 150 degrees F
FPC 3 EA5_HMC1 Logic die		70 degrees C / 158 degrees F



FPC 3 EA5_HMC1 DRAM botm	67 degrees C / 152 degrees F
FPC 3 EA5_HMC2 Logic die	69 degrees C / 156 degrees F
FPC 3 EA5_HMC2 DRAM botm	66 degrees C / 150 degrees F
Power	
12V SS 1	12259 mV 9538 mA 116927 mW
12V SS 2	12259 mV 20491 mA 251202 mW
12V SS 3	12298 mV 9711 mA 119433 mW
12V SS 4	12219 mV 20491 mA 250391 mW
12V SS 5	12206 mV 10447 mA 127520 mW
VDD 1.0V_A	1000 mV 42250 mA 42291 mW
VDD 1.0V_B	996 mV 8918 mA 8890 mW
VDD 3.3V	3301 mV 10375 mA 34255 mW
VDD 0.9V	897 mV 3569 mA 3202 mW
ETH SW 1V	983 mV 4267 mA 4195 mW
VDD 1.8V	1812 mV 1825 mA 3309 mW
PVCC	974 mV 0 mA 0 mW
PVNN	1003 mV 0 mA 0 mW
V1P0	1003 mV 0 mA 0 mW
V1P1	1070 mV 0 mA 0 mW
V1P3	1351 mV 0 mA 0 mW
VDDQ	1496 mV 0 mA 0 mW
V1P8	1809 mV 0 mA 0 mW
VDD3V3	3309 mV 0 mA 0 mW
V5V0_BIAS	4987 mV 0 mA 0 mW
VDD12V0	12212 mV 0 mA 0 mW
EA0 Core 0.9V	900 mV 38125 mA 34327 mW
EA0 AVDD 1.0V	999 mV 31125 mA 31094 mW
EA0 HMC Core 0.9V	897 mV 9500 mA 8522 mW
EA0 1.2V	1193 mV 15430 mA 18416 mW
EA01_HMC_VDDM 1.2V	1193 mV 313 mA 374 mW
EA0_XR 0.906V	913 mV 14965 mA 13671 mW
EA1 Core 0.9V	900 mV 39750 mA 35790 mW
EA1 AVDD 1.0V	1000 mV 26000 mA 26000 mW
EA1 HMC Core 0.9V	897 mV 8918 mA 8001 mW
EA1 1.2V	1200 mV 15779 mA 18946 mW
EA0_PLL_1V0	1003 mV 0 mA 0 mW
EA0_1V04	1019 mV 0 mA 0 mW
EA0_2V5	2448 mV 0 mA 0 mW
EA0_1V5	1470 mV 0 mA 0 mW
EA1_PLL_1V0	1016 mV 0 mA 0 mW
EA1_1V04	1035 mV 0 mA 0 mW
EA1_2V5	2506 mV 0 mA 0 mW
EA1_1V5	1483 mV 0 mA 0 mW
EA1_XR 0.906V	908 mV 13918 mA 12639 mW
EA2 Core 0.9V	900 mV 38625 mA 34777 mW
EA2 AVDD 1.0V	1000 mV 26375 mA 26400 mW
EA2 HMC Core 0.9V	897 mV 9383 mA 8418 mW
EA2 1.2V	1200 mV 15779 mA 18946 mW
EA23_HMC_VDDM 1.2V	1193 mV 81 mA 97 mW
EA2_XR 0.906V	908 mV 13918 mA 12639 mW
EA3 Core 0.9V	899 mV 40250 mA 36201 mW
EA3 AVDD 1.0V	1000 mV 26750 mA 26776 mW
EA3 HMC Core 0.9V	894 mV 9267 mA 8289 mW
EA3 1.2V	1197 mV 16127 mA 19306 mW
EA2_PLL_1V0	993 mV 0 mA 0 mW
EA2_1V04	1045 mV 0 mA 0 mW
EA2_2V5	2474 mV 0 mA 0 mW
EA2_1V5	1490 mV 0 mA 0 mW
EA3_PLL_1V0	980 mV 0 mA 0 mW
EA3_1V04	1032 mV 0 mA 0 mW



EA3_2V5	2506 mV	0 mA	0 mW
EA3_1V5	1474 mV	0 mA	0 mW
EA3_XR 0.906V	910 mV	14732 mA	13419 mW
EA4 Core 0.9V	900 mV	42500 mA	38266 mW
EA4 AVDD 1.0V	1000 mV	32250 mA	32281 mW
EA4 HMC Core 0.9V	899 mV	10081 mA	9071 mW
EA4 1.2V	1193 mV	16360 mA	19526 mW
EA45_HMC_VDDM 1.2V	1193 mV	662 mA	791 mW
EA4_XR 0.906V	908 mV	15430 mA	14012 mW
EA5 Core 0.9V	899 mV	37000 mA	33278 mW
EA5 AVDD 1.0V	1000 mV	26125 mA	26150 mW
EA5 HMC Core 0.9V	897 mV	9267 mA	8314 mW
EA5 1.2V	1197 mV	15662 mA	18750 mW
EA4_PLL_1V0	1000 mV	0 mA	0 mW
EA4_1V04	1029 mV	0 mA	0 mW
EA4_2V5	2487 mV	0 mA	0 mW
EA4_1V5	1496 mV	0 mA	0 mW
EA5_PLL_1V0	1009 mV	0 mA	0 mW
EA5_1V04	1032 mV	0 mA	0 mW
EA5_2V5	2503 mV	0 mA	0 mW
EA5_1V5	1496 mV	0 mA	0 mW
VDD2V5	2483 mV	0 mA	0 mW
VDD1V5	1470 mV	0 mA	0 mW
VDD1V2	1203 mV	0 mA	0 mW
EA5_XR 0.906V	908 mV	14500 mA	13167 mW

### show chassis environment fpc (T320, T640, and T1600 Routers)

```
user@host> show chassis environment fpc
```

#### FPC 0 status:

State	Online
Temperature Top	42 degrees C / 107 degrees F
Temperature Bottom	36 degrees C / 96 degrees F
Temperature MMB1	39 degrees C / 102 degrees F
Power:	
1.8 V	1959 mV
2.5 V	2495 mV
3.3 V	3344 mV
5.0 V	5047 mV
1.8 V bias	1787 mV
3.3 V bias	3291 mV
5.0 V bias	4998 mV
8.0 V bias	7343 mV
BUS Revision	40

#### FPC 1 status:

State	Online
Temperature Top	42 degrees C / 107 degrees F
Temperature Bottom	39 degrees C / 102 degrees F
Temperature MMB1	40 degrees C / 104 degrees F
Power:	
1.8 V	1956 mV
2.5 V	2498 mV
3.3 V	3340 mV
5.0 V	5023 mV
1.8 V bias	1782 mV
3.3 V bias	3277 mV
5.0 V bias	4989 mV
8.0 V bias	7289 mV
BUS Revision	40



```

FPC 2 status:
State                               Online
Temperature Top                     43 degrees C / 109 degrees F
Temperature Bottom                   39 degrees C / 102 degrees F
Temperature MMB1                     41 degrees C / 105 degrees F
Power:
  1.8 V                             1963 mV
  2.5 V                             2503 mV
  3.3 V                             3340 mV
  5.0 V                             5042 mV
  1.8 V bias                         1797 mV
  3.3 V bias                         3311 mV
  5.0 V bias                         5013 mV
  8.0 V bias                         7221 mV
BUS Revision                         40

```

### show chassis environment fpc (T4000 Router)

```
user@host> show chassis environment fpc
```

```

FPC 0 status:
State                               Online
Fan Intake                          34 degrees C / 93 degrees F
Fan Exhaust                         48 degrees C / 118 degrees F
PMB                                 47 degrees C / 116 degrees F
LMB0                                50 degrees C / 122 degrees F
LMB1                                41 degrees C / 105 degrees F
LMB2                                35 degrees C / 95 degrees F
PFE1 LU2                            46 degrees C / 114 degrees F
PFE1 LU0                            41 degrees C / 105 degrees F
PFE0 LU0                            57 degrees C / 134 degrees F
XF1                                 47 degrees C / 116 degrees F
XF0                                 52 degrees C / 125 degrees F
XM1                                 41 degrees C / 105 degrees F
XM0                                 50 degrees C / 122 degrees F
PFE0 LU1                            56 degrees C / 132 degrees F
PFE0 LU2                            45 degrees C / 113 degrees F
PFE1 LU1                            37 degrees C / 98 degrees F
Power 1
  1.0 V                             991 mV
  1.2 V bias                         1195 mV
  1.8 V                             1788 mV
  2.5 V                             2483 mV
  3.3 V                             3289 mV
  3.3 V bias                         3299 mV
  12.0 V A                           10608 mV
  12.0 V B                           10637 mV
Power 2
  0.9 V                             881 mV
  0.9 V PFE0                         916 mV
  0.9 V PFE1                         903 mV
  1.0 V PFE0                         1012 mV
  1.0 V PFE1                         1002 mV
  1.1 V                             1095 mV
  1.5 V_0                           1494 mV
  1.5 V_1                           1479 mV
Power 3
  1.0 V PFE0                         1000 mV
  1.0 V PFE1                         1002 mV
  1.0 V PFE0 *                       995 mV

```



```

1.0 V PFE1 *          995 mV
1.8 V PFE 0          1788 mV
1.8 V PFE 1          1789 mV
2.5 V                2482 mV
12.0 V              11614 mV
Power 4
1.0 V PFE0 LU0       1003 mV
1.0 V PFE1 LU0       1003 mV
1.0 V PFE1 LU2       1004 mV
1.0 V PFE0 LU0 *     995 mV
1.0 V PFE1 LU0 *     998 mV
1.0 V PFE1 LU2 *     996 mV
12.0 V              11643 mV
12.0 V C             11711 mV
Power (Base/PMB/MMB)
LMB0 VDD2V5          2488 mV
LMB0 VDD1V8          1788 mV
LMB0 VDD1V5          1496 mV
LMB0 PFE0 LU0 AVDD1V0 1002 mV
LMB0 PFE0 LU0 VDD1V0  1000 mV
LMB0 VDD12V0         10752 mV
LMB1 VDD2V5          2472 mV
LMB1 VDD1V8          1792 mV
LMB1 VDD1V5          1480 mV
LMB1 PFE0 LU2 AVDD1V0 994 mV
LMB1 PFE0 LU2 VDD1V0  1002 mV
LMB1 VDD12V0         10800 mV
LMB2 VDD2V5          2472 mV
LMB2 VDD1V8          1792 mV
LMB2 VDD1V5          1486 mV
LMB2 PFE1 LU1 AVDD1V0 996 mV
LMB2 PFE1 LU1 VDD1V0  998 mV
LMB2 VDD12V0         10704 mV
PMB 1.05v            1049 mV
PMB 1.5v             1500 mV
PMB 2.5v             2500 mV
PMB 3.3v             3299 mV
Bus Revision          113
FPC 3 status:
State                 Online
Fan Intake            37 degrees C / 98 degrees F
Fan Exhaust           51 degrees C / 123 degrees F
PMB                   43 degrees C / 109 degrees F
LMB0                  57 degrees C / 134 degrees F
LMB1                  54 degrees C / 129 degrees F
LMB2                  38 degrees C / 100 degrees F
PFE1 LU2              63 degrees C / 145 degrees F
PFE1 LU0              45 degrees C / 113 degrees F
PFE0 LU0              69 degrees C / 156 degrees F
XF1                   62 degrees C / 143 degrees F
XF0                   63 degrees C / 145 degrees F
XM1                   43 degrees C / 109 degrees F
XM0                   67 degrees C / 152 degrees F
PFE0 LU1              63 degrees C / 145 degrees F
PFE0 LU2              66 degrees C / 150 degrees F
PFE1 LU1              41 degrees C / 105 degrees F
Power 1
1.0 V                 1002 mV
1.2 V bias            1201 mV
1.8 V                 1785 mV

```



2.5 V	2485 mV
3.3 V	3288 mV
3.3 V bias	3285 mV
12.0 V A	10412 mV
12.0 V B	10515 mV
Power 2	
0.9 V	882 mV
0.9 V PFE0	920 mV
0.9 V PFE1	905 mV
1.0 V PFE0	1015 mV
1.0 V PFE1	1001 mV
1.1 V	1094 mV
1.5 V_0	1495 mV
1.5 V_1	1478 mV
Power 3	
0.92 V PFE1	998 mV
1.0 V PFE0	997 mV
1.0 V PFE0 *	992 mV
1.0 V PFE1 *	991 mV
1.8 V PFE 0	1780 mV
1.8 V PFE 1	1797 mV
2.5 V	2492 mV
12.0 V	11604 mV
Power 4	
1.0 V PFE0 LU0	1003 mV
1.0 V PFE1 LU0	1004 mV
1.0 V PFE1 LU2	1003 mV
1.0 V PFE0 LU0 *	1000 mV
1.0 V PFE1 LU0 *	1001 mV
1.0 V PFE1 LU2 *	1003 mV
12.0 V	11653 mV
12.0 V C	11672 mV
Power (Base/PMB/MMB)	
LMB0 VDD2V5	2512 mV
LMB0 VDD1V8	1790 mV
LMB0 VDD1V5	1500 mV
LMB0 PFE0 LU0 AVDD1V0	1004 mV
LMB0 PFE0 LU0 VDD1V0	1002 mV
LMB0 VDD12V0	10608 mV
LMB1 VDD2V5	2472 mV
LMB1 VDD1V8	1788 mV
LMB1 VDD1V5	1480 mV
LMB1 PFE0 LU2 AVDD1V0	1000 mV
LMB1 PFE0 LU2 VDD1V0	1004 mV
LMB1 VDD12V0	10672 mV
LMB2 VDD2V5	2488 mV
LMB2 VDD1V8	1798 mV
LMB2 VDD1V5	1494 mV
LMB2 PFE1 LU1 AVDD1V0	1000 mV
LMB2 PFE1 LU1 VDD1V0	1004 mV
LMB2 VDD12V0	10528 mV
PMB 1.05v	1050 mV
PMB 1.5v	1500 mV
PMB 2.5v	2499 mV
PMB 3.3v	3299 mV
Bus Revision	113
FPC 5 status:	
State	Online
Temperature Top	39 degrees C / 102 degrees F
Temperature Bottom	38 degrees C / 100 degrees F



```

Power
  1.8 V                1804 mV
  1.8 V bias           1802 mV
  3.3 V                3294 mV
  3.3 V bias           3277 mV
  5.0 V bias           5008 mV
  5.0 V TOP            5067 mV
  8.0 V bias           6642 mV
Power (Base/PMB/MMB)
  1.2 V                1202 mV
  1.5 V                1504 mV
  5.0 V BOT            5079 mV
  12.0 V TOP Base      11848 mV
  12.0 V BOT Base      11780 mV
  1.1 V PMB            1111 mV
  1.2 V PMB            1189 mV
  1.5 V PMB            1494 mV
  1.8 V PMB            1819 mV
  2.5 V PMB            2503 mV
  3.3 V PMB            3294 mV
  5.0 V PMB            5035 mV
  12.0 V PMB           11788 mV
  0.75 MMB TOP         766 mV
  1.5 V MMB TOP         1484 mV
  1.8 V MMB TOP         1772 mV
  2.5 V MMB TOP         2485 mV
  1.2 V MMB TOP         1137 mV
  5.0 V MMB TOP         4946 mV
  12.0 V MMB TOP        11772 mV
  3.3 V MMB TOP         3289 mV
  0.75 MMB BOT          759 mV
  1.5 V MMB BOT         1482 mV
  1.8 V MMB BOT         1792 mV
  2.5 V MMB BOT         2490 mV
  1.2 V MMB BOT         1145 mV
  5.0 V MMB BOT         4922 mV
  12.0 V MMB BOT        11625 mV
  3.3 V MMB BOT         3282 mV
  APS 00                2495 mV
  APS 01                3308 mV
  APS 02                3301 mV
  5.0 V PIC 0           4967 mV
  APS 10                2512 mV
  APS 11                3316 mV
  APS 12                3304 mV
  5.0 V PIC 1           5081 mV
Bus Revision            49
FPC 6 status:
State                  Online
Fan Intake             34 degrees C / 93 degrees F
Fan Exhaust            49 degrees C / 120 degrees F
PMB                    40 degrees C / 104 degrees F
LMB0                   60 degrees C / 140 degrees F
LMB1                   58 degrees C / 136 degrees F
LMB2                   40 degrees C / 104 degrees F
PFE1 LU2               69 degrees C / 156 degrees F
PFE1 LU0               45 degrees C / 113 degrees F
PFE0 LU0               71 degrees C / 159 degrees F
XF1                    58 degrees C / 136 degrees F
XF0                    65 degrees C / 149 degrees F

```



XM1	40 degrees C / 104 degrees F
XM0	66 degrees C / 150 degrees F
PFE0 LU1	69 degrees C / 156 degrees F
PFE0 LU2	68 degrees C / 154 degrees F
PFE1 LU1	42 degrees C / 107 degrees F
Power 1	
1.0 V	998 mV
1.2 V bias	1191 mV
1.8 V	1781 mV
2.5 V	2487 mV
3.3 V	3302 mV
3.3 V bias	3300 mV
12.0 V A	10388 mV
12.0 V B	10388 mV
Power 2	
0.9 V	902 mV
0.9 V PFE0	921 mV
0.9 V PFE1	907 mV
1.0 V PFE0	996 mV
1.0 V PFE1	974 mV
1.1 V	1095 mV
1.5 V_0	1495 mV
1.5 V_1	1478 mV
Power 3	
1.0 V PFE0	997 mV
1.0 V PFE1	998 mV
1.0 V PFE0 *	993 mV
1.0 V PFE1 *	991 mV
1.8 V PFE 0	1796 mV
1.8 V PFE 1	1789 mV
2.5 V	2465 mV
12.0 V	11609 mV
Power 4	
1.0 V PFE0 LU0	1003 mV
1.0 V PFE1 LU0	1006 mV
1.0 V PFE1 LU2	1002 mV
1.0 V PFE0 LU0 *	1000 mV
1.0 V PFE1 LU0 *	998 mV
1.0 V PFE1 LU2 *	998 mV
12.0 V	11638 mV
12.0 V C	11702 mV
Power (Base/PMB/MMB)	
LMB0 VDD2V5	2484 mV
LMB0 VDD1V8	1780 mV
LMB0 VDD1V5	1496 mV
LMB0 PFE0 LU0 AVDD1V0	998 mV
LMB0 PFE0 LU0 VDD1V0	1004 mV
LMB0 VDD12V0	10528 mV
LMB1 VDD2V5	2472 mV
LMB1 VDD1V8	1776 mV
LMB1 VDD1V5	1474 mV
LMB1 PFE0 LU2 AVDD1V0	994 mV
LMB1 PFE0 LU2 VDD1V0	1004 mV
LMB1 VDD12V0	10544 mV
LMB2 VDD2V5	2476 mV
LMB2 VDD1V8	1790 mV
LMB2 VDD1V5	1492 mV
LMB2 PFE1 LU1 AVDD1V0	996 mV
LMB2 PFE1 LU1 VDD1V0	1010 mV
LMB2 VDD12V0	10528 mV



PMB 1.05v	1050 mV
PMB 1.5v	1499 mV
PMB 2.5v	2500 mV
PMB 3.3v	3300 mV
Bus Revision	80

### show chassis environment fpc lcc (TX Matrix Router)

```
user@host> show chassis environment fpc lcc 0
```

```
lcc0-re0:
```

```
-----
```

```
FPC 1 status:
```

State	Online
Temperature Top	30 degrees C / 86 degrees F
Temperature Bottom	25 degrees C / 77 degrees F
Temperature MMB0	Absent
Temperature MMB1	27 degrees C / 80 degrees F
Power:	
1.8 V	1813 mV
2.5 V	2504 mV
3.3 V	3338 mV
5.0 V	5037 mV
1.8 V bias	1797 mV
3.3 V bias	3301 mV
5.0 V bias	5013 mV
8.0 V bias	7345 mV
BUS Revision	40

```
FPC 2 status:
```

State	Online
Temperature Top	37 degrees C / 98 degrees F
Temperature Bottom	26 degrees C / 78 degrees F
Temperature MMB0	32 degrees C / 89 degrees F
Temperature MMB1	27 degrees C / 80 degrees F
Power:	
1.8 V	1791 mV
2.5 V	2517 mV
3.3 V	3308 mV
5.0 V	5052 mV
1.8 V bias	1797 mV
3.3 V bias	3289 mV
5.0 V bias	4991 mV
8.0 V bias	7477 mV
BUS Revision	40

### show chassis environment fpc lcc (TX Matrix Plus Router)

```
user@host> show chassis environment fpc lcc 0
```

```
lcc0-re0:
```

```
-----
```

```
FPC 1 status:
```

State	Online
Temperature Top	46 degrees C / 114 degrees F
Temperature Bottom	47 degrees C / 116 degrees F
Power	
1.8 V	1788 mV
1.8 V bias	1787 mV
3.3 V	3321 mV



3.3 V bias	3306 mV
5.0 V bias	5018 mV
5.0 V TOP	5037 mV
8.0 V bias	7223 mV
Power (Base/PMB/MMB)	
1.2 V	1205 mV
1.5 V	1503 mV
5.0 V BOT	5084 mV
12.0 V TOP Base	11775 mV
12.0 V BOT Base	11794 mV
1.1 V PMB	1108 mV
1.2 V PMB	1196 mV
1.5 V PMB	1499 mV
1.8 V PMB	1811 mV
2.5 V PMB	2515 mV
3.3 V PMB	3318 mV
5.0 V PMB	5030 mV
12.0 V PMB	11832 mV
0.75 MMB TOP	752 mV
1.5 V MMB TOP	1489 mV
1.8 V MMB TOP	1782 mV
2.5 V MMB TOP	2498 mV
1.2 V MMB TOP	1155 mV
5.0 V MMB TOP	4902 mV
12.0 V MMB TOP	11721 mV
3.3 V MMB TOP	3316 mV
0.75 MMB BOT	754 mV
1.5 V MMB BOT	1482 mV
1.8 V MMB BOT	1758 mV
2.5 V MMB BOT	2488 mV
1.2 V MMB BOT	1157 mV
5.0 V MMB BOT	4962 mV
12.0 V MMB BOT	11691 mV
3.3 V MMB BOT	3308 mV
APS 00	1484 mV
APS 01	2503 mV
APS 02	3313 mV
5.0 V PIC 0	5025 mV
APS 10	1501 mV
APS 11	2466 mV
APS 12	3311 mV
5.0 V PIC 1	5081 mV
Bus Revision	49

### show chassis environment fpc (QFX Series and OCX Series)

```
user@switch> show chassis environment fpc 0
```

```
FPC 0 status:
State          Online
Temperature    42 degrees C / 107 degrees F
```

### show chassis environment fpc interconnect-device (QFabric Systems)

```
user@switch> show chassis environment fpc interconnect-device interconnect1 0
```

```
FC 0 FPC 0 status:
State          Online
Left Intake Temperature 24 degrees C / 75 degrees F
```



Right Intake Temperature	24 degrees C / 75 degrees F
Left Exhaust Temperature	27 degrees C / 80 degrees F
Right Exhaust Temperature	27 degrees C / 80 degrees F
Power	
BIAS 3V3	3330 mV
VDD 3V3	3300 mV
VDD 2V5	2502 mV
VDD 1V5	1496 mV
VDD 1V2	1194 mV
VDD 1V0	1000 mV
SW0 VDD 1V0	1020 mV
SW0 CVDD 1V025	1032 mV
SW1 VDD 1V0	1022 mV
SW1 CVDD 1V025	1030 mV
VDD 12V0 DIV3_33	3414 mV

### show chassis environment fpc 5(PTX3000 Packet Transport Router)

```
user@host> show chassis environment fpc 5
```

```
FPC 5 status:
State                               Online
Intake Temperature                  31 degrees C / 87 degrees F
Exhaust Temperature                 41 degrees C / 105 degrees F
Power
FPC 12.0v                           12221 mV
FPC VCC 0.5-1.3v                     1640 mV
FPC VNN 0.5-1.3v                     1640 mV
FPC 1.0v                             1640 mV
FPC 1.1v                             1640 mV
FPC 1.35v                           1640 mV
FPC VDDQ 1.5v                       1640 mV
FPC 1.8v                             1640 mV
FPC 3.3v                             3280 mV
FPC 5.0v bias                        5143 mV
FPC 5.0v usb                         5143 mV
FPC VCC 12.0v                       12289 mV
FPC Vref 3.3v                       3280 mV
MAIN 12.0v-i                        2265 mA
```

### show chassis environment fpc 0 (PTX5000 Packet Transport Router)

```
user@host> show chassis environment fpc 0
```

```
FPC 0 status:
State                               Online
PMB Temperature                     35 degrees C / 95 degrees F
Intake Temperature                   33 degrees C / 91 degrees F
Exhaust A Temperature                51 degrees C / 123 degrees F
Exhaust B Temperature                43 degrees C / 109 degrees F
TL0 Temperature                      48 degrees C / 118 degrees F
TQ0 Temperature                      53 degrees C / 127 degrees F
TL1 Temperature                      56 degrees C / 132 degrees F
TQ1 Temperature                      58 degrees C / 136 degrees F
TL2 Temperature                      55 degrees C / 131 degrees F
TQ2 Temperature                      57 degrees C / 134 degrees F
TL3 Temperature                      59 degrees C / 138 degrees F
TQ3 Temperature                      59 degrees C / 138 degrees F
Power
```



PMB	1.05v	1049 mV
PMB	1.5v	1500 mV
PMB	2.5v	2500 mV
PMB	3.3v	3299 mV
PFE0	1.5v	1500 mV
PFE0	1.0v	999 mV
TQ0	0.9v	900 mV
TL0	0.9v	900 mV
PFE1	1.5v	1499 mV
PFE1	1.0v	999 mV
TQ1	0.9v	899 mV
TL1	0.9v	900 mV
PFE2	1.5v	1500 mV
PFE2	1.0v	1000 mV
TQ2	0.9v	900 mV
TL2	0.9v	900 mV
PFE3	1.5v	1499 mV
PFE3	1.0v	1000 mV
TQ3	0.9v	900 mV
TL3	0.9v	900 mV
Bias	3.3v	3327 mV
FPC	3.3v	3300 mV
FPC	2.5v	2500 mV
SAM	0.9v	900 mV
A	12.0v	2014 mV
B	12.0v	2030 mV

#### show chassis environment fpc 07 (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis environment fpc 07
```

```
FPC 7 status:
State Online
PMB TEMPO Temperature 32 degrees C / 89 degrees F
PMB TEMP1 Temperature 28 degrees C / 82 degrees F
PMB CPU Temperature 46 degrees C / 114 degrees F
Intake Temperature 35 degrees C / 95 degrees F
Exhaust A Temperature 55 degrees C / 131 degrees F
Exhaust B Temperature 54 degrees C / 129 degrees F
TL5 Temperature 59 degrees C / 138 degrees F
TQ5 Temperature 57 degrees C / 134 degrees F
TL6 Temperature 57 degrees C / 134 degrees F
TQ6 Temperature 51 degrees C / 123 degrees F
TL1 Temperature 76 degrees C / 168 degrees F
TQ1 Temperature 58 degrees C / 136 degrees F
TL2 Temperature 75 degrees C / 167 degrees F
TQ2 Temperature 57 degrees C / 134 degrees F
TL4 Temperature 52 degrees C / 125 degrees F
TQ4 Temperature 66 degrees C / 150 degrees F
TL7 Temperature 52 degrees C / 125 degrees F
TQ7 Temperature 60 degrees C / 140 degrees F
TL0 Temperature 72 degrees C / 161 degrees F
TQ0 Temperature 73 degrees C / 163 degrees F
TL3 Temperature 64 degrees C / 147 degrees F
TQ3 Temperature 70 degrees C / 158 degrees F
Power
PMB 1.05v 1049 mV
PMB 3.3v 3299 mV
PMB 1.1v-a 1100 mV
PMB 1.5v 1499 mV
```



```

PMB 1.1v-b 1100 mV
Base 3.3v 3300 mV
FPC Base 2.5v 2499 mV
TL1 0.9v 897 mV
TQ1 0.9v 897 mV
PFE1 1.0v 999 mV
PFE1 1.5v 1499 mV
TL2 0.9v 897 mV
TQ2 0.9v 897 mV
PFE2 1.0v 999 mV
PFE2 1.5v 1499 mV
FPC Base 1.0v 1000 mV
FPC Base 1.2v 1199 mV
TL5 0.9v 898 mV
TQ5 0.9v 898 mV
PFE5 1.0v 1000 mV
PFE5 1.5v 1500 mV
TL6 0.9v 897 mV
TQ6 0.9v 897 mV
PFE6 1.0v 1000 mV
PFE6 1.5v 1499 mV
Mezz Base 2.5v 2500 mV
TL0 0.9v 896 mV
TQ0 0.9v 896 mV
PFE0 1.0v 999 mV
PFE0 1.5v 1499 mV

```

### show chassis environment fpc (PTX10008 router)

```
user@host> show chassis environment fpc
```

```

FPC 0 status:
State Online
FPC 0 Intake-A Temp Sensor 37 degrees C / 98 degrees F
FPC 0 Intake-B Temp Sensor 34 degrees C / 93 degrees F
FPC 0 Exhaust-A Temp Sensor 37 degrees C / 98 degrees F
FPC 0 Exhaust-B Temp Sensor 38 degrees C / 100 degrees F
FPC 0 Exhaust-C Temp Sensor 40 degrees C / 104 degrees F
FPC 0 PE0 Temp Sensor 41 degrees C / 105 degrees F
FPC 0 PE1 Temp Sensor 42 degrees C / 107 degrees F
FPC 0 PE2 Temp Sensor 44 degrees C / 111 degrees F
FPC 0 LCPU Temp Sensor 40 degrees C / 104 degrees F
Power
PE0 Core 0.9V 872 mV 28777 mA 25146 mW
PE0 HMC0 Core 0.9V 899 mV 10359 mA 9328 mW
PE1 Core 0.9V 896 mV 29476 mA 26414 mW
PE1 HMC0 Core 0.9V 899 mV 10218 mA 9187 mW
PE2 Core 0.9V 872 mV 28839 mA 25199 mW
PE2 HMC0 Core 0.9V 900 mV 10296 mA 9265 mW
PE0 Serdes 1.0V 1020 mV 29000 mA 29593 mW
PE1 Serdes 1.0V 1019 mV 29109 mA 29718 mW
PE2 Serdes 1.0V 1019 mV 28484 mA 29078 mW
LCPU Platform 1.1V 1099 mV 3515 mA 3867 mW
LCPU Core 1.0V 1000 mV 8750 mA 8703 mW
PHY VDD B 1.0V 1000 mV 17062 mA 17031 mW
PHY VDD A 1.0V 999 mV 15640 mA 15625 mW
BCM Core 1.0V 999 mV 7054 mA 7054 mW
BCM PEX 1.0V 999 mV 3562 mA 3558 mW
HMC Core 1.2V 1199 mV 1280 mA 1513 mW
HMC Serdes 1.2V 1199 mV 32937 mA 39500 mW

```



VDD 1.5V	1500 mV	2824 mA	4234 mW
VDD 2.5V	2449 mV	3812 mA	9343 mW
VDD 3.3V	3299 mV	5085 mA	16796 mW
12V	12259 mV	29609 mA	368196 mW
FPC 1 status:			
State	Online		
FPC 1 Intake-A Temp Sensor	37 degrees C / 98 degrees F		
FPC 1 Intake-B Temp Sensor	34 degrees C / 93 degrees F		
FPC 1 Exhaust-A Temp Sensor	38 degrees C / 100 degrees F		
FPC 1 Exhaust-B Temp Sensor	38 degrees C / 100 degrees F		
FPC 1 Exhaust-C Temp Sensor	40 degrees C / 104 degrees F		
FPC 1 PE0 Temp Sensor	41 degrees C / 105 degrees F		
FPC 1 PE1 Temp Sensor	42 degrees C / 107 degrees F		
FPC 1 PE2 Temp Sensor	44 degrees C / 111 degrees F		
FPC 1 LCPU Temp Sensor	39 degrees C / 102 degrees F		
Power			
PE0 Core 0.9V	898 mV	29351 mA	26421 mW
PE0 HMC0 Core 0.9V	899 mV	9734 mA	8750 mW
PE1 Core 0.9V	873 mV	28539 mA	24933 mW
PE1 HMC0 Core 0.9V	899 mV	9937 mA	8937 mW
PE2 Core 0.9V	875 mV	28906 mA	25316 mW
PE2 HMC0 Core 0.9V	899 mV	10140 mA	9125 mW
PE0 Serdes 1.0V	1019 mV	28312 mA	28890 mW
PE1 Serdes 1.0V	1020 mV	28656 mA	29234 mW
PE2 Serdes 1.0V	1020 mV	29437 mA	30015 mW
LCPU Platform 1.1V	1100 mV	4617 mA	5078 mW
LCPU Core 1.0V	1000 mV	8781 mA	8781 mW
PHY VDD B 1.0V	1000 mV	15953 mA	15984 mW
PHY VDD A 1.0V	1000 mV	15484 mA	15484 mW
BCM Core 1.0V	999 mV	7945 mA	7937 mW
BCM PEX 1.0V	999 mV	3515 mA	3515 mW
HMC Core 1.2V	1199 mV	1269 mA	1521 mW
HMC Serdes 1.2V	1199 mV	33000 mA	39593 mW
VDD 1.5V	1500 mV	2691 mA	4062 mW
VDD 2.5V	2449 mV	3582 mA	8781 mW
VDD 3.3V	3300 mV	2563 mA	8458 mW
12V	12311 mV	29002 mA	357577 mW
FPC 2 status:			
State	Online		
FPC 2 Intake-A Temp Sensor	43 degrees C / 109 degrees F		
FPC 2 Intake-B Temp Sensor	30 degrees C / 86 degrees F		
FPC 2 Exhaust-A Temp Sensor	50 degrees C / 122 degrees F		
FPC 2 Exhaust-B Temp Sensor	52 degrees C / 125 degrees F		
FPC 2 Exhaust-C Temp Sensor	51 degrees C / 123 degrees F		
FPC 2 PE0 Temp Sensor	48 degrees C / 118 degrees F		
FPC 2 PE1 Temp Sensor	56 degrees C / 132 degrees F		
FPC 2 PE2 Temp Sensor	48 degrees C / 118 degrees F		
FPC 2 PE3 Temp Sensor	57 degrees C / 134 degrees F		
FPC 2 PE4 Temp Sensor	48 degrees C / 118 degrees F		
FPC 2 PE5 Temp Sensor	60 degrees C / 140 degrees F		
FPC 2 LCPU Temp Sensor	47 degrees C / 116 degrees F		
Power			
PE0 Core 0.9V	874 mV	28117 mA	24617 mW
PE1 Core 0.9V	899 mV	29601 mA	26632 mW
PE0 Serdes 1.0V	1019 mV	41031 mA	41843 mW
PE1 Serdes 1.0V	1019 mV	35656 mA	36343 mW
PE0 HMC Core 0.9V	899 mV	8125 mA	7312 mW
PE0,1 HMC Memory 1.2V	1199 mV	565 mA	688 mW
PE1 HMC Core 0.9V	899 mV	7921 mA	7125 mW
PE0,1 HMC Serdes 1.2V	1199 mV	21281 mA	25562 mW



PE2 Core 0.9V	899 mV	29187 mA	26242 mW
PE3 Core 0.9V	899 mV	29976 mA	27074 mW
PE2 Serdes 1.0V	1019 mV	38562 mA	39343 mW
PE3 Serdes 1.0V	1019 mV	34937 mA	35656 mW
PE2 HMC Core 0.9V	899 mV	8093 mA	7281 mW
PE2,3 HMC Memory 1.2V	1199 mV	610 mA	732 mW
PE3 HMC Core 0.9V	899 mV	7710 mA	6937 mW
PE2,3 HMC Serdes 1.2V	1199 mV	21500 mA	25812 mW
VDD 3.3V	3300 mV	7937 mA	26187 mW
VDD 1.5V	1499 mV	3234 mA	4851 mW
VDD 2.5V	2449 mV	4539 mA	11109 mW
PE4 Core 0.9V	874 mV	29914 mA	26183 mW
PE5 Core 0.9V	874 mV	29820 mA	26031 mW
PE4 Serdes 1.0V	1020 mV	43968 mA	44843 mW
PE5 Serdes 1.0V	1019 mV	27453 mA	28031 mW
PE4 HMC Core 0.9V	900 mV	7937 mA	7140 mW
PE4,5 HMC Memory 1.2V	1200 mV	1185 mA	1421 mW
PE5 HMC Core 0.9V	899 mV	8718 mA	7843 mW
PE4,5 HMC Serdes 1.2V	1199 mV	21125 mA	25343 mW
LCPU platform 1.1V	1099 mV	3777 mA	4156 mW
LCPU core 1.0V	1000 mV	9062 mA	9062 mW
BCM core 1.0V	1000 mV	9328 mA	9328 mW
BCM & PEX Serdes 1.0V	999 mV	4125 mA	4125 mW
12V	12311 mV	53347 mA	660345 mW

## FPC 3 status:

State	Online
FPC 3 Intake-A Temp Sensor	43 degrees C / 109 degrees F
FPC 3 Intake-B Temp Sensor	30 degrees C / 86 degrees F
FPC 3 Exhaust-A Temp Sensor	48 degrees C / 118 degrees F
FPC 3 Exhaust-B Temp Sensor	49 degrees C / 120 degrees F
FPC 3 Exhaust-C Temp Sensor	47 degrees C / 116 degrees F
FPC 3 PE0 Temp Sensor	48 degrees C / 118 degrees F
FPC 3 PE1 Temp Sensor	55 degrees C / 131 degrees F
FPC 3 PE2 Temp Sensor	47 degrees C / 116 degrees F
FPC 3 PE3 Temp Sensor	54 degrees C / 129 degrees F
FPC 3 PE4 Temp Sensor	48 degrees C / 118 degrees F
FPC 3 PE5 Temp Sensor	58 degrees C / 136 degrees F
FPC 3 LCPU Temp Sensor	46 degrees C / 114 degrees F
Power	

PE0 Core 0.9V	899 mV	29695 mA	26718 mW
PE1 Core 0.9V	899 mV	29695 mA	26710 mW
PE0 Serdes 1.0V	1020 mV	40156 mA	40906 mW
PE1 Serdes 1.0V	1020 mV	35281 mA	35968 mW
PE0 HMC Core 0.9V	900 mV	7492 mA	6742 mW
PE0,1 HMC Memory 1.2V	1199 mV	569 mA	683 mW
PE1 HMC Core 0.9V	899 mV	7570 mA	6812 mW
PE0,1 HMC Serdes 1.2V	1199 mV	20562 mA	24656 mW
PE2 Core 0.9V	899 mV	29734 mA	26765 mW
PE3 Core 0.9V	900 mV	29960 mA	26968 mW
PE2 Serdes 1.0V	1019 mV	37718 mA	38500 mW
PE3 Serdes 1.0V	1020 mV	35250 mA	35937 mW
PE2 HMC Core 0.9V	899 mV	7750 mA	6976 mW
PE2,3 HMC Memory 1.2V	1200 mV	546 mA	656 mW
PE3 HMC Core 0.9V	899 mV	7718 mA	6945 mW
PE2,3 HMC Serdes 1.2V	1199 mV	20625 mA	24750 mW
VDD 3.3V	3299 mV	5917 mA	19515 mW
VDD 1.5V	1499 mV	4015 mA	6015 mW
VDD 2.5V	2449 mV	4335 mA	10625 mW
PE4 Core 0.9V	899 mV	29835 mA	26875 mW
PE5 Core 0.9V	924 mV	30554 mA	28277 mW



PE4 Serdes 1.0V	1019 mV	43281 mA	44187 mW
PE5 Serdes 1.0V	1020 mV	27140 mA	27703 mW
PE4 HMC Core 0.9V	899 mV	7476 mA	6726 mW
PE4,5 HMC Memory 1.2V	1199 mV	531 mA	637 mW
PE5 HMC Core 0.9V	899 mV	7539 mA	6781 mW
PE4,5 HMC Serdes 1.2V	1199 mV	20375 mA	24468 mW
LCPU platform 1.1V	1099 mV	3453 mA	3796 mW
LCPU core 1.0V	999 mV	8984 mA	8984 mW
BCM core 1.0V	999 mV	7929 mA	7921 mW
BCM & PEX Serdes 1.0V	1000 mV	4046 mA	4046 mW
12V	12351 mV	51918 mA	644880 mW

## FPC 5 status:

State	Online
FPC 5 Intake-A Temp Sensor	Failed
FPC 5 Intake-B Temp Sensor	Failed
FPC 5 Exhaust-A Temp Sensor	41 degrees C / 105 degrees F
FPC 5 Exhaust-B Temp Sensor	41 degrees C / 105 degrees F
FPC 5 Exhaust-C Temp Sensor	42 degrees C / 107 degrees F
FPC 5 PE0 Temp Sensor	47 degrees C / 116 degrees F
FPC 5 PE1 Temp Sensor	49 degrees C / 120 degrees F
FPC 5 PE2 Temp Sensor	53 degrees C / 127 degrees F
FPC 5 LCPU Temp Sensor	Failed
Power	

PE0 Core 0.9V	923 mV	30976 mA	28578 mW
PE0 HMC0 Core 0.9V	899 mV	10093 mA	9078 mW
PE1 Core 0.9V	897 mV	29398 mA	26414 mW
PE1 HMC0 Core 0.9V	899 mV	9734 mA	8750 mW
PE2 Core 0.9V	922 mV	30226 mA	27886 mW
PE2 HMC0 Core 0.9V	899 mV	9984 mA	8968 mW
PE0 Serdes 1.0V	1019 mV	29296 mA	29890 mW
PE1 Serdes 1.0V	1020 mV	28687 mA	29296 mW
PE2 Serdes 1.0V	1020 mV	28187 mA	28765 mW
LCPU Platform 1.1V	1100 mV	3664 mA	4031 mW
LCPU Core 1.0V	999 mV	9125 mA	9125 mW
PHY VDD B 1.0V	999 mV	15593 mA	15593 mW
PHY VDD A 1.0V	1000 mV	15453 mA	15453 mW
BCM Core 1.0V	999 mV	7773 mA	7765 mW
BCM PEX 1.0V	1000 mV	3460 mA	3464 mW
HMC Core 1.2V	1199 mV	1328 mA	1628 mW
HMC Serdes 1.2V	1199 mV	32203 mA	38625 mW
VDD 1.5V	1499 mV	2675 mA	4007 mW
VDD 2.5V	2450 mV	3675 mA	9000 mW
VDD 3.3V	3300 mV	1814 mA	5980 mW
12V	12272 mV	29045 mA	361369 mW

## FPC 6 status:

State	Online
FPC 6 Intake-A Temp Sensor	41 degrees C / 105 degrees F
FPC 6 Intake-B Temp Sensor	37 degrees C / 98 degrees F
FPC 6 Exhaust-A Temp Sensor	40 degrees C / 104 degrees F
FPC 6 Exhaust-B Temp Sensor	40 degrees C / 104 degrees F
FPC 6 Exhaust-C Temp Sensor	40 degrees C / 104 degrees F
FPC 6 PE0 Temp Sensor	45 degrees C / 113 degrees F
FPC 6 PE1 Temp Sensor	47 degrees C / 116 degrees F
FPC 6 PE2 Temp Sensor	51 degrees C / 123 degrees F
FPC 6 LCPU Temp Sensor	41 degrees C / 105 degrees F
Power	

PE0 Core 0.9V	897 mV	30214 mA	27179 mW
PE0 HMC0 Core 0.9V	899 mV	10000 mA	8984 mW
PE1 Core 0.9V	873 mV	29332 mA	25601 mW
PE1 HMC0 Core 0.9V	899 mV	9828 mA	8828 mW



PE2 Core 0.9V	898 mV	30781 mA	27675 mW
PE2 HMC0 Core 0.9V	899 mV	10328 mA	9296 mW
PE0 Serdes 1.0V	1019 mV	28921 mA	29531 mW
PE1 Serdes 1.0V	1020 mV	29437 mA	30046 mW
PE2 Serdes 1.0V	1019 mV	29671 mA	30281 mW
LCPU Platform 1.1V	1100 mV	3671 mA	4039 mW
LCPU Core 1.0V	1000 mV	8218 mA	8187 mW
PHY VDD B 1.0V	1000 mV	15984 mA	15984 mW
PHY VDD A 1.0V	999 mV	16093 mA	16093 mW
BCM Core 1.0V	1000 mV	8046 mA	8062 mW
BCM PEX 1.0V	1000 mV	3500 mA	3500 mW
HMC Core 1.2V	1199 mV	1327 mA	1579 mW
HMC Serdes 1.2V	1199 mV	33031 mA	39593 mW
VDD 1.5V	1499 mV	2722 mA	4078 mW
VDD 2.5V	2449 mV	3539 mA	8671 mW
VDD 3.3V	3299 mV	8082 mA	26656 mW
12V	12311 mV	31124 mA	385270 mW

### show chassis environment fpc (PTX10016 router)

```
user@host> show chassis environment fpc
```

FPC 1 status:

State	Online
FPC 1 Intake-A Temp Sensor	36 degrees C / 96 degrees F
FPC 1 Intake-B Temp Sensor	32 degrees C / 89 degrees F
FPC 1 Exhaust-A Temp Sensor	37 degrees C / 98 degrees F
FPC 1 Exhaust-B Temp Sensor	36 degrees C / 96 degrees F
FPC 1 Exhaust-C Temp Sensor	36 degrees C / 96 degrees F
FPC 1 PE0 Temp Sensor	45 degrees C / 113 degrees F
FPC 1 PE1 Temp Sensor	46 degrees C / 114 degrees F
FPC 1 PE2 Temp Sensor	53 degrees C / 127 degrees F
FPC 1 LCPU Temp Sensor	35 degrees C / 95 degrees F

Power

PE0 Core 0.9V	897 mV	28992 mA	26027 mW
PE0 HMC0 Core 0.9V	899 mV	10156 mA	9156 mW
PE1 Core 0.9V	871 mV	28800 mA	25164 mW
PE1 HMC0 Core 0.9V	899 mV	10125 mA	9109 mW
PE2 Core 0.9V	898 mV	29914 mA	26906 mW
PE2 HMC0 Core 0.9V	899 mV	10343 mA	9296 mW
PE0 Serdes 1.0V	1019 mV	27515 mA	28093 mW
PE1 Serdes 1.0V	1020 mV	27968 mA	28546 mW
PE2 Serdes 1.0V	1019 mV	27796 mA	28359 mW
LCPU Platform 1.1V	1100 mV	3347 mA	3289 mW
LCPU Core 1.0V	1000 mV	7960 mA	7960 mW
PHY VDD B 1.0V	1000 mV	16437 mA	16437 mW
PHY VDD A 1.0V	999 mV	15656 mA	15656 mW
BCM Core 1.0V	1000 mV	7289 mA	7335 mW
BCM PEX 1.0V	999 mV	3453 mA	3453 mW
HMC Core 1.2V	1199 mV	1218 mA	1453 mW
HMC Serdes 1.2V	1199 mV	32093 mA	38562 mW
VDD 1.5V	1500 mV	2859 mA	4289 mW
VDD 2.5V	2449 mV	3875 mA	9500 mW
VDD 3.3V	3299 mV	2806 mA	9257 mW
12V	12351 mV	28569 mA	354877 mW

FPC 3 status:

State	Online
FPC 3 Intake-A Temp Sensor	35 degrees C / 95 degrees F
FPC 3 Intake-B Temp Sensor	31 degrees C / 87 degrees F
FPC 3 Exhaust-A Temp Sensor	36 degrees C / 96 degrees F



FPC 3 Exhaust-B Temp Sensor	34 degrees C / 93 degrees F		
FPC 3 Exhaust-C Temp Sensor	33 degrees C / 91 degrees F		
FPC 3 PE0 Temp Sensor	43 degrees C / 109 degrees F		
FPC 3 PE1 Temp Sensor	45 degrees C / 113 degrees F		
FPC 3 PE2 Temp Sensor	49 degrees C / 120 degrees F		
FPC 3 LCPU Temp Sensor	35 degrees C / 95 degrees F		
Power			
PE0 Core 0.9V	897 mV	28832 mA	25871 mW
PE0 HMC0 Core 0.9V	899 mV	10359 mA	9328 mW
PE1 Core 0.9V	873 mV	28230 mA	24671 mW
PE1 HMC0 Core 0.9V	899 mV	10468 mA	9421 mW
PE2 Core 0.9V	898 mV	29539 mA	26539 mW
PE2 HMC0 Core 0.9V	899 mV	10656 mA	9593 mW
PE0 Serdes 1.0V	1020 mV	27484 mA	28031 mW
PE1 Serdes 1.0V	1019 mV	27515 mA	28078 mW
PE2 Serdes 1.0V	1020 mV	27625 mA	28187 mW
LCPU Platform 1.1V	1099 mV	3050 mA	3355 mW
LCPU Core 1.0V	999 mV	7820 mA	7804 mW
PHY VDD B 1.0V	999 mV	15406 mA	15406 mW
PHY VDD A 1.0V	1000 mV	14953 mA	14953 mW
BCM Core 1.0V	1000 mV	7648 mA	7648 mW
BCM PEX 1.0V	1000 mV	3531 mA	3531 mW
HMC Core 1.2V	1200 mV	1234 mA	1476 mW
HMC Serdes 1.2V	1199 mV	34671 mA	41593 mW
VDD 1.5V	1499 mV	3484 mA	5226 mW
VDD 2.5V	2449 mV	3218 mA	7890 mW
VDD 3.3V	3299 mV	2468 mA	8148 mW
12V	12311 mV	28785 mA	355950 mW
FPC 6 status:			
State	Online		
FPC 6 Intake-A Temp Sensor	34 degrees C / 93 degrees F		
FPC 6 Intake-B Temp Sensor	31 degrees C / 87 degrees F		
FPC 6 Exhaust-A Temp Sensor	34 degrees C / 93 degrees F		
FPC 6 Exhaust-B Temp Sensor	35 degrees C / 95 degrees F		
FPC 6 Exhaust-C Temp Sensor	35 degrees C / 95 degrees F		
FPC 6 PE0 Temp Sensor	42 degrees C / 107 degrees F		
FPC 6 PE1 Temp Sensor	43 degrees C / 109 degrees F		
FPC 6 PE2 Temp Sensor	47 degrees C / 116 degrees F		
FPC 6 LCPU Temp Sensor	34 degrees C / 93 degrees F		
Power			
PE0 Core 0.9V	922 mV	29394 mA	27160 mW
PE0 HMC0 Core 0.9V	899 mV	10078 mA	9062 mW
PE1 Core 0.9V	923 mV	29636 mA	27304 mW
PE1 HMC0 Core 0.9V	899 mV	9890 mA	8890 mW
PE2 Core 0.9V	898 mV	29734 mA	26757 mW
PE2 HMC0 Core 0.9V	899 mV	9968 mA	8968 mW
PE0 Serdes 1.0V	1020 mV	26968 mA	27515 mW
PE1 Serdes 1.0V	1019 mV	27421 mA	27984 mW
PE2 Serdes 1.0V	1019 mV	27625 mA	28171 mW
LCPU Platform 1.1V	1099 mV	3230 mA	4742 mW
LCPU Core 1.0V	999 mV	8171 mA	8171 mW
PHY VDD B 1.0V	1000 mV	15671 mA	15687 mW
PHY VDD A 1.0V	999 mV	15703 mA	15703 mW
BCM Core 1.0V	999 mV	7500 mA	7492 mW
BCM PEX 1.0V	1000 mV	3480 mA	3468 mW
HMC Core 1.2V	1199 mV	1199 mA	1440 mW
HMC Serdes 1.2V	1199 mV	31046 mA	37250 mW
VDD 1.5V	1499 mV	2804 mA	4203 mW
VDD 2.5V	2449 mV	3746 mA	9171 mW
VDD 3.3V	3300 mV	3173 mA	10476 mW



```

12V                                12311 mV   28786 mA   355654 mW
FPC 8 status:
State                             Online
FPC 8 Intake-A Temp Sensor 34 degrees C / 93 degrees F
FPC 8 Intake-B Temp Sensor 30 degrees C / 86 degrees F
FPC 8 Exhaust-A Temp Sensor 37 degrees C / 98 degrees F
FPC 8 Exhaust-B Temp Sensor 37 degrees C / 98 degrees F
FPC 8 Exhaust-C Temp Sensor 37 degrees C / 98 degrees F
FPC 8 PE0 Temp Sensor       42 degrees C / 107 degrees F
FPC 8 PE1 Temp Sensor       44 degrees C / 111 degrees F
FPC 8 PE2 Temp Sensor       47 degrees C / 116 degrees F
FPC 8 LCPU Temp Sensor      33 degrees C / 91 degrees F
Power
PE0 Core 0.9V               897 mV    29382 mA   26437 mW
PE0 HMC0 Core 0.9V          899 mV    10265 mA    9250 mW
PE1 Core 0.9V               872 mV    28867 mA   25175 mW
PE1 HMC0 Core 0.9V          899 mV    10171 mA    9109 mW
PE2 Core 0.9V               899 mV    30210 mA   27214 mW
PE2 HMC0 Core 0.9V          900 mV    10187 mA    9171 mW
PE0 Serdes 1.0V             1020 mV    27843 mA   28421 mW
PE1 Serdes 1.0V             1020 mV    28265 mA   28828 mW
PE2 Serdes 1.0V             1019 mV    28406 mA   29000 mW
LCPU Platform 1.1V         1099 mV     3000 mA    3300 mW
LCPU Core 1.0V              1000 mV     7937 mA    7937 mW
PHY VDD B 1.0V              1000 mV    15843 mA   15843 mW
PHY VDD A 1.0V              1000 mV    15250 mA   15250 mW
BCM Core 1.0V               999 mV     6914 mA    6898 mW
BCM PEX 1.0V                999 mV     3445 mA    3445 mW
HMC Core 1.2V               1199 mV     1162 mA    1390 mW
HMC Serdes 1.2V             1199 mV    33437 mA   40125 mW
VDD 1.5V                    1499 mV     2851 mA    4273 mW
VDD 2.5V                    2450 mV     3867 mA    9484 mW
VDD 3.3V                    3300 mV     3258 mA   10753 mW
12V                          12338 mV    28656 mA   356171 mW
FPC 9 status:
State                             Online
FPC 9 Intake-A Temp Sensor 44 degrees C / 111 degrees F
FPC 9 Intake-B Temp Sensor 28 degrees C / 82 degrees F
FPC 9 Exhaust-A Temp Sensor 51 degrees C / 123 degrees F
FPC 9 Exhaust-B Temp Sensor 52 degrees C / 125 degrees F
FPC 9 Exhaust-C Temp Sensor 48 degrees C / 118 degrees F
FPC 9 PE0 Temp Sensor       52 degrees C / 125 degrees F
FPC 9 PE1 Temp Sensor       65 degrees C / 149 degrees F
FPC 9 PE2 Temp Sensor       50 degrees C / 122 degrees F
FPC 9 PE3 Temp Sensor       65 degrees C / 149 degrees F
FPC 9 PE4 Temp Sensor       50 degrees C / 122 degrees F
FPC 9 PE5 Temp Sensor       67 degrees C / 152 degrees F
FPC 9 LCPU Temp Sensor      45 degrees C / 113 degrees F
Power
PE0 Core 0.9V               875 mV    28316 mA   24808 mW
PE1 Core 0.9V               875 mV    28546 mA   24996 mW
PE0 Serdes 1.0V             1019 mV    38906 mA   39687 mW
PE1 Serdes 1.0V             1020 mV    33078 mA   33781 mW
PE0 HMC Core 0.9V           899 mV     7718 mA    6945 mW
PE0,1 HMC Memory 1.2V      1199 mV      579 mA     695 mW
PE1 HMC Core 0.9V           899 mV     7289 mA    6570 mW
PE0,1 HMC Serdes 1.2V      1199 mV    20187 mA   24250 mW
PE2 Core 0.9V               924 mV    29062 mA   26894 mW
PE3 Core 0.9V               900 mV    28914 mA   26039 mW
PE2 Serdes 1.0V             1020 mV    36375 mA   37093 mW

```



PE3 Serdes 1.0V	1019 mV	32640 mA	33296 mW
PE2 HMC Core 0.9V	900 mV	7695 mA	6921 mW
PE2,3 HMC Memory 1.2V	1199 mV	562 mA	674 mW
PE3 HMC Core 0.9V	899 mV	7554 mA	6796 mW
PE2,3 HMC Serdes 1.2V	1199 mV	20156 mA	24218 mW
VDD 3.3V	3300 mV	8964 mA	29609 mW
VDD 1.5V	1499 mV	3968 mA	5945 mW
VDD 2.5V	2449 mV	4414 mA	10890 mW
PE4 Core 0.9V	900 mV	28527 mA	25679 mW
PE5 Core 0.9V	899 mV	28902 mA	26035 mW
PE4 Serdes 1.0V	1019 mV	41281 mA	42125 mW
PE5 Serdes 1.0V	1019 mV	25781 mA	26328 mW
PE4 HMC Core 0.9V	900 mV	7382 mA	6648 mW
PE4,5 HMC Memory 1.2V	1199 mV	626 mA	750 mW
PE5 HMC Core 0.9V	899 mV	7562 mA	6796 mW
PE4,5 HMC Serdes 1.2V	1199 mV	20312 mA	24375 mW
LCPU platform 1.1V	1099 mV	3687 mA	4054 mW
LCPU core 1.0V	1000 mV	9000 mA	9000 mW
BCM core 1.0V	999 mV	7843 mA	7835 mW
BCM & PEX Serdes 1.0V	999 mV	4062 mA	4062 mW
12V	12417 mV	51659 mA	643215 mW

#### show chassis environment FPC 1 (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis environment fpc 1
```

FPC 1 status:

State	Online
Temperature Intake	36 degrees C / 96 degrees F
Temperature Exhaust A	39 degrees C / 102 degrees F
Temperature LU TSen	52 degrees C / 125 degrees F
Temperature LU Chip	54 degrees C / 129 degrees F
Temperature XM TSen	52 degrees C / 125 degrees F
Temperature XM Chip	60 degrees C / 140 degrees F
Temperature PCIE TSen	52 degrees C / 125 degrees F
Temperature PCIE Chip	69 degrees C / 156 degrees F
Power	
MPC-BIAS3V3-z12106	3302 mV
MPC-VDD3V3-z16100	3325 mV
MPC-AVDD1V0-z16100	1007 mV
MPC-PCIE_1V0-z16100	904 mV
MPC-LU0_1V0-z12004	996 mV
MPC-VDD_1V5-z12004	1498 mV
MPC-12VA-BMR453	11733 mV
MPC-12VB-BMR453	11728 mV
MPC-XM_0V9-vt273m	900 mV
I2C Slave Revision	81

#### show chassis environment FPC (Junos OS Evolved)

```
user@switch> show chassis environment fpc
```

FPC 0 status:

State	Online
Intake Temperature	32 degrees C / 89 degrees F
Exhaust-A Temperature	43 degrees C / 109 degrees F
Exhaust-B Temperature	32 degrees C / 89 degrees F
PE0 Temperature	34 degrees C / 93 degrees F



PE1 Temperature	38 degrees C / 100 degrees F
PE2 Temperature	38 degrees C / 100 degrees F
PE3 Temperature	36 degrees C / 96 degrees F
PE4 Temperature	35 degrees C / 95 degrees F
PE5 Temperature	35 degrees C / 95 degrees F
Power 1	
RT_1 1.0v	1018 mV
RT_2 1.0v	1018 mV
Power 2	
FPC 1 1.0v	999 mV
FPC 2 1.0v	998 mV
Power 3	
FPC 2.5v	2499 mV
FPC 3.3v	3299 mV
Power 4	
FPC 0.9v	899 mV
FPC 1.5v	1499 mV
Power 5	
PE0 1 1.0v	1039 mV
PE0 2 1.0v	1039 mV
Power 6	
PE0 1 0.9v	900 mV
PE0 2 0.9v	900 mV
Power 7	
PE0 3 0.9v	902 mV
PE0 4 0.9v	902 mV
Power 8	
PE0 H 0.9v	899 mV
PE0 H 1.2v	1199 mV
Power 9	
PE1 1 1.0v	1040 mV
PE1 2 1.0v	1039 mV
Power 10	
PE1 1 0.9v	901 mV
PE1 2 0.9v	901 mV
Power 11	
PE1 3 0.9v	900 mV
PE1 4 0.9v	900 mV
Power 12	
PE1 H 0.9v	899 mV
PE1 H 1.2v	1199 mV
Power 13	
PE2 1 1.0v	1039 mV
PE2 2 1.0v	1039 mV
Power 14	
PE2 1 0.9v	900 mV
PE2 2 0.9v	900 mV
Power 15	
PE2 3 0.9v	900 mV
PE2 4 0.9v	900 mV
Power 16	
PE2 H 0.9v	899 mV
PE2 H 1.2v	1199 mV
Power 17	
PE3 1 1.0v	1039 mV
PE3 2 1.0v	1039 mV
Power 18	
PE3 1 0.9v	899 mV
PE3 2 0.9v	900 mV
Power 19	



PE3 3 0.9v	899 mV
PE3 4 0.9v	900 mV
Power 20	
PE3 H 0.9v	899 mV
PE3 H 1.2v	1199 mV
Power 21	
PE4 1 1.0v	1039 mV
PE4 2 1.0v	1039 mV
Power 22	
PE4 1 0.9v	900 mV
PE4 2 0.9v	900 mV
Power 23	
PE4 3 0.9v	901 mV
PE4 4 0.9v	901 mV
Power 24	
PE4 H 0.9v	899 mV
PE4 H 1.2v	1199 mV
Power 25	
PE5 1 1.0v	1040 mV
PE5 2 1.0v	1039 mV
Power 26	
PE5 1 0.9v	901 mV
PE5 2 0.9v	901 mV
Power 27	
PE5 3 0.9v	901 mV
PE5 4 0.9v	901 mV
Power 28	
PE5 H 0.9v	899 mV
PE5 H 1.2v	1199 mV
Power 29	
PIC0 12.0v	12342 mV
Power 30	
PIC1 12.0v	12342 mV
Power 31	
A 12.0v	12375 mV
B 12.0v	1008 mV
Bus Revision	115
FPC 1 status:	
State	Online
Intake Temperature	33 degrees C / 91 degrees F
Exhaust-A Temperature	44 degrees C / 111 degrees F
Exhaust-B Temperature	33 degrees C / 91 degrees F
PE0 Temperature	34 degrees C / 93 degrees F
PE1 Temperature	38 degrees C / 100 degrees F
PE2 Temperature	37 degrees C / 98 degrees F
PE3 Temperature	36 degrees C / 96 degrees F
PE4 Temperature	34 degrees C / 93 degrees F
PE5 Temperature	36 degrees C / 96 degrees F
Power 1	
RT_1 1.0v	1018 mV
RT_2 1.0v	1018 mV
Power 2	
FPC 1 1.0v	999 mV
FPC 2 1.0v	999 mV
Power 3	
FPC 2.5v	2499 mV
FPC 3.3v	3300 mV
Power 4	
FPC 0.9v	899 mV
FPC 1.5v	1500 mV



Power 5	
PE0 1 1.0v	1039 mV
PE0 2 1.0v	1039 mV
Power 6	
PE0 1 0.9v	925 mV
PE0 2 0.9v	925 mV
Power 7	
PE0 3 0.9v	925 mV
PE0 4 0.9v	926 mV
Power 8	
PE0 H 0.9v	899 mV
PE0 H 1.2v	1199 mV
Power 9	
PE1 1 1.0v	1040 mV
PE1 2 1.0v	1039 mV
Power 10	
PE1 1 0.9v	900 mV
PE1 2 0.9v	901 mV
Power 11	
PE1 3 0.9v	899 mV
PE1 4 0.9v	900 mV
Power 12	
PE1 H 0.9v	899 mV
PE1 H 1.2v	1199 mV
Power 13	
PE2 1 1.0v	1040 mV
PE2 2 1.0v	1039 mV
Power 14	
PE2 1 0.9v	926 mV
PE2 2 0.9v	926 mV
Power 15	
PE2 3 0.9v	927 mV
PE2 4 0.9v	927 mV
Power 16	
PE2 H 0.9v	899 mV
PE2 H 1.2v	1199 mV
Power 17	
PE3 1 1.0v	1039 mV
PE3 2 1.0v	1039 mV
Power 18	
PE3 1 0.9v	926 mV
PE3 2 0.9v	927 mV
Power 19	
PE3 3 0.9v	925 mV
PE3 4 0.9v	926 mV
Power 20	
PE3 H 0.9v	899 mV
PE3 H 1.2v	1199 mV
Power 21	
PE4 1 1.0v	1039 mV
PE4 2 1.0v	1040 mV
Power 22	
PE4 1 0.9v	925 mV
PE4 2 0.9v	925 mV
Power 23	
PE4 3 0.9v	925 mV
PE4 4 0.9v	926 mV
Power 24	
PE4 H 0.9v	900 mV
PE4 H 1.2v	1199 mV



```

Power 25
  PE5 1 1.0v          1039 mV
  PE5 2 1.0v          1039 mV
Power 26
  PE5 1 0.9v          898 mV
  PE5 2 0.9v          899 mV
Power 27
  PE5 3 0.9v          900 mV
  PE5 4 0.9v          900 mV
Power 28
  PE5 H 0.9v          899 mV
  PE5 H 1.2v          1199 mV
Power 29
  PIC0 12.0v           0 mV
Power 30
  PIC1 12.0v          12402 mV
Power 31
  A    12.0v          12344 mV
  B    12.0v          1008 mV
Bus Revision           115
FPC 2 status:
State                  Online
Intake Temperature     31 degrees C / 87 degrees F
Exhaust-A Temperature  38 degrees C / 100 degrees F
Exhaust-B Temperature  28 degrees C / 82 degrees F
PE0 Temperature        28 degrees C / 82 degrees F
PE1 Temperature        33 degrees C / 91 degrees F
PE2 Temperature        34 degrees C / 93 degrees F
PE3 Temperature        31 degrees C / 87 degrees F
Power 1
  RT_1 1.0v           1018 mV
  RT_2 1.0v           1018 mV
Power 2
  FPC 1 1.0v           999 mV
  FPC 2 1.0v           999 mV
Power 3
  FPC 2.5v             2499 mV
  FPC 3.3v             3299 mV
Power 4
  FPC 0.9v             899 mV
  FPC 1.5v             1500 mV
Power 5
  PE0 1 1.0v           1039 mV
  PE0 2 1.0v           1040 mV
Power 6
  PE0 1 0.9v           900 mV
  PE0 2 0.9v           901 mV
Power 7
  PE0 3 0.9v           900 mV
  PE0 4 0.9v           900 mV
Power 8
  PE0 H 0.9v           899 mV
  PE0 H 1.2v           1199 mV
Power 9
  PE1 1 1.0v           1039 mV
  PE1 2 1.0v           1039 mV
Power 10
  PE1 1 0.9v           875 mV
  PE1 2 0.9v           876 mV
Power 11

```



```

    PE1 3 0.9v          875 mV
    PE1 4 0.9v          875 mV
Power 12
    PE1 H 0.9v          899 mV
    PE1 H 1.2v          1199 mV
Power 13
    PE2 1 1.0v          1039 mV
    PE2 2 1.0v          1039 mV
Power 14
    PE2 1 0.9v          900 mV
    PE2 2 0.9v          900 mV
Power 15
    PE2 3 0.9v          900 mV
    PE2 4 0.9v          900 mV
Power 16
    PE2 H 0.9v          899 mV
    PE2 H 1.2v          1199 mV
Power 17
    PE3 1 1.0v          1039 mV
    PE3 2 1.0v          1039 mV
Power 18
    PE3 1 0.9v          875 mV
    PE3 2 0.9v          875 mV
Power 19
    PE3 3 0.9v          875 mV
    PE3 4 0.9v          875 mV
Power 20
    PE3 H 0.9v          899 mV
    PE3 H 1.2v          1200 mV
Power 21
    PIC0 12.0v          12281 mV
Power 22
    PIC1 12.0v           0 mV
Power 23
    A    12.0v          12406 mV
    B    12.0v          1006 mV
Bus Revision          115
FPC 3 status:
State                 Online
Intake Temperature    33 degrees C / 91 degrees F
Exhaust-A Temperature 44 degrees C / 111 degrees F
Exhaust-B Temperature 30 degrees C / 86 degrees F
PE0 Temperature       33 degrees C / 91 degrees F
PE1 Temperature       37 degrees C / 98 degrees F
PE2 Temperature       38 degrees C / 100 degrees F
PE3 Temperature       34 degrees C / 93 degrees F
PE4 Temperature       33 degrees C / 91 degrees F
PE5 Temperature       36 degrees C / 96 degrees F
Power 1
    RT_1 1.0v          1018 mV
    RT_2 1.0v          1018 mV
Power 2
    FPC 1 1.0v          999 mV
    FPC 2 1.0v          999 mV
Power 3
    FPC 2.5v            2500 mV
    FPC 3.3v            3299 mV
Power 4
    FPC 0.9v            899 mV
    FPC 1.5v            1500 mV

```



Power 5	
PE0 1 1.0v	1039 mV
PE0 2 1.0v	1039 mV
Power 6	
PE0 1 0.9v	900 mV
PE0 2 0.9v	900 mV
Power 7	
PE0 3 0.9v	898 mV
PE0 4 0.9v	899 mV
Power 8	
PE0 H 0.9v	899 mV
PE0 H 1.2v	1199 mV
Power 9	
PE1 1 1.0v	1040 mV
PE1 2 1.0v	1039 mV
Power 10	
PE1 1 0.9v	926 mV
PE1 2 0.9v	926 mV
Power 11	
PE1 3 0.9v	925 mV
PE1 4 0.9v	925 mV
Power 12	
PE1 H 0.9v	900 mV
PE1 H 1.2v	1199 mV
Power 13	
PE2 1 1.0v	1039 mV
PE2 2 1.0v	1039 mV
Power 14	
PE2 1 0.9v	873 mV
PE2 2 0.9v	873 mV
Power 15	
PE2 3 0.9v	875 mV
PE2 4 0.9v	875 mV
Power 16	
PE2 H 0.9v	899 mV
PE2 H 1.2v	1199 mV
Power 17	
PE3 1 1.0v	1039 mV
PE3 2 1.0v	1039 mV
Power 18	
PE3 1 0.9v	899 mV
PE3 2 0.9v	900 mV
Power 19	
PE3 3 0.9v	899 mV
PE3 4 0.9v	899 mV
Power 20	
PE3 H 0.9v	899 mV
PE3 H 1.2v	1199 mV
Power 21	
PE4 1 1.0v	1040 mV
PE4 2 1.0v	1040 mV
Power 22	
PE4 1 0.9v	949 mV
PE4 2 0.9v	950 mV
Power 23	
PE4 3 0.9v	950 mV
PE4 4 0.9v	951 mV
Power 24	
PE4 H 0.9v	899 mV
PE4 H 1.2v	1199 mV



```
Power 25
  PE5 1 1.0v          1039 mV
  PE5 2 1.0v          1039 mV
Power 26
  PE5 1 0.9v          900 mV
  PE5 2 0.9v          900 mV
Power 27
  PE5 3 0.9v          900 mV
  PE5 4 0.9v          900 mV
Power 28
  PE5 H 0.9v          899 mV
  PE5 H 1.2v          1199 mV
Power 29
  PIC0 12.0v           0 mV
Power 30
  PIC1 12.0v           0 mV
Power 31
  A    12.0v           12406 mV
  B    12.0v           1008 mV
Bus Revision           115
FPC 6 status:
State                  Onlining
Bus Revision           115
```



## show chassis environment pem

**List of Syntax**

- Syntax on page 338
- Syntax (ACX4000 Router) on page 338
- Syntax (TX Matrix Routers) on page 338
- Syntax (TX Matrix Plus Routers) on page 338
- Syntax (MX Series Router) on page 338
- Syntax (PTX Series Router) on page 338
- Syntax (MX104 Universal Routing Platforms) on page 338
- Syntax (MX10003 , MX204, and MX10008 Universal Routing Platforms) on page 339
- Syntax (QFX Series) on page 339
- Syntax (OCX Series) on page 339
- Syntax (EX9251, EX9253 Switches) on page 339

**Syntax** show chassis environment pem  
<slot>

**Syntax (ACX4000 Router)** show chassis environment pem

**Syntax (TX Matrix Routers)** show chassis environment pem  
<lcc number | scc>  
<slot>


**Syntax (TX Matrix Plus Routers)** show chassis environment pem  
<lcc number | sfc number>  
<slot>

**Syntax (MX Series Router)** show chassis environment pem  
<slot>  
<all-members>  
<local>  
<member member-id>

**Syntax (PTX Series Router)** show chassis environment pem  
<slot>  
<all-members>  
<local>  
<member member-id>

**Syntax (MX104 Universal Routing Platforms)** show chassis environment pem  
<slot>  
<satellite [fpc-slot slot-id [device-alias alias-name]]



Syntax (MX10003 , MX204, and MX10008 Universal Routing Platforms)	show chassis environment pem <slot>
Syntax (QFX Series)	show chassis environment pem <slot (interconnect-device <i>name slot</i> )   (node-device <i>name</i> )>
Syntax (OCX Series)	show chassis environment pem <slot>
Syntax (EX9251, EX9253 Switches)	show chassis environment pem <slot>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.3R2 for EX Series.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Routers</p>
Description	<p>Display Power Entry Module (PEM) environmental status information.</p> <div>  <p><b>NOTE:</b> The new high-capacity (4100W) enhanced DC PEM on MX960 routers includes a new design that can condition the input voltage. This results in the output voltage differing from the input voltage. The earlier generation of DC PEMs coupled the input power directly to the output, thereby making it safe to assume that the output voltage was equal to the input voltage.</p> </div>
Options	<p><b>none</b>—Display environmental information about both PEMs. For the TX Matrix router, display environmental information about the PEMs, the TX Matrix router, and its attached T640 routers. For the TX Matrix Plus router, display environmental information about the PEMs, the TX Matrix Plus router, and its attached routers.</p> <p><b>all-members</b>—(MX Series routers only) (Optional) Display environmental information about the PEMs in all the member routers of the Virtual Chassis configuration.</p>



**interconnect-device *name***—(QFabric systems only) (Optional) Display chassis environmental information about the PEMs in the Interconnect device.

**lcc *number***—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display environmental information about the PEM in the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display environmental information about the PEM in the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**node-device *name***—(QFabric systems only) (Optional) Display chassis environmental information about the PEMs in the Node device.

**satellite [*fpc-slot slot-id* | device-alias *alias-name*]**—(Junos Fusion only)(Optional) Display environmental information about the PEM in the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scc**—(TX Matrix routers only) (Optional) Display environmental information about the PEM in the TX Matrix router (or switch-card chassis).

**sfc**—(TX Matrix Plus routers only) (Optional) Display environmental information about the PEM in the TX Matrix Plus router (or switch-fabric chassis).

**slot** —(Optional) Display environmental information about an individual PEM. Replace *slot* with 0 or 1.

**Required Privilege Level**

view

**Related Documentation**

- [show chassis hardware on page 651](#)

**List of Sample Output**

[show chassis environment pem \(M40e Router\) on page 342](#)  
[show chassis environment pem \(M120 Router\) on page 342](#)



[show chassis environment pem \(M160 Router\) on page 343](#)  
[show chassis environment pem \(M320 Router\) on page 343](#)  
[show chassis environment pem \(MX150\) on page 343](#)  
[show chassis environment pem \(MX104 Router\) on page 343](#)  
[show chassis environment pem \(MX240 Router\) on page 344](#)  
[show chassis environment pem \(MX480 Router\) on page 344](#)  
[show chassis environment pem \(MX960 Router\) on page 344](#)  
[show chassis environment pem \(MX10003 Router\) on page 344](#)  
[show chassis environment pem \(MX204 Router\) on page 345](#)  
[show chassis environment pem \(MX10008 Router\) on page 345](#)  
[show chassis environment pem \(PTX10016 Router\) on page 346](#)  
[show chassis environment pem \(T320 Router\) on page 347](#)  
[show chassis environment pem \(T640 Router\) on page 347](#)  
[show chassis environment pem \(T4000 Router\) on page 348](#)  
[show chassis environment pem \(T640/T1600/T4000 Routers With Six-Input DC Power Supply\) on page 348](#)  
[show chassis environment pem lcc \(TX Matrix Routing Matrix\) on page 348](#)  
[show chassis environment pem scc \(TX Matrix Routing Matrix\) on page 349](#)  
[show chassis environment pem sfc \(TX Matrix Plus Routing Matrix\) on page 349](#)  
[show chassis environment pem lcc \(TX Matrix Plus Routing Matrix\) on page 349](#)  
[show chassis environment pem node-device \(QFabric System\) on page 350](#)  
[show chassis environment pem \(QFX Series and OCX Series\) on page 350](#)  
[show chassis environment pem \(QFX 10016\) on page 351](#)  
[show chassis environment pem interconnect-device \(QFabric System\) on page 351](#)  
[show chassis environment pem \(EX9251 Switches\) on page 351](#)  
[show chassis environment pem \(EX9253 Switches\) on page 351](#)  
[show chassis environment pem \(PTX1000 Packet Transport Routers\) on page 352](#)

**Output Fields** [Table 11 on page 341](#) lists the output fields for the **show chassis environment pem** command. Output fields are listed in the approximate order in which they appear.

*Table 11: show chassis environment pem Output Fields*

Field Name	Field Description
PEMslotstatus	Number of the PEM slot.
State	Status of the PEM.
Temperature	Temperature of the air flowing past the PEM.
AC Input	Status of the AC input for the specified component
AC Output	Status of the AC output for the specified component.
DC input	Status of the DC input for the specified component.
DC output	Status of the DC output for the specified component.



Table 11: show chassis environment pem Output Fields (continued)

Field Name	Field Description
Load	(Not available on M40e or M160 routers) Information about the load on supply, in percentage of rated current being used.
Voltage	(M120, M160, M320, T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about voltage supplied to the PEM.  (MX104 routers only) Information about voltage supplied by the PEM to the system.
Current	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about the PEM current.
Power	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about the PEM power.
SCG/CB/SIB	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) SONET Clock Generator/Control Board/Switch Interface Board.
FAN	(T640, T1600, and T4000 routers with six-input DC power supply only) Information about the DC output to the fan.

## Sample Output

### show chassis environment pem (M40e Router)

```
user@host> show chassis environment pem
```

```
PEM 0 status:
  State           Online
  Temperature      OK
  AC input         OK
  DC output        OK
```

### show chassis environment pem (M120 Router)

```
user@host> show chassis environment pem
```

```
PEM 0 status:
  State           Online
  Temperature      OK
  DC Input:       OK
  DC Output:       OK
  Load           Less than 20 percent
  Voltage:
    48.0 V input   52864 mV
    48.0 V fan supply 41655 mV
    3.3 V          3399 mV
PEM 1 status:
  State           Online
  Temperature      OK
  DC Input:       OK
  DC Output:       OK
  Load           Less than 20 percent
  Voltage:
    48.0 V input   54537 mV
```



48.0 V fan supply	42910 mV
3.3 V	3506 mV

### show chassis environment pem (M160 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State                Online
  Temperature           OK
  DC input              OK
  DC output             OK
  Load                 Less than 20 percent
  Voltage:
    48.0 V input        54833 mV
    48.0 V fan supply   50549 mV
    8.0 V bias          8239 mV
    5.0 V bias          5006 mV

```

### show chassis environment pem (M320 Router)

```
user@host> show chassis environment pem
```

```

PEM 2 status:
  State                Online
  Temperature           OK
  DC input              OK
  Load                 Less than 40 percent
    48.0 V input        51853 mV
    48.0 V fan supply   48877 mV
    8.0 V bias          8449 mV
    5.0 V bias          4998 mV
PEM 3 status:
  State                Online
  Temperature           OK
  DC input              OK
  Load                 Less than 40 percent
    48.0 V input        51717 mV
    48.0 V fan supply   49076 mV
    8.0 V bias          8442 mV
    5.0 V bias          4998 mV

```

### show chassis environment pem (MX150)

```
user@host> show chassis environment pem
```

```

FPC 0 PEM 0 status:
  State                Online
  Airflow              Front to Back
  Temperature           OK

```

### show chassis environment pem (MX104 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State                Online
  Temperature           OK

```



```
DC Output:           OK
Voltage:
  12.0 V output      12281 mV
  3.3 V output       3353 mV
PEM 1 status:
  State              Empty
```

#### show chassis environment pem (MX240 Router)

```
user@host> show chassis environment pem
```

```
PEM 0 status:
  State              Online
  Temperature        OK
  DC Output:         OK
PEM 1 status:
  State              Online
  Temperature        OK
  DC Output:         OK
```

#### show chassis environment pem (MX480 Router)

```
user@host> show chassis environment pem
```

```
PEM 0 status:
  State              Online
  Temperature        OK
  DC Input:          OK
  DC Output:         OK
  Voltage:
PEM 1 status:
  State              Online
  Temperature        OK
  DC Input:          OK
  DC Output:         OK
  Voltage:
```

#### show chassis environment pem (MX960 Router)

```
user@host> show chassis environment pem
```

```
PEM 2 status:
  State              Present
PEM 3 status:
  State              Online
  Temperature        OK
  DC Output:         OK
```

#### show chassis environment pem (MX10003 Router)

```
user@host> show chassis environment pem
```

```
PEM 0 status:
  State              Online
  Airflow            Front to Back
  Temperature        OK   34 degrees C / 93 degrees F
  Temperature        OK   26 degrees C / 78 degrees F
  Temperature        OK   24 degrees C / 75 degrees F
```



```

Firmware version      0x22
Cooling Fan           8752 RPM
DC Output              Voltage(V) Current(A) Power(W) Load(%)
                       12.00      26          312      10

PEM 1 status:
State                 Online
Airflow               Front to Back
Temperature            OK   35 degrees C / 95 degrees F
Temperature            OK   26 degrees C / 78 degrees F
Temperature            OK   25 degrees C / 77 degrees F
Firmware version      0x22
Cooling Fan           8480 RPM
DC Output              Voltage(V) Current(A) Power(W) Load(%)
                       12.00      27          324      11

PEM 2 status:
State                 Online
Airflow               Front to Back
Temperature            OK   37 degrees C / 98 degrees F
Temperature            OK   29 degrees C / 84 degrees F
Temperature            OK   25 degrees C / 77 degrees F
Firmware version      0x22
Cooling Fan           8656 RPM
DC Output              Voltage(V) Current(A) Power(W) Load(%)
                       12.00      25          300      10

PEM 3 status:
State                 Online
Airflow               Front to Back
Temperature            OK   35 degrees C / 95 degrees F
Temperature            OK   26 degrees C / 78 degrees F
Temperature            OK   25 degrees C / 77 degrees F
Firmware version      0x22
Cooling Fan           8448 RPM
DC Output              Voltage(V) Current(A) Power(W) Load(%)
                       12.00      26          312      10

PEM 4 status:
State                 Empty
PEM 5 status:
State                 Empty

```

#### show chassis environment pem (MX204 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
State                 Empty
PEM 1 status:
State                 Online
Airflow               Front to Back
Temperature            OK   48 degrees C / 118 degrees F
Temperature            OK   51 degrees C / 123 degrees F
Fan Sensor             5400 RPM
DC Output              Voltage(V) Current(A) Power(W) Load(%)
                       11.94      16          191      29

```

#### show chassis environment pem (MX10008 Router)

```
user@host> show chassis environment pem
```



```

PEM 0 status:
  State           Online
  Airflow         Front to Back
  Temperature      OK    29 degrees C / 84 degrees F
  Firmware version 0x36
  Fan 0           5880 RPM
  DC Output        Voltage(V) Current(A) Power(W) Load(%)
                   12.00      104      1248      46
PEM 1 status:
  State           Online
  Airflow         Front to Back
  Temperature      OK    27 degrees C / 80 degrees F
  Firmware version 0x36
  Fan 0           5940 RPM
  DC Output        Voltage(V) Current(A) Power(W) Load(%)
                   12.00      104      1248      46
PEM 2 status:
  State           Online
  Airflow         Front to Back
  Temperature      OK    30 degrees C / 86 degrees F
  Firmware version 0x36
  Fan 0           5940 RPM
  DC Output        Voltage(V) Current(A) Power(W) Load(%)
                   12.00      105      1260      46
PEM 3 status:
  State           Present
PEM 4 status:
  State           Present
PEM 5 status:
  State           Present

```

### show chassis environment pem (PTX10016 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
  State           Online
  Airflow         Front to Back
  Temperature      OK    21 degrees C / 69 degrees F
  Firmware version 0x36
  Fan 0           5760 RPM
  DC Output        Voltage(V) Current(A) Power(W) Load(%)
                   12.00      51      612      22
PEM 1 status:
  State           Online
  Airflow         Front to Back
  Temperature      OK    23 degrees C / 73 degrees F
  Firmware version 0x36
  Fan 0           5760 RPM
  DC Output        Voltage(V) Current(A) Power(W) Load(%)
                   12.00      52      624      23
PEM 2 status:
  State           Online
  Airflow         Front to Back
  Temperature      OK    23 degrees C / 73 degrees F
  Firmware version 0x36
  Fan 0           5760 RPM
  DC Output        Voltage(V) Current(A) Power(W) Load(%)
                   12.00      51      612      22
PEM 3 status:

```



```

State                Online
Airflow              Front to Back
Temperature           OK    21 degrees C / 69 degrees F
Firmware version     0x36
Fan 0                 5760 RPM
DC Output             Voltage(V) Current(A) Power(W) Load(%)
                      12.00      51      612      22
PEM 4 status:
State                Online
Airflow              Front to Back
Temperature           OK    22 degrees C / 71 degrees F
Firmware version     0x36
Fan 0                 5760 RPM
DC Output             Voltage(V) Current(A) Power(W) Load(%)
                      12.00      52      624      23
PEM 5 status:
State                Online
Airflow              Front to Back
Temperature           OK    24 degrees C / 75 degrees F
Firmware version     0x36
Fan 0                 5700 RPM
DC Output             Voltage(V) Current(A) Power(W) Load(%)
                      12.00      51      612      22
PEM 6 status:
State                Online
Airflow              Front to Back
Temperature           OK    21 degrees C / 69 degrees F
Firmware version     0x36
Fan 0                 5700 RPM
DC Output             Voltage(V) Current(A) Power(W) Load(%)
                      12.00      50      600      22

```

### show chassis environment pem (T320 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
State                Online
Temperature           OK
DC input:            OK

```

### show chassis environment pem (T640 Router)

```
user@host> show chassis environment pem
```

```

PEM 0 status:
State                Online
Temperature           22 degrees C / 71 degrees F
AC input: OK
DC output:           Voltage Current Power Load
FPC 0                56875    606    34    4
FPC 1                57016    525    29    3
FPC 2                 0        0     0     0
FPC 3                 0        0     0     0
FPC 4                 0        0     0     0
FPC 5                 0        0     0     0
FPC 6                57158   1581    90   12
FPC 7                 0        0     0     0
SCG/CB/SIB           56750   1125    63    5

```



## show chassis environment pem (T4000 Router)

```
user@host> show chassis environment pem
```

```
PEM 0 status:
State          Online
Temperature    33 degrees C / 91 degrees F
DC Input:      OK
                Voltage(V)  Current(A)  Power(W)  Load(%)
INPUT 0        54.625      9.812      535       22
INPUT 1        54.625     10.250     559       23
INPUT 2        55.125      0.125       6        0
INPUT 3        54.500     10.062     548       22
INPUT 4        54.750      9.375     513       21
INPUT 5        54.750     10.187     557       23
DC Output      Voltage(V)  Current(A)  Power(W)  Load(%)
FPC 0          55.750     10.125     564       37
FPC 1          51.625      0.000       0        0
FPC 2          52.000      0.000       0        0
FPC 3          55.062     10.437     574       38
FPC 4          52.125      0.000       0        0
FPC 5          55.000      9.375     515       34
FPC 6          55.187      9.687     534       35
FPC 7          51.437      0.000       0        0
SCG/CB/SIB     55.375     15.750     872       35
FAN            54.562     14.750     804       42
```

## show chassis environment pem (T640/T1600/T4000 Routers With Six-Input DC Power Supply)

```
user@host> show chassis environment pem
```

```
PEM 1 status:
State          Online
Temperature    36 degrees C / 96 degrees F
DC Input:      OK
                Voltage(V)  Current(A)  Power(W)  Load(%)
INPUT 0         0.000      0.000       0        0
INPUT 1        54.875      3.812      209       27
INPUT 2        55.375      3.937      218       29
INPUT 3        54.625      3.750      204       27
INPUT 4        55.125      3.375      186       24
INPUT 5        55.125      3.375      186       24
DC Output      Voltage(V)  Current(A)  Power(W)  Load(%)
FPC 0          52.312      0.000       0        0
FPC 1          52.687      0.000       0        0
FPC 2          52.812      0.000       0        0
FPC 3          55.812      7.062      394       52
FPC 4          52.625      0.000       0        0
FPC 5          52.625      0.000       0        0
FPC 6          52.750      0.000       0        0
FPC 7          52.750      0.000       0        0
SCG/CB/SIB     55.937     11.937     667       55
FAN            55.812      4.937      275       36
```

## show chassis environment pem lcc (TX Matrix Routing Matrix)

```
user@host> show chassis environment pem 0 lcc 0
```

```
lcc0-re0:
```



```

PEM 0 status:
State                Present
Temperature           27 degrees C / 80 degrees F
DC input:             Check
DC output:            Voltage Current      Power      Load
    FPC 0              0         0          0         0
    FPC 1              0         0          0         0
    FPC 2              0         0          0         0
    FPC 3              0         0          0         0
    FPC 4              0         0          0         0
    FPC 5              0         0          0         0
    FPC 6              0         0          0         0
    FPC 7              0         0          0         0
    SCG/CB/SIB         0         0          0         0

```

#### show chassis environment pem scc (TX Matrix Routing Matrix)

```

user@host> show chassis environment pem scc

scc-re0:
-----
PEM 1 status:
State                Online
Temperature           24 degrees C / 75 degrees F
DC input:             OK
DC output:            Voltage Current      Power      Load
    SIB 0              0         0          0         0
    SIB 1              0         0          0         0
    SIB 2              0         0          0         0
    SIB 3             56550        0          0         0
    SIB 4             55958       6912        386        51

```

#### show chassis environment pem sfc (TX Matrix Plus Routing Matrix)

```

user@host> show chassis environment pem sfc 0

sfc0-re0:
-----
PEM 0 status:
State                Online
Temperature           35 degrees C / 95 degrees F
DC Input:             OK
DC Output            Voltage Current      Power      Load
    Channel 0          53820    14140        761        59
    Channel 1          53550    12720        681        53
    Channel 2          53840    12930        696        54
    Channel 3          53690    14990        804        63
    Channel 4          53620    15070        808        63
    Channel 5          53900    14820        798        62
    Channel 6          54120     5020        271        21

```

#### show chassis environment pem lcc (TX Matrix Plus Routing Matrix)

```

user@host> show chassis environment lcc 0

```

```

lcc0-re1:
-----

```

```

PEM 0 status:

```



```

State                               Online
Temperature                         38 degrees C / 100 degrees F
DC Input:                           OK
DC Output                           Voltage    Current    Power    Load
FPC 0                              0         0         0         0
FPC 1                              0         0         0         0
FPC 2                              0         0         0         0
FPC 3                              0         0         0         0
FPC 4                              56408      7575      427       56
FPC 5                              0         0         0         0
FPC 6                              56266      7956      447       59
FPC 7                              56283      6100      343       45
SCG/CB/SIB                         55916      8950      500       41

```

PEM 1 status:

```

State                               Present
Temperature                         35 degrees C / 95 degrees F
DC Input:                           Check
DC Output                           Voltage    Current    Power    Load
FPC 0                              0         0         0         0
FPC 1                              0         0         0         0
FPC 2                              0         0         0         0
FPC 3                              0         0         0         0
FPC 4                              0         0         0         0
FPC 5                              0         0         0         0
FPC 6                              0         0         0         0
FPC 7                              0         0         0         0
SCG/CB/SIB                         0         0         0         0

```

#### show chassis environment pem node-device (QFabric System)

```

user@switch> show chassis environment pem node-device node1

```

```

FPC 0 PEM 0 status:
State                               Check
Airflow                            Front to Back
Temperature                         OK
AC Input:                          OK
DC Output                           Voltage(V) Current(A) Power(W) Load(%)
                                   12         10         120      18

```

```

FPC 0 PEM 1 status:
State                               Online
Airflow                            Back to Front
Temperature                         OK
AC Input:                          OK
DC Output                           Voltage(V) Current(A) Power(W) Load(%)
                                   11         10         110      17

```

#### show chassis environment pem (QFX Series and OCX Series)

```

user@switch> show chassis environment pem

```

```

FPC 0 PEM 1 status:
State                               Online
Airflow                            Front to Back
Temperature                         OK
AC Input:                          OK
DC Output                           Voltage(V) Current(A) Power(W) Load(%)
                                   12         17         204      31

```



**show chassis environment pem (QFX 10016)**

```
user@router> show chassis environment pem 1
```

```

PEM 1 status:
  State                Present
  Input                Voltage(V) Current(A) Power(W)
  INP 1                229.9      0.4      96.6
  INP 2                233.7      0.4      98.2
  Health check Information:
    Status:             Scheduled
    Last Result:        Pass
    Last Execution:     2019-04-23 15:09:54
    Next Scheduled Run: 2019-04-23 15:32:59

```

**show chassis environment pem interconnect-device (QFabric System)**

```
user@switch> show chassis environment pem interconnect-device IC11
```

```

IC1 PEM 1 status:
  State                Online
  Airflow              Front to Back
  Temperature           OK
  AC Input:            OK
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                      12          18          216      33

```

**show chassis environment pem (EX9251 Switches)**

```
user@switch> show chassis environment pem
```

```

PEM 0 status:
  State                Present
PEM 1 status:
  State                Online
  Airflow              Front to Back
  Temperature           OK   36 degrees C / 96 degrees F
  Temperature           OK   35 degrees C / 95 degrees F
  Fan Sensor            5940 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                      11.85      17          201      30

```

**show chassis environment pem (EX9253 Switches)**

```
user@switch> show chassis environment pem
```

```

PEM 0 status:
  State                Online
  Airflow              Front to Back
  Temperature           OK   56 degrees C / 132 degrees F
  Temperature           OK   46 degrees C / 114 degrees F
  Temperature           OK   28 degrees C / 82 degrees F
  Firmware version      04.10
  Cooling Fan           9056 RPM
  DC Output            Voltage(V) Current(A) Power(W) Load(%)
                      12.00      47          564      19
PEM 1 status:
  State                Present
PEM 2 status:

```



```

State                               Empty
PEM 3 status:
State                               Empty
PEM 4 status:
State                               Present
PEM 5 status:
State                               Online
Airflow                             Front to Back
Temperature                         OK    61 degrees C / 141 degrees F
Temperature                         OK    49 degrees C / 120 degrees F
Temperature                         OK    28 degrees C / 82 degrees F
Firmware version                    04.10
Cooling Fan                         8656 RPM
DC Output                          Voltage(V) Current(A) Power(W) Load(%)
                                   12.00      51      612      21

```

### show chassis environment pem (PTX1000 Packet Transport Routers)

```
user@router> show chassis environment pem
```

```

PEM 0 status:
State                               Online
Airflow                             Front to Back
Temp Sensor 0                       OK    22 degrees C / 71 degrees F
Temp Sensor 1                       OK    23 degrees C / 73 degrees F
Fan 0                               9184 RPM
Fan 1                               7936 RPM
DC Output                          Voltage(V) Current(A) Power(W) Load(%)
                                   12          24      288      18
PEM 2 status:
State                               Online
Airflow                             Front to Back
Temp Sensor 0                       OK    22 degrees C / 71 degrees F
Temp Sensor 1                       OK    26 degrees C / 78 degrees F
Fan 0                               9056 RPM
Fan 1                               7808 RPM
DC Output                          Voltage(V) Current(A) Power(W) Load(%)
                                   12          24      288      18

```

On PTX1000 Packet Transport Routers, you cannot view the **show chassis environment pem** output at the PEM slot level, by using the command **show chassis environment pem slot**.



## show chassis environment power-supply-unit

**Syntax** `show chassis environment power-supply-unit`

**Release Information** Command introduced in Junos OS Release 10.2 for EX Series switches.

**Description** (On EX4500 switches only) Display the state of the power supply and the direction of the airflow through the power supply.

**Required Privilege Level** view

**Related Documentation**

- *Monitoring Chassis Information*

**List of Sample Output** [show chassis environment power-supply-unit on page 353](#)

**Output Fields** [Table 12 on page 353](#) lists the output fields for the **show chassis environment power-supply-unit** command. Output fields are listed in the approximate order in which they appear.

*Table 12: show chassis environment power-supply-unit Output Fields*

Field Name	Field Description
<b>State</b>	State of the power supply: Online or Offline.
<b>Airflow</b>	Direction of airflow of the power supply. One of the following: Front to back or Back to front.

## Sample Output

### show chassis environment power-supply-unit

```
user@switch> show chassis environment power-supply-unit
```

```
FPC 0 PSU 1 status:
  State           Online
  Airflow         Front to back
```



## show chassis environment psu

<b>Syntax</b>	<b>show chassis environment psu</b> <b>&lt;slot-number&gt;</b>
<b>Release Information</b>	Command introduced in Junos OS Release 10.3 for EX Series switches.
<b>Description</b>	(On EX8200 switches only) Display the state of the power supply.
<b>Options</b>	<b>none</b> —Display the state of the power supply for all power supplies. <b>slot-number</b> —(Optional) Display the state of the power supply for a specific power supply slot number (0–5).
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Verifying Power Configuration and Use</i></li> <li>• <i>show chassis power-budget-statistics</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show chassis environment psu on page 354</a> <a href="#">show chassis environment psu (for PSU 1) on page 355</a>
<b>Output Fields</b>	Table 12 on page 353 lists the output fields for the <b>show chassis environment psu</b> command. Output fields are listed in the approximate order in which they appear.

Table 13: show chassis environment psu Output Fields

Field Name	Field Description
<b>State</b>	State of the power supply: Online, Offline, or Empty.
<b>Temperature</b>	Temperature for the online power supply: OK or Out of Range.
<b>DC Output</b>	DC output for the online power supply: OK or Out of Range.

## Sample Output

### show chassis environment psu

```
user@switch> show chassis environment psu
```

```
PSU 0 status:
  State                Offline
PSU 1 status:
  State                Online
```



```
Temperature           OK
DC Output:            OK
PSU 2 status:
  State               Online
  Temperature         OK
  DC Output:          OK
PSU 3 status:
  State               Offline
PSU 4 status:
  State               Offline
PSU 5 status:
  State               Offline
```

#### show chassis environment psu (for PSU 1)

```
user@switch> show chassis environment psu 1
```

```
PSU 1 status:
  State               Online
  Temperature         OK
  DC Output:          OK
```



## show chassis environment routing-engine

**List of Syntax**

- Syntax on page 356
- Syntax (TX Matrix Routers) on page 356
- Syntax (TX Matrix Plus Routers) on page 356
- Syntax (MX104, MX2010, MX2020, MX10003, MX204, and MX2008 Universal Routing Platforms) on page 356
- Syntax (MX Series Routers) on page 356
- Syntax (PTX Series Routers) on page 356
- Syntax (QFX Series) on page 357
- Syntax (OCX Series) on page 357
- Syntax (ACX5048 and ACX5096 Routers) on page 357
- Syntax (ACX500 Routers) on page 357
- Syntax (EX9251, EX9253 Switches) on page 357

**Syntax** show chassis environment routing-engine  
<slot>

**Syntax (TX Matrix Routers)** show chassis environment routing-engine  
<lcc number | scc>  
<slot>

**Syntax (TX Matrix Plus Routers)** show chassis environment routing-engine  
<lcc number | sfc number>  
<slot>

**Syntax (MX104, MX2010, MX2020, MX10003, MX204, and MX2008 Universal Routing Platforms)** show chassis environment routing-engine  
<slot>  
<satellite [fpc-slot slot-id | device-alias alias-name]

**Syntax (MX Series Routers)** show chassis environment routing-engine  
<slot>  
<all-members>  
<local>  
<member member-id>

**Syntax (PTX Series Routers)** show chassis environment routing-engine  
<slot>  
<all-members>  
<local>  
<member member-id>



Syntax (QFX Series)	show chassis environment routing-engine interconnect-device <i>name</i>
Syntax (OCX Series)	show chassis environment routing-engine interconnect-device <i>name</i>
Syntax (ACX5048 and ACX5096 Routers)	show chassis environment routing-engine
Syntax (ACX500 Routers)	show chassis environment routing-engine
Syntax (EX9251, EX9253 Switches)	show chassis environment routing-engine
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Routers and T4000 Core Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2R1 for MX10008 Routers.</p>
Description	Display Routing Engine environmental status information.
Options	<p><b>none</b>—Display environmental information about all Routing Engines. For a TX Matrix router, display environmental information about all Routing Engines on the TX Matrix router and its attached T640 routers. For a TX Matrix Plus router, display environmental information about all Routing Engines on the TX Matrix Plus router and its attached routers.</p> <p><b>all-members</b>—(MX Series routers only) (Optional) Display environmental information about the Routing Engines in all member routers in the Virtual Chassis configuration.</p>



**interconnect-device *name***—(QFabric systems only) (Optional) Display environmental information about the Routing Engines for the Interconnect device.

**lcc *number***—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display environmental information about the Routing Engines in the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display environmental information about the Routing Engines in the specified member in the Virtual Chassis configuration. Replace *member-id* with the value of 0 or 1.

**satellite [*fpc-slot slot-id* | *device-alias alias-name*]**—(Junos Fusion only)(Optional) Display environmental information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scc**—(TX Matrix router only) (Optional) Display environmental information about the Routing Engine in the TX Matrix router (switch-card chassis).

**sfc**—(TX Matrix Plus router only) (Optional) Display environmental information about the Routing Engine in the TX Matrix Plus router (or switch-fabric chassis).

**slot**—(Optional) Display environmental information about an individual Routing Engine. On M10i, M20, M40e, M120, M160, M320, MX Series, MX104 routers, MX2010 routers, MX2020 routers, MX2008 routers, and T Series routers, replace *slot* with 0 or 1. On M5, M7i, M10, and M40 routers, replace *slot* with 0. On EX3200 and EX4200 standalone switches, replace *slot* with 0. On EX4200 switches in a Virtual Chassis configuration and on EX8208 and EX8216 switches, replace *slot* with 0 or 1. On the QFX3500 switch, there is only one Routing Engine, so you do not need to specify the slot number. On PTX Series Packet Transport Routers, replace *slot* with 0 or 1

**Required Privilege Level** view

**Related Documentation**

- [request chassis routing-engine master on page 140](#)
- [show chassis routing-engine on page 733](#)



- List of Sample Output**
- [show chassis environment routing-engine \(Nonredundant\) on page 360](#)
  - [show chassis environment routing-engine \(Redundant\) on page 360](#)
  - [show chassis environment routing-engine \(MX150\) on page 360](#)
  - [show chassis environment routing-engine \(MX104 Router\) on page 360](#)
  - [show chassis environment routing-engine \(MX2010 Router\) on page 360](#)
  - [show chassis environment routing-engine \(MX2020 Router\) on page 360](#)
  - [show chassis environment routing-engine \(MX2008 Router\) on page 361](#)
  - [show chassis environment routing-engine \(TX Matrix Plus Router\) on page 361](#)
  - [show chassis environment routing-engine \(T4000 Core Router\) on page 361](#)
  - [show chassis environment routing-engine \(QFX Series and OCX Series\) on page 361](#)
  - [show chassis environment routing-engine interconnect-device \(QFabric System\) on page 362](#)
  - [show chassis environment routing-engine \(PTX5000 Packet Transport Router\) on page 362](#)
  - [show chassis environment routing-engine \(PTX10008 Router\) on page 362](#)
  - [show chassis environment routing-engine \(PTX10016 Router\) on page 362](#)
  - [show chassis environment routing-engine \(ACX5048 and ACX5096 Routers\) on page 362](#)
  - [show chassis environment routing-engine \(ACX500 Routers\) on page 363](#)
  - [show chassis environment routing-engine \(PTX5000 \(RE-PTX-X8-64G\), MX240 \(RE-S-X6-64G\), MX480 \(RE-S-X6-64G\), MX960 \(RE-S-X6-64G\), MX2010 \(RE-MX2K-X8-64G\), MX2020 \(RE-MX2K-X8-64G\) on page 363](#)
  - [show chassis environment routing-engine \(MX204 Routers\) on page 363](#)
  - [show chassis environment routing-engine \(MX10008 Routers\) on page 363](#)
  - [show chassis environment routing-engine \(EX9251 Switches\) on page 363](#)
  - [show chassis environment routing-engine \(EX9253 Switches\) on page 363](#)

**Output Fields** Table 14 on page 359 lists the output fields for the **show chassis environment routing-engine** command. Output fields are listed in the approximate order in which they appear.

*Table 14: show chassis environment routing-engine Output Fields*

Field Name	Field Description
Routing engine <i>slot</i> status	Number of the Routing Engine slot: 0 or 1.
State	Status of the Routing Engine: <ul style="list-style-type: none"> <li>• Online Master—Routing Engine is online, operating as Master.</li> <li>• Online Standby—Routing Engine is online, operating as Standby.</li> <li>• Offline—Routing Engine is offline.</li> </ul>
Temperature	Temperature of the air flowing past the Routing Engine.
CPU Temperature	(PTX Series and T4000 Core Routers only) Temperature of the air flowing past the Routing Engine CPU.



## Sample Output

### show chassis environment routing-engine (Nonredundant)

```
user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           27 degrees C / 80 degrees
```

### show chassis environment routing-engine (Redundant)

```
user@host> show chassis environment routing-engine

Route Engine 0 status:
  State                Online Master
  Temperature           26 degrees C / 78 degrees F
Route Engine 1 status:
  State                Online Standby
  Temperature           26 degrees C / 78 degrees F
```

### show chassis environment routing-engine (MX150)

```
user@ host >show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  CPU Temperature       42 degrees C / 107 degrees F
```

### show chassis environment routing-engine (MX104 Router)

```
user@ host >show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           34 degrees C / 93 degrees F
  CPU Temperature       43 degrees C / 109 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature           33 degrees C / 91 degrees F
  CPU Temperature       39 degrees C / 102 degrees F
```

### show chassis environment routing-engine (MX2010 Router)

```
user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           37 degrees C / 98 degrees F
  CPU Temperature       37 degrees C / 98 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature           35 degrees C / 95 degrees F
  CPU Temperature       34 degrees C / 93 degrees F
```

### show chassis environment routing-engine (MX2020 Router)

```
user@host> show chassis environment routing-engine
```



```

Routing Engine 0 status:
  State           Online Master
  Temperature      35 degrees C / 95 degrees F
  CPU Temperature  34 degrees C / 93 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      44 degrees C / 111 degrees F
  CPU Temperature  43 degrees C / 109 degrees F

```

#### show chassis environment routing-engine (MX2008 Router)

```

user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State           Online Master
  CPU Temperature  75 degrees C / 167 degrees F
Routing Engine 1 status:
  State           Online Standby
  CPU Temperature  47 degrees C / 116 degrees F

```

#### show chassis environment routing-engine (TX Matrix Plus Router)

```

user@host> show chassis environment routing-engine

sfc0-re0:
-----
Routing Engine 0 status:
  State           Online Master
  Temperature      26 degrees C / 78 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      28 degrees C / 82 degrees F

lcc0-re0:
-----
Routing Engine 0 status:
  State           Online Master
  Temperature      30 degrees C / 86 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      29 degrees C / 84 degrees F

```

#### show chassis environment routing-engine (T4000 Core Router)

```

user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State           Online Master
  Temperature      33 degrees C / 91 degrees F
  CPU Temperature  50 degrees C / 122 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      33 degrees C / 91 degrees F
  CPU Temperature  46 degrees C / 114 degrees F

```

#### show chassis environment routing-engine (QFX Series and OCX Series)

```

user@switch> show chassis environment routing-engine

```



```

Routing Engine 0 status:
  State           Online Master
  Temperature      42 degrees C / 107 degrees F

```

### show chassis environment routing-engine interconnect-device (QFabric System)

```

user@switch> show chassis environment routing-engine interconnect-device interconnect1
routing-engine interconnect-device interconnect1
Routing Engine 0 status:
  State           Online Standby
  Temperature      52 degrees C / 125 degrees F
Routing Engine 1 status:
  State           Online Master
  Temperature      57 degrees C / 134 degrees F

```

### show chassis environment routing-engine (PTX5000 Packet Transport Router)

```

user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  Temperature      55 degrees C / 131 degrees F
  CPU Temperature  66 degrees C / 150 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature      52 degrees C / 125 degrees F
  CPU Temperature  64 degrees C / 147 degrees F

```

### show chassis environment routing-engine (PTX10008 Router)

```

user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  CPU Temperature  40 degrees C / 104 degrees F
Routing Engine 1 status:
  State           Online Standby
  CPU Temperature  40 degrees C / 104 degrees F

```

### show chassis environment routing-engine (PTX10016 Router)

```

user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  CPU Temperature  33 degrees C / 91 degrees F
Routing Engine 1 status:
  State           Online Standby
  CPU Temperature  38 degrees C / 100 degrees F

```

### show chassis environment routing-engine (ACX5048 and ACX5096 Routers)

```

user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  Temperature      33 degrees C / 91 degrees F

```



**show chassis environment routing-engine (ACX500 Routers)**

```
user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           54 degrees C / 129 degrees F
```

**Sample Output****show chassis environment routing-engine (PTX5000 (RE-PTX-X8-64G), MX240 (RE-S-X6-64G), MX480 (RE-S-X6-64G), MX960 (RE-S-X6-64G), MX2010 (RE-MX2K-X8-64G), MX2020 (RE-MX2K-X8-64G))**

```
user@switch> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
  Temperature           37 degrees C / 98 degrees F
  CPU Temperature       52 degrees C / 125 degrees F
Routing Engine 1 status:
  State                Online Standby
  Temperature           37 degrees C / 98 degrees F
  CPU Temperature       51 degrees C / 123 degrees F
```

**show chassis environment routing-engine (MX204 Routers)**

```
user@host> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
```

**show chassis environment routing-engine (MX10008 Routers)**

```
Routing Engine 0 status:
  State                Online Master
  CPU Temperature      41 degrees C / 105 degrees F
Routing Engine 1 status:
  State                Online Standby
  CPU Temperature      40 degrees C / 104 degrees F
```

**show chassis environment routing-engine (EX9251 Switches)**

```
user@switch> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
```

**show chassis environment routing-engine (EX9253 Switches)**

```
user@switch> show chassis environment routing-engine

Routing Engine 0 status:
  State                Online Master
Routing Engine 1 status:
  State                Present
```







## show chassis ethernet-switch

<b>List of Syntax</b>	<a href="#">Syntax on page 365</a> <a href="#">Syntax (EX8200 Switch) on page 365</a> <a href="#">Syntax (T4000 Router) on page 365</a> <a href="#">Syntax (TX Matrix Router) on page 365</a> <a href="#">Syntax (TX Matrix Plus Router) on page 365</a> <a href="#">Syntax (MX Series Router) on page 365</a> <a href="#">Syntax (MX2010, MX2020, and MX2008 Universal Routing Platforms) on page 365</a> <a href="#">Syntax (MX10008 Universal Routing Platforms) on page 366</a> <a href="#">Syntax (PTX Series Packet Transport Routers) on page 366</a>
<b>Syntax</b>	show chassis ethernet-switch <errors <port>>
<b>Syntax (EX8200 Switch)</b>	show chassis ethernet-switch <statistics <port>   switch <number>
<b>Syntax (T4000 Router)</b>	show chassis ethernet-switch <errors <port>   statistics <port>>
<b>Syntax (TX Matrix Router)</b>	show chassis ethernet-switch <errors <port>   statistics <port>> <lcc <number>   scc>
<b>Syntax (TX Matrix Plus Router)</b>	show chassis ethernet-switch <errors <port>   switch <number> <lcc number   sfc number> <statistics <port>   switch <number>
<b>Syntax (MX Series Router)</b>	show chassis ethernet-switch <all-members> <errors <port>> <local> <member member-id>
<b>Syntax (MX2010, MX2020, and MX2008 Universal Routing Platforms)</b>	show chassis ethernet-switch <errors <port>   statistics <port>> <old-rom-packet-count>



Syntax (MX10008 Universal Routing Platforms)	statistics <port>>
Syntax (PTX Series Packet Transport Routers)	show chassis ethernet-switch <errors <port>> <statistics <port>> <port-state <port>>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.4 for EX Series switches.</p> <p><b>sfc</b> option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 18.2 for MX10008 Universal Routing Platforms.</p>
Description	(M10i, M40e, M120, M160, M320, MX Series, and T Series routers and EX8200 and PTX Series routers only) Display information about the ports on the Control Board (CB) Ethernet switch.
Options	<p><b>none</b>—Display information about each connected port on the Ethernet switch. On a TX Matrix router, display information about each connected port on the Ethernet switch on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display information about each connected port on the Ethernet switch on the TX Matrix Plus router and its attached routers.</p> <p><b>all-members</b>—(MX Series routers only) (Optional) Display information about the ports on the CB Ethernet switch on all the members of the Virtual Chassis configuration.</p> <p><b>errors</b>—(Optional) Display the numbers and types of errors accumulated on all ports of the Ethernet switch.</p> <p><b>errors port</b>—(Optional) Display the numbers and types of errors accumulated on the specified port (0 through 15) of the Ethernet switch. On the TX Matrix router, replace <b>port</b> with a value from 0 through 15. On the TX Matrix Plus router and EX8200 switch, replace <b>port</b> with a value from 0 through 27. On the PTX Series Packet Transport Routers, replace <b>port</b> with a value from 0 through 25. On the T4000 routers, MX2020 routers, MX2010 routers, and MX2008 routers, replace <b>port</b> with a value from 0 through 27.</p> <p><b>errors switch number</b>—(TX Matrix Plus router only) (Optional) Display the numbers and types of errors accumulated on the specified switch. Replace <b>number</b> with a value from 0 through 2.</p>



**lcc *number***—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display information about the ports on the CB Ethernet switch on the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display information about the ports on the CB Ethernet switch on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**old-rom-packet-count**—(MX 2020 Routers only) (Optional) Display information about installed linecards. A non-zero number indicates that the bootrom on that linecard needs to be updated.

**port-state**—(PTX Series only) (Optional) Display information about current port operation (**Blocking**, **Listening**, or **Disabled**).

**scc**—(TX Matrix router only) (Optional) Display information about the ports on the CB's Ethernet switch on the TX Matrix router (switch-card chassis).

**sfc *number***—(TX Matrix Plus router only) (Optional) Display information about the ports on the CB's Ethernet switch on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

**statistics**—(Optional) Display traffic statistics for each connected port on the Ethernet switch.

**statistics *port***—(Optional) Display traffic statistics for the specified port on the Ethernet switch. On the TX Matrix router, replace *port* with a value from 0 through 25. On the TX Matrix Plus router or EX8200 switch, replace *port* with a value from 0 through 27. On the PTX Series Packet Transport Routers, replace *port* with a value from 0 through 25. On the T4000 routers, MX2020 routers, MX2010 routers, and MX2008 routers, replace *port* with a value from 0 through 27.

**statistics switch *number***—(TX Matrix Plus routers and EX8200 switch only) (Optional) Display traffic statistics for the specified Ethernet switch number. On the TX Matrix Plus router and EX8216 switch, replace *number* with a value from 0 through 2. On the EX8208 switch, replace *number* with a value from 0 through 1.



**Required Privilege Level** view

**List of Sample Output**

- [show chassis ethernet-switch on page 372](#)
- [show chassis ethernet-switch \(MX480 Router with MPC4E\) on page 373](#)
- [show chassis ethernet-switch \(MX2010 Router\) on page 374](#)
- [show chassis ethernet-switch statistics \(MX2010 Router\) on page 375](#)
- [show chassis ethernet-switch \(MX2020 Router\) on page 382](#)
- [show chassis ethernet-switch statistics \(MX2020 Router\) on page 385](#)
- [show chassis ethernet-switch \(MX2020 Router with MPC4E\) on page 393](#)
- [show chassis ethernet-switch \(MX2008 Router\) on page 394](#)
- [show chassis ethernet-switch statistics \(Mx10008 Router\) on page 396](#)
- [show chassis ethernet-switch \(TX Matrix Router\) on page 397](#)
- [show chassis ethernet-switch errors on page 398](#)
- [show chassis ethernet-switch statistics on page 399](#)
- [show chassis ethernet-switch errors \(TX Matrix Plus Router\) on page 400](#)
- [show chassis ethernet-switch sfc errors \(TX Matrix Plus Router\) on page 401](#)
- [show chassis ethernet-switch statistics \(TX Matrix Plus Router\) on page 402](#)
- [show chassis ethernet-switch \(T4000 Router\) on page 406](#)
- [show chassis ethernet-switch errors \(T4000 Router\) on page 407](#)
- [show chassis ethernet-switch \(PTX5000 Packet Transport Router\) on page 407](#)
- [show chassis ethernet-switch statistics \(PTX5000 Packet Transport Router\) on page 409](#)
- [show chassis ethernet-switch port-state \(PTX5000 Packet Transport Router\) on page 412](#)

**Output Fields** [Table 15 on page 368](#) lists the output fields for the **show chassis ethernet-switch** command. Output fields are listed in the approximate order in which they appear.

*Table 15: show chassis ethernet-switch Output Fields*

Field Name	Field Description
Link is good on port n connected to device	Information about the link between each port on the CB's Ethernet switch and one of the following devices:
or	<ul style="list-style-type: none"> <li>FPC0 (Flexible PIC Concentrator 0) through FPC7</li> </ul>
Link is good on Fast Ethernet port n connected to device	<ul style="list-style-type: none"> <li>Local controller</li> <li>Routing Engine</li> <li>Other Routing Engine (on a system with two Routing Engines)</li> <li>SPMB (Switch Processor Mezzanine Board)</li> </ul>
or	<ul style="list-style-type: none"> <li>(TX Matrix router only) LCC0 (line-card chassis 0) through LCC3</li> </ul>
Link is good on Gigabit Ethernet port n connected to device	
or	
Link is down on Gigabit Ethernet port connected to device	



Table 15: show chassis ethernet-switch Output Fields (continued)

Field Name	Field Description
Speed is	Speed at which the Ethernet link is running: <b>10 Mb</b> or <b>100 Mb</b> . When the device is <b>RE</b> or <b>Other RE</b> on the TX Matrix router, the speed is <b>1000 Mb</b> .  <b>NOTE:</b> Irrespective of the device, the speed is <b>1000 Mb</b> on the MX2010, MX2020, and MX2008 routers.
Duplex is	Duplex type of the Ethernet link: <b>full</b> or <b>half</b> .
Autonegotiate is Enabled (or Disabled)	By default, built-in Fast Ethernet ports on a PIC autonegotiate whether to operate at 10 Mbps or 100 Mbps. All other interfaces automatically choose the correct speed based on the PIC type and whether the PIC is configured to operate in multiplexed mode (using the <b>no-concatenate</b> statement at the <b>[edit chassis]</b> hierarchy level, as described in the <i>Junos OS System Basics Configuration Guide</i> ).
Flow Control TX is Enabled (or Disabled)	(MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series) Flow control in the transmit direction is enabled (or disabled). Flow control regulates the flow of packets from the switch to the remote side of the connection.
Flow Control RX is Enabled (or Disabled)	(MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series) Flow control in the receive direction is enabled (or disabled). Flow control regulates the flow of packets from the remote side of the connection to the switch.
MLT3	Number of multilevel threshold-3 (MLT-3) Fast Ethernet errors detected.
Accumulated error counts for port <i>n</i> connected to device FPC <i>n</i> : (error output only)	
Lock	Number of lock errors detected.
Xmit	Number of transmission errors detected.
ESD	Number of electrostatic discharge (ESD) errors detected.
False Carrier	Number of false carrier errors detected. This number is increased by one if a FRU is removed.
Disconnects	Number of disconnect errors detected.
FX mode	Number of errors detected on an Ethernet link over optical fiber.
Statistics for port <i>n</i> connected to device FPC <i>n</i> (statistics output only)	
TX Packets 64 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 64 octets transmitted.
TX Packets 65 - 127 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 65 through 127 octets transmitted.
TX Packets 128 - 255 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 128 through 255 octets transmitted.
TX Packets 256 - 511 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 256 through 511 octets transmitted.



Table 15: show chassis ethernet-switch Output Fields (continued)

Field Name	Field Description
<b>TX Packets 512 - 1023 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 512 through 1023 octets transmitted.
<b>TX Packets 1024 - 1518 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 1024 through 1518 octets transmitted.
<b>TX Packets 1519 - 2047 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 1519 through 2047 octets transmitted.
<b>TX Packets 2048 - 4095 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 2048 through 4095 octets transmitted.
<b>TX Packets 4096 - 9216 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 4096 through 9216 octets transmitted.
<b>TX 1519 - 1522 Good Vlan frms</b>	(MX2010, MX2020, and MX2008 routers) Number of transmitted frames of size 1519 through 1522 octets that are good VLAN frames.
<b>TX Octets</b>	Number of octets sent.
<b>TX Unicast packets</b>	Number of unicast packets sent.
<b>TX Multicast packets</b>	Number of multicast packets sent.
<b>TX Broadcast packets</b>	Number of broadcast packets sent.
<b>TX Single Collision frames</b>	(MX2010, MX2020, and MX2008 routers) Number of packets sent after one collision.
<b>TX Mult. Collision frames</b>	(MX2010, MX2020, and MX2008 routers) Number of packets sent after multiple collisions.
<b>TX Late collisions</b>	Number of packets aborted during sending because of collisions after 64 bytes.
<b>TX Excessive collisions</b>	Number of packets not sent because of too many collisions.
<b>TX Dropped packets</b>	Number of transmitted packets that were dropped.
<b>TX PAUSEMAC Ctrl Frames</b>	Number of Media Access Control (MAC) frames containing PAUSE commands that were sent.
<b>TX Oversize Packets</b>	Number of oversize packets that were sent.
<b>TX FCS Error Counter</b>	Number of packets discarded because of frame check sequence errors.
<b>TX Fragment Counter</b>	Number of fragmented packets sent.
<b>TX Byte Counter</b>	Number of bytes sent.



Table 15: show chassis ethernet-switch Output Fields (continued)

Field Name	Field Description
<b>TX Packet OK Counter</b>	Number of viable packets sent.
<b>TX Pause Packet Counter</b>	Number of PAUSE packets sent.
<b>RX Packets 64 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 64 octets received.
<b>RX Packets 65 - 127 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 65 through 127 octets received.
<b>RX Packets 128 - 255 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 128 through 255 octets received.
<b>RX Packets 256 - 511 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 256 through 511 octets received.
<b>RX Packets 512 - 1023 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 512 through 1023 octets received.
<b>RX Packets 1024 - 1518 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 1024 through 1518 octets received.
<b>RX Packets 1519 - 2047 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 1519 through 2047 octets received.
<b>RX Packets 2048 - 4095 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 2048 through 4095 octets received.
<b>RX Packets 4096 - 9216 Octets</b>	(MX2010, MX2020, and MX2008 routers) Number of packets of size 4096 through 9216 octets received.
<b>RX Octets</b>	Number of octets received.
<b>RX Unicast packets</b>	Number of unicast packets received.
<b>RX Multicast packets</b>	Number of multicast packets received.
<b>RX Broadcast packets</b>	Number of broadcast packets received.
<b>RX FCS Errors</b>	Number of packets discarded because of frame check sequence errors.
<b>RX Alignment Errors</b>	Number of incomplete octets received.
<b>RX Dropped Packets</b>	Number of incoming packets that were dropped.
<b>RX Fragments</b>	Number of fragmented packets received.
<b>RX Symbol Errors</b>	Number of symbols received that the router did not correctly decode.



Table 15: show chassis ethernet-switch Output Fields (continued)

Field Name	Field Description
RX MAC Control	Number of Media Access Control (MAC) packets received.
RX Oversize Packets	Number of oversize packets received.
RX Undersize Packets	Number of undersize packets received.
RX Jabbers	Total number of frames received that exceed the maximum byte count and contain CRC errors .
RX Control Frame Counter	Number of control frames received.
RX Pause Frame Counter	Number of pause frames received.
RX FCS Errors	Number of packets discarded because of frame check sequence errors.
RX Fragments	Number of fragmented packets received.
RX Byte Counter	Number of bytes received.
RX Packet OK Counter	Number of viable packets received.

## Sample Output

### show chassis ethernet-switch

```

user@host> show chassis ethernet-switch

Link is good on port 0 connected to device: FPC0
  Speed is 100 MB
  Duplex is full

Link is good on port 1 connected to device: FPC1
  Speed is 100 MB
  Duplex is full

Link is good on port 2 connected to device: FPC2
  Speed is 100 MB
  Duplex is full

Link is good on port 3 connected to device: FPC3
  Speed is 100 MBb
  Duplex is full

Link is good on port 7 connected to device: Local controller
  Speed is 100 MB
  Duplex is full

Link is good on port 9 connected to device: SPMB
  Speed is 100 MB
  Duplex is full

```



```
Link is good on port 13 connected to device: FPC5
Speed is 100 MB
Duplex is full
```

#### show chassis ethernet-switch (MX480 Router with MPC4E)

```
user@host > show chassis ethernet-switch

Displaying summary for switch 0
Link is down on GE port 0 connected to device: FPC0

Link is down on GE port 1 connected to device: FPC1

Link is good on GE port 2 connected to device: FPC2
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 3 connected to device: FPC3
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 4 connected to device: FPC4
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is down on GE port 5 connected to device: FPC5

Link is down on GE port 6 connected to device: FPC6

Link is down on GE port 7 connected to device: FPC7

Link is down on GE port 8 connected to device: FPC8

Link is down on GE port 9 connected to device: FPC9

Link is down on GE port 10 connected to device: FPC10

Link is down on GE port 11 connected to device: FPC11

Link is good on GE port 12 connected to device: Other RE
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 13 connected to device: RE-GigE
Speed is 1000Mb
Duplex is full
```



```
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
```

```
Link is down on GE port 14 connected to device: Debug-GigE
```

### show chassis ethernet-switch (MX2010 Router)

```
user@host > show chassis ethernet-switch
```

```
Displaying summary for switch 0
```

```
Link is good on GE port 0 connected to device: FPC0
```

```
Speed is 1000Mb
```

```
Duplex is full
```

```
Autonegotiate is Enabled
```

```
Flow Control TX is Disabled
```

```
Flow Control RX is Disabled
```

```
Link is good on GE port 1 connected to device: FPC1
```

```
Speed is 1000Mb
```

```
Duplex is full
```

```
Autonegotiate is Enabled
```

```
Flow Control TX is Disabled
```

```
Flow Control RX is Disabled
```

```
Link is good on GE port 2 connected to device: FPC3
```

```
Speed is 1000Mb
```

```
Duplex is full
```

```
Autonegotiate is Enabled
```

```
Flow Control TX is Disabled
```

```
Flow Control RX is Disabled
```

```
Link is good on GE port 3 connected to device: FPC2
```

```
Speed is 1000Mb
```

```
Duplex is full
```

```
Autonegotiate is Enabled
```

```
Flow Control TX is Disabled
```

```
Flow Control RX is Disabled
```

```
Link is good on GE port 4 connected to device: FPC5
```

```
Speed is 1000Mb
```

```
Duplex is full
```

```
Autonegotiate is Enabled
```

```
Flow Control TX is Disabled
```

```
Flow Control RX is Disabled
```

```
Link is good on GE port 5 connected to device: FPC4
```

```
Speed is 1000Mb
```

```
Duplex is full
```

```
Autonegotiate is Enabled
```

```
Flow Control TX is Disabled
```

```
Flow Control RX is Disabled
```

```
Link is good on GE port 6 connected to device: FPC6
```

```
Speed is 1000Mb
```

```
Duplex is full
```

```
Autonegotiate is Enabled
```

```
Flow Control TX is Disabled
```

```
Flow Control RX is Disabled
```



```

Link is good on GE port 7 connected to device: FPC7
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 8 connected to device: FPC8
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 9 connected to device: FPC9
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 20 connected to device: Other RE-GigE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 21 connected to device: RE-GigE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 22 connected to device: Debug-GigE

Link is good on GE port 23 connected to device: SPMB
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on XE port 24 connected to device: SFP+ 0

Link is down on XE port 25 connected to device: SFP+ 1

Link is down on XE port 26 connected to device: RE-10GigE

Link is down on XE port 27 connected to device: Other RE-10GigE

```

### show chassis ethernet-switch statistics (MX2010 Router)

```

user@host > show chassis ethernet-switch statistics

Displaying port statistics for switch 0
Statistics for port 0 connected to device FPC0:
  TX Packets 64 Octets          5088623
  TX Packets 65-127 Octets     2637257

```



```

TX Packets 128-255 Octets      84829
TX Packets 256-511 Octets     120193
TX Packets 512-1023 Octets    252371
TX Packets 1024-1518 Octets   7189736
TX Packets 1519-2047 Octets    0
TX Packets 2048-4095 Octets    0
TX Packets 4096-9216 Octets    0
TX 1519-1522 Good Vlan frms   0
TX Octets                     15373009
TX Multicast Packets          14
TX Broadcast Packets          1679654
TX Single Collision frames    0
TX Mult. Collision frames     0
TX Late Collisions            0
TX Excessive Collisions       0
TX Collision frames           0
TX PAUSEMAC Ctrl Frames       0
TX MAC ctrl frames            0
TX Frame deferred Xmsns       0
TX Frame excessive deferl     0
TX Oversize Packets           0
TX Jabbers                    0
TX FCS Error Counter          0
TX Fragment Counter           0
TX Byte Counter               3041239292
RX Packets 64 Octets          874260
RX Packets 65-127 Octets      26066124
RX Packets 128-255 Octets     1386532
RX Packets 256-511 Octets     150539
RX Packets 512-1023 Octets    4636799
RX Packets 1024-1518 Octets   92601
RX Packets 1519-2047 Octets    0
RX Packets 2048-4095 Octets    0
RX Packets 4096-9216 Octets    0
RX Octets                     33206855
RX Multicast Packets          0
RX Broadcast Packets          279416
RX FCS Errors                 0
RX Align Errors               0
RX Fragments                  0
RX Symbol errors              0
RX Unsupported opcodes        0
RX Out of Range Length        0
RX False Carrier Errors       0
RX Undersize Packets          0
RX Oversize Packets           0
RX Jabbers                    0
RX 1519-1522 Good Vlan frms   0
RX MTU Exceed Counter         0
RX Control Frame Counter      0
RX Pause Frame Counter        0
RX Byte Counter               958929187
Statistics for port 1 connected to device FPC1:
TX Packets 64 Octets          5109146
TX Packets 65-127 Octets      2779473
TX Packets 128-255 Octets     2441286
TX Packets 256-511 Octets     173102
TX Packets 512-1023 Octets    1547504
TX Packets 1024-1518 Octets   7190581
TX Packets 1519-2047 Octets    0

```



```

TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets 19241092
TX Multicast Packets 14
TX Broadcast Packets 1673369
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision frames 0
TX PAUSEMAC Ctrl Frames 0
TX MAC ctrl frames 0
TX Frame deferred Xmsns 0
TX Frame excessive deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 4213380187
RX Packets 64 Octets 865914
RX Packets 65-127 Octets 26612151
RX Packets 128-255 Octets 1090153
RX Packets 256-511 Octets 25126
RX Packets 512-1023 Octets 101158
RX Packets 1024-1518 Octets 78092
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 28772594
RX Multicast Packets 0
RX Broadcast Packets 285669
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 2327283837

```

Link is down on GE port 2 connected to device: FPC3

Link is down on GE port 3 connected to device: FPC2

Link is down on GE port 4 connected to device: FPC5

Link is down on GE port 5 connected to device: FPC4

Link is down on GE port 6 connected to device: FPC6

Link is down on GE port 7 connected to device: FPC7



## Statistics for port 8 connected to device FPC8:

TX Packets 64 Octets	5341094
TX Packets 65-127 Octets	2625310
TX Packets 128-255 Octets	3315158
TX Packets 256-511 Octets	174805
TX Packets 512-1023 Octets	976908
TX Packets 1024-1518 Octets	7181498
TX Packets 1519-2047 Octets	0
TX Packets 2048-4095 Octets	0
TX Packets 4096-9216 Octets	0
TX 1519-1522 Good Vlan frms	0
TX Octets	19614773
TX Multicast Packets	14
TX Broadcast Packets	1673831
TX Single Collision frames	0
TX Mult. Collision frames	0
TX Late Collisions	0
TX Excessive Collisions	0
TX Collision frames	0
TX PAUSEMAC Ctrl Frames	0
TX MAC ctrl frames	0
TX Frame deferred Xms	0
TX Frame excessive deferl	0
TX Oversize Packets	0
TX Jabbers	0
TX FCS Error Counter	0
TX Fragment Counter	0
TX Byte Counter	3946762991
RX Packets 64 Octets	955509
RX Packets 65-127 Octets	27568588
RX Packets 128-255 Octets	1460936
RX Packets 256-511 Octets	153248
RX Packets 512-1023 Octets	2856206
RX Packets 1024-1518 Octets	76419
RX Packets 1519-2047 Octets	0
RX Packets 2048-4095 Octets	0
RX Packets 4096-9216 Octets	0
RX Octets	33070906
RX Multicast Packets	0
RX Broadcast Packets	285183
RX FCS Errors	0
RX Align Errors	0
RX Fragments	0
RX Symbol errors	0
RX Unsupported opcodes	0
RX Out of Range Length	0
RX False Carrier Errors	0
RX Undersize Packets	0
RX Oversize Packets	0
RX Jabbers	0
RX 1519-1522 Good Vlan frms	0
RX MTU Exceed Counter	0
RX Control Frame Counter	0
RX Pause Frame Counter	0
RX Byte Counter	4256093824

## Statistics for port 9 connected to device FPC9:

TX Packets 64 Octets	5237213
TX Packets 65-127 Octets	3268775
TX Packets 128-255 Octets	2320476



```

TX Packets 256-511 Octets 1789844
TX Packets 512-1023 Octets 501022
TX Packets 1024-1518 Octets 7800455
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets 20917785
TX Multicast Packets 14
TX Broadcast Packets 1673368
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision frames 0
TX PAUSEMAC Ctrl Frames 0
TX MAC ctrl frames 0
TX Frame deferred Xms 0
TX Frame excessive deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 747012161
RX Packets 64 Octets 1036527
RX Packets 65-127 Octets 27590367
RX Packets 128-255 Octets 1590059
RX Packets 256-511 Octets 328257
RX Packets 512-1023 Octets 75975
RX Packets 1024-1518 Octets 73556
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 30694741
RX Multicast Packets 0
RX Broadcast Packets 285586
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 2727836941

Statistics for port 20 connected to device Other RE-GigE:
TX Packets 64 Octets 1682540
TX Packets 65-127 Octets 3454
TX Packets 128-255 Octets 659
TX Packets 256-511 Octets 0
TX Packets 512-1023 Octets 1
TX Packets 1024-1518 Octets 0
TX Packets 1519-2047 Octets 0

```



```

TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets 1686654
TX Multicast Packets 6
TX Broadcast Packets 1673798
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision frames 0
TX PAUSEMAC Ctrl Frames 0
TX MAC ctrl frames 0
TX Frame deferred Xmsns 0
TX Frame excessive deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 108042476
RX Packets 64 Octets 710214
RX Packets 65-127 Octets 35785510
RX Packets 128-255 Octets 4616
RX Packets 256-511 Octets 232
RX Packets 512-1023 Octets 565
RX Packets 1024-1518 Octets 28798
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 36529935
RX Multicast Packets 8
RX Broadcast Packets 285546
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 2676440958

```

Statistics for port 21 connected to device RE-GigE:

```

TX Packets 64 Octets 4805310
TX Packets 65-127 Octets 143798628
TX Packets 128-255 Octets 5532385
TX Packets 256-511 Octets 671059
TX Packets 512-1023 Octets 7684123
TX Packets 1024-1518 Octets 344021
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets 162835526

```



```

TX Multicast Packets      8
TX Broadcast Packets     1673409
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions       0
TX Excessive Collisions  0
TX Collision frames      0
TX PAUSEMAC Ctrl Frames  0
TX MAC ctrl frames       0
TX Frame deferred Xmsns  0
TX Frame excessive deferl 0
TX Oversize Packets      0
TX Jabbers               0
TX FCS Error Counter     0
TX Fragment Counter      0
TX Byte Counter          105857355
RX Packets 64 Octets     14537137
RX Packets 65-127 Octets 11445505
RX Packets 128-255 Octets 8161767
RX Packets 256-511 Octets 2257944
RX Packets 512-1023 Octets 3277807
RX Packets 1024-1518 Octets 29373209
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets                69053369
RX Multicast Packets     6
RX Broadcast Packets     285935
RX FCS Errors            0
RX Align Errors          0
RX Fragments             0
RX Symbol errors         0
RX Unsupported opcodes   0
RX Out of Range Length   0
RX False Carrier Errors  0
RX Undersize Packets     0
RX Oversize Packets      0
RX Jabbers               0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter    0
RX Control Frame Counter 0
RX Pause Frame Counter   0
RX Byte Counter          2980410755

```

Link is down on GE port 22 connected to device: Debug-GigE  
 Statistics for port 23 connected to device SPMB:

```

TX Packets 64 Octets     1885878
TX Packets 65-127 Octets 138845
TX Packets 128-255 Octets 18
TX Packets 256-511 Octets 1
TX Packets 512-1023 Octets 2
TX Packets 1024-1518 Octets 16391
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets                2041135
TX Multicast Packets     14
TX Broadcast Packets     1707267
TX Single Collision frames 0

```



```

TX Mult. Collision frames    0
TX Late Collisions          0
TX Excessive Collisions     0
TX Collision frames         0
TX PAUSEMAC Ctrl Frames     0
TX MAC ctrl frames          0
TX Frame deferred Xtns      0
TX Frame excessive deferl    0
TX Oversize Packets         0
TX Jabbers                  0
TX FCS Error Counter        0
TX Fragment Counter         0
TX Byte Counter             148066476
RX Packets 64 Octets        374994
RX Packets 65-127 Octets    183398
RX Packets 128-255 Octets   749
RX Packets 256-511 Octets   13658
RX Packets 512-1023 Octets  13421
RX Packets 1024-1518 Octets 9
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets                   586229
RX Multicast Packets        0
RX Broadcast Packets        252034
RX FCS Errors               0
RX Align Errors             0
RX Fragments                0
RX Symbol errors            0
RX Unsupported opcodes      0
RX Out of Range Length      0
RX False Carrier Errors     0
RX Undersize Packets        0
RX Oversize Packets         0
RX Jabbers                  0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter       0
RX Control Frame Counter    0
RX Pause Frame Counter      0
RX Byte Counter             51431942

```

Link is down on XE port 24 connected to device: SFP+ 0

Link is down on XE port 25 connected to device: SFP+ 1

Link is down on XE port 26 connected to device: RE-10GigE

Link is down on XE port 27 connected to device: Other RE-10GigE

### show chassis ethernet-switch (MX2020 Router)

```
user@host > show chassis ethernet-switch
```

Displaying summary for switch 0

Link is good on GE port 0 connected to device: FPC0

Speed is 1000Mb

Duplex is full

Autonegotiate is Enabled

Flow Control TX is Disabled

Flow Control RX is Disabled



```
Link is good on GE port 1 connected to device: FPC1
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 2 connected to device: FPC3
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 3 connected to device: FPC2
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 4 connected to device: FPC5
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 5 connected to device: FPC4
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 6 connected to device: FPC6
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 7 connected to device: FPC7
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 8 connected to device: FPC8
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 9 connected to device: FPC9
Speed is 1000Mb
Duplex is full
```



```
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
```

```
Link is good on GE port 10 connected to device: FPC10
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
```

```
Link is good on GE port 11 connected to device: FPC11
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
```

```
Link is good on GE port 12 connected to device: FPC13
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
```

```
Link is good on GE port 13 connected to device: FPC12
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
```

```
Link is good on GE port 14 connected to device: FPC14
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
```

```
Link is good on GE port 15 connected to device: FPC15
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
```

```
Link is good on GE port 16 connected to device: FPC17
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
```

```
Link is good on GE port 17 connected to device: FPC16
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled
```



```

Link is good on GE port 18 connected to device: FPC18
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 19 connected to device: FPC19
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 20 connected to device: Other RE-GigE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 21 connected to device: RE-GigE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 22 connected to device: Debug-GigE

Link is good on GE port 23 connected to device: SPMB
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on XE port 24 connected to device: SFP+ 0

Link is down on XE port 25 connected to device: SFP+ 1

Link is down on XE port 26 connected to device: RE-10GigE

Link is down on XE port 27 connected to device: Other RE-10GigE

```

### show chassis ethernet-switch statistics (MX2020 Router)

```

user@host > show chassis ethernet-switch statistics

Displaying port statistics for switch 0
Statistics for port 0 connected to device FPC0:
  TX Packets 64 Octets      1468564
  TX Packets 65-127 Octets  153896
  TX Packets 128-255 Octets 237
  TX Packets 256-511 Octets 286
  TX Packets 512-1023 Octets 599
  TX Packets 1024-1518 Octets 22803
  TX Packets 1519-2047 Octets 0
  TX Packets 2048-4095 Octets 0
  TX Packets 4096-9216 Octets 0

```



```

TX 1519-1522 Good Vlan frms 0
TX Octets 1646385
TX Multicast Packets 6
TX Broadcast Packets 970939
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision frames 0
TX PAUSEMAC Ctrl Frames 0
TX MAC ctrl frames 0
TX Frame deferred Xms 0
TX Frame excessive deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 130470290
RX Packets 64 Octets 180266
RX Packets 65-127 Octets 519030
RX Packets 128-255 Octets 1390
RX Packets 256-511 Octets 42857
RX Packets 512-1023 Octets 3482
RX Packets 1024-1518 Octets 8147
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 755172
RX Multicast Packets 0
RX Broadcast Packets 42822
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 75374021
Statistics for port 1 connected to device FPC1:
TX Packets 64 Octets 1493739
TX Packets 65-127 Octets 126996
TX Packets 128-255 Octets 241
TX Packets 256-511 Octets 283
TX Packets 512-1023 Octets 604
TX Packets 1024-1518 Octets 33687
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets 1655550
TX Multicast Packets 6
TX Broadcast Packets 969032
TX Single Collision frames 0

```



```

TX Mult. Collision frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision frames 0
TX PAUSEMAC Ctrl Frames 0
TX MAC ctrl frames 0
TX Frame deferred Xms 0
TX Frame excessive deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 141832690
RX Packets 64 Octets 155655
RX Packets 65-127 Octets 545561
RX Packets 128-255 Octets 1394
RX Packets 256-511 Octets 42811
RX Packets 512-1023 Octets 3514
RX Packets 1024-1518 Octets 8171
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 757106
RX Multicast Packets 0
RX Broadcast Packets 44509
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 75691392
Statistics for port 2 connected to device FPC3:
TX Packets 64 Octets 1465749
TX Packets 65-127 Octets 152849
TX Packets 128-255 Octets 238
TX Packets 256-511 Octets 289
TX Packets 512-1023 Octets 602
TX Packets 1024-1518 Octets 38903
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets 1658630
TX Multicast Packets 6
TX Broadcast Packets 968873
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision frames 0
TX PAUSEMAC Ctrl Frames 0

```



```

TX MAC ctrl frames      0
TX Frame deferred Xmsns 0
TX Frame excessive deferl 0
TX Oversize Packets     0
TX Jabbers              0
TX FCS Error Counter    0
TX Fragment Counter     0
TX Byte Counter         147427010
RX Packets 64 Octets    181636
RX Packets 65-127 Octets 517526
RX Packets 128-255 Octets 1405
RX Packets 256-511 Octets 42806
RX Packets 512-1023 Octets 3515
RX Packets 1024-1518 Octets 8168
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets                755056
RX Multicast Packets     0
RX Broadcast Packets     44490
RX FCS Errors            0
RX Align Errors          0
RX Fragments             0
RX Symbol errors         0
RX Unsupported opcodes   0
RX Out of Range Length   0
RX False Carrier Errors  0
RX Undersize Packets     0
RX Oversize Packets     0
RX Jabbers               0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter    0
RX Control Frame Counter 0
RX Pause Frame Counter   0
RX Byte Counter          75381869
Statistics for port 3 connected to device FPC2:
TX Packets 64 Octets    1473828
TX Packets 65-127 Octets 145643
TX Packets 128-255 Octets 253
TX Packets 256-511 Octets 285
TX Packets 512-1023 Octets 612
TX Packets 1024-1518 Octets 26603
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets                1647224
TX Multicast Packets     6
TX Broadcast Packets     968925
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions       0
TX Excessive Collisions  0
TX Collision frames      0
TX PAUSEMAC Ctrl Frames  0
TX MAC ctrl frames      0
TX Frame deferred Xmsns  0
TX Frame excessive deferl 0
TX Oversize Packets     0
TX Jabbers              0

```



```

TX FCS Error Counter      0
TX Fragment Counter      0
TX Byte Counter          134293832
RX Packets 64 Octets     174230
RX Packets 65-127 Octets 525756
RX Packets 128-255 Octets 1404
RX Packets 256-511 Octets 42815
RX Packets 512-1023 Octets 3530
RX Packets 1024-1518 Octets 8176
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets                755911
RX Multicast Packets     0
RX Broadcast Packets     44499
RX FCS Errors            0
RX Align Errors          0
RX Fragments             0
RX Symbol errors         0
RX Unsupported opcodes   0
RX Out of Range Length   0
RX False Carrier Errors  0
RX Undersize Packets     0
RX Oversize Packets      0
RX Jabbers               0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter    0
RX Control Frame Counter 0
RX Pause Frame Counter   0
RX Byte Counter          75517355
Statistics for port 4 connected to device FPC5:
TX Packets 64 Octets     1466664
TX Packets 65-127 Octets 151155
TX Packets 128-255 Octets 238
TX Packets 256-511 Octets 277
TX Packets 512-1023 Octets 615
TX Packets 1024-1518 Octets 54674
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets                1673623
TX Multicast Packets     6
TX Broadcast Packets     968610
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions       0
TX Excessive Collisions  0
TX Collision frames      0
TX PAUSEMAC Ctrl Frames  0
TX MAC ctrl frames       0
TX Frame deferred Xmsns  0
TX Frame excessive deferl 0
TX Oversize Packets      0
TX Jabbers               0
TX FCS Error Counter      0
TX Fragment Counter      0
TX Byte Counter          164247790
RX Packets 64 Octets     180006
RX Packets 65-127 Octets 518217

```



```

RX Packets 128-255 Octets 1406
RX Packets 256-511 Octets 42787
RX Packets 512-1023 Octets 3515
RX Packets 1024-1518 Octets 8164
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 754095
RX Multicast Packets 0
RX Broadcast Packets 44457
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 75311970
Statistics for port 5 connected to device FPC4:
TX Packets 64 Octets 1464770
TX Packets 65-127 Octets 154498
TX Packets 128-255 Octets 225
TX Packets 256-511 Octets 280
TX Packets 512-1023 Octets 637
TX Packets 1024-1518 Octets 26355
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets 1646765
TX Multicast Packets 6
TX Broadcast Packets 968730
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision frames 0
TX PAUSEMAC Ctrl Frames 0
TX MAC ctrl frames 0
TX Frame deferred Xtns 0
TX Frame excessive deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 134058606
RX Packets 64 Octets 169269
RX Packets 65-127 Octets 515285
RX Packets 128-255 Octets 1527
RX Packets 256-511 Octets 42804
RX Packets 512-1023 Octets 3521
RX Packets 1024-1518 Octets 9142
RX Packets 1519-2047 Octets 0

```



```

RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 741548
RX Multicast Packets 0
RX Broadcast Packets 44470
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 75498393
Statistics for port 6 connected to device FPC6:
TX Packets 64 Octets 1475260
TX Packets 65-127 Octets 143324
TX Packets 128-255 Octets 260
TX Packets 256-511 Octets 274
TX Packets 512-1023 Octets 603
TX Packets 1024-1518 Octets 40631
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets 1660352
TX Multicast Packets 6
TX Broadcast Packets 968466
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision frames 0
TX PAUSEMAC Ctrl Frames 0
TX MAC ctrl frames 0
TX Frame deferred Xms 0
TX Frame excessive deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 149212764
RX Packets 64 Octets 172275
RX Packets 65-127 Octets 526519
RX Packets 128-255 Octets 1394
RX Packets 256-511 Octets 42777
RX Packets 512-1023 Octets 3514
RX Packets 1024-1518 Octets 8161
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 754640
RX Multicast Packets 0
RX Broadcast Packets 44443

```



```

RX FCS Errors          0
RX Align Errors        0
RX Fragments           0
RX Symbol errors       0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets   0
RX Oversize Packets    0
RX Jabbers             0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter  0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter        75386517
Statistics for port 7 connected to device FPC7:
TX Packets 64 Octets    1472361
TX Packets 65-127 Octets 145646
TX Packets 128-255 Octets 251
TX Packets 256-511 Octets 250
TX Packets 512-1023 Octets 580
TX Packets 1024-1518 Octets 49530
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets               1668618
TX Multicast Packets    6
TX Broadcast Packets    968317
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions      0
TX Excessive Collisions 0
TX Collision frames     0
TX PAUSEMAC Ctrl Frames 0
TX MAC ctrl frames     0
TX Frame deferred Xtns  0
TX Frame excessive deferl 0
TX Oversize Packets     0
TX Jabbers             0
TX FCS Error Counter    0
TX Fragment Counter     0
TX Byte Counter         158689814
RX Packets 64 Octets    174618
RX Packets 65-127 Octets 523421
RX Packets 128-255 Octets 1393
RX Packets 256-511 Octets 42764
RX Packets 512-1023 Octets 3514
RX Packets 1024-1518 Octets 8158
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets               753868
RX Multicast Packets    0
RX Broadcast Packets    44429
RX FCS Errors          0
RX Align Errors        0
RX Fragments           0
RX Symbol errors       0
RX Unsupported opcodes 0

```



```

RX Out of Range Length      0
RX False Carrier Errors    0
RX Undersize Packets       0
RX Oversize Packets        0
RX Jabbers                 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter      0
RX Control Frame Counter    0
RX Pause Frame Counter      0
RX Byte Counter            75309863
Statistics for port 8 connected to device FPC8:
...

```

### show chassis ethernet-switch (MX2020 Router with MPC4E)

```

user@ host > show chassis ethernet-switch

Displaying summary for switch 0
Link is good on GE port 0 connected to device: FPC0
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 1 connected to device: FPC1

Link is down on GE port 2 connected to device: FPC3

Link is down on GE port 3 connected to device: FPC2

Link is down on GE port 4 connected to device: FPC5

Link is down on GE port 5 connected to device: FPC4

Link is down on GE port 6 connected to device: FPC6

Link is down on GE port 7 connected to device: FPC7

Link is down on GE port 8 connected to device: FPC8

Link is good on GE port 9 connected to device: FPC9
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 10 connected to device: FPC10
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 11 connected to device: FPC11

Link is down on GE port 12 connected to device: FPC13

Link is down on GE port 13 connected to device: FPC12

```



```
Link is good on GE port 14 connected to device: FPC14
  Speed is 1000Mb
  Duplex is full
Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 15 connected to device: FPC15

Link is down on GE port 16 connected to device: FPC17

Link is down on GE port 17 connected to device: FPC16

Link is down on GE port 18 connected to device: FPC18

Link is good on GE port 19 connected to device: FPC19
  Speed is 1000Mb
  Duplex is full
Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 20 connected to device: Other RE-GigE
  Speed is 1000Mb
  Duplex is full
Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 21 connected to device: RE-GigE
  Speed is 1000Mb
  Duplex is full
Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 22 connected to device: Debug-GigE

Link is good on GE port 23 connected to device: SPMB
  Speed is 1000Mb
  Duplex is full
Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on XE port 24 connected to device: SFP+ 0

Link is down on XE port 25 connected to device: SFP+ 1

Link is down on XE port 26 connected to device: RE-10GigE

Link is down on XE port 27 connected to device: Other RE-10GigE
```

### show chassis ethernet-switch (MX2008 Router)

```
user@host> show chassis ethernet-switch

Displaying summary for switch 0
Link is good on GE port 0 connected to device: FPC0
```



```
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is down on GE port 1 connected to device: FPC1

Link is good on GE port 2 connected to device: FPC3
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is down on GE port 3 connected to device: FPC2

Link is good on GE port 4 connected to device: FPC5
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is down on GE port 5 connected to device: FPC4

Link is down on GE port 6 connected to device: FPC6

Link is good on GE port 7 connected to device: FPC7
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is down on GE port 8 connected to device: FPC8

Link is good on GE port 9 connected to device: FPC9
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 20 connected to device: CB-to-CB-GigE 1
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on GE port 21 connected to device: CB-to-CB-GigE 2
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is down on GE port 22 connected to device: (null)
```



```

Link is down on GE port 23 connected to device: (null)

Link is good on XE port 24 connected to device: Other RE-10GigE
Speed is 10000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on XE port 25 connected to device: RE-10GigE
Speed is 10000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is down on XE port 26 connected to device: SFP+ 0

Link is down on XE port 27 connected to device: SFP+ 1

```

### show chassis ethernet-switch statistics (Mx10008 Router)

```
user@host> show chassis ethernet-switch statistics
```

```

Switch Status: Online
Link is Disabled on port connected to QPHY_0
Link is Disabled on port connected to QPHY_1
Link is Down on port connected to PTP_FPGA
Link is Disabled on port connected to Unused
Link is Up on port connected to LC0
    Speed      : 10G
    Duplexity   : FD
    Autoneg     : No
    tx_packets  : 2835539
    rx_packets  : 2624197
    tx_errors   : 0
    rx_errors   : 0
Link is Down on port connected to LC1
Link is Up on port connected to LC2
    Speed      : 10G
    Duplexity   : FD
    Autoneg     : No
    tx_packets  : 2889426
    rx_packets  : 2441270
    tx_errors   : 0
    rx_errors   : 0
Link is Up on port connected to LC3
    Speed      : 10G
    Duplexity   : FD
    Autoneg     : No
    tx_packets  : 2776323
    rx_packets  : 2322320
    tx_errors   : 0
    rx_errors   : 0
Link is Disabled on port connected to LC8
Link is Down on port connected to LC4
Link is Disabled on port connected to LC12
Link is Disabled on port connected to LC9
Link is Down on port connected to LC5
Link is Disabled on port connected to LC13

```



```

Link is Disabled on port connected to LC10
Link is Down on port connected to LC6
Link is Disabled on port connected to LC14
Link is Disabled on port connected to LC11
Link is Down on port connected to LC7
Link is Disabled on port connected to LC15
Link is Disabled on port connected to OCB_SW
Link is Disabled on port connected to Unused
Link is Disabled on port connected to Fortville_1
Link is Up on port connected to Fortville_0
    Speed      : 10G
    Duplexity   : FD
    Autoneg     : Yes
    tx_packets  : 7387765
    rx_packets  : 8348292
    tx_errors   : 0
    rx_errors   : 0

```

### show chassis ethernet-switch (TX Matrix Router)

```
user@host> show chassis ethernet-switch
```

```
scc-re0:
```

```

-----
Link is good on FE port 4 connected to device: LCC0
    Speed is 100 MB
    Duplex is full
    Autonegotiate is Enabled

```

```

Link is good on FE port 6 connected to device: LCC2
    Speed is 100 MB
    Duplex is full
    Autonegotiate is Enabled

```

```

Link is good on FE port 8 connected to device: SPMB
    Speed is 100 MB
    Duplex is full
    Autonegotiate is Enabled

```

```
lcc0-re0:
```

```

-----
Link is good on FE port 1 connected to device: FPC1
    Speed is 100 MB
    Duplex is full
    Autonegotiate is Enabled

```

```

Link is good on FE port 2 connected to device: FPC2
    Speed is 100 MB
    Duplex is full
    Autonegotiate is Enabled

```

```

Link is good on FE port 8 connected to device: SPMB
    Speed is 100 MB
    Duplex is full
    Autonegotiate is Enabled

```

```

Link is good on FE port 10 connected to device: SCC
    Speed is 100 MB
    Duplex is full
    Autonegotiate is Enabled

```



```

lcc2-re0:
-----
Link is good on FE port 0 connected to device: FPC0
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 1 connected to device: FPC1
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 2 connected to device: FPC2
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 8 connected to device: SPMB
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 10 connected to device: SCC
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

```

### show chassis ethernet-switch errors

```

user@host> show chassis ethernet-switch errors

Accumulated error counts for port 0 connected to device FPC0:
  MLT3          2
  Lock          0
  Xmit          0
  ESD           0
  False carrier 2
  Disconnects   0
  FX mode       0

Accumulated error counts for port 1 connected to device FPC1:
  MLT3          2
  Lock          0
  Xmit          0
  ESD           0
  False carrier 2
  Disconnects   0
  FX mode       0

Accumulated error counts for port 2 connected to device FPC2:
  MLT3          2
  Lock          0
  Xmit          0
  ESD           0
  False carrier 3
  Disconnects   0
  FX mode       0

Accumulated error counts for port 3 connected to device FPC3:
  MLT3          0
  Lock          0
  Xmit          0

```



```

ESD          0
False carrier 0
Disconnects   0
Accumulated error counts for port 4 connected to device Nothing:
MLT3         0
Lock         0
Xmit         0
ESD          0
False carrier 0
Disconnects   0
FX mode      0
...

```

### show chassis ethernet-switch statistics

```

user@host> show chassis ethernet-switch statistics

Statistics for port 0 connected to device FPC0:
TX Unicast packets      68113
TX Multicast packets    0
TX Broadcast packets    20851
TX Late collisions      0
TX Excessive collisions 0
TX Dropped packets     0

RX Unicast packets      67410
RX Multicast packets    0
RX Broadcast packets    20852
RX FCS Errors           0
RX Alignment Errors     0
RX Dropped Packets     0
RX Fragments           0
RX Symbol Errors        0

Statistics for port 1 connected to device FPC1:
TX Unicast packets      66496
TX Multicast packets    0
TX Broadcast packets    20080
TX Late collisions      0
TX Excessive collisions 0
TX Dropped packets     0

RX Unicast packets      66037
RX Multicast packets    0
RX Broadcast packets    20080
RX FCS Errors           0
RX Alignment Errors     0
RX Dropped Packets     0
RX Fragments           0
RX Symbol Errors        0

Statistics for port 2 connected to device FPC2:
TX Unicast packets      64206
TX Multicast packets    0
TX Broadcast packets    21183
TX Late collisions      0
TX Excessive collisions 0
TX Dropped packets     0

RX Unicast packets      63671

```



```

RX Multicast packets      0
RX Broadcast packets     21183
RX FCS Errors             0
RX Alignment Errors       0
RX Dropped Packets        0
RX Fragments              0
RX Symbol Errors          0
Statistics for port 3 connected to device FPC3:
...

```

### show chassis ethernet-switch errors (TX Matrix Plus Router)

```

user@host> show chassis ethernet-switch errors

sfc0-re0:
-----
Displaying error for switch 0

Displaying error for switch 1
Accumulated error counts for port 0 connected to device LCC0:
MLT3          0
Lock          0
Xmit          0
ESD           0
False carrier 0
Disconnects   0
FX mode       0

lcc0-re0:
-----
Displaying error for switch 0
Accumulated error counts for port 6 connected to device FPC0:
MLT3          0
Lock          0
Xmit          0
ESD           0
False carrier 5
Disconnects   0
FX mode       0
Accumulated error counts for port 7 connected to device FPC1:
MLT3          0
Lock          0
Xmit          0
ESD           0
False carrier 7
Disconnects   0
FX mode       0
Accumulated error counts for port 19 connected to device Other RE:
MLT3          0
Lock          0
Xmit          0
ESD           0
False carrier 0
Disconnects   0
FX mode       0
Accumulated error counts for port 20 connected to device SFC0:
MLT3          0
Lock          0
Xmit          0
ESD           0

```



```
False carrier 0
Disconnects   0
FX mode       0
```

### show chassis ethernet-switch sfc errors (TX Matrix Plus Router)

```
user@host> show chassis ethernet-switch errors switch sfc
```

```
sfc0-re0:
```

```
-----
Displaying error for switch 1
```

```
Accumulated error counts for port 0 connected to device LCC0:
```

```
MLT3      0
Lock      0
Xmit      0
ESD       0
False carrier 0
Disconnects 0
FX mode    0
```

```
Accumulated error counts for port 2 connected to device LCC1:
```

```
MLT3      0
Lock      0
Xmit      0
ESD       0
False carrier 0
Disconnects 0
FX mode    0
```

```
Accumulated error counts for port 4 connected to device LCC2:
```

```
MLT3      0
Lock      0
Xmit      0
ESD       0
False carrier 0
Disconnects 0
FX mode    0
```

```
Accumulated error counts for port 6 connected to device LCC3:
```

```
MLT3      0
Lock      0
Xmit      0
ESD       0
False carrier 0
Disconnects 0
FX mode    0
```

```
lcc0-re0:
```

```
-----
error: command is not valid on the t1600
```

```
lcc1-re0:
```

```
-----
error: command is not valid on the t1600
```

```
lcc2-re0:
```

```
-----
error: command is not valid on the t1600
```

```
lcc3-re0:
```

```
-----
error: command is not valid on the t1600
```



## show chassis ethernet-switch statistics (TX Matrix Plus Router)

```
user@host> show chassis ethernet-switch statistics
```

```
sfc0-re0:
```

```
-----
```

Displaying port statistics for switch 0

Statistics for port 1 connected to device 1GSW:

TX Packets 64 Octets	5183577
TX Packets 65-127 Octets	67820
TX Packets 128-255 Octets	772
TX Packets 256-511 Octets	136
TX Packets 512-1023 Octets	68
TX Packets 1024-1518 Octets	10881
TX Packets 1519-2047 Octets	0
TX Packets 2048-4095 Octets	0
TX Packets 4096-9216 Octets	0
TX Packets 9217-16383 Octets	0
TX Octets	5263254
TX Multicast Packets	16
TX Broadcast Packets	723403
TX PAUSEMAC Ctrl Frames	0
TX Oversize Packets	0
TX FCS Error Counter	0
TX Fragment Counter	0
TX Byte Counter	349922253
TX Packet OK Counter	5263254
TX Pause Packet Counter	0
TX Unicast Counter	4539835
RX Packets 64 Octets	6513629
RX Packets 65-127 Octets	88761
RX Packets 128-255 Octets	6382
RX Packets 256-511 Octets	22027
RX Packets 512-1023 Octets	4319
RX Packets 1024-1518 Octets	49922
RX Packets 1519-2047 Octets	0
RX Packets 2048-4095 Octets	0
RX Packets 4096-9216 Octets	0
RX Packets 9217-16383 Octets	0
RX Octets	6685040
RX Multicast Packets	4
RX Broadcast Packets	2137376
RX FCS Errors	0
RX Fragments	0
RX MAC Control Packets	0
RX Out of Range Length	0
RX Undersize Packets	0
RX Oversize Packets	0
RX Jabbers	0
RX Control Frame Counter	0
RX Pause Frame Counter	0
RX Byte Counter	509224602
RX Unicast Frame Count	4547660
RX Packet OK Count	6685040

Statistics for port 9 connected to device RE1:

TX Packets 64 Octets	2500318
TX Packets 65-127 Octets	443
TX Packets 128-255 Octets	0
TX Packets 256-511 Octets	0
TX Packets 512-1023 Octets	0



```

TX Packets 1024-1518 Octets 0
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets 2500761
TX Multicast Packets 4
TX Broadcast Packets 2500757
TX PAUSEMAC Ctrl Frames 0
TX Oversize Packets 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 160049670
TX Packet OK Counter 0
TX Pause Packet Counter 0
TX Unicast Counter 0
RX Packets 64 Octets 701191
RX Packets 65-127 Octets 5882
RX Packets 128-255 Octets 2
RX Packets 256-511 Octets 0
RX Packets 512-1023 Octets 17965
RX Packets 1024-1518 Octets 7
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets 725047
RX Multicast Packets 8
RX Broadcast Packets 2500757
RX FCS Errors 0
RX Fragments 0
RX MAC Control Packets 0
RX Out of Range Length 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 62402656
RX Unicast Frame Count 0
RX Packet OK Count 0
Statistics for port 17 connected to device RE0:
TX Packets 64 Octets 7214818
TX Packets 65-127 Octets 94640
TX Packets 128-255 Octets 6384
TX Packets 256-511 Octets 22027
TX Packets 512-1023 Octets 22284
TX Packets 1024-1518 Octets 49929
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets 7410082
TX Multicast Packets 12
TX Broadcast Packets 2497247
TX PAUSEMAC Ctrl Frames 0
TX Oversize Packets 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 571626932

```



```

TX Packet OK Counter      0
TX Pause Packet Counter   0
TX Unicast Counter        0
RX Packets 64 Octets      4823701
RX Packets 65-127 Octets  67812
RX Packets 128-255 Octets 772
RX Packets 256-511 Octets 136
RX Packets 512-1023 Octets 68
RX Packets 1024-1518 Octets 10881
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets                  4903370
RX Multicast Packets       8
RX Broadcast Packets       2497247
RX FCS Errors              0
RX Fragments               0
RX MAC Control Packets     0
RX Out of Range Length     0
RX Undersize Packets       0
RX Oversize Packets        0
RX Jabbers                  0
RX Control Frame Counter   0
RX Pause Frame Counter     0
RX Byte Counter            326889517
RX Unicast Frame Count     0
RX Packet OK Count         0

```

Displaying port statistics for switch 1  
 Statistics for port 0 connected to device LCC0:

```

TX Packets 64 Octets      5053443
TX Packets 65-127 Octets  59737
TX Packets 128-255 Octets 768
TX Packets 256-511 Octets 87
TX Packets 512-1023 Octets 68
TX Packets 1024-1518 Octets 85
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets                  5114188
TX Multicast Packets       16
TX Broadcast Packets       1125742
TX Single Collision frames 0
TX Mult. Collision frames  0
TX Late Collisions         0
TX Excessive Collisions    0
TX Collision frames        0
TX PAUSEMAC Ctrl Frames    0
TX MAC ctrl frames         0
TX Frame deferred Xmsns    0
TX Frame excessive deferl   0
TX Oversize Packets        0
TX Jabbers                  0
TX FCS Error Counter       0
TX Fragment Counter        0
TX Byte Counter            329291449
RX Packets 64 Octets      5640175
RX Packets 65-127 Octets  79875

```



```

RX Packets 128-255 Octets  6338
RX Packets 256-511 Octets  165
RX Packets 512-1023 Octets 4317
RX Packets 1024-1518 Octets 10
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 5730880
RX Multicast Packets 4
RX Broadcast Packets 1735007
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 371282850
Statistics for port 18 connected to device SPMB:
TX Packets 64 Octets 2990326
TX Packets 65-127 Octets 8572
TX Packets 128-255 Octets 4
TX Packets 256-511 Octets 49
TX Packets 512-1023 Octets 0
TX Packets 1024-1518 Octets 10793
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX 1519-1522 Good Vlan frms 0
TX Octets 3009744
TX Multicast Packets 20
TX Broadcast Packets 2458322
TX Single Collision frames 0
TX Mult. Collision frames 0
TX Late Collisions 0
TX Excessive Collisions 0
TX Collision frames 0
TX PAUSEMAC Ctrl Frames 0
TX MAC ctrl frames 0
TX Frame deferred Xmsns 0
TX Frame excessive deferl 0
TX Oversize Packets 0
TX Jabbers 0
TX FCS Error Counter 0
TX Fragment Counter 0
TX Byte Counter 203712524
RX Packets 64 Octets 873454
RX Packets 65-127 Octets 8886
RX Packets 128-255 Octets 44
RX Packets 256-511 Octets 21862
RX Packets 512-1023 Octets 2
RX Packets 1024-1518 Octets 49912
RX Packets 1519-2047 Octets 0

```



```

RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Octets 954160
RX Multicast Packets 0
RX Broadcast Packets 402369
RX FCS Errors 0
RX Align Errors 0
RX Fragments 0
RX Symbol errors 0
RX Unsupported opcodes 0
RX Out of Range Length 0
RX False Carrier Errors 0
RX Undersize Packets 0
RX Oversize Packets 0
RX Jabbers 0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter 0
RX Control Frame Counter 0
RX Pause Frame Counter 0
RX Byte Counter 137941752
...

```

#### show chassis ethernet-switch (T4000 Router)

```

user@host> show chassis ethernet-switch

Displaying summary for switch 0
Link is good on GE port 6 connected to device: FPC0
  Speed is 100Mb
  Duplex is full
  Autonegotiate is Enabled
  False carrier sense count = 04

Link is good on GE port 9 connected to device: FPC3
  Speed is 100Mb
  Duplex is full
  Autonegotiate is Enabled
  False carrier sense count = 03

Link is good on GE port 11 connected to device: FPC5
  Speed is 100Mb
  Duplex is full
  Autonegotiate is Enabled
  False carrier sense count = 03

Link is good on GE port 12 connected to device: FPC6
  Speed is 100Mb
  Duplex is full
  Autonegotiate is Enabled
  False carrier sense count = 03

Link is good on GE port 14 connected to device: SPMB
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled

Link is good on GE port 18 connected to device: RE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled

```



```

Link is good on GE port 19 connected to device: Other RE
Speed is 1000Mb
Duplex is full
Autonegotiate is Enabled

```

### show chassis ethernet-switch errors (T4000 Router)

```

user@host> show chassis ethernet-switch errors

Displaying error for switch 0
Accumulated error counts for port 6 connected to device FPC0:
  MLT3      0
  Lock      0
  Xmit      0
  ESD       0
  False carrier 4
  Disconnects 0
  FX mode   0
Accumulated error counts for port 9 connected to device FPC3:
  MLT3      0
  Lock      0
  Xmit      0
  ESD       0
  False carrier 3
  Disconnects 0
  FX mode   0
Accumulated error counts for port 11 connected to device FPC5:
  MLT3      0
  Lock      0
  Xmit      0
  ESD       0
  False carrier 3
  Disconnects 0
  FX mode   0
Accumulated error counts for port 12 connected to device FPC6:
  MLT3      0
  Lock      0
  Xmit      0
  ESD       0
  False carrier 3
  Disconnects 0
  FX mode   0
Accumulated error counts for port 19 connected to device Other RE:
  MLT3      0
  Lock      0
  Xmit      0
  ESD       0
  False carrier 0
  Disconnects 0
  FX mode   0

```

### show chassis ethernet-switch (PTX5000 Packet Transport Router)

```

user@host> show chassis ethernet-switch

Displaying summary for switch 0
Link is good on XE port 2 connected to device: SPMB

```



```
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on XE port 11 connected to device: FPC7
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on XE port 12 connected to device: FPC6
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on XE port 13 connected to device: FPC5
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on XE port 15 connected to device: FPC3
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on XE port 16 connected to device: FPC2
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on XE port 18 connected to device: FPC0
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on XE port 19 connected to device: OTHER RE
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
Flow Control TX is Disabled
Flow Control RX is Disabled

Link is good on XE port 20 connected to device: RE
Speed is 1000Mb
Duplex is full
Autonegotiate is Disabled
```



```
Flow Control TX is Disabled
Flow Control RX is Disabled
```

### show chassis ethernet-switch statistics (PTX5000 Packet Transport Router)

```
user@host> show chassis ethernet-switch statistics
```

```
Displaying port statistics for switch 0
```

```
Statistics for port 2 connected to device SPMB:
```

```
TX Packets 64 Octets      10942
TX Packets 65-127 Octets  843
TX Packets 128-255 Octets 2
TX Packets 256-511 Octets 2
TX Packets 512-1023 Octets 0
TX Packets 1024-1518 Octets 6862
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets                  18651
TX Multicast Packets       6
TX Broadcast Packets      10331
TX PAUSEMAC Ctrl Frames    0
TX Oversize Packets        0
TX FCS Error Counter       0
TX Fragment Counter        0
TX Byte Counter            8105166
TX Packet OK Counter       0
TX Pause Packet Counter    0
TX Unicast Counter         0
RX Packets 64 Octets      8679
RX Packets 65-127 Octets  2364
RX Packets 128-255 Octets 531
RX Packets 256-511 Octets 112
RX Packets 512-1023 Octets 26
RX Packets 1024-1518 Octets 8
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets                  11720
RX Multicast Packets       0
RX Broadcast Packets      10331
RX FCS Errors              0
RX Fragments               0
RX MAC Control Packets     0
RX Out of Range Length     0
RX Undersize Packets       0
RX Oversize Packets        0
RX Jabbers                 0
RX Control Frame Counter   0
RX Pause Frame Counter     0
RX Byte Counter            938105
RX Unicast Frame Count     0
RX Packet OK Count         0
```

```
Statistics for port 11 connected to device FPC7:
```

```
TX Packets 64 Octets      14492
TX Packets 65-127 Octets  3542
TX Packets 128-255 Octets  6
TX Packets 256-511 Octets 45
```



```
TX Packets 512-1023 Octets 60
```

Continued...

Statistics for port 18 connected to device FPC0:

```
TX Packets 64 Octets      15212
TX Packets 65-127 Octets  3810
TX Packets 128-255 Octets 6
TX Packets 256-511 Octets 43
TX Packets 512-1023 Octets 66
TX Packets 1024-1518 Octets 169
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets                  19306
TX Multicast Packets        0
TX Broadcast Packets        10886
TX PAUSEMAC Ctrl Frames    0
TX Oversize Packets         0
TX FCS Error Counter        0
TX Fragment Counter         0
TX Byte Counter             1569412
TX Packet OK Counter        0
TX Pause Packet Counter     0
TX Unicast Counter          0
RX Packets 64 Octets        17994
RX Packets 65-127 Octets    8006
RX Packets 128-255 Octets    230
RX Packets 256-511 Octets    19
RX Packets 512-1023 Octets   53
RX Packets 1024-1518 Octets  11
RX Packets 1519-2047 Octets  0
RX Packets 2048-4095 Octets  0
RX Packets 4096-9216 Octets  0
RX Packets 9217-16383 Octets 0
RX Octets                   26313
RX Multicast Packets        0
RX Broadcast Packets        10886
RX FCS Errors               0
RX Fragments                0
RX MAC Control Packets      0
RX Out of Range Length      0
RX Undersize Packets        0
RX Oversize Packets         0
RX Jabbers                  0
RX Control Frame Counter    2
RX Pause Frame Counter      2
RX Byte Counter             1836287
RX Unicast Frame Count      0
RX Packet OK Count          0
```

Statistics for port 19 connected to device OTHER RE:

```
TX Packets 64 Octets      10234
TX Packets 65-127 Octets  162
TX Packets 128-255 Octets 0
TX Packets 256-511 Octets 0
TX Packets 512-1023 Octets 0
TX Packets 1024-1518 Octets 0
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
```



```

TX Packets 4096-9216 Octets  0
TX Packets 9217-16383 Octets 0
TX Octets                    10396
TX Multicast Packets         8
TX Broadcast Packets         10317
TX PAUSEMAC Ctrl Frames     0
TX Oversize Packets         0
TX FCS Error Counter        0
TX Fragment Counter         0
TX Byte Counter             666260
TX Packet OK Counter        0
TX Pause Packet Counter     0
TX Unicast Counter          0
RX Packets 64 Octets        4073
RX Packets 65-127 Octets    325
RX Packets 128-255 Octets   1
RX Packets 256-511 Octets   0
RX Packets 512-1023 Octets  0
RX Packets 1024-1518 Octets 72
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets                   4471
RX Multicast Packets        0
RX Broadcast Packets        10317
RX FCS Errors               0
RX Fragments                0
RX MAC Control Packets      0
RX Out of Range Length      0
RX Undersize Packets        0
RX Oversize Packets         0
RX Jabbers                  0
RX Control Frame Counter    0
RX Pause Frame Counter      0
RX Byte Counter             387333
RX Unicast Frame Count      0
RX Packet OK Count          0
Statistics for port 20 connected to device RE:
TX Packets 64 Octets        658856
TX Packets 65-127 Octets    45535
TX Packets 128-255 Octets   1900
TX Packets 256-511 Octets   532
TX Packets 512-1023 Octets  372
TX Packets 1024-1518 Octets 191
TX Packets 1519-2047 Octets 0
TX Packets 2048-4095 Octets 0
TX Packets 4096-9216 Octets 0
TX Packets 9217-16383 Octets 0
TX Octets                   707386
TX Multicast Packets        0
TX Broadcast Packets        10421
TX PAUSEMAC Ctrl Frames     0
TX Oversize Packets         0
TX FCS Error Counter        0
TX Fragment Counter         0
TX Byte Counter             46608676
TX Packet OK Counter        0
TX Pause Packet Counter     0
TX Unicast Counter          0

```



```
RX Packets 64 Octets      27394
RX Packets 65-127 Octets 20271
RX Packets 128-255 Octets 78
RX Packets 256-511 Octets 215
RX Packets 512-1023 Octets 269
RX Packets 1024-1518 Octets 253370
RX Packets 1519-2047 Octets 0
RX Packets 2048-4095 Octets 0
RX Packets 4096-9216 Octets 0
RX Packets 9217-16383 Octets 0
RX Octets                 301597
RX Multicast Packets      8
RX Broadcast Packets     10421
RX FCS Errors             0
RX Fragments              0
RX MAC Control Packets    0
RX Out of Range Length    0
RX Undersize Packets      0
RX Oversize Packets       0
RX Jabbers                0
RX Control Frame Counter  0
RX Pause Frame Counter    0
RX Byte Counter           275043436
RX Unicast Frame Count    0
RX Packet OK Count        0
```

Continued ...

#### show chassis ethernet-switch port-state (PTX5000 Packet Transport Router)

```
user@host> show chassis ethernet-switch port-state
```

Displaying port state for switch 0

Port : 02

Target : SPMB

Error reading port 2 connected to device: SPMB



## show chassis fan

<b>List of Syntax</b>	<a href="#">Syntax on page 413</a>
	<a href="#">Syntax (ACX4000 Series Router) on page 413</a>
	<a href="#">Syntax (ACX5048 and ACX5096 Routers) on page 413</a>
	<a href="#">Syntax (MX Series Routers) on page 413</a>
	<a href="#">Syntax (T Series Routers) on page 413</a>
	<a href="#">Syntax (MX104, MX204, MX2010, MX2020, MX2008, and MX10003 Universal Routing Platform) on page 413</a>
	<a href="#">Syntax (MX10003 Universal Routing Platform) on page 413</a>
	<a href="#">Syntax (PTX Series) on page 413</a>
	<a href="#">Syntax (QFX Series) on page 414</a>
	<a href="#">Syntax (OCX Series) on page 414</a>
	<a href="#">Syntax (TX Matrix Router) on page 414</a>
	<a href="#">Syntax (TX Matrix Plus Router) on page 414</a>
	<a href="#">Syntax (EX9251, EX9253 Switches) on page 414</a>

<b>Syntax</b>	show chassis fan
<b>Syntax (ACX4000 Series Router)</b>	show chassis fan
<b>Syntax (ACX5048 and ACX5096 Routers)</b>	show chassis fan
<b>Syntax (MX Series Routers)</b>	show chassis fan <all-members> <local> <member <i>member-id</i> >
<b>Syntax (T Series Routers)</b>	show chassis fan
<b>Syntax (MX104, MX204, MX2010, MX2020, MX2008, and MX10003 Universal Routing Platform)</b>	show chassis fan <satellite [slot-id <i>slot-id</i> [device-alias <i>alias-name</i> ]]>
<b>Syntax (MX10003 Universal Routing Platform)</b>	show chassis fan
<b>Syntax (PTX Series)</b>	show chassis fan



<b>Syntax (QFX Series)</b>	show chassis fan <interconnect-device <i>name</i> >
<b>Syntax (OCX Series)</b>	show chassis fan
<b>Syntax (TX Matrix Router)</b>	show chassis fan <lcc <i>number</i>   scc>
<b>Syntax (TX Matrix Plus Router)</b>	show chassis fan <lcc <i>number</i>   sfc <i>number</i> >
<b>Syntax (EX9251, EX9253 Switches)</b>	show chassis fan
<b>Release Information</b>	<p>Command introduced in Junos OS Release 10.0 on MX Series 5G Universal Routing Platforms, M120 routers, and M320 routers, T320 routers, T640 routers, T1600 routers, TX Matrix Routers, and TX Matrix Plus routers.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 11.4 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1 for T4000 routers.</p> <p>Command introduced in Junos OS Release 12.3 for PTX5000 Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms, and ACX Series Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for MX10008 Universal Routing Platforms.</p> <p>Command output introduced for Junos OS Evolved Release 19.1R1.</p>
<b>Description</b>	(T Series routers, TX Matrix routers, TX Matrix Plus routers, M120 routers, M320 routers, MX104 routers, MX2010 routers, MX2020 routers, MX2008 routers, MX Series 5G Universal Routing Platforms, QFX3008-I Interconnect devices, QFX Series, OCX Series, EX Series switches, and PTX Series Packet Transport Routers only) Show information about the fan tray and fans.
<b>Options</b>	<b>all-members</b> —(MX Series routers only) (Optional) Display information about the fan tray and fans for all members of the Virtual Chassis configuration.



**local**—(MX Series routers only) (Optional) Display information about the fan tray and fans for the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display information about the fan tray and fans for the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* variable with a value 0 or 1.

**interconnect-device *name***—(QFX3000-G QFabric systems only) (Optional) Display information about the fan tray and fans for the specified QFX3008-I Interconnect device.

**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display information about the fan tray and fans for the specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display information about the fan tray and fans for the specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**satellite [*slot-id slot-id* | device-alias *alias-name*]**—(Junos Fusion only) (Optional) Display information about the fan tray and fans for the specified satellite device or devices in a Junos Fusion, or for all satellite devices if no satellite devices are specified.

**scc**—(TX Matrix routers only) (Optional) Display information about the fan tray and fans for the TX Matrix router (switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) Display information about the fan tray and fans for the TX Matrix Plus router (switch-fabric chassis). Replace *number* variable with 0.

**Required Privilege Level** view

**List of Sample Output** [show chassis fan on page 417](#)  
[show chassis fan \(QFabric Systems\) on page 417](#)  
[show chassis fan \(EX Series Switches\) on page 419](#)  
[show chassis fan \(T320 Router\) on page 419](#)  
[show chassis fan \(T640 Router\) on page 419](#)  
[show chassis fan \(T1600 Router\) on page 420](#)  
[show chassis fan \(T4000 Core Router\) on page 420](#)



[show chassis fan \(TX Matrix Router\) on page 421](#)  
[show chassis fan \(TX Matrix Plus Router\) on page 422](#)  
[show chassis fan \(TX Matrix Plus Router with 3D SIBs\) on page 423](#)  
[show chassis fan \(PTX5000 Packet Transport Router\) on page 425](#)  
[show chassis fan \(PTX10008 Router\) on page 426](#)  
[show chassis fan \(MX150\) on page 426](#)  
[show chassis fan \(MX104 Router\) on page 426](#)  
[show chassis fan \(MX2010 Router\) on page 426](#)  
[show chassis fan \(MX2020 Router\) on page 427](#)  
[show chassis fan \(MX2008 Router\) on page 427](#)  
[show chassis fan \(MX10003 Router\) on page 428](#)  
[show chassis fan \(MX204 Router\) on page 428](#)  
[show chassis fan \(MX10008 Router\) on page 428](#)  
[show chassis fan \(ACX4000 Router\) on page 429](#)  
[show chassis fan \(ACX5048 Router\) on page 429](#)  
[show chassis fan \(QFX5100 Switch and OCX Series\) on page 429](#)  
[show chassis fan \(EX9251 switches\) on page 429](#)  
[show chassis fan \(EX9253 switches\) on page 430](#)  
[show chassis fan \(Junos OS Evolved\) on page 430](#)

**Output Fields** Table 16 on page 416 lists the output fields for the **show chassis fan** command. Output fields are listed in the approximate order in which they appear.

*Table 16: show chassis fan Output Fields*

Field Name	Field Description
<b>Item</b>	Fan item identifier.
<b>Status</b>	Status of the fan: <ul style="list-style-type: none"> <li>• <b>OK</b>—Fan is running properly and within the normal range.</li> <li>• <b>Check</b>—Fan is in <b>Check</b> state because of some fault or alarm condition.</li> </ul>
<b>RPM</b>	(T Series routers, TX Matrix routers, TX Matrix Plus routers, MX Series 5G Universal Routing Platforms, QFX3108 Interconnect devices, and EX Series switches only) Fan speed in revolutions per minute (RPM).
<b>% RPM</b>	(PTX10003, MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series Packet Transport Routers only) Percentage of the fan speed being used.



Table 16: show chassis fan Output Fields (continued)

Field Name	Field Description
Measurement	<p>(T Series routers, TX Matrix routers, TX Matrix Plus routers, MX Series 5G Universal Routing Platforms, QFX3108 Interconnect devices, and EX Series switches only) Fan speed status based on different chassis cooling requirements:</p> <ul style="list-style-type: none"> <li>• Spinning at high speed</li> <li>• Spinning at intermediate speed</li> <li>• Spinning at normal speed</li> <li>• Spinning at low speed (except EX Series switches)</li> </ul> <p>(PTX10003, MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series Packet Transport Routers only) Fan speed in revolutions per minute (RPM) for each fan in the fan tray.</p>

## Sample Output

### show chassis fan

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Tray Fan 1	OK	3790	Spinning at normal speed
Top Tray Fan 2	OK	3769	Spinning at normal speed
Top Tray Fan 3	OK	3769	Spinning at normal speed
Top Tray Fan 4	OK	3790	Spinning at normal speed
Top Tray Fan 5	OK	3790	Spinning at normal speed
Top Tray Fan 6	OK	3769	Spinning at normal speed
Top Tray Fan 7	OK	3790	Spinning at normal speed
Top Tray Fan 8	OK	3769	Spinning at normal speed
Top Tray Fan 9	OK	3769	Spinning at normal speed
Top Tray Fan 10	OK	3790	Spinning at normal speed
Top Tray Fan 11	OK	3790	Spinning at normal speed
Top Tray Fan 12	OK	3769	Spinning at normal speed
Bottom Tray Fan 1	OK	2880	Spinning at normal speed
Bottom Tray Fan 2	OK	2912	Spinning at normal speed
Bottom Tray Fan 3	OK	2928	Spinning at normal speed
Bottom Tray Fan 4	OK	2896	Spinning at normal speed
Bottom Tray Fan 5	OK	2896	Spinning at normal speed
Bottom Tray Fan 6	OK	2928	Spinning at normal speed

### show chassis fan (QFabric Systems)

```
user@host> show chassis fan interconnect-device interconnect1
```

Item	Status	RPM	Measurement
TFT 0 Fan 0	OK	2849	Spinning at normal speed
TFT 0 Fan 1	OK	2821	Spinning at normal speed
TFT 0 Fan 2	OK	2735	Spinning at normal speed
TFT 0 Fan 3	OK	2815	Spinning at normal speed
TFT 0 Fan 4	OK	2828	Spinning at normal speed
TFT 0 Fan 5	OK	2863	Spinning at normal speed
BFT 1 Fan 0	OK	2941	Spinning at normal speed



BFT 1 Fan 1	OK	3008	Spinning at normal speed
BFT 1 Fan 2	OK	3073	Spinning at normal speed
BFT 1 Fan 3	OK	2925	Spinning at normal speed
BFT 1 Fan 4	OK	2863	Spinning at normal speed
BFT 1 Fan 5	OK	2933	Spinning at normal speed
SFT 0 Fan 0 Rotor 0	OK	15472	Spinning at normal speed
SFT 0 Fan 0 Rotor 1	OK	14477	Spinning at normal speed
SFT 0 Fan 1 Rotor 0	OK	15561	Spinning at normal speed
SFT 0 Fan 1 Rotor 1	OK	14210	Spinning at normal speed
SFT 0 Fan 2 Rotor 0	OK	16167	Spinning at normal speed
SFT 0 Fan 2 Rotor 1	OK	14248	Spinning at normal speed
SFT 0 Fan 3 Rotor 0	OK	16463	Spinning at normal speed
SFT 0 Fan 3 Rotor 1	OK	14099	Spinning at normal speed
SFT 1 Fan 0 Rotor 0	OK	15083	Spinning at normal speed
SFT 1 Fan 0 Rotor 1	OK	13533	Spinning at normal speed
SFT 1 Fan 1 Rotor 0	OK	16071	Spinning at normal speed
SFT 1 Fan 1 Rotor 1	OK	14400	Spinning at normal speed
SFT 1 Fan 2 Rotor 0	OK	15517	Spinning at normal speed
SFT 1 Fan 2 Rotor 1	OK	14210	Spinning at normal speed
SFT 1 Fan 3 Rotor 0	OK	16413	Spinning at normal speed
SFT 1 Fan 3 Rotor 1	OK	14400	Spinning at normal speed
SFT 2 Fan 0 Rotor 0	OK	15297	Spinning at normal speed
SFT 2 Fan 0 Rotor 1	OK	14634	Spinning at normal speed
SFT 2 Fan 1 Rotor 0	OK	15561	Spinning at normal speed
SFT 2 Fan 1 Rotor 1	OK	14285	Spinning at normal speed
SFT 2 Fan 2 Rotor 0	OK	15835	Spinning at normal speed
SFT 2 Fan 2 Rotor 1	OK	14400	Spinning at normal speed
SFT 2 Fan 3 Rotor 0	OK	15789	Spinning at normal speed
SFT 2 Fan 3 Rotor 1	OK	14323	Spinning at normal speed
SFT 3 Fan 0 Rotor 0	OK	16314	Spinning at normal speed
SFT 3 Fan 0 Rotor 1	OK	14876	Spinning at normal speed
SFT 3 Fan 1 Rotor 0	OK	15835	Spinning at normal speed
SFT 3 Fan 1 Rotor 1	OK	14323	Spinning at normal speed
SFT 3 Fan 2 Rotor 0	OK	16265	Spinning at normal speed
SFT 3 Fan 2 Rotor 1	OK	14594	Spinning at normal speed
SFT 3 Fan 3 Rotor 0	OK	16071	Spinning at normal speed
SFT 3 Fan 3 Rotor 1	OK	14323	Spinning at normal speed
SFT 4 Fan 0 Rotor 0	OK	15652	Spinning at normal speed
SFT 4 Fan 0 Rotor 1	OK	14438	Spinning at normal speed
SFT 4 Fan 1 Rotor 0	OK	16167	Spinning at normal speed
SFT 4 Fan 1 Rotor 1	OK	14555	Spinning at normal speed
SFT 4 Fan 2 Rotor 0	OK	16023	Spinning at normal speed
SFT 4 Fan 2 Rotor 1	OK	14361	Spinning at normal speed
SFT 4 Fan 3 Rotor 0	OK	16216	Spinning at normal speed
SFT 4 Fan 3 Rotor 1	OK	14438	Spinning at normal speed
SFT 5 Fan 0 Rotor 0	OK	15297	Spinning at normal speed
SFT 5 Fan 0 Rotor 1	OK	14173	Spinning at normal speed
SFT 5 Fan 1 Rotor 0	OK	15472	Spinning at normal speed
SFT 5 Fan 1 Rotor 1	OK	13846	Spinning at normal speed
SFT 5 Fan 2 Rotor 0	OK	15340	Spinning at normal speed
SFT 5 Fan 2 Rotor 1	OK	13917	Spinning at normal speed
SFT 5 Fan 3 Rotor 0	OK	15835	Spinning at normal speed
SFT 5 Fan 3 Rotor 1	OK	13917	Spinning at normal speed
SFT 6 Fan 0 Rotor 0	OK	15743	Spinning at normal speed
SFT 6 Fan 0 Rotor 1	OK	14594	Spinning at normal speed
SFT 6 Fan 1 Rotor 0	OK	16167	Spinning at normal speed
SFT 6 Fan 1 Rotor 1	OK	14634	Spinning at normal speed
SFT 6 Fan 2 Rotor 0	OK	16167	Spinning at normal speed
SFT 6 Fan 2 Rotor 1	OK	14516	Spinning at normal speed
SFT 6 Fan 3 Rotor 0	OK	16666	Spinning at normal speed



```

SFT 6 Fan 3 Rotor 1    OK    14438    Spinning at normal speed
SFT 7 Fan 0 Rotor 0    OK    15517    Spinning at normal speed
SFT 7 Fan 0 Rotor 1    OK    14438    Spinning at normal speed
SFT 7 Fan 1 Rotor 0    OK    15517    Spinning at normal speed
SFT 7 Fan 1 Rotor 1    OK    14361    Spinning at normal speed
SFT 7 Fan 2 Rotor 0    OK    16167    Spinning at normal speed
SFT 7 Fan 2 Rotor 1    OK    14555    Spinning at normal speed
SFT 7 Fan 3 Rotor 0    OK    15697    Spinning at normal speed
SFT 7 Fan 3 Rotor 1    OK    14361    Spinning at normal speed

```

### show chassis fan (EX Series Switches)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Fan 1	OK	3477	Spinning at normal speed
Fan 2	OK	3477	Spinning at normal speed
Fan 3	OK	3479	Spinning at normal speed
Fan 4	OK	3508	Spinning at normal speed
Fan 5	OK	3517	Spinning at normal speed
Fan 6	OK	3531	Spinning at normal speed
Fan 7	OK	3439	Spinning at normal speed
Fan 8	OK	3424	Spinning at normal speed
Fan 9	OK	3413	Spinning at normal speed
Fan 10	OK	3439	Spinning at normal speed
Fan 11	OK	3446	Spinning at normal speed
Fan 12	OK	3432	Spinning at normal speed

### show chassis fan (T320 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	2850	Spinning at normal speed
Top Left Middle fan	OK	2820	Spinning at normal speed
Top Left Rear fan	OK	2970	Spinning at normal speed
Top Right Front fan	OK	2790	Spinning at normal speed
Top Right Middle fan	OK	2640	Spinning at normal speed
Top Right Rear fan	OK	2790	Spinning at normal speed
Bottom Left Front fan	OK	2520	Spinning at normal speed
Bottom Left Middle fan	OK	2610	Spinning at normal speed
Bottom Left Rear fan	OK	2550	Spinning at normal speed
Bottom Right Front fan	OK	2610	Spinning at normal speed
Bottom Right Middle fan	OK	2880	Spinning at normal speed
Bottom Right Rear fan	OK	2790	Spinning at normal speed
Rear Tray Top fan	OK	2130	Spinning at normal speed
Rear Tray Second fan	OK	2190	Spinning at normal speed
Rear Tray Middle fan	OK	2250	Spinning at normal speed
Rear Tray Fourth fan	OK	2220	Spinning at normal speed
Rear Tray Bottom fan	OK	2280	Spinning at normal speed

### show chassis fan (T640 Router)

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
------	--------	-----	-------------



Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3450	Spinning at normal speed
Bottom Left Front fan	OK	3390	Spinning at normal speed
Bottom Left Middle fan	OK	3420	Spinning at normal speed
Bottom Left Rear fan	OK	3390	Spinning at normal speed
Bottom Right Front fan	OK	3390	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3390	Spinning at normal speed
Rear Tray Top fan	OK	5220	Spinning at normal speed
Rear Tray Second fan	OK	5220	Spinning at normal speed
Rear Tray Third fan	OK	5220	Spinning at normal speed
Rear Tray Fourth fan	OK	5220	Spinning at normal speed
Rear Tray Fifth fan	OK	5220	Spinning at normal speed
Rear Tray Sixth fan	OK	5220	Spinning at normal speed
Rear Tray Seventh fan	OK	5220	Spinning at normal speed
Rear Tray Bottom fan	OK	5220	Spinning at normal speed

**show chassis fan (T1600 Router)**

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3450	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3390	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3420	Spinning at normal speed
Bottom Left Rear fan	OK	3390	Spinning at normal speed
Bottom Right Front fan	OK	3390	Spinning at normal speed
Bottom Right Middle fan	OK	3420	Spinning at normal speed
Bottom Right Rear fan	OK	3390	Spinning at normal speed
Rear Tray Top fan	OK	5190	Spinning at normal speed
Rear Tray Second fan	OK	5190	Spinning at normal speed
Rear Tray Third fan	OK	5190	Spinning at normal speed
Rear Tray Fourth fan	OK	5190	Spinning at normal speed
Rear Tray Fifth fan	OK	5190	Spinning at normal speed
Rear Tray Sixth fan	OK	5190	Spinning at normal speed
Rear Tray Seventh fan	OK	5190	Spinning at normal speed
Rear Tray Bottom fan	OK	5190	Spinning at normal speed

**show chassis fan (T4000 Core Router)**

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	5190	Spinning at high speed
Top Left Middle fan	OK	5220	Spinning at high speed
Top Left Rear fan	OK	5190	Spinning at high speed
Top Right Front fan	OK	5160	Spinning at high speed
Top Right Middle fan	OK	5190	Spinning at high speed



Top Right Rear fan	OK	5160	Spinning at high speed
Bottom Left Front fan	OK	6030	Spinning at high speed
Bottom Left Middle fan	OK	6090	Spinning at high speed
Bottom Left Rear fan	OK	6090	Spinning at high speed
Bottom Right Front fan	OK	6030	Spinning at high speed
Bottom Right Middle fan	OK	6060	Spinning at high speed
Bottom Right Rear fan	OK	6060	Spinning at high speed
Rear Tray Top fan	OK	10000	Spinning at high speed
Rear Tray Second fan	OK	10000	Spinning at high speed
Rear Tray Third fan	OK	10000	Spinning at high speed
Rear Tray Fourth fan	OK	10000	Spinning at high speed
Rear Tray Fifth fan	OK	10000	Spinning at high speed
Rear Tray Sixth fan	OK	10000	Spinning at high speed
Rear Tray Seventh fan	OK	10000	Spinning at high speed
Rear Tray Bottom fan	OK	10000	Spinning at high speed

### show chassis fan (TX Matrix Router)

```
user@host> show chassis fan
```

```
scc-re0:
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3390	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3390	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3390	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3450	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3420	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray Top fan	OK	3420	Spinning at normal speed
Rear Tray Second fan	OK	5190	Spinning at normal speed
Rear Tray Third fan	OK	5190	Spinning at normal speed
Rear Tray Fourth fan	OK	5190	Spinning at normal speed
Rear Tray Fifth fan	OK	3420	Spinning at normal speed
Rear Tray Sixth fan	OK	3420	Spinning at normal speed
Rear Tray Seventh fan	OK	3420	Spinning at normal speed
Rear Tray Bottom fan	OK	3420	Spinning at normal speed

```
1cc2-re0:
```

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3420	Spinning at normal speed
Top Left Rear fan	OK	3450	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3450	Spinning at normal speed
Top Right Rear fan	OK	3360	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3480	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray Top fan	OK	3420	Spinning at normal speed



Rear Tray Second fan	OK	3420	Spinning at normal speed
Rear Tray Third fan	OK	3420	Spinning at normal speed
Rear Tray Fourth fan	OK	3420	Spinning at normal speed
Rear Tray Fifth fan	OK	3420	Spinning at normal speed
Rear Tray Sixth fan	OK	3420	Spinning at normal speed
Rear Tray Seventh fan	OK	3420	Spinning at normal speed
Rear Tray Bottom fan	OK	3420	Spinning at normal speed

### show chassis fan (TX Matrix Plus Router)

```
user@host> show chassis fan
```

```
sfc0-re0:
```

Item	Status	RPM	Measurement
Fan Tray 0 Fan 1	OK	4350	Spinning at normal speed
Fan Tray 0 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 0 Fan 3	OK	4410	Spinning at normal speed
Fan Tray 0 Fan 4	OK	4380	Spinning at normal speed
Fan Tray 0 Fan 5	OK	4350	Spinning at normal speed
Fan Tray 0 Fan 6	OK	4380	Spinning at normal speed
Fan Tray 1 Fan 1	OK	4410	Spinning at normal speed
Fan Tray 1 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 1 Fan 3	OK	4410	Spinning at normal speed
Fan Tray 1 Fan 4	OK	4380	Spinning at normal speed
Fan Tray 1 Fan 5	OK	4410	Spinning at normal speed
Fan Tray 1 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 1	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 3	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 4	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 5	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 7	OK	4410	Spinning at normal speed
Fan Tray 2 Fan 8	OK	4380	Spinning at normal speed
Fan Tray 2 Fan 9	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 1	OK	4350	Spinning at normal speed
Fan Tray 3 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 3	OK	4410	Spinning at normal speed
Fan Tray 3 Fan 4	OK	4440	Spinning at normal speed
Fan Tray 3 Fan 5	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 3 Fan 7	OK	4410	Spinning at normal speed
Fan Tray 3 Fan 8	OK	4380	Spinning at normal speed
Fan Tray 3 Fan 9	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 1	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 2	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 3	OK	4380	Spinning at normal speed
Fan Tray 4 Fan 4	OK	4380	Spinning at normal speed
Fan Tray 4 Fan 5	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 6	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 7	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 8	OK	4410	Spinning at normal speed
Fan Tray 4 Fan 9	OK	4410	Spinning at normal speed
Fan Tray 5 Fan 1	OK	4350	Spinning at normal speed
Fan Tray 5 Fan 2	OK	4380	Spinning at normal speed
Fan Tray 5 Fan 3	OK	4380	Spinning at normal speed
Fan Tray 5 Fan 4	OK	4350	Spinning at normal speed
Fan Tray 5 Fan 5	OK	4380	Spinning at normal speed
Fan Tray 5 Fan 6	OK	4410	Spinning at normal speed



```

Fan Tray 5 Fan 7      OK      4410   Spinning at normal speed
Fan Tray 5 Fan 8      OK      4380   Spinning at normal speed
Fan Tray 5 Fan 9      OK      4410   Spinning at normal speed

```

```
lcc0-re0:
```

```

-----
Item              Status  RPM    Measurement
Top Left Front fan  OK      3420   Spinning at normal speed
Top Left Middle fan OK      3420   Spinning at normal speed
Top Left Rear fan   OK      3420   Spinning at normal speed
Top Right Front fan  OK      3450   Spinning at normal speed
Top Right Middle fan OK      3420   Spinning at normal speed
Top Right Rear fan   OK      3420   Spinning at normal speed
Bottom Left Front fan OK      3420   Spinning at normal speed
Bottom Left Middle fan OK      3420   Spinning at normal speed
Bottom Left Rear fan OK      3390   Spinning at normal speed
Bottom Right Front fan OK      3420   Spinning at normal speed
Bottom Right Middle fan OK      3390   Spinning at normal speed
Bottom Right Rear fan OK      3390   Spinning at normal speed
Rear Tray Top fan    OK      7050   Spinning at normal speed
Rear Tray Second fan OK      7050   Spinning at normal speed
Rear Tray Third fan  OK      7050   Spinning at normal speed
Rear Tray Fourth fan OK      7050   Spinning at normal speed
Rear Tray Fifth fan  OK      7050   Spinning at normal speed
Rear Tray Sixth fan  OK      7050   Spinning at normal speed
Rear Tray Seventh fan OK      7050   Spinning at normal speed
Rear Tray Bottom fan OK      7050   Spinning at normal speed

```

### show chassis fan (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fan
```

```
sfc0-re0:
```

```

-----
Item              Status  RPM    Measurement
Fan Tray 0 Fan 1   OK      4830   Spinning at normal speed
Fan Tray 0 Fan 2   OK      4860   Spinning at normal speed
Fan Tray 0 Fan 3   OK      4830   Spinning at normal speed
Fan Tray 0 Fan 4   OK      4800   Spinning at normal speed
Fan Tray 0 Fan 5   OK      4830   Spinning at normal speed
Fan Tray 0 Fan 6   OK      4770   Spinning at normal speed
Fan Tray 1 Fan 1   OK      4800   Spinning at normal speed
Fan Tray 1 Fan 2   OK      4770   Spinning at normal speed
Fan Tray 1 Fan 3   OK      4800   Spinning at normal speed
Fan Tray 1 Fan 4   OK      4770   Spinning at normal speed
Fan Tray 1 Fan 5   OK      4770   Spinning at normal speed
Fan Tray 1 Fan 6   OK      4800   Spinning at normal speed
Fan Tray 2 Fan 1   OK      4800   Spinning at normal speed
Fan Tray 2 Fan 2   OK      4800   Spinning at normal speed
Fan Tray 2 Fan 3   OK      4830   Spinning at normal speed
Fan Tray 2 Fan 4   OK      4830   Spinning at normal speed
Fan Tray 2 Fan 5   OK      4830   Spinning at normal speed
Fan Tray 2 Fan 6   OK      4830   Spinning at normal speed
Fan Tray 2 Fan 7   OK      4800   Spinning at normal speed
Fan Tray 2 Fan 8   OK      4830   Spinning at normal speed
Fan Tray 2 Fan 9   OK      4800   Spinning at normal speed
Fan Tray 3 Fan 1   OK      4860   Spinning at normal speed
Fan Tray 3 Fan 2   OK      4860   Spinning at normal speed
Fan Tray 3 Fan 3   OK      4800   Spinning at normal speed
Fan Tray 3 Fan 4   OK      4830   Spinning at normal speed

```



Fan Tray 3 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 6	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 7	OK	4830	Spinning at normal speed
Fan Tray 3 Fan 8	OK	4800	Spinning at normal speed
Fan Tray 3 Fan 9	OK	4800	Spinning at normal speed
Fan Tray 4 Fan 1	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 2	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 4	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 5	OK	4830	Spinning at normal speed
Fan Tray 4 Fan 6	OK	4860	Spinning at normal speed
Fan Tray 4 Fan 7	OK	4800	Spinning at normal speed
Fan Tray 4 Fan 8	OK	4860	Spinning at normal speed
Fan Tray 4 Fan 9	OK	4770	Spinning at normal speed
Fan Tray 5 Fan 1	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 2	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 3	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 4	OK	4800	Spinning at normal speed
Fan Tray 5 Fan 5	OK	4800	Spinning at normal speed
Fan Tray 5 Fan 6	OK	4800	Spinning at normal speed
Fan Tray 5 Fan 7	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 8	OK	4830	Spinning at normal speed
Fan Tray 5 Fan 9	Check	2010	

1cc0-re0:

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed
Top Left Middle fan	OK	3390	Spinning at normal speed
Top Left Rear fan	OK	3390	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3450	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3390	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray fan 1 (Top)	OK	7740	Spinning at normal speed
Rear Tray fan 2	OK	7740	Spinning at normal speed
Rear Tray fan 3	OK	7740	Spinning at normal speed
Rear Tray fan 4	OK	7740	Spinning at normal speed
Rear Tray fan 5	OK	7740	Spinning at normal speed
Rear Tray fan 6	OK	7740	Spinning at normal speed
Rear Tray fan 7	OK	7740	Spinning at normal speed
Rear Tray fan 8	OK	7740	Spinning at normal speed
Rear Tray fan 9	OK	7740	Spinning at normal speed
Rear Tray fan 10	OK	7740	Spinning at normal speed
Rear Tray fan 11	OK	7740	Spinning at normal speed
Rear Tray fan 12	OK	7740	Spinning at normal speed
Rear Tray fan 13	OK	7740	Spinning at normal speed
Rear Tray fan 14	OK	7740	Spinning at normal speed
Rear Tray fan 15	OK	7740	Spinning at normal speed
Rear Tray fan 16 (Bottom)	OK	7740	Spinning at normal speed

1cc2-re0:

Item	Status	RPM	Measurement
Top Left Front fan	OK	3420	Spinning at normal speed



Top Left Middle fan	OK	3390	Spinning at normal speed
Top Left Rear fan	OK	3420	Spinning at normal speed
Top Right Front fan	OK	3420	Spinning at normal speed
Top Right Middle fan	OK	3420	Spinning at normal speed
Top Right Rear fan	OK	3450	Spinning at normal speed
Bottom Left Front fan	OK	3420	Spinning at normal speed
Bottom Left Middle fan	OK	3390	Spinning at normal speed
Bottom Left Rear fan	OK	3420	Spinning at normal speed
Bottom Right Front fan	OK	3420	Spinning at normal speed
Bottom Right Middle fan	OK	3390	Spinning at normal speed
Bottom Right Rear fan	OK	3420	Spinning at normal speed
Rear Tray fan 1 (Top)	OK	7740	Spinning at normal speed
Rear Tray fan 2	OK	7740	Spinning at normal speed
Rear Tray fan 3	OK	7740	Spinning at normal speed
Rear Tray fan 4	OK	7740	Spinning at normal speed
Rear Tray fan 5	OK	7740	Spinning at normal speed
Rear Tray fan 6	OK	7740	Spinning at normal speed
Rear Tray fan 7	OK	7740	Spinning at normal speed
Rear Tray fan 8	OK	7740	Spinning at normal speed
Rear Tray fan 9	OK	7740	Spinning at normal speed
Rear Tray fan 10	OK	7740	Spinning at normal speed
Rear Tray fan 11	OK	7740	Spinning at normal speed
Rear Tray fan 12	OK	7740	Spinning at normal speed
Rear Tray fan 13	OK	7740	Spinning at normal speed
Rear Tray fan 14	OK	7740	Spinning at normal speed
Rear Tray fan 15	OK	7740	Spinning at normal speed
Rear Tray fan 16 (Bottom)	OK	7740	Spinning at normal speed

### show chassis fan (PTX5000 Packet Transport Router)

```
user@host> show chassis fan
```

```
user@host> show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	29%	2700 RPM
Fan Tray 0 Fan 2	OK	29%	2700 RPM
Fan Tray 0 Fan 3	OK	29%	2742 RPM
Fan Tray 0 Fan 4	OK	29%	2700 RPM
Fan Tray 0 Fan 5	OK	30%	2828 RPM
Fan Tray 0 Fan 6	OK	30%	2828 RPM
Fan Tray 0 Fan 7	OK	29%	2700 RPM
Fan Tray 0 Fan 8	OK	30%	2785 RPM
Fan Tray 0 Fan 9	OK	30%	2828 RPM
Fan Tray 0 Fan 10	OK	30%	2828 RPM
Fan Tray 0 Fan 11	OK	30%	2785 RPM
Fan Tray 0 Fan 12	OK	30%	2828 RPM
Fan Tray 0 Fan 13	OK	31%	2871 RPM
Fan Tray 0 Fan 14	OK	30%	2828 RPM
Fan Tray 1 Fan 1	OK	42%	3033 RPM
Fan Tray 1 Fan 2	OK	42%	3066 RPM
Fan Tray 1 Fan 3	OK	43%	3099 RPM
Fan Tray 1 Fan 4	OK	43%	3166 RPM
Fan Tray 1 Fan 5	OK	45%	3266 RPM
Fan Tray 1 Fan 6	OK	43%	3133 RPM
Fan Tray 2 Fan 1	OK	29%	2099 RPM
Fan Tray 2 Fan 2	OK	30%	2199 RPM
Fan Tray 2 Fan 3	OK	30%	2166 RPM
Fan Tray 2 Fan 4	OK	33%	2399 RPM
Fan Tray 2 Fan 5	OK	29%	2133 RPM
Fan Tray 2 Fan 6	OK	32%	2366 RPM



## show chassis fan (PTX10008 Router)

user@host&gt; show chassis fan

Item	Status	RPM	Measurement
Fan Tray 0 Fan 0	OK	9000	Spinning at normal speed
Fan Tray 0 Fan 1	OK	9000	Spinning at normal speed
Fan Tray 0 Fan 2	OK	9150	Spinning at normal speed
Fan Tray 0 Fan 3	OK	9150	Spinning at normal speed
Fan Tray 0 Fan 4	OK	9000	Spinning at normal speed
Fan Tray 0 Fan 5	OK	9150	Spinning at normal speed
Fan Tray 0 Fan 6	OK	9000	Spinning at normal speed
Fan Tray 0 Fan 7	OK	9150	Spinning at normal speed
Fan Tray 0 Fan 8	OK	8850	Spinning at normal speed
Fan Tray 0 Fan 9	OK	8850	Spinning at normal speed
Fan Tray 0 Fan 10	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 0	OK	9150	Spinning at normal speed
Fan Tray 1 Fan 1	OK	9150	Spinning at normal speed
Fan Tray 1 Fan 2	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 3	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 4	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 5	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 6	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 7	OK	9150	Spinning at normal speed
Fan Tray 1 Fan 8	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 9	OK	9000	Spinning at normal speed
Fan Tray 1 Fan 10	OK	9000	Spinning at normal speed

## show chassis fan (MX150)

user@host &gt; show chassis fan

Item	Status	RPM	Measurement
FPC 0 Tray 0 Fan 0	OK	7419	Spinning at normal speed
FPC 0 Tray 1 Fan 0	OK	7419	Spinning at normal speed

## show chassis fan (MX104 Router)

user@host &gt; show chassis fan

Item	Status	RPM	Measurement
Fan 1	OK	5640	Spinning at normal speed
Fan 2	OK	5640	Spinning at normal speed
Fan 3	OK	5760	Spinning at normal speed
Fan 4	OK	5640	Spinning at normal speed
Fan 5	OK	5640	Spinning at normal speed

## show chassis fan (MX2010 Router)

user@host &gt; show chassis fan

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	37%	3360 RPM
Fan Tray 0 Fan 2	OK	38%	3480 RPM
Fan Tray 0 Fan 3	OK	37%	3360 RPM
Fan Tray 0 Fan 4	OK	37%	3360 RPM
Fan Tray 0 Fan 5	OK	38%	3480 RPM
Fan Tray 0 Fan 6	OK	37%	3360 RPM
Fan Tray 1 Fan 1	OK	38%	3480 RPM



Fan Tray 1 Fan 2	OK	40%	3600 RPM
Fan Tray 1 Fan 3	OK	38%	3480 RPM
Fan Tray 1 Fan 4	OK	38%	3480 RPM
Fan Tray 1 Fan 5	OK	38%	3480 RPM
Fan Tray 1 Fan 6	OK	38%	3480 RPM
Fan Tray 2 Fan 1	OK	38%	3480 RPM
Fan Tray 2 Fan 2	OK	41%	3720 RPM
Fan Tray 2 Fan 3	OK	38%	3480 RPM
Fan Tray 2 Fan 4	OK	38%	3480 RPM
Fan Tray 2 Fan 5	OK	38%	3480 RPM
Fan Tray 2 Fan 6	OK	38%	3480 RPM
Fan Tray 3 Fan 1	OK	38%	3480 RPM
Fan Tray 3 Fan 2	OK	40%	3600 RPM
Fan Tray 3 Fan 3	OK	40%	3600 RPM
Fan Tray 3 Fan 4	OK	40%	3600 RPM
Fan Tray 3 Fan 5	OK	40%	3600 RPM
Fan Tray 3 Fan 6	OK	38%	3480 RPM

### show chassis fan (MX2020 Router)

```
user@host > show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	37%	3360 RPM
Fan Tray 0 Fan 2	OK	37%	3360 RPM
Fan Tray 0 Fan 3	OK	36%	3240 RPM
Fan Tray 0 Fan 4	OK	37%	3360 RPM
Fan Tray 0 Fan 5	OK	37%	3360 RPM
Fan Tray 0 Fan 6	OK	37%	3360 RPM
Fan Tray 1 Fan 1	OK	37%	3360 RPM
Fan Tray 1 Fan 2	OK	37%	3360 RPM
Fan Tray 1 Fan 3	OK	37%	3360 RPM
Fan Tray 1 Fan 4	OK	37%	3360 RPM
Fan Tray 1 Fan 5	OK	37%	3360 RPM
Fan Tray 1 Fan 6	OK	36%	3240 RPM
Fan Tray 2 Fan 1	OK	37%	3360 RPM
Fan Tray 2 Fan 2	OK	37%	3360 RPM
Fan Tray 2 Fan 3	OK	37%	3360 RPM
Fan Tray 2 Fan 4	OK	37%	3360 RPM
Fan Tray 2 Fan 5	OK	37%	3360 RPM
Fan Tray 2 Fan 6	OK	38%	3480 RPM
Fan Tray 3 Fan 1	OK	38%	3480 RPM
Fan Tray 3 Fan 2	OK	38%	3480 RPM
Fan Tray 3 Fan 3	OK	38%	3480 RPM
Fan Tray 3 Fan 4	OK	37%	3360 RPM
Fan Tray 3 Fan 5	OK	37%	3360 RPM
Fan Tray 3 Fan 6	OK	37%	3360 RPM

### show chassis fan (MX2008 Router)

```
user@host > show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	OK	64%	5760 RPM
Fan Tray 0 Fan 2	OK	62%	5640 RPM
Fan Tray 0 Fan 3	OK	64%	5760 RPM
Fan Tray 0 Fan 4	OK	60%	5400 RPM
Fan Tray 0 Fan 5	OK	61%	5520 RPM
Fan Tray 0 Fan 6	OK	62%	5640 RPM



Fan Tray 1 Fan 1	OK	61%	5520 RPM
Fan Tray 1 Fan 2	OK	61%	5520 RPM
Fan Tray 1 Fan 3	OK	61%	5520 RPM
Fan Tray 1 Fan 4	OK	62%	5640 RPM
Fan Tray 1 Fan 5	OK	62%	5640 RPM
Fan Tray 1 Fan 6	OK	64%	5760 RPM

**show chassis fan (MX10003 Router)**

```
user@host> show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 0	OK	40%	7296 RPM
Fan Tray 0 Fan 1	OK	40%	6656 RPM
Fan Tray 0 Fan 2	OK	40%	7296 RPM
Fan Tray 0 Fan 3	OK	40%	6400 RPM
Fan Tray 1 Fan 0	OK	40%	7296 RPM
Fan Tray 1 Fan 1	OK	40%	6528 RPM
Fan Tray 1 Fan 2	OK	40%	7296 RPM
Fan Tray 1 Fan 3	OK	40%	6784 RPM
Fan Tray 2 Fan 0	OK	40%	7552 RPM
Fan Tray 2 Fan 1	OK	40%	6784 RPM
Fan Tray 2 Fan 2	OK	40%	7424 RPM
Fan Tray 2 Fan 3	OK	40%	6528 RPM
Fan Tray 3 Fan 0	OK	40%	7552 RPM
Fan Tray 3 Fan 1	OK	40%	6528 RPM
Fan Tray 3 Fan 2	OK	40%	7296 RPM
Fan Tray 3 Fan 3	OK	40%	6656 RPM

**show chassis fan (MX204 Router)**

```
user@host> show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 0	OK	40%	9344 RPM
Fan Tray 0 Fan 1	OK	40%	8576 RPM
Fan Tray 1 Fan 0	OK	40%	9344 RPM
Fan Tray 1 Fan 1	OK	40%	8832 RPM
Fan Tray 2 Fan 0	OK	40%	9344 RPM
Fan Tray 2 Fan 1	OK	40%	8576 RPM

**show chassis fan (MX10008 Router)**

```
user@host> show chassis fan
```

Item	Status	RPM	Measurement
Fan Tray 0 Fan 0	OK	9750	Spinning at normal speed
Fan Tray 0 Fan 1	OK	9750	Spinning at normal speed
Fan Tray 0 Fan 2	OK	9900	Spinning at normal speed
Fan Tray 0 Fan 3	OK	9600	Spinning at normal speed
Fan Tray 0 Fan 4	Failed		
Fan Tray 0 Fan 5	Failed		
Fan Tray 0 Fan 6	OK	9750	Spinning at normal speed
Fan Tray 0 Fan 7	OK	9750	Spinning at normal speed
Fan Tray 0 Fan 8	OK	9600	Spinning at normal speed
Fan Tray 0 Fan 9	OK	9600	Spinning at normal speed



Fan Tray 0 Fan 10	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 0	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 1	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 2	OK	9750	Spinning at normal speed
Fan Tray 1 Fan 3	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 4	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 5	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 6	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 7	OK	9750	Spinning at normal speed
Fan Tray 1 Fan 8	OK	9750	Spinning at normal speed
Fan Tray 1 Fan 9	OK	9600	Spinning at normal speed
Fan Tray 1 Fan 10	OK	9600	Spinning at normal speed

**show chassis fan (ACX4000 Router)**

```
user@host > show chassis fan
```

Item	Status	RPM	Measurement
Fan 1	OK	4140	Spinning at normal speed
Fan 2	OK	4200	Spinning at normal speed

**show chassis fan (ACX5048 Router)**

```
user@host > show chassis fan
```

Item	Status	RPM	Measurement
FPC 0 Tray 0 Fan 0	OK	18305	Spinning at normal speed
FPC 0 Tray 0 Fan 1	OK	15743	Spinning at normal speed
FPC 0 Tray 1 Fan 0	OK	18305	Spinning at normal speed
FPC 0 Tray 1 Fan 1	OK	15606	Spinning at normal speed
FPC 0 Tray 2 Fan 0	OK	19014	Spinning at normal speed
FPC 0 Tray 2 Fan 1	OK	16167	Spinning at normal speed
FPC 0 Tray 3 Fan 0	OK	18947	Spinning at normal speed
FPC 0 Tray 3 Fan 1	OK	16265	Spinning at normal speed
FPC 0 Tray 4 Fan 0	OK	18120	Spinning at normal speed
FPC 0 Tray 4 Fan 1	OK	15743	Spinning at normal speed

**show chassis fan (QFX5100 Switch and OCX Series)**

```
user@switch > show chassis fan
```

Item	Status	RPM	Measurement
FPC 0 Tray 0 Fan 0	OK	6428	Spinning at normal speed
FPC 0 Tray 0 Fan 1	OK	5515	Spinning at normal speed
FPC 0 Tray 1 Fan 0	OK	6360	Spinning at normal speed
FPC 0 Tray 1 Fan 1	OK	5532	Spinning at normal speed

**show chassis fan (EX9251 switches)**

```
user@switch > show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 0	OK	40%	9600 RPM
Fan Tray 0 Fan 1	OK	40%	8832 RPM
Fan Tray 1 Fan 0	OK	40%	9728 RPM
Fan Tray 1 Fan 1	OK	40%	9088 RPM
Fan Tray 2	Absent		



**show chassis fan (EX9253 switches)**

```
user@switch > show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 0	OK	40%	7552 RPM
Fan Tray 0 Fan 1	OK	40%	6272 RPM
Fan Tray 0 Fan 2	OK	40%	7552 RPM
Fan Tray 0 Fan 3	OK	40%	6272 RPM
Fan Tray 1 Fan 0	OK	40%	7552 RPM
Fan Tray 1 Fan 1	OK	40%	6272 RPM
Fan Tray 1 Fan 2	OK	40%	7552 RPM
Fan Tray 1 Fan 3	OK	40%	6272 RPM
Fan Tray 2 Fan 0	OK	40%	7552 RPM
Fan Tray 2 Fan 1	OK	40%	6400 RPM
Fan Tray 2 Fan 2	OK	40%	7552 RPM
Fan Tray 2 Fan 3	OK	40%	6272 RPM
Fan Tray 3 Fan 0	OK	40%	7552 RPM
Fan Tray 3 Fan 1	OK	40%	6400 RPM
Fan Tray 3 Fan 2	OK	40%	7552 RPM
Fan Tray 3 Fan 3	OK	40%	6272 RPM

**show chassis fan (Junos OS Evolved)**

```
user@device> show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 1 Fan 1	Ok	48%	6597 RPM
Fan Tray 1 Fan 2	Ok	49%	5649 RPM
Fan Tray 2 Fan 1	Ok	49%	6687 RPM
Fan Tray 2 Fan 2	Ok	49%	5649 RPM
Fan Tray 3 Fan 1	Ok	49%	6642 RPM
Fan Tray 3 Fan 2	Ok	49%	5649 RPM



## show chassis firmware

<b>List of Syntax</b>	<a href="#">Syntax on page 431</a> <a href="#">Syntax (TX Matrix Routers) on page 431</a> <a href="#">Syntax (TX Matrix Plus Routers) on page 431</a> <a href="#">Syntax (MX Series Routers) on page 431</a> <a href="#">Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms) on page 431</a> <a href="#">Syntax (MX10008 Universal Routing Platforms) on page 431</a> <a href="#">Syntax (PTX Series) on page 431</a> <a href="#">Syntax (QFX Series) on page 432</a> <a href="#">Syntax (OCX Series) on page 432</a> <a href="#">Syntax (ACX Series Universal Metro Routers) on page 432</a> <a href="#">Syntax (ACX5048 and ACX5096 Routers) on page 432</a> <a href="#">Syntax (ACX500 Routers) on page 432</a> <a href="#">Syntax (EX Series Switches) on page 432</a>
-----------------------	---

<b>Syntax</b>	show chassis firmware
---------------	-----------------------

<b>Syntax (TX Matrix Routers)</b>	show chassis firmware <lcc <i>number</i>   scc>
-----------------------------------	--

<b>Syntax (TX Matrix Plus Routers)</b>	show chassis firmware <lcc <i>number</i>   sfc <i>number</i> >
--	---

<b>Syntax (MX Series Routers)</b>	show chassis firmware <all-members> <local> <member <i>member-id</i> >
-----------------------------------	---

<b>Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms)</b>	show chassis firmware <satellite [slot-id <i>slot-id</i>   device-alias <i>alias-name</i> ]>
---	---

<b>Syntax (MX10008 Universal Routing Platforms)</b>	show chassis firmware
---	-----------------------

<b>Syntax (PTX Series)</b>	show chassis firmware
----------------------------	-----------------------



Syntax (QFX Series)	show chassis firmware interconnect-device <i>name</i> node-device <i>name</i>
Syntax (OCX Series)	show chassis firmware
Syntax (ACX Series Universal Metro Routers)	show chassis firmware
Syntax (ACX5048 and ACX5096 Routers)	show chassis firmware interconnect-device <i>name</i> node-device <i>name</i>
Syntax (ACX500 Routers)	show chassis firmware
Syntax (EX Series Switches)	show chassis firmware <detail> <satellite [slot-id <i>slot-id</i>  device-alias <i>alias-name</i> ]>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.4 for EX Series switches.</p> <p>sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.</p> <p>Command introduced for EX8200 switches in Junos OS Release 10.2 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms, and ACX4000 Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for MX10008 Universal Routing Platforms.</p>



**Description** On routers and switches, display the version levels of the firmware running on the System Control Board (SCB), Switching and Forwarding Module (SFM), System and Switch Board (SSB), Forwarding Engine Board (FEB), Flexible PIC Concentrators (FPCs), and Routing Engines. On a TX Matrix Plus router, display the version levels of the firmware running on the FPCs and the Switch Processor Mezzanine Board (SPMBs).

On EX2200, EX3200, EX4200, QFX Series, and OCX Series switches, display the version levels of the firmware running on the switch. On an EX8208 switch, display the version levels of the firmware running on the Switch Fabric and Routing Engine (SRE) modules and on the line cards (shown as FPCs). On an EX8216 switch, display the version levels of the firmware running on the Routing Engine (RE) modules and on the line cards (shown as FPCs).

**Options** **none**—Display the version levels of the firmware running. For an EX4200 switch that is a member of a Virtual Chassis, display version levels for all members. For a TX Matrix router, display version levels for the firmware on the TX Matrix router and on all the T640 routers connected to the TX Matrix router. For a TX Matrix Plus router, display version levels for the firmware on the TX Matrix Plus router and on all the routers connected to the TX Matrix Plus router.

**all-members**—(MX Series routers only) (Optional) Display the version levels of the firmware running for all members of the Virtual Chassis configuration.

**interconnect-device *name***—(QFabric systems) (Optional) Display the version levels of the firmware running on the Interconnect device.

**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display version levels for the firmware on a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display the version levels for the firmware on a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display the version levels of the firmware running for the local Virtual Chassis member.



**member *member-id***—(MX Series routers only) (Optional) Display the version levels of the firmware running for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**node-device**—(QFabric systems only) (Optional) Display the version levels of the firmware running on the Node device.

**satellite [*slot-id slot-id* | *device-alias alias-name*]**—(Junos Fusion only) (Optional) Display version levels of the firmware running for the specified satellite device or devices in a Junos Fusion, or for all satellite devices if no satellite devices are specified.

**scc**—(TX Matrix router only) (Optional) Display version levels for the firmware on the TX Matrix router (switch-card chassis).

**sfc *number***—(TX Matrix Plus router only) (Optional) Display version levels for the firmware on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

**detail**—(EX3200, EX3300, EX4200, and EX4500 standalone and Virtual Chassis member switches only) (Optional) Display version levels of the firmware running on the switch for its programmable hardware components.

**Required Privilege Level** view

**List of Sample Output**

- [show chassis firmware \(M10 Router\) on page 436](#)
- [show chassis firmware \(M20 Router\) on page 436](#)
- [show chassis firmware \(M40 Router\) on page 436](#)
- [show chassis firmware \(M120 Router\) on page 436](#)
- [show chassis firmware \(M160 Router\) on page 436](#)
- [show chassis firmware \(MX150\) on page 437](#)
- [show chassis firmware \(MX104 Router\) on page 437](#)
- [show chassis firmware \(MX240 Router\) on page 437](#)
- [show chassis firmware \(MX480 Router\) on page 437](#)
- [show chassis firmware \(MX960 Router\) on page 437](#)
- [show chassis firmware \(MX2010 Router\) on page 437](#)
- [show chassis firmware \(MX2020 Router\) on page 438](#)
- [show chassis firmware \(MX2008 Router\) on page 439](#)
- [show chassis firmware \(MX10003\) on page 439](#)
- [show chassis firmware \(MX204 Router\) on page 439](#)
- [show chassis firmware \(MX10008 Router\) on page 440](#)
- [show chassis firmware \(MX240, MX480, MX960 Router with Application Services Modular Line Card\) on page 441](#)
- [show chassis firmware \(EX4200 Switch\) on page 441](#)
- [show chassis firmware \(EX8200 Switch\) on page 441](#)
- [show chassis firmware \(EX9200 Switch\) on page 441](#)
- [show chassis firmware \(EX9251 Switch\) on page 441](#)
- [show chassis firmware \(EX9253 Switch\) on page 442](#)
- [show chassis firmware lcc \(TX Matrix Router\) on page 442](#)
- [show chassis firmware scc \(TX Matrix Router\) on page 442](#)
- [show chassis firmware \(TX Matrix Plus Router\) on page 442](#)



[show chassis firmware lcc \(TX Matrix Plus Router\) on page 444](#)  
[show chassis firmware sfc \(TX Matrix Plus Router\) on page 444](#)  
[show chassis firmware \(QFX Series and OCX Series\) on page 445](#)  
[show chassis firmware \(PTX1000 Packet Transport Routers\) on page 445](#)  
[show chassis firmware \(PTX10008 Routers\) on page 445](#)  
[show chassis firmware interconnect-device \(QFabric System\) on page 446](#)  
[show chassis firmware \(ACX2000 Universal Metro Router\) on page 446](#)  
[show chassis firmware detail \(EX3300 Switch\) on page 446](#)  
[show chassis firmware \(MX Routers with Media Services Blade \[MSB\]\) on page 446](#)  
[show chassis firmware \(ACX5048 Router\) on page 446](#)  
[show chassis firmware \(ACX5096 Router\) on page 447](#)  
[show chassis firmware \(ACX500 Router\) on page 447](#)

**Output Fields** Table 17 on page 435 lists the output fields for the show chassis firmware command. Output fields are listed in the approximate order in which they appear.

*Table 17: show chassis firmware Output Fields*

Field Name	Field Description
<b>Part</b>	(MX Series, MX2010, MX2020, and MX2008 routers) Chassis part name.
<b>Type</b>	(MX Series, MX2010, MX2020, and MX2008 routers) Type of firmware: On routers: ROM or O/S. On switches: uboot or loader.
<b>Version</b>	(MX Series, MX2010, MX2020, and MX2008 routers) Version of firmware running on the chassis part.
<b>FPC</b>	( <i>detail</i> option only) Number of FPC. For a standalone switch, the value is 0. For a Virtual Chassis configuration, value in the range of 0-9; refers to the member ID assigned to the switch.
<b>AFEB</b>	(MX104 routers) Version of the compact Forwarding Engine Board.
<b>Boot</b>	( <i>detail</i> option only) Version of the SYSPLD.
<b>PoE</b>	( <i>detail</i> option only) Version of the PoE firmware.
<b>PFE-&lt;number&gt;</b>	( <i>detail</i> option only) Version of the Packet Forwarding Engine used in the switch.
<b>PHY-</b>	( <i>detail</i> option only) Version of the physical layer device (PHY) used in the switch.
<b>microcode</b>	( <i>detail</i> option only) Microcode of the physical layer devices (PHY) used in the switch.
<b>uboot</b>	( <i>detail</i> option only) Version of the u-boot used in the switch.
<b>loader</b>	( <i>detail</i> option only) Version of the loader used in the switch.



## Sample Output

### show chassis firmware (M10 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
Forwarding engine board	ROM	Juniper ROM Monitor Version 4.1b2
	O/S	Version 4.1I1 by usera on 2000-04-24 11:27

### show chassis firmware (M20 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
System switch board	ROM	Juniper ROM Monitor Version 3.4b26
	O/S	Version 3.4I16 by userc on 2000-02-29 2
FPC 1	ROM	Juniper ROM Monitor Version 3.0b1
	O/S	Version 3.4I4 by userc on 2000-02-25 21
FPC 2	ROM	Juniper ROM Monitor Version 3.0b1
	O/S	Version 3.4I4 by userc on 2000-02-25 21

### show chassis firmware (M40 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
System control board	ROM	Juniper ROM Monitor Version 2.0i126Copyri
	O/S	Version 2.0i1 by root on Thu Jul 23 00:51
FPC 5	ROM	Juniper ROM Monitor Version 2.0i49Copyrig
	O/S	Version 2.0i1 by root on Thu Jul 23 00:59

### show chassis firmware (M120 Router)

```
user@host> show chassis firmware
```

FPC 2	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:2
FPC 3	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:2
FPC 4	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:2
FEB 3	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:1
FEB 4	ROM	Juniper ROM Monitor Version 8.0b29
	O/S	Version 8.2B1 by userb on 2006-10-18 16:1

### show chassis firmware (M160 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
SFM 0	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by usera on 2000-02-29 11:50
SFM 1	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by usera on 2000-02-29 11:50
FPC 0	ROM	Juniper ROM Monitor Version 4.0b2
	O/S	Version 4.0I1 by usera on 2000-02-29 11:56
FPC 1	ROM	Juniper ROM Monitor Version 4.0b2



FPC 2	O/S	Version 4.0I1 by usera on 2000-02-29 11:56
	ROM	Juniper ROM Monitor Version 4.0b3
	O/S	Version 4.0I1 by usera on 2000-02-29 11:56

### show chassis firmware (MX150)

```
user@host > show chassis firmware
```

Part	Type	Version
FPC	ROM	PC Bios
	O/S	Version 17.2I20170220_0929_rohitn by rohitn
on 2017-02-20 09:38:59 UTC		

### show chassis firmware (MX104 Router)

```
user@host > show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by userb on 2013-
FPC 1	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by userb on 2013-
FPC 2	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by userb on 2013-
AFEB	ROM	Juniper ROM Monitor Version 13.1b24
	O/S	Version 13.2-20130514.1 by userb on 2013-

### show chassis firmware (MX240 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 8.3b1
	O/S	Version 9.0-20080103.0 by userb on 2008-0
FPC 2	ROM	Juniper ROM Monitor Version 8.3b1
	O/S	Version 9.0-20080103.0 by userb on 2008-0

### show chassis firmware (MX480 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 8.3b1
	O/S	Version 9.0-20070916.3 by userb on 2007-0

### show chassis firmware (MX960 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 4	ROM	Juniper ROM Monitor Version 8.0b8
	O/S	Version 8.2I59 by user3 on 2006-10-31 19:22
FPC 7	ROM	Juniper ROM Monitor Version 8.2b1
	O/S	Version 8.2-20061026.1 by userb on 2006-1

### show chassis firmware (MX2010 Router)

```
user@host> show chassis firmware
```



Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 12.3b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 1	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 2	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 3	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 4	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 5	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 6	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 7	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 8	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
FPC 9	ROM	Juniper ROM Monitor Version 10.4b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
SPMB 0	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20121220.0 by userb on 2012-
SPMB 1	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20121220.0 by userb on 2012-

#### show chassis firmware (MX2020 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 1	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 2	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 3	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 4	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 5	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 6	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 7	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 8	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 9	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 10	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 11	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 12	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 13	ROM	Juniper ROM Monitor Version 10.0b39
	O/S	Version 12.3-20130415.0 by userb on 2013-
FPC 14	ROM	Juniper ROM Monitor Version 10.0b39



FPC 15	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
FPC 16	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
FPC 17	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
FPC 18	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
FPC 19	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 10.0b39
SPMB 0	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 12.1b1
SPMB 1	O/S	Version 12.3-20130415.0 by userb on 2013-
	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.3-20130415.0 by userb on 2013-

### show chassis firmware (MX2008 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 10.1b3
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:15:48 UTC		
FPC 3	ROM	Juniper ROM Monitor Version 13.3b1
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:16:31 UTC		
FPC 5	ROM	Juniper ROM Monitor Version 13.3b1
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:16:31 UTC		
FPC 7	ROM	Juniper ROM Monitor Version 11.4b2
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:15:48 UTC		
FPC 9	ROM	Juniper ROM Monitor Version 13.2b1
	O/S	Version 17.2-20170412.0 by builder on
2017-04-12 01:15:58 UTC		

### show chassis firmware (MX10003)

```
user@host> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	CBEP_P_SUM0_00.11.01
	RE-FPGA	402
RE 1	PRI BIOS	CBEP_P_SUM0_00.11.01
	RE-FPGA	301
FPC 0	ROM	PC Bios
	O/S	Version 17.3-20170719.0 by builder on
2017-07-19 01:27:58 UTC		
FPC 1	ROM	PC Bios
	O/S	Version 17.3-20170719.0 by builder on
2017-07-19 01:27:58 UTC		

### show chassis firmware (MX204 Router)

```
user@host> show chassis firmware
```



Part	Type	Version
RE 0	PRI BIOS	CBEP_P_SUM1_00.11.01
	RE-FPGA	300
FPC	ROM	PC Bios
	O/S	Version 17.4I20171105_0609_aahluwalia by aahluwalia on 2017-11-05 06:09:28 UTC

### show chassis firmware (MX10008 Router)

```
user@host> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	CBEP_P_VAL0_00.14.1
	FPGA	264.0
	RE-FPGA	41.0
	RE-SSD1	SF-SBR12050
	RE-SSD2	SF-SBR12050
	i40e-NVM	6.01
RE 1	PRI BIOS	CBEP_P_VAL0_00.13.01
	FPGA	261.0
	RE-FPGA	41.0
	RE-SSD1	SF-SBR12034
	RE-SSD2	SF-SBR12034
	i40e-NVM	5.02
FPC 0	ROM	PC Bios
	O/S	Version 18.4-20180716_dev_common.0 by builder on 2018-07-16 00:43:35 UTC
	ROM Monitor	0 9.14.0
	PCIE Sw(0)	1.0.0
	MPCS(0)	0.2.0
	I2CS CPLD	0.4.0
	BOOT CPLD	0.4.0
FPC 2	ROM	PC Bios
	O/S	Version 18.4-20180716_dev_common.0 by builder on 2018-07-16 00:43:35 UTC
	ROM Monitor	0 9.14.0
	PCIE Sw(0)	1.0.0
	MPCS(0)	0.2.0
	I2CS CPLD	0.4.0
	BOOT CPLD	0.4.0
FPC 3	ROM	PC Bios
	O/S	Version 18.4-20180716_dev_common.0 by builder on 2018-07-16 00:43:35 UTC
	ROM Monitor	0 9.14.0
	PCIE Sw(0)	1.0.0
	MPCS(0)	0.4.0
	I2CS CPLD	0.8.0
	BOOT CPLD	0.8.0
FPM	FPGA	1.9
FTC 0	FPGA	2.0
FTC 1	FPGA	2.0
SFB 0	FPGA	3.0
SFB 1	FPGA	3.0
SFB 2	FPGA	3.0
SFB 3	FPGA	3.0
SFB 4	FPGA	3.0
SFB 5	FPGA	3.0



**show chassis firmware (MX240, MX480, MX960 Router with Application Services Modular Line Card)**

```
user@host> show chassis firmware
```

Part	Type	Version
FPC 1	ROM O/S	Juniper ROM Monitor Version 12.1b1 Version 12.2I21 by user1 on 2012-06-19 17:

**show chassis firmware (EX4200 Switch)**

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 0	uboot loader	U-Boot 1.1.6 (Feb 6 2008 - 11:27:42) FreeBSD/PowerPC U-Boot bootstrap loader 2.1
FPC 1	uboot loader	U-Boot 1.1.6 (Feb 6 2008 - 11:27:42) FreeBSD/PowerPC U-Boot bootstrap loader 2.1
FPC 2	uboot loader	U-Boot 1.1.6 (Feb 6 2008 - 11:27:42) FreeBSD/PowerPC U-Boot bootstrap loader 2.1

**show chassis firmware (EX8200 Switch)**

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 0	U-Boot loader	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 3	U-Boot loader	U-Boot 1.1.6 (Dec 4 2009 - 13:17:34) 3.1.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 5	U-Boot loader	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 7	U-Boot loader	U-Boot 1.1.6 (Feb 6 2009 - 05:31:46) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
Routing Engine 0	U-Boot loader	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2
Routing Engine 1	U-Boot loader	U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0 FreeBSD/PowerPC U-Boot bootstrap loader 2.2

**show chassis firmware (EX9200 Switch)**

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 2	ROM O/S	Juniper ROM Monitor Version 11.4b2 Version 14.1I20140312_0741 by userd o
FPC 3	ROM O/S	Juniper ROM Monitor Version 10.4b1 Version 14.1I20140312_0741 by userd o

**show chassis firmware (EX9251 Switch)**

```
user@switch> show chassis firmware
```

Part	Type	Version
RE 0	PRI BIOS	CBEP_P_SUM1_00.11.01



```

FPC                                RE-FPGA  301
                                ROM        PC Bios
                                O/S        Version 18.1R1.4 by builder on 2018-03-06
00:31:54 UTC

```

#### show chassis firmware (EX9253 Switch)

```

user@switch> show chassis firmware
Part      Type      Version
RE 0      PRI BIOS  CBEP_P_SUM1_00.11.01
          RE-FPGA  402
RE 1      PRI BIOS  CBEP_P_SUM1_00.11.01
          RE-FPGA  402
FPC 0      ROM      PC Bios
          O/S      Version 18.2-20180129_dev_common.1 by builder
on 2018-01-29 13:35:11 UTC
FPC 1      ROM      PC Bios
          O/S      Version 18.2-20180129_dev_common.1 by builder
on 2018-01-29 13:35:11 UTC

```

#### show chassis firmware lcc (TX Matrix Router)

```

user@host> show chassis firmware lcc 0
lcc0-re0:
-----
Part      Type      Version
FPC 1      ROM      Juniper ROM Monitor Version 6.4b18
          O/S      Version 7.0-20040804.0 by userb on 2004-0
FPC 2      ROM      Juniper ROM Monitor Version 6.4b20
          O/S      Version 7.0-20040804.0 by userb on 2004-0
SPMB 0      ROM      Juniper ROM Monitor Version 6.4b18
          O/S      Version 7.0-20040804.0 by userb on 2004-0

```

#### show chassis firmware scc (TX Matrix Router)

```

user@host> show chassis firmware scc
scc-re0:
-----
Part      Type      Version
SPMB 0      ROM      Juniper ROM Monitor Version 6.4b18
          O/S      Version 7.0-20040804.0 by userb on 2004-0

```

#### show chassis firmware (TX Matrix Plus Router)

```

user@host> show chassis firmware
sfc0-re0:
-----
Part      Type      Version
Global FPC 4
Global FPC 6
Global FPC 7
Global FPC 12
Global FPC 14
Global FPC 15
Global FPC 20

```



```

Global FPC 21
Global FPC 22
Global FPC 23
Global FPC 24
Global FPC 25
Global FPC 26
Global FPC 28
Global FPC 29
Global FPC 31
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0

lcc0-re1:
-----
Part            Type      Version
FPC 4           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 6           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 7           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0

lcc1-re1:
-----
Part            Type      Version
FPC 4           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 6           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 7           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0

lcc2-re1:
-----
Part            Type      Version
FPC 4           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 5           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 6           ROM      Juniper ROM Monitor Version 9.0b2
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
FPC 7           ROM      Juniper ROM Monitor Version 7.5b4
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 0          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0
SPMB 1          ROM      Juniper ROM Monitor Version 9.5b1
                  O/S      Version 9.6-20090507.0 by userb on 2009-0

lcc3-re1:
-----

```



Part	Type	Version
FPC 0	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 1	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 2	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 4	ROM	Juniper ROM Monitor Version 7.5b4
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 5	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 7	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 0	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 1	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0

#### show chassis firmware lcc (TX Matrix Plus Router)

```
user@host> show chassis firmware lcc 0
```

```
lcc0-re1:
```

Part	Type	Version
FPC 4	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 6	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
FPC 7	ROM	Juniper ROM Monitor Version 9.0b2
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 0	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 1	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0

#### show chassis firmware sfc (TX Matrix Plus Router)

```
user@host> show chassis firmware sfc 0
```

```
sfc0-re0:
```

Part	Type	Version
Global FPC 4		
Global FPC 6		
Global FPC 7		
Global FPC 12		
Global FPC 14		
Global FPC 15		
Global FPC 20		
Global FPC 21		
Global FPC 22		
Global FPC 23		
Global FPC 24		
Global FPC 25		
Global FPC 26		
Global FPC 28		
Global FPC 29		
Global FPC 31		



SPMB 0	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0
SPMB 1	ROM	Juniper ROM Monitor Version 9.5b1
	O/S	Version 9.6-20090507.0 by userb on 2009-0

### show chassis firmware (QFX Series and OCX Series)

user@switch> show chassis firmware

Part	Type	Version
FPC 0		
Routing Engine 0	U-Boot loader	U-Boot 1.1.6 (Sep 15 2010 - 02:11:11) 1.0.5 FreeBSD/MIPS U-Boot bootstrap loader 0.1

### show chassis firmware (PTX1000 Packet Transport Routers)

user@host> show chassis firmware

Part	Type	Version
FPC 0	U-Boot loader	*** FreeBSD/i386 bootstrap loader 1.2
	BIOS	V0018.2U
	EC FPGA	2.0
	MAIN_CPLD	1.f
	MEZZ_CPLD	1.f
	RE FPGA	2.3

### show chassis firmware (PTX10008 Routers)

user@host> show chassis firmware

Part	Type	Version
RE 0	PRI BIOS	QFXS_SFP_00.31_01.01
	GDN BIOS	QFXS_SFP_00.31_01.01
	FPGA	2.4
	RE-FPGA	3.2
RE 1	PRI BIOS	QFXS_SFP_00.31_01.01
	GDN BIOS	QFXS_SFP_00.31_01.01
	FPGA	2.3
	RE-FPGA	3.2
FPC 0 - 22:56:52)	U-Boot	Bank A: U-Boot 2011.12-gfbea47a (Feb 26 2016)
	CTRL FPGA	4.1
	PORT FPGA	2.0
FPC 5 - 22:56:52)	U-Boot	Bank A: U-Boot 2011.12-gfbea47a (Feb 26 2016)
	CTRL FPGA	3.1
	PORT FPGA	2.0
FPC 6 - 22:56:52)	U-Boot	Bank B: U-Boot 2011.12-gfbea47a (Feb 26 2016)
	CTRL FPGA	3.1
	PORT FPGA	2.0
FPM	FPGA	1.9
FTC 0	FPGA	2.0
FTC 1	FPGA	2.0
SIB 0	FPGA	3.0
SIB 1	FPGA	3.0



**show chassis firmware interconnect-device (QFabric System)**

```
user@switch> show chassis firmware interconnect-device interconnect1
```

Part	Type	Version
Routing Engine 0	U-Boot loader	U-Boot 1.1.6 (May 10 2011 - 04:52:59) 1.1.1 FreeBSD/MIPS U-Boot bootstrap loader 0.1
Routing Engine 1	U-Boot loader	U-Boot 1.1.6 (May 10 2011 - 04:52:59) 1.1.1 FreeBSD/MIPS U-Boot bootstrap loader 0.1

**show chassis firmware (ACX2000 Universal Metro Router)**

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC	O/S	Version 12.2I13 by user2 on 2012-05-29 06:
FEB	O/S	Version 12.2I13 by user2 on 2012-05-29 06:

**show chassis firmware detail (EX3300 Switch)**

```
user@switch> show chassis firmware detail
```

FPC 0		
Boot SYSPLD	3	
PoE firmware	4.1.6	
PFE-0	3	
PFE-1	3	
PHY		
microcode	0x514	
Boot Firmware		
uboot loader	U-Boot 1.1.6 (Aug 21 2011 - 01:45:26)	1.0.0 FreeBSD/arm U-Boot loader 1.0

**show chassis firmware (MX Routers with Media Services Blade [MSB])**

```
user@switch> show chassis firmware
```

Part	Type	Version
FPC 1	ROM	Juniper ROM Monitor Version 12.1b1
	O/S	Version 12.2I21 by user1 on 2012-06-19 17:

**show chassis firmware (ACX5048 Router)**

```
user@host> show chassis firmware
```

Part	Type	Version
FPC	loader	FreeBSD/i386 bootstrap loader 1.2
	BIOS	V0018.7
	TMC FPGA	6.d8
	PICO CPLD0	7.b
	PICO CPLD1	7.b
	PICO CPLD2	7.b
	PICO CPLD3	7.b
	PICO CPLD4	7.b
	PICO CPLD5	7.b
	PICO CPLD6	6.a
	MRE	17.9
	Power CPLD	3.a



## show chassis firmware (ACX5096 Router)

user@host&gt; show chassis firmware

Part	Type	Version
FPC	loader	FreeBSD/i386 bootstrap loader 1.2
	BIOS	V0018.7
	TMC FPGA	3000001.5
	PIC0 CPLD0	7.b
	PIC0 CPLD1	7.b
	PIC0 CPLD2	7.b
	PIC0 CPLD3	7.b
	PIC0 CPLD4	7.b
	PIC0 CPLD5	7.b
	PIC0 CPLD6	c6.a
	PIC0 CPLD7	-NA-
	PIC0 CPLD8	7.b
	PIC0 CPLD9	7.b
	PIC0 CPLD10	7.b
	PIC0 CPLD11	7.b
	PIC0 CPLD12	7.b
	PIC0 CPLD13	7.b
	PIC0 CPLD14	c6.a
	MRE	7.5
	Power CPLD	4.1

## show chassis firmware (ACX500 Router)

user@host&gt; show chassis firmware

Part	Type	Version
FPC	O/S	Version 15.2-20150815_dev_rbu_1_16q1.0 by
userb on 2015-08-15 04:18:02 UTC		
FEB	O/S	Version 15.2-20150815_dev_rbu_1_16q1.0 by
userb on 2015-08-15 04:18:02 UTC		



## show chassis fpc

<b>List of Syntax</b>	<a href="#">Syntax on page 448</a> <a href="#">Syntax (EX Series Switches) on page 448</a> <a href="#">Syntax (T4000 Routers) on page 448</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Routers) on page 448</a> <a href="#">Syntax (MX Series Routers and EX Series switches) on page 448</a> <a href="#">Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms) on page 448</a> <a href="#">Syntax (MX10008 Universal Routing Platforms) on page 449</a> <a href="#">Syntax (QFX Series) on page 449</a> <a href="#">Syntax (OCX Series) on page 449</a> <a href="#">Syntax (PTX Series Packet Transport Routers) on page 449</a> <a href="#">Syntax (ACX Series Universal Metro Routers) on page 449</a> <a href="#">Syntax (ACX500 Routers) on page 449</a> <a href="#">Syntax (Junos OS Evolved) on page 449</a>
<b>Syntax</b>	<pre>show chassis fpc &lt;detail &lt;slot&gt;&gt;   &lt;pic-status &lt;slot&gt;&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show chassis fpc &lt;detail &lt;fpc-slot&gt;&gt;   &lt;pic-status &lt;fpc-slot&gt;&gt; &lt;fpc-slot&gt;</pre>
<b>Syntax (T4000 Routers)</b>	<pre>show chassis fpc &lt;detail &lt;fpc-slot&gt;&gt; &lt;pic-status &lt;fpc-slot&gt;&gt;</pre>
<b>Syntax (TX Matrix and TX Matrix Plus Routers)</b>	<pre>show chassis fpc &lt;detail &lt;fpc-slot&gt;&gt;   &lt;pic-status &lt;fpc-slot&gt;&gt; &lt;slot&gt;</pre>
<b>Syntax (MX Series Routers and EX Series switches)</b>	<pre>show chassis fpc &lt;detail &lt;slot&gt;&gt;   &lt;pic-status &lt;slot&gt;&gt; &lt;all-members&gt; &lt;local&gt; &lt;member member-id&gt;</pre>
<b>Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms)</b>	<pre>show chassis fpc &lt;slot&gt; detail   &lt;detail &lt;slot&gt;&gt;   &lt;pic-status &lt;slot&gt;&gt; &lt;fpc-slot&gt;</pre>



Syntax (MX10008 Universal Routing Platforms)	<pre>show chassis fpc &lt;detail&gt; &lt;errors&gt; &lt;fpc-slot&gt; pic-status &lt;fpc-slot&gt;</pre>
Syntax (QFX Series)	<pre>show chassis fpc &lt;detail&gt; &lt;interconnect-device name &lt;fpc-slot fpc-slot&gt;&gt; &lt;node-device name&gt;</pre>
Syntax (OCX Series)	<pre>show chassis fpc &lt;detail&gt;</pre>
Syntax (PTX Series Packet Transport Routers)	<pre>show chassis fpc &lt;detail &lt;fpc-slot&gt;&gt;   &lt;pic-status &lt;fpc-slot&gt;&gt; &lt;fpc-slot&gt;</pre>
Syntax (ACX Series Universal Metro Routers)	<pre>show chassis fpc &lt;detail &lt;fpc-slot&gt;&gt;   &lt;pic-status &lt;fpc-slot&gt;&gt; &lt;fpc-slot&gt;</pre>
Syntax (ACX500 Routers)	<pre>show chassis fpc &lt;fpc-slot&gt; detail &lt;fpc-slot&gt; pic-status &lt;fpc-slot&gt;</pre>
Syntax (Junos OS Evolved)	<pre>show chassis fpc &lt;detail   pic-status   errors&gt; &lt;fpc-slot&gt;</pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p>



Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.  
Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.  
Command introduced in Junos OS Release 18.1R1 for EX9251 switch.  
Command introduced in Junos OS Release 18.2 for EX9253 Switches.

**Description** Display status information about the installed Flexible PIC Concentrators (FPCs) and PICs.

**Options** **none**—Display status information for all FPCs. On a TX Matrix router, display status information for all FPCs on the attached T640 routers in the routing matrix. On a TX Matrix Plus router, display status information for all FPCs on the attached routers in the routing matrix.





**NOTE:** In EX8200 switches, line cards initialize Packet Forwarding Engine during startup. If an error occurs during hardware initialization, the FPCs with bad hardware parts power down after transferring the debug information to the Routing Engine. The Routing Engine marks the FPC offline, logs the error in system log messages (/var/log/messages), and generates an alarm to inform the user.

See the following sample output:

```
user@host> show chassis fpc
```

		Temp	CPU Utilization (%)		Memory	
Utilization (%)	Slot State	(C)	Total	Interrupt	DRAM (MB)	Heap
	Buffer					
0	Empty					
1	Empty					
2	Empty					
3	Empty					
4	Empty					
5	Offline					
6	Empty					
7	Online	26	4	0	1024	0
32						

---Hard FPC error---

The following sample output shows the alarm raised for the failed FPCs:

```
user@host> show chassis alarms
```

4 alarms currently active

Alarm time	Class	Description
2011-03-24 00:52:51 UTC	Major	FPC 5 Hard errors
2011-03-24 00:52:31 UTC	Major	Fan Tray Failure
2011-03-24 00:52:31 UTC	Major	Fan Tray Failure
2011-03-24 00:51:26 UTC	Minor	Loss of communication with Backup RE





**NOTE:** On T4000 routers, when you include the enhanced-mode statement at the [edit chassis network-services] hierarchy level and reboot the system, only the T4000 Type 5 FPCs present on the router become online while the remaining FPCs are offline, and FPC misconfiguration alarms are generated. The show chassis alarm command output displays FPC misconfiguration (FPC *fpc-slot* misconfig) as the reason for the generation the alarms.

The following sample output shows the FPC status after the enhanced-mode statement is configured on the T4000 router. The T4000 Type 5 FPC present in slot 5 becomes online while the remaining FPCs are offline.

```
user@host> show chassis fpc
```

Utilization (%)	Temp	CPU	Utilization (%)	Memory
Slot State	(C)	Total	Interrupt	DRAM (MB) Heap
0 offline				
1 offline				
2 offline				
3 Empty				
4 Empty				
5 Online	66	50	0	2816 29

The following sample output shows FPC misconfiguration alarms:

```
user@host> show chassis alarms
```

Alarm time	Class	Description
2011-03-24 00:52:51 PST	Major	FPC 1 misconfig
2011-03-24 00:52:31 PST	Major	FPC 2 misconfig
2011-03-24 00:52:31 PST	Major	FPC 3 misconfig

**detail**—(Optional) Display detailed status information for all FPCs or for the FPC in the specified slot (see *fpc-slot* or *slot*).

**all-members**—(MX Series routers and EX Series switches only) (Optional) Display status information for all FPCs on all members of the Virtual Chassis configuration.

**interconnect-device *name***—(QFabric systems only) (Optional) Display status information for all FPCs on the Interconnect device.

***fpc-slot***—(Optional) FPC slot number:

- (TX Matrix and TX Matrix Plus routers only)—On a TX Matrix router, if you specify the number of the T640 router (line-card chassis) by using the *lcc number* option



(the recommended method), replace *fpc-slot* with a value from 0 through 7. Otherwise, replace *fpc-slot* with a value from 0 through 31. Likewise, on a TX Matrix Plus router, if you specify the number of the specified router (line-card chassis) by using the *lcc number* option (the recommended method), replace *fpc-slot* with a value from 0 through 7. Otherwise, replace *fpc-slot* with a value from 0 through 31. For example, the following commands have the same result:

```
user@host> show chassis fpc detail 1 lcc 1
user@host> show chassis fpc detail 9
```

- M120 router—Replace *fpc-slot* with a value from 0 through 5.
- MX80 router—Replace *fpc-slot* with a value from 0 through 1.
- MX104 and MX104-40G routers—Replace *fpc-slot* with a value from 0 through 2.
- MX240 router—Replace *fpc-slot* with a value from 0 through 2.
- MX480 router—Replace *fpc-slot* with a value from 0 through 5.
- MX-960 router—Replace *fpc-slot* with a value from 0 through 11.
- MX2010 router—Replace *fpc-slot-number* with a value from 0 through 9.
- MX2008 router—Replace *fpc-slot-number* with a value from 0 through 9.
- MX2020 router—Replace *fpc-slot-number* with a value from 0 through 19.
- Other routers—Replace *fpc-slot* with a value from 0 through 7.
- EX Series switches:
  - EX3200 switches and EX4200 standalone switches—Replace *fpc-slot* with 0.
  - EX4200 switches in a Virtual Chassis configuration—Replace *fpc-slot* with a value from 0 through 9.
  - EX6210 switches—Replace *fpc-slot* with a value from 0 through 9.
  - EX8208 switches—Replace *fpc-slot* with a value from 0 through 7.
  - EX8216 switches—Replace *fpc-slot* with a value from 0 through 15.
  - EX9204 switches—Replace *fpc-slot* with a value from 0 through 2.
  - EX9208 switches—Replace *fpc-slot* with a value from 0 through 5.
  - EX9214 switches—Replace *fpc-slot* with a value from 0 through 11.
- QFX Series:
  - QFXSeries and OCX Series switches—Replace *fpc-slot* with 0.
  - QFabric systems—Replace *fpc-slot* with 0 through 31 on the Interconnect device.
- PTX Series Packet Transport Routers:



- PTX5000 Packet Transport Router—Replace *fpc-slot* with a value from 0 through 7.
- ACX Series Universal Metro Routers:
  - ACX1000 and ACX2000 Universal Metro Routers—Replace *fpc-slot* with 0.

**interconnect-device *name***—(QFabric systems only) (Optional) Display status information for all FPCs on the Interconnect device.

**lcc *number***—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers and EX Series switches only) (Optional) Display status information for all FPCs on the local Virtual Chassis member.

**member *member-id***—(MX Series routers and EX Series switches only) (Optional) Display status information for all FPCs on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**node-device *name***—(QFabric systems only) (Optional) Display status information for each Node device. Each Node device is equivalent to an FPC.

**pic-status**—(Optional) Display status information for all PICs or for the PIC in the specified slot (see *fpc-slot*).





**NOTE:** On T1600 routers, Type 4 FPCs with ASICs based on the SL2.0 chipset do not support the 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (10x10GE [LAN/WAN] SFPP). If you issue the `show chassis fpc` command with the `pic-status` option, the CLI displays the string “Not Supported” for 10x10GE (LAN/WAN) SFPP PICs installed on such FPCs. The following is a sample output:

```
user@host> show chassis fpc pic-status
Slot 0  Online      E2-FPC Type 1
  PIC 0  Online      1x G/E SFP, 1000 BASE
  PIC 1  Online      Adaptive Services-II
  PIC 2  Online      1x G/E IQ, 1000 BASE
  PIC 3  Online      1x G/E IQ, 1000 BASE
Slot 1  Online      FPC Type 3-ES
  PIC 0  Present     UNUSED- Not Supported
Slot 2  Online      FPC Type 4-ES
  PIC 0  Offline     4x OC-192 SONET XFP
  PIC 1  Present     10x10GE (LAN/WAN) SFPP- Not Supported
<<<<<<
Slot 4  Offline     FPC Type 1-ES
Slot 5  Offline     FPC Type 2-ES
Slot 6  Online      E2-FPC Type 3
  PIC 0  Online      1x OC-192 SONET XFP
  PIC 1  Online      4x OC-48 SONET
  PIC 2  Online      4x OC-48 SONET
  PIC 3  Online      MultiServices 500
Slot 7  Online      FPC Type 4-ES
  PIC 0  Online      4x 10GE (LAN/WAN) XFP
  PIC 1  Online      4x 10GE (LAN/WAN) XFP
```

In addition, an entry is logged in the system log messages (`/var/log/messages`) that the PIC is not supported. The following is a sample message logged in the system log:

```
Apr  5 08:47:36  router1 chassisd[2770]: CHASSISD_UNSUPPORTED_PIC:
PIC 1 in FPC 2 (type 763, version 257) is not supported
```

If you see this issue, contact Juniper Networks Technical Assistance Center (JTAC) for a possible fix. For more information about this issue and a possible solution, see [PSN-2010-03-696](#).





**NOTE:** When there is a double-bit ECC error in a network processor's memory, the Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP or Channelized E1/T1 Circuit Emulation MIC is switched to the offline state.

```
user@host> show chassis fpc pic-status
```

```
Slot 1   Online      MPC Type 2 3D Q
PIC 0   Offline      1xC0C12/4xC0C3 CH-CE- ECC error detected
```

**lcc *number***—(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**Required Privilege Level** view

**Related Documentation**

- [request chassis fpc on page 127](#)
- [show chassis fpc-feb-connectivity](#)
- [show chassis fabric fpcs on page 502](#)
- *Resynchronizing FPC Sequence Numbers with Active FPCs when an FPC Comes Online*
- *MX960 Flexible PIC Concentrator Description*
- *ACX2000 and ACX2100 Routers Hardware and CLI Terminology Mapping*
- *enhanced-mode*

**List of Sample Output**

[show chassis fpc \(EX6210 Switch\) on page 461](#)  
[show chassis fpc \(M10 Router\) on page 462](#)  
[show chassis fpc \(M20 Router\) on page 462](#)  
[show chassis fpc detail \(M Series Routers\) on page 462](#)  
[show chassis fpc detail \(MX150\) on page 462](#)



[show chassis fpc detail \(MX80 Router\) on page 463](#)  
[show chassis fpc \(MX104 Router\) on page 463](#)  
[show chassis fpc detail \(MX104 Router\) on page 463](#)  
[show chassis fpc pic-status \(MX104 Router\) on page 464](#)  
[show chassis fpc \(MX240 Router\) on page 464](#)  
[show chassis fpc \(MX480 Router\) on page 464](#)  
[show chassis fpc detail \(EX9200 Switch\) on page 464](#)  
[show chassis fpc \(MX480 Router\) on page 465](#)  
[show chassis fpc \(MX480 Router with 100-Gigabit Ethernet CFP\) on page 465](#)  
[show chassis fpc pic-status \(MX480 Router with 100-Gigabit Ethernet CFP\) on page 465](#)  
[show chassis fpc pic-status \(EX Series Switch\) on page 465](#)  
[show chassis fpc \(MX480 Router with MPC4E\) on page 466](#)  
[show chassis fpc detail \(MX480 Router with MPC4E\) on page 466](#)  
[show chassis fpc \(MX480 Router with MPC4E\) on page 466](#)  
[show chassis fpc detail \(MX480 Router with MPC4E\) on page 467](#)  
[show chassis fpc \(MX960 Router\) on page 467](#)  
[show chassis fpc \(MX960 Router with MPC5EQ\) on page 467](#)  
[show chassis fpc detail \(MX960 Router with MPC5EQ\) on page 468](#)  
[show chassis fpc pic-status \(MX960 Router with MPC5EQ\) on page 469](#)  
[show chassis fpc \(MX240, MX480, MX960 Routers with Application Services Modular Line Card\) on page 470](#)  
[show chassis fpc \(MX240, MX480, MX960 with Application Services Modular Line Card\) on page 470](#)  
[show chassis fpc \(MX240, MX480, MX960, MX2010, MX2020, and MX2008 Universal Routing Platforms with Dynamic Power Management\) on page 471](#)  
[show chassis fpc \(MX2010 Routers\) on page 471](#)  
[show chassis fpc \(MX2010 Router with Fabric Grant Bypass Enabled\) on page 471](#)  
[show chassis fpc \(MX2010 Router with Fabric Grant Bypass Disabled\) on page 472](#)  
[show chassis fpc pic-status \(MX2010 Router with Fabric Grant Bypass Enabled\) on page 472](#)  
[show chassis fpc pic-status \(MX2010 Router with Fabric Grant Bypass Disabled\) on page 472](#)  
[show chassis fpc \(MX2020 Routers\) on page 473](#)  
[show chassis fpc \(MX2020 Router with MPC4E\) on page 473](#)  
[show chassis fpc \(MX10003 Router\) on page 474](#)  
[show chassis fpc detail \(MX10003 Router\) on page 474](#)  
[show chassis fpc <fpc-slot> \(MX10003 Router\) on page 474](#)  
[show chassis fpc \(MX204 Router\) on page 474](#)  
[show chassis fpc detail \(MX204 Router\) on page 475](#)  
[show chassis fpc <fpc-slot> \(MX204 Router\) on page 475](#)  
[show chassis fpc \(MX10008 Router\) on page 475](#)  
[show chassis fpc detail \(MX10008 Router\) on page 475](#)  
[show chassis fpc <fpc-slot> \(MX10008 Router\) on page 476](#)  
[show chassis fpc detail \(MX2020 Router with MPC4E\) on page 476](#)  
[show chassis fpc \(MX2020 Router with MPC5EQ and MPC6E\) on page 477](#)  
[show chassis fpc detail \(MX2020 Router with MPC5EQ and MPC6E\) on page 478](#)  
[show chassis fpc detail \(MX2008 Router\) on page 479](#)  
[show chassis fpc pic-status \(MX2020 Router with MPC5EQ and MPC6E\) on page 480](#)  
[show chassis fpc detail \(MX Series Routers\) on page 481](#)



[show chassis fpc detail \(EX Series Switches\) on page 481](#)  
[show chassis fpc detail \(EX9251 Switches\) on page 482](#)  
[show chassis fpc detail \(EX9253 Switches\) on page 482](#)  
[show chassis fpc \(Hardware Not Supported\) on page 482](#)  
[show chassis fpc detail \(Hardware Not Supported\) on page 482](#)  
[show chassis fpc pic-status on page 483](#)  
[show chassis fpc pic-status \(M Series Routers\) on page 483](#)  
[show chassis fpc pic-status \(M120 Router\) on page 484](#)  
[show chassis fpc pic-status \(MX240, MX480, and MX960 Routers with Application Services Modular Line Card\) on page 484](#)  
[show chassis fpc lcc \(TX Matrix Router\) on page 484](#)  
[show chassis fpc pic-status \(TX Matrix Router\) on page 484](#)  
[show chassis fpc pic-status lcc \(TX Matrix Router\) on page 485](#)  
[show chassis fpc \(TX Matrix Plus Router\) on page 485](#)  
[show chassis fpc lcc \(TX Matrix Plus Router\) on page 486](#)  
[show chassis fpc detail \(TX Matrix Plus Router\) on page 486](#)  
[show chassis fpc pic-status \(TX Matrix Plus Router\) on page 489](#)  
[show chassis fpc \(T1600 Router\) on page 489](#)  
[show chassis fpc detail \(T1600 Router\) on page 490](#)  
[show chassis fpc <fpc-slot> \(EX Series Switch\) on page 490](#)  
[show chassis fpc slot \(T1600 Router\) on page 491](#)  
[show chassis fpc pic-status \(T1600 Router\) on page 491](#)  
[show chassis fpc \(T4000 Router\) on page 491](#)  
[show chassis fpc detail \(T4000 Router\) on page 491](#)  
[show chassis fpc pic-status \(T4000 Router\) on page 492](#)  
[show chassis fpc \(QFX Series and OCX Series\) on page 492](#)  
[show chassis fpc detail \(QFX3500 Switches\) on page 492](#)  
[show chassis fpc pic-status \(QFX3500 Switches\) on page 493](#)  
[show chassis fpc interconnect-device \(QFabric System\) on page 493](#)  
[show chassis fpc interconnect-device \(QFabric System\) on page 493](#)  
[show chassis fpc interconnect-device detail \(QFabric System\) on page 493](#)  
[show chassis fpc pic-status interconnect-device \(QFabric System\) on page 493](#)  
[show chassis fpc pic-status node-device \(QFabric System\) on page 494](#)  
[show chassis fpc \(PTX5000 Packet Transport Router\) on page 494](#)  
[show chassis fpc detail \(PTX5000 Packet Transport Router\) on page 495](#)  
[show chassis fpc pic-status \(PTX5000 Packet Transport Router\) on page 496](#)  
[show chassis fpc \(PTX10008 Router\) on page 496](#)  
[show chassis fpc detail \(PTX10008 Router\) on page 496](#)  
[show chassis fpc \(PTX10016 Router\) on page 497](#)  
[show chassis fpc detail \(PTX10016 Router\) on page 497](#)  
[show chassis fpc \(ACX2000 Universal Metro Router\) on page 498](#)  
[show chassis fpc 0 \(ACX2000 Universal Metro Router\) on page 498](#)  
[show chassis fpc detail \(ACX2000 Universal Metro Router\) on page 498](#)  
[show chassis fpc pic-status \(ACX2000 Universal Metro Router\) on page 499](#)  
[show chassis FPC 1 \(MX Routers with Media Services Blade \[MSB\]\) on page 499](#)  
[show chassis FPC 1 detail \(MX Routers with Media Services Blade \[MSB\]\) on page 499](#)  
[show chassis fpc \(Node Slicing\) on page 499](#)  
[show chassis fpc pic-status \(Node Slicing\) on page 500](#)



[show chassis fpc pic-status \(MX960 Router with MPC10E-15C-MRATE Line Card\) on page 500](#)

[show chassis fpc 7 detail \(MX960 Router MPC10E-15C-MRATE Line Card\) on page 501](#)

**Output Fields** Table 18 on page 459 lists the output fields for the **show chassis fpc** command. Output fields are listed in the approximate order in which they appear.

*Table 18: show chassis fpc Output Fields*

Field Name	Field Description	Level of Output
<b>Slot or Slot State</b>	<p>Slot number and state. The state can be one of the following conditions:</p> <ul style="list-style-type: none"> <li>• <b>Dead</b>—Held in reset because of errors.</li> <li>• <b>Diag</b>—Slot is being ignored while the FPC is running diagnostics.</li> <li>• <b>Dormant</b>—Held in reset.</li> <li>• <b>Empty</b>—No FPC is present.</li> <li>• <b>Offline</b>—(PTX Series Packet Transport Routers only) One of the following two states is displayed: <ul style="list-style-type: none"> <li>• <b>FPC offlined due to unreachable destinations</b></li> <li>• <b>FPC Offlined due to degraded FPC action</b></li> </ul> </li> <li>• <b>Online</b>—FPC is online and running.</li> <li>• <b>Present</b>—FPC is detected by the chassis daemon but either is not supported by the current version of Junos OS or is inserted in the wrong slot. The output also states either <b>Hardware Not Supported</b> or <b>Hardware Not In Right Slot</b>. The FPC is coming up but not yet online.</li> <li>• <b>Probed</b>—Probe is complete; awaiting restart of the Packet Forwarding Engine.</li> <li>• <b>Probe-wait</b>—Waiting to be probed.</li> <li>• <b>Unknown</b>—FPC is present but the state is unknown.</li> <li>• <b>Present</b>—FPC is plugged in. The FPC is not powered on or operational.</li> <li>• <b>Onlining</b>—FPC is in the process of going online. ASIC and rest of the hardware is initializing.</li> <li>• <b>Offlining</b>—FPC is in the process of going offline. ASIC and rest of the hardware is being shutdown down to take the offline gracefully.</li> <li>• <b>Fault</b>—FPC is in an alarmed state in which none of the PICs are operational.</li> <li>• <b>Fault-off</b>—FPC is powered off due to a fault.</li> <li>• <b>Spare</b>—FPC is redundant and will move to active state if one of the working FPCs fails to pass traffic.</li> </ul>	all levels
<b>Logical slot</b>	Slot number.	all levels
<b>Temp (C) or Temperature</b>	Temperature of the air passing by the FPC, in degrees Celsius or in both Celsius and Fahrenheit.	all levels all levels



Table 18: show chassis fpc Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Temperature (PTX Series)</b>	<p>On PTX Series Packet Transport Routers, temperature details are provided in degrees Celsius and Fahrenheit. Output includes:</p> <ul style="list-style-type: none"> <li>• Temperature (PMB)—Temperature of the air passing by the Processor Mezzanine Board (PMB) at the bottom of the FPC.</li> <li>• Temperature (Intake)—Temperature of the air flowing into the chassis.</li> <li>• Temperature (Exhaust)—Exhaust temperatures for multiple zones (Exhaust A and Exhaust B).</li> <li>• Temperature (TLn)—Temperature of the specified Lookup ASIC (TL) of the packet forwarding engine on the FPC.</li> <li>• Temperature (TQn)—Temperature of the specified Queuing and Memory Interface ASIC (TQ) of the packet forwarding engine on the FPC.</li> </ul>	<b>detail</b>
<b>Total CPU Utilization (%)</b>	Total percentage of CPU being used by the FPC's processor.	all levels
<b>Interrupt CPU Utilization (%)</b>	Of the total CPU being used by the FPC's processor, the percentage being used for interrupts.	none specified
<b>1 min CPU utilization (%)</b>	Information about the Routing Engine's CPU utilization in the past 1 minute.	none specified
<p><b>NOTE:</b> Supported only on MX240, MX480, MX960, MX2010, MX2020, and MX2008.</p>		
<b>5 min CPU utilization (%)</b>	Information about the Routing Engine's CPU utilization in the past 5 minutes.	none specified
<p><b>NOTE:</b> Supported only on MX240, MX480, MX960, MX2010, MX2020, and MX2008.</p>		
<b>15 min CPU utilization (%)</b>	Information about the Routing Engine's CPU utilization in the past 15 minutes.	none specified
<p><b>NOTE:</b> Supported only on MX240, MX480, MX960, MX2010, MX2020, and MX2008.</p>		
<b>Memory DRAM (MB)</b>	Total DRAM, in megabytes, available to the FPC's processor.	none specified



Table 18: show chassis fpc Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Heap Utilization (%)</b>	Percentage of heap space (dynamic memory) being used by the FPC's processor. If this number exceeds 80 percent, there may be a software problem (memory leak).  <b>NOTE:</b> On MX Series routers and EX Series switches in a broadband edge environment, heap utilization levels higher than 70 percent can affect unified ISSU, router stability, or scaling capability.	none specified
<b>Buffer Utilization (%)</b>	Percentage of buffer space being used by the FPC's processor for buffering internal messages.	none specified
<b>Total CPU DRAM</b>	Amount of DRAM available to the FPC's CPU.	<b>detail</b>
<b>Total RLDRAM</b>	Amount of reduced latency dynamic random access memory (RLDRAM) available to the FPC CPU.	<b>detail</b>
<b>Total DDR DRAM</b>	Amount of double data rate dynamic random access memory (DDR DRAM) available to the FPC CPU.	<b>detail</b>
<b>Total SRAM</b>	Amount of static RAM (SRAM) used by the FPC's CPU.	<b>detail</b>
<b>Total SDRAM</b>	Total amount of memory used for storing packets and notifications.	<b>detail</b>
<b>I/O Manager ASICs information</b>	I/O Manager version number, manufacturer, and part number.	<b>detail</b>
<b>Start time</b>	Time when the Routing Engine detected that the FPC was running.	<b>detail</b>
<b>Uptime</b>	How long the Routing Engine has been connected to the FPC and, therefore, how long the FPC has been up and running.	<b>detail</b>
<b>PIC type</b>	(pic-status output only) Type of PIC.	none specified
<b>GNF (Node slicing)</b>	GNF identifier associated with each line card.  (pic-status output only) GNF identifier associated with each PIC.	all levels

## Sample Output

### show chassis fpc (EX6210 Switch)

```
user@switch> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)	Memory DRAM (MB)	Utilization (%)
			Total Interrupt		Heap Buffer
0	Empty				
1	Online	7	5	0	1024 0 32
2	Empty				
3	Empty				
4	Online	25	17	2	2048 0 30



5	Online	25	3	0	2048	0	24
6	Online	6	5	0	1024	0	32
7	Empty						
8	Empty						
9	Online	8	7	0	1024	0	32

**show chassis fpc (M10 Router)**

```
user@host> show chassis fpc
```

FPC status:

Slot	State	Temp (C)
0	Online	27
1	Online	28

**show chassis fpc (M20 Router)**

```
user@host> show chassis fpc
```

FPC status:

		Temp	CPU Utilization (%)		Memory	Utilization (%)	
Slot	State	(C)	Total	Interrupt	DRAM (MB)	Heap	Buffer
0	Empty	0	0	0	0	0	0
1	Online	38	0	0	8	0	4
2	Online	35	0	0	8	0	3
3	Empty	0	0	0	0	0	0

**show chassis fpc detail (M Series Routers)**

```
user@host> show chassis fpc detail 1
```

Slot 1 information:

State	Online
Temperature	48 degrees C
Total CPU DRAM	32 MB
Total SRAM	4 MB
Total SDRAM	256 MB
I/O Manager ASICs information	Version 2.0, Foundry IBM, Part number 0
I/O Manager ASICs information	Version 2.0, Foundry IBM, Part number 0
Start time	2000-02-08 02:18:49 UTC
Uptime	14 hours, 41 minutes, 41 seconds

**show chassis fpc detail (MX150)**

```
user@host> show chassis fpc detail
```

Slot 0 information:

State	Online
Temperature	42 degrees C / 107 degrees F
Total CPU DRAM	2048 MB
Total RLDRAM	10 MB
Total DDR DRAM	0 MB
Start time	2017-04-04 04:44:04 PDT
Uptime	7 days, 19 hours, 45 minutes, 50 seconds



**show chassis fpc detail (MX80 Router)**

```
user@host> show chassis fpc detail
```

```
Slot 0 information:
  State                Online
  Temperature          47 degrees C / 116 degrees F
  Total CPU DRAM       1024 MB
  Total SRAM           331 MB
  Total SDRAM          1280 MB
  Start time           2010-02-08 12:25:33 PST
  Uptime               2 hours, 13 minutes, 19 seconds

Slot 1 information:
  State                Online
  Temperature          47 degrees C / 116 degrees F
  Total CPU DRAM       1024 MB
  Total SRAM           331 MB
  Total SDRAM          1280 MB
  Start time           2010-02-08 12:25:33 PST
  Uptime               2 hours, 13 minutes, 19 seconds
```

**show chassis fpc (MX104 Router)**

```
user@host> show chassis fpc
```

Temp	CPU State	Utilization (%)	Memory (C)	Total	Interrupt	Utilization (%)	DRAM (MB)	Heap	Buffer
0	Online	32	15	5	2048	22	13		
1	Online	32	15	5	2048	22	13		
2	Online	32	15	5	2048	22	13		

**show chassis fpc detail (MX104 Router)**

```
user@host> show chassis fpc detail
```

```
Slot 0 information:
  State                Online
  Temperature          32 (C)
  Total CPU DRAM       2048 MB
  Total SRAM           403 MB
  Total SDRAM          1316 MB
  Start time           2013-05-23 14:39:18 IST
  Uptime               1 hour, 20 minutes, 22 seconds

Slot 1 information:
  State                Online
  Temperature          32 (C)
  Total CPU DRAM       2048 MB
  Total SRAM           403 MB
  Total SDRAM          1316 MB
  Start time           2013-05-23 14:39:18 IST
  Uptime               1 hour, 20 minutes, 22 seconds

Slot 2 information:
  State                Online
  Temperature          32 (C)
  Total CPU DRAM       2048 MB
  Total SRAM           403 MB
  Total SDRAM          1316 MB
  Start time           2013-05-23 14:39:18 IST
  Uptime               1 hour, 20 minutes, 22 seconds
```



**show chassis fpc pic-status (MX104 Router)**

```
user@host> show chassis fpc pic-status
```

```
Slot 0   Online
Slot 1   Online
  PIC 0   Online      10x 1GE(LAN) -E SFP
  PIC 1   Online      10x 1GE(LAN) -E SFP
Slot 2   Online
  PIC 0   Online      4x 10GE(LAN) SFP+
```

**show chassis fpc (MX240 Router)**

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)		Memory DRAM (MB)	Utilization (%)	
			Total	Interrupt		Heap	Buffer
0	Empty						
1	Online	34	6	0	1024	18	30
2	Online	33	9	0	1024	24	30

If you have installed a Switch Control Board (SCB1) instead of a line card (DPC0) in the multifunction slot on the MX240, the **show chassis fpc** output shows the slot **0** as empty.

**show chassis fpc (MX480 Router)**

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)		Memory DRAM (MB)	Utilization (%)	
			Total	Interrupt		Heap	Buffer
0	Empty						
1	Online	36	9	0	1024	17	57
2	Empty						
3	Empty						
4	Empty						
5	Empty						

**show chassis fpc detail (EX9200 Switch)**

```
user@switch> show chassis fpc detail
```

```
Slot 2 information:
  State                Online
  Temperature          37
  Total CPU DRAM       2048 MB
  Total RLD RAM        331 MB
  Total DDR DRAM       1536 MB
  Start time:          2014-03-12 15:35:28 UTC
  Uptime:               1 hour, 4 minutes, 29 seconds
  Max Power Consumption 239 Watts

Slot 3 information:
  State                Online
  Temperature          39
  Total CPU DRAM       2048 MB
  Total RLD RAM        1036 MB
  Total DDR DRAM       6656 MB
  Start time:          2014-03-12 15:00:18 UTC
  Uptime:               1 hour, 39 minutes, 39 seconds
  Max Power Consumption 520 Watts
```



## show chassis fpc (MX480 Router)

user@host&gt; show chassis fpc

		Temp	CPU Utilization (%)		CPU Utilization (%)		Memory	
Utilization (%)								
Slot	State	(C)	Total	Interrupt	1min	5min	15min	DRAM (MB)
Heap	Buffer							
0	Online		1	0	1	2	3	1024
4		56						
1	Online		1	0	2	2	3	1024
4		56						

## show chassis fpc (MX480 Router with 100-Gigabit Ethernet CFP)

user@host&gt; show chassis fpc

		Temp	CPU Utilization (%)		Memory	Utilization (%)	
Slot	State	(C)	Total	Interrupt	DRAM (MB)	Heap	Buffer
0	Online	33	4	0	2048	10	13
1	Online	36	7	0	2048	16	13
2	Online	29	6	0	1024	27	29
3	Online	33	0	0	0	0	0
4	Online	36	7	0	2048	19	13
5	Online	34	31	11	2048	14	13

## show chassis fpc pic-status (MX480 Router with 100-Gigabit Ethernet CFP)

user@host&gt; show chassis fpc pic-status

```

Slot 1  Online      MPC Type 3
PIC 2   Online      1X100GE CFP
Slot 2  Online      DPCE 40x 1GE R EQ
PIC 0   Online      10x 1GE(LAN) EQ
PIC 1   Online      10x 1GE(LAN) EQ
PIC 2   Online      10x 1GE(LAN) EQ
PIC 3   Online      10x 1GE(LAN) EQ
Slot 3  Online      MPC Type 3
PIC 0   Online      1X100GE CFP
PIC 2   Online      1X100GE CFP
Slot 4  Online      MPC Type 3
PIC 0   Online      1X100GE CFP
PIC 2   Online      1X100GE CFP
Slot 5  Online      MPC Type 2 3D EQ
PIC 0   Online      2x 10GE XFP
PIC 1   Online      2x 10GE XFP
PIC 2   Online      10x 1GE(LAN) SFP
PIC 3   Online      10x 1GE(LAN) SFP

```

## show chassis fpc pic-status (EX Series Switch)

user@host&gt; show chassis fpc pic-status

```

Slot 1  Online      EX9200 32x10G SFP
PIC 0   Online      8X10GE SFPP
PIC 1   Online      8X10GE SFPP
PIC 2   Online      8X10GE SFPP
PIC 3   Online      8X10GE SFPP
Slot 2  Online      EX9200 32x10G SFP

```



```
PIC 0 Online      8X10GE SFPP
PIC 1 Online      8X10GE SFPP
PIC 2 Online      8X10GE SFPP
PIC 3 Online      8X10GE SFPP
```

### show chassis fpc (MX480 Router with MPC4E)

```
user@host> show chassis fpc
```

Slot	Temp State	CPU Utilization (%) (C)	Utilization (%) Total	Memory Interrupt	Utilization (%) DRAM (MB)	Heap	Buffer
0	Empty						
1	Empty						
2	Online	38	7	0	2048	19	14
3	Online	39	8	0	2048	18	14
4	Online	39	7	0	2048	17	14
5	Empty						

### show chassis fpc detail (MX480 Router with MPC4E)

```
user@host> show chassis fpc detail
```

```
Slot 2 information:
  State Online
  Temperature 38
  Total CPU DRAM 2048 MB
  Total RLDRAM 1036 MB
  Total DDR DRAM 11264 MB
  Start time: 2013-02-18 05:06:57 PST
  Uptime: 17 hours, 41 minutes, 9 seconds
  Max Power Consumption 610 Watts
Slot 3 information:
  State Online
  Temperature 38
  Total CPU DRAM 2048 MB
  Total RLDRAM 1036 MB
  Total DDR DRAM 11264 MB
  Start time: 2013-02-18 05:07:00 PST
  Uptime: 17 hours, 41 minutes, 6 seconds
  Max Power Consumption 610 Watts
Slot 4 information:
  State Diagnostics
  Temperature 37
  Total CPU DRAM 0 MB
  Total RLDRAM 0 MB
  Total DDR DRAM 0 MB
  Max Power Consumption 520 Watts
```

### show chassis fpc (MX480 Router with MPC4E)

```
user@host> show chassis fpc
```

Slot	Temp State	CPU Utilization (%) (C)	Utilization (%) Total	Memory Interrupt	Utilization (%) DRAM (MB)	Heap	Buffer
0	Empty						
1	Empty						
2	Online	38	7	0	2048	19	14
3	Online	39	8	0	2048	18	14



4	Online	39	7	0	2048	17	14
5	Empty						

### show chassis fpc detail (MX480 Router with MPC4E)

```
user@host> show chassis fpc detail
```

```
Slot 2 information:
  State                               Online
  Temperature                         38
  Total CPU DRAM                      2048 MB
  Total RLDRAM                        1036 MB
  Total DDR DRAM                      11264 MB
  Start time:                        2013-02-18 05:06:57 PST
  Uptime:                             17 hours, 41 minutes, 9 seconds
  Max Power Consumption               610 Watts

Slot 3 information:
  State                               Online
  Temperature                         38
  Total CPU DRAM                      2048 MB
  Total RLDRAM                        1036 MB
  Total DDR DRAM                      11264 MB
  Start time:                        2013-02-18 05:07:00 PST
  Uptime:                             17 hours, 41 minutes, 6 seconds
  Max Power Consumption               610 Watts

Slot 4 information:
  State                               Diagnostics
  Temperature                         37
  Total CPU DRAM                      0 MB
  Total RLDRAM                        0 MB
  Total DDR DRAM                      0 MB
  Max Power Consumption               520 Watts
```

### show chassis fpc (MX960 Router)

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	Temp Total	CPU Utilization (%)	Interrupt	Memory DRAM (MB)	Heap	Utilization (%)	Buffer
0	Empty								
1	Empty								
2	Empty								
3	Online	25	19	0		1024	15	57	
4	Empty								
5	Online	26	27	0		1024	15	57	
6	Empty								
7	Empty								
8	Empty								
9	Empty								
10	Empty								
11	Empty								

### show chassis fpc (MX960 Router with MPC5EQ)

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	Temp Total	CPU Utilization (%)	Interrupt	Memory DRAM (MB)	Heap	Utilization (%)	Buffer
0	Online	38	16	0		3584	7	13	



1	Online	31	15	0	2048	17	13
2	Empty						
3	Online	31	14	0	2048	20	13
4	Online	34	16	0	3584	7	13
5	Online	34	16	0	3584	7	13
6	Empty						
7	Online	32	9	0	2048	18	14
8	Online	36	19	0	3584	7	13
9	Online	31	9	0	2048	13	13
10	Online	35	14	0	3584	7	13
11	Online	33	11	0	2048	18	14

### show chassis fpc detail (MX960 Router with MPC5EQ)

```
user@host> show chassis fpc detail
```

#### Slot 0 information:

```
State                Online
Temperature          38
Total CPU DRAM       3584 MB
Total XR2            291 MB
Total DDR DRAM       24960 MB
Start time:          2014-04-22 10:01:46 PDT
Uptime:              1 hour, 23 minutes, 40 seconds
Max Power Consumption 607 Watts
```

#### Slot 1 information:

```
State                Online
Temperature          31
Total CPU DRAM       2048 MB
Total RLDRAM         1036 MB
Total DDR DRAM       6656 MB
Start time:          2014-04-22 10:01:50 PDT
Uptime:              1 hour, 23 minutes, 36 seconds
Max Power Consumption 520 Watts
```

#### Slot 3 information:

```
State                Online
Temperature          31
Total CPU DRAM       2048 MB
Total RLDRAM         1324 MB
Total DDR DRAM       5120 MB
Start time:          2014-04-22 10:01:50 PDT
Uptime:              1 hour, 23 minutes, 36 seconds
Max Power Consumption 440 Watts
```

#### Slot 4 information:

```
State                Online
Temperature          34
Total CPU DRAM       3584 MB
Total XR2            291 MB
Total DDR DRAM       24960 MB
Start time:          2014-04-22 10:01:54 PDT
Uptime:              1 hour, 23 minutes, 32 seconds
Max Power Consumption 607 Watts
```

#### Slot 5 information:

```
State                Online
Temperature          34
Total CPU DRAM       3584 MB
Total XR2            291 MB
Total DDR DRAM       24960 MB
Start time:          2014-04-22 10:01:56 PDT
Uptime:              1 hour, 23 minutes, 30 seconds
```



```

Max Power Consumption          607 Watts
Slot 7 information:
State                          Online
Temperature                    32
Total CPU DRAM                 2048 MB
Total RLDRAM                   1036 MB
Total DDR DRAM                 11264 MB
Start time:                    2014-04-22 10:02:02 PDT
Uptime:                        1 hour, 23 minutes, 24 seconds
Max Power Consumption          608 Watts
Slot 8 information:
State                          Online
Temperature                    36
Total CPU DRAM                 3584 MB
Total XR2                      291 MB
Total DDR DRAM                 24960 MB
Start time:                    2014-04-22 10:02:07 PDT
Uptime:                        1 hour, 23 minutes, 19 seconds
Max Power Consumption          607 Watts
Slot 9 information:
State                          Online
Temperature                    31
Total CPU DRAM                 2048 MB
Total RLDRAM                   734 MB
Total DDR DRAM                 3108 MB
Start time:                    2014-04-22 10:02:05 PDT
Uptime:                        1 hour, 23 minutes, 21 seconds
Max Power Consumption          368 Watts
Slot 10 information:
State                          Online
Temperature                    35
Total CPU DRAM                 3584 MB
Total XR2                      291 MB
Total DDR DRAM                 24960 MB
Start time:                    2014-04-22 10:02:11 PDT
Uptime:                        1 hour, 23 minutes, 15 seconds
Max Power Consumption          607 Watts
Slot 11 information:
State                          Online
Temperature                    33
Total CPU DRAM                 2048 MB
Total RLDRAM                   1036 MB
Total DDR DRAM                 11264 MB
Start time:                    2014-04-22 10:02:16 PDT
Uptime:                        1 hour, 23 minutes, 10 seconds
Max Power Consumption          608 Watts

```

### show chassis fpc pic-status(MX960 Router with MPC5EQ)

```
user@host> show chassis fpc pic-status
```

```

Slot 0  Online      MPC5E 3D Q 2CGE+4XGE
PIC 0   Online      2X10GE SFPP OTN
PIC 1   Online      1X100GE CFP2 OTN
PIC 2   Online      2X10GE SFPP OTN
PIC 3   Online      1X100GE CFP2 OTN
Slot 1  Online      MPCE Type 3 3D
PIC 0   Online      10X10GE SFPP
PIC 2   Online      1X100GE CXP

```



```

Slot 3  Online      MPC 3D 16x 10GE
PIC 0   Online      4x 10GE(LAN) SFP+
PIC 1   Online      4x 10GE(LAN) SFP+
PIC 2   Online      4x 10GE(LAN) SFP+
PIC 3   Online      4x 10GE(LAN) SFP+
Slot 4  Online      MPC5E 3D Q 2CGE+4XGE
PIC 0   Online      2X10GE SFPP OTN
PIC 1   Online      1X100GE CFP2 OTN
PIC 2   Online      2X10GE SFPP OTN
PIC 3   Online      1X100GE CFP2 OTN
Slot 5  Online      MPC5E 3D Q 2CGE+4XGE
PIC 0   Online      2X10GE SFPP OTN
PIC 1   Online      1X100GE CFP2 OTN
PIC 2   Online      2X10GE SFPP OTN
PIC 3   Online      1X100GE CFP2 OTN
Slot 7  Online      MPC4E 3D 2CGE+8XGE
PIC 0   Online      4x10GE SFPP
PIC 1   Online      1X100GE CFP
PIC 2   Online      4x10GE SFPP
PIC 3   Online      1X100GE CFP
Slot 8  Online      MPC5E 3D Q 24XGE+6XLGE
PIC 0   Offline     12X10GE SFPP OTN
PIC 1   Offline     12X10GE SFPP OTN
PIC 2   Online      3X40GE QSFPP
PIC 3   Online      3X40GE QSFPP
Slot 9  Online      MPCE Type 2 3D P
PIC 0   Online      2x 10GE XFP
PIC 1   Online      2x 10GE XFP
Slot 10 Online      MPC5E 3D Q 24XGE+6XLGE
PIC 0   Online      12X10GE SFPP
PIC 1   Online      12X10GE SFPP
PIC 2   Offline     3X40GE QSFPP
PIC 3   Offline     3X40GE QSFPP
Slot 11 Online      MPC4E 3D 2CGE+8XGE
PIC 0   Online      4x10GE SFPP
PIC 1   Online      1X100GE CFP
PIC 2   Online      4x10GE SFPP
PIC 3   Online      1X100GE CFP

```

#### show chassis fpc (MX240, MX480, MX960 Routers with Application Services Modular Line Card)

```
user@host> show chassis fpc 1
```

Slot	Temp	CPU State	Utilization (%)	Memory (C)	Utilization (%)	DRAM (MB)	Heap	Buffer
1	Online	34	5	0	3072	5	13	

#### show chassis fpc (MX240, MX480, MX960 with Application Services Modular Line Card)

```
user@host> show chassis fpc 1 detail
```

```

Slot 1 information:
State                               Online
Temperature                         34
Total CPU DRAM                     3072 MB
Total RLDRAM                       259 MB
Total DDR DRAM                     4864 MB
Start time:                        2012-06-19 10:51:43 PDT

```



```

Uptime: 16 minutes, 48 seconds
Max Power Consumption 550 Watts

```

### show chassis fpc (MX240, MX480, MX960, MX2010, MX2020, and MX2008 Universal Routing Platforms with Dynamic Power Management)

```
user@host> show chassis fpc 2 detail
```

```

Slot 2 information:
State Online
Temperature 37
Total CPU DRAM 3584 MB
Total XR2 275 MB
Total DDR DRAM 20352 MB
Start time: 2014-07-18 02:51:23 PDT
Uptime: 5 minutes, 19 seconds
Max MPC Base Power Consumption 485 Watts
Max MICO Power Consumption 50 Watts
Max MIC1 Power Consumption 50 Watts
Max MPC Total Power Consumption 585 Watts

```

### show chassis fpc (MX2010 Routers)

```
user@host> show chassis fpc
```

Slot	Temp	CPU Utilization (%)	Memory	Utilization (%)			
	State	(C)	Total	Interrupt	DRAM (MB)	Heap	Buffer
0	Online	34	9	0	2048	18	13
1	Online	32	9	0	2048	15	13
2	Empty						
3	Empty						
4	Empty						
5	Empty						
6	Empty						
7	Empty						
8	Online	31	13	0	2048	11	13
9	Online	33	10	0	2048	18	13

### show chassis fpc (MX2010 Router with Fabric Grant Bypass Enabled)

Following is the output of the **show chassis fpc** command on an MX2010 router with Switch Fabric Board (SFB), where fabric grant bypass is enabled by default. All MPCs power on.

```
user@host> show chassis fpc
```

Slot	Temp	CPU Utilization (%)	Memory	Utilization (%)			
	State	(C)	Total	Interrupt	DRAM (MB)	Heap	Buffer
0	Online	34	20	0	2048	9	14
1	Offline	33	22	0	2048	9	14
2	Online	33	17	0	2048	9	14
3	Offline	34	25	0	2048	9	14
4	Online	32	27	0	2048	9	14
5	Offline	32	26	0	2048	9	14
6	Empty						
7	Empty						



```

8 Empty
9 Empty

```

### show chassis fpc (MX2010 Router with Fabric Grant Bypass Disabled)

Following is the output of the **show chassis fpc** command on an MX2010 router with Switch Fabric Board (SFB), where fabric grant bypass has been disabled. MPC1 (MX-MPC1-3D), MPC2 (MX-MPC2-3D), and the 16-port 10-Gigabit Ethernet MPC (MPC-3D-16XGE-SFP) do not power on after you disable fabric grant bypass and reboot the router. Also, FPC misconfiguration alarms are generated.

```
user@host> show chassis fpc
```

Slot	Temp	CPU Utilization (%)	Memory (C)	Utilization (%)	DRAM (MB)	Heap	Buffer
0	Online	34	20	0	2048	9	14
1	Offline	---FPC misconfiguration---					
2	Online	33	17	0	2048	9	14
3	Offline	---FPC misconfiguration---					
4	Online	32	27	0	2048	9	14
5	Offline	---FPC misconfiguration---					
6	Empty						
7	Empty						
8	Empty						
9	Empty						

### show chassis fpc pic-status (MX2010 Router with Fabric Grant Bypass Enabled)

Following is the output of the **show chassis fpc pic-status** command on an MX2010 router with Switch Fabric Board (SFB), where fabric grant bypass has been enabled by default. All MPCs power on.

```
user@host> show chassis fpc pic-status
```

Slot 0	Present	MPCE Type 3 3D
Slot 1	Present	MPC Type 2 3D EQ
Slot 2	Present	MPCE Type 3 3D
Slot 3	Present	MPC 3D 16x 10GE
Slot 4	Present	MPCE Type 3 3D
Slot 5	Present	MPCE Type 1 3D Q

### show chassis fpc pic-status (MX2010 Router with Fabric Grant Bypass Disabled)

Following is the output of the **show chassis fpc pic-status** command on an MX2010 router with Switch Fabric Board (SFB), where fabric grant bypass has been disabled. MPC1 (MX-MPC1-3D), MPC2 (MX-MPC2-3D), and the 16-port 10-Gigabit Ethernet MPC (MPC-3D-16XGE-SFP) do not power on after you disable fabric grant bypass mode and reboot the router.

```
user@host> show chassis fpc pic-status
```

Slot 0	Present	MPCE Type 3 3D
Slot 1	Offline	MPC Type 2 3D EQ
Slot 2	Present	MPCE Type 3 3D
Slot 3	Offline	MPC 3D 16x 10GE



```
Slot 4   Present      MPCE Type 3 3D
Slot 5   Offline      MPCE Type 1 3D Q
```

### show chassis fpc (MX2020 Routers)

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%) Total	Interrupt	Memory DRAM (MB)	Utilization (%) Heap	Buffer
0	Online	10	12	0	2048	18	13
1	Online	8	9	0	2048	18	13
2	Online	7	9	0	2048	18	13
3	Online	8	10	0	2048	18	13
4	Online	9	10	0	2048	18	13
5	Online	8	9	0	2048	18	13
6	Online	8	10	0	2048	18	13
7	Online	9	9	0	2048	18	13
8	Online	9	10	0	2048	18	13
9	Online	10	9	0	2048	18	13
10	Online	16	8	0	2048	18	13
11	Online	11	10	0	2048	18	13
12	Online	10	10	0	2048	18	13
13	Online	11	9	0	2048	18	13
14	Online	12	10	0	2048	18	13
15	Online	13	9	0	2048	18	13
16	Online	13	9	0	2048	18	13
17	Online	12	9	0	2048	18	13
18	Online	12	8	0	2048	18	13
19	Online	14	10	0	2048	18	13

### show chassis fpc (MX2020 Router with MPC4E)

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%) Total	Interrupt	Memory DRAM (MB)	Utilization (%) Heap	Buffer
0	Online	33	12	2	2048	11	13
1	Empty						
2	Empty						
3	Empty						
4	Empty						
5	Empty						
6	Empty						
7	Empty						
8	Empty						
9	Online	31	10	0	2048	11	13
10	Online	32	7	0	2048	14	13
11	Empty						
12	Empty						
13	Empty						
14	Online	28	12	0	2048	15	14
15	Empty						
16	Empty						
17	Empty						
18	Empty						
19	Online	38	8	0	2048	18	13



**show chassis fpc (MX10003 Router)**

```
user@host> show chassis fpc
```

Utilization (%)		Temp	CPU Utilization (%)		CPU Utilization (%)			Memory
Slot	State	(C)	Total	Interrupt	1min	5min	15min	DRAM (MB)
Heap	Buffer							
0	Online	59	25	0	25	24	23	3136
12								
1	Online	62	29	0	26	24	23	3136
12								

**show chassis fpc detail (MX10003 Router)**

```
user@host> show chassis fpc detail
```

**Slot 0 information:**

```
State Online
Total CPU DRAM 3136 MB
Total RLDRAM 771 MB
Total DDR DRAM 18432 MB
Temperature 60 degrees C / 140 degrees F
Start time 2017-07-19 20:49:58 PDT
Uptime 2 hours, 29 minutes, 22 seconds
Max MPC base power consumption 910 Watts
Max MIC1 power consumption 95 Watts
Max MPC total power consumption 1005 Watts
```

**Slot 1 information:**

```
State Online
Total CPU DRAM 3136 MB
Total RLDRAM 771 MB
Total DDR DRAM 18432 MB
Temperature 63 degrees C / 145 degrees F
Start time 2017-07-19 20:48:01 PDT
Uptime 2 hours, 31 minutes, 19 seconds
Max MPC base power consumption 910 Watts
Max MIC1 power consumption 155 Watts
Max MPC total power consumption 1065 Watts
```

**show chassis fpc <fpc-slot> (MX10003 Router)**

```
user@host> show chassis fpc 0
```

Utilization (%)		Temp	CPU Utilization (%)		CPU Utilization (%)			Memory
Slot	State	(C)	Total	Interrupt	1min	5min	15min	DRAM (MB)
Heap	Buffer							
0	Online	49	26	0	22	22	23	3136
12								

**show chassis fpc (MX204 Router)**

```
user@host> show chassis fpc
```

Temp	CPU Utilization (%)	CPU Utilization (%)	Memory
------	---------------------	---------------------	--------



Utilization (%)		(C)	Total	Interrupt	1min	5min	15min	DRAM (MB)
Slot	State							
Heap	Buffer							
0	Online	Absent	8	0	8	8	8	3136
8	8							

### show chassis fpc detail (MX204 Router)

```
user@host> show chassis fpc detail
```

```
Slot 0 information:
State                               Online
Total CPU DRAM                     3136 MB
Total RLDRAM                       257 MB
Total DDR DRAM                     4096 MB
Temperature                         Absent
Start time                         2017-11-05 22:14:01 PST
Uptime                             2 days, 8 hours, 5 minutes, 55 seconds
```

### show chassis fpc <fpc-slot> (MX204 Router)

```
user@host> show chassis fpc 0
```

Utilization (%)		Temp	CPU Utilization (%)		CPU Utilization (%)			Memory
Slot	State		Total	Interrupt	1min	5min	15min	
Heap	Buffer	(C)						DRAM (MB)
0	Online	Absent	8	0	8	8	8	3136
8	8							

### show chassis fpc (MX10008 Router)

```
user@host> show chassis fpc
```

Utilization (%)		Temp	CPU Utilization (%)		CPU Utilization (%)			Memory
Slot	State		Total	Interrupt	1min	5min	15min	
Heap	Buffer	(C)						DRAM (MB)
0	Online	42	34	0	35	43	39	3136
19	26							
1	Empty							
2	Online	52	32	0	29	30	30	3136
19	26							
3	Online	48	20	0	19	18	18	3136
18	26							
4	Empty							
5	Empty							
6	Empty							
7	Empty							

### show chassis fpc detail (MX10008 Router)

```
user@host> show chassis fpc detail
```

```
Slot 0 information:
State                               Online
Total CPU DRAM                     3136 MB
Total RLDRAM                       1542 MB
```



```

Total DDR DRAM          36864 MB
Temperature              42 degrees C / 107 degrees F
Start time              2018-07-18 02:12:50 PDT
Uptime                  10 minutes, 28 seconds
Max power consumption    1535 Watts
Configured Bandwidth     2400 G
Operating Bandwidth      2400 G
Slot 2 information:
State                   Online
Total CPU DRAM          3136 MB
Total RLD RAM           1542 MB
Total DDR DRAM          36864 MB
Temperature              52 degrees C / 125 degrees F
Start time              2018-07-17 05:51:15 PDT
Uptime                  20 hours, 32 minutes, 3 seconds
Max power consumption    1535 Watts
Configured Bandwidth     2400 G
Operating Bandwidth      2400 G
Slot 3 information:
State                   Online
Total CPU DRAM          3136 MB
Total RLD RAM           1542 MB
Total DDR DRAM          36864 MB
Temperature              48 degrees C / 118 degrees F
Start time              2018-07-17 05:50:40 PDT
Uptime                  20 hours, 32 minutes, 38 seconds
Max power consumption    1475 Watts
Configured Bandwidth     2400 G
Operating Bandwidth      2400 G

```

### show chassis fpc <fpc-slot> (MX10008 Router)

```
user@host> show chassis fpc 0
```

Utilization (%)		Temp	CPU Utilization (%)		CPU Utilization (%)			Memory
Slot	State	(C)	Total	Interrupt	1min	5min	15min	DRAM (MB)
0	Online	43	33	0	33	40	38	3136
19	26							

### show chassis fpc detail (MX2020 Router with MPC4E)

```
user@host> show chassis fpc detail
```

```

Slot 0 information:
State                   Online
Temperature              34
Total CPU DRAM          2048 MB
Total RLD RAM           806 MB
Total DDR DRAM          2632 MB
Start time:             2013-02-17 08:17:35 PST
Uptime:                  1 day, 14 hours, 50 minutes, 39 seconds
Max Power Consumption    368 Watts
Slot 9 information:
State                   Online
Temperature              32
Total CPU DRAM          2048 MB
Total RLD RAM           806 MB

```



```

Total DDR DRAM                2632 MB
Start time:                   2013-02-17 08:17:43 PST
Uptime:                       1 day, 14 hours, 50 minutes, 31 seconds
Max Power Consumption          368 Watts
Slot 10 information:
State                          Online
Temperature                    37
Total CPU DRAM                2048 MB
Total RDRAM                   1036 MB
Total DDR DRAM                6656 MB
Start time:                   2013-02-17 08:17:54 PST
Uptime:                       1 day, 14 hours, 50 minutes, 20 seconds
Max Power Consumption          520 Watts
Slot 14 information:
State                          Online
Temperature                    32
Total CPU DRAM                2048 MB
Total RDRAM                   1036 MB
Total DDR DRAM                11264 MB
Start time:                   2013-02-17 08:18:01 PST
Uptime:                       1 day, 14 hours, 50 minutes, 13 seconds
Max Power Consumption          610 Watts
Slot 19 information:
State                          Online
Temperature                    38
Total CPU DRAM                2048 MB
Total RDRAM                   1324 MB
Total DDR DRAM                5120 MB
Start time:                   2013-02-17 08:18:08 PST
Uptime:                       1 day, 14 hours, 50 minutes, 6 seconds
Max Power Consumption          440 Watts

```

### show chassis fpc (MX2020 Router with MPC5EQ and MPC6E)

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)		Memory DRAM (MB)	Utilization (%)	
			Total	Interrupt		Heap	Buffer
0	Online	31	20	0	3584	7	13
1	Online	28	19	0	2048	17	13
2	Online	27	10	0	2048	18	14
3	Online	26	10	0	2048	13	13
4	Online	29	19	0	3584	7	13
5	Online	28	68	0	2048	20	13
6	Empty						
7	Empty						
8	Empty						
9	Online	36	19	0	3584	10	13
10	Online	37	26	0	3584	10	13
11	Empty						
12	Empty						
13	Empty						
14	Empty						
15	Empty						
16	Empty						
17	Online	28	43	0	3584	10	13
18	Online	29	19	0	3584	7	13
19	Online	31	19	0	3584	7	13



## show chassis fpc detail (MX2020 Router with MPC5EQ and MPC6E)

```

user@host> show chassis fpc detail

Slot 0 information:
  State                Online
  Temperature          31
  Total CPU DRAM       3584 MB
  Total XR2            291 MB
  Total DDR DRAM       24960 MB
  Start time:          2014-04-22 23:33:19 PDT
  Uptime:              6 minutes, 24 seconds
  Max Power Consumption 607 Watts

Slot 1 information:
  State                Online
  Temperature          28
  Total CPU DRAM       2048 MB
  Total RLDRAM         1036 MB
  Total DDR DRAM       6656 MB
  Start time:          2014-04-22 23:33:24 PDT
  Uptime:              6 minutes, 19 seconds
  Max Power Consumption 520 Watts

Slot 2 information:
  State                Online
  Temperature          27
  Total CPU DRAM       2048 MB
  Total RLDRAM         1036 MB
  Total DDR DRAM       11264 MB
  Start time:          2014-04-22 23:33:34 PDT
  Uptime:              6 minutes, 9 seconds
  Max Power Consumption 608 Watts

Slot 3 information:
  State                Online
  Temperature          26
  Total CPU DRAM       2048 MB
  Total RLDRAM         734 MB
  Total DDR DRAM       3108 MB
  Start time:          2014-04-22 23:33:39 PDT
  Uptime:              6 minutes, 4 seconds
  Max Power Consumption 368 Watts

Slot 4 information:
  State                Online
  Temperature          29
  Total CPU DRAM       3584 MB
  Total XR2            291 MB
  Total DDR DRAM       24960 MB
  Start time:          2014-04-22 23:33:51 PDT
  Uptime:              5 minutes, 52 seconds
  Max Power Consumption 607 Watts

Slot 5 information:
  State                Online
  Temperature          28
  Total CPU DRAM       2048 MB
  Total RLDRAM         1324 MB
  Total DDR DRAM       5120 MB
  Start time:          2014-04-22 23:33:57 PDT
  Uptime:              5 minutes, 46 seconds
  Max Power Consumption 440 Watts

Slot 9 information:
  State                Online

```



```

Temperature                25
Total CPU DRAM              3584 MB
Total XR2                   518 MB
Total DDR DRAM              49920 MB
Start time:                 2014-04-22 23:31:20 PDT
Uptime:                     8 minutes, 23 seconds
Max Power Consumption       1130 Watts
Slot 10 information:
State                       Online
Temperature                 32
Total CPU DRAM              3584 MB
Total XR2                   518 MB
Total DDR DRAM              49920 MB
Start time:                 2014-04-22 23:31:25 PDT
Uptime:                     8 minutes, 18 seconds
Max Power Consumption       1130 Watts
Slot 17 information:
State                       Online
Temperature                 25
Total CPU DRAM              3584 MB
Total XR2                   518 MB
Total DDR DRAM              49920 MB
Start time:                 2014-04-22 23:31:29 PDT
Uptime:                     8 minutes, 14 seconds
Max Power Consumption       1130 Watts
Slot 18 information:
State                       Online
Temperature                 29
Total CPU DRAM              3584 MB
Total XR2                   291 MB
Total DDR DRAM              24960 MB
Start time:                 2014-04-22 23:34:11 PDT
Uptime:                     5 minutes, 32 seconds
Max Power Consumption       607 Watts
Slot 19 information:
State                       Online
Temperature                 32
Total CPU DRAM              3584 MB
Total XR2                   291 MB
Total DDR DRAM              24960 MB
Start time:                 2014-04-22 23:34:20 PDT
Uptime:                     5 minutes, 23 seconds
Max Power Consumption       607 Watts

```

### show chassis fpc detail (MX2008 Router)

```
user@host>show chassis fpc detail
```

```

Slot 0 information:
State                       Online
Temperature                 33 degrees C / 91 degrees F
Total CPU DRAM              2048 MB
Total RLD RAM               734 MB
Total DDR DRAM              2596 MB
Start time                  2017-04-14 07:14:26 PDT
Uptime                      15 hours, 29 minutes, 20 seconds
Max power consumption       347 Watts
Slot 3 information:
State                       Online
Temperature                 31 degrees C / 87 degrees F

```



```

Total CPU DRAM          3584 MB
Total RLD RAM           259 MB
Total DDR DRAM          20352 MB
Start time              2017-04-14 07:14:38 PDT
Uptime                  15 hours, 29 minutes, 8 seconds
Max MPC base power consumption  376 Watts
Max MIC0 power consumption    0 Watts
Max MIC1 power consumption    0 Watts
Max MPC total power consumption 376 Watts
Slot 5 information:
State                   Online
Temperature              32 degrees C / 89 degrees F
Total CPU DRAM          3584 MB
Total RLD RAM           275 MB
Total DDR DRAM          20352 MB
Start time              2017-04-14 07:14:46 PDT
Uptime                  15 hours, 29 minutes
Max MPC base power consumption  422 Watts
Max MIC0 power consumption    18 Watts
Max MIC1 power consumption    0 Watts
Max MPC total power consumption 440 Watts
Slot 7 information:
State                   Online
Temperature              28 degrees C / 82 degrees F
Total CPU DRAM          2048 MB
Total RLD RAM           403 MB
Total DDR DRAM          1572 MB
Start time              2017-04-14 07:14:50 PDT
Uptime                  15 hours, 28 minutes, 56 seconds
Max power consumption    347 Watts
Slot 9 information:
State                   Online
Temperature              29
Total CPU DRAM          3584 MB
Total XR2               518 MB
Total DDR DRAM          49920 MB
Start time              2017-04-14 07:13:16 PDT
Uptime                  15 hours, 30 minutes, 30 seconds
Max MPC base power consumption  834 Watts
Max MIC0 power consumption    56 Watts
Max MIC1 power consumption    0 Watts
Max MPC total power consumption 890 Watts

```

### show chassis fpc pic-status (MX2020 Router with MPC5EQ and MPC6E)

```

user@host> show chassis fpc pic-status

Slot 0  Online      MPC5E 3D Q 24XGE+6XLGE
PIC 0   Online      12X10GE SFPP OTN
PIC 1   Online      12X10GE SFPP OTN
PIC 2   Offline     3X40GE QSFPP
PIC 3   Offline     3X40GE QSFPP
Slot 1  Online      MPCE Type 3 3D
PIC 0   Online      10X10GE SFPP
PIC 2   Online      1X100GE CXP
Slot 2  Online      MPC4E 3D 2CGE+8XGE
PIC 0   Online      4x10GE SFPP
PIC 1   Online      1X100GE CFP
PIC 2   Online      4x10GE SFPP
PIC 3   Online      1X100GE CFP

```



```

Slot 3  Online      MPCE Type 2 3D P
PIC 0   Online      2x 10GE XFP
PIC 1   Online      2x 10GE XFP
Slot 4  Online      MPC5E 3D Q 2CGE+4XGE
PIC 0   Online      2X10GE SFPP OTN
PIC 1   Online      1X100GE CFP2 OTN
PIC 2   Online      2X10GE SFPP OTN
PIC 3   Online      1X100GE CFP2 OTN
Slot 5  Online      MPC 3D 16x 10GE
PIC 0   Online      4x 10GE(LAN) SFP+
PIC 1   Online      4x 10GE(LAN) SFP+
PIC 2   Online      4x 10GE(LAN) SFP+
PIC 3   Online      4x 10GE(LAN) SFP+
Slot 9  Online      MPC6E 3D
PIC 0   Online      2X100GE CFP2 OTN
PIC 1   Online      2X100GE CFP2 OTN
Slot 10 Online      MPC6E 3D
PIC 0   Online      24X10GE SFPP OTN
PIC 1   Online      4X100GE CXP
Slot 17 Online      MPC6E 3D
PIC 0   Online      24X10GE SFPP
PIC 1   Online      4X100GE CXP
Slot 18 Online      MPC5E 3D Q 24XGE+6XLGE
PIC 0   Offline     12X10GE SFPP OTN
PIC 1   Offline     12X10GE SFPP OTN
PIC 2   Online      3X40GE QSFPP
PIC 3   Online      3X40GE QSFPP
Slot 19 Online      MPC5E 3D Q 24XGE+6XLGE
PIC 0   Online      12X10GE SFPP OTN
PIC 1   Offline     12X10GE SFPP OTN
PIC 2   Offline     3X40GE QSFPP
PIC 3   Online      3X40GE QSFPP

```

#### show chassis fpc detail (MX Series Routers)

```
user@host> show chassis fpc detail 2
```

```

Slot 0 information:
State                Online
Temperature          36 degrees C / 96 degrees F
Total CPU DRAM       1024 MB
Total RLDRAM         256 MB
Total DDR DRAM       4096 MB
Start time:          2009-08-11 21:20:30 PDT
Uptime:              2 hours, 8 minutes, 50 seconds
Max Power Consumption 335 Watts

```

#### show chassis fpc detail (EX Series Switches)

```
user@host> show chassis fpc detail 2
```

```

Slot 1 information:
State                Online
Temperature          41
Total CPU DRAM       2048 MB
Total RLDRAM         1036 MB
Total DDR DRAM       11264 MB
Start time:          2013-04-02 00:04:52 PDT
Uptime:              7 days, 9 hours, 47 minutes, 46 seconds

```



```

Max Power Consumption      610 Watts
Slot 2 information:
State                      Online
Temperature                41
Total CPU DRAM             2048 MB
Total RLD RAM              1036 MB
Total DDR DRAM             11264 MB
Start time:                2013-04-02 00:04:56 PDT
Uptime:                    7 days, 9 hours, 47 minutes, 42 seconds
Max Power Consumption      610 Watts

```

#### show chassis fpc detail (EX9251 Switches)

```
user@switch> show chassis fpc detail 2
```

```

Slot 0 information:
State                      Online
Total CPU DRAM             3136 MB
Total RLD RAM              257 MB
Total DDR DRAM             4096 MB
Temperature                Absent
Start time                 2018-03-12 14:59:49 PDT
Uptime                     1 day, 1 hour, 10 minutes, 48 seconds

```

#### show chassis fpc detail (EX9253 Switches)

```
user@switch> show chassis fpc detail 1
```

```

Slot 1 information:
State                      Online
Total CPU DRAM             3136 MB
Total RLD RAM              771 MB
Total DDR DRAM             18432 MB
Temperature                59 degrees C / 138 degrees F
Start time                 2018-03-04 14:20:42 PST
Uptime                     3 days, 10 hours, 40 minutes, 57 seconds
Max MPC base power consumption 910 Watts
Max MIC1 power consumption  95 Watts
Max MPC total power consumption 1005 Watts

```

#### show chassis fpc (Hardware Not Supported)

```
user@host> show chassis fpc
```

```

show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory Utilization (%)	DRAM (MB)	Heap	Buffer
0	Online						
1	Present						
2	Online		0	0	0	0	0
3	Present						
4	Empty						
5	Empty						
6	Online		0	0	0	0	0

#### show chassis fpc detail (Hardware Not Supported)

```
user@host> show chassis fpc detail
```



```

Slot 0 information:
  State                Online
  Total CPU DRAM
  Start time           2006-07-07 03:21:00 UTC
  Uptime               27 minutes, 51 seconds
Slot 1 information:
  State                Present
  Reason              --- Hardware Not In Right Slot ---
Slot 2 information:
  State                Online
  Total CPU DRAM       32 MB
  Start time           2006-07-07 03:20:59 UTC
  Uptime               27 minutes, 52 seconds
Slot 3 information:
  State                Present
  Reason              --- Hardware Not Supported ---
  Total CPU DRAM       0 MB
Slot 6 information:
  State                Online
  Total CPU DRAM       32 MB
  Start time           2006-07-07 03:21:01 UTC
  Uptime               27 minutes, 50 seconds

```

### show chassis fpc pic-status

```
user@host> show chassis fpc pic-status
```

```

Slot 0 Online
  PIC 1    1x OC-12 ATM, MM
  PIC 2    1x OC-12 ATM, MM
  PIC 3    1x OC-12 ATM, MM
Slot 1 Online
  PIC 0    1x OC-48 SONET, SMIR
Slot 2 Online
  PIC 0    1x OC-192 SONET, SMSR

```

### show chassis fpc pic-status (M Series Routers)

```
user@host> show chassis fpc pic-status
```

```

Slot 1  Online      FPC Type 1
  PIC 0  Present    2x OC-3 ATM, MM- Hardware Error
  PIC 1  Online     4x OC-3 SONET, SMIR
Slot 2  Online      E-FPC Type 2
  PIC 0  Online     4x G/E, 1000 BASE-SX
  PIC 1  Online     2x G/E SFP, 1000 BASE
  PIC 3  Online     1x Tunnel
Slot 3  Online      E-FPC Type 1
  PIC 0  Online     1x G/E IQ, 1000 BASE
  PIC 2  Online     1x G/E SFP, 1000 BASE
Slot 4  Online      E-FPC Type 2
  PIC 0  Online     4x G/E SFP, 1000 BASE
  PIC 1  Online     4x G/E SFP, 1000 BASE
  PIC 2  Online     4x G/E SFP, 1000 BASE
  PIC 3  Online     4x G/E SFP, 1000 BASE
Slot 5  Online      FPC Type 2
...

```



**show chassis fpc pic-status (M120 Router)**

```
user@host> show chassis fpc pic-status
```

```
Slot 1  Online      M120 CFPC 10GE
PIC 0   Online      1x 10GE(LAN/WAN) XFP
Slot 3  Online      M120 FPC Type 2 (proto)
PIC 0   Online      2x G/E IQ, 1000 BASE
PIC 1   Online      4x OC-3 SONET, SMIR
PIC 2   Online      2x G/E IQ, 1000 BASE
PIC 3   Online      8x 1GE(LAN), IQ2
Slot 4  Online      M120 FPC Type 3 (proto)
PIC 0   Online      10x 1GE(LAN), 1000 BASE
Slot 5  Online      M120 FPC Type 1 (proto)
PIC 0   Present     1x G/E, 1000 BASE-LX- Not Supported
PIC 1   Online      1x CHOC3 IQ SONET, SMLR
PIC 2   Online      4x CHDS3 IQ
PIC 3   Online      1x G/E SFP, 1000 BASE
```

**show chassis fpc pic-status (MX240, MX480, and MX960 Routers with Application Services Modular Line Card)**

In the following output **Slot 1 and Slot 5** are the Application Services Modular Carrier Cards (AS MCC), **PIC 0** is the Application Services Modular Storage Card (AS MSC), and **PIC 2** is the Application Services Modular Processing Card (AS MXC).

```
user@host>show chassis fpc pic-status
```

```
Slot 2  Online      MPC Type 1 3D Q
Slot 1  Online      AS-MCC
PIC 0   Online      AS-MSC
PIC 2   Online      AS-MXC
Slot 4  Offline     MPC 3D 16x 10GE
Slot 5  Offline     AS-MCC
```

**show chassis fpc lcc (TX Matrix Router)**

```
user@host> show chassis fpc lcc 0
```

```
lcc0-re0:
```

Slot	State	Temp (C)	CPU Total	Utilization (%) Interrupt	Memory Utilization (%) DRAM (MB) Heap Buffer
0	Empty				
1	Online	27	2	0	256 8 44
2	Online	27	3	0	256 15 44
3	Empty				
4	Empty				
5	Empty				
6	Empty				
7	Empty				

**show chassis fpc pic-status (TX Matrix Router)**

```
user@host> show chassis fpc pic-status
```

```
lcc0-re0:
```

```
Slot 0  Online      FPC Type 3
PIC 0   Online      1x OC-192 SM SR1
```



```

PIC 1 Online      1x OC-192 SM SR2
PIC 2 Online      1x OC-192 SM SR1
PIC 3 Online      1x Tunnel
Slot 1 Online     FPC Type 2
PIC 0 Online      1x OC-48 SONET, SMSR
PIC 1 Online      1x OC-48 SONET, SMSR

```

lcc1-re0:

lcc2-re0:

```

Slot 1 Online     FPC Type 3
PIC 0 Online      1x OC-192 SM SR1
Slot 5 Online     FPC Type 2
PIC 0 Online      1x OC-48 SONET, SMSR
PIC 1 Online      2x G/E, 1000 BASE-LX
PIC 2 Online      2x G/E, 1000 BASE-LX
PIC 3 Online      1x OC-48 SONET, SMSR

```

lcc3-re0:

#### show chassis fpc pic-status lcc (TX Matrix Router)

```
user@host> show chassis fpc pic-status lcc 0
```

lcc0-re0:

```

Slot 0 Online     FPC Type 3
PIC 0 Online      1x OC-192 SM SR2
Slot 1 Online     FPC Type 2
PIC 0 Online      2x OC-12 ATM2 IQ, MM
PIC 1 Online      1x OC-48 SONET, SMSR
PIC 2 Online      1x OC-48 SONET, SMSR
PIC 3 Online      4x G/E, 1000 BASE-SX

```

#### show chassis fpc (TX Matrix Plus Router)

```
user@host> show chassis fpc
```

lcc0-re0:

Slot	State	Temp (C)	CPU Utilization (%) Total Interrupt	Memory DRAM (MB)	Utilization (%) Heap Buffer
0	Empty				
1	Online	38	4 0	2048	3 24
2	Online	43	8 0	2048	6 24
3	Empty				
4	Online	43	6 0	2048	6 24
5	Empty				
6	Online	42	13 0	2048	6 24
7	Online	45	7 0	2048	3 24

lcc2-re0:

Slot	State	Temp (C)	CPU Utilization (%) Total Interrupt	Memory DRAM (MB)	Utilization (%) Heap Buffer
0	Online	42	10 0	2048	6 24



1	Empty						
2	Online	42	11	0	2048	6	24
3	Online	40	5	0	2048	3	24
4	Online	33	26	0	1024	8	49
5	Empty						
6	Online	43	8	0	2048	6	24
7	Online	46	6	0	2048	3	24

lcc3-re0:

Slot	State	Temp (C)	CPU Utilization (%)	Memory DRAM (MB)	Utilization (%)	Heap	Buffer
0	Empty						
1	Empty						
2	Online	39	30	0	2048	7	24
3	Empty						
4	Online	41	8	0	2048	6	24
5	Online	41	12	0	2048	6	24
6	Online	40	8	0	2048	6	24
7	Online	42	4	0	2048	3	24

## show chassis fpc lcc (TX Matrix Plus Router)

user@host&gt; show chassis fpc lcc 0

lcc0-re0:

Slot	State	Temp (C)	CPU Utilization (%)	Memory DRAM (MB)	Utilization (%)	Heap	Buffer
0	Empty						
1	Online	38	4	0	2048	3	24
2	Online	43	8	0	2048	6	24
3	Empty						
4	Online	43	6	0	2048	6	24
5	Empty						
6	Online	42	14	0	2048	6	24
7	Online	45	6	0	2048	3	24

## show chassis fpc detail (TX Matrix Plus Router)

user@host&gt; show chassis fpc details

lcc0-re0:

Slot 1 information:	
State	Online
Temperature	38 degrees C / 100 degrees F
Total CPU DRAM	2048 MB
Total SRAM	64 MB
Total SDRAM	1280 MB
Start time	2010-10-04 20:06:22 PDT
Uptime	1 hour, 32 minutes, 51 seconds
Slot 2 information:	
State	Online
Temperature	43 degrees C / 109 degrees F
Total CPU DRAM	2048 MB
Total SRAM	128 MB
Total SDRAM	2560 MB



```

Start time                2010-10-04 20:06:37 PDT
Uptime                    1 hour, 32 minutes, 36 seconds
Slot 4 information:
State                     Online
Temperature               43 degrees C / 109 degrees F
Total CPU DRAM            2048 MB
Total SRAM                128 MB
Total SDRAM               2560 MB
Start time                2010-10-04 20:06:40 PDT
Uptime                    1 hour, 32 minutes, 33 seconds
Slot 6 information:
State                     Online
Temperature               42 degrees C / 107 degrees F
Total CPU DRAM            2048 MB
Total SRAM                128 MB
Total SDRAM               2560 MB
Start time                2010-10-04 20:06:42 PDT
Uptime                    1 hour, 32 minutes, 31 seconds
Slot 7 information:
State                     Online
Temperature               45 degrees C / 113 degrees F
Total CPU DRAM            2048 MB
Total SRAM                64 MB
Total SDRAM               1280 MB
Start time                2010-10-04 20:06:43 PDT
Uptime                    1 hour, 32 minutes, 30 seconds

```

```

lcc2-re0:
-----

```

```

Slot 0 information:
State                     Online
Temperature               42 degrees C / 107 degrees F
Total CPU DRAM            2048 MB
Total SRAM                128 MB
Total SDRAM               2560 MB
Start time                2010-10-04 20:06:35 PDT
Uptime                    1 hour, 32 minutes, 38 seconds
Slot 2 information:
State                     Online
Temperature               42 degrees C / 107 degrees F
Total CPU DRAM            2048 MB
Total SRAM                128 MB
Total SDRAM               2560 MB
Start time                2010-10-04 20:06:37 PDT
Uptime                    1 hour, 32 minutes, 36 seconds
Slot 3 information:
State                     Online
Temperature               40 degrees C / 104 degrees F
Total CPU DRAM            2048 MB
Total SRAM                64 MB
Total SDRAM               1280 MB
Start time                2010-10-04 20:06:28 PDT
Uptime                    1 hour, 32 minutes, 45 seconds
Slot 4 information:
State                     Online
Temperature               33 degrees C / 91 degrees F
Total CPU DRAM            1024 MB
Total SRAM                64 MB
Total SDRAM               1280 MB
Start time                2010-10-04 20:08:03 PDT

```



```

Uptime                               1 hour, 31 minutes, 10 seconds
Slot 6 information:
State                                 Online
Temperature                           43 degrees C / 109 degrees F
Total CPU DRAM                        2048 MB
Total SRAM                            128 MB
Total SDRAM                           2560 MB
Start time                           2010-10-04 20:06:44 PDT
Uptime                               1 hour, 32 minutes, 29 seconds
Slot 7 information:
State                                 Online
Temperature                           46 degrees C / 114 degrees F
Total CPU DRAM                        2048 MB
Total SRAM                            64 MB
Total SDRAM                           1280 MB
Start time                           2010-10-04 20:06:46 PDT
Uptime                               1 hour, 32 minutes, 27 seconds

```

```

lcc3-re0:
-----

```

```

Slot 2 information:
State                                 Online
Temperature                           38 degrees C / 100 degrees F
Total CPU DRAM                        2048 MB
Total SRAM                            128 MB
Total SDRAM                           2560 MB
Start time                           2010-10-04 20:17:31 PDT
Uptime                               1 hour, 21 minutes, 42 seconds
Slot 4 information:
State                                 Online
Temperature                           41 degrees C / 105 degrees F
Total CPU DRAM                        2048 MB
Total SRAM                            128 MB
Total SDRAM                           2560 MB
Start time                           2010-10-04 20:17:34 PDT
Uptime                               1 hour, 21 minutes, 39 seconds
Slot 5 information:
State                                 Online
Temperature                           41 degrees C / 105 degrees F
Total CPU DRAM                        2048 MB
Total SRAM                            128 MB
Total SDRAM                           2560 MB
Start time                           2010-10-04 20:17:36 PDT
Uptime                               1 hour, 21 minutes, 37 seconds
Slot 6 information:
State                                 Online
Temperature                           40 degrees C / 104 degrees F
Total CPU DRAM                        2048 MB
Total SRAM                            128 MB
Total SDRAM                           2560 MB
Start time                           2010-10-04 20:17:39 PDT
Uptime                               1 hour, 21 minutes, 34 seconds
Slot 7 information:
State                                 Online
Temperature                           42 degrees C / 107 degrees F
Total CPU DRAM                        2048 MB
Total SRAM                            64 MB
Total SDRAM                           1280 MB
Start time                           2010-10-04 20:17:41 PDT
Uptime                               1 hour, 21 minutes, 32 seconds

```



**show chassis fpc pic-status (TX Matrix Plus Router)**

```
user@host> show chassis fpc pic-status
```

```
1cc0-re0:
```

```
-----
Slot 1  Online      FPC Type 2-ES
  PIC 0  Online      8x 1GE(LAN), IQ2
Slot 2  Online      FPC Type 4-ES
  PIC 0  Online      4x 10GE (LAN/WAN) XFP
Slot 4  Online      FPC Type 4-ES
  PIC 0  Online      4x 10GE (LAN/WAN) XFP
Slot 6  Online      FPC Type 4-ES
  PIC 0  Online      4x 10GE (LAN/WAN) XFP
  PIC 1  Online      4x 10GE (LAN/WAN) XFP
Slot 7  Online      FPC Type 3-ES
  PIC 0  Online      10x 1GE(LAN), 1000 BASE
  PIC 2  Online      1x OC-192 SM SR2
  PIC 3  Online      10x 1GE(LAN), 1000 BASE
```

```
1cc2-re0:
```

```
-----
Slot 0  Online      FPC Type 4-ES
  PIC 0  Online      4x 10GE (LAN/WAN) XFP
Slot 2  Online      FPC Type 4-ES
  PIC 0  Online      4x 10GE (LAN/WAN) XFP
  PIC 1  Online      4x 10GE (LAN/WAN) XFP
Slot 3  Online      FPC Type 2-ES
  PIC 0  Online      8x 1GE(LAN), IQ2
Slot 4  Online      FPC Type 4
  PIC 0  Online      10x10GE(LAN/WAN) SFPP
Slot 6  Online      FPC Type 4-ES
  PIC 0  Online      4x OC-192 SONET XFP
Slot 7  Online      FPC Type 3-ES
  PIC 0  Online      10x 1GE(LAN), 1000 BASE
  PIC 1  Offline     1x 10GE(LAN/WAN) IQ2E
  PIC 2  Online      1x OC-192 SM SR2
  PIC 3  Online      1x Tunnel
```

```
1cc3-re0:
```

```
-----
Slot 2  Online      FPC Type 4-ES
  PIC 0  Online      10x10GE(LAN/WAN) SFPP
Slot 4  Online      FPC Type 4-ES
  PIC 0  Online      4x OC-192 SONET XFP
Slot 5  Online      FPC Type 4-ES
  PIC 0  Online      4x OC-192 SONET XFP
  PIC 1  Online      4x 10GE (LAN/WAN) XFP
Slot 6  Online      FPC Type 4-ES
  PIC 1  Online      4x 10GE (LAN/WAN) XFP
Slot 7  Online      FPC Type 3-ES
  PIC 0  Online      10x 1GE(LAN), 1000 BASE
  PIC 1  Online      8x 1GE(TYPE3), IQ2E
  PIC 2  Online      4x OC-48 SONET
```

**show chassis fpc (TI600 Router)**

```
user@host> show chassis fpc
```



Slot	State	Temp (C)	CPU Utilization (%)		Memory DRAM (MB)	Utilization (%)	
			Total	Interrupt		Heap	Buffer
0	Empty						
1	Empty						
2	Online	49	3	0	2048	3	24
3	Online	46	6	0	2048	6	24
4	Empty						
5	Online	46	5	0	2048	3	24
6	Empty						
7	Online	44	8	0	1024	7	49

### show chassis fpc detail (T1600 Router)

```
user@host> show chassis fpc detail
```

```
show chassis fpc detail
Slot 2 information:
  State                Online
  Temperature          49 degrees C / 120 degrees F
  Total CPU DRAM       2048 MB
  Total SRAM           64 MB
  Total SDRAM          1280 MB
  Start time           2010-10-04 21:12:52 PDT
  Uptime               32 minutes, 9 seconds
Slot 3 information:
  State                Online
  Temperature          47 degrees C / 116 degrees F
  Total CPU DRAM       2048 MB
  Total SRAM           128 MB
  Total SDRAM          2560 MB
  Start time           2010-10-04 21:13:06 PDT
  Uptime               31 minutes, 55 seconds
Slot 5 information:
  State                Online
  Temperature          46 degrees C / 114 degrees F
  Total CPU DRAM       2048 MB
  Total SRAM           64 MB
  Total SDRAM          1280 MB
  Start time           2010-10-04 21:12:56 PDT
  Uptime               32 minutes, 5 seconds
Slot 7 information:
  State                Online
  Temperature          44 degrees C / 111 degrees F
  Total CPU DRAM       1024 MB
  Total SRAM           64 MB
  Total SDRAM          1280 MB
  Start time           2010-10-04 21:14:34 PDT
  Uptime               30 minutes, 27 seconds
```

### show chassis fpc <fpc-slot> (EX Series Switch)

```
user@host> show chassis fpc 2
```

Slot	State	Temp (C)	CPU Utilization (%)		Memory DRAM (MB)	Utilization (%)	
			Total	Interrupt		Heap	Buffer
2	Online	40	12	0	2048	19	14



**show chassis fpc slot (T1600 Router)**

```
user@host> show chassis fpc slot 2
```

Slot	State	Temp (C)	CPU Utilization (%) Total Interrupt	Memory DRAM (MB)	Utilization (%) Heap Buffer
2	Online	49	3 0	2048	3 24

**show chassis fpc pic-status (T1600 Router)**

```
user@host> show chassis fpc pic-status
```

Slot 2	Online	FPC Type 1-ES
PIC 0	Online	Load Type 1
PIC 1	Online	4x 1GE(LAN), IQ2E
PIC 3	Online	1x 0C-12-3 SFP
Slot 3	Online	FPC Type 4-ES
PIC 0	Online	4x 10GE (LAN/WAN) XFP
PIC 1	Online	4x 0C-192 SONET XFP
Slot 5	Online	FPC Type 2-ES
PIC 0	Online	Load Type 2
PIC 1	Online	8x 1GE(LAN), IQ2E
PIC 2	Online	8x 1GE(LAN), IQ2E
PIC 3	Online	1x 0C-48-12-3 SFP
Slot 7	Online	FPC Type 4
PIC 0	Online	4x 10GE (LAN/WAN) XFP

**show chassis fpc (T4000 Router)**

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%) Total Interrupt	Memory DRAM (MB)	Utilization (%) Heap Buffer
0	Online	48	15 0	2816	21 27
1	Empty				
2	Empty				
3	Online	51	15 0	2816	21 27
4	Empty				
5	Online	39	8 0	2048	6 23
6	Online	49	15 0	2816	21 27
7	Empty				

**show chassis fpc detail (T4000 Router)**

```
user@host> show chassis fpc detail
```

Slot 0 information:	
State	Online
Temperature	48 degrees C / 118 degrees F
Total CPU DRAM	2816 MB
Total SRAM	1554 MB
Total SDRAM	10752 MB
Start time	2012-02-09 22:56:25 PST
Uptime	2 hours, 40 minutes, 52 seconds
Slot 3 information:	
State	Online
Temperature	51 degrees C / 123 degrees F



```

Total CPU DRAM          2816 MB
Total SRAM              1554 MB
Total SDRAM             10752 MB
Start time              2012-02-09 22:56:22 PST
Uptime                  2 hours, 40 minutes, 55 seconds
Slot 5 information:
State                   Online
Temperature             39 degrees C / 102 degrees F
Total CPU DRAM          2048 MB
Total SRAM              128 MB
Total SDRAM             2560 MB
Start time              2012-02-09 22:51:27 PST
Uptime                  2 hours, 45 minutes, 50 seconds
Slot 6 information:
State                   Online
Temperature             49 degrees C / 120 degrees F
Total CPU DRAM          2816 MB
Total SRAM              1554 MB
Total SDRAM             10752 MB
Start time              2012-02-09 22:56:29 PST
Uptime                  2 hours, 40 minutes, 48 seconds

```

#### show chassis fpc pic-status (T4000 Router)

```

user@host> show chassis fpc pic-status

Slot 0  Online      FPC Type 5-3D
PIC 0   Online      12x10GE (LAN/WAN) SFPP
PIC 1   Online      12x10GE (LAN/WAN) SFPP
Slot 3  Online      FPC Type 5-3D
PIC 0   Online      1x100GE
PIC 1   Online      12x10GE (LAN/WAN) SFPP
Slot 5  Online      FPC Type 4-ES
PIC 0   Online      100GE
PIC 1   Online      100GE CFP
Slot 6  Online      FPC Type 5-3D
PIC 0   Online      12x10GE (LAN/WAN) SFPP
PIC 1   Online      12x10GE (LAN/WAN) SFPP

```

#### show chassis fpc (QFX Series and OCX Series)

```

user@switch> show chassis fpc

Temp CPU Utilization (%) Memory      Utilization (%)
Slot State      (C) Total Interrupt  DRAM (MB) Heap      Buffer
0  Online        26      2          0      2820      0       49

```

#### show chassis fpc detail (QFX3500 Switches)

```

user@switch> show chassis fpc detail

Slot 0 information:
State                   Online
Temperature             28 degrees C / 82 degrees F
Total CPU DRAM          2820 MB
Total SRAM              0 MB
Total SDRAM             0 MB
Start time              2010-09-20 01:34:13 PDT
Uptime                  3 days, 3 hours, 31 minutes, 48 seconds

```



**show chassis fpc pic-status (QFX3500 Switches)**

```
user@switch> show chassis fpc pic-status
```

```
Slot 0   Online      QFX 48x10G 4x40G Switch
  PIC 0   Online      48x 10G-SFP+
  PIC 1   Online      15x 10G-SFP+
```

**show chassis fpc interconnect-device (QFabric System)**

```
user@switch> show chassis fpc interconnect-device interconnect1
```

```
FPC status:
```

Slot	State	Temp (C)
0	Online	0
1	Online	0
2	Online	0
3	Online	0
4	Online	0
5	Online	0
6	Online	0
7	Online	0
8	Online	0
9	Online	0
10	Online	0
11	Online	0
12	Online	0
13	Online	0
14	Online	0
15	Online	0

**show chassis fpc interconnect-device (QFabric System)**

```
user@switch> show chassis fpc interconnect-device interconnect1 3
```

```
FPC status:
```

Slot	State	Temp (C)
3	Online	0

**show chassis fpc interconnect-device detail (QFabric System)**

```
user@switch> show chassis fpc interconnect-device interconnect1 3 detail
```

```
Slot 3 information:
```

State	Online
Temperature	0 degrees C / 32 degrees F
Start time	2011-08-18 10:45:04 PDT
Uptime	1 minute, 49 seconds

**show chassis fpc pic-status interconnect-device (QFabric System)**

```
user@switch> show chassis fpc pic-status interconnect-device interconnect1
```

```
Slot 0   Online      QFX 16-port QSFP+ Front Card
  PIC 0   Online      16x 40G-QSFP+
  PIC 1   Online      16x 40G-GE
Slot 1   Online      QFX 16-port QSFP+ Front Card
```



```

PIC 0 Online      16x 40G-QSFP+
PIC 1 Online      16x 40G-GE
Slot 2 Online     QFX 16-port QSFP+ Front Card
PIC 0 Online      16x 40G-QSFP+
PIC 1 Online      16x 40G-GE
Slot 3 Online     QFX 16-port QSFP+ Front Card
PIC 0 Online      16x 40G-QSFP+
PIC 1 Online      16x 40G-GE
Slot 4 Online     QFX 16-port QSFP+ Front Card
PIC 0 Online      16x 40G-QSFP+
PIC 1 Online      16x 40G-GE
Slot 5 Online     QFX 16-port QSFP+ Front Card
PIC 0 Online      16x 40G-QSFP+
PIC 1 Online      16x 40G-GE
Slot 6 Online     QFX 16-port QSFP+ Front Card
PIC 0 Online      16x 40G-QSFP+
PIC 1 Online      16x 40G-GE
Slot 7 Online     QFX 16-port QSFP+ Front Card
PIC 0 Online      16x 40G-QSFP+
PIC 1 Online      16x 40G-GE
Slot 8 Online     QFX Fabric Rear Card
PIC 0 Online      16x 40G-GE
Slot 9 Online     QFX Fabric Rear Card
PIC 0 Online      16x 40G-GE
Slot 10 Online    QFX Fabric Rear Card
PIC 0 Online      16x 40G-GE
Slot 11 Online    QFX Fabric Rear Card
PIC 0 Online      16x 40G-GE
Slot 12 Online    QFX Fabric Rear Card
PIC 0 Online      16x 40G-GE
Slot 13 Online    QFX Fabric Rear Card
PIC 0 Online      16x 40G-GE
Slot 14 Online    QFX Fabric Rear Card
PIC 0 Online      16x 40G-GE
Slot 15 Online    QFX Fabric Rear Card
PIC 0 Online      16x 40G-GE

```

### show chassis fpc pic-status node-device (QFabric System)

```

user@switch> show chassis fpc pic-status node-device node1

Slot node1 Online      QFX 48x10G 4x40G Switch
PIC 0 Online      48x 10G-SFP+
PIC 1 Online      4x 40G-QSFP+

```

### show chassis fpc (PTX5000 Packet Transport Router)

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory DRAM (MB)	Utilization (%)
			Total Interrupt	Heap	Buffer
0	Empty				
1	Empty				
2	Online	50	6	0	2816 5 27
3	Empty				
4	Empty				
5	Online	48	9	0	2816 5 27



6	Empty						
7	Online	49	8	0	2816	5	27

### show chassis fpc detail (PTX5000 Packet Transport Router)

```
user@host> show chassis fpc detail
```

#### Slot 2 information:

State	Online
Temperature	35 degrees C / 95 degrees F (PMB)
Temperature	35 degrees C / 95 degrees F (Intake)
Temperature	50 degrees C / 122 degrees F (Exhaust A)
Temperature	54 degrees C / 129 degrees F (Exhaust B)
Temperature	54 degrees C / 129 degrees F (TL0)
Temperature	52 degrees C / 125 degrees F (TQ0)
Temperature	61 degrees C / 141 degrees F (TL1)
Temperature	58 degrees C / 136 degrees F (TQ1)
Temperature	57 degrees C / 134 degrees F (TL2)
Temperature	58 degrees C / 136 degrees F (TQ2)
Temperature	62 degrees C / 143 degrees F (TL3)
Temperature	61 degrees C / 141 degrees F (TQ3)
Total CPU DRAM	2816 MB
Total SRAM	0 MB
Total SDRAM	0 MB
Start time	2012-01-12 12:05:42 PST
Uptime	3 hours, 14 minutes, 7 seconds

#### Slot 5 information:

State	Online
Temperature	35 degrees C / 95 degrees F (PMB)
Temperature	34 degrees C / 93 degrees F (Intake)
Temperature	48 degrees C / 118 degrees F (Exhaust A)
Temperature	53 degrees C / 127 degrees F (Exhaust B)
Temperature	54 degrees C / 129 degrees F (TL0)
Temperature	52 degrees C / 125 degrees F (TQ0)
Temperature	69 degrees C / 156 degrees F (TL1)
Temperature	56 degrees C / 132 degrees F (TQ1)
Temperature	54 degrees C / 129 degrees F (TL2)
Temperature	56 degrees C / 132 degrees F (TQ2)
Temperature	59 degrees C / 138 degrees F (TL3)
Temperature	60 degrees C / 140 degrees F (TQ3)
Total CPU DRAM	2816 MB
Total SRAM	0 MB
Total SDRAM	0 MB
Start time	2012-01-12 12:05:43 PST
Uptime	3 hours, 14 minutes, 6 seconds

#### Slot 7 information:

State	Online
Temperature	35 degrees C / 95 degrees F (PMB)
Temperature	33 degrees C / 91 degrees F (Intake)
Temperature	50 degrees C / 122 degrees F (Exhaust A)
Temperature	55 degrees C / 131 degrees F (Exhaust B)
Temperature	56 degrees C / 132 degrees F (TL0)
Temperature	56 degrees C / 132 degrees F (TQ0)
Temperature	61 degrees C / 141 degrees F (TL1)
Temperature	57 degrees C / 134 degrees F (TQ1)
Temperature	55 degrees C / 131 degrees F (TL2)
Temperature	59 degrees C / 138 degrees F (TQ2)
Temperature	62 degrees C / 143 degrees F (TL3)
Temperature	62 degrees C / 143 degrees F (TQ3)
Total CPU DRAM	2816 MB



```

Total SRAM                0 MB
Total SDRAM                0 MB
Start time                2012-01-12 12:05:44 PST
Uptime                    3 hours, 14 minutes, 5 seconds

```

### show chassis fpc pic-status (PTX5000 Packet Transport Router)

```
user@host> show chassis fpc pic-status
```

```

Slot 2  Online      FPC
PIC 0   Online      24x 10GE(LAN) SFP+
PIC 1   Online      24x 10GE(LAN) SFP+
Slot 5  Online      FPC
PIC 0   Online      24x 10GE(LAN) SFP+
PIC 1   Online      2x 40GE CFP
Slot 7  Online      FPC
PIC 0   Online      24x 10GE(LAN) SFP+
PIC 1   Online      2x 40GE CFP

```

### show chassis fpc (PTX10008 Router)

```
user@host> show chassis fpc
```

Utilization (%)	Temp	CPU Utilization (%)		CPU Utilization (%)			Memory
Slot State	(C)	Total	Interrupt	1min	5min	15min	DRAM (MB)
Heap Buffer							
0 Online	38	26	2	26	26	26	1953
20 32							
1 Empty							
2 Empty							
3 Empty							
4 Empty							
5 Online	67	26	2	26	26	26	1953
25 32							
6 Online	52	26	2	26	26	26	1953
25 32							
7 Empty							

### show chassis fpc detail (PTX10008 Router)

```
user@host> show chassis fpc detail
```

```

Slot 6 information:
State                Online
Total CPU DRAM       8192 MB
Temperature           42 degrees C / 107 degrees F
Start time           2018-09-17 02:42:16 PDT
Uptime               53 minutes, 40 seconds
Max power consumption 675 Watts
Slot 7 information:
State                Online
Total CPU DRAM       8192 MB
Temperature           51 degrees C / 123 degrees F
Start time           2018-09-17 02:42:26 PDT
Uptime               53 minutes, 30 seconds
Max power consumption 1150 Watts

```



## show chassis fpc (PTX10016 Router)

user@host&gt; show chassis fpc

Utilization (%)		Temp	CPU Utilization (%)		CPU Utilization (%)			Memory
Slot	State	(C)	Total	Interrupt	1min	5min	15min	DRAM (MB)
Heap	Buffer							
0	Empty							
1	Online	36	27	2	27	27	27	1953
22								
2	Empty							
3	Online	36	27	2	27	27	27	1953
22								
4	Empty							
5	Empty							
6	Online	35	27	2	27	27	27	1953
22								
7	Empty							
8	Online	34	27	2	27	27	27	1953
22								
9	Online	46	24	2	24	24	24	1953
26								
10	Empty							
11	Empty							
12	Empty							
13	Empty							
14	Empty							
15	Empty							

## show chassis fpc detail (PTX10016 Router)

user@host&gt; show chassis fpc detail

Slot 0 information:	
State	Online
Total CPU DRAM	8192 MB
Temperature	44 degrees C / 111 degrees F
Start time	2018-09-10 07:01:09 PDT
Uptime	6 days, 23 hours, 17 minutes, 9 seconds
Max power consumption	1150 Watts
Slot 4 information:	
State	Online
Total CPU DRAM	8192 MB
Temperature	40 degrees C / 104 degrees F
Start time	2018-09-10 07:01:17 PDT
Uptime	6 days, 23 hours, 17 minutes, 1 second
Max power consumption	1150 Watts
Slot 6 information:	
State	Online
Total CPU DRAM	8192 MB
Temperature	42 degrees C / 107 degrees F
Start time	2018-09-10 07:01:27 PDT
Uptime	6 days, 23 hours, 16 minutes, 51 seconds
Max power consumption	1150 Watts
Slot 7 information:	
State	Online
Total CPU DRAM	8192 MB



```

Temperature                41 degrees C / 105 degrees F
Start time                  2018-09-10 07:01:32 PDT
Uptime                      6 days, 23 hours, 16 minutes, 46 seconds
Max power consumption       1150 Watts
Slot 9 information:
State                       Online
Total CPU DRAM              16384 MB
Temperature                 42 degrees C / 107 degrees F
Start time                  2018-09-10 07:01:45 PDT
Uptime                      6 days, 23 hours, 16 minutes, 33 seconds
Max power consumption       1150 Watts
Slot 10 information:
State                       Online
Total CPU DRAM              8192 MB
Temperature                 41 degrees C / 105 degrees F
Start time                  2018-09-10 07:01:46 PDT
Uptime                      6 days, 23 hours, 16 minutes, 32 seconds
Max power consumption       1150 Watts
Slot 11 information:
State                       Online
Total CPU DRAM              16384 MB
Temperature                 40 degrees C / 104 degrees F
Start time                  2018-09-10 07:01:55 PDT
Uptime                      6 days, 23 hours, 16 minutes, 23 seconds
Max power consumption       1150 Watts
Slot 14 information:
State                       Online
Total CPU DRAM              8192 MB
Temperature                 42 degrees C / 107 degrees F
Start time                  2018-09-10 07:01:54 PDT
Uptime                      6 days, 23 hours, 16 minutes, 24 seconds
Max power consumption       1150 Watts
Slot 15 information:
State                       Online
Total CPU DRAM              16384 MB
Temperature                 41 degrees C / 105 degrees F
Start time                  2018-09-10 07:02:03 PDT
Uptime                      6 days, 23 hours, 16 minutes, 15 seconds
Max power consumption       1150 Watts

```

#### show chassis fpc (ACX2000 Universal Metro Router)

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)		Memory DRAM (MB)	Utilization (%)	
			Total	Interrupt		Heap	Buffer
0	Online	61	17	6	512	21	37

#### show chassis fpc 0 (ACX2000 Universal Metro Router)

```
user@host> show chassis fpc 0
```

Slot	State	Temp (C)	CPU Utilization (%)		Memory DRAM (MB)	Utilization (%)	
			Total	Interrupt		Heap	Buffer
0	Online	61	17	6	512	21	37

#### show chassis fpc detail (ACX2000 Universal Metro Router)

```
user@host> show chassis fpc detail
```



```
Slot 0 information:
State                Online
Temperature           61 degrees C / 141 degrees F
Total CPU DRAM       512 MB
Start time            2012-05-29 02:52:06 PDT
Uptime                27 minutes, 17 seconds
```

### show chassis fpc pic-status (ACX2000 Universal Metro Router)

```
user@host> show chassis fpc pic-status
```

```
Slot 0  Online
PIC 0  Online      16x CHE1T1, RJ48
PIC 1  Online      8x 1GE(LAN) RJ45
PIC 2  Online      2x 1GE(LAN) SFP
PIC 3  Online      2x 10GE(LAN) SFP+
```

### show chassis FPC 1 (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis fpc 1
```

Slot	State	Temp (C)	CPU Utilization (%)	Memory	Utilization (%)
			Total Interrupt	DRAM (MB)	Heap Buffer
1	Online	34	5 0	3072	5 13

### show chassis FPC 1 detail (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis fpc 1 detail
```

```
Slot 1 information:
State                Online
Temperature           34
Total CPU DRAM       3072 MB
Total RLDRAM         259 MB
Total DDR DRAM       4864 MB
Start time:          2012-06-19 10:51:43 PDT
Uptime:              16 minutes, 48 seconds
Max Power Consumption 550 Watts
```

## Sample Output

### show chassis fpc (Node Slicing)

```
user@router> show chassis fpc
```

Utilization (%)	Temp	CPU Utilization (%)	CPU Utilization (%)	Memory
Slot State	(C)	Total	Interrupt	1min 5min 15min DRAM (MB)
Heap Buffer	GNF			
0 Online	45	12	0	12 12 12 3584
6 25	3			
1 Online	57	22	0	20 20 20 3136
16 22	2			
2 Online	50	19	0	17 17 16 3584
6 25	3			
3 Online	28	10	0	11 11 11 2048



10		20	6						
4	Online		42	20	0	20	19	19	3584
8		25	6						
5	Online		58	22	0	21	20	20	3136
16		22	4						
6	Online		49	17	0	15	16	16	3136
13		20	1						
7	Online		44	11	0	10	10	10	3584
6		25	5						
8	Online		40	19	0	18	18	18	3584
8		25	5						
9	Online		44	19	0	20	20	20	3584
8		25	5						

## Sample Output

### show chassis fpc pic-status (Node Slicing)

```

user@router> show chassis fpc pic-status

Slot 0  Online      MPC5E 3D 24XGE+6XLGE      GN1 3
PIC 0   Online      12X10GE SFPP OTN
PIC 1   Offline     12X10GE SFPP OTN
PIC 2   Offline     3X40GE QSFPP
PIC 3   Online      3X40GE QSFPP
Slot 1  Online      MPC9E 3D                  GN1 2
PIC 1   Online      MRATE-12xQSFPP-XGE-XLGE-CGE
Slot 2  Online      MPC5E 3D Q 2CGE+4XGE      GN1 3
PIC 0   Online      2X10GE SFPP OTN
PIC 1   Online      1X100GE CFP2 OTN
PIC 2   Online      2X10GE SFPP OTN
PIC 3   Online      1X100GE CFP2 OTN
Slot 3  Online      MPCE Type 2 3D EQ         GN1 6
Slot 4  Online      MPC6E 3D                  GN1 6
PIC 0   Online      24X10GE SFPP
PIC 1   Online      2X100GE CFP2 OTN
Slot 5  Online      MPC9E 3D                  GN1 4
PIC 0   Online      MRATE-12xQSFPP-XGE-XLGE-CGE
Slot 6  Online      MPC7E 3D MRATE-12xQSFPP-XGE-XLGE-CGE GN1 1
PIC 0   Online      MRATE-6xQSFPP-XGE-XLGE-CGE
PIC 1   Online      MRATE-6xQSFPP-XGE-XLGE-CGE
Slot 7  Online      MPC5E 3D 2CGE+4XGE        GN1 5
PIC 0   Online      2X10GE SFPP OTN
PIC 1   Online      1X100GE CFP2 OTN
PIC 2   Online      2X10GE SFPP OTN
PIC 3   Online      1X100GE CFP2 OTN
Slot 8  Online      MPC6E 3D                  GN1 5
PIC 0   Online      24X10GE SFPP OTN
Slot 9  Online      MPC6E 3D                  GN1 5
PIC 0   Online      24X10GE SFPP
PIC 1   Online      4X100GE CXP

```

### show chassis fpc pic-status (MX960 Router with MPC10E-15C-MRATE Line Card)

```

user@router> show chassis fpc pic-status

```



```

Slot 0   Online      MS-MPC
PIC 0   Online      MS-MPC-PIC
PIC 1   Online      MS-MPC-PIC
PIC 2   Online      MS-MPC-PIC
PIC 3   Online      MS-MPC-PIC
Slot 1   Online      MPC7E 3D MRATE-12xQSFP-XGE-XLGE-CGE
PIC 0   Online      MRATE-6xQSFP-XGE-XLGE-CGE
PIC 1   Online      MRATE-6xQSFP-XGE-XLGE-CGE
Slot 3   Online      MPC4E 3D 2CGE+8XGE
PIC 0   Online      4x10GE SFPP
PIC 1   Online      1X100GE CFP
PIC 2   Online      4x10GE SFPP
PIC 3   Online      1X100GE CFP
Slot 4   Online      MPC5E 3D Q 24XGE+6XLGE
PIC 0   Online      12X10GE SFPP OTN
PIC 1   Online      12X10GE SFPP OTN
PIC 2   Offline     3X40GE QSFPP
PIC 3   Offline     3X40GE QSFPP
Slot 7   Online      MPC10E 3D MRATE-15xQSFP
PIC 0   Online      MRATE-5xQSFP
PIC 1   Online      MRATE-5xQSFP
PIC 2   Online      MRATE-5xQSFP
Slot 8   Online      MPCE Type 3 3D
PIC 0   Online      1X100GE CFP
PIC 2   Online      1X100GE CFP
Slot 10  Online      MPC3E NG HQoS
PIC 0   Online      1x 10GE XFP
PIC 1   Online      1x 10GE XFP

```

#### show chassis fpc 7 detail (MX960 Router MPC10E-15C-MRATE Line Card)

```
user@router> show chassis fpc 7 detail
```

```

Slot 7 information:
  State                               Online
  Temperature                         34 degrees C / 93 degrees F
  Total CPU DRAM                      32768 MB
  Total HBM                          24576 MB
  FIPS Capable                       False
  FIPS Mode                          False
  Start time                         2019-03-03 02:23:44 PST
  Uptime                             3 hours, 45 minutes, 59 seconds
  Max power consumption              785 Watts

PFE Information:
  PFE  Power  ON/OFF  Bandwidth
  0     ON      500G
  1     ON      500G
  2     ON      500G

```



## show chassis fabric fpcs

<b>List of Syntax</b>	<a href="#">Syntax on page 502</a> <a href="#">Syntax (MX Series Routers) on page 502</a> <a href="#">Syntax (MX2010, MX2020, MX10003, and MX2008 3D Universal Edge Routers) on page 502</a> <a href="#">Syntax (T4000 Core Router) on page 502</a> <a href="#">Syntax (PTX Series Packet Transport Routers) on page 502</a> <a href="#">Syntax (TX Matrix Plus Router) on page 502</a> <a href="#">Syntax (QFX Series Switches) on page 502</a>
<b>Syntax</b>	show chassis fabric fpcs <lcc <i>number</i> >
<b>Syntax (MX Series Routers)</b>	show chassis fabric fpcs <extended> <all-members> <local> <member <i>member-id</i> >
<b>Syntax (MX2010, MX2020, MX10003, and MX2008 3D Universal Edge Routers)</b>	show chassis fabric fpcs
<b>Syntax (T4000 Core Router)</b>	show chassis fabric fpcs
<b>Syntax (PTX Series Packet Transport Routers)</b>	show chassis fabric fpcs <slot <i>fpc-slot</i> >
<b>Syntax (TX Matrix Plus Router)</b>	show chassis fabric fpcs <lcc <i>number</i> >
<b>Syntax (QFX Series Switches)</b>	show chassis fabric fpcs <slot <i>fpc-slot</i> >
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.4 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 15.1X53-D30 for QFX Series switches.</p>



**extended** option introduced in JunosOS Release 16.1 for MX2020 and MX2010 Routers.  
 Command introduced in Junos OS Release 17.2 for MX2008 3D Universal Edge Routers.  
 Command introduced in Junos OS Release 17.2 for PTX10008 Routers.  
 Command introduced in Junos OS Release 17.3 for MX10003 3D Universal Edge Routers.

<b>Description</b>	Display the state of the electrical switch fabric links between the Flexible PIC Concentrators (FPCs) and the Switch Interface Boards (SIBs).
<b>Options</b>	<p><b>none</b>—Display the switch fabric link state. On a TX Matrix router, display the switching fabric link states for the FPCs in all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display the switching fabric link states for the FPCs in all routers connected to the TX Matrix Plus router.</p> <p><b>extended</b>—(MX2020 and MX2010 Routers with SFB2) (Optional) Display the fabric link state for all 24 fabric planes.</p> <p><b>all-members</b>—(MX Series routers only) (Optional) Display the switching fabric link states for the FPCs in all members of the Virtual Chassis configuration.</p> <p><b>lcc <i>number</i></b>—(TX Matrix router and TX Matrix Plus router only) (Optional) On a TX Matrix router, display the switch fabric link state for the FPCs in the specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display the switch fabric link state for the FPCs in the specified router (line-card chassis) that is connected to the TX Matrix Plus router. Replace <b><i>number</i></b> with a following value depending on the LCC configurations:</p> <ul style="list-style-type: none"> <li>• From <b>0</b> through <b>3</b> on a T640 router on the routing matrix with TX Matirx routers.</li> <li>• From <b>0</b> through <b>3</b> on a T1600 router on the routing matrix with TX Matirx Plus routers.</li> <li>• From <b>0</b> through <b>7</b> on a T1600 router in a routing matrix with TX Matrix Plus router with 3D SIBs.</li> <li>• <b>0, 2, 4, 6</b> on a T4000 router in a routing matrix with TX Matrix Plus router with 3D SIBs.</li> </ul> <p><b>local</b>—(MX Series routers only) (Optional) Display the switching fabric link states for the FPCs in the local Virtual Chassis member.</p> <p><b>member <i>member-id</i></b>—(MX Series routers only) (Optional) Display the switching fabric link states for the FPCs in the specified member of the Virtual Chassis configuration. Replace <b><i>member-id</i></b> with a value of 0 or 1.</p> <p><b>slot <i>fpc-slot</i></b>—(PTX Series Packet Transport Routers and QFX Series switches only) (Optional) Display the fabric state of the specified FPC slot. If no value is provided, display the status of all FPCs.</p>

**Required Privilege Level** view



- Related Documentation**
- [request chassis fabric fpc](#)
  - [show chassis fpc on page 448](#)
  - [Displaying Information About DPCs or FPCs in an MX Series Router](#)

- List of Sample Output**
- [show chassis fabric fpcs \(M320 Router\) on page 505](#)
  - [show chassis fabric fpcs \(MX240 Router\) on page 506](#)
  - [show chassis fabric fpcs \(MX480 Router\) on page 506](#)
  - [show chassis fabric fpcs \(MX960 Router\) on page 508](#)
  - [show chassis fabric fpcs \(MX240 with AS MLC Modular Carrier Card\) on page 509](#)
  - [show chassis fabric fpcs \(MX480 with AS MLC Modular Carrier Card\) on page 509](#)
  - [show chassis fabric fpcs \(MX480 Router with MPC4E\) on page 510](#)
  - [show chassis fabric fpcs \(MX960 with AS MLC Modular Carrier Card on page 511](#)
  - [show chassis fabric fpcs \(MX2010 Router\) on page 513](#)
  - [show chassis fabric fpcs \(MX2020 Router\) on page 516](#)
  - [show chassis fabric fpcs \(MX2020 Router with MPC4E\) on page 519](#)
  - [show chassis fabric fpcs \(MX2020 Router with SFB2\) on page 521](#)
  - [show chassis fabric fpcs \(MX2008 Router\) on page 525](#)
  - [show chassis fabric fpcs \(MX10003 Router\) on page 527](#)
  - [show chassis fabric fpcs \(T320 Router\) on page 528](#)
  - [show chassis fabric fpcs \(T640 Router\) on page 528](#)
  - [show chassis fabric fpcs \(TX Matrix Router\) on page 529](#)
  - [show chassis fabric fpcs \(TX Matrix Router with 3D SIBs\) on page 530](#)
  - [show chassis fabric fpcs lcc \(TX Matrix Router with 3D SIBs\) on page 533](#)
  - [show chassis fabric fpcs \(T1600 Router\) on page 534](#)
  - [show chassis fabric fpcs \(T4000 Core Router\) on page 536](#)
  - [show chassis fabric fpcs \(TX Matrix Plus Router\) on page 537](#)
  - [show chassis fabric fpcs lcc \(TX Matrix Plus Router\) on page 544](#)
  - [show chassis fabric fpcs \(EX8200 Switch\) on page 545](#)
  - [show chassis fabric fpcs \(PTX3000 Router\) on page 546](#)
  - [show chassis fabric fpcs \(Junos OS Evolved\) on page 547](#)
  - [show chassis fabric fpcs \(PTX10008 Router\) on page 547](#)
  - [show chassis fabric fpcs \(PTX10016 Router\) on page 549](#)
  - [show chassis fabric fpcs \(QFX10008 Switch\) on page 551](#)

- Output Fields**
- [Table 19 on page 505](#) lists the output fields for the **show chassis fabric fpcs** command. Output fields are listed in the approximate order in which they appear.



Table 19: show chassis fabric fpcs Output Fields

Field Name	Field Description
<b>Fabric management FPC state</b>	<p>Switching fabric link (link from SIB to FPC) state for each FPC:</p> <ul style="list-style-type: none"> <li>• <b>Unused</b>—FPC is not present. (On MX240 and MX480 routers with AS- MLC modular carrier card or MPC4E only) the fabric plane from the pair that share physical links (1 and 5, and 3 and 7) is inactive.</li> <li>• <b>Destination error on PFEs list of PFE numbers</b>—Destination errors to the listed Packet Forwarding Engines. Indicates that the link is not carrying traffic to the listed Packet Forwarding Engines.  <b>NOTE:</b> In Junos OS Release 9.6 and later, the list of Packet Forwarding Engines with destination errors is displayed in the output.  In Junos OS Releases before 9.6, the output only indicates that there are destination errors. However, the list of Packet Forwarding Engines with destination errors is not displayed.</li> <li>• <b>Links ok</b>—Link between the spare SIB and FPC is eligible to carry traffic.</li> <li>• <b>Link error</b>—Link between the SIB and FPC has CRC errors. However, the link is still eligible to carry traffic.</li> <li>• <b>Plane disabled</b>—Fabric plane has been disabled for the following reasons: <ul style="list-style-type: none"> <li>• Destination errors have exceeded the thresholds.</li> <li>• Run-time link errors have exceeded the thresholds.</li> <li>• Initialization time link errors detected, and link training was unsuccessful.</li> <li>• <b>Plane Disabled, Links Error</b> (PTX Series Packet Transport Routers and QFX Series switches only)—The plane is disabled because of link errors detected at the FPC RX.</li> </ul> </li> <li>• <b>Plane Disabled, Links Down</b> (PTX Series Packet Transport Routers and QFX Series switches only)—The plane is disabled because of link errors detected at the SIB RX.</li> <li>• <b>Plane enabled</b>—Link between the active SIB and FPC is eligible to carry traffic.  <b>NOTE:</b> On the Enhanced MX SCB with MPC, a maximum of 4 planes are operational and running. On all the other SCBs with MPC, all the planes are operational and running.</li> <li>• <b>Plane Enabled, Links OK</b> (PTX Series Packet Transport Routers and QFX Series switches only)—The FPC CCL RX link is eligible to carry traffic.</li> <li>• <b>Plane Enabled, Links OK</b> (TX Matrix and TX Matrix Plus routers only)—The FPC HSL RX link is eligible to carry traffic.</li> </ul>

## Sample Output

### show chassis fabric fpcs (M320 Router)

```
user@host> show chassis fabric fpcs
```



```
Fabric management FPC state:
FPC #2
  PFE #1
    SIB #0
      Plane enabled
    SIB #1
      Plane enabled
    SIB #2
      Plane enabled
    SIB #3
      Plane enabled
```

### show chassis fabric fpcs (MX240 Router)

```
user@host> show chassis fabric fpcs
```

```
Fabric management FPC state:
FPC 2
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
    Plane 6: Links ok
    Plane 7: Links ok
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
    Plane 6: Links ok
    Plane 7: Links ok
  PFE #2
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
    Plane 6: Links ok
    Plane 7: Links ok
  PFE #3
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
    Plane 6: Links ok
    Plane 7: Links ok
```

### show chassis fabric fpcs (MX480 Router)

```
user@host> show chassis fabric fpcs
```



```
FPC 0
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
    Plane 6: Links ok
    Plane 7: Links ok
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
    Plane 6: Links ok
    Plane 7: Links ok
  PFE #2
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
    Plane 6: Links ok
    Plane 7: Links ok
  PFE #3
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
    Plane 6: Links ok
    Plane 7: Links ok
FPC 1
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
```



**show chassis fabric fpcs (MX960 Router)**

```
user@host> show chassis fabric fpcs
```

```
FPC 0
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
  PFE #2
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
  PFE #3
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
FPC 1
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
FPC 2
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
```



```

        Plane 4: Links ok
        Plane 5: Links ok
    PFE #2
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Links ok
    ...

```

#### show chassis fabric fpcs (MX240 with AS MLC Modular Carrier Card)

In the following output, FPC 1 is the AS MLC modular carrier card (AS MCC).

```
user@host>show chassis fabric fpcs
```

```

FPC 1
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Unused
    Plane 6: Plane enabled
    Plane 7: Unused
FPC 2
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled

```

#### show chassis fabric fpcs (MX480 with AS MLC Modular Carrier Card)

In the following output, FPC 5 is the AS MLC modular carrier card (AS MCC).

```
user@host>show chassis fabric fpcs
```

```

FPC 2
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
FPC 4
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled

```



```

Plane 4: Links ok
Plane 5: Links ok
Plane 6: Links ok
Plane 7: Links ok
PFE #2
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Links ok
Plane 5: Links ok
Plane 6: Links ok
Plane 7: Links ok
FPC 5
PFE #0
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Unused
Plane 6: Plane enabled
Plane 7: Unused

```

#### show chassis fabric fpcs (MX480 Router with MPC4E)

In the following output, **FPC4** is the MPC4E (MPC4E-3D-32XGE-SFPP) card.

```
user@host > show chassis fabric fpcs
```

Fabric management FPC state:

```

FPC 0
PFE #0
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Links ok
Plane 6: Plane enabled
Plane 7: Links ok
PFE #1
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Links ok
Plane 6: Plane enabled
Plane 7: Links ok
FPC 1
PFE #0
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Links ok
Plane 6: Plane enabled
Plane 7: Links ok

```



```

PFE #1
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Links ok
Plane 6: Plane enabled
Plane 7: Links ok
PFE #2
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Links ok
Plane 6: Plane enabled
Plane 7: Links ok
PFE #3
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Links ok
Plane 6: Plane enabled

FPC 3
PFE #0
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Links ok
Plane 6: Plane enabled
Plane 7: Links ok
FPC 4
PFE #0
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Unused
Plane 6: Plane enabled
Plane 7: Unused
PFE #1
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Unused
Plane 6: Plane enabled
Plane 7: Unused

```

### show chassis fabric fpcs (MX960 with AS MLC Modular Carrier Card)

In the following output, FPC 5 is the AS MLC modular carrier card (AS MCC).



```
user@host>show chassis fabric fpcs
```

```
Fabric management FPC state:
```

```
FPC 0
```

```
  PFE #0
```

```
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
```

```
  PFE #1
```

```
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
```

```
FPC 1
```

```
  PFE #0
```

```
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
```

```
FPC 4
```

```
  PFE #0
```

```
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
```

```
  PFE #1
```

```
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
```

```
  PFE #2
```

```
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
```

```
  PFE #3
```

```
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
```

```
FPC 5
```

```
  PFE #0
```

```
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
```



```

        Plane 4: Links ok
        Plane 5: Links ok
FPC 8
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
  PFE #2
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
  PFE #3
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok

```

### show chassis fabric fpcs (MX2010 Router)

```

user@host> show chassis fabric fpcs

Fabric management FPC state:
FPC 0
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
FPC 1
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled

```



```
Plane 2: Plane enabled
Plane 3: Plane disabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
FPC 2
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
FPC 3
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #2
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #3
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
```



```
Plane 6: Plane enabled
Plane 7: Plane enabled
FPC 4
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
FPC 5
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
FPC 6
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #2
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #3
```



```

    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
FPC 7
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
FPC 8
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
FPC 9
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane disabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled

```

### show chassis fabric fpcs (MX2020 Router)

```
user@host> show chassis fabric fpcs
```



```
Fabric management FPC state:
FPC 0
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #2
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #3
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
FPC 1
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
  PFE #2
    Plane 0: Plane enabled
    Plane 1: Plane enabled
```



```
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
PFE #3
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
FPC 2
PFE #0
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
PFE #1
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
PFE #2
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
PFE #3
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
FPC 3
PFE #0
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
```



```

        Plane 6: Plane enabled
        Plane 7: Plane enabled
    PFE #1
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Plane enabled
        Plane 5: Plane enabled
        Plane 6: Plane enabled
        Plane 7: Plane enabled
    PFE #2
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Plane enabled
        Plane 5: Plane enabled
        Plane 6: Plane enabled
        Plane 7: Plane enabled
    PFE #3
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Plane enabled
        Plane 5: Plane enabled
        Plane 6: Plane enabled
        Plane 7: Plane enabled
FPC 4
...

```

### show chassis fabric fpcs (MX2020 Router with MPC4E)

```
user@host > show chassis fabric fpcs
```

```

Fabric management FPC state:
FPC 0
    PFE #0
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Plane enabled
        Plane 5: Plane enabled
        Plane 6: Plane enabled
        Plane 7: Plane enabled
    PFE #1
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Plane enabled
        Plane 5: Plane enabled
        Plane 6: Plane enabled
        Plane 7: Plane enabled
FPC 9
    PFE #0
        Plane 0: Plane enabled
        Plane 1: Plane enabled

```



```
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
PFE #1
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
FPC 10
PFE #0
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
FPC 14
PFE #0
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
PFE #1
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
FPC 19
PFE #0
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
PFE #1
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
```



```

Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
PFE #2
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
PFE #3
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled

```

### show chassis fabric fpcs (MX2020 Router with SFB2)

```
user@host> show chassis fabric fpcs extended
```

```
Fabric management FPC state:
```

```
FPC 0
```

```
PFE #0
```

```

Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Destination error
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
Plane 8: Destination error
Plane 9: Destination error
Plane 10: Destination error
Plane 11: Destination error
Plane 12: Plane enabled
Plane 13: Plane enabled
Plane 14: Plane enabled
Plane 15: Plane enabled
Plane 16: Plane enabled
Plane 17: Plane enabled
Plane 18: Plane disabled
Plane 19: Plane disabled
Plane 20: Plane disabled
Plane 21: Destination error
Plane 22: Plane enabled
Plane 23: Plane enabled

```

```
FPC 1
```

```
PFE #0
```

```

Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled

```



```
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
Plane 8: Plane enabled
Plane 9: Plane enabled
Plane 10: Plane enabled
Plane 11: Plane enabled
Plane 12: Plane enabled
Plane 13: Plane enabled
Plane 14: Plane enabled
Plane 15: Plane enabled
Plane 16: Plane enabled
Plane 17: Plane enabled
Plane 18: Plane disabled
Plane 19: Plane disabled
Plane 20: Plane disabled
Plane 21: Plane enabled
Plane 22: Plane enabled
Plane 23: Plane enabled
PFE #1
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
Plane 8: Plane enabled
Plane 9: Plane enabled
Plane 10: Plane enabled
Plane 11: Plane enabled
Plane 12: Plane enabled
Plane 13: Plane enabled
Plane 14: Plane enabled
Plane 15: Plane enabled
Plane 16: Plane enabled
Plane 17: Plane enabled
Plane 18: Plane disabled
Plane 19: Plane disabled
Plane 20: Plane disabled
Plane 21: Plane enabled
Plane 22: Plane enabled
Plane 23: Plane enabled
PFE #2
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
Plane 8: Plane enabled
Plane 9: Plane enabled
Plane 10: Plane enabled
Plane 11: Plane enabled
Plane 12: Plane enabled
Plane 13: Plane enabled
Plane 14: Plane enabled
```



```
Plane 15: Plane enabled
Plane 16: Plane enabled
Plane 17: Plane enabled
Plane 18: Plane disabled
Plane 19: Plane disabled
Plane 20: Plane disabled
Plane 21: Plane enabled
Plane 22: Plane enabled
Plane 23: Plane enabled
PFE #3
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
Plane 8: Plane enabled
Plane 9: Plane enabled
Plane 10: Plane enabled
Plane 11: Plane enabled
Plane 12: Plane enabled
Plane 13: Plane enabled
Plane 14: Plane enabled
Plane 15: Plane enabled
Plane 16: Plane enabled
Plane 17: Plane enabled
Plane 18: Plane disabled
Plane 19: Plane disabled
Plane 20: Plane disabled
Plane 21: Plane enabled
Plane 22: Plane enabled
Plane 23: Plane enabled
...
FPC 19
PFE #0
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
Plane 8: Plane enabled
Plane 9: Plane enabled
Plane 10: Plane enabled
Plane 11: Plane enabled
Plane 12: Plane enabled
Plane 13: Plane enabled
Plane 14: Plane enabled
Plane 15: Plane enabled
Plane 16: Plane enabled
Plane 17: Plane enabled
Plane 18: Unused
Plane 19: Unused
Plane 20: Unused
Plane 21: Plane enabled
```



```
Plane 22: Plane enabled
Plane 23: Plane enabled
PFE #1
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
Plane 8: Plane enabled
Plane 9: Plane enabled
Plane 10: Plane enabled
Plane 11: Plane enabled
Plane 12: Plane enabled
Plane 13: Plane enabled
Plane 14: Plane enabled
Plane 15: Plane enabled
Plane 16: Plane enabled
Plane 17: Plane enabled
Plane 18: Unused
Plane 19: Unused
Plane 20: Unused
Plane 21: Plane enabled
Plane 22: Plane enabled
Plane 23: Plane enabled
PFE #2
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane enabled
Plane 8: Plane enabled
Plane 9: Plane enabled
Plane 10: Plane enabled
Plane 11: Plane enabled
Plane 12: Plane enabled
Plane 13: Plane enabled
Plane 14: Plane enabled
Plane 15: Plane enabled
Plane 16: Plane enabled
Plane 17: Plane enabled
Plane 18: Unused
Plane 19: Unused
Plane 20: Unused
Plane 21: Plane enabled
Plane 22: Plane enabled
Plane 23: Plane enabled
PFE #3
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
Plane 6: Plane enabled
```



```

Plane 7: Plane enabled
Plane 8: Plane enabled
Plane 9: Plane enabled
Plane 10: Plane enabled
Plane 11: Plane enabled
Plane 12: Plane enabled
Plane 13: Plane enabled
Plane 14: Plane enabled
Plane 15: Plane enabled
Plane 16: Plane enabled
Plane 17: Plane enabled
Plane 18: Unused
Plane 19: Unused
Plane 20: Unused
Plane 21: Plane enabled
Plane 22: Plane enabled
Plane 23: Plane enabled

```

### show chassis fabric fpcs (MX2008 Router)

```
user@host> show chassis fabric fpcs
```

```
Fabric management FPC state:
```

```
FPC 0
```

```
PFE #0
```

```

Plane 0: Plane disabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane disabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane disabled

```

```
PFE #1
```

```

Plane 0: Plane disabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane disabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane disabled

```

```
PFE #2
```

```

Plane 0: Plane disabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane disabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane disabled

```

```
PFE #3
```

```

Plane 0: Plane disabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane disabled
Plane 5: Plane enabled
Plane 6: Plane enabled
Plane 7: Plane disabled

```



```
FPC 1
  PFE #0
    Plane 0: Plane disabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane disabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane disabled
  PFE #1
    Plane 0: Plane disabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane disabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane disabled
  PFE #2
    Plane 0: Plane disabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane disabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane disabled
  PFE #3
    Plane 0: Plane disabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane disabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane disabled
FPC 3
  PFE #0
    Plane 0: Plane disabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane disabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane disabled
FPC 5
  PFE #0
    Plane 0: Plane disabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane disabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane disabled
```



### show chassis fabric fpcs (MX10003 Router)

```
user@host> show chassis fabric fpcs
```

```
Fabric management FPC state:
```

```
FPC 1
```

```
  PFE #0
```

```
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
    Plane 8: Plane enabled
    Plane 9: Plane enabled
    Plane 10: Plane enabled
    Plane 11: Plane enabled
    Plane 12: Plane enabled
    Plane 13: Plane enabled
    Plane 14: Plane enabled
    Plane 15: Plane enabled
    Plane 16: Plane enabled
    Plane 17: Plane enabled
    Plane 18: Plane enabled
    Plane 19: Plane enabled
    Plane 20: Plane enabled
    Plane 21: Plane enabled
```

```
  PFE #1
```

```
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
    Plane 8: Plane enabled
    Plane 9: Plane enabled
    Plane 10: Plane enabled
    Plane 11: Plane enabled
    Plane 12: Plane enabled
    Plane 13: Plane enabled
    Plane 14: Plane enabled
    Plane 15: Plane enabled
    Plane 16: Plane enabled
    Plane 17: Plane enabled
    Plane 18: Plane enabled
    Plane 19: Plane enabled
    Plane 20: Plane enabled
    Plane 21: Plane enabled
```

```
  PFE #2
```

```
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
```



```
Plane 7: Plane enabled
Plane 8: Plane enabled
Plane 9: Plane enabled
Plane 10: Plane enabled
Plane 11: Plane enabled
Plane 12: Plane enabled
Plane 13: Plane enabled
Plane 14: Plane enabled
Plane 15: Plane enabled
Plane 16: Plane enabled
Plane 17: Plane enabled
Plane 18: Plane enabled
Plane 19: Plane enabled
Plane 20: Plane enabled
Plane 21: Plane enabled
```

### show chassis fabric fpcs (T320 Router)

```
user@host> show chassis fabric fpcs
```

```
FPC #3
  PFE #1
    SIB #0
      Links ok
    SIB #1
      Plane enabled
    SIB #2
      Plane enabled
FPC #5
  PFE #1
    SIB #0
      Links ok
    SIB #1
      Plane enabled
    SIB #2
      Plane enabled
FPC #7
  PFE #1
    SIB #0
      Links ok
    SIB #1
      Plane enabled
    SIB #2
      Plane enabled
```

### show chassis fabric fpcs (T640 Router)

```
user@host> show chassis fabric fpcs
```

```
Fabric management FPC state:
```

```
FPC #2
  PFE #1
    SIB #0
      Links ok
    SIB #1
      Plane enabled
    SIB #2
      Plane enabled
```



```

SIB #3
    Plane enabled
SIB #4
    Plane enabled
FPC #3
  PFE #1
    SIB #2
      Plane enabled
    SIB #3
      Link error
      Destination error on PFes
      8   9  10  11  12  13  14  15  16  17  18  19  20  21
    SIB #4
      Destination error on PFes
      8   9  10  11  12  13  14  15  16  17  18  19  20  21
...

```

### show chassis fabric fpcs (TX Matrix Router)

```

user@host> show chassis fabric fpcs

lcc0-re0:
-----
Fabric management FPC state:
FPC #0
  PFE #1
    SIB #0
      Links ok
    SIB #2
      Links ok
    SIB #3
      Links ok
    SIB #4
      Links ok
FPC #2
  PFE #1
    SIB #0
      Links ok
    SIB #2
      Links ok
    SIB #3
      Links ok
    SIB #4
      Links ok
  PFE #1
    SIB #2
      Plane enabled
    SIB #3
      Link error
      Destination error on PFes
      8   9  10  11  12  13  14  15  16  17  18  19  20  21
    SIB #4
      Destination error on PFes
      8   9  10  11  12  13  14  15  16  17  18  19  20  21
...
FPC #4
  PFE #0
    SIB #4 Links ok
  PFE #1
    SIB #4 Links ok

```



```

FPC #5
  PFE #1
    SIB #4 Links ok
FPC #6
  PFE #1
    SIB #4 Links ok

lcc2-re0:
-----
Fabric management FPC state:
FPC #0
  PFE #1
    SIB #4 Links ok
FPC #1
  PFE #1
    SIB #4 Links ok
FPC #2
  PFE #0
    SIB #4 Links ok
  PFE #1
    SIB #4 Links ok
FPC #4
  PFE #0
    SIB #4 Links ok
  PFE #1
    SIB #4 Links ok
FPC #5
  PFE #1
    SIB #4 Links ok

```

### show chassis fabric fpcs (TX Matrix Router with 3D SIBs)

```
user@host> show chassis fabric fpcs
```

```

lcc0-re0:
-----
Fabric management FPC state:
FPC #0
  PFE #0
    SIB #0
      Links ok
    SIB #1
      Links ok
    SIB #2
      Links ok
    SIB #3
      Links ok
    SIB #4
      Links ok
  PFE #1
    SIB #0
      Links ok
    SIB #1
      Links ok
    SIB #2
      Links ok
    SIB #3
      Links ok
    SIB #4
      Links ok

```



```
FPC #3
PFE #0
  SIB #0
    Links ok
  SIB #1
    Links ok
  SIB #2
    Links ok
  SIB #3
    Links ok
  SIB #4
    Links ok
PFE #1
  SIB #0
    Links ok
  SIB #1
    Links ok
  SIB #2
    Links ok
  SIB #3
    Links ok
  SIB #4
    Links ok
FPC #4
PFE #0
  SIB #0
    Links ok
  SIB #1
    Links ok
  SIB #2
    Links ok
  SIB #3
    Links ok
  SIB #4
    Links ok
PFE #1
  SIB #0
    Links ok
  SIB #1
    Links ok
  SIB #2
    Links ok
  SIB #3
    Links ok
  SIB #4
    Links ok
FPC #5
PFE #0
  SIB #0
    Links ok
  SIB #1
    Links ok
  SIB #2
    Links ok
  SIB #3
    Links ok
  SIB #4
    Links ok
PFE #1
  SIB #0
```



```

        Links ok
    SIB #1
        Links ok
    SIB #2
        Links ok
    SIB #3
        Links ok
    SIB #4
        Links ok
FPC #6
  PFE #0
    SIB #0
        Links ok
    SIB #1
        Links ok
    SIB #2
        Links ok
    SIB #3
        Links ok
    SIB #4
        Links ok
  PFE #1
    SIB #0
        Links ok
    SIB #1
        Links ok
    SIB #2
        Links ok
    SIB #3
        Links ok
    SIB #4
        Links ok
```

lcc2-re0:

lcc4-re0:

Fabric management FPC state:

```

FPC #2
  PFE #0
    SIB #0
        Links ok
    SIB #1
        Links ok
    SIB #2
        Links ok
    SIB #3
        Links ok
    SIB #4
        Links ok
  PFE #1
    SIB #0
        Links ok
    SIB #1
        Links ok
    SIB #2
        Links ok
    SIB #3
        Links ok
```



```

    SIB #4
    Links ok
FPC #3
  PFE #0
    SIB #0
    Links ok
    SIB #1
    Links ok
    SIB #2
    Links ok
    SIB #3
    Links ok
    SIB #4
    Links ok
  PFE #1
    SIB #0
    Links ok
    SIB #1
    Links ok
    SIB #2
    Links ok
    SIB #3
    Links ok
    SIB #4
    Links ok

```

```
lcc6-re0:
-----
```

#### show chassis fabric fpcs lcc (TX Matrix Router with 3D SIBs)

```
user@host> show chassis fabric fpcs lcc 4
```

```
lcc4-re0:
-----
```

```
Fabric management FPC state:
```

```

FPC #2
  PFE #0
    SIB #0
    Links ok
    SIB #1
    Links ok
    SIB #2
    Links ok
    SIB #3
    Links ok
    SIB #4
    Links ok
  PFE #1
    SIB #0
    Links ok
    SIB #1
    Links ok
    SIB #2
    Links ok
    SIB #3
    Links ok
    SIB #4
    Links ok
FPC #3

```



```
PFE #0
  SIB #0    Links ok
  SIB #1    Links ok
  SIB #2    Links ok
  SIB #3    Links ok
  SIB #4    Links ok
PFE #1
  SIB #0    Links ok
  SIB #1    Links ok
  SIB #2    Links ok
  SIB #3    Links ok
  SIB #4    Links ok
```

#### show chassis fabric fpcs (TI600 Router)

```
user@host> show chassis fabric fpcs
```

```
Fabric management FPC state:
```

```
FPC #0
  PFE #0
    SIB #0    Links ok
    SIB #1    Plane enabled
    SIB #2    Plane enabled
    SIB #3    Plane enabled
    SIB #4    Plane enabled
  PFE #1
    SIB #0    Links ok
    SIB #1    Plane enabled
    SIB #2    Plane enabled
    SIB #3    Plane enabled
    SIB #4    Plane enabled
FPC #1
  PFE #0
    SIB #0    Links ok
    SIB #1    Plane enabled
    SIB #2    Plane enabled
    SIB #3
```



```

        Plane enabled
    SIB #4
        Plane enabled
PFE #1
    SIB #0
        Links ok
    SIB #1
        Plane enabled
    SIB #2
        Plane enabled
    SIB #3
        Plane enabled
    SIB #4
        Plane enabled
FPC #2
    PFE #0
        SIB #0
            Links ok
        SIB #1
            Plane enabled
        SIB #2
            Plane enabled
        SIB #3
            Plane enabled
        SIB #4
            Plane enabled
FPC #4
    PFE #0
        SIB #0
            Links ok
        SIB #1
            Plane enabled
        SIB #2
            Plane enabled
        SIB #3
            Plane enabled
        SIB #4
            Plane enabled
    PFE #1
        SIB #0
            Links ok
        SIB #1
            Plane enabled
        SIB #2
            Plane enabled
        SIB #3
            Plane enabled
        SIB #4
            Plane enabled
FPC #3
    PFE #1
        SIB #2
            Plane enabled
        SIB #3
            Link error
            Destination error on PFes      0   1   2   3   4   5   6   7
            8   9  10  11  12  13  14  15  16  17  18  19  20  21
        SIB #4
            Destination error on PFes      0   1   2   3   4   5   6   7
            8   9  10  11  12  13  14  15  16  17  18  19  20  21

```



**show chassis fabric fpcs (T4000 Core Router)**

```
Fabric management FPC state:
FPC #2
  PFE #0
    SIB #0      Links ok
    SIB #1      Plane enabled
    SIB #2      Plane enabled
    SIB #3      Plane enabled
    SIB #4      Plane enabled
FPC #3
  PFE #0
    SIB #0      Links ok
    SIB #1      Plane enabled
    SIB #2      Plane enabled
    SIB #3      Plane enabled
    SIB #4      Plane enabled
FPC #5
  PFE #0
    SIB #0      Links ok
    SIB #1      Plane enabled
    SIB #2      Plane enabled
    SIB #3      Plane enabled
    SIB #4      Plane enabled
  PFE #1
    SIB #0      Links ok
    SIB #1      Plane enabled
    SIB #2      Plane enabled
    SIB #3      Plane enabled
    SIB #4      Plane enabled
FPC #6
  PFE #0
    SIB #0      Links ok
    SIB #1      Plane enabled
    SIB #2      Plane enabled
    SIB #3
```



```

        Plane enabled
    SIB #4
        Plane enabled
PFE #1
    SIB #0
        Links ok
    SIB #1
        Plane enabled
    SIB #2
        Plane enabled
    SIB #3
        Plane enabled
    SIB #4
        Plane enabled

```

### show chassis fabric fpcs (TX Matrix Plus Router)

```
user@host> show chassis fabric fpcs
```

```
lcc0-re0:
```

```
-----
Fabric management FPC state:
```

```
FPC #0
```

```

    PFE #1
        SIB #0
            Unused
        SIB #1
            Links ok
        SIB #2
            Links ok
        SIB #3
            Links ok
        SIB #4
            Links ok

```

```
FPC #2
```

```

    PFE #0
        SIB #0
            Unused
        SIB #1
            Links ok
        SIB #2
            Links ok
        SIB #3
            Links ok
        SIB #4
            Links ok

```

```

    PFE #1
        SIB #0
            Unused
        SIB #1
            Links ok
        SIB #2
            Links ok
        SIB #3
            Links ok
        SIB #4
            Links ok

```

```
FPC #3
```

```

    PFE #1
        SIB #2

```







```

SIB #2
    Links ok
SIB #3
    Links ok
SIB #4
    Links ok

lcc1-re0:
-----
Fabric management FPC state:
FPC #2
  PFE #0
    SIB #0
      Links ok
    SIB #1
      Links ok
    SIB #2
      Links ok
    SIB #3
      Links ok
    SIB #4
      Links ok
  PFE #1
    SIB #0
      Links ok
    SIB #1
      Links ok
    SIB #2
      Links ok
    SIB #3
      Links ok
    SIB #4
      Links ok
FPC #4
  PFE #0
    SIB #0
      Links ok
    SIB #1
      Links ok
    SIB #2
      Links ok
    SIB #3
      Links ok
    SIB #4
      Links ok
  PFE #1
    SIB #0
      Links ok
    SIB #1
      Links ok
    SIB #2
      Links ok
    SIB #3
      Destination error on PFES      1      8      9      29      40      65      72      73
      93 104
    SIB #4
      Links ok
FPC #6
  PFE #0

```



```
SIB #0
    Links ok
SIB #1
    Links ok
SIB #2
    Links ok
SIB #3
    Links ok
SIB #4
    Links ok
PFE #1
    SIB #0
        Links ok
    SIB #1
        Links ok
    SIB #2
        Links ok
    SIB #3
        Links ok
    SIB #4
        Links ok
FPC #7
    PFE #0
        SIB #0
            Links ok
        SIB #1
            Links ok
        SIB #2
            Links ok
        SIB #3
            Links ok
        SIB #4
            Links ok
```

lcc2-re0:

-----  
Fabric management FPC state:

```
FPC #0
    PFE #0
        SIB #0
            Links ok
        SIB #1
            Links ok
        SIB #2
            Links ok
        SIB #3
            Links ok
        SIB #4
            Links ok
    PFE #1
        SIB #0
            Links ok
        SIB #1
            Links ok
        SIB #2
            Links ok
        SIB #3
            Links ok
        SIB #4
            Links ok
```



```
FPC #2
PFE #0
  SIB #0      Links ok
  SIB #1      Links ok
  SIB #2      Links ok
  SIB #3      Links ok
  SIB #4      Links ok
PFE #1
  SIB #0      Links ok
  SIB #1      Links ok
  SIB #2      Links ok
  SIB #3      Links ok
  SIB #4      Links ok
FPC #4
PFE #0
  SIB #0      Links ok
  SIB #1      Links ok
  SIB #2      Links ok
  SIB #3      Links ok
  SIB #4      Links ok
FPC #5
PFE #0
  SIB #0      Links ok
  SIB #1      Links ok
  SIB #2      Links ok
  SIB #3      Links ok
  SIB #4      Links ok
PFE #1
  SIB #0      Links ok
  SIB #1      Links ok
  SIB #2      Links ok
  SIB #3      Links ok
  SIB #4      Links ok
FPC #6
PFE #0
```



```
SIB #0
    Links ok
SIB #1
    Links ok
SIB #2
    Links ok
SIB #3
    Links ok
SIB #4
    Links ok
PFE #1
    SIB #0
        Links ok
    SIB #1
        Links ok
    SIB #2
        Links ok
    SIB #3
        Links ok
    SIB #4
        Links ok
FPC #7
    PFE #0
        SIB #0
            Links ok
        SIB #1
            Links ok
        SIB #2
            Links ok
        SIB #3
            Links ok
        SIB #4
            Links ok
```

lcc3-re0:

-----  
Fabric management FPC state:

```
FPC #0
    PFE #0
        SIB #0
            Links ok
        SIB #1
            Links ok
        SIB #2
            Links ok
        SIB #3
            Links ok
        SIB #4
            Links ok
    PFE #1
        SIB #0
            Links ok
        SIB #1
            Links ok
        SIB #2
            Links ok
        SIB #3
            Links ok
        SIB #4
            Links ok
```



```
FPC #2
PFE #0
  SIB #0      Links ok
  SIB #1      Links ok
  SIB #2      Links ok
  SIB #3      Links ok
  SIB #4      Links ok
PFE #1
  SIB #0      Links ok
  SIB #1      Links ok
  SIB #2      Links ok
  SIB #3      Links ok
  SIB #4      Links ok
FPC #4
PFE #0
  SIB #0      Links ok
  SIB #1      Links ok
  SIB #2      Links ok
  SIB #3      Links ok
  SIB #4      Links ok
PFE #1
  SIB #0      Links ok
  SIB #1      Links ok
  SIB #2      Links ok
  SIB #3      Links ok
  SIB #4      Links ok
FPC #5
PFE #0
  SIB #0      Links ok
  SIB #1      Links ok
  SIB #2      Links ok
  SIB #3      Links ok
  SIB #4      Links ok
PFE #1
  SIB #0
```



```

        Links ok
    SIB #1
        Links ok
    SIB #2
        Links ok
    SIB #3
        Links ok
    SIB #4
        Links ok
FPC #6
  PFE #0
    SIB #0
        Links ok
    SIB #1
        Links ok
    SIB #2
        Links ok
    SIB #3
        Links ok
    SIB #4
        Links ok
  PFE #1
    SIB #0
        Links ok
    SIB #1
        Links ok
    SIB #2
        Links ok
    SIB #3
        Links ok
    SIB #4
        Links ok
FPC #7
  PFE #0
    SIB #0
        Links ok
    SIB #1
        Links ok
    SIB #2
        Links ok
    SIB #3
        Links ok
    SIB #4
        Links ok

```

#### show chassis fabric fpcs lcc (TX Matrix Plus Router)

```
user@host> show chassis fabric fpcs lcc 0
```

```
lcc0-re1:
```

```
-----
Fabric management FPC state:
```

```
FPC #3
```

```
  PFE #1
```

```
    SIB #2
```

```
        Plane enabled
```

```
    SIB #3
```

```
        Link error
```

```
Destination error on PFES      0   1   2   3   4   5   6   7
      8   9  10  11  12  13  14  15  16  17  18  19  20  21
```



```

      SIB #4
      Destination error on PFES      0  1  2  3  4  5  6  7
      8  9 10 11 12 13 14 15 16 17 18 19 20 21
FPC #4
  PFE #0
    SIB #0 Links ok
    SIB #1 Links ok
    SIB #2 Links ok
    SIB #3 Links ok
    SIB #4 Links ok
  PFE #1
    SIB #0 Links ok
    SIB #1 Links ok
    SIB #2 Links ok
    SIB #3 Links ok
    SIB #4 Links ok
FPC #6
  PFE #0
    SIB #0 Links ok
    SIB #1 Links ok
    SIB #2 Links ok
    SIB #3 Links ok
    SIB #4 Links ok
  PFE #1
    SIB #0 Links ok
    SIB #1 Links ok
    SIB #2 Links ok
    SIB #3 Links ok
    SIB #4 Links ok
FPC #7
  PFE #0
    SIB #0 Links ok
    SIB #1 Links ok
    SIB #2 Links ok
    SIB #3 Links ok
    SIB #4 Links ok

```

### show chassis fabric fpcs (EX8200 Switch)

```
user@host> show chassis fabric fpcs
```

```

Fabric management FPC state
FPC 6
  PFE #0
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Links ok
    Plane 5: Links ok
    Plane 6: Links ok
    Plane 7: Links ok
    Plane 8: Plane enabled
    Plane 9: Plane enabled
    Plane 10: Plane enabled
    Plane 11: Plane enabled
  PFE #1
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled

```



```

Plane 3: Plane enabled
Plane 4: Links ok
Plane 5: Links ok
Plane 6: Links ok
Plane 7: Links ok
Plane 8: Plane enabled
Plane 9: Plane enabled
Plane 10: Plane enabled
Plane 11: Plane enabled
FPC 7
PFE #0
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Links ok
Plane 5: Links ok
Plane 6: Links ok
Plane 7: Links ok
Plane 8: Plane enabled
Plane 9: Plane enabled
Plane 10: Plane enabled
Plane 11: Plane enabled
PFE #1
Plane 0: Plane enabled
Plane 1: Plane enabled
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Links ok
Plane 5: Links ok
Plane 6: Links ok
Plane 7: Links ok
Plane 8: Plane enabled
Plane 9: Plane enabled
Plane 10: Plane enabled
Plane 11: Plane enabled

```

### show chassis fabric fpcs (PTX3000 Router)

```
user@host> show chassis fabric fpcs slot 8
```

```
Fabric management FPC state:
```

```

FPC #8
PFE #0
SIB0_Fcore0 (plane 0)  Plane Enabled, Links OK
SIB0_Fcore1 (plane 1)  Plane Enabled, Links OK
SIB1_Fcore0 (plane 2)  Plane Enabled, Links OK
SIB1_Fcore1 (plane 3)  Plane Enabled, Links OK
SIB2_Fcore0 (plane 4)  Plane Enabled, Links OK
SIB2_Fcore1 (plane 5)  Plane Enabled, Links OK
SIB3_Fcore0 (plane 6)  Plane Enabled, Links OK
SIB3_Fcore1 (plane 7)  Plane Enabled, Links OK
SIB4_Fcore0 (plane 8)  Plane Enabled, Links OK
SIB4_Fcore1 (plane 9)  Plane Enabled, Links OK
SIB5_Fcore0 (plane 10) Plane Enabled, Links OK
SIB5_Fcore1 (plane 11) Plane Enabled, Links OK
SIB6_Fcore0 (plane 12) Plane Enabled, Links OK
SIB6_Fcore1 (plane 13) Plane Enabled, Links OK
SIB7_Fcore0 (plane 14) Plane Enabled, Links OK
SIB7_Fcore1 (plane 15) Plane Enabled, Links OK

```



```

SIB8_Fcore0 (plane 16) Plane Enabled, Links OK
SIB8_Fcore1 (plane 17) Plane Enabled, Links OK
PFE #1
SIB0_Fcore0 (plane 0) Plane Enabled, Links OK
SIB0_Fcore1 (plane 1) Plane Enabled, Links OK
SIB1_Fcore0 (plane 2) Plane Enabled, Links OK
SIB1_Fcore1 (plane 3) Plane Enabled, Links OK
SIB2_Fcore0 (plane 4) Plane Enabled, Links OK
SIB2_Fcore1 (plane 5) Plane Enabled, Links OK
SIB3_Fcore0 (plane 6) Plane Enabled, Links OK
SIB3_Fcore1 (plane 7) Plane Enabled, Links OK
SIB4_Fcore0 (plane 8) Plane Enabled, Links OK
SIB4_Fcore1 (plane 9) Plane Enabled, Links OK
SIB5_Fcore0 (plane 10) Plane Enabled, Links OK
SIB5_Fcore1 (plane 11) Plane Enabled, Links OK
SIB6_Fcore0 (plane 12) Plane Enabled, Links OK
SIB6_Fcore1 (plane 13) Plane Enabled, Links OK
SIB7_Fcore0 (plane 14) Plane Enabled, Links OK
SIB7_Fcore1 (plane 15) Plane Enabled, Links OK
SIB8_Fcore0 (plane 16) Plane Enabled, Links OK
SIB8_Fcore1 (plane 17) Plane Enabled, Links OK

```

### show chassis fabric fpcs (Junos OS Evolved)

The output of the **show chassis fabric fpcs** command is modified to include ASIC information. In the earlier releases, this command displayed ASICs as FCORES. With this modification, for every FPC and SIB, information about ASIC and FCORE is presented separately in the output.

```
user@host> show chassis fabric fpcs slot 0
```

```

Fabric management FPC state:
FPC #0
  PFE #0
    SIB0_Asic1_Fcore0 (plane 1) Plane Enabled, Links ok
  SIB1_Asic0_Fcore0 (plane 2) Plane Enabled, Links ok
  SIB1_Asic1_Fcore0 (plane 3) Plane Enabled, Links ok
  SIB2_Asic0_Fcore0 (plane 4) Plane Enabled, Links ok
  SIB2_Asic1_Fcore0 (plane 5) Plane Enabled, Links ok
  SIB3_Asic0_Fcore0 (plane 6) Plane Enabled, Links ok
  SIB3_Asic1_Fcore0 (plane 7) Plane Enabled, Links ok
  SIB4_Asic0_Fcore0 (plane 8) Plane Enabled, Links ok
  SIB4_Asic1_Fcore0 (plane 9) Plane Enabled, Links ok

```

### show chassis fabric fpcs (PTX10008 Router)

```
user@host> show chassis fabric fpcs slot 8
```

```

Fabric management FPC state:
FPC #0
  PFE #0
    SIB0_FASIC0 (plane 0) Plane Enabled, Links OK
    SIB0_FASIC1 (plane 1) Plane Enabled, Links OK
    SIB1_FASIC0 (plane 2) Plane Enabled, Links OK
    SIB1_FASIC1 (plane 3) Plane Enabled, Links OK
  PFE #1
    SIB0_FASIC0 (plane 0) Plane Enabled, Links OK
    SIB0_FASIC1 (plane 1) Plane Enabled, Links OK
    SIB1_FASIC0 (plane 2) Plane Enabled, Links OK

```



	SIB1_FASIC1	(plane 3)	Plane Enabled, Links OK
PFE #2			
	SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK
	SIB0_FASIC1	(plane 1)	Plane Enabled, Links OK
	SIB1_FASIC0	(plane 2)	Plane Enabled, Links OK
	SIB1_FASIC1	(plane 3)	Plane Enabled, Links OK
FPC #5			
PFE #0			
	SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK
	SIB0_FASIC1	(plane 1)	Plane Enabled, Links OK
	SIB1_FASIC0	(plane 2)	Plane Enabled, Links OK
	SIB1_FASIC1	(plane 3)	Plane Enabled, Links OK
PFE #1			
	SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK
	SIB0_FASIC1	(plane 1)	Plane Enabled, Links OK
	SIB1_FASIC0	(plane 2)	Plane Enabled, Links OK
	SIB1_FASIC1	(plane 3)	Plane Enabled, Links OK
PFE #2			
	SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK
	SIB0_FASIC1	(plane 1)	Plane Enabled, Links OK
	SIB1_FASIC0	(plane 2)	Plane Enabled, Links OK
	SIB1_FASIC1	(plane 3)	Plane Enabled, Links OK
PFE #3			
	SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK
	SIB0_FASIC1	(plane 1)	Plane Enabled, Links OK
	SIB1_FASIC0	(plane 2)	Plane Enabled, Links OK
	SIB1_FASIC1	(plane 3)	Plane Enabled, Links OK
PFE #4			
	SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK
	SIB0_FASIC1	(plane 1)	Plane Enabled, Links OK
	SIB1_FASIC0	(plane 2)	Plane Enabled, Links OK
	SIB1_FASIC1	(plane 3)	Plane Enabled, Links OK
PFE #5			
	SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK
	SIB0_FASIC1	(plane 1)	Plane Enabled, Links OK
	SIB1_FASIC0	(plane 2)	Plane Enabled, Links OK
	SIB1_FASIC1	(plane 3)	Plane Enabled, Links OK
FPC #6			
PFE #0			
	SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK
	SIB0_FASIC1	(plane 1)	Plane Enabled, Links OK
	SIB1_FASIC0	(plane 2)	Plane Enabled, Links OK
	SIB1_FASIC1	(plane 3)	Plane Enabled, Links OK
PFE #1			
	SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK
	SIB0_FASIC1	(plane 1)	Plane Enabled, Links OK
	SIB1_FASIC0	(plane 2)	Plane Enabled, Links OK
	SIB1_FASIC1	(plane 3)	Plane Enabled, Links OK
PFE #2			
	SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK
	SIB0_FASIC1	(plane 1)	Plane Enabled, Links OK
	SIB1_FASIC0	(plane 2)	Plane Enabled, Links OK
	SIB1_FASIC1	(plane 3)	Plane Enabled, Links OK
PFE #3			
	SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK
	SIB0_FASIC1	(plane 1)	Plane Enabled, Links OK
	SIB1_FASIC0	(plane 2)	Plane Enabled, Links OK
	SIB1_FASIC1	(plane 3)	Plane Enabled, Links OK
PFE #4			
	SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK



```

SIB0_FASIC1 (plane 1) Plane Enabled, Links OK
SIB1_FASIC0 (plane 2) Plane Enabled, Links OK
SIB1_FASIC1 (plane 3) Plane Enabled, Links OK
PFE #5
SIB0_FASIC0 (plane 0) Plane Enabled, Links OK
SIB0_FASIC1 (plane 1) Plane Enabled, Links OK
SIB1_FASIC0 (plane 2) Plane Enabled, Links OK
SIB1_FASIC1 (plane 3) Plane Enabled, Links OK

```

### show chassis fabric fpcs (PTX10016 Router)

```
user@host> show chassis fabric fpcs slot 8
```

```
Fabric management FPC state:
```

```
FPC #8
```

```
PFE #0
```

```

SIB0_FASIC0 (plane 0) Plane Enabled, Links OK
SIB0_FASIC1 (plane 1) Plane Enabled, Links OK
SIB0_FASIC2 (plane 2) Plane Enabled, Links OK
SIB0_FASIC3 (plane 3) Plane Enabled, Links OK
SIB0_FASIC4 (plane 4) Plane Enabled, Links OK
SIB0_FASIC5 (plane 5) Plane Enabled, Links OK
SIB1_FASIC0 (plane 6) Plane Enabled, Links OK
SIB1_FASIC1 (plane 7) Plane Enabled, Links OK
SIB1_FASIC2 (plane 8) Plane Enabled, Links OK
SIB1_FASIC3 (plane 9) Plane Enabled, Links OK
SIB1_FASIC4 (plane 10) Plane Enabled, Links OK
SIB1_FASIC5 (plane 11) Plane Enabled, Links OK
SIB2_FASIC0 (plane 12) Plane Enabled, Links OK
SIB2_FASIC1 (plane 13) Plane Enabled, Links OK
SIB2_FASIC2 (plane 14) Plane Enabled, Links OK
SIB2_FASIC3 (plane 15) Plane Enabled, Links OK
SIB2_FASIC4 (plane 16) Plane Enabled, Links OK
SIB2_FASIC5 (plane 17) Plane Enabled, Links OK
SIB3_FASIC0 (plane 18) Plane Enabled, Links OK
SIB3_FASIC1 (plane 19) Plane Enabled, Links OK
SIB3_FASIC2 (plane 20) Plane Enabled, Links OK
SIB3_FASIC3 (plane 21) Plane Enabled, Links OK
SIB3_FASIC4 (plane 22) Plane Enabled, Links OK
SIB3_FASIC5 (plane 23) Plane Enabled, Links OK
SIB4_FASIC0 (plane 24) Plane Enabled, Links OK
SIB4_FASIC1 (plane 25) Plane Enabled, Links OK
SIB4_FASIC2 (plane 26) Plane Enabled, Links OK
SIB4_FASIC3 (plane 27) Plane Enabled, Links OK
SIB4_FASIC4 (plane 28) Plane Enabled, Links OK
SIB4_FASIC5 (plane 29) Plane Enabled, Links OK
SIB5_FASIC0 (plane 30) Plane Enabled, Links OK
SIB5_FASIC1 (plane 31) Plane Enabled, Links OK
SIB5_FASIC2 (plane 32) Plane Enabled, Links OK
SIB5_FASIC3 (plane 33) Plane Enabled, Links OK
SIB5_FASIC4 (plane 34) Plane Enabled, Links OK
SIB5_FASIC5 (plane 35) Plane Enabled, Links OK

```

```
PFE #1
```

```

SIB0_FASIC0 (plane 0) Plane Enabled, Links OK
SIB0_FASIC1 (plane 1) Plane Enabled, Links OK
SIB0_FASIC2 (plane 2) Plane Enabled, Links OK
SIB0_FASIC3 (plane 3) Plane Enabled, Links OK
SIB0_FASIC4 (plane 4) Plane Enabled, Links OK
SIB0_FASIC5 (plane 5) Plane Enabled, Links OK
SIB1_FASIC0 (plane 6) Plane Enabled, Links OK

```



SIB1_FASIC1	(plane 7)	Plane Enabled, Links OK
SIB1_FASIC2	(plane 8)	Plane Enabled, Links OK
SIB1_FASIC3	(plane 9)	Plane Enabled, Links OK
SIB1_FASIC4	(plane 10)	Plane Enabled, Links OK
SIB1_FASIC5	(plane 11)	Plane Enabled, Links OK
SIB2_FASIC0	(plane 12)	Plane Enabled, Links OK
SIB2_FASIC1	(plane 13)	Plane Enabled, Links OK
SIB2_FASIC2	(plane 14)	Plane Enabled, Links OK
SIB2_FASIC3	(plane 15)	Plane Enabled, Links OK
SIB2_FASIC4	(plane 16)	Plane Enabled, Links OK
SIB2_FASIC5	(plane 17)	Plane Enabled, Links OK
SIB3_FASIC0	(plane 18)	Plane Enabled, Links OK
SIB3_FASIC1	(plane 19)	Plane Enabled, Links OK
SIB3_FASIC2	(plane 20)	Plane Enabled, Links OK
SIB3_FASIC3	(plane 21)	Plane Enabled, Links OK
SIB3_FASIC4	(plane 22)	Plane Enabled, Links OK
SIB3_FASIC5	(plane 23)	Plane Enabled, Links OK
SIB4_FASIC0	(plane 24)	Plane Enabled, Links OK
SIB4_FASIC1	(plane 25)	Plane Enabled, Links OK
SIB4_FASIC2	(plane 26)	Plane Enabled, Links OK
SIB4_FASIC3	(plane 27)	Plane Enabled, Links OK
SIB4_FASIC4	(plane 28)	Plane Enabled, Links OK
SIB4_FASIC5	(plane 29)	Plane Enabled, Links OK
SIB5_FASIC0	(plane 30)	Plane Enabled, Links OK
SIB5_FASIC1	(plane 31)	Plane Enabled, Links OK
SIB5_FASIC2	(plane 32)	Plane Enabled, Links OK
SIB5_FASIC3	(plane 33)	Plane Enabled, Links OK
SIB5_FASIC4	(plane 34)	Plane Enabled, Links OK
SIB5_FASIC5	(plane 35)	Plane Enabled, Links OK
PFE #2		
SIB0_FASIC0	(plane 0)	Plane Enabled, Links OK
SIB0_FASIC1	(plane 1)	Plane Enabled, Links OK
SIB0_FASIC2	(plane 2)	Plane Enabled, Links OK
SIB0_FASIC3	(plane 3)	Plane Enabled, Links OK
SIB0_FASIC4	(plane 4)	Plane Enabled, Links OK
SIB0_FASIC5	(plane 5)	Plane Enabled, Links OK
SIB1_FASIC0	(plane 6)	Plane Enabled, Links OK
SIB1_FASIC1	(plane 7)	Plane Enabled, Links OK
SIB1_FASIC2	(plane 8)	Plane Enabled, Links OK
SIB1_FASIC3	(plane 9)	Plane Enabled, Links OK
SIB1_FASIC4	(plane 10)	Plane Enabled, Links OK
SIB1_FASIC5	(plane 11)	Plane Enabled, Links OK
SIB2_FASIC0	(plane 12)	Plane Enabled, Links OK
SIB2_FASIC1	(plane 13)	Plane Enabled, Links OK
SIB2_FASIC2	(plane 14)	Plane Enabled, Links OK
SIB2_FASIC3	(plane 15)	Plane Enabled, Links OK
SIB2_FASIC4	(plane 16)	Plane Enabled, Links OK
SIB2_FASIC5	(plane 17)	Plane Enabled, Links OK
SIB3_FASIC0	(plane 18)	Plane Enabled, Links OK
SIB3_FASIC1	(plane 19)	Plane Enabled, Links OK
SIB3_FASIC2	(plane 20)	Plane Enabled, Links OK
SIB3_FASIC3	(plane 21)	Plane Enabled, Links OK
SIB3_FASIC4	(plane 22)	Plane Enabled, Links OK
SIB3_FASIC5	(plane 23)	Plane Enabled, Links OK
SIB4_FASIC0	(plane 24)	Plane Enabled, Links OK
SIB4_FASIC1	(plane 25)	Plane Enabled, Links OK
SIB4_FASIC2	(plane 26)	Plane Enabled, Links OK
SIB4_FASIC3	(plane 27)	Plane Enabled, Links OK
SIB4_FASIC4	(plane 28)	Plane Enabled, Links OK
SIB4_FASIC5	(plane 29)	Plane Enabled, Links OK



```

SIB5_FASIC0 (plane 30)  Plane Enabled, Links OK
SIB5_FASIC1 (plane 31)  Plane Enabled, Links OK
SIB5_FASIC2 (plane 32)  Plane Enabled, Links OK
SIB5_FASIC3 (plane 33)  Plane Enabled, Links OK
SIB5_FASIC4 (plane 34)  Plane Enabled, Links OK
SIB5_FASIC5 (plane 35)  Plane Enabled, Links OK

```

### show chassis fabric fpcs (QFX10008 Switch)

```
user@host> show chassis fabric fpcs slot 0
```

Fabric management FPC state:

FPC #0

PFE #0

```

SIB0_PFO (plane 0)  Plane Enabled, Links OK
SIB0_PF1 (plane 1)  Plane Enabled, Links OK
SIB1_PFO (plane 2)  Plane Enabled, Links OK
SIB1_PF1 (plane 3)  Plane Enabled, Links OK
SIB2_PFO (plane 4)  Plane Enabled, Links OK
SIB2_PF1 (plane 5)  Plane Enabled, Links OK
SIB3_PFO (plane 6)  Plane Enabled, Links OK
SIB3_PF1 (plane 7)  Plane Enabled, Links OK
SIB4_PFO (plane 8)  Plane Enabled, Links OK
SIB4_PF1 (plane 9)  Plane Enabled, Links OK
SIB5_PFO (plane 10) Plane Enabled, Links OK
SIB5_PF1 (plane 11) Plane Enabled, Links OK

```

PFE #1

```

SIB0_PFO (plane 0)  Plane Enabled, Links OK
SIB0_PF1 (plane 1)  Plane Enabled, Links OK
SIB1_PFO (plane 2)  Plane Enabled, Links OK
SIB1_PF1 (plane 3)  Plane Enabled, Links OK
SIB2_PFO (plane 4)  Plane Enabled, Links OK
SIB2_PF1 (plane 5)  Plane Enabled, Links OK
SIB3_PFO (plane 6)  Plane Enabled, Links OK
SIB3_PF1 (plane 7)  Plane Enabled, Links OK
SIB4_PFO (plane 8)  Plane Enabled, Links OK
SIB4_PF1 (plane 9)  Plane Enabled, Links OK
SIB5_PFO (plane 10) Plane Enabled, Links OK
SIB5_PF1 (plane 11) Plane Enabled, Links OK

```

PFE #2

```

SIB0_PFO (plane 0)  Plane Enabled, Links OK
SIB0_PF1 (plane 1)  Plane Enabled, Links OK
SIB1_PFO (plane 2)  Plane Enabled, Links OK
SIB1_PF1 (plane 3)  Plane Enabled, Links OK
SIB2_PFO (plane 4)  Plane Enabled, Links OK
SIB2_PF1 (plane 5)  Plane Enabled, Links OK
SIB3_PFO (plane 6)  Plane Enabled, Links OK
SIB3_PF1 (plane 7)  Plane Enabled, Links OK
SIB4_PFO (plane 8)  Plane Enabled, Links OK
SIB4_PF1 (plane 9)  Plane Enabled, Links OK
SIB5_PFO (plane 10) Plane Enabled, Links OK
SIB5_PF1 (plane 11) Plane Enabled, Links OK

```

PFE #3

```

SIB0_PFO (plane 0)  Plane Enabled, Links OK
SIB0_PF1 (plane 1)  Plane Enabled, Links OK
SIB1_PFO (plane 2)  Plane Enabled, Links OK
SIB1_PF1 (plane 3)  Plane Enabled, Links OK
SIB2_PFO (plane 4)  Plane Enabled, Links OK
SIB2_PF1 (plane 5)  Plane Enabled, Links OK
SIB3_PFO (plane 6)  Plane Enabled, Links OK

```



SIB3_PF1 (plane 7)	Plane Enabled, Links OK
SIB4_PF0 (plane 8)	Plane Enabled, Links OK
SIB4_PF1 (plane 9)	Plane Enabled, Links OK
SIB5_PF0 (plane 10)	Plane Enabled, Links OK
SIB5_PF1 (plane 11)	Plane Enabled, Links OK



## show chassis fabric map

**List of Syntax**    [Syntax on page 553](#)  
                           [Syntax \(MX Series Router\) on page 553](#)

**Syntax**    show chassis fabric map  
                   plane <plane-number>

**Syntax (MX Series Router)**    show chassis fabric map  
   <all-members>  
   <local>  
   <member *member-id*>  
   <plane *plane-number*>

**Release Information**    Command introduced in Junos OS Release 8.0.  
                                   Command introduced in Junos OS Release 9.4 for EX Series switches.

**Description**    (M120 and MX Series routers and EX8200 switches only) On the M120 router, display the state of the switching fabric map for connections from the Forwarding Engine Boards (FEBs) to the ports on the fabric planes, as interpreted by the fabric plane. On the MX Series router and the EX8200 switch, display the state of the switching fabric map for connections from each Packet Forwarding Engine on the Dense Port Concentrators (DPCs) to the ports on the fabric planes, as interpreted by the fabric plane. For information about the meaning of “fabric plane”, “DPCs”, and “SIBs” on the switches, see the hardware documentation for your switch.

**Options**    **none**—Display the switching fabric map state for the M120 or MX Series router or EX8200 switch.

**all-members**—(MX Series routers only) (Optional) Display the switching fabric map state for all the members of the Virtual Chassis configuration.

**local**—(MX Series routers only) (Optional) Display the switching fabric map state for the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display the switching fabric map state for the specified member of the Virtual Chassis configuration. Replace the *member-id* with a value of 0 or 1.

**plane *plane-number***—(Optional) Display the state of the fabric link for the specified plane number.

- For the M120 router, replace *plane-number* with a value from 0 through 3.
- For the MX480 and MX240 routers, replace *plane-number* with a value from 0 through 7.
- For the MX960 router, replace *plane-number* with a value from 0 through 5.



- For the EX8208 switch, replace *plane-number* with a value from 0 through 11.
- For the EX8216 switch, replace *plane-number* with a value from 0 through 7.

**Required Privilege Level** view

**List of Sample Output** [show chassis fabric map \(MX480 Router\) on page 554](#)  
[show chassis fabric map \(M120 Router\) on page 555](#)  
[show chassis fabric map \(MX Series Routers\) on page 555](#)  
[show chassis fabric map plane 1 \(EX8200 Switch\) on page 559](#)

**Output Fields** [Table 20 on page 554](#) lists the output fields for the **show chassis fabric map** command. Output fields are listed in the approximate order in which they appear.

*Table 20: show chassis fabric map Output Fields*

Field Name	Field Description
in-links	Fabric map for receive side links.
out-links	Fabric map for transmit side links.
state	<p>State of the fabric link:</p> <ul style="list-style-type: none"> <li>• <b>RESET</b>—Link between SIB and FPC/DPC is powered down on purpose. This is done in all non-dual PFE based boards.</li> <li>• <b>UP</b>—Link between SIB and FPC/DPC is up and running.</li> <li>• <b>DOWN</b>—Link between SIB and FPC/DPC is powered down.</li> <li>• <b>FAULT</b>—SIB is in alarmed state where the SIB's plane is not operational for the following reasons: <ul style="list-style-type: none"> <li>• On-board F-chip is not operational.</li> <li>• Fiber optic connector faults.</li> <li>• FPC connector faults.</li> <li>• SIB midplane connector faults.</li> </ul> </li> </ul>

## Sample Output

### show chassis fabric map (MX480 Router)

This sample applies to Junos OS Releases 18.2R2, 18.3R2, and 18.4R1 and later, in which the output of the CLI command **show chassis fabric map**, on MX series routers carrying MPCs with SF and XF ASICs, uses the label FPC instead of DPC (for example, 'FPC5PFE0').

```
user@host> show chassis fabric map plane 0
```

FPC5PFE0->CB0F0_02_0	Up	CB0F0_02_0->FPC5PFE0	Up
FPC5PFE1->CB0F0_02_1	Up	CB0F0_02_1->FPC5PFE1	Up
FPC5PFE2->CB0F0_02_2	Down	CB0F0_02_2->FPC5PFE2	Down
FPC5PFE3->CB0F0_02_3	Down	CB0F0_02_3->FPC5PFE3	Down



```

FPC5PFE0->CB0F0_03_0    Up      CB0F0_03_0->FPC5PFE0    Up
FPC5PFE1->CB0F0_03_1    Up      CB0F0_03_1->FPC5PFE1    Up
FPC5PFE2->CB0F0_03_2    Down    CB0F0_03_2->FPC5PFE2    Down
FPC5PFE3->CB0F0_03_3    Down    CB0F0_03_3->FPC5PFE3    Down
FPC3PFE0->CB0F0_04_0    Up      CB0F0_04_0->FPC3PFE0    Up
FPC3PFE1->CB0F0_04_1    Up      CB0F0_04_1->FPC3PFE1    Up
FPC3PFE2->CB0F0_04_2    Down    CB0F0_04_2->FPC3PFE2    Down
FPC3PFE3->CB0F0_04_3    Down    CB0F0_04_3->FPC3PFE3    Down
FPC3PFE0->CB0F0_05_0    Up      CB0F0_05_0->FPC3PFE0    Up
FPC3PFE1->CB0F0_05_1    Up      CB0F0_05_1->FPC3PFE1    Up
FPC3PFE2->CB0F0_05_2    Down    CB0F0_05_2->FPC3PFE2    Down
FPC3PFE3->CB0F0_05_3    Down    CB0F0_05_3->FPC3PFE3    Down
FPC1PFE0->CB0F0_06_0    Down    CB0F0_06_0->FPC1PFE0    Down
FPC1PFE1->CB0F0_06_1    Down    CB0F0_06_1->FPC1PFE1    Down
FPC1PFE2->CB0F0_06_2    Down    CB0F0_06_2->FPC1PFE2    Down
FPC1PFE3->CB0F0_06_3    Down    CB0F0_06_3->FPC1PFE3    Down
[...Output truncated...]

```

### show chassis fabric map (M120 Router)

```

user@host> show chassis fabric map

FEB0->CB0F0_00 up  CB0F0_08->FEB7 Down

FEB1->CB0F0_01 Down CB0F0_09->FEB6 Down

FEB6->CB0F0_02 Down CB0F0_10->FEB1 Down

FEB2->CB0F0_03 Down CB0F0_11->FEB0 up

FEB3->CB0F0_04 Down CB0F0_12->FEB3 Down

FEB4->CB0F0_05 up  CB0F0_13->FEB2 Down

FEB7->CB0F0_06 Down CB0F0_14->FEB5 Down

FEB5->CB0F0_07 Down CB0F0_15->FEB4 up:

```

### show chassis fabric map (MX Series Routers)

```

user@host> show chassis fabric map

DPC4PFE0->CB0F0_00_0    up      CB0F0_00_0->DPC4PFE0    up
DPC4PFE1->CB0F0_00_1    up      CB0F0_00_1->DPC4PFE1    up
DPC4PFE2->CB0F0_00_2    up      CB0F0_00_2->DPC4PFE2    up
DPC4PFE3->CB0F0_00_3    up      CB0F0_00_3->DPC4PFE3    up
DPC7PFE0->CB0F0_01_0    Down    CB0F0_01_0->DPC7PFE0    Down
DPC7PFE1->CB0F0_01_1    Down    CB0F0_01_1->DPC7PFE1    Down
DPC7PFE2->CB0F0_01_2    Down    CB0F0_01_2->DPC7PFE2    Down
DPC7PFE3->CB0F0_01_3    Down    CB0F0_01_3->DPC7PFE3    Down
DPC3PFE0->CB0F0_03_0    Down    CB0F0_03_0->DPC3PFE0    Down
DPC3PFE1->CB0F0_03_1    Down    CB0F0_03_1->DPC3PFE1    Down
DPC3PFE2->CB0F0_03_2    Down    CB0F0_03_2->DPC3PFE2    Down
DPC3PFE3->CB0F0_03_3    Down    CB0F0_03_3->DPC3PFE3    Down
DPC8PFE0->CB0F0_05_0    Down    CB0F0_05_0->DPC8PFE0    Down
DPC8PFE1->CB0F0_05_1    Down    CB0F0_05_1->DPC8PFE1    Down
DPC8PFE2->CB0F0_05_2    Down    CB0F0_05_2->DPC8PFE2    Down
DPC8PFE3->CB0F0_05_3    Down    CB0F0_05_3->DPC8PFE3    Down
DPC1PFE0->CB0F0_06_0    Down    CB0F0_06_0->DPC1PFE0    Down

```



DPC1PFE1->CB0F0_06_1	Down	CB0F0_06_1->DPC1PFE1	Down
DPC1PFE2->CB0F0_06_2	Down	CB0F0_06_2->DPC1PFE2	Down
DPC1PFE3->CB0F0_06_3	Down	CB0F0_06_3->DPC1PFE3	Down
DPC10PFE0->CB0F0_07_0	Down	CB0F0_07_0->DPC10PFE0	Down
DPC10PFE1->CB0F0_07_1	Down	CB0F0_07_1->DPC10PFE1	Down
DPC10PFE2->CB0F0_07_2	Down	CB0F0_07_2->DPC10PFE2	Down
DPC10PFE3->CB0F0_07_3	Down	CB0F0_07_3->DPC10PFE3	Down
DPC11PFE0->CB0F0_08_0	Down	CB0F0_08_0->DPC11PFE0	Down
DPC11PFE1->CB0F0_08_1	Down	CB0F0_08_1->DPC11PFE1	Down
DPC11PFE2->CB0F0_08_2	Down	CB0F0_08_2->DPC11PFE2	Down
DPC11PFE3->CB0F0_08_3	Down	CB0F0_08_3->DPC11PFE3	Down
DPC0PFE0->CB0F0_09_0	Down	CB0F0_09_0->DPC0PFE0	Down
DPC0PFE1->CB0F0_09_1	Down	CB0F0_09_1->DPC0PFE1	Down
DPC0PFE2->CB0F0_09_2	Down	CB0F0_09_2->DPC0PFE2	Down
DPC0PFE3->CB0F0_09_3	Down	CB0F0_09_3->DPC0PFE3	Down
DPC9PFE0->CB0F0_11_0	Down	CB0F0_11_0->DPC9PFE0	Down
DPC9PFE1->CB0F0_11_1	Down	CB0F0_11_1->DPC9PFE1	Down
DPC9PFE2->CB0F0_11_2	Down	CB0F0_11_2->DPC9PFE2	Down
DPC9PFE3->CB0F0_11_3	Down	CB0F0_11_3->DPC9PFE3	Down
DPC2PFE0->CB0F0_13_0	up	CB0F0_13_0->DPC2PFE0	up
DPC2PFE1->CB0F0_13_1	up	CB0F0_13_1->DPC2PFE1	up
DPC2PFE2->CB0F0_13_2	up	CB0F0_13_2->DPC2PFE2	up
DPC2PFE3->CB0F0_13_3	up	CB0F0_13_3->DPC2PFE3	up
DPC6PFE0->CB0F0_14_0	Down	CB0F0_14_0->DPC6PFE0	Down
DPC6PFE1->CB0F0_14_1	Down	CB0F0_14_1->DPC6PFE1	Down
DPC6PFE2->CB0F0_14_2	Down	CB0F0_14_2->DPC6PFE2	Down
DPC6PFE3->CB0F0_14_3	Down	CB0F0_14_3->DPC6PFE3	Down
DPC5PFE0->CB0F0_15_0	Down	CB0F0_15_0->DPC5PFE0	Down
DPC5PFE1->CB0F0_15_1	Down	CB0F0_15_1->DPC5PFE1	Down
DPC5PFE2->CB0F0_15_2	Down	CB0F0_15_2->DPC5PFE2	Down
DPC5PFE3->CB0F0_15_3	Down	CB0F0_15_3->DPC5PFE3	Down
DPC4PFE0->CB0F1_00_0	up	CB0F1_00_0->DPC4PFE0	up
DPC4PFE1->CB0F1_00_1	up	CB0F1_00_1->DPC4PFE1	up
DPC4PFE2->CB0F1_00_2	up	CB0F1_00_2->DPC4PFE2	up
DPC4PFE3->CB0F1_00_3	up	CB0F1_00_3->DPC4PFE3	up
DPC7PFE0->CB0F1_01_0	Down	CB0F1_01_0->DPC7PFE0	Down
DPC7PFE1->CB0F1_01_1	Down	CB0F1_01_1->DPC7PFE1	Down
DPC7PFE2->CB0F1_01_2	Down	CB0F1_01_2->DPC7PFE2	Down
DPC7PFE3->CB0F1_01_3	Down	CB0F1_01_3->DPC7PFE3	Down
DPC3PFE0->CB0F1_03_0	Down	CB0F1_03_0->DPC3PFE0	Down
DPC3PFE1->CB0F1_03_1	Down	CB0F1_03_1->DPC3PFE1	Down
DPC3PFE2->CB0F1_03_2	Down	CB0F1_03_2->DPC3PFE2	Down
DPC3PFE3->CB0F1_03_3	Down	CB0F1_03_3->DPC3PFE3	Down
DPC8PFE0->CB0F1_05_0	Down	CB0F1_05_0->DPC8PFE0	Down
DPC8PFE1->CB0F1_05_1	Down	CB0F1_05_1->DPC8PFE1	Down
DPC8PFE2->CB0F1_05_2	Down	CB0F1_05_2->DPC8PFE2	Down
DPC8PFE3->CB0F1_05_3	Down	CB0F1_05_3->DPC8PFE3	Down
DPC1PFE0->CB0F1_06_0	Down	CB0F1_06_0->DPC1PFE0	Down
DPC1PFE1->CB0F1_06_1	Down	CB0F1_06_1->DPC1PFE1	Down
DPC1PFE2->CB0F1_06_2	Down	CB0F1_06_2->DPC1PFE2	Down
DPC1PFE3->CB0F1_06_3	Down	CB0F1_06_3->DPC1PFE3	Down
DPC10PFE0->CB0F1_07_0	Down	CB0F1_07_0->DPC10PFE0	Down
DPC10PFE1->CB0F1_07_1	Down	CB0F1_07_1->DPC10PFE1	Down
DPC10PFE2->CB0F1_07_2	Down	CB0F1_07_2->DPC10PFE2	Down
DPC10PFE3->CB0F1_07_3	Down	CB0F1_07_3->DPC10PFE3	Down
DPC11PFE0->CB0F1_08_0	Down	CB0F1_08_0->DPC11PFE0	Down
DPC11PFE1->CB0F1_08_1	Down	CB0F1_08_1->DPC11PFE1	Down
DPC11PFE2->CB0F1_08_2	Down	CB0F1_08_2->DPC11PFE2	Down
DPC11PFE3->CB0F1_08_3	Down	CB0F1_08_3->DPC11PFE3	Down
DPC0PFE0->CB0F1_09_0	Down	CB0F1_09_0->DPC0PFE0	Down



DPC0PFE1->CB0F1_09_1	Down	CB0F1_09_1->DPC0PFE1	Down
DPC0PFE2->CB0F1_09_2	Down	CB0F1_09_2->DPC0PFE2	Down
DPC0PFE3->CB0F1_09_3	Down	CB0F1_09_3->DPC0PFE3	Down
DPC9PFE0->CB0F1_11_0	Down	CB0F1_11_0->DPC9PFE0	Down
DPC9PFE1->CB0F1_11_1	Down	CB0F1_11_1->DPC9PFE1	Down
DPC9PFE2->CB0F1_11_2	Down	CB0F1_11_2->DPC9PFE2	Down
DPC9PFE3->CB0F1_11_3	Down	CB0F1_11_3->DPC9PFE3	Down
DPC2PFE0->CB0F1_13_0	up	CB0F1_13_0->DPC2PFE0	up
DPC2PFE1->CB0F1_13_1	up	CB0F1_13_1->DPC2PFE1	up
DPC2PFE2->CB0F1_13_2	up	CB0F1_13_2->DPC2PFE2	up
DPC2PFE3->CB0F1_13_3	up	CB0F1_13_3->DPC2PFE3	up
DPC6PFE0->CB0F1_14_0	Down	CB0F1_14_0->DPC6PFE0	Down
DPC6PFE1->CB0F1_14_1	Down	CB0F1_14_1->DPC6PFE1	Down
DPC6PFE2->CB0F1_14_2	Down	CB0F1_14_2->DPC6PFE2	Down
DPC6PFE3->CB0F1_14_3	Down	CB0F1_14_3->DPC6PFE3	Down
DPC5PFE0->CB0F1_15_0	Down	CB0F1_15_0->DPC5PFE0	Down
DPC5PFE1->CB0F1_15_1	Down	CB0F1_15_1->DPC5PFE1	Down
DPC5PFE2->CB0F1_15_2	Down	CB0F1_15_2->DPC5PFE2	Down
DPC5PFE3->CB0F1_15_3	Down	CB0F1_15_3->DPC5PFE3	Down
DPC4PFE0->CB1F0_00_0	up	CB1F0_00_0->DPC4PFE0	up
DPC4PFE1->CB1F0_00_1	up	CB1F0_00_1->DPC4PFE1	up
DPC4PFE2->CB1F0_00_2	up	CB1F0_00_2->DPC4PFE2	up
DPC4PFE3->CB1F0_00_3	up	CB1F0_00_3->DPC4PFE3	up
DPC7PFE0->CB1F0_01_0	Down	CB1F0_01_0->DPC7PFE0	Down
DPC7PFE1->CB1F0_01_1	Down	CB1F0_01_1->DPC7PFE1	Down
DPC7PFE2->CB1F0_01_2	Down	CB1F0_01_2->DPC7PFE2	Down
DPC7PFE3->CB1F0_01_3	Down	CB1F0_01_3->DPC7PFE3	Down
DPC3PFE0->CB1F0_03_0	Down	CB1F0_03_0->DPC3PFE0	Down
DPC3PFE1->CB1F0_03_1	Down	CB1F0_03_1->DPC3PFE1	Down
DPC3PFE2->CB1F0_03_2	Down	CB1F0_03_2->DPC3PFE2	Down
DPC3PFE3->CB1F0_03_3	Down	CB1F0_03_3->DPC3PFE3	Down
DPC8PFE0->CB1F0_05_0	Down	CB1F0_05_0->DPC8PFE0	Down
DPC8PFE1->CB1F0_05_1	Down	CB1F0_05_1->DPC8PFE1	Down
DPC8PFE2->CB1F0_05_2	Down	CB1F0_05_2->DPC8PFE2	Down
DPC8PFE3->CB1F0_05_3	Down	CB1F0_05_3->DPC8PFE3	Down
DPC1PFE0->CB1F0_06_0	Down	CB1F0_06_0->DPC1PFE0	Down
DPC1PFE1->CB1F0_06_1	Down	CB1F0_06_1->DPC1PFE1	Down
DPC1PFE2->CB1F0_06_2	Down	CB1F0_06_2->DPC1PFE2	Down
DPC1PFE3->CB1F0_06_3	Down	CB1F0_06_3->DPC1PFE3	Down
DPC10PFE0->CB1F0_07_0	Down	CB1F0_07_0->DPC10PFE0	Down
DPC10PFE1->CB1F0_07_1	Down	CB1F0_07_1->DPC10PFE1	Down
DPC10PFE2->CB1F0_07_2	Down	CB1F0_07_2->DPC10PFE2	Down
DPC10PFE3->CB1F0_07_3	Down	CB1F0_07_3->DPC10PFE3	Down
DPC11PFE0->CB1F0_08_0	Down	CB1F0_08_0->DPC11PFE0	Down
DPC11PFE1->CB1F0_08_1	Down	CB1F0_08_1->DPC11PFE1	Down
DPC11PFE2->CB1F0_08_2	Down	CB1F0_08_2->DPC11PFE2	Down
DPC11PFE3->CB1F0_08_3	Down	CB1F0_08_3->DPC11PFE3	Down
DPC0PFE0->CB1F0_09_0	Down	CB1F0_09_0->DPC0PFE0	Down
DPC0PFE1->CB1F0_09_1	Down	CB1F0_09_1->DPC0PFE1	Down
DPC0PFE2->CB1F0_09_2	Down	CB1F0_09_2->DPC0PFE2	Down
DPC0PFE3->CB1F0_09_3	Down	CB1F0_09_3->DPC0PFE3	Down
DPC9PFE0->CB1F0_11_0	Down	CB1F0_11_0->DPC9PFE0	Down
DPC9PFE1->CB1F0_11_1	Down	CB1F0_11_1->DPC9PFE1	Down
DPC9PFE2->CB1F0_11_2	Down	CB1F0_11_2->DPC9PFE2	Down
DPC9PFE3->CB1F0_11_3	Down	CB1F0_11_3->DPC9PFE3	Down
DPC2PFE0->CB1F0_13_0	up	CB1F0_13_0->DPC2PFE0	up
DPC2PFE1->CB1F0_13_1	up	CB1F0_13_1->DPC2PFE1	up
DPC2PFE2->CB1F0_13_2	up	CB1F0_13_2->DPC2PFE2	up
DPC2PFE3->CB1F0_13_3	up	CB1F0_13_3->DPC2PFE3	up
DPC6PFE0->CB1F0_14_0	Down	CB1F0_14_0->DPC6PFE0	Down



DPC6PFE1->CB1F0_14_1	Down	CB1F0_14_1->DPC6PFE1	Down
DPC6PFE2->CB1F0_14_2	Down	CB1F0_14_2->DPC6PFE2	Down
DPC6PFE3->CB1F0_14_3	Down	CB1F0_14_3->DPC6PFE3	Down
DPC5PFE0->CB1F0_15_0	Down	CB1F0_15_0->DPC5PFE0	Down
DPC5PFE1->CB1F0_15_1	Down	CB1F0_15_1->DPC5PFE1	Down
DPC5PFE2->CB1F0_15_2	Down	CB1F0_15_2->DPC5PFE2	Down
DPC5PFE3->CB1F0_15_3	Down	CB1F0_15_3->DPC5PFE3	Down
DPC4PFE0->CB1F1_00_0	up	CB1F1_00_0->DPC4PFE0	up
DPC4PFE1->CB1F1_00_1	up	CB1F1_00_1->DPC4PFE1	up
DPC4PFE2->CB1F1_00_2	up	CB1F1_00_2->DPC4PFE2	up
DPC4PFE3->CB1F1_00_3	up	CB1F1_00_3->DPC4PFE3	up
DPC7PFE0->CB1F1_01_0	Down	CB1F1_01_0->DPC7PFE0	Down
DPC7PFE1->CB1F1_01_1	Down	CB1F1_01_1->DPC7PFE1	Down
DPC7PFE2->CB1F1_01_2	Down	CB1F1_01_2->DPC7PFE2	Down
DPC7PFE3->CB1F1_01_3	Down	CB1F1_01_3->DPC7PFE3	Down
DPC3PFE0->CB1F1_03_0	Down	CB1F1_03_0->DPC3PFE0	Down
DPC3PFE1->CB1F1_03_1	Down	CB1F1_03_1->DPC3PFE1	Down
DPC3PFE2->CB1F1_03_2	Down	CB1F1_03_2->DPC3PFE2	Down
DPC3PFE3->CB1F1_03_3	Down	CB1F1_03_3->DPC3PFE3	Down
DPC8PFE0->CB1F1_05_0	Down	CB1F1_05_0->DPC8PFE0	Down
DPC8PFE1->CB1F1_05_1	Down	CB1F1_05_1->DPC8PFE1	Down
DPC8PFE2->CB1F1_05_2	Down	CB1F1_05_2->DPC8PFE2	Down
DPC8PFE3->CB1F1_05_3	Down	CB1F1_05_3->DPC8PFE3	Down
DPC1PFE0->CB1F1_06_0	Down	CB1F1_06_0->DPC1PFE0	Down
DPC1PFE1->CB1F1_06_1	Down	CB1F1_06_1->DPC1PFE1	Down
DPC1PFE2->CB1F1_06_2	Down	CB1F1_06_2->DPC1PFE2	Down
DPC1PFE3->CB1F1_06_3	Down	CB1F1_06_3->DPC1PFE3	Down
DPC10PFE0->CB1F1_07_0	Down	CB1F1_07_0->DPC10PFE0	Down
DPC10PFE1->CB1F1_07_1	Down	CB1F1_07_1->DPC10PFE1	Down
DPC10PFE2->CB1F1_07_2	Down	CB1F1_07_2->DPC10PFE2	Down
DPC10PFE3->CB1F1_07_3	Down	CB1F1_07_3->DPC10PFE3	Down
DPC11PFE0->CB1F1_08_0	Down	CB1F1_08_0->DPC11PFE0	Down
DPC11PFE1->CB1F1_08_1	Down	CB1F1_08_1->DPC11PFE1	Down
DPC11PFE2->CB1F1_08_2	Down	CB1F1_08_2->DPC11PFE2	Down
DPC11PFE3->CB1F1_08_3	Down	CB1F1_08_3->DPC11PFE3	Down
DPC0PFE0->CB1F1_09_0	Down	CB1F1_09_0->DPC0PFE0	Down
DPC0PFE1->CB1F1_09_1	Down	CB1F1_09_1->DPC0PFE1	Down
DPC0PFE2->CB1F1_09_2	Down	CB1F1_09_2->DPC0PFE2	Down
DPC0PFE3->CB1F1_09_3	Down	CB1F1_09_3->DPC0PFE3	Down
DPC9PFE0->CB1F1_11_0	Down	CB1F1_11_0->DPC9PFE0	Down
DPC9PFE1->CB1F1_11_1	Down	CB1F1_11_1->DPC9PFE1	Down
DPC9PFE2->CB1F1_11_2	Down	CB1F1_11_2->DPC9PFE2	Down
DPC9PFE3->CB1F1_11_3	Down	CB1F1_11_3->DPC9PFE3	Down
DPC2PFE0->CB1F1_13_0	up	CB1F1_13_0->DPC2PFE0	up
DPC2PFE1->CB1F1_13_1	up	CB1F1_13_1->DPC2PFE1	up
DPC2PFE2->CB1F1_13_2	up	CB1F1_13_2->DPC2PFE2	up
DPC2PFE3->CB1F1_13_3	up	CB1F1_13_3->DPC2PFE3	up
DPC6PFE0->CB1F1_14_0	Down	CB1F1_14_0->DPC6PFE0	Down
DPC6PFE1->CB1F1_14_1	Down	CB1F1_14_1->DPC6PFE1	Down
DPC6PFE2->CB1F1_14_2	Down	CB1F1_14_2->DPC6PFE2	Down
DPC6PFE3->CB1F1_14_3	Down	CB1F1_14_3->DPC6PFE3	Down
DPC5PFE0->CB1F1_15_0	Down	CB1F1_15_0->DPC5PFE0	Down
DPC5PFE1->CB1F1_15_1	Down	CB1F1_15_1->DPC5PFE1	Down
DPC5PFE2->CB1F1_15_2	Down	CB1F1_15_2->DPC5PFE2	Down
DPC5PFE3->CB1F1_15_3	Down	CB1F1_15_3->DPC5PFE3	Down
plane 4 is not up			
plane 5 is not up			



## show chassis fabric map plane 1 (EX8200 Switch)

```
user@host> show chassis fabric map plane 1
```

```
user@host> show chassis fabric map plane 1
DPC6PFE0->CB0F0_00_0    Down    CB0F0_00_0->DPC6PFE0    Down
DPC6PFE1->CB0F0_00_1    Down    CB0F0_00_1->DPC6PFE1    Down
DPC6PFE2->CB0F0_00_2    Down    CB0F0_00_2->DPC6PFE2    Down
DPC6PFE3->CB0F0_00_3    Down    CB0F0_00_3->DPC6PFE3    Down
DPC0PFE0->CB0F0_01_0    Down    CB0F0_01_0->DPC0PFE0    Down
DPC0PFE1->CB0F0_01_1    Down    CB0F0_01_1->DPC0PFE1    Down
DPC0PFE2->CB0F0_01_2    Down    CB0F0_01_2->DPC0PFE2    Down
DPC0PFE3->CB0F0_01_3    Down    CB0F0_01_3->DPC0PFE3    Down
DPC5PFE0->CB0F0_02_0    Down    CB0F0_02_0->DPC5PFE0    Down
DPC5PFE1->CB0F0_02_1    Down    CB0F0_02_1->DPC5PFE1    Down
DPC5PFE2->CB0F0_02_2    Down    CB0F0_02_2->DPC5PFE2    Down
DPC5PFE3->CB0F0_02_3    Down    CB0F0_02_3->DPC5PFE3    Down
DPC3PFE0->CB0F0_03_0    Down    CB0F0_03_0->DPC3PFE0    Down
DPC3PFE1->CB0F0_03_1    Down    CB0F0_03_1->DPC3PFE1    Down
DPC3PFE2->CB0F0_03_2    Down    CB0F0_03_2->DPC3PFE2    Down
DPC3PFE3->CB0F0_03_3    Down    CB0F0_03_3->DPC3PFE3    Down
DPC4PFE0->CB0F0_04_0    Down    CB0F0_04_0->DPC4PFE0    Down
DPC4PFE1->CB0F0_04_1    Down    CB0F0_04_1->DPC4PFE1    Down
DPC4PFE2->CB0F0_04_2    Down    CB0F0_04_2->DPC4PFE2    Down
DPC4PFE3->CB0F0_04_3    Down    CB0F0_04_3->DPC4PFE3    Down
DPC2PFE0->CB0F0_05_0    Down    CB0F0_05_0->DPC2PFE0    Down
DPC2PFE1->CB0F0_05_1    Down    CB0F0_05_1->DPC2PFE1    Down
DPC2PFE2->CB0F0_05_2    Down    CB0F0_05_2->DPC2PFE2    Down
DPC2PFE3->CB0F0_05_3    Down    CB0F0_05_3->DPC2PFE3    Down
DPC7PFE0->CB0F0_06_0    Down    CB0F0_06_0->DPC7PFE0    Down
DPC7PFE1->CB0F0_06_1    Down    CB0F0_06_1->DPC7PFE1    Down
DPC7PFE2->CB0F0_06_2    Down    CB0F0_06_2->DPC7PFE2    Down
DPC7PFE3->CB0F0_06_3    Down    CB0F0_06_3->DPC7PFE3    Down
DPC1PFE0->CB0F0_07_0    Down    CB0F0_07_0->DPC1PFE0    Down
DPC1PFE1->CB0F0_07_1    Down    CB0F0_07_1->DPC1PFE1    Down
DPC1PFE2->CB0F0_07_2    Down    CB0F0_07_2->DPC1PFE2    Down
DPC1PFE3->CB0F0_07_3    Down    CB0F0_07_3->DPC1PFE3    Down
DPC0PFE0->CB0F0_08_0    Down    CB0F0_08_0->DPC0PFE0    Down
DPC0PFE1->CB0F0_08_1    Down    CB0F0_08_1->DPC0PFE1    Down
DPC0PFE2->CB0F0_08_2    Down    CB0F0_08_2->DPC0PFE2    Down
DPC0PFE3->CB0F0_08_3    Down    CB0F0_08_3->DPC0PFE3    Down
DPC7PFE0->CB0F0_09_0    Down    CB0F0_09_0->DPC7PFE0    Down
DPC7PFE1->CB0F0_09_1    Down    CB0F0_09_1->DPC7PFE1    Down
DPC7PFE2->CB0F0_09_2    Down    CB0F0_09_2->DPC7PFE2    Down
DPC7PFE3->CB0F0_09_3    Down    CB0F0_09_3->DPC7PFE3    Down
DPC1PFE0->CB0F0_10_0    Down    CB0F0_10_0->DPC1PFE0    Down
DPC1PFE1->CB0F0_10_1    Down    CB0F0_10_1->DPC1PFE1    Down
DPC1PFE2->CB0F0_10_2    Down    CB0F0_10_2->DPC1PFE2    Down
DPC1PFE3->CB0F0_10_3    Down    CB0F0_10_3->DPC1PFE3    Down
DPC4PFE0->CB0F0_11_0    Down    CB0F0_11_0->DPC4PFE0    Down
DPC4PFE1->CB0F0_11_1    Down    CB0F0_11_1->DPC4PFE1    Down
DPC4PFE2->CB0F0_11_2    Down    CB0F0_11_2->DPC4PFE2    Down
DPC4PFE3->CB0F0_11_3    Down    CB0F0_11_3->DPC4PFE3    Down
DPC2PFE0->CB0F0_12_0    Down    CB0F0_12_0->DPC2PFE0    Down
DPC2PFE1->CB0F0_12_1    Down    CB0F0_12_1->DPC2PFE1    Down
DPC2PFE2->CB0F0_12_2    Down    CB0F0_12_2->DPC2PFE2    Down
DPC2PFE3->CB0F0_12_3    Down    CB0F0_12_3->DPC2PFE3    Down
DPC5PFE0->CB0F0_13_0    Down    CB0F0_13_0->DPC5PFE0    Down
DPC5PFE1->CB0F0_13_1    Down    CB0F0_13_1->DPC5PFE1    Down
DPC5PFE2->CB0F0_13_2    Down    CB0F0_13_2->DPC5PFE2    Down
DPC5PFE3->CB0F0_13_3    Down    CB0F0_13_3->DPC5PFE3    Down
```



DPC3PFE0->CB0F0_14_0	Down	CB0F0_14_0->DPC3PFE0	Down
DPC3PFE1->CB0F0_14_1	Down	CB0F0_14_1->DPC3PFE1	Down
DPC3PFE2->CB0F0_14_2	Down	CB0F0_14_2->DPC3PFE2	Down
DPC3PFE3->CB0F0_14_3	Down	CB0F0_14_3->DPC3PFE3	Down
DPC6PFE0->CB0F0_15_0	Down	CB0F0_15_0->DPC6PFE0	Down
DPC6PFE1->CB0F0_15_1	Down	CB0F0_15_1->DPC6PFE1	Down
DPC6PFE2->CB0F0_15_2	Down	CB0F0_15_2->DPC6PFE2	Down
DPC6PFE3->CB0F0_15_3	Down	CB0F0_15_3->DPC6PFE3	Down



## show chassis fabric plane

<b>List of Syntax</b>	<a href="#">Syntax on page 561</a> <a href="#">Syntax (TX Matrix Plus Router) on page 561</a> <a href="#">Syntax (MX Series Routers) on page 561</a> <a href="#">Syntax (MX2010, MX2020, MX10008, and MX2008 Universal Routing Platforms) on page 561</a> <a href="#">Syntax (EX9253 Switches) on page 561</a>
<b>Syntax</b>	show chassis fabric plane
<b>Syntax (TX Matrix Plus Router)</b>	show chassis fabric plane <detail   extensive   terse> <lcc <i>number</i>   sfc <i>number</i> >
<b>Syntax (MX Series Routers)</b>	show chassis fabric plane <extended> <detail   extensive   terse> <all-members> <local> <member <i>member-id</i> >
<b>Syntax (MX2010, MX2020, MX10008, and MX2008 Universal Routing Platforms)</b>	show chassis fabric plane
<b>Syntax (EX9253 Switches)</b>	show chassis fabric plane
<b>Release Information</b>	<p>Command introduced in Junos OS Release 8.0.</p> <p>Command introduced in Junos OS Release 9.4 for EX Series switches.</p> <p>detail, extensive, lcc, sfc, and terse options introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 Universal Routing Platforms.</p> <p><b>extended</b> option introduced in Junos OS Release 16.1 for MX2020 and MX2010 Routers.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.2 for MX10008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p>
<b>Description</b>	(TX Matrix Plus router, T4000, T1600, M120, and MX Series routers and EX8200 switches only) On the M120 router, display the state of all fabric plane connections to the Forwarding Engine Boards (FEBs). On MX Series routers, display the state of all fabric plane connections to the Dense Port Concentrators (DPCs) and Packet Forwarding



Engines (PFEs) on the Flexible PIC Concentrators (FPCs). On the TX Matrix Plus router, and on T1600 or T4000 routers in a routing matrix, display the state of the fabric management plane and the logical planes on the switch-fabric chassis (SFC) and line-card chassis (LCC). On EX8200 switches, display the state of all fabric planes. This command can be used on the master Routing Engine only.

**Options** **none**—(MX2010, MX2020, and MX2008 Routers only) (Optional) Display the state of the fabric management plane.

**extended**—(MX2020, MX2010, and MX2008 Routers only) (Optional) Display the state of the fabric management planes (all 24 fabric planes).

**detail**—(TX Matrix Plus routers, T1600 or T4000 routers in a routing matrix, and MX Series routers only) (Optional) Display detailed output for the fabric management plane. Show Switch Interface Board (SIB) states for the TXP-F13 SIB and the TXP-F2S SIB.

**extensive**—(TX Matrix Plus routers, T1600 or T4000 routers in a routing matrix, and MX Series routers only) (Optional) Display extensive output for the fabric management plane.

**terse**—(TX Matrix Plus routers and MX Series routers only) (Optional) Display terse output for the fabric management plane.

**all-members**—(MX Series routers only) (Optional) Display the state of all fabric plane connections on all members of the Virtual Chassis configuration.

**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display the state of all fabric plane connections on the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display the state of all fabric plane connections on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.



**sfc *number***—(TX Matrix Plus router only) (Optional) Show information about the TX Matrix Plus router (SFC). Replace *number* with 0.

**Required Privilege Level** view

**Related Documentation**

- [request chassis fabric plane on page 124](#)
- [show chassis fabric plane-location on page 616](#)
- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

**List of Sample Output**

- [show chassis fabric plane \(M120 Router\) on page 570](#)
- [show chassis fabric plane \(MX240 Router\) on page 571](#)
- [show chassis fabric plane \(MX10008 Router\) on page 572](#)
- [show chassis fabric plane \(MX480 Router\) on page 574](#)
- [show chassis fabric plane \(MX960 Router\) on page 575](#)
- [show chassis fabric plane \(MX240 with AS MLC Modular Carrier Card\) on page 575](#)
- [show chassis fabric plane \(MX480 with AS MLC Modular Carrier Card\) on page 576](#)
- [show chassis fabric plane \(MX480 Router with MPC4E\) on page 577](#)
- [show chassis fabric plane \(MX960 with AS-MLC Modular Carrier Card\) on page 580](#)
- [show chassis fabric plane \(MX2010 Router\) on page 582](#)
- [show chassis fabric plane \(MX2020 Router\) on page 586](#)
- [show chassis fabric plane \(MX2020 Router with MPC4E\) on page 591](#)
- [show chassis fabric plane \(MX2020 Routers with SFB2\) on page 593](#)
- [show chassis fabric plane \(MX2008\) on page 597](#)
- [show chassis fabric plane \(TX Matrix Plus Router\) on page 599](#)
- [show chassis fabric plane \(TX Matrix Plus Router with 3D SIBs\) on page 599](#)
- [show chassis fabric plane detail \(TX Matrix Plus Router\) on page 600](#)
- [show chassis fabric plane extensive \(TX Matrix Plus Router \) on page 601](#)
- [show chassis fabric plane extensive \(TX Matrix Plus Router with 3D SIBs\) on page 603](#)
- [show chassis fabric plane terse \(TX Matrix Plus Router\) on page 605](#)
- [show chassis fabric plane terse \(TX Matrix Plus Router with 3D SIBs\) on page 606](#)
- [show chassis fabric plane lcc \(TX Matrix Plus Router\) on page 606](#)
- [show chassis fabric plane lcc \(TX Matrix Plus Router with 3D SIBs\) on page 607](#)
- [show chassis fabric plane sfc \(TX Matrix Plus Router\) on page 607](#)
- [show chassis fabric plane sfc \(TX Matrix Plus Router with 3D SIBs\) on page 607](#)
- [show chassis fabric plane \(T1600 Router\) on page 607](#)
- [show chassis fabric plane extensive \(T1600 Router\) on page 608](#)
- [show chassis fabric plane detail \(T1600 Router\) on page 610](#)
- [show chassis fabric plane \(EX8200 Switch\) on page 611](#)
- [show chassis fabric plane \(EX9253 Switch\) on page 611](#)

**Output Fields** [Table 21 on page 564](#) lists the output fields for the **show chassis fabric plane** command. Output fields are listed in the approximate order in which they appear.



**Table 21: show chassis fabric plane Output Fields**

Field Name	Field Description	Level of output
Plane	(TX Matrix Plus, MX Series routers, M120 routers, and EX8200 switches only) Number of the plane.	none
Plane state	<p>(MX Series and M120 routers and EX8200 switches only) State of each plane:</p> <ul style="list-style-type: none"> <li>ACTIVE—SIB is operational and running.</li> </ul> <p><b>NOTE:</b> On the Enhanced MX SCB with MPCs, a maximum of 4 planes are operational and running. On all the other SCBs with MPCs, all the planes are operational and running.</p> <ul style="list-style-type: none"> <li>FAULTY— SIB is in alarmed state where the SIB's plane is not operational for the following reasons: <ul style="list-style-type: none"> <li>On-board fabric ASIC is not operational.</li> <li>Fiber optic connector faults.</li> <li>FPC connector faults.</li> <li>SIB midplane connector faults.</li> </ul> </li> </ul> <p>(MX2010, MX2020, MX10003, and MX2008 Routers only) State of each plane:</p> <ul style="list-style-type: none"> <li>ACTIVE—SFB is operational and running.</li> <li>OFFLINE— SFB is in offline.</li> </ul>	none
FEB	<p>(M120 routers only) FEB number and state of links to each FEB:</p> <ul style="list-style-type: none"> <li>Link error—Link between SIB and FPC is not operational.</li> <li>Links ok—Link between SIB and FPC is active.</li> <li>Unused—No FPC is present.</li> </ul>	none
FPC	(MX Series routers only) Slot number of each Dense Port Concentrator (DPC) or Flexible PIC Concentrator (FPC). An FPC occupies two DPC slots on an MX Series router. The interface corresponds to the lowest numbered DPC slot for which the FPC is installed.	none



Table 21: show chassis fabric plane Output Fields (continued)

Field Name	Field Description	Level of output
PFE	<p>(MX Series and M120 routers only) Slot number of each Packet Forwarding Engine and the state of the links to the DCP: <b>Links ok</b>, <b>Link error</b>, or <b>Unused</b>. Each DPC includes four Packet Forwarding Engines.</p> <ul style="list-style-type: none"> <li>• <b>Links ok</b>: Link between SIB and FPC is active.</li> <li>• <b>Link error</b>: Link between SIB and FPC is not operational.</li> <li>• <b>Unused</b>: No FPC is present.</li> </ul> <p>(On MX240 and MX480 routers with AS MLC modular carrier card and MPC4E only) Indicates that the link between the fabric plane and the hardware link on the modular carrier card or MPC4E is not operational.</p> <p>(MX2010, MX2020, and MX2008 routers only) Slot number of each Packet Forwarding Engine and the state of the links to the DPC: <b>Links ok</b>, <b>Link error</b>, or <b>Unused</b>. Each DPC includes four Packet Forwarding Engines.</p> <ul style="list-style-type: none"> <li>• <b>Links ok</b>: Link between SFB and FPC is active.</li> <li>• <b>Link error</b>: Link between SFB and FPC is not operational.</li> <li>• <b>Unused</b>: No FPC is present.</li> </ul>	none
State	<p>(TX Matrix Plus, and T1600 or T4000 routers in a routing matrix only)—State of the fabric plane:</p> <ul style="list-style-type: none"> <li>• <b>Online</b>: Fabric plane is operational and running and links on the SIB are operational.</li> <li>• <b>Offline</b>: Fabric plane state is <b>Offline</b> because the plane does not have four or more F2S and one F13 online.</li> <li>• <b>Empty</b>: Fabric plane state is <b>Empty</b> if all SIBs in the plane are absent.</li> <li>• <b>Spare</b>: Fabric plane is redundant and can be operational if the operational fabric plane encounters an error.</li> <li>• <b>Check</b>: Fabric plane is in alarmed state due to the following reason and the cause of the error must be resolved: <ul style="list-style-type: none"> <li>• One or more SIBs (belonging to the fabric plane) in the <b>Online</b> or <b>Spare</b> states has transitioned to the <b>Check</b> state. <b>Check</b> state of the SIB can be caused by link errors or destination errors.</li> </ul> </li> <li>• <b>Fault</b>: Fabric plane is in alarmed state if one or more SIBs belonging to the plane are in the <b>Fault</b> state. A SIB can be in the <b>Fault</b> state because of the following reasons: <ul style="list-style-type: none"> <li>• On-board fabric ASIC is not operational.</li> <li>• Fiber optic connector faults.</li> <li>• FPC connector faults.</li> <li>• SIB midplane connector faults.</li> <li>• Link errors have exceeded the threshold.</li> </ul> </li> </ul>	none
Link Errors	<p>(TX Matrix Plus routers with 3D SIBs only) indicate the number of links which are marked faulty because the errors on them have crossed threshold.</p>	none



Table 21: show chassis fabric plane Output Fields (continued)

Field Name	Field Description	Level of output
<b>Cable Errors</b>	(TX Matrix Plus routers with 3D SIBs only) Indicate the number of mandatory cables that are not connected, or in up state for that plane	none
<b>Destination Errors</b>	(TX Matrix Plus routers with 3D SIBs only) Indicates the number of destinations that are not reachable on this plane.	none
<b>Uptime</b>	(TX Matrix Plus, and T1600 or T4000 routers in a routing matrix only)—Time the fabric plane has been up and running.	none

#### Fabric Management Plane State Output Fields for the show chassis fabric plane extensive Command on a TX Matrix Plus Router

<b>PLANE <i>number</i></b>	<p>State of the fabric plane:</p> <ul style="list-style-type: none"> <li>• <b>Online:</b> Fabric plane is operational and running and links on the SIB are operational.</li> <li>• <b>Offline:</b> Fabric plane state is <b>Offline</b> because the plane does not have 4 or more F2S and 1 F13 online.</li> <li>• <b>Empty:</b> Fabric plane state is <b>Empty</b> if all SIBs in the plane are absent.</li> <li>• <b>Spare:</b> Fabric plane is redundant and can be operational if the operational fabric plane encounters an error.</li> <li>• <b>Check:</b> Fabric plane is in alarmed state due to the following reasons and the cause of the error must be resolved: <ul style="list-style-type: none"> <li>• One or more SIBs (belonging to the fabric plane) in the <b>Online</b> or <b>Spare</b> states has transitioned to the <b>Check</b> state. <b>Check</b> state of the SIB can be caused because of link errors or destination errors.</li> </ul> </li> <li>• <b>Fault:</b> Fabric plane is in alarmed state if one or more SIBs belonging to the plane are in the <b>Fault</b> state. A SIB can be in the <b>Fault</b> state because of the following reasons: <ul style="list-style-type: none"> <li>• On-board fabric ASIC is not operational.</li> <li>• Fiber optic connector faults.</li> <li>• FPC connector faults.</li> <li>• SIB midplane connector faults.</li> <li>• Link errors have exceeded the threshold.</li> </ul> </li> </ul>	<b>extensive</b>
----------------------------	---	------------------



Table 21: show chassis fabric plane Output Fields (continued)

Field Name	Field Description	Level of output
<b>SIB F13/F2S slot-number</b>	<p>State of the TXP-F13 SIB or TXP-F2S SIB:</p> <ul style="list-style-type: none"> <li>• <b>Activating</b>—Transitional state when the SIB is transitioning to the <b>Online</b> or <b>Spare</b> state.</li> <li>• <b>Deactivating</b>—Transitional state when the SIB is going offline.</li> <li>• <b>Online</b>—SIB is operational and running.</li> <li>• <b>Offline</b>—SIB is powered down.</li> <li>• <b>Spare</b>—SIB is redundant and will move to active state if one of the working SIBs fails to pass traffic.</li> <li>• <b>Empty</b>—No SIB is present.</li> <li>• <b>Fault</b>—SIB is in alarmed state because of the following reasons and the cause of the error must be resolved: <ul style="list-style-type: none"> <li>• On-board fabric ASIC is not operational.</li> <li>• Fiber optic connector faults.</li> <li>• FPC connector faults.</li> <li>• SIB midplane connector faults.</li> <li>• Link errors have exceeded the threshold</li> </ul> </li> <li>• <b>Check</b>—SIB is in alarmed state where the SIB is partially operational because of link or destination errors. Only a SIB that is <b>Online</b> or <b>Spare</b> can transition to the <b>Check</b> state.</li> </ul> <p><b>NOTE:</b> If a SIB is not inserted properly, the SIB cannot transition to the <b>Online</b> or <b>Spare</b> state, and therefore cannot transition to the <b>Check</b> state.</p>	<b>extensive</b>
<b>SIB F13 slot-number Odd/Even</b>	<p>State of the TXP-F13 SIB even and odd port connection optical links from the TX Matrix Plus router (SFC) to the router (LCC) in the routing matrix. The left four ports on the SFC are labeled <b>Even</b> and provide connections to one even-numbered LCC—LCC0 or LCC2. The right four ports on the SFC are labeled <b>Odd</b> and provide connections to one odd-numbered LCC—LCC1 or LCC3.</p>	<b>extensive</b>
<b>LCC number, SIB slot-number</b>	<p>State of the SIB on the LCC that is connected to the <b>Even</b> or <b>Odd</b> port on the TXP-F13 SIB faceplate:</p> <ul style="list-style-type: none"> <li>• <b>Links ok</b>—Links between the TXP-F13 SIB on the SFC and the LCC are active.</li> <li>• <b>Links error</b>—One or more links between the TXP-F13 SIB on the SFC and the LCC, have experienced an error, but the affected links remain operational.</li> <li>• <b>Unused</b>—No SIB is present.</li> </ul>	<b>extensive</b>



Table 21: show chassis fabric plane Output Fields (continued)

Field Name	Field Description	Level of output
<b>SG number Port number</b>	State of the SG chip ports on the LCC: <ul style="list-style-type: none"> <li>• <b>Links ok</b>—Link is active.</li> <li>• <b>Link error</b>—Link is operational with errors.</li> <li>• <b>Link error crc saturated</b>—CRC has exceeded the rate threshold and reached saturation without optical issues—that is, a cable has not been cut, removed, or otherwise experienced an error.</li> <li>• <b>Link error crc saturated with optical errors</b>—CRC has exceeded the rate threshold and reached saturation with optical issues—that is, a cable has been cut, removed, or otherwise experienced an error.</li> <li>• <b>Unused</b>—Port is not in use.</li> </ul>	<b>extensive</b>
<b>SIB F2S slot-number</b>	State of the intra-chassis links between the TXP-F2S and TXP-F13 SIBs.	<b>extensive</b>

Fabric Management SIB State Output Fields for the show chassis fabric plane extensive Command on a TX Matrix Plus Router



Table 21: show chassis fabric plane Output Fields (continued)

Field Name	Field Description	Level of output
<b>SIB slot-number</b>	<p>State of the SIBs on the T1600/T4000 router (LCC) in the routing matrix:</p> <ul style="list-style-type: none"> <li>• <b>Activating</b>—Transitional state when the SIB is coming online.</li> <li>• <b>Deactivating</b>—Transitional state when the SIB is going offline.</li> <li>• <b>Connected</b>—SIBs on an LCC are connected and trained, but are either not online or are spare, because the plane on the the TX Matrix Plus router (SFC) is still offline. The LCC SIB transitions to the <b>Connected</b> state when the F13 SIB to which it connects is online but the SFC plane (to which the LCC SIB connects) is offline for some reason; for instance, when there are insufficient number of F2 SIBs in the plane.</li> <li>• <b>Disconnected</b>—If an F13 SIB on the TX Matrix Plus router (SFC) goes offline, then the SIBs on the LCCs connected to the F13 SIB get disconnected. On the TX Matrix Plus router with 3D SIBs, the LCC SIB is also disconnected if the F13 SIB is online, but none of the cables are connected or trained. The <b>Disconnected</b> state is valid only for SIBs on an LCC. An LCC SIB transitions to the <b>Disconnected</b> state when the F13 SIB to which it connects goes <b>Offline</b>, irrespective of the state of the SFC plane. <b>SFC Error</b>—If an F13 SIB on the TX Matrix Plus router (SFC) transitions to the <b>Fault</b> state (because of link errors, for instance), and if an LCC SIB connected to the F13 SIB comes online, the LCC SIB transitions to the <b>SFC Error</b> state. This state indicates that the F13 SIB to which the LCC SIB is connected has errors.</li> </ul> <p><b>NOTE:</b> The <b>Connected</b>, <b>Disconnected</b>, and <b>SFC Error</b> states are applicable only to the SIBs on an LCC.</p> <ul style="list-style-type: none"> <li>• <b>Online</b>—SIB is operational and running.</li> <li>• <b>Offline</b>—SIB is powered down.</li> <li>• <b>Spare</b>—SIB is redundant and will move to active state if one of the working SIBs fails to pass traffic.</li> <li>• <b>Empty</b>—No SIB is present.</li> <li>• <b>Fault</b>—SIB is in alarmed state where the SIB's plane is not operational for the following reasons: <ul style="list-style-type: none"> <li>• On-board fabric ASIC is not operational.</li> <li>• Fiber optic connector faults.</li> <li>• FPC connector faults.</li> <li>• SIB midplane connector faults.</li> <li>• Link errors have exceeded the threshold</li> </ul> </li> <li>• <b>Check</b>—SIB is in alarmed state where the SIB is partially operational because of link or destination errors. Only a SIB that is <b>Online</b> or <b>Spare</b> can transition to the <b>Check</b> state.</li> </ul> <p><b>NOTE:</b> If a SIB is not inserted properly, the SIB cannot transition to the <b>Online</b> or <b>Spare</b> state, and therefore cannot transition to the <b>Check</b> state.</p>	<b>extensive</b>



Table 21: show chassis fabric plane Output Fields (continued)

Field Name	Field Description	Level of output
<b>LCC SIB Link State</b>	State of the LCC SIB link: <ul style="list-style-type: none"> <li>• <b>Links ok</b>—Link is active.</li> <li>• <b>Links error</b>—A link error has occurred, but the link remains operational.</li> <li>• <b>Unused</b>—SIB is not in use.</li> </ul>	<b>extensive</b>
<b>SG number Port number</b>	State of the SG chip ports on the LCC: <ul style="list-style-type: none"> <li>• <b>Links ok</b>—Link is active.</li> <li>• <b>Link error</b>—Link is operational with errors.</li> <li>• <b>Link error crc saturated</b>—CRC has exceeded the rate threshold and reached saturation without optical issues—that is, a cable has not been cut, removed, or otherwise experienced an error.</li> <li>• <b>Link error crc saturated with optical errors</b>—CRC has exceeded the rate threshold and reached saturation with optical issues—that is, a cable has been cut, removed, or otherwise experienced an error.</li> <li>• <b>Unused</b>—Port is not in use.</li> </ul>	<b>extensive</b>

## Sample Output

### show chassis fabric plane (M120 Router)

```
user@host> show chassis fabric plane
```

```

Fabric management PLANE state
Plane 0
Plane state: ACTIVE
FEB 0: Links ok
FEB 1: Links ok
FEB 2: Links ok
FEB 3: Links ok
FEB 4: Links ok
FEB 5: Links ok
Plane 1
Plane state: ACTIVE
FEB 0: Links ok
FEB 1: Links ok
FEB 2: Links ok
FEB 3: Links ok
FEB 4: Links ok
FEB 5: Links ok
Plane 2
Plane state: ACTIVE
FEB 0: Links ok
FEB 1: Links ok
FEB 2: Links ok
FEB 3: Links ok
FEB 4: Links ok
FEB 5: Links ok
Plane 3
Plane state: ACTIVE

```



```

FEB 0: Links ok
FEB 1: Links ok
FEB 2: Links ok
FEB 3: Links ok
FEB 4: Links ok
FEB 5: Links ok

```

### show chassis fabric plane (MX240 Router)

```
user@host> show chassis fabric plane
```

```

Plane 0
  Plane state: ACTIVE
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
Plane 1
  Plane state: ACTIVE
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
Plane 2
  Plane state: ACTIVE
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
Plane 3
  Plane state: ACTIVE
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
Plane 4

```



```
Plane state: SPARE
  FPC 1
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
  FPC 2
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
Plane 5
  Plane state: SPARE
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
Plane 6
  Plane state: SPARE
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
Plane 7
  Plane state: SPARE
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
```

### show chassis fabric plane (MX10008 Router)

```
user@host> show chassis fabric plane
```

```
Fabric management PLANE state
Plane 0
  Plane state: ACTIVE
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
```



```
        PFE 3 :Links ok
        PFE 4 :Links ok
        PFE 5 :Links ok
    FPC 5
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
        PFE 4 :Links ok
        PFE 5 :Links ok
Plane 1
    Plane state: ACTIVE
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
        PFE 4 :Links ok
        PFE 5 :Links ok
    FPC 5
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
        PFE 4 :Links ok
        PFE 5 :Links ok
Plane 2
    Plane state: ACTIVE
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
        PFE 4 :Links ok
        PFE 5 :Links ok
    FPC 5
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
        PFE 4 :Links ok
        PFE 5 :Links ok
Plane 3
    Plane state: ACTIVE
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
        PFE 4 :Links ok
        PFE 5 :Links ok
    FPC 5
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
        PFE 4 :Links ok
        PFE 5 :Links ok
```



### show chassis fabric plane (MX480 Router)

```
user@host> show chassis fabric plane
```

```
Fabric management PLANE state
```

```
Plane 0
```

```
Plane state: ACTIVE
```

```
FPC 1
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
PFE 2 :Links ok
```

```
PFE 3 :Links ok
```

```
Plane 1
```

```
Plane state: ACTIVE
```

```
FPC 1
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
PFE 2 :Links ok
```

```
PFE 3 :Links ok
```

```
Plane 2
```

```
Plane state: ACTIVE
```

```
FPC 1
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
PFE 2 :Links ok
```

```
PFE 3 :Links ok
```

```
Plane 3
```

```
Plane state: ACTIVE
```

```
FPC 1
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
PFE 2 :Links ok
```

```
PFE 3 :Links ok
```

```
Plane 4
```

```
Plane state: SPARE
```

```
FPC 1
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
PFE 2 :Links ok
```

```
PFE 3 :Links ok
```

```
Plane 5
```

```
Plane state: SPARE
```

```
FPC 1
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
PFE 2 :Links ok
```

```
PFE 3 :Links ok
```

```
Plane 6
```

```
Plane state: SPARE
```

```
FPC 1
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
PFE 2 :Links ok
```

```
PFE 3 :Links ok
```

```
Plane 7
```

```
Plane state: SPARE
```

```
FPC 1
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
PFE 2 :Links ok
```

```
PFE 3 :Links ok
```



**show chassis fabric plane (MX960 Router)**

```
user@host> show chassis fabric plane
```

```
Plane 0
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
Plane 1
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
Plane 2
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
Plane 3
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
```

**show chassis fabric plane (MX240 with AS MLC Modular Carrier Card)**

In the following output, FPC 1 is the AS MLC modular carrier card (AS MCC).

```
user@host>show chassis fabric plane
```

```
Fabric management PLANE state
Plane 0
  Plane state: ACTIVE
    FPC 1
      PFE 0 :Links ok
    FPC 2
      PFE 0 :Links ok
Plane 1
  Plane state: ACTIVE
  Plane state: ACTIVE
    FPC 1
      PFE 0 :Links ok
    FPC 2
      PFE 0 :Links ok
Plane 2
  Plane state: ACTIVE
    FPC 2
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 2 :Links ok
```



```

        FPC 5
          PFE 0 :Links ok
Plane 3
  Plane state: ACTIVE
    Plane state: ACTIVE
      FPC 1
        PFE 0 :Links ok
      FPC 2
        PFE 0 :Links ok
Plane 4
  Plane state: ACTIVE
    Plane state: ACTIVE
      FPC 1
        PFE 0 :Links ok
      FPC 2
        PFE 0 :Links ok
Plane 5
  Plane state: ACTIVE
    FPC 1
      PFE 0 :Unused
    FPC 2
      PFE 0 :Links ok
Plane 6
  Plane state: ACTIVE
    FPC 1
      PFE 0 :Links ok
    FPC 2
      PFE 0 :Links ok
Plane 7
  Plane state: ACTIVE
    FPC 1
      PFE 0 :Unused
    FPC 2
      PFE 0 :Links ok

```

#### show chassis fabric plane (MX480 with AS MLC Modular Carrier Card)

In the following output, FPC 5 is the AS MLC modular carrier card (AS MCC).

```
user@host>show chassis fabric plane
```

```

Fabric management PLANE state
Plane 0
  Plane state: ACTIVE
    FPC 2
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 2 :Links ok
    FPC 5
      PFE 0 :Links ok
Plane 1
  Plane state: ACTIVE
    FPC 2
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 2 :Links ok
    FPC 5

```



```

        PFE 0 :Links ok
Plane 2
  Plane state: ACTIVE
    FPC 2
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 2 :Links ok
    FPC 5
      PFE 0 :Links ok
Plane 3
  Plane state: ACTIVE
    FPC 2
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 2 :Links ok
    FPC 5
      PFE 0 :Links ok
Plane 4
  Plane state: ACTIVE
    FPC 2
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 2 :Links ok
    FPC 5
      PFE 0 :Links ok
Plane 5
  Plane state: ACTIVE
    FPC 2
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 2 :Links ok
    FPC 5
      PFE 0 :Unused
Plane 6
  Plane state: ACTIVE
    FPC 2
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 2 :Links ok
    FPC 5
      PFE 0 :Links ok
Plane 7
  Plane state: ACTIVE
    FPC 2
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 2 :Links ok
    FPC 5
      PFE 0 :Unused

```

### show chassis fabric plane (MX480 Router with MPC4E)

```
user@host > show chassis fabric plane
```



## Fabric management PLANE state

## Plane 0

Plane state: ACTIVE

## FPC 0

PFE 0 :Links ok

PFE 1 :Links ok

## FPC 1

PFE 0 :Links ok

PFE 1 :Links ok

PFE 2 :Links ok

PFE 3 :Links ok

## FPC 3

PFE 0 :Links ok

## FPC 4

PFE 0 :Links ok

PFE 1 :Links ok

## Plane 1

Plane state: ACTIVE

## FPC 0

PFE 0 :Links ok

PFE 1 :Links ok

## FPC 1

PFE 0 :Links ok

PFE 1 :Links ok

PFE 2 :Links ok

PFE 3 :Links ok

## FPC 3

PFE 0 :Links ok

## FPC 4

PFE 0 :Links ok

PFE 1 :Links ok

## Plane 2

Plane state: ACTIVE

## FPC 0

PFE 0 :Links ok

PFE 1 :Links ok

## FPC 1

PFE 0 :Links ok

PFE 1 :Links ok

PFE 2 :Links ok

PFE 3 :Links ok

## FPC 3

PFE 0 :Links ok

## FPC 4

PFE 0 :Links ok

PFE 1 :Links ok

## Plane 3

Plane state: ACTIVE

## FPC 0

PFE 0 :Links ok

PFE 1 :Links ok

## FPC 1

PFE 0 :Links ok

PFE 1 :Links ok

PFE 2 :Links ok

PFE 3 :Links ok

## FPC 3

PFE 0 :Links ok

## FPC 4

PFE 0 :Links ok



```
        PFE 1 :Links ok
Plane 4
  Plane state: SPARE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 3
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 1 :Links ok
Plane 5
  Plane state: SPARE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 3
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 1 :Links ok
Plane 6
  Plane state: SPARE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 3
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 1 :Links ok
Plane 7
  Plane state: SPARE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 3
      PFE 0 :Links ok
    FPC 4
```



```
PFE 0 :Links ok
PFE 1 :Links ok
```

### show chassis fabric plane (MX960 with AS-MLC Modular Carrier Card)

In the following output, FPC 1 is a modular carrier card.

```
user@host>show chassis fabric plane
```

Fabric management PLANE state

Plane 0

Plane state: ACTIVE

FPC 0

PFE 0 :Links ok

PFE 1 :Links ok

FPC 1

PFE 0 :Links ok

FPC 4

PFE 0 :Links ok

PFE 1 :Links ok

PFE 2 :Links ok

PFE 3 :Links ok

FPC 5

PFE 0 :Links ok

FPC 8

PFE 0 :Links ok

PFE 1 :Links ok

PFE 2 :Links ok

PFE 3 :Links ok

Plane 1

Plane state: ACTIVE

FPC 0

PFE 0 :Links ok

PFE 1 :Links ok

FPC 1

PFE 0 :Links ok

FPC 4

PFE 0 :Links ok

PFE 1 :Links ok

PFE 2 :Links ok

PFE 3 :Links ok

FPC 5

PFE 0 :Links ok

FPC 8

PFE 0 :Links ok

PFE 1 :Links ok

PFE 2 :Links ok

PFE 3 :Links ok

Plane 2

Plane state: ACTIVE

FPC 0

PFE 0 :Links ok

PFE 1 :Links ok

FPC 1

PFE 0 :Links ok

FPC 4

PFE 0 :Links ok

PFE 1 :Links ok

PFE 2 :Links ok

PFE 3 :Links ok



```
FPC 5
  PFE 0 :Links ok
FPC 8
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
Plane 3
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 1
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 5
      PFE 0 :Links ok
    FPC 8
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
Plane 4
  Plane state: SPARE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 1
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 5
      PFE 0 :Links ok
    FPC 8
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
Plane 5
  Plane state: SPARE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 1
      PFE 0 :Links ok
    FPC 4
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 5
      PFE 0 :Links ok
    FPC 8
```



```
PFE 0 :Links ok
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
```

### show chassis fabric plane (MX2010 Router)

```
user@host>show chassis fabric plane
```

```
Fabric management PLANE state
```

```
Plane 0
```

```
Plane state: ACTIVE
```

```
FPC 0
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
FPC 1
```

```
PFE 0 :Links ok
```

```
FPC 2
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
FPC 3
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
PFE 2 :Links ok
```

```
PFE 3 :Links ok
```

```
FPC 4
```

```
PFE 0 :Links ok
```

```
FPC 5
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
FPC 6
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
PFE 2 :Links ok
```

```
PFE 3 :Links ok
```

```
FPC 7
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
FPC 8
```

```
PFE 0 :Links ok
```

```
FPC 9
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
Plane 1
```

```
Plane state: ACTIVE
```

```
FPC 0
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
FPC 1
```

```
PFE 0 :Links ok
```

```
FPC 2
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
FPC 3
```

```
PFE 0 :Links ok
```

```
PFE 1 :Links ok
```

```
PFE 2 :Links ok
```

```
PFE 3 :Links ok
```

```
FPC 4
```

```
PFE 0 :Links ok
```



```
FPC 5
  PFE 0 :Links ok
  PFE 1 :Links ok
FPC 6
PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 7
  PFE 0 :Links ok
  PFE 1 :Links ok
FPC 8
  PFE 0 :Links ok
FPC 9
  PFE 0 :Links ok
  PFE 1 :Links ok
Plane 2
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 1
      PFE 0 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 3
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 4
      PFE 0 :Links ok
    FPC 5
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 6
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 7
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 8
      PFE 0 :Links ok
    FPC 9
      PFE 0 :Links ok
      PFE 1 :Links ok
Plane 3
  Plane state: OFFLINE
Plane 4
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 1
      PFE 0 :Links ok
    FPC 2
      PFE 0 :Links ok
```



```
PFE 1 :Links ok
  FPC 3
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
  FPC 4
    PFE 0 :Links ok
  FPC 5
    PFE 0 :Links ok
    PFE 1 :Links ok
  FPC 6
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
  FPC 7
    PFE 0 :Links ok
    PFE 1 :Links ok
  FPC 8
    PFE 0 :Links ok
  FPC 9
    PFE 0 :Links ok
    PFE 1 :Links ok
Plane 5
  Plane state: ACTIVE
  FPC 0
    PFE 0 :Links ok
    PFE 1 :Links ok
  FPC 1
    PFE 0 :Links ok
  FPC 2
    PFE 0 :Links ok
    PFE 1 :Links ok
  FPC 3
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
  FPC 4
    PFE 0 :Links ok
  FPC 5
    PFE 0 :Links ok
    PFE 1 :Links ok
  FPC 6
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
  FPC 7
    PFE 0 :Links ok
    PFE 1 :Links ok
  FPC 8
    PFE 0 :Links ok
  FPC 9
    PFE 0 :Links ok
  PFE 1 :Links ok
Plane 6
  Plane state: ACTIVE
  FPC 0
```



```
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 1
        PFE 0 :Links ok
    FPC 2
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 3
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 4
        PFE 0 :Links ok
    FPC 5
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 6
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 7
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 8
        PFE 0 :Links ok
    FPC 9
        PFE 0 :Links ok
        PFE 1 :Links ok
Plane 7
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 1
        PFE 0 :Links ok
    FPC 2
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 3
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 4
        PFE 0 :Links ok
    FPC 5
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 6
        PFE 0 :Links ok
    PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 7
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 8
        PFE 0 :Links ok
```



```
FPC 9
  PFE 0 :Links ok
  PFE 1 :Links ok
```

### show chassis fabric plane (MX2020 Router)

```
user@host>show chassis fabric plane
```

```
Fabric management PLANE state
Plane 0
```

```
  Plane state: ACTIVE
```

```
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
```

```
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
```

```
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
```

```
    FPC 3
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
```

```
    FPC 4
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
```

```
    FPC 5
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
```

```
    FPC 6
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
```

```
    FPC 7
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
```

```
    FPC 8
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
```

```
    FPC 9
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
```



```
    PFE 3 :Links ok
FPC 10
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
FPC 11
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
FPC 12
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
FPC 13
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
FPC 14
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
FPC 15
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
FPC 16
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
FPC 17
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
FPC 18
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
FPC 19
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
Plane 1
  Plane state: ACTIVE
  FPC 0
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
  FPC 1
    PFE 0 :Links ok
```



```
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
FPC 2
PFE 0 :Links ok
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
FPC 3
PFE 0 :Links ok
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
FPC 4
PFE 0 :Links ok
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
FPC 5
PFE 0 :Links ok
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
FPC 6
PFE 0 :Links ok
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
FPC 7
PFE 0 :Links ok
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
FPC 8
PFE 0 :Links ok
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
FPC 9
PFE 0 :Links ok
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
FPC 10
PFE 0 :Links ok
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
FPC 11
PFE 0 :Links ok
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
FPC 12
PFE 0 :Links ok
PFE 1 :Links ok
PFE 2 :Links ok
PFE 3 :Links ok
FPC 13
PFE 0 :Links ok
```



```
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 14
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 15
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 16
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 17
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 18
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 19
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
Plane 2
  Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 2
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 3
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 4
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
```



```
FPC 5
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 6
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 7
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 8
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 9
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 10
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 11
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 12
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 13
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 14
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 15
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 16
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
```



```

FPC 17
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 18
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
FPC 19
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
Plane 3
...
```

### show chassis fabric plane (MX2020 Router with MPC4E)

```
user@host > show chassis fabric plane
```

```
Fabric management PLANE state
```

```
Plane 0
```

```
  Plane state: ACTIVE
```

```
    FPC 0
```

```
      PFE 0 :Links ok
```

```
      PFE 1 :Links ok
```

```
    FPC 9
```

```
      PFE 0 :Links ok
```

```
      PFE 1 :Links ok
```

```
    FPC 10
```

```
      PFE 0 :Links ok
```

```
    FPC 14
```

```
      PFE 0 :Links ok
```

```
      PFE 1 :Links ok
```

```
    FPC 19
```

```
      PFE 0 :Links ok
```

```
      PFE 1 :Links ok
```

```
      PFE 2 :Links ok
```

```
      PFE 3 :Links ok
```

```
Plane 1
```

```
  Plane state: ACTIVE
```

```
    FPC 0
```

```
      PFE 0 :Links ok
```

```
      PFE 1 :Links ok
```

```
    FPC 9
```

```
      PFE 0 :Links ok
```

```
      PFE 1 :Links ok
```

```
    FPC 10
```

```
      PFE 0 :Links ok
```

```
    FPC 14
```

```
      PFE 0 :Links ok
```

```
      PFE 1 :Links ok
```

```
    FPC 19
```

```
      PFE 0 :Links ok
```

```
      PFE 1 :Links ok
```

```
      PFE 2 :Links ok
```

```
      PFE 3 :Links ok
```

```
Plane 2
```



```
Plane state: ACTIVE
  FPC 0
    PFE 0 :Links ok
    PFE 1 :Links ok
  FPC 9
    PFE 0 :Links ok
    PFE 1 :Links ok
  FPC 10
    PFE 0 :Links ok
  FPC 14
    PFE 0 :Links ok
    PFE 1 :Links ok
  FPC 19
    PFE 0 :Links ok
    PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
Plane 3
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 9
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 10
      PFE 0 :Links ok
    FPC 14
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 19
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
Plane 4
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 9
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 10
      PFE 0 :Links ok
    FPC 14
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 19
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
Plane 5
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 9
      PFE 0 :Links ok
```



```

        PFE 1 :Links ok
    FPC 10
        PFE 0 :Links ok
    FPC 14
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 19
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
Plane 6
  Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 9
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 10
        PFE 0 :Links ok
    FPC 14
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 19
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
Plane 7
  Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 9
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 10
        PFE 0 :Links ok
    FPC 14
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 19
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok

```

### show chassis fabric plane (MX2020 Routers with SFB2)

```

user@host> show chassis fabric plane

Fabric management PLANE state
Plane 0
  Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok

```



```
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 2
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 3
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 6
        PFE 0 :Links ok
    FPC 7
        PFE 0 :Links ok
    FPC 11
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 12
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 13
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 18
        PFE 0 :Links ok
    FPC 19
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
Plane 1
  Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
    PFE 2 :Links ok
    PFE 3 :Links ok
    FPC 2
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 3
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 6
        PFE 0 :Links ok
    FPC 7
        PFE 0 :Links ok
    FPC 11
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 12
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 13
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 18
        PFE 0 :Links ok
    FPC 19
        PFE 0 :Links ok
```



```
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
Plane 2
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 3
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 6
      PFE 0 :Links ok
    FPC 7
      PFE 0 :Links ok
    FPC 11
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 12
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 13
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 18
      PFE 0 :Links ok
    FPC 19
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    ...
Plane 18
  Plane state: OFFLINE
Plane 19
  Plane state: OFFLINE
Plane 20
  Plane state: OFFLINE
Plane 21
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 3
      PFE 0 :Links ok
      PFE 1 :Links ok
```



```
FPC 6
  PFE 0 :Links ok
FPC 7
  PFE 0 :Links ok
FPC 11
  PFE 0 :Links ok
  PFE 1 :Links ok
FPC 12
  PFE 0 :Links ok
  PFE 1 :Links ok
FPC 13
  PFE 0 :Links ok
  PFE 1 :Links ok
FPC 18
  PFE 0 :Links ok
FPC 19
  PFE 0 :Links ok
  PFE 1 :Links ok
  PFE 2 :Links ok
  PFE 3 :Links ok
Plane 22
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
    FPC 2
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 3
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 6
      PFE 0 :Links ok
    FPC 7
      PFE 0 :Links ok
    FPC 11
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 12
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 13
      PFE 0 :Links ok
      PFE 1 :Links ok
    FPC 18
      PFE 0 :Links ok
    FPC 19
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
      PFE 3 :Links ok
Plane 23
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
    FPC 1
```



```

        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 2
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 3
        PFE 0 :Links ok
PFE 1 :Links ok
    FPC 6
        PFE 0 :Links ok
    FPC 7
        PFE 0 :Links ok
    FPC 11
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 12
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 13
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 18
        PFE 0 :Links ok
    FPC 19
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok

```

### show chassis fabric plane (MX2008)

```
user@host> show chassis fabric plane
```

```

Fabric management PLANE state
Plane 0
    Plane state: OFFLINE
Plane 1
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 3
        PFE 0 :Links ok
    FPC 5
        PFE 0 :Links ok
Plane 2
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok

```



```
        PFE 3 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 3
        PFE 0 :Links ok
    FPC 5
        PFE 0 :Links ok
Plane 3
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 3
        PFE 0 :Links ok
    FPC 5
        PFE 0 :Links ok
Plane 4
    Plane state: OFFLINE
Plane 5
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 3
        PFE 0 :Links ok
    FPC 5
        PFE 0 :Links ok
Plane 6
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 3
        PFE 0 :Links ok
    FPC 5
        PFE 0 :Links ok
```



```
Plane 7
Plane state: OFFLINE
```

### show chassis fabric plane (TX Matrix Plus Router)

```
user@host> show chassis fabric plane
```

```
sfc0-re0:
```

Plane	State	Link errors	Destination errors	Uptime
0	Spare	NONE	NONE	
1	Online	NONE	NONE	10 hours, 16 seconds
2	Online	NONE	NONE	10 hours, 13 seconds
3	Online	NONE	NONE	10 hours, 9 seconds
4	Online	NONE	NONE	10 hours, 7 seconds

```
lcc0-re0:
```

SIB	State	Link errors	Destination errors	Uptime
0	Spare	NONE	NONE	
1	Online	NONE	NONE	10 hours, 16 seconds
2	Online	NONE	NONE	10 hours, 13 seconds
3	Online	NONE	NONE	10 hours, 9 seconds
4	Online	NONE	NONE	10 hours, 7 seconds

```
lcc2-re0:
```

SIB	State	Link errors	Destination errors	Uptime
0	Spare	NONE	NONE	
1	Online	NONE	NONE	10 hours, 16 seconds
2	Online	NONE	NONE	10 hours, 12 seconds
3	Online	NONE	NONE	10 hours, 9 seconds
4	Online	NONE	NONE	10 hours, 7 seconds

### show chassis fabric plane (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric plane
```

```
sfc0-re0:
```

Plane	State	Cable errors	Link errors	Destination errors	Uptime
0	Spare	NONE	NONE	NONE	
1	Online	NONE	NONE	NONE	5 hours, 11 minutes, 3 seconds
2	Online	NONE	NONE	NONE	8 hours, 4 minutes, 24 seconds
3	Online	NONE	NONE	NONE	8 hours, 3 minutes, 16 seconds
4	Online	NONE	NONE	NONE	8 hours, 2 minutes, 12 seconds

```
lcc2-re0:
```

SIB	State	Cable errors	Link errors	Destination errors	Uptime
0	Spare	NONE	NONE	NONE	
1	Online	NONE	NONE	NONE	5 hours, 11 minutes, 3 seconds
2	Online	NONE	NONE	NONE	8 hours, 4 minutes, 57 seconds
3	Online	NONE	NONE	NONE	8 hours, 3 minutes



```

minutes, 53 seconds
4    Online      NONE      NONE      NONE      8 hours, 2
minutes, 45 seconds

lcc4-re0:
-----
SIB   State      Cable errors  Link errors  Destination errors  Uptime
0     Spare      NONE         NONE         NONE                5 hours, 11
1     Online     NONE         NONE         NONE                minutes, 12 seconds
2     Online     NONE         NONE         NONE                8 hours, 4
minutes, 24 seconds
3     Online     NONE         NONE         NONE                8 hours, 3
minutes, 16 seconds
4     Online     NONE         NONE         NONE                8 hours, 2
minutes, 12 seconds

lcc5-re0:
-----
SIB   State      Cable errors  Link errors  Destination errors  Uptime
0     Spare      NONE         NONE         NONE                5 hours, 11
1     Online     NONE         NONE         NONE                minutes, 12 seconds
2     Online     NONE         NONE         NONE                8 hours, 4
minutes, 24 seconds
3     Online     NONE         NONE         NONE                8 hours, 3
minutes, 15 seconds
4     Online     NONE         NONE         NONE                8 hours, 2
minutes, 11 seconds

```

### show chassis fabric plane detail (TX Matrix Plus Router)

```
user@host> show chassis fabric plane detail
```

```

sfc0-re0:
-----
Fabric Management PLANE State:
PLANE 0:   Spare
  SIB F13 0 :   Spare
  SIB F13 1 :   Empty
  SIB F2S 0/0 :   Spare
  SIB F2S 0/2 :   Spare
  SIB F2S 0/4 :   Spare
  SIB F2S 0/6 :   Spare
PLANE 1:   Online
  SIB F13 3 :   Online
  SIB F13 4 :   Empty
  SIB F2S 1/0 :   Online
  SIB F2S 1/2 :   Online
  SIB F2S 1/4 :   Online
  SIB F2S 1/6 :   Online
PLANE 2:   Online
  SIB F13 6 :   Online
  SIB F13 7 :   Empty
  SIB F2S 2/0 :   Online
  SIB F2S 2/2 :   Online
  SIB F2S 2/4 :   Online
  SIB F2S 2/6 :   Online
PLANE 3:   Online
  SIB F13 8 :   Online

```



```

SIB F13 9 : Online
SIB F2S 3/0 : Online
SIB F2S 3/2 : Online
SIB F2S 3/4 : Online
SIB F2S 3/6 : Online
PLANE 4: Online
SIB F13 11 : Online
SIB F13 12 : Online
SIB F2S 4/0 : Online
SIB F2S 4/2 : Online
SIB F2S 4/4 : Online
SIB F2S 4/6 : Online

```

```
lcc0-re0:
```

```
-----
Fabric Management SIB State:
```

```

SIB 0 : Spare
SIB 1 : Online
SIB 2 : Online
SIB 3 : Online
SIB 4 : Online

```

```
lcc1-re0:
```

```
-----
Fabric Management SIB State:
```

```

SIB 0 : Spare
SIB 1 : Online
SIB 2 : Online
SIB 3 : Online
SIB 4 : Online

```

```
...
```

### show chassis fabric plane extensive (TX Matrix Plus Router )

```
user@host> show chassis fabric plane extensive
```

```
sfc0-re0:
```

```
-----
Fabric Management PLANE State:
```

```
PLANE 0: Spare
```

```

SIB F13 0 : Spare
SIB F13 1 : Empty
SIB F2S 0/0 : Spare
SIB F2S 0/2 : Spare
SIB F2S 0/4 : Spare
SIB F2S 0/6 : Spare

```

```
SIB F13 0 Even:
```

```
LCC 0, SIB 0 : Links ok
```

```
SG 0
```

```

Port 0 : Links ok
Port 1 : Links ok
Port 2 : Links ok
Port 3 : Links ok

```

```
SG 1
```

```

Port 0 : Links ok
Port 1 : Links ok
Port 2 : Links ok
Port 3 : Links ok

```

```
SG 2
```

```
Port 0 : Links ok
```



```

    Port 1 : Links ok
    Port 2 : Links ok
    Port 3 : Links ok
SG 3
    Port 0 : Links ok
    Port 1 : Links ok
    Port 2 : Links ok
    Port 3 : Links ok
SIB F13 0 Odd:
  LCC 1, SIB 0 : Links ok
  SG 0
    Port 0 : Links ok
    Port 1 : Links ok
    Port 2 : Links ok
    Port 3 : Links ok
  SG 1
    Port 0 : Links ok
    Port 1 : Links ok
    Port 2 : Links ok
    Port 3 : Links ok
  SG 2
    Port 0 : Links ok
    Port 1 : Links ok
    Port 2 : Links ok
    Port 3 : Links ok
  SG 3
    Port 0 : Links ok
    Port 1 : Links ok
    Port 2 : Links ok
    Port 3 : Links ok
SIB F2S 0/0: Links ok
SIB F2S 0/2: Links ok
SIB F2S 0/4: Links ok
SIB F2S 0/6: Links ok
SIB F13 1 Even:
  LCC 2, SIB 0 : Unused
  SG 0
    Port 0 : Unused
    Port 1 : Unused
    Port 2 : Unused
    Port 3 : Unused
  SG 1
    Port 0 : Unused
    Port 1 : Unused
    Port 2 : Unused
    Port 3 : Unused
  SG 2
    Port 0 : Unused
    Port 1 : Unused
    Port 2 : Unused
    Port 3 : Unused
  SG 3
    Port 0 : Unused
    Port 1 : Unused
    Port 2 : Unused
    Port 3 : Unused
SIB F13 1 Odd:
  LCC 3, SIB 0 : Unused
  SG 0
    Port 0 : Unused
```



```

        Port 1 : Unused
        Port 2 : Unused
        Port 3 : Unused
    SG 1
        Port 0 : Unused
        Port 1 : Unused
        Port 2 : Unused
        Port 3 : Unused
    SG 2
        Port 0 : Unused
        Port 1 : Unused
        Port 2 : Unused
        Port 3 : Unused
    SG 3
        Port 0 : Unused
        Port 1 : Unused
        Port 2 : Unused
        Port 3 : Unused
    SIB F2S 0/0: Unused
    SIB F2S 0/2: Unused
    SIB F2S 0/4: Unused
    SIB F2S 0/6: Unused
    PLANE 1: Online
        SIB F13 3 : Online
        SIB F13 4 : Empty
        SIB F2S 1/0 : Online
        SIB F2S 1/2 : Online
        SIB F2S 1/4 : Online
        SIB F2S 1/6 : Online
        SIB F13 3 Even:
    ...

```

### show chassis fabric plane extensive (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric plane extensive
```

```
sfc0-re0:
```

```
-----
Fabric Management PLANE State:
```

```

    PLANE 0: Online
        SIB F13 0 : Empty
        SIB F13 1 : Online
        SIB F2S 0/0 : Online
        SIB F2S 0/2 : Online
        SIB F2S 0/4 : Online
        SIB F2S 0/6 : Online
        SIB F13 0
            LCC 0, SIB 0 : Unused
                PFE 0 : Unused
                PFE 1 : Unused
                PFE 2 : Unused
                PFE 3 : Unused
                PFE 4 : Unused
                PFE 5 : Unused
                PFE 6 : Unused
                PFE 7 : Unused
                PFE 8 : Unused
                PFE 9 : Unused
                PFE 10 : Unused
                PFE 11 : Unused

```



```

        PFE 12 : Unused
        PFE 13 : Unused
        PFE 14 : Unused
        PFE 15 : Unused
    LCC 1, SIB 0 : Unused
        PFE 0 : Unused
        PFE 1 : Unused
        PFE 2 : Unused
        PFE 3 : Unused
        PFE 4 : Unused
        PFE 5 : Unused
        PFE 6 : Unused
        PFE 7 : Unused
        PFE 8 : Unused
        PFE 9 : Unused
        PFE 10 : Unused
        PFE 11 : Unused
        PFE 12 : Unused
        PFE 13 : Unused
        PFE 14 : Unused
        PFE 15 : Unused
    LCC 2, SIB 0 : Unused
        PFE 0 : Unused
        PFE 1 : Unused
        PFE 2 : Unused
        PFE 3 : Unused
        PFE 4 : Unused
        PFE 5 : Unused
        PFE 6 : Unused
        PFE 7 : Unused
        PFE 8 : Unused
        PFE 9 : Unused
        PFE 10 : Unused
    ...
lcc5-re0:
-----
Fabric Management SIB State:
  SIB 0 : Online
    LCC SIB Link State : Links ok
      PFE 0 : Links ok
      PFE 1 : Links ok
      PFE 2 : Links ok
      PFE 3 : Links ok
      PFE 4 : Links ok
      PFE 5 : Links ok
      PFE 6 : Links ok
      PFE 7 : Links ok
      PFE 8 : Links ok
      PFE 9 : Links ok
      PFE 10 : Links ok
      PFE 11 : Links ok
      PFE 12 : Links ok
      PFE 13 : Links ok
      PFE 14 : Links ok
      PFE 15 : Links ok
    FPC 1
      PFE 0 : Links ok
    FPC 2
      PFE 0 : Links ok
    FPC 3

```



```

        PFE 0      : Links ok
        PFE 1      : Links ok
    FPC 4
        PFE 0      : Links ok
SIB    1      : Online
LCC SIB Link State : Links ok
    PFE 0      : Links ok
    PFE 1      : Links ok
    PFE 2      : Links ok
    PFE 3      : Links ok
    PFE 4      : Links ok
    PFE 5      : Links ok
    PFE 6      : Links ok
    PFE 7      : Links ok
    PFE 8      : Links ok
    PFE 9      : Links ok
    PFE 10     : Links ok
    PFE 11     : Links ok
    PFE 12     : Links ok
    PFE 13     : Links ok
    PFE 14     : Links ok
    PFE 15     : Links ok
    FPC 1
        PFE 0      : Links ok
    FPC 2
        PFE 0      : Links ok
    FPC 3
        PFE 0      : Links ok
        PFE 1      : Links ok
    FPC 4
        PFE 0      : Links ok

```

### show chassis fabric plane terse (TX Matrix Plus Router)

```
user@host> show chassis fabric plane terse
```

```
sfc0-re0:
```

Plane	State	Link errors	Destination errors	Uptime
0	Spare	NONE	NONE	
1	Online	NONE	NONE	18 minutes, 37 seconds
2	Online	NONE	NONE	18 minutes, 36 seconds
3	Online	NONE	NONE	18 minutes, 33 seconds
4	Online	NONE	NONE	18 minutes, 31 seconds

```
lcc1-re0:
```

SIB	State	Link errors	Destination errors	Uptime
0	Spare	NONE	NONE	
1	Online	NONE	NONE	18 minutes, 37 seconds
2	Online	NONE	NONE	
3	Online	NONE	NONE	
4	Empty	NONE	NONE	

```
lcc2-re0:
```



SIB	State	Link errors	Destination errors	Uptime
0	Spare	NONE	NONE	
1	Online	NONE	NONE	18 minutes, 37 seconds
2	Online	NONE	NONE	18 minutes, 36 seconds
3	Online	NONE	NONE	18 minutes, 32 seconds
4	Online	NONE	NONE	18 minutes, 31 seconds

### show chassis fabric plane terse (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric plane terse
```

```
sfc0-re0:
```

Plane	State	Cable errors	Link errors	Destination errors	Uptime
0	Offline	NONE	NONE	NONE	
1	Online	NONE	NONE	NONE	1 day, 18 hours, 14 minutes, 26 seconds
2	Offline	NONE	NONE	NONE	
3	Offline	NONE	NONE	NONE	
4	Offline	NONE	NONE	NONE	

```
lcc2-re0:
```

SIB	State	Cable errors	Link errors	Destination errors	Uptime
0	Offline	NONE	NONE	NONE	
1	Online	NONE	NONE	NONE	1 day, 18 hours, 17 minutes
2	Offline	NONE	NONE	NONE	
3	Offline	NONE	NONE	NONE	
4	Offline	NONE	NONE	NONE	

```
lcc4-re0:
```

SIB	State	Cable errors	Link errors	Destination errors	Uptime
0	Offline	NONE	NONE	NONE	
1	Online	NONE	NONE	NONE	1 day, 18 hours, 14 minutes, 38 seconds
2	Offline	NONE	NONE	NONE	
3	Offline	NONE	NONE	NONE	
4	Offline	NONE	NONE	NONE	

```
lcc5-re0:
```

SIB	State	Cable errors	Link errors	Destination errors	Uptime
0	Offline	NONE	NONE	NONE	
1	Online	NONE	NONE	NONE	1 day, 18 hours, 14 minutes, 34 seconds
2	Offline	NONE	NONE	NONE	
3	Offline	NONE	NONE	NONE	
4	Offline	NONE	NONE	NONE	

### show chassis fabric plane lcc (TX Matrix Plus Router)

```
user@host> show chassis fabric plane lcc 1
```



```
lcc1-re0:
```

SIB	State	Link errors	Destination errors	Uptime
0	Spare	NONE	NONE	
1	Online	NONE	NONE	25 minutes, 17 seconds
2	Disconnected	NONE	NONE	
3	Disconnected	NONE	NONE	
4	Empty	NONE	NONE	

### show chassis fabric plane lcc (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric plane lcc 2
```

```
lcc2-re0:
```

SIB	State	Cable errors	Link errors	Destination errors	Uptime
0	Offline	NONE	NONE	NONE	
1	Online	NONE	NONE	NONE	1 day, 18 hours, 16 minutes, 44 seconds
2	Offline	NONE	NONE	NONE	
3	Offline	NONE	NONE	NONE	
4	Offline	NONE	NONE	NONE	

### show chassis fabric plane sfc (TX Matrix Plus Router)

```
user@host> show chassis fabric plane sfc 0
```

```
sfc0-re0:
```

Plane	State	Link errors	Destination errors	Uptime
0	Spare	NONE	NONE	
1	Online	NONE	NONE	27 minutes, 7 seconds
2	Online	NONE	NONE	27 minutes, 6 seconds
3	Online	NONE	NONE	27 minutes, 3 seconds
4	Online	NONE	NONE	27 minutes, 1 second

### show chassis fabric plane sfc (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric plane sfc 0
```

```
sfc0-re0:
```

Plane	State	Cable errors	Link errors	Destination errors	Uptime
0	Offline	NONE	NONE	NONE	
1	Online	NONE	NONE	NONE	1 day, 18 hours, 14 minutes, 20 seconds
2	Offline	NONE	NONE	NONE	
3	Offline	NONE	NONE	NONE	
4	Offline	NONE	NONE	NONE	

### show chassis fabric plane (T1600 Router)

```
user@host> show chassis fabric plane
```



Plane	State	Uptime
0	Online	15 hours, 42 minutes, 9 seconds
1	Online	15 hours, 42 minutes, 9 seconds
2	Fault	
3	Online	15 hours, 42 minutes, 9 seconds
4	Online	15 hours, 42 minutes, 9 seconds

### show chassis fabric plane extensive (T1600 Router)

```
user@host> show chassis fabric plane extensive
```

```
Fabric Management PLANE State:
```

```
PLANE 0: Online
```

```
ST-SIB-L 0: Links ok
```

```
SG 0
```

```
Port 0 : Links ok
```

```
Port 1 : Links ok
```

```
Port 2 : Links ok
```

```
Port 3 : Links ok
```

```
SG 1
```

```
Port 0 : Links ok
```

```
Port 1 : Links ok
```

```
Port 2 : Links ok
```

```
Port 3 : Links ok
```

```
SG 2
```

```
Port 0 : Links ok
```

```
Port 1 : Links ok
```

```
Port 2 : Links ok
```

```
Port 3 : Links ok
```

```
SG 3
```

```
Port 0 : Links ok
```

```
Port 1 : Links ok
```

```
Port 2 : Links ok
```

```
Port 3 : Links ok
```

```
ST-SIB-L 0
```

```
FPC 4
```

```
PFE 0: Links ok
```

```
PFE 1: Links ok
```

```
FPC 6
```

```
PFE 0: Links ok
```

```
PFE 1: Links ok
```

```
FPC 7
```

```
PFE 0: Links ok
```

```
PLANE 1: Online
```

```
ST-SIB-L 1: Links ok
```

```
SG 0
```

```
Port 0 : Links ok
```

```
Port 1 : Links ok
```

```
Port 2 : Links ok
```

```
Port 3 : Links ok
```

```
SG 1
```

```
Port 0 : Links ok
```

```
Port 1 : Links ok
```

```
Port 2 : Links ok
```

```
Port 3 : Links ok
```

```
SG 2
```

```
Port 0 : Links ok
```

```
Port 1 : Links ok
```

```
Port 2 : Links ok
```

```
Port 3 : Links ok
```



```

SG 3
  Port 0    : Links ok
  Port 1    : Links ok
  Port 2    : Links ok
  Port 3    : Links ok
ST-SIB-L 1
  FPC 4
    PFE 0: Links ok
    PFE 1: Links ok
  FPC 6
    PFE 0: Links ok
    PFE 1: Links ok
  FPC 7
    PFE 0: Links ok
PLANE 2:    Online
ST-SIB-L 2: Links ok
SG 0
  Port 0    : Links ok
  Port 1    : Links ok
  Port 2    : Links ok
  Port 3    : Links ok
SG 1
  Port 0    : Links ok
  Port 1    : Links ok
  Port 2    : Links ok
  Port 3    : Links ok
SG 2
  Port 0    : Links ok
  Port 1    : Links ok
  Port 2    : Links ok
  Port 3    : Links ok
SG 3
  Port 0    : Links ok
  Port 1    : Links ok
  Port 2    : Links ok
  Port 3    : Links ok
ST-SIB-L 2
  FPC 4
    PFE 0: Links ok
    PFE 1: Links ok
  FPC 6
    PFE 0: Links ok
    PFE 1: Links ok
  FPC 7
    PFE 0: Links ok
PLANE 3:    Spare
ST-SIB-L 3: Links ok
SG 0
  Port 0    : Links ok
  Port 1    : Links ok
  Port 2    : Links ok
  Port 3    : Links ok
SG 1
  Port 0    : Links ok
  Port 1    : Links ok
  Port 2    : Links ok
  Port 3    : Links ok
SG 2
  Port 0    : Links ok
  Port 1    : Links ok

```



```

        Port 2      : Links ok
        Port 3      : Links ok
    SG 3
        Port 0      : Links ok
        Port 1      : Links ok
        Port 2      : Links ok
        Port 3      : Links ok
    ST-SIB-L 3
    FPC 4
        PFE 0: Links ok
        PFE 1: Links ok
    FPC 6
        PFE 0: Links ok
        PFE 1: Links ok
    FPC 7
        PFE 0: Links ok
    PLANE 4:   Online
    ST-SIB-L 4: Links ok
    SG 0
        Port 0      : Links ok
        Port 1      : Links ok
        Port 2      : Links ok
        Port 3      : Links ok
    SG 1
        Port 0      : Links ok
        Port 1      : Links ok
        Port 2      : Links ok
        Port 3      : Links ok
    SG 2
        Port 0      : Links ok
        Port 1      : Links ok
        Port 2      : Links ok
        Port 3      : Links ok
    SG 3
        Port 0      : Links ok
        Port 1      : Links ok
        Port 2      : Links ok
        Port 3      : Links ok
    ST-SIB-L 4
    FPC 4
        PFE 0: Links ok
        PFE 1: Links ok
    FPC 6
        PFE 0: Links ok
        PFE 1: Links ok
    FPC 7
        PFE 0: Links ok

```

#### show chassis fabric plane detail (T1600 Router)

```
user@host> show chassis fabric plane detail
```

```

Fabric Management PLANE State:
PLANE 0:   Online
PLANE 1:   Online
PLANE 2:   Online
PLANE 3:   Spare
PLANE 4:   Online

```



**show chassis fabric plane (EX8200 Switch)**

```
user@host> show chassis fabric plane
```

```
Fabric management PLANE state
Plane 0
  Plane state: ACTIVE
Plane 1
  Plane state: ACTIVE
Plane 2
  Plane state: ACTIVE
Plane 3
  Plane state: ACTIVE
Plane 4
  Plane state: SPARE
Plane 5
  Plane state: SPARE
Plane 6
  Plane state: SPARE
Plane 7
  Plane state: SPARE
Plane 8
  Plane state: ACTIVE
Plane 9
  Plane state: ACTIVE
Plane 10
  Plane state: ACTIVE
Plane 11
  Plane state: ACTIVE
```

**show chassis fabric plane (EX9253 Switch)**

```
user@switch> show chassis fabric plane
```

```
Fabric management PLANE state
Plane 0
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
Plane 1
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
    FPC 1
      PFE 0 :Links ok
      PFE 1 :Links ok
      PFE 2 :Links ok
Plane 2
  Plane state: ACTIVE
    FPC 0
      PFE 0 :Links ok
      PFE 1 :Links ok
```



```
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 3
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 4
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 5
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 6
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 7
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 8
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
```



```
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 9
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 10
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 11
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 12
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 13
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 14
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
```



```
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 15
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 16
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 17
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 18
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 19
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 20
    Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
```



```
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
Plane 21
  Plane state: ACTIVE
    FPC 0
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
    FPC 1
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
```



## show chassis fabric plane-location

<b>List of Syntax</b>	<a href="#">Syntax on page 616</a> <a href="#">Syntax (MX Series Routers) on page 616</a> <a href="#">Syntax (MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms) on page 616</a> <a href="#">Syntax (TX Matrix Plus Router) on page 616</a> <a href="#">Syntax (QFX Switches) on page 616</a> <a href="#">Syntax (EX9253 Switches) on page 616</a> <a href="#">Syntax (EX9253 Switches) on page 616</a>
<b>Syntax</b>	show chassis fabric plane-location
<b>Syntax (MX Series Routers)</b>	show chassis fabric plane-location <all-members> <local> <member <i>member-id</i> >
<b>Syntax (MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms)</b>	show chassis fabric plane-location <extended>
<b>Syntax (TX Matrix Plus Router)</b>	show chassis fabric plane-location
<b>Syntax (QFX Switches)</b>	show chassis fabric plane-location
<b>Syntax (EX9253 Switches)</b>	show chassis fabric plane-location
<b>Syntax (EX9253 Switches)</b>	show chassis fabric plane-location
<b>Release Information</b>	Command introduced in Junos OS Release 8.0. Command introduced in Junos OS Release 9.4 for EX Series switches. Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers. Command introduced in Junos OS Release 12.3 for MX2020 Universal Routing Platforms. Command introduced in Junos OS Release 12.3 for MX2010 Universal Routing Platforms. Command introduced in Junos OS Release 15.1X53-D30 for QFX Series switches. <b>extended</b> option introduced in Junos OS Release 16.1R1 for MX2020 and MX2010 Universal Routing Platforms. Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.



Command introduced in Junos OS Release 17.2 for PTX10008 Routers.

Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.

Command introduced in Junos OS Release 18.2 for MX10008 Universal Routing Platforms.

Command introduced in Junos OS Release 18.2 for EX9253 Switches.

**Description** (M120, MX Series routers, and EX8200 switches only) Display the Control Board (CB) location of each plane. This command can be used on the master Routing Engine or the backup Routing Engine. For information about the meaning of “CBs” and “fabric plane” on the switches, see the hardware documentation for your switch.

(TX Matrix Plus routers only) Display the SIB location of each fabric plane.

(PTX Series Packet Transport Routers and QFX Series switches only) Display the fabric plane location of each SIB.

(MX2010, MX2020, and MX2008 Routers only) Display the fabric plane location of each Switch Fabric Board (SFB).

**Options** **all-members**—(MX Series routers only) (Optional) Display the CB location of each fabric plane on the Routing Engines in all member routers in the Virtual Chassis configuration.

**local**—(MX Series routers only) (Optional) Display the CB location of each fabric plane on the Routing Engines in the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display the CB location of each fabric plane on the Routing Engines in the specified member in the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**extended**—(MX2020, MX2010, and MX2008 routers only) (Optional) Display the fabric plane location of all 3 planes of each Switch Fabric Board (SFB) or enhanced Switch Fabric Board (SFB2).

**Required Privilege Level** view

**List of Sample Output**

- [show chassis fabric plane-location \(M120 Router\) on page 618](#)
- [show chassis fabric plane-location \(MX240 and MX480 Routers\) on page 619](#)
- [show chassis fabric plane-location \(MX960 Router\) on page 619](#)
- [show chassis fabric plane-location \(MX10008 Router\) on page 619](#)
- [show chassis fabric plane-location \(MX2010 Router\) on page 620](#)
- [show chassis fabric plane-location \(MX2020 Router\) on page 620](#)
- [show chassis fabric plane-location \(MX2020 Router with SFB2\) on page 620](#)
- [show chassis fabric plane-location \(MX2008 Router\) on page 621](#)
- [show chassis fabric plane-location \(MX10003 Router\) on page 621](#)
- [show chassis fabric plane-location \(TX Matrix Plus Router\) on page 622](#)
- [show chassis fabric plane-location \(TX Matrix Plus Router with 3D SIBs\) on page 622](#)
- [show chassis fabric plane-location \(EX8200 Switch\) on page 622](#)
- [show chassis fabric plane-location \(EX9253 Switch\) on page 623](#)
- [show chassis fabric plane-location \(EX9253 Switch\) on page 624](#)



[show chassis fabric plane-location \(PTX Series Packet Transport Routers\) on page 625](#)

[show chassis fabric plane-location \(PTX10008 Routers\) on page 625](#)

[show chassis fabric plane-location \(QFX 10008 Switch\) on page 626](#)

**Output Fields** Table 22 on page 618 lists the output fields for the **show chassis fabric plane-location** command. Output fields are listed in the approximate order in which they appear.

*Table 22: show chassis fabric plane-location Output Fields*

Field Name	Field Description
Plane <i>n</i>	Plane number.  (PTX Series Packet Transport Routers and QFX Series switches) Plane numbers associated with the SIB.  (MX2010, MX2020, and MX2008 Routers only) Plane numbers associated with the SFB.
Control Board <i>n</i>	Control board number.
SFC ABS-SIB-F13	(TX Matrix Plus routers only) Switch Interface Board (SIB) slot number on the F13 SIB.
SFC ABS-SIB-F2S	(TX Matrix Plus routers only) SIB slot number on the F2S SIB.
LCC ST-SIB-L	(TX Matrix Plus routers only) Line-card chassis (LCC) SIB slot number.
SFC SIB F13	(TX Matrix Plus routers with 3D SIBs only) Switch Interface Board (SIB) slot number on the F13 SIB.
SFC SIB F2S	(TX Matrix Plus routers with 3D SIBs only) SIB slot number on the F2S SIB.
LCC SIB	(TX Matrix Plus routers with 3D SIBs only) Line-card chassis (LCC) SIB slot number.
SIB	(PTX Series Packet Transport Routers and QFX Series switches) SIB number.
Switch Fabric Board <i>n</i>	(MX2010, MX2020, and MX2008 Routers only) SFB number.

## Sample Output

### show chassis fabric plane-location (M120 Router)

```
user@host> show chassis fabric plane-location
-----Fabric Plane Locations-----
Plane 0          Control Board 0
Plane 1          Control Board 0
Plane 2          Control Board 1
Plane 3          Control Board 1
```



**show chassis fabric plane-location (MX240 and MX480 Routers)**

```

user@host> show chassis fabric plane-location

-----Fabric Plane Locations-----
Plane 0                Control Board 0
Plane 1                Control Board 0
Plane 2                Control Board 0
Plane 3                Control Board 0
Plane 4                Control Board 1
Plane 5                Control Board 1
Plane 6                Control Board 1
Plane 7                Control Board 1

```

**show chassis fabric plane-location (MX960 Router)**

```

user@host> show chassis fabric plane-location

-----Fabric Plane Locations-----
Plane 0                Control Board 0
Plane 1                Control Board 0
Plane 2                Control Board 1
Plane 3                Control Board 1
Plane 4                Control Board 2
Plane 5                Control Board 2

```

**show chassis fabric plane-location (MX10008 Router)**

```

user@host> show chassis fabric plane-location

-----Fabric Plane Locations-----
Plane 0                Switch Fabric Board 0
Plane 1                Switch Fabric Board 0
Plane 2                Switch Fabric Board 0
Plane 3                Switch Fabric Board 0
Plane 4                Switch Fabric Board 1
Plane 5                Switch Fabric Board 1
Plane 6                Switch Fabric Board 1
Plane 7                Switch Fabric Board 1
Plane 8                Switch Fabric Board 2
Plane 9                Switch Fabric Board 2
Plane 10               Switch Fabric Board 2
Plane 11               Switch Fabric Board 2
Plane 12               Switch Fabric Board 3
Plane 13               Switch Fabric Board 3
Plane 14               Switch Fabric Board 3
Plane 15               Switch Fabric Board 3
Plane 16               Switch Fabric Board 4
Plane 17               Switch Fabric Board 4
Plane 18               Switch Fabric Board 4
Plane 19               Switch Fabric Board 4
Plane 20               Switch Fabric Board 5
Plane 21               Switch Fabric Board 5
Plane 22               Switch Fabric Board 5
Plane 23               Switch Fabric Board 5

```



### show chassis fabric plane-location (MX2010 Router)

```
user@host> show chassis fabric plane-location

-----Fabric Plane Locations-----
Plane 0          Switch Fabric Board 0
Plane 1          Switch Fabric Board 1
Plane 2          Switch Fabric Board 2
Plane 3          Switch Fabric Board 3
Plane 4          Switch Fabric Board 4
Plane 5          Switch Fabric Board 5
Plane 6          Switch Fabric Board 6
Plane 7          Switch Fabric Board 7
```

### show chassis fabric plane-location (MX2020 Router)

```
user@host> show chassis fabric plane-location

-----Fabric Plane Locations-----
Plane 0          Switch Fabric Board 0
Plane 1          Switch Fabric Board 1
Plane 2          Switch Fabric Board 2
Plane 3          Switch Fabric Board 3
Plane 4          Switch Fabric Board 4
Plane 5          Switch Fabric Board 5
Plane 6          Switch Fabric Board 6
Plane 7          Switch Fabric Board 7
```

### show chassis fabric plane-location (MX2020 Router with SFB2)

```
user@host> show chassis fabric plane-location extended

-----Fabric Plane Locations-----
Plane 0          Switch Fabric Board 0
Plane 1          Switch Fabric Board 0
Plane 2          Switch Fabric Board 0
Plane 3          Switch Fabric Board 1
Plane 4          Switch Fabric Board 1
Plane 5          Switch Fabric Board 1
Plane 6          Switch Fabric Board 2
Plane 7          Switch Fabric Board 2
Plane 8          Switch Fabric Board 2
Plane 9          Switch Fabric Board 3
Plane 10         Switch Fabric Board 3
Plane 11         Switch Fabric Board 3
Plane 12         Switch Fabric Board 4
Plane 13         Switch Fabric Board 4
Plane 14         Switch Fabric Board 4
Plane 15         Switch Fabric Board 5
Plane 16         Switch Fabric Board 5
Plane 17         Switch Fabric Board 5
Plane 18         Switch Fabric Board 6
Plane 19         Switch Fabric Board 6
Plane 20         Switch Fabric Board 6
Plane 21         Switch Fabric Board 7
Plane 22         Switch Fabric Board 7
Plane 23         Switch Fabric Board 7
```



**show chassis fabric plane-location (MX2008 Router)**

```

user@host> show chassis fabric plane-location

-----Fabric Plane Locations-----
Plane 0          Switch Fabric Board 0
Plane 1          Switch Fabric Board 1
Plane 2          Switch Fabric Board 2
Plane 3          Switch Fabric Board 3
Plane 4          Switch Fabric Board 4
Plane 5          Switch Fabric Board 5
Plane 6          Switch Fabric Board 6
Plane 7          Switch Fabric Board 7

```

**show chassis fabric plane-location (MX10003 Router)**

```

user@host> show chassis fabric plane-location

-----Fabric Plane Locations-----
Plane 0
    FPC 0
    FPC 1
Plane 1
    FPC 0
    FPC 1
Plane 2
    FPC 0
    FPC 1
Plane 3
    FPC 0
    FPC 1
Plane 4
    FPC 0
    FPC 1
Plane 5
    FPC 0
    FPC 1
Plane 6
    FPC 0
    FPC 1
Plane 7
    FPC 0
    FPC 1
Plane 8
    FPC 0
    FPC 1
Plane 9
    FPC 0
    FPC 1
Plane 10
    FPC 0
    FPC 1
Plane 11
    FPC 0
    FPC 1
Plane 12
    FPC 0
    FPC 1
Plane 13

```



```

        FPC 0
        FPC 1
Plane 14
        FPC 0
        FPC 1
Plane 15
        FPC 0
        FPC 1
Plane 16
        FPC 0
        FPC 1
Plane 17
        FPC 0
        FPC 1
Plane 18
        FPC 0
        FPC 1
Plane 19
        FPC 0
        FPC 1
Plane 20
        FPC 0
        FPC 1
Plane 21
        FPC 0
        FPC 1

```

#### show chassis fabric plane-location (TX Matrix Plus Router)

```
user@host> show chassis fabric plane-location
```

```

Fabric Plane Locations :
Plane      SFC ABS-SIB-F13      SFC ABS-SIB-F2      LCC ST-SIB-L
0          0, 1                0/0, 0/2, 0/4, 0/6      0
1          3, 4                1/0, 1/2, 1/4, 1/6      1
2          6, 7                2/0, 2/2, 2/4, 2/6      2
3          8, 9                3/0, 3/2, 3/4, 3/6      3
4          11, 12              4/0, 4/2, 4/4, 4/6      4

```

#### show chassis fabric plane-location (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric plane-location
```

```
sfc0-re0
```

```

-----Fabric Plane Locations-----
Plane      SFC SIB F13      SFC SIB F2      LCC SIB
0          0, 1                0/0, 0/2, 0/4, 0/6      0
1          3, 4                1/0, 1/2, 1/4, 1/6      1
2          6, 7                2/0, 2/2, 2/4, 2/6      2
3          8, 9                3/0, 3/2, 3/4, 3/6      3
4          11, 12              4/0, 4/2, 4/4, 4/6      4

```

#### show chassis fabric plane-location (EX8200 Switch)

```
user@host> show chassis fabric plane-location
```

```

-----Fabric Plane Locations-----
Plane  0                      Control Board 0

```



Plane 1	Control Board 0
Plane 2	Control Board 0
Plane 3	Control Board 0
Plane 4	Control Board 1
Plane 5	Control Board 1
Plane 6	Control Board 1
Plane 7	Control Board 1
Plane 8	Control Board 2
Plane 9	Control Board 2
Plane 10	Control Board 2
Plane 11	Control Board 2

### show chassis fabric plane-location (EX9253 Switch)

```
user@switch> show chassis fabric plane-location
```

```
-----Fabric Plane Locations-----
Plane 0
    FPC 0
    FPC 1
Plane 1
    FPC 0
    FPC 1
Plane 2
    FPC 0
    FPC 1
Plane 3
    FPC 0
    FPC 1
Plane 4
    FPC 0
    FPC 1
Plane 5
    FPC 0
    FPC 1
Plane 6
    FPC 0
    FPC 1
Plane 7
    FPC 0
    FPC 1
Plane 8
    FPC 0
    FPC 1
Plane 9
    FPC 0
    FPC 1
Plane 10
    FPC 0
    FPC 1
Plane 11
    FPC 0
    FPC 1
Plane 12
    FPC 0
    FPC 1
Plane 13
    FPC 0
    FPC 1
Plane 14
```



```

        FPC 0
        FPC 1
Plane 15
        FPC 0
        FPC 1
Plane 16
        FPC 0
        FPC 1
Plane 17
        FPC 0
        FPC 1
Plane 18
        FPC 0
        FPC 1
Plane 19
        FPC 0
        FPC 1
Plane 20
        FPC 0
        FPC 1
Plane 21
        FPC 0
        FPC 1
```

#### show chassis fabric plane-location (EX9253 Switch)

```
user@switch> show chassis fabric plane-location
```

```

-----Fabric Plane Locations-----
Plane 0
        FPC 0
        FPC 1
Plane 1
        FPC 0
        FPC 1
Plane 2
        FPC 0
        FPC 1
Plane 3
        FPC 0
        FPC 1
Plane 4
        FPC 0
        FPC 1
Plane 5
        FPC 0
        FPC 1
Plane 6
        FPC 0
        FPC 1
Plane 7
        FPC 0
        FPC 1
Plane 8
        FPC 0
        FPC 1
Plane 9
        FPC 0
        FPC 1
Plane 10
```



```

        FPC 0
        FPC 1
Plane 11
        FPC 0
        FPC 1
Plane 12
        FPC 0
        FPC 1
Plane 13
        FPC 0
        FPC 1
Plane 14
        FPC 0
        FPC 1
Plane 15
        FPC 0
        FPC 1
Plane 16
        FPC 0
        FPC 1
Plane 17
        FPC 0
        FPC 1
Plane 18
        FPC 0
        FPC 1
Plane 19
        FPC 0
        FPC 1
Plane 20
        FPC 0
        FPC 1
Plane 21
        FPC 0
        FPC 1

```

### show chassis fabric plane-location (PTX Series Packet Transport Routers)

```
user@host> show chassis fabric plane-location
```

```

-----Fabric Plane Locations-----
SIB      Planes
0         0   1
1         2   3
2         4   5
3         6   7
4         8   9
5        10  11
6        12  13
7        14  15
8        16  17

```

### show chassis fabric plane-location (PTX10008 Routers)

```
user@host> show chassis fabric plane-location
```

```

-----Fabric Plane Locations-----
SIB      Planes
0         0   1

```



1	2	3
2	4	5
3	6	7
4	8	9
5	10	11

#### show chassis fabric plane-location (QFX 10008 Switch)

```
user@host> show chassis fabric plane-location
```

```
-----Fabric Plane Locations-----  
SIB      Planes  
0         0  1  
1         2  3  
2         4  5  
3         6  7  
4         8  9  
5        10 11
```



## show chassis fabric sibs

<b>Syntax</b>	<pre>show chassis fabric sibs &lt;fcc number   scc&gt; &lt;slot slot-number&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced on QFX Series switches in Junos OS Release 15.1X53-D30</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p>
<b>Description</b>	<p>(TX Matrix routers only) Display the state of the electrical and optical switch fabric link between the SIBs in the TX Matrix router (TX-SIBs) and the SIBs in the T640 routers (T640 LCC SIBs).</p> <p>(M320, T640, T1600, T4000 and PTX Series routers and QFX Series switches) Display the state of the electrical switch fabric link between the SIBs and the FPCs.</p>
<b>Options</b>	<p><b>none</b>—(TX Matrix routers only) Display the state of the electrical and optical switch fabric link between the SIBs in the TX Matrix router (TX-SIBs) and the SIBs in the T640 routers (T640 LCC SIBs).</p> <p>(M320, T640, T1600, T4000 and PTX Series routers and QFX Series switches) Display the state of the electrical switch fabric link between the SIBs and the FPCs.</p> <p><b>fcc number</b>—(Optional) Display the switching fabric link state for the T640 SIBs on a specified T640 router (line-card chassis) connected to a TX Matrix router.</p> <p><b>scc</b>—(Optional) Display the switching fabric link state for the TX-SIBs on the TX Matrix router (switch-card chassis).</p> <p><b>slot slot-number</b>—(Optional) Display the state of the electrical switch fabric link between the specified SIB slot and the FPCs.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">request chassis sib</a></li> <li>• <a href="#">show chassis sibs</a></li> <li>• <a href="#">Monitoring the SIBs</a></li> <li>• <a href="#">Redundant SIBs Overview</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show chassis fabric sibs (M320 Router) on page 630</a></p> <p><a href="#">show chassis fabric sibs (T640 Router) on page 630</a></p> <p><a href="#">show chassis fabric sibs (T1600 Router) on page 631</a></p> <p><a href="#">show chassis fabric sibs (T4000 Core Router) on page 633</a></p>



[show chassis fabric sibs \(TX Matrix Router\) on page 634](#)  
[show chassis fabric sibs lcc \(TX Matrix Router\) on page 636](#)  
[show chassis fabric sibs scc \(TX Matrix Router\) on page 637](#)  
[show chassis fabric sibs slot \(PTX3000 Router\) on page 638](#)  
[show chassis fabric sibs slot \(Junos OS Evolved\) on page 638](#)  
[show chassis fabric sibs \(PTX10008 Router\) on page 638](#)  
[show chassis fabric sibs \(QFX10008 Switch\) on page 640](#)

**Output Fields** [Table 23 on page 628](#) lists the output fields for the **show chassis fabric sibs** command. Output fields are listed in the approximate order in which they appear.

*Table 23: show chassis fabric sibs Output Fields*

Field Name	Field Description
<b>Fabric management SIB state</b>	Switching fabric link (link from FPC to SIB) state for each SIB: <ul style="list-style-type: none"><li>• <b>Unused</b>—SIB is not present.</li><li>• <b>Links ok</b>—Link between the SIB and the FPC is active.</li><li>• <b>Link error</b>—Link between the SIB and the FPC is not operational.</li></ul>



Table 23: show chassis fabric sibs Output Fields (continued)

Field Name	Field Description
Plane state	<p>Possible plane state of the M320 SIB, TX-SIB or T640 SIB:</p> <ul style="list-style-type: none"> <li>• <b>S_ACTIVE</b>—Links on the SIB are operational, and the fabric plane (SIB) is operational and running.</li> <li>• <b>S_SPARE</b>—Links on the SIB are operational and the fabric plane (SIB) is redundant and can be operational if any of the fabric planes in the <b>S_ACTIVE</b> state encounters an error.</li> </ul> <p><b>NOTE:</b> If the plane is unusable by any of the Packet Forwarding Engines, the command output displays an additional string, <b>plane has link errors on # pfes</b>, where, # indicates the total number of links (both from SIB to FPC, and from FPC to SIB) having link errors (detected either during initialization time or runtime) in this particular plane. This does not count links having destination errors.</p> <ul style="list-style-type: none"> <li>• <b>S_EMPTY</b>—No links are present on the SIB, and the fabric plane (SIB) is powered down.</li> <li>• <b>S_ACTIVATING</b>—Links on the SIB are coming online; this is a transitional state.</li> <li>• <b>S_DEACTIVATING</b>—Links on the SIB are going offline; this is a transitional state.</li> <li>• <b>S_FAULTING</b>—Links on the SIB are being marked faulty, and the fabric plane (SIB) is not operational.</li> <li>• <b>S_FAULT</b>—Links on the SIB are in an alarmed state, and the fabric plane (SIB) is not operational for the following reasons: <ul style="list-style-type: none"> <li>• On-board F-chip is not operational.</li> <li>• Fiber optic connector faults.</li> <li>• FPC connector faults.</li> </ul> </li> </ul> <p>Possible plane state of the QFX Series SIB:</p> <ul style="list-style-type: none"> <li>• <b>Active</b>—Links on the SIB are operational, and the fabric plane (SIB) is operational and running.</li> <li>• <b>Spare</b>—Links on the SIB are operational and the fabric plane (SIB) is redundant and can be operational if any of the fabric planes in the <b>S_ACTIVE</b> state encounters an error.</li> <li>• <b>Empty</b>—No links are present on the SIB, and the fabric plane (SIB) is powered down.</li> <li>• <b>Activating</b>—Links on the SIB are coming online; this is a transitional state.</li> <li>• <b>Deactivating</b>—Links on the SIB are going offline; this is a transitional state.</li> <li>• <b>Faulting</b>—Links on the SIB are being marked faulty, and the fabric plane (SIB) is not operational.</li> <li>• <b>Fault</b>—Links on the SIB are in an alarmed state, and the fabric plane (SIB) is not operational for the following reasons: <ul style="list-style-type: none"> <li>• On-board F-chip is not operational.</li> <li>• Fiber optic connector faults.</li> <li>• FPC connector faults.</li> </ul> </li> </ul>



## Sample Output

### show chassis fabric sibs (M320 Router)

```
user@host> show chassis fabric sibs
```

```
Fabric management SIB state:
```

```
SIB #0
```

```
plane state: S_ACTIVE
```

```
FPC #0
```

```
PFE #1 : Links ok
```

```
FPC #1
```

```
PFE #1 : Links ok
```

```
FPC #2
```

```
PFE #1 : Links ok
```

```
FPC #3
```

```
PFE #1 : Links ok
```

```
SIB #1
```

```
plane state: S_ACTIVE
```

```
FPC #0
```

```
PFE #1 : Links ok
```

```
FPC #1
```

```
PFE #1 : Links ok
```

```
FPC #2
```

```
PFE #1 : Links ok
```

```
FPC #3
```

```
PFE #1 : Links ok
```

```
SIB #2
```

```
plane state: S_ACTIVE
```

```
FPC #0
```

```
PFE #1 : Links ok
```

```
FPC #1
```

```
PFE #1 : Links ok
```

```
FPC #2
```

```
PFE #1 : Links ok
```

```
FPC #3
```

```
PFE #1 : Links ok
```

```
SIB #3
```

```
plane state: S_ACTIVE
```

```
FPC #0
```

```
PFE #1 : Links ok
```

```
FPC #1
```

```
PFE #1 : Links ok
```

```
FPC #2
```

```
PFE #1 : Links ok
```

```
FPC #3
```

```
PFE #1 : Links ok
```

### show chassis fabric sibs (T640 Router)

```
user@host> show chassis fabric sibs
```

```
Fabric management SIB state:
```

```
SIB #0
```

```
plane state: S_SPARE
```

```
FPC #0
```

```
PFE #1 : Links ok
```

```
FPC #2
```

```
PFE #1 : Links ok
```

```
FPC #3
```



```

        PFE #0 : Links ok
        PFE #1 : Links ok
SIB #1
  plane state: S_ACTIVE
  FPC #0
    PFE #1 : Links ok
  FPC #2
    PFE #1 : Links ok
  FPC #3
    PFE #0 : Links ok
    PFE #1 : Links ok
SIB #2
  plane state: S_ACTIVE
  FPC #0
    PFE #1 : Links ok
  FPC #2
    PFE #1 : Links ok
  FPC #3
    PFE #0 : Links ok
    PFE #1 : Links ok
SIB #3
  plane state: S_ACTIVE
  FPC #0
    PFE #1 : Links ok
  FPC #2
    PFE #1 : Links ok
  FPC #3
    PFE #0 : Links ok
    PFE #1 : Links ok
SIB #4
  plane state: S_ACTIVE
  FPC #0
    PFE #1 : Links ok
  FPC #2
    PFE #1 : Links ok
  FPC #3
    PFE #0 : Links ok
    PFE #1 : Links ok

```

### show chassis fabric sibs (TI600 Router)

```
user@host> show chassis fabric sibs
```

```

SIB #0
  plane state: S_SPARE
  FPC #0
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #1
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #2
    PFE #0 : Links ok
  FPC #4
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #5
    PFE #0 : Links ok
  FPC #6
    PFE #0 : Links ok

```



```

    PFE #1 : Links ok
FPC #7
    PFE #0 : Links ok
    PFE #1 : Links ok
SIB #1
plane state: S_ACTIVE , plane has link errors on 2 pfes
FPC #0
    PFE #0 : Links ok
    PFE #1 : Links ok
FPC #1
    PFE #0 : Links ok
    PFE #1 : Links ok
FPC #3
    PFE #0 : Links ok
    PFE #1 : Links ok
FPC #4
    PFE #0 : Links ok
    PFE #1 : Links ok
FPC #5
    PFE #0 : Links ok
    PFE #1 : Links ok
FPC #7
    PFE #0 : Links ok
    PFE #1 : Links okSIB #2
plane state: S_ACTIVE
SIB #2
plane state: S_ACTIVE
FPC #0
    PFE #0 : Links ok
    PFE #1 : Links ok
FPC #1
    PFE #0 : Links ok
    PFE #1 : Links ok
FPC #2
    PFE #0 : Links ok
FPC #4
    PFE #0 : Links ok
    PFE #1 : Links ok
FPC #5
    PFE #0 : Links ok
FPC #6
    PFE #0 : Links ok
    PFE #1 : Links ok
FPC #7
    PFE #0 : Links ok
    PFE #1 : Links ok
SIB #3
plane state: S_ACTIVE
FPC #0
    PFE #0 : Links ok
    PFE #1 : Links ok
FPC #1
    PFE #0 : Links ok
    PFE #1 : Links ok
FPC #2
    PFE #0 : Links ok
FPC #4
    PFE #0 : Links ok
    PFE #1 : Links ok
FPC #5
```



```

        PFE #0 : Links ok
FPC #6
        PFE #0 : Links ok
        PFE #1 : Links ok
FPC #7
        PFE #0 : Links ok
        PFE #1 : Links ok
SIB #4
plane state: S_ACTIVE
FPC #0
        PFE #0 : Links ok
        PFE #1 : Links ok
FPC #1
        PFE #0 : Links ok
        PFE #1 : Links ok
FPC #2
        PFE #0 : Links ok
FPC #4
        PFE #0 : Links ok
        PFE #1 : Links ok
FPC #5
        PFE #0 : Links ok
FPC #6
        PFE #0 : Links ok
        PFE #1 : Links ok
FPC #7
        PFE #0 : Links ok
        PFE #1 : Links ok

```

#### show chassis fabric sibs (T4000 Core Router)

```
user@host> show chassis fabric sibs
```

```
Fabric management SIB state:
```

```

SIB #0
plane state: S_SPARE
FPC #2
        PFE #0 : Links ok
FPC #3
        PFE #0 : Links ok
FPC #5
        PFE #0 : Links ok
        PFE #1 : Links ok
FPC #6
        PFE #0 : Links ok
        PFE #1 : Links ok
SIB #1
plane state: S_ACTIVE
FPC #2
        PFE #0 : Links ok
FPC #3
        PFE #0 : Links ok
FPC #5
        PFE #0 : Links ok
        PFE #1 : Links ok
FPC #6
        PFE #0 : Links ok
        PFE #1 : Links ok
SIB #2
plane state: S_ACTIVE

```



```

FPC #2
  PFE #0 : Links ok
FPC #3
  PFE #0 : Links ok
FPC #5
  PFE #0 : Links ok
  PFE #1 : Links ok
FPC #6
  PFE #0 : Links ok
  PFE #1 : Links ok
SIB #3
  plane state: S_ACTIVE
  FPC #2
    PFE #0 : Links ok
  FPC #3
    PFE #0 : Links ok
  FPC #5
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #6
    PFE #0 : Links ok
    PFE #1 : Links ok
SIB #4
  plane state: S_ACTIVE
  FPC #2
    PFE #0 : Links ok
  FPC #3
    PFE #0 : Links ok
  FPC #5
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #6
    PFE #0 : Links ok
    PFE #1 : Links ok

```

### show chassis fabric sibs (TX Matrix Router)

```

user@host> show chassis fabric sibs

scc-re0:
-----
Fabric management SIB state:
SIB #1
  plane state: S_ACTIVE , plane has link errors on 2 pfes
  FPC #0
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #1
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #3
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #4
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #5
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #7

```



```

        PFE #0 : Links ok
        PFE #1 : Links ok
SIB #2
  plane state: S_ACTIVE
  LCC #0      : Links ok
  LCC #1      : Links ok
SIB #3
  plane state: S_ACTIVE
  LCC #0      : Links ok
  LCC #1      : Links ok
SIB #4
  plane state: S_ACTIVE
  LCC #0      : Links ok
  LCC #1      : Links ok

```

```
lcc0-re0:
```

```
-----
Fabric management SIB state:
```

```

SIB #1
  plane state: S_ACTIVE
  FPC #0
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #1
    PFE #1 : Links ok
  FPC #2
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #3
    PFE #1 : Links ok
  FPC #4
    PFE #1 : Links ok
  FPC #5
    PFE #0 : Links ok
  FPC #6
    PFE #1 : Links ok
  FPC #7
    PFE #1 : Links ok
  SCC      : Links ok
SIB #2
  plane state: S_ACTIVE
  FPC #0
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #1
    PFE #1 : Links ok
  FPC #2
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #3
    PFE #1 : Links ok
  FPC #4
    PFE #1 : Links ok
  FPC #5
    PFE #0 : Links ok
  FPC #6
    PFE #1 : Links ok
  FPC #7
    PFE #1 : Links ok
  SCC      : Links ok

```



```

SIB #3
  plane state: S_ACTIVE
  FPC #0
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #1
    PFE #1 : Links ok
  FPC #2
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #3
    PFE #1 : Links ok
  FPC #4
    PFE #1 : Links ok
  FPC #5
    PFE #0 : Links ok
  FPC #6
    PFE #1 : Links ok
  FPC #7
    PFE #1 : Links ok
  SCC      : Links ok

```

```

SIB #4
  plane state: S_ACTIVE
  FPC #0
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #1
    PFE #1 : Links ok
  FPC #2
    PFE #0 : Links ok
    PFE #1 : Links ok
  FPC #3
    PFE #1 : Links ok
  FPC #4
    PFE #1 : Links ok
  FPC #5
    PFE #0 : Links ok
  FPC #6
    PFE #1 : Links ok
  FPC #7
    PFE #1 : Links ok
  SCC      : Links o

```

### show chassis fabric sibs lcc (TX Matrix Router)

```
user@host> show chassis fabric sibs lcc 0
```

```
lcc1-re0:
```

```
-----
Fabric management SIB state:
```

```

SIB #1
  plane state: S_ACTIVE
  FPC #0
    PFE #0 : Links ok
  FPC #2
    PFE #1 : Links ok
  FPC #4
    PFE #0 : Links ok
  FPC #5
    PFE #1 : Links ok

```



```

    FPC #7
      PFE #0 : Links ok
    SCC      : Links ok
SIB #2
  plane state: S_ACTIVE
  FPC #0
    PFE #0 : Links ok
  FPC #2
    PFE #1 : Links ok
  FPC #4
    PFE #0 : Links ok
  FPC #5
    PFE #1 : Links ok
  FPC #7
    PFE #0 : Links ok
  SCC      : Links ok
SIB #3
  plane state: S_ACTIVE
  FPC #0
    PFE #0 : Links ok
  FPC #2
    PFE #1 : Links ok
  FPC #4
    PFE #0 : Links ok
  FPC #5
    PFE #1 : Links ok
  FPC #7
    PFE #0 : Links ok
  SCC      : Links ok
SIB #4
  plane state: S_ACTIVE
  FPC #0
    PFE #0 : Links ok
  FPC #2
    PFE #1 : Links ok
  FPC #4
    PFE #0 : Links ok
  FPC #5
    PFE #1 : Links ok
  FPC #7
    PFE #0 : Links ok
  SCC      : Links ok

```

### show chassis fabric sibs scc (TX Matrix Router)

```
user@host> show chassis fabric sibs scc
```

```
scc-re0:
```

```
-----
Fabric management SIB state:
```

```

SIB #1
  plane state: S_ACTIVE
  LCC #0      : Links ok
  LCC #1      : Links ok
SIB #2
  plane state: S_ACTIVE
  LCC #0      : Links ok
  LCC #1      : Links ok
SIB #3
  plane state: S_ACTIVE

```



```

LCC #0      : Links ok
LCC #1      : Links ok
SIB #4
plane state: S_ACTIVE
LCC #0      : Links ok
LCC #1      : Links ok

```

### show chassis fabric sibs slot (PTX3000 Router)

```
user@host> show chassis fabric sibs slot 0
```

```

Fabric management SIB state:
SIB #0 Online
  Fcore #0 (plane 0) Active
    FPC #8
      PFE #0 : OK
      PFE #1 : OK
    FPC #12
      PFE #0 : OK
      PFE #1 : OK
  Fcore #1 (plane 1) Active
    FPC #8
      PFE #0 : OK
      PFE #1 : OK
    FPC #12
      PFE #0 : OK
      PFE #1 : OK

```

### show chassis fabric sibs slot (Junos OS Evolved)

The output of the **show chassis fabric sibs** command is modified to include ASIC information. In the earlier releases, this command displayed ASICs as FCOREs. With this modification, for every FPC and SIB, information about ASIC and FCORE is presented separately in the output.

```
user@host> show chassis fabric sibs slot 0
```

```

Fabric management SIB state:
SIB #0 Online
  Asic #0 Fcore #0 (plane 0) Empty
  FPC #0
    PFE #0 : Links ok
    PFE #1 : Links ok
    PFE #2 : Links ok
    PFE #3 : Links ok

```

### show chassis fabric sibs (PTX10008 Router)

```
user@host> show chassis fabric sibs
```

```

Fabric management SIB state:
SIB #0 Online
  FASIC #0 (plane 0) Active
    FPC #0
      PFE #0 : OK
      PFE #1 : OK
      PFE #2 : OK
    FPC #5

```



```

        PFE #0 : OK
        PFE #1 : OK
        PFE #2 : OK
        PFE #3 : OK
        PFE #4 : OK
        PFE #5 : OK
    FPC #6
        PFE #0 : OK
        PFE #1 : OK
        PFE #2 : OK
        PFE #3 : OK
        PFE #4 : OK
        PFE #5 : OK
FASIC #1 (plane 1) Active
    FPC #0
        PFE #0 : OK
        PFE #1 : OK
        PFE #2 : OK
    FPC #5
        PFE #0 : OK
        PFE #1 : OK
        PFE #2 : OK
        PFE #3 : OK
        PFE #4 : OK
        PFE #5 : OK
    FPC #6
        PFE #0 : OK
        PFE #1 : OK
        PFE #2 : OK
        PFE #3 : OK
        PFE #4 : OK
        PFE #5 : OK
SIB #1 Online
    FASIC #0 (plane 2) Active
        FPC #0
            PFE #0 : OK
            PFE #1 : OK
            PFE #2 : OK
        FPC #5
            PFE #0 : OK
            PFE #1 : OK
            PFE #2 : OK
            PFE #3 : OK
            PFE #4 : OK
            PFE #5 : OK
        FPC #6
            PFE #0 : OK
            PFE #1 : OK
            PFE #2 : OK
            PFE #3 : OK
            PFE #4 : OK
            PFE #5 : OK
    FASIC #1 (plane 3) Active
        FPC #0
            PFE #0 : OK
            PFE #1 : OK
            PFE #2 : OK
        FPC #5
            PFE #0 : OK
            PFE #1 : OK
```



```
        PFE #2 : OK
        PFE #3 : OK
        PFE #4 : OK
        PFE #5 : OK
    FPC #6
        PFE #0 : OK
        PFE #1 : OK
        PFE #2 : OK
        PFE #3 : OK
        PFE #4 : OK
        PFE #5 : OK
SIB #2 Empty
SIB #3 Empty
SIB #4 Empty
SIB #5 Empty
```

### show chassis fabric sibs (QFX10008 Switch)

```
user@host> show chassis fabric sibs
```

```
Fabric management SIB state:
SIB #0 Online
    FASIC #0 (plane 0) Active
        FPC #0
            PFE #0 : OK
            PFE #1 : OK
            PFE #2 : OK
            PFE #3 : OK
        FPC #1
            PFE #0 : OK
            PFE #1 : OK
    FASIC #1 (plane 1) Active
        FPC #0
            PFE #0 : OK
            PFE #1 : OK
        FPC #12
            PFE #0 : OK
            PFE #1 : OK
SIB #1 Empty
SIB #2 Empty
SIB #3 Empty
SIB #4 Empty
SIB #5 Empty
```



## show chassis fabric summary

<b>List of Syntax</b>	<a href="#">Syntax on page 641</a> <a href="#">Syntax (EX9253 Switches) on page 641</a>
<b>Syntax</b>	show chassis fabric summary <extended>
<b>Syntax (EX9253 Switches)</b>	show chassis fabric summary
<b>Release Information</b>	<p>Command introduced in Junos OS Release 8.4.</p> <p>Command introduced in Junos OS Release 9.4 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 15.1X53-D30 for QFX Series switches.</p> <p><b>extended</b> option added in Junos OS Release 14.1R2.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.2 for MX10008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p>
<b>Description</b>	<p>(MX Series routers and EX8200 switches only) Display the state of all fabric planes and the elapsed uptime.</p> <p>(QFX Series switches) Display the state of all fabric planes.</p>
<b>Options</b>	<b>extended</b> —(Optional) Display the extended summary of fabric planes.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show chassis fabric summary (MX240 Router) on page 644</a> <a href="#">show chassis fabric summary (MX480 Router) on page 644</a> <a href="#">show chassis fabric summary (MX480 Router with MPC4E) on page 645</a> <a href="#">show chassis fabric summary (MX960 Router) on page 645</a> <a href="#">show chassis fabric summary (MX10008 Router) on page 645</a> <a href="#">show chassis fabric summary (MX2010 Router) on page 645</a> <a href="#">show chassis fabric summary (MX2020 Router) on page 646</a> <a href="#">show chassis fabric summary (MX2020 Router with MPC4E) on page 646</a> <a href="#">show chassis fabric summary (MX2008) on page 646</a> <a href="#">show chassis fabric summary (EX8200 Switch) on page 646</a> <a href="#">show chassis fabric summary (EX9253 Switch) on page 647</a> <a href="#">show chassis fabric summary (PTX Series Packet Transport Router) on page 647</a>



[show chassis fabric summary \(PTX10008 Router\) on page 647](#)

[show chassis fabric summary \(QFX 10008 Switch\) on page 648](#)

[show chassis fabric summary extended \(MX960 Router\) on page 648](#)

[show chassis fabric summary \(MX10003 Router\) on page 649](#)

[show chassis fabric summary extended \(MX10003 Router\) on page 649](#)

**Output Fields** [Table 24 on page 642](#) lists the output fields for the **show chassis fabric summary** command. Output fields are listed in the approximate order in which they appear.

*Table 24: show chassis fabric summary Output Fields*

Field Name	Field Description
Plane	(MX Series, MX2020, MX2010, and MX2008 Routers only) Plane number.



Table 24: *show chassis fabric summary* Output Fields (continued)

Field Name	Field Description
<b>State</b>	<p>(MX Series and QFX Series) State of the SIB or FPC:</p> <ul style="list-style-type: none"> <li>• <b>Online</b>—Switch Interface Board (SIB) is operational and running.</li> </ul> <p><b>NOTE:</b> On the Enhanced MX SCB with Trio MPC, a maximum of 4 planes are operational and running. On all the other SCBs with Trio MPC, all the planes are operational and running.</p> <ul style="list-style-type: none"> <li>• <b>Empty</b>—SIB is powered down.</li> <li>• <b>Check</b>—SIB is in the <b>Check</b> state because of the following reasons: <ul style="list-style-type: none"> <li>• SIB is not inserted properly.</li> <li>• Some destination errors are detected on the SIB. In this case, the Packet Forwarding Engine stops using the SIB to send traffic to the affected destination Packet Forwarding Engine.</li> <li>• Some link errors are detected on the channel between the SIB and a Packet Forwarding Engine. Link errors can be detected at initialization time or runtime: <ul style="list-style-type: none"> <li>• Link errors caused by a link training failure at initialization time—The Packet Forwarding Engine does not use the SIB to send traffic. The <b>show chassis fabric fpcs</b> command shows <b>Plane disabled</b> as status for this link.</li> <li>• Link errors caused by CRC errors detected at runtime—The Packet Forwarding Engine continues to use the SIB to send traffic. The <b>show chassis fabric fpcs</b> command shows <b>Link error</b> as the status for this link.</li> </ul> </li> </ul> </li> </ul> <p><b>NOTE:</b> The <b>Check</b> state does not apply to PTX Series Packet Transport Routers because there are no SIBs in the Check state.</p> <p>For information about link and destination errors, issue the <b>show chassis fabric fpcs</b> commands.</p> <ul style="list-style-type: none"> <li>• <b>Spare</b>—SIB is redundant and will move to active state if one of the working SIBs fails.</li> </ul> <p><b>NOTE:</b> <b>Spare</b> does not apply to PTX Series Packet Transport Routers because there are no spare SIBs in the device.</p> <p>(MX2010, MX2020, and MX2008 Routers) State of the SFB.</p> <ul style="list-style-type: none"> <li>• <b>Online</b>—Switch Fabric Board (SFB) is operational and running.</li> <li>• <b>Offline</b>—Switch Fabric Board (SFB) is powered down.</li> <li>• <b>Check</b>—Switch Fabric Board (SFB) is in the check state.</li> </ul>
<b>Errors</b>	<p>(PTX Series and QFX Series) Indicates whether there is any error on the SIB.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—No errors</li> <li>• <b>Link Errors</b>—Fabric link errors were found on the SIB RX link.</li> <li>• <b>Cell drops</b>—Fabric cell drops were found on the SIB ASIC.</li> <li>• <b>Link, Cell drops</b>—Both Link errors and cell drops were detected on at least one of the FPC's fabric links.</li> </ul>



Table 24: show chassis fabric summary Output Fields (continued)

Field Name	Field Description
	<ul style="list-style-type: none"> <li><b>Asic Errors</b>—A fault affecting one of the ASICs on the SIB is detected. It can be an IO error or an internal error signaled by the ASIC.</li> </ul> <p><b>NOTE:</b> The <b>Errors</b> column is empty only when the FPC or SIB is offline.</p>
<b>Uptime</b>	(MX Series, MX2010, MX2020, and MX2008 Routers) Elapsed time the plane has been online.
<b>Link Error</b>	Fabric link errors were found on the SIB RX link.
<b>Link TF</b>	Fabric link training failure has occurred.
<b>Destination errors</b>	<ul style="list-style-type: none"> <li><b>Local</b>—Destination error detected on the FPC or PFE's own self-stream.</li> <li><b>Remote</b>—Destination error detected on the FPC or PFE's non-self-streams.</li> </ul>

## Sample Output

### show chassis fabric summary (MX240 Router)

```
user@host> show chassis fabric summary
```

```
Plane  State  Uptime
0      Online 23 hours, 26 minutes, 54 seconds
1      Online 23 hours, 26 minutes, 54 seconds
2      Check 18 hours, 33 minutes, 42 seconds
3      Online 23 hours, 26 minutes, 54 seconds
4      Spare 23 hours, 26 minutes, 54 seconds
5      Spare 23 hours, 26 minutes, 54 seconds
6      Spare 23 hours, 26 minutes, 54 seconds
7      Spare 23 hours, 26 minutes, 54 seconds
```

### show chassis fabric summary (MX480 Router)

```
user@host> show chassis fabric summary
```

```
Plane  State  Uptime
0      Online 8 hours, 45 minutes, 29 seconds
1      Online 8 hours, 45 minutes, 28 seconds
2      Online 8 hours, 45 minutes, 28 seconds
3      Online 8 hours, 45 minutes, 28 seconds
4      Spare 8 hours, 45 minutes, 28 seconds
5      Spare 8 hours, 45 minutes, 28 seconds
6      Spare 8 hours, 45 minutes, 28 seconds
7      Check 6 hours, 10 minutes, 12 seconds
```



**show chassis fabric summary (MX480 Router with MPC4E)**

```
user@host > show chassis fabric summary
```

Plane	State	Uptime
0	Online	6 hours, 57 minutes, 44 seconds
1	Online	6 hours, 57 minutes, 40 seconds
2	Online	6 hours, 57 minutes, 39 seconds
3	Online	6 hours, 57 minutes, 34 seconds
4	Spare	6 hours, 57 minutes, 34 seconds
5	Spare	6 hours, 57 minutes, 29 seconds
6	Spare	6 hours, 57 minutes, 29 seconds
7	Spare	6 hours, 57 minutes, 24 seconds

Note:  
For FPC slots with MPC Type 4 or MCC:  
Fabric planes 1 and 5, 3 and 7 use shared physical links.  
Those slots may run in a reduced bandwidth in case both  
plane 1 and 5, or both 3 and 7 are active.

**show chassis fabric summary (MX960 Router)**

```
user@host> show chassis fabric summary
```

Plane	State	Uptime
0	Online	3 hours, 7 minutes, 9 seconds
1	Online	3 hours, 7 minutes, 4 seconds
2	Online	3 hours, 6 minutes, 59 seconds
3	Online	3 hours, 6 minutes, 54 seconds
4	Empty	
5	Empty	

**show chassis fabric summary (MX10008 Router)**

```
user@host> show chassis fabric summary
```

Plane	State	Uptime
0	Online	19 hours, 27 minutes, 33 seconds
1	Online	19 hours, 27 minutes, 7 seconds
2	Online	19 hours, 26 minutes, 39 seconds
3	Online	19 hours, 26 minutes, 11 seconds
4	Online	19 hours, 26 minutes, 13 seconds
5	Online	19 hours, 26 minutes, 22 seconds

**show chassis fabric summary (MX2010 Router)**

```
user@host> show chassis fabric summary
```

Plane	State	Uptime
0	Online	1 day, 13 hours, 20 minutes, 10 seconds
1	Online	1 day, 13 hours, 19 minutes, 59 seconds
2	Online	1 day, 13 hours, 19 minutes, 49 seconds
3	Offline	
4	Online	1 day, 13 hours, 19 minutes, 28 seconds
5	Check	1 day, 13 hours, 19 minutes, 17 seconds
6	Online	1 day, 13 hours, 19 minutes, 6 seconds
7	Online	1 hour, 43 minutes, 5 seconds



### show chassis fabric summary (MX2020 Router)

```
user@host> show chassis fabric summary
```

Plane	State	Uptime
0	Online	8 hours, 24 minutes, 1 second
1	Online	8 hours, 47 minutes, 54 seconds
2	Online	8 hours, 47 minutes, 44 seconds
3	Online	8 hours, 47 minutes, 33 seconds
4	Online	8 hours, 47 minutes, 22 seconds
5	Online	8 hours, 47 minutes, 12 seconds
6	Online	8 hours, 47 minutes, 1 second
7	Online	8 hours, 46 minutes, 50 seconds

### show chassis fabric summary (MX2020 Router with MPC4E)

```
user@host > show chassis fabric summary
```

Plane	State	Uptime
0	Online	3 days, 6 hours, 58 minutes, 29 seconds
1	Online	3 days, 6 hours, 58 minutes, 18 seconds
2	Online	3 days, 6 hours, 58 minutes, 8 seconds
3	Online	3 days, 6 hours, 57 minutes, 57 seconds
4	Online	3 days, 6 hours, 57 minutes, 46 seconds
5	Online	3 days, 6 hours, 57 minutes, 36 seconds
6	Online	3 days, 6 hours, 57 minutes, 25 seconds
7	Online	3 days, 6 hours, 57 minutes, 14 seconds

### show chassis fabric summary (MX2008)

```
user@host > show chassis fabric summary
```

Plane	State	Uptime
0	Offline	
1	Online	16 hours, 38 minutes, 34 seconds
2	Online	16 hours, 38 minutes, 29 seconds
3	Online	16 hours, 38 minutes, 24 seconds
4	Offline	
5	Online	16 hours, 38 minutes, 13 seconds
6	Online	16 hours, 38 minutes, 8 seconds
7	Offline	

### show chassis fabric summary (EX8200 Switch)

```
user@host> show chassis fabric summary
```

Plane	State	Uptime
0	Online	12 days, 50 minutes, 54 seconds
1	Online	12 days, 50 minutes, 53 seconds
2	Online	12 days, 50 minutes, 53 seconds
3	Online	12 days, 50 minutes, 52 seconds
4	Spare	12 days, 50 minutes, 49 seconds
5	Spare	12 days, 50 minutes, 47 seconds
6	Spare	12 days, 50 minutes, 47 seconds
7	Spare	12 days, 50 minutes, 46 seconds
8	Online	12 days, 50 minutes, 52 seconds
9	Online	12 days, 50 minutes, 50 seconds
10	Online	12 days, 50 minutes, 50 seconds
11	Online	12 days, 50 minutes, 49 seconds



**show chassis fabric summary (EX9253 Switch)**

```
user@switch> show chassis fabric summary
```

Plane	State	Uptime
0	Online	21 days, 8 minutes, 41 seconds
1	Online	21 days, 8 minutes, 41 seconds
2	Online	21 days, 8 minutes, 41 seconds
3	Online	21 days, 8 minutes, 41 seconds
4	Online	21 days, 8 minutes, 41 seconds
5	Online	21 days, 8 minutes, 41 seconds
6	Online	21 days, 8 minutes, 41 seconds
7	Online	21 days, 8 minutes, 41 seconds
8	Online	21 days, 8 minutes, 41 seconds
9	Online	21 days, 8 minutes, 41 seconds
10	Online	21 days, 8 minutes, 41 seconds
11	Online	21 days, 8 minutes, 41 seconds
12	Online	21 days, 8 minutes, 41 seconds
13	Online	21 days, 8 minutes, 41 seconds
14	Online	21 days, 8 minutes, 41 seconds
15	Online	21 days, 8 minutes, 41 seconds
16	Online	21 days, 8 minutes, 41 seconds
17	Online	21 days, 8 minutes, 41 seconds
18	Online	21 days, 8 minutes, 41 seconds
19	Online	21 days, 8 minutes, 41 seconds
20	Online	21 days, 8 minutes, 41 seconds
21	Online	21 days, 8 minutes, 41 seconds

**show chassis fabric summary (PTX Series Packet Transport Router)**

```
user@host> show chassis fabric summary
```

FRU	State	Errors
SIB0	Online	None
SIB1	Online	Link Errors
SIB2	Online	None
SIB3	Online	Cell drops
SIB4	Offline	
SIB5	Online	None
SIB6	Online	Link, Cell drops
SIB7	Online	None
SIB8	Online	Link, Cell drops
FPC0	Online	None
FPC1	Online	Link Errors
FPC2	Online	None
FPC3	Offline	
FPC4	Online	None
FPC5	Online	None
FPC6	Empty	
FPC7	Empty	

**show chassis fabric summary (PTX10008 Router)**

```
user@host> show chassis fabric summary
```

FRU	State	Errors
SIB0	Online	None



SIB1	Online	None
SIB2	Empty	
SIB3	Empty	
SIB4	Empty	
SIB5	Empty	
FPC0	Online	None
FPC1	Empty	
FPC2	Empty	
FPC3	Empty	
FPC4	Empty	
FPC5	Online	None
FPC6	Online	None
FPC7	Empty	

### show chassis fabric summary (QFX 10008 Switch)

```
user@host> show chassis fabric summary
```

FRU	State	Errors
FPC0	Online	None
FPC1	Online	Link Errors
FPC2	Online	None
FPC3	Offline	
FPC4	Online	None
FPC5	Online	None
FPC6	Empty	
FPC7	Empty	
SIB0	Online	None
SIB1	Online	Link Errors
SIB2	Online	None
SIB3	Online	Cell drops
SIB4	Offline	
SIB5	Online	None

## Sample Output

### show chassis fabric summary extended (MX960 Router)

```
user@host> show chassis fabric summary extended
```

Plane	State	Link Error	Link TF	Destination errors Local / Remote	Uptime
0	Online	NO	NO	NO/ NO	7 days, 5 hours, 25 minutes, 20 seconds
1	Online	NO	NO	NO/ NO	7 days, 5 hours, 25 minutes, 11 seconds
2	Online	NO	NO	NO/ NO	7 days, 5 hours, 25 minutes, 5 seconds
3	Online	NO	NO	NO/ NO	7 days, 5 hours, 24 minutes, 59 seconds
4	Spare	NO	NO	NO/ NO	7 days, 5 hours, 24 minutes, 52 seconds
5	Spare	NO	NO	NO/ NO	7 days, 5 hours, 24 minutes, 45 seconds



## show chassis fabric summary (MX10003 Router)

user@host&gt; show chassis fabric summary

Plane	State	Uptime
0	Online	1 day, 10 hours, 12 minutes, 52 seconds
1	Online	1 day, 10 hours, 12 minutes, 52 seconds
2	Online	1 day, 10 hours, 12 minutes, 52 seconds
3	Online	1 day, 10 hours, 12 minutes, 52 seconds
4	Online	1 day, 10 hours, 12 minutes, 52 seconds
5	Online	1 day, 10 hours, 12 minutes, 52 seconds
6	Online	1 day, 10 hours, 12 minutes, 52 seconds
7	Online	1 day, 10 hours, 12 minutes, 52 seconds
8	Online	1 day, 10 hours, 12 minutes, 52 seconds
9	Online	1 day, 10 hours, 12 minutes, 52 seconds
10	Online	1 day, 10 hours, 12 minutes, 52 seconds
11	Online	1 day, 10 hours, 12 minutes, 52 seconds
12	Online	1 day, 10 hours, 12 minutes, 52 seconds
13	Online	1 day, 10 hours, 12 minutes, 52 seconds
14	Online	1 day, 10 hours, 12 minutes, 52 seconds
15	Online	1 day, 10 hours, 12 minutes, 52 seconds
16	Online	1 day, 10 hours, 12 minutes, 52 seconds
17	Online	1 day, 10 hours, 12 minutes, 52 seconds
18	Online	1 day, 10 hours, 12 minutes, 52 seconds
19	Online	1 day, 10 hours, 12 minutes, 52 seconds
20	Online	1 day, 10 hours, 12 minutes, 52 seconds
21	Online	1 day, 10 hours, 12 minutes, 52 seconds

## show chassis fabric summary extended (MX10003 Router)

user@host&gt; show chassis fabric summary extended

Plane	State	Link Error	Link TF	Destination errors Local / Remote	Uptime
0	Online	NO	NO	NO/ NO	1 day, 10 hours, 14 minutes, 26 seconds
1	Online	NO	NO	NO/ NO	1 day, 10 hours, 14 minutes, 26 seconds
2	Online	NO	NO	NO/ NO	1 day, 10 hours, 14 minutes, 26 seconds
3	Online	NO	NO	NO/ NO	1 day, 10 hours, 14 minutes, 26 seconds
4	Online	NO	NO	NO/ NO	1 day, 10 hours, 14 minutes, 26 seconds
5	Online	NO	NO	NO/ NO	1 day, 10 hours, 14 minutes, 26 seconds
6	Online	NO	NO	NO/ NO	1 day, 10 hours, 14 minutes, 26 seconds
7	Online	NO	NO	NO/ NO	1 day, 10 hours, 14 minutes, 26 seconds
8	Online	NO	NO	NO/ NO	1 day, 10 hours, 14 minutes, 26 seconds
9	Online	NO	NO	NO/ NO	1 day, 10 hours, 14 minutes, 26 seconds
10	Online	NO	NO	NO/ NO	1 day, 10 hours, 14 minutes, 26 seconds
11	Online	NO	NO	NO/ NO	1 day, 10 hours, 14 minutes, 26 seconds



12	Online 26 seconds	NO	NO	NO/	NO	1 day, 10 hours, 14 minutes,
13	Online 26 seconds	NO	NO	NO/	NO	1 day, 10 hours, 14 minutes,
14	Online 26 seconds	NO	NO	NO/	NO	1 day, 10 hours, 14 minutes,
15	Online 26 seconds	NO	NO	NO/	NO	1 day, 10 hours, 14 minutes,
16	Online 26 seconds	NO	NO	NO/	NO	1 day, 10 hours, 14 minutes,
17	Online 26 seconds	NO	NO	NO/	NO	1 day, 10 hours, 14 minutes,
18	Online 26 seconds	NO	NO	NO/	NO	1 day, 10 hours, 14 minutes,
19	Online 26 seconds	NO	NO	NO/	NO	1 day, 10 hours, 14 minutes,
20	Online 26 seconds	NO	NO	NO/	NO	1 day, 10 hours, 14 minutes,
21	Online 26 seconds	NO	NO	NO/	NO	1 day, 10 hours, 14 minutes,



## show chassis hardware

<b>List of Syntax</b>	<a href="#">Syntax on page 651</a> <a href="#">Syntax (EX Series, MX104, MX204, MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms) on page 651</a> <a href="#">Syntax (TX Matrix Router) on page 651</a> <a href="#">Syntax (TX Matrix Plus Router) on page 651</a> <a href="#">Syntax (MX Series Routers) on page 651</a> <a href="#">Syntax (QFX Series) on page 651</a>
<b>Syntax</b>	<pre>show chassis hardware &lt;detail   extensive&gt; &lt;clei-models&gt; &lt;models&gt;</pre>
<b>Syntax (EX Series, MX104, MX204, MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms)</b>	<pre>show chassis hardware &lt;clei-models&gt; &lt;detail   extensive&gt; &lt;models&gt; &lt;satellite [slot-id slot-id   device-alias alias-name]&gt;</pre>
<b>Syntax (TX Matrix Router)</b>	<pre>show chassis hardware &lt;clei-models&gt; &lt;detail   extensive&gt; &lt;models&gt; &lt;lcc number   scc&gt;</pre>
<b>Syntax (TX Matrix Plus Router)</b>	<pre>show chassis hardware &lt;clei-models&gt; &lt;detail   extensive&gt; &lt;models&gt; &lt;lcc number   sfc number&gt;</pre>
<b>Syntax (MX Series Routers)</b>	<pre>show chassis hardware &lt;detail   extensive&gt; &lt;clei-models&gt; &lt;models&gt; &lt;all-members&gt; &lt;local&gt; &lt;member member-id&gt;</pre>
<b>Syntax (QFX Series)</b>	<pre>show chassis hardware &lt;detail   extensive&gt; &lt;clei-models&gt;</pre>



```
<interconnect-device name>
<node-device name>
<models>
```

**Release Information** Command introduced before Junos OS Release 7.4.  
**models** option introduced in Junos OS Release 8.2.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
**sfc** option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.  
 Command introduced in Junos OS Release 11.1 for QFX Series.  
 Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.  
 Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.  
 Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.  
 Information for **disk** and **usb** introduced in Junos OS Release 15.1X53-D60 for QFX10002, QFX10008, and QFX10016 switches.  
 Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.  
 Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.  
 Command introduced in Junos OS Release 17.2 for PTX10008 Routers.  
 Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.  
 Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.  
 Command introduced in Junos OS Release 17.4 for MX204 Routers.  
 Command introduced in Junos OS Release 18.1R1 for EX9251 Switches.  
 Command introduced in Junos OS Release 18.2 for EX9253 Switches.  
 Command introduced in Junos OS Release 18.2R1 for MX10008 Routers



**NOTE:** Routers and routing platforms use the basic syntax, unless otherwise listed. For example, the EX Series has an additional satellite parameter available.

**Description** Display a list of all Flexible PIC Concentrators (FPCs) and PICs installed in the router or switch chassis, including the hardware version level and serial number.

In the EX Series switch command output, FPC refers to the following:

- On EX2200 switches, EX3200 switches, EX4200 standalone switches, and EX4500 switches—Refers to the switch; FPC *number* is always 0.
- On EX4200 switches in a Virtual Chassis configuration—Refers to the member of a Virtual Chassis; FPC *number* equals the member ID, from 0 through 9.
- On EX8208 and EX8216 switches—Refers to a line card; FPC *number* equals the slot number for the line card.

On QFX3500, QFX5100, and OCX Series standalone switches, and PTX1000 routers both the FPC and FPC *number* are always 0.



On T4000 Type 5 FPCs, there are no **top temperature sensor** or **bottom temperature sensor** parameters. Instead, **fan intake temperature sensor** and **fan exhaust temperature sensors** parameters are displayed.

Starting from Junos OS Release 11.4, the output of the **show chassis hardware models** operational mode command displays the enhanced midplanes FRU model numbers (CHAS-BP3-MX240-S, CHAS-BP3-MX480-S or CHAS-BP3-MX960-S) based on the router. Prior to release 11.4, the FRU model numbers are left blank when the router has enhanced midplanes. Note that the enhanced midplanes are introduced through the Junos OS Release 13.3, but can be supported on all Junos OS releases.

Starting with Junos OS Release 14.1, the output of the **show chassis hardware detail | extensive | clei-models | models** operational mode command displays the new DC power supply module (PSM) and power distribution unit (PDU) that are added to provide power to the high-density FPC (FPC2-PTX-P1A) and other components in a PTX5000 Packet Transport Router.



**NOTE:** The output samples provided here are intended only as representative examples of the various types of **show chassis hardware** outputs. They are not exhaustive samples of every possible option or platform variant.

- Options** **none**—Display information about hardware. For a TX Matrix router, display information about the TX Matrix router and its attached T640 routers. For a TX Matrix Plus router, display information about the TX Matrix Plus router and its attached routers.
- clei-models**—(Optional) Display Common Language Equipment Identifier (CLEI) barcode and model number for orderable field-replaceable units (FRUs).
- detail**—(Optional) Include RAM and disk information in output.
- extensive**—(Optional) Display ID EEPROM information.
- all-members**—(MX Series routers only) (Optional) Display hardware-specific information for all the members of the Virtual Chassis configuration.
- interconnect-device *name***—(QFabric systems only) (Optional) Display hardware-specific information for the Interconnect device.
- lcc *number***—(TX Matrix routers and TX Matrix Plus router only) (Optional) On a TX Matrix router, display hardware information for a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display hardware information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.



Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display hardware-specific information for the local Virtual Chassis members.

**member *member-id***—(MX Series routers and EX Series switches) (Optional) Display hardware-specific information for the specified member of the Virtual Chassis configuration. Replace *member-id* variable with a value 0 or 1.

**models**—(Optional) Display model numbers and part numbers for orderable FRUs and, for components that use ID EEPROM format v2, the CLEI code.

**node-device *name***—(QFabric systems only) (Optional) Display hardware-specific information for the Node device.

**satellite [*slot-id slot-id* | *device-alias alias-name*]**—(Junos Fusion only) (Optional) Display hardware information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scc**—(TX Matrix router only) (Optional) Display hardware information for the TX Matrix router (switch-card chassis).

**sfc *number***—(TX Matrix Plus router only) (Optional) Display hardware information for the TX Matrix Plus router (switch-fabric chassis). Replace *number* variable with 0.

**Additional Information** The **show chassis hardware detail** command now displays DIMM information for the following Routing Engines, as shown in [Table 25 on page 654](#).

**Table 25: Routing Engines Displaying DIMM Information**

Routing Engines	Routers
RE-S-1800x2 and RE-S-1800x4	MX240, MX480, and MX960 routers
RE-A-1800x2	M120 and M320 routers

In Junos OS Release 11.4 and later, the output for the **show chassis hardware models** operational mode command for MX Series routers display the enhanced midplanes FRU model numbers—CHAS-BP3-MX240-S, CHAS-BP3-MX480-S, or CHAS-BP3-MX960-S—based on the router. In releases before Junos OS Release 11.4,



the FRU model numbers are left blank when the router has enhanced midplanes. Note that the enhanced midplanes are introduced through Junos OS Release 13.3, but can be supported on all Junos OS releases.

Starting with Junos OS Release 17.3R1, the output of the **show chassis hardware** command displays the mode in which vMX is running (performance mode or lite mode) in the part number field for the FPC. **RIOT-PERF** indicates performance mode and **RIOT-LITE** indicates lite mode.

**Required Privilege Level**

view

**Related Documentation**

- *show chassis power*

**List of Sample Output**

[show chassis hardware \(MX10008 Router\) on page 659](#)  
[show chassis hardware clei-models \(PTX10016 Routers\) on page 660](#)  
[show chassis hardware detail \(EX9251 Switch\) on page 660](#)  
[show chassis hardware extensive \(T640 Router\) on page 661](#)  
[show chassis hardware interconnect-device \(QFabric Systems\) on page 662](#)  
[show chassis hardware lcc \(TX Matrix Router\) on page 662](#)  
[show chassis hardware models \(MX2010 Router\) on page 663](#)  
[show chassis hardware node-device \(QFabric Systems\) on page 663](#)  
[show chassis hardware scc \(TX Matrix Router\) on page 664](#)  
[show chassis hardware sfc \(TX Matrix Plus Router\) on page 664](#)

**Output Fields**

[Table 26 on page 656](#) lists the output fields for the **show chassis hardware** command. Output fields are listed in the approximate order in which they appear.



Table 26: show chassis hardware Output Fields

Field Name	Field Description	Level of Output
<b>Item</b>	<p>Chassis component:</p> <ul style="list-style-type: none"> <li>(EX Series switches)—Information about the chassis, Routing Engine (SRE and Routing Engine modules in EX8200 switches), power supplies, fan trays, and LCD panel. Also displays information about Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs). Information about the backplane, midplane, and SIBs (SF modules) is displayed for EX8200 switches.</li> <li>(MX Series routers and EX Series switches)—Information about the backplane, Routing Engine, Power Entry Modules (PEMs), and fan trays. Also displays information about Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs), Modular Port Concentrators (MPCs) and associated Modular Interface Cards (MICs), or Dense Port Concentrators (DPCs). MX80 routers have a single Routing Engine and a built-in Packet Forwarding Engine that attaches directly to MICs. The Packet Forwarding Engine has two “pseudo” FPCs (FPC 0 and FPC1). MX80 routers also have a Forwarding Engine Board (FEB). MX104 routers have a built-in Packet forwarding Engine and a Forwarding Engine Board (FEB). The Packet Forwarding Engine of the MX104 router has three “pseudo” FPCs (FPC0, FPC1, and FPC2).</li> <li>(M Series routers, except for the M320 router)—Information about the backplane; power supplies; fan trays; Routing Engine; maxicab (the connection between the Routing Engine and the backplane, for the M40 router only); SCB, SSB, SFM, or FEB; MCS and PCG (for the M160 router only); each FPC and PIC; and each fan, blower, and impeller.</li> <li>(M120, M320, and T Series routers)—Information about the backplane, power supplies, fan trays, midplane, FPM (craft interface), CIP, PEM, SCG, CB, FPC, PIC, SFP, SPMB, and SIB.</li> <li>(QFX Series)—Information about the chassis, Pseudo CB, Routing Engine, power supplies, fan trays, Interconnect devices, and Node devices. Also displays information about Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs).</li> <li>(PTX Series)—Information about the chassis, midplane, craft interface (FPM), power distribution units (PDUs) and Power Supply Modules (PSMs), Centralized Clock Generators (CCGs), Routing Engines, Control Boards (CBs) and Switch Processor Mezzanine Boards (SPMBs), Flexible PIC Concentrators (FPCs), PICs, Switch Interface Boards (SIBs), and fan trays (vertical and horizontal).</li> <li>(MX2010, MX2020, and MX2008 routers)—Information about the chassis, midplane, craft interface (FPM), power midplane (PMP), Power Supply Modules (PSMs), Power Distribution Modules (PDMs), Routing Engines, Control Boards (CBs) and Switch Processor Mezzanine Boards (SPMBs), Switch Fabric Boards (SFBs), Flexible PIC Concentrators (FPCs), PICs, adapter cards (ADCs) and fan trays.</li> <li>(vMX routers)—Information about the chassis, midplane, Routing Engines, and Control Boards (CBs). Also displays information about Flexible PIC Concentrators (FPCs) and associated Modular Interface Cards (MICs) and Physical Interface Cards (PICs).</li> </ul>	All levels
<b>Version</b>	Revision level of the chassis component.	All levels
<b>Part number</b>	Part number of the chassis component.	All levels



Table 26: show chassis hardware Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Serial number</b>	Serial number of the chassis component. The serial number of the backplane is also the serial number of the router chassis. Use this serial number when you need to contact Juniper Networks Customer Support about the router or switch chassis.	All levels
<b>Assb ID or Assembly ID</b>	( <b>extensive</b> keyword only) Identification number that describes the FRU hardware.	<b>extensive</b>
<b>Assembly Version</b>	( <b>extensive</b> keyword only) Version number of the FRU hardware.	<b>extensive</b>
<b>Assembly Flags</b>	( <b>extensive</b> keyword only) Flags.	<b>extensive</b>
<b>FRU model number</b>	( <b>clei-models</b> , <b>extensive</b> , and <b>models</b> keyword only) Model number of the FRU hardware component.	none specified
<b>CLEI code</b>	( <b>clei-models</b> and <b>extensive</b> keyword only) Common Language Equipment Identifier code. This value is displayed only for hardware components that use ID EEPROM format v2. This value is not displayed for components that use ID EEPROM format v1.	none specified
<b>EEPROM Version</b>	ID EEPROM version used by the hardware component: <b>0x00</b> (version 0), <b>0x01</b> (version 1), or <b>0x02</b> (version 2).	<b>extensive</b>
<b>Description</b>	<p>Brief description of the hardware item:</p> <ul style="list-style-type: none"> <li>• Type of power supply.</li> <li>• Type of PIC. If the PIC type is not supported on the current software release, the output states <b>Hardware Not Supported</b>.</li> <li>• Type of FPC: <b>FPC Type 1</b>, <b>FPC Type 2</b>, <b>FPC Type 3</b>, <b>FPC Type 4</b>, or <b>FPC TypeOC192</b>.</li> </ul> <p>On EX Series switches, a brief description of the FPC.</p> <p>The following list shows the PIM abbreviation in the output and the corresponding PIM name.</p> <ul style="list-style-type: none"> <li>• <b>2x FE</b>—Either two built-in Fast Ethernet interfaces (fixed PIM) or dual-port Fast Ethernet PIM</li> <li>• <b>4x FE</b>—4-port Fast Ethernet ePIM</li> <li>• <b>1x GE Copper</b>—Copper Gigabit Ethernet ePIM (one 10-Mbps, 100-Mbps, or 1000-Mbps port)</li> <li>• <b>1x GE SFP</b>—SFP Gigabit Ethernet ePIM (one fiber port)</li> <li>• <b>2x Serial</b>—Dual-port serial PIM</li> <li>• <b>2x T1</b>—Dual-port T1 PIM</li> <li>• <b>2x E1</b>—Dual-port E1 PIM</li> <li>• <b>2x CT1E1</b>—Dual-port channelized T1/E1 PIM</li> <li>• <b>1x T3</b>—T3 PIM (one port)</li> <li>• <b>1x E3</b>—E3 PIM (one port)</li> <li>• <b>4x BRI S/T</b>—4-port ISDN BRI S/T PIM</li> <li>• <b>4x BRI U</b>—4-port ISDN BRI U PIM</li> <li>• <b>1x ADSL Annex A</b>—ADSL 2/2+ Annex A PIM (one port, for POTS)</li> </ul>	All levels



Table 26: show chassis hardware Output Fields (continued)

Field Name	Field Description	Level of Output
	<ul style="list-style-type: none"> <li>• <b>1x ADSL Annex B</b>—ADSL 2/2+ Annex B PIM (one port, for ISDN)</li> <li>• <b>2x SHDSL (ATM)</b>—G SHDSL PIM (2-port two-wire module or 1-port four-wire module)</li> <li>• <b>1x TGM550</b>—TGM550 Telephony Gateway Module (Avaya VoIP gateway module with one console port, two analog <b>LINE</b> ports, and two analog <b>TRUNK</b> ports)</li> <li>• <b>1x DS1 TIM510</b>—TIM510 E1/T1 Telephony Interface Module (Avaya VoIP media module with one E1 or T1 trunk termination port and ISDN PRI backup)</li> <li>• <b>4x FXS, 4x FXO, TIM514</b>—TIM514 Analog Telephony Interface Module (Avaya VoIP media module with four analog <b>LINE</b> ports and four analog <b>TRUNK</b> ports)</li> <li>• <b>4x BRI TIM521</b>—TIM521 BRI Telephony Interface Module (Avaya VoIP media module with four ISDN BRI ports)</li> <li>• <b>Crypto Accelerator Module</b>—For enhanced performance of cryptographic algorithms used in IP Security (IPsec) services</li> <li>• <b>MPC M16x10GE</b>—16-port 10-Gigabit Module Port Concentrator that supports SFP+ optical transceivers. (Not on EX Series switches.)</li> <li>• For hosts, the Routing Engine type.</li> <li>• For small form-factor pluggable transceiver (SFP) modules, the type of fiber: <b>LX, SX, LH, or T</b>.</li> <li>• LCD description for EX Series switches (except EX2200 switches).</li> <li>• <b>MPC2</b>—1-port MPC2 that supports two separate slots for MICs.</li> <li>• <b>MPC3E</b>—1-port MPC3E that supports two separate slots for MICs (MIC-3D-1X100GE-CFP and MIC-3D-20GE-SFP) on MX960, MX480, and MX240 routers. The MPC3E maps one MIC to one PIC (1 MIC, 1 PIC), which differs from the mapping of legacy MPCs.</li> <li>• 100GBASE-LR4, pluggable CFP optics</li> <li>• Supports the Enhanced MX Switch Control Board with fabric redundancy and existing SCBs without fabric redundancy.</li> <li>• Interoperates with existing MX Series line cards, including Flexible Port Concentrators (FPC), Dense Port Concentrators (DPCs), and Modular Port Concentrators (MPCs).</li> <li>• <b>MPC4E</b>—Fixed configuration MPC4E that is available in two flavors: MPC4E-3D-32XGE-SFPP and MPC4E-3D-2CGE-8XGE on MX2020, MX960, MX480, and MX240 routers.</li> <li>• LCD description for MX Series routers</li> </ul>	



## Sample Output

The following output samples are intended to serve as representative examples only and are not exhaustive representations of every single possible command or hardware variation.

### show chassis hardware (MX10008 Router)

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			DE487	JNP10008 [MX10008]
Midplane	REV 27	750-054097	ACPD4307	Midplane 8
Routing Engine 0		BUILTIN	BUILTIN	RE X10 LT
Routing Engine 1		BUILTIN	BUILTIN	RE X10
CB 0	REV 02	750-079563	CAFF4580	Control Board
CB 1	REV 04	750-079563	CAGL8034	Control Board
..				
...				
..				
4				
FPC 3	REV 04	750-084779	CAKR7019	JNP10K-LC2101
CPU	REV 05	750-073391	CAKJ2854	LC 2101 PMB
PIC 0		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-058734	1ACQ104300K	QSFP-100GBASE-SR4
PIC 1		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-061405	1ACQ12110AN	QSFP-100GBASE-SR4
PIC 2		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-046565	QG1105B2	QSFP+-40G-SR4
PIC 3		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-045627	QH08036X	40GBASE eSR4
PIC 4		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 0	REV 01	740-067443	XWRORY7	QSFP+-40G-SR4
Xcvr 1	REV 01	740-067443	XWRORYH	QSFP+-40G-SR4
Xcvr 2	REV 01	740-067443	XWRORYP	QSFP+-40G-SR4
Xcvr 3	REV 01	740-067443	XWS028S	QSFP+-40G-SR4
PIC 5		BUILTIN	BUILTIN	4xQSFP28 SYNCE
Xcvr 3	REV 01	740-058734	1ACQ113406C	QSFP-100GBASE-SR4
FPD Board	REV 07	711-054687	ACPC7142	Front Panel Display
PEM 0	REV 02	740-049388	1EDL62102N9	Power Supply AC
PEM 1	REV 02	740-049388	1EDL60300KX	Power Supply AC
PEM 2	REV 02	740-049388	1EDL60300DL	Power Supply AC
PEM 3	REV 02	740-049388	1EDL61701BT	Power Supply AC
PEM 4	REV 02	740-049388	1EDL62102P7	Power Supply AC
PEM 5	REV 02	740-049388	1EDL62102PP	Power Supply AC
FTC 0	REV 14	750-050108	ACPE4038	Fan Controller 8
FTC 1	REV 14	750-050108	ACPE4032	Fan Controller 8
Fan Tray 0	REV 09	760-054372	ACPD6799	Fan Tray 8
Fan Tray 1	REV 09	760-054372	ACNZ3584	Fan Tray 8
SFB 0	REV 24	750-050058	ACPD4587	Switch Fabric (SIB) 8
SFB 1	REV 24	750-050058	ACNZ0635	Switch Fabric (SIB) 8
SFB 2	REV 24	750-050058	ACPD4908	Switch Fabric (SIB) 8
SFB 3	REV 24	750-050058	ACNZ0617	Switch Fabric (SIB) 8
SFB 4	REV 24	750-050058	ACNZ0527	Switch Fabric (SIB) 8
SFB 5	REV 23	750-050058	ACNX6980	Switch Fabric (SIB) 8



## show chassis hardware clei-models (PTX10016 Routers)

```
user@host> show chassis hardware clei-models
```

```
Hardware inventory:
```

Item	Version	Part number	CLEI code	FRU model number
Midplane	REV 24	750-077138	CMMUN00ARA	JNP10016
CB 0	REV 04	711-065897	PROTOXCLEI	PROTO-ASSEMBLY
CB 1	REV 05	711-065897	PROTOXCLEI	PROTO-ASSEMBLY
FPC 2				
PIC 0		BUILTIN		
FPC 4	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 5	REV 13	750-068822	CMUIAM9BAC	QFX10000-36Q
PIC 0		BUILTIN		
FPC 6	REV 41	750-071976	CMUIANABAB	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 7	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 8	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 9	REV 41	750-071976	CMUIANABAB	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 10	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 11	REV 35	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 13	REV 41	750-071976	CMUIANABAB	JNP10K-LC1101
PIC 0		BUILTIN		
FPC 15	REV 37	750-071976	CMUIANABAA	JNP10K-LC1101
PIC 0		BUILTIN		
Power Supply 0	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 1	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 2	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 3	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 4	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 5	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 6	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 7	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 8	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Power Supply 9	REV 01	740-073147	CMUPADPBAA	JNP10K-PWR-DC
Fan Tray 0				QFX5100-FAN-AFO
Fan Tray 1				QFX5100-FAN-AFO
SIB 0	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 1	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 2	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 3	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 4	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
SIB 5	REV 15	750-077140	CMUCAH6CAA	JNP10016-SF
FPD Board	REV 07	711-054687		

## show chassis hardware detail (EX9251 Switch)

```
user@switch> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			BLANK	EX9251
Routing Engine 0		BUILTIN	BUILTIN	RE-S-2X00x6
CB 0	REV 05	750-069579	CAGT1382	EX9251



FPC 0			BUILTIN	BUILTIN	MPC
PIC 0			BUILTIN	BUILTIN	4XSFP28 PIC
Xcvr 0	REV 01	740-044512	APF14500007NHC		QSFP+-40G-CU50CM
Xcvr 2	REV 01	740-046565	QH21035H		QSFP+-40G-SR4
PIC 1			BUILTIN	BUILTIN	8XSFP PIC
Xcvr 0	REV 01	740-031980	AA15393URH7		SFP+-10G-SR
Xcvr 1	REV 01	740-031980	AA162832LVG		SFP+-10G-SR
Xcvr 2	REV 01	740-031980	MXA0NKJ		SFP+-10G-SR
Xcvr 3	REV 01	740-031980	MXA0K75		SFP+-10G-SR
Xcvr 4	REV 01	740-021308	MXA138L		SFP+-10G-SR
Xcvr 5	REV 01	740-021308	13T511102684		SFP+-10G-SR
Xcvr 6	REV 01	740-021308	MXA138E		SFP+-10G-SR
Xcvr 7	REV 01	740-021308	MXA152N		SFP+-10G-SR
PEM 0	REV 02	740-070749	1F186390060		AC AFO 650W PSU
PEM 1	REV 02	740-070749	1F186390045		AC AFO 650W PSU
Fan Tray 0					Fan Tray, Front to Back
Airflow - AFO					
Fan Tray 1					Fan Tray, Front to Back
Airflow - AFO					

### show chassis hardware extensive (T640 Router)

```
user@host> show chassis hardware extensive
```

```
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Jedec Code:   0x7fb0          EEPROM Version: 0x01
P/N:          .....          S/N:          .....
Assembly ID:  0x0507          Assembly Version: 00.00
Date:         00-00-0000      Assembly Flags:  0x00
Version:      .....
ID: Gibson LCC Chassis
Board Information Record:
Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
I2C Hex Data:
Address 0x00: 7f b0 01 ff 05 07 00 00 00 00 00 00 00 00 00 00
Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x20: ff ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane      REV 04      710-002726  AX5633
Jedec Code:   0x7fb0          EEPROM Version: 0x01
P/N:          710-002726.      S/N:          AX5633.
Assembly ID:  0x0127          Assembly Version: 01.04
Date:         06-27-2001      Assembly Flags:  0x00
Version:      REV 04.....
ID: Gibson Backplane
Board Information Record:
Address 0x00: ad 01 08 00 00 90 69 0e f8 00 ff ff ff ff ff ff
I2C Hex Data:
Address 0x00: 7f b0 01 ff 01 27 01 04 52 45 56 20 30 34 00 00
Address 0x10: 00 00 00 00 00 37 31 30 2d 30 30 32 37 32 36 00 00
Address 0x20: 53 2f 4e 20 41 58 35 36 33 33 00 00 00 1b 06 07
Address 0x30: d1 ff ff ff ad 01 08 00 00 90 69 0e f8 00 ff ff
Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM GBUS      REV 02      710-002901  HE3245
...
FPM Display   REV 02      710-002897  HA4873
...
```



```

CIP          REV 05   710-002895   HA4729
...
PEM 1        RevX02   740-002595   MD21815      Power Entry Module
...
SCG 0        REV 04   710-003423   HF6023
...
SCG 1        REV 04   710-003423   HF6061
...
Routing Engine 0 REV 01   740-005022   210865700292 RE-3.0
...
CB 0         REV 06   710-002728   HE3614
...
FPC 1        REV 01   710-002385   HE3009      FPC Type 1
...
              REV 06   710-001726   HC0010

```

### show chassis hardware interconnect-device (QFabric Systems)

```
user@switch> show chassis hardware interconnect-device interconnect1
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis	REV 07			QFX_olive
Midplane	REV 07	750-021261	BH0208188289	QFX Midplane
CB 0	REV 07	750-021261	BH0208188289	QFXIC08-CB4S

### show chassis hardware lcc (TX Matrix Router)

```
user@host> show chassis hardware lcc 0
```

lcc0-re0:

-----  
Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			65751	T640
Midplane	REV 03	710-005608	RA1408	T640 Backplane
FPM GBUS	REV 09	710-002901	RA2784	T640 FPM Board
FPM Display	REV 05	710-002897	RA2825	FPM Display
CIP	REV 06	710-002895	HT0684	T Series CIP
PEM 0	Rev 11	740-002595	PM18483	Power Entry Module
PEM 1	Rev 11	740-002595	qb13984	Power Entry Module
SCG 0	REV 11	710-003423	HT0022	T640 Sonet Clock Gen.
Routing Engine 0	REV 13	740-005022	210865700363	RE-3.0 (RE-600)
CB 0	REV 03	710-007655	HW1195	Control Board (CB-T)
FPC 1	REV 05	710-007527	HM3245	FPC Type 2
CPU	REV 14	710-001726	HM1084	FPC CPU
PIC 0	REV 02	750-007218	AZ1112	2x OC-12 ATM2 IQ, SMIR
PIC 1	REV 02	750-007745	HG3462	4x OC-3 SONET, SMIR
PIC 2	REV 14	750-001901	BA5390	4x OC-12 SONET, SMIR
PIC 3	REV 09	750-008155	HS3012	2x G/E IQ, 1000 BASE
SFP 0		NON-JNPR	P1186TY	SFP-S
SFP 1	REV 01	740-007326	P11WLTF	SFP-SX
MMB 1	REV 02	710-005555	HL7514	MMB-288mbit
PPB 0	REV 04	710-003758	HM4405	PPB Type 2
PPB 1	REV 04	710-003758	AV1960	PPB Type 2
FPC 2	REV 08	710-010154	HZ3578	E-FPC Type 3
CPU	REV 05	710-010169	HZ3219	FPC CPU-Enhanced
PIC 0	REV 02	750-009567	HX2882	1x 10GE(LAN), XENPAK
SFP 0	REV 01	740-009898	USC202U709	XENPAK-LR
PIC 1	REV 03	750-003336	HJ9954	4x OC-48 SONET, SMSR



PIC 2	REV 01	750-004535	HC0235	1x OC-192 SM SR1
PIC 3	REV 07	750-007141	HX1699	10x 1GE(LAN), 1000 BASE
SFP 0	REV 01	740-007326	2441042	SFP-SX
SFP 1	REV 01	740-007326	2441027	SFP-SX
MMB 0	REV 03	710-010171	HV2365	MMB-5M3-288mbit
MMB 1	REV 03	710-010171	HZ3888	MMB-5M3-288mbit
SPMB 0	REV 09	710-003229	HW5245	T Series Switch CPU
SIB 3	REV 07	710-005781	HR5927	SIB-L8-F16
B Board	REV 06	710-005782	HR5971	SIB-L8-F16 (B)
SIB 4	REV 07	710-005781	HR5903	SIB-L8-F16
B Board	REV 06	710-005782	HZ5275	SIB-L8-F16 (B)

### show chassis hardware models (MX2010 Router)

```
user@host > show chassis hardware models
```

Hardware inventory:

Item	Version	Part number	Serial number	FRU model number
FPM Board	REV 06	711-032349	ZX8744	711-032349
PSM 4	REV 0C	740-033727	VK00254	000000000000000000000000
PSM 5	REV 0B	740-033727	VG00015	000000000000000000000000
PSM 6	REV 0B	740-033727	VH00097	000000000000000000000000
PSM 7	REV 0C	740-033727	VJ00151	000000000000000000000000
PSM 8	REV 0C	740-033727	VJ00149	000000000000000000000000
PDM 0	REV 0B	740-038109	WA00008	
PDM 1	REV 0B	740-038109	WA00014	
Routing Engine 0	REV 02	740-041821	9009094134	RE-S-1800X4-16G-S
Routing Engine 1	REV 02	740-041821	9009094141	RE-S-1800X4-16G-S
CB 0	REV 08	750-040257	CAAB3491	750-040257
CB 1	REV 08	750-040257	CAAB3489	750-040257
SFB 0	REV 06	711-032385	ZV1828	711-032385
SFB 1	REV 07	711-032385	ZZ2568	711-032385
SFB 2	REV 07	711-032385	ZZ2563	711-032385
SFB 3	REV 07	711-032385	ZZ2564	711-032385
SFB 4	REV 07	711-032385	ZZ2580	711-032385
SFB 5	REV 07	711-032385	ZZ2579	711-0323856
SFB 6	REV 07	711-032385	CAAB4882	711-044170
SFB 7	REV 07	711-032385	CAAB4898	711-044170
FPC 0	REV 33	750-028467	CAAB1919	MPC-3D-16XGE-SFPP
FPC 1	REV 21	750-033205	ZG5027	MX-MPC3-3D
MIC 0	REV 03	750-033307	ZV6299	MIC3-3D-10XGE-SFPP
MIC 1	REV 03	750-033307	ZV6268	MIC3-3D-10XGE-SFPP
FPC 8	REV 22	750-031089	ZT9746	MX-MPC2-3D
MIC 0	REV 26	750-028392	ABBS1150	MIC-3D-20GE-SFP
MIC 1	REV 26	750-028387	ABBR9582	MIC-3D-4XGE-XFP
FPC 9	REV 11	750-036284	ZL3591	MPCE-3D-16XGE-SFPP
ADC 0	REV 05	750-043596	CAAC2073	750-043596
ADC 1	REV 01	750-043596	ZV4117	750-043596
ADC 8	REV 01	750-043596	ZV4107	750-043596
ADC 9	REV 02	750-043596	ZW1555	750-043596
Fan Tray 0	REV 2A	760-046960	ACAY0015	
Fan Tray 1	REV 2A	760-046960	ACAY0019	
Fan Tray 2	REV 2A	760-046960	ACAY0020	
Fan Tray 3	REV 2A	760-046960	ACAY0021	

### show chassis hardware node-device (QFabric Systems)

```
user@switch> show chassis hardware node-device node1
```



Routing Engine 0 node1	BUILTIN REV 05	BUILTIN 711-032234	ED3694	QFX Routing Engine QFX3500-48S4Q-AFI
CPU		BUILTIN	BUILTIN	FPC CPU
PIC 0		BUILTIN	BUILTIN	48x 10G-SFP+
Xcvr 8	REV 01	740-030658	AD0946A028B	SFP+-10G-USR

**show chassis hardware scc (TX Matrix Router)**

```
user@host> show chassis hardware scc
```

```
scc-re0:
```

```
-----
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis				TX Matrix
Midplane	REV 04	710-004396	RB0014	SCC Midplane
FPM GBUS	REV 04	710-004617	HW9141	SCC FPM Board
FPM Display	REV 04	710-004619	HS5950	SCC FPM
CIP 0	REV 01	710-010218	HV9151	SCC CIP
CIP 1	REV 01	710-010218	HV9152	SCC CIP
PEM 1	Rev 11	740-002595	QB13977	Power Entry Module
Routing Engine 0	REV 05	740-008883	P11123900153	RE-4.0 (RE-1600)
CB 0	REV 01	710-011709	HR5964	Control Board (CB-TX)
SPMB 0	REV 09	710-003229	HW5293	T Series Switch CPU
SIB 3				
SIB 4	REV 01	710-005839	HW1177	SIB-S8-F16
B Board	REV 01	710-005840	HW1202	SIB-S8-F16 (B)

**show chassis hardware sfc (TX Matrix Plus Router)**

```
user@host> show chassis hardware sfc 0
```

```
sfc0-re0:
```

```
-----
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN112F007AHB	TXP
Midplane	REV 05	710-022574	TS4027	SFC Midplane
FPM Display	REV 03	710-024027	DX0282	TXP FPM Display
CIP 0	REV 04	710-023792	DW4889	TXP CIP
CIP 1	REV 04	710-023792	DW4887	TXP CIP
PEM 0	Rev 07	740-027463	UM26368	Power Entry Module
Routing Engine 0	REV 01	740-026942	737A-1064	SFC RE
Routing Engine 1	REV 01	740-026942	737A-1082	SFC RE
CB 0	REV 09	710-022606	DW6099	SFC Control Board
CB 1	REV 09	710-022606	DW6096	SFC Control Board
SPMB 0		BUILTIN		SFC Switch CPU
SPMB 1		BUILTIN		SFC Switch CPU
SIB F13 0	REV 04	710-022600	DX0841	F13 SIB
B Board	REV 03	710-023431	DX0966	F13 SIB Mezz
SIB F13 1	REV 04	750-024564	DW5776	F13 SIB
B Board	REV 03	710-023431	DW9028	F13 SIB
SIB F13 3	REV 04	750-024564	DW5762	F13 SIB
B Board	REV 03	710-023431	DW9059	F13 SIB
SIB F13 4	REV 04	750-024564	DW5797	F13 SIB
B Board	REV 03	710-023431	DW9041	F13 SIB
SIB F13 6	REV 04	750-024564	DW5770	F13 SIB
B Board	REV 03	710-023431	DW9079	F13 SIB Mezz



SIB F13 7	REV 04	750-024564	DW5758	F13 SIB
B Board	REV 03	710-023431	DW9047	F13 SIB
SIB F13 8	REV 04	750-024564	DW5761	F13 SIB
B Board	REV 03	710-023431	DW9043	F13 SIB Mezz
SIB F13 9	REV 04	750-024564	DW5754	F13 SIB
B Board	REV 03	710-023431	DW9078	F13 SIB Mezz
SIB F13 11	REV 04	710-022600	DX0826	F13 SIB
B Board	REV 03	710-023431	DX0967	F13 SIB Mezz
SIB F13 12	REV 04	750-024564	DW5794	F13 SIB
B Board	REV 03	710-023431	DW9044	F13 SIB Mezz
SIB F2S 0/0	REV 05	710-022603	DW7897	F2S SIB
B Board	REV 05	710-023787	DW7657	NEO PMB
SIB F2S 0/2	REV 05	710-022603	DW7833	F2S SIB
B Board	REV 05	710-023787	DW7526	NEO PMB
SIB F2S 0/4	REV 05	710-022603	DW7875	F2S SIB
B Board	REV 05	710-023787	DW7588	NEO PMB
SIB F2S 0/6	REV 05	710-022603	DW7860	F2S SIB
B Board	REV 05	710-023787	DW7589	NEO PMB
SIB F2S 1/0	REV 04	710-022603	DW4820	F2S SIB
B Board	REV 05	710-023787	DW8510	NEO PMB
SIB F2S 1/2	REV 05	710-022603	DW7849	F2S SIB
B Board	REV 05	710-023787	DW7525	NEO PMB
SIB F2S 1/4	REV 05	710-022603	DW7927	F2S SIB
B Board	REV 05	710-023787	DW7556	F2S SIB Mezz
SIB F2S 1/6	REV 05	710-022603	DW7866	F2S SIB
B Board	REV 05	710-023787	DW7651	NEO PMB
SIB F2S 2/0	REV 05	710-022603	DW7880	F2S SIB
B Board	REV 05	710-023787	DW7523	NEO PMB
SIB F2S 2/2	REV 05	710-022603	DW7895	F2S SIB
B Board	REV 05	710-023787	DW7591	NEO PMB
SIB F2S 2/4	REV 05	710-022603	DW7907	F2S SIB
B Board	REV 05	710-023787	DW7590	NEO PMB
SIB F2S 2/6	REV 05	710-022603	DW7785	F2S SIB
B Board	REV 05	710-023787	DW7524	NEO PMB
SIB F2S 3/0	REV 05	710-022603	DW7782	F2S SIB
B Board	REV 05	710-023787	DW7634	NEO PMB
SIB F2S 3/2	REV 05	710-022603	DW7793	F2S SIB
B Board	REV 05	710-023787	DW7548	NEO PMB
SIB F2S 3/4	REV 05	710-022603	DW7779	F2S SIB
B Board	REV 05	710-023787	DW7587	NEO PMB
SIB F2S 3/6	REV 05	710-022603	DW7930	F2S SIB
B Board	REV 05	710-023787	DW7505	NEO PMB
SIB F2S 4/0	REV 05	710-022603	DW7867	F2S SIB
B Board	REV 05	710-023787	DW7656	NEO PMB
SIB F2S 4/2	REV 05	710-022603	DW7917	F2S SIB
B Board	REV 05	710-023787	DW7640	NEO PMB
SIB F2S 4/4	REV 05	710-022603	DW7929	F2S SIB
B Board	REV 05	710-023787	DW7643	NEO PMB
SIB F2S 4/6	REV 05	710-022603	DW7870	F2S SIB
B Board	REV 05	710-023787	DW7635	NEO PMB
Fan Tray 0	REV 06	760-024497	DV7831	Front Fan Tray
Fan Tray 1	REV 06	760-024497	DV9614	Front Fan Tray
Fan Tray 2	REV 06	760-024502	DV9618	Rear Fan Tray
Fan Tray 3	REV 06	760-024502	DV9616	Rear Fan Tray
Fan Tray 4	REV 06	760-024502	DV7807	Rear Fan Tray
Fan Tray 5	REV 06	760-024502	DV7828	Rear Fan Tray



## show chassis lcd

<b>List of Syntax</b>	<a href="#">show chassis lcd (EX Series) on page 666</a> <a href="#">show chassis lcd (QFX Series) on page 666</a> <a href="#">show chassis lcd (OCX Series) on page 666</a>
<b>show chassis lcd (EX Series)</b>	<pre>show chassis lcd &lt;fpc-slot <i>fpc-slot-number</i>&gt; &lt;menu &lt;(all-members   local   member <i>member-id</i>)&gt;&gt;</pre>
<b>show chassis lcd (QFX Series)</b>	<pre>show chassis lcd &lt;fpc-slot <i>fpc-slot-number</i>&gt; &lt;interconnect-device <i>device-id</i>&gt; &lt;node-device <i>device-id</i>&gt;</pre>
<b>show chassis lcd (OCX Series)</b>	<pre>show chassis lcd &lt;fpc-slot <i>fpc-slot-number</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>menu</b> option introduced in Junos OS Release 10.2 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 13.1 for QFabric systems.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<p>Display the information that appears on the LCD panel of EX3200, EX3300, EX4200, EX4500, EX6200, and EX8200 switches, XRE200 External Routing Engines, QFX Series standalone switches, OCX Series switches, and Interconnect devices and Node devices within a QFabric system. Display the status of the currently selected port parameter of the Status LED for each network port on the device.</p>
<b>Options</b>	<p><b>none</b>—Display the information that appears on the LCD panel (for any EX Series member switch in a Virtual Chassis or for XRE200 External Routing Engines, display the information for all Virtual Chassis members). Display the status of the currently selected port parameter of the Status LED for each network port.</p> <p><b>fpc-slot &lt;<i>fpc-slot-number</i>&gt;</b>—(Optional) Display the information as follows:</p> <ul style="list-style-type: none"> <li>(EX3200, EX3300, EX4200, and EX4500 switches, QFX Series, or OCX Series) Display the information that appears on the LCD panel for either an FPC slot with no <i>fpc-slot-number</i> value specified or for the FPC slot specified by <b>fpc-slot 0</b>. <b>fpc-slot</b> refers to the switch itself and <b>0</b> is the only valid value for <i>fpc-slot-number</i>. Output for these options is the same as for the <b>none</b> option.</li> </ul> <p>Also display the status of the currently selected port parameter of the Status LED for each network port.</p>



- (EX Series Virtual Chassis member switches or XRE200 External Routing Engines) If no **fpc-slot-number** value is specified, display the information that appears on the LCD panel for all members of the Virtual Chassis. Output for this option is the same as for the **none** option. If the **fpc-slot-number** value is specified (it equals the **member-id** value), display the information for the specified member.

Also display the status of the currently selected port parameter of the Status LED for each network port.

- (EX6200 or EX8200 switches)—Display the information that appears on the LCD panel for the line card in the line-card slot specified by the **fpc-slot-number** value.

Also display the status of the currently selected port parameter of the Status LED for each network port.

**interconnect-device device-id**—(QFabric systems only) (Optional) Display the front panel contents and LED status of all the ports on the Interconnect device.

**menu**—(Optional) Display the names of the menus and menu options that are currently enabled on the LCD panel.

**menu all-members**—(EX Series Virtual Chassis member switches or XRE200 External Routing Engines) (Optional) Display the names of the menus and menu options that are currently enabled on the LCD panel for all Virtual Chassis members.

**menu local**—(EX Series Virtual Chassis member switches or XRE200 External Routing Engines) (Optional) Display the names of the menus and menu options that are currently enabled on the LCD panel for the Virtual Chassis member from which you issued the command.

**menu member member-id**—(EX Series Virtual Chassis member switches or XRE200 External Routing Engines) (Optional) Display the names of the menus and menu options that are currently enabled on the LCD panel for the specified Virtual Chassis member.

**node-device device-id**—(QFabric systems only) (Optional) Display the front panel contents and LED status of all the ports on the Node device.

**Required Privilege Level**

view

**Related Documentation**

- *LCD Panel in EX3200 Switches*
- *LCD Panel in EX4200 Switches*
- *LCD Panel in EX4500 Switches*
- *LCD Panel in an EX8200 Switch*
- *LCD Panel in an XRE200 External Routing Engine*
- *Configuring the LCD Panel on EX Series Switches (CLI Procedure)*



- [set chassis display message on page 167](#)

**List of Sample Output**

- [show chassis lcd \(Two-Member EX4200 Virtual Chassis\) on page 669](#)
- [show chassis lcd fpc-slot 1 \(EX4200 Virtual Chassis\) on page 670](#)
- [show chassis lcd \(EX8200 Switch\) on page 671](#)
- [show chassis lcd fpc-slot 2 \(EX8200 Switch\) on page 672](#)
- [show chassis lcd menu \(EX4200 Switch\) on page 673](#)
- [show chassis lcd menu \(EX8200 Switch\) on page 673](#)
- [show chassis lcd \(QFX3500 Switches\) on page 673](#)
- [show chassis lcd \(XRE200 External Routing Engine in EX8200 Virtual Chassis\) on page 674](#)
- [show chassis lcd interconnect-device \(QFabric Systems\) on page 677](#)
- [show chassis lcd node-device \(QFabric Systems\) on page 679](#)

**Output Fields** Table 27 on page 668 lists the output fields for the **show chassis lcd** command. Output fields are listed in the approximate order in which they appear.

Table 27: *show chassis lcd* Output Fields

Field Name	Field Description
<b>membernumber</b> (XRE200 External Routing Engine)	Member ID of the device whose content is being displayed.
<b>Front panel contents for slot</b>	FPC slot number of the switch whose content is being displayed. The number is always 0, except for EX4200 switches in a Virtual Chassis, where it is the member ID value.
<b>Front panel contents</b> (EX6200, EX8200 switch, XRE200 External Routing Engine, and QFX Series)	<p>On EX6200 switches, EX8200 switches, and XRE200 External Routing Engines, no slot number is displayed.</p> <p>On XRE200 External Routing Engines, this field appears under the <b>member number</b> field for each member device in the EX8200 Virtual Chassis.</p>
<b>LCD screen</b>	<p>The first line displays the hostname (for Virtual Chassis members, displays the member ID, the current role, and hostname; for EX8200 switches, displays <b>RE</b> and the hostname). The second line displays the currently selected port parameter of the Status LED and the alarms counter. The Status LED port parameters are:</p> <ul style="list-style-type: none"> <li>• <b>ADM</b>—Administrative</li> <li>• <b>SPD</b>—Speed</li> <li>• <b>DPX</b>—Duplex</li> <li>• <b>POE</b>—Power over Ethernet (EX3200 and EX4200 switches only)</li> </ul>
<b>LEDs status</b>	Current state of the Alarms, System, and Master LEDs (chassis status LEDs).
<b>Interface</b>	Names of the interfaces on the switch.



Table 27: show chassis lcd Output Fields (continued)

Field Name	Field Description
LED (ADM/SPD/DPX/POE)	<p>State of the currently selected port parameter of the Status LED for the interface. The Status LED port parameters are:</p> <p><b>NOTE:</b> The XRE200 External Routing Engine always displays the <b>NA</b> parameter. The QFX Series products do not have any of the port parameters listed below.</p> <ul style="list-style-type: none"> <li>• <b>ADM</b>—Administrative</li> <li>• <b>SPD</b>—Speed</li> <li>• <b>DPX</b>—Duplex</li> <li>• <b>NA</b>—Not applicable.</li> <li>• <b>POE</b>—Power over Ethernet</li> </ul>
fpcx	On standalone EX Series and QFX Series switches, always 0. On EX Series Virtual Chassis member switches, member ID of the Virtual Chassis member whose LCD menu is displayed.

## Sample Output

### show chassis lcd (Two-Member EX4200 Virtual Chassis)

```

user@switch> show chassis lcd

Front panel contents for slot: 0
-----
LCD screen:
  00:BK switch1
  LED:SPD ALARM 00
LEDs status:
  Alarms LED: Off
  System LED: Green
  Master LED: Off
Interface      LED(ADM/SPD/DPX/POE)
-----
ge-0/0/0      Off
ge-0/0/1      Off
ge-0/0/2      Off
ge-0/0/3      Off
ge-0/0/4      Off
ge-0/0/5      Off
ge-0/0/6      Off
ge-0/0/7      Off
ge-0/0/8      Off
ge-0/0/9      Off
ge-0/0/10     Off
ge-0/0/11     Off
ge-0/0/12     Off
ge-0/0/13     Off
ge-0/0/14     Off
ge-0/0/15     Off
ge-0/0/16     Off
ge-0/0/17     Off
ge-0/0/18     Off
ge-0/0/19     Off
ge-0/0/20     Off
ge-0/0/21     Off

```



```

ge-0/0/22      Off
ge-0/0/23      Off
Front panel contents for slot: 1
-----
LCD screen:
  01:RE switch2
  LED:SPD ALARM 01
LEDs status:
  Alarms LED: Yellow
  System LED: Green
  Master LED: Green
Interface      LED(ADM/SPD/DPX/POE)
-----
ge-1/0/0       Off
ge-1/0/1       Off
ge-1/0/2       Off
ge-1/0/3       Off
ge-1/0/4       Off
ge-1/0/5       Off
ge-1/0/6       Off
ge-1/0/7       Off
ge-1/0/8       Off
ge-1/0/9       Off
ge-1/0/10      Off
ge-1/0/11      Off
ge-1/0/12      Off
ge-1/0/13      Off
ge-1/0/14      Off
ge-1/0/15      Off
ge-1/0/16      Off
ge-1/0/17      Off
ge-1/0/18      Off
ge-1/0/19      Off
ge-1/0/20      Off
ge-1/0/21      Off
ge-1/0/22      Off
ge-1/0/23      Off

```

The output for the **show chassis lcd fpc-slot** command is the same as the output for the **show chassis lcd** command.

#### show chassis lcd fpc-slot 1 (EX4200 Virtual Chassis)

```

user@switch> show chassis lcd fpc-slot 1
Front panel contents for slot: 1
-----
LCD screen:
  01:RE switch2
  LED:SPD ALARM 01
LEDs status:
  Alarms LED: Yellow
  System LED: Green
  Master LED: Green
Interface      LED(ADM/SPD/DPX/POE)
-----
ge-1/0/0       Off
ge-1/0/1       Off

```



```

ge-1/0/2      Off
ge-1/0/3      Off
ge-1/0/4      Off
ge-1/0/5      Off
ge-1/0/6      Off
ge-1/0/7      Off
ge-1/0/8      Off
ge-1/0/9      Off
ge-1/0/10     Off
ge-1/0/11     Off
ge-1/0/12     Off
ge-1/0/13     Off
ge-1/0/14     Off
ge-1/0/15     Off
ge-1/0/16     Off
ge-1/0/17     Off
ge-1/0/18     Off
ge-1/0/19     Off
ge-1/0/20     Off
ge-1/0/21     Off
ge-1/0/22     Off
ge-1/0/23     Off

```

#### show chassis lcd (EX8200 Switch)

```
user@switch> show chassis lcd
```

```
Front panel contents:
```

```
-----
LCD screen:
  RE st-8200-r
  LED:ADM ALARM 01
```

```
LEDs status:
  Alarms LED: Yellow
  System LED: Yellow
  Master LED: Green
```

```
Interface      LED(ADM/SPD/DPX)
```

```
-----
ge-0/0/0      Off
ge-0/0/1      Off
ge-0/0/2      Off
ge-0/0/3      Off
ge-0/0/4      Off
ge-0/0/5      Off
ge-0/0/6      Off
ge-0/0/7      Off
ge-0/0/8      Off
ge-0/0/9      Off
ge-0/0/10     Off
ge-0/0/11     Off
ge-0/0/12     Off
ge-0/0/13     Off
ge-0/0/14     Off
ge-0/0/15     Off
ge-0/0/16     Off
ge-0/0/17     Off
ge-0/0/18     Off
ge-0/0/19     Off
ge-0/0/20     Off
ge-0/0/21     Off

```



```

ge-0/0/22      Off
ge-0/0/23      Off
ge-0/0/24      Off
ge-0/0/25      Off
ge-0/0/26      Off
ge-0/0/27      Off
ge-0/0/28      Off
ge-0/0/29      Off
ge-0/0/30      Off
ge-0/0/31      Off
ge-0/0/32      Off
ge-0/0/33      Off
ge-0/0/34      Off
ge-0/0/35      Off
ge-0/0/36      Off
ge-0/0/37      Off
ge-0/0/38      Off
ge-0/0/39      Off
ge-0/0/40      Off
ge-0/0/41      Off
ge-0/0/42      Off
ge-0/0/43      Off
ge-0/0/44      Off
ge-0/0/45      Off
ge-0/0/46      Off
ge-0/0/47      Off
xe-2/0/0       Off
xe-2/0/1       Off
xe-2/0/2       Off
xe-2/0/3       Off
xe-2/0/4       Off
xe-2/0/5       Off
xe-2/0/6       Off
xe-2/0/7       Off
xe-3/0/0       Off
xe-3/0/1       Off
xe-3/0/2       Off
xe-3/0/3       Off
xe-3/0/4       Off
xe-3/0/5       Off
xe-3/0/6       Off
xe-3/0/7       Off
xe-5/0/0       Off
xe-5/0/1       Off
xe-5/0/2       Off
xe-5/0/3       Off
xe-5/0/4       Off
xe-5/0/5       Off
xe-5/0/6       On
xe-5/0/7       On
xe-7/0/5       Off

```

#### show chassis lcd fpc-slot 2 (EX8200 Switch)

```
show chassis lcd fpc-slot 2
```

Interface	LED(ADM/SPD/DPX)
xe-2/0/0	Off



```
xe-2/0/1      Off
xe-2/0/2      Off
xe-2/0/3      Off
xe-2/0/4      Off
xe-2/0/5      Off
xe-2/0/6      Off
xe-2/0/7      Off
```

### show chassis lcd menu (EX4200 Switch)

```
user@switch> show chassis lcd menu
```

```
fpc0:
```

```
-----
status-menu
status-menu vcp-status
status-menu power-status
status-menu environ-menu
status-menu show-version
maintenance-menu
maintenance-menu halt-menu
maintenance-menu system-reboot
maintenance-menu rescue-config
maintenance-menu vc-uplink-config
maintenance-menu factory-default
```

On an EX4200 switch in a Virtual Chassis, the output for the **show chassis lcd menu all-members** command is the same as the output for the **show chassis lcd menu** command.

### show chassis lcd menu (EX8200 Switch)

```
user@switch> show chassis lcd menu
```

```
status-menu
status-menu sf-status1-menu
status-menu sf-status2-menu
status-menu psu-status1-menu
status-menu psu-status2-menu
status-menu environ-menu
status-menu show-version
maintenance-menu
maintenance-menu halt-menu
maintenance-menu system-reboot
maintenance-menu rescue-config
maintenance-menu factory-default
```

### show chassis lcd (QFX3500 Switches)

```
user@switch> show chassis lcd
```

```
Front panel contents for slot: 0
```

```
-----
LCD screen:
00:RE switch
ALARM 01
LEDs status:
Status/Beacon LED: Yellow Blinking
Interface STATUS LED ACTIVITY LED
```



```
-----
fte-0/1/0 Off Off
```

### show chassis lcd (XRE200 External Routing Engine in EX8200 Virtual Chassis)

```
user@external-routing-engine> show chassis lcd
```

```
member0:
```

```
-----
Front panel contents:
```

```
-----
LCD screen:
```

```
    RE ex8200-member0
```

```
    LED:ADM ALARM 04
```

```
LEDs status:
```

```
    Alarms LED: Red
```

```
    System LED: Yellow
```

```
    Master LED: Green
```

```
member1:
```

```
member8:
```

```
-----
Front panel contents:
```

```
-----
LCD screen:
```

```
    BACKUP
```

```
member9:
```

```
-----
Front panel contents:
```

```
-----
LCD screen:
```

```
    09:RE xre200-member9
```

```
    LED: NA ALARM 01
```

```
Interface      LED(ADM/SPD/DPX/POE)
```

```
-----
ge-0/0/0       On
ge-0/0/1       On
ge-0/0/2       On
ge-0/0/3       On
ge-0/0/4       Off
ge-0/0/5       Off
ge-0/0/6       Off
ge-0/0/7       Off
ge-0/0/8       Off
ge-0/0/9       Off
ge-0/0/10      On
ge-0/0/11      Off
ge-0/0/12      Off
ge-0/0/13      Off
ge-0/0/14      Off
ge-0/0/15      Off
ge-0/0/16      Off
ge-0/0/17      Off
ge-0/0/18      Off
ge-0/0/19      Off
ge-0/0/20      Off
ge-0/0/21      Off
```



```
ge-0/0/22    Off
ge-0/0/23    Off
ge-0/0/24    Off
ge-0/0/25    Off
ge-0/0/26    Off
ge-0/0/27    Off
ge-0/0/28    Off
ge-0/0/29    Off
ge-0/0/30    Off
ge-0/0/31    Off
ge-0/0/32    Off
ge-0/0/33    Off
ge-0/0/34    Off
ge-0/0/35    Off
ge-0/0/36    Off
ge-0/0/37    Off
ge-0/0/38    Off
ge-0/0/39    Off
ge-0/0/40    On
ge-0/0/41    On
ge-0/0/42    On
ge-0/0/43    On
ge-0/0/44    On
ge-0/0/45    On
ge-0/0/46    On
ge-0/0/47    On
ge-16/0/0    On
ge-16/0/1    Off
ge-16/0/2    On
ge-16/0/3    Off
ge-16/0/4    On
ge-16/0/5    Off
ge-16/0/6    On
ge-16/0/7    Off
ge-16/0/8    Off
ge-16/0/9    Off
ge-16/0/10   Off
ge-16/0/11   Off
ge-16/0/12   Off
ge-16/0/13   On
ge-16/0/14   Off
ge-16/0/15   On
ge-16/0/16   Off
ge-16/0/17   On
ge-16/0/18   On
ge-16/0/19   On
ge-16/0/20   On
ge-16/0/21   Off
ge-16/0/22   On
ge-16/0/23   Off
ge-16/0/24   Off
ge-16/0/25   Off
ge-16/0/26   On
ge-16/0/27   Off
ge-16/0/28   Off
ge-16/0/29   Off
ge-16/0/30   On
ge-16/0/31   Off
ge-16/0/32   On
ge-16/0/33   On
```



ge-16/0/34	On
ge-16/0/35	Off
ge-16/0/36	On
ge-16/0/37	Off
ge-16/0/38	Off
ge-16/0/39	Off
ge-16/0/40	Off
ge-16/0/41	Off
ge-16/0/42	On
ge-16/0/43	Off
ge-16/0/44	Off
ge-16/0/45	Off
ge-16/0/46	Off
ge-16/0/47	Off
xe-19/0/0	Off
xe-19/0/1	On
xe-19/0/2	On
xe-19/0/3	On
xe-19/0/4	On
xe-19/0/5	On
ge-22/0/0	Off
ge-22/0/1	Off
ge-22/0/2	On
ge-22/0/3	Off
ge-22/0/4	On
ge-22/0/5	On
ge-22/0/6	On
ge-22/0/7	On
ge-22/0/8	Off
ge-22/0/9	Off
ge-22/0/10	Off
ge-22/0/11	Off
ge-22/0/12	Off
ge-22/0/13	Off
ge-22/0/14	Off
ge-22/0/15	Off
ge-22/0/16	On
ge-22/0/17	Off
ge-22/0/18	On
ge-22/0/19	Off
ge-22/0/20	On
ge-22/0/21	Off
ge-22/0/22	On
ge-22/0/23	Off
ge-22/0/24	On
ge-22/0/25	Off
ge-22/0/26	Off
ge-22/0/27	Off
ge-22/0/28	Off
ge-22/0/29	Off
ge-22/0/30	Off
ge-22/0/31	Off
ge-22/0/32	On
ge-22/0/33	Off
ge-22/0/34	On
ge-22/0/35	Off
ge-22/0/36	Off
ge-22/0/37	Off
ge-22/0/38	Off
ge-22/0/39	Off



```

ge-22/0/40    Off
ge-22/0/41    Off
ge-22/0/42    Off
ge-22/0/43    Off
ge-22/0/44    Off
ge-22/0/45    Off
ge-22/0/46    Off
ge-22/0/47    Off

```

### show chassis lcd interconnect-device (QFabric Systems)

#### show chassis lcd interconnect-device IC-F1012

```

                                Front Panel Module Information
                                -----
                                LCD screen:
                                IC-F1012          3 Alarms active

LEDs status:
  Status LED: Green
  Power LED : Green
  Major Alarm LED: off
  Minor Alarm LED: Yellow
  Fan 0 LED : Green
  Fan 1 LED : Green
  Fan 2 LED : Green
  Fan 3 LED : Green
  Fan 4 LED : Green
  Fan 5 LED : Green
  Fan 6 LED : Green
  Fan 7 LED : Green
  Fan 8 LED : Green
  Fan 9 LED : Green
  PEM 0 LED : Green
  PEM 1 LED : Green
  PEM 2 LED : Green
  PEM 3 LED : off
  PEM 4 LED : off
  PEM 5 LED : off

                                LED info for: CB - 0
                                -----

LEDs status:
  Status LED: Green
  Mastership LED: Green

Interface                STATUS LED    LINK/ACTIVITY LED
-----
IC-F1012:pme0 :          Green          N/A
IC-F1012:pme1 :          Green          N/A
IC-F1012:pme2 :          off            N/A
IC-F1012:pme3 :          off            N/A

                                LED info for: CB - 1
                                -----

LEDs status:
  Status LED: Green
  Mastership LED: Amber

Interface                STATUS LED    LINK/ACTIVITY LED
-----

```



```

IC-F1012:pme0 :      Green      N/A
IC-F1012:pme1 :      Green      N/A
IC-F1012:pme2 :      off        N/A
IC-F1012:pme3 :      off        N/A

```

```

LED info for: FC 0 FPC - 0
-----

```

```

LEDs status:
  Status LED: Green

```

Interface	STATUS LED	LINK/ACTIVITY LED
IC-F1012:fte-0/0/0	Green	N/A
IC-F1012:fte-0/0/1	Green	N/A
IC-F1012:fte-0/0/2	Green	N/A
IC-F1012:fte-0/0/3	Green	N/A
IC-F1012:fte-0/0/4	Green	N/A

```

LED info for: FC 1 FPC - 1
-----

```

```

LEDs status:
  Status LED: Green

```

Interface	STATUS LED	LINK/ACTIVITY LED
IC-F1012:fte-1/0/0	Green	N/A
IC-F1012:fte-1/0/1	Green	N/A
IC-F1012:fte-1/0/2	Green	N/A
IC-F1012:fte-1/0/3	Green	N/A
IC-F1012:fte-1/0/4	Green	N/A

```

LED info for: RC 0 FPC - 8
-----

```

```

LEDs status:
  Status LED: Green

```

```

LED info for: RC 1 FPC - 9
-----

```

```

LEDs status:
  Status LED: Green

```

```

LED info for: RC 2 FPC - 10
-----

```

```

LEDs status:
  Status LED: Green

```

```

LED info for: RC 3 FPC - 11
-----

```

```

LEDs status:
  Status LED: Green

```

```

LED info for: RC 4 FPC - 12
-----

```

```

LEDs status:
  Status LED: Green

```

```

LED info for: RC 5 FPC - 13
-----

```

```

LEDs status:
  Status LED: Green

```



```

LED info for: RC 6 FPC - 14
-----
LEDs status:
  Status LED: Green

LED info for: RC 7 FPC - 15
-----
LEDs status:
  Status LED: Green

```

### show chassis lcd node-device (QFabric Systems)

show chassis lcd node-device P3774-C

```

Front panel contents for: P3774-C
-----
LCD screen:
P3774-C

LEDs status:
  Status/Beacon LED: Yellow Blinking

```

Interface	STATUS LED	LINK/ACTIVITY LED
P3774-C:xe-0/0/6	Green	Green
P3774-C:xe-0/0/7	Green	Green
P3774-C:ge-0/0/10	Green	Green
P3774-C:ge-0/0/11	Green	Green Blinking
P3774-C:ge-0/0/12	Green	Off
P3774-C:ge-0/0/13	Green	Green Blinking
P3774-C:ge-0/0/20	Green	Green
P3774-C:ge-0/0/21	Green	Green
P3774-C:ge-0/0/22	Green	Green Blinking
P3774-C:ge-0/0/23	Green	Off
P3774-C:ge-0/0/30	Green	Green
P3774-C:ge-0/0/31	Green	Green
P3774-C:ge-0/0/32	Green	Green Blinking
P3774-C:ge-0/0/33	Green	Green Blinking
P3774-C:fte-0/1/0	Green	Green
P3774-C:fte-0/1/1	Green	Green Blinking
P3774-C:fte-0/1/2	Green	Green Blinking
P3774-C:fte-0/1/3	Green	Green



## show chassis led

<b>List of Syntax</b>	<a href="#">show chassis led (EX Series) on page 680</a> <a href="#">show chassis led (QFX Series) on page 680</a> <a href="#">Syntax (OCX Series) on page 680</a>
<b>show chassis led (EX Series)</b>	<pre>show chassis led &lt;fpc-slot &lt;fpc-slot-number&gt;&gt;</pre>
<b>show chassis led (QFX Series)</b>	<pre>show chassis led &lt;fpc-slot &lt;fpc-slot-number&gt;&gt; interconnect-device <i>name</i> node-device <i>name</i></pre>
<b>Syntax (OCX Series)</b>	<pre>show chassis led &lt;fpc-slot &lt;fpc-slot-number&gt;&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 10.1 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<p>Display the status and colors of the chassis LEDs on the front panel of the switch. A major alarm (red) indicates a critical error condition that requires immediate action. A minor alarm (yellow) indicates a noncritical condition that requires monitoring or maintenance. A minor alarm that is left unchecked might cause interruption in service or performance degradation.</p>
<b>Options</b>	<p><b>none</b>—Display the status of the chassis status LEDs (for EX4200 switches configured as a Virtual Chassis, display the information for all Virtual Chassis members).</p> <p><b>fpc-slot &lt;fpc-slot-number&gt;</b>—(Optional) (Not on EX2200 switches) Display the information as follows:</p> <ul style="list-style-type: none"> <li>(EX3200, standalone EX4200, standalone QFX3500, EX4500, and OCX Series switches) Display the status of the chassis status LEDs for either an FPC slot with no <b>fpc-slot-number</b> value specified or for the FPC slot specified by <b>fpc-slot 0</b>. <b>fpc-slot</b> refers to the switch itself and <b>0</b> is the only valid value for <b>fpc-slot-number</b>. Output for these options is the same as for the <b>none</b> option.</li> <li>(EX4200 switches in a Virtual Chassis with two or more members) If no <b>fpc-slot-number</b> value is specified, display the status of the chassis status LEDs for all members of the Virtual Chassis. Output for this option is the same as for the <b>none</b> option. If the <b>fpc-slot-number</b> value is specified (it equals the <b>member-id</b> value), display the status of the chassis status LEDs for the specified member.</li> </ul>



- (EX8200 switches)—Display the status of the chassis status LEDs for the line card in the line-card slot specified by the *fpc-slot-number* value.

**interconnect-device *name***—

— (QFabric systems only) (Optional) Display the status of the chassis and interface status LEDs for the Interconnect device.

**node-device *name***— (QFabric systems only) (Optional) Display the status of the chassis and interface status LEDs for the Node device.

**Required Privilege Level**

view

**Related Documentation**

- *Chassis Status LEDs in EX2200 Switches*
- *Chassis Status LEDs in EX3200 Switches*
- *Chassis Status LEDs in EX4200 Switches*
- *Chassis Status LEDs in EX4500 Switches*
- *Chassis Status LEDs in an EX8200 Switch*
- *Chassis Status LEDs on a QFX3500 Device*
- *Chassis Status LEDs in the QFX3600 and QFX3600-I Device*
- *Management Port LEDs on a QFX3500 Device*
- *Management Port LEDs in the QFX3600 and QFX3600-I Device*
- *Chassis Status LEDs on a QFX3008-I Interconnect Device*
- *Control Board LEDs on a QFX3008-I Interconnect Device*

**List of Sample Output**

[show chassis led \(EX2200 Switch\) on page 684](#)  
[show chassis led on page 685](#)  
[show chassis led fpc-slot 0 on page 686](#)  
[show chassis led \(EX Series\) on page 687](#)  
[show chassis led node-device \(QFabric System Node Device\) on page 687](#)  
[show chassis led interconnect-device \(QFabric System - QFX3600-I Interconnect Device\) on page 688](#)  
[show chassis led interconnect-device \(QFabric System - QFX3008-I Interconnect Device\) on page 688](#)

**Output Fields**

[Table 8 on page 192](#) lists the output fields for the **show chassis led** command. Output fields are listed in the approximate order in which they appear.



Table 28: show chassis led Output Fields

Field Name	Field Description
<b>Front panel contents for slot</b>	FPC slot number of the device whose content is being displayed. The number is always 0, except for EX4200 switches in a Virtual Chassis, where it is the member ID value.
<b>Front panel contents</b> (EX8200 Switches)	
<b>Front Panel Module Information</b> (QFabric system QFX3008-I Interconnect device)	On EX8200 switches, no slot number is displayed.
<b>Front panel contents for</b> (QFabric system Node devices and QFX3600-I Interconnect devices)	On QFabric system Node devices, the name of the Node device whose content is being displayed.
<b>Alarms LED</b>	<p>(EX Series switches only) Displays status of the ALM LED:</p> <ul style="list-style-type: none"> <li>• Off—No alarm has been configured.</li> <li>• Green—No alarm has been triggered.</li> <li>• Red—Major alarm.</li> <li>• Yellow—Minor alarm</li> </ul>
<b>System LED</b>	<p>(EX Series switches only) Displays status of the SYS LED:</p> <ul style="list-style-type: none"> <li>• Off—Switch is powered off.</li> <li>• Green—Switch is operating normally.</li> <li>• Yellow—Switch is booting.</li> </ul>
<b>Master LED:</b>	<p>Displays status of the MST LED (on EX3200, EX4200, and EX8200 switches):</p> <ul style="list-style-type: none"> <li>• Green—On an EX4200 Virtual Chassis switch, indicates the switch is the master in the Virtual Chassis configuration. On other switches, indicates that the Routing Engine is operational.</li> <li>• Off <ul style="list-style-type: none"> <li>• On an EX4200 Virtual Chassis switch, indicates that this switch is not the master in the Virtual Chassis configuration.</li> <li>• On EX3200, standalone EX4200, and EX8200 switches, indicates that the Routing Engine is not operational.</li> </ul> </li> </ul>
<b>Mode LED:</b>	<p>(EX Series switches only) On an EX2200 switch only, displays the currently selected port parameter of the Status LED:</p> <ul style="list-style-type: none"> <li>• <b>ADM</b>—Administrative</li> <li>• <b>SPD</b>—Speed</li> <li>• <b>DPX</b>—Duplex</li> <li>• <b>POE</b>—Power over Ethernet</li> </ul>
<b>Status/Beacon LED</b>	<p>(QFX Series and OCX Series) Displays the system status as indicated by the Status LED on the chassis. For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Chassis Status LEDs on a QFX3500 Device</i></li> <li>• <i>Chassis Status LEDs in the QFX3600 and QFX3600-I Device</i></li> </ul>



Table 28: show chassis led Output Fields (continued)

Field Name	Field Description
<b>LINK/SPEED LED</b>	<p>(QFX Series and OCX Series) Displays the link status and speed of a management port. For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Management Port LEDs on a QFX3500 Device</i></li> <li>• <i>Management Port LEDs in the QFX3600 and QFX3600-I Device</i></li> </ul>
<b>ACTIVITY LED</b>	<p>(QFX Series and OCX Series) Displays the activity status of a management port. For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Management Port LEDs on a QFX3500 Device</i></li> <li>• <i>Management Port LEDs in the QFX3600 and QFX3600-I Device</i></li> </ul>
<b>STATUS LED</b>	<p>(QFX Series and OCX Series) Displays the link status of an interface as indicated by the ST LED. For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Control Board LEDs on a QFX3008-I Interconnect Device</i></li> <li>• <i>Access Port and Uplink Port LEDs on a QFX3500 Device</i></li> <li>• <i>Access Port and Uplink Port LEDs on a QFX3600 or QFX3600-I Device</i></li> </ul>
<b>LINK/ACTIVITY LED</b>	<p>(QFX Series and OCX Series) Displays link activity or faults on an interface as indicated by the LA LED. For more information, see:</p> <ul style="list-style-type: none"> <li>• <i>Access Port and Uplink Port LEDs on a QFX3500 Device</i></li> <li>• <i>Access Port and Uplink Port LEDs on a QFX3600 or QFX3600-I Device</i></li> </ul>
<b>Status LED</b>	<p>(QFX3008-I Interconnect device only)</p> <ul style="list-style-type: none"> <li>• Displays the system status as indicated by the STATUS LED on the front panel of the chassis. For more information, see <i>Chassis Status LEDs on a QFX3008-I Interconnect Device</i>.</li> <li>• Displays the status of a Control Board as indicated by the STATUS LED on the Control Board. For more information, see <i>Control Board LEDs on a QFX3008-I Interconnect Device</i>.</li> </ul>
<b>Power LED</b>	<p>(QFX3008-I Interconnect device only) Displays the status of system power on the device. For more information, see <i>Chassis Status LEDs on a QFX3008-I Interconnect Device</i>.</p>
<b>Major Alarm LED</b>	<p>(QFX3008-I Interconnect device only) Displays whether a critical error condition that requires immediate action exists on the device. For more information, see <i>Chassis Status LEDs on a QFX3008-I Interconnect Device</i>.</p>
<b>Minor Alarm LED</b>	<p>(QFX3008-I Interconnect device only) Displays whether a noncritical condition that requires monitoring or maintenance exists on the device. For more information, see <i>Chassis Status LEDs on a QFX3008-I Interconnect Device</i>.</p>



Table 28: show chassis led Output Fields (continued)

Field Name	Field Description
Fan 0 LED	(QFX3008-I Interconnect device only) Displays the status of fan trays on the device. For more information, see <i>Chassis Status LEDs on a QFX3008-I Interconnect Device</i> .
Fan 1 LED	
Fan 2 LED	
Fan 3 LED	
Fan 4 LED	
Fan 5 LED	
Fan 6 LED	
Fan 7 LED	
Fan 8 LED	
PEM 0 LED	(QFX3008-I Interconnect device only) Displays the status of power supplies on the device. For more information, see <i>Chassis Status LEDs on a QFX3008-I Interconnect Device</i> .
PEM 1 LED	
PEM 2 LED	
PEM 3 LED	
PEM 4 LED	
LED info for	(QFX3008-I Interconnect device only) Displays the LED information for a Control Board.
Mastership LED	(QFX3008-I Interconnect device only) Displays status of the MASTER LED on a Control Board. For more information, see <i>Control Board LEDs on a QFX3008-I Interconnect Device</i> .
Interface	Names of the interfaces on the device.
LED (ADM/SPD/DPX/POE)	<p>(EX Series switches only) State of the currently selected port parameter of the Status LED for the interface. The Status LED port parameters are:</p> <p><b>NOTE:</b> EX4500 and EX8200 switches do not have the POE port parameter.</p> <ul style="list-style-type: none"> <li>• <b>ADM</b>—Administrative</li> <li>• <b>SPD</b>—Speed</li> <li>• <b>DPX</b>—Duplex</li> <li>• <b>POE</b>—Power over Ethernet</li> </ul>

## Sample Output

### show chassis led (EX2200 Switch)

```
user@switch> show chassis led
```



```

Front panel contents for slot: 0
-----
LEDs status:
  Alarms LED: Amber
  System LED: Green
  Mode LED  : Duplex
Interface    LED(ADM/SPD/DPX/POE)
-----
ge-0/0/0      Off
ge-0/0/1      Full Duplex
ge-0/0/2      Full Duplex
ge-0/0/3      Off
ge-0/0/4      Off
ge-0/0/5      Full Duplex
ge-0/0/6      Full Duplex
ge-0/0/7      Full Duplex
ge-0/0/8      Full Duplex
ge-0/0/9      Full Duplex
ge-0/0/10     Full Duplex
ge-0/0/11     Full Duplex
ge-0/0/12     Full Duplex
ge-0/0/13     Full Duplex
ge-0/0/14     Full Duplex
ge-0/0/15     Full Duplex
ge-0/0/16     Full Duplex
ge-0/0/17     Full Duplex
ge-0/0/18     Full Duplex
ge-0/0/19     Full Duplex
ge-0/0/20     Full Duplex
ge-0/0/21     Full Duplex
ge-0/0/22     Off
ge-0/0/23     Off
ge-0/0/24     Full Duplex
ge-0/0/25     Full Duplex
ge-0/0/26     Off
ge-0/0/27     Off
ge-0/0/28     Full Duplex
ge-0/0/29     Full Duplex

```

### show chassis led

```

user@switch> show chassis led

Front panel contents for slot: 0
-----
LEDs status:
  Alarms LED: Off
  System LED: Green
  Master LED: Green
Interface    LED(ADM/SPD/DPX/POE)
-----
ge-0/0/0      Off
ge-0/0/1      Full Duplex
ge-0/0/2      Full Duplex
ge-0/0/3      Off
ge-0/0/4      Off
ge-0/0/5      Full Duplex
ge-0/0/6      Full Duplex
ge-0/0/7      Full Duplex

```



```

ge-0/0/8      Full Duplex
ge-0/0/9      Full Duplex
ge-0/0/10     Full Duplex
ge-0/0/11     Full Duplex
ge-0/0/12     Full Duplex
ge-0/0/13     Full Duplex
ge-0/0/14     Full Duplex
ge-0/0/15     Full Duplex
ge-0/0/16     Full Duplex
ge-0/0/17     Full Duplex
ge-0/0/18     Full Duplex
ge-0/0/19     Full Duplex
ge-0/0/20     Full Duplex
ge-0/0/21     Full Duplex
ge-0/0/22     Off
ge-0/0/23     Off
ge-0/0/24     Full Duplex
ge-0/0/25     Full Duplex
ge-0/0/26     Off
ge-0/0/27     Off
ge-0/0/28     Full Duplex
ge-0/0/29     Full Duplex

```

#### show chassis led fpc-slot 0

```
user@switch> show chassis led fpc-slot 0
```

```
Front panel contents for slot: 0
```

```
-----
LEDs status:
```

```
  Alarms LED: Red
```

```
  System LED: Green
```

```
  Master LED: Green
```

```
Interface      LED(ADM/SPD/DPX/POE)
```

```
-----
ge-0/0/0      Off
ge-0/0/1      Off
ge-0/0/2      Off
ge-0/0/3      Off
ge-0/0/4      Off
ge-0/0/5      Off
ge-0/0/6      Off
ge-0/0/7      Off
ge-0/0/8      Off
ge-0/0/9      Off
ge-0/0/10     Off
ge-0/0/11     Off
ge-0/0/12     Off
ge-0/0/13     Off
ge-0/0/14     Off
ge-0/0/15     Off
ge-0/0/16     Off
ge-0/0/17     Off
ge-0/0/18     Off
ge-0/0/19     Off
ge-0/0/20     Off
ge-0/0/21     Off
ge-0/0/22     Off
ge-0/0/23     Off

```



**show chassis led (EX Series)**

```

user@switch> show chassis led

Front panel contents for slot: 0
-----
LEDs status:
Alarms LED: Amber
Status LED: Green
Mode LED : Duplex
Interface LED(ADM/SPD/DPX/POE)
-----

ge-0/0/0 Off
ge-0/0/1 Full Duplex
ge-0/0/2 Full Duplex
ge-0/0/3 Off
ge-0/0/4 Off
ge-0/0/5 Full Duplex
ge-0/0/6 Full Duplex
ge-0/0/7 Full Duplex
ge-0/0/8 Full Duplex
ge-0/0/9 Full Duplex
ge-0/0/10 Full Duplex
ge-0/0/11 Full Duplex
ge-0/0/12 Full Duplex
ge-0/0/13 Full Duplex
ge-0/0/14 Full Duplex
ge-0/0/15 Full Duplex
ge-0/0/16 Full Duplex
ge-0/0/17 Full Duplex
ge-0/0/18 Full Duplex
ge-0/0/19 Full Duplex
ge-0/0/20 Full Duplex
ge-0/0/21 Full Duplex
ge-0/0/22 Off
ge-0/0/23 Off
ge-0/0/24 Full Duplex
ge-0/0/25 Full Duplex
ge-0/0/26 Off
ge-0/0/27 Off
ge-0/0/28 Full Duplex
ge-0/0/29 Full Duplex

```

**show chassis led node-device (QFabric System Node Device)**

```

user@switch> show chassis led node-device node1

Front panel contents for: node1
LEDs status:
  Status/Beacon LED: Yellow Blinking

Interface          LINK/SPEED LED    ACTIVITY LED
-----
node1:me5          Green            N/A
node1:me6          Green            N/A

Interface          STATUS LED        LINK/ACTIVITY LED
-----
node1:xe-0/0/8     Green            Green
node1:ge-0/0/10    Green            Green

```



node1:ge-0/0/12	Green	Green
node1:ge-0/0/24	Green	Green
node1:ge-0/0/25	Green	Green
node1:ge-0/0/26	Green	Green
node1:ge-0/0/27	Green	Green
node1:ge-0/0/28	Green	Green
node1:ge-0/0/29	Green	Green
node1:ge-0/0/30	Green	Green
node1:ge-0/0/31	Green	Green
node1:ge-0/0/32	Green	Green
node1:ge-0/0/33	Green	Green
node1:ge-0/0/34	Green	Green
node1:ge-0/0/35	Green	Green
node1:ge-0/0/36	Green	Green
node1:ge-0/0/37	Green	Green
node1:ge-0/0/38	Green	Green
node1:ge-0/0/39	Green	Green
node1:fte-0/1/0	Green	Green Blinking
node1:fte-0/1/2	Green	Green Blinking

#### show chassis led interconnect-device (QFabric System - QFX3600-I Interconnect Device)

```
user@switch> show chassis led interconnect-device IC2
```

```

      Front panel contents for: FPC 0
      -----
LEDs status:
  Status/Beacon LED: Yellow Blinking

Interface          LINK/SPEED LED    ACTIVITY LED
-----
IC-EG0712:me5      Green             N/A
IC-EG0712:me6      Green             N/A

Interface          STATUS LED        LINK/ACTIVITY LED
-----
IC2:fte-0/1/0      Green             Green
IC2:fte-0/1/1      Green             Green Blinking
IC2:fte-0/1/2      Green             Green
IC2:fte-0/1/3      Green             Green Blinking
IC2:fte-0/1/4      Green             Green
IC2:fte-0/1/5      Green             Green Blinking
IC2:fte-0/1/6      Green             Green
IC2:fte-0/1/7      Green             Green
IC2:fte-0/1/8      Green             Green Blinking
IC2:fte-0/1/9      Green             Green Blinking
IC2:fte-0/1/10     Green             Green Blinking

```

#### show chassis led interconnect-device (QFabric System - QFX3008-I Interconnect Device)

```
user@switch> show chassis led interconnect-device IC2
```

```

      Front Panel Module Information
      -----
LEDs status:
  Status LED: Green
  Power LED : Yellow Blinking
  Major Alarm LED: Red
  Minor Alarm LED: Yellow

```



```

Fan 0 LED : Green
Fan 1 LED : Green
Fan 2 LED : Green
Fan 3 LED : Green
Fan 4 LED : Green
Fan 5 LED : Green
Fan 6 LED : Green
Fan 7 LED : Green
Fan 8 LED : Green
Fan 9 LED : Green
PEM 0 LED : Green
PEM 1 LED : Green
PEM 2 LED : Green
PEM 3 LED : off
PEM 4 LED : Yellow Blinking
PEM 5 LED : off

```

```

LED info for: CB - 0
-----

```

```

LEDs status:

```

```

Status LED: Green
Mastership LED: Green

```

Interface	STATUS LED	LINK/ACTIVITY LED
IC2:pme0 :	Green	N/A
IC2:pme1 :	off	N/A
IC2:pme2 :	off	N/A
IC2:pme3 :	off	N/A

```

LED info for: CB - 1
-----

```

```

LEDs status:

```

```

Status LED: Green
Mastership LED: Amber

```

Interface	STATUS LED	LINK/ACTIVITY LED
IC2:pme0 :	Green	N/A
IC2:pme1 :	off	N/A
IC2:pme2 :	off	N/A
IC2:pme3 :	off	N/A

```

LED info for: FC 0 FPC - 0
-----

```

```

LEDs status:

```

```

Status LED: Green

```

Interface	STATUS LED	LINK/ACTIVITY LED
IC2:fte-0/0/0	Green	N/A
IC2:fte-0/0/1	Green	N/A
IC2:fte-0/0/2	Green	N/A
IC2:fte-0/0/3	Green	N/A
IC2:fte-0/0/4	Green	N/A
IC2:fte-0/0/5	Green	N/A
IC2:fte-0/0/6	Green	N/A
IC2:fte-0/0/7	Green	N/A
IC2:fte-0/0/8	Green	N/A
IC2:fte-0/0/9	Green	N/A



```

IC2:fte-0/0/10    Green    N/A
IC2:fte-0/0/11    Green    N/A
IC2:fte-0/0/12    Green    N/A
IC2:fte-0/0/13    Green    N/A
IC2:fte-0/0/14    Green    N/A
IC2:fte-0/0/15    Green    N/A

```

```

LED info for: FC 1 FPC - 1
-----

```

```

LEDs status:
  Status LED: Green

```

Interface	STATUS LED	LINK/ACTIVITY LED
IC2:fte-1/0/0	Green	N/A
IC2:fte-1/0/1	Green	N/A

```

LED info for: RC 2 FPC - 10
-----

```

```

LEDs status:
  Status LED: Green

```

```

LED info for: RC 3 FPC - 11
-----

```

```

LEDs status:
  Status LED: Green

```



## show chassis location

<b>List of Syntax</b>	<a href="#">Syntax on page 691</a> <a href="#">Syntax (TX Matrix Router) on page 691</a> <a href="#">Syntax (TX Matrix Plus Router) on page 691</a> <a href="#">Syntax (MX Series Router) on page 691</a> <a href="#">Syntax (QFX Series) on page 691</a> <a href="#">Syntax (OCX Series) on page 691</a>
<b>Syntax</b>	show chassis location
<b>Syntax (TX Matrix Router)</b>	show chassis location <fpc   interface (by-name <i>name</i>   by-slot fpc number lcc number)   lcc number   scc>
<b>Syntax (TX Matrix Plus Router)</b>	show chassis location <fpc   interface (by-name <i>name</i>   by-slot fpc number lcc number)   lcc number   sfc number>
<b>Syntax (MX Series Router)</b>	show chassis location <all-members> <local> <member <i>member-id</i> >
<b>Syntax (QFX Series)</b>	show chassis location <interconnect-device <i>name</i> > <node-device <i>name</i> >
<b>Syntax (OCX Series)</b>	show chassis location
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. <b>sfc</b> option introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display the physical location of the chassis. This command can only be used on the master Routing Engine.
<b>Options</b>	<b>none</b> —Display all information about the physical location of the chassis. On a TX Matrix router, display all information about the physical location of the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display all information about the physical location of the TX Matrix Plus router and its attached routers.



**all-members**—(MX Series routers only) (Optional) Display the physical location of the chassis for all the member routers in the Virtual Chassis configuration.

**fpc**—(TX Matrix router and TX Matrix Plus router only) (Optional) Display the physical location of all Flexible PIC Concentrators (FPCs).

**interconnect-device *name***—(QFabric systems only) (Optional) Display the physical location of the Interconnect device.

**interface by-name *name***—(TX Matrix and TX Matrix Plus routers only) (Optional) Display the physical location of a specified interface name. On a TX Matrix router, this option displays the FPC number and T640 router (line-card chassis) number associated with the specified interface. On a TX Matrix Plus router, this option displays the FPC number and router (line-card chassis) number associated with the specified interface.

**interface by-slot *fpc number lcc number***—(TX Matrix and TX Matrix Plus router only) (Optional) On a TX Matrix router, display the global FPC number of an interface by specifying its local FPC number and T640 router (line-card chassis) number. On a TX Matrix Plus router, display the global FPC number of an interface by specifying its local FPC number and router (line-card chassis) number.

- The global FPC number is the FPC slot number when all the FPC slots in the routing matrix are considered: **0** through **31**. On TX Matrix Plus router with 3D SIBs, the value is **0** through **63**. The local FPC number is the FPC slot number on a particular T640 router.
- For **fpc**, replace *number* with a value from **0** through **7**.
- For **lcc**, replace *number* with a value from **0** through **7**.

**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display the physical location of a specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display the physical location of a specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display the physical location of the chassis for the local Virtual Chassis member.



**member *member-id***—(MX Series routers only) (Optional) Display the physical location of the chassis for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**node-device *name***—(QFabric systems only) (Optional) Display the physical location of the Node device.

**scc**—(TX Matrix routers only) (Optional) Display the physical location of the TX Matrix router (switch-card chassis).

**sfc**—(TX Matrix Plus routers only) (Optional) Display the physical location of the TX Matrix Plus router (or switch-fabric chassis).

**Required Privilege Level** view

**Related Documentation** • *Displaying Chassis Physical Locations for a Routing Matrix with a TX Matrix Plus Router*

**List of Sample Output** [show chassis location on page 694](#)  
[show chassis location fpc \(TX Matrix Router\) on page 694](#)  
[show chassis location interface by-slot \(TX Matrix Router\) on page 694](#)  
[show chassis location fpc \(TX Matrix Plus Router\) on page 694](#)  
[show chassis location interface by-slot \(TX Matrix Plus Router\) on page 694](#)  
[show chassis location \(QFX Series and OCX Series\) on page 694](#)  
[show chassis location \(QFabric Systems\) on page 695](#)

**Output Fields** [Table 29 on page 693](#) lists the output fields for the **show chassis location** command. Output fields are listed in the approximate order in which they appear.

*Table 29: show chassis location Output Fields*

Field Name	Field Description
country-code	Country code information.
postal-code	Postal code information.
Building	Building information.
Floor	Floor information.
Global FPC	Global FPC number. The FPC slot number, when all FPC slots in the routing matrix are considered. The range of values is 0 through 31. On TX Matrix Plus router with 3D SIBs the value is 0 through 63.
LATA	Local access transport area information.



Table 29: show chassis location Output Fields (continued)

Field Name	Field Description
LCC	Line-card chassis number. On a TX Matrix router, the number of a particular T640 router connected to the TX Matrix router. On a TX Matrix Plus router, the number of a particular router connected to the TX Matrix Plus router.
Local FPC	Local FPC number. On a TX Matrix router, the FPC slot number on a particular T640 router. On a TX Matrix Plus router, the FPC slot number on a particular router.

## Sample Output

### show chassis location

```
user@host> show chassis location
country-code: US
postal-code: 94404
Building: Building 2, Floor: 2
```

### show chassis location fpc (TX Matrix Router)

```
user@host> show chassis location fpc
Global FPC    LCC    Local FPC
    17         2         1
    21         2         5
```

### show chassis location interface by-slot (TX Matrix Router)

```
user@host> show chassis location interface by-slot fpc 1 lcc 1
Global FPC: 9
```

### show chassis location fpc (TX Matrix Plus Router)

```
user@host> show chassis location fpc
Global FPC    LCC    Local FPC
    0         0         0
    1         0         1
```

### show chassis location interface by-slot (TX Matrix Plus Router)

```
user@host> show chassis location interface by-slot fpc 2 lcc 1
Global FPC: 10
```

### show chassis location (QFX Series and OCX Series)

```
user@switch> show chassis location
```



```
country-code: US  
postal-code: 94404  
Building: Building 2, Floor: 2
```

#### show chassis location (QFabric Systems)

```
user@switch> show chassis location interconnect-device interconnect1  
  
country-code: US  
postal-code: 94404  
Building: Building 2, Floor: 2
```



## show chassis mac-addresses

- List of Syntax**
- Syntax on page 696
  - Syntax (TX Matrix Router) on page 696
  - Syntax (TX Matrix Plus Router) on page 696
  - Syntax (MX Series Router) on page 696
  - Syntax (MX104, MX204, MX2010, MX2020, MX10003, MX2008, and MX10008 Universal Routing Platforms) on page 696
  - Syntax (PTX Series) on page 696
  - Syntax (QFX Series) on page 696
  - Syntax (OCX Series) on page 697
  - Syntax (ACX Series Universal Metro Routers) on page 697
  - Syntax (ACX5048 and ACX5096 Routers) on page 697
  - Syntax (ACX500 Routers) on page 697
  - Syntax (EX9251, EX9253 Switches) on page 697

**Syntax** show chassis mac-addresses

**Syntax (TX Matrix Router)** show chassis mac-addresses  
<lcc *number* | scc>

**Syntax (TX Matrix Plus Router)** show chassis mac-addresses  
<lcc *number* | sfc *number*>

**Syntax (MX Series Router)** show chassis mac-addresses  
<all-members>  
<local>  
<member *member-id*>

**Syntax (MX104, MX204, MX2010, MX2020, MX10003, MX2008, and MX10008 Universal Routing Platforms)** show chassis mac-addresses

**Syntax (PTX Series)** show chassis mac-addresses

**Syntax (QFX Series)** show chassis mac-addresses  
<interconnect-device *name*>  
<node-group *name*>



Syntax (OCX Series)	show chassis mac-addresses
Syntax (ACX Series Universal Metro Routers)	show chassis mac-addresses
Syntax (ACX5048 and ACX5096 Routers)	show chassis mac-addresses
Syntax (ACX500 Routers)	show chassis mac-addresses
Syntax (EX9251, EX9253 Switches)	show chassis mac-addresses
Release Information	<p>Command introduced before JUNOS Release 7.4.</p> <p>Command introduced in JUNOS Release 9.0 for EX Series switches.</p> <p>sfc option introduced for the TX Matrix Plus router in JUNOS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in JUNOS Release 18.1R1 for EX9251 switches.</p> <p>Command introduced in Junos OS Release 18.2 for EX9253 Switches.</p> <p>Command introduced in Junos OS Release 18.2 for MX10008 Universal Routing Platforms.</p>
Description	Display the media access control (MAC) addresses for the router, switch chassis, or switch.
Options	<p><b>none</b>—(TX Matrix, TX Matrix Plus routers, QFX Series, and OCX Series Switches) Display the MAC addresses for the router chassis or switch. On a TX Matrix router, display MAC addresses on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display MAC addresses on the TX Matrix Plus router and its attached routers.</p> <p><b>all-members</b>—(MX Series routers only) (Optional) Display the MAC addresses for all the member routers of the Virtual Chassis configuration.</p> <p><b>interconnect-device <i>name</i></b>—(QFabric switches only) (Optional) Display the MAC addresses for the Interconnect device.</p>



**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display MAC addresses for a specified T640 router (or line-card chassis) that is connected to the TX Matrix Plus router. On a TX Matrix Plus router, display MAC addresses for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display the MAC addresses for the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display the MAC addresses for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**node-group *name***—(QFabric switches only) (Optional) Display the MAC addresses for the specified Node group.

**scc**—(TX Matrix routers only) (Optional) Display MAC addresses for the TX Matrix router (or switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) Display MAC addresses for the TX Matrix Plus router (or switch-fabric chassis).

**Required Privilege Level**

view

**Related Documentation**

- *ACX2000 and ACX2100 Routers Hardware and CLI Terminology Mapping*

**List of Sample Output**

[show chassis mac-addresses on page 699](#)  
[show chassis mac-addresses \(MX150\) on page 700](#)  
[show chassis mac-addresses \(MX104 Router\) on page 700](#)  
[show chassis mac-addresses \(MX2010 Router\) on page 700](#)  
[show chassis mac-addresses \(MX2020 Router\) on page 700](#)  
[show chassis mac-addresses \(MX2008 Router\) on page 700](#)  
[show chassis mac-addresses \(MX10003\) on page 700](#)  
[show chassis mac-addresses \(MX204\) on page 701](#)  
[show chassis mac-addresses \(MX10008\) on page 701](#)



[show chassis mac-addresses \(PTX10008 Router\) on page 701](#)  
[show chassis mac-addresses \(TX Matrix Router\) on page 701](#)  
[show chassis mac-addresses \(TX Matrix Plus Router\) on page 702](#)  
[show chassis mac-addresses \(QFX Series and OCX Series \) on page 702](#)  
[show chassis mac-addresses interconnect-device \(QFabric Switches\) on page 703](#)  
[show chassis mac-addresses node-group \(QFabric Switches\) on page 703](#)  
[show chassis mac-addresses \(ACX2000 Universal Metro Router\) on page 703](#)  
[show chassis mac-addresses \(ACX5048 and ACX5096 Routers\) on page 703](#)  
[show chassis mac-addresses \(ACX500 Routers\) on page 703](#)  
[show chassis mac-addresses \(EX9251 Switches\) on page 703](#)  
[show chassis mac-addresses \(EX9253 Switches\) on page 704](#)

**Output Fields** Table 30 on page 699 lists the output fields for the **show chassis mac-addresses** command. Output fields are listed in the approximate order in which they appear.

*Table 30: show chassis mac-addresses Output Fields*

Field Name	Field Description
<b>MAC address information</b>	
Public base address	<p>Base address of the MAC addresses allocated to this router or switch, for example 00:24:dc:18:09:40. This address is also printed on the box of the device.</p> <p>Public MAC addresses are those addresses your switch/router assigns to Ethernet interfaces. The public base address is the first MAC address your device assigns to an interface. Consecutive public count MAC addresses are reserved for additional interfaces.</p>
	<p>Number of allocated public addresses, for example 64. Public addresses are calculated starting with the public base address. If the public base address is 00:24:dc:18:09:40, then The MAC address of ge-0/0/0 on this device is 00:24:dc:18:09:40, and ge-0/0/1 is 00:24:dc:18:09:41, and so on, up to 64 available addresses.</p>
Private base address	<p>Base address of the private MAC addresses allocated to this router or switch. The private base address is the first MAC address after the allocated consecutive public count addresses. For example, if 00:24:dc:18:09:40 is the public base and 0x40 is the public count in hex, then 00:24:dc:18:09:80 would be the private base.</p>
Private count	Number of allocated private addresses.

## Sample Output

**show chassis mac-addresses**

```

user@host> show chassis mac-addresses
MAC address information
Public base address  0:90:69:0:4:0
Public count        1008
Private base address 0:90:69:0:7:f0
Private count        16

```



### show chassis mac-addresses (MX150)

```
user@host > show chassis mac-addresses

MAC address information:
  Public base address    f4:cc:55:2b:4c:00
  Public count           1984
  Private base address   f4:cc:55:2b:53:c0
  Private count          64
```

The MAC address displayed is the actual MAC address of the first physical port.

### show chassis mac-addresses (MX104 Router)

```
user@host > show chassis mac-addresses

MAC address information:
  Public base address    b0:a8:6e:a1:e8:58
  Public count           2032
  Private base address   b0:a8:6e:a1:f0:48
  Private count          16
```

### show chassis mac-addresses (MX2010 Router)

```
user@host> show chassis mac-addresses

MAC address information:
  Public base address    64:87:88:04:50:00
  Public count           1984
  Private base address   64:87:88:04:57:c0
  Private count          64
```

### show chassis mac-addresses (MX2020 Router)

```
user@host> show chassis mac-addresses

MAC address information:
  Public base address    2c:21:72:70:20:00
  Public count           4032
  Private base address   2c:21:72:70:2f:c0
  Private count          64
```

### show chassis mac-addresses (MX2008 Router)

```
user@host> show chassis mac-addresses

MAC address information:
  Public base address    f4:cc:55:3e:35:00
  Public count           1984
  Private base address   f4:cc:55:3e:3c:c0
  Private count          64
```

### show chassis mac-addresses (MX10003)

```
user@host> show chassis mac-addresses

MAC address information:
```



```
Public base address    28:8a:1c:6f:78:5c
Public count          3904
Private base address   28:8a:1c:6f:87:9c
Private count          192
```

### show chassis mac-addresses (MX204)

```
user@host> show chassis mac-addresses
```

```
MAC address information:
Public base address    38:4f:49:80:18:00
Public count          2032
Private base address   38:4f:49:80:1f:f0
Private count          16
```

### show chassis mac-addresses (MX10008)

```
user@host> show chassis mac-addresses
```

```
MAC address information:
Public base address    30:b6:4f:e9:74:c4
Public count          1856
Private base address   30:b6:4f:e9:7c:04
Private count          192
```

### show chassis mac-addresses (PTX10008 Router)

```
user@host> show chassis mac-addresses
```

```
MAC address information:
Public base address    30:b6:4f:0a:7a:bb
Public count          1856
Private base address   30:b6:4f:0a:81:fb
Private count          192
```

### show chassis mac-addresses (TX Matrix Router)

```
user@host> show chassis mac-addresses
```

```
scc-re0:
```

```
-----
MAC address information:
Public base address    00:05:85:9e:cc:00
Public count          8064
Private base address   00:05:85:9e:eb:80
Private count          128
```

```
lcc0-re0:
```

```
-----
MAC address information:
Public base address    00:05:85:68:98:00
Public count          2032
Private base address   00:05:85:68:9f:f0
Private count          16
```

```
lcc2-re0:
```

```
-----
MAC address information:
Public base address    00:05:85:68:78:00
Public count          2032
```



```
Private base address  00:05:85:68:7f:f0
Private count         16
```

### show chassis mac-addresses (TX Matrix Plus Router)

```
user@host> show chassis mac-addresses

sfc0-re0:
-----
MAC address information:
  Public base address  00:1d:b5:14:00:00
  Public count         65023
  Private base address 00:1d:b5:14:fd:ff
  Private count        512

lcc0-re0:
-----
MAC address information:
  Public base address  00:1f:12:7a:84:00
  Public count         2032
  Private base address 00:1f:12:7a:8b:f0
  Private count        16

lcc1-re0:
-----
MAC address information:
  Public base address  00:22:83:42:48:00
  Public count         2032
  Private base address 00:22:83:42:4f:f0
  Private count        16

lcc2-re0:
-----
MAC address information:
  Public base address  00:1f:12:c3:58:00
  Public count         2032
  Private base address 00:1f:12:c3:5f:f0
  Private count        16

lcc3-re0:
-----
MAC address information:
  Public base address  00:21:59:ef:b8:00
  Public count         2032
  Private base address 00:21:59:ef:bf:f0
  Private count        16
```

### show chassis mac-addresses (QFX Series and OCX Series )

```
user@switch> show chassis mac-addresses

MAC address information:
Public base address 02:00:08:00:00:00
Public count 512
Private base address 02:00:00:00:00:00
Private count 64
```



**show chassis mac-addresses interconnect-device (QFabric Switches)**

```

user@switch> show chassis mac-addresses interconnect-device interconnect1
MAC address information:
  Public base address    00:1f:12:30:9c:c0
  Public count           58
  Private base address   00:1f:12:30:9c:fa
  Private count          6

```

**show chassis mac-addresses node-group (QFabric Switches)**

```

user@switch> show chassis mac-addresses node-group NW-NG-0
MAC address information:
-----
RE:
  FC MAC base    00:11:00:00:00:00
  FC MAC count   2
  VLAN MAC       00:11:00:00:00:09
EC6007
  Base address   00:00:01:76:00:00
  Count          64
EC6008
  Base address   00:22:83:22:52:ae
  Count         260

```

**show chassis mac-addresses (ACX2000 Universal Metro Router)**

```

user@switch> show chassis mac-addresses
MAC address information:
  Public base address    84:18:88:c0:2b:00
  Public count           112
  Private base address   84:18:88:c0:2b:70
  Private count          16

```

**show chassis mac-addresses (ACX5048 and ACX5096 Routers)**

```

user@host> show chassis mac-addresses
FPC 0
  Base address   64:64:9b:5e:0a:00
  Count          1280

```

**show chassis mac-addresses (ACX500 Routers)**

```

user@host> show chassis mac-addresses
MAC address information:
  Public base address    f0:1c:2d:1b:60:80
  Public count           112
  Private base address   f0:1c:2d:1b:60:f0
  Private count          16

```

**show chassis mac-addresses (EX9251 Switches)**

```

user@switch> show chassis mac-addresses

```



```
MAC address information:
Public base address    4c:16:fc:90:68:00
Public count           2032
Private base address   4c:16:fc:90:6f:f0
Private count          16
```

#### show chassis mac-addresses (EX9253 Switches)

```
user@switch> show chassis mac-addresses
```

```
MAC address information:
Public base address    38:4f:49:8f:00:b8
Public count           2330
Private base address   38:4f:49:8f:09:d2
Private count          1766
```



## show chassis pic

<b>List of Syntax</b>	<p>Syntax on page 705</p> <p>Syntax (TX Matrix and TX Matrix Plus Routers) on page 705</p> <p>Syntax (MX Series Routers and EX Series Switches) on page 705</p> <p>Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 3D Universal Edge Routers) on page 705</p> <p>Syntax (PTX Series Packet Transport Router and MX240, MX480, MX960, MX2010, and MX2020 Routers) on page 705</p> <p>Syntax (QFX Series) on page 705</p> <p>Syntax (OCX Series) on page 706</p> <p>Syntax (ACX Series Universal Access Routers) on page 706</p> <p>Syntax (ACX5048 and ACX5096 Routers) on page 706</p> <p>Syntax (ACX500 Routers) on page 706</p>
<b>Syntax</b>	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
<b>Syntax (TX Matrix and TX Matrix Plus Routers)</b>	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i> &lt;fcc <i>number</i>&gt;</code>
<b>Syntax (MX Series Routers and EX Series Switches)</b>	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i> &lt;all-members&gt;</code> <code>&lt;local&gt;</code> <code>&lt;member <i>member-id</i>&gt;</code>
<b>Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 3D Universal Edge Routers)</b>	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
<b>Syntax (PTX Series Packet Transport Router and MX240, MX480, MX960, MX2010, and MX2020 Routers)</b>	<code>show chassis pic transport fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
<b>Syntax (QFX Series)</b>	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i> &lt;interconnect-device <i>name</i> (fpc-slot <i>slot-number</i>   pic-slot <i>slot-number</i>)&gt;</code> <code>&lt;node-device <i>name</i> pic-slot <i>slot-number</i>&gt;</code>



Syntax (OCX Series)	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
Syntax (ACX Series Universal Access Routers)	<code>show chassis pic fpc-slot <i>slot-number</i> pic-slot <i>slot-number</i></code>
Syntax (ACX5048 and ACX5096 Routers)	<code>show chassis pic (fpc-slot <i>slot-number</i>   pic-slot <i>slot-number</i>)</code>
Syntax (ACX500 Routers)	<code>show chassis pic (fpc-slot <i>slot-number</i>   pic-slot <i>slot-number</i>)</code>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2020 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 13.2 for PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>transport</b> option introduced in Junos OS Release 16.1R1 for MX Series Routers.</p> <p>Command introduced in Junos OS Release 17.2 for MX2008 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 3D Universal Edge Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 3D Universal Edge Routers.</p>
Description	Display status information about the PIC installed in the specified Flexible PIC Concentrator (FPC) and PIC slot.
Options	<p><b>fpc-slot <i>slot-number</i></b>—Display information about the PIC in this particular FPC slot:</p> <ul style="list-style-type: none"> <li>On a TX Matrix router, if you specify the number of the T640 router by using the <b>lcc <i>number</i></b> option (the recommended method), replace <b><i>slot-number</i></b> with a value from 0 through 7. Otherwise, replace <b><i>slot-number</i></b> with a value from 0 through 31.</li> </ul> <p>Likewise, on a TX Matrix Plus router, if you specify the number of the T1600 router by using the <b>lcc <i>number</i></b> option (the recommended method), replace <b><i>slot-number</i></b> with a value from 0 through 7. Otherwise, replace <b><i>slot-number</i></b> with a value from 0 through 31. For example, the following commands have the same result:</p> <pre> user@host&gt; show chassis pic fpc-slot 1 lcc 1 pic-slot 1 user@host&gt; show chassis pic fpc-slot 9 pic-slot 1 </pre> <ul style="list-style-type: none"> <li>M120 routers only—Replace <b><i>slot-number</i></b> with a value from 0 through 5.</li> </ul>



- MX80 routers only—Replace **slot-number** with a value from 0 through 1.
- MX104 routers only—Replace **slot-number** with a value from 0 through 2.
- MX240 routers only—Replace **slot-number** with a value from 0 through 2.
- MX480 routers only—Replace **slot-number** with a value from 0 through 5.
- MX960 routers only—Replace **slot-number** with a value from 0 through 11.
- MX2010 routers only—Replace **slot-number** with a value from 0 through 9.
- MX2020 routers only—Replace **slot-number** with a value from 0 through 19.
- MX2008 routers only—Replace **slot-number** with a value from 0 through 9.
- MX10003 routers only—Replace **slot-number** with a value from 0 through 1.
- Other routers—Replace **slot-number** with a value from 0 through 7.
- EX Series switches:
  - EX3200 switches and EX4200 standalone switches—Replace **slot-number** with 0.
  - EX4200 switches in a Virtual Chassis configuration—Replace **slot-number** with a value from 0 through 9 (switch's member ID).
  - EX8208 switches—Replace **slot-number** with a value from 0 through 7 (line card).
  - EX8216 switches—Replace **slot-number** with a value from 0 through 15 (line card).
- QFX Series:
  - QFX3500, QFX3600, QFX5100, and OCX Series standalone switches—Replace **slot-number** with 0. In the command output, FPC refers to a line card. The FPC number equals the slot number for the line card.
  - QFabric systems—Replace **slot-number** with any number between 0 and 15. In the command output, FPC refers to a line card. The FPC number equals the slot number for the line card.

**all-members**—(MX Series routers and EX Series switches only) (Optional) Display PIC information for all member routers in the Virtual Chassis configuration.

**interconnect-device name**—(QFabric systems only) (Optional) Display PIC information for a specified Interconnect device.

**lcc number**—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display PIC information for a specified T640 router (or line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display PIC information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.



Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers and EX Series switches only) (Optional) Display PIC information for the local Virtual Chassis member.

**member *member-id***—(MX Series routers and EX Series switches only) (Optional) Display PIC information for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**node-device *name***—(QFabric systems only) (Optional) Display PIC information for a specified Node device.

**pic-slot *slot-number***—Display information about the PIC in this particular PIC slot. For routers, replace *slot-number* with a value from 0 through 3. For EX3200 and EX4200 switches, replace *slot-number* with 0 for built-in network interfaces and 1 for interfaces on uplink modules. For EX8208 and EX8216 switches, replace *slot-number* with 0. For the QFX3500 standalone switch and the QFabric system, replace *slot-number* with 0 or 1.

**transport**—Display PIC information for optical transport network.

**Required Privilege Level**

view

**Related Documentation**

- [request chassis pic on page 134](#)
- [show chassis hardware on page 651](#)
- [100-Gigabit Ethernet Type 4 PIC with CFP Overview](#)

**List of Sample Output**

[show chassis pic fpc-slot pic-slot on page 712](#)  
[show chassis pic fpc-slot pic-slot \(PIC Offline\) on page 712](#)  
[show chassis pic fpc-slot pic-slot \(FPC Offline\) on page 713](#)  
[show chassis pic fpc-slot pic-slot \(FPC Not Present\) on page 713](#)  
[show chassis pic fpc-slot pic-slot \(PIC Not Present\) on page 713](#)  
[show chassis pic fpc-slot 3 pic-slot 0 \(M120 Router\) on page 713](#)  
[show chassis pic fpc-slot pic-slot \(MX150\) on page 713](#)  
[show chassis pic fpc-slot pic-slot \(MX104 Router\) on page 713](#)



[show chassis pic fpc-slot pic-slot \(MX960 Router with Bidirectional Optics\) on page 714](#)  
[show chassis pic fpc-slot pic-slot \(MX480 Router with 100-Gigabit Ethernet MIC\) on page 714](#)  
[show chassis pic fpc-slot pic-slot \(MX240, MX480, MX960 Routers with Application Services Modular Line Card\) on page 715](#)  
[show chassis pic fpc-slot pic-slot \(MX960 Router with MPC5EQ\) on page 715](#)  
[show chassis pic fpc-slot pic-slot \(MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC\) on page 715](#)  
[show chassis pic fpc-slot pic-slot on page 715](#)  
[show chassis pic fpc-slot pic-slot \(MX10003 Routers\) on page 716](#)  
[show chassis pic fpc-slot pic-slot \(MX204 Routers\) on page 717](#)  
[show chassis pic fpc-slot pic-slot \(PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC\) on page 717](#)  
[show chassis pic fpc-slot pic-slot \(MX480 Router with MPC4E\) on page 718](#)  
[show chassis pic fpc-slot pic-slot \(MX480 router with OTN Interface\) on page 718](#)  
[show chassis pic fpc-slot pic-slot \(MX2010 Router with OTN Interfaces\) on page 718](#)  
[show chassis pic fpc-slot pic-slot \(MX2010 Router\) on page 719](#)  
[show chassis pic fpc-slot pic-slot \(MX2020 Router\) on page 719](#)  
[show chassis pic fpc-slot pic-slot \(MX2020 Router with MPC5EQ and MPC6E\) on page 719](#)  
[show chassis pic fpc-slot pic-slot \(MX2020 Router with MPC6E and OTN MIC\) on page 720](#)  
[show chassis pic fpc-slot pic-slot \(MX2020 Router with MPC4E\) on page 720](#)  
[show chassis pic fpc-slot pic-slot \(MX2010 Router\) on page 721](#)  
[show chassis pic fpc-slot pic-slot \(T1600 Router with 100-Gigabit Ethernet PIC\) on page 721](#)  
[show chassis pic fpc-slot pic-slot lcc \(TX Matrix Router\) on page 721](#)  
[show chassis pic fpc-slot pic-slot lcc \(TX Matrix Plus Router\) on page 721](#)  
[show chassis pic fpc-slot pic-slot \(Next-Generation SONET/SDH SFP\) on page 722](#)  
[show chassis pic fpc-slot pic-slot \(12-Port T1/E1\) on page 722](#)  
[show chassis pic fpc-slot 0 pic-slot 1 \(4x CHOC3 SONET CE SFP\) on page 722](#)  
[show chassis pic fpc-slot 0 pic-slot 0 \(SONET/SDH OC3/STM1 \[Multi-Rate\] MIC with SFP\) on page 723](#)  
[show chassis pic fpc-slot 3 pic-slot 0 \(8-port Channelized SONET/SDH OC3/STM1 \[Multi-Rate\] MIC with SFP\) on page 723](#)  
[show chassis pic fpc-slot 5 pic-slot 0 \(4-port Channelized SONET/SDH OC3/STM1 \[Multi-Rate\] MIC with SFP\) on page 723](#)  
[show chassis pic fpc-slot 1 pic-slot 0 \(1-port OC192/STM64 MIC with XFP\) on page 723](#)  
[show chassis pic fpc-slot 1 pic-slot 2 \(8-port DS3/E3 MIC\) on page 724](#)  
[show chassis pic fpc-slot pic-slot \(OTN\) on page 724](#)  
[show chassis pic fpc-slot pic-slot \(QFX3500 Switch\) on page 724](#)  
[show chassis pic fpc-slot pic-slot \(QFX5100 Switches and OCX Series \) on page 724](#)  
[show chassis pic interconnect-device fpc-slot pic-slot \(QFabric Systems\) on page 724](#)  
[show chassis pic node-device fpc-slot pic-slot \(QFabric System\) on page 725](#)  
[show chassis pic fpc-slot 0 pic-slot 1 \(ACX2000 Universal Access Router\) on page 726](#)  
[show chassis pic FPC-slot 1 PIC-slot 0 \(MX Routers with Media Services Blade \[MSB\]\) on page 726](#)  
[show chassis pic FPC slot 1, PIC slot 2 \(MX Routers with Media Services Blade \[MSB\]\) on page 726](#)



[show chassis pic transport fpc-slot pic-slot \(PTX Series Packet Transport Routers\) on page 726](#)  
[show chassis pic transport fpc-slot pic-slot \(MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC\) on page 726](#)  
[show chassis pic fpc-slot 0 pic-slot 0 \(ACX5096 Router\) on page 726](#)  
[show chassis pic fpc-slot 0 pic-slot 0 \(ACX5048 Router\) on page 730](#)  
[show chassis pic fpc-slot 0 pic-slot 0 \(ACX500 Router\) on page 731](#)  
[show chassis pic fpc-slot 0 pic-slot 1 \(ACX500 Router\) on page 731](#)  
[show chassis pic transport fpc-slot pic-slot \(PTX Series Packet Transport Routers\) on page 731](#)  
[show chassis pic transport fpc-slot pic-slot \(MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC\) on page 731](#)  
[show chassis pic fpc-slot 7 pic-slot 1 \(MX960 Router MPC10E-15C-MRATE Line Card\) on page 731](#)

**Output Fields** Table 31 on page 710 lists the output fields for the **show chassis pic** command. Output fields are listed in the approximate order in which they appear.

*Table 31: show chassis pic Output Fields*

Field Name	Field Description
Type	<p>PIC type.</p> <p><b>NOTE:</b> On the 1-port OC192/STM64 MICs with the SDH framing mode, the type is displayed as <b>MIC-3D-1STM64-XFP</b> and with the SONET framing mode, the type is displayed as <b>MIC-3D-1OC192-XFP</b>. By default, the 1-port OC192/STM64 MICs displays the type as <b>MIC-3D-1OC192-XFP</b>.</p>
Account Layer2 Overhead	(MX Series routers) Indicates whether functionality to count the Layer 2 overhead bytes in the interface statistics at the PIC level is enabled or disabled.
ASIC type	Type of ASIC on the PIC.
State	<p>Status of the PIC. State is displayed only when a PIC is in the slot.</p> <ul style="list-style-type: none"> <li>• <b>Online</b>— PIC is online and running.</li> <li>• <b>Offline</b>—PIC is powered down.</li> <li>• <b>Empty</b>—No PIC is present.</li> <li>• <b>Present</b>—PIC is plugged in. The PIC is not powered on or operational.</li> <li>• <b>Onlining</b>—PIC is in the process of going online. PICs and rest of the hardware is initializing.</li> <li>• <b>Offlining</b>—PIC is in the process of going offline. PIC and rest of the hardware is being shutdown down to take the offline gracefully.</li> <li>• <b>Fault</b>—PIC is in an alarmed state and the PIC is not operational.</li> </ul>
PIC version	PIC hardware version.
Uptime	How long the PIC has been online.



Table 31: show chassis pic Output Fields (continued)

Field Name	Field Description
Package	(Multiservices PICs only) Services package supported: <b>Layer-2</b> or <b>Layer-3</b> .
Port Number	Port number for the PIC.
Cable Type	Type of cable connected to the port: <b>LH</b> , <b>LX</b> , or <b>SX</b> .
PIC Port Information (MX480 Router 100-Gigabit Ethernet CFP)	Port-level information for the PIC. <ul style="list-style-type: none"> <li>• Port—Port number</li> <li>• Cable type—Type of optical transceiver installed.</li> <li>• Fiber type—Type of fiber. SM is single-mode.</li> <li>• Xcvr vendor—Transceiver vendor name.</li> <li>• Xcvr vendor part number—Transceiver vendor part number.</li> <li>• Wavelength—Wavelength of the transmitted signal. Uplinks and downlinks are always 1550 nm. There is a separate fiber for each direction</li> <li>• Xcvr Firmware—Transceiver firmware version.</li> </ul>
PIC Port Information (MX960 Router Bidirectional Optics )	Port-level information for the PIC. <ul style="list-style-type: none"> <li>• Port—Port number</li> <li>• Cable type—Type of small form-factor pluggable (SFP) optical transceiver installed. Uplink interfaces display -U. Down link interfaces display -D.</li> <li>• Fiber type—Type of fiber. SM is single-mode.</li> <li>• Xcvr vendor—Transceiver vendor name.</li> <li>• Xcvr vendor part number—Transceiver vendor part number.               <ul style="list-style-type: none"> <li>• BX10-10-km bidirectional optics.</li> <li>• BX40-40-km bidirectional optics.</li> <li>• SFP-LX-40-km SFP optics.</li> </ul> </li> <li>• Wavelength—Wavelength of the transmitted signal. Uplinks are always 1310 nm. Downlinks are either 1490 nm or 1550 nm.</li> </ul>
PIC Port Information (Next-Generation SONET/SDH SFP)	Port-level information for the next-generation SONET/SDH SFP PIC. <ul style="list-style-type: none"> <li>• Port—Port number.</li> <li>• Cable type—Type of small form-factor pluggable (SFP) optical transceiver installed.</li> <li>• Fiber type—Type of fiber: <b>SM</b> (single-mode) or <b>MM</b> (multimode).</li> <li>• Xcvr vendor—Transceiver vendor name.</li> <li>• Xcvr vendor part number—Transceiver vendor part number.</li> <li>• Wavelength—Wavelength of the transmitted signal. Next-generation SONET/SDH SFPs use 1310 nm.</li> </ul>



Table 31: show chassis pic Output Fields (continued)

Field Name	Field Description
<b>PIC port information (MX104 router)</b>	Port-level information for the PIC. <ul style="list-style-type: none"> <li>Port—Port number</li> <li>Cable type—Type of optical transceiver installed.</li> <li>Fiber type—Type of fiber. SM is single-mode.</li> <li>Xcvr vendor—Transceiver vendor name.</li> <li>Xcvr vendor part number—Transceiver vendor part number.</li> <li>Wavelength—Wavelength of the transmitted signal.</li> <li>Xcvr Firmware—Firmware version of the transceiver.</li> </ul>
Port speed information	Information pertaining to port speed: <ul style="list-style-type: none"> <li>Port—Port number.</li> <li>PFE—Packet Forwarding Engine slot number.</li> <li>Capable Port Speed—Speed supported by each port.</li> </ul>
<b>Multirate Mode</b>	Rate-selectability status for the MIC: <b>Enabled</b> or <b>Disabled</b> .
<b>Channelization</b>	Indicates whether channelization is enabled or disabled on the DS3/E3 MIC.
<b>Administrative State</b>	Indicates the administrative state of the PIC. Possible values are: In Service (Default) and Out of Service.
<b>Operational State</b>	Indicates the operational state of the PIC. Possible values are: Normal and Fault.

## Sample Output

### show chassis pic fpc-slot pic-slot

```

user@host> show chassis pic fpc-slot 2 pic-slot 0
PIC fpc slot 2 pic slot 0 information:
  Type                10x 1GE(LAN), 1000 BASE
  ASIC type           H chip
  State               Online
  PIC version         1.1
  Uptime              1 day, 50 minutes, 58 seconds
PIC Port Information:
  Port      Cable      Xcvr      Xcvr Vendor
  Number    Type        Vendor Name  Part Number
  0         GIGE 1000EX  FINISAR CORP.  FTRJ8519P1BNL-J3
  1         GIGE 1000EX  FINISAR CORP.  FTRJ-8519-7D-JUN

```

### show chassis pic fpc-slot pic-slot (PIC Offline)

```

user@host> show chassis pic fpc-slot 1 pic-slot 0
PIC fpc slot 1 pic slot 0 information:
  State              Offline

```



**show chassis pic fpc-slot pic-slot (FPC Offline)**

```
user@host> show chassis pic fpc-slot 1 pic-slot 0
FPC 1 is not online
```

**show chassis pic fpc-slot pic-slot (FPC Not Present)**

```
user@host> show chassis pic fpc-slot 4 pic-slot 0
FPC slot 4 is empty
```

**show chassis pic fpc-slot pic-slot (PIC Not Present)**

```
user@host> show chassis pic fpc-slot 5 pic-slot 2
FPC 5, PIC 2 is empty
```

**show chassis pic fpc-slot 3 pic-slot 0 (M120 Router)**

```
user@host> show chassis pic fpc-slot 3 pic-slot 0
PC slot 3, PIC slot 0 information:
  Type                2x G/E IQ, 1000 BASE
  ASIC type           IQ GE 2 VLAN-TAG FPGA
  State               Online
  PIC version         1.16
  Uptime              3 hours, 3 minutes

PIC Port Information:
  Port      Cable      Xcvr      Xcvr Vendor
  Number    Type        Vendor Name  Part Number
  0         GIGE 1000SX  FINISAR CORP.  FTRJ8519P1BNL-J3
  1         GIGE 1000SX  FINISAR CORP.  FTRJ-8519-7D-JUN
```

**show chassis pic fpc-slot pic-slot (MX150)**

```
user@host> show chassis pic fpc-slot 0 pic-slot 0
FPC slot 0, PIC slot 0 information:
  Type                Virtual
  State               Online
  PIC version         0.0
  Uptime              7 days, 19 hours, 44 minutes, 40 seconds

PIC port information:
  Fiber      Xcvr vendor  Wave-  Xcvr
  Port Cable type  type  Xcvr vendor  part number  length
Firmware
  10  GIGE 1000T  n/a  Methode Elec.  SP7041-M1-JN  n/a  0.0
  11  GIGE 1000T  n/a  Methode Elec.  SP7041-M1-JN  n/a  0.0
```

**show chassis pic fpc-slot pic-slot (MX104 Router)**

```
user@host> show chassis pic fpc-slot 1 pic-slot 1
```



## FPC slot 1, PIC slot 1 information:

```

Type          10x 1GE(LAN) -E  SFP
State          Online
PIC version    1.1
Uptime        1 hour, 30 minutes, 59 seconds

```

## PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr part number	Wave-length	Xcvr
3	GIGE 1000T	n/a	Methode Elec.	SP7041-M1-JN	n/a	0.0
6	GIGE 1000LX10	SM	FINISAR CORP.	FTLF1318P2BTL-J1	1310 nm	0.0
8	GIGE 1000T	n/a	Methode Elec.	SP7041-M1-JN	n/a	0.0
9	GIGE 1000T	n/a	Methode Elec.	SP7041-M1-JN	n/a	0.0

**show chassis pic fpc-slot pic-slot (MX960 Router with Bidirectional Optics)**

```
user@host> show chassis pic fpc-slot 4 pic-slot 1
```

## FPC slot 4, PIC slot 1 information:

```

Type          10x 1GE(LAN)
Account Layer2 Overhead Enabled
State          Online
PIC version    0.0
Uptime        18 days, 5 hours, 41 minutes, 54 seconds

```

## PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr part number	Wavelength
0	SFP-1000BASE-BX10-D	SM	SumitomoElectric	SBP6H44-J3-BW-49	1490 nm
1	SFP-1000BASE-BX10-D	SM	SumitomoElectric	SBP6H44-J3-BW-49	1490 nm
2	SFP-1000BASE-BX10-D	SM	SumitomoElectric	SBP6H44-J3-BW-49	1490 nm
3	SFP-1000BASE-BX10-D	SM	OCP	TRXBG1LXDBVM2-JW	1490 nm
4	SFP-1000BASE-BX10-D	SM	OCP	TRXBG1LXDBVM2-JW	1490 nm
5	SFP-1000BASE-BX10-U	SM	SumitomoElectric	SBP6H44-J3-BW-31	1310 nm
6	SFP-1000BASE-BX10-U	SM	SumitomoElectric	SBP6H44-J3-BW-31	1310 nm
7	SFP-1000BASE-BX10-U	SM	OCP	TRXBG1LXDBBMH-J1	1310 nm
8	SFP-1000BASE-BX10-U	SM	OCP	TRXBG1LXDBBMH-J1	1310 nm
9	SFP-1000BASE-BX10-U	SM	SumitomoElectric	SBP6H44-J3-BW-31	1310 nm

**show chassis pic fpc-slot pic-slot (MX480 Router with 100-Gigabit Ethernet MIC)**

```
user@host> show chassis pic fpc-slot 1 pic-slot 2
```

## FPC slot 1, PIC slot 2 information:

```

Type          1X100GE CFP
State          Online
PIC version    2.10
Uptime        4 minutes, 48 seconds

```

## PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr part number	Wavelength
0	100GBASE LR4	SM	FINISAR CORP.	FTLC1181RDN5-J3	1310 nm



```
Xcvr vendor
firmware version
1.8
```

### show chassis pic fpc-slot pic-slot (MX240, MX480, MX960 Routers with Application Services Modular Line Card)

```
user@host> show chassis pic fpc-slot 1 pic-slot 2
```

```
FPC slot 1, PIC slot 2 information:
```

```
Type           AS-MXC
State           Online
PIC version     1.0
Uptime          11 hours, 18 minutes, 3 seconds
```

### show chassis pic fpc-slot pic-slot (MX960 Router with MPC5EQ)

```
user@host> show chassis pic fpc-slot 0 pic-slot 3
```

```
FPC slot 0, PIC slot 3 information:
```

```
Type           1X100GE CFP2 OTN
State           Online
PIC version     0.0
Uptime          1 hour, 22 minutes, 42 seconds
```

```
PIC port information:
```

	Fiber	Xcvr vendor	Wave-	Xcvr
Port Cable type	type	Xcvr vendor	part number	length
Firmware				
0	100GBASE LR4	n/a	Oclaro Inc.	TRB5E20FNF-LF150 1309 nm 1.0

### show chassis pic fpc-slot pic-slot (MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC)

```
user@host> show chassis pic fpc-slot 3 pic-slot 0
```

```
FPC slot 3, PIC slot 0 information:
```

```
Type           1X100GE DWDM CFP2-ACO
State           Online
PIC version     1.3
Uptime          9 hours, 4 minutes, 43 seconds
```

```
PIC port information:
```

	Fiber	Xcvr vendor	Wave-	Xcvr
Port Cable type	type	Xcvr vendor	part number	length
Firmware				
0	100G LH	SM	OCLARO	TRB100AJ-01 1528.77 nm -
	1568.36 nm	20.10		

### show chassis pic fpc-slot pic-slot

```
user@host> show chassis pic fpc-slot 1 pic-slot 1
```

```
FPC slot 1, PIC slot 1 information:
```

```
Type           MIC1-MACSEC
```



State			Online					
PIC version			1.5					
Uptime			2 hours, 52 minutes, 1 second					
PIC port information:								
			Fiber		Xcvr vendor		Wave-	Xcvr
Port	Cable type		type	Xcvr vendor	part number	length		
Firmware								
8	40GBASE SR4		MM	AVAGO	AFBR-79EQDZ-JU2	850 nm	0.0	
10	40GBASE SR4		MM	AVAGO	AFBR-79EQDZ-JU2	850 nm	0.0	
Port speed information:								
Port	PFE	Capable	Port Speeds					
0	0	4x10GE,	40GE, 100GE					
1	0	4x10GE,	40GE, 100GE					
2	0	4x10GE,	40GE, 100GE					
3	0	4x10GE,	40GE, 100GE					
4	0	4x10GE,	40GE, 100GE					
5	0	4x10GE,	40GE, 100GE					
6	0	4x10GE,	40GE, 100GE					
7	0	4x10GE,	40GE, 100GE					
8	0	4x10GE,	40GE, 100GE					
9	0	4x10GE,	40GE, 100GE					
10	0	4x10GE,	40GE, 100GE					
11	0	4x10GE,	40GE, 100GE					

### show chassis pic fpc-slot pic-slot (MX10003 Routers)

```
user@host > show chassis pic fpc-slot 0 pic-slot 0
```

FPC slot 0, PIC slot 1 information:							
Type				MIC1			
State				Online			
PIC version				1.5			
Uptime				13 hours, 54 minutes, 33 seconds			
PIC port information:							
			Fiber		Xcvr vendor	Wave-	Xcvr
Port	Cable type		type	Xcvr vendor	part number	length	
Firmware							
0	40GBASE SR4		MM	AVAGO	AFBR-79EQDZ-JU2	850 nm	0.0
11	40GBASE SR4		MM	AVAGO	AFBR-79EQDZ-JU2	850 nm	0.0
Port speed information:							
Port	PFE	Capable	Port Speeds				
0	0	4x10GE,	40GE, 100GE				
1	0	4x10GE,	40GE, 100GE				
2	0	4x10GE,	40GE, 100GE				
3	0	4x10GE,	40GE, 100GE				
4	1	4x10GE,	40GE, 100GE				
5	1	4x10GE,	40GE, 100GE				
6	1	4x10GE,	40GE, 100GE				
7	1	4x10GE,	40GE, 100GE				



```

8      2      4x10GE, 40GE, 100GE
9      2      4x10GE, 40GE, 100GE
10     2      4x10GE, 40GE, 100GE
11     2      4x10GE, 40GE, 100GE

```

### show chassis pic fpc-slot pic-slot (MX204 Routers)

```
user@host > show chassis pic fpc-slot 0 pic-slot 0
```

FPC slot 0, PIC slot 0 information:

```

Type          4XQSP28 PIC
State         Online
PIC version    0.0
Uptime        2 days, 7 hours, 6 minutes, 10 seconds

```

PIC port information:

JNPR			Fiber	Xcvr vendor	Wave-	Xcvr
Port	Cable type	type	Xcvr vendor	part number	length	
Firmware	Rev					
0	100GBASE SR4 REV 01	MM	JUNIPER-FINISAR	FTLC9551REPM-J1	850 nm	0.0
1	4X10GBASE SR REV 01	MM	AVAGO	AFBR-79EEPZ-JU2	850 nm	0.0
2	100GBASE LR4 REV 01	SM	JUNIPER-FINISAR	FTLC1151RDPL-J3	1302 nm	0.0
3	100GBASE LR4 REV 01	SM	JUNIPER-FINISAR	FTLC1151RDPL-J3	1302 nm	0.0

Port speed information:

Port	PFE	Capable	Port Speeds
0	0	4x10GE, 40GE, 100GE	
1	0	4x10GE, 40GE, 100GE	
2	0	4x10GE, 40GE, 100GE	
3	0	4x10GE, 40GE, 100GE	

### show chassis pic fpc-slot pic-slot (PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC)

```
user@host > show chassis pic fpc-slot 4 pic-slot 0
```

FPC slot 4, PIC slot 0 information:

```

Type          5X100GE DWDM CFP2-ACO
State         Online
PIC version    1.17
Uptime        1 day, 5 hours, 15 minutes, 17 seconds

```

PIC port information:

JNPR			Fiber	Xcvr vendor	Wave-	Xcvr
Port	Cable type	type	Xcvr vendor	part number	length	
Firmware	Rev					
0	100G LH 1568.36 nm 1.0	SM	MULTILANE SAL	ML4030-ACO-2	1528.77 nm	-
1	100G LH 1568.36 nm 1.0	SM	MULTILANE SAL	ML4030-ACO-2	1528.77 nm	-
2	100G LH 1568.36 nm 1.16	SM	JUNIPER-FUJITSU	FIM38500/222	1528.77 nm	-



```

3    100G LH          SM    FUJITSU          FIM38500/222    1528.77 nm -
1568.36 nm 1.16
4    100G LH          SM    FUJITSU          FIM38500/222    1528.77 nm -
1568.36 nm 1.16

```

### show chassis pic fpc-slot pic-slot (MX480 Router with MPC4E)

```
user@host> show chassis pic fpc-slot 3 pic-slot 0
```

```
FPC slot 3, PIC slot 0 information:
```

```

Type          4x10GE SFPP
State          Online
PIC version    0.0
Uptime        41 seconds

```

```
PIC port information:
```

		Fiber	Xcvr vendor	Wave-	Xcvr
Port	Cable type	type	Xcvr vendor	part number	length
Firmware					
0	10GBASE SR	MM	OPNEXT, INC.	TRS2001EM-0014	850 nm 0.0
1	10GBASE SR	MM	OPNEXT, INC.	TRS2001EM-0014	850 nm 0.0

### show chassis pic fpc-slot pic-slot (MX480 router with OTN Interface)

```
user@host> show chassis pci fpc-slot 4 pic-slot 0
```

```
FPC slot 4, PIC slot 0 information:
```

```

Type          12X10GE SFPP OTN
State          Online
PIC version    0.0
Uptime        5 hours, 28 minutes, 23 seconds

```

```
PIC port information:
```

		Fiber	Xcvr vendor	Wave-	Xcvr
Port	Cable type	type	Xcvr vendor	part number	length
Firmware					
0	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1	850 nm 0.0
1	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm 0.0
2	10GBASE SR	MM	OPNEXT, INC.	TRS2001EM-0014	850 nm 0.0

### show chassis pic fpc-slot pic-slot (MX2010 Router with OTN Interfaces)

```
user@host> show chassis pic fpc-slot 9 pic-slot 0
```

```
FPC slot 9, PIC slot 0 information:
```

```

Type          2X100GE CFP2 OTN
State          Online
PIC version    1.9
Uptime        3 hours, 56 minutes, 16 seconds

```

```
PIC port information:
```

Fiber	Xcvr vendor	Wave-	Xcvr
-------	-------------	-------	------



Port	Cable type	type	Xcvr vendor	part number	length	
Firmware						
0	100GBASE LR4-D	SM	FUJITSU	FIM37300/222	1310 nm	1.3
1	100GBASE SR10	MM	AVAGO	AFBR-8420Z	n/a	1.0

### show chassis pic fpc-slot pic-slot (MX2010 Router)

```
user@host> show chassis pic fpc-slot 9 pic-slot 3
```

FPC slot 9, PIC slot 3 information:

```
Type                1X100GE CFP
Account Layer2 Overhead Enabled
State                Online
PIC version          0.0
Uptime               14 hours, 51 seconds
```

### show chassis pic fpc-slot pic-slot (MX2020 Router)

```
user@host> show chassis pic fpc-slot 19 pic-slot 3
```

FPC slot 19, PIC slot 3 information:

```
Type                4x 10GE(LAN) SFP+
Account Layer2 Overhead Enabled
State                Online
PIC version          0.0
Uptime               1 day, 11 hours, 26 minutes, 36 seconds
```

PIC port information:

		Fiber		Xcvr vendor	Wave-	Xcvr
Port	Cable type	type	Xcvr vendor	part number	length	
Firmware						
0	10GBASE SR	MM	SumitomoElectric	SPP5200SR-J6-M	850 nm	0.0
1	10GBASE SR	MM	SumitomoElectric	SPP5200SR-J6-M	850 nm	0.0
2	10GBASE SR	MM	SumitomoElectric	SPP5200SR-J6-M	850 nm	0.0
3	10GBASE SR	MM	SumitomoElectric	SPP5200SR-J6-M	850 nm	0.0

### show chassis pic fpc-slot pic-slot (MX2020 Router with MPC5EQ and MPC6E)

```
user@host> show chassis pic fpc-slot 18 pic-slot 2
```

FPC slot 18, PIC slot 2 information:

```
Type                3X40GE QSFP
State                Online
PIC version          0.0
Uptime               6 minutes, 31 seconds
```

PIC port information:

		Fiber		Xcvr vendor	Wave-	Xcvr
Port	Cable type	type	Xcvr vendor	part number	length	
Firmware						
0	40GBASE SR4	MM	AVAGO	AFBR-79E4Z-D-JU2	850 nm	0.0



1	40GBASE SR4	MM	AVAGO	AFBR-79E4Z-D-JU2	850 nm	0.0
2	40GBASE SR4	MM	AVAGO	AFBR-79E4Z-D-JU2	850 nm	0.0

### show chassis pic fpc-slot pic-slot (MX2020 Router with MPC6E and OTN MIC)

```
user@host> show chassis pic fpc-slot 3 pic-slot 0
```

FPC slot 0, PIC slot 1 information:

```
Type          24X10GE SFPP OTN
State          Online
PIC version    1.1
Uptime        1 hour, 33 minutes, 59 seconds
```

PIC port information:

		Fiber		Xcvr vendor		Wave-	Xcvr
Port	Cable type	type	Xcvr vendor	part number	length		
Firmware							
7	10GBASE SR	MM	SumitomoElectric	SPP5200SR-J6-M	850 nm	0.0	
9	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1	850 nm	0.0	
12	10GBASE LR	SM	FINISAR CORP.	FTLX1472M3BNL-J3	1310 nm	0.0	
20	10GBASE ZR	SM	FINISAR CORP.	FTLX1871M3BNL-J3	1550 nm	0.0	
21	10GBASE ER	SM	FINISAR CORP.	FTLX1671D3BTL-J4	1550 nm	0.0	
22	10GBASE LR	SM	SOURCEPHOTONICS	SPP10SLREDFCJNP	1310 nm	0.0	
23	10GBASE LR	SM	FINISAR CORP.	FTLX1471D3BNL-J1	1310 nm	0.0	

### show chassis pic fpc-slot pic-slot (MX2020 Router with MPC4E)

```
user@host> show chassis pic fpc-slot 14 pic-slot 0
```

FPC slot 14, PIC slot 2 information:

```
Type          4x10GE SFPP
State          Online
PIC version    0.0
Uptime        1 day, 14 hours, 49 minutes, 9 seconds
```

PIC port information:

		Fiber		Xcvr vendor		Wave-	Xcvr
Port	Cable type	type	Xcvr vendor	part number	length		
Firmware							
0	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3	850 nm	0.0	
1	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3	850 nm	0.0	
3	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3	850 nm	0.0	



**show chassis pic fpc-slot pic-slot (MX2010 Router)**

```

user@host> show chassis pic fpc-slot 9 pic-slot 3
FPC slot 9, PIC slot 3 information:
  Type           1X100GE CFP
  Account Layer2 Overhead  Enabled
  State          Online
  PIC version    0.0
  Uptime        14 hours, 51 seconds

```

**show chassis pic fpc-slot pic-slot (T1600 Router with 100-Gigabit Ethernet PIC)**

```

user@host> run show chassis pic fpc-slot 3 pic-slot 1
FPC slot 3, PIC slot 1 information:
  Type           100GE SLOT1
  ASIC type      Brooklyn 100GE FPGA
  State          Online
  PIC version    1.3
  Uptime        10 minutes, 44 seconds

PIC port information:

```

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
0	100GBASE LR4	SM	Opnext Inc.	TRC5E20ENFSF000F	1310 nm

**show chassis pic fpc-slot pic-slot lcc (TX Matrix Router)**

```

user@host> show chassis pic fpc-slot 1 pic-slot 1 lcc 0
lcc0-re0:
-----
PIC fpc slot 1 pic slot 1 information:
  Type           4x OC-3 SONET, SMIR
  ASIC type      D chip
  State          Online
  PIC version    1.2
  Uptime        5 days, 2 hours, 12 minutes, 8 seconds

```

**show chassis pic fpc-slot pic-slot lcc (TX Matrix Plus Router)**

```

user@host> show chassis pic pic-slot 0 fpc-slot 8
lcc0-re0:
-----
FPC slot 8, PIC slot 0 information:
  Type           1x 10GE(LAN/WAN)
  State          Online
  Uptime        2 hours, 46 minutes, 23 seconds

PIC port information:

```

Port	Cable type	Fiber type	Xcvr vendor	part number	Wavelength
0	10GBASE ZR	SM	Opnext Inc.	TRF7061BN-LF150	1550 nm
0	10GBASE ZR	SM	FINISAR CORP.	FTRX-1811-3-J2	1550 nm



**show chassis pic fpc-slot pic-slot (Next-Generation SONET/SDH SFP)**

```
user@host> show chassis pic fpc-slot 4 pic-slot 0
```

```
FPC slot 4, PIC slot 0 information:
```

```
Type                4x OC-3 1x OC-12 SFP
ASIC type            D FPGA
State                Online
PIC version          1.3
Uptime               1 day, 50 minutes, 4 seconds
```

```
PIC port information:
```

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
0	OC48 short reach	SM	FINISAR CORP.	FTRJ1321P1BTL-J2	1310 nm
1	OC3 short reach	MM	OCF	TRPA03MM3BAS-JE	1310 nm
2	OC3 short reach	MM	OCF	TRXA03MM3BAS-JW	1310 nm
3	OC12 inter reach	SM	FINISAR CORP.	FTLF1322P1BTR	1310 nm

**show chassis pic fpc-slot pic-slot (12-Port T1/E1)**

```
user@host> show chassis pic fpc-slot 0 pic-slot 3
```

```
FPC slot 0, PIC slot 3 information:
```

```
Type                12x T1/E1 CE
State                Online
PIC version          1.1
CPU load average     1 percent
Interrupt load average 0 percent
Total DRAM size      128 MB
Memory buffer utilization 100 percent
Memory heap utilization 4 percent
Uptime               1 day, 22 hours, 28 minutes, 12 seconds
Internal Clock Synchronization Normal
```

**show chassis pic fpc-slot 0 pic-slot 1 (4x CHOC3 SONET CE SFP)**

```
user@host> show chassis pic fpc-slot 0 pic-slot 1
```

```
FPC slot 0, PIC slot 1 information:
```

```
Type                4x CHOC3 SONET CE SFP
State                Online
PIC version          1.3
CPU load average     1 percent
Interrupt load average 0 percent
Total DRAM size      128 MB
Memory buffer utilization 99 percent
Memory heap utilization 4 percent
Uptime               1 day, 22 hours, 55 minutes, 37 seconds
Internal Clock Synchronization Normal
```

```
PIC port information:
```

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
0	OC3 short reach	MM	AVAGO	HFBR-57E0P-JU2	n/a
1	OC3 short reach	MM	AVAGO	HFBR-57E0P-JU2	n/a
3	OC3 long reach	SM	OPNEX INC	TRF5456AVLB314	1310 nm



**show chassis pic fpc-slot 0 pic-slot 0 (SONET/SDH OC3/STM1 [Multi-Rate] MIC with SFP)**

```

user@host> show chassis pic fpc-slot 0 pic-slot 0

FPC slot 0, PIC slot 0 information:
  Type          MIC-3D-80C30C12-40C48
  State          Online
  PIC version    1.8
  Uptime        3 days, 22 hours, 3 minutes, 50 seconds

PIC port information:
  Port  Cable type      Fiber  Xcvr vendor      Xcvr vendor      Wavelength
      type              type  part number
  1    OC12 inter reach SM    FINISAR CORP     FTRJ1322P1BTR-J3 1310 nm
  7    OC12 inter reach SM    FINISAR CORP     FTRJ1322P1BTR-J3 1310 nm
Multirate Mode                      Enabled

```

**show chassis pic fpc-slot 3 pic-slot 0 (8-port Channelized SONET/SDH OC3/STM1 [Multi-Rate] MIC with SFP)**

```

user@host> show chassis pic fpc-slot 3 pic-slot 0

FPC slot 3, PIC slot 0 information:
  Type          MIC-3D-8CHOC3-4CHOC12
  State          Online
  PIC version    1.9
  Uptime        1 hour, 21 minutes, 24 seconds

PIC port information:
  Port  Cable type      Fiber  Xcvr vendor      Xcvr vendor      Wavelength
      type              type  part number
  0    OC12 short reach SM    FINISAR CORP.    FTRJ1322P1BTR-J3 1310 nm
  1    OC12 short reach SM    FINISAR CORP.    FTRJ1322P1BTR-J3 1310 nm
  2    OC12 inter reach SM    FINISAR CORP.    FTRJ1322P1BTR-J2 1310 nm
  4    OC12 short reach SM    FINISAR CORP.    FTRJ1322P1BTR-J3 1310 nm
  5    OC12 short reach SM    FINISAR CORP.    FTRJ1322P1BTR-J3 1310 nm
  6    OC12 short reach SM    FINISAR CORP.    FTRJ1322P1BTR-J3 1310 nm
  7    OC12 short reach SM    FINISAR CORP.    FTRJ1322P1BTR-J3 1310 nm

```

**show chassis pic fpc-slot 5 pic-slot 0 (4-port Channelized SONET/SDH OC3/STM1 [Multi-Rate] MIC with SFP)**

```

user@host> show chassis pic fpc-slot 5 pic-slot 0

FPC slot 5, PIC slot 0 information:
  Type          MIC-3D-4CHOC3-2CHOC12
  State          Online
  PIC version    1.9
  Uptime        1 hour, 21 minutes

PIC port information:
  Port  Cable type      Fiber  Xcvr vendor      Xcvr vendor      Wavelength
      type              type  part number
  1    OC12 inter reach SM    FINISAR CORP.    FTRJ1322P1BTR-J3 1310 nm
  2    OC12 inter reach SM    FINISAR CORP.    FTRJ1322P1BTR-J3 1310 nm
  3    OC12 short reach SM    FINISAR CORP.    FTRJ1322P1BTR-J3 1310 nm

```

**show chassis pic fpc-slot 1 pic-slot 0 (1-port OC192/STM64 MIC with XFP)**

```

user@host> show chassis pic fpc-slot 1 pic-slot 0

```



FPC slot 1, PIC slot 0 information:

Type	MIC-3D-10C192-XFP
State	Online
PIC version	1.2
Uptime	1 day, 11 hours, 4 minutes, 6 seconds

PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
0	OC192 short reach	n/a	FINISAR CORP.	FTLX1412M3BCL-J3	1310 nm

### show chassis pic fpc-slot 1 pic-slot 2 (8-port DS3/E3 MIC)

user@host> show chassis pic fpc-slot 1 pic-slot 2

FPC slot 1, PIC slot 2 information:

Type	MIC-3D-8DS3-E3
State	Online
PIC version	1.10
Uptime	4 days, 1 hour, 29 minutes, 19 seconds
Channelization Mode	Disabled

### show chassis pic fpc-slot pic-slot (OTN)

user@host> show chassis pic fpc-slot 5 pic-slot 0

PIC fpc slot 5 pic slot 0 information:

Type	1x10GE(LAN),OTN
ASIC type	H chip
State	Online
PIC version	1.0
Uptime	5 minutes, 50 seconds

### show chassis pic fpc-slot pic-slot (QFX3500 Switch)

user@switch> show chassis pic fpc-slot 0 pic-slot 0

FPC slot 0, PIC slot 0 information:

Type	48x 10G-SFP+ Builtin
State	Online
Uptime	3 days, 3 hours, 5 minutes, 20 seconds

### show chassis pic fpc-slot pic-slot (QFX5100 Switches and OCX Series )

user@switch> show chassis pic fpc-slot 0 pic-slot 0

FPC slot 0, PIC slot 0 information:

Type	Unknown Builtin
State	Online
Uptime	1 day, 17 hours, 5 minutes, 9 seconds

### show chassis pic interconnect-device fpc-slot pic-slot (QFabric Systems)

user@switch> show chassis pic interconnect-device interconnect1 fpc-slot 9 pic-slot 0

FPC slot 9, PIC slot 0 information:

Type	16x 40G-GE Builtin
------	--------------------



State	Online
Uptime	2 hours, 47 minutes, 40 seconds

### show chassis pic node-device fpc-slot pic-slot (QFabric System)

```
user@switch> show chassis pic node-device node1 pic-slot 0
```

FPC slot node1, PIC slot 0 information:

Type	48x 10G-SFP+Built-in
State	Online
Uptime	2 hours, 52 minutes, 37 seconds

PIC port information:

Port	Cable type	Fiber type	Xcvr vendor	Xcvr vendor part number	Wavelength
0	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
1	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
2	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
3	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
4	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
5	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
6	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
7	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
8	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
9	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
10	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
11	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
12	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
13	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
14	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
15	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
16	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
17	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
18	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
19	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
20	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
21	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
22	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
23	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
24	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
25	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
26	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
27	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
28	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
29	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
30	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
31	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
32	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
33	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
34	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
35	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
36	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
37	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
38	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
39	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
40	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
41	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
42	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
43	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
44	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm



45	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
46	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm
47	10GBASE SR	MM	SumitomoElectric	SPP5101SR-J3	850 nm

### show chassis pic fpc-slot 0 pic-slot 1 (ACX2000 Universal Access Router)

```
user@host> show chassis pic fpc-slot 0 pic-slot 1
```

FPC slot 0, PIC slot 1 information:

Type	8x 1GE(LAN) RJ45 Built-in
State	Online
Uptime	6 days, 2 hours, 51 minutes, 11 seconds

### show chassis pic FPC-slot 1 PIC-slot 0 (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis pic fpc-slot 1 pic-slot 0
```

FPC slot 1, PIC slot 0 information:

Type	AS-MSB
State	Online
PIC version	1.6
Uptime	11 hours, 17 minutes, 56 seconds

### show chassis pic FPC slot 1, PIC slot 2 (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis pic fpc-slot 1 pic-slot 2
```

Type	AS-MXC
State	Online
PIC version	1.0
Uptime	11 hours, 18 minutes, 3 seconds

### show chassis pic transport fpc-slot pic-slot (PTX Series Packet Transport Routers)

```
user@host> show chassis pic transport fpc-slot 2 pic-slot 0
```

Administrative State:	In Service
Operational State:	Normal

### show chassis pic transport fpc-slot pic-slot (MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC)

```
user@host> show chassis pic transport fpc-slot 3 pic-slot 0
```

Administrative State:	In Service
Operational State:	Normal

### show chassis pic fpc-slot 0 pic-slot 0 (ACX5096 Router)

```
user@host> show chassis pic fpc-slot 0 pic-slot 0
```

FPC slot 0, PIC slot 0 information:

Type	96x10G-8x40G
State	Online
PIC version	2.9
Uptime	21 hours, 28 minutes, 13 seconds



PIC port information:							
Port Firmware	Cable type	Fiber		Xcvr vendor		Wave-	Xcvr
		type	Xcvr vendor	part number		length	
0	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1		850 nm	0.0
1	10GBASE LR	SM	FINISAR CORP.	FTLX1471D3BCL-J1		1310 nm	0.0
3	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0
4	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3		850 nm	0.0
5	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0
6	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0
7	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0
8	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0
9	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0
10	10GBASE SR	MM	OPNEXT, INC.	TRS2001EN-0014		850 nm	0.0
11	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3		850 nm	0.0
12	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0
13	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1		850 nm	0.0
14	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3		850 nm	0.0
15	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0
16	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0
17	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0
18	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1		850 nm	0.0
19	10GBASE LR	SM	FINISAR CORP.	FTLX1471D3BCL-J1		1310 nm	0.0
20	10GBASE LR	SM	FINISAR CORP.	FTLX1471D3BNL-J1		1310 nm	0.0
21	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3		850 nm	0.0
22	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0
23	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3		850 nm	0.0
24	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1		850 nm	0.0
25	10GBASE USR	MM	FINISAR CORP.	FTLX8570D3BCL-J1		850 nm	0.0
26	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0
27	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1		850 nm	0.0
28	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1		850 nm	0.0



29	GIGE 1000SX	MM	FINISAR CORP.	FTLF8519P3BNL-J1	850 nm	0.0
31	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1	850 nm	0.0
32	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3	850 nm	0.0
33	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
34	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3	850 nm	0.0
35	10GBASE USR	MM	FINISAR CORP.	FTLX8570D3BCL-J1	850 nm	0.0
36	10GBASE USR	MM	FINISAR CORP.	FTLX8570D3BCL-J1	850 nm	0.0
37	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1	850 nm	0.0
38	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
40	GIGE 1000LX10	SM	FINISAR CORP.	FTLF1318P2BTL-J1	1310 nm	0.0
41	10GBASE LR	SM	OPNEXT, INC	TRS5021EN-S201	1310 nm	0.0
42	10GBASE LR	SM	FINISAR CORP.	FTLX1471D3BCL-J1	1310 nm	0.0
43	10GBASE LR	SM	SumitomoElectric	SPP5100LR-J3	1310 nm	0.0
44	10GBASE LR	SM	SumitomoElectric	SPP5100LR-J3	1310 nm	0.0
45	10GBASE LR	SM	FINISAR CORP.	FTLX1471D3BCL-J1	1310 nm	0.0
46	10GBASE LR	SM	FINISAR CORP.	FTLX1471D3BCL-J1	1310 nm	0.0
47	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1	850 nm	0.0
48	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3	850 nm	0.0
49	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1	850 nm	0.0
50	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1	850 nm	0.0
51	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
52	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
53	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
54	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
55	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
56	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
57	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
58	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
59	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
60	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0



61	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
62	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
63	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
64	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
65	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
66	10GBASE SR	MM	SumitomoElectric	SPP5200SR-J6-M	850 nm	0.0
67	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
68	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
69	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
70	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
71	10GBASE LR	SM	FINISAR CORP.	FTLX1471D3BNL-J1	1310 nm	0.0
72	10GBASE LR	SM	FINISAR CORP.	FTLX1471D3BCL-J1	1310 nm	0.0
73	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
74	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
75	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
76	10GBASE SR	MM	SumitomoElectric	SPP5100SR-J3	850 nm	0.0
77	10GBASE USR	MM	OPNEXT, INC.	TRS20A0EN-0014	850 nm	0.0
78	10GBASE USR	MM	OPNEXT, INC.	TRS20A0EN-0014	850 nm	0.0
79	10GBASE LRM	MM	OPNEXT INC	TRS5001EN-0014	1310 nm	0.0
80	10GBASE LRM	MM	OPNEXT INC	TRS5001EN-0014	1310 nm	0.0
81	10GBASE USR	MM	OPNEXT, INC.	TRS20A0EN-0014	850 nm	0.0
82	10GBASE USR	MM	OPNEXT, INC.	TRS20A0EN-0014	850 nm	0.0
83	10GBASE USR	MM	OPNEXT, INC.	TRS20A0EN-0014	850 nm	0.0
84	10GBASE USR	MM	OPNEXT, INC.	TRS20A0EN-0014	850 nm	0.0
85	10GBASE LR	SM	OPNEXT, INC	TRS5021EN-S201	1310 nm	0.0
86	10GBASE ER	SM	OPNEXT, INC	TRS7050EN-S201	1550 nm	0.0
87	10GBASE LRM	MM	OPNEXT INC	TRS5001EN-0014	1310 nm	0.0
88	10GBASE LRM	MM	OPNEXT INC	TRS5001EN-0014	1310 nm	0.0
89	10GBASE LRM	MM	OPNEXT INC	TRS5001EN-0014	1310 nm	0.0
90	10GBASE LRM	MM	OPNEXT INC	TRS5001EN-0014	1310 nm	0.0



91	10GBASE	USR	MM	FINISAR CORP.	FTLX8570D3BCL-J1	850 nm	0.0
92	10GBASE	USR	MM	FINISAR CORP.	FTLX8570D3BCL-J1	850 nm	0.0
93	10GBASE	LR	SM	SumitomoElectric	SPP5100LR-J3	1310 nm	0.0
94	10GBASE	LR	SM	FINISAR CORP.	FTLX1471D3BNL-J1	1310 nm	0.0
95	10GBASE	SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1	850 nm	0.0
96	40GBASE	SR4	MM	AVAGO	AFBR-79E4Z-D-JU1	850 nm	0.0
97	40GBASE	SR4	MM	AVAGO	AFBR-79E4Z-D-JU1	850 nm	0.0
98	40GBASE	SR4	MM	AVAGO	AFBR-79EQDZ-JU1	850 nm	0.0
99	40GBASE	SR4	MM	AVAGO	AFBR-79EQDZ-JU1	850 nm	0.0
100	40GBASE	CU 1M	n/a	Molex Inc.	1110409055	n/a	0.0
101	40GBASE	CU 1M	n/a	Molex Inc.	1110409055	n/a	0.0
102	40GBASE	CU 1M	n/a	Molex Inc.	1110409055	n/a	0.0
103	40GBASE	CU 1M	n/a	Molex Inc.	1110409055	n/a	0.0

### show chassis pic fpc-slot 0 pic-slot 0 (ACX5048 Router)

```
user@host> show chassis pic fpc-slot 0 pic-slot 0
```

FPC slot 0, PIC slot 0 information:

```

Type          96x10G-8x40G
State          Online
PIC version    2.9
Uptime        1 day, 5 hours, 27 minutes, 25 seconds

```

PIC port information:

		Fiber		Xcvr vendor	Wave-	Xcvr
Port	Cable type	type	Xcvr vendor	part number	length	
0	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
10	GIGE 1000SX	MM	FINISAR CORP.	FTLF8519P3BNL-J1	850 nm	0.0
14	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1	850 nm	0.0
20	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BCL-J1	850 nm	0.0
30	GIGE 1000SX	MM	FINISAR CORP.	FTLF8519P2BNL-J1	850 nm	0.0
41	10GBASE SR	MM	OPNEXT, INC.	TRS2001EN-0014	850 nm	0.0
46	GIGE 1000SX	MM	FINISAR CORP.	FTLF8519P2BNL-J1	850 nm	0.0
64	10GBASE SR	MM	FINISAR CORP.	FTLX8571D3BNL-J1	850 nm	0.0



78	GIGE 1000SX	MM	AVAGO	AFBR-5715PZ-JU2	850 nm	0.0
96	40GBASE SR4	MM	AVAGO	AFBR-79EQDZ-JU1	850 nm	0.0
99	40GBASE SR4	MM	AVAGO	AFBR-79EQDZ-JU1	850 nm	0.0
100	40GBASE SR4	MM	AVAGO	AFBR-79EQDZ-JU1	850 nm	0.0

### show chassis pic fpc-slot 0 pic-slot 0 (ACX500 Router)

```
user@host> show chassis pic fpc-slot 0 pic-slot 0
```

FPC slot 0, PIC slot 0 information:

```
Type                2x 1GE(LAN) SFP Builtin
State                Online
Uptime              17 hours, 54 minutes, 45 seconds
```

### show chassis pic fpc-slot 0 pic-slot 1 (ACX500 Router)

```
user@host> show chassis pic fpc-slot 0 pic-slot 1
```

FPC slot 0, PIC slot 1 information:

```
Type                4x 1GE(LAN) RJ45, SFP Builtin
State                Online
Uptime              17 hours, 54 minutes, 45 seconds
```

### show chassis pic transport fpc-slot pic-slot (PTX Series Packet Transport Routers)

```
user@host> show chassis pic transport fpc-slot 2 pic-slot 0
```

```
Administrative State: In Service
Operational State:   Normal
```

### show chassis pic transport fpc-slot pic-slot (MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC)

```
user@host> show chassis pic transport fpc-slot 3 pic-slot 0
```

```
Administrative State: In Service
Operational State:   Normal
```

### show chassis pic fpc-slot 7 pic-slot 1 (MX960 Router MPC10E-15C-MRATE Line Card)

```
user@router> show chassis pic fpc-slot 7 pic-slot 1
```

FPC slot 7, PIC slot 1 information:

```
Type                MRATE-5xQSFP
State                Online
PIC version          0.0
Uptime              3 hours, 33 minutes, 21 seconds
```

PIC port information:

	JNPR	Fiber		Xcvr vendor	Wave-	Xcvr
Port	Cable type	type	Xcvr vendor	part number	length	
Firmware	Rev					
0	100GBASE LR4	SM	JUNIPER-FINISAR	FTLC1151RDPL-J3	1302 nm	0.0
	REV 01					



## Port speed information:

Port	PFE	Capable Port Speeds
0	1	4x10GE, 40GE, 100GE
1	1	4x10GE, 40GE, 100GE
2	1	4x10GE, 40GE, 100GE
3	1	4x10GE, 40GE, 100GE
4	1	4x10GE, 40GE, 100GE



## show chassis routing-engine

- List of Syntax**
- Syntax on page 733
  - Syntax (ACX Series Universal Metro Routers) on page 733
  - Syntax (EX Series Switches) on page 733
  - Syntax (QFX Series) on page 733
  - Syntax (MX Series Routers) on page 733
  - Syntax (MX2010 Universal Routing Platforms) on page 733
  - Syntax (MX2020 Universal Routing Platforms) on page 734
  - Syntax (MX104 Universal Routing Platforms) on page 734
  - Syntax (MX204 and MX10003 Universal Routing Platforms) on page 734
  - Syntax (PTX Series Packet Transport Routers) on page 734
  - Syntax (T Series Routers) on page 734
  - Syntax (TX Matrix Routers) on page 734
  - Syntax (TX Matrix Plus Routers) on page 734

**Syntax** show chassis routing-engine  
<bios | *slot*>

**Syntax (ACX Series Universal Metro Routers)** show chassis routing-engine

**Syntax (EX Series Switches)** show chassis routing-engine  
<*slot*>  
<satellite [*slot-id slot-id* | device-alias *alias-name*]>

**Syntax (QFX Series)** show chassis routing-engine  
<interconnect-device *name*>  
<node-device *name*>  
<*slot*>  
<*bios*>  
<*errors*>

**Syntax (MX Series Routers)** show chassis routing-engine  
<all-members>  
<bios | *slot*>  
<local>  
<member *member-id*>  
<satellite [*slot-id slot-id* | device-alias *alias-name*]>

**Syntax (MX2010 Universal Routing Platforms)** show chassis routing-engine  
<bios | *slot*>



Syntax (MX2020 Universal Routing Platforms)	show chassis routing-engine <bios   <i>slot</i> >
Syntax (MX104 Universal Routing Platforms)	show chassis routing-engine
Syntax (MX204 and MX10003 Universal Routing Platforms)	show chassis routing-engine < <i>slot</i> > <bios> <errors>
Syntax (PTX Series Packet Transport Routers)	show chassis routing-engine
Syntax (T Series Routers)	show chassis routing-engine <bios   <i>slot</i> >
Syntax (TX Matrix Routers)	show chassis routing-engine <bios   <i>slot</i> > <lcc <i>number</i>   scc>
Syntax (TX Matrix Plus Routers)	show chassis routing-engine <bios   <i>slot</i> > <lcc <i>number</i>   sfc <i>number</i> >
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced in Junos OS Release in 9.6 for the TX Matrix Plus router.</p> <p>Command introduced in Junos OS Release 11.1 for QFX Series.</p> <p><b>5 sec CPU Utilization, 1 min CPU Utilization, 5 min CPU Utilization, and 15 min CPU Utilization</b> output fields introduced in Junos OS Release 11.3R1.</p> <p>Command introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>satellite</b> option introduced in Junos OS Release 14.2R3.</p> <p>Command introduced in Junos OS Release 17.2 for PTX10008 Routers.</p> <p>Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.</p> <p>Command introduced in Junos OS Release 18.1R1 for EX9251 switches.</p>



**Description** Display the status of the Routing Engine.

**Options** **none**—Display information about one or more Routing Engines. On a TX Matrix router, display information about all Routing Engines on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display information about all Routing Engines on the TX Matrix Plus router and its attached routers.

**all-members**—(MX Series routers only) (Optional) Display Routing Engine information for all members of the Virtual Chassis configuration.

**bios**—(Optional) Display the (BIOS) firmware version.

**errors**—(Optional) Display routing engine errors.

**interconnect-device *number***—(QFabric systems only) (Optional) Display Routing Engine information for a specified Interconnect device.

**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display Routing Engine information for a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display Routing Engine information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(MX Series routers only) (Optional) Display Routing Engine information for the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display Routing Engine information for the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

**node-device *number***—(QFabric systems only) (Optional) Display Routing Engine information for a specified Node device.

**satellite [*slot-id slot-id* [*device-alias alias-name*]]**—(Junos Fusion only) (Optional) Display Routing Engine information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scc**—(TX Matrix routers only) (Optional) Display Routing Engine information for the TX Matrix router (switch-card chassis).



**sfc number**—(TX Matrix Plus routers only) (Optional) Display Routing Engine information for the TX Matrix Plus router (or switch-fabric chassis). Replace **number** with 0.

**slot**—(Systems with multiple Routing Engines) (Optional) Display information for an individual Routing Engine. Replace **slot** with 0 or 1. For QFX3500 switches, there is only one Routing Engine, so you do not need to specify the slot number.

**Required Privilege Level**

view

**Related Documentation**

- [request chassis routing-engine master on page 140](#)
- [Configuring Routing Engine Redundancy](#)
- [Switching the Global Master and Backup Roles in a Virtual Chassis Configuration](#)

**List of Sample Output**

[show chassis routing-engine \(M5 Router\) on page 739](#)  
[show chassis routing-engine \(M10 Router\) on page 740](#)  
[show chassis routing-engine \(M20 Router\) on page 740](#)  
[show chassis routing-engine \(M40 Router\) on page 741](#)  
[show chassis routing-engine \(M120 Router\) on page 741](#)  
[show chassis routing-engine \(M160 Router\) on page 742](#)  
[show chassis routing-engine \(MX104 Router\) on page 743](#)  
[show chassis routing-engine \(MX240 Router\) on page 744](#)  
[show chassis routing-engine \(MX480 Router\) on page 744](#)  
[show chassis routing-engine \(MX960 Router\) on page 745](#)  
[show chassis routing-engine \(MX2010 Router\) on page 746](#)  
[show chassis routing-engine \(MX2020 Router\) on page 747](#)  
[show chassis routing-engine \(MX10003 Router\) on page 748](#)  
[show chassis routing-engine \(MX204 Router\) on page 749](#)  
[show chassis routing-engine \(T320 Router\) on page 749](#)  
[show chassis routing-engine \(T640 Router\) on page 750](#)  
[show chassis routing-engine \(T1600 Router\) on page 751](#)  
[show chassis routing-engine \(T4000 Router\) on page 752](#)  
[show chassis routing-engine \(TX Matrix Router\) on page 752](#)  
[show chassis routing-engine lcc \(TX Matrix Router\) on page 754](#)  
[show chassis routing-engine bios \(TX Matrix Router\) on page 754](#)  
[show chassis routing-engine \(TX Matrix Plus Router\) on page 754](#)  
[show chassis routing-engine lcc \(TX Matrix Plus Router\) on page 756](#)  
[show chassis routing-engine bios \(TX Matrix Plus Router\) on page 757](#)  
[show chassis routing-engine \(QFX Series\) on page 757](#)  
[show chassis routing-engine \(OCX Series\) on page 757](#)  
[show chassis routing engine interconnect-device \(QFabric Systems\) on page 758](#)  
[show chassis routing-engine \(PTX Series Packet Transport Router\) on page 758](#)  
[show chassis routing-engine \(EX9200 Switch\) on page 759](#)  
[show chassis routing-engine \(EX9251 Switch\) on page 760](#)  
[show chassis routing-engine \(ACX2000 Universal Metro Router\) on page 760](#)  
[show chassis routing-engine \(ACX1000 Universal Metro Router\) on page 761](#)



[show chassis routing-engine](#) (Displaying the guest reboot reason on PTX5000, MX240, MX480, MX960 < MX2010, and MX2020) on page 761

**Output Fields** Table 32 on page 737 lists the output fields for the **show chassis routing-engine** command. Output fields are listed in the approximate order in which they appear.

Table 32: show chassis routing-engine Output Fields

Field Name	Field Description
Slot	(Systems with single and multiple Routing Engines) Slot number.
Current state	(Systems with multiple Routing Engines) Current state of the Routing Engine: <b>Master</b> , <b>Backup</b> , or <b>Disabled</b> .
Election priority	(Systems with multiple Routing Engines) Election priority for the Routing Engine: <b>Master</b> or <b>Backup</b> .
Temperature	Temperature of the air flowing past the Routing Engine.
CPU Temperature	Temperature of the CPU.
DRAM	Total DRAM available to the Routing Engine's processor.  Starting with Junos OS Release 12.3R1, the DRAM field displays both available memory and installed memory.
Memory utilization	Percentage of Routing Engine memory being used.  <b>NOTE:</b> For platforms running Junos OS with upgraded FreeBSD, the way memory utilization is calculated has changed. Starting in Junos OS Release 15.1R1, inactive memory is no longer included in the calculation for memory utilization. Inactive memory is now considered as free. That is, the value for used memory decreases and results in more memory to be available for other processes. For platforms that run Junos OS with upgraded FreeBSD, see <i>Release Information for Junos OS with Upgraded FreeBSD</i> .
CPU utilization	Information about the Routing Engine's CPU utilization: <ul style="list-style-type: none"> <li>• <b>User</b>—Percentage of CPU time being used by user processes.</li> <li>• <b>Background</b>—Percentage of CPU time being used by background processes.</li> <li>• <b>Kernel</b>—Percentage of CPU time being used by kernel processes.</li> <li>• <b>Interrupt</b>—Percentage of CPU time being used by interrupts.</li> <li>• <b>Idle</b>—Percentage of CPU time that is idle.</li> </ul>
5 sec CPU Utilization	Information about the Routing Engine's CPU utilization in the past 5 seconds: <ul style="list-style-type: none"> <li>• <b>User</b>—Percentage of CPU time being used by user processes.</li> <li>• <b>Background</b>—Percentage of CPU time being used by background processes.</li> <li>• <b>Kernel</b>—Percentage of CPU time being used by kernel processes.</li> <li>• <b>Interrupt</b>—Percentage of CPU time being used by interrupts.</li> <li>• <b>Idle</b>—Percentage of CPU time that is idle.</li> </ul>



Table 32: show chassis routing-engine Output Fields (continued)

Field Name	Field Description
<b>1 min CPU Utilization</b>	Information about the Routing Engine's CPU utilization in the past 1 minute: <ul style="list-style-type: none"> <li>• <b>User</b>—Percentage of CPU time being used by user processes.</li> <li>• <b>Background</b>—Percentage of CPU time being used by background processes.</li> <li>• <b>Kernel</b>—Percentage of CPU time being used by kernel processes.</li> <li>• <b>Interrupt</b>—Percentage of CPU time being used by interrupts.</li> <li>• <b>Idle</b>—Percentage of CPU time that is idle.</li> </ul>
<b>5 min CPU Utilization</b>	Information about the Routing Engine's CPU utilization in the past 5 minutes: <ul style="list-style-type: none"> <li>• <b>User</b>—Percentage of CPU time being used by user processes.</li> <li>• <b>Background</b>—Percentage of CPU time being used by background processes.</li> <li>• <b>Kernel</b>—Percentage of CPU time being used by kernel processes.</li> <li>• <b>Interrupt</b>—Percentage of CPU time being used by interrupts.</li> <li>• <b>Idle</b>—Percentage of CPU time that is idle.</li> </ul>
<b>15 min CPU Utilization</b>	Information about the Routing Engine's CPU utilization in the past 15 minutes: <ul style="list-style-type: none"> <li>• <b>User</b>—Percentage of CPU time being used by user processes.</li> <li>• <b>Background</b>—Percentage of CPU time being used by background processes.</li> <li>• <b>Kernel</b>—Percentage of CPU time being used by kernel processes.</li> <li>• <b>Interrupt</b>—Percentage of CPU time being used by interrupts.</li> <li>• <b>Idle</b>—Percentage of CPU time that is idle.</li> </ul>
<b>Model</b>	Routing Engine model number.
<b>Serial ID</b>	(Systems with multiple Routing Engines) Identification number of the Routing Engine in this slot.
<b>Start time</b>	Time at which the Routing Engine started running.
<b>Uptime</b>	How long the Routing Engine has been running.
Routing Engine BIOS Version	BIOS version being run by the Routing Engine.



Table 32: show chassis routing-engine Output Fields (continued)

Field Name	Field Description
Last reboot reason	<p>Reason for last reboot, including:</p> <ul style="list-style-type: none"> <li><b>power cycle/failure</b>—Halt of the Routing Engine using the <b>halt</b> command, powering down using the power button on the chassis or any other method (such as removal of the control board or Routing Engine), and then powering back the Routing Engine. A halt of the operating system also occurs if you enter the <b>request system halt</b> command. You can enter this command to halt the system operations on the chassis or specific Routing Engines. To restart the software, press any key on the keyboard.</li> <li><b>watchdog</b>—Reboot due to a hardware watchdog. A watchdog is a hardware monitoring process that examines the health and performance of the router to enable the device to recover from failures. A watchdog checks for problems at certain intervals, and reboots the routing engine if a problem is encountered.</li> <li><b>reset-button reset</b>—(Not available on the EX Series switch) Reboot due to pressing of the reset button on the Routing Engine.</li> <li><b>power-button hard power off</b>—Reboot due to pressing of the power button on the chassis. A powering down of the software also occurs if you enter the <b>request system power-off</b> command. You can enter this command to power down the chassis or specific Routing Engines; you can then restart the software.</li> <li><b>misc hardware reason</b>—Reboot due to miscellaneous hardware reasons.</li> <li><b>thermal shutdown</b>—Reboot due to the router or switch reaching a critical temperature at which point it is unsafe to continue operations.</li> <li><b>hard disk failure</b>—Reboot due to a hard disk or solid-state drive (SSD) failure.</li> <li><b>reset from debugger</b>—Reboot due to reset from the debugger.</li> <li><b>chassis control reset</b>—Restart the chassis process that manages PICs, FPCs, and other hardware components. The chassis control module that runs the Routing Engine performs management and monitoring functions, and it provides a single access point for operational and maintenance functions. A reset of the chassis management process occurs when you enter the <b>restart chassis-control</b> command.</li> <li><b>bios auto recovery reset</b>—Reboot due to a BIOS auto-recovery reset.</li> <li><b>could not be determined</b>—Reboot due to an undetermined reason.</li> <li><b>Router rebooted after a normal shutdown</b>—Reboot due to a normal shutdown. This reason is displayed if the Routing Engine is powered down by pushing and holding the online/offline button on the Routing Engine faceplate for 30 seconds, and then powered back. A reboot of the software also occurs if you enter the <b>request system reboot</b> command. You can enter this command to reboot the chassis or specific Routing Engines.</li> <li><b>Hypervisor reboot</b>—When both Linux host and Junos OS is rebooted using the <b>request vmhost reboot</b> command.</li> <li><b>VJUNOS Reboot</b>—When Junos OS is rebooted using the <b>request system reboot</b> command.</li> </ul>
Load averages	Routing Engine load averages for the last 1, 5, and 15 minutes.

## Sample Output

### show chassis routing-engine (M5 Router)

```

user@host> show chassis routing-engine

Routing Engine status:
  Temperature           25 degrees C / 77 degrees F
  DRAM                   768 MB
  Memory utilization     21 percent

```



```

CPU utilization:
  User          0 percent
  Background    0 percent
  Kernel        0 percent
  Interrupt     0 percent
  Idle          100 percent
Model          RE-2.0
Serial ID      31000007349bf701
Start time     2003-12-04 09:42:17 PST
Uptime        26 days, 1 hour, 12 minutes, 27 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute  5 minute 15 minute
                  0.00    0.01    0.00

```

### show chassis routing-engine (M10 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
  Temperature    25 degrees C / 77 degrees F
  DRAM           768 MB
  Memory utilization 21 percent
  CPU utilization:
    User          0 percent
    Background    0 percent
    Kernel        0 percent
    Interrupt     0 percent
    Idle          100 percent
  Model          RE-2.0
  Serial ID      31000007349bf701
  Start time     2003-12-04 09:42:17 PST
  Uptime        26 days, 1 hour, 12 minutes, 27 seconds
  Last reboot reason Router rebooted after a normal shutdown
  Load averages: 1 minute  5 minute 15 minute
                    0.00    0.01    0.00

```

### show chassis routing-engine (M20 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
  Slot 0:
    Current state      Master
    Election priority  Master (default)
    Temperature        29 degrees C / 84 degrees F
    DRAM               768 MB
    Memory utilization  20 percent
    CPU utilization:
      User              1 percent
      Background        0 percent
      Kernel            2 percent
      Interrupt         0 percent
      Idle              97 percent
    Model              RE-2.0
    Serial ID          58000007348d9a01
    Start time         2003-12-30 07:05:47 PST
    Uptime             3 hours, 41 minutes, 14 seconds
    Last reboot reason Router rebooted after a normal shutdown
    Load averages:    1 minute  5 minute 15 minute

```



```

                                0.00      0.02      0.00
Routing Engine status:
Slot 1:
  Current state                Backup
  Election priority            Backup (default)
  Temperature                  29 degrees C / 84 degrees F
  DRAM                        768 MB
  Memory utilization           0 percent
  CPU utilization:
    User                      0 percent
    Background                0 percent
    Kernel                    1 percent
    Interrupt                  0 percent
    Idle                      99 percent
  Model                       RE-2.0
  Serial ID                   d800000734745701
  Start time                  2003-06-17 16:37:33 PDT
  Uptime                      195 days, 18 hours, 47 minutes, 9 seconds
  Last reboot reason          Router rebooted after a normal shutdown

```

### show chassis routing-engine (M40 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
  Temperature                  25 degrees C / 77 degrees F
  DRAM                        768 MB
  Memory utilization           21 percent
  CPU utilization:
    User                      0 percent
    Background                0 percent
    Kernel                    0 percent
    Interrupt                  0 percent
    Idle                      100 percent
  Model                       RE-2.0
  Serial ID                   31000007349bf701
  Start time                  2003-12-04 09:42:17 PST
  Uptime                      26 days, 1 hour, 12 minutes, 27 seconds
  Last reboot reason          Router rebooted after a normal shutdown
  Load averages:             1 minute   5 minute   15 minute
                                0.00      0.01      0.00

```

### show chassis routing-engine (M120 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state                Master
  Election priority            Master (default)
  Temperature                  46 degrees C / 114 degrees F
  CPU temperature              44 degrees C / 111 degrees F
  DRAM                        2048 MB
  Memory utilization           18 percent
  CPU utilization:
    User                      0 percent
    Background                0 percent
    Kernel                    5 percent
    Interrupt                  0 percent

```



```

Idle 95 percent
Model RE-A-1000
Serial ID 1000621154
Start time 2006-10-31 17:10:05 PST
Uptime 14 minutes, 31 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute 5 minute 15 minute
                0.02      0.07      0.07

Routing Engine status:
Slot 1:
Current state Backup
Election priority Backup (default)
Temperature 45 degrees C / 113 degrees F
CPU temperature 42 degrees C / 107 degrees F
DRAM 2048 MB
Memory utilization 15 percent
CPU utilization:
  User 0 percent
  Background 0 percent
  Kernel 0 percent
  Interrupt 0 percent
  Idle 100 percent
Model RE-A-1000
Serial ID 1000621151
Start time 2006-10-31 17:10:04 PST
Uptime 14 minutes, 30 seconds
Last reboot reason Router rebooted after a normal shutdown

```

### show chassis routing-engine (M160 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
Current state Master
Election priority Master (default)
Temperature 43 degrees C / 109 degrees F
DRAM 2048 MB
Memory utilization 11 percent
CPU utilization:
  User 1 percent
  Background 0 percent
  Kernel 2 percent
  Interrupt 0 percent
  Idle 97 percent
Model RE-3.0
Serial ID 210865700403
Start time 2003-12-23 12:25:55 PST
Uptime 6 days, 22 hours, 33 minutes, 24 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute 5 minute 15 minute
                0.24      0.13      0.04

Routing Engine status:
Slot 1:
Current state Backup
Election priority Backup (default)
Temperature 40 degrees C / 104 degrees F
DRAM 2048 MB
Memory utilization 9 percent
CPU utilization:

```



```

User          0 percent
Background    0 percent
Kernel        0 percent
Interrupt     0 percent
Idle          100 percent
Model         RE-3.0
Serial ID     210865700332
Start time    2003-12-23 12:25:55 PST
Uptime        6 days, 22 hours, 33 minutes, 21 seconds
Last reboot reason Router rebooted after a normal shutdown

```

### show chassis routing-engine (MX104 Router)

```
user@host> show chassis routing-engine
```

#### Routing Engine status:

##### Slot 0:

```

Current state      Master
Election priority  Master (default)
Temperature        32 degrees C / 89 degrees F
CPU temperature    42 degrees C / 107 degrees F
DRAM              3840 MB (3840 MB installed)
Memory utilization 18 percent
CPU utilization:
  User             0 percent
  Background       0 percent
  Kernel           3 percent
  Interrupt        2 percent
  Idle             94 percent
Model             RE-MX-104
Serial ID         CAAR5925
Start time        2013-06-05 13:17:08 IST
Uptime            1 hour, 15 minutes, 8 seconds
Last reboot reason 0x200:normal shutdown
Load averages:    1 minute  5 minute 15 minute
                  0.87      0.90     0.41

```

#### Routing Engine status:

##### Slot 1:

```

Current state      Backup
Election priority  Backup (default)
Temperature        32 degrees C / 89 degrees F
CPU temperature    38 degrees C / 100 degrees F
DRAM              3840 MB (3840 MB installed)
Memory utilization 13 percent
CPU utilization:
  User             0 percent
  Background       0 percent
  Kernel           1 percent
  Interrupt        2 percent
  Idle             97 percent
Model             RE-MX-104
Serial ID         CAAM6369
Start time        2013-06-05 13:07:37 IST
Uptime            1 hour, 24 minutes, 34 seconds
Last reboot reason 0x200:normal shutdown
Load averages:    1 minute  5 minute 15 minute
                  0.19      0.15     0.06

```



**show chassis routing-engine (MX240 Router)**

```
user@host> show chassis routing-engine
```

**Routing Engine status:****Slot 0:**

Current state	Master
Election priority	Master (default)
Temperature	36 degrees C / 96 degrees F
CPU temperature	35 degrees C / 95 degrees F
DRAM	3314 MB (8192 MB installed)
Memory utilization	37 percent
5 sec CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
1 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
5 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
15 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	99 percent
Model	RE-S-1800x4
Serial ID	9009074155
Start time	2014-10-13 00:35:41 PDT
Uptime	98 days, 2 hours, 6 minutes, 35 seconds
Last reboot reason	Router rebooted after a normal shutdown.
Load averages:	1 minute    5 minute    15 minute
	0.12        0.12        0.13

**Routing Engine status:****Slot 1:**

Current state	Present
---------------	---------

**show chassis routing-engine (MX480 Router)**

```
user@host> show chassis routing-engine
```

**Routing Engine status:****Slot 0:**

Current state	Master
Election priority	Master (default)
Temperature	33 degrees C / 91 degrees F
CPU temperature	32 degrees C / 89 degrees F
DRAM	16323 MB (16384 MB installed)
Memory utilization	7 percent



```

5 sec CPU utilization:
  User          1 percent
  Background    0 percent
  Kernel        1 percent
  Interrupt     0 percent
  Idle          98 percent
1 min CPU utilization:
  User          2 percent
  Background    0 percent
  Kernel        1 percent
  Interrupt     0 percent
  Idle          97 percent
5 min CPU utilization:
  User          1 percent
  Background    0 percent
  Kernel        1 percent
  Interrupt     0 percent
  Idle          97 percent
15 min CPU utilization:
  User          1 percent
  Background    0 percent
  Kernel        1 percent
  Interrupt     0 percent
  Idle          97 percent
Model          RE-S-1800x4
Serial ID      9009122628
Start time     2019-05-29 21:58:46 PDT
Uptime        11 days, 5 hours, 8 minutes, 55 seconds
Last reboot reason Router rebooted after a normal shutdown.
Load averages: 1 minute   5 minute  15 minute
                  0.28      0.22     0.22

```

### show chassis routing-engine (MX960 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
  Current state      Master
  Election priority  Master (default)
  Temperature        34 degrees C / 93 degrees F
  CPU temperature    33 degrees C / 91 degrees F
  DRAM               16325 MB (16384 MB installed)
  Memory utilization 7 percent
5 sec CPU utilization:
  User          1 percent
  Background    0 percent
  Kernel        3 percent
  Interrupt     1 percent
  Idle          95 percent
1 min CPU utilization:
  User          0 percent
  Background    0 percent
  Kernel        3 percent
  Interrupt     0 percent
  Idle          97 percent
5 min CPU utilization:
  User          0 percent
  Background    0 percent

```



```

Kernel                3 percent
Interrupt              0 percent
Idle                  97 percent
15 min CPU utilization:
User                  0 percent
Background            0 percent
Kernel                2 percent
Interrupt              0 percent
Idle                  97 percent
Model                 RE-S-1800x4
Serial ID              9013043129
Start time             2019-04-29 13:07:15 CEST
Uptime                15 days, 22 hours, 42 minutes, 57 seconds
Last reboot reason     Router rebooted after a normal shutdown.
Load averages:         1 minute   5 minute  15 minute
                       0.17       0.20     0.22

Routing Engine status:
Slot 1:
Current state          Backup
Election priority       Backup (default)
Temperature             33 degrees C / 91 degrees F
CPU temperature         32 degrees C / 89 degrees F
DRAM                   16330 MB (16384 MB installed)
Memory utilization      9 percent
5 sec CPU utilization:
User                   0 percent
Background             0 percent
Kernel                 0 percent
Interrupt              0 percent
Idle                   100 percent
Model                 RE-S-1800x4
Serial ID              9013043081
Start time             2019-04-29 13:05:17 CEST
Uptime                15 days, 22 hours, 44 minutes, 52 seconds
Last reboot reason     0x1:power cycle/failure
Load averages:         1 minute   5 minute  15 minute
                       0.17       0.17     0.12

```

### show chassis routing-engine (MX2010 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
Current state          Master
Election priority       Master (default)
Temperature             41 degrees C / 105 degrees F
CPU temperature         38 degrees C / 100 degrees F
DRAM                   3313 MB (16384 MB installed)
Memory utilization      37 percent
5 sec CPU utilization:
User                   0 percent
Background             0 percent
Kernel                 2 percent
Interrupt              2 percent
Idle                   96 percent
1 min CPU utilization:
User                   0 percent
Background             0 percent
Kernel                 2 percent

```



```

Interrupt                2 percent
Idle                    97 percent
5 min CPU utilization:
  User                  0 percent
  Background            0 percent
  Kernel                2 percent
  Interrupt             2 percent
  Idle                  97 percent
15 min CPU utilization:
  User                  0 percent
  Background            0 percent
  Kernel                2 percent
  Interrupt             2 percent
  Idle                  97 percent
Model                   RE-S-1800x4
Serial ID               9009146890
Start time              2015-01-18 21:35:12 PST
Uptime                  4 hours, 21 minutes, 34 seconds
Last reboot reason      Router rebooted after a normal shutdown.
Load averages:          1 minute   5 minute   15 minute
                        0.11       0.14       0.14

```

### show chassis routing-engine (MX2020 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
  Current state          Master
  Election priority      Master (default)
  Temperature            2 degrees C / 35 degrees F
  CPU temperature        32 degrees C / 89 degrees F
  DRAM                   32735 MB (32768 MB installed)
  Memory utilization     10 percent
  5 sec CPU utilization:
    User                 0 percent
    Background           0 percent
    Kernel               1 percent
    Interrupt            1 percent
    Idle                 98 percent
  1 min CPU utilization:
    User                 0 percent
    Background           0 percent
    Kernel               1 percent
    Interrupt            1 percent
    Idle                 99 percent
  5 min CPU utilization:
    User                 0 percent
    Background           0 percent
    Kernel               1 percent
    Interrupt            1 percent
    Idle                 99 percent
  15 min CPU utilization:
    User                 0 percent
    Background           0 percent
    Kernel               1 percent
    Interrupt            1 percent
    Idle                 99 percent
Model                   RE-S-2X00x8
Serial ID               CADN0309

```



Start time	2015-01-08 16:31:15 PST		
Uptime	4 days, 22 hours, 59 minutes, 3 seconds		
Last reboot reason	Router rebooted after a normal shutdown.		
Load averages:	1 minute	5 minute	15 minute
	0.39	0.41	0.34

### show chassis routing-engine (MX10003 Router)

```
user@host> show chassis routing-engine
```

#### Routing Engine status:

##### Slot 0:

Current state	Master
Election priority	Master (default)
Temperature	43 degrees C / 109 degrees F
CPU temperature	40 degrees C / 104 degrees F
DRAM	49112 MB (49152 MB installed)
Memory utilization	4 percent
5 sec CPU utilization:	
User	0 percent
Background	0 percent
Kernel	2 percent
Interrupt	0 percent
Idle	98 percent
1 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	98 percent
5 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	98 percent
15 min CPU utilization:	
User	0 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	96 percent
Model	RE-S-2X00x6
Start time	2017-08-08 23:13:16 PDT
Uptime	53 minutes, 38 seconds
Last reboot reason	0x1:power cycle/failure
Load averages:	1 minute    5 minute    15 minute
	0.23        0.28        0.25

#### Routing Engine status:

##### Slot 1:

Current state	Backup
Election priority	Backup (default)
Temperature	38 degrees C / 100 degrees F
CPU temperature	39 degrees C / 102 degrees F
DRAM	49112 MB (49152 MB installed)
Memory utilization	4 percent
5 sec CPU utilization:	
User	0 percent
Background	0 percent



```

Kernel          1 percent
Interrupt       0 percent
Idle           99 percent
Model          RE-S-2X00x6
Start time      2017-08-08 23:13:18 PDT
Uptime         53 minutes, 25 seconds
Last reboot reason 0x1:power cycle/failure
Load averages: 1 minute   5 minute  15 minute
                0.21      0.19      0.17

```

### show chassis routing-engine (MX204 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
  Temperature          52 degrees C / 125 degrees F
  CPU temperature      52 degrees C / 125 degrees F
  DRAM                 16341 MB (16384 MB installed)
  Memory utilization   11 percent
  5 sec CPU utilization:
    User               0 percent
    Background         0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle               100 percent
  1 min CPU utilization:
    User               0 percent
    Background         0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle               100 percent
  5 min CPU utilization:
    User               0 percent
    Background         0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle               100 percent
  15 min CPU utilization:
    User               0 percent
    Background         0 percent
    Kernel             0 percent
    Interrupt          0 percent
    Idle               100 percent
  Model               RE-S-2X00x6
  Start time          2017-11-04 00:30:31 PDT
  Uptime              4 days, 7 hours, 17 minutes, 3 seconds
  Last reboot reason  0x1:power cycle/failure
  Load averages:     1 minute   5 minute  15 minute
                     0.17      0.12      0.13

```

### show chassis routing-engine (T320 Router)

```
user@host> show chassis routing-engine
```

```

Slot 0:
  Current state      Master
  Election priority  Master (default)
  Temperature        51 degrees C / 123 degrees F

```



```

CPU temperature      55 degrees C / 131 degrees F
DRAM                3584 MB
Memory utilization   11 percent
CPU utilization:
  User              0 percent
  Background        0 percent
  Kernel            2 percent
  Interrupt          0 percent
  Idle              97 percent
Model               RE-A-2000
Serial ID            9009010618
Start time           2012-10-10 01:24:05 PDT
Uptime               5 days, 10 hours, 49 minutes, 23 seconds
Last reboot reason   0x1:power cycle/failure
Load averages:      1 minute  5 minute 15 minute
                    0.00      0.05   0.04

Routing Engine status:
Slot 1:
  Current state      Backup
  Election priority   Backup (default)
  Temperature        45 degrees C / 113 degrees F
  CPU temperature     48 degrees C / 118 degrees F
  DRAM               3584 MB
  Memory utilization  9 percent
  CPU utilization:
    User              0 percent
    Background        0 percent
    Kernel            0 percent
    Interrupt          0 percent
    Idle              100 percent
  Model              RE-A-2000
  Serial ID           9009003642
  Start time          2012-10-10 01:24:04 PDT
  Uptime              5 days, 10 hours, 49 minutes, 28 seconds
  Last reboot reason   0x1:power cycle/failure

```

### show chassis routing-engine (T640 Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
  Current state      Master
  Election priority   Master (default)
  Temperature        50 degrees C / 122 degrees F
  CPU temperature     58 degrees C / 136 degrees F
  DRAM               3584 MB
  Memory utilization  14 percent
  CPU utilization:
    User              1 percent
    Background        0 percent
    Kernel            4 percent
    Interrupt          1 percent
    Idle              95 percent
  Model              RE-A-2000
  Serial ID           1000686556
  Start time          2012-10-10 01:24:02 PDT
  Uptime              5 days, 10 hours, 50 minutes, 27 seconds
  Last reboot reason   0x1:power cycle/failure
  Load averages:      1 minute  5 minute 15 minute

```



```

1.24      0.33      0.12
Routing Engine status:
Slot 1:
  Current state          Backup
  Election priority      Backup (default)
  Temperature            44 degrees C / 111 degrees F
  CPU temperature        49 degrees C / 120 degrees F
  DRAM                   3584 MB
  Memory utilization     12 percent
  CPU utilization:
    User                 0 percent
    Background           0 percent
    Kernel               0 percent
    Interrupt            1 percent
    Idle                 99 percent
  Model                  RE-A-2000
  Serial ID              1000702739
  Start time             2012-10-10 01:24:02 PDT
  Uptime                 5 days, 10 hours, 50 minutes, 26 seconds
  Last reboot reason     0x1:power cycle/failure

```

### show chassis routing-engine (T1600 Router)

```

user@host> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state          Master
  Election priority      Master (default)
  Temperature            48 degrees C / 118 degrees F
  CPU temperature        58 degrees C / 136 degrees F
  DRAM                   3584 MB
  Memory utilization     13 percent
  CPU utilization:
    User                 0 percent
    Background           0 percent
    Kernel               3 percent
    Interrupt            1 percent
    Idle                 96 percent
  Model                  RE-A-2000
  Serial ID              1000704521
  Start time             2012-10-10 01:23:41 PDT
  Uptime                 5 days, 10 hours, 46 minutes, 56 seconds
  Last reboot reason     0x1:power cycle/failure
  Load averages:        1 minute   5 minute   15 minute
                        0.05      0.03      0.01
Routing Engine status:
Slot 1:
  Current state          Backup
  Election priority      Backup (default)
  Temperature            44 degrees C / 111 degrees F
  CPU temperature        48 degrees C / 118 degrees F
  DRAM                   3584 MB
  Memory utilization     12 percent
  CPU utilization:
    User                 0 percent
    Background           0 percent
    Kernel               0 percent
    Interrupt            0 percent
    Idle                 100 percent

```



```

Model                RE-A-2000
Serial ID            9009006579
Start time           2012-10-10 01:23:42 PDT
Uptime               5 days, 10 hours, 46 minutes, 54 seconds
Last reboot reason   0x1:power cycle/failure

```

### show chassis routing-engine (T4000 Router)

```
user@host> show chassis routing-engine
```

#### Routing Engine status:

##### Slot 0:

```

Current state        Master
Election priority    Master (default)
Temperature          33 degrees C / 91 degrees F
CPU temperature      50 degrees C / 122 degrees F
DRAM                8960 MB
Memory utilization   18 percent
CPU utilization:
  User              0 percent
  Background        0 percent
  Kernel            4 percent
  Interrupt         1 percent
  Idle              95 percent
Model               RE-DUO-1800
Serial ID           P737F-002248
Start time          2012-02-09 22:49:53 PST
Uptime              2 hours, 21 minutes, 35 seconds
Last reboot reason   Router rebooted after a normal shutdown.
Load averages:      1 minute   5 minute  15 minute
                    0.00       0.04     0.00

```

#### Routing Engine status:

##### Slot 1:

```

Current state        Backup
Election priority    Backup (default)
Temperature          32 degrees C / 89 degrees F
CPU temperature      46 degrees C / 114 degrees F
DRAM                8960 MB
Memory utilization   24 percent
CPU utilization:
  User              0 percent
  Background        0 percent
  Kernel            0 percent
  Interrupt         0 percent
  Idle              99 percent
Model               RE-DUO-1800
Serial ID           P737F-002653
Start time          2012-02-08 20:12:51 PST
Uptime              1 day, 4 hours, 58 minutes, 28 seconds
Last reboot reason   Router rebooted after a normal shutdown.

```

### show chassis routing-engine (TX Matrix Router)

```
user@host> show chassis routing-engine
```

```
scc-re0:
```

#### Routing Engine status:

##### Slot 0:



```

Current state           Master
Election priority       Master (default)
Temperature             34 degrees C / 93 degrees F
CPU temperature         33 degrees C / 91 degrees F
DRAM                   2048 MB
Memory utilization      12 percent
CPU utilization:
  User                  0 percent
  Background            0 percent
  Kernel                2 percent
  Interrupt             0 percent
  Idle                  98 percent
Model                  RE-4.0
Serial ID               P11123900153
Start time              2004-08-05 18:42:05 PDT
Uptime                  9 days, 22 hours, 49 minutes, 50 seconds
Last reboot reason      Router rebooted after a normal shutdown
Load averages:          1 minute   5 minute   15 minute
                        0.00       0.08      0.07

```

lcc0-re0:

-----  
Routing Engine status:

Slot 0:

```

Current state           Master
Election priority       Master (default)
Temperature             33 degrees C / 91 degrees F
CPU temperature         30 degrees C / 86 degrees F
DRAM                   2048 MB
Memory utilization      12 percent
CPU utilization:
  User                  0 percent
  Background            0 percent
  Kernel                1 percent
  Interrupt             0 percent
  Idle                  98 percent
Model                  RE-3.0
Serial ID               210865700363
Start time              2004-08-05 18:42:05 PDT
Uptime                  9 days, 22 hours, 48 minutes, 20 seconds
Last reboot reason      Router rebooted after a normal shutdown
Load averages:          1 minute   5 minute   15 minute
                        0.00       0.02      0.00

```

lcc2-re0:

-----  
Routing Engine status:

Slot 0:

```

Current state           Master
Election priority       Master (default)
Temperature             34 degrees C / 93 degrees F
CPU temperature         35 degrees C / 95 degrees F
DRAM                   2048 MB
Memory utilization      12 percent
CPU utilization:
  User                  0 percent
  Background            0 percent
  Kernel                2 percent
  Interrupt             0 percent
  Idle                  98 percent

```



```

Model RE-4.0
Serial ID P11123900126
Start time 2004-08-05 18:42:05 PDT
Uptime 9 days, 22 hours, 49 minutes, 4 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute 5 minute 15 minute
                0.01 0.01 0.0

```

### show chassis routing-engine lcc (TX Matrix Router)

```
user@host> show chassis routing-engine 0 lcc 0
```

```
lcc0-re0:
```

```
-----
Routing Engine status:
```

```
Slot 0:
```

```

Current state Master
Election priority Master (default)
Temperature 33 degrees C / 91 degrees F
CPU temperature 30 degrees C / 86 degrees F
DRAM 2048 MB
Memory utilization 12 percent
CPU utilization:
  User 0 percent
  Background 0 percent
  Kernel 1 percent
  Interrupt 0 percent
  Idle 98 percent
Model RE-3.0
Serial ID 210865700363
Start time 2004-08-05 18:42:05 PDT
Uptime 7 days, 22 hours, 49 minutes, 6 seconds
Last reboot reason Router rebooted after a normal shutdown
Load averages: 1 minute 5 minute 15 minute
                0.00 0.00 0.00

```

### show chassis routing-engine bios (TX Matrix Router)

```
user@host> show chassis routing-engine bios
```

```
scc-re0:
```

```
-----
Routing Engine BIOS Version: V1.0.0
```

```
lcc0-re0:
```

```
-----
Routing Engine BIOS Version: V1.0.17
```

```
lcc2-re0:
```

```
-----
Routing Engine BIOS Version: V1.0.0
```

### show chassis routing-engine (TX Matrix Plus Router)

```
user@host> show chassis routing-engine
```

```
sfc0-re0:
```

```
-----
Routing Engine status:
```

```
Slot 0:
```

```
Current state Master
```



```

Election priority      Master (default)
Temperature           27 degrees C / 80 degrees F
CPU temperature       42 degrees C / 107 degrees F
DRAM                 3327 MB
Memory utilization    12 percent
CPU utilization:
  User                0 percent
  Background          0 percent
  Kernel              2 percent
  Interrupt            0 percent
  Idle                98 percent
Model                 RE-TXP-SFC
Serial ID             737A-1024
Start time            2009-05-11 17:39:49 PDT
Uptime                3 hours, 45 minutes, 25 seconds
Last reboot reason    Router rebooted after a normal shutdown.
Load averages:        1 minute   5 minute   15 minute
                      0.00       0.00       0.00

```

#### Routing Engine status:

##### Slot 1:

```

Current state          Backup
Election priority      Backup (default)
Temperature            29 degrees C / 84 degrees F
CPU temperature        43 degrees C / 109 degrees F
DRAM                 3327 MB
Memory utilization    11 percent
CPU utilization:
  User                0 percent
  Background          0 percent
  Kernel              0 percent
  Interrupt            0 percent
  Idle                100 percent
Model                 RE-TXP-SFC
Serial ID             737A-1024
Start time            2009-05-11 17:08:54 PDT
Uptime                4 hours, 16 minutes, 52 seconds
Last reboot reason     0x1:power cycle/failure

```

#### lcc0-re0:

#### Routing Engine status:

##### Slot 0:

```

Current state          Master
Election priority      Master (default)
Temperature            30 degrees C / 86 degrees F
CPU temperature        43 degrees C / 109 degrees F
DRAM                 3327 MB
Memory utilization     9 percent
CPU utilization:
  User                0 percent
  Background          0 percent
  Kernel              2 percent
  Interrupt            0 percent
  Idle                98 percent
Model                 RE-TXP-LCC
Serial ID             737F-1024
Start time            2009-05-11 17:40:32 PDT
Uptime                3 hours, 44 minutes, 51 seconds
Last reboot reason     Router rebooted after a normal shutdown.
Load averages:        1 minute   5 minute   15 minute

```



```

                                0.00      0.00      0.00
Routing Engine status:
  Slot 1:
    Current state                Backup
    Election priority            Backup (default)
    Temperature                  30 degrees C / 86 degrees F
    CPU temperature              43 degrees C / 109 degrees F
    DRAM                        3327 MB
    Memory utilization           9 percent
    CPU utilization:
      User                      0 percent
      Background                0 percent
      Kernel                    0 percent
      Interrupt                 0 percent
      Idle                      100 percent
    Model                       RE-TXP-LCC
    Serial ID                   737F-1024
    Start time                   2009-05-06 17:31:32 PDT
    Uptime                      5 days, 3 hours, 54 minutes, 19 seconds
    Last reboot reason          Router rebooted after a normal shutdown.

```

#### show chassis routing-engine lcc (TX Matrix Plus Router)

```

user@host> show chassis routing-engine 0 lcc 0
lcc0-re0:
-----
Routing Engine status:
  Slot 0:
    Current state                Master
    Election priority            Master (default)
    Temperature                  30 degrees C / 86 degrees F
    CPU temperature              43 degrees C / 109 degrees F
    DRAM                        3327 MB
    Memory utilization           9 percent
    CPU utilization:
      User                      0 percent
      Background                0 percent
      Kernel                    2 percent
      Interrupt                 0 percent
      Idle                      98 percent
    Model                       RE-TXP-LCC
    Serial ID                   737F-1024
    Start time                   2009-05-11 17:40:32 PDT
    Uptime                      3 hours, 45 minutes, 26 seconds
    Last reboot reason          Router rebooted after a normal shutdown.
    Load averages:             1 minute  5 minute 15 minute
                                0.00      0.00      0.00
Routing Engine status:
  Slot 1:
    Current state                Backup
    Election priority            Backup (default)
    Temperature                  30 degrees C / 86 degrees F
    CPU temperature              43 degrees C / 109 degrees F
    DRAM                        3327 MB
    Memory utilization           9 percent
    CPU utilization:
      User                      0 percent
      Background                0 percent
      Kernel                    0 percent

```



Interrupt	0 percent
Idle	100 percent
Model	RE-TXP-LCC
Serial ID	737F-1024
Start time	2009-05-06 17:31:32 PDT
Uptime	5 days, 3 hours, 54 minutes, 59 seconds
Last reboot reason	Router rebooted after a normal shutdown.

### show chassis routing-engine bios (TX Matrix Plus Router)

```
user@host> show chassis routing-engine bios
```

```
sfc0-re0:
```

```
-----
Routing Engine BIOS Version: V0.0.Z
```

```
lcc0-re0:
```

```
-----
Routing Engine BIOS Version: V0.0.N
```

### show chassis routing-engine (QFX Series)

```
user@switch> show chassis routing-engine
```

```
Routing Engine status:
Slot 0:
Current state Master
Election priority Master (default)
DRAM 2820 MB
Memory utilization 49 percent
CPU utilization:
User 1 percent
Background 0 percent
Kernel 1 percent
Interrupt 0 percent
Idle 97 percent
Model QFX3500-48S4Q
Serial ID S/N ED3709
Uptime 3 days, 4 hours, 29 minutes, 42 seconds
Last reboot reason 0x200:chassis control reset
Load averages: 1 minute 5 minute 15 minute
0.37 0.26 0.19
```

### show chassis routing-engine (OCX Series)

```
user@switch> show chassis routing-engine
```

```
Routing Engine status:
Slot 0:
Current state Master
Election priority Master (default)
DRAM 2820 MB
Memory utilization 49 percent
CPU utilization:
User 1 percent
Background 0 percent
Kernel 1 percent
Interrupt 0 percent
Idle 97 percent
```



```

Model OCX-1100-48SX-AFI
Serial ID S/N ED3709
Uptime 3 days, 4 hours, 29 minutes, 42 seconds
Last reboot reason 0x200:chassis control reset
Load averages: 1 minute 5 minute 15 minute
0.37 0.26 0.19

```

### show chassis routing engine interconnect-device (QFabric Systems)

```
user@switch> show chassis routing-engine
```

Routing Engine status:

Slot 0:

Current state	Master
Election priority	Master (default)
Temperature	48 degrees C / 118 degrees F
DRAM	3312 MB
Memory utilization	63 percent
CPU utilization:	
User	14 percent
Background	0 percent
Kernel	5 percent
Interrupt	0 percent
Idle	81 percent
Model	RE-QFXC08-CB4S
Serial ID	BUILTIN
Start time	2011-07-06 13:26:15 UTC
Uptime	11 hours, 24 minutes, 57 seconds
Last reboot reason	0x4:reset-button reset
Load averages:	1 minute    5 minute    15 minute
	2.62        2.31        2.28

Routing Engine status:

Slot 1:

Current state	Backup
Election priority	Backup (default)
Temperature	39 degrees C / 102 degrees F
DRAM	3312 MB
Memory utilization	59 percent
CPU utilization:	
User	9 percent
Background	0 percent
Kernel	1 percent
Interrupt	0 percent
Idle	91 percent
Model	RE-QFXC08-CB4S
Serial ID	BUILTIN
Start time	2011-07-06 13:24:58 UTC
Uptime	11 hours, 26 minutes, 18 seconds
Last reboot reason	0x4:reset-button reset

### show chassis routing-engine (PTX Series Packet Transport Router)

```
user@switch> show chassis routing-engine
```

Routing Engine status:

Slot 0:

Current state	Master
Election priority	Master (default)



```

Temperature          60 degrees C / 140 degrees F
CPU temperature      76 degrees C / 168 degrees F
DRAM                17152 MB
Memory utilization   11 percent
CPU utilization:
  User               0 percent
  Background         0 percent
  Kernel             4 percent
  Interrupt          0 percent
  Idle              95 percent
Model               RE-DUO-2600
Serial ID           P737A-002231
Start time          2011-12-21 16:54:37 PST
Uptime              25 minutes, 44 seconds
Last reboot reason  Router rebooted after a normal shutdown.
Load averages:      1 minute   5 minute   15 minute
                   0.01       0.02       0.06

Routing Engine status:
Slot 1:
  Current state      Backup
  Election priority  Backup (default)
  Temperature        50 degrees C / 122 degrees F
  CPU temperature    64 degrees C / 147 degrees F
  DRAM              17152 MB
  Memory utilization 10 percent
  CPU utilization:
    User             0 percent
    Background       0 percent
    Kernel           0 percent
    Interrupt        0 percent
    Idle            99 percent
  Model             RE-DUO-2600
  Serial ID         P737A-002438
  Start time        2011-12-21 16:52:26 PST
  Uptime            27 minutes, 49 seconds
  Last reboot reason Router rebooted after a normal shutdown.

```

### show chassis routing-engine (EX9200 Switch)

```
user@switch> show chassis routing-engine
```

```

Routing Engine status:
Slot 0:
  Current state      Master
  Election priority  Master (default)
  Temperature        35 degrees C / 95 degrees F
  CPU temperature    33 degrees C / 91 degrees F
  DRAM              8157 MB
  Installed Memory   8192 MB
  Memory utilization 18 percent
  CPU utilization:
    User             1 percent
    Background       0 percent
    Kernel           4 percent
    Interrupt        1 percent
    Idle            94 percent
  Model             RE-S-EX9200-1800X4
  Serial ID         9009119555
  Start time        2014-03-12 14:58:05 UTC
  Uptime            1 hour, 41 minutes, 51 seconds

```



```

Last reboot reason      Router rebooted after a normal shutdown.
Load averages:         1 minute   5 minute   15 minute
                        0.02        0.02        0.00

Routing Engine status:
Slot 1:
  Current state         Backup
  Election priority     Backup (default)

[...Output truncated...]

```

### show chassis routing-engine (EX9251 Switch)

```
user@switch> show chassis routing-engine
```

```

Routing Engine status:
  Temperature           50 degrees C / 122 degrees F
  CPU temperature        50 degrees C / 122 degrees F
  DRAM                  16340 MB (16384 MB installed)
  Memory utilization     6 percent
  5 sec CPU utilization:
    User                 2 percent
    Background           0 percent
    Kernel               19 percent
    Interrupt            0 percent
    Idle                 79 percent
  1 min CPU utilization:
    User                 2 percent
    Background           0 percent
    Kernel               19 percent
    Interrupt            0 percent
    Idle                 79 percent
  5 min CPU utilization:
    User                 2 percent
    Background           0 percent
    Kernel               19 percent
    Interrupt            0 percent
    Idle                 79 percent
  15 min CPU utilization:
    User                 2 percent
    Background           0 percent
    Kernel               19 percent
    Interrupt            0 percent
    Idle                 79 percent
  Model                 RE-S-2X00x6
  Start time            2018-03-08 05:11:33 PST
  Uptime                10 days, 18 hours, 59 minutes, 15 seconds
  Last reboot reason    0x4000:VJUNOS reboot
  Load averages:        1 minute   5 minute   15 minute
                        1.06        1.09        1.08

```

### show chassis routing-engine (ACX2000 Universal Metro Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
  Temperature           53 degrees C / 127 degrees F
  DRAM                  1536 MB
  Memory utilization     25 percent
  CPU utilization:

```



```

User          0 percent
Background    0 percent
Kernel        0 percent
Interrupt     1 percent
Idle          99 percent
Model         RE-ACX-2000
Start time    2012-05-09 00:57:07 PDT
Uptime        5 days, 3 hours, 16 minutes, 15 seconds
Last reboot reason Router rebooted after a normal shutdown.
Load averages: 1 minute   5 minute   15 minute
                  0.00       0.03       0.05

```

### show chassis routing-engine (ACX1000 Universal Metro Router)

```
user@host> show chassis routing-engine
```

```

Routing Engine status:
  Temperature          36 degrees C / 96 degrees F
  DRAM                  768 MB
  Memory utilization    50 percent
  CPU utilization:
    User                3 percent
    Background          0 percent
    Kernel              6 percent
    Interrupt           0 percent
    Idle                91 percent
  Model                RE-ACX-1000
  Start time           2012-05-10 07:12:23 PDT
  Uptime               4 days, 10 hours, 46 minutes, 53 seconds
  Last reboot reason    Router rebooted after a normal shutdown.
  Load averages:      1 minute   5 minute   15 minute
                        0.00       0.00       0.00

```

### show chassis routing-engine (Displaying the guest reboot reason on PTX5000,MX240, MX480, MX960< MX2010, and MX2020)

```
user@host> show chassis routing-engine re0 | match "Last reboot reason"
```

```
Last reboot reason 0x4000:VJUNOS reboot
```







**Release Information** Command introduced in Junos OS Release 8.0.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
**sfc** command introduced in Junos OS Release 9.6 for the TX Matrix Plus router.  
 Command introduced in Junos OS Release 11.1 for QFX Series.  
 Command introduced in Junos OS Release 12.1 for T4000 Core Routers.  
 Command introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.  
 Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.  
 Command introduced in Junos OS Release 13.2 for MX104 Universal Routing Platforms.  
**satellite** option introduced in Junos OS Release 14.2R3.  
 Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.  
 Command introduced in Junos OS Release 17.2 for PTX10008 Routers.  
 Command introduced in Junos OS Release 17.3 for MX10003 Universal Routing Platforms.  
 Command introduced in Junos OS Release 17.3 for MX150 Router Appliance.  
 Command introduced in Junos OS Release 17.4 for MX204 Universal Routing Platforms.  
 Command introduced in Junos OS Release 18.1R1 for EX9251 switches.  
 Command introduced in Junos OS Release 18.2 for EX9253 Switches.  
 Command introduced in Junos OS Release 18.2R1 for MX10008 Routers.

**Description** Display chassis temperature threshold settings, in degrees Celsius.

**Options** **none**—Display the temperature threshold details.

**all-members**—(MX Series routers only) (Optional) Display the chassis temperature threshold settings of all member routers in the Virtual Chassis configuration.

**interconnect-device *name***—(QFabric systems only) (Optional) Display the chassis temperature threshold settings of the Interconnect device.

**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display the temperature threshold details of a specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display the temperature threshold details of a specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.



**local**—(MX Series routers only) (Optional) Display the chassis temperature threshold settings of the local Virtual Chassis member.

**member *member-id***—(MX Series routers only) (Optional) Display the chassis temperature threshold settings of the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

**node-device *name***—(QFabric systems only) (Optional) Display the chassis temperature threshold settings of the Node device.

**satellite [*slot-id slot-ID* | device-alias *alias-name*]**—(Junos Fusion only) (Optional) Display the chassis temperature threshold settings for the specified satellite device or devices in a Junos Fusion, or for all satellite devices if no satellite devices are specified.

**scc**—(TX Matrix routers only) (Optional) Display the temperature threshold details of the TX Matrix router (switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) On TX Matrix Plus routers, display the temperature threshold details of the TX Matrix Plus router, which is the switch-fabric chassis. Replace *number* with 0.

Required Privilege  
Level

view

List of Sample Output

[show chassis temperature-thresholds on page 766](#)  
[show chassis temperature-thresholds \(MX150\) on page 766](#)  
[show chassis temperature-thresholds \(MX104 Router\) on page 766](#)  
[show chassis temperature-thresholds \(MX240, MX480, MX960 Routers with Application Services Modular Line Card\) on page 767](#)  
[show chassis temperature-thresholds \(MX480 Router with MPC4E\) on page 767](#)  
[show chassis temperature-thresholds \(MX2010 Router with MPC7E, MPC8E, and MPC9E\) on page 767](#)  
[show chassis temperature-thresholds \(MX2010 Router\) on page 771](#)  
[show chassis temperature-thresholds \(MX2020 Router\) on page 773](#)  
[show chassis temperature-thresholds \(MX2020 Router with MPC4E\) on page 776](#)  
[show chassis temperature-thresholds \(MX2008 Routers\) on page 778](#)  
[show chassis temperature-thresholds \(MX10003 Router\) on page 782](#)  
[show chassis temperature-thresholds \(MX10008 Router\) on page 784](#)  
[show chassis temperature-thresholds \(MX204 Router\) on page 792](#)  
[show chassis temperature-thresholds \(PTX10008 Routers\) on page 793](#)  
[show chassis temperature-thresholds \(T4000 Core Routers\) on page 794](#)  
[show chassis temperature-thresholds \(TX Matrix Plus Router\) on page 795](#)  
[show chassis temperature-thresholds lcc \(TX Matrix Plus Router\) on page 796](#)  
[show chassis temperature-thresholds sfc \(TX Matrix Plus Router\) on page 796](#)  
[show chassis temperature-thresholds \(TX Matrix Plus routers with 3DSIBs\) on page 797](#)  
[show chassis temperature-thresholds \(QFX3500 Switch and QFX3600\) on page 799](#)  
[show chassis temperature-thresholds interconnect-device \(QFabric System\) on page 799](#)  
[show chassis temperature-thresholds \(PTX5000 Packet Transport Router\) on page 799](#)



[show chassis temperature-thresholds \(PTX1000 Packet Transport Router\) on page 801](#)  
[show chassis temperature-thresholds \(MX Routers with Media Services Blade \[MSB\]\) on page 801](#)  
[show chassis temperature-thresholds \(EX9251 Switches\) on page 802](#)  
[show chassis temperature-thresholds \(EX9253 switches\) on page 803](#)

**Output Fields** Table 33 on page 765 lists the output fields for the **show chassis temperature-thresholds** command. Output fields are listed in the approximate order in which they appear.

*Table 33: show chassis temperature-thresholds Output Fields*

Field name	Field Description
Item	Chassis component. If per FRU per slot thresholds are configured, the components about which information is displayed include the chassis, the Routing Engines, FPCs, and FEBs. If per FRU per slot thresholds are not configured, the components about which information is displayed include the chassis and the Routing Engines.
Fan speed	<p><b>NOTE:</b> On the QFX3500 switch and QFX3600 switch, there are four fan speeds: <b>low</b>, <b>medium-low</b>, <b>medium-high</b>, and <b>high</b>. The fan speed changes at the threshold when going from a low speed to a higher speed. When the fan speed changes from a higher speed to a lower speed, the temperature changes two degrees below the threshold.</p> <p>Temperature threshold settings, in degrees Celsius, for the fans to operate at normal and high speeds.</p> <ul style="list-style-type: none"> <li>Normal—The fans operate at normal speed if the component is at or below this temperature and all the fans are present and functioning normally.</li> </ul> <p><b>NOTE:</b> On a TX Matrix Plus router with 3D SIBs, the threshold temperature at the XF junction is set to 70°C for <b>Normal</b> fan speed, which is less than or equal to 4800 RPM.</p> <ul style="list-style-type: none"> <li>High—The fans operate at high speed if the component has exceeded this temperature or a fan has failed or is missing.</li> </ul> <p><b>NOTE:</b> On a TX Matrix Plus router with 3D SIBs, the threshold temperature at the XF junction is set to 75°C for <b>High</b> fan speed, which is greater than or equal to 5000 RPM.</p> <p><b>NOTE:</b> For MX480 Routers, there are three fan speeds: Low, Medium, and High.</p> <p>An alarm is not triggered until the temperature exceeds the threshold settings for a yellow alarm or a red alarm.</p>
Yellow alarm	<p>Temperature threshold settings, in degrees Celsius, that trigger a yellow alarm.</p> <ul style="list-style-type: none"> <li>Normal—The temperature that must be exceeded on the component to trigger a yellow alarm when the fans are running at full speed.</li> <li>Bad fan—The temperature that must be exceeded on the component to trigger a yellow alarm when one or more fans have failed or are missing.</li> </ul>
Red alarm	<p>Temperature threshold settings, in degrees Celsius, that trigger a red alarm.</p> <ul style="list-style-type: none"> <li>Normal—The temperature that must be exceeded on the component to trigger a red alarm when the fans are running at full speed.</li> <li>Bad fan—The temperature that must be exceeded on the component to trigger a red alarm when one or more fans have failed or are missing.</li> </ul>
Fire Shutdown	(T4000 routers, TX Matrix Plus router with 3D SIBs, and PTX Series Packet Transport Routers only)—Temperature threshold settings, in degrees Celsius, for the network device to shut down.



## Sample Output

### show chassis temperature-thresholds

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	70	80	95	95	110	110
Routing Engine 1	70	80	95	95	110	110
FPC 0	55	60	75	65	90	80
FPC 1	55	60	75	65	90	80
FPC 2	55	60	75	65	90	80
FPC 3	55	60	75	65	90	80
FPC 4	55	60	75	65	90	80
FPC 5	55	60	75	65	90	80
FPC 6	55	60	75	65	90	80
FPC 7	55	60	75	65	90	80
FPC 8	55	60	75	65	90	80
FPC 9	55	60	75	65	90	80
FPC 10	55	60	75	65	90	80
FPC 11	55	60	75	65	90	80

### show chassis temperature-thresholds (MX150)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	High	Normal	Bad fan	Normal	Bad fan
FPC 0 Sensor 1	43	65	68	68	70	70		
FPC 0 Sensor 2	43	65	68	68	70	70		
FPC 0 Coretemp	78	94	100	100	105	105		

### show chassis temperature-thresholds (MX104 Router)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65		
Routing Engine 0	55	80	95	95	105	100		



### show chassis temperature-thresholds (MX240, MX480, MX960 Routers with Application Services Modular Line Card)

```
user@host> show chassis temperature-thresholds
```

Fan speed (degrees C)	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Item						
Normal						
Chassis default	48	54	65	55	75	65
100						
Routing Engine 0	70	80	95	95	110	110
112						
Routing Engine 1	70	80	95	95	110	110
112						
FPC 0	55	60	75	65	90	80
95						
FPC 1	55	60	75	65	90	80
95						
FPC 2	55	60	75	65	90	80
95						
FPC 4	55	60	75	65	90	80
95						
FPC 5	55	60	75	65	90	80
95						

### show chassis temperature-thresholds (MX480 Router with MPC4E)

```
user@ host> show chassis temperature-thresholds
```

Fan speed (degrees C)	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Item						
Normal						
Chassis default	48	54	65	55	75	65
100						
Routing Engine 0	70	80	95	95	110	110
112						
Routing Engine 1	70	80	95	95	110	110
112						
FPC 2	55	60	75	65	95	80
100						
FPC 3	55	60	75	65	95	80
100						
FPC 4	55	60	75	65	90	80
95						

### show chassis temperature-thresholds (MX2010 Router with MPC7E, MPC8E, and MPC9E)

```
user@ host> show chassis temperature-thresholds
```

Fire Shutdown (degrees C)	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Item						
Bad fan	Normal					



FPC 3 Intake	53	59	72	67	80
75 85					
FPC 3 Exhaust A	77	85	98	93	103
98 108					
FPC 3 Exhaust B	54	62	80	75	103
98 108					
FPC 3 EA0 Chip	64	72	90	90	100
100 105					
FPC 3 EA0_XR0 Chip	79	87	102	102	106
106 108					
FPC 3 EA0_XR1 Chip	79	87	102	102	106
106 108					
FPC 3 EA1 Chip	64	72	90	90	100
100 105					
FPC 3 EA1_XR0 Chip	79	87	102	102	106
106 108					
FPC 3 EA1_XR1 Chip	79	87	102	102	106
106 108					
FPC 3 PEX Chip	74	82	100	100	105
105 110					
FPC 3 EA2 Chip	64	72	90	90	100
100 105					
FPC 3 EA2_XR0 Chip	79	87	102	102	106
106 108					
FPC 3 EA2_XR1 Chip	79	87	102	102	106
106 108					
FPC 3 EA3 Chip	64	72	90	90	100
100 105					
FPC 3 EA3_XR0 Chip	79	87	102	102	106
106 108					
FPC 3 EA3_XR1 Chip	79	87	102	102	106
106 108					
FPC 3 EA0_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 3 EA0_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA0_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 3 EA0_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA0_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 3 EA0_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA1_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 3 EA1_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA1_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 3 EA1_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA1_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 3 EA1_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA2_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 3 EA2_HMC0 DRAM botm	76	84	98	98	102
102 106					



FPC 3 EA2_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 3 EA2_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA2_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 3 EA2_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA3_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 3 EA3_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA3_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 3 EA3_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 3 EA3_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 3 EA3_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 4 Intake	46	55	65	60	81
76 90					
FPC 4 Exhaust A	61	70	80	75	100
95 110					
FPC 4 Exhaust B	61	70	80	75	95
90 105					
FPC 4 EA0 Chip	86	95	105	100	117
112 123					
FPC 4 EA0_XR0 Chip	86	95	105	100	110
105 116					
FPC 4 EA0_XR1 Chip	86	95	105	100	115
110 121					
FPC 4 EA1 Chip	86	95	105	100	117
112 123					
FPC 4 EA1_XR0 Chip	86	95	105	100	110
105 116					
FPC 4 EA1_XR1 Chip	86	95	105	100	115
110 121					
FPC 4 PCIE_SW Chip	81	90	105	100	115
110 121					
FPC 4 EA0_HMC0 DRAM botm	86	95	105	100	115
110 121					
FPC 4 EA0_HMC1 DRAM botm	86	95	105	100	115
110 121					
FPC 4 EA1_HMC0 DRAM botm	86	95	105	100	115
110 121					
FPC 4 EA1_HMC1 DRAM botm	86	95	105	100	115
110 121					
FPC 7 Intake	53	59	72	67	80
75 85					
FPC 7 Exhaust A	77	85	98	93	103
98 108					
FPC 7 Exhaust B	54	62	80	75	103
98 108					
FPC 7 EA0 Chip	64	72	90	90	100
100 105					
FPC 7 EA0_XR0 Chip	79	87	102	102	106
106 108					
FPC 7 EA0_XR1 Chip	79	87	102	102	106
106 108					



FPC 7 EA1 Chip	64	72	90	90	100
100 105					
FPC 7 EA1_XR0 Chip	79	87	102	102	106
106 108					
FPC 7 EA1_XR1 Chip	79	87	102	102	106
106 108					
FPC 7 PEX Chip	74	82	100	100	105
105 110					
FPC 7 EA2 Chip	64	72	90	90	100
100 105					
FPC 7 EA2_XR0 Chip	79	87	102	102	106
106 108					
FPC 7 EA2_XR1 Chip	79	87	102	102	106
106 108					
FPC 7 EA3 Chip	64	72	90	90	100
100 105					
FPC 7 EA3_XR0 Chip	79	87	102	102	106
106 108					
FPC 7 EA3_XR1 Chip	79	87	102	102	106
106 108					
FPC 7 EA0_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 7 EA0_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA0_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 7 EA0_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA0_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 7 EA0_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA1_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 7 EA1_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA1_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 7 EA1_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA1_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 7 EA1_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA2_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 7 EA2_HMC0 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA2_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 7 EA2_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA2_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 7 EA2_HMC2 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA3_HMC0 Logic die	81	89	103	103	107
107 111					
FPC 7 EA3_HMC0 DRAM botm	76	84	98	98	102
102 106					



FPC 7 EA3_HMC1 Logic die	81	89	103	103	107
107 111					
FPC 7 EA3_HMC1 DRAM botm	76	84	98	98	102
102 106					
FPC 7 EA3_HMC2 Logic die	81	89	103	103	107
107 111					
FPC 7 EA3_HMC2 DRAM botm	76	84	98	98	102
102 106					

As per the above output, the MPC7E, MPC8E, and MPC9E are installed in the FPC slots 4, 7, and 3, respectively.

### show chassis temperature-thresholds (MX2010 Router)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal	
Routing Engine 0	70	80	95	95	110	110	112	
Routing Engine 1	70	80	95	95	110	110	112	
CB 0 IntakeA-Zone0	60	65	78	75	85	80	95	
CB 0 IntakeB-Zone1	60	65	78	75	85	80	95	
CB 0 IntakeC-Zone0	60	65	78	75	85	80	95	
CB 0 ExhaustA-Zone0	60	65	78	75	85	80	95	
CB 0 ExhaustB-Zone1	60	65	78	75	85	80	95	
CB 0 TCBC-Zone0	60	65	78	75	85	80	95	
CB 1 IntakeA-Zone0	60	65	78	75	85	80	95	
CB 1 IntakeB-Zone1	60	65	78	75	85	80	95	
CB 1 IntakeC-Zone0	60	65	78	75	85	80	95	
CB 1 ExhaustA-Zone0	60	65	78	75	85	80	95	
CB 1 ExhaustB-Zone1	60	65	78	75	85	80	95	
CB 1 TCBC-Zone0	60	65	78	75	85	80	95	
SPMB 0 Intake	56	62	75	63	83	76	95	
SPMB 1 Intake	56	62	75	63	83	76	95	
SFB 0 Intake-Zone0	56	62	75	63	82	70	87	
SFB 0 Exhaust-Zone1	56	62	75	63	82	70	87	
SFB 0 IntakeA-Zone0	56	62	75	63	82	70	87	
SFB 0 IntakeB-Zone1	56	62	75	63	82	70	87	
SFB 0 Exhaust-Zone0	56	62	75	63	82	70	87	
SFB 0 SFB-XF2-Zone1	70	80	90	90	107	107	115	
SFB 0 SFB-XF1-Zone0	70	80	90	90	107	107	115	
SFB 0 SFB-XF0-Zone0	70	80	90	90	107	107	115	
SFB 1 Intake-Zone0	56	62	75	63	82	70	87	
SFB 1 Exhaust-Zone1	56	62	75	63	82	70	87	
SFB 1 IntakeA-Zone0	56	62	75	63	82	70	87	
SFB 1 IntakeB-Zone1	56	62	75	63	82	70	87	
SFB 1 Exhaust-Zone0	56	62	75	63	82	70	87	
SFB 1 SFB-XF2-Zone1	70	80	90	90	107	107	115	
SFB 1 SFB-XF1-Zone0	70	80	90	90	107	107	115	
SFB 1 SFB-XF0-Zone0	70	80	90	90	107	107	115	
SFB 2 Intake-Zone0	56	62	75	63	82	70	87	
SFB 2 Exhaust-Zone1	56	62	75	63	82	70	87	
SFB 2 IntakeA-Zone0	56	62	75	63	82	70	87	
SFB 2 IntakeB-Zone1	56	62	75	63	82	70	87	
SFB 2 Exhaust-Zone0	56	62	75	63	82	70	87	
SFB 2 SFB-XF2-Zone1	70	80	90	90	107	107	115	
SFB 2 SFB-XF1-Zone0	70	80	90	90	107	107	115	
SFB 2 SFB-XF0-Zone0	70	80	90	90	107	107	115	



SFB 3 Intake-Zone0	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 3 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 3 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 3 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 3 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 3 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 4 Intake-Zone0	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 4 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 4 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 4 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 4 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 4 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 5 Intake-Zone0	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 5 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 5 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 5 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 5 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 5 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 6 Intake-Zone0	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 6 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 6 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 6 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 6 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 6 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 7 Intake-Zone0	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 7 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 7 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 7 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 7 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 7 SFB-XF0-Zone0	70	80	90	90	107	107	115
FPC 0	55	60	75	65	95	80	100
FPC 1	55	60	75	65	90	80	95
FPC 2	55	60	75	65	95	80	100
FPC 3	55	60	75	65	90	80	95
FPC 4	55	60	75	65	90	80	95
FPC 5	55	60	75	65	95	80	100
FPC 6	55	60	75	65	90	80	95
FPC 7	55	60	75	65	95	80	100
FPC 8	55	60	75	65	90	80	95
FPC 9	55	60	75	65	95	80	100
ADC 0 Intake	56	62	75	63	83	76	95
ADC 0 Exhaust	56	62	75	63	83	76	95
ADC 0 ADC-XF1	70	80	90	90	107	107	115
ADC 0 ADC-XF0	70	80	90	90	107	107	115
ADC 1 Intake	56	62	75	63	83	76	95
ADC 1 Exhaust	56	62	75	63	83	76	95
ADC 1 ADC-XF1	70	80	90	90	107	107	115
ADC 1 ADC-XF0	70	80	90	90	107	107	115
ADC 2 Intake	56	62	75	63	83	76	95
ADC 2 Exhaust	56	62	75	63	83	76	95



ADC 2 ADC-XF1	70	80	90	90	107	107	115
ADC 2 ADC-XF0	70	80	90	90	107	107	115
ADC 3 Intake	56	62	75	63	83	76	95
ADC 3 Exhaust	56	62	75	63	83	76	95
ADC 3 ADC-XF1	70	80	90	90	107	107	115
ADC 3 ADC-XF0	70	80	90	90	107	107	115
ADC 4 Intake	56	62	75	63	83	76	95
ADC 4 Exhaust	56	62	75	63	83	76	95
ADC 4 ADC-XF1	70	80	90	90	107	107	115
ADC 4 ADC-XF0	70	80	90	90	107	107	115
ADC 5 Intake	56	62	75	63	83	76	95
ADC 5 Exhaust	56	62	75	63	83	76	95
ADC 5 ADC-XF1	70	80	90	90	107	107	115
ADC 5 ADC-XF0	70	80	90	90	107	107	115
ADC 6 Intake	56	62	75	63	83	76	95
ADC 6 Exhaust	56	62	75	63	83	76	95
ADC 6 ADC-XF1	70	80	90	90	107	107	115
ADC 6 ADC-XF0	70	80	90	90	107	107	115
ADC 7 Intake	56	62	75	63	83	76	95
ADC 7 Exhaust	56	62	75	63	83	76	95
ADC 7 ADC-XF1	70	80	90	90	107	107	115
ADC 7 ADC-XF0	70	80	90	90	107	107	115
ADC 8 Intake	56	62	75	63	83	76	95
ADC 8 Exhaust	56	62	75	63	83	76	95
ADC 8 ADC-XF1	70	80	90	90	107	107	115
ADC 8 ADC-XF0	70	80	90	90	107	107	115
ADC 9 Intake	56	62	75	63	83	76	95
ADC 9 Exhaust	56	62	75	63	83	76	95
ADC 9 ADC-XF1	70	80	90	90	107	107	115
ADC 9 ADC-XF0	70	80	90	90	107	107	115

### show chassis temperature-thresholds (MX2020 Router)

```
user@host> show chassis temperature-thresholds
```

Item	Fan speed		Yellow alarm		Red alarm		Fire Shutdown
	(degrees C) Normal	(degrees C) High	(degrees C) Normal	(degrees C) Bad fan	(degrees C) Normal	(degrees C) Bad fan	(degrees C) Normal
Routing Engine 0	70	80	95	95	110	110	112
Routing Engine 1	70	80	95	95	110	110	112
CB 0 IntakeA-Zone0	60	65	78	75	85	80	95
CB 0 IntakeB-Zone1	60	65	78	75	85	80	95
CB 0 IntakeC-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustA-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 0 TCBC-Zone0	60	65	78	75	85	80	95
CB 1 IntakeA-Zone0	60	65	78	75	85	80	95
CB 1 IntakeB-Zone1	60	65	78	75	85	80	95
CB 1 IntakeC-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustA-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 1 TCBC-Zone0	60	65	78	75	85	80	95
SPMB 0 Intake	56	62	75	63	83	76	95
SPMB 1 Intake	56	62	75	63	83	76	95
SFB 0 Intake-Zone0	56	62	75	63	82	70	87
SFB 0 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 0 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 0 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 0 Exhaust-Zone0	56	62	75	63	82	70	87



SFB 0 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 0 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 0 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 1 Intake-Zone0	56	62	75	63	82	70	87
SFB 1 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 1 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 1 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 1 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 1 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 1 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 1 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 2 Intake-Zone0	56	62	75	63	82	70	87
SFB 2 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 2 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 2 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 2 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 2 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 2 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 2 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 3 Intake-Zone0	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 3 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 3 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 3 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 3 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 3 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 3 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 4 Intake-Zone0	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 4 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 4 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 4 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 4 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 4 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 4 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 5 Intake-Zone0	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 5 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 5 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 5 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 5 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 5 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 5 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 6 Intake-Zone0	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 6 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 6 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 6 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 6 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 6 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 6 SFB-XF0-Zone0	70	80	90	90	107	107	115
SFB 7 Intake-Zone0	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone1	56	62	75	63	82	70	87
SFB 7 IntakeA-Zone0	56	62	75	63	82	70	87
SFB 7 IntakeB-Zone1	56	62	75	63	82	70	87
SFB 7 Exhaust-Zone0	56	62	75	63	82	70	87
SFB 7 SFB-XF2-Zone1	70	80	90	90	107	107	115
SFB 7 SFB-XF1-Zone0	70	80	90	90	107	107	115
SFB 7 SFB-XF0-Zone0	70	80	90	90	107	107	115
FPC 0	55	60	75	65	90	80	95



FPC 1	55	60	75	65	90	80	95
FPC 2	55	60	75	65	90	80	95
FPC 3	55	60	75	65	90	80	95
FPC 4	55	60	75	65	90	80	95
FPC 5	55	60	75	65	90	80	95
FPC 6	55	60	75	65	90	80	95
FPC 7	55	60	75	65	90	80	95
FPC 8	55	60	75	65	90	80	95
FPC 9	55	60	75	65	90	80	95
FPC 10	55	60	75	65	90	80	95
FPC 11	55	60	75	65	90	80	95
FPC 12	55	60	75	65	90	80	95
FPC 13	55	60	75	65	90	80	95
FPC 14	55	60	75	65	90	80	95
FPC 15	55	60	75	65	90	80	95
FPC 16	55	60	75	65	90	80	95
FPC 17	55	60	75	65	90	80	95
FPC 18	55	60	75	65	90	80	95
FPC 19	55	60	75	65	90	80	95
ADC 0 Intake	56	62	75	63	83	76	95
ADC 0 Exhaust	56	62	75	63	83	76	95
ADC 0 ADC-XF1	70	80	90	90	107	107	115
ADC 0 ADC-XF0	70	80	90	90	107	107	115
ADC 1 Intake	56	62	75	63	83	76	95
ADC 1 Exhaust	56	62	75	63	83	76	95
ADC 1 ADC-XF1	70	80	90	90	107	107	115
ADC 1 ADC-XF0	70	80	90	90	107	107	115
ADC 2 Intake	56	62	75	63	83	76	95
ADC 2 Exhaust	56	62	75	63	83	76	95
ADC 2 ADC-XF1	70	80	90	90	107	107	115
ADC 2 ADC-XF0	70	80	90	90	107	107	115
ADC 3 Intake	56	62	75	63	83	76	95
ADC 3 Exhaust	56	62	75	63	83	76	95
ADC 3 ADC-XF1	70	80	90	90	107	107	115
ADC 3 ADC-XF0	70	80	90	90	107	107	115
ADC 4 Intake	56	62	75	63	83	76	95
ADC 4 Exhaust	56	62	75	63	83	76	95
ADC 4 ADC-XF1	70	80	90	90	107	107	115
ADC 4 ADC-XF0	70	80	90	90	107	107	115
ADC 5 Intake	56	62	75	63	83	76	95
ADC 5 Exhaust	56	62	75	63	83	76	95
ADC 5 ADC-XF1	70	80	90	90	107	107	115
ADC 5 ADC-XF0	70	80	90	90	107	107	115
ADC 6 Intake	56	62	75	63	83	76	95
ADC 6 Exhaust	56	62	75	63	83	76	95
ADC 6 ADC-XF1	70	80	90	90	107	107	115
ADC 6 ADC-XF0	70	80	90	90	107	107	115
ADC 7 Intake	56	62	75	63	83	76	95
ADC 7 Exhaust	56	62	75	63	83	76	95
ADC 7 ADC-XF1	70	80	90	90	107	107	115
ADC 7 ADC-XF0	70	80	90	90	107	107	115
ADC 8 Intake	56	62	75	63	83	76	95
ADC 8 Exhaust	56	62	75	63	83	76	95
ADC 8 ADC-XF1	70	80	90	90	107	107	115
ADC 8 ADC-XF0	70	80	90	90	107	107	115
ADC 9 Intake	56	62	75	63	83	76	95
ADC 9 Exhaust	56	62	75	63	83	76	95
ADC 9 ADC-XF1	70	80	90	90	107	107	115
ADC 9 ADC-XF0	70	80	90	90	107	107	115
ADC 10 Intake	56	62	75	63	83	76	95



ADC 10 Exhaust	56	62	75	63	83	76	95
ADC 10 ADC-XF1	70	80	90	90	107	107	115
ADC 10 ADC-XF0	70	80	90	90	107	107	115
ADC 11 Intake	56	62	75	63	83	76	95
ADC 11 Exhaust	56	62	75	63	83	76	95
ADC 11 ADC-XF1	70	80	90	90	107	107	115
ADC 11 ADC-XF0	70	80	90	90	107	107	115
ADC 12 Intake	56	62	75	63	83	76	95
ADC 12 Exhaust	56	62	75	63	83	76	95
ADC 12 ADC-XF1	70	80	90	90	107	107	115
ADC 12 ADC-XF0	70	80	90	90	107	107	115
ADC 13 Intake	56	62	75	63	83	76	95
ADC 13 Exhaust	56	62	75	63	83	76	95
ADC 13 ADC-XF1	70	80	90	90	107	107	115
ADC 13 ADC-XF0	70	80	90	90	107	107	115
ADC 14 Intake	56	62	75	63	83	76	95
ADC 14 Exhaust	56	62	75	63	83	76	95
ADC 14 ADC-XF1	70	80	90	90	107	107	115
ADC 14 ADC-XF0	70	80	90	90	107	107	115
ADC 15 Intake	56	62	75	63	83	76	95
ADC 15 Exhaust	56	62	75	63	83	76	95
ADC 15 ADC-XF1	70	80	90	90	107	107	115
ADC 15 ADC-XF0	70	80	90	90	107	107	115
ADC 16 Intake	56	62	75	63	83	76	95
ADC 16 Exhaust	56	62	75	63	83	76	95
ADC 16 ADC-XF1	70	80	90	90	107	107	115
ADC 16 ADC-XF0	70	80	90	90	107	107	115
ADC 17 Intake	56	62	75	63	83	76	95
ADC 17 Exhaust	56	62	75	63	83	76	95
ADC 17 ADC-XF1	70	80	90	90	107	107	115
ADC 17 ADC-XF0	70	80	90	90	107	107	115
ADC 18 Intake	56	62	75	63	83	76	95
ADC 18 Exhaust	56	62	75	63	83	76	95
ADC 18 ADC-XF1	70	80	90	90	107	107	115
ADC 18 ADC-XF0	70	80	90	90	107	107	115
ADC 19 Intake	56	62	75	63	83	76	95
ADC 19 Exhaust	56	62	75	63	83	76	95
ADC 19 ADC-XF1	70	80	90	90	107	107	115
ADC 19 ADC-XF0	70	80	90	90	107	107	115

### show chassis temperature-thresholds (MX2020 Router with MPC4E)

```
user@host> show chassis temperature-thresholds
```

Fan speed	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)		(degrees C)
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal
Routing Engine 0	70	80	95	95	110	110	112
Routing Engine 1	70	80	95	95	110	110	112
CB 0 IntakeA-Zone0	60	65	78	75	85	80	95
CB 0 IntakeB-Zone1	60	65	78	75	85	80	95
CB 0 IntakeC-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustA-Zone0	60	65	78	75	85	80	95
CB 0 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 0 TCBC-Zone0	60	65	78	75	85	80	95
CB 1 IntakeA-Zone0	60	65	78	75	85	80	95
CB 1 IntakeB-Zone1	60	65	78	75	85	80	95
CB 1 IntakeC-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustA-Zone0	60	65	78	75	85	80	95



CB 1 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 1 TCBC-Zone0	60	65	78	75	85	80	95
SPMB 0 Intake	56	62	75	63	83	76	95
SPMB 1 Intake	56	62	75	63	83	76	95
SFB 0 Intake-Zone0	56	62	70	70	85	85	89
SFB 0 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 0 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 0 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 0 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 0 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 0 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 0 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 1 Intake-Zone0	56	62	70	70	85	85	89
SFB 1 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 1 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 1 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 1 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 1 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 1 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 1 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 2 Intake-Zone0	56	62	70	70	85	85	89
SFB 2 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 2 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 2 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 2 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 2 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 2 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 2 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 3 Intake-Zone0	56	62	70	70	85	85	89
SFB 3 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 3 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 3 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 3 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 3 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 3 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 3 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 4 Intake-Zone0	56	62	70	70	85	85	89
SFB 4 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 4 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 4 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 4 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 4 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 4 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 4 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 5 Intake-Zone0	56	62	70	70	85	85	89
SFB 5 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 5 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 5 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 5 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 5 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 5 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 5 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 6 Intake-Zone0	56	62	70	70	85	85	89
SFB 6 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 6 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 6 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 6 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 6 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 6 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 6 SFB-XF0-Zone0	70	75	90	85	95	90	100



SFB 7 Intake-Zone0	56	62	70	70	85	85	89
SFB 7 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 7 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 7 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 7 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 7 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 7 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 7 SFB-XF0-Zone0	70	75	90	85	95	90	100
FPC 0	55	60	75	65	90	80	95
FPC 9	55	60	75	65	90	80	95
FPC 10	55	60	75	65	90	80	95
FPC 14	55	60	75	65	95	80	100
FPC 19	55	60	75	65	90	80	95
ADC 0 Intake	50	55	60	60	65	65	80
ADC 0 Exhaust	50	55	60	60	65	65	80
ADC 0 ADC-XF1	70	75	90	85	95	90	100
ADC 0 ADC-XF0	70	75	90	85	95	90	100
ADC 9 Intake	50	55	60	60	65	65	80
ADC 9 Exhaust	50	55	60	60	65	65	80
ADC 9 ADC-XF1	70	75	90	85	95	90	100
ADC 9 ADC-XF0	70	75	90	85	95	90	100
ADC 10 Intake	50	55	60	60	65	65	80
ADC 10 Exhaust	50	55	60	60	65	65	80
ADC 10 ADC-XF1	70	75	90	85	95	90	100
ADC 10 ADC-XF0	70	75	90	85	95	90	100
ADC 14 Intake	50	55	60	60	65	65	80
ADC 14 Exhaust	50	55	60	60	65	65	80
ADC 14 ADC-XF1	70	75	90	85	95	90	100
ADC 14 ADC-XF0	70	75	90	85	95	90	100
ADC 19 Intake	50	55	60	60	65	65	80
ADC 19 Exhaust	50	55	60	60	65	65	80
ADC 19 ADC-XF1	70	75	90	85	95	90	100
ADC 19 ADC-XF0	70	75	90	85	95	90	100

### show chassis temperature-thresholds (MX2008 Routers)

```
user@host> show chassis temperature-thresholds
```

Shutdown (degrees C) Item	Fan speed		Yellow alarm		Red alarm		Fire
	(degrees C)		(degrees C)		(degrees C)		
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine 0 CPU 98	58	63	78	75	93	90	
Routing Engine 1 CPU 98	58	63	78	75	93	90	
CB 0 Inlet1 85	55	60	65	62	75	72	
CB 0 Inlet2 90	45	50	61	58	80	77	
CB 0 Inlet3 90	57	62	68	65	80	77	
CB 0 Inlet4 95	55	60	80	77	90	87	
CB 0 Exhaust1 85	55	60	65	62	75	72	
CB 0 Exhaust2 90	50	55	60	57	80	77	



CB 0 Exhaust3 96	70	75	81	78	91	88
CB 0 Exhaust4 105	75	80	90	87	100	97
CB 1 Inlet1 85	55	60	65	62	75	72
CB 1 Inlet2 90	45	50	61	58	80	77
CB 1 Inlet3 90	57	62	68	65	80	77
CB 1 Inlet4 95	55	60	80	77	90	87
CB 1 Exhaust1 85	55	60	65	62	75	72
CB 1 Exhaust2 90	50	55	60	57	80	77
CB 1 Exhaust3 96	70	75	81	78	91	88
CB 1 Exhaust4 105	75	80	90	87	100	97
SFB 0 Inlet1 81	49	54	62	59	76	73
SFB 0 Inlet2 88	65	70	71	68	83	80
SFB 0 Exhaust1 80	45	50	61	58	75	72
SFB 0 Exhaust2 85	60	65	69	66	80	77
SFB 0 SFB2-PF-local 100	65	70	75	72	95	92
SFB 0 SFB2-PF-die 120	88	93	98	95	118	115
SFB 1 Inlet1 81	49	54	62	59	76	73
SFB 1 Inlet2 88	65	70	71	68	83	80
SFB 1 Exhaust1 80	45	50	61	58	75	72
SFB 1 Exhaust2 85	60	65	69	66	80	77
SFB 1 SFB2-PF-local 100	65	70	75	72	95	92
SFB 1 SFB2-PF-die 120	88	93	98	95	118	115
SFB 2 Inlet1 81	49	54	62	59	76	73
SFB 2 Inlet2 88	65	70	71	68	83	80
SFB 2 Exhaust1 80	45	50	61	58	75	72
SFB 2 Exhaust2 85	60	65	69	66	80	77
SFB 2 SFB2-PF-local 100	65	70	75	72	95	92
SFB 2 SFB2-PF-die 120	88	93	98	95	118	115
SFB 3 Inlet1 81	49	54	62	59	76	73
SFB 3 Inlet2 88	65	70	71	68	83	80



SFB 3 Exhaust1 80	45	50	61	58	75	72
SFB 3 Exhaust2 85	60	65	69	66	80	77
SFB 3 SFB2-PF-local 100	65	70	75	72	95	92
SFB 3 SFB2-PF-die 120	88	93	98	95	118	115
SFB 4 Inlet1 81	49	54	62	59	76	73
SFB 4 Inlet2 88	65	70	71	68	83	80
SFB 4 Exhaust1 80	45	50	61	58	75	72
SFB 4 Exhaust2 85	60	65	69	66	80	77
SFB 4 SFB2-PF-local 100	65	70	75	72	95	92
SFB 4 SFB2-PF-die 120	88	93	98	95	118	115
SFB 5 Inlet1 81	49	54	62	59	76	73
SFB 5 Inlet2 88	65	70	71	68	83	80
SFB 5 Exhaust1 80	45	50	61	58	75	72
SFB 5 Exhaust2 85	60	65	69	66	80	77
SFB 5 SFB2-PF-local 100	65	70	75	72	95	92
SFB 5 SFB2-PF-die 120	88	93	98	95	118	115
SFB 6 Inlet1 81	49	54	62	59	76	73
SFB 6 Inlet2 88	65	70	71	68	83	80
SFB 6 Exhaust1 80	45	50	61	58	75	72
SFB 6 Exhaust2 85	60	65	69	66	80	77
SFB 6 SFB2-PF-local 100	65	70	75	72	95	92
SFB 6 SFB2-PF-die 120	88	93	98	95	118	115
SFB 7 Inlet1 81	49	54	62	59	76	73
SFB 7 Inlet2 88	65	70	71	68	83	80
SFB 7 Exhaust1 80	45	50	61	58	75	72
SFB 7 Exhaust2 85	60	65	69	66	80	77
SFB 7 SFB2-PF-local 100	65	70	75	72	95	92
SFB 7 SFB2-PF-die 120	88	93	98	95	118	115
FPC 0 95	55	60	75	65	90	80
FPC 3 110	55	60	75	65	105	80



FPC 5 110	55	60	75	65	105	80
FPC 7 95	55	60	75	65	90	80
FPC 9 Intake 95	60	65	75	75	85	85
FPC 9 Exhaust A 95	60	65	75	75	85	85
FPC 9 Exhaust B 95	60	65	75	75	85	85
FPC 9 XL 0 Chip 110	70	75	85	85	102	102
FPC 9 XL 0 XR2 0 Chip 115	75	80	90	90	105	105
FPC 9 XL 0 XR2 1 Chip 115	75	80	90	90	105	105
FPC 9 XL 1 Chip 110	70	75	85	85	102	102
FPC 9 XL 1 XR2 0 Chip 115	75	80	90	90	105	105
FPC 9 XL 1 XR2 1 Chip 115	75	80	90	90	105	105
FPC 9 XM 0 Chip 110	70	75	85	85	100	100
FPC 9 XM 1 Chip 110	70	75	85	85	100	100
FPC 9 XM 2 Chip 110	70	75	85	85	100	100
FPC 9 XM 3 Chip 110	70	75	85	85	100	100
FPC 9 PCIe Switch Chip 120	80	85	95	95	105	105
ADC 0 Intake 80	50	55	65	65	75	75
ADC 0 Exhaust 80	50	55	65	65	75	75
ADC 0 ADC-XF1 100	70	75	90	85	95	90
ADC 0 ADC-XF0 100	70	75	90	85	95	90
ADC 3 Intake 80	50	55	65	65	75	75
ADC 3 Exhaust 80	50	55	65	65	75	75
ADC 3 ADC-XF1 100	70	75	90	85	95	90
ADC 3 ADC-XF0 100	70	75	90	85	95	90
ADC 5 Intake 80	50	55	65	65	75	75
ADC 5 Exhaust 80	50	55	65	65	75	75
ADC 5 ADC-XF1 100	70	75	90	85	95	90
ADC 5 ADC-XF0 100	70	75	90	85	95	90
ADC 7 Intake 80	50	55	65	65	75	75
ADC 7 Exhaust 80	50	55	65	65	75	75



ADC 7 ADC-XF1 100	70	75	90	85	95	90
ADC 7 ADC-XF0 100	70	75	90	85	95	90

**show chassis temperature-thresholds (MX10003 Router)**

```
user@host> show chassis temperature-thresholds
```

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine 0	48	54	85	85	100	100	
102							
Routing Engine 1	48	54	85	85	100	100	
102							
CB 0 Exhaust Temp Sensor	60	65	75	75	85	85	
95							
CB 0 Inlet Temp Sensor	60	65	75	75	85	85	
95							
CB 0 CPU DIE Temp Sensor	83	90	98	98	105	105	
110							
CB 1 Exhaust Temp Sensor	60	65	75	75	85	85	
95							
CB 1 Inlet Temp Sensor	60	65	75	75	85	85	
95							
CB 1 CPU DIE Temp Sensor	83	90	98	98	105	105	
110							
FPC 0 Intake Temp Sensor	40	45	75	70	85	80	
95							
FPC 0 Exhaust-A Temp Sensor	55	60	85	80	90	90	
100							
FPC 0 Exhaust-B Temp Sensor	55	60	85	80	90	90	
100							
FPC 0 EA0 Chip	87	92	97	97	105	105	
110							
FPC 0 EA0-XR0 Chip	88	93	98	98	120	120	
125							
FPC 0 EA0-XR1 Chip	88	93	98	98	120	120	
125							
FPC 0 EA1 Chip	87	92	97	97	105	105	
110							
FPC 0 EA1-XR0 Chip	88	93	98	98	120	120	
125							
FPC 0 EA1-XR1 Chip	88	93	98	98	120	120	
125							
FPC 0 EA2 Chip	87	92	97	97	105	105	
110							
FPC 0 EA2-XR0 Chip	88	93	98	98	120	120	
125							
FPC 0 EA2-XR1 Chip	88	93	98	98	120	120	
125							
FPC 0 PF Chip	89	94	104	104	120	120	
120							
FPC 0 EA0_HMC0 Logic die	88	93	103	103	120	120	
125							



FPC 0 EA0_HMC0 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA0_HMC1 Logic die 125	88	93	103	103	120	120
FPC 0 EA0_HMC1 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA0_HMC2 Logic die 125	88	93	103	103	120	120
FPC 0 EA0_HMC2 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA1_HMC0 Logic die 125	88	93	103	103	120	120
FPC 0 EA1_HMC0 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA1_HMC1 Logic die 125	88	93	103	103	120	120
FPC 0 EA1_HMC1 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA1_HMC2 Logic die 125	88	93	103	103	120	120
FPC 0 EA1_HMC2 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA2_HMC0 Logic die 125	88	93	103	103	120	120
FPC 0 EA2_HMC0 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA2_HMC1 Logic die 125	88	93	103	103	120	120
FPC 0 EA2_HMC1 DRAM botm 125	83	88	98	98	120	120
FPC 0 EA2_HMC2 Logic die 125	88	93	103	103	120	120
FPC 0 EA2_HMC2 DRAM botm 125	83	88	98	98	120	120
FPC 1 Intake Temp Sensor 95	40	45	75	70	85	80
FPC 1 Exhaust-A Temp Sensor 100	55	60	85	80	90	90
FPC 1 Exhaust-B Temp Sensor 100	55	60	85	80	90	90
FPC 1 EA0 Chip 110	87	92	97	97	105	105
FPC 1 EA0-XR0 Chip 125	88	93	98	98	120	120
FPC 1 EA0-XR1 Chip 125	88	93	98	98	120	120
FPC 1 EA1 Chip 110	87	92	97	97	105	105
FPC 1 EA1-XR0 Chip 125	88	93	98	98	120	120
FPC 1 EA1-XR1 Chip 125	88	93	98	98	120	120
FPC 1 EA2 Chip 110	87	92	97	97	105	105
FPC 1 EA2-XR0 Chip 125	88	93	98	98	120	120
FPC 1 EA2-XR1 Chip 125	88	93	98	98	120	120
FPC 1 PF Chip 120	89	94	104	104	120	120



FPC 1 EA0_HMC0 Logic die 125	88	93	103	103	120	120
FPC 1 EA0_HMC0 DRAM botm 125	83	88	98	98	120	120
FPC 1 EA0_HMC1 Logic die 125	88	93	103	103	120	120
FPC 1 EA0_HMC1 DRAM botm 125	83	88	98	98	120	120
FPC 1 EA0_HMC2 Logic die 125	88	93	103	103	120	120
FPC 1 EA0_HMC2 DRAM botm 125	83	88	98	98	120	120
FPC 1 EA1_HMC0 Logic die 125	88	93	103	103	120	120
FPC 1 EA1_HMC0 DRAM botm 125	83	88	98	98	120	120
FPC 1 EA1_HMC1 Logic die 125	88	93	103	103	120	120
FPC 1 EA1_HMC1 DRAM botm 125	83	88	98	98	120	120
FPC 1 EA1_HMC2 Logic die 125	88	93	103	103	120	120
FPC 1 EA1_HMC2 DRAM botm 125	83	88	98	98	120	120
FPC 1 EA2_HMC0 Logic die 125	88	93	103	103	120	120
FPC 1 EA2_HMC0 DRAM botm 125	83	88	98	98	120	120
FPC 1 EA2_HMC1 Logic die 125	88	93	103	103	120	120
FPC 1 EA2_HMC1 DRAM botm 125	83	88	98	98	120	120
FPC 1 EA2_HMC2 Logic die 125	88	93	103	103	120	120
FPC 1 EA2_HMC2 DRAM botm 125	83	88	98	98	120	120

### show chassis temperature-thresholds (MX10008 Router)

```
user@host> show chassis temperature-thresholds
```

Fire Shutdown		Fan speed		Yellow alarm		Red alarm
C)	(degrees C)	(degrees C)		(degrees C)		(degrees
Item		Normal	High	Normal	Bad fan	Normal
Bad fan	Normal					
Routing Engine 0		65	70	95	95	100
100	110					
Routing Engine 1		65	70	95	95	100
100	110					
CB 0 Intake A Temp Sensor		30	35	80	80	85
85	95					
CB 0 Intake B Temp Sensor		30	35	80	80	85
85	95					
CB 0 Exhaust A Temp Sensor		40	45	80	80	85
85	95					
CB 0 Exhaust B Temp Sensor		40	45	80	80	85
85	95					
CB 0 Middle Temp Sensor		40	45	80	80	85



85	95					
CB 1 Intake A Temp Sensor		30	35	80	80	85
85	95					
CB 1 Intake B Temp Sensor		30	35	80	80	85
85	95					
CB 1 Exhaust A Temp Sensor		40	45	80	80	85
85	95					
CB 1 Exhaust B Temp Sensor		40	45	80	80	85
85	95					
CB 1 Middle Temp Sensor		40	45	80	80	85
85	95					
FPC 0 Intake-A Temp Sensor		52	62	72	72	85
85	90					
FPC 0 Exhaust-A Temp Sensor		75	85	98	98	103
103	108					
FPC 0 Exhaust-B Temp Sensor		75	85	98	98	103
103	108					
FPC 0 EA0 Temp Sensor		62	72	90	90	100
100	105					
FPC 0 EA0_XR0 Temp Sensor		77	87	100	100	105
105	108					
FPC 0 EA0_XR1 Temp Sensor		77	87	100	100	105
105	108					
FPC 0 EA1 Temp Sensor		62	72	90	90	100
100	105					
FPC 0 EA1_XR0 Temp Sensor		77	87	100	100	105
105	108					
FPC 0 EA1_XR1 Temp Sensor		77	87	100	100	105
105	108					
FPC 0 EA2 Temp Sensor		62	72	90	90	100
100	105					
FPC 0 EA2_XR0 Temp Sensor		77	87	100	100	105
105	108					
FPC 0 EA2_XR1 Temp Sensor		77	87	100	100	105
105	108					
FPC 0 EA3 Temp Sensor		62	72	90	90	100
100	105					
FPC 0 EA3_XR0 Temp Sensor		77	87	100	100	105
105	108					
FPC 0 EA3_XR1 Temp Sensor		77	87	100	100	105
105	108					
FPC 0 EA4 Temp Sensor		62	72	90	90	100
100	105					
FPC 0 EA4_XR0 Temp Sensor		77	87	100	100	105
105	108					
FPC 0 EA4_XR1 Temp Sensor		77	87	100	100	105
105	108					
FPC 0 EA5 Temp Sensor		62	72	90	90	100
100	105					
FPC 0 EA5_XR0 Temp Sensor		77	87	100	100	105
105	108					
FPC 0 EA5_XR1 Temp Sensor		77	87	100	100	105
105	108					
FPC 0 EA0_HMC0 Logic die		79	89	103	103	110
110	115					
FPC 0 EA0_HMC0 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA0_HMC1 Logic die		79	89	103	103	110
110	115					
FPC 0 EA0_HMC1 DRAM botm		74	84	98	98	105



105	110					
FPC 0 EA0_HMC2 Logic die		79	89	103	103	110
110	115					
FPC 0 EA0_HMC2 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA1_HMC0 Logic die		79	89	103	103	110
110	115					
FPC 0 EA1_HMC0 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA1_HMC1 Logic die		79	89	103	103	110
110	115					
FPC 0 EA1_HMC1 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA1_HMC2 Logic die		79	89	103	103	110
110	115					
FPC 0 EA1_HMC2 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA2_HMC0 Logic die		79	89	103	103	110
110	115					
FPC 0 EA2_HMC0 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA2_HMC1 Logic die		79	89	103	103	110
110	115					
FPC 0 EA2_HMC1 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA2_HMC2 Logic die		79	89	103	103	110
110	115					
FPC 0 EA2_HMC2 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA3_HMC0 Logic die		79	89	103	103	110
110	115					
FPC 0 EA3_HMC0 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA3_HMC1 Logic die		79	89	103	103	110
110	115					
FPC 0 EA3_HMC1 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA3_HMC2 Logic die		79	89	103	103	110
110	115					
FPC 0 EA3_HMC2 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA4_HMC0 Logic die		79	89	103	103	110
110	115					
FPC 0 EA4_HMC0 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA4_HMC1 Logic die		79	89	103	103	110
110	115					
FPC 0 EA4_HMC1 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA4_HMC2 Logic die		79	89	103	103	110
110	115					
FPC 0 EA4_HMC2 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA5_HMC0 Logic die		79	89	103	103	110
110	115					
FPC 0 EA5_HMC0 DRAM botm		74	84	98	98	105
105	110					
FPC 0 EA5_HMC1 Logic die		79	89	103	103	110
110	115					
FPC 0 EA5_HMC1 DRAM botm		74	84	98	98	105



105	110					
FPC 0 EA5_HMC2 Logic die		79	89	103	103	110
110	115					
FPC 0 EA5_HMC2 DRAM botm		74	84	98	98	105
105	110					
FPC 2 Intake-A Temp Sensor		52	62	72	72	85
85	90					
FPC 2 Exhaust-A Temp Sensor		75	85	98	98	103
103	108					
FPC 2 Exhaust-B Temp Sensor		75	85	98	98	103
103	108					
FPC 2 EA0 Temp Sensor		62	72	90	90	100
100	105					
FPC 2 EA0_XR0 Temp Sensor		77	87	100	100	105
105	108					
FPC 2 EA0_XR1 Temp Sensor		77	87	100	100	105
105	108					
FPC 2 EA1 Temp Sensor		62	72	90	90	100
100	105					
FPC 2 EA1_XR0 Temp Sensor		77	87	100	100	105
105	108					
FPC 2 EA1_XR1 Temp Sensor		77	87	100	100	105
105	108					
FPC 2 EA2 Temp Sensor		62	72	90	90	100
100	105					
FPC 2 EA2_XR0 Temp Sensor		77	87	100	100	105
105	108					
FPC 2 EA2_XR1 Temp Sensor		77	87	100	100	105
105	108					
FPC 2 EA3 Temp Sensor		62	72	90	90	100
100	105					
FPC 2 EA3_XR0 Temp Sensor		77	87	100	100	105
105	108					
FPC 2 EA3_XR1 Temp Sensor		77	87	100	100	105
105	108					
FPC 2 EA4 Temp Sensor		62	72	90	90	100
100	105					
FPC 2 EA4_XR0 Temp Sensor		77	87	100	100	105
105	108					
FPC 2 EA4_XR1 Temp Sensor		77	87	100	100	105
105	108					
FPC 2 EA5 Temp Sensor		62	72	90	90	100
100	105					
FPC 2 EA5_XR0 Temp Sensor		77	87	100	100	105
105	108					
FPC 2 EA5_XR1 Temp Sensor		77	87	100	100	105
105	108					
FPC 2 EA0_HMC0 Logic die		79	89	103	103	110
110	115					
FPC 2 EA0_HMC0 DRAM botm		74	84	98	98	105
105	110					
FPC 2 EA0_HMC1 Logic die		79	89	103	103	110
110	115					
FPC 2 EA0_HMC1 DRAM botm		74	84	98	98	105
105	110					
FPC 2 EA0_HMC2 Logic die		79	89	103	103	110
110	115					
FPC 2 EA0_HMC2 DRAM botm		74	84	98	98	105
105	110					
FPC 2 EA1_HMC0 Logic die		79	89	103	103	110



110	115					
FPC 2 EA1_HMC0	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA1_HMC1	Logic die	79	89	103	103	110
110	115					
FPC 2 EA1_HMC1	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA1_HMC2	Logic die	79	89	103	103	110
110	115					
FPC 2 EA1_HMC2	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA2_HMC0	Logic die	79	89	103	103	110
110	115					
FPC 2 EA2_HMC0	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA2_HMC1	Logic die	79	89	103	103	110
110	115					
FPC 2 EA2_HMC1	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA2_HMC2	Logic die	79	89	103	103	110
110	115					
FPC 2 EA2_HMC2	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA3_HMC0	Logic die	79	89	103	103	110
110	115					
FPC 2 EA3_HMC0	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA3_HMC1	Logic die	79	89	103	103	110
110	115					
FPC 2 EA3_HMC1	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA3_HMC2	Logic die	79	89	103	103	110
110	115					
FPC 2 EA3_HMC2	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA4_HMC0	Logic die	79	89	103	103	110
110	115					
FPC 2 EA4_HMC0	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA4_HMC1	Logic die	79	89	103	103	110
110	115					
FPC 2 EA4_HMC1	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA4_HMC2	Logic die	79	89	103	103	110
110	115					
FPC 2 EA4_HMC2	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA5_HMC0	Logic die	79	89	103	103	110
110	115					
FPC 2 EA5_HMC0	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA5_HMC1	Logic die	79	89	103	103	110
110	115					
FPC 2 EA5_HMC1	DRAM botm	74	84	98	98	105
105	110					
FPC 2 EA5_HMC2	Logic die	79	89	103	103	110
110	115					
FPC 2 EA5_HMC2	DRAM botm	74	84	98	98	105
105	110					
FPC 3 Intake-A	Temp Sensor	52	62	72	72	85



85	90				
FPC 3 Exhaust-A Temp Sensor	75	85	98	98	103
103 108					
FPC 3 Exhaust-B Temp Sensor	75	85	98	98	103
103 108					
FPC 3 EA0 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA0_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA0_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA1 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA1_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA1_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA2 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA2_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA2_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA3 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA3_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA3_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA4 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA4_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA4_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA5 Temp Sensor	62	72	90	90	100
100 105					
FPC 3 EA5_XR0 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA5_XR1 Temp Sensor	77	87	100	100	105
105 108					
FPC 3 EA0_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 3 EA0_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 3 EA0_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 3 EA0_HMC1 DRAM botm	74	84	98	98	105
105 110					
FPC 3 EA0_HMC2 Logic die	79	89	103	103	110
110 115					
FPC 3 EA0_HMC2 DRAM botm	74	84	98	98	105
105 110					
FPC 3 EA1_HMC0 Logic die	79	89	103	103	110
110 115					
FPC 3 EA1_HMC0 DRAM botm	74	84	98	98	105
105 110					
FPC 3 EA1_HMC1 Logic die	79	89	103	103	110
110 115					
FPC 3 EA1_HMC1 DRAM botm	74	84	98	98	105



105	110					
FPC 3 EA1_HMC2 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA1_HMC2 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA2_HMC0 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA2_HMC0 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA2_HMC1 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA2_HMC1 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA2_HMC2 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA2_HMC2 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA3_HMC0 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA3_HMC0 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA3_HMC1 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA3_HMC1 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA3_HMC2 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA3_HMC2 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA4_HMC0 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA4_HMC0 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA4_HMC1 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA4_HMC1 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA4_HMC2 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA4_HMC2 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA5_HMC0 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA5_HMC0 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA5_HMC1 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA5_HMC1 DRAM botm	74	84	98	98	105	
105	110					
FPC 3 EA5_HMC2 Logic die	79	89	103	103	110	
110	115					
FPC 3 EA5_HMC2 DRAM botm	74	84	98	98	105	
105	110					
SFB 0 Intake-A	65	75	85	85	95	
95	105					
SFB 0 Intake-B	65	75	85	85	95	
95	105					
SFB 0 Exhaust-A	75	85	95	95	95	
95	105					
SFB 0 Exhaust-B	75	85	95	95	95	



95	105					
SFB 0 PF0		65	75	100	100	105
105	115					
SFB 0 PF1		65	75	100	100	105
105	115					
SFB 1 Intake-A		65	75	85	85	95
95	105					
SFB 1 Intake-B		65	75	85	85	95
95	105					
SFB 1 Exhaust-A		75	85	95	95	95
95	105					
SFB 1 Exhaust-B		75	85	95	95	95
95	105					
SFB 1 PF0		65	75	100	100	105
105	115					
SFB 1 PF1		65	75	100	100	105
105	115					
SFB 2 Intake-A		65	75	85	85	95
95	105					
SFB 2 Intake-B		65	75	85	85	95
95	105					
SFB 2 Exhaust-A		75	85	95	95	95
95	105					
SFB 2 Exhaust-B		75	85	95	95	95
95	105					
SFB 2 PF0		65	75	100	100	105
105	115					
SFB 2 PF1		65	75	100	100	105
105	115					
SFB 3 Intake-A		65	75	85	85	95
95	105					
SFB 3 Intake-B		65	75	85	85	95
95	105					
SFB 3 Exhaust-A		75	85	95	95	95
95	105					
SFB 3 Exhaust-B		75	85	95	95	95
95	105					
SFB 3 PF0		65	75	100	100	105
105	115					
SFB 3 PF1		65	75	100	100	105
105	115					
SFB 4 Intake-A		65	75	85	85	95
95	105					
SFB 4 Intake-B		65	75	85	85	95
95	105					
SFB 4 Exhaust-A		75	85	95	95	95
95	105					
SFB 4 Exhaust-B		75	85	95	95	95
95	105					
SFB 4 PF0		65	75	100	100	105
105	115					
SFB 4 PF1		65	75	100	100	105
105	115					
SFB 5 Intake-A		65	75	85	85	95
95	105					
SFB 5 Intake-B		65	75	85	85	95
95	105					
SFB 5 Exhaust-A		75	85	95	95	95
95	105					
SFB 5 Exhaust-B		75	85	95	95	95



95	105					
SFB 5 PF0		65	75	100	100	105
105	115					
SFB 5 PF1		65	75	100	100	105
105	115					

### show chassis temperature-thresholds (MX204 Router)

```
user@host> show chassis temperature-thresholds
```

Fire Shutdown		Fan speed		Yellow alarm		Red alarm
		(degrees C)		(degrees C)		(degrees
Item	(degrees C)	Normal	High	Normal	Bad fan	Normal
Bad fan	Normal					
Routing Engine		48	54	85	85	100
100	102					
CB Top Right Inlet Sensor		35	40	63	63	85
85	95					
CB Top Left Inlet Sensor		40	45	65	65	85
85	95					
CB Top Right Exhaust Sensor		45	50	68	68	85
85	95					
CB Top Left Exhaust Sensor		65	70	78	78	85
85	95					
CB CPU Core-0 Temp		65	70	80	80	90
90	100					
CB CPU Core-1 Temp		65	70	80	80	90
90	100					
CB CPU Core-2 Temp		65	70	80	80	90
90	100					
CB CPU Core-3 Temp		65	70	80	80	90
90	100					
CB CPU Core-4 Temp		65	70	80	80	90
90	100					
CB CPU Core-5 Temp		65	70	80	80	90
90	100					
CB CPU Core-6 Temp		65	70	80	80	90
90	100					
CB CPU Core-7 Temp		65	70	80	80	90
90	100					
FPC EA0_HMC0 Logic die		85	90	95	95	105
105	110					
FPC EA0_HMC0 DRAM botm		80	85	90	90	105
105	110					
FPC EA0_HMC1 Logic die		85	90	95	95	105
105	110					
FPC EA0_HMC1 DRAM botm		80	85	90	90	105
105	110					
FPC EA0 Chip		92	97	103	103	109
109	115					
FPC EA0-XR0 Chip		85	90	98	98	103
103	110					
FPC EA0-XR1 Chip		85	90	98	98	103
103	110					



## show chassis temperature-thresholds (PTX10008 Routers)

user@host&gt; show chassis temperature-thresholds

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine 0	48	54	85	85	100	100	
102							
Routing Engine 1	48	54	85	85	100	100	
102							
CB 0 Intake Temp Sensor	30	35	80	80	85	85	
95							
CB 0 Exhaust Temp Sensor	30	35	80	80	85	85	
95							
CB 0 CPU Die Temp Sensor	40	45	95	95	100	100	
110							
CB 1 Intake Temp Sensor	30	35	80	80	85	85	
95							
CB 1 Exhaust Temp Sensor	30	35	80	80	85	85	
95							
CB 1 CPU Die Temp Sensor	40	45	95	95	100	100	
110							
FPC 0 Intake-A Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 Intake-B Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 Exhaust-A Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 Exhaust-B Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 Exhaust-C Temp Sensor	30	35	80	80	85	85	
95							
FPC 0 PE0 Temp Sensor	40	45	100	100	105	105	
115							
FPC 0 PE1 Temp Sensor	40	45	100	100	105	105	
115							
FPC 0 PE2 Temp Sensor	40	45	100	100	105	105	
115							
FPC 0 LCPU Temp Sensor	40	45	95	95	100	100	
110							
FPC 5 Intake-A Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 Intake-B Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 Exhaust-A Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 Exhaust-B Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 Exhaust-C Temp Sensor	30	35	80	80	85	85	
95							
FPC 5 PE0 Temp Sensor	40	45	100	100	105	105	
115							
FPC 5 PE1 Temp Sensor	40	45	100	100	105	105	
115							
FPC 5 PE2 Temp Sensor	40	45	100	100	105	105	
115							
FPC 5 PE3 Temp Sensor	40	45	100	100	105	105	



115							
FPC 5	PE4 Temp Sensor	40	45	100	100	105	105
115							
FPC 5	PE5 Temp Sensor	40	45	100	100	105	105
115							
FPC 5	LCPU Temp Sensor	40	45	95	95	100	100
110							
FPC 6	Intake-A Temp Sensor	30	35	80	80	85	85
95							
FPC 6	Intake-B Temp Sensor	30	35	80	80	85	85
95							
FPC 6	Exhaust-A Temp Sensor	30	35	80	80	85	85
95							
FPC 6	Exhaust-B Temp Sensor	30	35	80	80	85	85
95							
FPC 6	Exhaust-C Temp Sensor	30	35	80	80	85	85
95							
FPC 6	PE0 Temp Sensor	40	45	100	100	105	105
115							
FPC 6	PE1 Temp Sensor	40	45	100	100	105	105
115							
FPC 6	PE2 Temp Sensor	40	45	100	100	105	105
115							
FPC 6	PE3 Temp Sensor	40	45	100	100	105	105
115							
FPC 6	PE4 Temp Sensor	40	45	100	100	105	105
115							
FPC 6	PE5 Temp Sensor	40	45	100	100	105	105
115							
FPC 6	LCPU Temp Sensor	40	45	95	95	100	100
110							
SIB 0	Intake-A Temp Sensor	40	45	90	90	95	95
105							
SIB 0	Intake-B Temp Sensor	40	45	90	90	95	95
105							
SIB 0	Exhaust-A Temp Sensor	40	45	90	90	95	95
105							
SIB 0	Exhaust-B Temp Sensor	40	45	90	90	95	95
105							
SIB 0	PF0 Temp Sensor	50	55	100	100	105	105
115							
SIB 0	PF1 Temp Sensor	50	55	100	100	105	105
115							
SIB 1	Intake-A Temp Sensor	40	45	90	90	95	95
105							
SIB 1	Intake-B Temp Sensor	40	45	90	90	95	95
105							
SIB 1	Exhaust-A Temp Sensor	40	45	90	90	95	95
105							
SIB 1	Exhaust-B Temp Sensor	40	45	90	90	95	95
105							
SIB 1	PF0 Temp Sensor	50	55	100	100	105	105
115							
SIB 1	PF1 Temp Sensor	50	55	100	100	105	105
115							

**show chassis temperature-thresholds (T4000 Core Routers)**

```
user@host> show chassis temperature-thresholds
```



Item	Fan speed		Yellow alarm		Red alarm		Fire Shutdown
	(degrees C)		(degrees C)		(degrees C)		(degrees C)
	Normal	High	Normal	Bad fan	Normal	Bad fan	Normal
Chassis default	48	54	65	55	75	65	100
Routing Engine 0	55	65	85	85	100	100	102
Routing Engine 1	55	65	85	85	100	100	102
FPC 0	63	68	75	70	90	83	95
FPC 3	63	68	75	70	90	83	95
FPC 5	56	62	75	63	83	76	95
FPC 6	63	68	75	70	90	83	95
SIB 0	64	70	76	72	87	84	95
SIB 1	64	70	76	72	87	84	95
SIB 2	64	70	76	72	87	84	95
SIB 3	64	70	76	72	87	84	95
SIB 4	64	70	76	72	87	84	95

### show chassis temperature-thresholds (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds
```

```
sfc0-re0:
```

Item	Fan speed		Yellow alarm		Red alarm	
	(degrees C)		(degrees C)		(degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
SIB F13 0	64	70	76	72	90	84
SIB F13 3	64	70	76	72	90	84
SIB F13 6	64	70	76	72	90	84
SIB F13 8	64	70	76	72	90	84
SIB F13 11	64	70	76	72	90	84
SIB F13 12	64	70	76	72	90	84
SIB F2S 16	64	70	76	72	90	84
SIB F2S 17	64	70	76	72	90	84
SIB F2S 18	64	70	76	72	90	84
SIB F2S 19	64	70	76	72	90	84
SIB F2S 20	64	70	76	72	90	84
SIB F2S 21	64	70	76	72	90	84
SIB F2S 22	64	70	76	72	90	84
SIB F2S 23	64	70	76	72	90	84
SIB F2S 24	64	70	76	72	90	84
SIB F2S 25	64	70	76	72	90	84
SIB F2S 26	64	70	76	72	90	84
SIB F2S 27	64	70	76	72	90	84
SIB F2S 28	64	70	76	72	90	84
SIB F2S 29	64	70	76	72	90	84
SIB F2S 30	64	70	76	72	90	84
SIB F2S 31	64	70	76	72	90	84
SIB F2S 32	64	70	76	72	90	84
SIB F2S 33	64	70	76	72	90	84
SIB F2S 34	64	70	76	72	90	84
SIB F2S 35	64	70	76	72	90	84

```
lcc0-re0:
```

Fan speed		Yellow alarm		Red alarm	
-----------	--	--------------	--	-----------	--



Item	(degrees C)		(degrees C)		(degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
FPC 1	56	62	75	63	83	76
FPC 3	56	62	75	63	83	76
FPC 4	56	62	75	63	83	76
FPC 6	56	62	75	63	83	76
FPC 7	56	62	75	63	83	76
SIB 0	48	54	65	60	80	75
SIB 1	48	54	65	60	80	75
SIB 2	48	54	65	60	80	75
SIB 3	48	54	65	60	80	75
SIB 4	48	54	65	60	80	75

lcc1-re0:

---

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
FPC 1	56	62	75	63	83	76
FPC 3	56	62	75	63	83	76
FPC 4	56	62	75	63	83	76
FPC 6	56	62	75	63	83	76
...						

### show chassis temperature-thresholds lcc (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds lcc 1
```

lcc1-re0:

---

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
FPC 1	56	62	75	63	83	76
FPC 3	56	62	75	63	83	76
FPC 4	56	62	75	63	83	76
FPC 6	56	62	75	63	83	76
SIB 0	48	54	65	60	80	75
SIB 1	48	54	65	60	80	75
SIB 2	48	54	65	60	80	75
SIB 3	48	54	65	60	80	75
SIB 4	48	54	65	60	80	75

### show chassis temperature-thresholds sfc (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds sfc 0
```

sfc0-re0:

---

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan



Item	(degrees C)		(degrees C)		(degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
Chassis default	48	54	65	55	75	65
Routing Engine 0	55	65	85	85	100	100
Routing Engine 1	55	65	85	85	100	100
SIB F13 0	64	70	76	72	90	84
SIB F13 3	64	70	76	72	90	84
SIB F13 6	64	70	76	72	90	84
SIB F13 8	64	70	76	72	90	84
SIB F13 11	64	70	76	72	90	84
SIB F13 12	64	70	76	72	90	84
SIB F2S 16	64	70	76	72	90	84
SIB F2S 17	64	70	76	72	90	84
SIB F2S 18	64	70	76	72	90	84
SIB F2S 19	64	70	76	72	90	84
SIB F2S 20	64	70	76	72	90	84
SIB F2S 21	64	70	76	72	90	84
SIB F2S 22	64	70	76	72	90	84
SIB F2S 23	64	70	76	72	90	84
SIB F2S 24	64	70	76	72	90	84
SIB F2S 25	64	70	76	72	90	84
SIB F2S 26	64	70	76	72	90	84
SIB F2S 27	64	70	76	72	90	84
SIB F2S 28	64	70	76	72	90	84
SIB F2S 29	64	70	76	72	90	84
SIB F2S 30	64	70	76	72	90	84
SIB F2S 31	64	70	76	72	90	84
SIB F2S 32	64	70	76	72	90	84
SIB F2S 33	64	70	76	72	90	84
SIB F2S 34	64	70	76	72	90	84
SIB F2S 35	64	70	76	72	90	84

### show chassis temperature-thresholds (TX Matrix Plus routers with 3D SIBs)

```
user@host> show chassis temperature-thresholds
```

```
sfc0-re0:
```

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Chassis default	48	54	65	55	75	65	
100							
Routing Engine 0	70	75	90	87	102	97	
115							
Routing Engine 1	70	75	90	87	102	97	
115							
SIB F13 0 Board	60	65	78	75	85	80	
95							
SIB F13 0 XF Junction	70	75	82	74	105	100	
107							
SIB F13 4 Board	60	65	78	75	85	80	
95							
SIB F13 4 XF Junction	70	75	82	74	105	100	
107							
SIB F13 6 Board	60	65	78	75	85	80	
95							



SIB F13 6 XF Junction 107	70	75	82	74	105	100	
SIB F2S 16 Board 95	60	65	78	75	85	80	
SIB F2S 16 XF Junction 107	70	75	82	74	105	100	
SIB F2S 17 Board 95	60	65	78	75	85	80	
SIB F2S 17 XF Junction 107	70	75	82	74	105	100	
SIB F2S 18 Board 95	60	65	78	75	85	80	
SIB F2S 18 XF Junction 107	70	75	82	74	105	100	
SIB F2S 19 Board 95	60	65	78	75	85	80	
SIB F2S 19 XF Junction 107	70	75	82	74	105	100	
SIB F2S 24 Board 95	60	65	78	75	85	80	
SIB F2S 24 XF Junction 107	70	75	82	74	105	100	
SIB F2S 25 Board 95	60	65	78	75	85	80	
SIB F2S 25 XF Junction 107	70	75	82	74	105	100	
SIB F2S 26 Board 95	60	65	78	75	85	80	
SIB F2S 26 XF Junction 107	70	75	82	74	105	100	
SIB F2S 27 Board 95	60	65	78	75	85	80	
SIB F2S 27 XF Junction 107	70	75	82	74	105	100	
lcc0-re0:							
-----							
Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Chassis default	48	54	65	55	75	65	
100							
Routing Engine 0	55	65	85	85	100	100	
102							
FPC 0	63	68	75	70	90	83	
95							
FPC 1	56	62	75	63	83	76	
95							
FPC 7	56	62	75	63	83	76	
95							
SIB 0	64	70	76	72	87	84	
95							
SIB 0 ASIC Junction	63	68	75	70	105	100	
107							
SIB 2	64	70	76	72	87	84	
95							
SIB 2 ASIC Junction	63	68	75	70	105	100	



107						
SIB 3	64	70	76	72	87	84
95						
SIB 3 ASIC Junction	63	68	75	70	105	100
107						

### show chassis temperature-thresholds (QFX3500 Switch and QFX3600)

```
user@switch> show chassis temperature-thresholds
```

Item	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)	
	Normal	High	Normal	Bad fan	Normal	Bad fan
rmal						
FPC Sensor TopLeft I	48	56	53	43	56	46
FPC Sensor TopRight I	46	54	51	41	54	44
FPC Sensor TopLeft E	58	65	62	52	65	55
FPC Sensor TopRight E	56	64	61	51	64	54
FPC Sensor TopMiddle I	58	64	61	51	64	54
FPC Sensor TopMiddle E	67	74	71	61	74	64
FPC Sensor Bottom I	59	67	64	54	67	57
FPC Sensor Bottom E	66	73	70	60	73	63
FPC Sensor Die Temp	69	75	72	62	75	65
FPC Sensor Mgmt Brd I	46	54	51	41	54	44
FPC Sensor Switch I	56	63	60	50	63	53

### show chassis temperature-thresholds interconnect-device (QFabric System)

```
user@switch> show chassis temperature-thresholds interconnect-device interconnect1
```

Item	Fan speed		Yellow alarm		Red alarm	
	Normal	High	Normal	Bad fan	Normal	Bad fan
temperature-thresholds interconnect-device interconnect1						
Chassis default	48	54	65	55	75	65

### show chassis temperature-thresholds (PTX5000 Packet Transport Router)

```
user@switch> show chassis temperature-thresholds
```

```
user@switch> show chassis temperature-thresholds
```

Item	Fan speed		Yellow alarm		Red alarm		Fire
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Shutdown							
(degrees C)							
Routing Engine 0	80	90	95	85	105	95	
115							
CB 0 Exhaust A	60	65	78	75	85	80	
95							
CB 0 Exhaust B	60	65	78	75	85	80	
95							
CB 1 Exhaust A	60	65	78	75	85	80	
95							
CB 1 Exhaust B	60	65	78	75	85	80	
95							
FPC 3 Exhaust A	80	90	95	85	105	95	
115							



FPC 3 Exhaust B 115	80	90	95	85	105	95
FPC 3 TL5 115	80	90	95	85	105	95
FPC 3 TQ5 115	80	90	95	85	105	95
FPC 3 TL6 115	80	90	95	85	105	95
FPC 3 TQ6 115	80	90	95	85	105	95
FPC 3 TL1 115	80	90	95	85	105	95
FPC 3 TQ1 115	80	90	95	85	105	95
FPC 3 TL2 115	80	90	95	85	105	95
FPC 3 TQ2 115	80	90	95	85	105	95
FPC 3 TL4 115	80	90	95	85	105	95
FPC 3 TQ4 115	80	90	95	85	105	95
FPC 3 TL7 115	80	90	95	85	105	95
FPC 3 TQ7 115	80	90	95	85	105	95
FPC 3 TL0 115	80	90	95	85	105	95
FPC 3 TQ0 115	80	90	95	85	105	95
FPC 3 TL3 115	80	90	95	85	105	95
FPC 3 TQ3 115	80	90	95	85	105	95
SIB 0 Exhaust 95	60	65	78	75	85	80
SIB 0 Junction 115	75	80	90	85	105	95
SIB 1 Exhaust 95	60	65	78	75	85	80
SIB 1 Junction 115	75	80	90	85	105	95
SIB 2 Exhaust 95	60	65	78	75	85	80
SIB 2 Junction 115	75	80	90	85	105	95
SIB 3 Exhaust 95	60	65	78	75	85	80
SIB 3 Junction 115	75	80	90	85	105	95
SIB 4 Exhaust 95	60	65	78	75	85	80
SIB 4 Junction 115	75	80	90	85	105	95
SIB 5 Exhaust 95	60	65	78	75	85	80
SIB 5 Junction 115	75	80	90	85	105	95
SIB 6 Exhaust 95	60	65	78	75	85	80



SIB 6 Junction 115	75	80	90	85	105	95
SIB 7 Exhaust 95	60	65	78	75	85	80
SIB 7 Junction 115	75	80	90	85	105	95
SIB 8 Exhaust 95	60	65	78	75	85	80
SIB 8 Junction 115	75	80	90	85	105	95

### show chassis temperature-thresholds (PTX1000 Packet Transport Router)

```
user@host> show chassis temperature-thresholds
```

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
(degrees C)	(degrees C)		(degrees C)		(degrees C)		
Item	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
FPC 0 Intake Temp Sensor 75	30	65	65	65	70	70	
FPC 0 Exhaust Temp Sensor 75	30	65	65	65	70	70	
FPC 0 Mezz Temp Sensor 0 75	30	65	65	65	70	70	
FPC 0 Mezz Temp Sensor 1 75	30	65	65	65	70	70	
FPC 0 PE2 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE1 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PF0 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE0 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE5 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE4 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PF1 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 PE3 Temp Sensor 103	50	90	90	90	100	100	
FPC 0 CPU Die Temp Sensor 103	50	90	90	90	100	100	
FPC 0 OCX0 Temp Sensor 103	50	90	90	90	100	100	

### show chassis temperature-thresholds (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis temperature-thresholds
```



Fan speed (degrees C)	Yellow alarm (degrees C)		Red alarm (degrees C)		Fire Shutdown (degrees C)	
Item	Normal	High	Normal	Bad fan	Normal	Bad fan
Normal						
Chassis default	48	54	65	55	75	65
100						
Routing Engine 0	70	80	95	95	110	110
112						
Routing Engine 1	70	80	95	95	110	110
112						
FPC 0	55	60	75	65	90	80
95						
FPC 1	55	60	75	65	90	80
95						
FPC 2	55	60	75	65	90	80
95						
FPC 4	55	60	75	65	90	80
95						
FPC 5	55	60	75	65	90	80
95						

### show chassis temperature-thresholds (EX9251 Switches)

```
user@switch> show chassis temperature-thresholds
```

Shutdown	Fan speed (degrees C)		Yellow alarm (degrees C)		Red alarm (degrees C)		Fire
(degrees C)	Normal	High	Normal	Bad fan	Normal	Bad fan	
Item							
Normal							
Routing Engine			48	54	85	85	100
100	102						
CB Top Right Inlet Sensor			35	40	63	63	85
85	95						
CB Top Left Inlet Sensor			40	45	65	65	85
85	95						
CB Top Right Exhaust Sensor			45	50	68	68	85
85	95						
CB Top Left Exhaust Sensor			65	70	78	78	85
85	95						
CB CPU Core-0 Temp			65	70	80	80	90
90	100						
CB CPU Core-1 Temp			65	70	80	80	90
90	100						
CB CPU Core-2 Temp			65	70	80	80	90
90	100						
CB CPU Core-3 Temp			65	70	80	80	90
90	100						
CB CPU Core-4 Temp			65	70	80	80	90
90	100						
CB CPU Core-5 Temp			65	70	80	80	90
90	100						
CB CPU Core-6 Temp			65	70	80	80	90
90	100						
CB CPU Core-7 Temp			65	70	80	80	90
90	100						



FPC EA0_HMC0 Logic die	85	90	95	95	105
105 110					
FPC EA0_HMC0 DRAM botm	80	85	90	90	105
105 110					
FPC EA0_HMC1 Logic die	85	90	95	95	105
105 110					
FPC EA0_HMC1 DRAM botm	80	85	90	90	105
105 110					
FPC EA0 Chip	92	97	103	103	109
109 115					
FPC EA0-XR0 Chip	85	90	98	98	103
103 110					
FPC EA0-XR1 Chip	85	90	98	98	103
103 110					

### show chassis temperature-thresholds (EX9253 witches)

```
user@switch> show chassis temperature-thresholds
```

Shutdown	Fan speed		Yellow alarm		Red alarm		Fire
	(degrees C)		(degrees C)		(degrees C)		
	Normal	High	Normal	Bad fan	Normal	Bad fan	
Normal							
Routing Engine 0			48	54	85	85	100
100 102							
CB 0 Exhaust Temp Sensor			60	65	75	75	85
85 95							
CB 0 Inlet Temp Sensor			60	65	75	75	85
85 95							
CB 0 CPU DIE Temp Sensor			83	90	98	98	105
105 110							
CB 1 Exhaust Temp Sensor			60	65	75	75	85
85 95							
CB 1 Inlet Temp Sensor			60	65	75	75	85
85 95							
CB 1 CPU DIE Temp Sensor			83	90	98	98	105
105 110							
FPC 0 Intake Temp Sensor			40	45	75	70	85
80 95							
FPC 0 Exhaust-A Temp Sensor			55	60	85	80	90
90 100							
FPC 0 Exhaust-B Temp Sensor			55	60	85	80	90
90 100							
FPC 0 EA0 Chip			87	92	97	97	105
105 110							
FPC 0 EA0-XR0 Chip			88	93	98	98	120
120 125							
FPC 0 EA0-XR1 Chip			88	93	98	98	120
120 125							
FPC 0 EA1 Chip			87	92	97	97	105
105 110							
FPC 0 EA1-XR0 Chip			88	93	98	98	120
120 125							
FPC 0 EA1-XR1 Chip			88	93	98	98	120
120 125							
FPC 0 EA2 Chip			87	92	97	97	105
105 110							



FPC 0 EA2-XR0 Chip	88	93	98	98	120
120 125					
FPC 0 EA2-XR1 Chip	88	93	98	98	120
120 125					
FPC 0 PF Chip	89	94	104	104	120
120 120					
FPC 0 EA0_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 0 EA0_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA0_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 0 EA0_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA0_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 0 EA0_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA1_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 0 EA1_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA1_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 0 EA1_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA1_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 0 EA1_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA2_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 0 EA2_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA2_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 0 EA2_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 0 EA2_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 0 EA2_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 1 Intake Temp Sensor	40	45	75	70	85
80 95					
FPC 1 Exhaust-A Temp Sensor	55	60	85	80	90
90 100					
FPC 1 Exhaust-B Temp Sensor	55	60	85	80	90
90 100					
FPC 1 EA0 Chip	87	92	97	97	105
105 110					
FPC 1 EA0-XR0 Chip	88	93	98	98	120
120 125					
FPC 1 EA0-XR1 Chip	88	93	98	98	120
120 125					
FPC 1 EA1 Chip	87	92	97	97	105
105 110					
FPC 1 EA1-XR0 Chip	88	93	98	98	120
120 125					
FPC 1 EA1-XR1 Chip	88	93	98	98	120
120 125					



FPC 1 EA2 Chip	87	92	97	97	105
105 110					
FPC 1 EA2-XR0 Chip	88	93	98	98	120
120 125					
FPC 1 EA2-XR1 Chip	88	93	98	98	120
120 125					
FPC 1 PF Chip	89	94	104	104	120
120 120					
FPC 1 EA0_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 1 EA0_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA0_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 1 EA0_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA0_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 1 EA0_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA1_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 1 EA1_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA1_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 1 EA1_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA1_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 1 EA1_HMC2 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA2_HMC0 Logic die	88	93	103	103	120
120 125					
FPC 1 EA2_HMC0 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA2_HMC1 Logic die	88	93	103	103	120
120 125					
FPC 1 EA2_HMC1 DRAM botm	83	88	98	98	120
120 125					
FPC 1 EA2_HMC2 Logic die	88	93	103	103	120
120 125					
FPC 1 EA2_HMC2 DRAM botm	83	88	98	98	120
120 125					



## show chassis zones

**List of Syntax**    [Syntax on page 806](#)  
                           [Syntax \(MX Series Routers\) on page 806](#)  
                           [Syntax \(QFX Series\) on page 806](#)

**Syntax**    show chassis zones  
                   <detail>

**Syntax (MX Series Routers)**    show chassis zones  
   <detail>  
   <all-members>  
   <local>  
   <member *member-id*>

**Syntax (QFX Series)**    show chassis zones  
                                   <detail>  
                                   <interconnect-device *name*>

**Release Information**    Command introduced in Junos OS Release 11.3 for the QFX Series.  
                                   Command introduced in Junos OS Release 12.3 for MX2020 Universal Routing Platforms.  
                                   Command introduced in Junos OS Release 12.3 for MX2010 Universal Routing Platforms.  
                                   **all-members**, **local**, and **member *member-id*** options introduced in Junos OS Release 15.1 for MX2020 and MX2010 routers.  
                                   Command introduced in Junos OS Release 17.2 for MX2008 Universal Routing Platforms.

**Description**    (QFabric systems only) Display the status of the two cooling system zones on the Interconnect device. Zone 1 consists of eight (0 – 7) front cards, which are cooled by two fan trays. Zone 2 consists of two control boards and eight rear cards, which are cooled by eight (0 – 7) fan trays.

(MX2010, MX2020, and MX2008 routers only) Display the status of the cooling system zones of the chassis. Zone 0 consists of the Control Board, ten (0–9) FPCs, and their respective PICs, Switch Fabric Boards, and Adapter Cards. Zone 1 consists of the Routing Engine, Control Board, and Switch Processor Mezzanine Boards.

**Options**    **all-members**—(MX2010, MX2020, and MX2008 routers only) (Optional) Display the status of the cooling system zones in all members of the Virtual Chassis configuration.

**detail**—(MX2010, MX2020, and MX2008 routers only) (Optional) Display detailed status of the cooling system zones.

**detail *device-name***— (QFabric systems only) (Optional) Display detailed status of the two cooling systems on the Interconnect device.



**interconnect-device *name***— (QFabric systems only) (Optional) Display the status of the cooling zones on the Interconnect device.

**local**—(MX2010, MX2020, and MX2008 routers only) (Optional) Display the status of the cooling system zones in the local member of the Virtual Chassis.

**member *member-id***—(MX2010, MX2020, and MX2008 routers only) (Optional) Display the status of the cooling system zones in the specified member of the Virtual Chassis. Replace *member-id* with the value 0 or 1.

**Required Privilege Level** view

**Related Documentation**

- [show chassis fan on page 413](#)
- [show chassis temperature-thresholds on page 762](#)

**List of Sample Output**

- [show chassis zones interconnect-device \(QFabric System\) on page 808](#)
- [show chassis zones \(MX2010 Router\) on page 808](#)
- [show chassis zones detail \(MX2010 Router\) on page 809](#)
- [show chassis zones \(MX2020 Router\) on page 810](#)
- [show chassis zones detail \(MX2020 Router\) on page 810](#)
- [show chassis zones \(MX2008 Router\) on page 811](#)
- [show chassis zones detail \(MX2008 Router\) on page 811](#)
- [show chassis beacon interconnect-device \(QFabric System\) on page 812](#)
- [show chassis beacon interconnect-device fpc \(QFabric System\) on page 812](#)
- [show chassis beacon node-device \(QFabric System\) on page 812](#)
- [show chassis beacon node-device fpc \(QFabric System\) on page 813](#)

**Output Fields** Table 8 on page 192 lists the output fields for the **show chassis zones** command. Output fields are listed in the approximate order in which they appear.

*Table 34: show chassis zones Output Fields*

Field Name	Field Description
Slot	FPC slot number of the device whose content is being displayed. On QFX3500 standalone switches, the number is always 0.
Beacon State	Status of the beacon state: <ul style="list-style-type: none"> <li>• Off—The beacon is <b>OFF</b>.</li> <li>• On—The beacon is <b>ON</b>.</li> </ul>
show chassis zones command output fields for MX2020, MX2010, and MX2008 routers:	
Driving FRU	Field replaceable unit (FRU).
Temperature	Temperature of the specified FRU in degrees Celsius and degrees Fahrenheit.



Table 34: show chassis zones Output Fields (continued)

Field Name	Field Description
Condition	Condition of the specified FRU. Condition can be <b>HIGH TEMP</b> , <b>WARM TEMP</b> , <b>OK</b> , and <b>Offline</b> .
Num Fans Missing	Number of fans or fan trays missing.
Num Fans Failed	Number of fans or fan trays that have failed.
Fan Duty Cycle	Fan duty cycle value.
show chassis zones detail command output fields for MX2020, MX2010, and MX2008 routers:	
Item	Chassis component: <ul style="list-style-type: none"> <li>Information about the chassis, Routing Engines, Control Boards (CBs), Switch Fabric Boards (SFBs), PICs, Flexible PIC Concentrators (FPCs), and Adapter Cards (ADCs).</li> </ul>
Measurement	Fan tray speed utilization in percentage.
Status	Status of the specified item. Status can be <b>OK</b> , <b>Absent</b> , or <b>Offline</b> .

## Sample Output

### show chassis zones interconnect-device (QFabric System)

```
user@switch> show chassis zones interconnect-device interconnect1
```

```
Slot      Beacon State
FPC       0          OFF
```

### show chassis zones (MX2010 Router)

```
user@host> show chassis zones
```

```
ZONE 0 Status
  Driving FRU      FPC 6
  Temperature      81 degrees C / 177 degrees F
  Condition        HIGH TEMP
  Num Fans Missing  0
  Num Fans Failed   0
  Fan Duty Cycle    30

ZONE 1 Status
  Driving FRU      SFB 0 Exhaust-Zone1
  Temperature      71 degrees C / 159 degrees F
  Condition        WARM TEMP
  Num Fans Missing  0
  Num Fans Failed   0
  Fan Duty Cycle    30
```



## show chassis zones detail (MX2010 Router)

user@host &gt; show chassis zones

ZONE 0 Status		
Item	Status	Measurement
CB 0	WARM TEMP	
CB 1	WARM TEMP	
FPC 0	HIGH TEMP	
FPC 1	HIGH TEMP	
FPC 2	WARM TEMP	
FPC 3	HIGH TEMP	
FPC 4	HIGH TEMP	
FPC 5	HIGH TEMP	
FPC 6	HIGH TEMP	
FPC 7	HIGH TEMP	
FPC 8	HIGH TEMP	
FPC 9	HIGH TEMP	
ADC 0	WARM TEMP	
ADC 1	WARM TEMP	
ADC 2	WARM TEMP	
ADC 3	WARM TEMP	
ADC 4	WARM TEMP	
ADC 5	WARM TEMP	
ADC 6	WARM TEMP	
ADC 7	WARM TEMP	
ADC 8	WARM TEMP	
ADC 9	WARM TEMP	
SFB 0	WARM TEMP	
SFB 1	WARM TEMP	
SFB 2	WARM TEMP	
SFB 3	Offline	
SFB 4	HIGH TEMP	
SFB 5	WARM TEMP	
SFB 6	HIGH TEMP	
SFB 7	WARM TEMP	
Fan Tray 0	OK	Spinning at 98% fan tray speed
Fan Tray 1	OK	Spinning at 98% fan tray speed
ZONE 1 Status		
Item	Status	Measurement
CB 0	WARM TEMP	
CB 1	WARM TEMP	
Routing Engine 0	OK	
Routing Engine 1	OK	
SFB 0	WARM TEMP	
SFB 1	WARM TEMP	
SFB 2	WARM TEMP	
SFB 3	Offline	
SFB 4	HIGH TEMP	
SFB 5	WARM TEMP	
SFB 6	HIGH TEMP	
SFB 7	WARM TEMP	
SPMB 0	OK	
SPMB 1	OK	
Fan Tray 2	OK	Spinning at 64% fan tray speed
Fan Tray 3	OK	Spinning at 64% fan tray speed



**show chassis zones (MX2020 Router)**

```
user@host> show chassis zones
```

```

ZONE 0 Status
  Driving FRU          FPC 0
  Temperature          31 degrees C / 87 degrees F
  Condition            OK
  Num Fans Missing     0
  Num Fans Failed      0
  Fan Duty Cycle       30

ZONE 1 Status
  Driving FRU          FPC 19
  Temperature          32 degrees C / 89 degrees F
  Condition            OK
  Num Fans Missing     0
  Num Fans Failed      0
  Fan Duty Cycle       30

```

**show chassis zones detail (MX2020 Router)**

```
user@host> show chassis zones detail
```

```

ZONE 0 Status
Item              Status      Measurement
CB 0              OK
CB 1              OK
FPC 0             OK
FPC 1             OK
FPC 2             OK
FPC 3             OK
FPC 4             OK
FPC 5             OK
FPC 6             OK
FPC 7             OK
FPC 8             OK
FPC 9             OK
ADC 0             OK
ADC 1             OK
ADC 2             OK
ADC 3             OK
ADC 4             OK
ADC 5             OK
ADC 6             OK
ADC 7             OK
ADC 8             OK
ADC 9             OK
SFB 0             OK
SFB 1             OK
SFB 2             OK
SFB 3             OK
SFB 4             OK
SFB 5             OK
SFB 6             OK
SFB 7             OK
Fan Tray 0        OK              Spinning at 38% fan tray speed
Fan Tray 1        OK              Spinning at 37% fan tray speed

ZONE 1 Status

```



Item	Status	Measurement
CB 0	OK	
CB 1	OK	
Routing Engine 0	OK	
Routing Engine 1	OK	
FPC 10	OK	
FPC 11	OK	
FPC 12	OK	
FPC 13	OK	
FPC 14	OK	
FPC 15	OK	
FPC 16	OK	
FPC 17	OK	
FPC 18	OK	
FPC 19	OK	
ADC 10	OK	
ADC 11	OK	
ADC 12	OK	
ADC 13	OK	
ADC 14	OK	
ADC 15	OK	
ADC 16	OK	
ADC 17	OK	
ADC 18	OK	
ADC 19	OK	
SFB 0	OK	
SFB 1	OK	
SFB 2	OK	
SFB 3	OK	
SFB 4	OK	
SFB 5	OK	
SFB 6	OK	
SFB 7	OK	
SPMB 0	OK	
SPMB 1	OK	
Fan Tray 2	OK	Spinning at 38% fan tray speed
Fan Tray 3	OK	Spinning at 38% fan tray speed

### show chassis zones (MX2008 Router)

```
user@host> show chassis zones
```

```

ZONE 0 Status
  Driving FRU           Routing Engine 0
  Temperature           67 degrees C / 152 degrees F
  Condition              WARM TEMP
  Num Fans Missing      0
  Num Fans Failed       0
  Fan Duty Cycle        27

```

### show chassis zones detail (MX2008 Router)

```
user@host> show chassis zones detail
```

```

ZONE 0 Status
Item           Status           Measurement
CB 0           OK
CB 1           OK

```



Routing Engine 0	OK	
Routing Engine 1	OK	
FPC 0	OK	
FPC 1	Absent	
FPC 2	Absent	
FPC 3	OK	
FPC 4	Absent	
FPC 5	OK	
FPC 6	Absent	
FPC 7	OK	
FPC 8	Absent	
FPC 9	OK	
ADC 0	OK	
ADC 1	Absent	
ADC 2	Absent	
ADC 3	OK	
ADC 4	Absent	
ADC 5	OK	
ADC 6	Absent	
ADC 7	OK	
ADC 8	Absent	
ADC 9	Absent	
SFB 0	OK	
SFB 1	OK	
SFB 2	OK	
SFB 3	OK	
SFB 4	OK	
SFB 5	OK	
SFB 6	OK	
SFB 7	OK	
SPMB 0	OK	
SPMB 1	OK	
Fan Tray 0	OK	Spinning at 60% fan tray speed
Fan Tray 1	OK	Spinning at 58% fan tray speed

#### show chassis beacon interconnect-device (QFabric System)

```
user@switch> show chassis beacon interconnect-device interconnect1
```

Chassis	OFF
CB 0	OFF
CB 1	OFF
FC 0 FPC 0	OFF
FC 1 FPC 1	OFF
RC 0 FPC 8	OFF
RC 1 FPC 9	OFF

#### show chassis beacon interconnect-device fpc (QFabric System)

```
user@switch> show chassis beacon interconnect-device interconnect1 fpc 0
```

FPC 0	ON
-------	----

#### show chassis beacon node-device (QFabric System)

```
user@switch> show chassis beacon node-device node1
```

node1	ON
-------	----



**show chassis beacon node-device fpc (QFabric System)**

```
user@switch> show chassis beacon node-device node1 fpc 0
```

```
FPC 0          ON
```



## show forwarding-options enhanced-hash-key

<b>Syntax</b>	<b>show forwarding-options enhanced-hash-key</b>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 13.2X51-D15 for EX Series switches.</p> <p>Command introduced in Junos OS Release 13.2X51-D20 for QFX Series devices.</p> <p><b>Fabric Load Balancing Options</b> output fields introduced in Junos OS Release 14.1X53-D10.</p> <p><b>Incoming port</b> output field introduced in Junos OS Release 18.4R1 for QFX10000 Series switches.</p>
<b>Description</b>	<p>Display information about which packet fields are used by the hashing algorithm to make hashing decisions.</p> <p>You can configure the fields that are inspected by the hashing algorithm to make hashing decisions for traffic entering a LAG bundle using the <b>forwarding-options enhanced-hash-key</b> statement.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the Fields in the Algorithm Used To Hash LAG Bundle and ECMP Traffic (CLI Procedure)</i></li> <li>• <i>Understanding the Algorithm Used to Hash LAG Bundle and Egress Next-Hop ECMP Traffic</i></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show forwarding-options enhanced-hash-key (Layer 2 Payload Hash Mode) on page 816</a></p> <p><a href="#">show forwarding-options enhanced-hash-key (Layer 2 Header Hash Mode) on page 817</a></p> <p><a href="#">show forwarding-options enhanced-hash-key (Fabric Load Balancing Options) on page 817</a></p> <p><a href="#">show forwarding-options enhanced-hash-key (QFX10000 Series Switches) on page 817</a></p>
<b>Output Fields</b>	<p>Table 35 on page 814 lists the output fields for the <b>show forwarding-options enhanced-hash-key</b> command. Output fields are listed in the approximate order in which they first appear. Output fields vary by platform.</p>

*Table 35: show forwarding-options enhanced-hash-key Output Fields*

Field Name	Field Description
<b>Hash-Mode</b>	Current hash mode: Layer 2 header or Layer 2 payload.
<b>Protocol</b>	Indicates whether the Protocol field is or is not used by the hashing algorithm: Yes or No.
<b>Destination L4 Port</b>	Indicates whether the Destination L4 Port field is or is not used by the hashing algorithm: Yes or No.



Table 35: show forwarding-options enhanced-hash-key Output Fields (continued)

Field Name	Field Description
<b>Source L4 Port</b>	Indicates whether the Source L4 Port field is or is not used by the hashing algorithm: Yes or No.
<b>Destination IPv4 Addr</b>	Indicates whether the Destination IPv4 Addr field is or is not used by the hashing algorithm: Yes or No.
<b>Source IPv4 Addr</b>	Indicates whether the Source IPv4 Addr field is or is not used by the hashing algorithm: Yes or No.
<b>Incoming port</b>	Indicates whether the incoming port number (interface) is or is not used by the hashing algorithm. Yes or No  <b>NOTE:</b> When passive monitoring is enabled on a QFX10000 Series switch interface, the <b>inet</b> , <b>inet6</b> and <b>L2</b> fields are all set to No.
<b>Vlan id</b>	Indicates whether the Vlan ID field is or is not used by the hashing algorithm: Yes or No.
<b>Inner-Vlan ID</b>	Indicates whether the inner Vlan field is or is not used by the hashing algorithm: Yes or No.
<b>Next Hdr</b>	Indicates whether the Next Hdr field is or is not used by the hashing algorithm: Yes or No.
<b>Destination IPv6 Addr</b>	Indicates whether the Destination IPv6 Addr field is or is not used by the hashing algorithm: Yes or No.
<b>Source IPv6 Addr</b>	Indicates whether the Source IPv6 Addr field is or is not used by the hashing algorithm: Yes or No.
<b>Ether Type</b>	Indicates whether the Ether Type field is or is not used by the hashing algorithm: Yes or No.
<b>Destination MAC Address</b>	Indicates whether the Destination MAC Address field is or is not used by the hashing algorithm: Yes or No.
<b>Source MAC Address</b>	Indicates whether the Source MAC Address field is or is not used by the hashing algorithm: Yes or No.
<b>Load Balancing Method</b>	Indicates the load balancing method for adaptive load balancing (ALB): flowlet or per-packet.  The load balancing method is flowlet by default, and can be configured using the <b>fabric-load-balance</b> statement.
<b>Fabric Link Scale</b>	Indicates the fabric link scale, in mbps.
<b>Inactivity Interval</b>	Indicates the fabric load balance inactivity interval, in microseconds (us).  The inactivity interval is 16 microseconds by default, and can be configured using the <b>inactivity-interval</b> statement.



Table 35: show forwarding-options enhanced-hash-key Output Fields (continued)

Field Name	Field Description
<b>Hash Region Size/Trunk</b>	Indicates the hash region size, in buckets per fabric trunk.
<b>Seed</b>	A hash seed value, between 0 and 4294967295. If a hash-seed value is not configured it is automatically assigned on the QFX10000 Series switches. A hash-seed prevents traffic polarization to same links on the next hop QFX switch when two are connected with LAG/ECMP.
<b>Key</b>	Indicates whether the GRE key field is or is not used by the hashing algorithm: Yes or No.
<b>Protocol</b>	Indicates if a Generic Router Encapsulation (GRE) endpoint over routes was dynamically learned by a routing protocol such as RIP or OSPF.
<b>MPLS Enabled</b>	Indicates if MPLS is enabled under L2 switching.
<b>VXLAN VNID</b>	A 24-bit virtual network identifier (VNID) that uniquely identifies the Virtual Extensible Local Area Networks (VXLAN) segment.

## Sample Output

### show forwarding-options enhanced-hash-key (Layer 2 Payload Hash Mode)

```

user@switch> show forwarding-options enhanced-hash-key
Slot 0

Current Hash Settings
-----
Hash-Mode                               :layer2-payload

inet Hash settings-
-----
inet packet fields
  Protocol                               : Yes
  Destination L4 Port                     : Yes
  Source L4 Port                           : Yes
  Destination IPv4 Addr                   : Yes
  Source IPv4 Addr                         : Yes
  Vlan id                                 : No

inet6 Hash settings-
-----
inet6 packet fields
  Next Hdr                               : Yes
  Destination L4 Port                     : Yes
  Source L4 Port                           : Yes
  Destination IPv6 Addr                   : Yes
  Source IPv6 Addr                         : Yes
  Vlan id                                 : No

```



**show forwarding-options enhanced-hash-key (Layer 2 Header Hash Mode)**

```

user@switch> show forwarding-options enhanced-hash-key
Slot 0

Current Hash Settings
-----

Hash-Mode                               : layer2-header

layer2 Hash settings-
-----
layer2 packet fields
  Ether Type                           : Yes
  Destination MAC Address               : Yes
  Source MAC Address                    : Yes
  VLAN ID                              : No

```

**show forwarding-options enhanced-hash-key (Fabric Load Balancing Options)**

```

user@switch> show forwarding-options enhanced-hash-key
<some output removed for brevity>

Fabric Load Balancing Options
-----
Load Balancing Method : Flowlet
Fabric Link Scale      : 40960 (mbps)
Inactivity Interval   : 16 (us)
Hash Region Size/Trunk : 1024 (buckets)

```

**show forwarding-options enhanced-hash-key (QFX10000 Series Switches)**

```

user@switch> show forwarding-options enhanced-hash-key
Slot 0

Seed value for Hash function      0: 2301323130
Seed value for Hash function      1: 2301323130
Seed value for Hash function      2: 2301323130
Seed value for Hash function      3: 2301323130

Inet settings:
-----
  IPV4 dest address:  Yes
  IPV4 source address: Yes
  L4 Dest Port:      Yes
  L4 Source Port:    Yes
  Incoming port:     No
Inet6 settings:
-----
  IPV6 dest address:  Yes
  IPV6 source address: Yes
  L4 Dest Port:      Yes
  L4 Source Port:    Yes
  Incoming port:     No
L2 settings:

```



```
-----
    Dest Mac address:    No
    Source Mac address:  No
    Vlan Id:             Yes
    Inner-vlan Id:       No
    Incoming port:       No
GRE settings:
-----
    Key:                 No
    Protocol:            No
MPLS settings:
-----
MPLS Enabled:           Yes

VXLAN settings:
-----
    VXLAN VNID:         No
```



## show host

<b>List of Syntax</b>	<a href="#">Syntax on page 819</a> <a href="#">Syntax (Junos OS Evolved) on page 819</a>
<b>Syntax</b>	<pre>show host <i>hostname</i> &lt;routing-instance mgmt_junos&gt; &lt;server <i>server-name</i>&gt;</pre>
<b>Syntax (Junos OS Evolved)</b>	<pre>show host <i>hostname</i> &lt;routing-instance mgmt_junos&gt; &lt;server <i>server-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>routing-instance mgmt_junos</b> option introduced in Junos OS Evolved Release 18.3R1.</p> <p><b>routing-instance mgmt_junos</b> option introduced in Junos OS Release 19.2R1.</p>
<b>Description</b>	Display Domain Name System (DNS) hostname information.
<b>Options</b>	<p><b><i>hostname</i></b>—Hostname or address.</p> <p><b>routing-instance mgmt_junos</b>—(Optional) Side host server that is running.</p> <p><b>server <i>server-name</i></b>—(Optional) Name server to use.</p>
<b>Additional Information</b>	The <b>show host</b> command displays the raw data received from the DNS server.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show host on page 819</a>

## Sample Output

### show host

```
user@host> show host device
device.example.net has address 192.0.2.0

user@host> show host 192.0.2.0
Name: device.example.net
Address: 192.0.2.0
Aliases:
```







## show interfaces diagnostics optics

<b>Syntax</b>	<code>show interfaces diagnostics optics <i>interface-name</i></code>
<b>Release Information</b>	Command introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	<p>Display diagnostics data and alarms for Gigabit Ethernet, 10-Gigabit Ethernet, and QSFP+ optical transceivers installed in a QFX Series product. The information provided by this command is known as digital optical monitoring (DOM) information.</p> <p>Thresholds that trigger a high alarm, low alarm, high warning, or low warning are set by the transponder vendors. Generally, a high alarm or low alarm indicates that the optics module is not operating properly. This information can be used to diagnose why a transceiver is not working.</p>
<b>Options</b>	<i>interface-name</i> —Name of the interface associated with the port in which the transceiver is installed.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Monitoring Interface Status and Traffic</i></li> <li>• <i>Installing a Transceiver in a QFX Series Device</i></li> <li>• <i>Removing a Transceiver from a QFX Series Device</i></li> <li>• <i>Junos OS Network Interfaces Library for Routing Devices</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show interfaces diagnostics optics xe-0/0/1 (SFP+ Transceiver) on page 825</a> <a href="#">show interfaces diagnostics optics node1:xe-0/0/1 (SFP+ Transceiver) on page 826</a>
<b>Output Fields</b>	lists the output fields for the <code>show interfaces diagnostics optics</code> command. Output fields are listed in the approximate order in which they appear.

*Table 36: show interfaces diagnostics optics Output Fields*

Field Name	Field Description
Physical interface	Displays the name of the physical interface.
Laser bias current	Displays the magnitude of the laser bias power setting current, in milliamperes. The laser bias provides direct modulation of laser diodes and modulates currents.
Laser output power	Displays the laser output power, in milliwatts (mW) and decibels referred to 1.0 mW (dBm).
Module temperature	Displays the temperature, in Celsius and Fahrenheit.



*Table 36: show interfaces diagnostics optics Output Fields (continued)*

Field Name	Field Description
<b>Module voltage</b> (Not available for XFP transceivers)	Displays the voltage, in volts.
<b>Laser rx power</b> (Not available for SFP and SFP+ transceivers)	Displays the laser received optical power, in milliwatts (mW) and decibels referred to 1.0 mW (dBm).
<b>Receiver signal average optical power</b> (Not available for XFP transceivers)	Displays the receiver signal average optical power, in milliwatts (mW) and decibels referred to 1.0 mW (dBm).
<b>Laser bias current high alarm</b>	Displays whether the laser bias power setting high alarm is <b>On</b> or <b>Off</b> .
<b>Laser bias current low alarm</b>	Displays whether the laser bias power setting low alarm is <b>On</b> or <b>Off</b> .
<b>Laser bias current high warning</b>	Displays whether the laser bias power setting high warning is <b>On</b> or <b>Off</b> .
<b>Laser bias current low warning</b>	Displays whether the laser bias power setting low warning is <b>On</b> or <b>Off</b> .
<b>Laser output power high alarm</b>	Displays whether the laser output power high alarm is <b>On</b> or <b>Off</b> .
<b>Laser output power low alarm</b>	Displays whether the laser output power low alarm is <b>On</b> or <b>Off</b> .
<b>Laser output power high warning</b>	Displays whether the laser output power high warning is <b>On</b> or <b>Off</b> .
<b>Laser output power low warning</b>	Displays whether the laser output power low warning is <b>On</b> or <b>Off</b> .
<b>Module temperature high alarm</b>	Displays whether the module temperature high alarm is <b>On</b> or <b>Off</b> .
<b>Module temperature low alarm</b>	Displays whether the module temperature low alarm is <b>On</b> or <b>Off</b> .
<b>Module temperature high warning</b>	Displays whether the module temperature high warning is <b>On</b> or <b>Off</b> .
<b>Module temperature low warning</b>	Displays whether the module temperature low warning is <b>On</b> or <b>Off</b> .
<b>Module voltage high alarm</b> (Not available for XFP transceivers)	Displays whether the module voltage high alarm is <b>On</b> or <b>Off</b> .
<b>Module voltage low alarm</b> (Not available for XFP transceivers)	Displays whether the module voltage low alarm is <b>On</b> or <b>Off</b> .
<b>Module voltage high warning</b> (Not available for XFP transceivers)	Displays whether the module voltage high warning is <b>On</b> or <b>Off</b> .



Table 36: show interfaces diagnostics optics Output Fields (continued)

Field Name	Field Description
<b>Module voltage low warning</b> (Not available for XFP transceivers)	Displays whether the module voltage low warning is <b>On</b> or <b>Off</b> .
<b>Laser rx power high alarm</b>	Displays whether the receive laser power high alarm is <b>On</b> or <b>Off</b> .
<b>Laser rx power low alarm</b>	Displays whether the receive laser power low alarm is <b>On</b> or <b>Off</b> .
<b>Laser rx power high warning</b>	Displays whether the receive laser power high warning is <b>On</b> or <b>Off</b> .
<b>Laser rx power low warning</b>	Displays whether the receive laser power low warning is <b>On</b> or <b>Off</b> .
<b>Laser bias current high alarm threshold</b>	Displays the vendor-specified threshold for the laser bias current high alarm.
<b>Module not ready alarm</b> (Not available for SFP and SFP+ transceivers)	Displays whether the module not ready alarm is <b>On</b> or <b>Off</b> . When the output is <b>On</b> , the module has an operational fault.
<b>Module power down alarm</b> (Not available for SFP and SFP+ transceivers)	Displays whether the module power down alarm is <b>On</b> or <b>Off</b> . When the output is <b>On</b> , the module is in a limited power mode, low for normal operation.
<b>Tx data not ready alarm</b> (Not available for SFP and SFP+ transceivers)	Any condition leading to invalid data on the transmit path. Displays whether the Tx data not ready alarm is <b>On</b> or <b>Off</b> .
<b>Tx not ready alarm</b> (Not available for SFP and SFP+ transceivers)	Any condition leading to invalid data on the transmit path. Displays whether the Tx not ready alarm is <b>On</b> or <b>Off</b> .
<b>Tx laser fault alarm</b> (Not available for SFP and SFP+ transceivers)	Laser fault condition. Displays whether the Tx laser fault alarm is <b>On</b> or <b>Off</b> .
<b>Tx CDR loss of lock alarm</b> (Not available for SFP and SFP+ transceivers)	Transmit clock and data recovery (CDR) loss of lock. Loss of lock on the transmit side of the CDR. Displays whether the Tx CDR loss of lock alarm is <b>On</b> or <b>Off</b> .
<b>Rx not ready alarm</b> (Not available for SFP and SFP+ transceivers)	Any condition leading to invalid data on the receive path. Displays whether the Rx not ready alarm is <b>On</b> or <b>Off</b> .
<b>Rx loss of signal alarm</b> (Not available for SFP and SFP+ transceivers)	Receive loss of signal alarm. When <b>on</b> , indicates insufficient optical input power to the module. Displays whether the Rx loss of signal alarm is <b>On</b> or <b>Off</b> .
<b>Rx CDR loss of lock alarm</b> (Not available for SFP and SFP+ transceivers)	Receive CDR loss of lock. Loss of lock on the receive side of the CDR. Displays whether the Rx CDR loss of lock alarm is <b>On</b> or <b>Off</b> .



Table 36: show interfaces diagnostics optics Output Fields (continued)

Field Name	Field Description
Laser bias current low alarm threshold	Displays the vendor-specified threshold for the laser bias current low alarm.
Laser bias current high warning threshold	Displays the vendor-specified threshold for the laser bias current high warning.
Laser bias current low warning threshold	Displays the vendor-specified threshold for the laser bias current low warning.
Laser output power high alarm threshold	Displays the vendor-specified threshold for the laser output power high alarm.
Laser output power low alarm threshold	Displays the vendor-specified threshold for the laser output power low alarm.
Laser output power high warning threshold	Displays the vendor-specified threshold for the laser output power high warning.
Laser output power low warning threshold	Displays the vendor-specified threshold for the laser output power low warning.
Module temperature high alarm threshold	Displays the vendor-specified threshold for the module temperature high alarm.
Module temperature low alarm threshold	Displays the vendor-specified threshold for the module temperature low alarm.
Module temperature high warning threshold	Displays the vendor-specified threshold for the module temperature high warning.
Module temperature low warning threshold	Displays the vendor-specified threshold for the module temperature low warning.
Module voltage high alarm threshold (Not available for XFP transceivers)	Displays the vendor-specified threshold for the module voltage high alarm.
Module voltage low alarm threshold (Not available for XFP transceivers)	Displays the vendor-specified threshold for the module voltage low alarm.
Module voltage high warning threshold (Not available for XFP transceivers)	Displays the vendor-specified threshold for the module voltage high warning.
Module voltage low warning threshold (Not available for XFP transceivers)	Displays the vendor-specified threshold for the module voltage low warning.
Laser rx power high alarm threshold	Displays the vendor-specified threshold for the laser Rx power high alarm.



Table 36: show interfaces diagnostics optics Output Fields (continued)

Field Name	Field Description
Laser rx power low alarm threshold	Displays the vendor-specified threshold for the laser Rx power low alarm.
Laser rx power high warning threshold	Displays the vendor-specified threshold for the laser Rx power high warning.
Laser rx power low warning threshold	Displays the vendor-specified threshold for the laser Rx power low warning.

## Sample Output

### show interfaces diagnostics optics xe-0/0/1 (SFP+ Transceiver)

```
user@host> show interfaces diagnostics optics xe-0/0/1
```

```
Physical interface: xe-0/0/1
```

```

Laser bias current           : 4.968 mA
Laser output power          : 0.4940 mW / -3.06 dBm
Module temperature          : 27 degrees C / 81 degrees F
Module voltage              : 3.2310 V
Receiver signal average optical power : 0.0000
Laser bias current high alarm : Off
Laser bias current low alarm  : Off
Laser bias current high warning : Off
Laser bias current low warning : Off
Laser output power high alarm : Off
Laser output power low alarm  : Off
Laser output power high warning : Off
Laser output power low warning : Off
Module temperature high alarm : Off
Module temperature low alarm  : Off
Module temperature high warning : Off
Module temperature low warning : Off
Module voltage high alarm     : Off
Module voltage low alarm      : Off
Module voltage high warning   : Off
Module voltage low warning    : Off
Laser rx power high alarm     : Off
Laser rx power low alarm      : On
Laser rx power high warning   : Off
Laser rx power low warning    : On
Laser bias current high alarm threshold : 10.500 mA
Laser bias current low alarm threshold : 2.000 mA
Laser bias current high warning threshold : 9.000 mA
Laser bias current low warning threshold : 2.500 mA
Laser output power high alarm threshold : 1.4120 mW / 1.50 dBm
Laser output power low alarm threshold : 0.0740 mW / -11.31 dBm
Laser output power high warning threshold : 0.7070 mW / -1.51 dBm
Laser output power low warning threshold : 0.1860 mW / -7.30 dBm
Module temperature high alarm threshold : 75 degrees C / 167 degrees F
Module temperature low alarm threshold : -5 degrees C / 23 degrees F
Module temperature high warning threshold : 70 degrees C / 158 degrees F
Module temperature low warning threshold : 0 degrees C / 32 degrees F
Module voltage high alarm threshold : 3.630 V
Module voltage low alarm threshold : 2.970 V

```



```

Module voltage high warning threshold : 3.465 V
Module voltage low warning threshold : 3.135 V
Laser rx power high alarm threshold : 1.5849 mW / 2.00 dBm
Laser rx power low alarm threshold : 0.0407 mW / -13.90 dBm
Laser rx power high warning threshold : 0.7943 mW / -1.00 dBm
Laser rx power low warning threshold : 0.1023 mW / -9.90 dBm

```

### show interfaces diagnostics optics node1:xe-0/0/1 (SFP+ Transceiver)

```
user@host> show interfaces diagnostics optics node1:xe-0/0/1
```

```

Physical interface: node1:xe-0/0/1
Laser bias current : 4.968 mA
Laser output power : 0.4940 mW / -3.06 dBm
Module temperature : 27 degrees C / 81 degrees F
Module voltage : 3.2310 V
Receiver signal average optical power : 0.0000
Laser bias current high alarm : Off
Laser bias current low alarm : Off
Laser bias current high warning : Off
Laser bias current low warning : Off
Laser output power high alarm : Off
Laser output power low alarm : Off
Laser output power high warning : Off
Laser output power low warning : Off
Module temperature high alarm : Off
Module temperature low alarm : Off
Module temperature high warning : Off
Module temperature low warning : Off
Module voltage high alarm : Off
Module voltage low alarm : Off
Module voltage high warning : Off
Module voltage low warning : Off
Laser rx power high alarm : Off
Laser rx power low alarm : On
Laser rx power high warning : Off
Laser rx power low warning : On
Laser bias current high alarm threshold : 10.500 mA
Laser bias current low alarm threshold : 2.000 mA
Laser bias current high warning threshold : 9.000 mA
Laser bias current low warning threshold : 2.500 mA
Laser output power high alarm threshold : 1.4120 mW / 1.50 dBm
Laser output power low alarm threshold : 0.0740 mW / -11.31 dBm
Laser output power high warning threshold : 0.7070 mW / -1.51 dBm
Laser output power low warning threshold : 0.1860 mW / -7.30 dBm
Module temperature high alarm threshold : 75 degrees C / 167 degrees F
Module temperature low alarm threshold : -5 degrees C / 23 degrees F
Module temperature high warning threshold : 70 degrees C / 158 degrees F
Module temperature low warning threshold : 0 degrees C / 32 degrees F
Module voltage high alarm threshold : 3.630 V
Module voltage low alarm threshold : 2.970 V
Module voltage high warning threshold : 3.465 V
Module voltage low warning threshold : 3.135 V
Laser rx power high alarm threshold : 1.5849 mW / 2.00 dBm
Laser rx power low alarm threshold : 0.0407 mW / -13.90 dBm
Laser rx power high warning threshold : 0.7943 mW / -1.00 dBm
Laser rx power low warning threshold : 0.1023 mW / -9.90 dBm

```



## show subscribers

**Syntax**

```
show subscribers
<detail | extensive | terse>
<aci-interface-set-name aci-interface-set-name>
<address address>
<agent-circuit-identifier agent-circuit-identifier>
<agent-remote-identifier agent-remote-identifier>
<aggregation-interface-set-name interface-set-name>
<client-type client-type>
<count>
<id session-id <accounting-statistics>>
<interface interface <accounting-statistics>>
<logical-system logical-system>
<mac-address mac-address>
<physical-interface physical-interface-name>
<profile-name profile-name>
<routing-instance routing-instance>
<stacked-vlan-id stacked-vlan-id>
<subscriber-state subscriber-state>
<user-name user-name>
<vci vci-identifier>
<vpi vpi-identifier>
<vlan-id vlan-id>
```

**Release Information**

Command introduced in Junos OS Release 9.3.

Command introduced in Junos OS Release 9.3 for EX Series switches.

**client-type**, **mac-address**, **subscriber-state**, and **extensive** options introduced in Junos OS Release 10.2.

**count** option usage with other options introduced in Junos OS Release 10.2.

Command introduced in Junos OS Release 11.1 for the QFX Series.

Options **aci-interface-set-name** and **agent-circuit-identifier** introduced in Junos OS Release 12.2.

The **physical-interface** and **user-name** options introduced in Junos OS Release 12.3.

Options **vci** and **vpi** introduced in Junos OS Release 12.3R3 and supported in later 12.3Rx releases.

Options **vci** and **vpi** supported in Junos OS Release 13.2 and later releases. (Not supported in Junos OS Release 13.1.)

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Enhanced subscriber management supported in Junos OS Release 15.1R3 on MX Series routers.

**accounting-statistics** option added in Junos OS Release 15.1R3 and 17.4R1 on MX Series routers.

**aggregation-interface-set-name** option added in Junos OS Release 18.4R1 on MX Series routers.

**Description** Display information for active subscribers.

**Options** **detail | extensive | terse**—(Optional) Display the specified level of output.



**aci-interface-set-name**—(Optional) Display all dynamic subscriber sessions that use the specified agent circuit identifier (ACI) interface set. Use the ACI interface set name generated by the router, such as aci-1003-ge-1/0/0.4001, and not the actual ACI value found in the DHCP or PPPoE control packets.

**address**—(Optional) Display subscribers whose IP address matches the specified address. You must specify the IPv4 or IPv6 address prefix without a netmask (for example, 192.0.2.0). If you specify the IP address as a prefix with a netmask (for example, 192.0.2.0/32), the router displays a message that the IP address is invalid, and rejects the command.

**agent-circuit-identifier**—(Optional) Display all dynamic subscriber sessions whose ACI value matches the specified string. You can specify either the complete ACI string or a substring. To specify a substring, you must enter characters that form the beginning of the string, followed by an asterisk (\*) as a wildcard to substitute for the remainder of the string. The wildcard can be used only at the end of the specified substring; for example:

```
user@host1> show subscribers agent-circuit-identifier substring*
```

Junos OS Release	Substring Support
Junos OS Release 13.3R1	You can specify a substring without a wildcard.
Starting in Junos OS Release 14.1R1	You must specify the complete ACI string; you cannot specify a wildcard.
Starting in Junos OS Release 15.1R7, 16.1R7, 16.2R3, 17.1R3, 17.2R3, 17.3R3, 17.4R2, 18.1R2, 18.2R1	You can specify a substring, but you must include the wildcard character at the end of the substring.

**agent-remote-identifier**—(Optional) Display all dynamic subscriber sessions whose ARI value matches the specified string. You must specify the complete ACI string; you cannot specify a wildcard.

**aggregation-interface-set-name** *interface-set-name*—(Optional) Display summary information for the specified aggregation node interface set, including interface, VLAN ID, username and LS:RI.

**client-type**—(Optional) Display subscribers whose client type matches one of the following client types:

- **dhcp**—DHCP clients only.
- **dotlx**—DotLx clients only.
- **essm**—ESSM clients only.
- **fixed-wireless-access**—Fixed wireless access clients only.
- **fwauth**—FwAuth (authenticated across a firewall) clients only.
- **l2tp**—L2TP clients only.



- **mlppp**—MLPPP clients only.
- **ppp**—PPP clients only.
- **pppoe**—PPPoE clients only.
- **static**—Static clients only.
- **vlan**—VLAN clients only.
- **vlan-oob**—VLAN out-of-band (ANCP-triggered) clients only.
- **vpls-pw**—VPLS pseudowire clients only.
- **xauth**—Xauth clients only.

**count**—(Optional) Display the count of total subscribers and active subscribers for any specified option. You can use the **count** option alone or with the **address**, **client-type**, **interface**, **logical-system**, **mac-address**, **profile-name**, **routing-instance**, **stacked-vlan-id**, **subscriber-state**, or **vlan-id** options.

**id session-id**—(Optional) Display a specific subscriber session whose session ID matches the specified subscriber ID. You can display subscriber IDs by using the **show subscribers extensive** or the **show subscribers interface extensive** commands.

**id session-id accounting-statistics**—(Optional) Display accurate subscriber accounting statistics for a subscriber session with the specified ID. Requires the **actual-transmit-statistics** statement to be configured in the dynamic profile for the dynamic logical interface. If the statement is not configured, a value of 0 is displayed for accounting statistics.

**interface**—(Optional) Display subscribers whose interface matches the specified interface.

**interface accounting-statistics**—(Optional) Display subscriber accounting statistics for the specified interface. Requires the **actual-transmit-statistics** statement to be configured in the dynamic profile for the dynamic logical interface.

**logical-system**—(Optional) Display subscribers whose logical system matches the specified logical system.

**mac-address**—(Optional) Display subscribers whose MAC address matches the specified MAC address.

**physical-interface-name**—(M120, M320, and MX Series routers only) (Optional) Display subscribers whose physical interface matches the specified physical interface.

**profile-name**—(Optional) Display subscribers whose dynamic profile matches the specified profile name.

**routing-instance**—(Optional) Display subscribers whose routing instance matches the specified routing instance.

**stacked-vlan-id**—(Optional) Display subscribers whose stacked VLAN ID matches the specified stacked VLAN ID.



**subscriber-state**—(Optional) Display subscribers whose subscriber state matches the specified subscriber state (ACTIVE, CONFIGURED, INIT, TERMINATED, or TERMINATING).

**user-name**—(M120, M320, and MX Series routers only) (Optional) Display subscribers whose username matches the specified subscriber name.

**vci-identifier**—(MX Series routers with MPCs and ATM MICs with SFP only) (Optional) Display active ATM subscribers whose ATM virtual circuit identifier (VCI) matches the specified VCI identifier. The range of values is 0 through 255.

**vpi-identifier**—(MX Series routers with MPCs and ATM MICs with SFP only) (Optional) Display active ATM subscribers whose ATM virtual path identifier (VPI) matches the specified VPI identifier. The range of values is 0 through 65,535.

**vlan-id**—(Optional) Display subscribers whose VLAN ID matches the specified VLAN ID, regardless of whether the subscriber uses a single-tagged or double-tagged VLAN. For subscribers using a double-tagged VLAN, this option displays subscribers where the inner VLAN tag matches the specified VLAN ID. To display only subscribers where the specified value matches only double-tagged VLANs, use the **stacked-vlan-id** option to match the outer VLAN tag.



**NOTE:** Because of display limitations, logical system and routing instance output values are truncated when necessary.

**Required Privilege Level**

view

**Related Documentation**

- [show subscribers summary](#)
- [Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration](#)
- [Verifying and Managing Configurations for Dynamic VLANs Based on Access-Line Identifiers](#)
- [Verifying and Managing Junos OS Enhanced Subscriber Management](#)

**List of Sample Output**

[show subscribers \(IPv4\) on page 839](#)  
[show subscribers \(IPv6\) on page 839](#)  
[show subscribers \(IPv4 and IPv6 Dual Stack\) on page 839](#)  
[show subscribers \(Single Session DHCP Dual Stack\) on page 839](#)  
[show subscribers \(Single Session DHCP Dual Stack detail\) on page 840](#)  
[show subscribers \(LNS on MX Series Routers\) on page 840](#)  
[show subscribers \(L2TP Switched Tunnels\) on page 840](#)  
[show subscribers aggregation-interface-set-name on page 840](#)  
[show subscribers client-type dhcp detail on page 840](#)  
[show subscribers client-type dhcp detail \(DHCPv6\) on page 841](#)  
[show subscribers client-type dhcp extensive on page 842](#)



[show subscribers client-type fixed-wireless-access on page 842](#)  
[show subscribers client-type fixed-wireless-access detail \(Detail\) on page 842](#)  
[show subscribers client-type vlan-oob detail on page 843](#)  
[show subscribers count on page 843](#)  
[show subscribers address detail \(IPv6\) on page 843](#)  
[show subscribers detail \(IPv4\) on page 844](#)  
[show subscribers detail \(IPv6\) on page 844](#)  
[show subscribers detail \(pseudowire Interface for GRE Tunnel\) on page 845](#)  
[show subscribers detail \(IPv6 Static Demux Interface\) on page 845](#)  
[show subscribers detail \(L2TP LNS Subscribers on MX Series Routers\) on page 845](#)  
[show subscribers detail \(L2TP Switched Tunnels\) on page 845](#)  
[show subscribers detail \(Tunneled Subscriber\) on page 846](#)  
[show subscribers detail \(IPv4 and IPv6 Dual Stack\) on page 846](#)  
[show subscribers detail \(ACI Interface Set Session\) on page 847](#)  
[show subscribers detail \(PPPoE Subscriber Session with ACI Interface Set\) on page 847](#)  
[show subscribers extensive on page 848](#)  
[show subscribers extensive \(Aggregation Node Interface Set and DSL Forum Attributes\) on page 848](#)  
[show subscribers extensive \(Passive Optical Network Circuit Interface Set\) on page 849](#)  
[show subscribers extensive \(DNS Addresses from Access Profile or Global Configuration\) on page 850](#)  
[show subscribers extensive \(DNS Addresses from RADIUS\) on page 850](#)  
[show subscribers extensive \(IPv4 DNS Addresses from RADIUS, IPv6 from Access Profile or Global Configuration\) on page 851](#)  
[show subscribers extensive \(RPF Check Fail Filter\) on page 851](#)  
[show subscribers extensive \(L2TP LNS Subscribers on MX Series Routers\) on page 852](#)  
[show subscribers extensive \(IPv4 and IPv6 Dual Stack\) on page 852](#)  
[show subscribers extensive \(ADF Rules \) on page 853](#)  
[show subscribers extensive \(Effective Shaping-Rate\) on page 853](#)  
[show subscribers extensive \(PPPoE Subscriber Access Line Rates on page 854](#)  
[show subscribers extensive \(Subscriber Session Using PCEF Profile\) on page 855](#)  
[show subscribers aci-interface-set-name detail \(Subscriber Sessions Using Specified ACI Interface Set\) on page 856](#)  
[show subscribers agent-circuit-identifier detail \(Subscriber Sessions Using Specified ACI Substring\) on page 857](#)  
[show subscribers id accounting-statistics on page 857](#)  
[show subscribers interface accounting-statistics on page 857](#)  
[show subscribers interface extensive on page 858](#)  
[show subscribers logical-system terse on page 859](#)  
[show subscribers physical-interface count on page 859](#)  
[show subscribers routing-instance inst1 count on page 859](#)  
[show subscribers stacked-vlan-id detail on page 859](#)  
[show subscribers stacked-vlan-id vlan-id detail \(Combined Output\) on page 859](#)  
[show subscribers stacked-vlan-id vlan-id interface detail \(Combined Output for a Specific Interface\) on page 860](#)  
[show subscribers user-name detail on page 860](#)  
[show subscribers vlan-id on page 860](#)  
[show subscribers vlan-id detail on page 860](#)  
[show subscribers vpi vci extensive \(PPPoE-over-ATM Subscriber Session\) on page 861](#)



[show subscribers address detail \(Enhanced Subscriber Management\) on page 861](#)

**Output Fields** Table 37 on page 832 lists the output fields for the **show subscribers** command. Output fields are listed in the approximate order in which they appear.

*Table 37: show subscribers Output Fields*

Field Name	Field Description
<b>Interface</b>	Interface associated with the subscriber. The router or switch displays subscribers whose interface matches or begins with the specified interface.  The * character indicates a continuation of addresses for the same session.
<b>IP Address/VLAN ID</b>	Subscriber IP address or VLAN ID associated with the subscriber in the form <i>tpid.vlan-id</i>  No IP address or VLAN ID is assigned to an L2TP tunnel-switched session. For these subscriber sessions the value is <b>Tunnel-switched</b> .
<b>User Name</b>	Name of subscriber.
<b>LS:RI</b>	Logical system and routing instance associated with the subscriber.
<b>Type</b>	Subscriber client type (DHCP, FWA, GRE, L2TP, PPP, PPPoE, STATIC-INTERFACE, VLAN).
<b>IP Address</b>	Subscriber IPv4 address.
<b>IP Netmask</b>	Subscriber IP netmask.  (MX Series) This field displays 255.255.255.255 by default. For tunneled or terminated PPP subscribers only, this field displays the actual value of Framed-IP-Netmask when the SDB_FRAMED_PROTOCOL attribute in the session database is equal to AUTHD_FRAMED_PROTOCOL_PPP. This occurs in the use case where the LNS generates access-internal routes when it receives Framed-IP-Netmask from RADIUS during authorization. When it receives Framed-Pool from RADIUS, the pool mask is ignored and the default /32 mask is used.
<b>Primary DNS Address</b>	IP address of primary DNS server.  This field is displayed with the <b>extensive</b> option only when the address is provided by RADIUS.
<b>Secondary DNS Address</b>	IP address of secondary DNS server.  This field is displayed with the <b>extensive</b> option only when the address is provided by RADIUS.
<b>IPv6 Primary DNS Address</b>	IPv6 address of primary DNS server.  This field is displayed with the <b>extensive</b> option only when the address is provided by RADIUS.
<b>IPv6 Secondary DNS Address</b>	IPv6 address of secondary DNS server.  This field is displayed with the <b>extensive</b> option only when the address is provided by RADIUS.
<b>Domain name server inet</b>	IP addresses for the DNS server, displayed in order of configuration.  This field is displayed with the <b>extensive</b> option only when the addresses are derived from the access profile or the global access configuration.



Table 37: *show subscribers Output Fields (continued)*

Field Name	Field Description
<b>Domain name server inet6</b>	IPv6 addresses for the DNS server, displayed in order of configuration.  This field is displayed with the <b>extensive</b> option only when the addresses are derived from the access profile or the global access configuration.
<b>Primary WINS Address</b>	IP address of primary WINS server.
<b>Secondary WINS Address</b>	IP address of secondary WINS server.
<b>IPv6 Address</b>	Subscriber IPv6 address, or multiple addresses.
<b>IPv6 Prefix</b>	Subscriber IPv6 prefix. If you are using DHCPv6 prefix delegation, this is the delegated prefix.
<b>IPv6 User Prefix</b>	IPv6 prefix obtained through NDRA.
<b>IPv6 Address Pool</b>	Subscriber IPv6 address pool. The IPv6 address pool is used to allocate IPv6 prefixes to the DHCPv6 clients.
<b>IPv6 Network Prefix Length</b>	Length of the network portion of the IPv6 address.
<b>IPv6 Prefix Length</b>	Length of the subscriber IPv6 prefix.
<b>Logical System</b>	Logical system associated with the subscriber.
<b>Routing Instance</b>	Routing instance associated with the subscriber.
<b>Interface</b>	(Enhanced subscriber management for MX Series routers) Name of the enhanced subscriber management logical interface, in the form <b>demux0.nnnn</b> (for example, <b>demux0.3221225472</b> ), to which access-internal and framed subscriber routes are mapped.
<b>Interface Type</b>	Whether the subscriber interface is <b>Static</b> or <b>Dynamic</b> .



Table 37: show subscribers Output Fields (continued)

Field Name	Field Description
<b>Interface Set</b>	<p>Internally generated name of the dynamic ACI or ALI interface set used by the subscriber session. The prefix of the name indicates the string received in DHCP or PPPoE control packets on which the interface set is based. For ALI interface sets, the prefix indicates that the value is configured as a trusted option to identify the subscriber line.</p> <p>The name of the interface set uses one of the following prefixes:</p> <ul style="list-style-type: none"> <li>• <b>aci</b>—ACI; for example, aci-1033-demux0.3221225524. This is the only prefix allowed for ACI interface sets.</li> <li>• <b>ari</b>—ARI; for example, ari-1033-demux0.3221225524.</li> <li>• <b>aci+ari</b>—Both the ACI and ARI; for example, aci+ari-1033-demux0.3221225524.</li> <li>• <b>noids</b>—Neither the ACI nor the ARI were received; for example, noids-1033-demux0.3221225524.</li> </ul> <p><b>NOTE:</b> ACI interface sets are configured with the <b>agent-circuit-identifier</b> autoconfiguration stanza. ALI interface sets are configured with the <b>line-identity</b> autoconfiguration stanza.</p> <p>Besides dynamic ACI and ALI interface sets, this field can be an interface set based on a substring of the ARI string. This occurs when the dynamic profile includes the predefined variable \$junos-pon-id-interface-set-name, and the profile is applied for a passive optical network (PON). The ARI string is inserted by the optical line terminal (OLT). The final substring in the string, unique for the PON, identifies individual subscriber circuits, and is used as the name of the interface set.</p>
<b>Interface Set Type</b>	Interface type of the ACI interface set: <b>Dynamic</b> . This is the only ACI interface set type currently supported.
<b>Interface Set Session ID</b>	Identifier of the dynamic ACI interface set entry in the session database.
<b>Underlying Interface</b>	Name of the underlying interface for the subscriber session.
<b>Dynamic Profile Name</b>	Dynamic profile used for the subscriber.
<b>Dynamic Profile Version</b>	Version number of the dynamic profile used for the subscriber.
<b>MAC Address</b>	MAC address associated with the subscriber.
<b>State</b>	Current state of the subscriber session ( <b>Init</b> , <b>Configured</b> , <b>Active</b> , <b>Terminating</b> , <b>Tunneled</b> ).
<b>L2TP State</b>	Current state of the L2TP session, <b>Tunneled</b> or <b>Tunnel-switched</b> . When the value is <b>Tunnel-switched</b> , two entries are displayed for the subscriber; the first entry is at the LNS interface on the LTS and the second entry is at the LAC interface on the LTS.
<b>Tunnel switch Profile Name</b>	Name of the L2TP tunnel switch profile that initiates tunnel switching.
<b>Local IP Address</b>	IP address of the local gateway (LAC).
<b>Remote IP Address</b>	IP address of the remote peer (LNS).
<b>VLAN Id</b>	VLAN ID associated with the subscriber in the form <i>tpid.vlan-id</i> .



Table 37: show subscribers Output Fields (continued)

Field Name	Field Description
Stacked VLAN Id	Stacked VLAN ID associated with the subscriber in the form <i>tpid.vlan-id</i> .
RADIUS Accounting ID	RADIUS accounting ID associated with the subscriber.
Agent Circuit ID	<p>For the <b>dhcp</b> client type, option 82 agent circuit ID associated with the subscriber. The ID is displayed as an ASCII string unless the value has nonprintable characters, in which case it is displayed in hexadecimal format.</p> <p>For the <b>vlan-oob</b> client type, the agent circuit ID or access-loop circuit identifier that identifies the subscriber line based on the subscriber-facing DSLAM interface on which the subscriber request originates.</p>
Agent Remote ID	<p>For the <b>dhcp</b> client type, option 82 agent remote ID associated with the subscriber. The ID is displayed as an ASCII string unless the value has nonprintable characters, in which case it is displayed in hexadecimal format.</p> <p>For the <b>vlan-oob</b> client type, the agent remote ID or access-loop remote identifier that identifies the subscriber line based on the NAS-facing DSLAM interface on which the subscriber request originates.</p>
Aggregation Interface-set Name	<p>Value of the \$junos-aggregation-interface-set-name predefined variable; one of the following:</p> <ul style="list-style-type: none"> <li>When the <b>hierarchical-access-network-detection</b> option is configured for the access lines and the value of the Access-Aggregation-Circuit-ID-ASCII attribute (TLV 0x0003) received either in the ANCP Port Up message or PPPoE PADR IA tags begins with a # character, then the variable takes the value of the remainder of the string after the # character.</li> <li>When the <b>hierarchical-access-network-detection</b> option is not configured, or if the string does not begin with the # character, then the variable takes the value specified with the <b>predefined-variable-defaults</b> statement.</li> </ul>
Accounting Statistics	Actual transmitted subscriber accounting statistics by session ID or interface. Service accounting statistics are not included. These statistics do not include overhead bytes or dropped packets; they are the accurate statistics used by RADIUS. The statistics are counted when the <b>actual-transmit-statistics</b> statement is included in the dynamic profile.
DHCP Relay IP Address	IP address used by the DHCP relay agent.
ATM VPI	(MX Series routers with MPCs and ATM MICs with SFP only) ATM virtual path identifier (VPI) on the subscriber's physical interface.
ATM VCI	(MX Series routers with MPCs and ATM MICs with SFP only) ATM virtual circuit identifier (VCI) for each VPI configured on the subscriber interface.
Login Time	Date and time at which the subscriber logged in.
DHCPV6 Options	<b>len</b> = number of hex values in the message. The hex values specify the type, length, value (TLV) for DHCPv6 options.
Server DHCP Options	<b>len</b> = number of hex values in the message. The hex values specify the type, length, value (TLV) for DHCP options.
ServerDHCPV6 Options	<b>len</b> = number of hex values in the message. The hex values specify the type, length, value (TLV) for DHCPv6 options.



Table 37: show subscribers Output Fields (continued)

Field Name	Field Description
DHCPV6 Header	<b>len</b> = number of hex values in the message. The hex values specify the type, length, value (TLV) for DHCPv6 options.
Effective shaping-rate	Actual downstream traffic shaping rate for the subscriber, in kilobits per second.
IPv4 Input Service Set	Input service set in access dynamic profile.
IPv4 Output Service Set	Output service set in access dynamic profile.
PCEF Profile	PCEF profile in access dynamic profile.
PCEF Rule/Rulebase	PCC rule or rulebase used in dynamic profile.
Dynamic configuration	Values for variables that are passed into the dynamic profile from RADIUS.
Service activation time	Time at which the first family in this service became active.
IPv4 rpf-check Fail Filter Name	Name of the filter applied by the dynamic profile to IPv4 packets that fail the RPF check.
IPv6 rpf-check Fail Filter Name	Name of the filter applied by the dynamic profile to IPv6 packets that fail the RPF check.
DHCP Options	<b>len</b> = number of hex values in the message. The hex values specify the type, length, value (TLV) for DHCP options, as defined in RFC 2132.
Session ID	ID number for a subscriber session.
Underlying Session ID	For DHCPv6 subscribers on a PPPoE network, displays the session ID of the underlying PPPoE interface.
Service Sessions	Number of service sessions (that is, a service activated using RADIUS CoA) associated with the subscribers.
Service Session ID	ID number for a subscriber service session.
Service Session Name	Service session profile name.
Session Timeout (seconds)	Number of seconds of access provided to the subscriber before the session is automatically terminated.
Idle Timeout (seconds)	Number of seconds subscriber can be idle before the session is automatically terminated.
IPv6 Delegated Address Pool	Name of the pool used for DHCPv6 prefix delegation.
IPv6 Delegated Network Prefix Length	Length of the prefix configured for the IPv6 delegated address pool.



Table 37: show subscribers Output Fields (continued)

Field Name	Field Description
<b>IPv6 Interface Address</b>	Address assigned by the Framed-Ipv6-Prefix AAA attribute. This field is displayed only when the predefined variable \$junos-ipv6-address is used in the dynamic profile.
<b>IPv6 Framed Interface Id</b>	Interface ID assigned by the Framed-Interface-Id AAA attribute.
<b>ADF IPv4 Input Filter Name</b>	Name assigned to the Ascend-Data-Filter (ADF) interface IPv4 input filter (client or service session). The filter name is followed by the rules (in hexadecimal format) associated with the ADF filter and the decoded rule in Junos OS filter style.
<b>ADF IPv4 Output Filter Name</b>	Name assigned to the Ascend-Data-Filter (ADF) interface IPv4 output filter (client or service session). The filter name is followed by the rules (in hexadecimal format) associated with the ADF filter and the decoded rule in Junos OS filter style.
<b>ADF IPv6 Input Filter Name</b>	Name assigned to the Ascend-Data-Filter (ADF) interface IPv6 input filter (client or service session). The filter name is followed by the rules (in hexadecimal format) associated with the ADF filter and the decoded rule in Junos OS filter style.
<b>ADF IPv6 Output Filter Name</b>	Name assigned to the Ascend-Data-Filter (ADF) interface IPv6 output filter (client or service session). The filter name is followed by the rules (in hexadecimal format) associated with the ADF filter and the decoded rule in Junos OS filter style.
<b>IPv4 Input Filter Name</b>	Name assigned to the IPv4 input filter (client or service session).
<b>IPv4 Output Filter Name</b>	Name assigned to the IPv4 output filter (client or service session).
<b>IPv6 Input Filter Name</b>	Name assigned to the IPv6 input filter (client or service session).
<b>IPv6 Output Filter Name</b>	Name assigned to the IPv6 output filter (client or service session).
<b>IFL Input Filter Name</b>	Name assigned to the logical interface input filter (client or service session).
<b>IFL Output Filter Name</b>	Name assigned to the logical interface output filter (client or service session).
<b>DSL type</b>	PPPoE subscriber's access line type reported by the PPPoE intermediate agent in a PADI or PADO packet in the Vendor-Specific-Tags TLV in subattribute DSL-Type (0x0091). The DSL type is one of the following types: <b>ADSL</b> , <b>ADSL2</b> , <b>ADSL2+</b> , <b>OTHER</b> , <b>SDSL</b> , <b>VDSL</b> , or <b>VDSL2</b> .
<b>Frame/Cell Mode</b>	<p>Mode type of the PPPoE subscriber's access line determined by the PPPoE daemon based on the received subattribute DSL-Type (0x0091):</p> <ul style="list-style-type: none"> <li>• <b>Cell</b>—When the DSL line type is one of the following: <b>ADSL</b>, <b>ADSL2</b>, or <b>ADSL2+</b>.</li> <li>• <b>Frame</b>—When the DSL line type is one of the following: <b>OTHER</b>, <b>SDSL</b>, <b>VDSL</b>, or <b>VDSL2</b>.</li> </ul> <p>The value is stored in the subscriber session database.</p>
<b>Overhead accounting bytes</b>	Number of bytes added to or subtracted from the actual downstream cell or frame overhead to account for the technology overhead of the DSL line type. The value is determined by the PPPoE daemon based on the received subattribute DSL-Type (0x0091). The value is stored in the subscriber session database.



Table 37: show subscribers Output Fields (continued)

Field Name	Field Description
<b>Actual upstream data rate</b>	Unadjusted upstream data rate for the PPPoE subscriber's access line reported by the PPPoE intermediate agent in a PADI or PADO packet in the Vendor-Specific-Tags TLV in subattribute Actual-Net-Data-Rate-Upstream (0x0081).
<b>Actual downstream data rate</b>	Unadjusted downstream data rate for the PPPoE subscriber's access line reported by the PPPoE intermediate agent in a PADI or PADO packet in the Vendor-Specific-Tags TLV in subattribute Actual-Net-Data-Rate-Downstream (0x0082).
<b>Adjusted downstream data rate</b>	Adjusted downstream data rate for the PPPoE subscriber's access line, calculated by the PPPoE daemon and stored in the subscriber session database.
<b>Adjusted upstream data rate</b>	Adjusted upstream data rate for the PPPoE subscriber's access line, calculated by the PPPoE daemon and stored in the subscriber session database.
<b>Local TEID-U</b>	<p>Tunnel endpoint identifier on the BNG for the GTP-U user plane tunnel to the eNodeB. The identifier is allocated by the BNG.</p> <p>A fully qualified local TEID-C consists of this identifier and the <b>GTPU Local IP address</b> value.</p>
<b>Local TEID-C</b>	<p>Tunnel endpoint identifier on the BNG for the GTP-C control plane tunnel to the MME. The identifier is allocated by the BNG.</p> <p>A fully qualified local TEID-C consists of this identifier and the <b>GTPC Local IP address</b> value.</p>
<b>Remote TEID-U</b>	<p>Tunnel endpoint identifier on the eNodeB for the GTP-U user plane tunnel to the BNG. The identifier is allocated by the eNodeB.</p> <p>A fully qualified remote TEID-U consists of this identifier and the <b>GTPU Remote IP address</b> value.</p>
<b>Remote TEID-C</b>	<p>Tunnel endpoint identifier on the MME for the GTP-C control plane tunnel to the BNG. The identifier is allocated by the MME.</p> <p>A fully qualified remote TEID-C consists of this identifier and the <b>GTPC Remote IP address</b> value.</p>
<b>GTPU Tunnel Remote IP address</b>	<p>IP address of the S1-U interface on the eNodeB for the GTP-U tunnel endpoint.</p> <p>A fully qualified remote TEID-U consists of this address and the <b>Remote TEID-U</b> value.</p>
<b>GTPU Tunnel Local IP address</b>	<p>IP address of the S1-U interface on the BNG for the GTP-U tunnel endpoint.</p> <p>A fully qualified local TEID-U consists of this address and the <b>Local TEID-U</b> value.</p>
<b>GTPC Remote IP address</b>	<p>IP address of the S11 interface on the MME for the GTP-C tunnel endpoint.</p> <p>A fully qualified remote TEID-C consists of this address and the <b>Remote TEID-C</b> value.</p>
<b>GTPC Local IP address</b>	<p>IP address of the S11 interface on the BNG for the GTP-C tunnel endpoint.</p> <p>A fully qualified local TEID-C consists of this address and the <b>Local TEID-C</b> value.</p>



Table 37: show subscribers Output Fields (continued)

Field Name	Field Description
Access Point Name	Access point name (APN) for the user equipment. The APN corresponds to the connection and service parameters that the subscriber's mobile device can use for connecting to the carrier's gateway to the Internet.

## Sample Output

### show subscribers (IPv4)

```
user@host> show subscribers
```

Interface	IP Address/VLAN ID	User Name	LS:RI
ge-1/3/0.1073741824	10		default:default
demux0.1073741824	203.0.113.10	WHOLESALE-CLIENT	default:default
demux0.1073741825	203.0.113.3	RETAILER1-CLIENT	test1:retailer1
demux0.1073741826	203.0.113.3	RETAILER2-CLIENT	test1:retailer2

### show subscribers (IPv6)

```
user@host> show subscribers
```

Interface	IP Address/VLAN ID	User Name	LS:RI
ge-1/0/0.0	2001:db8:c0:0:0:0/74	WHOLESALE-CLIENT	default:default
*	2001:db8:1/128	subscriber-25	default:default

### show subscribers (IPv4 and IPv6 Dual Stack)

```
user@host> show subscribers
```

Interface	IP Address/VLAN ID	User Name
LS:RI		
demux0.1073741834	0x8100.1002 0x8100.1	
default:default		
demux0.1073741835	0x8100.1001 0x8100.1	
default:default		
pp0.1073741836	203.0.113.13	dualstackuser1@example1.com
default:ASP-1		
*	2001:db8:1::/48	
*	2001:db8:1:1::/64	
pp0.1073741837	203.0.113.33	dualstackuser2@example1.com
default:ASP-1		
*	2001:db8:1:2:5::/64	

### show subscribers (Single Session DHCP Dual Stack)

```
user@host> show subscribers
```

Interface	IP Address/VLAN ID	User Name	LS:RI
demux0.1073741364	192.168.10.10	dual-stack-retail35	default:default
	2001:db8::100:0:0:0/74		default:default
	2001:db8:3ffe:0:4::/64		



**show subscribers (Single Session DHCP Dual Stack detail)**

```
user@host> show subscribers id 27 detail
```

```
Type: DHCP
User Name: dual-stack-retail33
IP Address: 10.10.0.53
IPv6 Address: 2001:db8:3000:0:0:8003::2
IPv6 Prefix: 2001:db8:3ffe:0:4::/64
Logical System: default
Routing Instance: default
Interface: ae0.3221225472
Interface type: Static
Underlying Interface: ae0.3221225472
Dynamic Profile Name: dhcp-retail-18
MAC Address: 00:00:5E:00:53:02
State: Active
DHCP Relay IP Address: 10.10.0.1
Radius Accounting ID: 27
Session ID: 27
PFE Flow ID: 2
Stacked VLAN Id: 2000
VLAN Id: 1
Login Time: 2014-05-15 10:12:10 PDT
DHCP Options: len 60
00 08 00 02 00 00 00 01 00 0a 00 03 00 01 00 00 64 01 01 02
00 06 00 04 00 03 00 19 00 03 00 0c 00 00 00 00 00 00 00 00
00 00 00 00 00 19 00 0c 00 00 00 00 00 00 00 00 00 00 00 00
```

**show subscribers (LNS on MX Series Routers)**

```
user@host> show subscribers
```

Interface	IP Address/VLAN ID	User Name	LS:RI
si-4/0/0.1	192.0.2.0	user@example.com	default:default

**show subscribers (L2TP Switched Tunnels)**

```
user@host> show subscribers
```

Interface	IP Address/VLAN ID	User Name	LS:RI
si-2/1/0.1073741842	Tunnel-switched	user@example.com	default:default
si-2/1/0.1073741843	Tunnel-switched	user@example.com	default:default

**show subscribers aggregation-interface-set-name**

```
user@host> show subscribers aggregation-interface-set-name FRA*
```

Interface	IP Address/VLAN ID	User Name	LS:RI
ge-1/0/0.3221225472	50	anpc	default:isp1-subscriber

**show subscribers client-type dhcp detail**

```
user@host> show subscribers client-type dhcp detail
```



```

Type: DHCP
IP Address: 203.0.113.29
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: demux0.1073744127
Interface type: Dynamic
Dynamic Profile Name: dhcp-demux
MAC Address: 00:00:5e:00:53:98
State: Active
Radius Accounting ID: user :2304
Login Time: 2009-08-25 14:43:52 PDT

Type: DHCP
IP Address: 203.0.113.27
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: demux0.1073744383
Interface type: Dynamic
Dynamic Profile Name: dhcp-demux-prof
MAC Address: 00:00:5e:00:53:f3
State: Active
Radius Accounting ID: 1234 :2560
Login Time: 2009-08-25 14:43:56 PDT

```

### show subscribers client-type dhcp detail (DHCPv6)

```
user@host> show subscribers client-type dhcp detail
```

```

Type: DHCP
User Name: DEFAULTUSER
IPv6 Address: 2001:db8::2
IPv6 Prefix: 2001:db8:1::/64
Logical System: default
Routing Instance: default
Interface: demux0.3221225602
Interface type: Static
Underlying Interface: demux0.3221225602
Dynamic Profile Name: client-profile
MAC Address: 00:00:5E:00:53:01
State: Active
Radius Accounting ID: 142
Session ID: 142
PFE Flow ID: 148
Stacked VLAN Id: 1
VLAN Id: 1
Login Time: 2018-03-29 12:27:38 EDT
DHCP Options: len 56
00 08 00 02 00 00 00 01 00 0e 00 01 00 01 22 4f d0 33 00 11
01 00 00 01 00 03 00 0c 00 00 00 0a 00 04 9d 40 00 07 62 00
00 19 00 0c 00 00 00 0b 00 04 9d 40 00 07 62 00
Server DHCPV6 Options: len 94
00 0a 00 06 11 22 33 44 55 66 00 11 00 09 00 00 0c 4c 00 02
00 01 aa 00 11 00 20 00 00 0a 4c 00 02 00 02 32 33 00 03 00
03 34 35 36 00 05 00 06 31 32 33 34 35 36 00 06 00 01 31 00
11 00 09 00 00 0b 4c 00 02 00 01 bb 00 11 00 12 00 00 0d e9
00 01 00 03 aa bb cc 00 02 00 03 dd ee cc
DHCPV6 Header: len 4
01 fc e4 96

```



**show subscribers client-type dhcp extensive**

```

user@host> show subscribers client-type dhcp extensive

Type: DHCP
User Name: user
IP Address: 192.0.2.4
IP Netmask: 255.0.0.0
IPv6 Address: 2001:db8:3::103
IPv6 Prefix: 2001:db8::/68
Domain name server inet6: 2001:db8:1 abcd::2
Logical System: default
Routing Instance: default
Interface: ge-0/0/0.0
Interface type: Static
Underlying Interface: ge-0/0/0.0
MAC Address: 00:00:5e:00:53:01
State: Configured
Radius Accounting ID: 10
Session ID: 10
PFE Flow ID: 2
VLAN Id: 100
Agent Circuit ID: ge-0/0/0:100
Agent Remote ID: ge-0/0/0:100
Login Time: 2017-05-23 12:52:22 IST
DHCPV6 Options: len 69
00 01 00 0e 00 01 00 01 59 23 e3 31 00 10 94 00 00 01 00 08
00 02 00 00 00 19 00 29 00 00 00 00 00 04 9d 40 00 07 62 00
00 1a 00 19 00 09 3a 80 00 27 8d 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00
Server DHCP Options: len 13
3a 04 00 00 00 ff 00 3b 04 00 00 0f 00
Server DHCPV6 Options: len 8
00 0a 00 04 ab cd ef ab
DHCPV6 Header: len 4
01 00 00 04
IP Address Pool: a1_pool30
IPv6 Address Pool: ia_na_pool
IPv6 Delegated Address Pool: prefix_delegate_pool

```

**show subscribers client-type fixed-wireless-access**

```

user@host> show subscribers client-type fixed-wireless-access

Interface          IP Address/VLAN ID      User Name
LS:RI
ps1.3221225472     192.0.2.10              505024101215074
default:default
ps1.3221225473     192.0.2.11              505024101215075
default:default

```

**show subscribers client-type fixed-wireless-access detail (Detail)**

```

user@host> show subscribers client-type fixed-wireless-access detail

Type: FWA
User Name: 505024101215074
IP Address: 192.0.2.10
IP Netmask: 255.255.0.0

```



```

Interface: ps1.3221225472
Interface type: Dynamic
Dynamic Profile Name: fwa-profile
State: Active
Radius Accounting ID: 1
Session ID: 1
PFE Flow ID: 11
Login Time: 2019-04-10 14:10:12 PDT
Local TEID-U: 1
Local TEID-C: 1
Remote TEID-U: 2000000
Remote TEID-C: 1000000
GTPU Tunnel Remote IP Address: 203.0.113.1.3
GTPU Tunnel Local IP Address: 203.0.113.2.5
GTPC Remote IP Address: 203.0.113.1.2
GTPC Local IP Address: 203.0.113.1.1
Access Point Name: user21

```

### show subscribers client-type vlan-oob detail

```

user@host> show subscribers client-type vlan-oob detail

Type: VLAN-OOB
User Name: L2WS.line-aci-1.line-ari-1
Logical System: default
Routing Instance: ISP1
Interface: demux0.1073744127
Interface type: Dynamic
Underlying Interface: ge-1/0/0
Dynamic Profile Name: Prof_L2WS
Dynamic Profile Version: 1
State: Active
Radius Accounting ID: 1234
Session ID: 77
VLAN Id: 126
Core-Facing Interface: ge-2/1/1
VLAN Map Id: 6
Inner VLAN Map Id: 2001
Agent Circuit ID: line-aci-1
Agent Remote ID: line-ari-1
Login Time: 2013-10-29 14:43:52 EDT

```

### show subscribers count

```

user@host> show subscribers count

Total Subscribers: 188, Active Subscribers: 188

```

### show subscribers address detail (IPv6)

```

user@host> show subscribers address 203.0.113.137 detail

Type: PPPoE
User Name: pppoeTerV6User1Svc
IP Address: 203.0.113.137
IP Netmask: 255.0.0.0
IPv6 User Prefix: 2001:db8:0:c88::/32
Logical System: default
Routing Instance: default

```



```

Interface: pp0.1073745151
Interface type: Dynamic
Underlying Interface: demux0.8201
Dynamic Profile Name: pppoe-client-profile
MAC Address: 00:00:5e:00:53:53
Session Timeout (seconds): 31622400
Idle Timeout (seconds): 86400
State: Active
Radius Accounting ID: example demux0.8201:6544
Session ID: 6544
Agent Circuit ID: if13720
Agent Remote ID: if13720
Login Time: 2012-05-21 13:37:27 PDT
Service Sessions: 1

```

#### show subscribers detail (IPv4)

```

user@host> show subscribers detail

Type: DHCP
IP Address: 203.0.113.29
IP Netmask: 255.255.0.0
Primary DNS Address: 192.0.2.0
Secondary DNS Address: 192.0.2.1
Primary WINS Address: 192.0.2.3
Secondary WINS Address: 192.0.2.4
Logical System: default
Routing Instance: default
Interface: demux0.1073744127
Interface type: Dynamic
Dynamic Profile Name: dhcp-demux-prof
MAC Address: 00:00:5e:00:53:98
State: Active
Radius Accounting ID: example :2304
Idle Timeout (seconds): 600
Login Time: 2009-08-25 14:43:52 PDT
DHCP Options: len 52
35 01 01 39 02 02 40 3d 07 01 00 10 94 00 00 08 33 04 00 00
00 3c 0c 15 63 6c 69 65 6e 74 5f 50 6f 72 74 20 2f 2f 36 2f
33 2d 37 2d 30 37 05 01 06 0f 21 2c
Service Sessions: 2

```

#### show subscribers detail (IPv6)

```

user@host> show subscribers detail

Type: DHCP
User Name: pd-user1
IPv6 Prefix: 2001:db8:ffff:1::/32
Logical System: default
Routing Instance: default
Interface: ge-3/1/3.2
Interface type: Static
MAC Address: 00:00:5e:00:53:03
State: Active
Radius Accounting ID: 1
Session ID: 1
Login Time: 2011-08-25 12:12:26 PDT
DHCP Options: len 42

```



```
00 08 00 02 00 00 00 01 00 0a 00 03 00 01 00 51 ff ff 00 03
00 06 00 02 00 19 00 19 00 0c 00 00 00 00 00 00 00 00
00 00
```

#### show subscribers detail (pseudowire Interface for GRE Tunnel)

```
user@host> show subscribers detail
```

Interface	IP Address/VLAN ID	User Name	LS:RI
ps0.3221225484	192.0.2.2		
ps0.3221225485	192.0.2.3		
demux0.3221225486	1		default:default
demux0.3221225487	1		default:default
demux0.3221225488	198.51.0.1		default:default
demux0.3221225489	198.51.0.2		default:default

#### show subscribers detail (IPv6 Static Demux Interface)

```
user@host> show subscribers detail
```

```
Type: STATIC-INTERFACE
User Name: user@example.com
IPv6 Prefix: 2001:db8:3:4:5:6:7:aa/32
Logical System: default
Routing Instance: default
Interface: demux0.1
Interface type: Static
Dynamic Profile Name: junos-default-profile
State: Active
Radius Accounting ID: 185
Login Time: 2010-05-18 14:33:56 EDT
```

#### show subscribers detail (L2TP LNS Subscribers on MX Series Routers)

```
user@host> show subscribers detail
```

```
Type: L2TP
User Name: user@example.com
IP Address: 203.0.113.58
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: si-5/2/0.1073749824
Interface type: Dynamic
Dynamic Profile Name: dyn-lns-profile2
Dynamic Profile Version: 1
State: Active
Radius Accounting ID: 8001
Session ID: 8001
Login Time: 2011-04-25 20:27:50 IST
```

#### show subscribers detail (L2TP Switched Tunnels)

```
user@host> show subscribers detail
```



```
Type: L2TP
User Name: user@example.com
Logical System: default
Routing Instance: default
Interface: si-2/1/0.1073741842
Interface type: Dynamic
Dynamic Profile Name: dyn-lts-profile
State: Active
L2TP State: Tunnel-switched
Tunnel switch Profile Name: ce-lts-profile
Local IP Address: 203.0.113.51
Remote IP Address: 192.0.2.0
Radius Accounting ID: 21
Session ID: 21
Login Time: 2013-01-18 03:01:11 PST
```

```
Type: L2TP
User Name: user@example.com
Logical System: default
Routing Instance: default
Interface: si-2/1/0.1073741843
Interface type: Dynamic
Dynamic Profile Name: dyn-lts-profile
State: Active
L2TP State: Tunnel-switched
Tunnel switch Profile Name: ce-lts-profile
Local IP Address: 203.0.113.31
Remote IP Address: 192.0.2.1
Session ID: 22
Login Time: 2013-01-18 03:01:14 PST
```

#### show subscribers detail (Tunneled Subscriber)

```
user@host> show subscribers detail
```

```
Type: PPPoE
User Name: user1@example.com
Logical System: default
Routing Instance: default
Interface: pp0.1
State: Active, Tunneled
Radius Accounting ID: 512
```

#### show subscribers detail (IPv4 and IPv6 Dual Stack)

```
user@host> show subscribers detail
```

```
Type: VLAN
Logical System: default
Routing Instance: default
Interface: demux0.1073741824
Interface type: Dynamic
Dynamic Profile Name: svlanProfile
State: Active
Session ID: 1
Stacked VLAN Id: 0x8100.1001
VLAN Id: 0x8100.1
Login Time: 2011-11-30 00:18:04 PST
```



```

Type: PPPoE
User Name: dualstackuser1@example1.com
IP Address: 203.0.113.13
IPv6 Prefix: 2001:db8:1::/32
IPv6 User Prefix: 2001:db8:1:1::/32
Logical System: default
Routing Instance: ASP-1
Interface: pp0.1073741825
Interface type: Dynamic
Dynamic Profile Name: dualStack-Profile1
MAC Address: 00:00:5e:00:53:02
State: Active
Radius Accounting ID: 2
Session ID: 2
Login Time: 2011-11-30 00:18:05 PST

Type: DHCP
IPv6 Prefix: 2001:db8:1::/32
Logical System: default
Routing Instance: ASP-1
Interface: pp0.1073741825
Interface type: Static
MAC Address: 00:00:5e:00:53:02
State: Active
Radius Accounting ID: test :3
Session ID: 3
Underlying Session ID: 2
Login Time: 2011-11-30 00:18:35 PST
DHCP Options: len 42
00 08 00 02 0b b8 00 01 00 0a 00 03 00 01 00 00 64 03 01 02
00 06 00 02 00 19 00 19 00 0c 00 00 00 00 00 00 00 00 00
00 00

```

#### show subscribers detail (ACI Interface Set Session)

```

user@host> show subscribers detail

Type: VLAN
Logical System: default
Routing Instance: default
Interface: ge-1/0/0
Interface Set: aci-1001-ge-1/0/0.2800
Interface Set Session ID: 0
Underlying Interface: ge-1/0/0.2800
Dynamic Profile Name: aci-vlan-set-profile-2
Dynamic Profile Version: 1
State: Active
Session ID: 1
Agent Circuit ID: aci-ppp-dhcp-20
Login Time: 2012-05-26 01:54:08 PDT

```

#### show subscribers detail (PPPoE Subscriber Session with ACI Interface Set)

```

user@host> show subscribers detail

Type: PPPoE
User Name: ppphint2
IP Address: 203.0.113.15

```



```

Logical System: default
Routing Instance: default
Interface: pp0.1073741825
Interface type: Dynamic
Interface Set: aci-1001-demux0.1073741824
Interface Set Type: Dynamic
Interface Set Session ID: 2
Underlying Interface: demux0.1073741824
Dynamic Profile Name: aci-vlan-pppoe-profile
Dynamic Profile Version: 1
MAC Address: 00:00:5e:00:53:02
State: Active
Radius Accounting ID: 3
Session ID: 3
Agent Circuit ID: aci-ppp-dhcp-dvlan-50
Login Time: 2012-03-07 13:46:53 PST

```

### show subscribers extensive

```

user@host> show subscribers extensive

Type: DHCP
User Name: pd-user1
IPv6 Prefix: 2001:db8:ffff:1::/32
Logical System: default
Routing Instance: default
Interface: ge-3/1/3.2
Interface type: Static
MAC Address: 00:00:5e:00:53:03
State: Active
Radius Accounting ID: 1
Session ID: 1
Login Time: 2011-08-25 12:12:26 PDT
DHCP Options: len 42
00 08 00 02 00 00 00 01 00 0a 00 03 00 01 00 51 ff ff 00 03
00 06 00 02 00 19 00 19 00 0c 00 00 00 00 00 00 00 00 00
00 00
IPv6 Address Pool: pd_pool
IPv6 Network Prefix Length: 48

```

### show subscribers extensive (Aggregation Node Interface Set and DSL Forum Attributes)

```

user@host> show subscribers extensive

Type: VLAN-00B
User Name: ancp
Logical System: default
Routing Instance: isp1-subscriber
Interface: ge-1/0/0.3221225472
Interface type: Dynamic
Interface Set: FRA-DPU-C-100
Underlying Interface: ge-1/0/0
Core IFL Name: ge-1/0/4.0
Dynamic Profile Name: Prof_L2BSA
State: Active
Radius Accounting ID: 1
Session ID: 1
PFE Flow ID: 13
VLAN Id: 50

```



```

VLAN Map Id: 20
Inner VLAN Map Id: 1
Inner VLAN Tag Protocol Id: 0x88a8
Agent Circuit ID: circuit 201
Agent Remote ID: remote-id
Aggregation Interface-set Name: FRA-DPU-C-100
Login Time: 2018-05-29 08:43:42 EDT
Accounting interval: 72000
Dynamic configuration:
    junos-cos-scheduler-map: 100m
    junos-inner-vlan-tag-protocol-id: 0x88a8
    junos-vlan-map-id: 20

Type: PPPoE
IP Address: 192.85.128.1
IP Netmask: 255.255.255.255
Logical System: default
Routing Instance: default
Interface: pp0.3221225474
Interface type: Dynamic
Interface Set: ge-1/0/0
Underlying Interface: demux0.3221225473
Dynamic Profile Name: pppoe-client-profile-with-cos
MAC Address: 00:10:94:00:00:03
State: Active
Radius Accounting ID: 3
Session ID: 3
PFE Flow ID: 16
Stacked VLAN Id: 50
VLAN Id: 7
Agent Circuit ID: circuit 201
Agent Remote ID: remote-id
Aggregation Interface-set Name: FRA-DPU-C-100
Login Time: 2018-05-29 08:43:45 EDT
IP Address Pool: pool-1
Accounting interval: 72000
DSL type: G.fast
Frame/cell mode: Frame
Overhead accounting bytes: 10
Actual upstream data rate: 100000 kbps
Actual downstream data rate: 200000 kbps
Calculated downstream data rate: 180000 kbps
Calculated upstream data rate: 90000 kbps
Adjusted upstream data rate: 80000 kbps
Adjusted downstream data rate: 160000 kbps
DSL Line Attributes
    Agent Circuit ID: circuit 201
    Agent Remote ID: remote-id
    Actual upstream data rate: 100000
    Actual downstream data rate: 200000
    DSL type: G.fast
    Access Aggregation Circuit ID: #FRA-DPU-C-100
    Attribute type: 0xAA, Attribute length: 4
    198 51 100 78

```

### show subscribers extensive (Passive Optical Network Circuit Interface Set)

```
user@host> show subscribers client-type dhcp extensive
```



```

Type: DHCP
IP Address: 192.0.2.136
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: demux0.1073741842
Interface type: Dynamic
Interface Set: ot101.xyz101-202
Underlying Interface: demux0.1073741841
Dynamic Profile Name: dhcp-profile
MAC Address: 00:00:5e:00:53:02
State: Active
Radius Accounting ID: user :19
Session ID: 19
VLAN Id: 1100
Agent Remote ID: ABCD01234|100M|AAA01234|ot101.xyz101-202

Login Time: 2017-03-29 10:30:46 PDT
DHCP Options: len 97
35 01 01 39 02 02 40 3d 07 01 00 10 94 00 00 02 33 04 00 00
17 70 0c 15 63 6c 69 65 6e 74 5f 50 6f 72 74 20 2f 2f 32 2f
32 2d 31 2d 31 37 05 01 06 0f 21 2c 52 2b 02 29 41 42 43 44
30 31 32 33 34 7c 31 30 30 4d 7c 41 41 41 41 30 31 32 33 34
7c 6f 74 6c 30 31 2e 78 79 7a 31 30 31 2d 32 30 32
IP Address Pool: POOL-V4

```

#### show subscribers extensive (DNS Addresses from Access Profile or Global Configuration)

```

user@host> show subscribers extensive

Type: DHCP
User Name: test-user@example-com
IP Address: 192.0.2.119
IP Netmask: 255.255.255.255
Domain name server inet: 198.51.100.1 198.51.100.2
IPv6 Address: 2001:db8::1:11
Domain name server inet6: 2001:db8:5001::12 2001:db8:3001::12
Logical System: default
Routing Instance: default
Interface: ge-2/0/3.0
Interface type: Static
Underlying Interface: ge-2/0/3.0
MAC Address: 00:00:5E:00:53:00
State: Active
Radius Accounting ID: 5
Session ID: 5
Login Time: 2017-01-31 11:16:21 IST
DHCP Options: len 53
35 01 01 39 02 02 40 3d 07 01 00 10 94 00 00 03 33 04 00 00
00 3c 0c 16 63 6c 69 65 6e 74 5f 50 6f 72 74 20 2f 2f 35 2f
31 32 2d 30 2d 30 37 05 01 06 0f 21 2c
IP Address Pool: v4-pool

```

#### show subscribers extensive (DNS Addresses from RADIUS)

```

user@host> show subscribers extensive

Type: DHCP
User Name: test-user@example-com

```



```

IP Address: 192.0.2.119
IP Netmask: 255.255.255.255
Primary DNS Address: 198.51.100.1
Secondary DNS Address: 198.51.100.2
IPv6 Address: 2001:db8::1:11
IPv6 Primary DNS Address: 2001:db8:5001::12
IPv6 Secondary DNS Address: 2001:db8:3001::12
Logical System: default
Routing Instance: default
Interface: ge-2/0/3.0
Interface type: Static
Underlying Interface: ge-2/0/3.0
MAC Address: 00:00:5E:00:53:00
State: Active
Radius Accounting ID: 5
Session ID: 5
Login Time: 2017-01-31 11:16:21 IST
DHCP Options: len 53
35 01 01 39 02 02 40 3d 07 01 00 10 94 00 00 03 33 04 00 00
00 3c 0c 16 63 6c 69 65 6e 74 5f 50 6f 72 74 20 2f 2f 35 2f
31 32 2d 30 2d 30 37 05 01 06 0f 21 2c
IP Address Pool: v4-pool

```

#### show subscribers extensive (IPv4 DNS Addresses from RADIUS, IPv6 from Access Profile or Global Configuration)

```

user@host> show subscribers extensive

Type: DHCP
User Name: test-user@example-com
IP Address: 192.0.2.119
IP Netmask: 255.255.255.255
Primary DNS Address: 198.51.100.1
Secondary DNS Address: 198.51.100.2
IPv6 Address: 2001:db8::1:11
Domain name server inet6: 2001:db8:5001::12 2001:db8:3001::12
Logical System: default
Routing Instance: default
Interface: ge-2/0/3.0
Interface type: Static
Underlying Interface: ge-2/0/3.0
MAC Address: 00:00:5E:00:53:00
State: Active
Radius Accounting ID: 5
Session ID: 5
Login Time: 2017-01-31 11:16:21 IST
DHCP Options: len 53
35 01 01 39 02 02 40 3d 07 01 00 10 94 00 00 03 33 04 00 00
00 3c 0c 16 63 6c 69 65 6e 74 5f 50 6f 72 74 20 2f 2f 35 2f
31 32 2d 30 2d 30 37 05 01 06 0f 21 2c
IP Address Pool: v4-pool

```

#### show subscribers extensive (RPF Check Fail Filter)

```

user@host> show subscribers extensive

...
Type: VLAN
  Logical System: default
  Routing Instance: default

```



```
Interface: ae0.1073741824
Interface type: Dynamic
Dynamic Profile Name: vlan-prof
State: Active
Session ID: 9
VLAN Id: 100
Login Time: 2011-08-26 08:17:00 PDT
IPv4 rpf-check Fail Filter Name: rpf-allow-dhcp
IPv6 rpf-check Fail Filter Name: rpf-allow-dhcpv6
...
```

### show subscribers extensive (L2TP LNS Subscribers on MX Series Routers)

```
user@host> show subscribers extensive

Type: L2TP
User Name: user@example.com
IP Address: 203.0.113.58
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: si-5/2/0.1073749824
Interface type: Dynamic
Dynamic Profile Name: dyn-lns-profile2
Dynamic Profile Version: 1
State: Active
Radius Accounting ID: 8001
Session ID: 8001
Login Time: 2011-04-25 20:27:50 IST
IPv4 Input Filter Name: classify-si-5/2/0.1073749824-in
IPv4 Output Filter Name: classify-si-5/2/0.1073749824-out
```

### show subscribers extensive (IPv4 and IPv6 Dual Stack)

```
user@host> show subscribers extensive

Type: VLAN
Logical System: default
Routing Instance: default
Interface: demux0.1073741824
Interface type: Dynamic
Dynamic Profile Name: svlanProfile
State: Active
Session ID: 1
Stacked VLAN Id: 0x8100.1001
VLAN Id: 0x8100.1
Login Time: 2011-11-30 00:18:04 PST

Type: PPPoE
User Name: dualstackuser1@example1.com
IP Address: 203.0.113.13
IPv6 Prefix: 2001:db8:1::/32
IPv6 User Prefix: 2001:db8:1:1::/32
Logical System: default
Routing Instance: ASP-1
Interface: pp0.1073741825
Interface type: Dynamic
Dynamic Profile Name: dualStack-Profile1
MAC Address: 00:00:5e:00:53:02
```



```

State: Active
Radius Accounting ID: 2
Session ID: 2
Login Time: 2011-11-30 00:18:05 PST
IPv6 Delegated Network Prefix Length: 48
IPv6 Interface Address: 2001:db8:2016:1:1::1/64
IPv6 Framed Interface Id: 1:1:2:2
IPv4 Input Filter Name: FILTER-IN-pp0.1073741825-in
IPv4 Output Filter Name: FILTER-OUT-pp0.1073741825-out
IPv6 Input Filter Name: FILTER-IN6-pp0.1073741825-in
IPv6 Output Filter Name: FILTER-OUT6-pp0.1073741825-out

Type: DHCP
IPv6 Prefix: 2001:db8:1::/32
Logical System: default
Routing Instance: ASP-1
Interface: pp0.1073741825
Interface type: Static
MAC Address: 00:00:5e:00:53:02
State: Active
Radius Accounting ID: test :3
Session ID: 3
Underlying Session ID: 2
Login Time: 2011-11-30 00:18:35 PST
DHCP Options: len 42
00 08 00 02 0b b8 00 01 00 0a 00 03 00 01 00 00 64 03 01 02
00 06 00 02 00 19 00 19 00 0c 00 00 00 00 00 00 00 00 00
00 00
IPv6 Delegated Network Prefix Length: 48

```

### show subscribers extensive (ADF Rules )

```

user@host> show subscribers extensive

...
Service Session ID: 12
Service Session Name: SERVICE-PROFILE
State: Active
Family: inet
  ADF IPv4 Input Filter Name: __junos_adf_12-demux0.3221225474-inet-in
    Rule 0: 010101000b0101020b020200201811
      from {
        source-address 203.0.113.232;
        destination-address 198.51.100.0/24;
        protocol 17;
      }
      then {
        accept;
      }

```

### show subscribers extensive (Effective Shaping-Rate)

```

user@host> show subscribers extensive

Type: VLAN
Logical System: default
Routing Instance: default
Interface: demux0.1073741837

```



```

Interface type: Dynamic
Interface Set: ifset-1
Underlying Interface: ae1
Dynamic Profile Name: svlan-dhcp-test
State: Active
Session ID: 1
Stacked VLAN Id: 0x8100.201
VLAN Id: 0x8100.201
Login Time: 2011-11-30 00:18:04 PST
Effective shaping-rate: 31000000k
...

```

### show subscribers extensive (PPPoE Subscriber Access Line Rates)

```
user@host> show subscribers extensive
```

```

Type: PPPoE
IP Address: 198.51.100.1
IP Netmask: 255.255.255.255
Logical System: default
Routing Instance: default
Interface: pp0.3221225475
Interface type: Dynamic
Underlying Interface: demux0.3221225474
Dynamic Profile Name: pppoe-client-profile-with-cos
MAC Address: 00:00:5e:00:53:02
State: Active
Radius Accounting ID: 4
Session ID: 4
PFE Flow ID: 14
Stacked VLAN Id: 40
VLAN Id: 1
Agent Circuit ID: circuit0
Agent Remote ID: remote0
Login Time: 2017-04-06 15:52:32 PDT

User Name: DAVE-L2BSA-SERVICE
Logical System: default
Routing Instance: isp-1-subscriber
Interface: ge-1/2/4.3221225472
Interface type: Dynamic
Interface Set: ge-1/2/4
Underlying Interface: ge-1/2/4
Core IFL Name: ge-1/3/4.0
Dynamic Profile Name: L2BSA-88a8-400LL1300V0
State: Active
Radius Accounting ID: 1
Session ID: 1
PFE Flow ID: 14
VLAN Id: 13
VLAN Map Id: 102
Inner VLAN Map Id: 1
Agent Circuit ID: circuit-aci-3
Agent Remote ID: remote49-3
Login Time: 2017-04-05 16:59:29 EDT
Service Sessions: 4
IFL Input Filter Name: L2BSA-CP-400LL1300V0-ge-1/2/4.3221225472-in
IFL Output Filter Name: L2BSA-CP-400LL1300V0-ge-1/2/4.3221225472-out
Accounting interval: 900
DSL type: VDSL

```



```

Frame/Cell Mode: Frame
Overhead accounting bytes: -10
Actual upstream data rate: 1024 kbps
Actual downstream data rate: 4096 kbps
Adjusted downstream data rate: 3686 kbps
Adjusted upstream data rate: 922 kbps
Dynamic configuration:
  junos-vlan-map-id: 102
  Service Session ID: 5
  Service Session Name: SRL-L1
  State: Active
  Family: inet, inet6
  IFL Input Filter Name: L2BSA-FWF-in-10048-ge-1/2/4.3221225472-in
  IFL Output Filter Name: L2BSA-FWF-out-25088-ge-1/2/4.3221225472-out
  Service Activation time: 2017-04-05 16:59:30 EDT
Dynamic configuration:
  l2bsa-fwf-in: L2BSA-FWF-in-10048
  l2bsa-fwf-out: L2BSA-FWF-out-25088
  rldown: 25088
  rlup: 10048

```

#### show subscribers extensive (Subscriber Session Using PCEF Profile)

```

user@host> show subscribers extensive

Type: VLAN
Logical System: default
Routing Instance: default
Interface: demux0.3221225517
Interface type: Dynamic
Underlying Interface: ge-1/0/3
Dynamic Profile Name: svlan-dhcp
State: Active
Session ID: 59
PFE Flow ID: 71
Stacked VLAN Id: 0x8100.1
VLAN Id: 0x8100.2
Login Time: 2017-03-28 08:23:08 PDT

Type: DHCP
User Name: pcefuser
IP Address: 192.0.2.26
IP Netmask: 255.0.0.0
Logical System: default
Routing Instance: default
Interface: demux0.3221225518
Interface type: Dynamic
Underlying Interface: demux0.3221225517
Dynamic Profile Name: dhcp-client-prof
MAC Address: 00:00:5e:00:53:01
State: Active
Radius Accounting ID: 60
Session ID: 60
PFE Flow ID: 73
Stacked VLAN Id: 1
VLAN Id: 2
Login Time: 2017-03-28 08:23:08 PDT
Service Sessions: 1
DHCP Options: len 9
35 01 01 37 04 01 03 3a 3b

```



```

IP Address Pool: pool-ipv4
IPv4 Input Service Set: tdf-service-set
IPv4 Output Service Set: tdf-service-set
PCEF Profile: pcef-prof-1
PCEF Rule/Rulebase: default
Dynamic configuration:
  junos-input-service-filter: svc-filt-1
  junos-input-service-set: tdf-service-set
  junos-output-service-filter: svc-filt-1
  junos-output-service-set: tdf-service-set
  junos-pcef-profile: pcef-prof-1
  junos-pcef-rule: default

Service Session ID: 61
Service Session Name: pcef-serv-prof
State: Active
Family: inet
IPv4 Input Service Set: tdf-service-set
IPv4 Output Service Set: tdf-service-set
PCEF Profile: pcef-prof-1
PCEF Rule/Rulebase: limit-fb
Service Activation time: 2017-03-28 08:31:19 PDT
Dynamic configuration:
  pcef-prof: pcef-prof-1
  pcef-rule1: limit-fb
  svc-filt: svc-filt-1
  svc-set: tdf-service-set

```

#### show subscribers aci-interface-set-name detail (Subscriber Sessions Using Specified ACI Interface Set)

```
user@host> show subscribers aci-interface-set-name aci-1003-ge-1/0/0.4001 detail
```

```

Type: VLAN
Logical System: default
Routing Instance: default
Interface: ge-1/0/0.
Underlying Interface: ge-1/0/0.4001
Dynamic Profile Name: aci-vlan-set-profile
Dynamic Profile Version: 1
State: Active
Session ID: 13
Agent Circuit ID: aci-ppp-vlan-10
Login Time: 2012-03-12 10:41:56 PDT

Type: PPPoE
User Name: ppphint2
IP Address: 203.0.113.17
Logical System: default
Routing Instance: default
Interface: pp0.1073741834
Interface type: Dynamic
Interface Set: aci-1003-ge-1/0/0.4001
Interface Set Type: Dynamic
Interface Set Session ID: 13
Underlying Interface: ge-1/0/0.4001
Dynamic Profile Name: aci-vlan-pppoe-profile
Dynamic Profile Version: 1
MAC Address:
State: Active
Radius Accounting ID: 14

```



```

Session ID: 14
Agent Circuit ID: aci-ppp-vlan-10
Login Time: 2012-03-12 10:41:57 PDT

```

### show subscribers agent-circuit-identifier detail (Subscriber Sessions Using Specified ACI Substring)

```
user@host> show subscribers agent-circuit-identifier aci-ppp-vlan detail
```

```

Type: VLAN
Logical System: default
Routing Instance: default
Interface: ge-1/0/0.
Underlying Interface: ge-1/0/0.4001
Dynamic Profile Name: aci-vlan-set-profile
Dynamic Profile Version: 1
State: Active
Session ID: 13
Agent Circuit ID: aci-ppp-vlan-10
Login Time: 2012-03-12 10:41:56 PDT

```

```

Type: PPPoE
User Name: ppphint2
IP Address: 203.0.113.17
Logical System: default
Routing Instance: default
Interface: pp0.1073741834
Interface type: Dynamic
Interface Set: aci-1003-ge-1/0/0.4001
Interface Set Type: Dynamic
Interface Set Session ID: 13
Underlying Interface: ge-1/0/0.4001
Dynamic Profile Name: aci-vlan-pppoe-profile
Dynamic Profile Version: 1
MAC Address: 00:00:5e:00:53:52
State: Active
Radius Accounting ID: 14
Session ID: 14
Agent Circuit ID: aci-ppp-vlan-10
Login Time: 2012-03-12 10:41:57 PDT

```

### show subscribers id accounting-statistics

```
user@host> show subscribers id 601 accounting-statistics
```

```

Session ID: 601
Accounting Statistics:
Input bytes : 199994
Output bytes : 121034
Input packets: 5263
Output packets: 5263
IPv6:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

```

### show subscribers interface accounting-statistics

```
user@host> show subscribers interface pp0.3221226949 accounting-statistics
```



```

Session ID: 501
Accounting Statistics:
Input bytes : 199994
Output bytes : 121034
Input packets: 5263
Output packets: 5263
IPv6:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

```

```

Session ID: 502
Accounting Statistics:
Input bytes : 87654
Output bytes : 72108
Input packets: 3322
Output packets: 3322
IPv6:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

```

```

Session ID: 503
Accounting Statistics:
Input bytes : 156528
Output bytes : 123865
Input packets: 7448
Output packets: 7448
IPv6:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

```

#### show subscribers interface extensive

```
user@host> show subscribers interface demux0.1073741826 extensive
```

```

Type: VLAN
User Name: user@test.example.com
Logical System: default
Routing Instance: testnet
Interface: demux0.1073741826
Interface type: Dynamic
Dynamic Profile Name: profile-vdemux-relay-23qos
MAC Address: 00:00:5e:00:53:04
State: Active
Radius Accounting ID: 12
Session ID: 12
Stacked VLAN Id: 0x8100.1500
VLAN Id: 0x8100.2902
Login Time: 2011-10-20 16:21:59 EST

Type: DHCP
User Name: user@test.example.com
IP Address: 192.0.2.0
IP Netmask: 255.255.255.0
Logical System: default

```



```

Routing Instance: testnet
Interface: demux0.1073741826
Interface type: Static
MAC Address: 00:00:5e:00:53:04
State: Active
Radius Accounting ID: 21
Session ID: 21
Login Time: 2011-10-20 16:24:33 EST
Service Sessions: 2

Service Session ID: 25
Service Session Name: SUB-QOS
State: Active

Service Session ID: 26
Service Session Name: service-cb-content
State: Active
IPv4 Input Filter Name: content-cb-in-demux0.1073741826-in
IPv4 Output Filter Name: content-cb-out-demux0.1073741826-out

```

### show subscribers logical-system terse

```
user@host> show subscribers logical-system test1 terse
```

Interface	IP Address/VLAN ID	User Name	LS:RI
demux0.1073741825	203.0.113.3	RETAILER1-CLIENT	test1:retailer1
demux0.1073741826	203.0.113.4	RETAILER2-CLIENT	test1:retailer2

### show subscribers physical-interface count

```
user@host> show subscribers physical-interface ge-1/0/0 count
```

```
Total subscribers: 3998, Active Subscribers: 3998
```

### show subscribers routing-instance inst1 count

```
user@host> show subscribers routing-instance inst1 count
```

```
Total Subscribers: 188, Active Subscribers: 183
```

### show subscribers stacked-vlan-id detail

```
user@host> show subscribers stacked-vlan-id 101 detail
```

```

Type: VLAN
Interface: ge-1/2/0.1073741824
Interface type: Dynamic
Dynamic Profile Name: svlan-prof
State: Active
Stacked VLAN Id: 0x8100.101
VLAN Id: 0x8100.100
Login Time: 2009-03-27 11:57:19 PDT

```

### show subscribers stacked-vlan-id vlan-id detail (Combined Output)

```
user@host> show subscribers stacked-vlan-id 101 vlan-id 100 detail
```



```
Type: VLAN
Interface: ge-1/2/0.1073741824
Interface type: Dynamic
Dynamic Profile Name: svlan-prof
State: Active
Stacked VLAN Id: 0x8100.101
VLAN Id: 0x8100.100
Login Time: 2009-03-27 11:57:19 PDT
```

#### show subscribers stacked-vlan-id vlan-id interface detail (Combined Output for a Specific Interface)

```
user@host> show subscribers stacked-vlan-id 101 vlan-id 100 interface ge-1/2/0.* detail
```

```
Type: VLAN
Interface: ge-1/2/0.1073741824
Interface type: Dynamic
Dynamic Profile Name: svlan-prof
State: Active
Stacked VLAN Id: 0x8100.101
VLAN Id: 0x8100.100
Login Time: 2009-03-27 11:57:19 PDT
```

#### show subscribers user-name detail

```
user@host> show subscribers user-name larry1 detail
```

```
Type: DHCP
User Name: larry1
IP Address: 203.0.113.37
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: ge-1/0/0.1
Interface type: Static
Dynamic Profile Name: foo
MAC Address: 00:00:5e:00:53:01
State: Active
Radius Accounting ID: 1
Session ID: 1
Login Time: 2011-11-07 08:25:59 PST
DHCP Options: len 52
35 01 01 39 02 02 40 3d 07 01 00 10 94 00 00 01 33 04 00 00
00 3c 0c 15 63 6c 69 65 6e 74 5f 50 6f 72 74 20 2f 2f 32 2f
37 2d 30 2d 30 37 05 01 06 0f 21 2c
```

#### show subscribers vlan-id

```
user@host> show subscribers vlan-id 100
```

Interface	IP Address	User Name
ge-1/0/0.1073741824		
ge-1/2/0.1073741825		

#### show subscribers vlan-id detail

```
user@host> show subscribers vlan-id 100 detail
```

```
Type: VLAN
Interface: ge-1/0/0.1073741824
```



```

Interface type: Dynamic
Dynamic Profile Name: vlan-prof-tpid
State: Active
VLAN Id: 100
Login Time: 2009-03-11 06:48:54 PDT

Type: VLAN
Interface: ge-1/2/0.1073741825
Interface type: Dynamic
Dynamic Profile Name: vlan-prof-tpid
State: Active
VLAN Id: 100
Login Time: 2009-03-11 06:48:54 PDT

```

### show subscribers vpi vci extensive (PPPoE-over-ATM Subscriber Session)

```

user@host> show subscribers vpi 40 vci 50 extensive

Type: PPPoE
User Name: testuser
IP Address: 203.0.113.2
IP Netmask: 255.255.0.0
Logical System: default
Routing Instance: default
Interface: pp0.0
Interface type: Static
MAC Address: 00:00:5e:00:53:02
State: Active
Radius Accounting ID: 2
Session ID: 2
ATM VPI: 40
ATM VCI: 50
Login Time: 2012-12-03 07:49:26 PST
IP Address Pool: pool_1
IPv6 Framed Interface Id: 200:65ff:fe23:102

```

### show subscribers address detail (Enhanced Subscriber Management)

```

user@host> show subscribers address 203.0.113.111 detail

Type: DHCP
User Name: simple_filters_service
IP Address: 203.0.113.111
IP Netmask: 255.0.0.0
Logical System: default
Routing Instance: default
Interface: demux0.3221225482
Interface type: Dynamic
Underlying Interface: demux0.3221225472
Dynamic Profile Name: dhcp-demux-prof
MAC Address: 00:00:5e:00:53:0f
State: Active
Radius Accounting ID: 11
Session ID: 11
PFE Flow ID: 15
Stacked VLAN Id: 210
VLAN Id: 209
Login Time: 2014-03-24 12:53:48 PDT
Service Sessions: 1

```



```
DHCP Options: len 3  
35 01 01
```



## show system alarms

<b>Syntax</b>	<code>show system alarms</code>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display active system alarms.
<b>Options</b>	This command has no options.
<b>Additional Information</b>	<p>System alarms are preset. You cannot modify them, although you can configure them to appear automatically in the J-Web user interface or CLI. They include a <i>configuration</i> alarm that appears when no rescue configuration alarm is set and a <i>license</i> alarm that appears when a software feature is configured and no valid license is configured for the feature. You can also determine when a license will expire from syslog messages that appear starting from four weeks before expiry of the license. On EX6200 switches, an alarm can be triggered by an internal link error.</p> <p>The logic for multiple feature licenses is based on the highest validity among the licenses. Also, for capacity non-cumulative, exclusive type licenses (such as for scale), the logic is based on the highest validity of the license.</p>



**NOTE:** As of Junos OS Release 17.3R1, the logic for multiple capacity type licenses and when their expiry raises alarms was changed. Before, the behavior had alarms and syslog messages for expiring licenses raised based on the highest validity, which would mislead users in the case of a license expiring earlier than the highest validity license. The newer behavior has the about-to-expire logic based on the first expiring license.

For more information about system alarms, see the *Junos OS Administration Library*.

In Junos OS release 11.1 and later, alarms for fans also show the slot number of the malfunctioning fans in the CLI output.

Starting with Junos OS Release 13.2, you can view degraded fabric alarms on a routing matrix based on TX Matrix Plus router with 3D SiBs. The alarm indicates that the source FPC is running with a degraded fabric condition. This alarm is an early warning of a possible fabric black-hole condition. When the degraded fabric alarm is raised on the source FPC, you can take remedial action to avoid a fabric black-hole condition. The degraded fabric alarm is raised on the source FPC if both the following conditions are met:



- The active Packet Forwarding Engine destinations are reachable on one or no active switching planes.
- At least one of the inactive switching planes has a fault that causes the destination Packet Forwarding Engine to become unreachable.



**NOTE:** On Junos OS Evolved, the `show system alarms` command does not display the error number. Instead, you can use the `show chassis fpc errors detail` and the `show system errors` commands to list the errors that contribute to a failure.

**Required Privilege Level** view

**Related Documentation** • [show chassis alarms on page 171](#)

**List of Sample Output** [show system alarms on page 864](#)  
[show system alarms \(Fan Tray\) on page 865](#)  
[show system alarms \(QFX Series and OCX Series\) on page 865](#)  
[show system alarms \(EX6200\) on page 865](#)  
[show system alarms \(TX Matrix Plus router with 3D SIBs\) on page 865](#)  
[show system alarms \(Junos OS Evolved\) on page 865](#)

**Output Fields** [Table 38 on page 864](#) lists the output fields for the `show system alarms` command. Output fields are listed in the approximate order in which they appear.

*Table 38: show system alarms Output Fields*

Field Name	Field Description
Alarm time	Date and time the alarm was first recorded.
Class	Severity class for this alarm: <b>Minor</b> or <b>Major</b> .
Description	Information about the alarm.

## Sample Output

### show system alarms

```
user@host> show system alarms
```

```
2 alarms currently active
Alarm time           Class   Description
2005-02-24 17:29:34 UTC Minor   IPsec VPN tunneling usage requires a
license
2005-02-24 17:29:34 UTC Minor   Rescue configuration is not sent
```



### show system alarms (Fan Tray)

```
user@host> show system alarms

4 alarms currently active
Alarm time      Class  Description
2010-11-11 20:27:38 UTC Major Side Fan Tray 7 Failure
2010-11-11 20:27:13 UTC Minor Side Fan Tray 7 Overspeed
2010-11-11 20:27:13 UTC Major Side Fan Tray 5 Failure
2010-11-11 20:27:13 UTC Major Side Fan Tray 0 Failure
```

### show system alarms (QFX Series and OCX Series)

```
user@switch> show system alarms

2 alarms currently active
Alarm time Class Description
2005-02-24 17:29:34 UTC Minor Rescue configuration is not sent
```

### show system alarms (EX6200)

```
user@switch> show system alarms

2 alarms currently active
Alarm time      Class  Description
2013-04-05 16:51:41 PDT Major FPC 8 internal link errors detected
2013-04-04 18:05:35 PDT Minor Rescue configuration is not set
```

### show system alarms (TX Matrix Plus router with 3D SIBs)

```
user@router> show system alarms

sfc0-re0:
-----
2 alarms currently active
Alarm time      Class  Description
2013-05-08 18:13:58 UTC Major LCC 0 Major Errors
2013-05-08 17:48:46 UTC Major LCC 7 Major Errors

lcc0-re1:
-----
1 alarm currently active
Alarm time      Class  Description
2013-05-08 18:19:24 UTC Major FPC 1 degraded fabric condition detected

lcc7-re0:
-----
1 alarm currently active
Alarm time      Class  Description
2013-05-08 18:19:24 UTC Major FPC 7 degraded fabric condition detected
```

### show system alarms (Junos OS Evolved)

```
user@router> show system alarms
```



10 alarms currently active

Alarm time	Class	Description
2019-02-01 02:20:09 PST	Major	PCI Corrected error on dev 0000:00:01.0

Starting in Junos OS Evolved Release 19.1R1, the alarm string for PCI Corrected error is shown as **PCI Corrected error on dev 0000:00:01.0**. Also, a PCI uncorrectable error does not cause a reboot, but only raises an alarm.



## show system audit

<b>List of Syntax</b>	<a href="#">Syntax on page 867</a> <a href="#">Syntax (EX Series Switch and MX Series Router) on page 867</a> <a href="#">Syntax (TX Matrix Router) on page 867</a> <a href="#">Syntax (TX Matrix Plus Router) on page 867</a> <a href="#">Syntax (QFX Series) on page 867</a> <a href="#">Syntax (OCX Series) on page 867</a>
<b>Syntax</b>	show system audit <root-only>
<b>Syntax (EX Series Switch and MX Series Router)</b>	show system audit <all-members> <local> <member <i>member-id</i> > <root-only>
<b>Syntax (TX Matrix Router)</b>	show system audit <all-lcc   lcc <i>number</i>   scc> <root-only>
<b>Syntax (TX Matrix Plus Router)</b>	show system audit <all-chassis   all-lcc   lcc <i>number</i>   sfc <i>number</i> > <root-only>
<b>Syntax (QFX Series)</b>	show system audit <infrastructure <i>name</i>   interconnect-device <i>name</i>   node-group <i>name</i>   root-only>
<b>Syntax (OCX Series)</b>	show system audit <root-only>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display the state and checksum values for file systems.
<b>Options</b>	<b>none</b> —Display the state and checksum values for all file systems.



**all-chassis**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display file system MD5 hash and permissions information for all of the chassis.

**all-lcc**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display file system MD5 hash and permissions information for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display file system MD5 hash and permissions information for all T1600 or T4000 routers connected to the TX Matrix Plus router.

**all-members**—(EX4200 switch, QFX Series, and MX Series routers only) (Optional) Display file system MD5 hash and permissions information on all members of the Virtual Chassis configuration.

**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display file system MD5 hash and permissions information for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display file system MD5 hash and permissions information for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**infrastructure *name***—(QFabric systems only) (Optional) Display file system MD5 hash and permissions information for a fabric control Routing Engine or a fabric control Routing Engine.

**interconnect-device *name***—(QFabric systems only) (Optional) Display file system MD5 hash and permissions information for the Interconnect device.

**local**—(EX4200 switch, QFX Series, and MX Series routers only) (Optional) Display file system MD5 hash and permissions information on the local Virtual Chassis member.

**member *member-id***—(EX4200 switch, QFX Series, and MX Series routers only) (Optional) Display file system MD5 hash and permissions information on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

**node-group *name***—(QFabric systems only) (Optional) Display file system MD5 hash and permissions information for the Node group



**root-only**—(Optional) Check only the root (/) file system. On a QFabric system, you can check the root (/) file system on the infrastructure (fabric manager Routing Engine and fabric control Routing Engine), Interconnect device, or Node group.

**scc**—(TX Matrix routers only) (Optional) Display file system MD5 hash and permissions information for the TX Matrix router (or switch-card chassis).

**sfc number**—(TX Matrix Plus routers only) (Optional) Display file system MD5 hash and permissions information for the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

**Additional Information** To redirect the output to a file, issue the following command:

```
ssh device-name 'show system audit root-only' > output-file
```

If you save the output of the **show system audit root-only** command to a file, you can compare it to subsequent output from the command to determine whether anything has changed.

By default, when you issue the **show system audit** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

**Required Privilege Level** admin

**List of Sample Output** [show system audit root-only on page 869](#)  
[show system audit lcc \(TX Matrix Router\) on page 870](#)  
[show system audit lcc \(TX Matrix Plus Router\) on page 872](#)  
[show system audit root-only \(QFX3500 Switch\) on page 874](#)

## Sample Output

**show system audit root-only**

```
user@host> show system audit root-only

#          user: root
#          machine: host
#          tree: /
date: Fri Feb 11 21:21:46 2000

# .
/set type=file uid=0 gid=0 mode=0755 nlink=1
.          type=dir nlink=23 size=1024 time=950252640.0
.cshrc     uid=3 gid=7 mode=0644 size=177 time=939182975.0 \
          md5digest=f414e06fea6bd646244b98e13d6e6226
.kernel.jkernel.backup \
          mode=0744 size=1934552 time=944688902.0 \
          md5digest=2c343cf0bd9fea8f04f78604feed7aa4
```



```
.profile      uid=3 gid=7 mode=0644 nlink=2 size=173 time=939182975.0 \
              md5digest=55a1e3c6c67789c9d3a1cce1ea39f670
COPYRIGHT    uid=3 gid=7 mode=0444 size=3425 time=939182975.0 \
              md5digest=7df8bc77dcee71382ea73eb0ec6a9243
boot.config  mode=0644 size=3 time=945902618.0 \
              md5digest=93d722493ed38477338a1405d7dcb40
boot.help    uid=3 gid=7 mode=0444 size=411 time=939182876.0 \
              md5digest=9b7126385734bcae753f4179ab59d8e5
compat       type=link mode=0777 size=11 time=915149058.0 \
              link=/usr/compat
kernel       mode=0444 size=1947607 time=950230892.0 \
              md5digest=1a2a8aff2fec678a918ba0d6bf063980
kernel.avr   uid=1112 size=1947642 time=950252597.0 \
              md5digest=82e1637682d58ec28964dfee7fccb62e
kernel.config \
              mode=0644 size=0 time=915149058.0 \
              md5digest=d41d8cd98f00b204e9800998ecf8427e
sys          type=link mode=0777 size=11 time=915149029.0 \
              link=usr/src/sys
```

### show system audit lcc (TX Matrix Router)

```
user@host> show system audit lcc 2
```

```
lcc2-re0:
```

```
-----
#      user: root
#      machine: test-lcc2
#      tree: /
#      date: Mon Sep 13 11:55:33 2004

# .
/set type=file uid=0 gid=0 mode=0555 nlink=1 flags=none
.      type=dir nlink=20 size=512 time=1094982121.0
      COPYRIGHT mode=0644 size=4735 time=986012708.0 \
              md5digest=78396df1404ad742e6eb1be28f0cd63b
      kernel    type=link mode=0700 size=17 time=1090266262.0 \
              link=/packages/jkernel

# ./altconfig
altconfig type=dir nlink=2 size=512 time=1089801320.0
# ./altconfig
..

# ./altroot
altroot  type=dir nlink=2 size=512 time=1089801320.0
# ./altroot
..

# ./b
b        type=dir mode=0755 nlink=2 size=512 time=1093961429.0
# ./b
..

# ./bin
/set type=file uid=0 gid=0 mode=0700 nlink=1 flags=none
bin     type=dir mode=0755 nlink=2 size=512 time=1089843059.0
      [      type=link size=28 time=1090266270.0 \
```



```

cat          link=/packages/mnt/jbase/bin/test
             type=link size=27 time=1090266270.0 \
chmod        link=/packages/mnt/jbase/bin/cat
             type=link size=29 time=1090266270.0 \
cp           link=/packages/mnt/jbase/bin/chmod
             type=link size=26 time=1090266270.0 \
csh          link=/packages/mnt/jbase/bin/cp
             type=link size=27 time=1090266270.0 \
date         link=/packages/mnt/jbase/bin/csh
             type=link size=27 time=1090266270.0 \
dd           link=/packages/mnt/jbase/bin/date
             type=link size=28 time=1090266270.0 \
df           link=/packages/mnt/jbase/bin/date
             type=link size=26 time=1090266270.0 \
echo         link=/packages/mnt/jbase/bin/df
             type=link size=26 time=1090266270.0 \
ed           link=/packages/mnt/jbase/bin/echo
             type=link size=28 time=1090266270.0 \
expr         link=/packages/mnt/jbase/bin/ed
             type=link size=26 time=1090266270.0 \
hostname     link=/packages/mnt/jbase/bin/expr
             type=link size=28 time=1090266270.0 \
kill         link=/packages/mnt/jbase/bin/hostname
             type=link size=32 time=1090266270.0 \
ln           link=/packages/mnt/jbase/bin/kill
             type=link size=28 time=1090266270.0 \
ls           link=/packages/mnt/jbase/bin/kill
             type=link size=26 time=1090266270.0 \
mkdir        link=/packages/mnt/jbase/bin/ln
             type=link size=26 time=1090266270.0 \
mv           link=/packages/mnt/jbase/bin/ls
             type=link size=26 time=1090266270.0 \
ps           link=/packages/mnt/jbase/bin/ls
             type=link size=29 time=1090266270.0 \
pwd          link=/packages/mnt/jbase/bin/mkdir
             type=link size=26 time=1090266270.0 \
rcp          link=/packages/mnt/jbase/bin/mv
             type=link size=26 time=1090266270.0 \
red          link=/packages/mnt/jbase/bin/ps
             type=link size=26 time=1090266270.0 \
rm           link=/packages/mnt/jbase/bin/pwd
             type=link size=27 time=1090266270.0 \
rmdir        link=/packages/mnt/jbase/bin/pwd
             type=link size=27 time=1090266270.0 \
sh           link=/packages/mnt/jbase/bin/rcp
             type=link size=26 time=1090266270.0 \
sleep        link=/packages/mnt/jbase/bin/red
             type=link size=26 time=1090266270.0 \
stty         link=/packages/mnt/jbase/bin/ed
             type=link size=26 time=1090266270.0 \
sync         link=/packages/mnt/jbase/bin/rm
             type=link size=29 time=1090266270.0 \
tcsh         link=/packages/mnt/jbase/bin/rmdir
             type=link size=26 time=1090266270.0 \
test         link=/packages/mnt/jbase/bin/sh
             type=link size=26 time=1090266270.0 \
# ./bin     link=/packages/mnt/jbase/bin/sleep
..          link=/packages/mnt/jbase/bin/stty
            type=link size=28 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/stty
            type=link size=28 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/sync
            type=link size=27 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/csh
            type=link size=28 time=1090266270.0 \
            link=/packages/mnt/jbase/bin/test

```



```
# ./boot
/set type=file uid=0 gid=0 mode=0444 nlink=1 flags=none
boot      type=dir mode=0555 nlink=3 size=512 time=1095069935.0
  boot0    size=512 time=1094978286.0 \
            md5digest=6f780822dd4ae482a20462b66e542cca
  boot1    mode=0555 size=512 time=1094978294.0 \
            md5digest=8d112b09df342cd0b60fdb9bdcde8e07
  boot2    mode=0555 size=7680 time=1094978294.0 \
            md5digest=28eb58c4068c6b85717e1484f9e028e4
  cdboot   mode=0555 size=165888 time=1094978298.0 \
            md5digest=1474c6b800dfc82ba552d7c36116d07d
  kgzldr.o size=5996 time=1094982121.0 \
            md5digest=c53dc948eb07e2ea4eb0413e4c4634a3
  loader   mode=0555 size=163840 time=1094978298.0 \
            md5digest=82d9dc2d31033476bfb61bb7264c4fed
  loader.4th size=9237 time=986013631.0 \
            md5digest=43144391465ad50267d31e0a320be1de
...
```

### show system audit lcc (TX Matrix Plus Router)

```
user@host> show system audit all-chassis
```

```
sfc0-re0:
-----
#          user: root
#          machine: test
#          tree: /
#          date: Mon May 18 00:13:16 2009

# .
/set type=file uid=0 gid=0 mode=0755 nlink=1 flags=none
.      type=dir nlink=23 size=512 time=1242347096.0
  COPYRIGHT mode=0644 size=6196 time=1168587741.0 \
            md5digest=bbad415e1c29bbdd9b383537100412c
  kernel   type=link size=17 time=1242347011.0 link=/packages/jkernel
  staging   type=link mode=0777 size=8 time=1242346935.0 link=/var/tmp

# ./snap
.snap      type=dir mode=0775 nlink=2 size=512 time=1242346922.0
# ./snap
..

# ./altconfig
altconfig  type=dir mode=0500 nlink=2 size=512 time=1242319843.0
# ./altconfig
..

# ./altroot
altroot    type=dir mode=0500 nlink=2 size=512 time=1242319843.0
# ./altroot
..

# ./bin
bin        type=dir nlink=2 size=512 time=1242346944.0
```



```

\133      type=link size=28 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/test
cat        type=link size=27 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/cat
chflags    type=link size=31 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/chflags
chmod      type=link size=29 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/chmod
cp         type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/cp
csh        type=link size=27 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/csh
date       type=link size=28 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/date
dd         type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/dd
df         type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/df
echo       type=link size=28 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/echo
ed         type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/ed
expr       type=link size=28 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/expr
hostname   type=link size=32 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/hostname
kill       type=link size=28 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/kill
ln         type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/ln
ls         type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/ls
mkdir      type=link size=29 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/mkdir
mv         type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/mv
pax        type=link size=27 time=1242346944.0 \
          link=/packages/mnt/jbase/bin/pax
ps         type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/ps
pwd        type=link size=27 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/pwd
rcp        type=link size=27 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/rcp
red        type=link size=26 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/ed
rm         type=link size=26 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/rm
rmdir      type=link size=29 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/rmdir
sh         type=link size=26 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/sh
sleep      type=link size=29 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/sleep
stty       type=link size=28 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/stty
sync       type=link size=28 time=1242346942.0 \
          link=/packages/mnt/jbase/bin/sync
tcsh       type=link size=27 time=1242346941.0 \
          link=/packages/mnt/jbase/bin/csh

```



```

    test      type=link size=28 time=1242346942.0 \
              link=/packages/mnt/jbase/bin/test
# ./bin
...

```

### show system audit root-only (QFX3500 Switch)

```
user@switch> show system audit root-only
```

```

#      user: root
#      machine: test
#      tree: /
date: Fri Feb 11 21:21:46 2000

# .
/set type=file uid=0 gid=0 mode=0755 nlink=1
.      type=dir nlink=23 size=1024 time=950252640.0
.cshrc  uid=3 gid=7 mode=0644 size=177 time=939182975.0 \
        md5digest=f414e06fea6bd646244b98e13d6e6226
.kernel.jkernel.backup \
        mode=0744 size=1934552 time=944688902.0 \
        md5digest=2c343cf0bd9fea8f04f78604feed7aa4
.profile uid=3 gid=7 mode=0644 nlink=2 size=173 time=939182975.0 \
        md5digest=55a1e3c6c67789c9d3a1cce1ea39f670
COPYRIGHT uid=3 gid=7 mode=0444 size=3425 time=939182975.0 \
        md5digest=7df8bc77dcee71382ea73eb0ec6a9243
boot.config mode=0644 size=3 time=945902618.0 \
        md5digest=93d722493ed38477338a1405d7dcbb40
boot.help uid=3 gid=7 mode=0444 size=411 time=939182876.0 \
        md5digest=9b7126385734bcae753f4179ab59d8e5
compat   type=link mode=0777 size=11 time=915149058.0 \
        link=/usr/compat
kernel   mode=0444 size=1947607 time=950230892.0 \
        md5digest=1a2a8aff2fec678a918ba0d6bf063980
kernel.avr uid=1112 size=1947642 time=950252597.0 \
        md5digest=82e1637682d58ec28964dfec7fccb62e
kernel.config \
        mode=0644 size=0 time=915149058.0 \
        md5digest=d41d8cd98f00b204e9800998ecf8427e
sys      type=link mode=0777 size=11 time=915149029.0 \
        link=usr/src/sys

```



## show system buffers

<b>List of Syntax</b>	<a href="#">Syntax on page 875</a> <a href="#">Syntax (EX Series) on page 875</a> <a href="#">Syntax (TX Matrix Router) on page 875</a> <a href="#">Syntax (TX Matrix Plus Router) on page 875</a> <a href="#">Syntax (MX Series Router) on page 875</a> <a href="#">Syntax (QFX Series) on page 875</a>
<b>Syntax</b>	show system buffers
<b>Syntax (EX Series)</b>	show system buffers <all-members> <local> <member <i>member-id</i> >
<b>Syntax (TX Matrix Router)</b>	show system buffers <all-chassis   all-lcc   lcc <i>number</i>   scc>
<b>Syntax (TX Matrix Plus Router)</b>	show system buffers <all-chassis   all-lcc   lcc <i>number</i>   sfc <i>number</i> >
<b>Syntax (MX Series Router)</b>	show system buffers <all-members> <local> <member <i>member-id</i> >
<b>Syntax (QFX Series)</b>	show system buffers <infrastructure <i>name</i>   interconnect-device <i>name</i>   node-group <i>name</i>   root-only (infrastructure <i>name</i>   interconnect-device <i>name</i>   node-group <i>name</i> )>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. <b>sfc</b> option introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display information about the buffer pool that the Routing Engine uses for local traffic. Local traffic is the routing and management traffic that is exchanged between the Routing Engine and the Packet Forwarding Engine within the router or switch, as well as the routing and management traffic from IP (that is, from OSPF, BGP, SNMP, ping operations, and so on).



**Options**    **none**—Show all buffer statistics.

**all-lcc**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, show buffer statistics for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, show buffer statistics for all routers connected to the TX Matrix Plus router.

**all-chassis**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Show buffer statistics for all of the chassis.

**all-members**—(EX4200 switches and MX Series routers only) (Optional) Show buffer statistics for all members of the Virtual Chassis configuration.

**infrastructure *name***—(QFabric systems only) (Optional) Show buffer statistics for a fabric control Routing Engine or a fabric control Routing Engine.

**interconnect-device *name***—(QFabric systems only) (Optional) Show buffer statistics for the Interconnect device.

**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, show buffer statistics for a specific T640 router (or line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, show buffer statistics for a specific router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(EX4200 switches and MX Series routers only) (Optional) Show buffer statistics for the local Virtual Chassis member.

**member *member-id***—(EX4200 switches and MX Series routers only) (Optional) Show buffer statistics for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

**node-group *name***—(QFabric systems only) (Optional) Show buffer statistics for the Node group

**sfc**—(TX Matrix Plus routers only) (Optional) Show buffer statistics for the TX Matrix Plus router. Replace *number* with 0.



**Additional Information** By default, when you issue the **show system buffers** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

A special type of memory buffer called a *cluster* is 2 KB in size. For more information, see *The Design and Implementation of the 4.4BSD Operation System* by McKusic, Bostic, Karels, and Quarterman.

**Required Privilege Level** view

**Related Documentation**

- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

**List of Sample Output** [show system buffers on page 878](#)  
[show system buffers scc \(TX Matrix Router\) on page 879](#)  
[show system buffers sfc \(TX Matrix Plus Router\) on page 879](#)  
[show system buffers all-chassis \(TX Matrix Plus Router\) on page 879](#)  
[show system buffers node-group \(QFabric System\) on page 881](#)

**Output Fields** [Table 39 on page 878](#) describes the output fields for the **show system buffers** command. Output fields are listed in the approximate order in which they appear.



Table 39: show system buffers Output Fields

Field Name	Field Description
<b>mbufs in use</b>	Memory buffers (mbufs) are 128-byte buffers that are used for various purposes inside the kernel. Each memory buffer has a type, and the output itemizes the amount allocated for each type. Types with no memory buffers allocated are not displayed.
<b>mbufs allocated to packet headers</b>	Number of memory buffers currently holding packet headers
<b>mbufs allocated to control blocks</b>	Number of memory buffers currently holding the state for sockets.
<b>mbufs allocated to send data</b>	Number of memory buffers currently holding socket send data.
<b>mbufs allocated to pfe refill data</b>	Number of memory buffers currently holding Packet Forwarding Engine refill data.
<b>mbufs allocated to fxp data</b>	Number of memory buffers currently holding fxp data.
<b>mbufs allocated to socket names and addresses</b>	Number of memory buffers currently holding addresses for sockets.
<b>mbuf clusters in use</b>	Allocation statistics for memory buffer clusters.
<b>allocated to network</b>	Total amount of memory in use by the networking and interprocess communication (IPC) code.
<b>requests for memory denied</b>	Number of times a memory allocation request within the IPC and networking code failed.
<b>requests for memory delayed</b>	Number of times a memory allocation request within the IPC and networking code was postponed.
<b>calls to protocol drain routines</b>	Number of times a memory allocation request within the IPC and networking code triggered a memory reclamation attempt.

## Sample Output

### show system buffers

```

user@host> show system buffers
397/893/1290 mbufs in use (current/cache/total)
395/331/726/30000 mbuf clusters in use (current/cache/total/max)
384/256 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
889K/885K/1774K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)

```



```

0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/5/1024 sfbufs in use (current/peak/max)
0 requests for sfbufs denied
0 requests for sfbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

```

### show system buffers scc (TX Matrix Router)

```

user@host> show system buffers scc

213 mbufs in use:
    11 mbufs allocated to packet headers
    26 mbufs allocated to socket names and addresses
    2 mbufs allocated to socket options
    17 mbufs allocated to socket send data
    2 mbufs allocated to pfe data
    155 mbufs allocated to fxp data (rx)
    511 mbufs allocated to <mbuf type 86>
    256 mbufs allocated to <mbuf type 92>
924/1162 mbuf clusters in use
2788 Kbytes allocated to network (75% in use)
0 requests for memory denied
0 requests for memory delayed
0 calls to protocol drain routines

```

### show system buffers sfc (TX Matrix Plus Router)

```

user@host> show system buffers sfc 0

sfc0-re0:
-----
4363/2807/7170 mbufs in use (current/cache/total)
4358/1968/6326/30000 mbuf clusters in use (current/cache/total/max)
256/128 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
9806K/4637K/14444K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/10/1024 sfbufs in use (current/peak/max)
0 requests for sfbufs denied
0 requests for sfbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

```

### show system buffers all-chassis (TX Matrix Plus Router)

```

user@host> show system buffers all-chassis

sfc0-re0:
-----
4363/2807/7170 mbufs in use (current/cache/total)
4358/1968/6326/30000 mbuf clusters in use (current/cache/total/max)
256/128 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)

```



```

0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
9806K/4637K/14444K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/10/1024 sbufs in use (current/peak/max)
0 requests for sbufs denied
0 requests for sbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

```

```
lcc0-re0:
```

```

-----
772/2558/3330 mbufs in use (current/cache/total)
772/598/1370/30000 mbuf clusters in use (current/cache/total/max)
768/512 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
1737K/1835K/3572K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/4/1024 sbufs in use (current/peak/max)
0 requests for sbufs denied
0 requests for sbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

```

```
lcc1-re0:
```

```

-----
773/2437/3210 mbufs in use (current/cache/total)
773/453/1226/30000 mbuf clusters in use (current/cache/total/max)
768/384 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
1739K/1515K/3254K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/7/1024 sbufs in use (current/peak/max)
0 requests for sbufs denied
0 requests for sbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

```

```
lcc2-re0:
```

```

-----
816/2514/3330 mbufs in use (current/cache/total)
816/554/1370/30000 mbuf clusters in use (current/cache/total/max)
768/512 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
1836K/1736K/3572K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/4/1024 sbufs in use (current/peak/max)
0 requests for sbufs denied
0 requests for sbufs delayed
0 requests for I/O initiated by sendfile

```



## show system buffers node-group (QFabric System)

```

user@switch> show system buffers node-group node1
node-group node1:
-----
2/2698/2700 mbufs in use (current/cache/total)
2/1520/1522/30000 mbuf clusters in use (current/cache/total/max)
0/1280 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
4K/3714K/3719K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/6/6656 sbufs in use (current/peak/max)
0 requests for sbufs denied
0 requests for sbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

re0:
-----
516/639/1155 mbufs in use (current/cache/total)
515/147/662/30000 mbuf clusters in use (current/cache/total/max)
512/128 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
1159K/453K/1612K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/4/1024 sbufs in use (current/peak/max)
0 requests for sbufs denied
0 requests for sbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

re1:
-----
519/771/1290 mbufs in use (current/cache/total)
518/176/694/30000 mbuf clusters in use (current/cache/total/max)
512/128 mbuf+clusters out of packet secondary zone in use (current/cache)
0/0/0/0 4k (page size) jumbo clusters in use (current/cache/total/max)
0/0/0/0 9k jumbo clusters in use (current/cache/total/max)
0/0/0/0 16k jumbo clusters in use (current/cache/total/max)
1165K/544K/1710K bytes allocated to network (current/cache/total)
0/0/0 requests for mbufs denied (mbufs/clusters/mbuf+clusters)
0/0/0 requests for jumbo clusters denied (4k/9k/16k)
0/4/1024 sbufs in use (current/peak/max)
0 requests for sbufs denied
0 requests for sbufs delayed
0 requests for I/O initiated by sendfile
0 calls to protocol drain routines

```



## show system certificate

<b>Syntax</b>	<code>show system certificate</code> <code>&lt;certificate-id&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	(Encryption interface on M Series, T Series routers, QFX Series, and OCX Series switches only) Display installed certificates signed by the Juniper Networks certificate authority.
<b>Options</b>	<b>none</b> —Display all installed certificates signed by the Juniper Networks certificate authority. <b>certificate-id</b> —(Optional) Display the details of a particular certificate.
<b>Required Privilege Level</b>	maintenance
<b>List of Sample Output</b>	<a href="#">show system certificate on page 883</a> <a href="#">show system certificate (QFX Series) on page 883</a>
<b>Output Fields</b>	<a href="#">Table 40 on page 882</a> lists the output fields for the <b>show system certificate</b> command. Output fields are listed in the approximate order in which they appear.

*Table 40: show system certificate Output Fields*

Field Name	Field Description
<b>Certificate identifier</b>	Unique identifier associated with a certificate. The certificate identifier is the common name of the subject.
<b>Issuer</b> <b>Subject</b>	Information about the certificate issuer and the distinguished name (DN) of the issuer, respectively: <ul style="list-style-type: none"> <li>• <b>Organization</b>—Name of the owner's organization.</li> <li>• <b>Organizational unit</b>—Name of the owner's department.</li> <li>• <b>Country</b>—Two-character country code in which the owner's system is located.</li> <li>• <b>State</b>—State in the USA in which the owner is using the certificate.</li> <li>• <b>Locality</b>—City in which the owner's system is located.</li> <li>• <b>Common name</b>—Name of the owner of the certificate.</li> <li>• <b>E-mail address</b>—E-mail address of the owner of the certificate.</li> </ul>
<b>Validity</b>	When a certificate is valid.
<b>Signature algorithm</b>	Encryption algorithm applied to the installed certificate.



Table 40: show system certificate Output Fields (continued)

Field Name	Field Description
Public key algorithm	Encryption algorithm applied to the public key.

## Sample Output

### show system certificate

```

user@host> show system certificate
Certificate identifier: Dallas-v3
  Issuer:
    Organization: Juniper Networks, Organizational unit: Juniper CA,
    Country: US, State: CA, Locality: Sunnyvale, Common name: Dallas CA,
    E-mail address:ca@example.com
  Subject:
    Organization: Juniper Networks, Organizational unit: Juniper CA,
    Country: US, State: CA, Locality: Sunnyvale, Common name: Dallas-v3,
    E-mail address:ca@example.com
  Validity:
    Not before: Mar 13 03:23:25 2004 GMT
    Not after: Mar 24 03:23:25 2014 GMT
  Signature algorithm: sha1WithRSAEncryption
  Public key algorithm: dsaEncryption

```

### show system certificate (QFX Series)

```

user@host> show system certificate
Certificate identifier: Dallas-v3
  Issuer:
    Organization: Juniper Networks, Organizational unit: Juniper CA,
    Country: US, State: CA, Locality: Sunnyvale, Common name: Dallas CA,
    E-mail address:ca@example.com
  Subject:
    Organization: Juniper Networks, Organizational unit: Juniper CA,
    Country: US, State: CA, Locality: Sunnyvale, Common name: Dallas-v3,
    E-mail address:ca@example.com
  Validity:
    Not before: Mar 13 03:23:25 2004 GMT
    Not after: Mar 24 03:23:25 2014 GMT
  Signature algorithm: sha1WithRSAEncryption
  Public key algorithm: dsaEncryption

```



## show system commit

**Syntax** `show system commit <revision | server>`

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
 Command introduced in Junos OS Release 11.1 for the QFX Series.  
 Option **server** introduced in Junos OS Release 12.1 for the PTX Series router.  
 Option **revision** introduced in Junos OS Release 14.1.  
 Command introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.

**Description** Display the system commit history and any pending commit operation.

**Options** **none**—Display the last 50 commit operations listed, most recent to first.  
**revision**—(Optional) Display the revision number of the active configuration of the Routing Engine(s).  
**server**— (Optional) Display commit server status.



**NOTE:** By default, the status of the commit server is “Not running”. The commit server starts running only when a commit job is added to the batch.

**Required Privilege Level** view

**Related Documentation**

- [clear system commit on page 114](#)
- [show system commit revision](#)

**List of Sample Output**

- [show system commit on page 886](#)
- [show system commit \(At a Particular Time\) on page 886](#)
- [show system commit \(At the Next Reboot\) on page 886](#)
- [show system commit \(Rollback Pending\) on page 886](#)
- [show system commit \(QFX Series\) on page 886](#)

**Output Fields** Table 41 on page 885 describes the output fields for the **show system commit** command. Output fields are listed in the approximate order in which they appear.



Table 41: *show system commit* Output Fields

Field Name	Field Description	Level of Output
<b>&lt;number&gt;</b>	Displays the last 50 commit operations listed, most recent to first. The identifier <b>&lt;number&gt;</b> designates a configuration created for recovery using the <b>request system configuration rescue save</b> command.	<b>none</b>
<b>&lt;time-stamp&gt;</b>	Date and time of the commit operation.	<b>none</b>
<b>&lt;root&gt;/&lt;username&gt;</b>	User who executed the commit operation.	<b>none</b>
<b>&lt;method&gt;</b>	Method used to execute the commit operation: <ul style="list-style-type: none"> <li>• <b>CLI</b>—CLI interactive user performed the commit operation.</li> <li>• <b>Junos XML protocol</b>—Junos XML protocol client performed the commit operation.</li> <li>• <b>synchronize</b>—The <b>commit synchronize</b> command was performed on the other Routing Engine.</li> <li>• <b>snmp</b>—An SNMP <b>set</b> request caused the commit operation.</li> <li>• <b>button</b>—A button on the router or switch was pressed to commit a rescue configuration for recovery.</li> <li>• <b>autoinstall</b>—A configuration obtained through autoinstallation was committed.</li> <li>• <b>other</b>—When there is no login name associated with the session, the values for user and client default to root and other. For example, during a reboot after package installation, mgd commits the configuration as a system commit, and there is no login associated with the commit.</li> </ul>	<b>none</b>



## Sample Output

### show system commit

```
user@host> show system commit
0   2003-07-28 19:14:04 PDT by root via other
1   2003-07-25 22:01:36 PDT by user via cli
2   2003-07-25 22:01:32 PDT by user via cli
3   2003-07-25 21:30:13 PDT by root via button
4   2003-07-25 13:46:48 PDT by user via cli
5   2003-07-25 05:33:21 PDT by root via autoinstall
...
rescue 2002-05-10 15:32:03 PDT by root via other
```

### show system commit (At a Particular Time)

```
user@host> show system commit
commit requested by root via cli at Tue May  7 15:59:00 2002
```

### show system commit (At the Next Reboot)

```
user@host> show system commit
commit requested by root via cli at reboot
```

### show system commit (Rollback Pending)

```
user@host> show system commit
0 2005-01-05 15:00:37 PST by root via cli commit confirmed, rollback in 3mins
```

### show system commit (QFX Series)

```
user@switch> show system commit
0   2011-11-25 19:17:49 PST by root via cli
```



## show system connections

**List of Syntax**    [Syntax on page 887](#)  
                          [Syntax \(EX Series\) on page 887](#)  
                          [Syntax \(TX Matrix Router\) on page 887](#)  
                          [Syntax \(TX Matrix Plus Router\) on page 887](#)  
                          [Syntax \(MX Series Router\) on page 887](#)  
                          [Syntax \(QFX Series\) on page 887](#)  
                          [Syntax \(OCX Series\) on page 888](#)  
                          [Syntax \(Junos OS Evolved\) on page 888](#)

**Syntax**    show system connections  
                  <extensive>  
                  <inet | inet6>  
                  <show-routing-instances>

**Syntax (EX Series)**    show system connections  
                          <extensive>  
                          <all-members>  
                          <inet | inet6>  
                          <local>  
                          <member *member-id*>  
                          <show-routing-instances>

**Syntax (TX Matrix Router)**    show system connections  
                          <extensive>  
                          <all-chassis | all-lcc | lcc *number* | scc>  
                          <inet | inet6>  
                          <show-routing-instances>

**Syntax (TX Matrix Plus Router)**    show system connections  
                          <extensive>  
                          <all-chassis | all-lcc | lcc *number* | sfc *number*>  
                          <inet | inet6>  
                          <show-routing-instances>

**Syntax (MX Series Router)**    show system connections  
                          <extensive>  
                          <all-members>  
                          <inet | inet6>  
                          <local>  
                          <member *member-id*>  
                          <show-routing-instances>

**Syntax (QFX Series)**    show system connections



	<pre> &lt;extensive&gt; &lt;inet&gt; &lt;infrastructure <i>name</i>&gt; &lt;interconnect-device <i>name</i>&gt; &lt;node-group <i>name</i>&gt; &lt;show-routing-instances&gt; </pre>
Syntax (OCX Series)	<pre> show system connections &lt;extensive&gt; &lt;inet&gt; &lt;show-routing-instances&gt; </pre>
Syntax (Junos OS Evolved)	<pre> show system connections &lt;inet   inet6&gt; &lt;node <i>node-name</i>&gt; </pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Options <b>extensive</b> and <b>show-routing-instance</b> deprecated in Junos OS Evolved Release 17.3.</p> <p><b>node</b> option introduced in Junos OS Evolved Release 18.3R1.</p>
Description	<p>Display information about the active IP sockets on the Routing Engine. Use this command to verify which servers are active on a system and what connections are currently in progress.</p>
Options	<p><b>none</b>—Display information about all active IP sockets on the Routing Engine.</p> <p><b>extensive</b>—(Optional) Display exhaustive system process information, which, for TCP connections, includes the TCP control block. This option is useful for debugging TCP connections.</p> <p><b>all-chassis</b>—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display system connection activity for all the routers in the chassis.</p> <p><b>all-lcc</b>—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system connection activity for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display system connection activity for all connected T1600 or T4000 LCCs</p> <p><b>all-members</b>—(EX4200 switches and MX Series routers only) (Optional) Display system connection activity for all members of the Virtual Chassis configuration.</p> <p><b>inet   inet6</b>—(Optional) Display IPv4 connections or IPv6 connections, respectively.</p>



**infrastructure *name***—(QFabric systems only) (Optional) Display system connection activity for the fabric control Routing Engines or fabric manager Routing Engines.

**interconnect-device *name***—(QFabric systems only) (Optional) Display system connection activity for the Interconnect device.

**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system connection activity for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display system connection activity for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(EX4200 switches and MX Series routers only) (Optional) Display system connection activity for the local Virtual Chassis member.

**member *member-id***—(EX4200 switches and MX Series routers only) (Optional) Display system connection activity for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

**node *node-name***—(Junos OS Evolved only) (Optional) Display system connection activity for the specified node.

**node-group *name***—(QFabric systems only) (Optional) Display system connection activity for the Node group.

**scc**—(TX Matrix routers only) (Optional) Display system connection activity for the TX Matrix router (or switch-card chassis).

**sfc**—(TX Matrix routers only) (Optional) Display system connection activity for the TX Matrix Plus router.

**show-routing-instances**—(Optional) Display routing instances.

**Additional Information** By default, when you issue the **show system connections** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX



Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

**Required Privilege Level** view

**Related Documentation** • [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

**List of Sample Output** [show system connections on page 890](#)  
[show system connections extensive on page 891](#)  
[show system connections show-routing-instances on page 892](#)

**Output Fields** Table 42 on page 890 describes the output fields for the **show system connections** command. Output fields are listed in the approximate order in which they appear.

*Table 42: show system connections Output Fields*

Field Name	Field Description
<b>Proto</b>	Protocol of the socket: <b>IP</b> , <b>TCP</b> , or <b>UDP</b> for IPv4 or IPv6.
<b>Recv-Q</b>	Number of input bytes received by the protocol and waiting to be processed by the application.
<b>Send-Q</b>	Number of output bytes sent by the application and waiting to be processed by the protocol.
<b>Local Address</b>	Local address and port of the socket, separated by a period. An asterisk (*) indicates that the bound address is the wildcard address. Server sockets typically have the wildcard address and a well-known port bound to them.
<b>Foreign Address</b>	Foreign address and port of the socket, separated by a period. An asterisk (*) indicates that the address or port is a wildcard.
<b>Routing Instance</b>	(Displayed only when the <b>show-routing-instance</b> option is used.) Routing instances associated with active IP sockets on the Routing Engine.
<b>(state)</b>	For TCP, the protocol state of the socket.

## Sample Output

### show system connections

```
user@host> show system connections
```

Active Internet connections (including servers)

Proto	Recv-Q	Send-Q	Local Address	Foreign Address	(state)
tcp	0	2	192.0.2.16.513	192.0.2.254.894	ESTABLISHED
tcp	0	0	192.0.2.16.513	192.0.2.195.945	ESTABLISHED



```

tcp      0      0 *.23      *.*      LISTEN
tcp      0      0 *.22      *.*      LISTEN
tcp      0      0 *.513     *.*      LISTEN
tcp00 *.514      *.*      LISTEN
tcp 0 0*.21      *.*      LISTEN
tcp00 *.79      *.*      LISTEN
tcp 00 *.1023     *.*      LISTEN
tcp 00 *.111     *.*      LISTEN
udp00192.192.0.2.1634 192.0.2.249.2049
udp00192.192.0.2.1627 192.0.2.254.2049
udp00192.192.0.2.1371 192.0.2.195.2049
udp00*.*      *.*
udp00*.9999    *.*
udp00 *.161    *.*
udp00192.192.0.2.1039 192.0.2.16.1023
udp00192.192.0.2.1038 192.0.2.16.1023
udp 00 192.0.2.16.1037 192.0.2.16.1023
udp00 192.0.2.16.1036 192.0.2.16.1023
udp00*.1022    *.*
udp00*.1023    *.*
udp00*.111     *.*
udp00*.*      *.*

```

### show system connections extensive

```
user@host> show system connections extensive
```

```

Active Internet connections (including servers)
Proto Recv-Q Send-Q Local Address           Foreign Address
      (state)
tcp4      0      6 192.0.2.15.23           192.0.2.138.3013
      ESTABLISHED
      sndsbcc:          6 sndsbmbcnt:          256 sndsbmbmax:          272000
      sndsblowat:       2048 sndsbhiwat:          34000
      rcvsbcc:          0 rcvsbmbcnt:          0 rcvsbmbmax:          533120
      rcvsblowat:       1 rcvsbhiwat:          66640
      proc id:          0 proc name:
      iss: 2566994072    sndup: 2566994491
      snduna: 2566994491  sndnxt: 2566994494    sndwnd:          64094
      sndmax: 2566994494  sndcwnd:          6589 sndssthresh:          2720
      irs: 236981199     rcvup: 236981325
      rcvnxt: 236981327  rcvadv: 237046862    rcvwnd:          66640
      rtt: 140058623     srtt:          15519    rttv:          908
      rxtcur:          1200 rxtshift:          0    rtseq: 2566994491
      rttmin:          1000 mss:          1360
      flags: SACK_PERMIT [0x2000200]
tcp4      0      0 10.255.165.203.65141    10.255.165.93.179
      ESTABLISHED
      sndsbcc:          0 sndsbmbcnt:          0 sndsbmbmax:          131072
      sndsblowat:       2048 sndsbhiwat:          16384
      rcvsbcc:          0 rcvsbmbcnt:          0 rcvsbmbmax:          131072
      rcvsblowat:       1 rcvsbhiwat:          16384
      proc id:          0 proc name:
      iss: 2555961065    sndup: 2555995917
      snduna: 2555995917  sndnxt: 2555995917    sndwnd:          16384
      sndmax: 2555995917  sndcwnd:          1000 sndssthresh: 1073725440
      irs: 2123825753    rcvup: 2123860681
      rcvnxt: 2123860681  rcvadv: 2123877065    rcvwnd:          16384
      rtt:          0    srtt:          3309    rttv:          72

```



```

    rxtcur:      1200  rxtshift:      0      rtseq: 2555995898
    rttmin:      1000  mss:          500
    flags: REQ_SCALE RCVD_SCALE REQ_TSTMP RCVD_TSTMP SACK_PERMIT [0x3e0]
tcp4      0      0  10.255.165.203.65141
10.255.165.93.179      ESTABLISHED
    sndsbcc:      0  sndsbmbcnt:      0  sndsbmbmax:      131072
    sndsblowat:    2048  sndsbhiwat:      16384
    rcvsbcc:      0  rcvsbmbcnt:      0  rcvsbmbmax:      131072
    rcvsblowat:    1  rcvsbhiwat:      16384
    proc id:      5022  proc name:      rpd
    iss: 2123825753  sndup: 2123860662
    snduna: 2123860681  sndnxt: 2123860681  sndwnd:      16384
    sndmax: 2123860681  sndcwnd:      1000  sndssthresh: 1073725440
    irs: 2555961065  rcvup: 2555995917
    rcvnxt: 2555995917  rcvadv: 2556012301  rcvwnd:      16384
    rtt: 0  srtt:      3279  rttv:      22
    rxtcur:      1200  rxtshift:      0      rtseq: 2123860662
    rttmin:      1000  mss:          500
    flags: REQ_SCALE RCVD_SCALE REQ_TSTMP RCVD_TSTMP SACK_PERMIT [0x100003e0]
tcp4      0      0  10.255.165.203.179
10.255.165.113.52404      ESTABLISHED
    sndsbcc:      0  sndsbmbcnt:      0  sndsbmbmax:      131072
    sndsblowat:    2048  sndsbhiwat:      16384
    rcvsbcc:      0  rcvsbmbcnt:      0  rcvsbmbmax:      131072
    rcvsblowat:    1  rcvsbhiwat:      16384
    proc id:      0  proc name:
    iss: 1109297190  sndup: 1109332099
    snduna: 1109332118  sndnxt: 1109332118  sndwnd:      16384
    sndmax: 1109332118  sndcwnd:      1000  sndssthresh: 1073725440
    irs: 1476831634  rcvup: 1476866449
    rcvnxt: 1476866449  rcvadv: 1476882833  rcvwnd:      16384
    rtt: 0  srtt:      3235  rttv:      18
    rxtcur:      1200  rxtshift:      0      rtseq: 1109332099
    rttmin:      1000  mss:          500
    flags: REQ_SCALE RCVD_SCALE REQ_TSTMP RCVD_TSTMP SACK_PERMIT [0x3e0]

```

### show system connections show-routing-instances

```

user@host> show system connections show-routing-instances

Active Internet connections (including servers) (including routing-instances)
Proto Recv-Q Send-Q Local Address          Foreign Address         Routing Instance
(state)
tcp4      0      0  192.0.2.204.23        192.0.2.19.4267        default
ESTABLISHED
tcp4      0      0  192.0.2.204.58540     10.209.7.138.23        default
ESTABLISHED
tcp4      0      0  192.0.2.204.23        192.0.2.19.1098        default
ESTABLISHED
tcp4      0      0  192.0.2.1.57668       192.0.2.1.179          default
ESTABLISHED
tcp4      0      0  192.0.2.1.179         192.0.2.1.49209        default
ESTABLISHED
tcp4      0      0  192.0.2.1.6234        192.0.2.17.1024
__juniper_private1__ ESTABLISHED
tcp4      0      0  192.0.2.4.9000        192.0.24.59103
__juniper_private1__ ESTABLISHED
tcp4      0      0  1192.0.2.4.59103      192.0.2.4.9000
__juniper_private1__ ESTABLISHED
tcp4      0      0  *.32012               *.*

```



```

__juniper_private1__ LISTEN
tcp4      0      0 *.9000      *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.33007     *.*
__juniper_private2__ LISTEN
tcp46     0      0 *.179       *.*      default
        LISTEN
tcp4      0      0 *.179       *.*      default
        LISTEN
tcp4      0      0 *.6154      *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.6153      *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.7000      *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.6152      *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.6156      *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.33005     *.*
__juniper_private2__ LISTEN
tcp4      0      0 *.31343     *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.31341     *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.32003     *.*
__juniper_private2__ LISTEN
tcp4      0      0 *.666       *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.38        *.*
__juniper_private1__ LISTEN
tcp4      0      0 *.3221     *.*      default
        LISTEN

```



## show system core-dumps

**List of Syntax**    [Syntax on page 894](#)  
                          [Syntax \(SRX Series\) on page 894](#)  
                          [Syntax \(Junos OS Evolved\) on page 894](#)  
                          [Syntax \(EX Series Switches\) on page 894](#)  
                          [Syntax \(TX Matrix Router\) on page 894](#)  
                          [Syntax \(TX Matrix Plus Router\) on page 894](#)  
                          [Syntax \(QFX Series and OCX Series\) on page 894](#)

**Syntax**    `show system core-dumps`  
                  `<re0>`  
                  `<re1>`  
                  `<routing-engine>`  
                  `<satellite [fpc-slot-id | device-alias alias-name]>`

**Syntax (SRX Series)**    `show system core-dumps`

**Syntax (Junos OS Evolved)**    `show system core-dumps`

**Syntax (EX Series Switches)**    `show system core-dumps`  
                          `<all-members>`  
                          `<local>`  
                          `<member member-id>`

**Syntax (TX Matrix Router)**    `show system core-dumps`  
                          `<all-chassis | all-lcc | lcc number | scc>`

**Syntax (TX Matrix Plus Router)**    `show system core-dumps`  
                          `<all-chassis | all-lcc | lcc number | sfc number>`

**Syntax (QFX Series and OCX Series)**    `show system core-dumps`  
                          `<component (UUID | serial number | all)>`  
                          `<display-period (hours | minutes | seconds)>`  
                          `<display-order>`  
                          `<kernel-crashinfo component (UUID | serial number)>`  
                          `<repository (core | log)>`

**Release Information**    Command introduced before Junos OS Release 8.5.  
                          Command introduced in Junos OS Release 9.0 for EX Series switches.  
                          **sfc** option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.  
                          Command introduced in Junos OS Release 11.1 for the QFX Series.



**re0**, **re1**, and **routing-engine** options introduced for dual Routing Engines in Junos OS Release 13.1.

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**satellite** option introduced in Junos OS Release 14.2R3.

**core-file-info** option is deprecated in Junos OS Release 16.1R3.

**Description** Show core files on all routers or switches running Junos OS. You can use the **show system core-dumps** command to show a list of system core files created when the router or switch has failed. This command can be useful for diagnostic purposes. Each list item includes the file permissions, number of links, owner, group, size, modification date, and path and filename. If dual Routing Engines are present, you can view core-dump files for either routing engine or both routing engines together. On a QFabric system, you can view core-dump files on individual QFabric system devices as well as on the entire QFabric system.

The core files are placed in the **/var/tmp/corefiles** on the SPC3 cards. Each PIC of the SPC3 card has five core files quota on the RE. When no more than five core files from one SPC3 PIC are on the RE, and the RE hard drive has more than 5 GB capacity, core file from the specific PIC is saved at the time it arrives. When there are already five core files from one SPC3 PIC on the RE, the newly arrived core file from the specific PIC replaces the last core file created by that PIC on the RE. When 5 GB capacity limit is reached, core file is not copied onto the RE. Only a zero sized shadow file with the same file name suffixed by ".shadow" is created. The core file is reached on the specific SPC3 PIC.

**Options** **none**—Display a list of all existing core-dump files.



**NOTE:** If dual Routing Engines are present, then only the core-dump files for the active Routing Engine are listed. For Junos OS Evolved, core-dump files for all Routing Engines are listed.

**all-chassis**—(TX Matrix and TX Matrix Plus routers only) (Optional) On a routing matrix based on a TX Matrix router, display system core files for the TX Matrix router switch-card chassis [SCC] and all the T640 routers [LCCs] connected to the TX Matrix router.

On a routing matrix based on a TX Matrix Plus router, display system core files for the TX Matrix Plus router (switch-fabric chassis [SFC]) and all the T1600 routers [LCCs] connected to the TX Matrix Plus router.

**<all-lcc | lcc number>**—(TX Matrix and TX Matrix Plus routers only) (Optional) On a routing matrix based on the TX Matrix router, display core dump files for all T640 routers (line-card chassis [LCCs]) or a specific T640 router [LCC] connected to the TX Matrix router.

On a routing matrix based on the TX Matrix Plus router, display logging information for all T1600 routers (line-card chassis [LCCs]) or a specific T1600 router (LCC)



connected to the TX Matrix Plus router. When using the **lcc number** option, replace **number** with a value from 0 through 3.



**NOTE:** The all-chassis option displays system core files for the SCC or SFC and the LCCs connected to the SCC or SFC in the routing matrix while the all-lcc option only displays system core files for the LCCs in the routing matrix.

**all-members**—(EX4200 switches) (Optional) Display system core files on all members of the Virtual Chassis configuration.

**component (UUID | serial number | all)**—(QFabric systems only) (Optional) Display a list of core-dump files located on individual QFabric system device or on the entire QFabric system.

**display-order (timestamp-sort | alphanumeric-sort)**—(QFabric systems only) (Optional) Display list of debug artifacts generated within the specified period—for example, within the last hour, within the last 20 minutes, or within the last 32 seconds—or according to their filename.

**display-period (hours | minutes | seconds)**—(QFabric systems only) (Optional) Display core-dump files generated within the specified period—for example, within the last hour, within the last 20 minutes, or within the last 32 seconds.

**kernel-crashinfo component (UUID | serial number)**—(QFabric systems only) (Optional) Display kernel crash information from the EEPROM on a QFabric system device.

**local**—(EX4200 switches only) (Optional) Display system core files on the local Virtual Chassis member.

**member member-id**—(EX4200 switches only) (Optional) Display system core files on the specified member of the Virtual Chassis configuration. Replace **member-id** with a value from 0 through 9.

**node node-name**—(Optional) (Junos OS Evolved only) Display system core files generated on the specified node.

**re0**—(Dual Routing Engines only) Display the core-dump files on re0.

**re1**—(Dual Routing Engines only) Display the coredump files on re1.

**repository (core | log)**—(QFabric systems only) (Optional) Specify either the core or log repository in which to view core-dump files.

**routing-engine (backup | both | local | master | other)**—(Dual routing engines only) Display a list of core-dump files for either the backup, local, master, or other routing engine or both routing engines.



**satellite** [*fpc-slot-id* | *device-alias alias-name*]**—**(Junos Fusion only) (Optional) Display system core files for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

**scc**—(TX Matrix routers only) (Optional) Display system core files on the TX Matrix router (or switch-card chassis).

**sfc**—(TX Matrix Plus routers only) (Optional) Display system core files on the TX Matrix Plus router (or switch-fabric chassis).

**Required Privilege Level** view

**List of Sample Output** [show system core-dumps on page 899](#)  
[show system core-dumps on page 899](#)  
[show system core-dumps routing-engine both on page 899](#)  
[show system core-dumps \(SRX Series\) on page 900](#)  
[show system core-dumps \(TX Matrix Plus Router\) on page 900](#)  
[show system core-dumps \(QFX3500 Switch\) on page 902](#)  
[show system core-dumps \(QFabric Systems\) on page 902](#)  
[show system core-dumps component serial number display-order alphanumeric-sort repository core \(QFabric Systems\) on page 903](#)  
[show system core-dumps display-period \(QFabric Systems\) on page 903](#)  
[show system core-dumps kernel-crashinfo component serial number \(QFabric Systems\) on page 905](#)  
[show system core-dumps repository core \(QFabric Systems\) on page 907](#)  
[show system core-dumps repository log \(QFabric Systems\) on page 907](#)

**Output Fields** [Table 43 on page 897](#) describes the output fields for the **show system core-dumps** command. Output fields are listed in the approximate order in which they appear.

*Table 43: show system core-dumps Output Fields*

Field Name	Field Description
<i>Permissions</i>	Read/write permissions for the file named.
<i>Links</i>	Number of links to the file.
<i>Owner</i>	Name of the file owner.
<i>Group</i>	Name of the group with file access.
<i>File size</i>	File size in bytes.
<i>Modified</i>	Last file modification date and time.



Table 43: show system core-dumps Output Fields (continued)

Field Name	Field Description
<i>Path/filename</i>	File path where the file resides and the filename.  (MX Series routers only) When you display the core files for an MX Series Virtual Chassis, the <b>show system core-dumps</b> command does not display information about files pertaining to the relayd process.
<b>Repository scope:</b>	Repository where core-dump files and log files are stored. The core-dump files are located in the <b>core</b> repository, and the log files are located in the <b>log</b> repository. The default <b>Repository scope</b> is shared since both the <b>core</b> and <b>log</b> repositories are shared by all of the QFabric system devices.
<b>Repository head:</b>	Path to the top-level repository location.
<b>Repository name:</b>	Name of the repository: <b>core</b> or <b>log</b> .
<b>List of nodes for core repository:</b>	List of core-dump files associated with a particular QFabric system device located in the core repository.
<b>Node Group</b>	Name of the QFabric system device.
<b>Node Identifier</b>	UUID or serial number of the QFabric system device.
<b>Num</b>	Number of core-dump and log files.
<b>Model</b>	Model number of the QFabric system device.
<b>Usage</b>	Usage of the repository in megabytes.
<b>Total usage of core repository:</b>	Total usage of core-dump files associated with a particular QFabric system device located in the core repository. Usage is specified in megabytes and as a percentage.
<b>Total usage of log repository:</b>	Total usage of log files associated with a particular QFabric system device located in the log repository. Usage is specified in megabytes and as a percentage.
<b>List of nodes for core repository:</b>	List of core-dump files associated with a particular QFabric system device located in the core repository.
<b>List of nodes for log repository:</b>	List of log files associated with a particular QFabric system device located in the log repository.
<b>Filename</b>	Name of the core-dump file.
<b>Date</b>	Last core-dump file modification date and time.
<b>Size</b>	Size of the core-dump file.



Table 43: show system core-dumps Output Fields (continued)

Field Name	Field Description
Core filename	Filename of the core-dump file.
Process name	Name of the process that is generating a core-dump file or log file.
Release	Junos OS release.
Build server	Junos OS build server.
Build date	Junos OS build date.
Stack trace	Stack trace of the core-dump file.

## Sample Output

### show system core-dumps

This example shows the command output if core files exist.

```
user@host> show system core-dumps
-rw----- 1 root wheel 268369920 Jun 18 17:59 /var/crash/vmcore.0
-rw-rw---- 1 root field 3371008 Jun 18 17:53 /var/tmp/rpd.core.0
-rw-r--r-- 1 root wheel 27775914 Jun 18 17:59 /var/crash/kernel.0
```

### show system core-dumps

This example shows the command output if core files do not exist.

```
user@host> show system core-dumps
/var/crash/*core*: No such file or directory
/var/tmp/*core*: No such file or directory
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory
```

### show system core-dumps routing-engine both

This example shows the command output if dual Routing Engines are present.

```
user@host> show system core-dumps routing-engine both
re0:
-----
/var/crash/*core*: No such file or directory
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory

/var/tmp/cores:
total blocks: 496776
-rw-rw---- 1 root field 11910589 Nov 8 13:20 chassisd.core.0.201311081320
...
```



```
-rw-rw---- 1 root field 11737227 Oct 28 14:21
rpd.core-tarball.4.tgz.201310281421.3458162
total files: 10
```

```
rel:
```

```
-----
/var/crash/*core*: No such file or directory
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory
```

```
/var/tmp/cores:
total blocks: 3178420
-rw-rw---- 1 root field 19039721 Nov 8 14:29
chassisd.core.0.201311081429.3485600.gz
-rw-rw---- 1 root field 19039793 Nov 8 14:37
chassisd.core.1.201311081437.3485599.gz
..

-rw-rw---- 1 root field 11710113 Oct 17 15:26
rpd.core-tarball.1.tgz.201310171526.3430028
```

### show system core-dumps (SRX Series)

```
user@host> show system core-dumps
```

```
/var/crash/*core*: No such file or directory
-rw-r--r-- 1 nobody wheel 1439949 Apr 24 10:38
/var/tmp/FPC0_PIC0.localhost.J-UKERN.23421.1556127502.core.tgz
-rw-r--r-- 1 nobody wheel 1435531 Apr 24 10:44
/var/tmp/FPC0_PIC0.localhost.J-UKERN.24702.1556127821.core.tgz
-rw-r--r-- 1 nobody wheel 288761042 Apr 24 10:32
/var/tmp/FPC0_PIC0.localhost.flowd_spc3.elf.31620.1556126342.core.tgz
-rw-r--r-- 1 nobody wheel 35082 Apr 24 10:47
/var/tmp/FPC0_PIC0.localhost.tnp_hello.20972.1556128038.core.tgz
-rw-r--r-- 1 nobody wheel 35367 Apr 24 10:49
/var/tmp/FPC0_PIC0.localhost.tnp_hello.27233.1556128140.core.tgz
-rw-r--r-- 1 nobody wheel 35372 Apr 24 11:32
/var/tmp/FPC0_PIC1.localhost.tnp_hello.22289.1556130737.core.tgz
-rw-r--r-- 1 nobody wheel 35357 Apr 24 10:51
/var/tmp/FPC0_PIC1.localhost.tnp_hello.22492.1556128268.core.tgz
-rw-r--r-- 1 nobody wheel 34812 Apr 24 11:33
/var/tmp/FPC0_PIC1.localhost.tnp_hello.24235.1556130795.core.tgz
-rw-r--r-- 1 nobody wheel 35383 Apr 24 11:18
/var/tmp/FPC0_PIC1.localhost.tnp_hello.27070.1556129899.core.tgz
-rw-r--r-- 1 nobody wheel 34675 Apr 24 11:18
/var/tmp/FPC0_PIC1.localhost.tnp_hello.31621.1556129928.core.tgz
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory
/var/jails/rest-api/tmp/*core*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory
total files: 10
```

### show system core-dumps (TX Matrix Plus Router)

```
user@host> show system core-dumps
```

```
sfc0-re0:
```



```

/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 8

/var/tmp/cores:
total 1627592
-rw-r--r-- 1 root field 535346090 May 15 07:36
rpd.core-tarball.0.090515.0736.tgz
-rw-r--r-- 1 root field 105632057 May 15 07:37
rpd.core-tarball.1.090515.0737.tgz
-rw-r--r-- 1 root field 101981681 May 15 07:38
rpd.core-tarball.2.090515.0738.tgz
-rw-r--r-- 1 root field 85854573 May 15 07:40
rpd.core-tarball.3.090515.0740.tgz
-rw-r--r-- 1 root field 4157845 May 15 08:18
rpd.core-tarball.4.090515.0818.tgz

lcc0-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 8

/var/tmp/cores:
total 12

lcc1-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 8

/var/tmp/cores:
total 10024
-rw-r--r-- 1 root field 1875794 Apr 22 15:47
chassisd.core-tarball.0.090422.1547.tgz
-rw-r--r-- 1 root field 1894183 Apr 22 19:02
chassisd.core-tarball.0.090422.1902.tgz
-rw-r--r-- 1 root field 1290240 Apr 26 16:01 ksyncd_1558.core.0.090426.1601

lcc2-re0:
-----
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory

/var/crash/cores:
total 21124008
-rw-r--r-- 1 root wheel 1022376528 May 2 06:43
core-LCC2-EGFPC7.core.0.090502.0643
-rw-r--r-- 1 root wheel 1022376528 May 2 08:13
core-LCC2-EGFPC7.core.0.090502.0813
-rw-r--r-- 1 root wheel 1022376544 May 5 06:15
core-LCC2-EGFPC7.core.0.090505.0615
-rw-r--r-- 1 root wheel 1022376544 May 6 10:59

```



```

core-LCC2-EGFPC7.core.0.090506.1059
-rw-r--r-- 1 root wheel 1022376528 May 2 06:58
core-LCC2-EGFPC7.core.1.090502.0658
-rw-r--r-- 1 root wheel 754271232 May 5 06:33
core-LCC2-EGFPC7.core.1.090505.0633
-rw-r--r-- 1 root wheel 264897536 May 6 11:12
core-LCC2-EGFPC7.core.1.090506.1112
-rw-r--r-- 1 root wheel 1022376528 May 2 07:22
core-LCC2-EGFPC7.core.2.090502.0722
-rw-r--r-- 1 root wheel 163633152 May 5 06:52
core-LCC2-EGFPC7.core.2.090505.0652
-rw-r--r-- 1 root wheel 171312128 May 6 12:13
core-LCC2-EGFPC7.core.2.090506.1213
-rw-r--r-- 1 root wheel 1022376528 May 2 07:39
core-LCC2-EGFPC7.core.3.090502.0739
-rw-r--r-- 1 root wheel 1022376528 May 2 07:55
core-LCC2-EGFPC7.core.4.090502.0755
-rw-r--r-- 1 root wheel 427277312 May 7 04:47
core-LCC2-STFPC4.core.0.090507.0447
-rw-r--r-- 1 root wheel 419609600 May 7 04:47
core-LCC2-STFPC5.core.0.090507.0447
-rw-r--r-- 1 root wheel 432356352 May 7 04:47
core-LCC2-STFPC6.core.0.090507.0447

/var/tmp/cores:
total 2568
-rw-r--r-- 1 root field 1290240 May 14 14:26 ksyncd_1540.core.0.090514.1426
...

```

### show system core-dumps (QFX3500 Switch)

```

user@switch> show system core-dumps

/var/crash/*core*: No such file or directory
-rw-rw---- 1 root field 1545143 Jun 4 2012 /var/tmp/pafxpc.core.0.gz
-rw-rw---- 1 root field 1545146 Jun 4 2012 /var/tmp/pafxpc.core.1.gz
-rw-rw---- 1 root field 1545141 Jun 4 2012 /var/tmp/pafxpc.core.2.gz
-rw-rw---- 1 root field 1545146 Jun 4 2012 /var/tmp/pafxpc.core.3.gz
-rw-rw---- 1 root field 1545142 Jun 5 2012 /var/tmp/pafxpc.core.4.gz
/var/tmp/pics/*core*: No such file or directory
/var/crash/kernel.*: No such file or directory
/tftpboot/corefiles/*core*: No such file or directory
total 5

```

### show system core-dumps (QFabric Systems)

```

user@switch> show system core-dumps

Repository scope: shared
Repository head: /pbdata/export
List of nodes for core repository: /pbdata/export/rdumps/

```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	0	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	0	fx-jvre	OM
NW-NG-0	BBAK0394	0	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	0	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	0	fx-jvre	OM



FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	0	fx-jvre	OM
FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	0	fx-jvre	OM
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YW3803	0	qfxc08-3008	OM
IC-WS001	WS001/YN5999	0	qfxc08-3008	OM
node-device1	BBAK0372	0	qfx3500	OM
node-device1	EE3093	0	qfx3500	OM
Total usage of core repository:0M of 70000M (0.0%)				
List of nodes for log repository: /pbdata/export/rlogs/				
Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	1	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	1	fx-jvre	OM
NW-NG-0	BBAK0394	1	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	1	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	3	fx-jvre	OM
FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	1	fx-jvre	OM
FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	1	fx-jvre	OM
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YN5999	1	qfxc08-3008	OM
IC-WS001	WS001/YW3803	1	qfxc08-3008	OM
node-device1	BBAK0372	1	qfx3500	OM
node-device1	EE3093	1	qfx3500	OM
Total usage of log repository:0M of 70000M (0.0%)				

### show system core-dumps component serial number display-order alphanumeric-sort repository core (QFabric Systems)

```
user@switch> show system core-dumps component BBAK8891 display-order alphanumeric-sort repository core
```

```
Repository scope: shared
Repository head: /pbdata/export
Repository name: core
List of core dumps for component BBAK8891
Repository location: /pbdata/export/rdumps/BBAK8891
```

Filename	Date	Size
eswd.core.0.1361.11172011214257.gz	Nov 17 21:43:10 2011	4779553
eswd.core.1.80267.11172011214514.gz	Nov 17 21:45:19 2011	3541648
eswd.core.2.80682.11172011214535.gz	Nov 17 21:45:43 2011	2156683
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:35 2011	375617

Number of core dumps in repository:4

### show system core-dumps display-period (QFabric Systems)

```
user@switch> show system core-dumps display-period 24h
```

```
show system core-dumps display-period 24h
Repository scope: shared
Repository head: /pbdata/export
List of core dumps at repository: /pbdata/export/rdumps
Delta timespec: Last 24h
Component: BBAK8273
```

Filename	Size	Date
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:35 2011	375794



Component: cedb7b0e-0025-11e1-9a5f-00e081c52990		
Filename	Size	Date
vccpd.core.0.1461.11182011151131.gz	Nov 18 15:11:31 2011	120951
Component: ee19c4f8-0025-11e1-aef6-00e081c52990		
Filename	Size	Date
vccpd.core.0.1462.11182011151131.gz	Nov 18 15:11:31 2011	109420
Component: BBAK8281		
Filename	Size	Date
vccpd.core.0.1196.11182011151131.gz	Nov 18 15:11:36 2011	375373
Component: BBAK8891		
Filename	Size	Date
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:35 2011	375617
Component: BBAK8276		
Filename	Size	Date
vccpd.core.0.1196.11182011151131.gz	Nov 18 15:11:35 2011	375350
Component: BBAK8868		
Filename	Size	Date
vccpd.core.0.1196.11182011151130.gz	Nov 18 15:11:34 2011	376211
Component: BBAK8835		
Filename	Size	Date
vccpd.core.0.1195.11182011151130.gz	Nov 18 15:11:35 2011	375700
Component: BBAK8283		
Filename	Size	Date
vccpd.core.0.1195.11182011151131.gz	Nov 18 15:11:36 2011	368298
Component: YW3781/YW3781		
Filename	Size	Date
vccpd.core.0.1220.11182011151131.gz	Nov 18 15:11:38 2011	380002
Component: 09726be2-0026-11e1-82d9-00e081c52990		
Filename	Size	Date
vccpd.core.0.1461.11182011151130.gz	Nov 18 15:11:31 2011	119965
Component: BBAK8309		
Filename	Size	Date
vccpd.core.0.1196.11182011151131.gz	Nov 18 15:11:36 2011	378930
Component: 303d476a-0026-11e1-abf4-00e081c52990		
Filename	Size	Date
vccpd.core.0.1460.11182011151131.gz	Nov 18 15:11:31 2011	118385
Component: YW3798/YW3798		
Filename	Size	Date
vccpd.core.0.1219.11182011151131.gz	Nov 18 15:11:36 2011	380455
List of log dumps at repository: /pbdata/export/rlogs		
Delta timespec: Last 24h		
Component: BBAK8273		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151138.tgz	Nov 18 15:11:39 2011	20415
Component: cedb7b0e-0025-11e1-9a5f-00e081c52990		
Filename	Size	Date



vccpd.tarball.0.1461.11182011151131.tgz	Nov 18 15:11:33 2011	19651
Component: ee19c4f8-0025-11e1-aef6-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1462.11182011151133.tgz	Nov 18 15:11:36 2011	24650
Component: BBAK8281		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151137.tgz	Nov 18 15:11:41 2011	19445
Component: BBAK8891		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151138.tgz	Nov 18 15:11:41 2011	21916
Component: BBAK8276		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151137.tgz	Nov 18 15:11:39 2011	20461
Component: BBAK8868		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151137.tgz	Nov 18 15:11:41 2011	21924
Component: BBAK8835		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151137.tgz	Nov 18 15:11:39 2011	19424
Component: BBAK8283		
Filename	Size	Date
vccpd.tarball.0.1195.11182011151138.tgz	Nov 18 15:11:42 2011	31186
Component: YW3781/YW3781		
Filename	Size	Date
vccpd.tarball.0.1220.11182011151141.tgz	Nov 18 15:11:45 2011	27565
Component: 09726be2-0026-11e1-82d9-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1461.11182011151130.tgz	Nov 18 15:11:34 2011	19613
Component: BBAK8309		
Filename	Size	Date
vccpd.tarball.0.1196.11182011151138.tgz	Nov 18 15:11:46 2011	50362
Component: 303d476a-0026-11e1-abf4-00e081c52990		
Filename	Size	Date
vccpd.tarball.0.1460.11182011151133.tgz	Nov 18 15:11:33 2011	19360
Component: YW3798/YW3798		
Filename	Size	Date
vccpd.tarball.0.1219.11182011151140.tgz	Nov 18 15:11:49 2011	24473

#### show system core-dumps kernel-crashinfo component serial number (QFabric Systems)

```

user@switch> show system core-dumps kernel-crashinfo component A0001/YA0197
Node: A0001/YA0197

Information about previous kernel crash:

-- Kernel panic data --

```



```

Panic string: kdb_sysctl_panic
System uptime: 3 day 20 hr 59 min 40 sec Kernel crash time: 2011-11-15 Wed 15:25:17
Kernel build linkstamp: JUNOS 11.3I #0: 2011-11-10 20:42:27 UTC

-- Stacktrace of panicing context --
Processor 1 (crash monarch):
savectx+0x0 (c9552800,80214efc,802a7fbc,c88ad05c) ra 801b93a8 sz 0
kdm_kcore_save_crashinfo+0x254 (c9552800,0,802a7fbc,c88ad05c) ra 801b9f44 sz 784
kdm_kcore_kern_panic_event_handler+0x4b0 (c9552800,0,802a7fbc,c88ad05c) ra
8022a9b8 sz 88
panic+0x1d0 (c9552800,0,4,77fed534) ra 802540c0 sz 56
kdb_sysctl_panic+0x70 (c9552800,0,4,77fed534) ra 80237e58 sz 40 sysctl_root+0x12c
(c9552800,0,4,e8bc5cf8) ra 80238e50 sz 48
userland_sysctl+0x164 (c9552800,0,4,e8bc5cf8) ra 8023956c sz 104
__sysctl+0xe4 (c9552800,0,4,e8bc5cf8) ra 806d62e8 sz 160
trap+0xe1c (c9552800,0,4,e8bc5cf8) ra 80896e68 sz 128
MipsUserGenException+0x1a4 (c9552800,0,4,405cd12c) ra 0 sz 0
pid 82340, process: sysctl

Processor 0:
restoreintr+0x14 (1,81bca820,3,0) ra 806cdc3c sz 0
spinlock_exit+0x30 (1,81bca820,3,0) ra 8025d354 sz 24
sleepq_release+0x64 (1,81bca820,3,0) ra 8025e670 sz 24
sleepq_timeout+0x224 (1,81bca820,3,0) ra 80240294 sz 48
softclock+0x434 (1,81bca820,3,0) ra 802067f8 sz 80
ithread_loop+0x244 (1,81bca820,3,0) ra 80200e28 sz 64 fork_exit+0xc0
(1,81bca820,3,0) ra 80897c28 sz 48
MipsNMIException+0x34 (1,81bca820,3,0) ra 0 sz 0
pid 82340, process: sysctl

Processor 2:
cpu_idle+0x20 (80960000,51bbc,2031df,81bca1b8) ra 80204948 sz 24 idle_proc+0x130
(80960000,51bbc,2031df,81bca1b8) ra 80200e28 sz 56 fork_exit+0xc0
(80960000,51bbc,2031df,81bca1b8) ra 80897c28 sz 48
MipsNMIException+0x34 (80960000,51bbc,2031df,81bca1b8) ra 0 sz 0
pid 82340, process: sysctl

Processor 3:
cpu_idle+0x20 (80960000,51bbc,2038df,81bca300) ra 80204948 sz 24 idle_proc+0x130
(80960000,51bbc,2038df,81bca300) ra 80200e28 sz 56 fork_exit+0xc0
(80960000,51bbc,2038df,81bca300) ra 80897c28 sz 48
MipsNMIException+0x34 (80960000,51bbc,2038df,81bca300) ra 0 sz 0
pid 82340, process: sysctl

Processor 4:
cpu_idle+0x20 (80960000,51bbc,2037df,81bca448) ra 80204948 sz 24 idle_proc+0x130
(80960000,51bbc,2037df,81bca448) ra 80200e28 sz 56 fork_exit+0xc0
(80960000,51bbc,2037df,81bca448) ra 80897c28 sz 48
MipsNMIException+0x34 (80960000,51bbc,2037df,81bca448) ra 0 sz 0
pid 82340, process: sysctl

Processor 5:
restoreintr+0x14 (1,51bbc,203edf,81bca590) ra 806cdc3c sz 0
spinlock_exit+0x30 (1,51bbc,203edf,81bca590) ra 80204a34 sz 24 idle_proc+0x21c
(1,51bbc,203edf,81bca590) ra 80200e28 sz 56 fork_exit+0xc0
(1,51bbc,203edf,81bca590) ra 80897c28 sz 48
MipsNMIException+0x34 (1,51bbc,203edf,81bca590) ra 0 sz 0
pid 82340, process: sysctl

```



```

Processor 6:
cpu_idle+0x20 (80960000,51bbc,205cdf,81bca6d8) ra 80204948 sz 24 idle_proc+0x130
(80960000,51bbc,205cdf,81bca6d8) ra 80200e28 sz 56 fork_exit+0xc0
(80960000,51bbc,205cdf,81bca6d8) ra 80897c28 sz 48
MipsNMIException+0x34 (80960000,51bbc,205cdf,81bca6d8) ra 0 sz 0
pid 82340, process: sysctl

Processor 7:
lockmgr+0x5ac (c97e8484,c8dd9800,0,c8dd9800) ra 8c11c81c sz 48
sal_sem_take+0x134 (c97e8484,c8dd9800,0,c8dd9800) ra 8c351108 sz 56
_bcm_esw_linkscan_thread+0x45c (c97e8484,c8dd9800,0,c8dd9800) ra 8c11cdb4 sz 104
sal_thread_start_wrap+0x74 (c97e8484,c8dd9800,0,c8dd9800) ra 80200e28 sz 32
fork_exit+0xc0 (c97e8484,c8dd9800,0,c8dd9800) ra 80897c28 sz 48
MipsNMIException+0x34 (c97e8484,c8dd9800,0,c8dd9800) ra 0 sz 0
pid 82340, process: sysctl
-- End of stacktrace --

```

### show system core-dumps repository core (QFabric Systems)

```

user@switch> show system core-dumps repository core

Repository scope: shared
Repository head: /pbdata/export
Repository name: core
List of nodes for core repository: /pbdata/export/rdumps/

```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	0	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	0	fx-jvre	OM
NW-NG-0	BBAK0394	0	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	0	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	0	fx-jvre	OM
FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	0	fx-jvre	OM
FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	0	fx-jvre	OM
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YW3803	0	qfxc08-3008	OM
IC-WS001	WS001/YN5999	0	qfxc08-3008	OM
node-device1	BBAK0372	0	qfx3500	OM
node-device1	EE3093	0	qfx3500	OM

```

Total usage of core repository: 0M of 70000M (0.0%)

```

### show system core-dumps repository log (QFabric Systems)

```

user@switch> show system core-dumps repository log

Repository scope: shared
Repository head: /pbdata/export
Repository name: log
List of nodes for log repository: /pbdata/export/rlogs/

```

Node Group	Node Identifier	Num	Model	Usage
DG-0	BCF7208D-E44F-E011-802F-4171BAAC781D	0	qfx3100	OM
FM-0	73747cd8-0710-11e1-b6a4-00e081c5297e	1	fx-jvre	OM
DRE-0	77116f18-0710-11e1-a2a0-00e081c5297e	1	fx-jvre	OM
NW-NG-0	BBAK0394	1	qfx3500	OM
NW-NG-0	cd78871a-0710-11e1-878e-00e081c5297e	1	fx-jvre	OM
NW-NG-0	d0afda1e-0710-11e1-a1d0-00e081c5297e	3	fx-jvre	OM
FC-0	d31ab7a6-0710-11e1-ad1b-00e081c5297e	1	fx-jvre	OM



FC-1	d4d0f254-0710-11e1-90c3-00e081c5297e	1	fx-jvre	0M
IC-WS001	WS001	0	-	-
IC-WS001	WS001/YN5999	1	qfxc08-3008	0M
IC-WS001	WS001/YW3803	1	qfxc08-3008	0M
node-device1	BBAK0372	1	qfx3500	0M
node-device1	EE3093	1	qfx3500	0M
Total usage of log repository:0M of 70000M (0.0%)				



## show system directory-usage

**List of Syntax**    [Syntax on page 909](#)  
                           [Syntax \(EX Series\) on page 909](#)  
                           [Syntax \(TX Matrix Router\) on page 909](#)  
                           [Syntax \(TX Matrix Plus Router\) on page 909](#)  
                           [Syntax \(MX Series Router\) on page 909](#)  
                           [Syntax \(QFX Series and OCX Series\) on page 909](#)

**Syntax**    show system directory-usage  
                   <depth *number*>  
                   <path>

**Syntax (EX Series)**    show system directory-usage  
                               <all-members>  
                               <depth *number*>  
                               <local>  
                               <member *member-id*>  
                               <path>

**Syntax (TX Matrix Router)**    show system directory-usage  
                                       <all-chassis | all-lcc | lcc *number* | scc>  
                                       <depth *number*>  
                                       <path>

**Syntax (TX Matrix Plus Router)**    show system directory-usage  
                                       <all-chassis | all-lcc | lcc *number* | sfc *number*>  
                                       <depth *number*>  
                                       <path>

**Syntax (MX Series Router)**    show system directory-usage  
                                       <all-members>  
                                       <depth *number*>  
                                       <local>  
                                       <member *member-id*>  
                                       <path>

**Syntax (QFX Series and OCX Series)**    show system directory-usage  
                                       <depth *number*>  
                                       <path>  
                                       <infrastructure *name*>  
                                       <interconnect-device *name*>  
                                       <node-group *name*>

**Release Information**    Command introduced before Junos OS Release 7.4.



Command introduced in Junos OS Release 9.0 for EX Series switches.

**sfc** option introduced for the TX Matrix Plus router in Junos OS Release 9.6.

Command introduced in Junos OS Release 11.1 for the QFX Series.

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**    Display directory usage information.

**Options**        **none**—Display all directory usage information.

**all-chassis**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display directory usage information about all the T640 routers (in a routing matrix based on a TX Matrix router). Display directory usage information about all the T1600 or T4000 routers (in a routing matrix based on a TX Matrix Plus router) in the chassis.

**all-lcc**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display directory information for all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus router, display directory information for all connected T1600 or T4000 LCCs.

**all-members**—(EX4200 switches and MX Series routers only) (Optional) Display directory information for all members of the Virtual Chassis configuration.

**depth *number***—(Optional) Depth of the directory to traverse. This option is useful when you want to limit the output shown for a large file system.

**infrastructure *name***— (QFabric systems only) (Optional) Display directory information for the fabric control Routing Engines and fabric manager Routing Engines.

**interconnect-device *name***— (QFabric systems only) (Optional) Display directory information for the Interconnect device.

**node-group *name***— (QFabric systems only) (Optional) Display directory information for the Node group.

**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display directory information for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display directory information for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.



**local**—(EX4200 switches and MX Series routers only) (Optional) Display directory information for the local Virtual Chassis member.

**member *member-id***—(EX4200 switches and MX Series routers only) (Optional) Display directory information for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace ***member-id*** with a value from 0 through 9. For an MX Series Virtual Chassis, replace ***member-id*** with a value of 0 or 1.

***path***—(Optional) Path or root directory to traverse.

**scc**—(TX Matrix router only) (Optional) Display directory information for the TX Matrix router (or switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) Display directory information for the TX Matrix Plus router. Replace ***number*** with 0.

**Required Privilege Level**

view

**Related Documentation**

- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

**List of Sample Output**

[show system directory-usage scc \(TX Matrix Router\) on page 912](#)  
[show system directory-usage sfc \(TX Matrix Plus Router\) on page 912](#)  
[show system directory-usage \(QFX Series and OCX Series\) on page 912](#)

**Output Fields**

[Table 44 on page 911](#) describes the output fields for the **show system directory-usage** command. Output fields are listed in the approximate order in which they appear.

*Table 44: show system directory-usage Output Fields*

Field Name	Field Description
<b><i>bytes</i></b>	Number of bytes used by files in a directory.
<b><i>directory-name</i></b>	Name of the directory.



## Sample Output

### show system directory-usage scc (TX Matrix Router)

```
user@host> show system directory-usage /var/tmp scc
/var/tmp
1.0K /var/tmp/vi.recover
2.0K /var/tmp/instmp.tPMk8u
1.0K /var/tmp/install
/var/tmp/instmp.GUMpur
4.8M /var/tmp/instmp.GUMpur/packages
6.4M /var/tmp/troy1
297M /var/tmp/dsw
/var/tmp/pkg_tmp.2073
83K /var/tmp/pkg_tmp.2073/bin
/var/tmp/instmp.oMIDb1
89K /var/tmp/instmp.oMIDb1/bin
/var/tmp/instmp.byhMjR
4.6M /var/tmp/instmp.byhMjR/packages
/var/tmp/instmp.6fqHf3
1.7M /var/tmp/instmp.6fqHf3/packages
/var/tmp/instmp.mljECe
4.6M /var/tmp/instmp.mljECe/packages
```

### show system directory-usage sfc (TX Matrix Plus Router)

```
user@switch> show system directory-usage /var/tmp sfc 0
sfc0-re0:
-----
/var/tmp
46K /var/tmp/gres-tp
/var/tmp/sec-download
2.0K /var/tmp/sec-download/sub-download
2.0K /var/tmp/vi.recover
2.0K /var/tmp/install
795M /var/tmp/cores
766K /var/tmp/pr440594
```

### show system directory-usage (QFX Series and OCX Series)

```
user@switch> show system directory-usage
/var/tmp
30K /var/tmp/gres-tp
2.0K /var/tmp/rtsdb
2.0K /var/tmp/vi.recover
2.0K /var/tmp/install
2.0K /var/tmp/pics
```



## show system firmware

<b>Syntax</b>	<code>show system firmware</code> <code>&lt;compatibility&gt;</code>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.4 for EX Series switches.</p> <p>Command introduced in Junos OS Release 15.1X53-D30 for QFX Series switches.</p> <p>Command introduced in Junos OS Release 15.1F6 for MX Series Routers and PTX Series Routers.</p>
<b>Description</b>	(J Series routers, MX240, MX480, MX960, MX2010, and MX2020 routers, PTX3000 and PTX5000 routers, EX8200 switches, QFX10008 switches only) Display firmware information.
<b>Options</b>	<b>compatibility</b> —(Optional) Display firmware compatibility information.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show system firmware on page 914</a> <a href="#">show system firmware compatibility on page 914</a> <a href="#">show system firmware (QFX10008 Switch) on page 914</a> <a href="#">show system firmware (MX Series Routers with MIC3-100G-DWDM) on page 914</a> <a href="#">show system firmware (MX Series Routers with MIC3-100G-DWDM) on page 915</a>
<b>Output Fields</b>	<p><a href="#">Table 45 on page 913</a> lists the output fields for the <b>show system firmware</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 45: show system firmware Output Fields*

Field Name	Field Description
<b>Part</b>	Physical part on the router or switch affected by the firmware.
<b>Type</b>	Type of firmware on the router or switch.
<b>Tag</b>	Location of the firmware on the interface.
<b>Current version</b>	Firmware version on the affected router or switch parts.
<b>Available version</b>	New versions of firmware for upgrading or downgrading.
<b>Status</b>	Firmware condition on the router or switch.
<b>Action</b>	Whether you can upgrade or downgrade, or if no action is available ( <b>none</b> ). This field is displayed only if the <b>show system firmware</b> command is used with the <b>compatibility</b> option.



## Sample Output

### show system firmware

```
user@host> show system firmware
```

Part	Type	Tag	Current version	Available version	Status
FPC 0	ROM Monitor	0	0	6.4.10	OK
Routing Engine 0	RE BIOS	0	0		OK

### show system firmware compatibility

```
user@host> show system firmware compatibility
```

Part	Type	Tag	Current version	Available version	Action
FPC 0	ROM Monitor	0	0	6.4.10	None
Routing Engine 0	RE BIOS	0	0		None

### show system firmware (QFX10008 Switch)

```
user@host> show system firmware
```

Part	Type	Status
CB 0	FPGA	OK
FPC 0	U-Boot	OK
CTRL	FPGA	PROGRAMMING
PORT	FPGA	PROGRAMMING
FPM	FPGA	OK
FTC 0	FPGA	OK
FTC 1	FPGA	OK
SIB 0	FPGA	OK
SIB 1	FPGA	OK
SIB 2	FPGA	OK
SIB 3	FPGA	OK
SIB 4	FPGA	OK
SIB 5	FPGA	OK

### show system firmware (MX Series Routers with MIC3-100G-DWDM)

```
user@host> show system firmware
```

Part	Type	Tag	Current version	Available version	Status
FPC 0	ROM Monitor	0	0	10.4.1	OK
FPC 1	ROM Monitor	0	0	10.4.1	OK
FPC 2	ROM Monitor	0	0	10.4.1	OK
PIC 0	CMIC LTC 2/0	1	.0	1.0	OK
FPC 3	ROM Monitor	0	0	10.4.1	OK
FPC 4	ROM Monitor	0	0	13.3.1	OK
FPC 4	MPCS(0)	2	0.24.0		OK
Routing Engine 0	RE BIOS	0	1.18		OK
Routing Engine 1		0	1.18		OK

The current firmware version .0 does not match the available version 1.0. This output displays the status before the firmware upgrade.



**show system firmware (MX Series Routers with MIC3-100G-DWDM)**

```
user@host> show system firmware
```

Part	Type	Tag	Current	Available	Status
		version	version		
FPC 0	ROM Monitor	0 0	10.4.1		OK
FPC 1	ROM Monitor	0 0	10.4.1		OK
FPC 2	ROM Monitor	0 0	10.4.1		OK
PIC 0	CMIC LTC 2/0	1	1.0	1.0	UPGRADED SUCCESSFULLY
FPC 3	ROM Monitor	0 0	10.4.1		OK
FPC 4	ROM Monitor	0 0	13.3.1		OK
FPC 4	MPCS(0)	2	0.24.0		OK
Routing Engine 0	RE BIOS	0	1.18		OK
Routing Engine 1		0	1.18		OK

The current firmware version 1.0 matches the available version 1.0. This output displays the status after the firmware upgrade.



## show system reboot

<b>List of Syntax</b>	<a href="#">Syntax on page 916</a> <a href="#">Syntax (EX Series and MX Series) on page 916</a> <a href="#">Syntax (TX Matrix Router) on page 916</a> <a href="#">Syntax (TX Matrix Plus Router) on page 916</a> <a href="#">Syntax (QFX Series and OCX Series) on page 916</a>
<b>Syntax</b>	<pre>show system reboot &lt;both-routing-engines&gt;</pre>
<b>Syntax (EX Series and MX Series)</b>	<pre>show system reboot &lt;all-members&gt; &lt;both-routing-engines&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt;</pre>
<b>Syntax (TX Matrix Router)</b>	<pre>show system reboot &lt;all-chassis   all-lcc   lcc <i>number</i>   scc&gt; &lt;both-routing-engines&gt;</pre>
<b>Syntax (TX Matrix Plus Router)</b>	<pre>show system reboot &lt;all-chassis   all-lcc   lcc <i>number</i>   sfc <i>number</i>&gt; &lt;both-routing-engines&gt;</pre>
<b>Syntax (QFX Series and OCX Series)</b>	<pre>show system reboot &lt;both-routing-engines&gt; &lt;infrastructure <i>name</i>&gt; &lt;interconnect-device <i>name</i>&gt; &lt;node-device <i>name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display pending system reboots or halts.
<b>Options</b>	<p><b>none</b>—Display pending reboots or halts on the active Routing Engine.</p> <p><b>all-chassis</b>—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display halt or reboot request information for all the T640 routers in the chassis that are connected to the TX Matrix router. On a TX Matrix router, display</p>



halt or reboot request information for all the T1600 or T4000 routers in the chassis that are connected to the TX Matrix Plus router.

**all-members**—(EX4200 switches and MX Series routers only) (Optional) Display halt or reboot request information for all members of the Virtual Chassis configuration.

**all-lcc**—(TX Matrix routers and TX Matrix Plus router only) (Optional) On a TX Matrix router, display system halt or reboot request information for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display halt or reboot request information for all connected T1600 or T4000 LCCs.

**both-routing-engines**—(Systems with multiple Routing Engines) (Optional) Display halt or reboot request information on both Routing Engines.

**infrastructure *name***—(QFabric systems only) (Optional) Display reboot request information on the fabric manager Routing Engines and fabric control Routing Engines.

**interconnect-device *name***—(QFabric systems only) (Optional) Display reboot request information on the Interconnect device.

**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display halt or reboot request information for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display halt or reboot request information for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(EX4200 switches and MX Series routers only) (Optional) Display halt or reboot request information for the local Virtual Chassis member.

**member *member-id***—(EX4200 switches and MX Series routers only) (Optional) Display halt or reboot request information for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

**node-group *name***—(QFabric systems only) (Optional) Display reboot request information on the Node group.

**scc**—(TX Matrix router only) (Optional) Display halt or reboot request information for the TX Matrix router (or switch-card chassis).



**sfc**—(TX Matrix Plus router only) (Optional) Display halt or reboot request information for the TX Matrix Plus router.

**Additional Information** By default, when you issue the **show system reboot** command on a TX Matrix or TX Matrix Plus master Routing Engine, the command is broadcast to all the T640 (in a routing matrix based on the TX Matrix router) or T1600 (in a routing matrix based on the TX Matrix Plus router) master Routing Engines connected to it. Likewise, if you issue the same command on the TX Matrix or TX Matrix Plus backup Routing Engine, the command is broadcast to all the T640 (in a routing matrix based on the TX Matrix router) or T1600 (in a routing matrix based on the TX Matrix Plus router) backup Routing Engines that are connected to it.

**Required Privilege Level** maintenance

**Related Documentation**

- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

**List of Sample Output** [show system reboot on page 918](#)  
[show system reboot all-lcc \(TX Matrix Router\) on page 918](#)  
[show system reboot sfc \(TX Matrix Plus Router\) on page 918](#)  
[show system reboot \(QFX3500 Switch\) on page 918](#)

## Sample Output

### [show system reboot](#)

```
user@host> show system reboot
reboot requested by root at Wed Feb 10 17:40:46 1999
[process id 17885]
```

### [show system reboot all-lcc \(TX Matrix Router\)](#)

```
user@host> show system reboot all-lcc
```

```
lcc0-re0:
```

```
-----
No shutdown/reboot scheduled.
```

```
lcc2-re0:
```

```
-----
No shutdown/reboot scheduled.
```

### [show system reboot sfc \(TX Matrix Plus Router\)](#)

```
user@host> show system sfc 0
```

```
No shutdown/reboot scheduled.
```

### [show system reboot \(QFX3500 Switch\)](#)

```
user@switch> show system reboot
```



No shutdown/reboot scheduled.



## show system software

<b>List of Syntax</b>	<a href="#">Syntax on page 920</a> <a href="#">Syntax (EX Series Switches) on page 920</a> <a href="#">Syntax (TX Matrix Router) on page 920</a> <a href="#">Syntax (TX Matrix Plus Router) on page 920</a> <a href="#">Syntax (QFX Series) on page 920</a>
<b>Syntax</b>	<pre>show system software &lt;detail&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show system software &lt;all-members&gt; &lt;detail&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt;</pre>
<b>Syntax (TX Matrix Router)</b>	<pre>show system software &lt;all-chassis   all-lcc   lcc <i>number</i>   scc&gt; &lt;detail&gt;</pre>
<b>Syntax (TX Matrix Plus Router)</b>	<pre>show system software &lt;all-chassis   all-lcc   lcc <i>number</i>   sfc <i>number</i>&gt; &lt;detail&gt;</pre>
<b>Syntax (QFX Series)</b>	<pre>show system software &lt;detail&gt; &lt;infrastructure <i>name</i>&gt; &lt;interconnect-device <i>name</i>&gt; &lt;node-group <i>name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>sfc</b> option introduced for the TX Matrix Plus router in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display the Junos OS extensions loaded on your router or switch.
<b>Options</b>	<p><b>none</b>—Display standard information about all loaded Junos OS extensions.</p> <p><b>all-chassis</b>—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display system software information for all the T640 routers (TX Matrix Router) or all the routers (TX Matrix Plus Router) in the chassis.</p>



**all-lcc**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system software information for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display system software information for all connected T1600 or T4000 LCCs.

**all-members**—(EX4200 switches only) (Optional) Display the system software running on all members of the Virtual Chassis configuration.

**detail**—(Optional) Display detailed information about available Junos OS extensions.

**infrastructure *name***—(QFabric systems only) (Optional) Display the system software running on the fabric control Routing Engine and the fabric manager Routing Engine.

**interconnect-device *name***—(QFabric systems only) (Optional) Display the system software running on the Interconnect device.

**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system software information for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display system software information for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(EX4200 switches only) (Optional) Display the system software running on the local Virtual Chassis member.

**member *member-id***—(EX4200 switches only) (Optional) Display the system software running on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value from 0 through 9.

**node-group *name***—(QFabric systems only) (Optional) Display the system software running on the Node group.

**scc**—(Routing matrix only) (Optional) Display the system software running on a TX Matrix router (or switch-card chassis).

**sfc**—(TX Matrix Plus routers only) (Optional) Display system software information for the TX Matrix Plus router.

**Required Privilege Level** maintenance



**Related Documentation**

- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

**List of Sample Output**

[show system software on page 922](#)  
[show system software \(TX Matrix Plus Router\) on page 923](#)  
[show system software \(QFX Series\) on page 926](#)

**Output Fields**

When you enter this command, you are provided a list of Junos OS packages installed on the router and their corresponding Junos OS release number.

## Sample Output

### show system software

```
user@host> show system software
Information for jbase:

Comment:
JUNOS Base OS Software Suite [7.2R1.7]

Information for jcrypto:

Comment:
JUNOS Crypto Software Suite [7.2R1.7]
Information for jdocs:

Comment:
JUNOS Online Documentation [7.2R1.7]

Information for jkernel:

Comment:
JUNOS Kernel Software Suite [7.2R1.7]

Information for jpfe:

Comment:
JUNOS Packet Forwarding Engine Support (M20/M40) [7.2R1.7]

Information for jroute:

Comment:
JUNOS Routing Software Suite [7.2R1.7]

Information for junos:

Comment:
JUNOS Base OS boot [7.2R1.7]
```



**show system software (TX Matrix Plus Router)**

```

user@host> show system software
sfc0-re0:
-----
Information for jbase:

Comment:
JUNOS Base OS Software Suite [9.6-20090515.0]

Information for jcrypto:

Comment:
JUNOS Crypto Software Suite [9.6-20090515.0]

Information for jdocs:

Comment:
JUNOS Online Documentation [9.6-20090515.0]
Information for jkernel:

Comment:
JUNOS Kernel Software Suite [9.6-20090515.0]

Information for jpfe:

Comment:
JUNOS Packet Forwarding Engine Support (T-Series) [9.6-20090515.0]

Information for jpfe-common:

Comment:
JUNOS Packet Forwarding Engine Support (M/T Common) [9.6-20090515.0]

Information for jroute:
Comment:
JUNOS Routing Software Suite [9.6-20090515.0]

Information for jservices-aacl:

Comment:
JUNOS Services AACL Container package [9.6-20090515.0]

Information for jservices-appid:

Comment:
JUNOS AppId Services [9.6-20090515.0]

```



Information for jservices-bgf:

Comment:

JUNOS Border Gateway Function package [9.6-20090515.0]

Information for jservices-idp:

Comment:

JUNOS IDP Services [9.6-20090515.0]

Information for jservices-llpdf:

Comment:

JUNOS Services LL-PDF Container package [9.6-20090515.0]

Information for jservices-sfw:

Comment:

JUNOS Services Stateful Firewall [9.6-20090515.0]

Information for jservices-voice:

Comment:

JUNOS Voice Services Container package [9.6-20090515.0]

Information for junos:

Comment:

JUNOS Base OS boot [9.6-20090515.0]

...

lcc0-re0:

-----  
Information for jbase:

Comment:

JUNOS Base OS Software Suite [9.6-20090515.0]

Information for jcrypto:

Comment:

JUNOS Crypto Software Suite [9.6-20090515.0]

Information for jdocs:

Comment:

JUNOS Online Documentation [9.6-20090515.0]



Information for jkernel:

Comment:

JUNOS Kernel Software Suite [9.6-20090515.0]

Information for jpfe:

Comment:

JUNOS Packet Forwarding Engine Support (T-Series) [9.6-20090515.0]

Information for jpfe-common:

Comment:

JUNOS Packet Forwarding Engine Support (M/T Common) [9.6-20090515.0]

Information for jroute:

Comment:

JUNOS Routing Software Suite [9.6-20090515.0]

Information for jservices-aac1:

Comment:

JUNOS Services ACL Container package [9.6-20090515.0]

Information for jservices-appid:

Comment:

JUNOS AppId Services [9.6-20090515.0]

Information for jservices-bgf:

Comment:

JUNOS Border Gateway Function package [9.6-20090515.0]

Information for jservices-idp:

Comment:

JUNOS IDP Services [9.6-20090515.0]

Information for jservices-llpdf:

Comment:

JUNOS Services LL-PDF Container package [9.6-20090515.0]



Information for jservices-sfw:

Comment:

JUNOS Services Stateful Firewall [9.6-20090515.0]

Information for jservices-voice:

Comment:

JUNOS Voice Services Container package [9.6-20090515.0]

Information for junos:

Comment:

JUNOS Base OS boot [9.6-20090515.0]

lcc1-re0:

-----  
Information for jbase:

Comment:

JUNOS Base OS Software Suite [9.6-20090515.0]

Information for jcrypto:

Comment:

JUNOS Crypto Software Suite [9.6-20090515.0]

...

### show system software (QFX Series)

user@switch> **show system software**

Information for jbase:

Comment:

JUNOS Base OS Software Suite [11.3-20110730.0]

Information for jcrypto:

Comment:

JUNOS Crypto Software Suite [11.3-20110730.0]

Information for jdocs:

Comment:



JUNOS Online Documentation [11.3-20110730.0]

Information for jkernel:

Comment:

JUNOS Kernel Software Suite [11.3-20110730.0]

Information for jpfe:

Comment:

JUNOS Packet Forwarding Engine Support (QFX) [11.3-20110730.0]

Information for jroute:

Comment:

JUNOS Routing Software Suite [11.3-20110730.0]

Information for jswitch:

Comment:

JUNOS Enterprise Software Suite [11.3-20110730.0]

Information for junos:

Comment:

JUNOS Base OS boot [11.3-20110730.0]

Information for jweb:

Comment:

JUNOS Web Management [11.3-20110730.0]



## show system statistics

<b>List of Syntax</b>	<a href="#">Syntax on page 928</a> <a href="#">Syntax (EX Series Switches) on page 928</a> <a href="#">Syntax (TX Matrix Router) on page 928</a> <a href="#">Syntax (TX Matrix Plus Router) on page 928</a> <a href="#">Syntax (MX Series Router) on page 928</a> <a href="#">Syntax (QFX Series) on page 928</a>
<b>Syntax</b>	show system statistics
<b>Syntax (EX Series Switches)</b>	show system statistics <all-members> <local> <member <i>member-id</i> >
<b>Syntax (TX Matrix Router)</b>	show system statistics <all-chassis   all-lcc   lcc <i>number</i>   scc>
<b>Syntax (TX Matrix Plus Router)</b>	show system statistics <all-chassis   all-lcc   lcc <i>number</i>   sfc <i>number</i> >
<b>Syntax (MX Series Router)</b>	show system statistics <all-members> <local> <member <i>member-id</i> > <extended <ipv4   ipv6>>
<b>Syntax (QFX Series)</b>	show system statistics
<b>Release Information</b>	Command introduced before JUNOS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. <b>sfc</b> option introduced for the TX Matrix Plus router in JUNOS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display system-wide protocol-related statistics.
<b>Options</b>	<b>none</b> —Display system statistics for all the following protocols: <ul style="list-style-type: none"> <li><b>arp</b>—Address Resolution Protocol</li> <li><b>bridge</b>—IEEE 802.1 Bridging</li> </ul>



- **clns**—Connectionless Network Service
- **esis**—End System-to-Intermediate System
- **ethoamcfm**—Ethernet OAM protocol for connectivity fault management
- **ethoamlfm**—Ethernet OAM protocol for link fault management
- **extended**—System statistics for IPv4 and IPv6 traffic
- **icmp**—Internet Control Message Protocol
- **icmp6**—Internet Control Message Protocol version 6
- **igmp**—Internet Group Management Protocol
- **ip**—Internet Protocol version 4
- **ip6**—Internet Protocol version 6
- **jsr**—Juniper Socket Replication
- **mpls**—Multiprotocol Label Switching
- **rdp**—Reliable Datagram Protocol
- **tcp**—Transmission Control Protocol
- **tnp**—Trivial Network Protocol
- **ttp**—TNP Tunneling Protocol
- **tudp**—Trivial User Datagram Protocol
- **udp**—User Datagram Protocol
- **vpls**—Virtual Private LAN Service

**all-chassis**—(TX Matrix and TX Matrix Plus routers only) (Optional) Display system statistics for a protocol for all the routers in the chassis.

**all-lcc**—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system statistics for a protocol for all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus router, display system statistics for a protocol for all routers (line-card chassis) connected to the TX Matrix Plus router

**all-members**—(EX4200 switches and MX Series routers only) (Optional) Display system statistics for a protocol for all members of the Virtual Chassis configuration.

**lcc number**—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system statistics for a protocol for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display system statistics for a protocol for a specific router that is connected to the TX Matrix Plus router.



Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(EX4200 switches and MX Series routers only) (Optional) Display system statistics for a protocol for the local Virtual Chassis member.

**member *member-id***—(EX4200 switches and MX Series routers only) (Optional) Display system statistics for a protocol for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

**scc**—(TX Matrix routers only) (Optional) Display system statistics for a protocol for the TX Matrix router (or switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) Display system statistics for a protocol for the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

**Additional Information** By default, when you issue the **show system statistics** command on a TX Matrix or TX Matrix Plus master Routing Engine, the command is broadcast to all the T640 (in a routing matrix based on the TX Matrix router) or T1600 (in a routing matrix based on the TX Matrix Plus router) master Routing Engines connected to it. Likewise, if you issue the same command on the TX Matrix or TX Matrix Plus backup Routing Engine, the command is broadcast to all the T640 (in a routing matrix based on the TX Matrix router) or T1600 (in a routing matrix based on the TX Matrix Plus router) backup Routing Engines that are connected to it.

**Required Privilege Level** view

**List of Sample Output** [show system statistics on page 930](#)

## Sample Output

[show system statistics](#)

```
user@host> show system statistics
ip:
    3682087 total packets received
```



```

0 bad header checksums
0 with size smaller than minimum
0 with data size < data length
0 with header length < data size
0 with data length < header length
0 with incorrect version number
0 packets destined to dead next hop
0 fragments received
0 fragments dropped (dup or out of space)
0 fragments dropped (queue overflow)
0 fragments dropped after timeout
0 fragments dropped due to over limit
0 packets reassembled ok
3664774 packets for this host
17316 packets for unknown/unsupported protocol
0 packets forwarded
0 packets not forwardable
0 redirects sent
6528 packets sent from this host
0 packets sent with fabricated ip header
0 output packets dropped due to no bufs
0 output packets discarded due to no route
0 output datagrams fragmented
0 fragments created
0 datagrams that can't be fragmented
0 packets with bad options
1123 packets with options handled without error
0 strict source and record route options
0 loose source and record route options
0 record route options
0 timestamp options
0 timestamp and address options
0 timestamp and prespecified address options
0 option packets dropped due to rate limit
1123 router alert options
0 multicast packets dropped (no iflist)
0 packets dropped (src and int don't match)
icmp:
0 drops due to rate limit
0 calls to icmp_error
0 errors not generated because old message was icmp
Output histogram:
    echo reply: 75
0 messages with bad code fields
0 messages less than the minimum length
0 messages with bad checksum
0 messages with bad source address
0 messages with bad length
0 echo drops with broadcast or multicast destination address
0 timestamp drops with broadcast or multicast destination address
Input histogram:
    echo: 75
    router advertisement: 130
75 message responses generated
tcp:
3844 packets sent
    3618 data packets (1055596 bytes)
    0 data packets (0 bytes) retransmitted
    0 resends initiated by MTU discovery
    205 ack-only packets (148 packets delayed)

```



```
    0 URG only packets
    0 window probe packets
    0 window update packets
    1079 control packets
5815 packets received
    3377 acks (for 1055657 bytes)
    24 duplicate acks
    0 acks for unsent data
    2655 packets (15004 bytes) received in-sequence
    1 completely duplicate packet (0 bytes)
    0 old duplicate packets
    0 packets with some dup. data (0 bytes duped)
    0 out-of-order packets (0 bytes)
    0 packets (0 bytes) of data after window
    0 window probes
    7 window update packets
    0 packets received after close
    0 discarded for bad checksums
    0 discarded for bad header offset fields
    0 discarded because packet too short
1 connection request
32 connection accepts
0 bad connection attempts
0 listen queue overflows
33 connections established (including accepts)
30 connections closed (including 0 drops)
    27 connections updated cached RTT on close
    27 connections updated cached RTT variance on close
    0 connections updated cached ssthresh on close
0 embryonic connections dropped
3374 segments updated rtt (of 3220 attempts)
0 retransmit timeouts
    0 connections dropped by rexmit timeout
0 persist timeouts
    0 connections dropped by persist timeout
344 keepalive timeouts
    0 keepalive probes sent
    0 connections dropped by keepalive
1096 correct ACK header predictions
1314 correct data packet header predictions
32 syncache entries added
    0 retransmitted
    0 dupsyn
    0 dropped
    32 completed
    0 bucket overflow
    0 cache overflow
    0 reset
    0 stale
    0 aborted
    0 badack
    0 unreach
    0 zone failures
0 cookies sent
0 cookies received
0 ACKs sent in response to in-window but not exact RSTs
0 ACKs sent in response to in-window SYNs on established connections
0 rcv packets dropped by TCP due to bad address
0 out-of-sequence segment drops due to insufficient memory
1058 RST packets
```



```

    0 ICMP packets ignored by TCP
    0 send packets dropped by TCP due to auth errors
    0 rcv packets dropped by TCP due to auth errors
udp:
    3658884 datagrams received
    0 with incomplete header
    0 with bad data length field
    0 with bad checksum
    3657342 dropped due to no socket
    3657342 broadcast/multicast datagrams dropped due to no socket
    0 dropped due to full socket buffers
    0 not for hashed pcb
    4291311496 delivered
    1551 datagrams output
ipsec:
    0 inbound packets processed successfully
    0 inbound packets violated process security policy
    0 inbound packets with no SA available
    0 invalid inbound packets
    0 inbound packets failed due to insufficient memory
    0 inbound packets failed getting SPI
    0 inbound packets failed on AH replay check
    0 inbound packets failed on ESP replay check
    0 inbound AH packets considered authentic
    0 inbound AH packets failed on authentication
    0 inbound ESP packets considered authentic
    0 inbound ESP packets failed on authentication
    0 outbound packets processed successfully
    0 outbound packets violated process security policy
    0 outbound packets with no SA available
    0 invalid outbound packets
    0 outbound packets failed due to insufficient memory
    0 outbound packets with no route
igmp:
    17186 messages received
    0 messages received with too few bytes
    0 messages received with bad checksum
    0 membership queries received
    0 membership queries received with invalid field(s)
    0 membership reports received
    0 membership reports received with invalid field(s)
    0 membership reports received for groups to which we belong
    0 membership reports sent
arp:
    44181302 datagrams received
    2 ARP requests received
    2028 ARP replies received
    3156 resolution requests received
    0 unrestricted proxy requests
    0 received proxy requests
    0 proxy requests not proxied
    0 with bogus interface
    787 with incorrect length
    712 for non-IP protocol
    0 with unsupported op code
    0 with bad protocol address length
    0 with bad hardware address length
    0 with multicast source address
    7611 with multicast target address
    0 with my own hardware address

```



```

14241699 for an address not on the interface
0 with a broadcast source address
0 with source address duplicate to mine
29929250 which were not for me
0 packets discarded waiting for resolution
6 packets sent after waiting for resolution
17812 ARP requests sent
2 ARP replies sent
0 requests for memory denied
0 requests dropped on entry
0 requests dropped during retry
ip6:
0 total packets received
0 with size smaller than minimum
0 with data size < data length
0 with bad options
0 with incorrect version number
0 fragments received
0 fragments dropped (dup or out of space)
0 fragments dropped after timeout
0 fragments that exceeded limit
0 packets reassembled ok
0 packets for this host
0 packets forwarded
0 packets not forwardable
0 redirects sent
0 packets sent from this host
0 packets sent with fabricated ip header
0 output packets dropped due to no bufs, etc.
0 output packets discarded due to no route
0 output datagrams fragmented
0 fragments created
0 datagrams that can't be fragmented
0 packets that violated scope rules
0 multicast packets which we don't join
Mbuf statistics:
0 packets whose headers are not continuous
0 tunneling packets that can't find gif
0 packets discarded due to too many headers
0 failures of source address selection
0 forward cache hit
0 forward cache miss
0 packets destined to dead next hop
0 option packets dropped due to rate limit
0 packets dropped (src and int don't match)
0 packets dropped due to bad protocol
icmp6:
0 calls to icmp_error
0 errors not generated because old message was icmp error or so
0 errors not generated because rate limitation
0 messages with bad code fields
0 messages < minimum length
0 bad checksums
0 messages with bad length
Histogram of error messages to be generated:
    0 no route
    0 administratively prohibited
    0 beyond scope
    0 address unreachable
    0 port unreachable

```



```

        0 packet too big
        0 time exceed transit
        0 time exceed reassembly
        0 erroneous header field
        0 unrecognized next header
        0 unrecognized option
        0 redirect
        0 unknown
    0 message responses generated
    0 messages with too many ND options
ipsec6:
    0 inbound packets processed successfully
    0 inbound packets violated process security policy
    0 inbound packets with no SA available
    0 invalid inbound packets
    0 inbound packets failed due to insufficient memory
    0 inbound packets failed getting SPI
    0 inbound packets failed on AH replay check
    0 inbound packets failed on ESP replay check
    0 inbound AH packets considered authentic
    0 inbound AH packets failed on authentication
    0 inbound ESP packets considered authentic
    0 inbound ESP packets failed on authentication
    0 outbound packets processed successfully
    0 outbound packets violated process security policy
    0 outbound packets with no SA available
    0 invalid outbound packets
    0 outbound packets failed due to insufficient memory
    0 outbound packets with no route
c1n1:
    0 total packets received
    0 packets delivered
    0 too small
    0 bad header length
    0 bad checksum
    0 bad version
    0 unknown or unsupported protocol
    0 bogus sd1 size
    0 no free memory in socket buffer
    0 send packets discarded
    0 sbappend failure
    0 mcopy failure
    0 address fields were not reasonable
    0 segment information forgotten
    0 forwarded packets
    0 total packets sent
    0 output packets discarded
    0 non-forwarded packets
    0 packets fragmented
    0 fragments sent
    0 fragments discarded
    0 fragments timed out
    0 fragmentation prohibited
    0 packets reconstructed
    0 packets destined to dead nexthop
    0 packets discarded due to no route
    0 Error pdu rate drops
    0 ER pdu generation failure
esis:
    0 total pkts received

```



```

0 total packets consumed by protocol
0 pdus received with bad checksum
0 pdus received with bad version number
0 pdus received with bad type field
0 short pdus received
0 bogus sdl size
0 bad header length
0 unknown or unsupported protocol
0 no free memory in socket buffer
0 send packets discarded
0 sbappend failure
0 mcopy failure
0 ISO family not configured

tnp:
146776365 unicast packets received
0 broadcast packets received
0 fragmented packets received
0 hello packets dropped
0 fragments dropped
0 fragment reassembly queue flushes
0 hello packets received
0 control packets received
49681642 rdp packets received
337175 udp packets received
96757548 tunnel packets received
0 input packets discarded with no protocol
98397591 unicast packets sent
0 broadcast packets sent
0 fragmented packets sent
0 hello packets dropped
0 fragments dropped
0 hello packets sent
0 control packets sent
49681642 rdp packets sent
337175 udp packets sent
48378774 tunnel packets sent
0 packets sent with unknown protocol

rdp:
49681642 input packets
0 discards for bad checksum
0 discards bad sequence number
0 refused connections
2031964 acks received
0 dropped due to full socket buffers
49692 retransmits
49681642 output packets
24815968 acks sent
28 connects
0 closes
22783990 keepalives received
22783990 keepalives sent

tudp:
337175 datagrams received
0 with incomplete header
0 with bad data length field
0 with bad checksum
0 dropped due to no socket
0 broadcast/multicast datagrams dropped due to no socket
0 dropped due to full socket buffers
337175 delivered

```



```

337175 datagrams output
ttp:
  398749 packets sent
  0 packets sent while unconnected
  0 packets sent while interface down
  0 packets sent couldn't get buffer
  0 packets sent couldn't find neighbor
  44696687 L2 packets received
  0 unknown L3 packets received
  3682087 IPv4 L3 packets received
  0 MPLS L3 packets received
  0 MPLS->IPv4 L3 packets received
  0 IPv4->MPLS L3 packets received
  0 VPLS L3 packets received
  0 IPv6 L3 packets received
  0 ARP L3 packets received
  0 CLNP L3 packets received
  0 TNP L3 packets received
  0 NULL L3 packets received
  0 cyclotron cycle L3 packets received
  0 cyclotron send L3 packets received
  0 packets received while unconnected
  0 packets received from unknown ifl
  0 input packets couldn't get buffer
  0 input packets with bad type
  0 input packets with discard type
  0 Input packets with too many tlvs
  0 Input packets with bad tlv header
  70633 Input packets with bad tlv type
  68877 Input packets dropped based on tlv result
  0 input packets for which rt lookup is bypassed
mpls:
  0 total mpls packets received
  0 packets forwarded
  0 packets dropped
  0 with header too small
  0 after tagging, can't fit link MTU
  0 with IPv4 explicit NULL tag
  0 with IPv4 explicit NULL cksum errors
  0 with router alert tag
  0 lsp ping packets (ttl-expired/router alert)
  0 with ttl expired
  0 with tag encoding error
  0 packets discarded, no route
jsr:
  Handle-inf:o
    0 Handles in use
    0 Handles allocated so far
    0 Handles freed so far
    0 Handles in delayed free state
  IHA:
    0 IHA invalid subtype messages
    0 IHA invalid length messages
    0 IHA invalid version messages
    0 IHA too short messages
    0 IHA invalid dst handle messages
    0 IHA invalid src handle messages
    0 IHA unmatched src handle messages
    0 IHA invalid messages for primary
    0 IHA invalid messages for secondary

```



```
0 IHA invalid messages for current state
0 IHA messages sent for subtype init
0 IHA messages rcvd for subtype init
0 IHA messages sent for subtype init
0 IHA messages rcvd for subtype init
0 IHA messages sent for subtype init
0 IHA messages rcvd for subtype init
0 IHA messages sent for subtype init
0 IHA messages rcvd for subtype init
0 IHA messages sent for subtype init
0 IHA messages rcvd for subtype init
0 IHA message timeouts
0 IHA socket unreplicate messages
SDRL:
0 SDRL socket teardowns
0 SDRL socket teardown failures
0 SDRL socket unreplicates
0 SDRL socket unreplicate failures
0 SDRL external timeouts
0 SDRL internal timeouts
0 SDRL ipc messages sent
0 SDRL ipc send failures
0 SDRL ipc messages rcvd
0 SDRL ipc messages rcvd
0 SDRL primary replication messages sent
0 SDRL primary replication message send failures
0 SDRL primary ack messages received
0 SDRL primary ack message receive failures
0 SDRL primary sock replication inits
0 SDRL primary sock replication init failures
0 SDRL primary throttle remove messages
0 SDRL primary throttle remove failures
0 SDRL primary init handshake messages
0 SDRL primary init handshake failures
0 SDRL secondary replication messages received
0 SDRL secondary replication message receive failures
0 SDRL secondary replication acks sent
0 SDRL secondary replication ack send failures
0 SDRL secondary sock splits
0 SDRL secondary sock split failures
0 SDRL secondary sock merges
0 SDRL secondary sock merge failures
0 SDRL secondary sockets closed
0 SDRL secondary rcv snoop fd close failures
0 SDRL secondary snd snoop fd close failures
0 SDRL secondary init handshake messages
0 SDRL secondary init handshake failures
PRL:
0 PRL packets enqueued
0 PRL packets failed to enqueue
0 PRL packets dequeued
0 PRL packets failed to dequeue
0 PRL queue entry allocations
0 PRL queue entry frees
0 calls to layer 4 input handlers
0 failed calls to layer 4 input handlers
0 PRL queue drains
0 PRL replication timeouts
0 PRL replication messages sent
0 PRL replication message send failures
```



```

0 PRL acknowledgment messages sent
0 PRL acknowledgement message send failures
0 PRL replication messages received
0 PRL replication message receive failures
0 PRL acknowledgement messages received
0 PRL acknowledgement receive failures
0 PRL messages with bad IPC type
0 PRL messages with no handler
2 PRL global state initializations
1 PRL global state cleanups
0 PRL per-socket state creations
0 PRL per-socket state creation failures
0 PRL per-socket state cleanups
0 PRL socket closes
0 PRL socket merges
0 PRL socket unreplicates
0 PRL primary socket replication initializations
0 PRL secondary socket replication initializations
0 PRL primary socket replication activations
0 PRL secondary socket replication activations
0 packets received from peers
0 PRL packets receive operations from peer failed
0 PRL buffer pullup failures
0 new pkts dropped on secondary socket
PSRM:
0 PSRM replication timeouts
0 PSRM replication messages sent
0 PSRM replication message send failures
0 PSRM acknowledgment messages sent
0 PSRM acknowledgement message send failures
0 PSRM flow control messages sent
0 PSRM flow control message send failures
0 PSRM replication messages received
0 PSRM replication message receive failures
0 PSRM acknowledgment messages received
0 PSRM acknowledgment message receive failures
0 PSRM flow control messages received
0 PSRM flow control message receive failures
0 SRM messages with bad IPC type
0 PSRM messages with no handler
2 PSRM global state initializations
1 PSRM global state cleanups
0 PSRM per-socket state creations
0 PSRM per-socket state creation failures
0 PSRM per-socket state cleanups
0 PSRM socket closes
0 PSRM socket merges
0 PSRM socket unreplicates
0 PSRM primary socket replication initializations
0 psrm-secondary-socket-replication-initializations
0 PSRM primary socket replication activations
0 secondary socket replication activations
0 PSRM tcpcb updates
0 PSRM buffer pullup failures
73 PSRM tcp timestamp msg rcv counters
0 PSRM tcp timestamp msg rcv failures
0 PSRM tcp timestamp msg send counters
0 PSRM tcp timestamp msg send failures
TCP:
0 TCP out-of-order packets on JSR sockets

```



```
vp1s:
  0 total packets received
  0 with size smaller than minimum
  0 with incorrect version number
  0 packets for this host
  0 packets with no logical interface
  0 packets with no family
  0 packets with no route table
  0 packets with no auxiliary table
  0 packets with no corefacing entry
  0 packets with no CE-facing entry
  0 mac route learning requests
  0 mac routes learnt
  0 requests to learn an existing route
  0 learning requests while learning disabled on interface
  0 learning requests over capacity
  0 mac routes moved
  0 requests to move static route
  0 mac route aging requests
  0 mac routes aged
  0 bogus address in aging requests
  0 requests to age static route
  0 requests to re-ageout aged route
  0 requests involving multiple peer FEs
  0 aging acks from PFE
  0 aging non-acks from PFE
  0 aging requests timed out waiting on FEs
  0 aging requests over max-rate
  0 errors finding peer FEs
```



## show system storage

<b>List of Syntax</b>	<a href="#">Syntax on page 941</a> <a href="#">Syntax (EX Series Switches and MX Series Routers) on page 941</a> <a href="#">Syntax (QFX Series) on page 941</a> <a href="#">Syntax (SRX Series) on page 941</a> <a href="#">Syntax (TX Matrix Router) on page 941</a> <a href="#">Syntax (TX Matrix Plus Router and TX Matrix Plus Router with 3D SIBs) on page 941</a> <a href="#">Syntax (Junos OS Evolved) on page 942</a>
<b>Syntax</b>	<pre>show system storage &lt;detail&gt; &lt;invoke-on (all-routing-engines   other-routing-engine)&gt;</pre>
<b>Syntax (EX Series Switches and MX Series Routers)</b>	<pre>show system storage &lt;detail&gt; &lt;all-members&gt; &lt;local&gt; &lt;member <i>member-id</i>&gt; &lt;invoke-on (all-routing-engines   other-routing-engine)&gt;</pre>
<b>Syntax (QFX Series)</b>	<pre>show system storage &lt;detail&gt; &lt;infrastructure <i>name</i>&gt; &lt;interconnect-device <i>name</i>&gt; &lt;node-group <i>name</i>&gt; &lt;invoke-on (all-routing-engines   other-routing-engine)&gt;</pre>
<b>Syntax (SRX Series)</b>	<pre>show system storage &lt;detail&gt; &lt;partitions&gt; &lt;invoke-on (all-routing-engines   other-routing-engine)&gt;</pre>
<b>Syntax (TX Matrix Router)</b>	<pre>show system storage &lt;detail&gt; &lt;all-chassis   all-lcc   lcc <i>number</i>   scc&gt; &lt;invoke-on (all-routing-engines   other-routing-engine)&gt;</pre>
<b>Syntax (TX Matrix Plus Router and TX Matrix Plus Router with 3D SIBs)</b>	<pre>show system storage &lt;detail&gt; &lt;all-chassis   all-lcc   lcc <i>number</i>   sfc <i>number</i>&gt; &lt;invoke-on (all-routing-engines   other-routing-engine)&gt;</pre>



**Syntax (Junos OS Evolved)**

```
show system storage
<detail>
<node node-name>
```

**Release Information**

Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 9.0 for EX Series switches.  
**sfc** option introduced for the TX Matrix Plus router in JUNOS Release 9.6.  
Command introduced in Junos OS Release 11.1 for the QFX Series.  
Option **invoke-on (all-routing-engines | other-routing-engine)** introduced in Junos OS Release 14.1  
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
**node** option introduced in Junos OS Evolved Release 18.3R1.

**Description** Display statistics about the amount of free disk space in the router's or switch's file systems.

**Options** **none**—Display standard information about the amount of free disk space in the router's or switch's file systems.

**detail**—(Optional) Display detailed output.

**invoke-on all-routing-engines**—(Optional) Display the system storage information on all master and backup Routing Engines on a routing matrix based on the TX Matrix or TX Matrix Plus router or on a router that has dual Routing Engines.

**invoke-on other-routing-engines**—(Optional) Display the system storage information on the other Routing Engine. For example, if you issue this command on the master Routing Engine on an M320 router, the JUNOS Software displays the system storage information on the backup Routing Engine. On a routing matrix based on the TX Matrix or TX Matrix Plus router, if you issue this command on the TX Matrix or TX Matrix Plus router's master Routing Engine, the JUNOS Software displays all the system storage information on all the backup Routing Engines.

**all-chassis**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display system storage statistics for all the routers in the chassis.

**all-lcc**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system storage statistics for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display system storage statistics for all routers connected to the TX Matrix Plus router.

**all-members**—(EX4200 switches and MX Series routers only) (Optional) Display system storage statistics for all members of the Virtual Chassis configuration.

**infrastructure *name***—(QFabric systems only) (Optional) Display system storage statistics for the fabric control Routing Engines or fabric manager Routing Engines.

**interconnect-device *name***—(QFabric systems only) (Optional) Display system storage statistics for the Interconnect device.



**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display system storage statistics for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display system storage statistics for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(EX4200 switches and MX Series routers only) (Optional) Display system storage statistics for the local Virtual Chassis member.

**member *member-id***—(EX4200 switches and MX Series routers only) (Optional) Display system storage statistics for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

**node**—(Junos OS Evolved only) (Optional) Display system storage statistics for the specified node.

**node-group *name***—(QFabric systems only) (Optional) Display system storage statistics for the Node group.

**scc**—(TX Matrix routers only) (Optional) Display system storage statistics for the TX Matrix router (or switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) Display system storage statistics for the TX Matrix Plus router. Replace *number* with 0.

**Additional Information** By default, when you issue the **show system storage** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

**Required Privilege Level** view

**Related Documentation** • [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)



**List of Sample Output** [show system storage on page 944](#)  
[show system storage node on page 945](#)  
[show system storage node detail on page 945](#)

**Output Fields** Table 46 on page 944 describes the output fields for the **show system storage** command. Output fields are listed in the approximate order in which they appear.

*Table 46: show system storage Output Fields*

Field Name	Field Description	Level of Detail
<b>Filesystem</b>	Name of the filesystem.	all
<b>Size</b>	Size of the filesystem. Size is reported in human readable form (GB or MB, etc.).	standard output
1024-blocks	Size of the filesystem. Size is reported in bytes.	<b>detail</b>
<b>Used</b>	Amount of space used in the filesystem.	all (see note)
<b>Avail</b>	Amount of space available in the filesystem.	all (see note)
<b>Capacity</b>	Percentage of the filesystem space that is being used.	all
<b>Mounted on</b>	Directory in which the filesystem is mounted.	all
<b>NOTE:</b> In detailed output, the output is in bytes, whereas in regular output, the size is in human-readable form (like GB or MB, etc.).		

## Sample Output

### show system storage

```
user@host> show system storage
```

Filesystem	Size	Used	Avail	Capacity	Mounted on
/dev/ad0s1a	77M	37M	34M	52%	/
devfs	16K	16K	0B	100%	/dev/
/dev/vn0	12M	12M	0B	100%	/packages/mnt/jbase
/dev/vn1	39M	39M	0B	100%	
/packages/mnt/jkernel-7.2R1.7					
/dev/vn2	12M	12M	0B	100%	
/packages/mnt/jpfe-M40-7.2R1.7					
/dev/vn3	2.3M	2.3M	0B	100%	
/packages/mnt/jdocs-7.2R1.7					
/dev/vn4	14M	14M	0B	100%	
/packages/mnt/jroute-7.2R1.7					
/dev/vn5	4.5M	4.5M	0B	100%	
/packages/mnt/jcrypto-7.2R1.7					
mfs:172	1.5G	4.0K	1.3G	0%	/tmp
/dev/ad0s1e	12M	20K	11M	0%	/config
procfs	4.0K	4.0K	0B	100%	/proc
/dev/ad1s1f	9.4G	4.9G	3.7G	57%	/var



## show system storage node

```
user@host> show system storage node re1
```

Filesystem	Size	Used	Avail	Capacity	Mounted on
/dev/root	44M	44M	0	100%	/pivot
devtmpfs	7.8G	0	7.8G	0%	/dev
/dev/sda2	16G	4.9G	11G	33%	/soft
/dev/sda5	3.0G	122M	2.7G	5%	/etc
/dev/sda6	1000M	1.3M	932M	1%	/config
/dev/sda7	16G	9.4G	5.4G	64%	/var
/dev/sda1	189M	5.3M	170M	4%	/boot
/dev/loop0	1.8G	1.8G	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/ccd-ptx-re64					
/dev/loop1	14M	14M	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/perl-5.20.0					
/dev/loop2	94M	94M	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/java					
/dev/loop3	2.4M	2.4M	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/modules					
/dev/loop4	9.4M	9.4M	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/zookeeper					
/dev/loop5	57M	57M	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/python-2.7					
/dev/loop6	14M	14M	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/python-3.3					
/dev/loop7	191M	191M	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/dev					
/dev/loop8	3.8M	3.8M	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/jimbase					
/dev/loop9	103M	103M	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/osbase					
/dev/loop10	44M	44M	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/initrd					
unionfs	5.2G	2.4G	2.7G	48%	/
/tmp	7.8G	4.0K	7.8G	1%	/tmp
run	7.8G	7.1M	7.8G	1%	/run
tmpfs	7.8G	1.2G	6.7G	15%	/dev/shm
tmpfs	7.8G	0	7.8G	0%	/sys/fs/cgroup
tmpfs	1.6G	0	1.6G	0%	/run/user/0

## show system storage node detail

```
user@host> show system storage node re1 detail
```

Filesystem	1024-blocks	Used	Avail	Capacity	Mounted on
/dev/root	44376	44376	0	100%	/pivot
devtmpfs	8103560	0	8103560	0%	/dev
/dev/sda2	16513960	5057236	10601480	33%	/soft
/dev/sda5	3055376	124232	2757476	5%	/etc
/dev/sda6	1023892	1308	953772	1%	/config
/dev/sda7	16310696	9809324	5656368	64%	/var
/dev/sda1	193242	5418	173561	4%	/boot
/dev/loop0	1816864	1816864	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/ccd-ptx-re64					
/dev/loop1	13432	13432	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/perl-5.20.0					
/dev/loop2	95344	95344	0	100%	
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/java					
/dev/loop3	2384	2384	0	100%	



```

/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/modules
/dev/loop4          9528      9528      0      100%
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/zookeeper
/dev/loop5          57816     57816      0      100%
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/python-2.7
/dev/loop6          13320     13320      0      100%
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/python-3.3
/dev/loop7          195024    195024      0      100%
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/dev
/dev/loop8           3872      3872      0      100%
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/jimbase
/dev/loop9          105272    105272      0      100%
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/osbase
/dev/loop10          44376     44376      0      100%
/pivot/data/junos-install-qfx-x86-64-16.2I20170508115447_evo-builder/initrd
unionfs             5412608    2481464    2757476    48% /
/tmp                8127388      4    8127384     1% /tmp
run                 8127388    7216    8120172     1% /run
tmpfs               8127388   1190096   6937292    15% /dev/shm
tmpfs               8127388      0    8127388     0% /sys/fs/cgroup
tmpfs               1625480      0    1625480     0% /run/user/0

```



## show system uptime

- List of Syntax**
- Syntax on page 947
  - Syntax (EX Series Switches) on page 947
  - Syntax (QFX Series) on page 947
  - Syntax (TX Matrix Router) on page 947
  - Syntax (TX Matrix Plus Router) on page 947
  - Syntax (MX Series Router) on page 947
  - Syntax (Junos OS Evolved) on page 947

**Syntax** show system uptime

**Syntax (EX Series Switches)**

```
show system uptime
<all-members>
<local>
<member member-id>
```

**Syntax (QFX Series)**

```
show system uptime
<director-group name>
<infrastructure name>
<interconnect-device name>
<node-group name>
```

**Syntax (TX Matrix Router)**

```
show system uptime
<all-chassis | all-lcc | lcc number | scc>
```

**Syntax (TX Matrix Plus Router)**

```
show system uptime
<detail>
<all-chassis | all-lcc | lcc number | sfc number>
```

**Syntax (MX Series Router)**

```
show system uptime
<all-members>
<invoke-on>
<local>
<member member-id>
```

**Syntax (Junos OS Evolved)**

```
show system uptime
<node node-name>
```

**Release Information**

Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
**sfc** option introduced for the TX Matrix Plus router in JUNOS Release 9.6.  
 Command introduced in Junos OS Release 11.1 for the QFX Series.



Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
**node** option introduced in Junos OS Evolved Release 18.3R1.

**Description** Display the current time and information about how long the router or switch, router or switch software, and routing protocols have been running.



**NOTE:** Time values computed from differences in timestamps can vary due to the insertion or deletion of leap-seconds between them.

**Options** **none**—Show time since the system rebooted and processes started.

**all-chassis**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Show time since the system rebooted and processes started on all the routers in the chassis.

**all-lcc**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, show time since the system rebooted and processes started for all T640 routers (or line-card chassis) connected to the TX Matrix router. On a TX Matrix Plus router, show time since the system rebooted and processes started for all connected T1600 or T4000 LCCs.

**all-members**—(EX4200 switches and MX Series routers only) (Optional) Show time since the system rebooted and processes started on all members of the Virtual Chassis configuration.

**director-group *name***—(QFabric systems only) (Optional) Show time since the system rebooted and processes started on the Director group.

**infrastructure *name***—(QFabric systems only) (Optional) Show time since the system rebooted and processes started on the fabric control Routing Engine and fabric manager Routing Engine.

**interconnect-device *name***—(QFabric systems only) (Optional) Show time since the system rebooted and processes started on the Interconnect device.

**invoke-on**—(MX Series routers only) (Optional) Display the time since the system rebooted and processes started on the master Routing Engine, backup Routing Engine, or both, on a router with two Routing Engines.

**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, show time since the system rebooted and processes started for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, show time since the system rebooted and processes started for a specific router that is connected to the TX Matrix Plus router.



Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(EX4200 switches and MX Series routers only) (Optional) Show time since the system rebooted and processes started on the local Virtual Chassis member.

**member *member-id***—(EX4200 switches and MX Series routers only) (Optional) Show time since the system rebooted and processes started on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

**node *node-name***—(Junos OS Evolved only) (Optional) Display uptime information for the specified node. When **node** option is not used, display uptime information for entire system. From the system's point of view, the system booted time is the time when the system was assembled and is available in `/var/run/system_boot_time`.

**node-group *name***—(QFabric systems only) (Optional) Show time since the system rebooted and processes started on the Node group.

**scc**—(TX Matrix routers only) (Optional) Show time since the system rebooted and processes started for the TX Matrix router (or switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) Show time since the system rebooted and processes started for the TX Matrix Plus router. Replace *number* with 0.

**Additional Information** By default, when you issue the **show system uptime** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.

**Required Privilege Level** view

**Related Documentation** • *10-Gigabit Ethernet LAN/WAN PIC with XFP (T640 Router)*



- [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

**List of Sample Output** [show system uptime on page 950](#)  
[show system uptime node \(for Junos OS Evolved\) on page 951](#)  
[show system uptime \(QFX Series\) on page 951](#)  
[show system uptime \(Junos OS Evolved\) on page 951](#)

**Output Fields** [Table 47 on page 950](#) describes the output fields for the **show system uptime** command. Output fields are listed in the approximate order in which they appear.

*Table 47: show system uptime Output Fields*

Field Name	Field Description
System booted	(Only for Junos OS Evolved when <b>node</b> option is not used) Time system was last booted. From the system's point of view, the system booted time is the time when the system was assembled and is available in <code>/var/run/system_boot_time</code> .
System-wide users	(Only for Junos OS Evolved when <b>node</b> option is not used) Number of system-wide users.
Current time	Current system time in UTC.
Time Source	Reference time source that the system is locked to.
System booted	Date and time when the Routing Engine on the router or switch was last booted and how long it has been running.
Protocols started	Date and time when the routing protocols were last started and how long they have been running.
Last configured	Date and time when a configuration was last committed. Also shows the name of the user who issued the last <b>commit</b> command.
time and up	Current time, in the local time zone, and how long the router or switch has been operational.
users	Number of users logged in to the router or switch.
load averages	Load averages for the last 1 minute, 5 minutes, and 15 minutes.

## Sample Output

### show system uptime

```
user@host> show system uptime
Current time:      2017-10-13 19:45:47 UTC
Time Source:      NTP CLOCK
System booted:     2017-10-12 20:51:41 UTC (22:54:06 ago)
Protocols started: 2017-10-13 19:33:45 UTC (00:12:02 ago)
Last configured:   2017-10-13 19:33:45 UTC (00:12:02 ago) by abc
12:45PM up 22:54, 2 users, load averages: 0.07, 0.02, 0.01
```



### show system uptime node (for Junos OS Evolved)

```
user@host> show system uptime node re0
```

```
Current time: 2017-05-16 16:13:18 PDT
Node booted: 2017-05-10 15:45:29 PDT (6d 00:27 ago)
Last configured: 2017-05-10 15:31:46 PDT (6d 00:41 ago) by root
16:13:18 up 6 days, 27 min, 1 user, load averages: 2.69, 2.58, 2.57
```

### show system uptime (QFX Series)

```
user@switch> show system uptime
```

```
Current time: 2017-08-27 03:12:30 PDT
Time Source: NTP CLOCK
System booted: 2017-08-13 17:11:54 PDT (1w6d 10:00 ago)
Protocols started: 2017-08-13 17:13:56 PDT (1w6d 09:58 ago)
Last configured: 2017-08-26 05:54:00 PDT (21:18:30 ago) by user
3:12AM up 13 days, 10:01, 3 users, load averages: 0.00, 0.00, 0.00
```

### show system uptime (Junos OS Evolved)

```
user@router> show system uptime
```

```
System booted: 2019-02-20 19:17:52 PST (02:20:33 ago)
System-wide users: 7 users
```

Starting in Junos OS Evolved 19.1R1 release, the **show system uptime** output displays only the **System booted** and **System-wide users** information. The output does not display the details such as **Current time**, **System booted**, **Protocols started**, and **Last configured parameters**.



## show system virtual-memory

<b>List of Syntax</b>	<a href="#">Syntax on page 952</a> <a href="#">Syntax (EX Series) on page 952</a> <a href="#">Syntax (TX Matrix Router) on page 952</a> <a href="#">Syntax (TX Matrix Plus Router) on page 952</a> <a href="#">Syntax (MX Series Router) on page 952</a> <a href="#">Syntax (QFX Series) on page 952</a> <a href="#">Syntax (Junos OS Evolved) on page 952</a>
<b>Syntax</b>	show system virtual-memory
<b>Syntax (EX Series)</b>	show system virtual-memory <all-members> <local> <member <i>member-id</i> >
<b>Syntax (TX Matrix Router)</b>	show system virtual-memory <all-chassis   all-lcc   lcc <i>number</i>   scc>
<b>Syntax (TX Matrix Plus Router)</b>	show system virtual-memory <all-chassis   all-lcc   lcc <i>number</i>   sfc <i>number</i> >
<b>Syntax (MX Series Router)</b>	show system virtual-memory <all-members> <local> <member <i>member-id</i> >
<b>Syntax (QFX Series)</b>	show system virtual-memory <infrastructure <i>name</i> > <interconnect-device <i>name</i> > <node-group <i>name</i> >
<b>Syntax (Junos OS Evolved)</b>	show system virtual-memory <node <i>node-name</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. <b>sfc</b> option introduced for the TX Matrix Plus router in Junos OS Release 9.6. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series. <b>node</b> option introduced in Junos OS Evolved Release 18.3R1.



**Description** Display the usage of Junos OS kernel memory listed first by size of allocation and then by type of usage. Use the **show system virtual-memory** command for troubleshooting with Juniper Networks Customer Support.

**Options** **none**—Display kernel dynamic memory usage information.

**all-chassis**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) Display kernel dynamic memory usage information for all chassis.

**all-lcc**—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display kernel dynamic memory usage information for all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display kernel dynamic memory usage information for all connected T1600 or T4000 LCCs.

**all-members**—(EX4200 switches and MX Series routers only) (Optional) Display kernel dynamic memory usage information for all members of the Virtual Chassis configuration.

**infrastructure *name***—(QFabric systems only) (Optional) Display kernel dynamic memory usage information for the fabric control Routing Engine and fabric manager Routing Engine.

**interconnect-device *name***—(QFabric systems only) (Optional) Display kernel dynamic memory usage information for the Interconnect device.

**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display kernel dynamic memory usage information for a specific T640 router that is connected to the TX Matrix router. On a TX Matrix Plus router, display kernel dynamic memory usage information for a specific router that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**local**—(EX4200 switches and MX Series routers only) (Optional) Display kernel dynamic memory usage information for the local Virtual Chassis member.

**member *member-id***—(EX4200 switches and MX Series routers only) (Optional) Display kernel dynamic memory usage information for the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from



0 through 9. For an MX Series Virtual Chassis, replace **member-id** with a value of 0 or 1.

**node *node-name***—(Junos OS Evolved only) (Optional) Display the kernel memory information for the specified node. If no node is specified, information is displayed for all nodes.

**node-group *name***—(QFabric systems only) (Optional) Display kernel dynamic memory usage information for the Node group.

**scc**—(TX Matrix routers only) (Optional) Display kernel dynamic memory usage information for the TX Matrix router (or switch-card chassis).

**sfc *number***—(TX Matrix Plus routers only) (Optional) Display kernel dynamic memory usage information for the TX Matrix Plus router. Replace **number** with 0.

**Additional Information** By default, when you issue the **show system virtual-memory** command on the master Routing Engine of a TX Matrix router or a TX Matrix Plus router, the command is broadcast to all the master Routing Engines of the LCCs connected to it in the routing matrix. Likewise, if you issue the same command on the backup Routing Engine of a TX Matrix or a TX Matrix Plus router, the command is broadcast to all backup Routing Engines of the LCCs that are connected to it in the routing matrix.



**NOTE:** The **show system virtual-memory** command with the **| display XML** pipe option now displays XML output for the command in the parent tags: **<vmstat-memstat-malloc>**, **<vmstat-memstat-zone>**, **<vmstat-sumstat>**, **<vmstat-intr>**, and **<vmstat-kernel-state>** with each child element as a separate XML tag. In Junos OS Releases 10.1 and earlier, the **| display XML** option for this command does not have an XML API element and the entire output is displayed in a single **<output>** tag element.

**Required Privilege Level** view

**Related Documentation** • [Routing Matrix with a TX Matrix Plus Router Solutions Page](#)

**List of Sample Output** [show system virtual-memory on page 956](#)  
[show system virtual-memory \(Junos OS Evolved without node specified\) on page 960](#)  
[show system virtual-memory scc \(TX Matrix Router\) on page 970](#)  
[show system virtual-memory sfc \(TX Matrix Plus Router\) on page 970](#)  
[show system virtual-memory | display xml on page 974](#)  
[show system virtual-memory \(QFX Series\) on page 997](#)

**Output Fields** [Table 48 on page 955](#) lists the output fields for the **show system virtual-memory** command. Output fields are listed in the approximate order in which they appear.



Table 48: show system virtual-memory Output Fields

Field Name	Field Description
<b>Memory statistics by bucket size</b>	
<b>Size</b>	Memory block size (bytes). The kernel memory allocator appropriates blocks of memory whose size is exactly a power of 2.
<b>In Use</b>	Number of memory blocks of this size that are in use (bytes).
<b>Free</b>	Number of memory blocks of this size that are free (bytes).
<b>Requests</b>	Number of memory allocation requests made.
<b>HighWater</b>	Maximum value the free list can have. Once the system starts reclaiming physical memory, it continues until the free list is increased to this value.
<b>Couldfree</b>	Total number of times that the free elements for a bucket size exceed the high-water mark for that bucket size.
<b>Memory usage type by bucket size</b>	
<b>Size</b>	Memory block size (bytes).
<b>Type(s)</b>	Kernel modules that are using these memory blocks. For a definition of each type, refer to a FreeBSD book.
<b>Memory statistics by type</b>	
<b>Type</b>	Kernel module that is using dynamic memory.
<b>InUse</b>	Number of memory blocks used by this type. The number is rounded up.
<b>MemUse</b>	Amount of memory in use, in kilobytes (KB).
<b>HighUse</b>	Maximum memory ever used by this type.
<b>Limit</b>	Maximum memory that can be allocated to this type.
<b>Requests</b>	Total number of dynamic memory allocation requests this type has made.
<b>Type Limit</b>	Number of times requests were blocked for reaching the maximum limit.
<b>Kern Limit</b>	Number of times requests were blocked for the kernel map.
<b>Size(s)</b>	Memory block sizes this type is using.
<b>Memory Totals</b>	
<b>In Use</b>	Total kernel dynamic memory in use (bytes, rounded up).
<b>Free</b>	Total kernel dynamic memory free (bytes, rounded up).



Table 48: show system virtual-memory Output Fields (continued)

Field Name	Field Description
<b>Requests</b>	Total number of memory allocation requests.
<b>ITEM</b>	Kernel module that is using memory.
<b>Size</b>	Memory block size (bytes).
<b>Limit</b>	Maximum memory that can be allocated to this type.
<b>Used</b>	Number of memory blocks used by this type. The number is rounded up.
<b>Free</b>	Number of memory blocks available to this type.
<b>Requests</b>	Total number of memory allocation requests this type has made.
<b>interrupt</b>	Timer events and scheduling interruptions.
<b>total</b>	Total number of interruptions for each type.
<b>rate</b>	Interruption rate.
<b>Total</b>	Total for all interruptions.

## Sample Output

### show system virtual-memory

```
user@host> show system virtual-memory
```

#### Memory statistics by bucket size

Size	In Use	Free	Requests	HighWater	Couldfree
16	906	118	154876	1280	0
32	455	313	209956	640	0
64	4412	260	75380	320	20
128	3200	32	19361	160	81
256	1510	10	8844	80	4
512	446	2	5085	40	0
1K	18	2	5901	20	0
2K	1128	2	4445	10	1368
4K	185	1	456	5	0
8K	5	1	2653	5	0
16K	181	0	233	5	0
32K	2	0	1848	5	0
64K	20	0	22	5	0
128K	5	0	5	5	0
256K	2	0	2	5	0
512K	1	0	1	5	0

#### Memory usage type by bucket size

Size	Type(s)
16	uc_devlist, nexusdev, iftable, temp, devbuf, atexit, COS, BPF, DEVFS mount, DEVFS node, vnodes, mount, pcb, soname, proc-args, kld,



```

MD disk, rman, ATA generic, bus, sysctl, ippool, pfestat, ifstate,
pfe_ipc, mkey, rtable, ifmaddr, ipfw, rnode
32 atkbddev, dirrem, mkdir, diradd, freefile, freefrag, indirdep,
bmsafemap, newblk, temp, devbuf, COS, vnodes, cluster_save buffer,
pcb, soname, proc-args, sigio, kld, Gzip trees, taskqueue, SWAP,
eventhandler, bus, sysctl, uidinfo, subproc, pgrp, pfestat, itable32,
ifstate, pfe_ipc, mkey, rtable, ifmaddr, ipfw, rnode, rtnextthop
64 isadev, iftable, MFS node, allocindir, allocdirect, pagedep, temp,
devbuf, lockf, COS, NULLFS hash, DEVFS name, vnodes,
cluster_save buffer, vfscache, pcb, soname, proc-args, file,
AR driver, AD driver, Gzip trees, rman, eventhandler, bus, sysctl,
subproc, pfestat, pic, ifstate, pfe_ipc, mkey, ifaddr, rtable, ipfw
128 ZONE, freeblks, inodedep, temp, devbuf, zombie, COS, DEVFS node,
vnodes, mount, vfscache, pcb, soname, proc-args, ttys, dev_t,
timecounter, kld, Gzip trees, ISOFS node, bus, uidinfo, cred,
session, pic, itable16, ifstate, pfe_ipc, rtable, ifstat, metrics,
rtnextthop, iffamilly
256 iflogical, iftable, MFS node, FFS node, newblk, temp, devbuf,
NFS daemon, vnodes, proc-args, kqueue, file desc, Gzip trees, bus,
subproc, itable16, ifstate, pfe_ipc, sysctl, rtnextthop
512 UFS mount, temp, devbuf, mount, BIO buffer, ptys, ttys, AR driver,
Gzip trees, ISOFS mount, msg, ioctlops, ATA generic, bus, proc,
pfestat, lr, ifstate, pfe_ipc, rtable, ipfw, ifstat, rtnextthop
1K iftable, temp, devbuf, NQNFS Lease, kqueue, kld, AD driver,
Gzip trees, sem, MD disk, bus, ifstate, pfe_ipc, ipfw
2K uc_devlist, UFS mount, temp, devbuf, BIO buffer, pcb, AR driver,
Gzip trees, ioctlops, bus, ipfw, ifstat, rcache
4K memdesc, iftable, UFS mount, temp, devbuf, kld, Gzip trees, sem, msg
8K temp, devbuf, syncache, Gzip trees
16K indirdep, temp, devbuf, shm, msg
32K pagedep, kld, Gzip trees
64K VM pgdata, devbuf, MSDOSFS mount
128K UFS ihash, inodedep, NFS hash, kld, ISOFS mount
256K mbuf, vfscache
512K SWAP

```

Memory statistics by type					Type	Kern	
Type	InUse	MemUse	HighUse	Limit	Requests	Limit	Size(s)
isadev	13	1K	1K127753K	13	0	0	64
atkbddev	2	1K	1K127753K	2	0	0	32
uc_devlist	24	3K	3K127753K	24	0	0	16,2K
nexusdev	3	1K	1K127753K	3	0	0	16
memdesc	1	4K	4K127753K	1	0	0	4K
mbuf	1	152K	152K127753K	1	0	0	256K
iflogical	6	2K	2K127753K	6	0	0	256
iftable	17	9K	9K127753K	18	0	0	16,64,256,1K,4K
ZONE	15	2K	2K127753K	15	0	0	128
VM pgdata	1	64K	64K127753K	1	0	0	64K
UFS mount	12	26K	26K127753K	12	0	0	512,2K,4K
UFS ihash	1	128K	128K127753K	1	0	0	128K
MFS node	6	2K	3K127753K	35	0	0	64,256
FFS node	906	227K	227K127753K	1352	0	0	256
dirrem	0	0K	4K127753K	500	0	0	32
mkdir	0	0K	1K127753K	38	0	0	32
diradd	0	0K	6K127753K	521	0	0	32
freefile	0	0K	4K127753K	374	0	0	32
freeblks	0	0K	8K127753K	219	0	0	128
freefrag	0	0K	1K127753K	193	0	0	32
allocindir	0	0K	25K127753K	1518	0	0	64
indirdep	0	0K	17K127753K	76	0	0	32,16K



allocdirect	0	0K	10K127753K	760	0	0	64
bmsafemap	0	0K	1K127753K	72	0	0	32
newblk	1	1K	1K127753K	2279	0	0	32,256
inodedep	1	128K	175K127753K	2367	0	0	128,128K
pagedep	1	32K	33K127753K	47	0	0	64,32K
temp	1239	92K	96K127753K	8364	0	0	16,32,64K
devbuf	1413	5527K	5527K127753K	1535	0	0	16,32,64,128,256
lockf	38	3K	3K127753K	2906	0	0	64
atexit	1	1K	1K127753K	1	0	0	16
zombie	0	0K	2K127753K	3850	0	0	128
NFS hash	1	128K	128K127753K	1	0	0	128K
NQNFS Lease	1	1K	1K127753K	1	0	0	1K
NFS daemon	1	1K	1K127753K	1	0	0	256
syncache	1	8K	8K127753K	1	0	0	8K
COS	353	44K	44K127753K	353	0	0	16,32,64,128
BPF	189	3K	3K127753K	189	0	0	16
MSDOSFS mount	1	64K	64K127753K	1	0	0	64K
NULLFS hash	1	1K	1K127753K	1	0	0	64
DEVFS mount	2	1K	1K127753K	2	0	0	16
DEVFS name	487	31K	31K127753K	487	0	0	64
DEVFS node	471	58K	58K127753K	479	0	0	16,128
vnodes	28	7K	7K127753K	429	0	0	16,32,64,128,256
mount	15	8K	8K127753K	18	0	0	16,128,512
cluster_save buffer	0	0K	1K127753K	55	0	0	32,64
vfscache	1898	376K	376K127753K	3228	0	0	64,128,256K
BIO buffer	49	98K	398K127753K	495	0	0	512,2K
pcb	159	16K	17K127753K	399	0	0	16,32,64,128,2K
soname	82	10K	10K127753K	42847	0	0	16,32,64,128
proc-args	57	2K	3K127753K	2105	0	0	16,32,64,128,256
ptys	32	16K	16K127753K	32	0	0	512
ttys	254	33K	33K127753K	522	0	0	128,512
kqueue	5	3K	4K127753K	23	0	0	256,1K
sigio	1	1K	1K127753K	27	0	0	32
file	383	24K	24K127753K	16060	0	0	64
file desc	76	19K	20K127753K	3968	0	0	256
shm	1	12K	12K127753K	1	0	0	16K
dev_t	286	36K	36K127753K	286	0	0	128
timecounter	10	2K	2K127753K	10	0	0	128
kld	11	117K	122K127753K	34	0	0	16,32,128,1K,4K
AR driver	1	1K	3K127753K	5	0	0	64,512,2K
AD driver	2	2K	3K127753K	2755	0	0	64,1K
Gzip trees	0	0K	46K127753K	133848	0	0	32,64,128,256
ISOFS node	1136	142K	142K127753K	1189	0	0	128
ISOFS mount	9	132K	132K127753K	10	0	0	512,128K
sem	3	6K	6K127753K	3	0	0	1K,4K
MD disk	2	2K	2K127753K	2	0	0	16,1K
msg	4	25K	25K127753K	4	0	0	512,4K,16K
rman	59	4K	4K127753K	461	0	0	16,64
ioctlops	0	0K	2K127753K	992	0	0	512,2K
taskqueue	2	1K	1K127753K	2	0	0	32
SWAP	2	413K	413K127753K	2	0	0	32,512K
ATA generic	6	3K	3K127753K	6	0	0	16,512
eventhandler	17	1K	1K127753K	17	0	0	32,64
bus	340	30K	31K127753K	794	0	0	16,32,64,128,256
sysctl	0	0K	1K127753K	130262	0	0	16,32,64
uidinfo	4	1K	1K127753K	10	0	0	32,128
cred	22	3K	3K127753K	3450	0	0	128
subproc	156	10K	10K127753K	7882	0	0	32,64,256
proc	2	1K	1K127753K	2	0	0	512
session	12	2K	2K127753K	34	0	0	128



pgrp	16	1K	1K127753K	45	0	0	32
ippool	1	1K	1K127753K	1	0	0	16
pfestat	0	0K	1K127753K	47349	0	0	16,32,64,512
pic	5	1K	1K127753K	5	0	0	64,128
lr	1	1K	1K127753K	1	0	0	512
itable32	110	4K	4K127753K	110	0	0	32
itable16	161	26K	26K127753K	161	0	0	128,256
ifstate	694	159K	160K127753K	1735	0	0	16,32,64,128,1K
pfe_ipc	0	0K	1K127753K	56218	0	0	16,32,64,128,1K
mkey	250	4K	4K127753K	824	0	0	16,32,64
ifaddr	9	1K	1K127753K	9	0	0	64
sysctl	0	0K	1K127753K	30	0	0	256
rtable	49	6K	6K127753K	307	0	0	16,32,64,128,512
ifmaddr	22	1K	1K127753K	22	0	0	16,32
ipfw	23	10K	10K127753K	48	0	0	16,32,64,512,2K
ifstat	698	805K	805K127753K	698	0	0	128,512,2K
rcache	4	8K	8K127753K	4	0	0	2K
rnode	27	1K	1K127753K	285	0	0	16,32
metrics	1	1K	1K127753K	3	0	0	128
rtnexthop	57	9K	9K127753K	312	0	0	32,128,256,512
iffamily	12	2K	2K127753K	12	0	0	128
Memory Totals:	In Use	Free	Requests				
	9311K	54K	489068				
ITEM	SIZE	LIMIT	USED	FREE	REQUESTS		
PIPE:	192,	0,	4,	81,	4422		
SWAPMETA:	160,	95814,	0,	0,	0		
unpcb:	160,	0,	114,	36,	279		
ripcb:	192,	25330,	5,	37,	5		
syncache:	128,	15359,	0,	64,	5		
tcpcb:	576,	25330,	23,	12,	32		
udpcb:	192,	25330,	14,	28,	255		
socket:	256,	25330,	246,	26,	819		
KNOTE:	96,	0,	27,	57,	71		
NFSNODE:	352,	0,	0,	0,	0		
NFSMOUNT:	544,	0,	0,	0,	0		
VNODE:	224,	0,	2778,	43,	2778		
NAMEI:	1024,	0,	0,	8,	40725		
VMSPACE:	192,	0,	57,	71,	3906		
PROC:	448,	0,	73,	17,	3923		
DP fakepg:	64,	0,	0,	0,	0		
PV ENTRY:	28,	499566,	44530,	152053,	1525141		
MAP ENTRY:	48,	0,	1439,	134,	351075		
KMAP ENTRY:	48,	35645,	179,	119,	10904		
MAP:	108,	0,	7,	3,	7		
VM OBJECT:	92,	0,	2575,	109,	66912		
792644 cpu context switches							
9863474 device interrupts							
286510 software interrupts							
390851 traps							
3596829 system calls							
16 kernel threads created							
3880 fork() calls							
27 vfork() calls							
0 rfork() calls							
0 swap pager pageins							
0 swap pager pages paged in							
0 swap pager pageouts							



```

    0 swap pager pages paged out
    380 vnode pager pageins
    395 vnode pager pages paged in
    122 vnode pager pageouts
    1476 vnode pager pages paged out
    0 page daemon wakeups
    0 pages examined by the page daemon
    101 pages reactivated
    161722 copy-on-write faults
    0 copy-on-write optimized faults
    84623 zero fill pages zeroed
    83063 zero fill pages prezeroed
    7 intransit blocking page faults
    535606 total VM faults taken
    0 pages affected by kernel thread creation
    238254 pages affected by fork()
    2535 pages affected by vfork()
    0 pages affected by rfork()
    283379 pages freed
    0 pages freed by daemon
    190091 pages freed by exiting processes
    17458 pages active
    29166 pages inactive
    0 pages in VM cache
    10395 pages wired down
    134610 pages free
    4096 bytes per page
    183419 total name lookups
        cache hits (90% pos + 7% neg) system 0% per-directory
        deletions 0%, falsehits 0%, toolong 0%

interrupt          total          rate
ata0 irq14         113338           3
mux irq7           727643          21
fxp1 irq10         1178671          34
sio0 irq4           833             0
clk irq0           3439769          99
rtc irq8           4403221          127
Total              9863475          286

Kernel direct memory map:
    4423 pages used
    4057340 pages maximum

```

*Note:* Kernel direct memory map only displays for the 64-bit platform.

#### show system virtual-memory (Junos OS Evolved without node specified)

```
user@host> show system virtual-memory
```

```
-----
node: re0
-----
```

```

MemTotal:      65279088 kB
MemFree:       48808876 kB
MemAvailable:  51433640 kB
Buffers:       282100 kB
Cached:        2904576 kB
SwapCached:    0 kB

```



```

Active:      11247396 kB
Inactive:    2003420 kB
Active(anon): 10069532 kB
Inactive(anon): 198920 kB
Active(file): 1177864 kB
Inactive(file): 1804500 kB
Unevictable: 432 kB
Mlocked:     432 kB
SwapTotal:   4194300 kB
SwapFree:    4194300 kB
Dirty:       6920 kB
Writeback:    0 kB
AnonPages:   8907208 kB
Mapped:      904096 kB
Shmem:       203960 kB
Slab:        1617436 kB
SReclaimable: 371936 kB
SUnreclaim:  1245500 kB
KernelStack: 25088 kB
PageTables:  104088 kB
NFS_Unstable: 0 kB
Bounce:      0 kB
WritebackTmp: 0 kB
CommitLimit: 36833844 kB
Committed_AS: 37399048 kB
VmallocTotal: 34359738367 kB
VmallocUsed: 0 kB
VmallocChunk: 0 kB
HardwareCorrupted: 0 kB
AnonHugePages: 6772736 kB
ShmemHugePages: 0 kB
ShmemPmdMapped: 0 kB
CmaTotal: 0 kB
CmaFree: 0 kB
HugePages_Total: 0
HugePages_Free: 0
HugePages_Rsvd: 0
HugePages_Surp: 0
Hugepagesize: 2048 kB
DirectMap4k: 17280 kB
DirectMap2M: 1679360 kB
DirectMap1G: 67108864 kB

```

	CPU0	CPU1	CPU2	CPU3	CPU4	CPU5	CP
U6							
CPU13		CPU7	CPU8	CPU9	CPU10	CPU11	CPU12
		CPU14	CPU15	CPU16	CPU17	CPU18	CPU19
CPU20		CPU21	CPU22	CPU23			
0:	201	0	0	0	0	0	0
	0	0	0	0	0	0	0
	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0
timer		0	0	0	0	IR-I0-APIC	2-edge
4:	19033	0	0	0	0	0	0
	0	0	0	0	0	0	0



0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
serial			0	0	0	0	IR-I/O-APIC	4-edge
8:	1	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
rtc0			0	0	0	0	IR-I/O-APIC	8-edge
9:	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
acpi			0	0	0	0	IR-I/O-APIC	9-fasteoi
16:	29	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
ehci_hcd:usb1			0	0	0	0	IR-I/O-APIC	16-fasteoi
23:	33	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
ehci_hcd:usb2			0	0	0	0	IR-I/O-APIC	23-fasteoi
25:	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
aerdrv, PCIe PME, pcie			0	0	0	0	IR-PCI-MSI	16384-edge
26:	0	0	hp	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
aerdrv, PCIe PME, pcie			0	0	0	0	IR-PCI-MSI	18432-edge
28:	0	0	hp	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0



```

0      0
aerdrv, PCIe PME, pcie      0      0      0 IR-PCI-MSI 32768-edge
      hp
29:      2      0      0      0      0      0
      0      0      0      0      0      0
      0      0      0      0      0      0
0      0
aerdrv, PCIe PME, pcie      0      0      0 IR-PCI-MSI 36864-edge
      hp
31:      2      0      0      0      0      0
      0      0      0      0      0      0
      0      0      0      0      0      0
0      0
aerdrv, PCIe PME, pcie      0      0      0 IR-PCI-MSI 49152-edge
      hp
32:      2      0      0      0      0      0
      0      0      0      0      0      0
      0      0      0      0      0      0
0      0
aerdrv, PCIe PME, pcie      0      0      0 IR-PCI-MSI 51200-edge
      hp
33:      0      0      0      0      0      0
      0      0      0      0      0      0
      0      0      0      0      0      0
0      0
aerdrv, PCIe PME, pcie      0      0      0 IR-PCI-MSI 53248-edge
      hp
34:      0      0      0      0      0      0
      0      0      0      0      0      0
      0      0      0      0      0      0
0      0
aerdrv, PCIe PME, pcie      0      0      0 IR-PCI-MSI 55296-edge
      hp
35:      0      0      0      0      0      0
      0      0      0      0      0      0
      0      0      0      0      0      0
0      0
      PCIe PME
36:      0      0      0      0      0      0
      0      0      0      0      0      0

```















```

    0      0      0 irq-supercon 90 cb0
69:      0      0      0      0      0      0      1      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0
70:      0      0      0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0
71:      0      0      0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0
72:      0      0      0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0
---(backing up)---
26:      0      0      0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0
28:      0      0      0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0
29:      2      0      0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0
31:      2      0      0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0
32:      2      0      0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0
33:      0      0      0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0
34:      0      0      0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0
35:      0      0      0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0
36:      0      0      0      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0      0      0
    0      0      0      0      0      0      0      0      0      0      0      0

```



37:	0	0	0	0	IR-PCI-MSI 462848-edge	PCIe PME, pciehp	0	0	0
0	0	0	0	0	0	0	0	0	0
38:	0	0	0	0	IR-PCI-MSI 464896-edge	PCIe PME, pciehp	0	0	0
0	0	0	0	0	0	0	0	0	0
40:	0	2	0	0	IR-PCI-MSI 466944-edge	PCIe PME, pciehp	0	0	0
0	0	0	0	0	0	0	0	0	0
41:	0	0	0	0	IR-PCI-MSI 3670016-edge	supercon-core	0	0	0
0	0	0	0	0	0	2	0	0	0
42:	0	318320	0	0	supercon-core irq-supercon.7	0	0	0	0
0	0	0	0	0	0	0	0	0	0
43:	0	1	0	0	IR-PCI-MSI 512000-edge	ahci [0000:00:1f.2]	0	0	0
0	0	0	0	0	0	0	0	0	0
44:	0	33426	0	0	IR-PCI-MSI 5242880-edge	eth0	0	0	0
0	0	0	0	0	0	0	0	0	0
45:	0	22440	0	0	IR-PCI-MSI 5242881-edge	eth0-TxRx-0	0	0	0
0	0	0	0	0	0	0	0	0	0
46:	0	33406	0	0	IR-PCI-MSI 5242882-edge	eth0-TxRx-1	0	0	0
0	0	0	0	0	0	0	0	0	0
47:	0	39499	0	0	IR-PCI-MSI 5242883-edge	eth0-TxRx-2	0	0	0
0	0	0	0	0	0	0	0	0	0
48:	0	0	0	0	IR-PCI-MSI 5242884-edge	eth0-TxRx-3	0	0	0
0	0	0	0	0	0	0	0	0	0
49:	0	42167	0	0	DMAR-MSI 0-edge	dmar0	0	0	0
0	0	0	0	0	0	0	0	0	0
50:	0	12584	0	0	IR-PCI-MSI 5767168-edge	eth1	0	0	0
0	0	0	0	0	0	0	0	0	0
51:	0	12584	0	0	IR-PCI-MSI 5767169-edge	eth1-TxRx-0	0	0	0
0	0	0	0	0	0	0	0	0	0
52:	0	12584	0	0	IR-PCI-MSI 5767170-edge	eth1-TxRx-1	0	0	0
0	0	0	0	0	0	0	0	0	0
	0	0	0	0	0	0	0	0	0



0	0	0	0	IR-PCI-MSI	5767171-edge	eth1-TxRx-2
53:	12584	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
54:	0	0	0	IR-PCI-MSI	5767172-edge	eth1-TxRx-3
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
55:	0	0	0	IR-PCI-MSI	327680-edge	xhci_hcd
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
56:	0	0	0	irq-supercon	34 cb0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
57:	0	0	0	irq-supercon	88 cb0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
58:	0	0	0	irq-supercon	20 fan0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
59:	0	0	0	irq-supercon	76 fan0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
60:	0	0	0	irq-supercon	21 fan1	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
61:	0	0	0	irq-supercon	77 fan1	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
62:	0	0	0	irq-supercon	22 fan2	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
63:	0	0	0	irq-supercon	78 fan2	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
64:	0	0	0	irq-supercon	23 fan3	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
65:	0	0	0	irq-supercon	79 fan3	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
66:	0	0	0	irq-supercon	24 fan4	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0
67:	0	0	0	irq-supercon	80 fan4	0
0	0	0	0	0	1	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0



```

0      0      0      0      irq-supercon      38      cb0
68:      0      0      0      0      0      0      0      0      0
0      0      0      0      0      0      0      0      0      0
      0      0      0      0      0      0      0      0      0
69:      0      0      0      0      irq-supercon      90      cb0
0      0      0      0      0      0      1      0      0      0
      0      0      0      0      0      0      0      0      0
      0      0      0      0      0      0      0      0      0
70:      0      0      0      0      irq-supercon      32      cb0
0      0      0      0      0      0      0      0      0      0
      0      0      0      0      0      0      0      0      0
      0      0      0      0      0      0      0      0      0
71:      0      0      0      0      irq-supercon      11      psm0
0      0      0      0      0      0      0      0      0      0
      0      0      0      0      0      0      0      0      0
      0      0      0      0      0      0      0      0      0
[...Output truncated...]
0      0      0      0      irq-supercon      71      psm0

```

show system virtual-memory scc (TX Matrix Router)

```
user@host> show system virtual-memory scc
```

```
Memory statistics by bucket size
Size      In Use      Free      Requests    HighWater    Couldfree
16         898        126       749493      1280         0
32        2018       1310      980643       640        632
64        3490      13342     935420       320       5365
...

Memory usage type by bucket size
Size      Type(s)
16  uc_devlist, COS, BPF, DEVFS mount, DEVFS node, vnodes, mount, pcb,
    soname, rman, bus, sysctl, ifstate, pfe_ipc, mkey, socket, rtable,
    ifmaddr, ipfw, rnode, iftable, temp, devbuf, atexit, proc-args, kld,
    MD disk
32  atkbddev, Gzip trees, dirrem, mkdir, diradd, freefile, freefrag,
    indirdep, bmsafemap, newblk, tseg_qent, COS, vnodes,
...

Memory statistics by type
Type      InUse      MemUse      HighUse      Limit      Requests      Type      Kern
          isadev      12         1K         1K166400K      12         0         0      64
          atkbddev      2         1K         1K166400K       2         0         0      32
          uc_devlist     24         3K         3K166400K      24         0         0    16,2K
....

Memory Totals:  In Use      Free      Requests
                  6091K      1554K      2897122
```

show system virtual-memory sfc (TX Matrix Plus Router)

```
user@host> show system virtual-memory sfc 0
```

```
sfc0-re0:
-
      Type InUse MemUse HighUse Requests  Size(s)
```



```

CAM dev queue      1      1K      -      1      64
  entropy 1024      64K      -      1024      64
  linker  487      6272K     -      1163      16,32,64,4096,32768,131072
  USB     127      10K      -      127      16,32,64,128,256,1024,2048
  lockf   46      3K       -      98418     64
  USBdev  10      2K       -      34      16,128,2048,16384
ifstateSLLNode     0      0K      -      1096     16
  devbuf 21243 15683K     -      21810
16,32,64,128,256,512,1024,2048,4096,8192,16384,32768,65536,131072
  temp 1283      151K     -      2483472
16,32,64,128,256,512,2048,4096,8192,16384,32768,65536,131072
  ip6ndp  0      0K       -      4      64
  in6ifmulti 1      1K      -      1      64
  in6grentry 1      1K      -      1      64
  iflogical 20      5K      -      29      2048
  iffamilly 45      6K       -      69      32,1024,2048
  rtnexthop 266     46K      -      608013    32,256,512,1024,2048,4096
  metrics  31      4K       -      54      256
  rnode    212     4K       -      607848    16,32
  rcache   4      8K       -      4      65536
  iflist   0      0K       -      6      16,64
  ifdevice 11      8K       -      17      16,32768
  ifstat   424     472K     -      427      512,16384,65536
  ipfw     42      23K      -      145
16,32,64,128,256,512,1024,16384,32768,65536,131072
  ifmaddr  415     11K      -      415      16,32
  rtable   329     28K      -      608066    16,32,64,128,1024,16384
  sysctl   0      0K       -      887976    16,32,64,4096,16384,32768
  ifaddr   64      5K       -      70      32,64,128
  mkey     331     6K       -      12528     16,128
  pfe_ipc  0      0K       -      7299115
16,32,64,128,256,512,1024,2048,4096,8192,16384,32768,65536,131072
  ifstate 1245054 70088K   -      3040437
16,32,64,128,256,512,1024,2048,4096,8192,16384,32768
  idxbucket 1      1K       -      1      16
  itable16 5069    1250K    -      5103      1024,4096
  itable32  157     10K      -      157      64
  itable64  2      1K       -      2      128
  lr        1      1K       -      4      16384
  pic       37     6K       -      37      64,16384
  pfestat   0      0K       -      6220      32,64,128,256,131072
  gencfg    1486    424K     -      2614      16,32,64,256,512,16384,32768,65536
  jsr       2      1K       -      22      16
  idl       1      4K       -      165
32,64,128,256,512,1024,2048,8192,16384,32768,65536,131072
  rtmsg     0      0K       -      16      131072
  module    250     16K      -      250      64,128
  mtx_pool  1      8K       -      1      64,128
  DEVFS3    113     13K      -      114      256
  DEVFS1    106     24K      -      106      2048
  pgrp      15      1K       -      8600      64
  session   11      2K       -      2829      512
  proc      2      1K       -      2      16384
  subproc   296     572K     -      24689      2048,131072
  cred      38      5K       -      619244     256
  plimit    18      4K       -      21311      2048
  uidinfo   3      1K       -      10      32,512
  sysctluid 2701    82K      -      2701      16,32,64
  sysctltmp 0      0K       -      15572      16,32,64,1024
  umtx      171     11K      -      171      64

```



```

        SWAP      2    277K    -      2    64
        bus      779   125K    -     3072  16,32,64,128,32768
        bus-sc   67    62K    -      1477
16,32,64,512,1024,2048,8192,16384,65536,131072
        devstat   8    17K    -      8    16,131072
        eventhandler 46    2K    -      47    32,128
        kobj     93   186K    -     111   65536
        DEVFS     8    1K     -      9    16,64
        rman    106    7K     -     490   16,32,64
        sbuf      0     0K     -    28234  16,32,32768,131072
...
lcc0-re0:
-
      Type InUse MemUse HighUse Requests Size(s)
CAM dev queue    1    1K     -        1    64
      entropy 1024   64K     -     1024    64
      linker   487  6272K     -     1163  16,32,64,4096,32768,131072
      USB     127   10K     -      127  16,32,64,128,256,1024,2048
      lockf    23    2K     -    169585    64
      USBdev   10    2K     -      34   16,128,2048,16384
      devbuf  5128 10760K     -     5310
16,32,64,128,256,512,1024,2048,4096,8192,16384,32768,65536,131072
      temp  1285   151K     -     10770
16,32,64,128,256,512,2048,4096,8192,16384,32768,65536,131072
      ip6ndp    0     0K     -        4    64
      iflogical 20     5K     -       29   2048
      iffamilly 45     6K     -       69  32,1024,2048
      rtnexthop 189   29K     -    1211988  32,256,512,1024,2048,4096
      metrics   11    2K     -       16   256
      rnode    135    3K     -    606391  16,32
      rcache     4     8K     -        4  65536
      iflist     0     0K     -        6  16,64
      ifdevice   11     8K     -       17  16,32768
      ifstat    412  471K     -     415  512,16384,65536
      ipfw      42   23K     -       91
16,32,64,128,256,512,1024,16384,32768,65536,131072
      ifmaddr   415   11K     -     415  16,32
      rtable    225   20K     -    606584  16,32,64,128,1024,16384
      sysctl     0     0K     -    2302479  16,32,64
      ifaddr    53     4K     -       69  32,64,128
      mkey     133     3K     -     8974  16,128
      pfe_ipc    0     0K     -   19035108
16,32,64,128,512,1024,2048,8192,16384,32768,65536,131072
      ifstate  710270 42176K     -   9583703
16,32,64,128,256,512,1024,2048,8192,16384,32768
      idxbucket   1    1K     -        1    16
      itable16  5045  1245K     -   1825178  1024,4096
      itable32   157   10K     -      157    64
      itable64    2    1K     -        2   128
      lr         1    1K     -        4  16384
      pic       37     6K     -       37  64,16384
      pfestat    0     0K     -     1682  32,64,128,256,131072
      gencfg   1486  424K     -     2812  16,32,64,256,512,16384,32768,65536
      jsr        0     0K     -       22   16
      idl        0     0K     -        4  32768,131072
      rtmsg     0     0K     -        3  131072
      module   250   16K     -      250  64,128
      mtx_pool   1     8K     -        1  64,128
      DEVFS3   108   12K     -     109   256
      DEVFS1   101   23K     -     101   2048

```



pgrp	5	1K	-	917	64
session	5	1K	-	917	512
proc	2	1K	-	2	16384
subproc	217	441K	-	4867	2048,131072
cred	21	3K	-	48719	256
plimit	9	2K	-	5255	2048
uidinfo	2	1K	-	2	32,512
sysctluid	2786	85K	-	2786	16,32,64
sysctltmp	0	0K	-	1833	16,32,64,1024
umtx	126	8K	-	126	64
SWAP	2	277K	-	2	64
bus	780	125K	-	2734	16,32,64,128,32768
bus-sc	69	69K	-	1194	
16,32,64,512,1024,2048,8192,16384,65536,131072					
devstat	8	17K	-	8	16,131072
eventhandler	45	2K	-	46	32,128
kobj	93	186K	-	111	65536
DEVFS	8	1K	-	9	16,64
rman	94	6K	-	477	16,32,64
sbuf	0	0K	-	532	16,32,32768,131072
NULLFS hash	1	1K	-	1	64
taskqueue	5	1K	-	5	64
turnstiles	127	8K	-	127	64
Unitno	6	1K	-	44	16,64
ioctlops	0	0K	-	1771718	16,32,64,128,8192,16384,65536,131072
iov	0	0K	-	79425	16,64,128,256,512,1024,2048,131072
msg	4	25K	-	4	32768,131072
sem	4	7K	-	4	16384,32768,131072
shm	2	13K	-	4	32768
ttys	93	16K	-	195	512,32768
soname	31	3K	-	389284	16,32,64,256
pcb	101	16K	-	4374	
16,32,64,128,1024,2048,4096,16384,65536					
BIO buffer	40	80K	-	750	65536
vfscache	1	512K	-	1	65536
cluster_save buffer	0	0K	-	55	32,64
VFS hash	1	256K	-	1	32,64
vnodes	1	1K	-	1	512
mount	266	21K	-	481	16,32,64,128,256,4096,32768
vnodemarker	0	0K	-	2497	16384
pfs_nodes	25	3K	-	25	128
pfs_vncache	144	5K	-	386	32
STP	1	1K	-	1	64
GEOM	173	15K	-	1068	
16,32,64,128,256,512,2048,16384,32768,131072					
syncache	1	8K	-	1	
16,32,64,128,256,512,2048,16384,32768,131072					
tlv_stat	0	0K	-	223	
16,32,64,128,256,512,2048,16384,32768,131072					
NFS daemon	1	8K	-	1	
16,32,64,128,256,512,2048,16384,32768,131072					
p1003.1b	1	1K	-	1	16
MD disk	9	18K	-	9	65536
ata_generic	2	2K	-	25	16,16384,32768
ISOFS mount	7	1K	-	13	512
ISOFS node	1439	135K	-	1453	128
CAM SIM	1	1K	-	1	64
CAM XPT	6	1K	-	9	16,64,16384
CAM periph	1	1K	-	1	128



ad_driver	2	1K	-	2	256
pagedep	1	64K	-	105	64
inodedep	1	256K	-	552	256
newblk	1	1K	-	327	64,4096
bmsafemap	0	0K	-	19	64
allocdirect	0	0K	-	326	128
freefrag	0	0K	-	31	32
freeblks	0	0K	-	103	2048
freefile	0	0K	-	175	32
diradd	0	0K	-	590	64
mkdir	0	0K	-	166	32
dirrem	0	0K	-	382	32
savedino	0	0K	-	283	512
UFS mount	15	36K	-	15	2048,65536,131072
ata_dma	6	1K	-	6	256
UMAHash	1	4K	-	5	4096,16384,32768,65536,131072
cdev	26	3K	-	26	256
file desc	111	25K	-	5199	16,1024,2048,16384
VM pgdata	2	65K	-	2	64
sigio	1	1K	-	27	32
kenv	30	5K	-	33	16,32,64,131072
atkbddev	2	1K	-	2	32
kqueue	0	0K	-	88	1024,4096,32768
proc-args	28	2K	-	3970	32,64,128,256,512,1024
isadev	23	2K	-	23	64
zombie	1	1K	-	4651	128
ithread	92	7K	-	92	16,64,256
legacydrv	3	1K	-	3	16
memdesc	1	4K	-	1	131072
nexusdev	2	1K	-	2	16
CAM queue	3	1K	-	3	16
KTRACE	100	10K	-	100	128
kbdmux	5	9K	-	5	128,2048,65536,131072
ITEM	SIZE	LIMIT	USED	FREE	REQUESTS
UMA Kegs:	136,	0,	71,	1,	71
...					

### show system virtual-memory | display xml

```
user@host> show system virtual-memory | display xml
```

```
<rpc-reply xmlns:junos="http://xml.device1.example.com/junos/10.2R1/junos">
  <system-virtual-memory-information>
    <vmstat-memstat-malloc>
      <memstat-name>CAM dev queue</memstat-name>
      <inuse>1</inuse>
      <memuse>1</memuse>
      <high-use>-</high-use>
      <memstat-req>1</memstat-req>
      <memstat-size>64</memstat-size>
      <memstat-name>entropy</memstat-name>
      <inuse>1024</inuse>
      <memuse>64</memuse>
      <high-use>-</high-use>
      <memstat-req>1024</memstat-req>
      <memstat-size>64</memstat-size>
      <memstat-name>linker</memstat-name>
      <inuse>481</inuse>
      <memuse>1871</memuse>
      <high-use>-</high-use>
```



```

    <memstat-req>1145</memstat-req>
    <memstat-size>16,32,64,4096,32768,131072</memstat-size>
    <memstat-name>lockf</memstat-name>
    <inuse>56</inuse>
    <memuse>4</memuse>
    <high-use>--</high-use>
    <memstat-req>5998</memstat-req>
    <memstat-size>64</memstat-size>
    <memstat-name>devbuf</memstat-name>
    <inuse>2094</inuse>
    <memuse>3877</memuse>
    <high-use>--</high-use>
    <memstat-req>2099</memstat-req>

<memstat-size>16,32,64,128,512,1024,4096,8192,16384,32768,65536,131072</memstat-size>

    <memstat-name>temp</memstat-name>
    <inuse>21</inuse>
    <memuse>66</memuse>
    <high-use>--</high-use>
    <memstat-req>3127</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,4096,8192,16384,32768,65536,131072</memstat-size>

    <memstat-name>ip6ndp</memstat-name>
    <inuse>0</inuse>
    <memuse>0</memuse>
    <high-use>--</high-use>
    <memstat-req>4</memstat-req>
    <memstat-size>64</memstat-size>
    <memstat-name>in6ifmulti</memstat-name>
    <inuse>1</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>1</memstat-req>
    <memstat-size>64</memstat-size>
    <memstat-name>in6grenty</memstat-name>
    <inuse>1</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>1</memstat-req>
    <memstat-size>64</memstat-size>
    <memstat-name>iflogical</memstat-name>
    <inuse>13</inuse>
    <memuse>3</memuse>
    <high-use>--</high-use>
    <memstat-req>13</memstat-req>
    <memstat-size>64,2048</memstat-size>
    <memstat-name>iffamily</memstat-name>
    <inuse>28</inuse>
    <memuse>4</memuse>
    <high-use>--</high-use>
    <memstat-req>28</memstat-req>
    <memstat-size>32,1024,2048</memstat-size>
    <memstat-name>rtnexthop</memstat-name>
    <inuse>127</inuse>
    <memuse>18</memuse>
    <high-use>--</high-use>
    <memstat-req>129</memstat-req>
    <memstat-size>32,256,512,1024,2048,4096</memstat-size>

```



```

<memstat-name>metrics</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>5</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>inifmulti</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>3</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>ingrentry</memstat-name>
<inuse>6</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>6</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>rnode</memstat-name>
<inuse>68</inuse>
<memuse>2</memuse>
<high-use>-</high-use>
<memstat-req>76</memstat-req>
<memstat-size>16,32</memstat-size>
<memstat-name>rcache</memstat-name>
<inuse>4</inuse>
<memuse>8</memuse>
<high-use>-</high-use>
<memstat-req>4</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>ifdevice</memstat-name>
<inuse>4</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>ifstat</memstat-name>
<inuse>40</inuse>
<memuse>22</memuse>
<high-use>-</high-use>
<memstat-req>40</memstat-req>
<memstat-size>512,16384,32768</memstat-size>
<memstat-name>ipfw</memstat-name>
<inuse>42</inuse>
<memuse>23</memuse>
<high-use>-</high-use>
<memstat-req>91</memstat-req>
<memstat-size>16,32,64,128,256,512,1024,16384,32768,65536,131072</memstat-size>
<memstat-name>ifmaddr</memstat-name>
<inuse>103</inuse>
<memuse>3</memuse>
<high-use>-</high-use>
<memstat-req>103</memstat-req>
<memstat-size>16,32</memstat-size>
<memstat-name>rtable</memstat-name>
<inuse>129</inuse>
<memuse>14</memuse>
<high-use>-</high-use>
<memstat-req>139</memstat-req>

```



```

<memstat-size>16,32,64,128,1024,16384</memstat-size>
<memstat-name>sysctl</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>14847</memstat-req>
<memstat-size>16,32,64,4096,16384,32768</memstat-size>
<memstat-name>ifaddr</memstat-name>
<inuse>29</inuse>
<memuse>3</memuse>
<high-use>--</high-use>
<memstat-req>29</memstat-req>
<memstat-size>64,128</memstat-size>
<memstat-name>mkey</memstat-name>
<inuse>345</inuse>
<memuse>6</memuse>
<high-use>--</high-use>
<memstat-req>2527</memstat-req>
<memstat-size>16,128</memstat-size>
<memstat-name>pfe_ipc</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>1422</memstat-req>

<memstat-size>16,32,64,128,512,1024,2048,8192,16384,32768,65536,131072</memstat-size>

<memstat-name>ifstate</memstat-name>
<inuse>594</inuse>
<memuse>51</memuse>
<high-use>--</high-use>
<memstat-req>655</memstat-req>

<memstat-size>16,32,64,128,256,1024,2048,4096,16384,32768</memstat-size>
<memstat-name>itable16</memstat-name>
<inuse>276</inuse>
<memuse>52</memuse>
<high-use>--</high-use>
<memstat-req>294</memstat-req>
<memstat-size>1024,4096</memstat-size>
<memstat-name>itable32</memstat-name>
<inuse>160</inuse>
<memuse>10</memuse>
<high-use>--</high-use>
<memstat-req>160</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>itable64</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>lr</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>16384</memstat-size>
<memstat-name>pic</memstat-name>
<inuse>5</inuse>

```



```
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>5</memstat-req>
<memstat-size>64,512</memstat-size>
<memstat-name>pfestat</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>162</memstat-req>
<memstat-size>16,32,128,256,16384</memstat-size>
<memstat-name>gencfg</memstat-name>
<inuse>224</inuse>
<memuse>56</memuse>
<high-use>--</high-use>
<memstat-req>540</memstat-req>
<memstat-size>16,32,64,256,512,32768,65536</memstat-size>
<memstat-name>jsr</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>idl</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>13</memstat-req>
<memstat-size>16,32,64,128,256,4096,16384,32768,131072</memstat-size>

<memstat-name>rtsmsg</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>131072</memstat-size>
<memstat-name>module</memstat-name>
<inuse>249</inuse>
<memuse>16</memuse>
<high-use>--</high-use>
<memstat-req>249</memstat-req>
<memstat-size>64,128</memstat-size>
<memstat-name>mtx_pool</memstat-name>
<inuse>1</inuse>
<memuse>8</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64,128</memstat-size>
<memstat-name>DEVFS3</memstat-name>
<inuse>109</inuse>
<memuse>12</memuse>
<high-use>--</high-use>
<memstat-req>117</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>DEVFS1</memstat-name>
<inuse>102</inuse>
<memuse>23</memuse>
<high-use>--</high-use>
<memstat-req>109</memstat-req>
<memstat-size>2048</memstat-size>
<memstat-name>pgrp</memstat-name>
```



```

<inuse>12</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>21</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>session</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>15</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>proc</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>2</memstat-req>
<memstat-size>16384</memstat-size>
<memstat-name>subproc</memstat-name>
<inuse>244</inuse>
<memuse>496</memuse>
<high-use>-</high-use>
<memstat-req>1522</memstat-req>
<memstat-size>2048,131072</memstat-size>
<memstat-name>cred</memstat-name>
<inuse>30</inuse>
<memuse>4</memuse>
<high-use>-</high-use>
<memstat-req>11409</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>plimit</memstat-name>
<inuse>17</inuse>
<memuse>4</memuse>
<high-use>-</high-use>
<memstat-req>133</memstat-req>
<memstat-size>2048</memstat-size>
<memstat-name>uidinfo</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>6</memstat-req>
<memstat-size>32,512</memstat-size>
<memstat-name>sysctluid</memstat-name>
<inuse>1117</inuse>
<memuse>34</memuse>
<high-use>-</high-use>
<memstat-req>1117</memstat-req>
<memstat-size>16,32,64</memstat-size>
<memstat-name>sysctltmp</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>743</memstat-req>
<memstat-size>16,32,64,1024</memstat-size>
<memstat-name>umtx</memstat-name>
<inuse>144</inuse>
<memuse>9</memuse>
<high-use>-</high-use>
<memstat-req>144</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>SWAP</memstat-name>

```



```

<inuse>2</inuse>
<memuse>209</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>bus</memstat-name>
<inuse>496</inuse>
<memuse>55</memuse>
<high-use>--</high-use>
<memstat-req>1196</memstat-req>
<memstat-size>16,32,64,128,32768</memstat-size>
<memstat-name>bus-sc</memstat-name>
<inuse>23</inuse>
<memuse>33</memuse>
<high-use>--</high-use>
<memstat-req>335</memstat-req>
<memstat-size>16,32,64,512,1024,2048,8192,16384,65536,131072</memstat-size>
<memstat-name>devstat</memstat-name>
<inuse>10</inuse>
<memuse>21</memuse>
<high-use>--</high-use>
<memstat-req>10</memstat-req>
<memstat-size>16,131072</memstat-size>
<memstat-name>eventhandler</memstat-name>
<inuse>35</inuse>
<memuse>2</memuse>
<high-use>--</high-use>
<memstat-req>36</memstat-req>
<memstat-size>32,128</memstat-size>
<memstat-name>kobj</memstat-name>
<inuse>93</inuse>
<memuse>186</memuse>
<high-use>--</high-use>
<memstat-req>111</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>DEVFS</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>9</memstat-req>
<memstat-size>16,64</memstat-size>
<memstat-name>rman</memstat-name>
<inuse>71</inuse>
<memuse>5</memuse>
<high-use>--</high-use>
<memstat-req>433</memstat-req>
<memstat-size>16,32,64</memstat-size>
<memstat-name>sbuf</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>522</memstat-req>
<memstat-size>16,32,32768,131072</memstat-size>
<memstat-name>NULLFS hash</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>

```



```

<memstat-name>taskqueue</memstat-name>
<inuse>5</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>5</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>turnstiles</memstat-name>
<inuse>145</inuse>
<memuse>10</memuse>
<high-use>-</high-use>
<memstat-req>145</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>Unitno</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>44</memstat-req>
<memstat-size>16,64</memstat-size>
<memstat-name>iocltops</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>27622</memstat-req>
<memstat-size>16,64,8192,16384,131072</memstat-size>
<memstat-name>iov</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>18578</memstat-req>
<memstat-size>16,64,128,256,512,1024,2048,131072</memstat-size>
<memstat-name>msg</memstat-name>
<inuse>4</inuse>
<memuse>25</memuse>
<high-use>-</high-use>
<memstat-req>4</memstat-req>
<memstat-size>32768,131072</memstat-size>
<memstat-name>sem</memstat-name>
<inuse>4</inuse>
<memuse>7</memuse>
<high-use>-</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16384,32768,131072</memstat-size>
<memstat-name>shm</memstat-name>
<inuse>9</inuse>
<memuse>20</memuse>
<high-use>-</high-use>
<memstat-req>14</memstat-req>
<memstat-size>32768</memstat-size>
<memstat-name>ttys</memstat-name>
<inuse>321</inuse>
<memuse>61</memuse>
<high-use>-</high-use>
<memstat-req>528</memstat-req>
<memstat-size>512,32768</memstat-size>
<memstat-name>ptys</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>128</memstat-size>

```



```

<memstat-name>mbuf_tag</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>23383</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>soname</memstat-name>
<inuse>115</inuse>
<memuse>12</memuse>
<high-use>--</high-use>
<memstat-req>24712</memstat-req>
<memstat-size>16,32,64,256</memstat-size>
<memstat-name>pcb</memstat-name>
<inuse>216</inuse>
<memuse>33</memuse>
<high-use>--</high-use>
<memstat-req>484</memstat-req>
<memstat-size>16,32,64,128,1024,2048,4096,16384,32768,65536</memstat-size>
<memstat-name>BIO buffer</memstat-name>
<inuse>43</inuse>
<memuse>86</memuse>
<high-use>--</high-use>
<memstat-req>405</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>vfscache</memstat-name>
<inuse>1</inuse>
<memuse>256</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>cluster_save buffer</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>32,64</memstat-size>
<memstat-name>VFS hash</memstat-name>
<inuse>1</inuse>
<memuse>128</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>32,64</memstat-size>
<memstat-name>vnodes</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>mount</memstat-name>
<inuse>290</inuse>
<memuse>23</memuse>
<high-use>--</high-use>
<memstat-req>535</memstat-req>
<memstat-size>16,32,64,128,256,4096,32768</memstat-size>
<memstat-name>vnodemarker</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>498</memstat-req>

```



```

    <memstat-size>16384</memstat-size>
    <memstat-name>pfs_nodes</memstat-name>
    <inuse>25</inuse>
    <memuse>3</memuse>
    <high-use>--</high-use>
    <memstat-req>25</memstat-req>
    <memstat-size>128</memstat-size>
    <memstat-name>pfs_vncache</memstat-name>
    <inuse>27</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>53</memstat-req>
    <memstat-size>32</memstat-size>
    <memstat-name>STP</memstat-name>
    <inuse>1</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>1</memstat-req>
    <memstat-size>64</memstat-size>
    <memstat-name>GEOM</memstat-name>
    <inuse>146</inuse>
    <memuse>11</memuse>
    <high-use>--</high-use>
    <memstat-req>1042</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
    <memstat-name>syncache</memstat-name>
    <inuse>1</inuse>
    <memuse>8</memuse>
    <high-use>--</high-use>
    <memstat-req>1</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
    <memstat-name>tlv_stat</memstat-name>
    <inuse>0</inuse>
    <memuse>0</memuse>
    <high-use>--</high-use>
    <memstat-req>8</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
    <memstat-name>NFS_daemon</memstat-name>
    <inuse>1</inuse>
    <memuse>8</memuse>
    <high-use>--</high-use>
    <memstat-req>1</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
    <memstat-name>p1003.1b</memstat-name>
    <inuse>1</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>1</memstat-req>
    <memstat-size>16</memstat-size>
    <memstat-name>MD_disk</memstat-name>
    <inuse>10</inuse>
    <memuse>20</memuse>
    <high-use>--</high-use>
    <memstat-req>10</memstat-req>
    <memstat-size>65536</memstat-size>
    <memstat-name>ata_generic</memstat-name>

```



```

<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>6</memstat-req>
<memstat-size>16,16384,32768</memstat-size>
<memstat-name>ISOF5 mount</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>15</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>ISOF5 node</memstat-name>
<inuse>1440</inuse>
<memuse>135</memuse>
<high-use>-</high-use>
<memstat-req>1457</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>CAM SIM</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>CAM XPT</memstat-name>
<inuse>6</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>9</memstat-req>
<memstat-size>16,64,16384</memstat-size>
<memstat-name>CAM periph</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>ad_driver</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>pagedep</memstat-name>
<inuse>1</inuse>
<memuse>32</memuse>
<high-use>-</high-use>
<memstat-req>106</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>inodedep</memstat-name>
<inuse>1</inuse>
<memuse>128</memuse>
<high-use>-</high-use>
<memstat-req>464</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>newblk</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>336</memstat-req>
<memstat-size>64,4096</memstat-size>
<memstat-name>bmsafemap</memstat-name>

```



```

<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>63</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>allocdirect</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>320</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>indirdep</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>17</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>allocindir</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>15</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>freefrag</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>12</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>freeblks</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>40</memstat-req>
<memstat-size>2048</memstat-size>
<memstat-name>freefile</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>101</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>diradd</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>465</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>mkdir</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>136</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>dirrem</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>168</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>newdirblk</memstat-name>

```



```
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>saveditno</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>157</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>UFS mount</memstat-name>
<inuse>15</inuse>
<memuse>36</memuse>
<high-use>-</high-use>
<memstat-req>15</memstat-req>
<memstat-size>2048,65536,131072</memstat-size>
<memstat-name>ata_dma</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>2</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>UMAHash</memstat-name>
<inuse>1</inuse>
<memuse>2</memuse>
<high-use>-</high-use>
<memstat-req>4</memstat-req>
<memstat-size>4096,16384,32768,65536</memstat-size>
<memstat-name>cdev</memstat-name>
<inuse>22</inuse>
<memuse>3</memuse>
<high-use>-</high-use>
<memstat-req>22</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>file desc</memstat-name>
<inuse>141</inuse>
<memuse>32</memuse>
<high-use>-</high-use>
<memstat-req>1583</memstat-req>
<memstat-size>16,1024,2048,16384</memstat-size>
<memstat-name>VM pgdata</memstat-name>
<inuse>2</inuse>
<memuse>65</memuse>
<high-use>-</high-use>
<memstat-req>2</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>sigio</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>20</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>kenv</memstat-name>
<inuse>24</inuse>
<memuse>5</memuse>
<high-use>-</high-use>
<memstat-req>27</memstat-req>
<memstat-size>16,32,64,131072</memstat-size>
<memstat-name>atkbddev</memstat-name>
```



```

<inuse>2</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>2</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>kqueue</memstat-name>
<inuse>15</inuse>
<memuse>9</memuse>
<high-use>-</high-use>
<memstat-req>19</memstat-req>
<memstat-size>1024,4096,32768</memstat-size>
<memstat-name>proc-args</memstat-name>
<inuse>57</inuse>
<memuse>3</memuse>
<high-use>-</high-use>
<memstat-req>1001</memstat-req>
<memstat-size>16,32,64,128,256,512,1024</memstat-size>
<memstat-name>isadev</memstat-name>
<inuse>21</inuse>
<memuse>2</memuse>
<high-use>-</high-use>
<memstat-req>21</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>zombie</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>1278</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>ithread</memstat-name>
<inuse>69</inuse>
<memuse>5</memuse>
<high-use>-</high-use>
<memstat-req>69</memstat-req>
<memstat-size>16,64,256</memstat-size>
<memstat-name>legacydrv</memstat-name>
<inuse>4</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>memdesc</memstat-name>
<inuse>1</inuse>
<memuse>4</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>131072</memstat-size>
<memstat-name>nexusdev</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>2</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>CAM queue</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>3</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>$PIR</memstat-name>

```



```

<inuse>4</inuse>
<memuse>1</memuse>
<high-use>~</high-use>
<memstat-req>4</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>KTRACE</memstat-name>
<inuse>100</inuse>
<memuse>10</memuse>
<high-use>~</high-use>
<memstat-req>100</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>kbdmux</memstat-name>
<inuse>5</inuse>
<memuse>9</memuse>
<high-use>~</high-use>
<memstat-req>5</memstat-req>
<memstat-size>128,2048,65536,131072</memstat-size>
</vmstat-memstat-malloc>
<vmstat-memstat-zone>
  <zone-name>UMA Kegs:</zone-name>
  <zone-size>136</zone-size>
  <count-limit>0</count-limit>
  <used>71</used>
  <free>1</free>
  <zone-req>71</zone-req>
  <zone-name>UMA Zones:</zone-name>
  <zone-size>120</zone-size>
  <count-limit>0</count-limit>
  <used>71</used>
  <free>19</free>
  <zone-req>71</zone-req>
  <zone-name>UMA Slabs:</zone-name>
  <zone-size>64</zone-size>
  <count-limit>0</count-limit>
  <used>490</used>
  <free>41</free>
  <zone-req>579</zone-req>
  <zone-name>UMA RCntSlabs:</zone-name>
  <zone-size>104</zone-size>
  <count-limit>0</count-limit>
  <used>276</used>
  <free>20</free>
  <zone-req>276</zone-req>
  <zone-name>UMA Hash:</zone-name>
  <zone-size>128</zone-size>
  <count-limit>0</count-limit>
  <used>4</used>
  <free>26</free>
  <zone-req>5</zone-req>
  <zone-name>16 Bucket:</zone-name>
  <zone-size>76</zone-size>
  <count-limit>0</count-limit>
  <used>30</used>
  <free>20</free>
  <zone-req>30</zone-req>
  <zone-name>32 Bucket:</zone-name>
  <zone-size>140</zone-size>
  <count-limit>0</count-limit>
  <used>33</used>
  <free>23</free>

```



```

<zone-req>33</zone-req>
<zone-name>64 Bucket:</zone-name>
<zone-size>268</zone-size>
<count-limit>0</count-limit>
<used>33</used>
<free>9</free>
<zone-req>33</zone-req>
<zone-name>128 Bucket:</zone-name>
<zone-size>524</zone-size>
<count-limit>0</count-limit>
<used>49</used>
<free>0</free>
<zone-req>49</zone-req>
<zone-name>VM OBJECT:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>2111</used>
<free>79</free>
<zone-req>25214</zone-req>
<zone-name>MAP:</zone-name>
<zone-size>160</zone-size>
<count-limit>0</count-limit>
<used>7</used>
<free>41</free>
<zone-req>7</zone-req>
<zone-name>KMAP ENTRY:</zone-name>
<zone-size>68</zone-size>
<count-limit>35336</count-limit>
<used>19</used>
<free>149</free>
<zone-req>2397</zone-req>
<zone-name>MAP ENTRY:</zone-name>
<zone-size>68</zone-size>
<count-limit>0</count-limit>
<used>2031</used>
<free>153</free>
<zone-req>62417</zone-req>
<zone-name>PV ENTRY:</zone-name>
<zone-size>24</zone-size>
<count-limit>509095</count-limit>
<used>57177</used>
<free>6333</free>
<zone-req>1033683</zone-req>
<zone-name>DP fakepg:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>mt_zone:</zone-name>
<zone-size>64</zone-size>
<count-limit>0</count-limit>
<used>238</used>
<free>57</free>
<zone-req>238</zone-req>
<zone-name>16:</zone-name>
<zone-size>16</zone-size>
<count-limit>0</count-limit>
<used>2114</used>
<free>119</free>

```



```
<zone-req>80515</zone-req>
<zone-name>32:</zone-name>
<zone-size>32</zone-size>
<count-limit>0</count-limit>
<used>1335</used>
<free>134</free>
<zone-req>10259</zone-req>
<zone-name>64:</zone-name>
<zone-size>64</zone-size>
<count-limit>0</count-limit>
<used>3529</used>
<free>129</free>
<zone-req>29110</zone-req>
<zone-name>96:</zone-name>
<zone-size>96</zone-size>
<count-limit>0</count-limit>
<used>2062</used>
<free>58</free>
<zone-req>4365</zone-req>
<zone-name>112:</zone-name>
<zone-size>112</zone-size>
<count-limit>0</count-limit>
<used>361</used>
<free>164</free>
<zone-req>24613</zone-req>
<zone-name>128:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>359</used>
<free>61</free>
<zone-req>942</zone-req>
<zone-name>160:</zone-name>
<zone-size>160</zone-size>
<count-limit>0</count-limit>
<used>364</used>
<free>44</free>
<zone-req>577</zone-req>
<zone-name>224:</zone-name>
<zone-size>224</zone-size>
<count-limit>0</count-limit>
<used>422</used>
<free>20</free>
<zone-req>1950</zone-req>
<zone-name>256:</zone-name>
<zone-size>256</zone-size>
<count-limit>0</count-limit>
<used>204</used>
<free>36</free>
<zone-req>1225</zone-req>
<zone-name>288:</zone-name>
<zone-size>288</zone-size>
<count-limit>0</count-limit>
<used>2</used>
<free>24</free>
<zone-req>10</zone-req>
<zone-name>512:</zone-name>
<zone-size>512</zone-size>
<count-limit>0</count-limit>
<used>49</used>
<free>7</free>
```



```
<zone-req>911</zone-req>
<zone-name>1024:</zone-name>
<zone-size>1024</zone-size>
<count-limit>0</count-limit>
<used>213</used>
<free>11</free>
<zone-req>1076</zone-req>
<zone-name>2048:</zone-name>
<zone-size>2048</zone-size>
<count-limit>0</count-limit>
<used>199</used>
<free>113</free>
<zone-req>640</zone-req>
<zone-name>4096:</zone-name>
<zone-size>4096</zone-size>
<count-limit>0</count-limit>
<used>144</used>
<free>7</free>
<zone-req>2249</zone-req>
<zone-name>Files:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>665</used>
<free>77</free>
<zone-req>16457</zone-req>
<zone-name>MAC labels:</zone-name>
<zone-size>20</zone-size>
<count-limit>0</count-limit>
<used>3998</used>
<free>227</free>
<zone-req>21947</zone-req>
<zone-name>PROC:</zone-name>
<zone-size>544</zone-size>
<count-limit>0</count-limit>
<used>116</used>
<free>10</free>
<zone-req>1394</zone-req>
<zone-name>THREAD:</zone-name>
<zone-size>416</zone-size>
<count-limit>0</count-limit>
<used>127</used>
<free>17</free>
<zone-req>131</zone-req>
<zone-name>KSEGRP:</zone-name>
<zone-size>88</zone-size>
<count-limit>0</count-limit>
<used>127</used>
<free>73</free>
<zone-req>131</zone-req>
<zone-name>UPCALL:</zone-name>
<zone-size>44</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>SLEEPQUEUE:</zone-name>
<zone-size>32</zone-size>
<count-limit>0</count-limit>
<used>145</used>
<free>194</free>
```



```
<zone-req>145</zone-req>
<zone-name>VMSPACE:</zone-name>
<zone-size>268</zone-size>
<count-limit>0</count-limit>
<used>57</used>
<free>13</free>
<zone-req>1335</zone-req>
<zone-name>mbuf_packet:</zone-name>
<zone-size>256</zone-size>
<count-limit>180000</count-limit>
<used>256</used>
<free>128</free>
<zone-req>49791</zone-req>
<zone-name>mbuf:</zone-name>
<zone-size>256</zone-size>
<count-limit>180000</count-limit>
<used>50</used>
<free>466</free>
<zone-req>105183</zone-req>
<zone-name>mbuf_cluster:</zone-name>
<zone-size>2048</zone-size>
<count-limit>25190</count-limit>
<used>387</used>
<free>165</free>
<zone-req>5976</zone-req>
<zone-name>mbuf_jumbo_pagesize:</zone-name>
<zone-size>4096</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>mbuf_jumbo_9k:</zone-name>
<zone-size>9216</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>mbuf_jumbo_16k:</zone-name>
<zone-size>16384</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>ACL UMA zone:</zone-name>
<zone-size>388</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>g_bio:</zone-name>
<zone-size>132</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>174</free>
<zone-req>69750</zone-req>
<zone-name>ata_request:</zone-name>
<zone-size>200</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>57</free>
```



```

<zone-req>5030</zone-req>
<zone-name>ata_composite:</zone-name>
<zone-size>192</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>GENCFG:</zone-name>
<zone-size>72</zone-size>
<count-limit>1000004</count-limit>
<used>57</used>
<free>102</free>
<zone-req>57</zone-req>
<zone-name>VNODE:</zone-name>
<zone-size>292</zone-size>
<count-limit>0</count-limit>
<used>2718</used>
<free>25</free>
<zone-req>2922</zone-req>
<zone-name>VNODEPOLL:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>S VFS Cache:</zone-name>
<zone-size>68</zone-size>
<count-limit>0</count-limit>
<used>2500</used>
<free>76</free>
<zone-req>3824</zone-req>
<zone-name>L VFS Cache:</zone-name>
<zone-size>291</zone-size>
<count-limit>0</count-limit>
<used>51</used>
<free>14</free>
<zone-req>63</zone-req>
<zone-name>NAMEI:</zone-name>
<zone-size>1024</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>8</free>
<zone-req>53330</zone-req>
<zone-name>NFSMOUNT:</zone-name>
<zone-size>480</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>NFSNODE:</zone-name>
<zone-size>460</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>PIPE:</zone-name>
<zone-size>404</zone-size>
<count-limit>0</count-limit>
<used>27</used>
<free>9</free>

```



```
<zone-req>717</zone-req>
<zone-name>KNOTE:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>42</used>
<free>64</free>
<zone-req>3311</zone-req>
<zone-name>socket:</zone-name>
<zone-size>412</zone-size>
<count-limit>25191</count-limit>
<used>343</used>
<free>8</free>
<zone-req>2524</zone-req>
<zone-name>unpcb:</zone-name>
<zone-size>140</zone-size>
<count-limit>25200</count-limit>
<used>170</used>
<free>26</free>
<zone-req>2157</zone-req>
<zone-name>ipq:</zone-name>
<zone-size>52</zone-size>
<count-limit>216</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>udpcb:</zone-name>
<zone-size>232</zone-size>
<count-limit>25194</count-limit>
<used>19</used>
<free>32</free>
<zone-req>31</zone-req>
<zone-name>inpcb:</zone-name>
<zone-size>232</zone-size>
<count-limit>25194</count-limit>
<used>40</used>
<free>28</free>
<zone-req>105</zone-req>
<zone-name>tcpb:</zone-name>
<zone-size>520</zone-size>
<count-limit>25193</count-limit>
<used>40</used>
<free>16</free>
<zone-req>105</zone-req>
<zone-name>tcptw:</zone-name>
<zone-size>56</zone-size>
<count-limit>5092</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>syncache:</zone-name>
<zone-size>128</zone-size>
<count-limit>15360</count-limit>
<used>0</used>
<free>60</free>
<zone-req>55</zone-req>
<zone-name>tcpreass:</zone-name>
<zone-size>20</zone-size>
<count-limit>1690</count-limit>
<used>0</used>
<free>0</free>
```



```

<zone-req>0</zone-req>
<zone-name>sackhole:</zone-name>
<zone-size>20</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>ripch:</zone-name>
<zone-size>232</zone-size>
<count-limit>25194</count-limit>
<used>5</used>
<free>29</free>
<zone-req>5</zone-req>
<zone-name>SWAPMETA:</zone-name>
<zone-size>276</zone-size>
<count-limit>94948</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>FFS inode:</zone-name>
<zone-size>132</zone-size>
<count-limit>0</count-limit>
<used>1146</used>
<free>72</free>
<zone-req>1306</zone-req>
<zone-name>FFS1 dinode:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>1146</used>
<free>24</free>
<zone-req>1306</zone-req>
<zone-name>FFS2 dinode:</zone-name>
<zone-size>256</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
</vmstat-memstat-zone>
<vmstat-sumstat>
  <cpu-context-switch>934906</cpu-context-switch>
  <dev-intr>1707986</dev-intr>
  <soft-intr>33819</soft-intr>
  <traps>203604</traps>
  <sys-calls>1200636</sys-calls>
  <kernel-thrds>60</kernel-thrds>
  <fork-calls>1313</fork-calls>
  <vfork-calls>21</vfork-calls>
  <rfork-calls>0</rfork-calls>
  <swap-pageins>0</swap-pageins>
  <swap-pagedin>0</swap-pagedin>
  <swap-pageouts>0</swap-pageouts>
  <swap-pagedout>0</swap-pagedout>
  <vnnode-pageins>23094</vnnode-pageins>
  <vnnode-pagedin>23119</vnnode-pagedin>
  <vnnode-pageouts>226</vnnode-pageouts>
  <vnnode-pagedout>3143</vnnode-pagedout>
  <page-daemon-wakeup>0</page-daemon-wakeup>
  <page-daemon-examined-pages>0</page-daemon-examined-pages>
  <pages-reactivated>8821</pages-reactivated>
  <copy-on-write-faults>48364</copy-on-write-faults>

```



```

    <copy-on-write-optimized-faults>31</copy-on-write-optimized-faults>
    <zero-fill-pages-zeroed>74665</zero-fill-pages-zeroed>
    <zero-fill-pages-prezeroed>70061</zero-fill-pages-prezeroed>
    <transit-blocking-page-faults>85</transit-blocking-page-faults>
    <total-vm-faults>191824</total-vm-faults>

<pages-affected-by-kernel-thrd-creat>0</pages-affected-by-kernel-thrd-creat>
    <pages-affected-by-fork>95343</pages-affected-by-fork>
    <pages-affected-by-vfork>3526</pages-affected-by-vfork>
    <pages-affected-by-rfork>0</pages-affected-by-rfork>
    <pages-freed>221502</pages-freed>
    <pages-freed-by-daemon>0</pages-freed-by-daemon>
    <pages-freed-by-exiting-proc>75630</pages-freed-by-exiting-proc>
    <pages-active>45826</pages-active>
    <pages-inactive>13227</pages-inactive>
    <pages-in-vm-cache>49278</pages-in-vm-cache>
    <pages-wired-down>10640</pages-wired-down>
    <pages-free>70706</pages-free>
    <bytes-per-page>4096</bytes-per-page>
    <swap-pages-used>0</swap-pages-used>
    <peak-swap-pages-used>0</peak-swap-pages-used>
    <total-name-lookups>214496</total-name-lookups>
    <positive-cache-hits>92</positive-cache-hits>
    <negative-cache-hits>5</negative-cache-hits>
    <pass2>0</pass2>
    <cache-deletions>0</cache-deletions>
    <cache-falsehits>0</cache-falsehits>
    <toolong>0</toolong>
</vmstat-sumstat>
<vmstat-intr>
    <intr-name>irq0: clk          </intr-name>
    <intr-cnt>1243455</intr-cnt>
    <intr-rate>999</intr-rate>
    <intr-name>irq4: sio0        </intr-name>
    <intr-cnt>1140</intr-cnt>
    <intr-rate>0</intr-rate>
    <intr-name>irq8: rtc         </intr-name>
    <intr-cnt>159164</intr-cnt>
    <intr-rate>127</intr-rate>
    <intr-name>irq9: cbb1 fxp0   </intr-name>
    <intr-cnt>28490</intr-cnt>
    <intr-rate>22</intr-rate>
    <intr-name>irq10: fxp1       </intr-name>
    <intr-cnt>20593</intr-cnt>
    <intr-rate>16</intr-rate>
    <intr-name>irq14: ata0      </intr-name>
    <intr-cnt>5031</intr-cnt>
    <intr-rate>4</intr-rate>
    <intr-name>Total</intr-name>
    <intr-cnt>1457873</intr-cnt>
    <intr-rate>1171</intr-rate>
</vmstat-intr>
<vm-kernel-state>
    <vm-kmem-map-free>248524800</vm-kmem-map-free>
</vm-kernel-state>
<kernel-direct-mm-size-information>
    <vm-directmm-size-used>4644</vm-directmm-size-used>
    <vm-directmm-size-max>4057334</vm-directmm-size-max>
</kernel-direct-mm-size-information>
</system-virtual-memory-information>

```



```
<cli>
  <banner></banner>
</cli>
</rpc-reply>
```

*Note:* <kernel-direct-mm-size-information> only displays for 64 bit platform.

### show system virtual-memory (QFX Series)

```
user@switch> show system virtual-memory | display xml
```

```
<rpc-reply xmlns:junos="http://device1.example.com/junos/11.1R1/junos">
  <system-virtual-memory-information>
    <vmstat-memstat-malloc>
      <memstat-name>CAM dev queue</memstat-name>
      <inuse>1</inuse>
      <memuse>1</memuse>
      <high-use>--</high-use>
      <memstat-req>1</memstat-req>
      <memstat-size>64</memstat-size>
      <memstat-name>entropy</memstat-name>
      <inuse>1024</inuse>
      <memuse>64</memuse>
      <high-use>--</high-use>
      <memstat-req>1024</memstat-req>
      <memstat-size>64</memstat-size>
      <memstat-name>linker</memstat-name>
      <inuse>481</inuse>
      <memuse>1871</memuse>
      <high-use>--</high-use>
      <memstat-req>1145</memstat-req>
      <memstat-size>16,32,64,4096,32768,131072</memstat-size>
      <memstat-name>lockf</memstat-name>
      <inuse>56</inuse>
      <memuse>4</memuse>
      <high-use>--</high-use>
      <memstat-req>5998</memstat-req>
      <memstat-size>64</memstat-size>
      <memstat-name>devbuf</memstat-name>
      <inuse>2094</inuse>
      <memuse>3877</memuse>
      <high-use>--</high-use>
      <memstat-req>2099</memstat-req>

      <memstat-size>16,32,64,128,512,1024,4096,8192,16384,32768,65536,131072</memstat-size>

      <memstat-name>temp</memstat-name>
      <inuse>21</inuse>
      <memuse>66</memuse>
      <high-use>--</high-use>
      <memstat-req>3127</memstat-req>

      <memstat-size>16,32,64,128,256,512,2048,4096,8192,16384,32768,65536,131072</memstat-size>

      <memstat-name>ip6ndp</memstat-name>
      <inuse>0</inuse>
      <memuse>0</memuse>
      <high-use>--</high-use>
      <memstat-req>4</memstat-req>
      <memstat-size>64</memstat-size>
```



```
<memstat-name>in6ifmulti</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>in6grentry</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>iflogical</memstat-name>
<inuse>13</inuse>
<memuse>3</memuse>
<high-use>-</high-use>
<memstat-req>13</memstat-req>
<memstat-size>64,2048</memstat-size>
<memstat-name>iffamily</memstat-name>
<inuse>28</inuse>
<memuse>4</memuse>
<high-use>-</high-use>
<memstat-req>28</memstat-req>
<memstat-size>32,1024,2048</memstat-size>
<memstat-name>rtnexthop</memstat-name>
<inuse>127</inuse>
<memuse>18</memuse>
<high-use>-</high-use>
<memstat-req>129</memstat-req>
<memstat-size>32,256,512,1024,2048,4096</memstat-size>
<memstat-name>metrics</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>5</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>inifmulti</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>3</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>ingrentry</memstat-name>
<inuse>6</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>6</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>rnode</memstat-name>
<inuse>68</inuse>
<memuse>2</memuse>
<high-use>-</high-use>
<memstat-req>76</memstat-req>
<memstat-size>16,32</memstat-size>
<memstat-name>rcache</memstat-name>
<inuse>4</inuse>
<memuse>8</memuse>
<high-use>-</high-use>
<memstat-req>4</memstat-req>
<memstat-size>65536</memstat-size>
```



```

    <memstat-name>ifdevice</memstat-name>
    <inuse>4</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>4</memstat-req>
    <memstat-size>16</memstat-size>
    <memstat-name>ifstat</memstat-name>
    <inuse>40</inuse>
    <memuse>22</memuse>
    <high-use>--</high-use>
    <memstat-req>40</memstat-req>
    <memstat-size>512,16384,32768</memstat-size>
    <memstat-name>ipfw</memstat-name>
    <inuse>42</inuse>
    <memuse>23</memuse>
    <high-use>--</high-use>
    <memstat-req>91</memstat-req>

<memstat-size>16,32,64,128,256,512,1024,16384,32768,65536,131072</memstat-size>
    <memstat-name>ifmaddr</memstat-name>
    <inuse>103</inuse>
    <memuse>3</memuse>
    <high-use>--</high-use>
    <memstat-req>103</memstat-req>
    <memstat-size>16,32</memstat-size>
    <memstat-name>rtable</memstat-name>
    <inuse>129</inuse>
    <memuse>14</memuse>
    <high-use>--</high-use>
    <memstat-req>139</memstat-req>
    <memstat-size>16,32,64,128,1024,16384</memstat-size>
    <memstat-name>sysctl</memstat-name>
    <inuse>0</inuse>
    <memuse>0</memuse>
    <high-use>--</high-use>
    <memstat-req>14847</memstat-req>
    <memstat-size>16,32,64,4096,16384,32768</memstat-size>
    <memstat-name>ifaddr</memstat-name>
    <inuse>29</inuse>
    <memuse>3</memuse>
    <high-use>--</high-use>
    <memstat-req>29</memstat-req>
    <memstat-size>64,128</memstat-size>
    <memstat-name>mkey</memstat-name>
    <inuse>345</inuse>
    <memuse>6</memuse>
    <high-use>--</high-use>
    <memstat-req>2527</memstat-req>
    <memstat-size>16,128</memstat-size>
    <memstat-name>pfe_ipc</memstat-name>
    <inuse>0</inuse>
    <memuse>0</memuse>
    <high-use>--</high-use>
    <memstat-req>1422</memstat-req>

<memstat-size>16,32,64,128,512,1024,2048,8192,16384,32768,65536,131072</memstat-size>

    <memstat-name>ifstate</memstat-name>
    <inuse>594</inuse>
    <memuse>51</memuse>

```



```

    <high-use>--</high-use>
    <memstat-req>655</memstat-req>

<memstat-size>16,32,64,128,256,1024,2048,4096,16384,32768</memstat-size>
    <memstat-name>itable16</memstat-name>
    <inuse>276</inuse>
    <memuse>52</memuse>
    <high-use>--</high-use>
    <memstat-req>294</memstat-req>
    <memstat-size>1024,4096</memstat-size>
    <memstat-name>itable32</memstat-name>
    <inuse>160</inuse>
    <memuse>10</memuse>
    <high-use>--</high-use>
    <memstat-req>160</memstat-req>
    <memstat-size>64</memstat-size>
    <memstat-name>itable64</memstat-name>
    <inuse>2</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>2</memstat-req>
    <memstat-size>128</memstat-size>
    <memstat-name>lr</memstat-name>
    <inuse>1</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>1</memstat-req>
    <memstat-size>16384</memstat-size>
    <memstat-name>pic</memstat-name>
    <inuse>5</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>5</memstat-req>
    <memstat-size>64,512</memstat-size>
    <memstat-name>pfestat</memstat-name>
    <inuse>0</inuse>
    <memuse>0</memuse>
    <high-use>--</high-use>
    <memstat-req>162</memstat-req>
    <memstat-size>16,32,128,256,16384</memstat-size>
    <memstat-name>gencfg</memstat-name>
    <inuse>224</inuse>
    <memuse>56</memuse>
    <high-use>--</high-use>
    <memstat-req>540</memstat-req>
    <memstat-size>16,32,64,256,512,32768,65536</memstat-size>
    <memstat-name>jsr</memstat-name>
    <inuse>2</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>4</memstat-req>
    <memstat-size>16</memstat-size>
    <memstat-name>idl</memstat-name>
    <inuse>0</inuse>
    <memuse>0</memuse>
    <high-use>--</high-use>
    <memstat-req>13</memstat-req>
    <memstat-size>16,32,64,128,256,4096,16384,32768,131072</memstat-size>

    <memstat-name>rtsmsg</memstat-name>

```



```

<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>2</memstat-req>
<memstat-size>131072</memstat-size>
<memstat-name>module</memstat-name>
<inuse>249</inuse>
<memuse>16</memuse>
<high-use>-</high-use>
<memstat-req>249</memstat-req>
<memstat-size>64,128</memstat-size>
<memstat-name>mtx_pool</memstat-name>
<inuse>1</inuse>
<memuse>8</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64,128</memstat-size>
<memstat-name>DEVFS3</memstat-name>
<inuse>109</inuse>
<memuse>12</memuse>
<high-use>-</high-use>
<memstat-req>117</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>DEVFS1</memstat-name>
<inuse>102</inuse>
<memuse>23</memuse>
<high-use>-</high-use>
<memstat-req>109</memstat-req>
<memstat-size>2048</memstat-size>
<memstat-name>pgrp</memstat-name>
<inuse>12</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>21</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>session</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>15</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>proc</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>2</memstat-req>
<memstat-size>16384</memstat-size>
<memstat-name>subproc</memstat-name>
<inuse>244</inuse>
<memuse>496</memuse>
<high-use>-</high-use>
<memstat-req>1522</memstat-req>
<memstat-size>2048,131072</memstat-size>
<memstat-name>cred</memstat-name>
<inuse>30</inuse>
<memuse>4</memuse>
<high-use>-</high-use>
<memstat-req>11409</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>plimit</memstat-name>

```



```

<inuse>17</inuse>
<memuse>4</memuse>
<high-use>--</high-use>
<memstat-req>133</memstat-req>
<memstat-size>2048</memstat-size>
<memstat-name>uidinfo</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>6</memstat-req>
<memstat-size>32,512</memstat-size>
<memstat-name>sysctloid</memstat-name>
<inuse>1117</inuse>
<memuse>34</memuse>
<high-use>--</high-use>
<memstat-req>1117</memstat-req>
<memstat-size>16,32,64</memstat-size>
<memstat-name>sysctltmp</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>743</memstat-req>
<memstat-size>16,32,64,1024</memstat-size>
<memstat-name>umtx</memstat-name>
<inuse>144</inuse>
<memuse>9</memuse>
<high-use>--</high-use>
<memstat-req>144</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>SWAP</memstat-name>
<inuse>2</inuse>
<memuse>209</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>bus</memstat-name>
<inuse>496</inuse>
<memuse>55</memuse>
<high-use>--</high-use>
<memstat-req>1196</memstat-req>
<memstat-size>16,32,64,128,32768</memstat-size>
<memstat-name>bus-sc</memstat-name>
<inuse>23</inuse>
<memuse>33</memuse>
<high-use>--</high-use>
<memstat-req>335</memstat-req>
<memstat-size>16,32,64,512,1024,2048,8192,16384,65536,131072</memstat-size>
<memstat-name>devstat</memstat-name>
<inuse>10</inuse>
<memuse>21</memuse>
<high-use>--</high-use>
<memstat-req>10</memstat-req>
<memstat-size>16,131072</memstat-size>
<memstat-name>eventhandler</memstat-name>
<inuse>35</inuse>
<memuse>2</memuse>
<high-use>--</high-use>
<memstat-req>36</memstat-req>
<memstat-size>32,128</memstat-size>

```



```

<memstat-name>kobj</memstat-name>
<inuse>93</inuse>
<memuse>186</memuse>
<high-use>-</high-use>
<memstat-req>111</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>DEVFS</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>9</memstat-req>
<memstat-size>16,64</memstat-size>
<memstat-name>rman</memstat-name>
<inuse>71</inuse>
<memuse>5</memuse>
<high-use>-</high-use>
<memstat-req>433</memstat-req>
<memstat-size>16,32,64</memstat-size>
<memstat-name>sbuf</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>522</memstat-req>
<memstat-size>16,32,32768,131072</memstat-size>
<memstat-name>NULLFS hash</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>taskqueue</memstat-name>
<inuse>5</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>5</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>turnstiles</memstat-name>
<inuse>145</inuse>
<memuse>10</memuse>
<high-use>-</high-use>
<memstat-req>145</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>Unitno</memstat-name>
<inuse>8</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>44</memstat-req>
<memstat-size>16,64</memstat-size>
<memstat-name>iocTlops</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>27622</memstat-req>
<memstat-size>16,64,8192,16384,131072</memstat-size>
<memstat-name>iov</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>18578</memstat-req>
<memstat-size>16,64,128,256,512,1024,2048,131072</memstat-size>

```



```

<memstat-name>msg</memstat-name>
<inuse>4</inuse>
<memuse>25</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>32768,131072</memstat-size>
<memstat-name>sem</memstat-name>
<inuse>4</inuse>
<memuse>7</memuse>
<high-use>--</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16384,32768,131072</memstat-size>
<memstat-name>shm</memstat-name>
<inuse>9</inuse>
<memuse>20</memuse>
<high-use>--</high-use>
<memstat-req>14</memstat-req>
<memstat-size>32768</memstat-size>
<memstat-name>ttys</memstat-name>
<inuse>321</inuse>
<memuse>61</memuse>
<high-use>--</high-use>
<memstat-req>528</memstat-req>
<memstat-size>512,32768</memstat-size>
<memstat-name>ptys</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>mbuf_tag</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>23383</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>soname</memstat-name>
<inuse>115</inuse>
<memuse>12</memuse>
<high-use>--</high-use>
<memstat-req>24712</memstat-req>
<memstat-size>16,32,64,256</memstat-size>
<memstat-name>pcb</memstat-name>
<inuse>216</inuse>
<memuse>33</memuse>
<high-use>--</high-use>
<memstat-req>484</memstat-req>
<memstat-size>16,32,64,128,1024,2048,4096,16384,32768,65536</memstat-size>
<memstat-name>BIO buffer</memstat-name>
<inuse>43</inuse>
<memuse>86</memuse>
<high-use>--</high-use>
<memstat-req>405</memstat-req>
<memstat-size>65536</memstat-size>
<memstat-name>vfscache</memstat-name>
<inuse>1</inuse>
<memuse>256</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>

```



```

<memstat-size>65536</memstat-size>
<memstat-name>cluster_save buffer</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>2</memstat-req>
<memstat-size>32,64</memstat-size>
<memstat-name>VFS hash</memstat-name>
<inuse>1</inuse>
<memuse>128</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>32,64</memstat-size>
<memstat-name>vnodes</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>mount</memstat-name>
<inuse>290</inuse>
<memuse>23</memuse>
<high-use>--</high-use>
<memstat-req>535</memstat-req>
<memstat-size>16,32,64,128,256,4096,32768</memstat-size>
<memstat-name>vnodemarker</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>--</high-use>
<memstat-req>498</memstat-req>
<memstat-size>16384</memstat-size>
<memstat-name>pfs_nodes</memstat-name>
<inuse>25</inuse>
<memuse>3</memuse>
<high-use>--</high-use>
<memstat-req>25</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>pfs_vncache</memstat-name>
<inuse>27</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>53</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>STP</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>--</high-use>
<memstat-req>1</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>GEOM</memstat-name>
<inuse>146</inuse>
<memuse>11</memuse>
<high-use>--</high-use>
<memstat-req>1042</memstat-req>
<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
<memstat-name>syncache</memstat-name>
<inuse>1</inuse>
<memuse>8</memuse>
<high-use>--</high-use>

```



```

        <memstat-req>1</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
    <memstat-name>tlv_stat</memstat-name>
    <inuse>0</inuse>
    <memuse>0</memuse>
    <high-use>--</high-use>
    <memstat-req>8</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
    <memstat-name>NFS daemon</memstat-name>
    <inuse>1</inuse>
    <memuse>8</memuse>
    <high-use>--</high-use>
    <memstat-req>1</memstat-req>

<memstat-size>16,32,64,128,256,512,2048,16384,32768,131072</memstat-size>
    <memstat-name>p1003.1b</memstat-name>
    <inuse>1</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>1</memstat-req>
    <memstat-size>16</memstat-size>
    <memstat-name>MD disk</memstat-name>
    <inuse>10</inuse>
    <memuse>20</memuse>
    <high-use>--</high-use>
    <memstat-req>10</memstat-req>
    <memstat-size>65536</memstat-size>
    <memstat-name>ata_generic</memstat-name>
    <inuse>1</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>6</memstat-req>
    <memstat-size>16,16384,32768</memstat-size>
    <memstat-name>ISOFs mount</memstat-name>
    <inuse>8</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>15</memstat-req>
    <memstat-size>512</memstat-size>
    <memstat-name>ISOFs node</memstat-name>
    <inuse>1440</inuse>
    <memuse>135</memuse>
    <high-use>--</high-use>
    <memstat-req>1457</memstat-req>
    <memstat-size>128</memstat-size>
    <memstat-name>CAM SIM</memstat-name>
    <inuse>1</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>1</memstat-req>
    <memstat-size>64</memstat-size>
    <memstat-name>CAM XPT</memstat-name>
    <inuse>6</inuse>
    <memuse>1</memuse>
    <high-use>--</high-use>
    <memstat-req>9</memstat-req>
    <memstat-size>16,64,16384</memstat-size>
    <memstat-name>CAM periph</memstat-name>

```



```

<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>ad_driver</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>pagedep</memstat-name>
<inuse>1</inuse>
<memuse>32</memuse>
<high-use>-</high-use>
<memstat-req>106</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>inodedep</memstat-name>
<inuse>1</inuse>
<memuse>128</memuse>
<high-use>-</high-use>
<memstat-req>464</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>newblk</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>336</memstat-req>
<memstat-size>64,4096</memstat-size>
<memstat-name>bmsafemap</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>63</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>allocdirect</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>320</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>indirdep</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>17</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>allocindir</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>15</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>freefrag</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>12</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>freeblks</memstat-name>

```



```
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>40</memstat-req>
<memstat-size>2048</memstat-size>
<memstat-name>freefile</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>101</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>diradd</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>465</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>mkdir</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>136</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>dirrem</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>168</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>newdirblk</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>saveditno</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>157</memstat-req>
<memstat-size>512</memstat-size>
<memstat-name>UFS mount</memstat-name>
<inuse>15</inuse>
<memuse>36</memuse>
<high-use>-</high-use>
<memstat-req>15</memstat-req>
<memstat-size>2048,65536,131072</memstat-size>
<memstat-name>ata_dma</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>2</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>UMAHash</memstat-name>
<inuse>1</inuse>
<memuse>2</memuse>
<high-use>-</high-use>
<memstat-req>4</memstat-req>
<memstat-size>4096,16384,32768,65536</memstat-size>
<memstat-name>cdev</memstat-name>
```



```

<inuse>22</inuse>
<memuse>3</memuse>
<high-use>-</high-use>
<memstat-req>22</memstat-req>
<memstat-size>256</memstat-size>
<memstat-name>file desc</memstat-name>
<inuse>141</inuse>
<memuse>32</memuse>
<high-use>-</high-use>
<memstat-req>1583</memstat-req>
<memstat-size>16,1024,2048,16384</memstat-size>
<memstat-name>VM pgdata</memstat-name>
<inuse>2</inuse>
<memuse>65</memuse>
<high-use>-</high-use>
<memstat-req>2</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>sigio</memstat-name>
<inuse>1</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>20</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>kenv</memstat-name>
<inuse>24</inuse>
<memuse>5</memuse>
<high-use>-</high-use>
<memstat-req>27</memstat-req>
<memstat-size>16,32,64,131072</memstat-size>
<memstat-name>atkbddev</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>2</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>kqueue</memstat-name>
<inuse>15</inuse>
<memuse>9</memuse>
<high-use>-</high-use>
<memstat-req>19</memstat-req>
<memstat-size>1024,4096,32768</memstat-size>
<memstat-name>proc-args</memstat-name>
<inuse>57</inuse>
<memuse>3</memuse>
<high-use>-</high-use>
<memstat-req>1001</memstat-req>
<memstat-size>16,32,64,128,256,512,1024</memstat-size>
<memstat-name>isadev</memstat-name>
<inuse>21</inuse>
<memuse>2</memuse>
<high-use>-</high-use>
<memstat-req>21</memstat-req>
<memstat-size>64</memstat-size>
<memstat-name>zombie</memstat-name>
<inuse>0</inuse>
<memuse>0</memuse>
<high-use>-</high-use>
<memstat-req>1278</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>ithread</memstat-name>

```



```

<inuse>69</inuse>
<memuse>5</memuse>
<high-use>-</high-use>
<memstat-req>69</memstat-req>
<memstat-size>16,64,256</memstat-size>
<memstat-name>legacydrv</memstat-name>
<inuse>4</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>4</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>memdesc</memstat-name>
<inuse>1</inuse>
<memuse>4</memuse>
<high-use>-</high-use>
<memstat-req>1</memstat-req>
<memstat-size>131072</memstat-size>
<memstat-name>nexusdev</memstat-name>
<inuse>2</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>2</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>CAM queue</memstat-name>
<inuse>3</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>3</memstat-req>
<memstat-size>16</memstat-size>
<memstat-name>$PIR</memstat-name>
<inuse>4</inuse>
<memuse>1</memuse>
<high-use>-</high-use>
<memstat-req>4</memstat-req>
<memstat-size>32</memstat-size>
<memstat-name>KTRACE</memstat-name>
<inuse>100</inuse>
<memuse>10</memuse>
<high-use>-</high-use>
<memstat-req>100</memstat-req>
<memstat-size>128</memstat-size>
<memstat-name>kbdmux</memstat-name>
<inuse>5</inuse>
<memuse>9</memuse>
<high-use>-</high-use>
<memstat-req>5</memstat-req>
<memstat-size>128,2048,65536,131072</memstat-size>
</vmstat-memstat-malloc>
<vmstat-memstat-zone>
  <zone-name>UMA Kegs:</zone-name>
  <zone-size>136</zone-size>
  <count-limit>0</count-limit>
  <used>71</used>
  <free>1</free>
  <zone-req>71</zone-req>
  <zone-name>UMA Zones:</zone-name>
  <zone-size>120</zone-size>
  <count-limit>0</count-limit>
  <used>71</used>
  <free>19</free>

```



```

<zone-req>71</zone-req>
<zone-name>UMA Slabs:</zone-name>
<zone-size>64</zone-size>
<count-limit>0</count-limit>
<used>490</used>
<free>41</free>
<zone-req>579</zone-req>
<zone-name>UMA RCntSlabs:</zone-name>
<zone-size>104</zone-size>
<count-limit>0</count-limit>
<used>276</used>
<free>20</free>
<zone-req>276</zone-req>
<zone-name>UMA Hash:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>4</used>
<free>26</free>
<zone-req>5</zone-req>
<zone-name>16 Bucket:</zone-name>
<zone-size>76</zone-size>
<count-limit>0</count-limit>
<used>30</used>
<free>20</free>
<zone-req>30</zone-req>
<zone-name>32 Bucket:</zone-name>
<zone-size>140</zone-size>
<count-limit>0</count-limit>
<used>33</used>
<free>23</free>
<zone-req>33</zone-req>
<zone-name>64 Bucket:</zone-name>
<zone-size>268</zone-size>
<count-limit>0</count-limit>
<used>33</used>
<free>9</free>
<zone-req>33</zone-req>
<zone-name>128 Bucket:</zone-name>
<zone-size>524</zone-size>
<count-limit>0</count-limit>
<used>49</used>
<free>0</free>
<zone-req>49</zone-req>
<zone-name>VM OBJECT:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>2111</used>
<free>79</free>
<zone-req>25214</zone-req>
<zone-name>MAP:</zone-name>
<zone-size>160</zone-size>
<count-limit>0</count-limit>
<used>7</used>
<free>41</free>
<zone-req>7</zone-req>
<zone-name>KMAP ENTRY:</zone-name>
<zone-size>68</zone-size>
<count-limit>35336</count-limit>
<used>19</used>
<free>149</free>

```



```
<zone-req>2397</zone-req>
<zone-name>MAP ENTRY:</zone-name>
<zone-size>68</zone-size>
<count-limit>0</count-limit>
<used>2031</used>
<free>153</free>
<zone-req>62417</zone-req>
<zone-name>PV ENTRY:</zone-name>
<zone-size>24</zone-size>
<count-limit>509095</count-limit>
<used>57177</used>
<free>6333</free>
<zone-req>1033683</zone-req>
<zone-name>DP fakepg:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>mt_zone:</zone-name>
<zone-size>64</zone-size>
<count-limit>0</count-limit>
<used>238</used>
<free>57</free>
<zone-req>238</zone-req>
<zone-name>16:</zone-name>
<zone-size>16</zone-size>
<count-limit>0</count-limit>
<used>2114</used>
<free>119</free>
<zone-req>80515</zone-req>
<zone-name>32:</zone-name>
<zone-size>32</zone-size>
<count-limit>0</count-limit>
<used>1335</used>
<free>134</free>
<zone-req>10259</zone-req>
<zone-name>64:</zone-name>
<zone-size>64</zone-size>
<count-limit>0</count-limit>
<used>3529</used>
<free>129</free>
<zone-req>29110</zone-req>
<zone-name>96:</zone-name>
<zone-size>96</zone-size>
<count-limit>0</count-limit>
<used>2062</used>
<free>58</free>
<zone-req>4365</zone-req>
<zone-name>112:</zone-name>
<zone-size>112</zone-size>
<count-limit>0</count-limit>
<used>361</used>
<free>164</free>
<zone-req>24613</zone-req>
<zone-name>128:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>359</used>
<free>61</free>
```



```
<zone-req>942</zone-req>
<zone-name>160:</zone-name>
<zone-size>160</zone-size>
<count-limit>0</count-limit>
<used>364</used>
<free>44</free>
<zone-req>577</zone-req>
<zone-name>224:</zone-name>
<zone-size>224</zone-size>
<count-limit>0</count-limit>
<used>422</used>
<free>20</free>
<zone-req>1950</zone-req>
<zone-name>256:</zone-name>
<zone-size>256</zone-size>
<count-limit>0</count-limit>
<used>204</used>
<free>36</free>
<zone-req>1225</zone-req>
<zone-name>288:</zone-name>
<zone-size>288</zone-size>
<count-limit>0</count-limit>
<used>2</used>
<free>24</free>
<zone-req>10</zone-req>
<zone-name>512:</zone-name>
<zone-size>512</zone-size>
<count-limit>0</count-limit>
<used>49</used>
<free>7</free>
<zone-req>911</zone-req>
<zone-name>1024:</zone-name>
<zone-size>1024</zone-size>
<count-limit>0</count-limit>
<used>213</used>
<free>11</free>
<zone-req>1076</zone-req>
<zone-name>2048:</zone-name>
<zone-size>2048</zone-size>
<count-limit>0</count-limit>
<used>199</used>
<free>113</free>
<zone-req>640</zone-req>
<zone-name>4096:</zone-name>
<zone-size>4096</zone-size>
<count-limit>0</count-limit>
<used>144</used>
<free>7</free>
<zone-req>2249</zone-req>
<zone-name>Files:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>665</used>
<free>77</free>
<zone-req>16457</zone-req>
<zone-name>MAC labels:</zone-name>
<zone-size>20</zone-size>
<count-limit>0</count-limit>
<used>3998</used>
<free>227</free>
```



```
<zone-req>21947</zone-req>
<zone-name>PROC:</zone-name>
<zone-size>544</zone-size>
<count-limit>0</count-limit>
<used>116</used>
<free>10</free>
<zone-req>1394</zone-req>
<zone-name>THREAD:</zone-name>
<zone-size>416</zone-size>
<count-limit>0</count-limit>
<used>127</used>
<free>17</free>
<zone-req>131</zone-req>
<zone-name>KSEGRP:</zone-name>
<zone-size>88</zone-size>
<count-limit>0</count-limit>
<used>127</used>
<free>73</free>
<zone-req>131</zone-req>
<zone-name>UPCALL:</zone-name>
<zone-size>44</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>SLEEPQUEUE:</zone-name>
<zone-size>32</zone-size>
<count-limit>0</count-limit>
<used>145</used>
<free>194</free>
<zone-req>145</zone-req>
<zone-name>VMSPACE:</zone-name>
<zone-size>268</zone-size>
<count-limit>0</count-limit>
<used>57</used>
<free>13</free>
<zone-req>1335</zone-req>
<zone-name>mbuf_packet:</zone-name>
<zone-size>256</zone-size>
<count-limit>180000</count-limit>
<used>256</used>
<free>128</free>
<zone-req>49791</zone-req>
<zone-name>mbuf:</zone-name>
<zone-size>256</zone-size>
<count-limit>180000</count-limit>
<used>50</used>
<free>466</free>
<zone-req>105183</zone-req>
<zone-name>mbuf_cluster:</zone-name>
<zone-size>2048</zone-size>
<count-limit>25190</count-limit>
<used>387</used>
<free>165</free>
<zone-req>5976</zone-req>
<zone-name>mbuf_jumbo_pagesize:</zone-name>
<zone-size>4096</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
```



```

<zone-req>0</zone-req>
<zone-name>mbuf_jumbo_9k:</zone-name>
<zone-size>9216</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>mbuf_jumbo_16k:</zone-name>
<zone-size>16384</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>ACL UMA zone:</zone-name>
<zone-size>388</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>g_bio:</zone-name>
<zone-size>132</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>174</free>
<zone-req>69750</zone-req>
<zone-name>ata_request:</zone-name>
<zone-size>200</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>57</free>
<zone-req>5030</zone-req>
<zone-name>ata_composite:</zone-name>
<zone-size>192</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>GENCFG:</zone-name>
<zone-size>72</zone-size>
<count-limit>1000004</count-limit>
<used>57</used>
<free>102</free>
<zone-req>57</zone-req>
<zone-name>VNODE:</zone-name>
<zone-size>292</zone-size>
<count-limit>0</count-limit>
<used>2718</used>
<free>25</free>
<zone-req>2922</zone-req>
<zone-name>VNODEPOLL:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>S VFS Cache:</zone-name>
<zone-size>68</zone-size>
<count-limit>0</count-limit>
<used>2500</used>
<free>76</free>

```



```
<zone-req>3824</zone-req>
<zone-name>L VFS Cache:</zone-name>
<zone-size>291</zone-size>
<count-limit>0</count-limit>
<used>51</used>
<free>14</free>
<zone-req>63</zone-req>
<zone-name>NAMEI:</zone-name>
<zone-size>1024</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>8</free>
<zone-req>53330</zone-req>
<zone-name>NFSMOUNT:</zone-name>
<zone-size>480</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>NFSNODE:</zone-name>
<zone-size>460</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>PIPE:</zone-name>
<zone-size>404</zone-size>
<count-limit>0</count-limit>
<used>27</used>
<free>9</free>
<zone-req>717</zone-req>
<zone-name>KNOTE:</zone-name>
<zone-size>72</zone-size>
<count-limit>0</count-limit>
<used>42</used>
<free>64</free>
<zone-req>3311</zone-req>
<zone-name>socket:</zone-name>
<zone-size>412</zone-size>
<count-limit>25191</count-limit>
<used>343</used>
<free>8</free>
<zone-req>2524</zone-req>
<zone-name>unpcb:</zone-name>
<zone-size>140</zone-size>
<count-limit>25200</count-limit>
<used>170</used>
<free>26</free>
<zone-req>2157</zone-req>
<zone-name>ipq:</zone-name>
<zone-size>52</zone-size>
<count-limit>216</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>udpcb:</zone-name>
<zone-size>232</zone-size>
<count-limit>25194</count-limit>
<used>19</used>
<free>32</free>
```



```

<zone-req>31</zone-req>
<zone-name>inpcb:</zone-name>
<zone-size>232</zone-size>
<count-limit>25194</count-limit>
<used>40</used>
<free>28</free>
<zone-req>105</zone-req>
<zone-name>tcpcb:</zone-name>
<zone-size>520</zone-size>
<count-limit>25193</count-limit>
<used>40</used>
<free>16</free>
<zone-req>105</zone-req>
<zone-name>tcptw:</zone-name>
<zone-size>56</zone-size>
<count-limit>5092</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>syncache:</zone-name>
<zone-size>128</zone-size>
<count-limit>15360</count-limit>
<used>0</used>
<free>60</free>
<zone-req>55</zone-req>
<zone-name>tcpreass:</zone-name>
<zone-size>20</zone-size>
<count-limit>1690</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>sackhole:</zone-name>
<zone-size>20</zone-size>
<count-limit>0</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>ripcb:</zone-name>
<zone-size>232</zone-size>
<count-limit>25194</count-limit>
<used>5</used>
<free>29</free>
<zone-req>5</zone-req>
<zone-name>SWAPMETA:</zone-name>
<zone-size>276</zone-size>
<count-limit>94948</count-limit>
<used>0</used>
<free>0</free>
<zone-req>0</zone-req>
<zone-name>FFS inode:</zone-name>
<zone-size>132</zone-size>
<count-limit>0</count-limit>
<used>1146</used>
<free>72</free>
<zone-req>1306</zone-req>
<zone-name>FFS1 dinode:</zone-name>
<zone-size>128</zone-size>
<count-limit>0</count-limit>
<used>1146</used>
<free>24</free>

```



```

    <zone-req>1306</zone-req>
    <zone-name>FFS2 dinode:</zone-name>
    <zone-size>256</zone-size>
    <count-limit>0</count-limit>
    <used>0</used>
    <free>0</free>
    <zone-req>0</zone-req>
</vmstat-memstat-zone>
<vmstat-sumstat>
  <cpu-context-switch>934906</cpu-context-switch>
  <dev-intr>1707986</dev-intr>
  <soft-intr>33819</soft-intr>
  <traps>203604</traps>
  <sys-calls>1200636</sys-calls>
  <kernel-thrds>60</kernel-thrds>
  <fork-calls>1313</fork-calls>
  <vfork-calls>21</vfork-calls>
  <rfork-calls>0</rfork-calls>
  <swap-pageins>0</swap-pageins>
  <swap-pagedin>0</swap-pagedin>
  <swap-pageouts>0</swap-pageouts>
  <swap-pagedout>0</swap-pagedout>
  <vnode-pageins>23094</vnode-pageins>
  <vnode-pagedin>23119</vnode-pagedin>
  <vnode-pageouts>226</vnode-pageouts>
  <vnode-pagedout>3143</vnode-pagedout>
  <page-daemon-wakeup>0</page-daemon-wakeup>
  <page-daemon-examined-pages>0</page-daemon-examined-pages>
  <pages-reactivated>8821</pages-reactivated>
  <copy-on-write-faults>48364</copy-on-write-faults>
  <copy-on-write-optimized-faults>31</copy-on-write-optimized-faults>
  <zero-fill-pages-zeroed>74665</zero-fill-pages-zeroed>
  <zero-fill-pages-prezeroed>70061</zero-fill-pages-prezeroed>
  <transit-blocking-page-faults>85</transit-blocking-page-faults>
  <total-vm-faults>191824</total-vm-faults>

<pages-affected-by-kernel-thrd-creat>0</pages-affected-by-kernel-thrd-creat>
  <pages-affected-by-fork>95343</pages-affected-by-fork>
  <pages-affected-by-vfork>3526</pages-affected-by-vfork>
  <pages-affected-by-rfork>0</pages-affected-by-rfork>
  <pages-freed>221502</pages-freed>
  <pages-freed-by-daemon>0</pages-freed-by-daemon>
  <pages-freed-by-exiting-proc>75630</pages-freed-by-exiting-proc>
  <pages-active>45826</pages-active>
  <pages-inactive>13227</pages-inactive>
  <pages-in-vm-cache>49278</pages-in-vm-cache>
  <pages-wired-down>10640</pages-wired-down>
  <pages-free>70706</pages-free>
  <bytes-per-page>4096</bytes-per-page>
  <swap-pages-used>0</swap-pages-used>
  <peak-swap-pages-used>0</peak-swap-pages-used>
  <total-name-lookups>214496</total-name-lookups>
  <positive-cache-hits>92</positive-cache-hits>
  <negative-cache-hits>5</negative-cache-hits>
  <pass2>0</pass2>
  <cache-deletions>0</cache-deletions>
  <cache-falsehits>0</cache-falsehits>
  <toolong>0</toolong>
</vmstat-sumstat>
<vmstat-intr>

```



```

    <intr-name>irq0: clk          </intr-name>
    <intr-cnt>1243455</intr-cnt>
    <intr-rate>999</intr-rate>
    <intr-name>irq4: sio0        </intr-name>
    <intr-cnt>1140</intr-cnt>
    <intr-rate>0</intr-rate>
    <intr-name>irq8: rtc          </intr-name>
    <intr-cnt>159164</intr-cnt>
    <intr-rate>127</intr-rate>
    <intr-name>irq9: cbb1 fxp0    </intr-name>
    <intr-cnt>28490</intr-cnt>
    <intr-rate>22</intr-rate>
    <intr-name>irq10: fxp1        </intr-name>
    <intr-cnt>20593</intr-cnt>
    <intr-rate>16</intr-rate>
    <intr-name>irq14: ata0        </intr-name>
    <intr-cnt>5031</intr-cnt>
    <intr-rate>4</intr-rate>
    <intr-name>Total</intr-name>
    <intr-cnt>1457873</intr-cnt>
    <intr-rate>1171</intr-rate>
  </vmstat-intr>
  <vm-kernel-state>
    <vm-kmem-map-free>248524800</vm-kmem-map-free>
  </vm-kernel-state>
</system-virtual-memory-information>
<cli>
  <banner></banner>
</cli>
</rpc-reply>

```

```

regress@hager> show system virtual-memory

```

Type	InUse	MemUse	HighUse	Requests	Size(s)
mtx_pool	1	8K	-	1	(F4p)
DEVFS	63	2K	-	64	16,128
subproc	282	559K	-	2131	32768,8388608
proc	2	1K	-	2	262144
session	6	1K	-	19	2048
pgrp	9	1K	-	25	128
cred	35	5K	-	38288	1024
uidinfo	4	1K	-	10	32,128
plimit	31	8K	-	189	32768
sysctltmp	0	0K	-	981	16,32,64,32768
sysctluid	862	23K	-	862	16,32,64
umtx	189	9K	-	189	64
ifa_list	14	1K	-	14	16
vpls_lc_instance	1	2K	-	1	4194304
ifl_tlv_info	1	1K	-	1	16
mesh-group	4	1K	-	4	256
rtsmg	0	0K	-	1021	8388608
idl	1	20K	-	186	32,64,512,4096,65536,8388608
gencfg	569	2777K	-	626	16,32,64,128,256,512,1024,2048,4096,8192,1048576,2097152,4194304
pfestat	123	34K	-	626	16,32,4096,16384,4194304,8388608
pic	4	2K	-	4	32,64,256,2097152
ifservice	1	1K	-	1	32
lr	1	1K	-	1	1048576
itable64	1	1K	-	1	2048
itable32	189	12K	-	189	128



itable16	372	72K	-	378	4096,262144
ifstate	3072	113K	-	3506	
16,64,128,256,512,1024,2048,4096,8192,32768,1048576,2097152,4194304					
pfe_ipc	0	0K	-	1766	
16,32,64,128,256,512,1024,4096,8192,16384,32768,524288,1048576,2097152,4194304,8388608					
mkey	568	9K	-	7615	16,256
socket	2	1K	-	2	16
ifaddr	27	2K	-	27	128
sysctl	23	6K	-	43074	16,32,64,128,262144,1048576,2097152
rtable	115	17K	-	117	16,32,256,512,4096,8192,1048576
ifmaddr	40	2K	-	40	16,32
ipfw	48	25K	-	103	
16,32,64,256,1024,4096,16384,32768,262144,524288,1048576,2097152,4194304,8388608					
rtdata	1	1K	-	1	32
ifstat	109	158K	-	156	
32,512,2048,16384,32768,1048576,8388608					
ifdevice	5	3K	-	5	16,2097152
rcache	4	8K	-	4	4194304
rnode	56	2K	-	58	16,32
metrics	3	1K	-	4	1024
rtnexthop	126	17K	-	126	16,32,2048,4096,8192,16384,32768,65536
iffamily	31	4K	-	31	16,32,2048,4096
iflogical	18	5K	-	18	16,128,65536,1048576
NULLFS node	14	1K	-	3102	16
NULLFS hash	1	1K	-	1	128
bus-sc	19	8K	-	82	
16,64,128,1024,2048,4096,8192,16384,262144,524288,1048576,2097152,4194304,8388608					
bus	256	35K	-	425	16,32,64,128,512,2097152
devstat	10	21K	-	10	16,8388608
eventhandler	72	4K	-	72	32,256,512
NULLFS mount	6	1K	-	6	16
kobj	72	144K	-	78	4194304
pfs_nodes	25	2K	-	25	256
pfs_vncache	41	2K	-	81	32
rman	38	3K	-	43	16,32,256
CAM dev queue	2	1K	-	2	128
sbuf	0	0K	-	427	16,32,128,2048,2097152
GEOM	142	15K	-	725	
16,32,128,256,512,1024,2048,16384,1048576,2097152					
ISOFS node	4780	449K	-	4780	512
taskqueue	9	1K	-	9	16,256
turnstiles	190	12K	-	190	128
Unitno	6	1K	-	8	16,64
iov	0	0K	-	72731	16,32,64,128,256,512,1024,2048
ioctlops	0	0K	-	12180	
16,64,65536,524288,1048576,2097152,4194304,8388608					
msg	4	25K	-	4	2097152,8388608
sem	4	7K	-	4	1048576,2097152,8388608
shm	13	76K	-	17	8388608
ttys	157	22K	-	892	2048,2097152
ptys	1	1K	-	1	512
mbuf_tag	6	1K	-	7293	32,128
pcb	483	111K	-	2577	
16,32,64,128,256,8192,16384,65536,262144,1048576,2097152,4194304,8388608					
soname	164	18K	-	22803	16,32,64,128,1024



BIO buffer	102	204K	-	1066	4194304
vfscache	1	512K	-	1	4194304
cluster_save buffer	0	OK	-	-	40 32,64
VFS hash	1	256K	-	1	32,64
vnodes	1	1K	-	1	2048
vnodemarker	0	OK	-	729	524288
mount	226	25K	-	337	16,32,64,512,1024,262144,2097152
ISOFS mount	1	1K	-	1	2048
ifl_idx_mgr	1	1K	-	1	128
CAM queue	7	1K	-	25	16
MD sectors	32	128K	-	32	8388608
MD disk	36	9K	-	36	16,4194304
CAM SIM	2	1K	-	2	64
CAM periph	3	1K	-	4	256
jlist	1	1K	-	1	64
STP	31	7K	-	31	16,1024,2048,1048576
cdev	26	4K	-	26	1024
syncache	1	8K	-	1	1024
CAM XPT	15	3K	-	46	16,64,262144,1048576,2097152
tlv_stat	0	OK	-	87	16,64,262144,1048576,2097152
Aggregator	2	1K	-	2	256
sigio	2	1K	-	3	32
Bridge Domain	4	2K	-	4	16,1048576
p1003.1b	1	1K	-	1	16
filedesc	176	39K	-	2234	16,4096,16384,1048576,2097152
kenv	50	6K	-	58	16,32,64,128,512,8388608
kqueue	27	13K	-	59	32,4096,262144,2097152
proc-args	69	3K	-	1472	
16,32,64,128,256,512,1024,2048,4096,8192					
zombie	1	1K	-	1850	256
entropy	1024	48K	-	1024	64
ithread	45	3K	-	45	16,64,2048
UART	3	2K	-	3	128,1048576,2097152
KTRACE	101	8K	-	101	256
USBdev	4	1K	-	11	16,512,1048576
newblk	1	1K	-	1	262144
inodedep	1	256K	-	1	262144
pagedep	1	64K	-	1	262144
UFS mount	18	38K	-	30	65536,4194304,8388608
linker	212	240K	-	325	
16,32,64,128,256,512,1024,2048,4096,8192,16384,32768,65536,262144,524288,1048576,2097152,4194304,8388608					
UMAHash	2	17K	-	10	262144,1048576,2097152,4194304,8388608
lockf	89	6K	-	19507	128
USB	134	10K	-	25616	16,32,64,128,1024,8192,262144,4194304
VM pgdata	1	256K	-	1	16,32,64,128,1024,8192,262144,4194304
temp	4384	656K	-	9085	
16,32,64,256,512,1024,2048,4096,65536,262144,1048576,2097152,4194304,8388608					
devbuf	290	1556K	-	415	
16,32,64,128,256,1024,2048,4096,8192,1048576,2097152,4194304,8388608					
cache	2	1K	-	2	16384
DEVFS1	79	18K	-	80	32768
DEVFS3	326	39K	-	327	1024
DEVFS2	79	2K	-	228	16
module	186	12K	-	186	64,128
gresstatevarlog	1	96K	-	1	64,128
DEVFS_RULE	5	1K	-	5	32,262144



KATS	0	OK	-	11	16,32,64,256	
crypto	1	1K	-	1	1048576	
Export Host	2	2K	-	2	2097152	
inpcbpolicy	118	2K	-	790	16	
ipsecpolicy	236	37K	-	1580	4096	
ITEM	SIZE	LIMIT	USED	FREE	REQUESTS	
UMA Kegs:	136,	0,	80,	16,	80	
UMA Zones:	392,	0,	80,	1,	80	
UMA Slabs:	64,	0,	3588,	129,	5170	
UMA RCntSlabs:	104,	0,	147,	1,	147	
UMA Hash:	128,	0,	5,	25,	7	
16 Bucket:	76,	0,	37,	13,	53	
32 Bucket:	140,	0,	31,	25,	53	
64 Bucket:	268,	0,	37,	5,	82	
128 Bucket:	524,	0,	98,	0,	649	
VM OBJECT:	136,	0,	8074,	394,	42585	
MAP:	168,	0,	8,	15,	8	
KMAP ENTRY:	72,	35828,	31,	181,	9422	
MAP ENTRY:	72,	0,	5354,	900,	121777	
PV ENTRY:	28,	700278,	148072,	12075,	1346404	
DP fakepg:	88,	0,	1,	87,	1	
mt_zone:	768,	0,	261,	119,	261	
16:	16,	0,	4817,	258,	61005	
32:	32,	0,	700,	91,	45307	
48:	48,	0,	1752,	120,	73638	
64:	64,	0,	830,	114,	27311	
80:	80,	0,	458,	70,	3204	
96:	96,	0,	9523,	37,	9655	
120:	120,	0,	694,	74,	56623	
128:	128,	0,	337,	113,	1230	
160:	160,	0,	512,	16,	2000	
176:	176,	0,	123,	9,	178	
208:	208,	0,	351,	29,	2390	
232:	232,	0,	270,	19,	466	
240:	240,	0,	22,	26,	1478	
248:	248,	0,	0,	0,	0	
256:	256,	0,	210,	15,	253	
296:	296,	0,	8,	18,	753	
512:	512,	0,	113,	7,	564	
1024:	1024,	0,	146,	10,	974	
2048:	2048,	0,	239,	577,	5805	
4096:	4096,	0,	367,	7,	4011	
Files:	80,	0,	1030,	74,	47744	
MAC labels:	20,	0,	8479,	140,	67133	
PROC:	632,	0,	130,	20,	1979	
THREAD:	524,	0,	175,	14,	175	
KSEGRP:	100,	0,	175,	35,	175	
UPCALL:	44,	0,	0,	0,	0	
SLEEPQUEUE:	32,	0,	190,	149,	190	
VMSPACE:	328,	0,	68,	28,	1917	
mbuf_packet:	256,	88200,	0,	128,	9045	
mbuf:	256,	88200,	57,	595,	187328	
mbuf_cluster:	2048,	22048,	132,	162,	7694	
mbuf_jumbo_pagesize:	4096,	0,	0,	0,	0	0
mbuf_jumbo_9k:	9216,	0,	0,	0,	0	
mbuf_jumbo_16k:	16384,	0,	0,	0,	0	
g_bio:	144,	0,	0,	297,	87407	
ata_request:	224,	0,	0,	0,	0	
ata_composite:	192,	0,	0,	0,	0	
GENCFG:	72,	1000004,	249,	69,	266	



```

VNODE:          272,      0,    6149,    11,    9449
VNODEPOLL:      72,      0,      0,      0,      0
NAMEI:          1024,     0,      0,     36,   125321
S VFS Cache:    68,      0,   6099,    61,    7466
L VFS Cache:    291,     0,    224,    23,    228
NFSMOUNT:       488,     0,      0,      0,      0
NFSNODE:        472,     0,      0,      0,      0
PIPE:           404,     0,     69,    12,    1198
KNOTE:          72,      0,    106,    53,   18201
socket:         376,   22050,    566,    14,    7613
unpcb:          144,   22059,    258,    39,    5877
ipq:             52,    216,      0,      0,      0
udp_inpcb:      272,   22050,     21,    21,     43
tcp_inpcb:      272,   22050,     91,     7,    743
tcpcb:          704,   22050,     91,    14,    743
sackhole:       20,      0,      0,      0,      0
tcptw:          60,   4410,      0,      0,      0
syncache:      128,   15360,      0,    60,     25
tcpreass:       20,   1521,      0,      0,      0
ripcb:          272,   22050,      8,    20,      8
SWAPMETA:       280,  322518,      0,      0,      0
FFS inode:      144,      0,   1222,    20,   1387
FFS1 dinode:    128,      0,   1222,     8,   1387
FFS2 dinode:    256,      0,      0,      0,      0
md0:            512,      0,  20183,    17,   20183
cryptop:        64,      0,      0,      0,      0
cryptodesc:     56,      0,      0,      0,      0
md3:            512,      0,    18,     6,     18
7497039 cpu context switches
5325569 device interrupts
4299293 software interrupts
0 traps
7483223 system calls
63 kernel threads created
1896 fork() calls
20 vfork() calls
0 rfork() calls
0 swap pager pageins
0 swap pager pages paged in
0 swap pager pageouts
0 swap pager pages paged out
27971 vnode pager pageins
30458 vnode pager pages paged in
551 vnode pager pageouts
5527 vnode pager pages paged out
0 page daemon wakeups
0 pages examined by the page daemon
25370 pages reactivated
173201 copy-on-write faults
36 copy-on-write optimized faults
135659 zero fill pages zeroed
127984 zero fill pages prezeroed
224 intransit blocking page faults
462029 total VM faults taken
0 pages affected by kernel thread creation
780640 pages affected by fork()
4850 pages affected by vfork()
0 pages affected by rfork()
401993 pages freed
0 pages freed by daemon

```



```
201585 pages freed by exiting process
  71208 pages active
  35957 pages inactive
 100195 pages in VM cache
 399107 pages wired down
 411743 pages free
   4096 bytes per page
       0 swap pages used
       0 peak swap pages used
310371 total name lookups
      cache hits (86% pos + 10% neg) system 0% per-directory
      deletions 0%, falsehits 0%, toolong 0%
interrupt                total      rate
clock                    3651206    3990
uart                      67064      73
IPI                       819301     895
Totalodesc:              4537571    4959
vm.kmem_map_free: 391446528
```



## show version

**List of Syntax**

- [Syntax on page 1025](#)
- [Syntax \(EX Series Switches\) on page 1025](#)
- [Syntax \(TX Matrix Router\) on page 1025](#)
- [Syntax \(TX Matrix Plus Router\) on page 1025](#)
- [Syntax \(MX Series Router\) on page 1025](#)
- [Syntax \(QFX Series\) on page 1025](#)
- [Syntax \(Junos OS Evolved\) on page 1025](#)

**Syntax**

```
show version
<brief | detail>
```

**Syntax (EX Series Switches)**

```
show version
<all-members>
<brief | detail>
<local>
<member member-id>
```

**Syntax (TX Matrix Router)**

```
show version
<brief | detail>
<all-chassis | all-lcc | lcc number | scc>
```

**Syntax (TX Matrix Plus Router)**

```
show version
<all-chassis | all-lcc | lcc number | sfc number>
<brief | detail>
```

**Syntax (MX Series Router)**

```
show version
<brief | detail>
<all-members>
<local>
<member member-id>
```

**Syntax (QFX Series)**

```
show version
<brief | detail>
<component component-name | all>
```

**Syntax (Junos OS Evolved)**

```
show version
<brief | detail>
<node (all | node-name)>
```

**Release Information**

- Command introduced before Junos OS Release 7.4.
- Command introduced in Junos OS Release 9.0 for EX Series switches.



**sfc** option introduced for the TX Matrix Plus router in Junos OS Release 9.6.  
 Command introduced in Junos OS Release 11.1 for the QFX Series.  
 Command introduced in Junos OS Release 15.1X54-D20 for ACX5048 and ACX5096 Routers.  
**node** option introduced in Junos OS Evolved Release 18.3R1.

**Description** Display the hostname and version information about the software running on the router or switch.

Beginning in Junos OS Release 13.3, the **show version** command output includes the **Junos** field that displays the Junos OS version running on the device. This field provides a consistent means of identifying the Junos OS version, rather than extracting that information from the list of installed sub-packages.

The output for the **show version** command for Junos OS Evolved includes a **Junos Package** field that indicates the installation package name. From the prefix of this package name, you can decode which Junos OS architecture the device is running.

*Table 49: Common Package Prefixes for Junos OS*

Junos OS Package Prefix	Junos OS Architecture
jinstall-*	Junos OS for M Series, MX Series, T Series, TX Matrix, and TX Matrix Plus routers
junos-install-*	Junos OS based on an upgraded FreeBSD kernel instead of older versions of FreeBSD
junos-vmhost-install-*	Junos OS with upgraded FreeBSD on a VM Host
junos-evo-install-*	Junos OS Evolved

**Options** **none**—Display standard information about the hostname and version of the software running on the router or switch.

**brief | detail**—(Optional) Display the specified level of output.

**all-members**—(EX4200 switches and MX Series routers only) (Optional) Display standard information about the hostname and version of the software running on all members of the Virtual Chassis configuration.

**component all**—(QFabric systems only) (Optional) Display the host name and version information about the software running on all the components on the QFabric system.

**component *component-name***—(QFabric systems only) (Optional) Display the host name and version information about the software running on a specific QFabric system component. Replace *component-name* with the name of the QFabric system component. The *component-name* can be the name of a diagnostics Routing Engine, Director group, fabric control Routing Engine, fabric manager Routing Engine, Interconnect device, or Node group.



**local**—(EX4200 switches and MX Series routers only) (Optional) Display standard information about the hostname and version of the software running on the local Virtual Chassis member.

**member *member-id***—(EX4200 switches and MX Series routers only) (Optional) Display standard information about the hostname and version of the software running on the specified member of the Virtual Chassis configuration. For EX4200 switches, replace *member-id* with a value from 0 through 9. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

**node (all | *node-name*)**—(Optional) Display version information for the specified node or all nodes.

**scc**—(TX Matrix routers only) (Optional) Display the hostname and version information about the software running on the TX Matrix router (or switch-card chassis).

**lcc *number***—(TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display the host name and version information about the software running on for a specified T640 router (line-card chassis or LCC) that is connected to the TX Matrix router. On a TX Matrix Plus router, display the host name and version information about the software running for a specified T1600 or T4000 router (LCC) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**sfc *number***—(TX Matrix Plus routers only) (Optional) Display the hostname and version information about the software running on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

**Additional Information** By default, when you issue the **show version** command on a TX Matrix or TX Matrix Plus master Routing Engine, the command is broadcast to all the T640 (in a routing matrix based on a TX Matrix router) or T1600 or T4000 (in a routing matrix based on a TX Matrix Plus router) master Routing Engines connected to it. Likewise, if you issue the same command on the TX Matrix or TX Matrix Plus backup Routing Engine, the command is broadcast to all the T640 (in a routing matrix based on a TX Matrix router) or T1600 or T4000 (in a routing matrix based on a TX Matrix Plus router) backup Routing Engines that are connected to it.



**Required Privilege Level** view

**List of Sample Output** [show version \(Devices Running Junos OS Release 13.3 and Later\) on page 1028](#)  
[show version on page 1028](#)  
[show version \(Junos OS Evolved\) on page 1029](#)

## Sample Output

### [show version \(Devices Running Junos OS Release 13.3 and Later\)](#)

The following output is from the MX240 Router and shows the **Junos** field introduced in Junos OS 13.3. Depending on the platform running Junos OS 13.3, you might see different installed sub-packages, but the **Junos** field is common across all platforms that run Junos OS 13.3 and later.

```
user@host > show version
```

```
Hostname: lab
Model: mx240
Junos: 13.3R1.4
JUNOS Base OS boot [13.3R1.4]
JUNOS Base OS Software Suite [13.3R1.4]
JUNOS Kernel Software Suite [13.3R1.4]
JUNOS Crypto Software Suite [13.3R1.4]
JUNOS Packet Forwarding Engine Support (M/T/EX Common) [13.3R1.4]
JUNOS Packet Forwarding Engine Support (MX Common) [13.3R1.4]
JUNOS Online Documentation [13.3R1.4]
JUNOS Services AACL Container package [13.3R1.4]
JUNOS Services Application Level Gateways [13.3R1.4]
JUNOS AppId Services [13.3R1.4]
JUNOS Border Gateway Function package [13.3R1.4]
JUNOS Services Captive Portal and Content Delivery Container package [13.3R1.4]
JUNOS Services HTTP Content Management package [13.3R1.4]
JUNOS IDP Services [13.3R1.4]
JUNOS Services Jflow Container package [13.3R1.4]
JUNOS Services LL-PDF Container package [13.3R1.4]
JUNOS Services MobileNext Software package [13.3R1.4]
JUNOS Services Mobile Subscriber Service Container package [13.3R1.4]
JUNOS Services NAT [13.3R1.4]
JUNOS Services PTSP Container package [13.3R1.4]
JUNOS Services RPM [13.3R1.4]
JUNOS Services Stateful Firewall [13.3R1.4]
JUNOS Voice Services Container package [13.3R1.4]
JUNOS Services Crypto [13.3R1.4]
JUNOS Services SSL [13.3R1.4]
JUNOS Services IPSec [13.3R1.4]
JUNOS platform Software Suite [13.3R1.4]
JUNOS Runtime Software Suite [13.3R1.4]
JUNOS Routing Software Suite [13.3R1.4]
JUNOS py-base-i386 [13.3R1.4]
```

### [show version](#)

```
user@host> show version
```

```
Hostname: router1
Model: m20
JUNOS Base OS boot [7.2-20050312.0]
```



```
JUNOS Base OS Software Suite [7.2-20050312.0]
JUNOS Kernel Software Suite [7.2R1.7]
JUNOS Packet Forwarding Engine Support (M20/M40) [7.2R1.7]
JUNOS Routing Software Suite [7.2R1.7]
JUNOS Online Documentation [7.2R1.7]
JUNOS Crypto Software Suite [7.2R1.7]
```

```
{master}
```

```
user@host> show version psd 1
```

```
psd1-re0:
```

```
-----
Hostname: china
Model: t640
JUNOS Base OS boot [9.1I20080311_1959_builder]
JUNOS Base OS Software Suite [9.1-20080321.0]
JUNOS Kernel Software Suite [9.1-20080321.0]
JUNOS Crypto Software Suite [9.1-20080321.0]
JUNOS Packet Forwarding Engine Support (M/T Common) [9.1-20080321.0]
JUNOS Packet Forwarding Engine Support (T-series) [9.1-20080321.0]
JUNOS Online Documentation [9.1-20080321.0]
JUNOS Routing Software Suite [9.1-20080321.0]
labpkg [7.0]
```

### show version (Junos OS Evolved)

```
user@host> show version
```

```
Model: qfx5200-32c-32q
```

```
Junos: 18.3-20181119.2
```

```
Junos Package: junos-evo-install-qfx-ms-fixed-x86-64-18.3-20181119.2.iso
```

```
Yocto: 2.2.1
```

```
Linux Kernel: 4.8.28-WR2.2.1_standard
```



## start shell

---

**Syntax**     `start shell (csh | sh)`  
              `<user username>`

**Release Information**    Command introduced before Junos OS Release 7.4.  
                             Command introduced in Junos OS Release 9.0 for EX Series switches.  
                             Command introduced in Junos OS Release 11.1 for the QFX Series.  
                             Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**            Exit from the CLI environment and create a UNIX-level shell. To return to the CLI, type **exit** from the shell.



**NOTE:**

- To issue this command, the user must have the required login access privileges configured by including the **permissions** statement at the **[edit system login class *class-name*]** hierarchy level.
  - UNIX wheel group membership or permissions are no longer required to issue this command.
- 

**Options**            **csh**—Create a UNIX C shell.  
  
                      **sh**—Create a UNIX Bourne shell.  
  
                      **user *username***—(Optional) Start the shell as another user.

**Additional Information**    When you are in the shell, the shell prompt has the following format:

```
username@hostname%
```

An example of the prompt is:

```
root@host%
```

**Required Privilege Level**    shell or maintenance

**List of Sample Output**     [start shell csh on page 1031](#)

**Output Fields**            When you enter this command, you are provided feedback on the status of your request.



## Sample Output

### start shell csh

```
user@host> start shell csh
```

```
%
```

```
exit
```

```
%
```

```
username@hostname% start shell sh
```

```
%
```

```
exit
```

```
user@host>
```



## test configuration

---

<b>Syntax</b>	<code>test configuration <i>filename</i></code> <code>syntax-only</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. <b>syntax-only</b> option introduced in Junos OS Release 12.1. Command introduced in Junos OS Release 14.1X53-D20 for OCX Series switches.
<b>Description</b>	Verify that the syntax of a configuration file is correct. If the configuration contains any syntax or commit check errors, a message is displayed to indicate the line number and column number in which the error was found. When using the <i>filename</i> option, this command only accepts text files.
<b>Options</b>	<b><i>filename</i></b> —Name of the configuration file. This file must be a text file and no other type.  <b>syntax-only</b> —(Optional) Check the syntax of a partial configuration file, without checking for commit errors.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">test configuration on page 1032</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### test configuration

```
user@host> test configuration terminal
[Type ^D to end input]
system {
host-name host;
test1;
login;
}
terminal:3:(8) syntax error: test
[edit system]
'test;'
syntax error
terminal:4:(11) statement must contain additional statements: ;
[edit system login]
'login ;'
statement must contain additional statements
configuration syntax failed
```







