



---

# JunosE™ Software for E Series™ Broadband Services Routers

## IP Services Configuration Guide

Release

16.1.x



---

Modified: 2015-07-29

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

*JunosE™ Software for E Series™ Broadband Services Routers IP Services Configuration Guide*  
Release 16.1.x  
Copyright © 2015, Juniper Networks, Inc.  
All rights reserved.

Revision History  
August 2015—FRS JunosE 16.1.x

The information in this document is current as of the date on the title page.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Abbreviated Table of Contents

	About the Documentation .....	xxi
Part 1	Chapters	
Chapter 1	Configuring Routing Policy .....	3
Chapter 2	Monitoring Routing Policy .....	65
Chapter 3	Configuring NAT .....	85
Chapter 4	Configuring J-Flow Statistics .....	115
Chapter 5	Configuring BFD .....	131
Chapter 6	Configuring IPsec .....	143
Chapter 7	Configuring Dynamic IPsec Subscribers .....	193
Chapter 8	Configuring ANCP .....	209
Chapter 9	Monitoring ANCP .....	225
Chapter 10	Configuring Digital Certificates .....	233
Chapter 11	Configuring IP Tunnels .....	265
Chapter 12	Configuring Dynamic IP Tunnels .....	279
Chapter 13	IP Reassembly for Tunnels .....	297
Chapter 14	Securing L2TP and IP Tunnels with IPsec .....	303
Chapter 15	Monitoring L2TP and IP Tunnels Secured by IPsec .....	331
Chapter 16	Configuring the Mobile IP Home Agent .....	347
Chapter 17	Monitoring the Mobile IP Home Agent .....	361
Part 2	Index	
	Index .....	373



# Table of Contents

	<b>About the Documentation . . . . .</b>	<b>xxi</b>
	E Series and JunosE Documentation and Release Notes . . . . .	xxi
	Audience . . . . .	xxi
	E Series and JunosE Text and Syntax Conventions . . . . .	xxi
	Obtaining Documentation . . . . .	xxiii
	Documentation Feedback . . . . .	xxiii
	Requesting Technical Support . . . . .	xxiv
	Self-Help Online Tools and Resources . . . . .	xxiv
	Opening a Case with JTAC . . . . .	xxiv
<b>Part 1</b>	<b>Chapters</b>	
<b>Chapter 1</b>	<b>Configuring Routing Policy . . . . .</b>	<b>3</b>
	Routing Policy Overview . . . . .	3
	Routing Policy Platform Considerations . . . . .	4
	Route Map Match and Set Clauses . . . . .	4
	Understanding Route Map Match and Set Clauses . . . . .	5
	Example: Configuring a Route Map to Filter Routes on the Basis of the AS Path . . . . .	6
	Multiple Values in a Route Map Match Entry Overview . . . . .	8
	Negating Match Clauses on a Route Map . . . . .	9
	Exactly Matching a Community List on a Route Map Overview . . . . .	10
	Removing Community Lists from a Route Map Overview . . . . .	11
	Policy List Matching Overview . . . . .	12
	Redistributing Access or Access-Internal Routes . . . . .	12
	Multicast Bandwidths Setting Overview . . . . .	13
	Defining the Conditions for Redistributing Routes Using a Route Map . . . . .	13
	Configuring Match Clauses and Values for a Route Map . . . . .	14
	Configuring Set Clauses for a Route Map . . . . .	17
	Match Policy Lists . . . . .	20
	Match Policy Lists Overview . . . . .	20
	Creating and Launching the Match Policy List . . . . .	21

Access Lists . . . . .	21
Filtering Prefixes . . . . .	22
Filtering Routes on the Basis of Prefixes Overview . . . . .	22
Example: Redistributing Static Routes to IS-IS Using a Route Map and an Access List . . . . .	23
Example: Configuring Access Lists to Filter Routes Advertised to a BGP Device . . . . .	25
Filtering AS Paths . . . . .	27
Filtering Routes on the Basis of AS Paths Overview . . . . .	27
Example: Configuring a Route Map to Filter Routes on the Basis of the AS Path . . . . .	28
Example: Applying Access Lists Using a Route Map to Filter Routes . . . . .	30
Defining IP Access Lists . . . . .	32
Configuring the Advertisement of the Default Route . . . . .	33
Defining AS-Path Access Lists . . . . .	34
Defining IPv6 Access Lists . . . . .	34
Filtering BGP Advertisements Using Distribute Lists . . . . .	35
Assigning an AS-Path Access List to Inbound or Outbound Advertisements of a Neighbor . . . . .	36
Assigning an Inbound or Outbound Prefix List . . . . .	36
Assigning an Inbound or Outbound Prefix Tree . . . . .	37
Redistributing Routes Between Routing Domains . . . . .	37
Configuring Access Lists as PIM Sparse Mode Join Filters . . . . .	38
Clearing IP and IPv6 Access List Counters . . . . .	39
Table Maps . . . . .	40
Understanding Table Maps . . . . .	40
Creating Table Maps to Filter IP and IPv6 Access Routes . . . . .	41
Creating Table Maps to Filter IP and IPv6 Static Routes . . . . .	41
Filtering Undesired Traffic Using the Null Interface . . . . .	42
Prefix Lists . . . . .	42
Prefix Lists Overview . . . . .	43
Creating or Configuring an IP or IPv6 Prefix List for Route Filtering . . . . .	43
Clearing Hit Counts in the IP or IPv6 Prefix List . . . . .	44
Matching Routes on the Basis of the Destination IP or IPv6 Address Permitted by the Prefix List . . . . .	44
Matching Routes on the Basis of the Next-Hop Router IP or IPv6 Address Passed by the Prefix List . . . . .	45
Prefix Trees . . . . .	46
Prefix Tree Overview . . . . .	46
Creating or Configuring an IP Prefix Tree for Best Route Filtering . . . . .	47
Clearing Hit Counts in the IP Prefix Tree . . . . .	47
Matching Routes on the Basis of the Destination IP Address Permitted by the Prefix Tree . . . . .	47
Matching Routes on the Basis of the Next-Hop Router IP Address Passed by the Prefix Tree . . . . .	48
Summarizing Matched Routes on the Basis of the Network Base Address Set in the Prefix Tree . . . . .	48

	Community Lists . . . . .	49
	Community List Overview . . . . .	49
	Example: Setting Metrics for Routes Forwarded on the Basis of Communities . . . . .	50
	Configuring the Display Format for the Communities . . . . .	53
	Creating an IP Community List for BGP . . . . .	53
	Sending a Community Attribute to a BGP Neighbor . . . . .	54
	Setting a BGP Community Attribute to a List of Community Numbers . . . . .	54
	Extended Community Lists . . . . .	55
	Extended Community List Overview . . . . .	55
	Creating an IP Extended Community List for BGP . . . . .	56
	Matching an Extended Community List on a Route Map . . . . .	57
	Setting a BGP Extended Community Attribute . . . . .	57
	Using Regular Expressions . . . . .	58
	AS-Path Lists . . . . .	58
	Community Lists . . . . .	58
	Community Numbers . . . . .	58
	Metacharacters . . . . .	59
	Using Metacharacters as Literal Tokens . . . . .	59
	Regular Expression Examples . . . . .	60
	Managing the Routing Table . . . . .	62
	Troubleshooting Routing Policy Overview . . . . .	63
<b>Chapter 2</b>	<b>Monitoring Routing Policy . . . . .</b>	<b>65</b>
	Monitoring Extended Community Lists . . . . .	66
	Monitoring Access Lists . . . . .	66
	Monitoring the AS-Path Access Lists for IP . . . . .	67
	Monitoring the Routes Permitted by IP Community Lists . . . . .	68
	Monitoring Match Policy Lists . . . . .	69
	Monitoring the Prefix Lists Configured on the Router . . . . .	69
	Monitoring the Prefix Trees Configured on the Router . . . . .	69
	Monitoring IP Protocols . . . . .	70
	Monitoring IP Route Redistribution Policy . . . . .	73
	Monitoring the Current State of IP Routing Tables . . . . .	74
	Monitoring IP Routing Table Details for a Line Module . . . . .	77
	Monitoring the Status of IP Static Routes in the Routing Table . . . . .	78
	Monitoring IP Traffic Statistics . . . . .	80
	Monitoring Route Map Details . . . . .	84
<b>Chapter 3</b>	<b>Configuring NAT . . . . .</b>	<b>85</b>
	Overview . . . . .	85
	Platform Considerations . . . . .	86
	Module Requirements . . . . .	86
	References . . . . .	86
	NAT Configurations . . . . .	87
	Traditional NAT . . . . .	87
	Basic NAT . . . . .	87
	NAPT . . . . .	87
	Bidirectional NAT . . . . .	88
	Twice NAT . . . . .	88

Network and Address Terms . . . . .	88
Inside Local Addresses . . . . .	89
Inside Global Addresses . . . . .	89
Outside Local Addresses . . . . .	89
Outside Global Addresses . . . . .	89
Understanding Address Translation . . . . .	89
Inside Source Translation . . . . .	89
Outside Source Translation . . . . .	90
Address Assignment Methods . . . . .	90
Static Translations . . . . .	90
Dynamic Translations . . . . .	90
Order of Operations . . . . .	90
Inside-to-Outside Translation . . . . .	90
Outside-to-Inside Translation . . . . .	91
PPTP and GRE Tunneling Through NAT . . . . .	91
Packet Discard Rules . . . . .	92
Before You Begin . . . . .	92
Configuring a NAT License . . . . .	92
Limiting Translation Entries . . . . .	93
Specifying Inside and Outside Interfaces . . . . .	93
Defining Static Address Translations . . . . .	93
Creating Static Inside Source Translations . . . . .	94
Creating Static Outside Source Translations . . . . .	94
Defining Dynamic Translations . . . . .	95
Creating Access List Rules . . . . .	95
Defining Address Pools . . . . .	96
Defining Dynamic Translation Rules . . . . .	97
Creating Dynamic Inside Source Translation Rules . . . . .	98
Creating Dynamic Outside Source Translation Rules . . . . .	99
Defining Translation Timeouts . . . . .	99
Clearing Dynamic Translations . . . . .	100
NAT Configuration Examples . . . . .	101
NAPT Example . . . . .	101
Bidirectional NAT Example . . . . .	102
Twice NAT Example . . . . .	104
Cross-VRF Example . . . . .	105
Tunnel Configuration Through NAT Examples . . . . .	107
Clients on an Inside Network . . . . .	107
Clients on an Outside Network . . . . .	108
GRE Flows Through NAT . . . . .	108
Monitoring NAT . . . . .	109
Displaying the NAT License Key . . . . .	109
Displaying Translation Statistics . . . . .	109
Displaying Translation Entries . . . . .	111
Displaying Address Pool Information . . . . .	112
Displaying Inside and Outside Rule Settings . . . . .	113



<b>Chapter 4</b>	<b>Configuring J-Flow Statistics</b> . . . . .	<b>115</b>
	Overview . . . . .	115
	Interface Sampling . . . . .	115
	Aggregation Caches . . . . .	116
	Flow Collection . . . . .	116
	Main Flow Cache Contents . . . . .	116
	Cache Flow Export . . . . .	117
	Aging Flows . . . . .	117
	Operation with NAT . . . . .	117
	Operation with High Availability . . . . .	118
	Platform Considerations . . . . .	118
	Before You Configure J-Flow Statistics . . . . .	118
	Configuring Flow-Based Statistics Collection . . . . .	118
	Enabling Flow-Based Statistics . . . . .	119
	Enabling Flow-Based Statistics on an Interface . . . . .	119
	Defining a Sampling Interval . . . . .	119
	Setting Cache Size . . . . .	121
	Defining Aging Timers . . . . .	121
	Specifying the Activity Timer . . . . .	121
	Specifying the Inactivity Timer . . . . .	121
	Specifying Flow Export . . . . .	122
	Configuring Aggregation Flow Caches . . . . .	122
	Monitoring J-Flow Statistics . . . . .	125
	Clearing J-Flow Statistics . . . . .	125
	J-Flow show Commands . . . . .	125
<b>Chapter 5</b>	<b>Configuring BFD</b> . . . . .	<b>131</b>
	Bidirectional Forwarding Detection Overview . . . . .	131
	How BFD Works . . . . .	132
	Negotiation of the BFD Liveness Detection Interval . . . . .	132
	BFD Platform Considerations . . . . .	134
	BFD References . . . . .	134
	Configuring a BFD License . . . . .	135
	BFD Version Support . . . . .	135
	Configuring BFD . . . . .	136
	Managing BFD Adaptive Timer Intervals . . . . .	136
	Clearing BFD Sessions . . . . .	137
	Monitoring BFD . . . . .	138
	System Event Logs . . . . .	138
	Viewing BFD Information . . . . .	139
<b>Chapter 6</b>	<b>Configuring IPsec</b> . . . . .	<b>143</b>
	Overview . . . . .	143
	IPsec Terms and Acronyms . . . . .	143
	Platform Considerations . . . . .	145
	References . . . . .	145

	IPsec Concepts . . . . .	146
	Secure IP Interfaces . . . . .	146
	RFC 2401 Compliance . . . . .	147
	IPsec Protocol Stack . . . . .	147
	Security Parameters . . . . .	148
	Manual Versus Signaled Interfaces . . . . .	149
	Operational Virtual Router . . . . .	150
	Transport Virtual Router . . . . .	150
	Perfect Forward Secrecy . . . . .	152
	Lifetime . . . . .	152
	Inbound and Outbound SAs . . . . .	153
	Transform Sets . . . . .	153
	Other Security Features . . . . .	156
	IP Security Policies . . . . .	156
	ESP Processing . . . . .	156
	AH Processing . . . . .	156
	IPsec Maximums Supported . . . . .	157
	DPD and IPsec Tunnel Failover . . . . .	157
	Tunnel Failover . . . . .	158
	IKE Overview . . . . .	158
	Main Mode and Aggressive Mode . . . . .	158
	Aggressive Mode Negotiations . . . . .	159
	IKE Policies . . . . .	160
	Priority . . . . .	160
	Encryption . . . . .	160
	Hash Function . . . . .	160
	Authentication Mode . . . . .	161
	Diffie-Hellman Group . . . . .	161
	Lifetime . . . . .	161
	IKE SA Negotiation . . . . .	161
	Generating Private and Public Key Pairs . . . . .	162
	Configuration Tasks . . . . .	162
	Configuring an IPsec License . . . . .	162
	Configuring IPsec Parameters . . . . .	163
	Creating an IPsec Tunnel . . . . .	166
	Configuring DPD and IPsec Tunnel Failover . . . . .	171
	Defining an IKE Policy . . . . .	172
	Refreshing SAs . . . . .	175
	Enabling Notification of Invalid Cookies . . . . .	176
	Configuration Examples . . . . .	176
	Configuration Notes . . . . .	176
	Monitoring IPsec . . . . .	184
	System Event Logs . . . . .	184
	show Commands . . . . .	184
<b>Chapter 7</b>	<b>Configuring Dynamic IPsec Subscribers . . . . .</b>	<b>193</b>
	Dynamic IPsec Subscribers Overview . . . . .	193
	Dynamic Connection Setup . . . . .	193
	Dynamic Connection Teardown . . . . .	194

Dynamic IPsec Subscriber Recognition . . . . .	194
Licensing Requirements . . . . .	194
Inherited Subscriber Functionality . . . . .	195
Using IPsec Tunnel Profiles . . . . .	195
Relocating Tunnel Interfaces . . . . .	196
User Authentication . . . . .	196
Dynamic IPsec Subscribers Platform Considerations . . . . .	197
Dynamic IPsec Subscribers References . . . . .	197
Creating an IPsec Tunnel Profile . . . . .	197
Configuring IPsec Tunnel Profiles . . . . .	198
Limiting Interface Instantiations on Each Profile . . . . .	198
Specifying IKE Settings for IPsec Tunnels . . . . .	199
Setting the IKE Local Identity . . . . .	199
Setting the IKE Peer Identity . . . . .	199
Appending a Domain Suffix to a Username . . . . .	199
Overriding IPsec Local and Peer Identities for SA Negotiations . . . . .	200
Specifying an IP Profile for IP Interface Instantiations . . . . .	200
Defining the Server IP Address . . . . .	200
Specifying Local Networks . . . . .	201
Defining IPsec Security Association Lifetime Parameters . . . . .	201
Defining User Reauthentication Protocol Values . . . . .	202
Specifying IPsec Security Association Transforms . . . . .	202
Specifying IPsec Security Association PFS and DH Group Parameters . . . . .	202
Defining the Tunnel MTU . . . . .	203
Defining IKE Policy Rules for IPsec Tunnels . . . . .	204
Specification of a Virtual Router for an IKE Policy Rule Overview . . . . .	204
Configuring a Virtual Router for an IKE Policy Rule . . . . .	204
Defining Aggressive Mode for an IKE Policy Rule . . . . .	204
Monitoring IPsec Tunnel Profiles . . . . .	205
System Event Logs Used to Troubleshoot and Monitor Dynamic IPsec Subscribers . . . . .	205
Monitoring IPsec Tunnel Profiles . . . . .	205
Monitoring Active Subscribers . . . . .	207
<b>Chapter 8</b>	
<b>Configuring ANCP . . . . .</b>	<b>209</b>
Access Node Control Protocol Overview . . . . .	209
Access Topology Discovery . . . . .	210
Line Configuration . . . . .	210
Transactional Multicast . . . . .	210
OAM . . . . .	211
Retrieval of DSL Line Rate Parameters . . . . .	211
Learning the Partition ID from an Access Node . . . . .	211
ANCP Platform Considerations . . . . .	211
ANCP References . . . . .	212
Configuring ANCP . . . . .	212
Creating a Listening TCP Socket for ANCP . . . . .	212
Accessing L2C Configuration Mode for ANCP . . . . .	213
Defining the ANCP Session Timeout . . . . .	213

	Learning the Access Node Partition ID . . . . .	213
	Configuring ANCP Interfaces . . . . .	214
	Creating GSMP Output Labels . . . . .	214
	Configuring the Maximum Number of Branches for the ANCP User . . . . .	214
	Creating GSMP Input Labels . . . . .	214
	Configuring ANCP Neighbors . . . . .	215
	Accessing L2C Neighbor Configuration Mode for ANCP . . . . .	215
	Defining an ANCP Neighbor . . . . .	215
	Storing Topology Discovery Table Data in Mirrored Storage . . . . .	216
	Limiting Topology Discovery Table Entries . . . . .	216
	Clearing ANCP Neighbors . . . . .	217
	Configuring Topology Discovery . . . . .	217
	Configuring ANCP for QoS Adaptive Mode . . . . .	218
	Overview of Configuring ANCP for QoS Adaptive Mode . . . . .	218
	Clearing Entries from the Topology Discovery Table . . . . .	218
	Enabling QoS Adaptive Mode for ANCP . . . . .	219
	Triggering ANCP Line Configuration . . . . .	219
	Adjusting the Data Rate Reported by ANCP for DSL Lines Overview . . . . .	220
	Configuring a QoS Adjustment Factor Applied to the ANCP Reported Data Rate . . . . .	220
	Example: Configuring Transactional Multicast for IGMP . . . . .	221
	Overview of Triggering ANCP OAM . . . . .	223
	Triggering ANCP OAM . . . . .	223
<b>Chapter 9</b>	<b>Monitoring ANCP . . . . .</b>	<b>225</b>
	Monitoring ANCP Configuration . . . . .	225
	Monitoring ANCP Discovery Table Entries . . . . .	226
	Monitoring Configured Values for the Adjustment Rate . . . . .	227
	Monitoring ANCP Labels . . . . .	228
	Monitoring ANCP Neighbors . . . . .	230
	Monitoring ANCP Statistics . . . . .	231
<b>Chapter 10</b>	<b>Configuring Digital Certificates . . . . .</b>	<b>233</b>
	Overview . . . . .	233
	Digital Certificate Terms and Acronyms . . . . .	233
	Platform Considerations . . . . .	234
	References . . . . .	234
	IKE Authentication with Digital Certificates . . . . .	235
	Signature Authentication . . . . .	235
	Generating Public/Private Key Pairs . . . . .	236
	Obtaining a Root CA Certificate . . . . .	236
	Obtaining a Public Key Certificate . . . . .	237
	Offline Certificate Enrollment . . . . .	237
	Online Certificate Enrollment . . . . .	237
	Authenticating the Peer . . . . .	238
	Verifying CRLs . . . . .	238
	File Extensions . . . . .	239
	Certificate Chains . . . . .	239

	IKE Authentication Using Public Keys Without Digital Certificates . . . . .	240
	Configuration Tasks . . . . .	240
	Public Key Format . . . . .	241
	Configuring Digital Certificates Using the Offline Method . . . . .	241
	Configuring Digital Certificates Using the Online Method . . . . .	246
	Configuring Peer Public Keys Without Digital Certificates . . . . .	252
	Monitoring Digital Certificates and Public Keys . . . . .	256
<b>Chapter 11</b>	<b>Configuring IP Tunnels . . . . .</b>	<b>265</b>
	Overview . . . . .	265
	GRE Tunnels . . . . .	265
	DVMRP Tunnels . . . . .	266
	Platform Considerations . . . . .	266
	Module Requirements . . . . .	266
	ERX7xx Models, ERX14xx Models, and the ERX310 Router . . . . .	266
	E120 Router and E320 Router . . . . .	267
	Redundancy and Tunnel Distribution . . . . .	267
	References . . . . .	267
	Configuration Tasks . . . . .	268
	Configuration Example . . . . .	270
	Configuring IP Tunnels to Forward IP Frames . . . . .	271
	Preventing Recursive Tunnels . . . . .	272
	Creating Multicast VPNs Using GRE Tunnels . . . . .	272
	Monitoring IP Tunnels . . . . .	272
<b>Chapter 12</b>	<b>Configuring Dynamic IP Tunnels . . . . .</b>	<b>279</b>
	Understanding Dynamic IP Tunnels . . . . .	279
	Data MDT for Multicast VPNs and Dynamic IP Tunnels . . . . .	280
	Mobile IP and Dynamic IP Tunnels . . . . .	280
	Combining Dynamic and Static IP Tunnels in the Same Chassis . . . . .	281
	Changing and Removing Existing Dynamic IP Tunnels . . . . .	281
	Dynamic IP Tunnel Platform Considerations . . . . .	282
	Module Requirements . . . . .	282
	ERX7xx Models, ERX14xx Models, and the ERX310 Router . . . . .	282
	E120 Router and E320 Router . . . . .	283
	Redundancy and Tunnel Distribution . . . . .	283
	Dynamic IP Tunnel References . . . . .	283
	Modifying the Configuration of the Default Destination Profile . . . . .	284
	Configuring a Destination Profile for Dynamic GRE Tunnels . . . . .	284
	Configuring a Destination Profile for Dynamic DVMRP Tunnels . . . . .	285
	Monitoring DVMRP Destination Profiles . . . . .	286
	Monitoring Dynamic DVMRP Tunnels . . . . .	287
	Monitoring GRE Destination Profiles . . . . .	290
	Monitoring Dynamic GRE Tunnels . . . . .	292

<b>Chapter 13</b>	<b>IP Reassembly for Tunnels</b>	<b>297</b>
	Overview	297
	Platform Considerations	298
	Module Requirements	298
	ERX7xx Models, ERX14xx Models, and the ERX310 Router	298
	E120 Router and E320 Router	299
	Configuring IP Reassembly	299
	Monitoring IP Reassembly	300
	Setting Statistics Baselines	300
	Displaying Statistics	301
<b>Chapter 14</b>	<b>Securing L2TP and IP Tunnels with IPsec</b>	<b>303</b>
	Securing L2TP and IP Tunnels with IPsec Overview	304
	Tunnel Creation	304
	IPsec Secured-Tunnel Maximums	304
	Securing L2TP and IP Tunnels with IPsec Platform Considerations	305
	Module Requirements	305
	Securing L2TP and IP Tunnels with IPsec References	305
	L2TP/IPsec Tunnels Overview	306
	Setting Up a Secure Connection Between the Client PC and an E Series Router	307
	L2TP/IPsec Control and Data Frames Overview	308
	L2TP/IPsec Traffic Compatibility Issues and Requirements Overview	308
	Client Software Supported	309
	Interactions with NAT	309
	Interaction Between IPsec and PPP	309
	LNS Change of Port	309
	Group Preshared Key	309
	NAT Passthrough Mode Overview	310
	NAT-Traversal Overview	311
	How NAT-T Works	311
	UDP Encapsulation	312
	UDP Statistics	313
	NAT Keepalive Messages	313
	Configuring and Monitoring NAT-T	313
	Single-Shot L2TP/IPsec Tunnels Overview	314
	Setting Up the Client PC for an L2TP/IPsec Tunnel	315
	Configuring E Series Routers to Set Up an L2TP/IPsec Tunnel	315
	Configuring an L2TP Destination Profile to Enable IPsec Support for L2TP Tunnels	316
	Enabling IPsec Transport Mode	317
	Creating an L2TP Destination Profile	317
	Enabling NAT-T on a Virtual Router	318
	Configuring Single-Shot L2TP/IPsec Tunnels	319
	GRE/IPsec and DVMRP/IPsec Tunnels	320
	GRE/IPsec and DVMRP/IPsec Tunnels Overview	320
	Setting Up a Secure GRE or DVMRP Connection Between E Series Routers	320
	Configuring E Series Routers to Set Up GRE or DVMRP over IPsec	321

	Enabling IPsec Support for GRE and DVMRP Tunnels . . . . .	322
	Configuring an IPsec Transport Profile . . . . .	322
	Configuring the Type of Application Secured by Connections Created with an IPsec Transport Profile . . . . .	324
	Creating an IPsec Transport Profile . . . . .	324
	Setting a Lifetime Range for an IPsec Transport Profile . . . . .	325
	Configuring a Local Endpoint for an IPsec Transport Profile . . . . .	325
	Configuring Perfect Forward Secrecy for an IPsec Transport Profile . . . . .	326
	Configuring an Unencrypted Preshared Key for a Local IPsec Transport Profile . . . . .	326
	Configuring an Encrypted Preshared Key for a Local IPsec Transport Profile . . .	327
	Configuring Transform Sets for an IPsec Transport Profile . . . . .	328
	Using a System Event Log to Troubleshoot IPsec-Secured L2TP and IP Tunnels . . . . .	328
<b>Chapter 15</b>	<b>Monitoring L2TP and IP Tunnels Secured by IPsec . . . . .</b>	<b>331</b>
	Monitoring the IPsec Transport Interface Used to Secure DVMRP Tunnels . . . .	331
	Monitoring the IPsec Transport Interface Used to Secure GRE Tunnels . . . . .	333
	Monitoring the IKE Phase 1 SAs . . . . .	335
	Monitoring the Status of IPsec Options . . . . .	337
	Monitoring the IPsec Transport Connections Information . . . . .	337
	Monitoring the Summary of All IPsec Transport Connections . . . . .	340
	Monitoring the Configuration Information of an IPsec Transport Profile . . . . .	341
	Monitoring Configured L2TP Destination Profiles or Host Profiles . . . . .	342
<b>Chapter 16</b>	<b>Configuring the Mobile IP Home Agent . . . . .</b>	<b>347</b>
	Mobile IP Overview . . . . .	347
	Mobile IP Agent Discovery . . . . .	348
	Mobile IP Registration . . . . .	348
	Home Address Assignment . . . . .	348
	Authentication . . . . .	349
	AAA . . . . .	349
	Subscriber Management . . . . .	350
	Mobile IP Routing and Forwarding . . . . .	351
	Mobile IP Platform Considerations . . . . .	351
	Mobile IP References . . . . .	351
	Before You Configure the Mobile IP Home Agent . . . . .	352
	Configuring the Mobile IP Home Agent on a Virtual Router . . . . .	353
	Configuring the License Key to Enable a Mobile IP Home Agent . . . . .	354
	Configuring the Mobile IP Home Agent Settings . . . . .	354
	Configuring the IP Mobile Host . . . . .	355
	Configuring the Mobile IP Security Associations for a Mobile Host . . . . .	356
	Configuring the Mobile IP Security Associations for a Foreign Agent . . . . .	358
	Configuring or Associating a Preconfigured Interface Profile with the Mobile IP Home Agent . . . . .	359
	Setting a Baseline for Mobile IP Home Agent Statistics . . . . .	359
	Clearing the IP Mobile Binding Details from the Binding Table . . . . .	359

<b>Chapter 17</b>	<b>Monitoring the Mobile IP Home Agent . . . . .</b>	<b>361</b>
	Monitoring the Binding Table Information of the Mobile IP Home Agent . . . . .	361
	Monitoring the Configuration Information of the Mobile IP Home Agent . . . . .	362
	Monitoring the Configuration of Mobile Hosts or Domain Users . . . . .	363
	Monitoring the Interface Profile Name Associated with the Mobile IP Home Agent . . . . .	364
	Monitoring the Mobile IP Security Associations Configured for Foreign Agents . .	365
	Monitoring the Mobile IP Security Associations Configured on Mobile Hosts . .	366
	Monitoring the Protocol Statistics for the Mobile IP Home Agent Traffic . . . . .	366
	Monitoring the License Key for the Mobile IP Home Agent . . . . .	368
 <b>Part 2</b>	 <b>Index</b>	
	Index . . . . .	373



# List of Figures

<b>Part 1</b>	<b>Chapters</b>	
<b>Chapter 1</b>	<b>Configuring Routing Policy</b>	<b>3</b>
	Figure 1: Applying Route Maps to Routes	6
	Figure 2: Filtering with Access Lists	26
	Figure 3: Filtering with AS-Path Access Lists	28
	Figure 4: Route Map Filtering	30
	Figure 5: Community Lists	51
<b>Chapter 3</b>	<b>Configuring NAT</b>	<b>85</b>
	Figure 6: NAT Example	101
	Figure 7: Bidirectional NAT Example	103
	Figure 8: Twice NAT Example	104
	Figure 9: Cross-VRF Example	106
	Figure 10: PPTP Tunnels on an Inside Network	107
	Figure 11: PPTP Tunnels on an Outside Network	108
<b>Chapter 6</b>	<b>Configuring IPsec</b>	<b>143</b>
	Figure 12: IPsec Tunneling Stack	147
	Figure 13: IPsec Tunneling Packet Encapsulation	148
	Figure 14: IPsec Security Parameters in Relation to the Secure IP Interface	149
	Figure 15: Customer A's Corporate Frame Relay Network	177
	Figure 16: ISP-X Uses ERX Routers to Connect Corporate Offices over the Internet	177
	Figure 17: Connecting Customers Who Use Similar Address Schemes	180
<b>Chapter 8</b>	<b>Configuring ANCP</b>	<b>209</b>
	Figure 18: Using ANCP with an Access Node	222
<b>Chapter 11</b>	<b>Configuring IP Tunnels</b>	<b>265</b>
	Figure 19: IP Tunneling	265
	Figure 20: Transport and Tunnel Networks Using Different Routing Protocols	272
<b>Chapter 13</b>	<b>IP Reassembly for Tunnels</b>	<b>297</b>
	Figure 21: Tunneling Through an IP Network That Fragments Packets	298
<b>Chapter 14</b>	<b>Securing L2TP and IP Tunnels with IPsec</b>	<b>303</b>
	Figure 22: L2TP with IPsec Application	307
	Figure 23: L2TP/IPsec Connection	307
	Figure 24: L2TP Control Frame Encapsulated by IPsec	308
	Figure 25: L2TP Data Frame Encapsulated by IPsec	308
	Figure 26: L2TP Control Frame with NAT-T UDP Encapsulation	312
	Figure 27: L2TP Data Frame with NAT-T UDP Encapsulation	312

Figure 28: IKE Packet with NAT-T UDP Encapsulation . . . . .	312
Figure 29: GRE/IPsec Connection . . . . .	321

# List of Tables

	<b>About the Documentation . . . . .</b>	<b>xxi</b>
	Table 1: Notice Icons . . . . .	xxii
	Table 2: Text and Syntax Conventions . . . . .	xxii
<b>Part 1</b>	<b>Chapters</b>	
<b>Chapter 1</b>	<b>Configuring Routing Policy . . . . .</b>	<b>3</b>
	Table 3: Match and Set Policy Values . . . . .	40
	Table 4: Action Based on Well-Known Community Membership . . . . .	49
	Table 5: Supported Regular Expression Metacharacters . . . . .	59
	Table 6: Sample Regular Expressions . . . . .	60
<b>Chapter 2</b>	<b>Monitoring Routing Policy . . . . .</b>	<b>65</b>
	Table 7: show ip as-path-access-list Output Fields . . . . .	67
	Table 8: show ip community-list Output Fields . . . . .	68
	Table 9: show ip protocols Output Fields . . . . .	71
	Table 10: show ip redistribute Output Fields . . . . .	74
	Table 11: show ip route Output Fields . . . . .	77
	Table 12: show ip route slot Output Fields . . . . .	78
	Table 13: show ip static Output Fields . . . . .	78
	Table 14: show ip traffic Output Fields . . . . .	81
<b>Chapter 5</b>	<b>Configuring BFD . . . . .</b>	<b>131</b>
	Table 15: Determining BFD Versions . . . . .	135
<b>Chapter 6</b>	<b>Configuring IPsec . . . . .</b>	<b>143</b>
	Table 16: IPsec Terms and Abbreviations . . . . .	143
	Table 17: Security Parameters Used on Secure IP Interfaces . . . . .	148
	Table 18: Security Parameters per IPsec Policy Type . . . . .	150
	Table 19: Supported Transforms . . . . .	154
	Table 20: Supported Security Transform Combinations . . . . .	155
	Table 21: Initiator Proposals and Policy Rules . . . . .	159
<b>Chapter 7</b>	<b>Configuring Dynamic IPsec Subscribers . . . . .</b>	<b>193</b>
	Table 22: show ipsec tunnel profile Output Fields . . . . .	206
	Table 23: show subscribers Output Fields . . . . .	208
<b>Chapter 8</b>	<b>Configuring ANCP . . . . .</b>	<b>209</b>
	Table 24: l2c oam Fields . . . . .	224
<b>Chapter 9</b>	<b>Monitoring ANCP . . . . .</b>	<b>225</b>
	Table 25: show l2c Output Fields . . . . .	225
	Table 26: show l2c discovery-table Output Fields . . . . .	227

	Table 27: show adjustment-factor Output Fields . . . . .	228
	Table 28: show l2c label Output Fields . . . . .	229
	Table 29: show l2c neighbor Output Fields . . . . .	231
	Table 30: show l2c statistics Output Fields . . . . .	232
<b>Chapter 10</b>	<b>Configuring Digital Certificates . . . . .</b>	<b>233</b>
	Table 31: Digital Certificate Terms and Acronyms . . . . .	233
	Table 32: Outcome of IKE Phase 1 Negotiations . . . . .	239
	Table 33: File Extensions (Offline Configuration) . . . . .	239
<b>Chapter 12</b>	<b>Configuring Dynamic IP Tunnels . . . . .</b>	<b>279</b>
	Table 34: show dvmp destination profile Output Fields . . . . .	287
	Table 35: show dvmp tunnel Output Fields . . . . .	289
	Table 36: show gre destination profile Output Fields . . . . .	291
	Table 37: show gre tunnel Output Fields . . . . .	293
<b>Chapter 14</b>	<b>Securing L2TP and IP Tunnels with IPsec . . . . .</b>	<b>303</b>
	Table 38: Configuration and Monitoring Tasks for NAT-T . . . . .	313
	Table 39: Differences in Handling Timeout Periods for L2TP/IPsec Tunnels . . . . .	315
<b>Chapter 15</b>	<b>Monitoring L2TP and IP Tunnels Secured by IPsec . . . . .</b>	<b>331</b>
	Table 40: show dvmp tunnel detail Output Fields . . . . .	332
	Table 41: showgre tunnel detail Output Fields . . . . .	334
	Table 42: show ipsec ike-sa Output Fields . . . . .	336
	Table 43: show ipsec option Output Fields . . . . .	337
	Table 44: show ipsec transport interface Output Fields . . . . .	338
	Table 45: show ipsec transport interface summary Output Fields . . . . .	341
	Table 46: show ipsec transport profile Output Fields . . . . .	342
	Table 47: show l2tp destination profile Output Fields . . . . .	343
<b>Chapter 17</b>	<b>Monitoring the Mobile IP Home Agent . . . . .</b>	<b>361</b>
	Table 48: show ip mobile binding Output Fields . . . . .	362
	Table 49: show ip mobile home-agent Output Fields . . . . .	363
	Table 50: show ip mobile host Output Fields . . . . .	364
	Table 51: show ip mobile profile Output Field . . . . .	364
	Table 52: show ip mobile secure foreign-agent Output Fields . . . . .	365
	Table 53: show ip mobile secure host Output Fields . . . . .	366
	Table 54: show ip mobile traffic Output Fields . . . . .	367
	Table 55: show license mobile-ip home-agent Output Field . . . . .	369

# About the Documentation

- E Series and JunosE Documentation and Release Notes on page xxi
- Audience on page xxi
- E Series and JunosE Text and Syntax Conventions on page xxi
- Obtaining Documentation on page xxiii
- Documentation Feedback on page xxiii
- Requesting Technical Support on page xxiv

## E Series and JunosE Documentation and Release Notes

---

For a list of related JunosE documentation, see  
<http://www.juniper.net/techpubs/software/index.html>.

If the information in the latest release notes differs from the information in the documentation, follow the *JunosE Release Notes*.

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at  
<http://www.juniper.net/techpubs/>.

## Audience

---

This guide is intended for experienced system and network specialists working with Juniper Networks E Series Broadband Services Routers in an Internet access environment.

## E Series and JunosE Text and Syntax Conventions

---

Table 1 on page xxii defines notice icons used in this documentation.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xxii defines text and syntax conventions that we use throughout the E Series and JunosE documentation.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents commands and keywords in text.	<ul style="list-style-type: none"> <li>Issue the <b>clock source</b> command.</li> <li>Specify the keyword <b>exp-msg</b>.</li> </ul>
<b>Bold text like this</b>	Represents text that the user must type.	<b>host1(config)#traffic class low-loss1</b>
Fixed-width text like this	Represents information as displayed on your terminal's screen.	<b>host1#show ip ospf 2</b>  Routing Process OSPF 2 with Router ID 5.5.0.250  Router is an Area Border Router (ABR)
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Emphasizes words.</li> <li>Identifies variables.</li> <li>Identifies chapter, appendix, and book names.</li> </ul>	<ul style="list-style-type: none"> <li>There are two levels of access: <i>user</i> and <i>privileged</i>.</li> <li><i>clusterId</i>, <i>ipAddress</i>.</li> <li><i>Appendix A, System Specifications</i></li> </ul>
Plus sign (+) linking key names	Indicates that you must press two or more keys simultaneously.	Press Ctrl + b.

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<b>Syntax Conventions in the Command Reference Guide</b>		
Plain text like this	Represents keywords.	terminal length
<i>Italic text like this</i>	Represents variables.	<i>mask, accessListName</i>
(pipe symbol)	Represents a choice to select one keyword or variable to the left or to the right of this symbol. (The keyword or variable can be either optional or required.)	diagnostic   line
[ ] (brackets)	Represent optional keywords or variables.	[ internal   external ]
[ ]* (brackets and asterisk)	Represent optional keywords or variables that can be entered more than once.	[ level1   level2   l1 ]*
{ } (braces)	Represent required keywords or variables.	{ permit   deny } { in   out }  { clusterId   ipAddress }

## Obtaining Documentation

To obtain the most current version of all Juniper Networks technical documentation, see the Juniper Networks TechLibrary at <http://www.juniper.net/techpubs/>.

To download complete sets of technical documentation to create your own documentation CD-ROMs or DVD-ROMs, see the Portable Libraries page at

<http://www.juniper.net/techpubs/resources/index.html>

Copies of the Management Information Bases (MIBs) for a particular software release are available for download in the software image bundle from the Juniper Networks website at <http://www.juniper.net/>.

## Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation to better meet your needs. Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net), or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version

## Requesting Technical Support

---

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.



## PART 1

# Chapters

- [Configuring Routing Policy on page 3](#)
- [Monitoring Routing Policy on page 65](#)
- [Configuring NAT on page 85](#)
- [Configuring J-Flow Statistics on page 115](#)
- [Configuring BFD on page 131](#)
- [Configuring IPsec on page 143](#)
- [Configuring Dynamic IPsec Subscribers on page 193](#)
- [Configuring ANCP on page 209](#)
- [Monitoring ANCP on page 225](#)
- [Configuring Digital Certificates on page 233](#)
- [Configuring IP Tunnels on page 265](#)
- [Configuring Dynamic IP Tunnels on page 279](#)
- [IP Reassembly for Tunnels on page 297](#)
- [Securing L2TP and IP Tunnels with IPsec on page 303](#)
- [Monitoring L2TP and IP Tunnels Secured by IPsec on page 331](#)
- [Configuring the Mobile IP Home Agent on page 347](#)
- [Monitoring the Mobile IP Home Agent on page 361](#)



## CHAPTER 1

# Configuring Routing Policy

This topic provides information about configuring routing policy for your E Series router. It describes routing policy configuration in general as it might be used with various routing protocols, such as BGP, IS-IS, OSPF, and RIP.

This chapter contains the following sections:

- [Routing Policy Overview on page 3](#)
- [Routing Policy Platform Considerations on page 4](#)
- [Route Map Match and Set Clauses on page 4](#)
- [Match Policy Lists on page 20](#)
- [Access Lists on page 21](#)
- [Filtering Undesired Traffic Using the Null Interface on page 42](#)
- [Prefix Lists on page 42](#)
- [Prefix Trees on page 46](#)
- [Community Lists on page 49](#)
- [Using Regular Expressions on page 58](#)
- [Managing the Routing Table on page 62](#)
- [Troubleshooting Routing Policy Overview on page 63](#)

## Routing Policy Overview

---

Routing policy determines how the system handles the routes that it receives from and sends to neighboring routers. In many cases, routing policy consists of the following:

- Filtering routes
- Accepting certain routes
- Accepting and modifying other routes
- Rejecting some routes
- Determining the routing protocol used to distribute the routes

You can think of routing policy as a way to control the flow of routes into and out of the router.

The decision about which routes to accept from and advertise to various neighbors has an important impact on the traffic that crosses a network. Routing policy is used to enforce business agreements between two or more Internet service providers (ISPs) concerning the amount and type of traffic that is allowed to pass between them.

You can use one or more of the following mechanisms to configure routing policy:

- Route Map Match and Set Clauses
- Match Policy Lists
- Access Lists
- Prefix Lists
- Prefix Trees
- Community Lists

**Related  
Documentation**

- [Routing Policy Platform Considerations on page 4](#)

---

## Routing Policy Platform Considerations

You can configure routing policies on all E Series routers.

For information about the modules supported on E Series routers:

- See the *ERX Module Guide* for modules supported on ERX7xx models, ERX14xx models, and the Juniper Networks ERX310 Broadband Services Router.
- See the *E120 and E320 Module Guide* for modules supported on the Juniper Networks E120 and E320 Broadband Services Routers.

**Related  
Documentation**

- [Routing Policy Overview on page 3](#)

---

## Route Map Match and Set Clauses

You can use route maps to control and modify routing information and define conditions for redistributing routes between routing domains. You can apply route maps to inbound, outbound, or redistribution routes. A route map consists of *match* clauses and *set* clauses.

This section describes the following:

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Example: Configuring a Route Map to Filter Routes on the Basis of the AS Path on page 6](#)
- [Multiple Values in a Route Map Match Entry Overview on page 8](#)
- [Negating Match Clauses on a Route Map on page 9](#)
- [Exactly Matching a Community List on a Route Map Overview on page 10](#)
- [Removing Community Lists from a Route Map Overview on page 11](#)

- [Policy List Matching Overview on page 12](#)
- [Redistributing Access or Access-Internal Routes on page 12](#)
- [Multicast Bandwidths Setting Overview on page 13](#)
- [Defining the Conditions for Redistributing Routes Using a Route Map on page 13](#)
- [Configuring Match Clauses and Values for a Route Map on page 14](#)
- [Configuring Set Clauses for a Route Map on page 17](#)

## Understanding Route Map Match and Set Clauses

Match clauses specify the attribute values that determine whether a route matches the route map. A route that has the same attribute values passes the match condition. Routes that pass all the match conditions match the route map. You issue **match** commands to define the match conditions for a route map. You can specify the match conditions in any order. If you do not specify *any* match conditions in a route map, that route map matches *all* routes.

Set clauses define how the attributes are modified for matching routes. The set conditions apply only to routes that pass all the match conditions (or a route map with no match conditions). When a route passes all the match conditions, the router software applies all set conditions. You issue **set** commands to define the set conditions for a route map.

You assign a unique string called the map tag to identify each route map. You can have multiple *instances* of a route map, where each instance consists of a different group of clauses. Each instance is identified by a sequence number. When you apply a route map, the routing protocol evaluates routes against the instance of the route map with the lowest sequence number. If the routes pass all the match conditions specified in the lowest-numbered instance, and if all **set** commands are successfully applied, no other instance of the route map is considered. However, any routes that do not pass all the match conditions are evaluated against the next instance of the route map. For example, suppose you create two instances of route map boston5: one with sequence number 10 and one with sequence number 25. When you apply boston5, routes are evaluated first against instance 10; any that do not match are evaluated against instance 25.

When you apply a route map, you specify the **permit** or **deny** keyword:

- If you specify the **permit** keyword, routes that match the route map are accepted, forwarded, or redistributed. Routes that do not match the route map are rejected or blocked.
- If you specify the **deny** keyword, routes that match the route map are rejected or blocked. Routes that do not match the route map are accepted, forwarded, or redistributed.

A route map must have at least one match clause or one set clause. If you have no match clauses, all routes match the route map, and the set conditions apply to all routes. If you have no set clauses, no action is taken other than that specified by the **permit** or **deny** keyword.

### Related Documentation

- [Example: Configuring a Route Map to Filter Routes on the Basis of the AS Path on page 6](#)

- [Multiple Values in a Route Map Match Entry Overview on page 8](#)
- [Negating Match Clauses on a Route Map on page 9](#)
- [Exactly Matching a Community List on a Route Map Overview on page 10](#)
- [Configuring Match Clauses and Values for a Route Map on page 14](#)
- [Configuring Set Clauses for a Route Map on page 17](#)

## Example: Configuring a Route Map to Filter Routes on the Basis of the AS Path

This example explains how to configure a route map to filter routes on the basis of the autonomous system (AS) path.

- [Requirements on page 6](#)
- [Overview on page 6](#)
- [Configuration on page 7](#)

### Requirements


This example uses the following software and hardware components:

- JunosE Release 7.1.0 or higher-numbered releases
- E Series router (ERX7xx models, ERX14xx models, the ERX310 router, the E120 router, or the E320 router)
- ASIC-based line modules that support Fast Ethernet or Gigabit Ethernet

### Overview

Consider the network structure shown in [Figure 1 on page 6](#). In this network, you can configure the router NY to block the router Boston from receiving any routes that originate in or pass through the router Chicago.

 Figure 1: Applying Route Maps to Routes

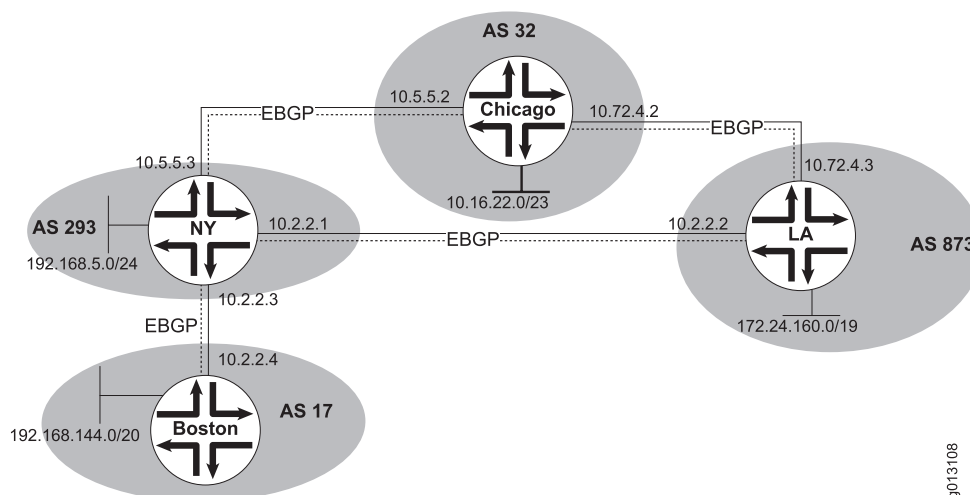

## Configuration

**Step-by-Step Procedure** The following example demonstrates about configuring the router NY to block the router Boston from receiving any routes that originate in or pass through the router Chicago.

To block the router Boston from receiving any routes that originate in or pass through the router Chicago:

1. Configure the BGP routing process.

```
host1(config)#router bgp 293
```

2. Configure a BGP speaker with an IPv4 prefix originating within its AS.

```
host1(config-router)#network 192.168.5.0 mask 255.255.255.0
```

3. Add entries to the BGP neighbor table.

```
host1(config-router)#neighbor 10.5.5.2 remote-as 32
host1(config-router)#neighbor 10.2.2.2 remote-as 873
host1(config-router)#neighbor 10.2.2.4 remote-as 17
```

4. Apply a route map to incoming or outgoing routes.

```
host1(config-router)#neighbor 10.2.2.4 route-map block1 out
host1(config-router)#exit
```

5. Define a BGP-related access list.

```
host1(config)#ip as-path access-list boston deny _32_
```

6. Specify a route map for applying routing policies to filter or modify routes.

```
host1(config)#route-map block1 deny 1
```

7. Match a BGP AS-path access list.

```
host1(config-route-map)#match as-path boston
```

## Related Documentation

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Defining the Conditions for Redistributing Routes Using a Route Map on page 13](#)
- [Configuring Match Clauses and Values for a Route Map on page 14](#)
- [Defining AS-Path Access Lists on page 34](#)
- [Monitoring the AS-Path Access Lists for IP on page 67](#)
- [Monitoring IP Protocols on page 70](#)
- [Monitoring Route Map Details on page 84](#)
- *ip as-path access-list*
- *match as-path*
- *neighbor remote-as*
- *neighbor route-map*
- *network*

- *route-map*
- *router bgp*

## Multiple Values in a Route Map Match Entry Overview

You can specify more than one value in each match entry of a route map by using any of the following **match** commands:

- **match as-path**
- **match community**
- **match distance**
- **match extcommunity-list**
- **match ip address**
- **match ip next-hop**
- **match ipv6 address**
- **match ipv6 next-hop**
- **match ipv6 route-source**
- **match level**
- **match metric**
- **match policy-list**
- **match route-type**
- **match tag**

A clause with multiple values matches a route that contains any of the values; that is, the multiple values are logically joined by an OR operator.

```
host1(config-route-map)#match ip address lisbon madrid  
host1(config-route-map)#match as-path 10 20 30
```

You can also issue successive **match** commands to add new values to a route map entry for any of the preceding commands.

```
host1(config-route-map)#match ip address boston  
host1(config-route-map)#match ip address newyork
```

This method is equivalent to issuing the following single command:

```
host1(config-route-map)#match ip address boston newyork
```

You cannot specify multiple values for the **match metric-type** command because it accepts only two values that are mutually exclusive. Specifying both values has the same effect as not specifying a metric type at all; specifying the same value more than once has no meaning.



**Related Documentation**

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Negating Match Clauses on a Route Map on page 9](#)
- [Configuring Match Clauses and Values for a Route Map on page 14](#)
- [Monitoring Route Map Details on page 84](#)
- *match as-path*
- *match community*
- *match distance*
- *match extcommunity*
- *match ip address*
- *match ip next-hop*
- *match ipv6 address*
- *match ipv6 next-hop*
- *match ipv6 route-source*
- *match level*
- *match metric*
- *match policy-list*
- *match route-type*
- *match tag*

**Negating Match Clauses on a Route Map**

If you specify a value when you negate a **match** command configured in a route map, only that value for the match entry is deleted. The routing software deletes the entire match entry only if the entry contains no other values.

For example, consider the following community lists matched to the route map miami:

```
host1(config)#ip community-list corporate5 permit 32 463 21
host1(config)#ip community-list dade2 permit 41 53 22
host1(config)#route-map miami permit 1
host1(config-route-map)#match community corporate5 dade2
host1(config-route-map)#exit
host1(config)#exit
host1#show route-map
route-map miami, permit, sequence 10
Match clauses:
match community corporate5 dade2
```

To delete the corresponding matched community list entry from the route map miami:

- Issue the **no match community** command in Route Map Configuration mode with a specific community list.

```
host1(config-route-map)#no match community dade2
host1(config-route-map)#exit
host1(config)#exit
host1#show route-map
route-map miami, permit, sequence 10
Match clauses:
match community corporate5
```

To delete all matched community list entries from the route map miami, issue one of the following commands in Route Map Configuration mode:

- **no match community**

```
host1(config-route-map)#no match community
```

- **no match community** with community lists

```
host1(config-route-map)#no match community corporate5 dade2
```

If you issue a **no match community** command with a community list not specified in the entry, then the entry is not affected:

```
host1(config-route-map)#no match community southbeach
host1(config-route-map)#exit
host1(config)#exit
host1#show route-map
route-map miami, permit, sequence 10
Match clauses:
match community corporate5 dade2
```

#### Related Documentation

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Multiple Values in a Route Map Match Entry Overview on page 8](#)
- [Defining the Conditions for Redistributing Routes Using a Route Map on page 13](#)
- [Monitoring the Routes Permitted by IP Community Lists on page 68](#)
- [Monitoring Route Map Details on page 84](#)
- *ip community-list*
- *match community*
- *route-map*
- *show route-map*

## Exactly Matching a Community List on a Route Map Overview

You can use the **exact-match** keyword for the **match community** command to specify that a match exists only for the exact community numbers specified in the community list. The **exact-match** keyword applies only to a standard community list—that is, one

not specified by a regular expression. You cannot use the **exact-match** keyword with a community list that is specified by a regular expression.

Consider the following example:

```
host1(config)#ip community-list 1 permit 100 200 300
host1(config)#exit
host1#show ip community-list
Community standard list 1
permit 0:100 0:200 0:300
host1(config)#route-map example1 permit 10
host1(config-route-map)#match community 1 exact-match
host1(config)#exit
host1#show route-map example1
route-map example, permit, sequence 10
Match clauses:
community (community-list filter): 1 exact-match
```

The route map *example1* permits a route only if the route contains community 100, community 200, and community 300, but no additional communities.

If you do not specify the **exact-match** option, the route map also permits a match on a route that contains additional communities. For example, a route that contains communities 100, 200, 300, 400, and 450 matches.

#### Related Documentation

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Multiple Values in a Route Map Match Entry Overview on page 8](#)
- [Removing Community Lists from a Route Map Overview on page 11](#)
- [Defining the Conditions for Redistributing Routes Using a Route Map on page 13](#)
- [Using Regular Expressions on page 58](#)
- [Monitoring the Routes Permitted by IP Community Lists on page 68](#)
- [Monitoring Route Map Details on page 84](#)
- *ip community-list*
- *match community*
- *route-map*
- *show ip community-list*
- *show route-map*

## Removing Community Lists from a Route Map Overview

You can use the **set comm-list delete** command to remove the specified community list from routes matching the route map, provided that you created the community list with a single community number per list entry. For example, you cannot remove the community lists 231:10 and 231:20 with the **set comm-list delete** command if you created them with the following command:

```
host1(config)#ip community list 1 permit 231:10 231:20
```

You can, however, remove the lists with the **set comm-list delete** command if you created them separately with the following commands:

```
host1(config)#ip community list 1 permit 231:10
host1(config)#ip community list 1 permit 231:20
```

**Related  
Documentation**

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Configuring Set Clauses for a Route Map on page 17](#)
- [Multiple Values in a Route Map Match Entry Overview on page 8](#)
- [Exactly Matching a Community List on a Route Map Overview on page 10](#)
- [Monitoring the Routes Permitted by IP Community Lists on page 68](#)
- *ip community-list*
- *set comm-list delete*

## Policy List Matching Overview

You can use the **match policy-list** command to reference a policy list within the route map. Policy lists are like route maps, but they contain only match clauses and no set clauses. You can create a policy list to contain a group of match clauses once, referencing the list in any number of route maps and avoiding the task of having to reenter the match clauses separately into each route map.

For more information about creating IP policy lists, see [“Creating and Launching the Match Policy List” on page 21](#).

**Related  
Documentation**

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Multiple Values in a Route Map Match Entry Overview on page 8](#)
- [Configuring Match Clauses and Values for a Route Map on page 14](#)
- [Match Policy Lists Overview on page 20](#)
- *match policy-list*

## Redistributing Access or Access-Internal Routes

Access-internal routes, such as Dynamic Host Configuration Protocol (DHCP) and authentication, authorization, and accounting (AAA) or Point-to-Point Protocol (PPP) host routes, are host routes to directly connected clients. Access routes, also known as AAA framed routes, are sourced by AAA. The following example shows how you can redistribute access-internal routes and access routes by matching on a tag:

1. Configure route map tagtest to match tag 30.

```
host1(config)#route-map tagtest
host1(config-route-map)#match tag 30
```

2. Configure redistribution into BGP of the access-internal routes and access routes with route map tagtest.

```

host1(config)#router bgp 405
host1(config-router)#redistribute access route-map tagtest
host1(config-router)#redistribute access-internal route-map tagtest

```

#### Related Documentation

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Defining the Conditions for Redistributing Routes Using a Route Map on page 13](#)
- [Configuring Match Clauses and Values for a Route Map on page 14](#)
- [Monitoring IP Route Redistribution Policy on page 73](#)
- [Monitoring Route Map Details on page 84](#)
- *match tag*
- *route-map*
- *router bgp*
- *redistribute*

## Multicast Bandwidths Setting Overview

You can use the **set admission-bandwidth** command to set a multicast bandwidth for admission control. Admission control is performed for the join and mapped interface when the outgoing interface (OIF) is added to the mroute.

You can use the **set qos-bandwidth** command to set a multicast bandwidth for quality of service (QoS) control. The QoS adjustment is made to the join interface when the OIF is added to the mroute.



**NOTE:** Both the admission bandwidth and QoS bandwidth are a constant bit rate.

For more information about multicast admission control or QoS adjustment, see the *Configuring IPv4 Multicast* or *Configuring IPv6 Multicast* chapter in the *JunosE Multicast Routing Configuration Guide*.

#### Related Documentation

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Configuring Set Clauses for a Route Map on page 17](#)
- *set admission-bandwidth*
- *set qos-bandwidth*

## Defining the Conditions for Redistributing Routes Using a Route Map

You can use the **route-map** command to define the conditions for redistributing routes from one routing protocol to another, and for filtering or modifying updates sent to or received from peers.

Each **route-map** command has a list of **match** and **set** commands associated with it. That is, the route map itself consists of a set of clauses; each clause (also called an entry) consists of a **match** or **set** command:

- The **match** commands specify the match criteria—that is, the conditions under which redistribution is allowed for the current route map.
- The **set** commands specify the set actions—that is, the redistribution actions to perform if the criteria enforced by the **match** commands is met.

You can specify match and set clauses to modify attributes of redistributed routes. Use route maps when you want complete control over how routes are redistributed between routing processes.

You can specify the destination routing protocol with the **router** command and the source routing protocol with the **redistribute** command.

To configure the route map:

- Issue the **route-map** command in Global Configuration mode.

```
host1(config)#route-map nyc1 permit 10
```

Use the **no** version to delete the route map.

#### Related Documentation

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Configuring Match Clauses and Values for a Route Map on page 14](#)
- [Configuring Set Clauses for a Route Map on page 17](#)
- [Monitoring Route Map Details on page 84](#)
- *route-map*

## Configuring Match Clauses and Values for a Route Map

This topic describes how to configure the match clauses and values for a route map.

To configure match clauses and values for a route map:

- Match an AS-path access list. The implemented weight is based on the first matched AS path.

```
host1(config-route-map)#match as-path pathlist5
```

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

- Match a community list.

```
host1(config-route-map)#match community comm5
```

This command supports inbound and outbound route maps.

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

- Match any routes being redistributed out of the routing table that have the specified administrative distance. A distance of 255 prevents the route from being installed in the routing table.

```
host1(config-route-map)#match distance 25
```

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

- Match an extended community list in a route map. (For more information, see [“Matching an Extended Community List on a Route Map” on page 57.](#))

```
host1(config-route-map)#match extcommunity topeka10
```

Use the **no** version to remove the match clause from a route map or a specified value from the match clause.

- Match any route that has a destination network number that is permitted by an access list, a prefix list, or a prefix tree, or that performs policy routing on packets. (For more information, see [“Matching Routes on the Basis of the Destination IP or IPv6 Address Permitted by the Prefix List” on page 44](#) and [“Matching Routes on the Basis of the Destination IP Address Permitted by the Prefix Tree” on page 47.](#))

```
host1(config-route-map)#match ip address prefix-tree boston
```

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

- Match any routes that have a next-hop router address passed by the specified access list, prefix list, or prefix tree. (For more information, see [“Matching Routes on the Basis of the Next-Hop Router IP or IPv6 Address Passed by the Prefix List” on page 45](#) and [“Matching Routes on the Basis of the Next-Hop Router IP Address Passed by the Prefix Tree” on page 48.](#))

```
host1(config-route-map)#match ip next-hop 5 acl_192_54_24_1
```

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

- Match any routes that have a destination network number address that is permitted by the specified prefix list. (For more information, see [“Matching Routes on the Basis of the Destination IP or IPv6 Address Permitted by the Prefix List” on page 44.](#))

```
host1(config-route-map)#match ipv6 address prefix-list boston
```

Use the **no** version to delete all address match clauses from a route map unless you specify a prefix list, in which case only that prefix list match is removed from the route map.

- Match any routes that have a next-hop router address passed by the specified prefix list. (For more information, see [“Matching Routes on the Basis of the Next-Hop Router IP or IPv6 Address Passed by the Prefix List” on page 45.](#))

```
host1(config-route-map)#match ipv6 next-hop prefix-list next1
```

Use the **no** version to delete all next-hop match clauses from a route map unless you specify a prefix list, in which case only that prefix list match is removed from the route map.

- Match any routes that are advertised from addresses contained in the specified prefix list.

**host1(config-route-map)#match ipv6 route-source prefix-list source**

Use the **no** version to delete all route-source match clauses from a route map unless you specify a prefix list, in which case only that prefix list match is removed from the route map.

- Match routes for the specified level.

**host1(config-route-map)#match level level-1**

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

- Match a route for the specified metric value.

**host1(config-route-map)#match metric 10**

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

- Match a route for the specified metric type.

**host1(config-route-map)#match metric-type external**

Use the **no** version to delete the match clause from a route map.

- Reference a policy list that has the specified name.

**host1(config-route-map)#match policy-list list1**

Use the **no** version to remove the match clause from a route map.

- Match a route for the specified route type.

**host1(config-route-map)#match route-type level-1**

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

- Specify the prefix tree that summarizes routes for a particular route map. (For more information, see [“Summarizing Matched Routes on the Basis of the Network Base Address Set in the Prefix Tree” on page 48.](#))

**host1(config-route-map)#match-set summary prefix-tree boston**

Use the **no** version to disable the use of the prefix tree by the route map.

- Match the tag value of the destination routing protocol.

**host1(config-route-map)#match tag 25**

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

#### Related Documentation

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Multiple Values in a Route Map Match Entry Overview on page 8](#)
- [Negating Match Clauses on a Route Map on page 9](#)



- [Policy List Matching Overview on page 12](#)
- [Monitoring Route Map Details on page 84](#)
- *match as-path*
- *match community*
- *match distance*
- *match extcommunity*
- *match ip address*
- *match ip next-hop*
- *match ipv6 address*
- *match ipv6 next-hop*
- *match ipv6 route-source*
- *match level*
- *match metric*
- *match metric-type*
- *match policy-list*
- *match route-type*
- *match-set summary prefix-tree*
- *match tag*

## Configuring Set Clauses for a Route Map

This topic describes how to configure the set clauses for a route map.

To configure set clauses for a route map:

- Modify an AS path for BGP routes by prepending one or more AS numbers or a list of AS numbers to the path list. The only global BGP metric available to influence the best path selection is the length of the AS path. By varying the length of the AS path, a BGP device can influence the best path selection by a peer farther away.

```
host1(config-route-map)#set as-path prepend list list10
```

Use the **no** version to delete the set clause from a route map.

- Automatically compute the tag value of the destination routing protocol.

```
host1(config-route-map)#set automatic-tag
```

Use the **no** version to delete the set clause from a route map.

- Remove communities specified by the community list from the community attribute of routes that match the route map. (For more information, see [“Removing Community Lists from a Route Map Overview” on page 11.](#))

```
host1(config-route-map)#set comm-list 1 delete
```

Use the **no** version to delete the set clause from a route map.

- Set the community attribute in BGP updates. (For more information, see [“Setting a BGP Community Attribute to a List of Community Numbers” on page 54.](#))

```
host1(config-route-map)#set community no-advertise
```

Use the **no** version to delete the set clause from a route map.

- Enable BGP route flap dampening only on routes that pass the match clauses of, and are redistributed by, a particular route map. BGP creates a dampening parameter block for each unique set of dampening parameters—such as suppress threshold, reuse threshold, and so on—used by BGP. For example, if you have a route map that sets the dampening parameters to one set of values for some routes and to another set of values for the remaining routes, BGP uses and stores two dampening parameter blocks, one for each set.

```
host1(config-route-map)#set dampening 5 1000 1500 45 15
```

Use the **no** version to delete the set clause from a route map.

- Set the administrative distance on routes being installed into the routing table that match the route map. A distance of 255 prevents the route from being installed in the routing table.

```
host1(config-route-map)#set distance 5
```

Use the **no** version to delete the set clause from a route map.

- Set the extended community attributes in a route map for BGP updates. (For more information, see [“Setting a BGP Extended Community Attribute” on page 57.](#))

```
host1(config-route-map)#set extcommunity rt 10.10.10.2:325
```

Use the **no** version to delete the set clause from a route map.

- Set the next-hop attribute of a route that matches a route map. You can specify an IP address or an interface as the next hop.

```
host1(config-route-map)#set ip next-hop 192.56.32.1
```

Use the **no** version to delete the set clause from a route map.

- Set the next-hop attribute of a route that matches a route map. You can specify an IPv6 address or an interface as the next hop.

```
host1(config-route-map)#set ipv6 next-hop 1::1
```

Use the **no** version to delete the set clause from a route map.

- Specify where to import routes when all match criteria of a route map are met.

```
host1(config-route-map)#set level level-2
```

Use the **no** version to delete the set clause from a route map.

- Specify a preference value for the AS path.

```
host1(config-route-map)#set local-preference 200
```

Use the **no** version to delete the set clause from a route map.

- Set the metric value (for BGP, the MED) for a route.

To establish an absolute metric, do not enter a plus or minus sign before the metric value.

```
host1(config-route-map)#set metric 10
```

To establish a relative metric, specify a plus or minus sign immediately preceding the metric value. The value is added to or subtracted from the metric of any routes matching the route map. The relative metric value range is 0–4294967295.

```
host1(config-route-map)#set metric -25
```

Use the **no** version to delete the set clause from a route map.

- Set the metric type for a route.

```
host1(config-route-map)#set metric-type internal
```

Use the **no** version to delete the set clause from a route map.

- Set the BGP origin of the advertised route.

```
host1(config-route-map)#set origin egp
```

Use the **no** version to delete the set clause from a route map.

- Set the route class value. The route-class attribute enables you to associate a route class with incoming packets on the basis of the destination or source address of the packet. For example, you can associate different route classes with different VPN services, while using the route classes to classify packets for quality of service (QoS).

```
host1(config-route-map)#set route-class 50
```

Use the **no** version to delete the set clause from a route map.

- Set the routes of the specified type (internal, internal-intra, internal-inter, or external).

```
host1(config-route-map)#set route-type internal
```

Use the **no** version to delete the set clause from a route map.

- Set the tag value of the destination routing protocol.

```
host1(config-route-map)#set tag 23
```

Use the **no** version to delete the set clause from a route map.

- Specify the BGP weight for the routing table.

```
host1(config-route-map)#set weight 200
```



**NOTE:** The weights assigned with the **set weight** command in a route map override the weights assigned using the **neighbor weight** and **neighbor filter-list weight** commands.

Use the **no** version to delete the set clause from a route map.

#### Related Documentation

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Removing Community Lists from a Route Map Overview on page 11](#)

- [Monitoring Route Map Details on page 84](#)
- *set as-path prepend*
- *set automatic-tag*
- *set comm-list delete*
- *set community*
- *set dampening*
- *set distance*
- *set extcommunity*
- *set ip next-hop*
- *set ipv6 next-hop*
- *set level*
- *set local-preference*
- *set metric*
- *set metric-type*
- *set origin*
- *set route-class*
- *set route-type*
- *set tag*
- *set weight*

---

## Match Policy Lists

Match policy lists are similar to route maps. However, unlike route maps, match policy lists contain only match clauses and no set clauses.

This section describes the following:

- [Match Policy Lists Overview on page 20](#)
- [Creating and Launching the Match Policy List on page 21](#)

### Match Policy Lists Overview

You can create match policy lists and then reference those lists within route maps. Because match policy lists share the same match clauses with route maps, they function the same way, and you can use the same match commands when you create your match policy lists.



**NOTE:** For descriptions of all route map match clauses, see [“Configuring Match Clauses and Values for a Route Map” on page 14](#).

---

As in route maps, the match clauses in match policy lists contain permit and deny statements. When you reference a match policy list within a route map, the route map evaluates and processes each match clause and permits or denies routes on the basis of the match policy list configuration.

When you configure match policy lists, keep the following in mind:

- A route map evaluates and processes all match statements within any match policy list that it references.
- You can configure multiple match policy lists within a route map, and you can evaluate each match policy list by using a logical AND or a logical OR operator.
- You can reference match policy lists within a route map that also uses separate match and set statements (that is, the statements are not part of the match policy list).
- All match policy lists within a route map match on the incoming attribute only.

**Related  
Documentation**

- [Policy List Matching Overview on page 12](#)
- [Creating and Launching the Match Policy List on page 21](#)

## Creating and Launching the Match Policy List

You can use the **ip match-policy-list** command to create an IP match policy list and launch the match policy list configuration mode.

To create an IP match policy list and launch the match policy list configuration mode:

- Issue the **ip match-policy-list** command in Global Configuration mode.

```
host1(config)#ip match-policy-list  
host1(config-match-policy-list)#
```

Use the **no** version to delete the match policy list.

**Related  
Documentation**

- [Policy List Matching Overview on page 12](#)
- [Match Policy Lists Overview on page 20](#)
- [Monitoring Match Policy Lists on page 69](#)
- *ip match-policy-list*

---

## Access Lists

An access list is a sequential collection of permit and deny conditions that you can use to filter inbound or outbound routes. You can use different kinds of access lists to filter routes on the basis of the prefix or the AS path.

Following are the different kinds of access lists to filter routes on the basis of the prefix or the AS path:

- [Filtering Prefixes on page 22](#)
- [Filtering AS Paths on page 27](#)
- [Example: Applying Access Lists Using a Route Map to Filter Routes on page 30](#)
- [Defining IP Access Lists on page 32](#)
- [Configuring the Advertisement of the Default Route on page 33](#)
- [Defining AS-Path Access Lists on page 34](#)
- [Defining IPv6 Access Lists on page 34](#)
- [Filtering BGP Advertisements Using Distribute Lists on page 35](#)
- [Assigning an AS-Path Access List to Inbound or Outbound Advertisements of a Neighbor on page 36](#)
- [Assigning an Inbound or Outbound Prefix List on page 36](#)
- [Assigning an Inbound or Outbound Prefix Tree on page 37](#)
- [Redistributing Routes Between Routing Domains on page 37](#)
- [Configuring Access Lists as PIM Sparse Mode Join Filters on page 38](#)
- [Clearing IP and IPv6 Access List Counters on page 39](#)
- [Table Maps on page 40](#)

## Filtering Prefixes

This topic describes filtering routes on the basis of prefixes:

- [Filtering Routes on the Basis of Prefixes Overview on page 22](#)
- [Example: Redistributing Static Routes to IS-IS Using a Route Map and an Access List on page 23](#)
- [Example: Configuring Access Lists to Filter Routes Advertised to a BGP Device on page 25](#)

---

### Filtering Routes on the Basis of Prefixes Overview

To filter routes on the basis of the prefix, you can perform one of the following actions:

- Define an access list with the **access-list** or **ipv6 access-list** command, and apply the list to routes received from or passed to a neighbor with the **neighbor distribute-list** command.
- Define a prefix list with the **ip prefix-list** command, and apply the list to routes received from or passed to a neighbor with the **neighbor prefix-list** command.
- Define a prefix tree with the **ip prefix-tree** command, and apply the list to routes received from or passed to a neighbor with the **neighbor prefix-tree** command.

The router compares each route's prefix against the conditions in the list or tree, one by one. If the first match is for a permit condition, the route is accepted or passed. If the first match is for a deny condition, the route is rejected or blocked. The order of conditions is

critical because testing stops with the first match. If no conditions match, the router rejects or blocks the address; that is, the last action of any list is an implicit deny condition for all routes. The implicit rule is displayed by **show access-list** and **show config** commands.

You cannot selectively place conditions in or remove conditions from an access list, prefix list, or prefix tree. You can insert a new condition only at the end of a list or tree.

The following example shows how the implicit deny condition appears:

```
host1(config)#access-list 1 permit 10.10.10.1 0.0.0.255
host1(config)#access-list 2 permit 10.25.25.1 0.0.0.255
host1(config)#access-list 3 permit any any
host1(config)#show access-list
IP Access List 1:
permit ip 10.10.10.1 0.0.0.255 any
deny ip any any
IP Access List 2:
permit ip 10.25.25.1 0.0.0.255 any
deny ip any any
IP Access List 3:
permit ip any any
```

The implicit deny rule does not appear in the display for access list 3 because any prefix matches access list 3.

#### Related Documentation

- [Example: Redistributing Static Routes to IS-IS Using a Route Map and an Access List on page 23](#)
- [Example: Configuring Access Lists to Filter Routes Advertised to a BGP Device on page 25](#)
- [Defining IP Access Lists on page 32](#)
- [Defining IPv6 Access Lists on page 34](#)
- [Filtering BGP Advertisements Using Distribute Lists on page 35](#)
- [Creating or Configuring an IP or IPv6 Prefix List for Route Filtering on page 43](#)
- [Assigning an Inbound or Outbound Prefix List on page 36](#)
- [Creating or Configuring an IP Prefix Tree for Best Route Filtering on page 47](#)
- [Assigning an Inbound or Outbound Prefix Tree on page 37](#)

#### Example: Redistributing Static Routes to IS-IS Using a Route Map and an Access List

This example explains how to use a route map and an access list to redistribute static routes to IS-IS.

- [Requirements on page 24](#)
- [Overview on page 24](#)

- [Configuration on page 24](#)
- [Verification on page 24](#)

### **Requirements**

This example uses the following software and hardware components:

- JunosE Release 7.1.0 or higher-numbered releases
- E Series router (ERX7xx models, ERX14xx models, the ERX310 router, the E120 router, or the E320 router)
- ASIC-based line modules that support Fast Ethernet or Gigabit Ethernet

### **Overview**

Route maps are used to control and modify routing information and to define conditions for redistributing routes between routing domains. You can apply route maps to inbound, outbound, or redistribution routes. An access list is a sequential collection of permit and deny conditions that you can use to filter inbound or outbound routes.

### **Configuration**

#### **Step-by-Step Procedure**

The following example demonstrates about how to use a route map and an access list to redistribute static routes to IS-IS.

To use a route map and an access list to redistribute static routes to IS-IS:

1. Configure three static routes.  

```
host1(config)#ip route 20.20.20.0 255.255.255.0 192.168.1.0
host1(config)#ip route 20.20.21.0 255.255.255.0 192.168.2.0
host1(config)#ip route 20.21.0.0 255.255.255.0 192.168.30.0
```
2. Configure an access list, fltra, that filters routes 20.20.20.0/24 and 20.20.21.0/24.  

```
host1(config)#access-list fltra permit 20.20.0.0 0.0.255.255
```
3. Configure route map 1 to match access list fltra, and apply an internal metric type.  

```
host1(config)#route-map 1
host1(config-route-map)#match ip address fltra
host1(config-route-map)#set metric-type internal
```
4. Configure redistribution into IS-IS of the static routes with route map 1.  

```
host1(config)#router isis testnet
host1(config-router)#redistribute static route-map 1
```

### **Verification**

To confirm that the configuration is working properly, perform this task:

#### **Monitoring the Database Details**

- Purpose** Displays the IS-IS database detail to verify the effect of the redistribution (the two static routes matching the route map are redistributed as level 2 internal routes).



**Action** To display the IS-IS database detail:

```
host1#show isis database detail l2
IS-IS Level-2 Link State Database
LSPID LSP Seq Num LSP Checksum LSP Holdtime ATT/P/OL
0000.0000.6666.00-00 0x000002B7 0x3E1F 1198 0/0/0
  Area Address: 47.0005.80FF.F800.0000.0001.0001
  NLPID: 0xcc
  IP Address: 192.168.1.105
  Metric: 10 IS 0000.0000.6666.01
  Metric: 10 IS 0000.0000.3333.00
  Metric: 10 IS 0000.0000.7777.00
Metric: 30 IP 20.20.20.0 255.255.255.0
Metric: 30 IP 20.20.21.0 255.255.255.0
```

**Related  
Documentation**

- [Filtering Routes on the Basis of Prefixes Overview on page 22](#)
- [Defining the Conditions for Redistributing Routes Using a Route Map on page 13](#)
- [Configuring Match Clauses and Values for a Route Map on page 14](#)
- [Configuring Set Clauses for a Route Map on page 17](#)
- [Defining IP Access Lists on page 32](#)
- [Monitoring Access Lists on page 66](#)
- [Monitoring Route Map Details on page 84](#)
- [Monitoring IP Route Redistribution Policy on page 73](#)
- *access-list*
- *match ip address*
- *match tag*
- *redistribute*
- *route-map*
- *router isis*
- *set metric-type*
- *show isis database*

### Example: Configuring Access Lists to Filter Routes Advertised to a BGP Device

This example explains how to use an access list to filter routes advertised to a BGP device.

- [Requirements on page 25](#)
- [Overview on page 26](#)
- [Configuration on page 26](#)

#### **Requirements**

This example uses the following software and hardware components:


- JunosE Release 7.1.0 or higher-numbered releases

- E Series router (ERX7xx models, ERX14xx models, the ERX310 router, the E120 router, or the E320 router)
- ASIC-based line modules that support Fast Ethernet or Gigabit Ethernet

### Overview

Consider the network structure in [Figure 2 on page 26](#). In this network, you can configure the router Boston to apply the access list reject1 for routes inbound from the router SanJose. This access list rejects routes matching 172.24.160.0/19.

 **Figure 2: Filtering with Access Lists**

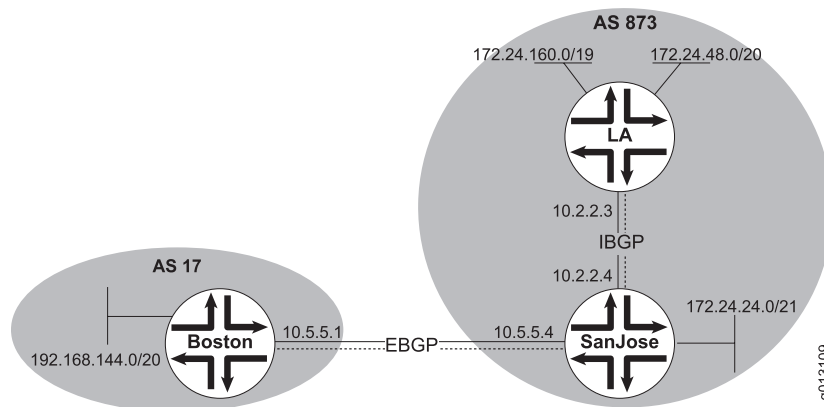

### Configuration

#### Step-by-Step Procedure

The following example demonstrates about configuring the router Boston to apply the access list reject1 for routes inbound from the router SanJose.

To apply the access list reject1 for routes inbound from the router SanJose:

1. Configure the BGP routing process.

```
host1(config)#router bgp 17
```

2. Add an entry to the BGP neighbor table.

```
host1(config-router)#neighbor 10.5.5.4 remote-as 873
```

3. Distribute the BGP neighbor information as specified in the access list.

```
host1(config-router)#neighbor 10.5.5.4 distribute-list reject1 in
host1(config-router)#exit
```

4. Define a standard or extended IP access list.

```
host1(config)#access-list reject1 permit 172.24.48.0 0.0.255
host1(config)#access-list reject1 deny 172.24.160.0 0.0.0.255
host1(config)#access-list reject1 permit 172.24.24.0 0.0.0.255
```

#### Related Documentation

- [Filtering Routes on the Basis of Prefixes Overview on page 22](#)
- [Filtering BGP Advertisements Using Distribute Lists on page 35](#)
- [Defining IP Access Lists on page 32](#)

- [Monitoring Access Lists on page 66](#)
- [Monitoring IP Protocols on page 70](#)
- *access-list*
- *neighbor distribute-list*
- *neighbor remote-as*
- *router bgp*

## Filtering AS Paths

You can use a filter list to filter incoming and outgoing routes on the basis of the value of the AS-path attribute. Whenever a BGP route passes through an AS path, BGP prepends its AS-path number to the AS-path attribute. The AS-path attribute is the list of ASs that a route has passed through to reach a destination.

This section describes the following:

- [Filtering Routes on the Basis of AS Paths Overview on page 27](#)
- [Example: Configuring a Route Map to Filter Routes on the Basis of the AS Path on page 28](#)

### Filtering Routes on the Basis of AS Paths Overview

To filter routes on the basis of the AS path, define the access list with the **ip as-path access-list** command, and apply the list to routes received from or passed to a neighbor with the **neighbor filter-list** command. AS-path access lists use regular expressions to describe the AS path to be matched. A regular expression uses special characters—often referred to as metacharacters—to define a pattern that is compared with an input string. For a full discussion of regular expressions, with examples of how to use them, see [“Using Regular Expressions” on page 58](#). The router compares each route's AS path with each condition in the access list. If the first match is for a permit condition, the route is accepted or passed. If the first match is for a deny condition, the route is rejected or blocked. The order of conditions is critical because testing stops with the first match. If no conditions match, the router rejects or blocks the route; that is, the last action of any list is an implicit deny condition for all routes.

You cannot selectively place conditions in or remove conditions from an AS-path access list. You can insert a new condition only at the end of an AS-path access list.

#### Related Documentation

- [Example: Configuring a Route Map to Filter Routes on the Basis of the AS Path on page 28](#)
- [Defining AS-Path Access Lists on page 34](#)
- [Assigning an AS-Path Access List to Inbound or Outbound Advertisements of a Neighbor on page 36](#)
- *ip as-path access-list*
- *neighbor filter-list*

### Example: Configuring a Route Map to Filter Routes on the Basis of the AS Path

This example explains how to configure a router to filter routes on the basis of AS paths.

- [Requirements on page 28](#)
- [Overview on page 28](#)
- [Configuration on page 29](#)

#### Requirements

This example uses the following software and hardware components:

- JunosE Release 7.1.0 or higher-numbered releases
- E Series router (ERX7xx models, ERX14xx models, the ERX310 router, the E120 router, or the E320 router)
- ASIC-based line modules that support Fast Ethernet or Gigabit Ethernet


#### Overview

This example describes how to configure the router London to behave in the following way:

- Accept routes originated in AS 621 only if they pass directly to router London.
- Accept routes originated in AS 11 only if they pass directly to router London.
- Forward routes from AS 282 to AS 435 only if they pass through either AS 621 or AS 11, but not both AS 621 and AS 11.

[Figure 3 on page 28](#) depicts the network structure containing the router London connected to other routers.

 **Figure 3: Filtering with AS-Path Access Lists**

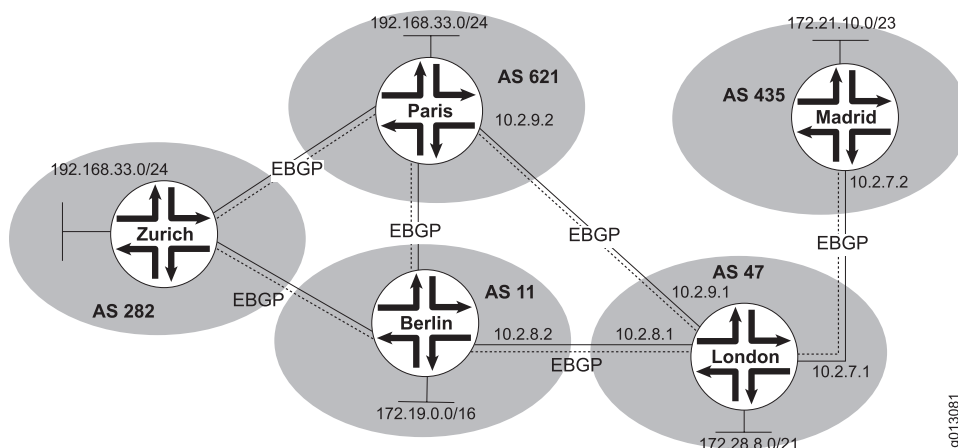

**Configuration**

**Step-by-Step Procedure** The following example demonstrates about configuring the router London to accept routes originated in AS 621 and AS 11 only if they pass directly to router London and forward routes from AS 282 to AS 435 only if they pass through either AS 621 or AS 11, but not both AS 621 and AS 11.

To configure the router London to accept and forward routes:

1. Configure the BGP routing process.

```
host1(config)#router bgp 47
```

2. Add entries to the BGP neighbor table.

```
host1(config-router)#neighbor 10.2.9.2 remote-as 621
host1(config-router)#neighbor 10.2.8.2 remote-as 11
host1(config-router)#neighbor 10.2.7.2 remote-as 435
```

3. Apply AS-path access lists to advertisements inbound from or outbound to the specified neighbor.

```
host1(config-router)#neighbor 10.2.9.2 filter-list 1 in
host1(config-router)#neighbor 10.2.8.2 filter-list 2 in
host1(config-router)#neighbor 10.2.7.2 filter-list 3 out
host1(config-router)#exit
```

4. Define BGP-related access lists.

```
host1(config)#ip as-path access-list 1 deny ^11
host1(config)#ip as-path access-list 1 permit .*
host1(config)#ip as-path access-list 2 deny ^621
host1(config)#ip as-path access-list 2 permit .*
host1(config)#ip as-path access-list 3 deny [621 11]
host1(config)#ip as-path access-list 3 permit .*
```

**Results** AS-path access list 1 is applied to routes that router London receives from router Paris. Router London rejects routes with the AS path 11 621 or 11 282 621.

AS-path access list 2 is applied to routes that router London receives from router Berlin. Router London rejects routes with the AS path 621 11 or 621 282 11.

Router London accepts routes with the AS path 282 11, 282 621, 282 621 11, or 282 11 621. However, it applies AS-path access list 3 to routes that it forwards to router Madrid, and filters out routes with the AS path 282 621 11 or 282 11 621.

**Related Documentation**

- [Filtering Routes on the Basis of AS Paths Overview on page 27](#)
- [Assigning an AS-Path Access List to Inbound or Outbound Advertisements of a Neighbor on page 36](#)
- [Defining AS-Path Access Lists on page 34](#)
- [Monitoring IP Protocols on page 70](#)
- [Monitoring the AS-Path Access Lists for IP on page 67](#)

- *ip as-path access-list*
- *neighbor filter-list*
- *neighbor remote-as*
- *router bgp*

## Example: Applying Access Lists Using a Route Map to Filter Routes

This example explains how to apply access lists using a route map to filter routes.

- [Requirements on page 30](#)
- [Overview on page 30](#)
- [Configuration on page 31](#)

### Requirements

This example uses the following software and hardware components:


- JunosE Release 7.1.0 or higher-numbered releases
- E Series router (ERX7xx models, ERX14xx models, the ERX310 router, the E120 router, or the E320 router)
- ASIC-based line modules that support Fast Ethernet or Gigabit Ethernet

### Overview

You can use a route map instead of the **neighbor filter-list** command to apply access lists for filtering routes.

In [Figure 4 on page 30](#), a route map is used to determine the weight for routes learned by router Chicago.

 Figure 4: Route Map Filtering

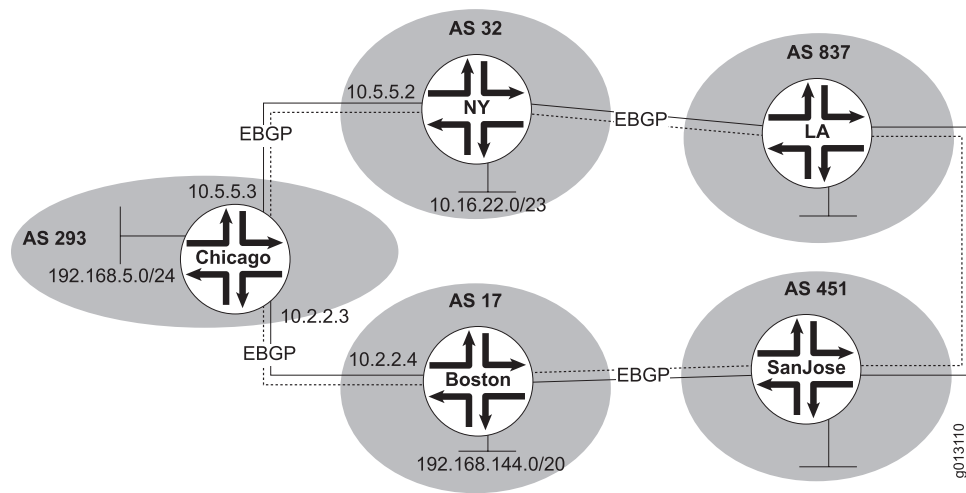

Access list 1 permits any route whose AS-path attribute includes 32 or 837. This condition permits routes that originate in (or pass through from elsewhere) AS 32 or AS 837. When these routes are advertised through AS 451 and AS 17 to router Chicago, instance 1 of route map 1 matches such routes and sets their weight to 25, overriding the neighbor weight set for updates received from 10.2.2.4.

Access list 2 permits any route whose AS-path attribute indicates that it originates in AS 74. When these routes are advertised through AS 837 and AS 32 to router Chicago, instance 1 of route map 2 matches such routes and sets their weight to 175, overriding the neighbor weight set for updates received from 10.5.5.2.

### Configuration

**Step-by-Step Procedure** The following example demonstrates about using route map instead of the **neighbor filter-list** command to apply access lists for filtering routes.

To apply access lists for filtering routes:

1. Configure the BGP routing process.

```
host1(config)#router bgp 293
```

2. Configure a BGP speaker.

```
host1(config-router)#network 192.168.5.0 mask 255.255.255.0
```

3. Add entries to the BGP neighbor table.

```
host1(config-router)#neighbor 10.2.2.4 remote-as 17
host1(config-router)#neighbor 10.5.5.2 remote-as 32
```

4. Assign a weight to a neighbor connection.

```
host1(config-router)#neighbor 10.2.2.4 weight 150
host1(config-router)#neighbor 10.5.5.2 weight 50
```

5. Apply a route map to incoming or outgoing routes.

```
host1(config-router)#neighbor 10.2.2.4 route-map 1 in
host1(config-router)#neighbor 10.5.5.2 route-map 2 in
host1(config-router)#exit
```

6. Specify route map 1 and configure the route map match and set clauses.

```
host1(config)#route-map 1 permit 1
host1(config-route-map)#match as-path 1
host1(config-route-map)#set weight 25
host1(config-route-map)#exit
```

7. Specify route map 2 and configure the route map match and set clauses.

```
host1(config)#route-map 2 permit 1
host1(config-route-map)#match as-path 2
host1(config-route-map)#set weight 175
host1(config-route-map)#exit
```

8. Define BGP-related access lists.

```
host1(config)#ip as-path access-list 1 permit [ 32 837 ]
host1(config)#ip as-path access-list 2 permit [ 74 ]
host1(config-route-map)#exit
```

**Results** The result of this configuration is that router Chicago prefers routes learned through router Boston (weight 150) over routes learned through router NY (weight 50), except that:

- Router Chicago prefers routes learned via router NY that passed through AS 837 or AS 32 (weight 50) over the same routes learned via router Boston (weight 25 according to route map 1).
- Router Chicago prefers routes originating in AS 74 learned via router NY that passed through AS 837 and AS 32 (weight 175 according to route map 2) over the same routes learned via router Boston (weight 150).

**Related  
Documentation**

- [Understanding Route Map Match and Set Clauses on page 5](#)
- [Defining the Conditions for Redistributing Routes Using a Route Map on page 13](#)
- [Configuring Match Clauses and Values for a Route Map on page 14](#)
- [Configuring Set Clauses for a Route Map on page 17](#)
- [Defining AS-Path Access Lists on page 34](#)
- [Monitoring the AS-Path Access Lists for IP on page 67](#)
- [Monitoring IP Protocols on page 70](#)
- [Monitoring Route Map Details on page 84](#)
- *ip as-path access-list*
- *match as-path*
- *network*
- *neighbor remote-as*
- *neighbor route-map*
- *neighbor weight*
- *router bgp*
- *route-map*
- *set weight*

## Defining IP Access Lists

You can use the **access-list** command to define an IP access list to permit or deny routes on the basis of the prefix.

Each access list is a set of permit or deny conditions (based on how they match a route's prefix) for a route. A zero in the wildcard mask means that the corresponding bit in the address must be exactly matched by the route. A one in the wildcard mask means that the corresponding bit in the address does not have to be matched by the route.

You can use the **neighbor distribute-list** command to apply the access list to routes received from or forwarded to a neighbor.



You can use the **log** keyword to log an Info event in the ipAccessList log whenever an access list rule is matched.

To define an IP access list to permit routes on the basis of the prefix:

- Issue the **access-list** command in Global Configuration mode.

```
host1(config)#access-list bronze permit ip host any 228.0.0.0 0.0.0.255
```

Use the **no** version to delete an IP access list (no other options specified), the specified entry in the access list, or the log for the specified access list or entry (by specifying the **log** keyword).

#### Related Documentation

- [Filtering Routes on the Basis of Prefixes Overview on page 22](#)
- [Example: Redistributing Static Routes to IS-IS Using a Route Map and an Access List on page 23](#)
- [Example: Configuring Access Lists to Filter Routes Advertised to a BGP Device on page 25](#)
- [Example: Applying Access Lists Using a Route Map to Filter Routes on page 30](#)
- [Filtering BGP Advertisements Using Distribute Lists on page 35](#)
- [Clearing IP and IPv6 Access List Counters on page 39](#)
- [Monitoring Access Lists on page 66](#)
- *access-list*

## Configuring the Advertisement of the Default Route

You can use the **default-information originate** command to enable RIP, OSPF, or BGP to advertise a default route (0.0.0.0/0) that exists in the IP routing table. If a default route does not exist in the IP routing table for OSPF, then you can specify the **always** option for OSPF to generate a default route.

You can use the **default-information originate** command to generate a default route to an IS-IS domain.

To enable RIP, OSPF, or BGP to advertise a default route (0.0.0.0/0) that exists in the IP routing table:

- Issue the **default-information originate** command in Router Configuration mode.

```
host1(config-router)#default-information originate
```

Use the **no** version to disable advertisement of the default route.

#### Related Documentation

- [Monitoring IP Protocols on page 70](#)
- [Monitoring the Current State of IP Routing Tables on page 74](#)
- *default-information originate*

## Defining AS-Path Access Lists

You can use the **ip as-path access-list** command to define an AS-path access list to permit or deny routes on the basis of the AS path. Each access list is a set of permit or deny conditions (based on how they match a route's AS path to a regular expression) for a route. If the regular expression matches the representation of the AS path of the route as an ASCII string, the permit or deny condition applies. The AS path does not contain the local AS number.

The AS path allows substring matching. For example, the regular expression `20` matches AS path = `20` and AS path = `100 200 300`, because `20` is a substring of each path. To disable substring matching and constrain matching to only the specified attribute string, place the underscore (`_`) metacharacter on both sides of the string; for example, `_20_`.

You can use the **neighbor filter-list** command to apply the AS-path access list. You can apply access-list filters to inbound and outbound BGP routes. You can assign weights to routes matching the AS-path access list.

To define an AS-path access list to permit or deny routes on the basis of the AS path:

- Issue the **ip as-path access-list** command in Global Configuration mode.

```
host1(config)#ip as-path access-list 1 permit ^\(
```

Use the **no** version to remove the AS-path access list; all entries that belong to this list are removed.

### Related Documentation

- [Example: Configuring a Route Map to Filter Routes on the Basis of the AS Path on page 28](#)
- [Filtering Routes on the Basis of AS Paths Overview on page 27](#)
- [Example: Configuring a Route Map to Filter Routes on the Basis of the AS Path on page 28](#)
- [Example: Applying Access Lists Using a Route Map to Filter Routes on page 30](#)
- [Using Regular Expressions on page 58](#)
- [Assigning an AS-Path Access List to Inbound or Outbound Advertisements of a Neighbor on page 36](#)
- [Monitoring the AS-Path Access Lists for IP on page 67](#)
- *ip as-path access-list*

## Defining IPv6 Access Lists

You can use the **ipv6 access-list** command to define an IPv6 access list to permit or deny routes on the basis of the prefix. Each access list is a set of permit or deny conditions based on how they match a route's prefix.

You can use the **neighbor distribute-list** command to apply the access list to routes received from or forwarded to a neighbor.

You can use the **log** keyword to log an Info event in the ipAccessList log whenever an access list rule is matched.

To define an IPv6 access list to permit or deny routes on the basis of the prefix:

- Issue the **ipv6 access-list** command in Global Configuration mode.

```
host1(config)#ipv6 access-list bronze deny 1::1/16 any
```

Use the **no** version to delete an IPv6 access list (no other options specified), the specified entry in the access list, or the log for the specified access list or entry (by specifying the **log** keyword).

#### Related Documentation

- [Filtering Routes on the Basis of Prefixes Overview on page 22](#)
- [Filtering BGP Advertisements Using Distribute Lists on page 35](#)
- [Clearing IP and IPv6 Access List Counters on page 39](#)
- [Monitoring Access Lists on page 66](#)
- *ipv6 access-list*

## Filtering BGP Advertisements Using Distribute Lists

You can use the **neighbor distribute-list** command to filter routes to selected prefixes as specified in an access list. Distribute lists are applied only to external peers.

You can use the **in** keyword to apply the list to inbound routes (inbound policy) and **out** keyword to apply the list to outbound routes (outbound policy).

Besides using distribute lists to filter BGP advertisements, you can perform one of the following actions:

- Use AS-path filters with the **ip as-path access-list** and the **neighbor filter-list** commands.
- Use route map filters with the **route-map** and the **neighbor route-map** commands.

To filter routes to selected prefixes as specified in an access list:

- Issue the **neighbor distribute-list** command in Router Configuration mode.

```
host1:vr1(config-router)#neighbor group1 distribute-list list1 in
```

Use the **no** version to disassociate the access list from a neighbor.

#### Related Documentation

- [Filtering Routes on the Basis of Prefixes Overview on page 22](#)
- [Example: Configuring Access Lists to Filter Routes Advertised to a BGP Device on page 25](#)
- [Defining IP Access Lists on page 32](#)
- [Defining IPv6 Access Lists on page 34](#)
- [Monitoring IP Protocols on page 70](#)

- *ip as-path access-list*
- *neighbor distribute-list*
- *neighbor filter-list*

## Assigning an AS-Path Access List to Inbound or Outbound Advertisements of a Neighbor

You can use the **neighbor filter-list** command to assign an AS-path access list to matching inbound or outbound routes.

You can use the **in** keyword to apply the list to inbound routes (inbound policy) and **out** keyword to apply the list to outbound routes (outbound policy).

You can specify an optional weight value with the **weight** keyword to assign a relative importance to incoming routes that match the AS-path access list. Access list values can be in the range 0–65535.

To assign an AS-path access list to matching inbound or outbound routes:

- Issue the **neighbor filter-list** command in Router Configuration mode.

```
host1:vr1(config-router)#neighbor group2 filter-list list2 out
```

Use the **no** version to disassociate the access list from a neighbor.

### Related Documentation

- [Configuring Set Clauses for a Route Map on page 17](#)
- [Filtering Routes on the Basis of AS Paths Overview on page 27](#)
- [Example: Configuring a Route Map to Filter Routes on the Basis of the AS Path on page 6](#)
- [Defining AS-Path Access Lists on page 34](#)
- [Monitoring IP Protocols on page 70](#)
- *neighbor filter-list*

## Assigning an Inbound or Outbound Prefix List

You can use the **neighbor prefix-list** command to assign an inbound or outbound prefix list.

If you specify a BGP peer group by using the *peer-group-name* argument, all the members of the peer group inherit the characteristic configured with this command unless it is overridden for a specific peer.

You can use the **in** keyword to assign the prefix list to incoming routes (inbound policy).

You can use the **out** keyword to assign the prefix list to outgoing routes (outbound policy); you cannot configure a member of a peer group to override the inherited peer group characteristic for outbound policy.

To assign an inbound or outbound prefix list:

- Issue the **neighbor prefix-list** command in Router Configuration mode.

```
host1(config-router)#neighbor 192.168.1.158 prefix-list seoul19 in
```

Use the **no** version to remove the prefix list.

#### Related Documentation

- [Filtering Routes on the Basis of Prefixes Overview on page 22](#)
- [Monitoring IP Protocols on page 70](#)
- *neighbor prefix-list*

## Assigning an Inbound or Outbound Prefix Tree

You can use the **neighbor prefix-tree** command to assign an inbound or outbound prefix tree.

If you specify a BGP peer group by using the *peer-group-name* argument, all the members of the peer group inherit the characteristic configured with this command unless it is overridden for a specific peer.

You can use the **in** keyword to assign the prefix tree to incoming routes (inbound policy).

You can use the **out** keyword to assign the prefix tree to outgoing routes (outbound policy); you cannot configure a member of a peer group to override the inherited peer group characteristic for outbound policy.

To assign an inbound or outbound prefix tree:

- Issue the **neighbor prefix-tree** command in Router Configuration mode.

```
host1(config-router)#neighbor 192.168.1.158 prefix-tree newyork out
```

Use the **no** version to remove the prefix tree.

#### Related Documentation

- [Filtering Routes on the Basis of Prefixes Overview on page 22](#)
- [Monitoring IP Protocols on page 70](#)
- *neighbor prefix-tree*

## Redistributing Routes Between Routing Domains

You can use the **redistribute** command to redistribute routes from one routing domain to another routing domain.

To redistribute routes from one routing domain to another routing domain:

- Issue the **redistribute** command in Router Configuration mode.

```
host1(config-router)#redistribute static
```

Use the **no** version to end redistribution of information.

**Related Documentation**

- [Example: Redistributing Static Routes to IS-IS Using a Route Map and an Access List on page 23](#)
- [Monitoring IP Route Redistribution Policy on page 73](#)
- *redistribute*

## Configuring Access Lists as PIM Sparse Mode Join Filters

You can apply access lists to PIM sparse mode interfaces along with the **ip pim join-filter** or **ipv6 pim join-filter** command to use the access lists as PIM sparse mode join filters.

To configure PIM join filters:

1. Create the various access list services you want to use with the PIM join filter command.

```
host1(config)#! create bronze service
host1(config)#! - restrict SSM channels to 232.0.1/24 only
host1(config)#access-list bronze permit ip host any 228.0.0.0 0.0.0.255
host1(config)#access-list bronze permit ip host 1.1.1.1 232.0.1.0 0.0.0.255
host1(config)#access-list bronze permit ip host 2.2.2.2 232.0.1.0 0.0.0.255
host1(config)#
host1(config)#! create silver service
host1(config)#! - bronze service + new channels 232.0.2/24
host1(config)#access-list silver permit ip host any 228.0.0.0 0.0.0.255
host1(config)#access-list silver permit ip host 1.1.1.1 232.0.1.0 0.0.0.255
host1(config)#access-list silver permit ip host 2.2.2.2 232.0.1.0 0.0.0.255
host1(config)#access-list silver permit ip host 1.1.1.1 232.0.2.0 0.0.0.255
host1(config)#access-list silver permit ip host 2.2.2.2 232.0.2.0 0.0.0.255
host1(config)#
host1(config)#! create gold service
host1(config)#! - silver service + new channels 232.0.3/24
host1(config)#access-list gold permit ip host any 228.0.0.0 0.0.0.255
host1(config)#access-list gold permit ip host 1.1.1.1 232.0.1.0 0.0.0.255
host1(config)#access-list gold permit ip host 2.2.2.2 232.0.1.0 0.0.0.255
host1(config)#access-list gold permit ip host 1.1.1.1 232.0.2.0 0.0.0.255
host1(config)#access-list gold permit ip host 2.2.2.2 232.0.2.0 0.0.0.255
host1(config)#access-list gold permit ip host 1.1.1.1 232.0.3.0 0.0.0.255
host1(config)#access-list gold permit ip host 2.2.2.2 232.0.3.0 0.0.0.255
```

For additional information about how to create access lists, see [“Defining IP Access Lists” on page 32](#).

2. Enable IP multicast routing.

```
host1(config)#ip multicast-routing
```

3. Enable PIM source-specific multicast router.

```
host1(config)#ip pim ssm
```

4. Identify the default PIM join filter.

```
host1(config)#ip pim join-filter bronze
```

5. Enable PIM sparse mode on a subinterface.

```
host1(config)#interface atm 3/0.101
host1(config-if)#ip address 101.0.0.1 255.255.255.255
```

```
host1(config-if)#ip pim sparse-mode
```

This interface (and any other PIM interface to which you do not specifically assign an access list filter) uses the default (bronze) join filter.

6. Enable PIM sparse mode on another subinterface and assign the silver join filter.

```
host1(config-if)#interface atm 3/0.102
host1(config-if)#ip address 102.0.0.1 255.255.255.255
host1(config-if)#ip pim sparse-mode
host1(config-if)#ip pim join-filter silver
```

7. Enable PIM sparse mode on another subinterface and assign the gold join filter.

```
host1(config-if)#interface atm 3/0.103
host1(config-if)#ip address 103.0.0.1 255.255.255.255
host1(config-if)#ip pim sparse-mode
host1(config-if)#ip pim join-filter gold
```

For information about the **ip pim join-filter** command, see “Configuring PIM for IPv4 Multicast” in the *JunosE Multicast Routing Configuration Guide*. For information about the **ipv6 pim join-filter** command, see “Configuring PIM for IPv6 Multicast” in the *JunosE Multicast Routing Configuration Guide*.

#### Related Documentation

- [Filtering Routes on the Basis of Prefixes Overview on page 22](#)
- [access-list](#)
- [interface atm](#)
- [ip multicast-routing](#)
- [ip pim join-filter](#)
- [ipv6 pim join-filter](#)
- [ip pim sparse-mode graceful-restart-duration](#)
- [ip pim ssm](#)

## Clearing IP and IPv6 Access List Counters

You can use the **clear access-list** and **clear ipv6 access-list** commands to clear all access list counters or access list counters in the specified access list

To clear all access list counters or access list counters in the specified access list:

- Clear access list counters in the specified IP access list.

```
host1#clear access-list list1
```

- Clear access list counters in the specified IPv6 access list.

```
host1#clear ipv6 access-list list2
```

#### Related Documentation

- [Defining IP Access Lists on page 32](#)
- [Defining IPv6 Access Lists on page 34](#)
- [Monitoring Access Lists on page 66](#)

- `clear access-list`
- `clear ipv6 access-list`

## Table Maps

For static routes and access routes, you can configure and apply a table map that filters routes before an access list adds them to the routing table.

This section describes the following:

- [Understanding Table Maps on page 40](#)
- [Creating Table Maps to Filter IP and IPv6 Access Routes on page 41](#)
- [Creating Table Maps to Filter IP and IPv6 Static Routes on page 41](#)

### Understanding Table Maps

For static routes, you can use the **ip static-route table-map** or **ipv6 static-route table-map** command to filter static routes before adding them to the routing table. For access routes, you can use the **ip access-route table-map** or **ipv6 access-route table-map** command to filter access routes before an access list adds them to the routing table.

Use these commands on the policy values listed in [Table 3 on page 40](#).

**Table 3: Match and Set Policy Values**

Match	Set
ip address	metric
metric	distance
distance	tag
tag	

For example, you can configure an access list and route map to filter, on the basis of IP address, any routes that appear in the routing table:

```
host1(config)#ip access-route table-map just10net
host1(config)#access-list permit10 permit 10.0.0.0 0.255.255.255
host1(config)#access-list permit10 deny any
host1(config)#route-map just10net
host1(config-route-map)#match ip address permit10
```

Using the same name for both the table map and the route map creates an association specifying (in this case) that only IP addresses that match the access list criterion appear in the routing table.

#### Related Documentation

- [Creating Table Maps to Filter IP and IPv6 Access Routes on page 41](#)
- [Creating Table Maps to Filter IP and IPv6 Static Routes on page 41](#)



- *access-list*
- *ip access-route table-map*
- *ip static-route table-map*
- *ipv6 access-route table-map*
- *ipv6 static-route table-map*
- *match ip address*
- *route-map*

### Creating Table Maps to Filter IP and IPv6 Access Routes

You can use the **ip access-route table-map** and **ipv6 access-route table-map** commands to filter access routes before an access list adds them to the routing table.

To filter access routes before an access list adds them to the routing table:

- Filter IP access routes before an IP access list adds them to the routing table.  
`host1(config)#ip access-route table-map just10net`
- Filter IPv6 access routes before an IPv6 access list adds them to the routing table.  
`host1(config)#ipv6 access-route table-map map2`

Use the **no** version to delete the table map.

#### Related Documentation

- [Understanding Table Maps on page 40](#)
- *ip access-route table-map*
- *ipv6 access-route table-map*

### Creating Table Maps to Filter IP and IPv6 Static Routes

You can use the **ip static-route table-map** and **ipv6 static-route table-map** commands to filter static routes before adding them to the routing table.

To filter static routes before adding them to the routing table:

- Filter IP static routes before adding them to the routing table.  
`host1(config)#ip static-route table-map map3`
- Filter IPv6 static routes before adding them to the routing table.  
`host1(config)#ipv6 static-route table-map map4`

Use the **no** version to delete the table map.

#### Related Documentation

- [Understanding Table Maps on page 40](#)
- [Monitoring the Status of IP Static Routes in the Routing Table on page 78](#)
- *ip static-route table-map*

- *ipv6 static-route table-map*

---

## Filtering Undesired Traffic Using the Null Interface

You can use access control lists to filter undesired traffic. Another way to handle undesired traffic is to send it to the null interface. The router automatically creates the null interface, which is always up, cannot be deleted, and acts as a data sink. In other words, the null interface cannot forward or receive traffic. However, the CLI does allow you to access the null interface.

The E Series router creates the null interface by default; you do not have to manually create it. You can direct traffic to the null interface by specifying the **null 0** keywords instead of a next-hop or destination address when you configure routes.

To route undesired traffic to the null interface:

1. Access the null interface.

```
host1(config)#interface null 0
host1(config-if)#
```

2. Configure a static route and redirect traffic from it to the null interface.

```
host1(config-if)#ip route 10.10.20.5 null 0
```

Use the **no** version to remove the static route.

### Related Documentation

- [Monitoring the Current State of IP Routing Tables on page 74](#)
- *interface null*
- *ip route*

---

## Prefix Lists

A prefix list is a sequential collection of permit and deny conditions that apply to IP or IPv6 addresses.

This topic describes the following:

- [Prefix Lists Overview on page 43](#)
- [Creating or Configuring an IP or IPv6 Prefix List for Route Filtering on page 43](#)
- [Clearing Hit Counts in the IP or IPv6 Prefix List on page 44](#)
- [Matching Routes on the Basis of the Destination IP or IPv6 Address Permitted by the Prefix List on page 44](#)
- [Matching Routes on the Basis of the Next-Hop Router IP or IPv6 Address Passed by the Prefix List on page 45](#)

## Prefix Lists Overview

A prefix list is just like an access list: the router tests addresses one by one against the conditions in a prefix list. The first match determines whether the router accepts or rejects the address. Because the router stops testing conditions after the first match, the order of the conditions is critical. If no conditions match, the router rejects the address. An empty prefix list results in an automatic permit of the tested address.

Unlike access lists, the prefix list specifies a base IP or IPv6 address and a length (the number of bits applied to the base to determine the network prefix). The tested address is matched against the prefix.

Use the **ip prefix-list** command to define an IP prefix list, or the **ipv6 prefix-list** command to define an IPv6 prefix list. The **prefix-list** keyword with either the **match { ip | ipv6 } address** or **match { ip | ipv6 } next-hop** command enables you to add a clause to a route map.

### Related Documentation

- [Creating or Configuring an IP or IPv6 Prefix List for Route Filtering on page 43](#)
- [Clearing Hit Counts in the IP or IPv6 Prefix List on page 44](#)
- [Matching Routes on the Basis of the Destination IP or IPv6 Address Permitted by the Prefix List on page 44](#)
- [Matching Routes on the Basis of the Next-Hop Router IP or IPv6 Address Passed by the Prefix List on page 45](#)

## Creating or Configuring an IP or IPv6 Prefix List for Route Filtering

You can use the **ip prefix-list** and **ipv6 prefix-list** commands to create a prefix list for route filtering and to specify a list entry—a deny or permit clause for a network address—to the prefix list. You can add entries to prefix lists. The prefix list name can be up to 32 characters long.

You can specify the position of each entry in the list with the **seq** (sequence) keyword. If you do not specify a sequence number, the router uses the value of the last sequence number plus 5.

You can use the **ge** and **le** keywords to specify a range of network prefixes. These keywords have the following values:

- prefix length < **ge** <= 32
- prefix length < **le** <= **ge**

If you do not specify either the **ge** or **le** keyword, an exact match is expected.

To create a prefix list for route filtering:

- Create an IPv4 prefix list to permit only a route with a prefix length of 8 and a network address of 151.0.0.0 (exact match required).

```
host1(config)#ip prefix-list abc permit 151.0.0.0/8
```

- Create an IPv6 prefix list to permit only a route with a prefix length of 8 and a network address of 1:0:0:0:0:0:0:5 (exact match required).

```
host1(config)#ipv6 prefix-list abc permit 1::5/8
```

Use the **no** version to remove the specified prefix list or the specified list entry.

#### Related Documentation

- [Prefix Lists Overview on page 43](#)
- [Clearing Hit Counts in the IP or IPv6 Prefix List on page 44](#)
- [Monitoring the Prefix Lists Configured on the Router on page 69](#)
- *ip prefix-list*
- *ipv6 prefix-list*

### Clearing Hit Counts in the IP or IPv6 Prefix List

You can use the **clear ip prefix-list** and **clear ipv6 prefix-list** commands to clear all hit counts in the prefix lists or the specified entry from the specified prefix list. The router increments the hit count by 1 each time an entry matches.

To clear all hit counts from the prefix lists or the specified entry from the specified prefix list:

- Clear all hit counts from the specified IPv4 prefix list.

```
host1#clear ip prefix-list abc
```

- Clear all hit counts from the specified IPv6 prefix list.

```
host1#clear ipv6 prefix-list abc
```

#### Related Documentation

- [Prefix Lists Overview on page 43](#)
- [Creating or Configuring an IP or IPv6 Prefix List for Route Filtering on page 43](#)
- [Monitoring the Prefix Lists Configured on the Router on page 69](#)
- *clear ip prefix-list*
- *clear ipv6 prefix-list*

### Matching Routes on the Basis of the Destination IP or IPv6 Address Permitted by the Prefix List

You can use the **match ip address** and **match ipv6 address** commands to specify an access list. You can also use the **match ip address** and **match ipv6 address** commands with the **prefix-list** or **prefix-tree** keyword to match routes that have a destination network number address that is permitted by any specified prefix list or prefix tree.

To match routes that have a destination network number address that is permitted by any specified prefix list:

- Match routes that have a destination network number address permitted by an IPv4 prefix list.

```
host1(config-route-map)#match ip address prefix-list abc
```

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

- Match routes that have a destination network number address permitted by an IPv6 prefix list.

```
host1(config-route-map)#match ipv6 address prefix-list boston
```

Use the **no** version to delete all address match clauses from a route map unless you specify an access list or prefix list, in which case only the list match is removed from the route map.

#### Related Documentation

- [Prefix Lists Overview on page 43](#)
- [Creating or Configuring an IP or IPv6 Prefix List for Route Filtering on page 43](#)
- [Monitoring Route Map Details on page 84](#)
- *match ip address*
- *match ipv6 address*

## Matching Routes on the Basis of the Next-Hop Router IP or IPv6 Address Passed by the Prefix List

You can use the **match ip next-hop** and **match ipv6 next-hop** commands with the **prefix-list** keyword to match routes that have a next-hop router address passed by the specified prefix lists.

To match any routes that have a next-hop router address passed by the specified prefix list:

- Match routes that have a next-hop router address passed by the specified IPv4 prefix list.

```
host1(config-route-map)#match ip next-hop prefix-list abc
```

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

- Match routes that have a next-hop router address passed by the specified IPv6 prefix list.

```
host1(config-route-map)#match ipv6 next-hop prefix-list next1
```

Use the **no** version to delete all next-hop match clauses from a route map unless you specify an access list or prefix list, in which case the router removes only the list match from the route map.

#### Related Documentation

- [Prefix Lists Overview on page 43](#)
- [Creating or Configuring an IP or IPv6 Prefix List for Route Filtering on page 43](#)
- [Monitoring Route Map Details on page 84](#)
- *match ip next-hop*

- *match ipv6 next-hop*

## Prefix Trees

---

A prefix tree is a nonsequential collection of permit and deny conditions that applies to IP addresses.

This topic describes the following:

- [Prefix Tree Overview on page 46](#)
- [Creating or Configuring an IP Prefix Tree for Best Route Filtering on page 47](#)
- [Clearing Hit Counts in the IP Prefix Tree on page 47](#)
- [Matching Routes on the Basis of the Destination IP Address Permitted by the Prefix Tree on page 47](#)
- [Matching Routes on the Basis of the Next-Hop Router IP Address Passed by the Prefix Tree on page 48](#)
- [Summarizing Matched Routes on the Basis of the Network Base Address Set in the Prefix Tree on page 48](#)

### Prefix Tree Overview

Like a prefix list, the prefix tree specifies a base IP address and a length, which is the number of bits applied to the base to determine the network prefix. The tested address is matched against the prefix. The prefix tree also enables route summarization.

However, the prefix tree does not match addresses one by one in sequence against the listed conditions. The router performs a binary search against the tree structure of the entries. If the tested address is less than a particular entry, it branches one way to another test pair; if it is greater than the entry, it branches the other way to another mutually exclusive test pair. The router stops testing conditions when it finds the best match. If no conditions match, the router rejects the address. An empty prefix tree results in an automatic permit of the tested address.

The prefix tree provides a faster search method and matches the test address more closely than either the access list or the prefix list.

Use the **ip prefix-tree** command to define an IP prefix tree. Use the **prefix-tree** keyword with the **match ip address** or **match ip next-hop** command to add a clause to a route map. Use the **match-set summary prefix-tree** command to specify the prefix tree that summarizes routes for a particular route map.

#### Related Documentation

- [Creating or Configuring an IP Prefix Tree for Best Route Filtering on page 47](#)
- [Clearing Hit Counts in the IP Prefix Tree on page 47](#)
- [Matching Routes on the Basis of the Destination IP Address Permitted by the Prefix Tree on page 47](#)
- [Matching Routes on the Basis of the Next-Hop Router IP Address Passed by the Prefix Tree on page 48](#)

- [Summarizing Matched Routes on the Basis of the Network Base Address Set in the Prefix Tree on page 48](#)

## Creating or Configuring an IP Prefix Tree for Best Route Filtering

You can use the **ip prefix-tree** command to create a prefix tree for best route filtering. The **ip prefix-tree** command specifies a tree entry—a deny or permit clause for a network address. The prefix tree name can be up to 32 characters long.

To create a prefix tree for best route filtering:

- Issue the **ip prefix-tree** command in Global Configuration mode.

```
host1(config)#ip prefix-tree boston42 permit 10.10.2.0/24
```

Use the **no** version to remove the specified prefix tree or the specified tree entry.

### Related Documentation

- [Prefix Tree Overview on page 46](#)
- [Clearing Hit Counts in the IP Prefix Tree on page 47](#)
- [Monitoring the Prefix Trees Configured on the Router on page 69](#)
- *ip prefix-tree*

## Clearing Hit Counts in the IP Prefix Tree

You can use the **clear ip prefix-tree** command to clear all hit counts in the prefix trees or the specified entry from the specified prefix tree. The router increments the hit count by 1 each time an entry matches.

To clear hit counts in the specified prefix tree:

- Issue the **clear ip prefix-tree** command in Privileged Exec mode.

```
host1#clear ip prefix-tree xyz
```

### Related Documentation

- [Prefix Tree Overview on page 46](#)
- [Creating or Configuring an IP Prefix Tree for Best Route Filtering on page 47](#)
- [Monitoring the Prefix Trees Configured on the Router on page 69](#)
- *clear ip prefix-tree*

## Matching Routes on the Basis of the Destination IP Address Permitted by the Prefix Tree

You can use the **match ip address** command with the **prefix-tree** keyword to match routes that have a destination network number address that is permitted by the prefix tree.

To match routes that have a destination network number address that is permitted by the prefix tree:

- Issue the **match ip address** command in Route Map Configuration mode.

```
host1(config-route-map)#match ip address prefix-tree xyz
```

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

**Related  
Documentation**

- [Prefix Tree Overview on page 46](#)
- [Creating or Configuring an IP Prefix Tree for Best Route Filtering on page 47](#)
- [Monitoring Route Map Details on page 84](#)
- *match ip address*

## Matching Routes on the Basis of the Next-Hop Router IP Address Passed by the Prefix Tree

You can use the **match ip next-hop** command with the **prefix-tree** keyword to match routes that have a next-hop router address passed by the specified prefix tree.

To match routes that have a next-hop router address passed by the specified prefix tree:

- Issue the **match ip next-hop** command in Route Map Configuration mode.

```
host1(config-route-map)#match ip next-hop prefix-tree xyz
```

Use the **no** version to delete the match clause from a route map or a specified value from the match clause.

**Related  
Documentation**

- [Prefix Tree Overview on page 46](#)
- [Creating or Configuring an IP Prefix Tree for Best Route Filtering on page 47](#)
- [Monitoring Route Map Details on page 84](#)
- *match ip next-hop*

## Summarizing Matched Routes on the Basis of the Network Base Address Set in the Prefix Tree

You can use the **match-set summary prefix-tree** command to specify the prefix tree that summarizes routes for a particular route map.

You can use the **ip prefix-tree** command to set the conditions of the prefix tree, including which routes to summarize and how many bits of the network address to preserve.

To specify the prefix tree that summarizes routes for a particular route map:

- Issue the **match-set summary prefix-tree** command in Route Map Configuration mode.

```
host1(config-route-map)#match-set summary prefix-tree dog3
```

Use the **no** version to disable use of the prefix tree by the route map.

**Related  
Documentation**

- [Prefix Tree Overview on page 46](#)
- [Creating or Configuring an IP Prefix Tree for Best Route Filtering on page 47](#)



- [Monitoring Route Map Details on page 84](#)
- *match-set summary prefix-tree*

## Community Lists

A community is a logical group of prefixes that share some common attribute. You can use communities to simplify routing policies by configuring the routing information that a BGP device can accept, prefer, or distribute to other neighbors according to community membership.

This topic describes the following:

- [Community List Overview on page 49](#)
- [Example: Setting Metrics for Routes Forwarded on the Basis of Communities on page 50](#)
- [Configuring the Display Format for the Communities on page 53](#)
- [Creating an IP Community List for BGP on page 53](#)
- [Sending a Community Attribute to a BGP Neighbor on page 54](#)
- [Setting a BGP Community Attribute to a List of Community Numbers on page 54](#)
- [Extended Community Lists on page 55](#)

## Community List Overview

Community members can reside on different networks and in different autonomous systems. BGP enables you to define the community to which a prefix belongs. A prefix can belong to more than one community. The community attribute lists the communities to which a prefix belongs.

When a route is learned, advertised, or redistributed, a BGP device can set, append, or modify the community of a route. When routes are aggregated, the resulting BGP update contains a community attribute that contains all communities from all the aggregated routes (if the aggregate is an AS-set aggregate).

Several well-known communities are predefined. [Table 4 on page 49](#) describes how a BGP device handles a route on the basis of the setting of its community attribute.

**Table 4: Action Based on Well-Known Community Membership**

Well-Known Community	BGP Device Action
no-export	Does not advertise the route beyond the BGP confederation boundary
no-advertise	Does not advertise the route to any peers, IBGP, or EBGP
local-as (also known as no-export-subconfed)	Does not advertise the route to any external peers
internet	Advertises this route to the Internet community; by default, all prefixes are members of the Internet community

In addition to the well-known communities, you can define local-use communities, also known as private communities or general communities. These communities serve as a convenient way to categorize groups of routes to facilitate the use of routing policies. The community attribute consists of four octets, but it is common practice to designate communities in the *AA:NN* format. The autonomous system number (*AA*) comprises the higher two octets, and the community number (*NN*) comprises the lower two octets. Both are expressed as decimal numbers. For example, if a prefix in AS 23 belongs to community 411, the attribute could be expressed as 23:411. Use the **ip bgp-community new-format** command to specify that the **show** commands display communities in this format. You can also use a regular expression to specify the community attribute.

Use the **set community** command in route maps to configure the community attributes. You can add one or more communities to the attribute, or you can use the **list** keyword to add a list of communities to the attribute. By default, the community attribute is not sent to BGP peers. To send the community attribute to a neighbor, use the **neighbor send community** command.

A community list is a sequential collection of permit and deny conditions. Each condition describes the community number to be matched. If you issued the **ip bgp-community new-format** command, the community number is in *AA:NN* format; otherwise, it is in decimal format (the hexadecimal octets converted to decimal).

The router tests the community attribute of a route against each condition in a community list. The first match determines whether the router accepts (the route is permitted) or rejects (the route is denied) a route that has the specified community. Because the router stops testing conditions after the first match, the order of the conditions is critical. If no conditions match, the router rejects the route.

#### Related Documentation

- [Example: Setting Metrics for Routes Forwarded on the Basis of Communities on page 50](#)
- [Configuring the Display Format for the Communities on page 53](#)
- [Creating an IP Community List for BGP on page 53](#)
- [Sending a Community Attribute to a BGP Neighbor on page 54](#)
- [Setting a BGP Community Attribute to a List of Community Numbers on page 54](#)
- [Using Regular Expressions on page 58](#)

### Example: Setting Metrics for Routes Forwarded on the Basis of Communities

This example shows how to set metrics for routes forwarded on the basis of communities.

- [Requirements on page 50](#)
- [Overview on page 51](#)
- [Configuration on page 52](#)

#### Requirements

---

This example uses the following software and hardware components:


- JunosE Release 7.1.0 or higher-numbered releases

- E Series router (ERX7xx models, ERX14xx models, the ERX310 router, the E120 router, or the E320 router)
- ASIC-based line modules that support Fast Ethernet or Gigabit Ethernet

### Overview

Consider the network structure shown in [Figure 5 on page 51](#). In this network, you can configure router Albany to set metrics for routes that it forwards to router Boston on the basis of the communities to which the routes belong. You can create community lists and filter the routes with a route map that matches on the community list.

 **Figure 5: Community Lists**

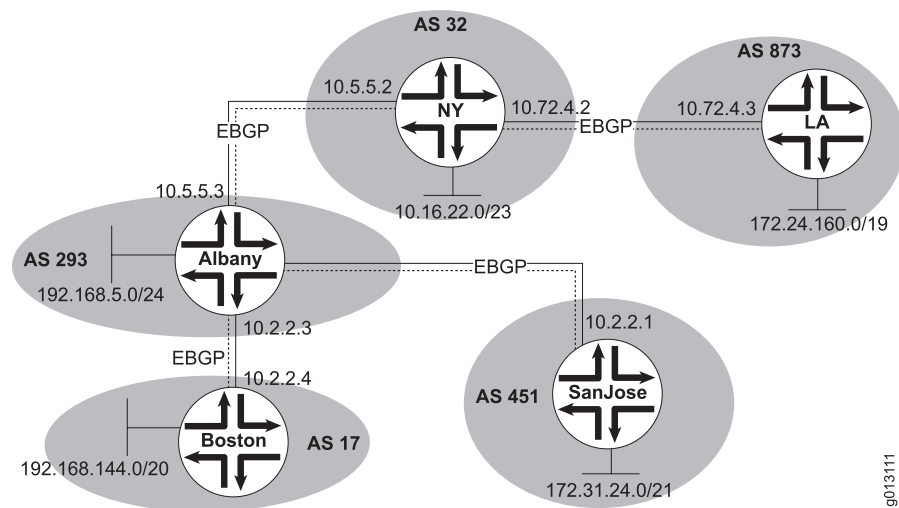

g013111

## Configuration

---

**Step-by-Step Procedure** The following example demonstrates about configuring router Albany to set metrics for routes that it forwards to router Boston on the basis of the communities.

To configure router Albany to set metrics for routes:

1. Configure the BGP routing process.

```
host1(config)#router bgp 293
```

2. Add entries to the BGP neighbor table.

```
host1(config-router)#neighbor 10.5.5.2 remote-as 32
host1(config-router)#neighbor 10.2.2.1 remote-as 451
host1(config-router)#neighbor 10.2.2.4 remote-as 17
```

3. Apply a route map to incoming or outgoing routes.

```
host1(config-router)#neighbor 10.2.2.4 route-map commtrc out
host1(config-router)#exit
```

4. Specify route map 1 and configure route map match and set clauses.

```
host1(config)#route-map commtrc permit 1
host1(config-route-map)#match community 1
host1(config-route-map)#set metric 20
host1(config-route-map)#exit
```

5. Specify route map 2 and configure route map match and set clauses.

```
host1(config)#route-map commtrc permit 2
host1(config-route-map)#match community 2
host1(config-route-map)#set metric 75
host1(config-route-map)#exit
```

6. Specify route map 3 and configure route map match and set clauses.

```
host1(config)#route-map commtrc permit 3
host1(config-route-map)#match community 3
host1(config-route-map)#set metric 85
host1(config-route-map)#exit
```

7. Create community lists for BGP and control access to it.

```
host1(config)#ip community-list 1 permit 25
host1(config)#ip community-list 2 permit 62
host1(config)#ip community-list 3 permit internet
```

**Results** Community list 1 comprises routes with a community of 25; their metric is set to 20. Community list 2 comprises routes with a community of 62; their metric is set to 75. Community 3 catches all remaining routes by matching the Internet community; their metric is set to 85.

**Related Documentation**

- [Community List Overview on page 49](#)
- [Creating an IP Community List for BGP on page 53](#)
- [Defining the Conditions for Redistributing Routes Using a Route Map on page 13](#)

- [Configuring Set Clauses for a Route Map on page 17](#)
- [Configuring Match Clauses and Values for a Route Map on page 14](#)
- [Monitoring IP Protocols on page 70](#)
- [Monitoring the Routes Permitted by IP Community Lists on page 68](#)
- [Monitoring Route Map Details on page 84](#)
- *ip community-list*
- *match community*
- *neighbor remote-as*
- *neighbor route-map*
- *router bgp*
- *route-map*
- *set metric*

## Configuring the Display Format for the Communities

You can use the **ip bgp-community new-format** command to specify that communities be displayed in AA:NN format, where AA is a number that identifies the autonomous system and NN is a number that identifies the community within the autonomous system.

To configure the display format for the communities:

- Issue the **ip bgp-community new-format** command in Global Configuration mode.

```
host1(config)#ip bgp-community new-format
```

Use the **no** version to restore the default display.

### Related Documentation

- [Community List Overview on page 49](#)
- [Monitoring the Routes Permitted by IP Community Lists on page 68](#)
- *ip bgp-community new-format*

## Creating an IP Community List for BGP

You can use the **ip community-list** command to create a community list for BGP and control access to it. The list name can be up to 32 characters long.

A route can belong to any number of communities, so a community list can have many entries comprising many communities. You can specify one or more community values when you create a community list. A clause in a route map that includes a list that has more than one value matches only a route that has all the values; that is, the multiple values are logically joined by an AND operator. You can specify community values with a number or a regular expression.

To create a community list for BGP and assign the created community list to a route-map:

- Create a community list.

```
host1(config)#ip community-list 1 permit 100:2 100:3 100:4
```

- Assign the created community list to a route map. The route matches this community list only if it belongs to at least all three communities in community list 1: communities 100:2, 100:3, and 100:4:

```
host1(config)#route-map marengo permit 10
host1(config-route-map)#match community 1
```

Use the **no ip community-list** command to remove the specified community list, including all list entries.

#### Related Documentation

- [Community List Overview on page 49](#)
- [Defining the Conditions for Redistributing Routes Using a Route Map on page 13](#)
- [Example: Setting Metrics for Routes Forwarded on the Basis of Communities on page 50](#)
- [Configuring Match Clauses and Values for a Route Map on page 14](#)
- [Using Regular Expressions on page 58](#)
- [Monitoring the Routes Permitted by IP Community Lists on page 68](#)
- [Monitoring Route Map Details on page 84](#)
- *ip community-list*

## Sending a Community Attribute to a BGP Neighbor

You can use the **neighbor send-community** command to specify that a community attribute be sent to a BGP neighbor. If you specify a BGP peer group by using the *peer-group-name* argument, all the members of the peer group inherit the characteristic configured with this command.

To specify that a community attribute be sent to a BGP neighbor:

- Issue the **neighbor send-community** command in Router Configuration mode.

```
host1:vr1(config-router)#neighbor 192.3.4.5 send-community standard
```

Use the **no** version to specify that common attributes not be sent to a BGP neighbor.

#### Related Documentation

- [Community List Overview on page 49](#)
- [Monitoring IP Protocols on page 70](#)
- *neighbor send-community*

## Setting a BGP Community Attribute to a List of Community Numbers

You can use the **set community** command to set the community attribute in BGP updates. You can specify a community list number in the range 1–4,294,967,295 or in the new community format of *AA:NN*, or you can specify one of the following well-known communities:

- **local-as**—Prevents advertisement outside the local AS
- **no-advertise**—Prevents advertisement to any peer
- **no-export**—Prevents advertisement beyond the BGP confederation boundary

Alternatively, you can use the **list** keyword to specify the name of a community list that you previously created with the **ip community-list** command. You can use this command with inbound, outbound, and redistribution route maps.

You can use the **none** keyword to remove the community attribute from a route.

To set the community attribute in BGP updates:

- Issue the **set community** command in Route Map Configuration mode.

```
host1(config-route-map)#set community no-advertise
```

Use the **no** version to remove the set clause from a route map.

#### Related Documentation

- [Community List Overview on page 49](#)
- [Configuring Set Clauses for a Route Map on page 17](#)
- [Creating an IP Community List for BGP on page 53](#)
- [Monitoring Route Map Details on page 84](#)
- *set community*

## Extended Community Lists

BGP devices can use the extended community attribute to control routes much like they use the community attribute to determine routes that they accept, reject, or redistribute.

This topic describes the following:

- [Extended Community List Overview on page 55](#)
- [Creating an IP Extended Community List for BGP on page 56](#)
- [Matching an Extended Community List on a Route Map on page 57](#)
- [Setting a BGP Extended Community Attribute on page 57](#)

### Extended Community List Overview

The router supports the BGP extended community attribute defined in Internet draft BGP Extended Communities Attribute—draft-ietf-idr-bgp-ext-communities-07.txt (February 2004 expiration). This attribute enables the definition of a type of IP extended community and extended community list unrelated to the community list that uses regular expressions.



**NOTE:** IETF drafts are valid for only six months from the date of issuance. They must be considered as works in progress. For the latest drafts, please see the IETF website at <http://www.ietf.org>.

A BGP device can append the extended community attribute to a route that does not have the attribute before it advertises the route. For routes that do have the attribute, BGP can modify the attribute.

**Related  
Documentation**

- [Creating an IP Extended Community List for BGP on page 56](#)
- [Matching an Extended Community List on a Route Map on page 57](#)
- [Setting a BGP Extended Community Attribute on page 57](#)
- [Using Regular Expressions on page 58](#)

---

### Creating an IP Extended Community List for BGP

You can use the **ip extcommunity-list** command to create an extended community list for BGP and control access to it. A route can belong to any number of communities, so an extended community list can have many entries comprising many communities.

You can specify one or more community values when you create an extended community list. A clause in a route map that includes a list that has more than one value matches only a route that has all the values; that is, the multiple values are logically joined by an AND operator.

You can use the **rt** keyword to specify a route target community, which consists of one or more routers that can receive a set of routes advertised by BGP that carry the extended community attribute.

You can use the **soo** keyword to specify a site-of-origin community, which consists of one or more routers that inject into BGP a set of routes that carry the extended community attribute.

To create an extended community list for BGP and assign the created extended community list to a route map:

- Create an extended community list.

```
host1(config)#ip extcommunity-list boston1 permit rt 100:2 rt 100:3 rt 100:4
```

- Match the created extended community list to a route map. A route matches this community list only if it belongs to at least all three communities in the extended community list boston1: communities 100:2, 100:3, and 100:4.

```
host1(config)#route-map marengo permit 10
host1(config-route-map)#match extcommunity boston1
```

Use the **no ip extcommunity-list** command to remove a single extended community list entry if you specify the **permit** or **deny** keyword and a path expression. Otherwise, the router removes the entire community list.

**Related  
Documentation**

- [Extended Community List Overview on page 55](#)
- [Defining the Conditions for Redistributing Routes Using a Route Map on page 13](#)
- [Matching an Extended Community List on a Route Map on page 57](#)
- [Monitoring Route Map Details on page 84](#)



- [Monitoring Extended Community Lists on page 66](#)
- *ip extcommunity-list*

### Matching an Extended Community List on a Route Map

You can use the **match extcommunity** command to match an extended community list on a route map. You can specify one or more extended community list names in a match clause. If you specify more than one extended community list, the lists are logically joined by an OR operator.

To match an extended community list on a route map:

- Issue the **match extcommunity** command in Route Map Configuration mode.

```
host1(config-route-map)#match extcommunity topeka10
```

Use the **no** version to remove the match clause from a route map or a specified value from the match clause.

#### Related Documentation

- [Extended Community List Overview on page 55](#)
- [Creating an IP Extended Community List for BGP on page 56](#)
- [Monitoring Route Map Details on page 84](#)
- *match extcommunity*

### Setting a BGP Extended Community Attribute

You can use the **set extcommunity** command to set the extended community attributes in a route map for BGP updates.

You can use the **rt** keyword to specify a route target community, which consists of one or more routers that can receive a set of routes advertised by BGP that carry the extended community attribute.

You can use the **soo** keyword to specify a site-of-origin community, which consists of one or more routers that inject into BGP a set of routes that carry the extended community attribute.

You can specify both a route target community and a site-of-origin community at the same time in a set clause without them overwriting each other.

To set the extended community attributes:

- Issue the **set extcommunity** command in Route Map Configuration mode.

```
host1(config-route-map)#set extcommunity rt 10.10.10.2:325
```

Use the **no** version to remove the set clause from the route map.

#### Related Documentation

- [Extended Community List Overview on page 55](#)
- [Monitoring Route Map Details on page 84](#)

- *set extcommunity*

## Using Regular Expressions

---

You can use regular expressions when you define AS-path access lists and community lists to filter routes more easily. A regular expression uses special characters—often referred to as metacharacters—to define a pattern that is compared with an input string.

- [AS-Path Lists on page 58](#)
- [Community Lists on page 58](#)
- [Community Numbers on page 58](#)
- [Metacharacters on page 59](#)
- [Using Metacharacters as Literal Tokens on page 59](#)
- [Regular Expression Examples on page 60](#)

### AS-Path Lists

For an AS-path access list, the input string is the AS path of the routes to which the list is applied with the **route-map** or **neighbor filter-list** command. If the AS path matches the regular expression in the access list, the route matches the access list.

The following commands apply access list 1 to routes inbound from BGP peer 10.5.5.2. Access list 1 uses a regular expression to deny routes that originate in autonomous system 32.

```
host1(config-router)#neighbor 10.5.5.2 remote-as 32
host1(config-router)#neighbor 10.5.5.2 filter-list 1 in
host1(config-router)#exit
host1(config)#ip as-path access-list 1 deny 32$
```

### Community Lists

For a community list, the input string is the community attribute of the routes to which the list is applied using a **route-map** command. If the community attribute matches the regular expression in the community list, the route matches the community list.

The following commands apply route map 5 to routes forwarded to BGP peer 10.5.5.4. Route map 5 uses a regular expression to match community numbers ending with 305, setting the weight of matching routes to 150.

```
host1(config-router)#neighbor 10.5.5.4 remote-as 425
host1(config-router)#neighbor 10.5.5.4 route-map 5 out
host1(config-router)#exit
host1(config)#route-map 5 permit 10
host1(config-route-map)#match community 305$
host1(config-route-map)#set weight 150
```

### Community Numbers

When you use a regular expression to match a community number, use the appropriate format for the community number in the community list. If you issue the **ip bgp-community**

**new-format** command, the community number has the format *AA:NN* where *AA* is a number that identifies the autonomous system, and *NN* is a number that identifies the community within the autonomous system. Otherwise, the community number is an integer in the range 1–4,294,967,295.

## Metacharacters

Each regular expression consists of one or more metacharacters and zero or more complete or partial AS or community numbers. [Table 5 on page 59](#) describes the metacharacters supported for regular expression pattern-matching.

**Table 5: Supported Regular Expression Metacharacters**

Metacharacter	Description
<code>^</code>	Matches the beginning of the input string.  Alternatively, when used as the first character within brackets— <code>[^ ]</code> —matches any number except the ones specified within the brackets.
<code>\$</code>	Matches the end of the input string.
<code>.</code>	Matches any single character, including white space.
<code>*</code>	Matches zero or more sequences of the immediately previous character or pattern.
<code>+</code>	Matches one or more sequences of the immediately previous character or pattern.
<code>?</code>	Matches zero or one sequence of the immediately previous character or pattern.
<code>()</code>	Specifies patterns for multiple use when followed by one of the multiplier metacharacters: asterisk ( <code>*</code> ), plus sign ( <code>+</code> ), or question mark ( <code>?</code> ).
<code>[ ]</code>	Matches any enclosed character; specifies a range of single characters.
<code>– (hyphen)</code>	Used within brackets to specify a range of AS or community numbers.
<code>_ (underscore)</code>	Matches a <code>^</code> , a <code>\$</code> , a comma, a space, a <code>{</code> , or a <code>}</code> . Placed on either side of a string to specify a literal and disallow substring matching. Numerals enclosed by underscores can be preceded or followed by any of the following characters: <code>^</code> , <code>\$</code> , <code>,</code> , <code>*</code> , <code>+</code> , <code>?</code> , <code>()</code> , <code>[ ]</code> , <code>– (hyphen)</code> .
<code> </code>	Matches characters on either side of the metacharacter; logical OR.

## Using Metacharacters as Literal Tokens

You can remove the special meaning of a metacharacter by preceding it with a backslash (`\`). Such a construction denotes that the metacharacter is *not* treated as a metacharacter for that regular expression. It is simply a character or token with no special meaning, just

as a numeral has no special meaning. The backslash applies only to the character immediately following it in the regular expression.

On an E Series router, you are likely to use the backslash only for the parentheses characters, ( or ). BGP indicates a segment of an AS path that is of the AS-confed-set or AS-confed-seq type by enclosing that segment with parentheses.

```
host1(config)#ip as-path access-list 1 permit ^\(
```

The following AS-path access list uses a regular expression to match routes that have an AS-path attribute that *ends* with any AS-confed-set or AS-confed-seq:

```
host1(config)#ip as-path access-list 1 permit \)$
```

The following AS-path access list uses a regular expression to match routes that have an AS-path attribute that *includes* the specific AS-confed-set or AS-confed-seq, (100 200):

```
host1(config)#ip as-path access-list 1 permit \((100 200\)
```

## Regular Expression Examples

Table 6 on page 60 lists some representative regular expressions that you might use in an AS-path access list or community list, along with sample attribute values that match or do not match the regular expression.

**Table 6: Sample Regular Expressions**

Regular Expression	Matched AS-Path or Community Attribute	Example
<code>^12</code>	Begins with 12	12 23 4212 629 121245 19  but not 58 12 7
<code>[^12]</code>	Includes any numeral except 1 or 2	44 73 465 69 8  but not 1145 1912 2 49
<code>305\$</code>	Ends with 305	89 611 305305 42 30519 1305 6666:305
<code>.5</code>	Includes any one character followed by the numeral 5	89 611 3533 252 12 998 600:500
<code>1.9</code>	Includes a sequence of three characters, where the first character is numeral 1 and the third character is numeral 9	179 35 2433 252 129 48 2129 14600:2129 321:94

Table 6: Sample Regular Expressions (*continued*)

Regular Expression	Matched AS-Path or Community Attribute	Example
.*	Includes any character; matches all AS paths and community lists	
42*	Includes a number that has a numeral 4 followed by <i>zero or more</i> instances of the numeral 2	67 42 51314 33 252 422 483142 4 339 7831422
1(37)*	Includes a sequence that has a numeral 1 followed by <i>zero or more</i> instances of the pattern 37	137 42 211373737 29 4 1  but not 4 3737 78
42+	Includes a number that has a numeral 4 immediately followed by <i>one or more</i> instances of the numeral 2	67 42 2133 252 422 48  but not 4 329 78
1(37)+	Includes a sequence that has a numeral 1 immediately followed by <i>one or more</i> instances of the pattern 37	1373737 29 44 37137 78 137 42 21  but not 4 372 2121 37 5 1 456 881
42?	Includes a number that has a numeral 4 followed by <i>zero or only one</i> instance of the numeral 2	67 42 714 359 78  but not 33 252 422 48
1(37)?	Includes a sequence that has a numeral 1 followed by <i>zero or only one</i> instance of the pattern 37	137 42 2153 612 49 1  but not 4 13737 78
7..	Includes a sequence of three characters, where the first character is numeral 7	600 700 10025 7771  In the following examples, the three characters are 7, space, 8: 307 800 6127 888 999
^7..	Includes a number in the range 700–799	6127 723 999 700 100 600  but not 25 7771307 800
^7..\$	Consists only of a number in the range 700–799	723 700  but not 25 7771307 800 6127 723 999700 100 600

Table 6: Sample Regular Expressions (*continued*)

Regular Expression	Matched AS-Path or Community Attribute	Example
[621]	Includes any of the numerals 6, 2, or 1	60 4334 545 92 200710 86 53  The regular expression [162] has the same results.
[0-9]	Includes any number in the range 0–9	
^(22 431\)	(AS-path attribute only) Begins with the AS-confed-set or AS-confed-seq (22 431)	(22 431) 102(22 431) 55 76 but not 43 (22 431) 522 431 59
{41 19}	(AS-path attribute only) Includes the AS-set or AS-seq {41 19}	{41 19} 53 76 {41 19} 17 255 {41 19}  but not 3 41 19 41 19 532
101 102   103 105	Includes either sequence 101 102 or sequence 103 105	43 101 102 5103 105 22  but not 19 102 101102 103
_200_	Includes the number 200 (as opposed to the pattern consisting of numeral 2, numeral 0, numeral 0)  Our implementation of regular expressions is not literal. Substring matching is enabled by default. Specifying 200 (no underscores) results in a match on 200 and on 2005. The underscore metacharacter disables substring matching.	33 200 422 48^200\$ ^200 500\$  but not 33 20 422 48 51 2005

**Related Documentation**

- [Filtering Routes on the Basis of AS Paths Overview on page 27](#)
- [Defining AS-Path Access Lists on page 34](#)
- [Community List Overview on page 49](#)
- [Creating an IP Community List for BGP on page 53](#)
- [Extended Community List Overview on page 55](#)

## Managing the Routing Table

You can clear all routes from the IP routing table, and then enable the owning protocols—BGP, OSPF, RIP—to reinstall the routes.

You can use the **clear ip route** command to clear all routing entries or a specified entry from the IP routing table and the **ip refresh-route** command to reinstall routes removed from the IP routing table.

To clear all routing entries from the IP routing table:

- Issue the **clear ip route** command in Privileged Exec mode.

```
host1#clear ip routes
```

To reinstall routes removed from the IP routing table:

- Issue the **ip refresh-route** command in Privileged Exec mode.

```
host1#ip refresh-route
```

**Related  
Documentation**

- [Monitoring the Current State of IP Routing Tables on page 74](#)
- *clear ip routes*
- *ip refresh-route*

---

## Troubleshooting Routing Policy Overview

---

You can turn on debugging for routing policy by issuing the **log severity debug ipRoutePolicy** command from Global Configuration mode. You can specify different levels of severity for ipRoutePolicy. For more information about using **log** commands for troubleshooting, see “Managing the System” in the *JunosE System Basics Configuration Guide*.

**Related  
Documentation**

- [Routing Policy Overview on page 3](#)
- *log severity*
- *log*





## CHAPTER 2

# Monitoring Routing Policy

You can monitor the following aspects of routing policy by using **show** commands:

To Display	Commands
Access lists	<b>show access-list</b> <b>show ip as-path access-list</b> <b>show ipv6 access-list</b>
Community lists	<b>show ip community-list</b>
Policy lists	<b>show ip match-policy-list</b>
Prefix lists	<b>show ip prefix-list</b>
Prefix trees	<b>show ip prefix-tree</b>
Protocols	<b>show ip protocols</b>
Redistribution policies	<b>show ip redistribute</b>
Routes	<b>show ip route</b>
Route maps	<b>show route-map</b>
Interfaces and next hops	<b>show ip route slot 5 192.168.5.4</b>
Static routes	<b>show ip static</b>
Traffic	<b>show ip traffic</b>

You can use the output filtering feature of the **show** command to include or exclude lines of output on the basis of a text string that you specify. For details about monitoring and troubleshooting the software, see “Command Line Interface” in the *JunosE System Basics Configuration Guide*.

This topic describes:

- [Monitoring Extended Community Lists on page 66](#)
- [Monitoring Access Lists on page 66](#)
- [Monitoring the AS-Path Access Lists for IP on page 67](#)
- [Monitoring the Routes Permitted by IP Community Lists on page 68](#)
- [Monitoring Match Policy Lists on page 69](#)
- [Monitoring the Prefix Lists Configured on the Router on page 69](#)
- [Monitoring the Prefix Trees Configured on the Router on page 69](#)
- [Monitoring IP Protocols on page 70](#)
- [Monitoring IP Route Redistribution Policy on page 73](#)
- [Monitoring the Current State of IP Routing Tables on page 74](#)
- [Monitoring IP Routing Table Details for a Line Module on page 77](#)
- [Monitoring the Status of IP Static Routes in the Routing Table on page 78](#)
- [Monitoring IP Traffic Statistics on page 80](#)
- [Monitoring Route Map Details on page 84](#)

---

## Monitoring Extended Community Lists

**Purpose** Display information about a specific extended community list or all extended community lists.

**Action** To display information about extended community lists:

```
host1#show ip extcommunity-list
IP Extended Community List dresden1:
permit soo 10.10.10.10:15
IP Extended Community List bonn:
deny rt 12:12
```

**Related Documentation**

- [show ip extcommunity-list](#)

---

## Monitoring Access Lists

**Purpose** Display information about access lists, including instances of each access list.

You can use the **detail** keyword to display the automatically assigned element ID for each access list entry. Only rules that you explicitly create have element IDs.

**Action** To display information about access lists, including instances of each access list:

```
host1#show access-list
IP Access List 1:
  permit ip 172.31.192.217 0.0.0.0 0.0.0.0 255.255.255.255
  permit ip 12.40.0.0 0.0.0.3 0.0.0.0 255.255.255.255
  deny ip 0.0.0.0 255.255.255.255 0.0.0.0 255.255.255.255
IP Access List 2:
  permit ip 172.19.0.0 0.0.255.255 0.0.0.0 255.255.255.255
  deny ip 0.0.0.0 255.255.255.255 0.0.0.0 255.255.255.255
```

```

IP Access List 10:
  permit ip 0.0.0.0 255.255.255.255 0.0.0.0 255.255.255.255
IP Access List 11:
  deny ip 0.0.0.0 255.255.255.255 0.0.0.0 255.255.255.255

```

To display the automatically assigned element ID for each access list entry by using the **detail** keyword:

```

host1#show access-list detail
IP Access List 1:
  1: permit ip host 172.31.192.217 any
  2: permit ip 12.40.0.0 0.0.0.3 any
  deny ip any any

```

**Related Documentation**

- *show access-list*
- *show ipv6 access-list*

## Monitoring the AS-Path Access Lists for IP

**Purpose** Display information about AS-path access lists.

**Action** To display information about AS-path access lists:

```

host1#show ip as-path-access-list
AS Path Access List 1:
  permit .*
AS Path Access List 2:
  deny .*
AS Path Access List 3:
  permit _109_
  deny .*
AS Path Access List 4:
  permit _109$
  deny .*
AS Path Access List 10:
  deny _109$
  permit ^108_
  deny .*

```

**Meaning** [Table 7 on page 67](#) lists the **show ip as-path-access-list** command output fields.

**Table 7: show ip as-path-access-list Output Fields**

Field Name	Field Description
As Path Access List	Name of an AS-Path access list
permit, deny	Condition statement for routes matching the condition

**Related Documentation**

- *show ip as-path-access-list*

## Monitoring the Routes Permitted by IP Community Lists

**Purpose** Display community list information.

The display varies if you issue the **ip bgp community new-format** command.

**Action** To display community list information without issuing the **ip bgp community new-format** command:

```
host1#show ip community-list
Community List 1:
  permit 81200109
  permit 81200110
  permit 81200108
Community List 2:
  deny 81200109
  permit 81200110
  permit 81200108
Community List 4:
  permit local-as
Community List 5:
  permit no-advertise
Community List 6:
  permit no-export
Community List 7:
  permit internet
```

To display the community list information by issuing the **ip bgp community new-format** command:

```
host1#show ip community-list
Community List 1:
  permit 1239:1005
  permit 1239:1006
  permit 1239:1004
Community List 2:
  deny 1239:1005
  permit 1239:1006
  permit 1239:1004
Community List 4:
  permit local-as
Community List 5:
  permit no-advertise
Community List 6:
  permit no-export
Community List 7:
  permit internet
```

**Meaning** [Table 8 on page 68](#) lists the **show ip community-list** command output fields.

**Table 8: show ip community-list Output Fields**

Field Name	Field Description
Community List 1	Name of the community list
permit, deny	Condition statement for routes matching the condition

**Related Documentation** • [show ip community-list](#)

## Monitoring Match Policy Lists

**Purpose** Display configured policy lists.

**Action** To display configured policy lists:

```
host1#show ip match-policy-list
match-policy-list list1, permit
Match clauses:
  match access-list addrList1
  match distance 100
```

**Related Documentation** • [show ip match-policy-list](#)

## Monitoring the Prefix Lists Configured on the Router

**Purpose** Display information about the prefix lists currently configured on the router.

You can use the **summary** keyword to display abbreviated information about prefix lists.

**Action** To display information about the prefix lists currently configured on the router:

```
host1#show ip prefix-list
Prefix-list with the last deletion/insertion: def
ip prefix-list name abc: 4 entries
  seq 5 permit 192.168.0.0/16 le 24
  seq 10 permit 192.178.0.0/16 le 24
  seq 15 deny 195.178.0.0/16 le 24
  seq 20 deny 195.178.0.0/16 le 32
ip prefix-list name def: 1 entries
  seq 5 deny 192.170.0.0/16
```

To display abbreviated information about prefix lists by using the **summary** keyword:

```
host1#show ip prefix-list summary
Total memory used for prefix-list: 310 bytes
Prefix-list with the last deletion/insertion: def
ip prefix-list name abc:
  count: 4, range entries: 4, sequences: 5-20
ip prefix-list name def:
  count: 1, range entries: 0, sequences: 5-5
```

**Related Documentation** • [show ip prefix-list](#)

## Monitoring the Prefix Trees Configured on the Router

**Purpose** Display information about the prefix trees currently configured on the router.

You can use the **summary** keyword to display abbreviated information about prefix trees.

**Action** To display information about the prefix trees currently configured on the router:

```
host1#show ip prefix-tree
Prefix-tree with the last deletion/insertion: t_abc5
ip prefix-tree name t_abc1: 1 entries
  permit 108.243.0.0/16
ip prefix-tree name t_abc2: 3 entries
  permit 101.10.254.0/24
  permit 102.10.248.0/21
  permit 103.10.192.0/18
  permit 108.109.0.0/16
  permit 108.109.241.0/24
ip prefix-tree name t_abc3: 1 entries
  deny 108.0.0.0/8
```

To display abbreviated information about prefix trees by using the **summary** keyword:

```
host1#show ip prefix-tree summary
Total memory used for prefix-tree: 860 bytes
Prefix-tree with the last deletion/insertion: t_abc5
ip prefix-tree name t_abc1:
  count: 1
ip prefix-tree name t_abc2:
  count: 5
ip prefix-tree name t_abc3:
  count: 1
```

**Related Documentation**

- *show ip prefix-tree*

---

## Monitoring IP Protocols

**Purpose** Display detailed information about IP protocols currently configured on the router.

You can use the **summary** keyword to display only a list of the configured protocols.

**Action** To display detailed information about IP protocols currently configured on the router:

```
host1#show ip protocols
Routing Protocol is " bgp 100"
  Redistributing: ospf
  Default local preference is 100
  IGP synchronization is enabled
  Always compare MED is disabled
  Router flap damping is disabled
  Administrative Distance: external 20 internal 200 local 200
  Neighbor(s):
    Address 1.1.1.1
      Outgoing update distribute list is 2
      Outgoing update prefix list is efg
      Incoming update prefix tree is abc
      Incoming update filter list is 1
  Routing for Networks:
    192.168.1.0/24

Routing Protocol is " isis isisOne"
  System Id: 0000.0000.0011.00 IS-Type: level-1-2
  Distance: 115
  Address Summarization:
    None
```

```

Routing for Networks:
  fastEthernet0/0
Routing Protocol is " ospf 1" with Router ID 192.168.1.151
  Distance is 110
  Redistributing: isis
  Address Summarization:
    None
  Routing for Networks:
    192.168.1.0/255.255.255.0 area 0.0.0.0
Routing Protocol is " rip"
  Router Administrative State: enable
  System version RIP1: send = 1, receive = 1 or 2
  Update interval: 30 seconds
  Invalid after: 180 seconds
  hold down time: 120 seconds
  flushed interval: 300 seconds
  Filter applied to outgoing route update is not set
  Filter applied to incoming route update is not set
  No global route map
  Distance is 120
  Interface      Tx    Rx    Auth
  fastEthernet0/0  1     1,2  none
  Redistributing: ospf
  Routing for Networks:
    192.168.1.0/255.255.255.0

```

**Meaning** [Table 9 on page 71](#) lists the **show ip protocols** command output fields.

**Table 9: show ip protocols Output Fields**

Field Name	Field Description
For BGP:	
Redistributing	Protocol to which BGP is redistributing routes
Default local preference	Local preference value
IGP synchronization	Status of IGP synchronization: enabled, disabled
Always compare MED	Status of multiexit discrimination: enabled, disabled
Router flap damping	Status of route dampening: enabled, disabled
Administrative Distance	External, internal, and local administrative distances
Neighbor Address	IP address of the BGP neighbor
Neighbor Incoming/Outgoing update distribute list	Number of the access list for outgoing routes
Neighbor Incoming/Outgoing update prefix list	Number of the prefix list for incoming or outgoing routes

Table 9: show ip protocols Output Fields (*continued*)

Field Name	Field Description
Neighbor Incoming/Outgoing update prefix tree	Number of the prefix tree for incoming or outgoing routes
Neighbor Incoming/Outgoing update filter list	Number of filter list for incoming routes
Routing for Networks	Network for which BGP is currently injecting routes
For IS-IS:	
System Id	6-byte value of the system
IS-Type	Routing type of the router: Level 1, Level 2
Distance	Administrative distance for IS-IS learned routes
Address Summarization	Aggregate addresses defined in the routing table for multiple groups of addresses at a given level or routes learned from other routing protocols
Routing for Networks	Network for which IS-IS is currently injecting routes
For OSPF:	
Router ID	OSPF process ID for the router
Distance	Administrative distance for OSPF learned routes
Redistributing	Protocol to which OSPF is redistributing routes
Address Summarization	Aggregate addresses defined in the routing table for multiple groups of addresses at a given level or routes learned from other routing protocols
Routing for Networks	Network for which OSPF is currently injecting routes
For RIP:	
Router Administrative State	RIP protocol state. Enable means that the interface is allowed to send and receive updates. Disable means that the interface, if it is configured, is not enabled to run yet.
System version	RIP versions allowed for sending and receiving RIP updates. The router version is currently set to RIP1, which sends RIP version 1 but receives version 1 or 2. If the version is set to RIP2, the router sends and receives version 2 only. The default is configured for RIP1.



Table 9: show ip protocols Output Fields (*continued*)

Field Name	Field Description
Update interval	Current setting of the update timer (in seconds)
Invalid after	Current setting of the invalid timer (in seconds)
hold down time	Current setting of the hold-down timer (in seconds)
flushed interval	Current setting of the flush timer (in seconds)
Filter applied to outgoing route update	Access list applied to outgoing RIP route updates
Filter applied to incoming route update	Access list applied to incoming RIP route updates
Global route map	Route map that specifies all RIP interfaces on the router
Distance	Value added to RIP routes added to the IP routing table; the default is 120.
Interface	Interface type on which RIP protocol is running
Redistributing	Protocol to which RIP is redistributing routes
Routing for Networks	Network for which RIP is currently injecting routes

- Related Documentation**
- *Setting the Administrative Distance for a Route*
  - *Identifying a Router Within an Autonomous System*
  - *show ip protocols*

## Monitoring IP Route Redistribution Policy

- Purpose** Display configured route redistribution policy.
- Action** To display configured route redistribution policy:
- ```
host1#show ip redistribute
```
- To ospf, From static is enabled with route map 4  
To ospf, From connected is enabled with route map 3
- Meaning** Table 10 on page 74 lists the **show ip redistribute** command output fields.

Table 10: show ip redistribute Output Fields

| Field Name       | Field Description                         |
|------------------|-------------------------------------------|
| To               | Protocol that routes are distributed into |
| From             | Protocol that routes are distributed from |
| status           | Redistribution status                     |
| route map number | Number of the route map                   |

**Related Documentation**

- *show ip redistribute*

## Monitoring the Current State of IP Routing Tables

**Purpose** Display the current state of the routing table, including routes not used for forwarding.

You can display all routes, a specific route, best route to a resolved domain name, all routes beginning with a specified address, routes for a particular protocol (BGP, IS-IS, OSPF, or RIP), locally connected routes, internal control routes, static routes, or summary counters for the routing table.

**Action** To display only the best routes that are used for forwarding:

host1#show ip route

Protocol/Route type codes:

I1- ISIS level 1, I2- ISIS level2,  
 I- route type intra, IA- route type inter, E- route type external,  
 i- metric type internal, e- metric type external,  
 O- OSPF, E1- external type 1, E2- external type2,  
 N1- NSSA external type1, N2- NSSA external type2  
 L- MPLS label, V- VR/VRF, \*- indirect next-hop

| Prefix/Length  | Type    | Next Hop      | Dist/Met | Intf            |
|----------------|---------|---------------|----------|-----------------|
| 172.16.2.0/24  | Bgp     | 192.168.1.102 | 20/1     | fastEthernet0/0 |
| 10.10.0.112/32 | Static  | 192.168.1.1   | 1/1      | fastEthernet0/0 |
| 10.1.1.0/24    | Connect | 10.1.1.1      | 0/1      | atm3/0.100      |

To display only static routes from the routing table:

host1#show ip route static

Protocol/Route type codes:

I1- ISIS level 1, I2- ISIS level2,  
 I- route type intra, IA- route type inter, E- route type external,  
 i- metric type internal, e- metric type external,  
 O- OSPF, E1- external type 1, E2- external type2,  
 N1- NSSA external type1, N2- NSSA external type2  
 L- MPLS label, V- VR/VRF, \*- indirect next-hop

| Prefix/Length  | Type   | Next Hop    | Dist/Met | Intf            |
|----------------|--------|-------------|----------|-----------------|
| 10.10.0.112/32 | Static | 192.168.1.1 | 1/1      | fastEthernet0/0 |

To display the summary information for all routes available in the routing table:

```
host1#show ip route summary
Unicast routes:
8 total routes, 576 bytes in route entries
0 isis routes
0 rip routes
3 static routes
2 connected routes
1 bgp routes
0 ospf routes
2 other internal routes
0 access routes
0 internally created access host routes

Last route added/deleted: 2::4/128 by BGP
At MON FEB 04 2008 14:18:25 UTC

Unicast routes used only for Multicast RPF check:
0 total routes, 0 bytes in route entries
0 isis routes
0 rip routes
0 static routes
0 connected routes
0 bgp routes
0 ospf routes
0 other internal routes
0 access routes
0 internally created access host routes
0 mbgp routes
0 dvmrp routes

Last route added/deleted: null by Invalid
At MON FEB 04 2008 14:18:04 UTC

MPLS tunnel routes (not used for forwarding):
3 total routes, 216 bytes in route entries
1 bgp tunnel routes
1 ldp tunnel routes
1 rsvp tunnel routes

Last route added/deleted: 2::4/128 by BGP Tunnel
At MON FEB 04 2008 14:18:26 UTC
```

To display all routes in the routing table inserted from all protocols (not just the best routes that are used for forwarding):

```
host1#show ip route all
Protocol/Route type codes:
  I1- ISIS level 1, I2- ISIS level2,
  I- route type intra, IA- route type inter, E- route type external,
  i- metric type internal, e- metric type external,
  O- OSPF, E1- external type 1, E2- external type2,
  N1- NSSA external type1, N2- NSSA external type2
  L- MPLS label, V- VR/VRF, *- indirect next-hop
```

| Prefix/Length | Type   | Next Hop      | Dist/Met | Intf            |
|---------------|--------|---------------|----------|-----------------|
| 0.0.0.0/0     | Static | 192.168.1.1   | 1/1      | fastEthernet0/0 |
| 1.1.1.1/32    | I2-E-i | 192.168.1.105 | 115/10   | fastEthernet0/0 |
| 6.6.6.0/24    | Static | 192.168.1.1   | 1/1      | fastEthernet0/0 |
| 6.33.5.0/24   | Static | 0.0.0.0       | 1/1      | loopback2       |
| 8.8.8.0/24    | I2-E-i | 192.168.1.105 | 115/10   | fastEthernet0/0 |
| 9.9.9.0/32    | I2-E-i | 192.168.1.105 | 115/10   | fastEthernet0/0 |

```

10.0.0.0/8      I2-E-i 192.168.1.105 115/10 fastEthernet0/0
10.10.0.156/32 Static 192.168.1.1 1/1 fastEthernet0/0
11.1.1.1/32    I2-E-i 192.168.1.105 115/10 fastEthernet0/0
11.11.11.12/32 I2-I-i 192.168.1.105 115/10 fastEthernet0/0
22.2.0.0/16    I2-I-i 92.168.1.105 115/10 fastEthernet0/0
34.0.0.0/8     I2-E-i 192.168.1.105 115/10 fastEthernet0/0
172.20.32.0/24 Static 192.168.1.1 1/1 fastEthernet0/0
174.20.32.0/24 I2-I-i 192.168.1.105 115/20 fastEthernet0/0
176.20.32.0/24 Connect 176.20.32.1 0/1 loopback1
192.168.1.0/24 Connect 192.168.1.214 0/1 fastEthernet0/0
201.1.1.0/24   I2-E-i 192.168.1.105 115/10 fastEthernet0/0
201.2.1.0/24   I2-E-i 192.168.1.105 115/10 fastEthernet0/0
201.3.1.0/24   I2-E-i 192.168.1.105 115/10 fastEthernet0/0
202.1.1.1/32   I2-E-i 192.168.1.105 115/10 fastEthernet0/0
207.1.1.0/24   I2-E-i 192.168.1.105 115/10 fastEthernet0/0

```

To display only the best routes that are used for forwarding (after adding routes that have an indirect hop):

```
host1#show ip route
```

Protocol/Route type codes:

```

I1- ISIS level 1, I2- ISIS level2,
I- route type intra, IA- route type inter, E- route type external,
i- metric type internal, e- metric type external,
O- OSPF, E1- external type 1, E2- external type2,
N1- NSSA external type1, N2- NSSA external type2
L- MPLS label, V- VR/VRF, *- indirect next-hop

```

| Prefix/Length | Type    | Next Hop   | Dst/Met | Intf             |
|---------------|---------|------------|---------|------------------|
| 21.21.21.2/32 | Static  | 0.0.0.0    | 1/0     | loopback0[V:pe2] |
| 2.2.2.2/32    | O-I     | 30.30.30.2 | 110/3   | ATM2/0.30        |
|               |         | 31.31.31.2 | 110/3   | ATM2/0.31        |
| 10.10.10.0/24 | Connect | 10.10.10.1 | 0/0     | ATM2/0.10        |
| 20.20.20.0/24 | Connect | 20.20.20.1 | 0/0     | ATM2/0.21        |
| 4.4.4.4/32    | Bgp     | 2.2.2.2*   | 200/2   |                  |
|               |         | 3.3.3.3*   | 200/2   |                  |
| 5.5.5.5/32    | Bgp     | 4.4.4.4*   | 20/2    |                  |

To display detailed information about a specific route:

```
host1#show ip route 4.4.4.4 detail
```

Protocol/Route type codes:

```

I1- ISIS level 1, I2- ISIS level2,
I- route type intra, IA- route type inter, E- route type external,
i- metric type internal, e- metric type external,
O- OSPF, E1- external type 1, E2- external type2,
N1- NSSA external type1, N2- NSSA external type2
L- MPLS label, V- VRF

```

```

4.4.4.4/32  Type: Bgp  Distance: 200  Metric: 0  Tag: 0
  Indirect NHop: virtual-router: pe1
  Address 1.1.1.1 Type Bgp Index 1
    NHop: 10.10.10.2 IfIndx: 28 Intf: ATM2/0.10
    NHop: 20.20.20.2 IfIndx: 28 Intf: ATM2/0.20

  Indirect NHop: virtual-router: pe1
  Address 2.2.2.2 Type Bgp Index 2
    NHop: 10.10.10.2 IfIndx: 28 Intf: ATM2/0.10
    NHop: 20.20.20.2 IfIndx: 28 Intf: ATM2/0.20

```

**Meaning** Table 11 on page 77 lists the **show ip route** command output fields.

Table 11: show ip route Output Fields

| Field Name                | Field Description                                                                          |
|---------------------------|--------------------------------------------------------------------------------------------|
| Protocol/Route type codes | Protocol and route type codes for the table that follows                                   |
| Prefix                    | IP address prefix of network destination                                                   |
| Length                    | Network mask length for prefix                                                             |
| Next Hop                  | IP address of the next hop to the route, whether it is a local interface or another router |
| Dist                      | Administrative distance for the route                                                      |
| Met                       | Number of hops                                                                             |
| Intf                      | Interface type and interface specifier                                                     |

#### Related Documentation

- *Setting the Administrative Distance for a Route*
- *Establishing an IP Static Route*
- *Configuring IP Static Routes with Indirect Next Hops*
- *Clearing and Reinstalling IP Routes*
- *IP Tunnel Routing Table Overview*
- *show ip route*

### Monitoring IP Routing Table Details for a Line Module

**Purpose** Display the interface and next hop for an IP address in the routing table of a line module.

- *slotNumber*—Number of the slot containing the linemodule
- *ipAddress*—IP address to look up in the routing table

**Action** To display the interface and next hop for an IP address in the routing table of a line module:

```
host1#show ip route slot 6 10.10.0.231
IP address      Interface      Next Hop
-----
10.10.0.231    fastEthernet 6/0  10.10.0.231
```

**Meaning** [Table 12 on page 78](#) lists the **show ip route slot** command output fields.

Table 12: show ip route slot Output Fields

| Field Name | Field Description                                                                                                                                                                                                                                                                                                                                                                        |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IP address | IP address reachable via the interface                                                                                                                                                                                                                                                                                                                                                   |
| Interface  | Interface type and specifier associated with the IP address; displays "Local Interface" if a special interface index is present in the routing table for special IP addresses, such as broadcast addresses                                                                                                                                                                               |
| Next Hop   | <p>IP address of the next-hop router to reach the IP address; displays "---" if no next hop is associated with the IP address; displays "Down" if the ECMP set for a specific route on a slot is down</p> <p>A next hop is displayed only for protocols where ARP is used to resolve the addresses, such as for fastEthernet, gigabitEthernet, bridged Ethernet over ATM, and so on.</p> |

- Related Documentation**
- *Configuring Broadcast-Related IP Tasks*
  - *Clearing and Reinstalling IP Routes*
  - *show ip route slot*

## Monitoring the Status of IP Static Routes in the Routing Table

**Purpose** Display the status of static routes in the routing table.



**NOTE:** You can specify an IP mask that filters specific routes.

**Action** To display the status of static routes in the routing table:

host1#show ip static

| Prefix/Length   | Next Hop        | Dst/Met | Tag | Intf            | Verify     | ICMP Unreach |
|-----------------|-----------------|---------|-----|-----------------|------------|--------------|
| 1.1.1.2/32      | 1.1.1.2         | 1/0     | 0   | FastEthernet4/0 | 2 up       |              |
| 1.1.1.2/32      | 1.1.1.2         | 1/0     | 0   | FastEthernet4/1 |            |              |
| 10.10.133.17/32 | 10.6.128.1      | 1/1     | 0   | unresolved      | 1 down     |              |
| 11.11.11.11/32  | 3.3.3.3         | 1/0     | 0   | unresolved      | 1 down(1r) |              |
| 100.1.1.0/24    | 255.255.255.255 | 1/0     | 0   | nu110           |            | Discard      |
| 100.10.1.0/24   | 255.255.255.255 | 1/0     | 0   | nu110           |            | Reject       |

**Meaning** Table 13 on page 78 lists the **show ip static** command output fields.

Table 13: show ip static Output Fields

| Field Name | Field Description |
|------------|-------------------|
| Prefix     | IP address prefix |

Table 13: show ip static Output Fields (*continued*)

| Field Name   | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Length       | Prefix length                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Next Hop     | IP address of the next hop                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Dst          | Administrative distance of the route                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Met          | Number of hops                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Tag          | Tag value of the route                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Intf         | Interface type and interface specifier                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Verify       | <p>Status of the RTR or BFD operation associated with the specified static route; this field is blank if the <b>verify</b> (BFD) or <b>verify rtr</b> (RTR) keywords were not specified as part of the <b>ip route</b> command. The display can include the following:</p> <ul style="list-style-type: none"> <li>• BFD up/down—Current status of the associated BFD operation</li> <li>• operation number—Number of the associated RTR operation</li> <li>• up/down—Current status of the associated RTR operation</li> <li>• (lr)—Indicates that although the associated RTR operation is currently down, the router installs this route in the routing table, provided that no other static route to the same network prefix is available; this field appears for an RTR operation that is down when the <b>last-resort</b> keyword is specified as part of the <b>ip route verify rtr</b> command</li> </ul> |
| ICMP Unreach | <p>Indicates whether the transmission of ICMP unreachable messages to the originator is enabled for packets that are discarded from processing on each interface configured with a static route:</p> <ul style="list-style-type: none"> <li>• reject—ICMP unreachable messages are sent to the originator for packets that are received on the static route configured on the interface and are dropped from processing (the <b>reject</b> keyword is specified with the <b>ip route</b> command).</li> <li>• discard—ICMP unreachable messages are not sent to the originator for packets that are received on the static route configured on the interface and are dropped from processing (the <b>discard</b> keyword is specified with the <b>ip route</b> command or the default mode of the <b>ip route</b> command is in effect).</li> </ul>                                                              |

#### Related Documentation

- *Setting the Administrative Distance for a Route*

- *Establishing an IP Static Route*
- *Enabling or Disabling the Transmission of ICMP Unreachable Messages for Static Routes on Null Interfaces*
- *Next-Hop Verification for Static Routes Overview*
- *Clearing and Reinstalling IP Routes*
- *show ip static*

---

## Monitoring IP Traffic Statistics

**Purpose** Display statistics about IP traffic. You can use the ipTraffic log to show consumable IP traffic to the SRP module; the traffic is filterable per router and IP interface. You can show ICMP, TCP, and UDP traffic with the icmpTraffic, udpTraffic, and tcpTraffic logs.

**Action** To display statistics about IP traffic:

```
host1#show ip traffic
IP statistics: Router Id: 172.31.192.217
  Rcvd: 97833 total, 171059 local destination
    0 hdr errors, 0 addr errors
      167 unkn proto, 0 discards
  Frags: 4 reassembled, 30 reasm timed out, 8 reasm req
    0 reasm fails, 145 frag ok, 0 frag fail
    290 frag creates
  Sent: 15 forwarded, 25144 generated, 0 out disc
    0 no routes, 0 routing discards
  Route: 57680 routes in table
    0 timestamp req, 0 timestamp rpy
    0 addr mask req, 0 addr mask rpy
ICMP statistics:
  Rcvd: 561 total, 0 errors, 15 dst unreach
    0 time exceed, 0 param probs, 0 src quench
    0 redirects, 0 echo req, 0 echo rpy
    0 timestamp req, 0 timestamp rpy
    0 addr mask req, 0 addr mask rpy
  Sent: 463866 total, 0 errors, 163676 dest unreach
    0 time excd, 0 param prob, 0 src quench
    20 redirects, 463846 echo req, 0 echo rpy
    0 timestamp req, 0 timestamp rpy
    0 addr mask req, 0 addr mask rpy
UDP Statistics:
  Rcvd: 93326 total, 0 checksum errors, 90610 no port
  Sent: 0 total, 0 errors
TCP Global Statistics:
  Connections: 7358 attempted, 4 accepted, 7362 established
    0 dropped, 14718 closed
  Rcvd: 75889 total pkts, 53591 in-sequence pkts, 3120283 bytes
    0 chksum err pkts, 0 authentication err pkts, 0 bad offset
    0 short pkts, 0 duplicate pkts, 0 out of order pkts
  Sent: 82318 total pkts, 44381 data pkts, 656321 bytes
    34 retransmitted pkts, 487 retransmitted bytes
OSPF Statistics:
IGMP Statistics:
ARP Statistics:
```



**Meaning** Table 14 on page 81 lists the **show ip traffic** command output fields.

**Table 14: show ip traffic Output Fields**

| Field Name          | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IP Statistics Rcvd  | <ul style="list-style-type: none"> <li>router Id—Router ID number</li> <li>total—Number of frames received</li> <li>local destination—Frames with this router as their destination</li> <li>hdr errors—Number of packets containing header errors</li> <li>addr errors—Number of packets containing addressing errors</li> <li>unkn proto—Number of packets received containing unknown protocols</li> <li>discards—Number of discarded packets</li> </ul>                                   |
| IP Statistics Frags | <ul style="list-style-type: none"> <li>reassembled—Number of reassembled packets</li> <li>reasm timed out—Number of reassembled packets that timed out</li> <li>reasm req—Number of requests for reassembly</li> <li>reasm fails—Number of reassembly failures</li> <li>frag ok—Number of fragmented packets reassembled successfully</li> <li>frag fail—Number of fragmented packets reassembled unsuccessfully</li> <li>frag creates—Number of packets created by fragmentation</li> </ul> |
| IP Statistics Sent  | <ul style="list-style-type: none"> <li>forwarded—Number of packets forwarded</li> <li>generated—Number of packets generated</li> <li>out disc—Number of outbound packets discarded</li> <li>no routes—Number of packets that could not be routed</li> <li>routing discards—Number of packets that could not be routed and were discarded</li> </ul>                                                                                                                                          |
| IP Statistics Route | <ul style="list-style-type: none"> <li>routes in table—Number of routes in the routing table</li> <li>timestamp req—Number of requests for a timestamp</li> <li>timestamp rpy—Number of replies to timestamp requests</li> <li>addr mask req—Number of address mask requests</li> <li>addr mask rpy—Number of address mask replies</li> </ul>                                                                                                                                                |

Table 14: show ip traffic Output Fields (*continued*)

| Field Name           | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ICMP Statistics Rcvd | <ul style="list-style-type: none"> <li>total—Total number of ICMP packets received</li> <li>errors—Number of error packets received</li> <li>dst unreachable—Number of packets received with destination unreachable</li> <li>time exceed—Number of packets received with time-to-live exceeded</li> <li>param probs—Number of packets received with parameter errors</li> <li>src quench—Number of source quench packets received</li> <li>redirects—Number of receive packet redirects</li> <li>echo req—Number of echo request (ping) packets</li> <li>echo rpy—Number of echo replies received</li> <li>timestamp req—Number of requests for a timestamp</li> <li>timestamp rpy—Number of replies to timestamp requests</li> <li>addr mask req—Number of mask requests received</li> <li>addr mask rpy—Number of mask replies received</li> </ul> |
| ICMP Statistics Sent | <ul style="list-style-type: none"> <li>total—Total number of ICMP packets sent</li> <li>errors—Number of error packets sent</li> <li>dest unreachable—Number of packets sent with destination unreachable</li> <li>time excd—Number of packets sent with time-to-live exceeded</li> <li>param prob—Number of packets sent with parameter errors</li> <li>src quench—Number of source quench packets sent</li> <li>redirects—Number of send packet redirects</li> <li>echo req—Number of echo request (ping) packets</li> <li>echo rpy—Number of echo replies sent</li> <li>timestamp req—Number of requests for a timestamp</li> <li>timestamp rpy—Number of replies to timestamp requests</li> <li>addr mask req—Number of address mask requests sent</li> <li>addr mask rpy—Number of replies to address mask requests</li> </ul>                   |
| UDP Statistics Rcvd  | <ul style="list-style-type: none"> <li>total—Total number of UDP packets received</li> <li>checksum—Number of checksum error packets received</li> <li>no port—Number of packets received for which no E Series router application listener was listening on the destination port</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

Table 14: show ip traffic Output Fields (*continued*)

| Field Name                        | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| UDP Statistics Sent               | <ul style="list-style-type: none"> <li>total—Total number of UDP packets sent</li> <li>errors—Number of error packets sent</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| TCP Global Statistics Connections | <ul style="list-style-type: none"> <li>attempted—Number of outgoing TCP connections attempted</li> <li>accepted—Number of incoming TCP connections accepted</li> <li>established—Number of TCP connections established</li> <li>dropped—Number of TCP connections dropped</li> <li>closed—Number of TCP connections closed</li> <li>currently established—Number of TCP connections currently established</li> </ul>                                                                                                                                                                                                     |
| TCP Global Statistics Rcvd        | <ul style="list-style-type: none"> <li>total pkts—Total number of TCP packets received</li> <li>in-sequence pkts—Number of packets received in sequence</li> <li>bytes—Number of bytes received</li> <li>chksum err pkts—Number of checksum error packets received</li> <li>authentication err pkts—Number of authentication error packets received</li> <li>bad offset pkts—Number of packets received with bad offsets</li> <li>short pkts—Number of short packets received</li> <li>duplicate pkts—Number of duplicate packets received</li> <li>out of order pkts—Number of packets received out of order</li> </ul> |
| TCP Global Statistics Sent        | <ul style="list-style-type: none"> <li>total pkts—Total number of TCP packets sent</li> <li>data pkts—Number of data packets sent</li> <li>bytes—Number of bytes sent</li> <li>retransmitted pkts—Number of packets retransmitted</li> <li>retransmitted bytes—Number of retransmitted bytes</li> </ul>                                                                                                                                                                                                                                                                                                                  |
| OSPF Statistics                   | Provides statistics on OSPF                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| IGMP Statistics                   | Provides statistics about queries, reports sent or received                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| ARP Statistics                    | Not supported for this version of the router                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

**Related Documentation**

- *Adding a Static Entry in the ARP Cache*
- *Identifying a Router Within an Autonomous System*

- *Enabling or Disabling the Transmission of ICMP Unreachable Messages for Static Routes on Null Interfaces*
- *Disabling the Forwarding of IP Packets on an SRP Ethernet Interface*
- *Setting a Baseline for IP Statistics*
- *show ip traffic*

---

## Monitoring Route Map Details

---

**Purpose** Display configured route maps. The displayed information includes instances of each access list such as **match** and **set** commands.

**Action** To display configured route maps:

```
host1#show route-map westford
route-map 1, permit, sequence 10
  Match clauses:
    match community 44
  Set clauses:
    set local-pref 400
```

**Related Documentation** • *show route-map*

## CHAPTER 3

# Configuring NAT

This chapter describes how to configure Network Address Translation (NAT) on your ERX router; it contains the following sections:

- [Overview on page 85](#)
- [Platform Considerations on page 86](#)
- [References on page 86](#)
- [NAT Configurations on page 87](#)
- [Network and Address Terms on page 88](#)
- [Understanding Address Translation on page 89](#)
- [Address Assignment Methods on page 90](#)
- [Order of Operations on page 90](#)
- [PPTP and GRE Tunneling Through NAT on page 91](#)
- [Packet Discard Rules on page 92](#)
- [Before You Begin on page 92](#)
- [Configuring a NAT License on page 92](#)
- [Limiting Translation Entries on page 93](#)
- [Specifying Inside and Outside Interfaces on page 93](#)
- [Defining Static Address Translations on page 93](#)
- [Defining Dynamic Translations on page 95](#)
- [Clearing Dynamic Translations on page 100](#)
- [NAT Configuration Examples on page 101](#)
- [Tunnel Configuration Through NAT Examples on page 107](#)
- [GRE Flows Through NAT on page 108](#)
- [Monitoring NAT on page 109](#)

## Overview

---

The Internet faces the challenges of conserving IP address space while continuing to provide scalability in routing. Network Address Translation (NAT) helps address these challenges by allowing the conservation of registered IP addresses within private networks and simplifying IP addressing management tasks through a form of *transparent routing*.

NAT enables you to translate IP addresses between two address realms (for example, between an intranet network that uses private, not publicly routable addresses and the Internet, or between two overlapping, private networks). When incoming traffic is received, the IP addresses are translated back for delivery within the private network.

Using NAT at the edge of your intranet provides the following advantages:

- Allows unregistered *private* addresses to connect to the Internet by translating those addresses into globally registered IP addresses
- Increases network privacy by hiding internal IP addresses from external networks

## Platform Considerations

---

For information about modules that support NAT on ERX14xx models, ERX7xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support NAT.



**NOTE:** The E120 and E320 Broadband Services Routers do not support configuration of NAT.

---

## Module Requirements

To configure NAT on ERX7xx models, ERX14xx models, and the ERX310 router, you must install a Service Module (SM). For information about installing modules in E Series Broadband Services Routers, see the *ERX Hardware Guide*.

Unlike other line modules, SMs do not pair with corresponding I/O modules that contain ingress and egress ports. Instead, they receive data from and transmit data to other line modules with access to ingress and egress ports on their own associated I/O modules.

For a list of the modules that support NAT, see *ERX Module Guide, Appendix A, Module Protocol Support*.

## References

---

For more information about NAT, consult the following resources:

- RFC 2663-IP Network Address Translator (NAT) Terminology and Considerations (August 1999)
- RFC 2694-DNS extensions to Network Address Translators (DNS\_ALG) (September 1999)
- RFC 2993-Architecture Implications of NAT (November 2000)

- RFC 3022-Traditional IP Network Address Translator (Traditional NAT) (January 2001)
- RFC 3027-Protocol Complications with the IP Network Address Translator (January 2001)

## NAT Configurations

---

You can configure NAT in several different ways. Each of the following configuration methods provides a solution for different configuration requirements:

- Traditional NAT
- Bidirectional NAT
- Twice NAT

### Traditional NAT

Traditional NAT is the most common method of using address translation. Its primary use is translating private addresses to legal addresses for use in an external network. When configured for dynamic operation, hosts within a private network can initiate access to the external (public) network, but external nodes on the outside network cannot initiate access to the private network.

Addresses on the private network and public network must not overlap. Also, route destination advertisements on the public network (for example, the Internet) can appear within the inside network, but the NAT router does not propagate advertisements of local routes that reference private addresses out to the public network.

There are two types of traditional NAT—basic NAT and NAPT.

#### Basic NAT

---

Basic NAT provides translation for IP addresses only (called a *simple* translation) and places the mapping into a NAT table. In other words, for packets outbound from the private network, the NAT router translates the source IP address and related fields (for example, IP, TCP, UDP, and ICMP header checksums). For inbound packets, the NAT router translates the destination IP address (and related checksums) for entries that it finds in its translation table.



**CAUTION:** Although NAT is the simplest translation method, it is the least secure. By not including port or external host information in the translation, basic NAT allows access to any port of the private host by any external host.

---

#### NAPT

---

Network Address Port Translation (NAPT) extends the level of translation beyond that of basic NAT; it modifies both the IP address and the transport identifier (for example, the TCP or UDP port number, or the ICMP query identifier) and places the mapping into the translation table (this entry is called an *extended* translation). This method can translate the addresses and transport identifiers of many private hosts into a few external

addresses and transport identifiers, to make efficient use of globally registered IP addresses.

Similar to basic NAT, for outbound packets NAPT translates the source IP address, source transport identifier, and related checksum fields. For inbound packets NAPT translates the destination IP address, destination transport identifier, and checksum fields.

## Bidirectional NAT

Bidirectional (or two-way) NAT adds support to basic NAT for the Domain Name System (DNS) so public hosts can initiate sessions into the private network, usually to reach servers intended for public access.

When an outside host attempts to resolve the name of an inside host on a private network, the NAT router intercepts the DNS reply and installs an address translation to allow the outside host to reach the inside host by using a public address. When the outside host initiates a connection with the inside host on the private network, the NAT router translates that public destination address to the private address of the inside host and, on the return path, replaces the source address with the advertised public address.

You might need to perform some additional configuration to allow public access from the Internet to a DNS server that resides in the private domain. (See [“Bidirectional NAT Example” on page 102.](#))

The same address space requirements and routing restrictions apply to bidirectional NAT that were described for traditional NAT. The difference between these two methods is that the DNS exchange might create entries within the translation table.

## Twice NAT

In twice NAT, both the source and destination addresses are subject to translation as packets traverse the NAT router in either direction. For example, you would use twice NAT if you are connecting two networks in which all or some addresses in one network overlap addresses in another network, whether the network is private or public.

## Network and Address Terms

---

The NAT implementation defines an address realm as either *inside* or *outside*, with the router that is running NAT acting as the defining boundary between the two realms.

From a NAT perspective, an *inside* network is the local portion of a network that uses private, not publicly routable IP addresses that you want to translate. An *outside* network is the public portion of a network that uses legitimate, publicly routable IP addresses to which you want private hosts to connect.

The addresses that are translated by NAT between address realms are labeled as inside or outside, and as local or global. When reading the terms in the following sections, keep the following definitions in mind:

- The terms *inside* and *outside* refer to the host that the address is associated with.
- The terms *local* and *global* refer to the network on which the address appears.



## Inside Local Addresses

The *inside local* address is a configured IP address that is assigned to a host on the inside network. Addresses may be globally unique (not requiring translation), allocated from the private address space defined in RFC 1918, or officially allocated to some other organization.

## Inside Global Addresses

The *inside global* address is the *translated* IP address of an inside host as seen by an outside host and network. Addresses may be allocated from a globally unique address space (often provided by the ISP, if the inside address is connected to the global Internet).

## Outside Local Addresses

The *outside local* address is the *translated* IP address of an outside host as it appears to the inside network. Addresses may be globally unique (not requiring translation), allocated from the private address space defined in RFC 1918, or officially allocated to some other organization.

## Outside Global Addresses

The *outside global* address is the configured, publicly routable IP address assigned to a host on the outside network.

## Understanding Address Translation

---

Address translation can occur one of two ways: inside or outside source translation.

### Inside Source Translation

Inside source translation is the most commonly used NAT configuration. When an inside host sends a packet to the outside network, the NAT router translates the source information (either the source address or the source address/port pair) and, in the inbound direction, restores the original information (this time operating on the destination address or address/port pair).

For outbound traffic, the NAT router translates the inside local address (or address/port) into the inside global address (or address/port), either through a statically defined translation or dynamically created translation. For inbound traffic, a translation must be found to revert the inside global address (or address/port) into the inside local address (or address/port), or the packet is not routed into the inside network.



**NOTE:** Dynamic inside source translations are established by outbound traffic.

---

You use inside source translation in traditional and bidirectional NAT configurations.

## Outside Source Translation

Outside source translation is used in NAT configurations only when addresses of external hosts might create a conflict on the private network. This complementary translation process is performed on the opposite addressing fields in the IP packet. When an outside host sends a packet to the inside network, the NAT router translates the source information (either the source address or the source address/port pair) and, in the outbound direction, restores the original information (this time operating on the destination address or address/port pair).

For inbound traffic, the NAT router translates the outside global address (or address/port) into the outside local address (or address/port), either through a statically defined translation or dynamically created translation. For outbound traffic, a translation must be found to revert the outside local address (or address/port) into the outside global address (or address/port), or the packet is not routed into the outside network.



**NOTE:** Dynamic outside source translations are established by inbound traffic.

---

You use outside source translation along with inside source translation to configure twice NAT.

---

## Address Assignment Methods

NAT uses one of two methods to assign a translated IP address: static translation or dynamic translation.

### Static Translations

You enter static translations as direct configuration settings that remain in the translation table until you remove them. You use static translations when you must initiate connections from both the inside and outside interfaces, or when the translation is not subject to change.

### Dynamic Translations

Dynamic translations use access list rules, to determine whether to apply NAT to incoming traffic, and NAT address pools, from which a NAT translation can obtain IP addresses. You use dynamic translation when you want the NAT router to initiate and manage address translation and session flows between address realms on demand.

---

## Order of Operations

This section describes the order of operations for both inside-to-outside and outside-to-inside translation.

### Inside-to-Outside Translation

Inside-to-outside translation occurs in the following order:

1. Inside (privately addressed) traffic enters the router on an interface marked as *inside*.
2. A route lookup is performed.
3. If the next interface is marked as *outside*, the router sends the traffic to the server module.
4. The server module performs the appropriate translation.
5. The router forwards the packet to the appropriate egress line module.
6. The line module sends the packet as outbound traffic using a globally unique source address (inside source translation), destination address (outside source translation), and ports (NAPT).

## Outside-to-Inside Translation

Outside-to-inside translation occurs in the following order:

1. Traffic from the outside, public domain enters the router.
2. All traffic from an interface that is marked *outside*, whether or not it requires NAT, is sent to the server module.
3. The server module searches for an associated NAT match.
4. If the server module:
  - Finds a NAT match, and the destination interface is marked as *inside*, the server module performs the appropriate translation and sends the packet to the appropriate destination.
  - Does not find a NAT match, and the destination interface is marked as *inside*, the server module drops the packet.
  - Does not find a NAT match, and the destination interface is not marked as *inside*, the server module processes the packet normally for its destination.

## PPTP and GRE Tunneling Through NAT

---

You can configure NAT traversal support for GRE flows using simple translations (Basic NAT). Because PPTP uses an enhanced GRE encapsulation for the PPP payload, configuring for GRE flows also supports NAT traversal for PPTP tunnels.



**NOTE:** Network Address Port Translation (NAPT) for GRE packets is not supported for GRE flows.

When configured, the following types of translations are supported for GRE and PPTP tunnels:

- Inside source static simple translations (inbound and outbound)
- Outside source static simple translations (inbound and outbound)

- Inside source dynamic simple translations (inbound and outbound)
- Outside source dynamic simple translations (inbound and outbound)
- Combinations of the preceding translations (for example, twice NAT)

## Packet Discard Rules

---

For all supported types of traffic (TCP, UDP, ICMP, and GRE), NAT discards packets in the following cases:

- When the translation table is full (that is, no more entries can be added).
- When the address pool is exhausted for outbound packets with inside source dynamic translation.
- When no match can be found for the destination addresses of inbound packets.
- When the address pool is exhausted for inbound packets with outside source dynamic translation.

In addition, NAT discards GRE packets when the GRE packets match an NAPT rule.

## Before You Begin

---

You can configure certain IP interfaces to participate in Network Address Translation. This chapter discusses how to configure NAT to function for certain IP interfaces. For information about general IP interface configuration, see the *Configuring IP* chapter in the *JunosE IP, IPv6, and IGP Configuration Guide*.

## Configuring a NAT License

---

You must configure a NAT license before you can use any NAT commands on the ERX router.

### *license nat*

- Use to specify a NAT license.
- Purchase a NAT license to allow NAT configuration on the ERX router.



**NOTE:** Acquire the license from Juniper Networks Customer Services and Support or from your Juniper Networks sales representative.

- Example

```
host1(config)#license nat license-value
```
- Use the **no** version to disable the license.
- See *license nat*.

## Limiting Translation Entries

You can configure the maximum number of dynamic translation entries that the translation table contains in global configuration mode for a given virtual router.

### *ip nat translation max-entries*

- Use to specify the maximum number of dynamic translation entries that the translation table can contain in global configuration mode for the given virtual router.
- Example  

```
host:VR1 (config-if) #ip nat translation max-entries 1000
```
- Use the **no** version to remove the configured limit and return the maximum number of translation entries to the default, which is no enforced limit, as capacity allows.
- See *ip nat translation max-entries*.

## Specifying Inside and Outside Interfaces

You must mark interfaces that participate in NAT translation as residing on the inside or the outside network.



**CAUTION:** Only packets routed between an inside and an outside interface are subject to translation.

You can unmark an interface by using the no version of this command.

### *ip nat*

- Use to mark an IP interface as participating in NAT translation.
- Use the keyword (**inside** or **outside**) to specify the side of the network on which the interface resides.
- Example  

```
host (config-if) # ip nat inside
```
- Use the **no** version to unmark the interface (the default) so that it does not participate in NAT translation.
- See *ip nat*.

## Defining Static Address Translations

Static address translation establishes a one-to-one mapping between a local and global address or local and global address/port pair. When you specify a static address translation or address/port pair translation, you issue commands to indicate how the translation is applied, along with more specific variables that further define the type of translation.



**CAUTION:** You must mark interfaces that participate in NAT translation as on the inside or the outside network. See [“Specifying Inside and Outside Interfaces” on page 93](#) for details.

---

## Creating Static Inside Source Translations

You use the **ip nat inside source static** command to create static translations from a local IP address to a global IP address, and to *untranslate* the destination address when a packet returns from the outside network to the inside network. When you configure traditional NAT (both basic NAT and NATPT), you only need to use this command alone. However, when you configure twice NAT, you must also use [“ip nat outside source static” on page 95](#).

The **ip nat inside source static** command creates a simple (IP address only) or extended (IP address, port, and protocol) entry in the translation table that maps the two addresses.

### *ip nat inside source static*

- Use to create static translations for a source address (or address/port pair) when routing a packet from the inside network to the outside network, and to *untranslate* the destination address (or address/port pair) when a packet returns from the outside network to the inside network.
- A static translation created with the **ip nat inside source static** command enables any outside host to contact the inside host by using the inside global address of the inside host. A static translation can be used by traffic that is initiated in either direction
- Example 1—Simple address translation  
host (config) # **ip nat inside source static 10.1.2.3 171.69.68.10**
- Example 2—Extended address/port translation  
host (config) # **ip nat inside source static tcp 10.1.2.3 15 171.69.68.10 30**
- Use the **no** version to remove the static translation and purge the associated translations from the translation table.
- See *ip nat inside source static*.

## Creating Static Outside Source Translations

Less commonly used, outside source translation enables you to set up translation between two non-unique or not publicly routable networks (for example, two separate networks that use overlapping IP address blocks).

### *ip nat outside source static*

- Use to translate the source address when routing a packet from the outside network to the inside network, and to *untranslate* the destination address when a packet travels from the inside network to the outside network.
- Creates a simple (IP address only) or extended (IP address, protocol, and port) entry in the translation table that maps the two addresses.
- A static translation created with the **ip nat outside source static** command enables any inside host to contact the outside host by using the outside local address of the outside host. A static translation can be used by traffic that is initiated in either direction.
- Example 1—Simple address translation  

```
host (config) # ip nat outside source static 171.69.68.10 10.1.2.3
```
- Example 2—Extended address/port translation  

```
host (config) # ip nat outside source static tcp 171.69.68.10 56 10.1.2.3 24
```
- Use the **no** version to remove the static translation and purge the associated translations from the translation table.
- See *ip nat outside source static*.

## Defining Dynamic Translations

---

Dynamic translations use access list rules, to determine whether or not to apply NAT to incoming traffic, and NAT address pools, from which a NAT translation can allocate IP addresses. You use dynamic translation when you want the NAT router to initiate and manage address translation and session flows between address realms on demand.

To configure dynamic translations:

- Define any access list rules that the NAT router uses to decide which packets need translation.
- Define an address pool from which the NAT router obtains addresses.
- Define inside and outside source translation rules for the NAT router to create NAT translations.
- Mark interfaces as *inside* or *outside*.
- (Optional) Modify any translation timeout values.

## Creating Access List Rules

Before you create a dynamic translation, create the access list rules that you plan to apply to the translation. For information about configuring access lists, see [“Configuring Routing Policy” on page 3](#).

The router evaluates multiple commands for the same access list in the order they were created. An undefined access list implicitly contains a rule to *permit any*. A defined access list implicitly ends with a rule to *deny any*.



**NOTE:** The access lists do not filter any packets; they determine whether the packet requires translation.

You use the **access-list** command to create an access list.

#### ***access-list***

- Use to define an IP access list to permit or deny translation based on the addresses in the packets.
- Each access list is a set of permit or deny conditions for routes that are candidates for translation (that is, moving from the inside network to the outside network).
- A zero in the wildcard mask means that the route must exactly match the corresponding bit in the address. A one in the wildcard mask means that the route does not have to match the corresponding bit in the address.
- Use the **log** keyword to log an Info event in the ipAccessList log whenever matching an access list rule.
- Example

```
host1(config)#access-list bronze permit ip host any 228.0.0.0 0.0.0.255
```
- Use the **no** version to delete the access list (by not specifying any other options), the specified entry in the access list, or the log for the specified access list or entry (by specifying the **log** keyword).
- See *access-list*.

## Defining Address Pools

Before you can configure dynamic translation, create an address pool. An address pool is a group of IP addresses from which the NAT router obtains an address when dynamically creating a new translation. You can create address pools with either a single range or multiple, nonoverlapping ranges.

When you create a single range, you specify the starting and ending IP addresses for the range in the root **ip nat pool** command. However, when you create multiple, nonoverlapping ranges, you omit the optional starting and ending IP addresses in the root **ip nat pool** command; this launches the IP NAT Pool Configuration (config-ipnat-pool) mode.

The config-ipnat-pool mode uses an **address** command to specify a range of IP addresses. You can repeat this command to create multiple, nonoverlapping ranges.

When you create or edit address pools, keep the following in mind:



- Starting and ending IP addresses for the specified range are inclusive and must reside on the same subnet.
- Address ranges are verified against other ranges in the specified pool to exclude range overlaps. Additional verification occurs when the pool is associated with a translation rule and the router can determine whether the rule is inside or outside.
- You cannot change the network mask if configured ranges already exist.
- The network mask (or prefix length) is used to recognize host addresses that end in either all zeros or all ones. These addresses are reserved as broadcast addresses and are not allocated from an address pool, even if they are included in an address pool range.
- You cannot remove an address pool if the pool is part of a translation rule or if any of the ranges within the pool are still in use. You must issue the **clear ip nat translation** command to clear any ranges before you can remove the pool to which they apply.

### *address*

- Use to specify a range of IP addresses in config-ipnat-pool mode; you can repeat the **address** command to create multiple ranges.
- Example
 

```
host (config-ipnat-pool)#address 171.69.40.110 171.69.40.115
```
- Use the **no** version to remove the range for the current address pool.
- See *address*.

### *ip nat pool*

- Use to create address pools.
- Example 1—Creating a single, continuous range
 

```
host (config) #ip nat pool singlerange 171.69.40.1 171.69.40.100 prefix-length 30
```
- Example 2—Creating multiple, discontinuous ranges
 

```
host (config) #ip nat pool multiplerange prefix-length 30
host (config-ipnat-pool)#address 171.69.40.110 171.69.40.112
host (config-ipnat-pool)#address 171.69.40.118 171.69.40.120
host (config-ipnat-pool)#exit
```
- Use the **no** version to remove the address range.
- See *ip nat pool*.

## Defining Dynamic Translation Rules

You can use the CLI to define dynamic translation rules for inside and outside sources.



**CAUTION:** You must mark interfaces that participate in NAT translation as on the inside or the outside network. See [“Specifying Inside and Outside Interfaces” on page 93](#) for details.

You can create a dynamic translation rule to configure inside source or outside source translation. If the NAT router cannot locate a matching entry in its translation database for a given packet, it evaluates the access list of all applicable dynamic translation rules (inside source translation rules for outbound packets and outside source translation rules for inbound packets) against the packet. If an access list permits translation, the NAT router tries to allocate an address from the associated address pool to install a new translation.

When you create dynamic translation rules, keep the following in mind:

- You can associate a list with one pool at any given time. Associating a list with a different pool replaces the previous association.
- The optional **overload** keyword for inside source translation specifies that the router employ NAT.
- You can configure dynamic NAT for inside source translation only; you cannot configure dynamic NAT for outside source translation.
- When no match occurs for any dynamic translation rule, the NAT router does not translate the packet.
- When an address pool is empty, the NAT router drops the packet.
- Access lists and pools do not have to exist when you are defining dynamic translation rules; you may create them after you define the dynamic translations.

---

### Creating Dynamic Inside Source Translation Rules

Use the **ip nat inside source list** command to create a dynamic inside source translation rule. This command creates a translation rule that:

- Translates inside local source addresses to inside global addresses when packets from the inside network are routed to the outside network
- Translates outside local source addresses to outside global addresses when packets from the outside network are routed to the inside network.
- Use the **overload** keyword to specify that the translation create NAT entries (protocol, port, and address) in the NAT table.

The **no** version of this command removes the dynamic translation rule, but does not remove any previously created translations (resulting from the rule evaluation) from the translation table. To remove active translations from the translation table, see [“Clearing Dynamic Translations” on page 100](#).

#### *ip nat inside source list*

- Use to create dynamic translation rules that specify when to create a translation for a source address when routing a packet from the inside network to the outside network.
- Example

```
host (config) #ip nat inside source list translation1 pool pool1
```

- Use the **overload** keyword to specify that the translation create extended entries (protocol, port, and address) in the translation table for NAT.
- Use the **no** version to remove the dynamic translation rule; this command does not remove any dynamic translations from the translation table.
- See *ip nat inside source list*.

### Creating Dynamic Outside Source Translation Rules

Use the **ip nat outside source list** command to create a dynamic outside source translation rule. This command dynamically translates outside global source addresses to outside local addresses when packets are routed from the outside network to the inside network (and *untranslates* the destination address when a packet returns before a translation table entry times out).

The **no** version of this command removes the dynamic translation rule, but does not remove any previously created translations from the translation table. To remove active translations from the translation table, see [“Clearing Dynamic Translations” on page 100](#).

#### *ip nat outside source list*

- Use to create dynamic translation rules that specify when to create a translation for a source address when routing a packet from the outside network to the inside network.
- Example
 

```
host (config) # ip nat outside source list translation1 pool pool1
```
- Use the **no** version to remove the dynamic translation rule; this command does not remove any dynamic translations from the translation table.
- See *ip nat outside source list*.

### Defining Translation Timeouts

The router removes unused dynamic translations in the translation table. Use the **ip nat translation** command to change or disable NAT translation timeouts.

You can set the aging time (in seconds) never) for any of the specified timers:

- **timeout**—Dynamic simple translations (not for overloaded translations); default is 86400 seconds (24 hours).
- **dns-timeout**—DNS-created protocol translations; default is 120 seconds. These dynamic translations are installed by the DNS but not yet used; as soon as the translation is used, the router applies the timeout value mentioned above.
- **udp-timeout**—UDP protocol extended translations; default is 300 seconds (5 minutes).
- **tcp-timeout**—TCP protocol extended translations; default is 86400 seconds (24 hours).
- **finrst-timeout**—TCP connections terminated with reset (RST) or bidirectional finished (FIN) flags; default is 120 seconds. This timeout applies only to TCP extended

translations. The timer removes unused, closed TCP translations, which allows for retransmissions.

- **icmp-timeout**—ICMP protocol extended translations; default is 300 seconds (5 minutes).
- **gre-timeout**—Aging time for GRE protocol translations; default value is 300 seconds (5 minutes)

All timeouts for this command support a maximum value of 2147483 seconds (about 25 days).

The **no** version of this command resets the timer to its default value.

### ***ip nat translation***

- Use to change translation timeouts for existing and newly created translations in the translation table.
- All timeouts for this command support a maximum value of 2147483 seconds (about 25 days).
- Example

```
host1 (config) # ip nat translation timeout 23200
```

- Use the **no** version to reset the timer to its default value.
- See *ip nat translation*.

---

## Clearing Dynamic Translations

Use the **clear ip nat translation** command to clear dynamic translations from the NAT translation table. You can remove all dynamic translations from the translation table or restrict the removal of translation entries based on the protocol, address, or port values.

### ***clear ip nat translation***

- Use to clear dynamic translations from the NAT translation table.
- Use an asterisk (\*) in the **clear ip nat translation** version of this command to clear all dynamic translations from the translation table.
- Use an asterisk (\*) in the **clear ip nat translation { gre | icmp | tcp | udp } inside insideGlobalIpAddress \* insideLocalIpAddress \*** version of this command to match any global or local port and remove inside source extended GRE, ICMP, TCP, or UDP translations for the specified global IP address and local IP address.

- Example 1—Clear all dynamic translations

```
host1 #clear ip nat translation*
```

- Example 2—Clear a specific port translation

```
host1 #clear ip nat translation tcp inside 171.69.68.10 10.1.2.3 55
```

- There is no **no** version.
- See *clear ip nat translation*.

## NAT Configuration Examples


This section contains NAT configuration examples for a single virtual router configuration and NAT translation between two virtual routers.

### NAPT Example

Figure 6 on page 101 illustrates a NAPT configuration for a private network with two inside subnetworks, a field office, and a corporate office.

Both offices use private addresses. The corporate office has a dual T-3 link and a public FTP server that has a global address (that is, it does not need translation).

 Figure 6: NAPT Example

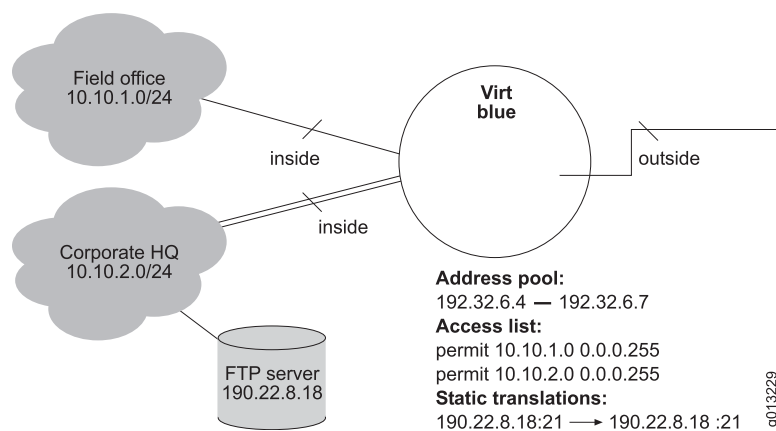

The address pool consists of three addresses (the number of addresses is small, because NAPT is used). Addresses matching the private address spaces of the corporate and field subnetworks are translated to global addresses from the pool through NAPT.

To configure this example:

1. Enter the correct virtual router context.

```
host1(config)#virtual-router blue
```

2. Mark the inside interfaces.

- a. Mark the field office:

```
host1:blue(config)#interface serial 2/1:1/1
host1:blue(config-interface)#ip nat inside
host1:blue(config-interface)#exit
```

- b. Mark the two corporate T-3 links:

```
host1:blue(config)#interface serial 1/1
host1:blue(config-interface)#ip nat inside
host1:blue(config-interface)#exit
```

```

host1:blue(config)#interface serial 1/2
host1:blue(config-interface)#ip nat inside
host1:blue(config-interface)#exit

```

3. Mark the outside interface.

```

host1:blue(config)#interface gigabitEthernet 3/0.1
host1:blue(config-interface)#ip nat outside
host1:blue(config-interface)#exit

```

4. Create a static NAT translation for the FTP server on the corporate network.

```

host1:blue(config)#ip nat inside source static tcp 190.22.8.18 21 190.22.8.18 21

```

5. Create the address pool for dynamic translations.

```

host1:blue(config)#ip nat pool corpxyz 192.32.6.4 192.32.6.7 prefix-length 24

```

6. Create the access list for addresses eligible for dynamic translation.

```

host1:blue(config)#access-list justcorp permit 10.10.1.0 0.0.0.255
host1:blue(config)#access-list justcorp permit 10.10.2.0 0.0.0.255

```

7. Create the NAT dynamic translation rule.

```

host1:blue(config)#ip nat inside source list justcorp pool corpxyz overload

```

8. Configure a default route to the outside interface.

```

host1:blue(config)#ip route 0.0.0.0 0.0.0.0 gigabitEthernet 3/0.1

```

9. Configure a null route for the inside global addresses to prevent routing loops when no matching translation exists.

```

host1:blue(config)#ip route 192.32.6.0 255.255.255.248 null 0

```



**NOTE:** Null route applies to 192.32.6.0–192.32.6.3, which do not exist in the address pool


All hosts that use private addresses in both the field office and the corporate office must have their addresses translated to one of the three addresses in the pool. Because this example uses NAT, the interface can use only one pool address, depending on the number of inside hosts attempting to access the outside at any given time.

## Bidirectional NAT Example

Figure 7 on page 103 illustrates how outside hosts can initiate conversations with inside hosts through the use of a DNS server that resides on the inside network.

The inside realm uses basic NAT. The inside network uses a mix of private subnetwork address space (192.168.22/24) and registered public addresses.

 Figure 7: Bidirectional NAT Example

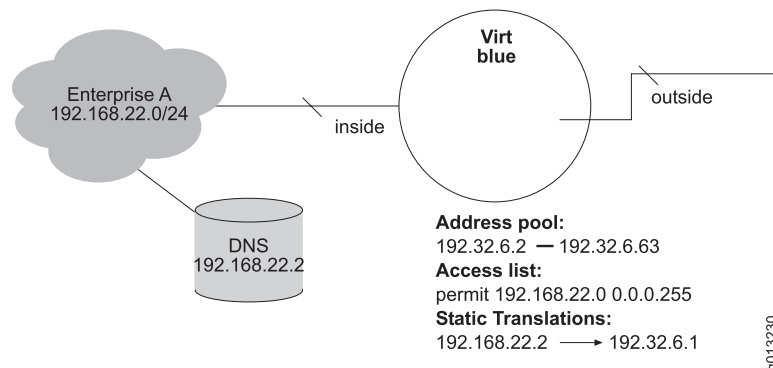

To configure this example:

1. Enter the correct virtual router context.

```
host1(config)#virtual-router blue
```

2. Mark the inside interface.

```
host1:blue(config)#interface serial 1/1:1/1
host1:blue(config-interface)#ip nat inside
host1:blue(config-interface)#exit
```

3. Mark the outside interface.

```
host1:blue(config)#interface gigabitEthernet 3/0.1
host1:blue(config-interface)#ip nat outside
host1:blue(config-interface)#exit
```

4. Create the translation for the DNS.

```
host1:blue(config)#ip nat inside source static 192.168.22.2 192.32.6.1
```

5. Create the address pool for dynamic translations.

```
host1:blue(config)#ip nat pool entA192 192.32.6.2 192.32.6.63 prefix-length 24
```

6. Create the access list for addresses eligible for dynamic translation (that is, private addresses).

```
host1:blue(config)#access-list entA permit 192.168.22.0 0.0.0.255
```

7. Create the dynamic translation rule.

```
host1:blue(config)#ip nat inside source list entA pool entA192
```

8. Configure a default route to the outside interface.

```
host1:blue(config)#ip route 0.0.0.0 0.0.0.0 gigabitEthernet 3/0.1
```

9. Configure a null route for the inside global addresses, to prevent routing loops when no matching translation exists.

```
host1:blue(config)#ip route 192.32.6.0 255.255.255.192 null 0
```




**NOTE:** Null route applies to 192.32.6.0 and 192.32.6.1, which do not exist in the address pool.

## Twice NAT Example

Twice NAT is often useful when the inside network is using a nonprivate address space (unregistered usage of global address space) and you want it to connect to the public network. Inside local addresses need to be translated to legal global addresses. Legal addresses from the outside that overlap those used on the inside network need to be translated to unused and recognizable addresses in the inside network. Both inside source and outside source translations must be configured on the NAT router.

Figure 8 on page 104 illustrates how the inside network is using the unregistered global address space of 15.12.0.0/16. Outside hosts whose addresses overlap with this subnetwork that want to access the inside network need their global addresses translated.

 Figure 8: Twice NAT Example

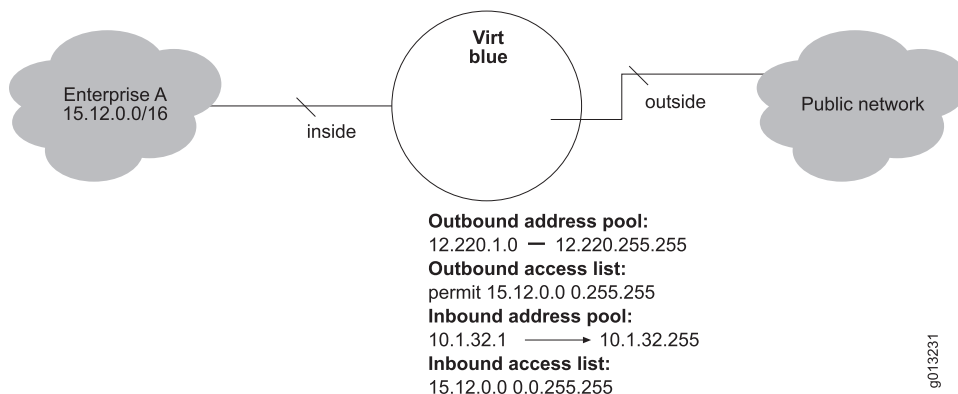

To configure this example:

1. Enter the correct virtual router context.

```
host1(config)#virtual-router blue
```

2. Mark the inside interface.

```
host1:blue(config)#interface fast-ethernet 6/1
host1:blue(config-interface)#ip nat inside
host1:blue(config-interface)#exit
```

3. Mark the outside Interface.

```
host1:blue(config)#interface atm 3/0.20
host1:blue(config-interface)#ip nat outside
host1:blue(config-interface)#exit
```

4. Create the address pool for inside source translations.

```
host1:blue(config)#ip nat pool entAoutpool 12.220.1.0 12.220.255.255 prefix-length
16
```



**NOTE:** This pool is purposely smaller than the size of the company network because not all private hosts are likely to access the public network at the same time.



5. Create the access list for addresses eligible for dynamic translation.

```
host1:blue(config)#access-list entAout permit 15.12.0.0 0.0.255.255
```

6. Create the dynamic translation rule for outbound traffic.

```
host1:blue(config)#ip nat inside source list entAout pool entAoutpool
```

7. Create the address pool for outside source translations.

Using an address range of 10.1.32.0/8 prevents any overlap with the private network (15.12.0.0/16).

```
host1:blue(config)#ip nat pool entAinpool 10.1.32.1 10.1.32.255 prefix-length 16
```



**NOTE:** This pool is purposely small, allowing for only a few connections.

8. Configure the access list for global addresses that overlap with inside addresses.

```
host1:blue(config)#access-list entAin permit 15.12.0.0 0.0.255.255
```

9. Create the dynamic translation rule for inbound traffic.

```
host1:blue(config)#ip nat outside source list entAin pool entAinpool
```

10. Create one of the following:

- A route to the outside interface for inside hosts to access outside hosts that have overlapping addresses.

```
host1:blue(config)#ip route 10.1.32.0 255.255.255.0 atm 3/0.1
```



**NOTE:** An inside host cannot directly access hosts on the outside network that use addresses that overlap with the inside subnetwork. However, by using outside source translation and DNS name resolution, the NAT router can install translations so inside hosts can access these outside hosts by using nonoverlapping addresses.

- A default route to the outside interface.

```
host1:blue(config)#ip route 0.0.0.0 0.0.0.0 atm 3/0.1
```


11. Configure a null route for the inside global addresses to prevent routing loops when no matching translation exists.

```
host1:blue(config)#ip route 12.220.1.0 255.255.0.0 null 0
```

## Cross-VRF Example

In MPLS VPN configurations, you might want to offer public Internet access to VPN subscribers. MPLS VPNs are enabled through the use of VRFs. If a VPN is using a private or overlapping address space, you can use NAT to enable access to the public network because the NAT implementation is both VR and VRF aware. [Figure 9 on page 106](#) illustrates how the subscriber interface feature of the router is used in conjunction with NAT to connect the VPNs to the public network.

 Figure 9: Cross-VRF Example

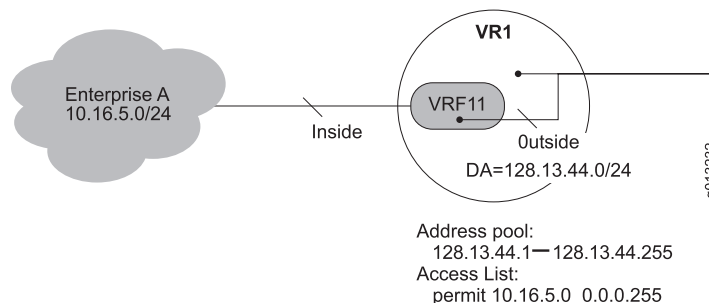

VRF11 is the local (this PE) representation of the MPLS VPN and connects enterpriseA to the VPN. Enterprise A communicates to VRFs in other PE devices (the rest of the VPN) through RFC2547bis (MPLS VPNs). VR1, of which the VRF is administratively a member, represents the public network. The interface to EnterpriseA is marked as an inside interface. The normal steps for configuring inside source translation are applied. A subscriber interface is created off the uplink to the core network and anchored in the VRF. A DA-based demultiplexer matching the inside global address range is configured on the subscriber interface. The subscriber interface is marked as an outside interface.

To configure this example:

1. Enter the correct virtual routing and forwarding instance.

```
host1(config)#virtual-router vr1:vrf11
```

2. Mark the inside interfaces.

```
host1:vr1:vrf11(config)#interface fast-ethernet 6/1
host1:vr1:vrf11 (config-interface)#ip nat inside
host1:vr1:vrf11 (config-interface)#exit
```

3. Set the primary interface to DA-type demultiplexer (for subsequent shared interfaces).

```
host1:vr1(config)#interface atm 12/0.101
host1:vr1(config-interface)#ip demux-type da-prefix
host1:vr1(config-interface)#exit
```

4. Create the address pool for dynamic translations.

```
host1:vr1(config)#virtual-router vr1:vrf11
host1:vr1:vrf11(config)#ip nat pool entApool 128.13.44.0 128.13.44.255 prefix-length
24
```

5. Create the access list for addresses eligible for dynamic translation.

```
host1:vr1:vrf11(config)#access-list entA permit 10.16.5.0 0.0.0.255
```

6. Create the dynamic translation rule.

```
host1:vr1:vrf11(config)#ip nat inside source list entA pool entApool
```

7. Create the subscriber interface off the uplink.

```
host1:vr1:vrf11(config)#interface ip vrf11vr1
host1:vr1:vrf11(config-interface)#ip share-interface atm 12/0.101
host1:vr1:vrf11(config-interface)#ip unnumbered loopback 1
```

8. Configure a group of destination prefixes with which the device can communicate on the public network.

```
host1:vr1:vrfl1(config-interface)#ip destination-prefix 128.13.44.0 255.255.255.0
```

9. Mark the subscriber interface as outside.

```
host1:vr1:vrfl1(config-interface)#ip nat outside
host1:vr1:vrfl1(config-interface)#exit
```

10. Point the default route to the shared interface.

```
host1:vr1:vrfl1(config)#ip route 0.0.0.0 0.0.0.0 ip vrfl1vr1
```

11. Install a null route to avoid routing loops to the inside global address.

```
host1:vr1:vrfl1(config)#ip route 128.13.44.0 255.255.255.0 null 0
```

## Tunnel Configuration Through NAT Examples


PPTP uses enhanced GRE encapsulation for PPP payloads. After the PPTP tunnel setup process, PPP packets are exchanged using GRE encapsulation. It is critical that a NAT device that resides between PPTP client and PPTP server allow GRE flows.

This section contains NAT configuration examples for both inside and outside PPTP tunnel setup through NAT.

### Clients on an Inside Network

In this example, a subscriber on the inside network is initiating PPTP tunnels to a PPTP server located in the outside network. The PPTP connection to the server traverses an E Series router that has NAT enabled.

 Figure 10: PPTP Tunnels on an Inside Network

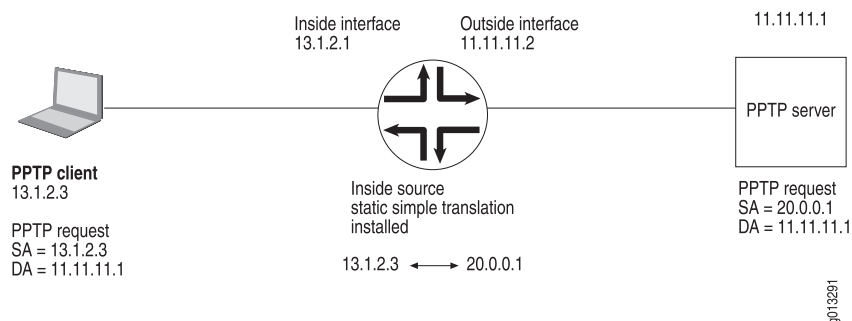

The router has installed an inside source static simple translation in its translation table as follows:

| Inside Local Address | Inside Global Address |
|----------------------|-----------------------|
| 13.1.2.3             | 20.0.0.1              |


The PPTP client initiates its tunnels to the server at 11.11.11.1. The E Series router translates the SA from inside local 13.1.2.3 to inside global SA 20.0.0.1. Because GRE traffic can pass

through NAT, all matching PPTP control packets are translated and forwarded to the destination.

## Clients on an Outside Network

In this example, an outside subscriber initiates PPTP tunnels to a PPTP server located in the service provider network. The PPTP connection to the server traverses an E Series router that has NAT enabled.

 **Figure 11: PPTP Tunnels on an Outside Network**

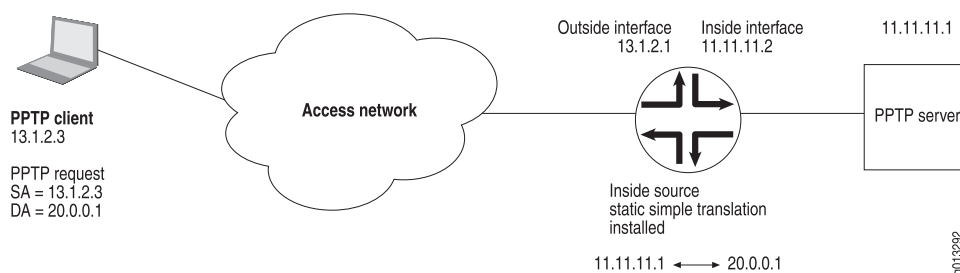

The router has installed an inside source static simple translation in its translation table as follows:

| Inside Local Address | Inside Global Address |
|----------------------|-----------------------|
| 11.11.11.1           | 20.0.0.1              |

The PPTP client initiates its tunnels to the inside global address 20.0.0.1. The E Series router translates packets destined for address 20.0.0.1 and forwards them to the inside local address of 11.11.11.1. Because GRE traffic can pass through NAT, all matching PPTP control packets are translated and forwarded to the destination.

## GRE Flows Through NAT

Because PPTP requires the use of GRE flows, the examples in the previous section also work for any GRE traffic flows that traverse NAT.

GRE flows can terminate at an E Series router if NAT is or is not enabled. When the router receives locally terminating inbound GRE packets, the router transmits the packets to the tunnel server module for GRE processing. If the packets require translating, they are again sent through the tunnel server module.



**NOTE:** Only inner IP headers are translated for terminating GRE flows; outer IP headers are never translated.

For outbound GRE packets, the process works in reverse. If the packets require translation, the router transmits the packets to the tunnel server module for translation. If the packets are destined for a GRE tunnel, they are again sent through the tunnel server module where an outer header is prepended to the packet and the packet is then sent to the appropriate GRE tunnel.

## Monitoring NAT

---

This section explains how to view NAT license information, NAT statistics, NAT translation entries, NAT address pool information, and NAT inside and outside rule settings.

### Displaying the NAT License Key

The **show license nat** command displays the NAT license key.

#### *show license nat*

- Use to display the NAT license key configured on the router.
- Example

```
host1#show license nat
Nat license is nat_license
```
- See *show license*.

### Displaying Translation Statistics

The **show ip nat statistics** command displays internal statistics that apply to NAT operation.

#### *show ip nat statistics*

- Use to display internal NAT statistics.
- Field descriptions
  - Last dynamic allocation failure—Completion level of any dynamic allocation failures; the number of times the router attempted dynamic allocation but reached the dynamic allocation entry limit
  - Current static translation entries
    - Inside Source Simple—Number of inside source simple static translations
    - Outside Source Simple—Number of outside source simple static translations
    - Inside Source Extended—Number of inside source extended static translations
    - Outside Source Extended—Number of outside source extended static translations
  - Dynamic Translation Type—Type of dynamic translation (inside source simple, outside source simple, inside source extended)
  - Current—Current number of dynamic translations of the associated translation type
  - Peak—Peak number of dynamic translations of the associated translation type
  - Accumulated—Accumulated number of dynamic translations of the associated type; this value reflects the accumulation of dynamic translations since the last router reboot operation

- Failed—Total number of installation attempts that failed for an associated translation type
- Forwarding statistics for packets received on inside or outside interfaces
  - forwarded directly—Number of packets forwarded directly (that is, without the need of translation)
  - forwarded through translator—Number of packets forwarded through the NAT translator
  - discarded—Number of packets discarded immediately upon receipt
  - discarded by translator—Number of packets discarded by the NAT translator when no matching translation could be located
- Example

```
host1#show ip nat statistics
```

```
NAT database statistics for virtual router vr1:
```

```
-----
Last dynamic allocation failure: normal, successful completion
Dynamic entry limit was reached 10318 times
```

```
Current static translation entries:
```

```
-----
Inside Source Simple:          10
Outside Source Simple:         3
Inside Source Extended:        8
Outside Source Extended:       12
```

| Dynamic<br>Translation Type | Current | Peak  | Accumulated | Failed |
|-----------------------------|---------|-------|-------------|--------|
| Inside Source Simple        | 69999   | 69999 | 69999       | 12568  |
| Outside Source Simple       | 4518    | 4518  | 4518        | 25     |
| Inside Source Extended      | 70000   | 70000 | 70000       | 568    |
| Fully Extended              | 26855   | 26855 | 26855       | 2565   |

```
Forwarding statistics for virtual router vr1:
```

```
-----
Packets received on inside interface and
  forwarded directly          8
  forwarded through translator 111763104
  discarded                   2
  discarded by translator     28524565
```

```
Bytes received on inside interface and
  forwarded directly          544
  forwarded through translator 5141098074
```

```
Packets received on outside interface and
  forwarded directly          7
  forwarded through translator 1031624
  discarded                   3
  discarded by translator     578961
```

```
Bytes received on outside interface and
  forwarded directly          476
  forwarded through translator 47454704
```

- See *show ip nat statistics*.

## Displaying Translation Entries

The **show ip nat translations** command displays current translations that reside in the translation table.

Simple translation entries appear with inside/outside and local/global address information. Extended entries appear with added protocol and port numbers (or query IDs).

Using verbose mode additionally provides the time since creation and time since last use for each translation entry.

### *show ip nat translations*

- Use to display current translations that reside in the NAT translation table.
- Field descriptions
  - Prot—Protocol (TCP, UDP, ICMP, or GRE) for this translation entry; this field appears only for extended table entries
  - Inside local—Inside local IP address for this translation entry; this field also provides the port number, separated by a colon ( : ) for extended entries
  - Inside global—Inside global IP address for this translation entry; this field also provides the port number, separated by a colon ( : ) for extended entries
  - Outside global—Outside global IP address for this translation entry; this field also provides the port number, separated by a colon ( : ) for extended entries
  - Outside local—Outside local IP address for this translation entry; this field also provides the port number, separated by a colon ( : ) for extended entries
  - Time since creation—Amount of time elapsed since the translation entry appeared in the translation table
  - Time since last use—Amount of time elapsed since the translation entry was used
- Example 1

```
host1# show ip nat translations
Prot    Inside local    Inside global    Outside global    Outside local
-----
GRE      13.1.2.1:*      20.0.0.1:*      ---              ---
ICMP     13.1.2.2:4      20.0.0.2:4      ---              ---
TCP      13.1.2.3:20     20.0.0.3:50     ---              ---
```



**NOTE:** Because they are not NAT translations, port numbers for GRE translations appear as asterisks (\*).

- Example 2

```
host1# show ip nat translations verbose
```

| Prot | Inside<br>local | Inside<br>global | Outside<br>global | Outside<br>local | Time<br>since<br>creation | Time<br>since<br>last use |
|------|-----------------|------------------|-------------------|------------------|---------------------------|---------------------------|
|      | 20.0.0.3        | 30.0.0.3         | ---               | ---              | 00:04:50                  | 00:00:01                  |
|      | 21.0.0.3        | 30.208.0.3       | ---               | ---              | 00:02:12                  | 00:00:01                  |
|      | 21.0.0.4        | 30.208.0.4       | ---               | ---              | 00:02:12                  | 00:00:01                  |
|      | ---             | ---              | 50.0.0.3          | 70.0.0.3         | 00:03:24                  | Never                     |
|      | ---             | ---              | 51.0.0.3          | 70.208.0.3       | 00:01:44                  | 00:00:01                  |
|      | ---             | ---              | 51.0.0.4          | 70.208.0.4       | 00:01:44                  | 00:00:01                  |
| UDP  | ---             | ---              | 50.50.0.3:87      | 70.50.0.3:8108   | 00:03:10                  | Never                     |
| UDP  | 22.0.0.4:63     | 30.224.0.3:4097  | ---               | ---              | 00:02:12                  | 00:00:01                  |
| UDP  | 22.0.0.3:63     | 30.224.0.3:4096  | ---               | ---              | 00:02:12                  | 00:00:01                  |
| TCP  | ---             | ---              | 50.50.0.3:80      | 70.50.0.3:8008   | 00:03:10                  | Never                     |
| UDP  | 20.50.0.3:87    | 30.50.0.3:8108   | ---               | ---              | 00:03:35                  | Never                     |

- See *show ip nat translations*.

## Displaying Address Pool Information

The **show ip nat pool** command displays NAT address pool information. The command output displays configuration (mask and address ranges) of all address pools, unless you supply a specific pool name.

### *show ip nat pool*

- Use to display NAT address pool information.
- Field descriptions
  - pool—Name of the address pool
  - netmask—Network prefix associated with the NAT address pool
  - prefix length—Prefix length associated with the NAT address pool
  - range—Address ranges used by this NAT address pool

- Example 1

```
host1#show ip nat pool
```

```
pool: pool1 netmask: 255.255.255.0 prefix length: 24
      range: 3.3.3.1 to 3.3.3.255
      range: 4.4.4.1 to 4.4.4.32
```

```
pool: pool2 netmask: 255.255.255.0 prefix length: 24
      range: 1.1.1.1 to 1.1.1.24
      range: 2.2.2.1 to 2.2.2.55
```

- Example 2



```

host1#show ip nat pool pool1
pool: pool1 netmask: 255.255.255.0 prefix length: 24
    range: 3.3.3.1 to 3.3.3.255
    range: 4.4.4.1 to 4.4.4.32

```

- See *show ip nat pool*.

## Displaying Inside and Outside Rule Settings

The **show ip nat inside rule** and **show ip nat outside rule** commands display access list and pool usage for all dynamic translation rules configured for the virtual router. If you do not specify an access list, the output displays address pool associations for each of the access lists for either inside or outside translation rules in the virtual router. Specifying an access list filters the output to display only the address pool associated with the specified list.

### *show ip nat inside rule*

- Use to display NAT access list and pool usage information for inside source translation rules.
- Field descriptions
  - access list name—Name of the access list
  - pool name—Name of the address pool
  - rule type—Type of rule assigned
- Example

```

host1#show ip nat inside rule
access list name: list1 pool name: poolA rule type: inside source
access list name: list2 pool name: poolB rule type: inside source
access list name: list3 pool name: poolC rule type: inside source overload

```

- See *show ip nat inside rule*.

### *show ip nat outside rule*

- Use to display NAT access list and pool usage information for outside source translation rules.
- Field descriptions
  - access list name—Name of the access list
  - pool name—Name of the address pool
  - rule type—Type of rule assigned
- Example

```

host1#show ip nat outside rule
access list name: list4 pool name: poolD rule type: outside source

```

- See *show ip nat outside rule*.



## CHAPTER 4

# Configuring J-Flow Statistics

This chapter describes how to configure J-Flow statistics on your ERX router; it contains the following sections:

- [Overview on page 115](#)
- [Platform Considerations on page 118](#)
- [Before You Configure J-Flow Statistics on page 118](#)
- [Configuring Flow-Based Statistics Collection on page 118](#)
- [Monitoring J-Flow Statistics on page 125](#)

### Overview

---

The JunosE J-Flow feature provides a method by which you can collect IP traffic flow statistics on your routing devices. J-Flow does not require any special protocol for connection setup. It also does not require any external changes to networked traffic, packets, or any other devices in the network. In other words, J-Flow is transparent to the existing network, including end stations and application software and network devices such as LAN switches.

The JunosE implementation of J-Flow allows you to export data to the UDP port of a remote workstation for data collection and further processing. In addition, the ability to enable J-Flow on an individual virtual router, interface, or subinterface allows you to collect network statistics for specific locations within your network.

### Interface Sampling

For any given IP interface, enabling J-Flow causes packets from the input stream to be sampled at a globally configured rate. For each packet sampled, the main flow cache is examined to see if there is an existing entry. If no entry exists, J-Flow creates a new entry and records attributes of the flow. If the packet matches an existing entry, J-Flow updates the existing flow.

In general, the system samples packets that it can forward. In other words, the system does not sample packets that it discards. As sampling occurs, the system records flow characteristics as they would appear for a packet that the virtual router transmits. This means, for example, that if a packet uses the address of an output interface or next-hop value altered by a policy setting, the system records the altered value in the flow record.

## Aggregation Caches

Data from flow cache entries is summarized to build aggregated views or aggregation caches. Aggregation caches are created and maintained along with the main cache. Aggregation caches have their own history area where the aging aggregation cache records are collected. Aggregation caches have a set of configuration parameters: number of entries, active and inactive time out, and export destination.

Types of aggregation caches include:

- AS-Aggregates flow data based on source and destination AS, and ingress and egress interface values.
- Destination Prefix-Aggregates flow data based on the destination address, mask, destination AS, and egress interface.
- Prefix-Aggregates flow data based on source prefix, destination prefix, source mask, destination mask, source AS, destination AS, ingress interface, and egress interface.
- Protocol Port-Aggregates flow data based on protocol, source port, and destination port.
- Source Prefix-Aggregates flow data based on source address, source mask, source AS, and ingress interface.

Aggregation caches contain a subset of the fields collected in the raw flow data. For example, TCP flags, Next Hop Address, and ToS values are not maintained in any of the aggregation caches. Unlike the main cache, aggregation caches are not enabled by default.

## Flow Collection

The JunosE J-Flow functionality allows statistics collection at the VR/VRF level. This means that each virtual router (VR)/VPN routing and forwarding (VRF) table has its own main cache for statistics gathering.

Although you can export flow statistics only at the VR level, VRF data is rolled up for each VR. The reason for supporting export flow at the VR level is that existing export formats cannot discriminate between VRs and VRFs. However, even though export formats do not allow for segregation, the JunosE CLI commands do. Segregating each collection by VR removes any ambiguity and aliasing that may occur with overlapping address spaces (as may occur in virtual private network [VPN] configurations).

---

### Main Flow Cache Contents

The following 7-tuple distinguishes an entry in the flow cache for a VR:

- Source IP address (SA)
- Destination IP address (DA)
- Source port number (SP)
- Destination port number (DP)

- Layer 3 protocol type
- Type of service (ToS byte) or Differentiated Services code point (DSCP)
- Input interface

### Cache Flow Export

Using UDP as the transport method, the ERX router can export the content of the flow cache as the system removes the entries. You can specify one export destination for each VR.

Each export packet contains a header and flow records. The version 5 header contains the following fields:

- Version-Format version
- Count-Number of records in this packet
- SysUpTime-System up time value when this packet was built
- Unix Timestamp-Number of seconds and nanoseconds since 0000 UTC 1970 (Coordinated Universal Time)
- Sequence Number-Number of total records sent on this export stream
- Engine type-Type of switching engine (line module or route processor)



**NOTE:** The J-Flow setting for Engine type is always RP=0.

- Engine ID-SRP slot number

If, for any reason, the virtual router is unable to export records to the collector, the unsent records are discarded. However, the virtual router continues to increase the sequence number by one as if it sent the records. Discrepancies between the sequence number and sent records can assist in recognizing discontinuities at the collector end.

### Aging Flows

After the virtual router creates a flow in the cache, the flow is removed at the expiration of either the active or the inactive timer.

In sampled environments, methods for detecting the end of a flow can be unreliable. The active timer places a hard limit on how long a flow may last before the virtual router closes it and gathers the necessary statistics. If the flow is still active when the active timer expires, the virtual router creates a new flow entry to replace the closed flow.

The inactive timer removes flows if they do not contain any data traffic for a specified period of time.

### Operation with NAT

When functioning with Network Address Translation (NAT), J-Flow sampling occurs before NAT applies any translation.

## Operation with High Availability

When high availability is enabled, the following occurs in the event of a switchover:

- Any flows that are collected but not exported off of the router are lost.
- Flow history is lost.
- Counters are reset to zero.

After the standby SRP becomes active, and all other applications indicate that they have recovered, sampling and flow-collecting resume.

## Platform Considerations

---

For information about modules that support J-Flow statistics on ERX14xx models, ERX7xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support NAT.

For information about modules that support J-Flow on the E120 and E320 Broadband Services Routers:

- See *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about the modules that support J-Flow.

## Before You Configure J-Flow Statistics

---

Before you configure J-Flow statistics, be sure you have created IP interfaces from which J-Flow can extract traffic flow information. For information about configuring IP interfaces, see *Configuring IP* in *JunosE IP, IPv6, and IGP Configuration Guide*.

## Configuring Flow-Based Statistics Collection

---

To configure J-Flow on a virtual router:

1. Enable J-Flow statistics.
2. Enable J-Flow statistics on the desired interfaces.
3. (Optional) Define the sampling interval at which you want to collect statistics.
4. (Optional) Customize the size of the main flow cache.
5. (Optional) Define flow cache aging timers.
6. (Optional) Specify to where you want to export J-Flow statistics.

## Enabling Flow-Based Statistics

Use the **ip flow statistics** command to explicitly enable J-Flow.



**NOTE:** Issuing any configuration-level commands implicitly enables J-Flow.

### *ip flow statistics*

- Use to enable J-Flow.
- Example  

```
host1(config)#ip flow statistics
```
- Use the **no** version to disable J-Flow on the virtual router.
- See *ip flow statistics*.

## Enabling Flow-Based Statistics on an Interface

Use the **ip route-cache flow sampled** command to enable J-Flow statistics on an interface. You can also use this command to configure an IP profile that is applied to dynamically created IP interfaces. This feature provides J-flow capability on all dynamically created IP interfaces, including those used for MPLS-to-IP forwarding scenarios.



**NOTE:** Issuing an interface-level flow command does not enable J-Flow on the virtual router. To enable J-Flow, issue the **ip flow statistics** command.

### *ip route-cache flow sampled*

- Use to enable J-Flow on an interface, or in an IP profile for dynamically created IP interfaces.
- Examples  

```
host1(config-if)#ip route-cache flow sampled
```

or

```
host1(config-profile)#ip route-cache flow sampled
```
- Use the **no** version to disable J-Flow statistics on the interface.
- See *ip route-cache flow sampled*.

## Defining a Sampling Interval

Use the **ip flow-sampling-mode packet-interval** command to define the packet-sampling interval for the virtual router. The sampling interval specifies the rate at which the virtual router samples J-Flow information. This rate is used for all interfaces that have J-Flow enabled. After you enable J-Flow on an interface, the virtual router samples one packet

at the specified packet interval. You can specify an interval in the range 1–4,000,000,000 packets.

When you use the **ip flow-sampling-mode packet-interval** command to define the packet-sampling interval for Gigabit Ethernet interfaces configured on the ES2 10G LM (line module) with either the ES2-S1 GE-8 IOA or the ES2-S2 10GE PR IOA on E120 routers and E320 routers, the J-Flow application makes the following internal adjustments to achieve better performance on the ES2 10G LM, regardless of the packet-sampling interval that you configure:

- J-Flow adjusts the maximum sampling interval to 8,388,608, which is the decimal equivalent of 0x800000.
- J-Flow changes the packet-sampling value to the closest integer that is a power of two and that is less than or equal to the configured value.

For performance reasons, J-Flow applies these adjustments to the sampling interval only for the interfaces configured on the ES2 10G LM on the virtual router. The configured sampling interval does not change for interfaces not configured on the ES2 10G LM on the virtual router.

When the data rate increases on a given interface, J-Flow packet sampling might not be able to maintain the configured sampling rate and might drop the intended sampled packets. If this occurs, you can address the issue by reducing the sampling rate.



**NOTE:** For all modules except the ES2 10G LM on the E120 router and the E320 router, packet sampling occurs individually for each processor. Because the router distributes packets over multiple processors, sampling occurs when each processor reaches the specified packet interval.

Even though each flow is sampled, the flow sample is not necessarily cached because of system constraints.

---

#### *ip flow-sampling-mode packet-interval*

- Use to define the J-Flow packet-sampling interval.
- Specify a packet-sampling interval in the range 1–4000000000 packets; the default value is 4000000000.
- Specifying an interval less than 10 sets a very high sampling rate that can severely degrade performance. The lower the packet-sampling interval you configure, the faster the sampling rate.
- For information about the effects of using the **ip flow-sampling-mode packet-interval** command for the ES2 10G LM with either the ES2-S1 GE-8 IOA or the ES2-S2 10GE PR IOA on E120 routers and E320 routers, see [“Defining a Sampling Interval” on page 119](#).
- Example—Samples 1 out of 50 packets from the line module on which the interface resides

```
host1(config)#ip flow-sampling-mode packet-interval 50
```



- Use the **no** version to return the sampling interval to its default value, 4 billion.
- See *ip flow-sampling-mode packet-interval*.

## Setting Cache Size

Use the **ip flow-cache entries** command to limit the number of main flow cache entries for the virtual router (as collected across all line modules that are running J-Flow). After the cache size exceeds the flow-cache entry limit, the least recently used flow is removed.

The possible flow-cache range is 1,024–524,288 entries. The default value is 65,536 entries.

### *ip flow-cache entries*

- Use to limit J-Flow main flow cache entries.
- Example

```
host1(config)#ip flow-cache entries 80000
```
- Use the **no** version to return the cache size to its default value, 65535.
- See *ip flow-cache entries*.

## Defining Aging Timers

After the virtual router creates a flow in the cache, the virtual router can remove the flow at the expiration of either the active or the inactive timer.

### Specifying the Activity Timer

Use the **ip flow-cache timeout active** command to specify a value for the activity timer. The activity timer measures the amount of time that the virtual router has been recording a datagram for a given flow. When this timer expires, the virtual router exports the flow cache entry from the cache and removes the entry. This process prevents active flows from remaining in the flow cache, and allows collected data to appear in a timely manner. The possible range for the activity timer value is 1–60 minutes. The default value is 30 minutes.

### *ip flow-cache timeout active*

- Use to define the activity timer, in minutes.
- Example

```
host1(config)#ip flow-cache timeout active 50
```
- Use the **no** version to return the activity timer to its default value (30 minutes).
- See *ip flow-cache timeout*.

### Specifying the Inactivity Timer

Use the **ip flow-cache timeout inactive** command to specify a value for the inactivity timer. The inactivity timer measures the length of time expired since the virtual router

recorded the last datagram for a given flow. When this timer expires, the virtual router exports the flow cache entry from the cache and removes it. When, at a later time, another datagram begins that uses the same flow characteristics, the virtual router allocates a new flow cache entry, and the inactivity timer begins again. The possible range for the inactivity timer value is 10–600 seconds. The default value is 15 seconds.

#### *ip flow-cache timeout inactive*

- Use to define the inactivity timer, in seconds.
- Example

```
host1(config)#ip flow-cache timeout inactive 90
```
- Use the **no** version to return the inactivity timer to its default value (15 seconds).
- See *ip flow-cache timeout*.

## Specifying Flow Export

Use the **ip flow-export** command to specify the location to which you want to export the J-Flow datagrams.

#### *ip flow-export*

- Use to specify the location to which you want to export J-Flow datagrams or specify an alternate source address for outbound export J-Flow datagrams.
- Example 1-Specifies the destination address for J-Flow datagrams

```
host1(config)#ip flow-export 192.168.2.73 2055 version 5 peer-as
```
- Example 2-Specifies the source address for outbound export J-Flow datagrams

```
host1(config)#ip flow-export source fastEthernet 5/0
```
- Use the **no** version to remove the export setting.
- See *ip flow-export*.

## Configuring Aggregation Flow Caches

Aggregation caches are disabled by default. Exporting flow records from the router does not occur while it is in the disabled state. When the configuration for an aggregation cache is changed from enabled to disabled state, all flow records from that cache are removed and flow collection stops.

For Prefix, Destination Prefix, and Source Prefix aggregation caches, you can specify a minimum source and destination mask size to affect the granularity of the IP address space captured in the aggregation cache. The commands to configure the minimum mask size for the source and destination address are issued in Flow Cache Configuration mode and are specific to each aggregation cache:

```
host1(config-flow-cache)#mask source minimum value
host1(config-flow-cache)#mask destination minimum value
```

The value (a number in the range 1–32) specifies the size of the minimum mask. The no version restores the default minimum mask size, which is 0. A mask of size N has the N most significant bits set in the corresponding bit mask.

You cannot configure a minimum mask size for aggregation caches that do not retain an IP address in their aggregation scheme (like the AS aggregation cache). You can configure the Prefix aggregation cache for both source and destination minimum mask size. You can configure only the source minimum mask size for the Source Prefix aggregation cache. You can configure only the destination minimum mask size for the Destination Prefix aggregation cache.

The peer/origin information configured with the export command for the man V5 cache is used to display the AS number of the AS aggregation cache for both the source and destination AS. If no (default) configuration is present, zero appears in the AS numbers for both V5 export and V8 export and in the **show** commands for the V8 AS aggregation cache.

Establish an aggregation cache:

1. Enter Flow Cache Configuration mode for the AS aggregation cache.

```
host1(config)#ip flow-aggregation cache as
```

2. Configure the number of entries (1024–524288) in the aggregation cache; the no version sets the number of entries back to its default value of 4096 (flow-data may be lost if the previous setting is larger than the default).

```
host1(config-flow-cache)#cache entries entryNumber
```

3. Set the active (1–60) and inactive (10–600) aging timers.

```
host1(config-flow-cache)#cache timeout active active-tmo
host1(config-flow-cache)#cache timeout inactive inactive-tmo
```

4. Configure an export destination for the aggregation cache; the no version removes the destination.

```
host1(config-flow-cache)#export destination { hostname | ip address }
udp-port-number
```

5. Set the source IP address for datagrams containing information from this cache: the no version removes the explicit setting of the source address.

```
host1(config-flow-cache)#export source interfacetype interface
```

6. Enable the aggregation cache.

```
host1(config-flow-cache)#enabled
```

The aggregation cache starts accumulating information from the flow cache; the no version stops the accumulation of information from the flow cache, but does not suspend the operation of the flow cache.

### **cache entries**

- Use to set the number of entries in the aggregation cache.
- Example

**host1(config-flow-cache)#cache entries 524288**

- Use the **no** version to reset the number of entries to the default value 4096.
- See *cache entries*.

#### ***cache timeout***

- Use to set the active and inactive timers.
- Example

**host1(config-flow-cache)#cache timeout active 50**

- Use the **no** version to reset the default value.
- See *cache timeout*.

#### ***enabled***

- Use to enable the aggregation cache to accumulate information from the flow cache.
- Example

**host1(config-flow-cache)#enabled**

- Use the **no** version to stop the information flow from the flow cache.
- See *enabled*.

#### ***export destination***

- Use to configure an export destination for the aggregation cache.
- Example

**host1(config-flow-cache)#export destination myhost udp-port**

- Use the **no** version to remove the destination.
- See *export destination*.

#### ***export source***

- Use to configure an export source for the aggregation cache.
- Example

**host1(config-flow-cache)#export source interface inf1**

- Use the **no** version to remove the destination.
- See *export source*.

#### ***ip flow-aggregation cache***

- Use to create an aggregation cache.
- Example

**host1(config)#ip flow-aggregation cache**

- Use the **no** version to remove the aggregation cache and its configuration.
- See *ip flow-aggregation cache*.

***mask destination***

- Use to set the minimum mask size for the destination address for the prefix and destination prefix aggregation caches.
- Example  

```
host1(config-flow-cache)#mask destination 128
```
- Use the **no** version to restore the default mask size, which is 0.
- See *mask destination*.

***mask source***

- Use to set the minimum mask size for the source address for the prefix and source prefix aggregation caches.
- Example  

```
host1(config-flow-cache)#mask source 60
```
- Use the **no** version to restore the default mask size, which is 0.
- See *mask source*.

## Monitoring J-Flow Statistics

---

This section shows how to clear J-Flow statistics and use the **show** commands to view J-Flow settings and statistical results.

### Clearing J-Flow Statistics

Use the **clear ip flow stats** command to clear all entries from all flow caches on the virtual router.

***clear ip flow stats***

- Use to clear entries from all flow caches on the VR/VRF.
- Example  

```
host1(config)#clear ip flow stats
```
- There is no **no** version.
- See *clear ip flow stats*.

### J-Flow show Commands

You can monitor the following aspects of J-Flow statistics by using the following commands:

| To Display                             | Command                   |
|----------------------------------------|---------------------------|
| Main cache flow operational statistics | <b>show ip cache flow</b> |

| To Display                                | Command                      |
|-------------------------------------------|------------------------------|
| J-Flow sampling state                     | <b>show ip flow sampling</b> |
| J-Flow export state and export statistics | <b>show ip flow export</b>   |

You can use the output filtering feature of the **show** command to include or exclude lines of output based on a text string that you specify. See *Command Line Interface in JunosE System Basics Configuration Guide*, for details.

### ***show ip cache flow***

- Use to display IP flow cache operational statistics.
- Field descriptions
  - Main Cache
    - Max Entries-Maximum number of entries allowed in the main cache
    - Activity Timeout-Activity timer value
    - Inactivity Timeout-Inactivity timer value
    - Size-Distribution of IP packets by size
    - Percent-Percent distribution of different-sized IP packets
  - Protocol - Port-Protocol of the sample and port destination for that sample
  - Total Flows-Total number of flows
  - Flows/Sec-Number of flows per second
  - Packets/Flow-Number of packets per flow
  - Bytes/Packet-Number of bytes per packet
  - Packets/Sec—Number of packets per second
  - Src. Addr—Source address of sampled packets
  - Src. Intf—Source interface of sampled packets
  - Dst. Addr—Destination address of sampled packets
  - Dst. Intf—Destination interface of sampled packets
  - Summary
    - Total Flows Processed—Total number of flows processed
    - Total Packets—Total number of packets sampled
    - Total Bytes—Total number of bytes received
- Example 1—Brief output
 

```
host1#
show ip cache flow active brief
29140 packets sampled.
```

## Distribution of IP packets by size.

| Size   | Percent |
|--------|---------|
| -----  | -----   |
| 1 - 32 | 0.000   |
| 64     | 0.000   |
| 96     | 0.000   |
| 128    | 0.000   |
| 160    | 0.000   |
| 192    | 0.000   |
| 224    | 0.000   |
| 256    | 0.000   |
| 288    | 0.000   |
| 320    | 0.000   |
| 352    | 0.000   |
| 384    | 0.000   |
| 416    | 0.000   |
| 448    | 0.000   |
| 480    | 0.000   |
| 512    | 0.000   |
| 544    | 0.000   |
| 576    | 0.000   |
| 1024   | 96.791  |
| 1536   | 3.209   |
| 2048   | 0.000   |
| 2560   | 0.000   |
| 3072   | 0.000   |
| 3584   | 0.000   |
| 4096   | 0.000   |
| 4608   | 0.000   |

| Protocol-Port | Total<br>Flows | Flows<br>/Sec | Packets<br>/Flow | Bytes<br>/Packet | Packets<br>/Sec |
|---------------|----------------|---------------|------------------|------------------|-----------------|
| -----         | -----          | -----         | -----            | -----            | -----           |
| TCP-telnet    | 1              | 0.000         | 118.000          | 1014.000         | 0.000           |
| UDP-whois++   | 1              | 0.008         | 935.000          | 1026.000         | 7.664           |

```

----- Summary -----
Total Flows Processed: 2
Total Packets 1053
Total Bytes 1078962
-----

```

- Example 2—Detailed output



**NOTE:** The output format for this command was modified slightly to fit within the confines of this document.

```

host1# show ip cache flow active detail
Main Cache
Max Entries: 65536
Activity Timeout: 60 mins.
Inactivity Timeout: 600 secs.
Cache Enabled
32012 packets sampled.
Distribution of IP packets by size.
  Size      Percent
  -----
  1 - 32    0.000

```

```

    64      0.000
    96      0.000
   128      0.000
   160      0.000
   192      0.000
   224      0.000
   256      0.000
   288      0.000
   320      0.000
   352      0.000
   384      0.000
   416      0.000
   448      0.000
   480      0.000
   512      0.000
   544      0.000
   576      0.000
  1024     96.789
  1536      3.211
  2048      0.000
  2560      0.000
  3072      0.000
  3584      0.000
  4096      0.000
  4608      0.000

```

| Src.Addr                 | Src.Intf | Dst.Addr    | Dst.Intf | Protocol Port | Packets<br>/Flow | Bytes<br>/Packet | Packets<br>/Sec |
|--------------------------|----------|-------------|----------|---------------|------------------|------------------|-----------------|
| 10.20.30.41 258          | GigE4/0  | 12.0.0.2    | GigE2/0  | TCP-telnet    | 58.000           | 1014.000         | 0.000           |
| 10.20.30.41 63           | GE4/0    | 50.60.70.88 |          | UDP-whois++   | 1028.000         | 1026.000         | 7.672           |
| ----- Summary -----      |          |             |          |               |                  |                  |                 |
| Total Flows Processed: 2 |          |             |          |               |                  |                  |                 |
| Total Packets 1086       |          |             |          |               |                  |                  |                 |
| Total Bytes 1113540      |          |             |          |               |                  |                  |                 |
| -----                    |          |             |          |               |                  |                  |                 |

- Example 3—History output

```

host1# show ip cache flow history
35604 packets sampled.
Distribution of IP packets by size.

```

| Size   | Percent |
|--------|---------|
| 1 - 32 | 0.000   |
| 64     | 0.000   |
| 96     | 0.000   |
| 128    | 0.000   |
| 160    | 0.000   |
| 192    | 0.000   |
| 224    | 0.000   |
| 256    | 0.000   |
| 288    | 0.000   |
| 320    | 0.000   |
| 352    | 0.000   |
| 384    | 0.000   |
| 416    | 0.000   |
| 448    | 0.000   |
| 480    | 0.000   |
| 512    | 0.000   |
| 544    | 0.000   |
| 576    | 0.000   |



| 1024                       | 96.784 |                |               |                  |               |                 |
|----------------------------|--------|----------------|---------------|------------------|---------------|-----------------|
| 1536                       | 3.216  |                |               |                  |               |                 |
| 2048                       | 0.000  |                |               |                  |               |                 |
| 2560                       | 0.000  |                |               |                  |               |                 |
| 3072                       | 0.000  |                |               |                  |               |                 |
| 3584                       | 0.000  |                |               |                  |               |                 |
| 4096                       | 0.000  |                |               |                  |               |                 |
| 4608                       | 0.000  |                |               |                  |               |                 |
| Protocol                   | Port   | Total<br>Flows | Flows<br>/Sec | Packets<br>/Flow | Bytes<br>/Pkt | Packets<br>/Sec |
| TCP-telnet                 |        | 216            | 1.450         | 159.264          | 1014.000      | 230.879         |
| ----- Summary -----        |        |                |               |                  |               |                 |
| Total Flows Processed: 216 |        |                |               |                  |               |                 |
| Total Packets 34401        |        |                |               |                  |               |                 |
| Total Bytes 34882614       |        |                |               |                  |               |                 |

- See *show ip cache flow*.

### ***show ip cache flow aggregation***

- Use to display IP flow cache operational statistics for an aggregation cache.
- Field descriptions
  - Aggregation Cache
    - AS—AS aggregation cache
    - Destination-prefix—Destination-prefix aggregation cache
    - Prefix—Prefix aggregation cache
    - Protocol-port—Protocol-port aggregation cache
    - Source-prefix—Source-prefix aggregation cache
  - Total Flows—Total number of flows
  - Flows/Sec—Number of flows per second
  - Packets/Flow—Number of packets per flow
  - Bytes/Package—Number of bytes per packet
  - Packets/Sec—Number of packets per second
  - Src. Addr—Source address of sampled packets
  - Src. Intf—Source interface of sampled packets
  - Dst. Addr—Destination address of sampled packets
  - Dst. Intf—Destination interface of sampled packets
  - Summary
    - Total Flows Processed—Total number of flows processed
    - Total Packets—Total number of packets sampled
    - Total Bytes—Total number of bytes received

- See *show ip cache flow aggregation*.

Example—Aggregation cache flow output

```
host1#show ip cache flow aggregation as active brief
29140 packets sampled.
```

| Src.AS                   | Dst.AS | Total<br>Flows | Packets<br>/Flow | Bytes<br>/Pkt | Packets<br>/Sec |
|--------------------------|--------|----------------|------------------|---------------|-----------------|
| 400                      | 100    | 0.000          | 118.000          | 1014.000      | 0.000           |
| 100                      | 400    | 0.008          | 935.000          | 1026.000      | 7.664           |
| ----- Summary -----      |        |                |                  |               |                 |
| Total Flows Processed: 2 |        |                |                  |               |                 |
| Total Packets 1053       |        |                |                  |               |                 |
| Total Bytes 1078962      |        |                |                  |               |                 |
| -----                    |        |                |                  |               |                 |

### *show ip flow export*

- Use to display configuration values for IP flow cache export.
- Example

```
host1#show ip flow export
Flow export is enabled using version 5 format.
Exporting to 10.0.0.2 port 9898 using source ip interface
GigabitEthernet5/0/0.
```

- See *show ip flow*.

### *show ip flow sampling*

- Use to display configuration values for IP flow cache sampling.
- Example

```
host1#show ip flow sampling
Flow sampling is enabled
'Packet Interval' sampling mode is configured.
1 out of every 1000 packets is being sampled.
```

- See *show ip flow*.

## CHAPTER 5

# Configuring BFD

This chapter describes how to configure bidirectional forwarding detection (BFD) on your E Series router; it contains the following sections:

- [Bidirectional Forwarding Detection Overview on page 131](#)
- [BFD Platform Considerations on page 134](#)
- [BFD References on page 134](#)
- [Configuring a BFD License on page 135](#)
- [BFD Version Support on page 135](#)
- [Configuring BFD on page 136](#)
- [Managing BFD Adaptive Timer Intervals on page 136](#)
- [Clearing BFD Sessions on page 137](#)
- [Monitoring BFD on page 138](#)

## Bidirectional Forwarding Detection Overview

Fast failure detection is a high priority feature for any network element. Some media, like Ethernet, do not provide remote end failure. Networks must often rely on internal gateway protocol (IGP) hello messages to detect any failure and, in some cases (for example, static routes), even these hello messages are not used.

IGP hellos have their own limitations—it often takes one second or more to detect a remote end failure and processing IGP hello messages takes precious processing time. BFD overcomes IGP detection time and processing limitations in detecting any data path failures.

When configured for various protocols like OSPF and IS-IS, BFD employs rapid, periodic and inexpensive hello messages to detect path activity. You can also configure BFD to function with static routes, combining with the BFD poll bit to detect path activity.

You can also configure a BFD session with a BGP neighbor or peer group to determine relatively quickly whether the neighbor or peer group is reachable. For information about configuring BFD for EBGP routes, see *Configuring BGP Routing in JunosE BGP and MPLS Configuration Guide*.

## How BFD Works

In a BFD-configured network, when a client launches a BFD session with a peer, BFD begins sending slow, periodic BFD control packets that contain the interval values that you specified when you configured the BFD peers. This is known as the initialization state and BFD does not generate any up or down notifications in this state.

When another BFD interface acknowledges the BFD control packets, the session moves into an up state and begins to more rapidly send periodic control packets.

If a data path failure occurs and BFD does not receive a control packet within the configured amount of time, the data path is declared down and BFD notifies the BFD client. The BFD client can then perform the necessary actions to reroute traffic. This process can be different for different BFD clients. All BFD-configured IGP clients (like IS-IS, OSPF, PIM, and RIP) launch BFD sessions when they detect neighbors through their own hello protocols. However, a static BFD client launches a BFD session when it detects that its next hop is resolved.

The BFD Admin Down state is used to bring down a BFD session administratively, to protect client applications from BFD configuration removal, license issues, and clearing of BFD sessions. When BFD enters the Admin Down state, BFD notifies the new state to its peer for a failure detection time and after the time expires, the client stops transmitting packets. For the Admin Down state to work, the peer, which receives the Admin Down state notification, must have the capability to distinguish between administratively down state and real link down. A BFD session moves to the Admin Down state under the following conditions:

- When a BFD configuration is removed for the last client tied to a BFD session, BFD moves to the Admin Down state and communicates the change to the peer to enable the client protocols to handle this in a seamless manner without going down.
- When a BFD license is removed on the client, it moves to the Admin Down state and communicates the change to the remote system to enable the client protocols to handle this in a seamless manner without going down.
- When the **clear bfd session** command is executed, the BFD sessions move to the Admin Down state before restarting the BFD sessions so that the client applications are not impacted.

## Negotiation of the BFD Liveness Detection Interval

When you issue the appropriate **bfd-liveness-detection** command on an IS-IS, OSPF, RIP, or PIM interface, BFD liveness detection is established with all of its BFD-enabled peers. When an update is received from a peer—if BFD is enabled and if the session is not already present—the local peer attempts to create a BFD session to the remote peer.

Each pair of peers negotiates acceptable transmit and receive intervals for BFD packets. These values can be different on each peer.

The negotiated transmit interval for a peer is the interval between the BFD packets that it sends to its peers. The receive interval for a peer is the minimum time that it requires between packets sent from its peer; the receive interval is not negotiated between peers.

To determine the transmit interval, each peer compares its configured minimum transmit interval with its peer's minimum receive interval. The larger of the two numbers is accepted as the transmit interval for that peer.

Consider the following example. Router A and Router B are peers, with the following BFD liveness detection values configured.

| Router | Configured Transmit Interval (ms) | Configured Receive Interval (ms) |
|--------|-----------------------------------|----------------------------------|
| A      | 400                               | 500                              |
| B      | 450                               | 450                              |

- For Router A, the negotiated transmit interval is the greater of its transmit interval (400 ms) and the Router B receive interval (450 ms), or 450 ms.
- For Router B, the negotiated transmit interval is the greater of its transmit interval (450 ms) and the Router A receive interval (500 ms), or 500 ms.

The liveness detection interval is the period a peer waits for a BFD packet from its peer before declaring the BFD session to be down. The detection interval is determined independently by each peer and can be different for each. The detection interval for the local peer is calculated as the remote peer's negotiated transmit interval times the detection multiplier value configured on the remote peer.

| Router | Negotiated Transmit Interval (ms) | Detection Multiplier | Liveness Detection Interval (ms) |
|--------|-----------------------------------|----------------------|----------------------------------|
| A      | 450                               | 2                    | 1500                             |
| B      | 500                               | 3                    | 900                              |

- For Router A, the detection interval is Router B's negotiated transmit interval times the Router B detection multiplier:  $500 \text{ ms} \times 3 = 1500 \text{ ms}$ .
- For Router B, the detection interval is Router A's negotiated transmit interval times the Router A detection multiplier:  $450 \text{ ms} \times 2 = 900 \text{ ms}$ .

If Router A fails to receive a BFD packet from Router B within 1500 milliseconds, Router A declares the BFD session to be down. Similarly, if Router B fails to receive a BFD packet from Router A within 900 milliseconds, Router B declares the BFD session to be down. In either case, all routes learned from the failed peer are purged immediately.



**NOTE:** Before the router can use any **bfd-liveness-detection** command, you must specify a BFD license key. To view an already configured license, use the **show license bfd** command.



**NOTE:** During a stateful SRP switchover, the BFD transmit interval is set to 1000 ms with a detection multiplier of 3. These values result in a liveness detection interval of 3000 ms. This longer interval helps prevent a BFD timeout during the switchover. BFD negotiates the interval with the remote peer before applying the temporary change. The BFD timers revert back to the configured values after 15 minutes (the maximum duration for graceful restart completion).

---

## BFD Platform Considerations

For information about modules that support BFD on the ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support BFD.

For information about modules that support BFD on the E120 and E320 Broadband Services Routers:

- See *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about the modules that support BFD.

The ES2 4G LM supports faster transmission and failure detection. On this module, the configurable BFD timer range for each routing protocol is extended from a minimum of 100 ms to 10 ms.

---

## BFD References

For information about BFD, see the following:

- BFD for IPv4 and IPv6 (Single Hop)—draft-ietf-bfd-v4v6-1hop-00.txt (January 2005 expiration)
- Bidirectional Forwarding Detection—draft-ietf-bfd-base-00.txt. (January 2005 expiration)

## Configuring a BFD License

You must configure a BFD license before the router configuration can use any BFD commands.

### *license bfd*

- Use to specify a BFD license.
- Purchase a BFD license to allow BFD configuration on the E Series router.



**NOTE:** Acquire the BFD license from Juniper Networks Customer Service or your Juniper Networks sales representative.

- Example  

```
host1(config)#license bfd license-value
```
- Use the **no** version to disable the license.
- See *license bfd*.

## BFD Version Support

The JunosE Software supports both BFD Version 0 and BFD Version 1. When establishing a BFD neighbor session, the E Series router attempts to establish version 0 or version 1 sessions based on the capability of the BFD neighbor. [Table 15 on page 135](#) indicates how the routers establish sessions based on BFD version support:

**Table 15: Determining BFD Versions**

|                                                                                                 |                            | E Series Routers<br>Running JunosE<br>7.2.x (and later) | E Series Routers<br>Running Software<br>Versions Earlier than<br>JunosE 7.2.x |
|-------------------------------------------------------------------------------------------------|----------------------------|---------------------------------------------------------|-------------------------------------------------------------------------------|
|                                                                                                 | BFD Version<br>Support     | Version 0 and Version<br>1                              | Version 0 Only                                                                |
| E Series Routers Running<br>JunosE 7.2.x (and later)<br>and Other Routers                       | Version 0 and<br>Version 1 | Result = Version 1                                      | Result = Version 0                                                            |
| E Series Routers Running<br>Software Versions<br>Earlier than JunosE 7.2.x<br>and Other Routers | Version 0 Only             | Result = Version 0                                      | Result = Version 0                                                            |
| Other Routers                                                                                   | Version 1 Only             | Result = Version 1                                      | No session<br>(version mismatch)                                              |



**NOTE:** You cannot configure the JunosE Software to send BFD Version 0 or BFD Version 1 packets. The JunosE Software determines the BFD version through auto-negotiation.

## Configuring BFD

You configure BFD on routing protocols that use BFD for fast failure detection. BFD does not require any stand-alone configuration; it works in conjunction with the application that it is supporting. Applications on which you configure BFD pass configuration information to BFD when they need fast failure detection.

BFD works with a wide variety of routing protocols. The JunosE Software currently supports only a few of these protocols. All BFD supported clients provide the ability to configure session parameters for each interface. Refer to the following table for added configuration information:

| Configuration Topic | See                                                                                                                                                                              |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| EBGP                | <i>Configuring BGP Routing in JunosE BGP and MPLS Configuration Guide</i>                                                                                                        |
| IPv4 static routes  | <i>Configuring IP in JunosE IP, IPv6, and IGP Configuration Guide</i>                                                                                                            |
| IS-IS               | <i>Configuring IS-IS in JunosE IP, IPv6, and IGP Configuration Guide</i>                                                                                                         |
| OSPF                | <i>Configuring OSPF in JunosE IP, IPv6, and IGP Configuration Guide</i>                                                                                                          |
| OSPFv3              | <i>Configuring OSPF in JunosE IP, IPv6, and IGP Configuration Guide</i>                                                                                                          |
| PIM                 | <i>Configuring PIM for IPv4 Multicast in JunosE IP, IPv6, and IGP Configuration Guide and Configuring PIM for IPv6 Multicast in JunosE Multicast Routing Configuration Guide</i> |
| RIP                 | <i>Configuring RIP in JunosE IP, IPv6, and IGP Configuration Guide</i>                                                                                                           |
| RSVP-TE             | <i>Configuring MPLS in JunosE BGP and MPLS Configuration Guide</i>                                                                                                               |

## Managing BFD Adaptive Timer Intervals

The **bfd adapt** command enables timer intervals to adapt for all BFD sessions on all virtual routers on the router.

Enabling BFD adaptive timers avoids BFD session flaps that might occur because of misconfiguration or other errors. When enabled, BFD attempts to adapt timer intervals on the router by making them less restrictive and increasing the survival chances for the session.





**NOTE:** Enabling BFD adaptive timers targets only rapidly flapping events and not genuine BFD down events. If BFD down events occur in intervals longer than 5 seconds, the session does not attempt to adapt.

Disabling BFD adaptive timers does not affect current adaptive timer intervals for sessions. Disabling adaptive timers prohibits BFD from further adapting timer intervals for existing sessions or for new sessions.

To reset adapted intervals for all BFD sessions on the router, use the **clear bfd adapted-intervals** command.

### *bfd adapt*

- Use to enable all BFD sessions to adapt timer intervals on all virtual routers on the router.
- Example  

```
host1(config)#bfd adapt
```
- Use the **no** version to disable subsequent BFD sessions from adapting timer intervals without resetting any already adapted intervals.
- See *bfd adapt*.

### *clear bfd adapted-intervals*

- Use to reset adapted timer intervals for all BFD sessions on the router.
- Does not disable the state of the BFD adaptive timer interval feature.
- Example  

```
host1#clear bfd adapted-intervals
```
- There is no **no** version.
- See *clear bfd adapted-intervals*.

## Clearing BFD Sessions

You can use the **clear bfd session** or **clear ipv6 bfd session** commands to clear one or more BFD sessions for IPv4 or IPv6 (respectively).

### *clear bfd session*

- Use to restart all IPv4 BFD sessions or a specified IPv4 BFD session.
- Use the **address** keyword to indicate the IPv4 address of the destination to which the session has been established.
- Use the **discriminator** keyword to clear the BFD session associated with the unique system-wide identifier.
- Example 1

host1#clear bfd session

- Example 2

host1#clear bfd session address 10.10.5.24

- Example 3

host1#clear bfd session discriminator 4

- There is no **no** version.
- See *clear bfd session*.



**NOTE:** When the **clear bfd session** command is executed, the BFD sessions move to the Admin Down state before restarting the BFD sessions so that the client applications are not impacted.

---

### *clear ipv6 bfd session*

- Use to restart all IPv6 BFD sessions or a specified IPv6 BFD session.
- Use the **address** keyword to indicate the IPv6 address of the destination to which the session has been established.
- Example 1  
host1#clear ipv6 bfd session
- Example 2  
host1#clear ipv6 bfd session address 1::4
- There is no **no** version.
- See *clear ipv6 bfd session*.

---

## Monitoring BFD

This section lists the system event logs associated with the BFD protocol and describes the **show** commands you can use to view BFD-related information.

### System Event Logs

To troubleshoot and monitor BFD, use the following system event logs:

- bfdGeneral
- bfdSession
- bfdEvents
- bgpConnections
- isisBfdEvents
- ospfEvents

- ospfv3General
- ripBfdLog

For more information about using event logs, see the *JunosE System Event Logging Reference Guide*.

## Viewing BFD Information

You can monitor the following aspects of BFD by using the following **show** commands:

| To Display                  | Command                 |
|-----------------------------|-------------------------|
| BFD session information     | <b>show bfd session</b> |
| BFD license key information | <b>show license bfd</b> |

You can use the output filtering feature of the **show** command to include or exclude lines of output based on a text string that you specify. See *Command Line Interface* in *JunosE System Basics Configuration Guide*, for details.

### **show license bfd**

- Use to display the bfd license key configured on the router.
- Example
 

```
host1#show license bfd
BFD license is bfd_license
```
- See *show license*.

### **show bfd session**

- Use to display BFD protocol session information.
- Use the **address** keyword to specify an IPv4 or IPv6 session that you want to view.
- Use the **detail** keyword to view more detailed information about the BFD session.
- Field descriptions
  - Address—IP address of the remote interface with which the session is established. In unnumbered cases, the remote interface provides its reference IP address.
  - State—State of the BFD session, Up, Down, or AdminDown
  - Interface—Interface on which the BFD session has been established
  - Detect/Detection Time—Time (in seconds) taken to declare the remote interface down when no packets are received from that interface
  - Local discriminator—Value used to identify the session at the local end
  - Remote discriminator—Value used to identify the session at the remote end
  - Session up time—Amount of time the session has been operational since the last session down event in *days:hours:minutes:seconds* format.

- Up/Down count—Number of times up/down transitions have occurred on the session
- Adaptivity—Number of times this session has adapted its intervals, or that additional adaptivity is disabled for this BFD session on the router
- Local
  - min tx interval—Minimum transmit interval (in seconds) configured on the session at the local end
  - min rx interval—Minimum receive interval (in seconds) configured on the session at the local end
  - multiplier—Multiplier configured on the session at the local end
- (Adapted)
  - min tx interval—Minimum transmit interval (in seconds) to which the session is adapted at the local end
  - min rx interval—Minimum receive interval (in seconds) to which the session is adapted at the local end
  - multiplier—Multiplier to which the session is adapted at the local end
- Remote
  - min tx interval—Minimum transmit interval (in seconds) configured on the session at the remote end
  - min rx interval—Minimum receive interval (in seconds) configured on the session at the remote end
  - multiplier—Multiplier configured on the session at the remote end
- Up/Down count—Number of up/down transitions that have occurred on the session
- Local diagnostic—Reason at the local end for the last session down event
- Remote diagnostic—Reason at the remote end for the last session down event
- Remote heard/Remote not heard—Whether the local end is receiving packets from the remote end
- hears us/doesn't hear us—Whether the remote end is receiving packets from the local end
- Min async interval—Minimum interval (in seconds) between packets sent when in asynchronous mode
- min slow interval—Minimum interval (in seconds) between packets when the remote end is first being detected
- Echo mode—State of echo mode (enabled or disabled; active or inactive)
- Client—Name of the client
  - desired tx—Minimum transmit interval (in seconds) requested by the client
  - required rx—Minimum required receive interval (in seconds) specified by the client

- multiplier—Multiplier requested by the client
- TX FC-assisted?—Whether component in forwarding controller is acting to speed transmission times, yes or no; forwarding controller assist available only for ES2 4G LM
- Detection FC-assisted?—Whether component in forwarding controller is acting to speed fast failure detection times, yes or no; forwarding controller assist available only for ES2 4G LM

- Example 1

```
host1#show bfd session
```

| Address    | State     | Interface       | Detect Time | Interval | Mx |
|------------|-----------|-----------------|-------------|----------|----|
| 172.16.1.2 | Up        | FastEthernet1/4 | 0.900       | 0.300    | 3  |
| 172.16.1.1 | Up        | FastEthernet1/5 | 0.900       | 0.300    | 3  |
| 172.16.1.3 | AdminDown | FastEthernet1/2 | 0.900       | 0.300    | 3  |

- Example 2—IPv4 version

```
host1#show bfd session detail
```

```
Address: 172.16.1.2
```

```
State UP on Interface FastEthernet1/4
```

```
Detection Time0.900, version v0
```

```
Local discriminator 3, Remote discriminator 1
```

```
Session up time 00:00:01:04, Up/Down count 1, Adapted 3 times
```

```
Local: min tx interval 0.3, min rx interval 0.3, multiplier 1
```

```
(Adapted) min tx interval 0.6, min rx interval 0, multiplier 3
```

```
Remote: min tx interval 0.3, min rx interval 0.3, multiplier 3
```

```
Local diagnostic: None, Remote diagnostic: None
```

```
Remote heard, hears us
```

```
Min async interval 0.3, min slow interval 0.3
```

```
Echo mode disabled/inactive
```

```
2 Clients:
```

```
Client OSPFv2, desired tx: 0.3, required rx: 0.3, multiplier 3
```

```
Client ISIS, desired tx: 0.3, required rx: 0.3, multiplier 3
```

```
TX FC-assisted? Yes, Detection FC-assisted? Yes
```

- Example 3—IPv6 version

```
host1#show bfd session detail
```

```
Address fe80:1234::abcd
```

```
State UP on Interface FastEthernet1/3
```

```
Detection Time0.900, version v1
```

```
Local discriminator 3, Remote discriminator 1
```

```
Session up time 00:00:01:04, Up/Down count 1, Adaptivity disabled
```

```
Local: min tx interval 0.3, min rx interval 0.3, multiplier 3
```

```
(Adapted) min tx interval 0, min rx interval 0, multiplier 4
```

```
Remote: min tx interval 0.3, min rx interval 0.3, multiplier 3
```

```
Local diagnostic: None, Remote diagnostic: None
```

```
Remote heard, hears us
```

```
Min async interval 0.3, min slow interval 0.3
```

```
Echo mode disabled/inactive
```

```
1 Client:
```

```
Client OSPFv3, desired tx: 0.3, required rx: 0.3, multiplier 3
```

- See *show bfd session*.



## CHAPTER 6

# Configuring IPsec

This chapter describes Internet Protocol Security (IPsec) capabilities of the ERX routers. It contains the following sections:

- [Overview on page 143](#)
- [Platform Considerations on page 145](#)
- [References on page 145](#)
- [IPsec Concepts on page 146](#)
- [IKE Overview on page 158](#)
- [Configuration Tasks on page 162](#)
- [Configuration Examples on page 176](#)
- [Monitoring IPsec on page 184](#)

## Overview

---

The IP security functionality covered in this chapter includes the following major areas:

- Encapsulating protocols, including authentication (AH) and Encapsulating Security Payload (ESP), to provide security on specified packets
- The Internet Security Association and Key Management Protocol/Internet Key Exchange (ISAKMP/IKE) protocol suite to provide automatic negotiation of security associations, including session keys

## IPsec Terms and Acronyms

[Table 16 on page 143](#) describes terms and abbreviations that are used in this discussion of IPsec.

**Table 16: IPsec Terms and Abbreviations**

| Term or Abbreviation | Description                                                                         |
|----------------------|-------------------------------------------------------------------------------------|
| 3DES                 | Triple DES encryption/decryption algorithm                                          |
| AH                   | Authentication header. Provides authentication of the sender and of data integrity. |

Table 16: IPsec Terms and Abbreviations (*continued*)

| Term or Abbreviation | Description                                                                                                                                                                                                         |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CA                   | Certificate authority                                                                                                                                                                                               |
| DES                  | Data Encryption Standard encryption algorithm                                                                                                                                                                       |
| DPD                  | Dead peer detection, which enables router to detect when communication to remote peer has been disconnected. Also known as IKE keepalive.                                                                           |
| DSS                  | Digital Signature Standard authentication algorithm                                                                                                                                                                 |
| ESP                  | Encapsulating Security Payload, which provides data integrity, data confidentiality and, optionally, sender's authentication                                                                                        |
| FQDN                 | Fully qualified domain name, which consists of the hostname and domain name for a specific system                                                                                                                   |
| HMAC                 | Hashed Message Authentication Code                                                                                                                                                                                  |
| IKE                  | Internet Key Exchange                                                                                                                                                                                               |
| IKE endpoint         | IP address of the entity that is one of two endpoints in an IKE/ISAKMP SA.                                                                                                                                          |
| Inbound traffic      | In the context of a secure interface, already secured traffic arriving on that interface (identified based on its SPI). This traffic is cleared and checked against the security parameters set for that interface. |
| IPsec                | Internet Protocol Security                                                                                                                                                                                          |
| IPsec endpoint       | IP address of the entity that is one of two endpoints in an IPsec SA                                                                                                                                                |
| ISAKMP               | Internet Security Association and Key Management Protocol                                                                                                                                                           |
| ISAKMP SA            | Security associations used to secure control channels between security gateways. These are negotiated via IKE phase 1.                                                                                              |
| MDx                  | Message Digest hash algorithm                                                                                                                                                                                       |
| Nonce                | A random value used to detect and protect against replay attacks                                                                                                                                                    |
| Outbound traffic     | In the context of a secure interface, the clear traffic forwarded to the interface (either by policy or by routing) that is typically secured according to security parameters set for that interface.              |
| PFS                  | Perfect forward secrecy                                                                                                                                                                                             |
| RSA                  | Rivest-Shamir-Adleman encryption algorithm                                                                                                                                                                          |



Table 16: IPsec Terms and Abbreviations (*continued*)

| Term or Abbreviation | Description                                                                                                                                                                                                           |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SA                   | Security association. The set of security parameters that dictate how IPsec processes a packet, including encapsulation protocol and session keys. A single secure tunnel uses multiple SAs.                          |
| Secure tunnel        | A virtual connection between two security gateways used to exchange data packets in a secure way. A secure tunnel is made up of a local SA and a remote SA, where both are negotiated in the context of an ISAKMP SA. |
| SHA                  | Secure Hash Algorithm                                                                                                                                                                                                 |
| SPI                  | Security parameter index                                                                                                                                                                                              |
| VPN                  | Virtual private network                                                                                                                                                                                               |

## Platform Considerations

For information about modules that support IPsec on ERX14xx models, ERX7xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support IPsec.



**NOTE:** E120 and E320 Broadband Services Routers do not support configuration of IPsec.

## References

For information about IPsec, see the following RFCs:

- RFC 768—User Datagram Protocol (August 1980)
- RFC 2401—Security Architecture for the Internet Protocol (November 1998)
- RFC 2402—IP Authentication Header (November 1998)
- RFC 2403—The Use of HMAC-MD5-96 within ESP and AH (November 1998)
- RFC 2404—The Use of HMAC-SHA-1-96 within ESP and AH (November 1998)
- RFC 2405—The ESP DES-CBC Cipher Algorithm With Explicit IV (November 1998)
- RFC 2406—IP Encapsulating Security Payload (ESP) (November 1998)
- RFC 2407—The Internet IP Security Domain of Interpretation for ISAKMP (November 1998)

- RFC 2408—Internet Security Association and Key Management Protocol (ISAKMP) (November 1998)
- RFC 2409—The Internet Key Exchange (IKE) (November 1998)
- RFC 2410—The NULL Encryption Algorithm and Its Use With IPsec (November 1998)
- RFC 3706—A Traffic-Based Method of Detecting Dead Internet Key Exchange (IKE) Peers (February 2004)

For information about using digital certificates, see [“Configuring Digital Certificates” on page 233](#).

---

## IPsec Concepts

This section provides an overview of IPsec concepts.

IPsec provides security to IP flows through the use of authentication and encryption.

- Authentication verifies that data is not altered during transmission and ensures that users are communicating with the individual or organization that they believe they are communicating with.
- Encryption makes data confidential by making it unreadable to everyone except the sender and intended recipient.

IPsec comprises two encapsulation protocols:

- Encapsulating Security Payload (ESP) provides confidentiality and authentication functions to every data packet.
- Authentication header (AH) provides authentication to every data packet.

Both protocols are defined with two modes of operation:

- Tunnel mode completely encapsulates the original packet within another IP header.
- Transport mode keeps the original header and does not add the extra IP header.

## Secure IP Interfaces

Secure IP interfaces are virtual IP interfaces that you can configure to provide confidentiality and authentication services for the data flowing through such interfaces. The software provides these services using mechanisms created by the suite of IPsec standards established by the IETF.

Secure IP interfaces connect the router to any other endpoint through the routed network and allow much of the same functionality as other IP interfaces. Traffic can reach a secure IP interface via routing or policy routing.

- A secure tunnel is a layer 2 entity. It is a point-to-point connection that is mapped on top of other IP interfaces. Secure tunnels carry only IP traffic.
- A secure IP interface is a layer 3 entity; that is, an IP interface mapped on top of a secure tunnel that inherits all security associated with it.

Secure IP interfaces are a logical representation of a secure connection between two security endpoints, one of which is the local system. The remote endpoint can be another security gateway or a host.

## RFC 2401 Compliance

RFC 2401 states that a security policy database (SPD) must exist for each physical interface in the router, and an administrator must configure these SPDs to determine which traffic must be IPsec-protected, not IPsec-protected, or denied. The ERX router does not support a systemwide SPD. Instead, the router takes advantage of routing policies that are applied to physical interfaces to describe which traffic to forward to a single IPsec tunnel, which traffic to discard, and so on. The router also applies IPsec selectors to traffic going into or coming out of a secure tunnel so that unwanted traffic is not allowed inside the tunnel. Supported selectors include IP addresses, subnets, and IP address ranges. An implementation that strictly follows RFC 2401 requires a separate IPsec tunnel for each SPD entry.

## IPsec Protocol Stack

Figure 12 on page 147 shows the protocol stack on a client, an IPsec gateway, and a server. In the figure, HTTP and TCP are examples of higher-level protocols involved in the end-to-end communication; other end-to-end communication protocols are also supported. The layers where the data can be encrypted are shown in gray.

### Figure 12: IPsec Tunneling Stack

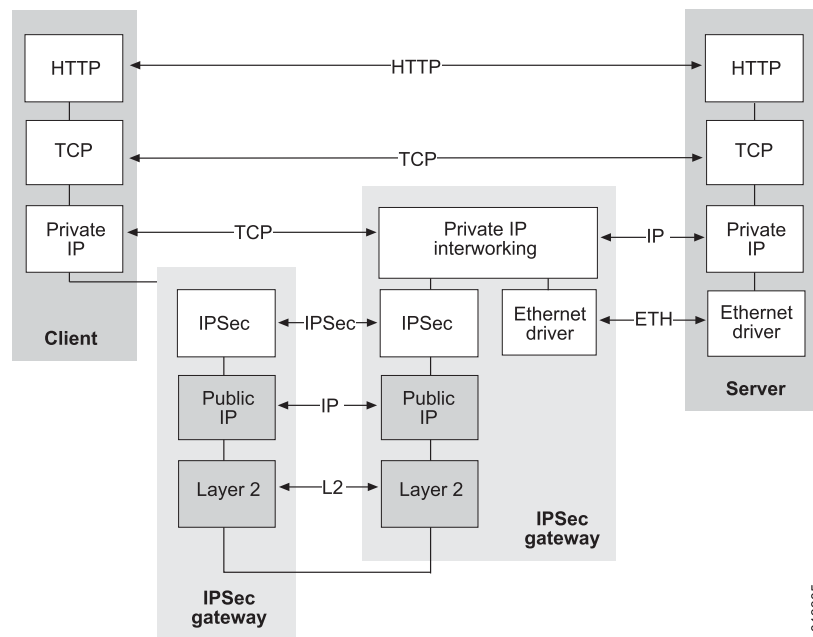 
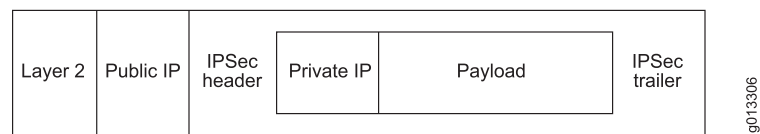 


Figure 13 on page 148 shows the packet encapsulation for IPsec tunneling.

**Figure 13: IPsec Tunneling Packet Encapsulation**

## Security Parameters


Secure IP interfaces allow tunneled traffic to be secured in many ways. For that, secure interfaces are associated with security parameters that are enforced for traffic that goes through these interfaces. [Table 17 on page 148](#) briefly describes all the parameters used for a secure IP interface.

**Table 17: Security Parameters Used on Secure IP Interfaces**

| Security Parameter            | Description                                                                                                                                                                                                                                                                                                                             |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Manual or signaled            | <p>A secure IP interface, which can be either manual or signaled.</p> <ul style="list-style-type: none"> <li>You can configure manual interfaces manually on both local and remote security gateways.</li> <li>Signaled interfaces can dynamically set up connections between security gateways using ISAKMP/IKE.</li> </ul>            |
| Operational VR                | Operational parameters for the secure IP interface, including the virtual router context to which this interface belongs and the network prefix reachable through the interface.                                                                                                                                                        |
| Transport VR                  | Transport network characteristics for the tunnel, including its virtual router context and source and destination IP addresses.                                                                                                                                                                                                         |
| Perfect forward secrecy (PFS) | A key-generation approach that guarantees that every newly generated session key is not in any way related to the previous keys. PFS ensures that a compromised session key does not compromise previous and subsequent keys.                                                                                                           |
| Lifetime                      | A limit on time and traffic volume allowed over the interface before an SA needs to be renegotiated.                                                                                                                                                                                                                                    |
| Inbound and outbound SAs      | <p>The actual session-related parameters used by both security gateways to secure the traffic between them. You can manually define the SA for manual secure IP tunnels or the SA can dynamically negotiate for signaled tunnels.</p> <p>Two sets of SA parameters exist; one for inbound traffic and another for outbound traffic.</p> |
| Transform set                 | The set of security parameters, including protocols and algorithms, that is considered adequate to provide a required security level to the traffic flowing through an interface.                                                                                                                                                       |

[Figure 14 on page 149](#) shows the relationships of the various security parameters to the IPsec security interface. The following sections discuss each parameter in detail.

 Figure 14: IPsec Security Parameters in Relation to the Secure IP Interface

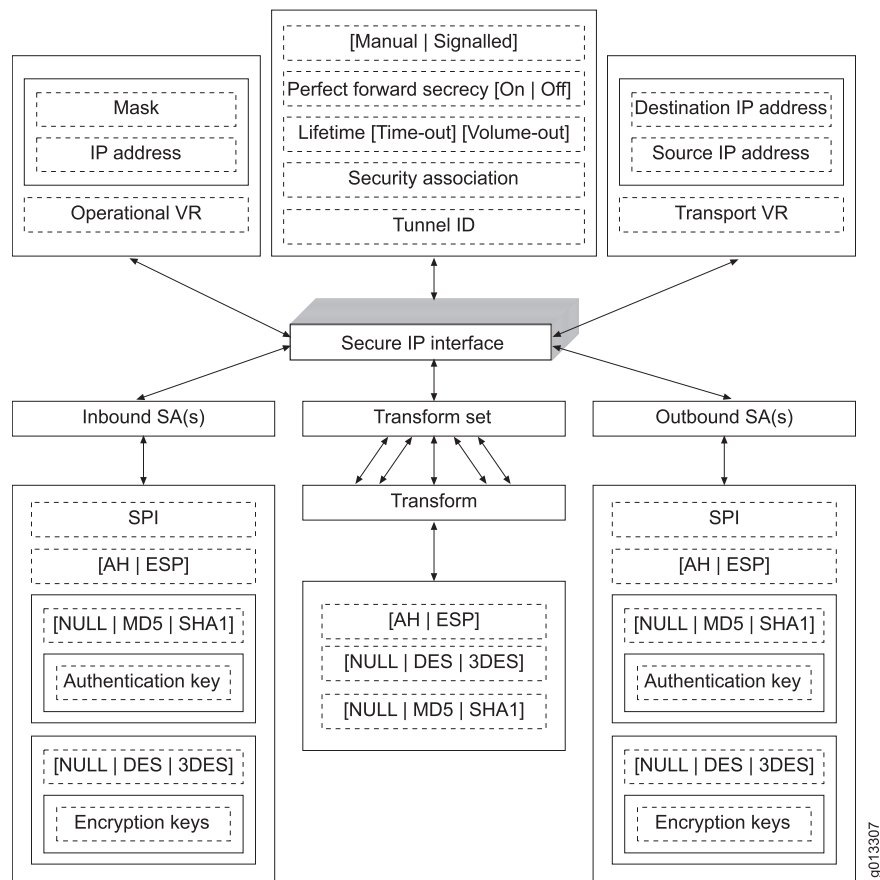

### Manual Versus Signaled Interfaces

The router supports both manual and signaled interfaces:

- Manual interfaces use a preconfigured set of SA parameters to secure traffic flowing through a secure IP interface. If SA parameters do not use a preconfigured, manual secure interface, the interface drops all traffic it receives. The router keeps statistics for dropped traffic. Both peer security gateways must contain a manually provisioned manual secure IP tunnel.
- Signaled interfaces negotiate an SA on demand with the remote security gateway. The remote security gateway must also support SA negotiation; otherwise the gateway drops traffic. Again, the router keeps statistics for dropped traffic.

The router supports SA negotiation within an IKE SA by means of the ISAKMP and IKE protocols. Only one IKE SA is maintained between a set of local and remote IKE endpoints. That means that if an IKE SA already exists between the two endpoints, it is reused.

Secure IP interface parameters can be required, optional, or not applicable, depending on whether the interface is manual or signaled. [Table 18 on page 150](#) presents how the other security parameters fit with manual and signaled interfaces.

Table 18: Security Parameters per IPsec Policy Type

| Security Parameter       | Manual   | Signaled       |
|--------------------------|----------|----------------|
| Operational VR           | Required | Required       |
| Transport VR             | Required | Required       |
| Perfect forward secrecy  | Optional | Optional       |
| Lifetime                 | Optional | Optional       |
| Inbound and outbound SAs | Required | Not applicable |
| Transform set            | Required | Required       |

### Operational Virtual Router

The operational VR for a secure IP tunnel is the VR in which a secure IP tunnel exists.

The IP address and mask associated with a secure IP interface exist only within the operational VR under which the interface is declared. The VR defines the network prefix, which is reachable through the logical IP interface.

A secure IP tunnel is always a member of one and only one operational VR. Therefore, the operational VR attributes are mandatory for any secure tunnel. These attributes include:

- IP address and mask
- Virtual router on which the secure IP interface exists

### Transport Virtual Router

The transport VR for a secure IP tunnel is the VR in which both of the secure tunnel endpoints, the source and destination, are routable addresses. Normally, the transport VR is the default ISP routing infrastructure on top of which VPNs are provisioned.

The IPsec Service module (ISM) is a security gateway and, as such, is one of the endpoints for secure tunnels. The tunnel endpoints are the tunnel *source* and the tunnel *destination* IP addresses. For IKE signaled IPsec tunnels, you can use the fully qualified domain name (FQDN) instead of the IP address to identify the tunnel endpoints. You typically use this feature to identify the tunnel destination endpoint in DSL and broadband environments. See [“Transport VR Definitions with an FQDN” on page 151](#) in this section.

- The tunnel source IP address must be one of the local IP addresses configured on the router.
- The tunnel destination address must be a routable IP address within the transport VR routing tables.

The transport VR information is required, although its explicit configuration is not. If omitted, the transport VR is assumed to be the same as the operational VR. However, the tunnel source and destination are mandatory elements.

### **Transport VR Definition**

The transport VR definition includes:

- Transport virtual router name—Name of the transport virtual router. If not explicitly configured, the operational VR is assumed.
- Tunnel source endpoint—IP address or FQDN used as the tunnel source endpoint on this end of the tunnel. In the case of signaled tunnels, the router monitors and transmits on port 500 of this address for IKE negotiations. The tunnel source endpoint must be a configured IP address or FQDN on the transport VR, or the router indicates an error. See [“Transport VR Definitions with an FQDN” on page 151](#) for information about using an FQDN rather than an IP address.
- Tunnel destination endpoint—IP address or FQDN associated with the termination or initiation point of the secure IP tunnel. This address must be routable within the context of the transport VR. Each secure IP tunnel can have a different remote IP address.

### **Transport VR Definitions with an FQDN**

For signaled IPsec tunnels, you can use an FQDN instead of the IP address to specify tunnel endpoints. You typically use this feature to identify the tunnel destination in broadband and DSL environments in which the destination does not have a fixed IP address. The remote device uses the FQDN to establish and authenticate the IPsec connection, and then uses the actual IP address for rekeying and filtering operations.

The ERX router FQDN feature supports both preshared keys and digital certificates. If it uses preshared keys, the router must use IKE aggressive mode to support FQDNs.

An identity string can include an optional *user@* specification that precedes the FQDN. The entire string can be a maximum of 80 characters. For example, both of the following are supported:

```
branch245.customer77.isp.net
user4919@branch245.customer77.isp.net
```

With preshared key authentication, and when using the *user@fqdn* format, the router searches for the key based on the entire identity string. If the router cannot find that string, the router strips off the *user@* part and performs a second search based on the FQDN part of the string.

With digital certificates, the two sides of the tunnel must use the same identity format, with or without the *user@* specification; no stripping operation and no second search occurs.



**NOTE:** The E Series router does not support FQDN-to-IP address resolution by DNS.

### Perfect Forward Secrecy

---

PFS is an optional feature that causes every newly refreshed key to be completely unrelated to the previous key. PFS provides added security, but requires extra processing for a new Diffie-Hellmann key exchange on every key refresh.

If PFS is enabled, the router mandates PFS during SA negotiation. The remote security gateway must accept PFS to successfully negotiate the SA. However, if PFS is disabled, PFS might still be negotiated if the remote security gateway requests PFS.

PFS supports three Diffie-Hellmann prime modulus groups:

- Group 1—A 768-bit Diffie-Hellmann prime modulus group
- Group 2—A 1024-bit Diffie-Hellmann prime modulus group
- Group 5—A 1536-bit Diffie-Hellmann prime modulus group

SA negotiation favors the highest request. For example, if group 2 is requested locally, the remote security gateway must support group 2 for the SA negotiation to be successful. If group 1 is requested locally, either groups 1 or 2 can be accepted, depending on requests from the remote security gateway.

### Lifetime

---

You can set a lifetime for user SAs and IKE SAs. For information about setting the IKE SA lifetime, see [“Lifetime” on page 161](#).

For signaled IPsec interfaces, both the inbound and outbound SA must be assigned a lifetime. The lifetime parameter controls the duration for which the SA is valid. When a user SA is established, both a timer and a traffic volume counter are set. When either counter reaches the limit specified by the SA lifetime, a new SA is negotiated and the expired SA is deleted. The renegotiations refresh several SA parameters, including keys.

Note the following about how the lifetime parameters work:

- To avoid delays in the data flow, a new user SA is actually renegotiated before the expiration. If the SA expires in the middle of processing a packet, the router finishes processing that packet.
- The actual user SA lifetime may not equal the value configured in the router.
- There are both global and tunnel-specific lifetime parameters. If there is no tunnel-specific lifetime configured, the router uses the global lifetime. The global lifetime parameters have the following default settings:
  - 8 hours for the time-based lifetime
  - 100 MB for the traffic-based lifetime
- Lifetime parameters are valid only for user SAs established via IKE. Manually configured user SAs ignore this parameter.

You can set a lifetime for all SAs on a specific tunnel, and you can set a global lifetime.



- To set the tunnel lifetime, use the **tunnel lifetime** command.
- To set the global (default) lifetime, use the **ipsec lifetime** command.

### Inbound and Outbound SAs

---

SA parameters are the actual session parameters used to secure a specific data flow associated with a specific secure IP interface. How SA parameters are set depends on how the IP interfaces are secured:

- For manual secure IP interfaces, the system administrator sets SA parameters. Manually setting SA parameters allows provisioning of IP security to destinations that do not support SA negotiation via IKE.
- For signaled secure IP interfaces, the two security gateway peers negotiate SA parameters; the system administrator is not allowed to set any of the parameters. In fact, for some of these parameters, such as session keys, the system administrator is not even granted read access.

Similarly to IPsec SAs, SA parameters are unidirectional. Therefore, for a two-way data flow, two SAs need to be established—one for inbound traffic and another for outbound traffic. For each direction, SA parameters must be set for each transform associated with a secure IP interface. Therefore, two sets of SA parameters exist for each secure IP interface, one being the inbound SA parameters and the other the outbound SA parameters.

The following parameters form each set of SA parameters:

- SPI—The SPI is a unique identifier that is applied to the SA when securing a flow. An SPI is unique for a given destination IP address and protocol tuple. The destination IP address is either the remote secure IP interface endpoint for the outbound direction or the local secure IP interface endpoint for the inbound direction.
- Encapsulation—The encapsulation options include both an encapsulating protocol and an encapsulating mode. The protocol can be either ESP or AH. The mode is tunnel mode.
- Transforms—The allowed transforms for given SA parameters depend on the encapsulation protocol. See [“Transform Sets” on page 153](#) for more information.
- Keys—The session key is used for the respective SA transform. The key length depends on the SA transform to which it applies, and is as follows:
  - DES—8 bytes
  - 3DES—24 bytes
  - MD5—16 bytes
  - SHA—20 bytes

### Transform Sets

---

Transform sets are composed of security parameters that provide a required security level to a particular data flow. Transform sets are used during user SA negotiation to find

common agreement between the local and the remote security gateway on how to protect that specific data flow.

A transform set includes encapsulation protocols and transforms; for example, encryption/decryption/authentication algorithms. These parameters are grouped to specify the acceptable protection for a given data flow. Many transform sets are supported, since different traffic requires distinct security levels.

A secure IP tunnel is associated with one transform set. Multiple secure IP tunnels can refer to the same transform set.

Changing existing transform sets affects only future user SA negotiations. User SAs that are already established remain valid and do not use the changed transform set until they are renegotiated.

For manually configured secure IP tunnels, the associated transform set must contain a single transform option.

### ***Encapsulation Protocols***

Both the AH and ESP protocols are supported. See supported transforms in [Table 19 on page 154](#).

- AH provides authentication.
- ESP provides data confidentiality and antireplay functions. ESP can also provide data authentication; although, in this implementation, ESP does not cover the outer IP header.

### ***Encapsulation Modes***

IPsec supports two encapsulation modes—tunnel mode and transport mode. Tunnel mode creates a second IP header in the packet and uses both the local and remote security gateway addresses as source and destination IP addresses. Also, tunnel mode allows an IP interface to be created and stacked right above it.

Transport mode does not add a second IP header and does not allow an IP interface to be created and stacked right above it. Instead, transport mode allows other tunneling applications, such as an L2TP tunnel, to be created and stacked on top of an IPsec transport mode connection. See [“Securing L2TP and IP Tunnels with IPsec” on page 303](#) for a description of L2TP transport mode.

### ***Supported Transforms***

[Table 19 on page 154](#) describes the supported transforms.

**Table 19: Supported Transforms**

| Transform | Description                                                                                                                                     |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| AH-MD5    | IPsec performs AH protocol encapsulation using the MD5 hash function with HMAC message authentication.                                          |
| AH-SHA    | IPsec performs AH protocol encapsulation using the SHA-1 hash function with HMAC message authentication. SHA-1 is considered stronger than MD5. |

Table 19: Supported Transforms (*continued*)

| Transform    | Description                                                                                                                                                                                                                                                    |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ESP-MD5      | IPsec performs ESP protocol encapsulation using the MD5 hash function with HMAC message authentication.                                                                                                                                                        |
| ESP-SHA      | IPsec performs ESP protocol encapsulation using the SHA-1 hash function with HMAC message authentication. SHA-1 is considered stronger than MD5.                                                                                                               |
| ESP-DES      | IPsec performs ESP protocol encapsulation using the DES encryption algorithm. DES uses a 56-bit symmetric key and is considered a weak (breakable) encryption algorithm.                                                                                       |
| ESP-3DES     | IPsec performs ESP protocol encapsulation using the 3DES encryption algorithm. 3DES uses a 168-bit symmetric encryption key and is widely accepted as a strong encryption algorithm. Export control issues apply to products that ship from the USA with 3DES. |
| ESP-DES-MD5  | Combination of ESP-MD5 and ESP-DES transforms.                                                                                                                                                                                                                 |
| ESP-DES-SHA  | Combination of ESP-SHA and ESP-DES transforms.                                                                                                                                                                                                                 |
| ESP-3DES-MD5 | Combination of ESP-MD5 and ESP-3DES transforms.                                                                                                                                                                                                                |
| ESP-3DES-SHA | Combination of ESP-SHA and ESP-3DES transforms.                                                                                                                                                                                                                |

Table 20 on page 155 lists the security functions achieved with the supported transforms, and provides a view of which combinations can be used, depending on security requirements.

Table 20: Supported Security Transform Combinations

| Security Type                           | Supported Transform Combinations |
|-----------------------------------------|----------------------------------|
| Data authentication only                | AH-HMAC-MD5                      |
|                                         | AH-HMAC-SHA                      |
|                                         | ESP-HMAC-MD5                     |
|                                         | ESP-HMAC-SHA                     |
| Data confidentiality only               | ESP-DES                          |
|                                         | ESP-3DES                         |
| Data authentication and confidentiality | ESP-DES-MD5                      |
|                                         | ESP-DES-SHA                      |
|                                         | ESP-3DES-MD5                     |
|                                         | ESP-3DES-SHA                     |

The ISM does not support both the ESP and AH encapsulation modes concurrently on the same secure tunnel.

### ***Negotiating Transforms***

Inside a transform set, IPsec transforms are numbered in a priority sequence.

- During negotiation as an initiator of the user SA, the router uses transform number one first. If the remote system does not agree on the transform, the router then tries number two, and so on. If both end systems do not agree on a transform, the user SA fails and the secure IP tunnel is not established.
- During negotiation as a responder, the router compares the proposed transform from the remote end against each transform in the transform set. If there is no match, the router provides a negative answer to the remote end, which can either try another transform or give up. If no match is found, the secure IP tunnel is not established.

## **Other Security Features**

The following sections briefly describe other supported security features for the ERX routers. These features include the following:

- [“IP Security Policies” on page 156](#)
- [“ESP Processing” on page 156](#)
- [“AH Processing” on page 156](#)

This section also provides a pointer to the IPsec system maximums.

### **IP Security Policies**

---

The ERX router does not support a systemwide SPD. Instead, the router takes advantage of routing to forward traffic to and from a secure tunnel. The router still applies IPsec selectors to traffic going into or coming out of a secure tunnel so that unwanted traffic is not allowed inside the tunnel. Supported selectors include IP addresses, subnets, and IP address ranges.

### **ESP Processing**

---

The router supports both the encryption and authentication functions of ESP encapsulation as defined in RFC 2406. Specifically, the router supports:

- DES and 3DES encryption algorithms
- The HMAC-SHA and HMAC-MD5 authentication algorithms
- ESP security options on a per-tunnel (per-SA) basis
- Tunnel mode

### **AH Processing**

---

The router supports AH encapsulation as defined in RFC 2402. Specifically, the router supports:

- HMAC-SHA and HMAC-MD5 authentication algorithms
- AH authentication options on a per-tunnel (per-SA) basis
- Tunnel mode

### IPsec Maximums Supported

See *JunosE Release Notes, Appendix A, System Maximums* corresponding to your software release for information about maximum values.

## DPD and IPsec Tunnel Failover

Dead peer detection (DPD) is a keepalive mechanism that enables the E Series router to detect when the connection between the router and a remote IPsec peer has been lost. DPD enables the router to reclaim resources and to optionally redirect traffic to an alternate failover destination. If DPD is not enabled, the traffic continues to be sent to the unavailable destination.

When a disconnected state is detected between the E Series router and an IPsec peer, the router:

- Tears down the IPsec connection and displays the interface's state as down in output for the **show ipsec tunnel detail** command
- Clears all SAs that were established between the two endpoints
- Stops forwarding packets to the unavailable destination
- Generates SNMP traps
- Allows routing protocols running on the IP interfaces on top of the failed IPsec tunnel to switch to alternate paths
- (Optional) Redirects traffic to an alternate tunnel destination

Unlike other keepalive and heartbeat schemes, which require that peers frequently exchange Hello packets with each other at regular predetermined intervals, DPD uses two techniques to verify connectivity on an as-needed basis. In the first method, the router sends DPD inquiries to the remote peer when traffic has been sent to the peer in the last 30 seconds but no traffic has been received from the peer in the last 60 seconds. In the second method, DPD uses an idle timer. If there has been no traffic between the router and the peer for 2.5 minutes, DPD sends an inquiry to the remote end to verify that the peer is still reachable.



**NOTE:** Not all IPsec connections need to verify connectivity between peers. For example, the ERX router does not use DPD to check secure remote access connections based on L2TP over IPsec, which have their own keepalive mechanism. However, the router does reply to a request from a remote peer in this type of connection.

## Tunnel Failover

---

The ERX router provides a failover mechanism for IPsec tunnels that works in concert with both DPD and with IKE SA negotiation. The tunnel failover feature provides an alternate tunnel destination when DPD detects that the current destination is unreachable or when IKE SA set up is unsuccessful. During failover, the IPsec tunnel switches to the alternate destination and establishes IPsec SAs with the new peer. To configure tunnel failover, you specify the tunnel destination backup endpoint.

Tunnel failover is a two-way process. If the router detects that the remote peer is unreachable, it switches to sending traffic to the backup destination. Likewise, if the router is sending traffic to the backup destination when the connection is terminated, the router switches to sending the traffic to the original remote peer.



**NOTE:** Even without tunnel failover configured, DPD still provides many benefits, such as indicating that the destination interface is down, ensuring that the router stops sending packets to the unreachable destination, and generating SNMP traps.

---

## IKE Overview

---

The IKE suite of protocols allows a pair of security gateways to:

- Dynamically establish a secure tunnel over which the security gateways can exchange tunnel and key information.
- Set up user-level tunnels or SAs, including tunnel attribute negotiations and key management. These tunnels can also be refreshed and terminated on top of the same secure channel.

IKE is based on the Oakley and Skeme key determination protocols and the ISAKMP framework for key exchange and security association establishment. IKE provides:

- Automatic key refreshing on configurable timeout
- Support for public key infrastructure (PKI) authentication systems
- Antireplay defense

IKE is layered on UDP and uses UDP port 500 to exchange IKE information between the security gateways. Therefore, UDP port 500 packets must be permitted on any IP interface involved in connecting a security gateway peer.

The following sections expand on the IKE functionality available for the router.

## Main Mode and Aggressive Mode

IKE phase 1 negotiations are used to establish IKE SAs. These SAs protect the IKE phase 2 negotiations. IKE uses one of two modes for phase 1 negotiations: main mode or

aggressive mode. The choice of main or aggressive mode is a matter of tradeoffs. Some of the characteristics of the two modes are:

- Main mode
  - Protects the identities of the peers during negotiations and is therefore more secure.
  - Enables greater proposal flexibility than aggressive mode.
  - Is more time consuming than aggressive mode because more messages are exchanged between peers. (Six messages are exchanged in main mode.)
- Aggressive mode
  - Exposes identities of the peers to eavesdropping, making it less secure than main mode.
  - Is faster than main mode because fewer messages are exchanged between peers. (Three messages are exchanged in aggressive mode.)
  - Enables support for fully qualified domain names (FQDNs) when the router uses preshared keys.

The next section describes aggressive mode in more detail.

### Aggressive Mode Negotiations

During aggressive mode phase 1 negotiations, the E Series router behaves as follows:

- When the router is the initiator, the router searches all policy rules to find those that allow aggressive mode. The router then selects the rule with the highest priority and uses the rule to initiate phase 1 negotiations. If there are no policy rules with aggressive mode allowed, the router selects the highest-priority rule that allows main mode.
- When the router is the responder, the negotiation depends on what the initiator proposes, as well as what is configured in the policy rules.

[Table 21 on page 159](#) outlines the possible combinations of initiator proposals and policy rules. As indicated, allowing aggressive mode in a policy rule allows negotiation to take place no matter what the initiator requests.

**Table 21: Initiator Proposals and Policy Rules**

| Aggressive Mode Setting | Initiator Requests (First Time) | Initiator Requests (Rekeyed) | Responder Policy Rule                        |
|-------------------------|---------------------------------|------------------------------|----------------------------------------------|
| Accepted                | Main mode                       | Follows First Time           | Aggressive or Main modes (follows initiator) |
| Requested               | Aggressive mode                 | Follows First Time           | Aggressive or Main modes (follows initiator) |
| Required                | Aggressive mode                 | Aggressive Mode              | Aggressive mode                              |
| None                    | Main mode                       | Main Mode                    | Main mode                                    |

The router responds to phase 1 negotiations with the highest-priority policy rule that matches the initiator. A match means that all parameters, including the exchange type, match.

## IKE Policies

An IKE policy defines a combination of security parameters to be used during the IKE SA negotiation. IKE policies are configured on both security gateway peers, and there must be at least one policy on the local peer that matches a policy on the remote peer. Failing that, the two peers are not able to successfully negotiate the IKE SA, and no data flow is possible.

IKE policies are global to the router. Every ISM on a router uses the same set of policies when negotiating IKE SAs. The agreed-on IKE SA between the local system and a remote security gateway may vary, because it depends on the IKE policies used by each remote peer. However, the initial set of IKE policies the router uses is always the same and independent of which peer the router is negotiating with.

During negotiation, the router might skip IKE policies that require parameters that are not configured for the remote security gateway with which the IKE SA is being negotiated.

You can define up to ten IKE policies, with each policy having a different combination of security parameters. A default IKE policy that contains default values for every policy parameter is available. This policy is used only when IKE policies are not configured and IKE is required.

The following sections describe each of the parameters contained in an IKE policy.

---

### Priority

Priority allows better (more secure) policies to be given preference during the negotiation process. However, every IKE policy is considered secure enough to secure the IKE SA flow.

During IKE negotiation, all policies are scanned, one at a time, starting from the highest-priority policy and ending with the lowest-priority policy. The first policy that the peer security gateway accepts is used for that IKE session. This procedure is repeated for every IKE session that needs to be established.

---

### Encryption

A specific encryption transform can be applied to an IKE policy. The supported encryption algorithms are:

- DES
- 3DES

---

### Hash Function

A specific hash function can be applied to an IKE policy. The supported ones are:

- MD5
- SHA-1



IKE also uses an authentication algorithm during IKE exchanges. This authentication algorithm is automatically set to the HMAC version of the specified hash algorithm. Therefore, you cannot have the hash function set to MD5 and the authentication algorithm set to HMAC-SHA.

### Authentication Mode

---

As part of the IKE protocol, one security gateway needs to authenticate the other security gateway to make sure that the IKE SA is established with the intended party. The ERX router supports two authentication methods:

- Digital certificates (using RSA algorithms)

For digital certificate authentication, an initiator signs message interchange data using his private key, and a responder uses the initiator's public key to verify the signature. Typically, the public key is exchanged via messages containing an X.509v3 certificate. This certificate provides a level of assurance that a peer's identity (as represented in the certificate) is associated with a particular public key.

For more information, see [“Configuring Digital Certificates” on page 233](#).

- Preshared keys

With preshared key authentication mode, the same secret string (similar to a password) must be configured on both security gateways before the gateways can authenticate each other. It is not advisable to share a preshared key among multiple pairs of security gateways, because it reduces the key's security level.

The router allows preshared keys to be up to 256 ASCII alphanumeric characters.

### Diffie-Hellman Group

---

An IKE policy must specify which Diffie-Hellmann group is used during the symmetrical key generation phase of IKE. The following Diffie-Hellmann groups are supported:

- Group 1 (768-bit)
- Group 2 (1024-bit)
- Group 5 (1536-bit)

### Lifetime

---

Like a user SA, an IKE SA does not last indefinitely. Therefore, the router allows you to specify a lifetime parameter for an IKE policy. The timer for the lifetime parameter begins when the IKE SA is established using IKE.

## IKE SA Negotiation

As the initiator of an IKE SA, the router sends its IKE policies to the remote peer. If the peer has an IKE policy that matches the encryption, hash, authentication method, and Diffie-Hellmann group settings, the peer returns the matching policy. The peers use the lesser lifetime setting as the IKE SA lifetime. If no match is found, the IKE SA fails, and a log alarm is generated.

As the responder of an IKE negotiation, the router receives all IKE policies from a remote security gateway. The router then scans its own list of IKE policies to determine whether a match exists, starting from the highest priority. If it finds a match, that policy is successfully negotiated. Again, the lifetime is negotiated to the lesser of the two lifetimes, and failures are logged.

## Generating Private and Public Key Pairs

When any of the public key methods for authenticating remote security gateways is used, the system must have at least one valid pair of public or private keys. Therefore, the system provides a facility by which it can generate public and private key pairs for itself.

The private key is used only by the system itself. It is never exchanged with any other nodes. When generated, the private key is securely stored internally to the system in nonvolatile memory. Access to the private key is never given, not even to a system administrator or to a network management system.

The public key is used in either of the following scenarios:

- A network administration system or system administrator can retrieve it so that it can be entered into remote security gateways with which the system needs to establish an IKE SA.
- It can be given to CAs so that they can properly sign it. From there, the public key is distributed to remote security gateways that can handle a PKI.

The public/private key pair as provided by the system supports the RSA standard (512, 1024, or 2048 bits).

The public/private key pair is a global system attribute, regardless of how many ISMs exist in the system. Only one set of keys is available at any given time.

---

## Configuration Tasks

This section explains the steps to configure an IPsec license and IPsec parameters, create an IPsec tunnel, and define an ISAKMP/IKE policy. The next section contains configuration examples.

### Configuring an IPsec License

By default, and with no IPsec tunnel license, you can configure up to 10 IPsec tunnels on an ERX router. However, you can purchase licenses that support the following IPsec tunnel maximums:

- 1000
- 2000
- 4000
- 8000
- 16,000
- 32,000

The number of additional tunnels is independent of the number of ISMs installed in the router. However, the router chassis enforces the following tunnel limits:

- SRP 10G – 10,000
- SRP 40G – 20,000

### *license ipsec-tunnels*

- Use to specify an IPsec tunnel license.



**NOTE:** Acquire the license from Juniper Networks Customer Services and Support or from your Juniper Networks sales representative.

- Example

```
host1(config)#license ipsec-tunnels license string
```

- Use the **no** version to disable the license.
- See *license ipsec-tunnels*.

## Configuring IPsec Parameters

To configure IPsec:

1. For each endpoint, create a transform set that provides the desired encryption and authentication.

```
host1(config)#ipsec transform-set customerAprotection esp-3des-hmac-sha
host1(config)#ipsec transform-set customerBprotection ah-hmac-md5
```

2. Add a preshared key that the routers use to authenticate each other.

```
host1(config)#ipsec key manual pre-share 5.2.0.1
host1(config-manual-key)#key customerASecret
```

After you enter a preshared key, the router encrypts the key and displays it in masked form to increase the security of the key. If you need to reenter the key, you can enter it in its masked form using this command.

To see the masked form of the key:

```
host1#show config
ipsec key manual pre-share 10.10.1.1
masked-key " AAAAGAAAAAcAAAACfd+SAsaVQ6Qeopt2rJOP6LDg+0hX5cMO"
```

To enter the masked key:

```
host1(config-manual-key)#masked-key
AAAAGAAAAAcAAAACfd+SAsaVQ6Qeopt2rJOP6LDg+0hX5cMO
```

3. Define the local endpoint used for ISAKMP/IKE negotiations for all IPsec tunnels in the router.

```
host1(config)#ipsec local-endpoint 10.10.1.1 transport-virtual-router vr#8
```

4. (Optional) Set the global (default) lifetime for all SAs on the router.

```
host1(config)#ipsec lifetime kilobytes 42000000
```

### *ipsec key manual pre-share*

- Use to specify that a peer use a preshared key for authentication during the tunnel establishment phase, and to display the prompt that lets you enter the preshared key. To enter a key, use the **key** command.
- Specify the peer by using its IP address or fully qualified domain name (FQDN).
  - FQDNs are supported only for signaled tunnels.
  - The router must be in aggressive mode to use FQDNs with preshared keys.
  - The identity string can include an optional *user@* specification preceding the FQDN.
- You must enter this command in the virtual router context where the IP address of the peer is defined.

- Example 1—using an IP Address

```
host1(config)#ipsec key manual pre-share ip address 10.10.1.1
host1(config-manual-key)#
```

- Example 2—using an FQDN

```
host1(config)#ipsec key manual pre-share identity branch245.customer77.isp.net
host1(config-manual-key)#
```

- Example 3—using an FQDN with *user@* specification

```
host1(config)#ipsec key manual pre-share identity
user4919@branch245.customer77.isp.net
host1(config-manual-key)#
```

- Use the **no** version to delete a manually configured key from the router.
- See *ipsec key manual pre-share*.

### *ipsec lifetime*

- Use to set the global (default) lifetime in seconds or volume of traffic in kilobytes. The IPsec lifetime applies to tunnels that do not have a tunnel lifetime defined. When either limit is reached, the SA is renegotiated.
- To set a lifetime for all SAs on a tunnel, use the **tunnel lifetime** command.
- To set a lifetime for a specific SA, use [“lifetime” on page 175](#).

- Example 1

```
host1(config)#ipsec lifetime kilobytes 42000000
```

- Example 2

```
host1(config)#ipsec lifetime seconds 8600
```

- Use the **no** version to restore the default values of 4294967295 kilobytes and 28800 seconds (8 hours).
- See *ipsec lifetime*.

*ipsec local-endpoint*

- Use to define a default local endpoint for ISAKMP/IKE negotiations and all IPsec tunnels for a transport virtual router.
- You must specify the IP address used as the local endpoint and the transport virtual router on which the IP address is defined.
- Example
 

```
host1(config)#ipsec local-endpoint 10.10.1.1 transport-virtual-router VR#8
```
- Use the **no** version to delete a local endpoint. You cannot remove an endpoint if a tunnel is referencing the endpoint.
- See *ipsec local-endpoint*.

*ipsec transform-set*

- Use to create a transform set. Each transform in a set provides a different combination of data authentication and confidentiality.
- Transform sets used for manually configured tunnels can have one transform.
- Transform sets used for signaled tunnels can have up to six transforms. The actual transform used on the tunnel is negotiated with the peer. Transforms are numbered in a priority sequence in the order in which you enter them.
- To display the names of the transforms that you can use in a transform set, issue the **ipsec transform-set transformSetName ?** command.
- Example
 

```
host1(config)#ipsec transform-set espSet esp-3des-hmac-md5 esp-3des-null-auth
```
- Use the **no** version to delete a transform set. You cannot remove a transform set if a tunnel is referencing the transform set.
- See *ipsec transform-set*.

*key*

- Use to enter a manual preshared key.
- Preshared keys can have up to 256 ASCII alphanumeric characters. To include spaces in the key, enclose the key in quotation marks.
- Example 1
 

```
host1(config-manual-key)#key dj5fe23owi8er49fdsa
```
- Example 2
 

```
host1(config-manual-key)#key " my key with spaces"
```
- There is no **no** version. To delete a key, use the **no** version of the **ipsec key manual** command.
- See *key*.

*masked-key*

- Use to enter the preshared key in masked form.
- For security purposes, the router displays the key only in masked form. If you delete the key or reboot the router to factory defaults, you can use this command to reenter the key in its masked form so that the key is not visible while you enter it.
- To see the masked key, use the **show config** command.
- Example
 

```
host1#show config
ipsec key manual pre-share 10.10.1.1
masked-key " AAAAGAAAAAcAAAACfd+SAsaVQ6Qeopt2rJOP6LDg+0hX5cMO"
host1#configure terminal
host1(config)#ipsec key manual pre-share 10.10.1.1
host1(config-manual-key)#masked-key
AAAAGAAAAAcAAAACfd+SAsaVQ6Qeopt2rJOP6LDg+0hX5cMO
```
- There is no **no** version. To delete a key, use the **no** version of the **ipsec key manual** command.
- See *masked-key*.

## Creating an IPsec Tunnel

To create an IPsec tunnel:

1. Enter virtual router mode. Specify the VR that contains the source and destination addresses assigned to the tunnel interface.

```
host1(config)#virtual-router vrA
host1:vrA(config)#
```

2. Create an IPsec tunnel, and specify the transport VR.

```
host1:vrA(config)#interface tunnel ipsec:Aottawa2boston transport-virtual-router
default
host1:vrA(config-if)#
```

3. Specify the IP address of this tunnel interface.

```
host1:vrA(config-if)#ip address 10.3.0.0 255.255.0.0
```

4. Specify the transform set that ISAKMP uses for SA negotiations.

```
host1:vrA(config-if)#tunnel transform-set customerAprotection
```

5. Configure the local endpoint of the tunnel.

```
host1:vrA(config-if)#tunnel local-identity subnet 10.1.0.0 255.255.0.0
```

6. Configure the peer endpoint of the tunnel.

```
host1:vrA(config-if)#tunnel peer-identity subnet 10.3.0.0 255.255.0.0
```

7. Specify an existing interface address that the tunnel uses as its source address.

```
host1:vrA(config-if)#tunnel source 5.1.0.1
```

8. Specify the address or identity of the tunnel destination endpoint.

```
host1:vrA(config-if)#tunnel destination identity branch245.customer77.isp.net
```

```
host1:vrA(config-if)#exit
```



**NOTE:** FQDNs are used when tunnel destination endpoints do not have a fixed address, as in cable and DSL environments.

9. For manual tunnels, specify the algorithm sets and the session key used for inbound SAs and for outbound SAs.

```
host1:vrA(config-if)#tunnel session-key-inbound esp-des-hmac-md5
a7bd567917bd5679 bd5678a7bd567917bd567917bd567678
host1:vrA(config-if)#tunnel session-key-outbound esp-3des-hmac-md5 421
567917bd567917bd567917bd545a17bd567917bd56784a7b
fda183bef567917bd567917bd567917b
```

10. (Optional) Configure PFS on this tunnel.

```
host1:vrA(config-if)#tunnel pfs group 5
```

11. (Optional) Set the tunnel type to signaled or manual. The default is signaled.

```
host1:vrA(config-if)#tunnel signaling isakmp
```

12. (Optional) Set the renegotiation time of the SAs in use by this tunnel.

```
host1(config-if)#tunnel lifetime seconds 48000 kilobytes 249000
```

13. (Optional) Set the MTU size for the tunnel.

```
host1(config-if)#tunnel mtu 2240
```

### *interface tunnel*

- Use to create or configure an IPsec tunnel interface.
- Use the **transport-virtual-router** keyword to establish the tunnel on a virtual router other than the current virtual router context.
- Example

```
host1(config)#interface tunnel ipsec:jak transport-virtual-router tvr041
host1(config-if)#
```

- Use the **no** version to remove the tunnel.
- See *interface tunnel*.

### *tunnel destination*

- Use to set the address or identity of the remote tunnel endpoint.
  - For signaled IPsec tunnels in cable or DSL environments, use the FQDN to identify the remote tunnel endpoint, which does not have a fixed IP address.
  - The identity string can include an optional *user@* specification preceding the FQDN.
- Example 1
 

```
host1(config-if)#tunnel destination 10.10.11.12
```
- Example 2

```
host1(config-if)#tunnel destination identity branch245.customer77.isp.net
```

- Example 3

```
host1(config-if)#tunnel destination identity user4919@branch245.customer77.isp.net
```

- Use the **no** version to remove the address.
- See *tunnel destination*.

### *tunnel lifetime*

- Use to set the renegotiation time of the SAs in use by this tunnel.
- To configure the lifetime in number of seconds, use the **seconds** keyword to specify the lifetime in the range 1800–864000. The default value is 28800 seconds.
- To configure the lifetime in amount of traffic, use the **kilobytes** keyword to specify the lifetime in the range 102400–4294967295. The default is an unlimited volume.
- If you include the **seconds** keyword as the first keyword on the command line, you can also include the **kilobytes** keyword on the same line.
- Before either the volume of traffic or number of seconds limit is reached, the SA is renegotiated, which ensures that the tunnel does not go down during renegotiation.
- Example

```
host1(config-if)#tunnel lifetime seconds 48000 kilobytes 249000
```

- Use the **no** version to restore the default lifetime (28800 seconds) and an unlimited volume.
- See *tunnel lifetime*.

### *tunnel local-identity*

- Use to configure the local identity (selector) of the tunnel. Specify the identity using one of the following keywords:
  - **address**—Specifies an IP address as the local identity
  - **subnet**—Specifies a subnet as the local identity
  - **range**—Specifies a range of IP addresses as the local identity

- Example 1

```
host1(config-if)#tunnel local-identity range 10.10.1.1 10.10.2.1
```

- Example 2

```
host1(config-if)#tunnel local-identity subnet 10.10.1.1 255.255.255.0
```

- Use the **no** version to restore the default identity, which is subnet 0.0.0.00.0.0.0
- See *tunnel local-identity*.

### *tunnel mtu*

- Use to set the MTU size for the tunnel.
- Example



```
host1(config-if)#tunnel mtu 2240
```

- Use the **no** version to restore the default MTU (1440).
- See *tunnel mtu*.

### *tunnel peer-identity*

- Use to configure the peer identity (selector) that ISAKMP uses. Specify the identity using one of the following keywords:
  - **address**—Specifies an IP address as the peer identity
  - **subnet**—Specifies a subnet as the peer identity
  - **range**—Specifies a range of IP addresses as the peer identity

- Example 1

```
host1(config-if)#tunnel peer-identity range 10.10.1.1 10.10.2.2
```

- Example 2

```
host1(config-if)#tunnel peer-identity subnet 130.10.1.1 255.255.255.0
```

- Use the **no** version to remove the peer identity.
- See *tunnel peer-identity*.

### *tunnel pfs group*

- Use to configure perfect forward secrecy (PFS) on this tunnel.
- Assign a Diffie-Hellman prime modulus group using one of the following keywords:
  - **1**—768-bit group
  - **2**—1024-bit group
  - **5**—1536-bit group

- Example

```
host1(config-if)#tunnel pfs group 5
```

- Use the **no** version to remove PFS from this tunnel.
- See *tunnel pfs group*.

### *tunnel session-key-inbound*

- Use to manually configure the authentication or encryption algorithm sets and session keys for inbound SAs on a tunnel. You can enter this command only on tunnels that have tunnel signaling set to manual.
- Use the online Help to see a list of available algorithm sets.
- Each key is an arbitrary hexadecimal string. If the algorithm set includes:
  - DES, create an 8-byte key using 16 hexadecimal characters
  - 3DES, create a 24-byte key using 48 hexadecimal characters

- MD5, create a 16-byte key using 32 hexadecimal characters
- SHA, create a 20-byte key using 40 hexadecimal characters
- Example

```
host1(config-if)#tunnel session-key-inbound esp-des-hmac-md5 a7bd567917bd5679
bd5678a7bd567917bd567917bd567678
```
- Use the **no** version to remove inbound session keys from a tunnel.
- See *tunnel session-key-inbound*.

#### ***tunnel session-key-outbound***

- Use to manually configure the authentication or encryption algorithm sets, SPI, and session keys for outbound SAs on a tunnel. You can enter this command only on tunnels that have tunnel signaling set to manual.
- Use the online Help to see a list of available algorithm sets.
- The SPI is a number in the range 256–4294967295 that identifies an SA.
- Each key is an arbitrary hexadecimal string. If the algorithm set includes:
  - DES, create an 8-byte key using 16 hexadecimal characters
  - 3DES, create a 24-byte key using 48 hexadecimal characters
  - MD5, create a 16-byte key using 32 hexadecimal characters
  - SHA, create a 20-byte key using 40 hexadecimal characters
- Example

```
host1(config-if)#tunnel session-key-outbound esp-3des-hmac-md5 421
567917bd567917bd567917bd545a17bd567917bd56784a7b
fda183bef567917bd567917bd567917b
```
- Use the **no** version to remove outbound session keys from a tunnel.
- See *tunnel session-key-outbound*.

#### ***tunnel signaling***

- Use to set the tunnel type to signaled (ISAKMP) or manual. Specify a keyword:
  - **isakmp**—Specifies to use ISAKMP/IKE to negotiate SAs and to establish keys
  - **manual**—Specifies that security parameters and keys are configured manually
- Example

```
host1(config-if)#tunnel signaling manual
```
- Use the **no** version to restore the default value, **isakmp**.
- See *tunnel signaling*.

#### ***tunnel source***

- Use to specify an existing interface address that serves as the tunnel's source address.
- For signaled IPsec tunnels in cable or DSL environments, you can optionally use an FQDN to identify the tunnel endpoint.
- Example  

```
host1(config-if)#tunnel source 10.10.2.8
```
- Use the **no** version to remove the tunnel source.
- See *tunnel source*.

#### *tunnel transform-set*

- Use to specify the transform set that ISAKMP uses during SA negotiations on this tunnel. You create transform sets using [“ipsec transform-set” on page 165](#).
- Example  

```
host1(config-if)#tunnel transform-set espSet
```
- Use the **no** version to remove the transform set from a tunnel.
- See *tunnel transform-set*.

## Configuring DPD and IPsec Tunnel Failover

You can use the **ipsec option dpd** command to enable dead peer detection (DPD) on the router. DPD is also known as IKE keepalive. If an IPsec tunnel destination backup is configured, the router redirects traffic to the alternate destination when DPD detects a disconnection between the E Series router and the regular tunnel destination. See [“tunnel destination backup” on page 172](#).

To enable DPD and create an alternate IPsec tunnel destination for failover:

1. Enable DPD on the router.  

```
host1(config)#ipsec option dpd
```
2. Enter virtual router mode. Specify the VR that contains the source and destination addresses assigned to the tunnel interface (that is, the transport virtual router context).  

```
host1(config)#virtual-router vrA
host1:vrA(config)#
```
3. Create an IPsec tunnel, and specify the transport VR.  

```
host1:vrA(config)#interface tunnel ipsec:Aottawa2boston transport-virtual-router
default
host1:vrA(config-if)#
```
4. Specify the address or identity of the tunnel destination backup endpoint.  

```
host1:vrA(config-if)#tunnel destination backup identity branch500.customer77.isp.net
```

#### *ipsec option dpd*

- Use to enable dead peer detection (DPD) on the router. DPD is also known as IKE keepalive.
- You configure DPD on a per-virtual router basis.
- Both peers must support DPD.
- Example

```
host1(config)#ipsec option dpd
```
- Use the **no** version to restore the default, which disables DPD.
- See *ipsec option dpd*.

### *tunnel destination backup*

- Use to specify the address or identity of the remote IPsec tunnel endpoint that is a backup tunnel destination. When DPD detects a disconnection between the E Series router and the regular IPsec tunnel destination, the router redirects traffic to the tunnel destination backup, and vice versa.
- You can use either the IP address or fully qualified domain name (FQDN) to identify the backup IPsec tunnel, however you must use the same type of identity that is used to specify the regular tunnel destination.
  - For signaled IPsec tunnels in cable or DSL environments, use the FQDN to identify the tunnel destination backup, which does not have a fixed IP address.
  - The identity string can include an optional *user@* specification preceding the FQDN (this is also known as a user FQDN).



**NOTE:** If you use a FQDN to specify the IPsec tunnel destination backup, the tunnel is not initiated by the ERX router. However, the router does respond to negotiations for this backup tunnel.

- Examples

```
host1(config-if)#tunnel destination backup 10.10.11.15
host1(config-if)#tunnel destination backup identity branch245.customer88.isp.net
host1(config-if)#tunnel destination backup identity
user4925@branch245.customer88.isp.net
```
- Use the **no** version to restore the default in which the regular tunnel destination is also the backup tunnel destination.
- See *tunnel destination backup*.

## Defining an IKE Policy

IKE policies define parameters that the router uses during IKE phase 1 negotiation.

To create an IKE policy:

```
host1(config)#ipsec ike-policy-rule 3
```

```
host1(config-ike-policy)#
```

You can then set the following parameters, or use the default settings:

- Allow aggressive mode negotiation.  

```
host1(config-ike-policy)#aggressive-mode
```
- Specify the authentication method.  

```
host1(config-ike-policy)#authentication pre-share
```
- Specify the encryption algorithm.  

```
host1(config-ike-policy)#encryption 3des
```
- Assign a Diffie-Hellman group.  

```
host1(config-ike-policy)#group 5
```
- Set the hash algorithm.  

```
host1(config-ike-policy)#hash md5
```
- Specify the lifetime of IKE SAs created using this policy.  

```
host1(config-ike-policy)#lifetime 360
```

### *aggressive-mode*

- Use to enable aggressive mode negotiation for the tunnel.
- If you specify aggressive mode negotiation, the tunnel proposes aggressive mode to the peer in connections that the policy initiates.
- If the peer initiates a negotiation, the tunnel accepts the negotiation if the mode matches this policy.
- Use the **accepted** keyword to accept aggressive mode when proposed by peers
- Use the **requested** keyword to request aggressive mode when negotiating with peers
- Use the **required** keyword to only request and accept aggressive mode when negotiating with peers.
- Example  

```
host1(config-ike-policy)#aggressive-mode accepted
```
- Use the **no** version to set the negotiation mode to main mode.
- See *aggressive-mode*.

### *authentication*

- Use to specify the authentication method the router uses in the IKE policy: preshared keys or RSA signature.
- Example  

```
host1(config-ike-policy)#authentication pre-share
```
- Use the **no** version to restore the default, preshared keys.
- See *authentication*.

**encryption**

- Use to specify one of the following encryption algorithms to use in the IKE policy:
  - **3des**—168-bit 3DES-CBC
  - **des**—56-bit DES-CBC
- Example  
    `host1(config-ike-policy)#encryption 3des`
- Use the **no** version to restore the default encryption algorithm, 3DES.
- See *encryption*.

**group**

- Use to assign a Diffie-Hellman group to the IKE policy. Specify:
  - **1**—768-bit group
  - **2**—1024-bit group
  - **5**—1536-bit group
- Example  
    `host1(config-ike-policy)#group 5`
- Use the **no** version to restore the default.
- See *group*.

**hash**

- Use to set the hash algorithm for the IKE policy:
  - **md5**—MD5 (HMAC variant)
  - **sha**—SHA-1 (HMAC variant)
- Example  
    `host1(config-ike-policy)#hash md5`
- Use the **no** version to restore the default, **sha**.
- See *hash*.

**ipsec ike-policy-rule****ipsec isakmp-policy-rule**

**NOTE:** The command replaces the `ipsec isakmp-policy-rule` command, which may be removed completely in a future release.

- Use to define an IKE policy.
- When you enter the command, you include a number that identifies the policy and assigns a priority to the policy. You can number policies in the range 1–10000, with 1 having the highest priority.
- You can add up to 10 IKE policies per router.
- Example
 

```
host1(config)#ipsec ike-policy-rule 3
host1(config-ike-policy)#
```
- Use the **no** version to remove policies. If you do not include a priority number with the **no** version, all policies are removed.
- See *ipsec ike-policy-rule*.
- See *ipsec isakmp-policy-rule*.

### *lifetime*

- Use to specify the lifetime of IKE SAs.
- The range is 60–86400 seconds.
 

```
host1(config-ike-policy)#lifetime 360
```
- Use the **no** version to reset the SA lifetime to the default, 28800 seconds.
- See *lifetime*.

## Refreshing SAs

To refresh ISAKMP/IKE or IPsec SAs:

```
host1(config)#ipsec clear sa tunnel ipsec:Aottawa2boca phase 2
```

### *ipsec clear sa*

- Use to refresh ISAKMP/IKE or IPsec SAs.
- To reinitialize all SAs, use the **all** keyword.
- To reinitialize SAs on a specific tunnel, use the **tunnel** keyword.
- To reinitialize SAs on tunnels that are in a specific state, use the **state** keyword.
- To specify the type of SA to be reinitialized, ISAKMP/IKE or IPSEC, use the **phase** keyword.
- Example
 

```
host1(config)#ipsec clear sa all phase 2
```
- There is no **no** version.
- See *ipsec clear sa*.

## Enabling Notification of Invalid Cookies

The IKE protocol enables peers to exchange informational messages. The payload of these messages can be a notify type or a delete type. These messages are expected to be protected (encrypted) by the keys negotiated by the peers when they establish a security association as a result of the IKE phase 1 exchange.

If a responder peer does not recognize the initiator-responder cookie pair, it can send an invalid cookie notification message to the initiator. The responder might fail to recognize the cookie pair because it has lost the cookie, or because it deleted the cookie and then the peer lost the delete notification. Upon receipt of the invalid cookie notification, the initiator peer can delete the phase 1 state.

The ability to send the invalid cookie message is disabled by default. You can issue the **ipsec option tx-invalid-cookie** command to enable the feature on a per-transport-VR basis.

Even when you configure this feature, the E Series router does not respond when it receives an invalid cookie notification. These notifications are unprotected by a phase 1 key exchange and therefore are subject to denial-of-service (DOS) attacks. Instead, the E Series router can determine when a phase 1 relationship has gone stale by timeouts or use of dead peer detection (DPD). For this reason, this feature is useful only when the E Series router is a responding peer for non-E Series devices that cannot detect when the phase 1 relationship goes stale.

### *ipsec option tx-invalid-cookie*

- Use to enable the router to send an invalid cookie notification to an IKE peer when the router does not recognize the initiator-responder cookie pair.
- Example

```
host1(config)#ipsec option tx-invalid-cookie
```
- Use the **no** version to restore the default, disabling the ability to send an invalid cookie notification.
- See *ipsec option tx-invalid-cookie*.

---

## Configuration Examples

This section contains examples of two IPsec applications. The first example shows a customer who replaces a leased line network with an IPsec network that allows the company to connect its corporate locations over the Internet. The second example provides leased line replacement to two customers who use address schemes in the same range.

### Configuration Notes

Both the local and remote identities shown in these examples serve two purposes:

- They identify multiple IPsec tunnels between the same endpoints.




- They filter traffic going into and coming out of the tunnels so that it is within the specified range. If the configuration requires that only one IPsec tunnel exists between two endpoints and no traffic filtering is required, you can omit the **tunnel local-identity** and **tunnel peer-identity** commands.

### Example 1


In [Figure 15 on page 177](#) customer A is using Frame Relay to connect its corporate offices in three cities: Boston, Ottawa, and Boca.

 **Figure 15: Customer A's Corporate Frame Relay Network**

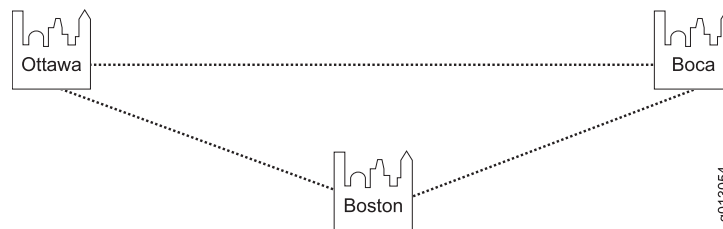

Customer A hires ISP-X to provide a leased line replacement over an IP infrastructure using IPsec. ISP-X can offer a replacement for long-haul Frame Relay links by creating IPsec tunnels to carry customer A's traffic securely between the sites over the public or ISP-provided IP network. This alternative costs only a fraction of the price of the Frame Relay links. [Figure 16 on page 177](#) shows the connectivity scheme.

 **Figure 16: ISP-X Uses ERX Routers to Connect Corporate Offices over the Internet**

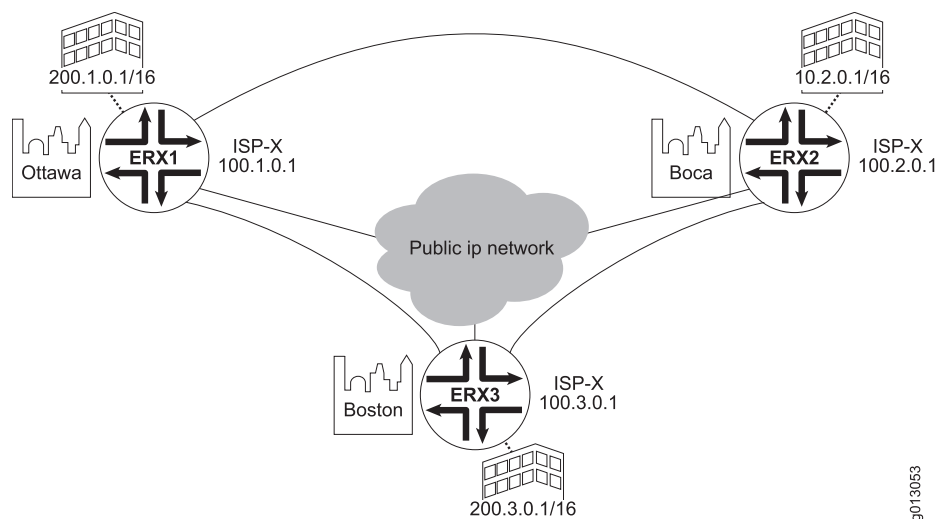

To configure the connections as shown in [Figure 16 on page 177](#):

1. On each ERX router, create a protection suite that provides 3DES encryption with SHA-1 authentication on every packet.

```

erx1(config)#ipsec transform-set customerAprotection esp-3des-hmac-sha
erx2(config)#ipsec transform-set customerAprotection esp-3des-hmac-sha
erx3(config)#ipsec transform-set customerAprotection esp-3des-hmac-sha

```

2. On each ERX router, create preshared keys for the three routers to use to authenticate each other:

```
erx1(config)#ipsec key manual pre-share 100.2.0.1
erx1(config-manual-key)#key customerASecret
erx1(config-manual-key)#exit
erx1(config)#ipsec key manual pre-share 100.3.0.1
erx1(config-manual-key)#key customerASecret
erx1(config-manual-key)#exit
erx2(config)#ipsec key manual pre-share 100.1.0.1
erx2(config-manual-key)#key customerASecret
erx2(config-manual-key)#exit
erx2(config)#ipsec key manual pre-share 100.3.0.1
erx2(config-manual-key)#key customerASecret
erx2(config-manual-key)#exit
erx3(config)#ipsec key manual pre-share 100.1.0.1
erx3(config-manual-key)#key customerASecret
erx3(config)#ipsec key manual pre-share 100.2.0.1
erx3(config-manual-key)#key customerASecret
erx3(config-manual-key)#exit
```

3. On erx1 create two IPsec tunnels, one to carry customer A's traffic between Ottawa and Boston and another to carry the traffic between Ottawa and Boca:

Tunnel 1:

```
erx1(config)#interface tunnel ipsec:Aottawa2boston
erx1(config-if)#tunnel transform-set customerAprotection
erx1(config-if)#tunnel local-identity subnet 200.1.0.0 255.255.0.0
erx1(config-if)#tunnel peer-identity subnet 200.3.0.0 255.255.0.0
erx1(config-if)#tunnel source 100.1.0.1
erx1(config-if)#tunnel destination 100.3.0.1
erx1(config-if)#ip address 200.3.0.0 255.255.0.0
erx1(config-if)#exit
```

Tunnel 2:

```
erx1(config)#interface tunnel ipsec:Aottawa2boca
erx1(config-if)#tunnel transform-set customerAprotection
erx1(config-if)#tunnel local-identity subnet 200.1.0.0 255.255.0.0
erx1(config-if)#tunnel peer-identity subnet 200.2.0.0 255.255.0.0
erx1(config-if)#tunnel source 100.1.0.1
erx1(config-if)#tunnel destination 100.2.0.1
erx1(config-if)#ip address 200.2.0.0 255.255.0.0
erx1(config-if)#exit
```

4. On erx2 create two IPsec tunnels, one to carry customer A's traffic between Boca and Ottawa and another to carry the traffic between Boca and Boston:

Tunnel 1:

```
erx2(config)#interface tunnel ipsec:Aboca2ottawa
erx2(config-if)#tunnel transform-set customerAprotection
erx2(config-if)#tunnel local-identity subnet 200.2.0.0 255.255.0.0
erx2(config-if)#tunnel peer-identity subnet 200.1.0.0 255.255.0.0
erx2(config-if)#tunnel source 100.2.0.1
erx2(config-if)#tunnel destination 100.1.0.1
```

```

erx2(config-if)#ip address 200.1.0.0 255.255.0.0
erx2(config-if)#exit

```

Tunnel 2:

```

erx2(config)#interface tunnel ipsec:Aboca2boston
erx2(config-if)#tunnel transform-set customerAprotection
erx2(config-if)#tunnel local-identity subnet 200.2.0.0 255.255.0.0
erx2(config-if)#tunnel peer-identity subnet 200.3.0.0 255.255.0.0
erx2(config-if)#tunnel source 100.2.0.1
erx2(config-if)#tunnel destination 100.3.0.1
erx2(config-if)#ip address 200.3.0.0 255.255.0.0
erx2(config-if)#exit

```

5. Finally, on erx3 create two IPsec tunnels, one to carry customer A's traffic between Boston and Ottawa and another to carry the traffic between Boston and Boca:

Tunnel 1:

```

erx3(config)#interface tunnel ipsec:Aboston2ottawa
erx3(config-if)#tunnel transform-set customerAprotection
erx3(config-if)#tunnel local-identity subnet 200.3.0.0 255.255.0.0
erx3(config-if)#tunnel peer-identity subnet 200.1.0.0 255.255.0.0
erx3(config-if)#tunnel source 100.3.0.1
erx3(config-if)#tunnel destination 100.1.0.1
erx3(config-if)#ip address 200.1.0.0 255.255.0.0
erx3(config-if)#exit

```

Tunnel 2:

```

erx3(config)#interface tunnel ipsec:Aboston2boca
erx3(config-if)#tunnel transform-set customerAprotection
erx3(config-if)#tunnel local-identity subnet 200.3.0.0 255.255.0.0
erx3(config-if)#tunnel peer-identity subnet 200.2.0.0 255.255.0.0
erx3(config-if)#tunnel source 100.3.0.1
erx3(config-if)#tunnel destination 100.2.0.1
erx3(config-if)#ip address 200.2.0.0 255.255.0.0
erx3(config-if)#exit


```

The configuration is complete. Now customer A traffic between different cities flows through the public, or untrusted, IP network inside a tunnel, where each packet is encrypted and authenticated. Of course, this example shows the basic secure encapsulation of customer traffic over the untrusted IP network. You can add features such as key refreshing.

**Example 2** Example 2, shown in [Figure 17 on page 180](#), enhances the previous example by having the same ISP-X providing leased line replacement to two customers who use address schemes in the same range. There are two ways to solve scenarios in which different customers use similar IP address schemes:

- One solution is to have different transport virtual routers—a configuration similar to example 1, except that a different VR domain is possible.
- Another solution, as described in this example, simply duplicates the endpoints for the transport VR. This example assumes that the transport VR is the default VR.

 Figure 17: Connecting Customers Who Use Similar Address Schemes

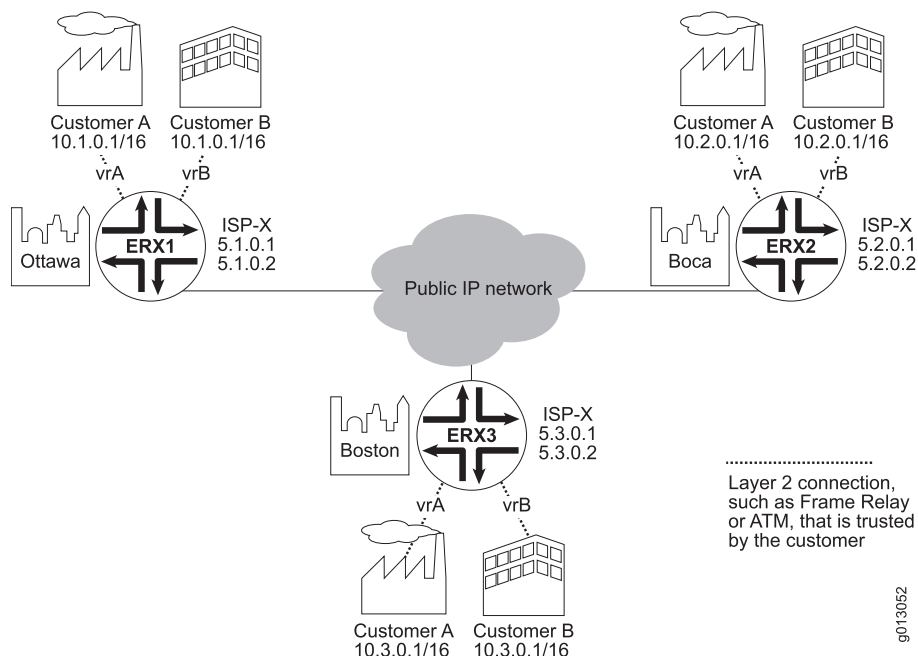

To configure the connections as shown in [Figure 17 on page 180](#):

1. On each ERX router, create a protection suite that provides customer A with 3DES encryption and SHA-1 authentication, and customer B with AH authentication using MD5.

```

erx1(config)#ipsec transform-set customerAprotection esp-3des-hmac-sha
erx1(config)#ipsec transform-set customerBprotection ah-hmac-md5
erx2(config)#ipsec transform-set customerAprotection esp-3des-hmac-sha
erx2(config)#ipsec transform-set customerBprotection ah-hmac-md5
erx3(config)#ipsec transform-set customerAprotection esp-3des-hmac-sha
erx3(config)#ipsec transform-set customerBprotection ah-hmac-md5

```

2. On each ERX router, create a protection suite for the three routers to use to authenticate each other:

```

erx1(config)#ipsec key manual pre-share 5.2.0.1
erx1(config-manual-key)#key customerASecret
erx1(config-manual-key)#exit
erx1(config)#ipsec key manual pre-share 5.3.0.1
erx1(config-manual-key)#key customerASecret
erx1(config-manual-key)#exit
erx1(config)#ipsec key manual pre-share 5.2.0.2
erx1(config-manual-key)#key customerBSecret
erx1(config-manual-key)#exit
erx1(config)#ipsec key manual pre-share 5.3.0.2
erx1(config-manual-key)#key customerBSecret
erx1(config-manual-key)#exit
erx2(config)#ipsec key manual pre-share 5.1.0.1
erx2(config-manual-key)#key customerASecret
erx2(config-manual-key)#exit
erx2(config)#ipsec key manual pre-share 5.3.0.1

```

```

erx2(config-manual-key)#key customerASecret
erx2(config-manual-key)#exit
erx2(config)#ipsec key manual pre-share 5.1.0.2
erx2(config-manual-key)#key customerBSecret
erx2(config-manual-key)#exit
erx2(config)#ipsec key manual pre-share 5.3.0.2
erx2(config-manual-key)#key customerBSecret
erx2(config-manual-key)#exit
erx3(config)#ipsec key manual pre-share 5.1.0.1
erx3(config-manual-key)#key customerASecret
erx3(config-manual-key)#exit
erx3(config)#ipsec key manual pre-share 5.2.0.1
erx3(config-manual-key)#key customerASecret
erx3(config-manual-key)#exit
erx3(config)#ipsec key manual pre-share 5.1.0.2
erx3(config-manual-key)#key customerBSecret
erx3(config-manual-key)#exit
erx3(config)#ipsec key manual pre-share 5.2.0.2
erx3(config-manual-key)#key customerBSecret
erx3(config-manual-key)#exit

```

3. On erx1, create two IPsec tunnels, one to carry customer A's traffic and another to carry customer B's traffic. You must create each pair of tunnels in the virtual routers where the IP interfaces reaching those customers are defined. Create the endpoints for the tunnels in the ISP default virtual router.

Virtual router A:

```

erx1(config)#virtual-router vrA
erx1:vrA(config)#

```

Tunnel from Ottawa to Boston on virtual router A:

```

erx1:vrA(config)#interface tunnel ipsec:Aottawa2boston transport-virtual-router
default
erx1:vrA(config-if)#tunnel transform-set customerAprotection
erx1:vrA(config-if)#tunnel local-identity subnet 10.1.0.0 255.255.0.0
erx1:vrA(config-if)#tunnel peer-identity subnet 10.3.0.0 255.255.0.0
erx1:vrA(config-if)#tunnel source 5.1.0.1
erx1:vrA(config-if)#tunnel destination 5.3.0.1
erx1:vrA(config-if)#ip address 10.3.0.0 255.255.0.0
erx1:vrA(config-if)#exit

```

Tunnel from Ottawa to Boca on virtual router A:

```

erx1:vrA(config)#interface tunnel ipsec:Aottawa2boca transport-virtual-router default
erx1:vrA(config-if)#tunnel transform-set customerAprotection
erx1:vrA(config-if)#tunnel local-identity subnet 10.1.0.0 255.255.0.0
erx1:vrA(config-if)#tunnel peer-identity subnet 10.2.0.0 255.255.0.0
erx1:vrA(config-if)#tunnel source 5.1.0.1
erx1:vrA(config-if)#tunnel destination 5.2.0.1
erx1:vrA(config-if)#ip address 10.2.0.0 255.255.0.0
erx1:vrA(config-if)#exit

```

Virtual router B:

```

erx1(config)#virtual-router vrB
erx1:vrB(config)#

```

Tunnel from Ottawa to Boston on virtual router B:

```

erx1:vrB(config)#interface tunnel ipsec:Bottawa2boston transport-virtual-router
default
erx1:vrB(config-if)#tunnel transform-set customerBprotection
erx1:vrB(config-if)#tunnel local-identity subnet 10.1.0.0 255.255.0.0
erx1:vrB(config-if)#tunnel peer-identity subnet 10.3.0.0 255.255.0.0
erx1:vrB(config-if)#tunnel source 5.1.0.2
erx1:vrB(config-if)#tunnel destination 5.3.0.2
erx1:vrB(config-if)#ip address 10.3.0.0 255.255.0.0
erx1:vrB(config-if)#exit

```

Tunnel from Ottawa to Boca on virtual router B:

```

erx1:vrB(config)#interface tunnel ipsec:Bottawa2boca transport-virtual-router default
erx1:vrB(config-if)#tunnel transform-set customerBprotection
erx1:vrB(config-if)#tunnel local-identity subnet 10.1.0.0 255.255.0.0
erx1:vrB(config-if)#tunnel peer-identity subnet 10.2.0.0 255.255.0.0
erx1:vrB(config-if)#tunnel source 5.1.0.2
erx1:vrB(config-if)#tunnel destination 5.2.0.2
erx1:vrB(config-if)#ip address 10.2.0.0 255.255.0.0
erx1:vrB(config-if)#exit

```

4. On erx2, create two IPsec tunnels, one to carry customer A's traffic and another to carry customer B's traffic. You must create each pair of tunnels in the virtual routers where the IP interfaces reaching those customers are defined. Create the endpoints for the tunnels in the ISP default virtual router.

Virtual router A:

```

erx2(config)#virtual-router vrA
erx2:vrA(config)#

```

Tunnel from Boca to Ottawa on virtual router A:

```

erx2:vrA(config)#interface tunnel ipsec:Aboca2ottawa transport-virtual-router default
erx2:vrA(config-if)#tunnel transform-set customerAprotection
erx2:vrA(config-if)#tunnel local-identity subnet 10.2.0.0 255.255.0.0
erx2:vrA(config-if)#tunnel peer-identity subnet 10.1.0.0 255.255.0.0
erx2:vrA(config-if)#tunnel source 5.2.0.1
erx2:vrA(config-if)#tunnel destination 5.1.0.1
erx2:vrA(config-if)#ip address 10.1.0.0 255.255.0.0
erx2:vrA(config-if)#exit

```

Tunnel from Boca to Boston on virtual router A:

```

erx2:vrA(config)#interface tunnel ipsec:Aboca2boston transport-virtual-router default
erx2:vrA(config-if)#tunnel transform-set customerAprotection
erx2:vrA(config-if)#tunnel local-identity subnet 10.2.0.0 255.255.0.0
erx2:vrA(config-if)#tunnel peer-identity subnet 10.3.0.0 255.255.0.0
erx2:vrA(config-if)#tunnel source 5.2.0.1
erx2:vrA(config-if)#tunnel destination 5.3.0.1
erx2:vrA(config-if)#ip address 10.3.0.0 255.255.0.0
erx2:vrA(config-if)#exit

```

Virtual router B:

```

erx2(config)#virtual-router vrB
erx2:vrB(config)#

```

Tunnel from Boca to Ottawa on virtual router B:

```

erx2:vrB(config)#interface tunnel ipsec:Bboca2ottawa transport-virtual-router default
erx2:vrB(config-if)#tunnel transform-set customerBprotection
erx2:vrB(config-if)#tunnel local-identity subnet 10.2.0.0 255.255.0.0
erx2:vrB(config-if)#tunnel peer-identity subnet 10.1.0.0 255.255.0.0
erx2:vrB(config-if)#tunnel source 5.2.0.2
erx2:vrB(config-if)#tunnel destination 5.1.0.2
erx2:vrB(config-if)#ip address 10.1.0.0 255.255.0.0
erx2:vrB(config-if)#exit

```

Tunnel from Boca to Boston on virtual router B:

```

erx2:vrB(config)#interface tunnel ipsec:Bboca2boston transport-virtual-router default
erx2:vrB(config-if)#tunnel transform-set customerBprotection
erx2:vrB(config-if)#tunnel local-identity subnet 10.2.0.0 255.255.0.0
erx2:vrB(config-if)#tunnel peer-identity subnet 10.3.0.0 255.255.0.0
erx2:vrB(config-if)#tunnel source 5.2.0.2
erx2:vrB(config-if)#tunnel destination 5.3.0.2
erx2:vrB(config-if)#ip address 10.3.0.0 255.255.0.0
erx2:vrB(config-if)#exit

```

5. Last, on erx3, create two IPsec tunnels, one to carry customer A's traffic and another to carry customer B's traffic.

Virtual router A:

```

erx3(config)#virtual-router vrA
erx3:vrA(config)#

```

Tunnel from Boston to Ottawa on virtual router A:

```

erx3:vrA(config)#interface tunnel ipsec:Aboston2ottawa transport-virtual-router
default
erx3:vrA(config-if)#tunnel transform-set customerAprotection
erx3:vrA(config-if)#tunnel local-identity subnet 10.3.0.0 255.255.0.0
erx3:vrA(config-if)#tunnel peer-identity subnet 10.1.0.0 255.255.0.0
erx3:vrA(config-if)#tunnel source 5.3.0.1
erx3:vrA(config-if)#tunnel destination 5.1.0.1
erx3:vrA(config-if)#ip address 10.1.0.0 255.255.0.0
erx3:vrA(config-if)#exit

```

Tunnel from Boston to Boca on virtual router A:

```

erx3:vrA(config)#interface tunnel ipsec:Aboston2boca transport-virtual-router default
erx3:vrA(config-if)#tunnel transform-set customerAprotection
erx3:vrA(config-if)#tunnel local-identity subnet 10.3.0.0 255.255.0.0
erx3:vrA(config-if)#tunnel peer-identity subnet 10.2.0.0 255.255.0.0
erx3:vrA(config-if)#tunnel source 5.3.0.1
erx3:vrA(config-if)#tunnel destination 5.2.0.1
erx3:vrA(config-if)#ip address 10.1.0.0 255.255.0.0
erx3:vrA(config-if)#exit

```

Virtual router B:

```

erx3(config)#virtual-router vrB
erx3:vrB(config)#

```

Tunnel from Boston to Ottawa on virtual router B:

```
erx3:vrB(config)#interface tunnel ipsec:Bboston2ottawa transport-virtual-router
default
erx3:vrB(config-if)#tunnel transform-set customerBprotection
erx3:vrB(config-if)#tunnel local-identity subnet 10.3.0.0 255.255.0.0
erx3:vrB(config-if)#tunnel peer-identity subnet 10.1.0.0 255.255.0.0
erx3:vrB(config-if)#tunnel source 5.3.0.1
erx3:vrB(config-if)#tunnel destination 5.1.0.1
erx3:vrB(config-if)#ip address 10.1.0.0 255.255.0.0
erx3:vrB(config-if)#exit
```

Tunnel from Boston to Boca on virtual router B:

```
erx3:vrB(config)#interface tunnel ipsec:Bboston2boca transport-virtual-router default
erx3:vrB(config-if)#tunnel transform-set customerBprotection
erx3:vrB(config-if)#tunnel local-identity subnet 10.3.0.0 255.255.0.0
erx3:vrB(config-if)#tunnel peer-identity subnet 10.2.0.0 255.255.0.0
erx3:vrB(config-if)#tunnel source 5.3.0.1
erx3:vrB(config-if)#tunnel destination 5.2.0.1
erx3:vrB(config-if)#ip address 10.2.0.0 255.255.0.0
erx3:vrB(config-if)#exit
```

The configuration is complete. Customer A's traffic and customer B's traffic can flow through the public, or untrusted, IP network inside a tunnel, where each packet is encrypted and authenticated.

---

## Monitoring IPsec

This section contains information about troubleshooting and monitoring IPsec.

### System Event Logs

To troubleshoot and monitor IPsec, use the following system event logs:

- *auditIpsec*—Lower layers of IKE SA negotiations
- *ikepki*—Upper layers of IKE SA negotiations
- *stTunnel*—Secure tunnel interface

For more information about using event logs, see the *JunosE System Event Logging Reference Guide*.

### show Commands

To view your IPsec configuration and to monitor IPsec tunnels and statistics, use the following **show** commands.

***show ipsec ike-policy-rule***

***show ike policy-rule***



**NOTE:** The **show ipsec ike-policy-rule** command replaces the **show ipsec isakmp-policy-rule** command, which may be removed completely in a future release.

---



- Use to display the configuration of IKE phase 1 policy rules.
- Field descriptions
  - Protection suite priority—Priority number assigned to the policy rule
  - encryption algorithm—Encryption algorithm used in the IKE policy: des, 3des
  - hash algorithm—Hash algorithm used in the IKE policy: SHA, MD5
  - authentication method—Authentication method used in the IKE policy: RSA signature, preshared keys
  - Diffie-Hellman group—Size of the Diffie-Hellman group: 768-bit, 1024-bit, 1536-bit
  - lifetime—Lifetime of SAs created with this policy: 60 to 86400 seconds
  - aggressive mode—Allowed or not allowed

- Example

```
host1#show ipsec ike-policy-rule
```

```
IKE Policy Rules:
```

```
Protection suite priority: 5
```

```
  encryption algorithm :3DES Triple Data Encryption Standard(168 bit keys)
    hash algorithm      :SHA Secure Hash Standard
  authentication method:RSA Signatures
  Diffie-Hellman group  :5 (1536 bit)
    lifetime            :7200 seconds
  aggressive mode      :Not Allowed
```

```
Protection suite priority: 6
```

```
  encryption algorithm :3DES Triple Data Encryption Standard(168 bit keys)
    hash algorithm      :SHA Secure Hash Standard
  authentication method:Pre Shared Keys
  Diffie-Hellman group  :2 (1024 bit)
    lifetime            :28800 seconds
  aggressive mode      :Not Allowed
```

- See *show ipsec ike-policy-rule*.
- See *show ike policy-rule*.

*show ipsec ike-sa*

*show ike sa*



**NOTE:** The *show ipsec ike-sa* command replaces the *show ike sa* command, which may be removed completely in a future release.

- Use to display IKE phase 1 SAs running on the router.
- Field descriptions
  - Local:Port—Local IP address and UDP port number of phase 1 negotiation
  - Remote:Port—Remote IP address and UDP port number of phase 1 negotiation
  - Time(Sec)—Time remaining in phase 1 lifetime, in seconds

- State—Current state of the phase 1 negotiation. Corresponds to the messaging state in the main mode and aggressive mode negotiations. Possible states are:
  - AM\_SA\_I—Initiator has sent initial aggressive mode SA payload and key exchange to the responder
  - AM\_SA\_R—Responder has sent aggressive mode SA payload and key exchange to the initiator
  - AM\_FINAL\_I—Initiator has finished aggressive mode negotiation
  - AM\_DONE\_R—Responder has finished aggressive mode negotiation
  - MM\_SA\_I—Initiator has sent initial main mode SA payload to the responder
  - MM\_SA\_R—Responder has sent a response to the initial main mode SA
  - MM\_KE\_I—Initiator has sent initial main mode key exchange to the responder
  - MM\_KE\_R—Responder has sent a response to the key exchange
  - MM\_FINAL\_I—Initiator has sent the final packet in the main mode negotiation
  - MM\_FINAL\_R—Responder has finished main mode negotiation
  - MM\_DONE\_I—Initiator has finished main mode negotiation
  - DONE—Phase 1 SA negotiation is complete, as evidenced by receipt of some phase 2 messages
- Local Cookie—Unique identifier (SPI) for the local phase 1 IKE SA
- Remote Cookie—Unique identifier (SPI) for the remote phase 1 IKE SA
- Example

```
host1# show ipsec ike-sa
IKE Phase 1 SA's:
```

| Local:Port      | Remote:Port     | Time(Sec) | State | Local Cookie       | Remote Cookie      |
|-----------------|-----------------|-----------|-------|--------------------|--------------------|
| 195.0.0.100:500 | 195.0.0.200:500 | 1551      | DONE  | 0x90ee723e6cb0c016 | 0xf7d3651e93d56431 |
| 195.0.0.100:500 | 195.0.0.200:500 | 1552      | DONE  | 0x821bccf81dcedbb0 | 0x35152bdb7a9c734e |
| 195.0.1.100:500 | 195.0.1.200:500 | 1687      | DONE  | 0x1b4fbcebe36d1b16 | 0xed742166a305a6a0 |
| 195.0.1.100:500 | 195.0.1.200:500 | 1687      | DONE  | 0xacf3acd1b3555b6a | 0x0af9edbc95622869 |
| 195.0.2.100:500 | 195.0.2.200:500 | 1688      | DONE  | 0x3153379b32d8c936 | 0x17f5d77f9badc3cf |
| 195.0.2.100:500 | 195.0.2.200:500 | 1688      | DONE  | 0x6573dcbc9bf31fae | 0x7af8b4d13078b463 |
| 195.0.3.100:500 | 195.0.3.200:500 | 1685      | DONE  | 0xdc7df648fcac375a | 0x0346752d2881d5c5 |
| 195.0.3.100:500 | 195.0.3.200:500 | 1685      | DONE  | 0xe776e9ffb6678635 | 0x8de857af1c681874 |
| 195.0.4.100:500 | 195.0.4.200:500 | 1690      | DONE  | 0x16410d890500e94e | 0xbd47831b55e81c27 |

- See *show ipsec ike-sa*.
- See *show ike sa*.

### *show ipsec lifetime*

- Use to display the configured IPsec default lifetime.
- Example

```
host1#show ipsec lifetime
Default lifetime in seconds is '7200'.
Default lifetime in kilobytes is '4294967295'.
```

- See *show ipsec lifetime*.

### ***show ipsec local-endpoint***

- Use to display the address and transport virtual router of local endpoints.
- To display the local endpoint of a specific transport virtual router, include the virtual router name.
- Example

```
host1#show ipsec local-endpoint transport-virtual-router default
Local endpoint for transport-virtual-router default is '0.0.0.0'.
```

- See *show ipsec local-endpoint*.

### ***show ipsec option***

- Use to display the status, enabled or disabled, of IPsec options configured on the current virtual router. Information is displayed for the following options:
  - Dead peer detection (DPD)
  - Network Address Translation Traversal (NAT-T). For information about configuring and monitoring NAT-T on L2TP/IPsec tunnels, see [“Securing L2TP and IP Tunnels with IPsec” on page 303](#).
  - Transmission of invalid cookie notification in ISAKMP messages to peers
- Example

```
host1:vrA#show ipsec option

IPsec options:
Dead Peer Detection: disabled
NAT Traversal      : enabled
TX Invalid Cookie  : disabled
```

- See *show ipsec option*.

### ***show ipsec transform-set***

- Use to display transform sets configured on the router.
- To display a specific transform set, include the transform set name.
- Field descriptions
  - Transform-set—Displays the transforms in the transform set

- Example 1

```
host1#show ipsec transform-set
Transform-set: Highest security = {esp-3des-hmac-sha }.
Transform-set: transform-esp-3des-hmac-sha = {esp-3des-hmac-sha }.
```

- Example 2

```
host1#show ipsec transform-set transform-esp-3des-hmac-sha
Transform-set: transform-esp-3des-hmac-sha = {esp-3des-hmac-sha}.
```

- See *show ipsec transform-set*.

***show ipsec tunnel detail***

- Use to display the running configuration and statistics for each tunnel.
- Field descriptions
  - IPSEC tunnel—Name and state of tunnel for which information is displayed
  - Tunnel operational configuration—Configuration running on the tunnel
    - Tunnel type—Manual, signaled
    - Tunnel mtu—MTU size of the tunnel
    - Tunnel localEndpoint—IP address of local tunnel endpoint
    - Tunnel remoteEndpoint—IP address of remote tunnel endpoint
    - Tunnel source—IP address or FQDN of tunnel source
    - Tunnel destination—IP address or FQDN of tunnel destination
    - Tunnel backup destination—Alternate tunnel destination
    - Tunnel transport virtual router—Name of transport virtual router over which tunnel runs
    - Tunnel transform set—Tunnel transform set in use on this tunnel
    - Tunnel local identity—IP address of local endpoint identity that ISAKMP uses
    - Tunnel peer identity—IP address of peer endpoint identity that ISAKMP uses
    - Tunnel outbound spi/SA—SPI and SA in use on traffic sent to the tunnel (manual tunnels only)
    - Tunnel inbound spi/SA—SPI and SA in use on traffic received from the tunnel (manual tunnels only)
    - Tunnel lifetime seconds—Configured time-based lifetime in seconds
    - Tunnel lifetime kilobytes—Configured traffic-based lifetime in kilobytes
    - Tunnel pfs—PFS group in use on the tunnel: 0 (PFS is not in use), 1 (768-bit group), 2 (1024-bit group), 5 (1536-bit group)
    - Tunnel administrative state—Up, Down
  - Tunnel Operational Attributes—Displays statistics related to the tunnel lifetime
    - inbound/outboundSpi/SA—SPI in use on traffic received from or sent to the tunnel
    - inbound/outboundSa—SA in use on traffic received from or sent to the tunnel
    - inbound/outbound lifetime allowed—Negotiated time-based lifetime in seconds
    - inbound/outbound lifetime remaining—Number of seconds remaining before time-based lifetime expires

- inbound/outbound traffic allowed—Negotiated traffic-based lifetime in kilobytes
- inbound/outbound traffic remaining—Number of additional kilobytes that tunnel can send or receive before traffic-based lifetime expires
- Tunnel Statistics—Displays statistics on traffic received on and sent from this tunnel
  - InUserPackets—Number of user packets received
  - InUserOctets—Number of octets received from user packets
  - InAccPackets—Number of encapsulated packets received
  - InAccOctets—Number of octets received in encapsulated packets
  - InAuthErrors—Number of authentication errors received
  - InReplayErrors—Number of replay errors in received traffic
  - InPolicyErrors—Number of policy errors in received traffic
  - InOtherRxErrors—Number of packets received that have errors other than those listed above
  - InDecryptErrors—Number of decryption errors in received traffic
  - InPadErrors—Number of packets received that had invalid values after the packet was decrypted
  - OutUserPackets—Number of user packets sent
  - OutUserOctets—Number of octets sent in user packets
  - OutAccPackets—Number of encapsulated packets sent
  - OutAccOctets—Number of octets sent in encapsulated packets
  - OutPolicyErrors—Number of packets arriving at tunnel for encapsulation that do not meet specified tunnel identifier (selector)
  - OutOtherTxErrors—Number of outbound packets that have errors other than those listed above
- Example

```

host1#show ipsec tunnel detail
IPSEC tunnel r200000 is Up
Tunnel configuration:
  Tunnel type is signaled
  Tunnel mtu is 1440
  Tunnel local endpoint is 195.0.0.200
  Tunnel remote endpoint is 195.0.0.100
  Tunnel source is 195.0.0.200
  Tunnel destination is 195.0.0.100
  Tunnel backup destination is 0.0.0.0
  Tunnel transport virtual router is r
  Tunnel transform set is perf
  Tunnel local identity is ipAddress: 4.0.0.100
  Tunnel peer identity is ipAddress: 3.0.0.100
  Tunnel lifetime seconds is 7200
  Tunnel lifetime kilobytes is 1024000

```

```
Tunnel pfs is group 5
Tunnel administrative state is Up

Tunnel Operational Attributes:
  inboundSpi = 0x17270202, inboundSa = esp-3des-hmac-sha
  inbound lifetime: allowed 7200s, remaining 7100s
  inbound traffic: allowed 1024000KB, remaining 1023997KB

  outboundSpi = 0x283b0201, outboundSa = esp-3des-hmac-sha
  outbound lifetime: allowed 7200s, remaining 7100s
  outbound traffic: allowed 1024000KB, remaining 1023997KB

Tunnel Statistics:
  InUserPackets      15
  InUserOctets       1920
  InAccPackets       15
  InAccOctets        2760
  InAuthErrors       0
  InReplayErrors     0
  InPolicyErrors     0
  InOtherRxErrors    0
  InDecryptErrors    0
  InPadErrors        0

  OutUserPackets     15
  OutUserOctets      1920
  OutAccPackets      15
  OutAccOctets       2760
  OutPolicyErrors    0
  OutOtherTxErrors   0
```

- See *show ipsec tunnel*.

### ***show ipsec tunnel summary***

- Use to display a summary of all tunnels configured on the router.
- Field descriptions
  - Total number of ipsec interface—Number of tunnels configured on the router
  - Administrative status—Number of tunnels with an administrative status of enabled and disabled
  - Operational status—Number of tunnels with an operational status of up, down, lower layer down, not present
- Example

```
host1#show ipsec tunnel summary
Total number of ipsec interface is 40
Administrative status   enabled   disabled
                        40          0
Operational status  up      down    lower-down  not-present
                    40          0          0          0
```

- See *show ipsec tunnel*.

### ***show ipsec tunnel virtual-router***

- Use to display the status of tunnels configured on a virtual router.
- To display only tunnels that are in a specific state, use the **state** keyword.
- To display tunnels that are using a particular IP address, use the **ip** keyword.
- Field descriptions
  - For a description of fields, see the **show ipsec tunnel detail** command.
- Example

```
host1#show ipsec tunnel virtual-router default ip 10.255.1.13
IPSEC tunnel s011e3d0 is up
IPSEC tunnel s011e3d1 is up
IPSEC tunnel s012e3d0 is up
IPSEC tunnel s012e3d1 is up
IPSEC tunnel s013e3d0 is up
IPSEC tunnel s014e3d0 is up
IPSEC tunnel s014e3d1 is up
IPSEC tunnel s015e3d0 is up
```

- See *show ipsec tunnel*.

#### *show license ipsec-tunnels*

- Use to display the IPsec license key configured on the router and the number of tunnels allowed on the router.
- Example

```
host1#show license ipsec-tunnels
ipsec-tunnels license is 'g1k23b23eb2j' which allows 5000 tunnels with 1 IPsec
card and 7500 tunnels with 2 or more IPsec cards.
```
- See *show license*.





## CHAPTER 7

# Configuring Dynamic IPsec Subscribers

This chapter describes how to securely terminate IPsec remote access subscribers. These subscribers can reside on different VPNs and the router can support many VPNs simultaneously. It contains the following sections:

- [Dynamic IPsec Subscribers Overview on page 193](#)
- [Dynamic IPsec Subscribers Platform Considerations on page 197](#)
- [Dynamic IPsec Subscribers References on page 197](#)
- [Creating an IPsec Tunnel Profile on page 197](#)
- [Configuring IPsec Tunnel Profiles on page 198](#)
- [Defining IKE Policy Rules for IPsec Tunnels on page 204](#)
- [Monitoring IPsec Tunnel Profiles on page 205](#)

## Dynamic IPsec Subscribers Overview

---

You can use the E Series router to terminate users on multiple VPNs (that is, a private intranet where users can log in and access private servers). For the E Series router, VPNs appear as VRs or VRFs. Users that connect to the VPN terminate on the associated VR or VRF. The router contains a link between the VR or VRF and the private intranet containing the resources. This link can be a direct connection, or a tunnel (IPsec, IP-in-IP, GRE, or MPLS). Once establishing a connection, the router can pass traffic between the VPN and connected users.

The E Series router already supports termination of secure remote access subscribers using L2TP and IPsec. In this model, IPsec uses transport mode to “protect” PPP subscribers that use L2TP tunnels as described in RFC 3193. However, because they are handled by the PPP and L2TP application, IPsec has no direct information about the subscribers. By terminating dynamic IPsec subscribers, the IPsec protocol manages the subscribers completely.

## Dynamic Connection Setup

Dynamic secure remote access subscribers initiate connections to the E Series router by establishing an IPsec phase 1 security association (SA; also known as an IKE SA or P1) with the router.

After establishing a security association, the subscriber is instantiated in the IPsec software. Following this instantiation, the router initiates the extended authentication (Xauth) protocol exchange to invoke the user to enter a username and password. The router uses existing authentication, authorization, and accounting (AAA) functionality to authenticate the user data.

After granting access, the router instantiates an IP interface for the new subscriber as well as an access route for the IP address assigned to the subscriber on the terminating virtual router. The subscriber also obtains IP interface data (IP address, subnetwork mask, primary and secondary DNS address, primary and secondary WINS address, and so on) during a configuration exchange.

Once instantiated, an access router created, and the client successfully set with interface data parameters, the router can terminate the Xauth exchange and enable the IPsec layer and phase 2 SAs (IPsec SAs or P2s) can begin. Following these exchanges, the full data path is ready and subscribers can exchange packets with the VR on which they terminate.

## Dynamic Connection Teardown

The following events can trigger the teardown of a dynamic IPsec subscriber connection:

- All phase 1 and phase 2 SA deleted by a remote peer and no rekeying activity occurs for one minute
- Administrative logout
- IPsec card terminating the user becoming unavailable (for example, the card is reloading, disabled, or disconnected)
- Dead peer detection (DPD) reporting the phase 1 SA is unreachable
- Authentication, authorization, and accounting session or idle timeout values expire

## Dynamic IPsec Subscriber Recognition

The E Series router expects to receive the Xauth vendor ID from the remote peer for dynamic interface instantiation. The expected Xauth vendor ID is 0x09002689DFD6B712.



**NOTE:** The E Series router does not initiate connections to new subscribers. Acceptable vendor IDs are global to the router and not user-configurable.

Phase 2 SAs intended for static tunnels and those intended for dynamic subscribers do not share the same phase 1 SA. This means that dynamic phase 1 SAs are only used to negotiate dynamic phase 2 SAs. Conversely, phase 1 SAs that are not recognized as dynamic are used only to negotiate phase 2 SA static tunnels.

## Licensing Requirements

Each dynamic IPsec subscribers requires the use of two licenses:

- One B-RAS license

- One IPsec license

If either license is unavailable, the router denies access to the subscriber.

### Inherited Subscriber Functionality

Dynamic IPsec subscribers inherit much of the built-in AAA subscriber management functionality. This functionality includes the following:

- AAA subscriber management commands
- DNS (primary and secondary)
- WINS (primary and secondary)
- Session timeout
- Accounting features (interval, duplication, immediate update, broadcasting, Acct-stop)
- Duplicate address checking
- IP address pools
- Per virtual-router subscriber limit
- Policies
- Packet mirroring

For additional information on AAA functionality, see *JunosE Broadband Access Configuration Guide*.

### Using IPsec Tunnel Profiles

IPsec tunnel profiles serve the following purposes in the configuration of dynamic IPsec subscribers:

- Controlling which connecting user, based on the IKE identification, belongs to a given profile. Profile settings falling in this category include the following:
  - IKE identities from peers that can use this profile. These identities include IP addresses, domain names, and E-mail addresses. In addition, distinguished names that use X.509 certificates are permitted.
  - The router IKE identity.
- Terminating extraneous security and IP profile settings that exist after a subscriber is mapped to an IPsec tunnel. These settings include the following:
  - Maximum number of subscribers that this profile can terminate
  - AAA domain suffix intended for the username (helping to bridge users from a given IPsec tunnel profile to an AAA domain map)
  - Phase 2 SA selectors for use in phase 2 SA exchanges
  - IP profiles intended for users logging in using this profile (helping to bridge users from a given IPsec tunnel profile to an IP profile)

- Reachable networks on the VPN (allowing for split tunneling when supported by the client software)
- Security parameters intended to protect user traffic (including IPsec encapsulating protocol, encryption algorithms, authentication algorithms, lifetime parameters, perfect forward secrecy, and DH group for key derivation)
- Setting the IP address the router monitors for remote subscribers.

New subscribers are mapped only to IPsec tunnel profiles after the initial IKE SA is established. Like IPsec tunnels, IKE policy rules are required to control IKE SA acceptance and denial.

## Relocating Tunnel Interfaces

Unlike static IPsec tunnels interfaces, dynamic IPsec subscribers do not relocate if the IPsec server card becomes unavailable. If the IPsec server card becomes unavailable, all dynamic subscribers that are logged in and located on that server card are logged out and must log back in to connect.

## User Authentication

For IPsec subscribers, user authentication occurs in two phases. The first phase is an IPsec-level authentication (phase 1 or IKE authentication). Sometimes referred to as “machine” authentication, because the user PC is authenticated, the first authentication phase verifies private or preshared keys that reside on the PC. These keys are not easily moved from one PC to another and do not require user entry each time authentication is performed.

Depending on the IKE phase 1 exchange, restrictions on the authentication type or the access network setup might exist. To avoid any usage problems, keep the following in mind:

- If you are configuring a VPN where users perform preshared key IPsec authentication and use the IKE main mode exchange for phase 1, you must setup the access network such that the VPN has an exclusive local IP address.
- If you want to share a single server address on the access network for more than one VPN, you must either set the clients to use IKE aggressive mode or use a public and private key pair for authentication. This authentication type includes X.509v3 certificates).

After the IPsec-level authentication takes place, a user authentication occurs. Often considered a legacy form of authentication, the user authentication (like RADIUS) typically requires the user to enter information in the form of a username and password.

### Related Documentation

- [Configuring IPsec Tunnel Profiles on page 198](#)
- [Creating an IPsec Tunnel Profile on page 197](#)
- [Monitoring IPsec Tunnel Profiles on page 205](#)

## Dynamic IPsec Subscribers Platform Considerations

---

For information about modules that support dynamic IPsec subscribers on the ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router:

- See IPsec Service support in *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See IPsec Service support in *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support IPsec service.

**Related Documentation** • [Dynamic IPsec Subscribers Overview on page 193](#)

## Dynamic IPsec Subscribers References

---

For more information about dynamic IPsec subscribers, consult the following resources:

- The ISAKMP Configuration Method—draft-dukes-ike-mode-cfg-02.txt (March 2002 expiration)
- Extended Authentication within IKE (XAUTH)—draft-beaulieu-ike-xauth-02.txt (April 2002 expiration)
- Extended Authentication within ISAKMP/Oakley (XAUTH)—draft-ietf-ipsec-isakmp-xauth-06.txt (May 2000 expiration)



**NOTE:** IETF drafts are valid for only 6 months from the date of issuance. They must be considered as works in progress. Please refer to the IETF website at <http://www.ietf.org> for the latest drafts.

---

**Related Documentation** • [Configuring IPsec on page 143](#)  
• [Configuring Digital Certificates on page 233](#)  
• [Configuring IP Tunnels on page 265](#)  
• [Dynamic IPsec Subscribers Overview on page 193](#)  
• *JunosE Broadband Access Configuration Guide*

## Creating an IPsec Tunnel Profile

---

You can create or configure a tunnel profile for IPsec and access the IPsec Tunnel Profile configuration mode (config-ipsec-tunnel-profile). To create a new profile, you must specify a profile name. Use the optional **virtual-router** keyword to specify the name of the virtual router on which you want to create the profile (if you do not specify a virtual router name, the profile is created on the context virtual router).

To create an IPsec tunnel profile:

- From Global Configuration mode, create a tunnel profile and specify the name.

```
host1(config)#ipsec tunnel profile tunnel1
host1(config-ipsec-tunnel-profile)#
```

Use the **no** version to delete the tunnel profile.

#### Related Documentation

- [Configuring IPsec Tunnel Profiles on page 198](#)
- [Dynamic IPsec Subscribers Overview on page 193](#)
- *ipsec tunnel profile*

---

## Configuring IPsec Tunnel Profiles

This topic explains how to configure the parameters that exist in the IPsec tunnel profile configuration mode:

- [Limiting Interface Instantiations on Each Profile on page 198](#)
- [Specifying IKE Settings for IPsec Tunnels on page 199](#)
- [Appending a Domain Suffix to a Username on page 199](#)
- [Overriding IPsec Local and Peer Identities for SA Negotiations on page 200](#)
- [Specifying an IP Profile for IP Interface Instantiations on page 200](#)
- [Defining the Server IP Address on page 200](#)
- [Specifying Local Networks on page 201](#)
- [Defining IPsec Security Association Lifetime Parameters on page 201](#)
- [Defining User Reauthentication Protocol Values on page 202](#)
- [Specifying IPsec Security Association Transforms on page 202](#)
- [Specifying IPsec Security Association PFS and DH Group Parameters on page 202](#)
- [Defining the Tunnel MTU on page 203](#)

### Limiting Interface Instantiations on Each Profile

You can define the maximum number of tunnel-service interfaces to be used on a tunnel-server port. Once the profile reaches the maximum number of interfaces, the profile rejects any new interface instantiations and generates a warning-level log. The default value (using the **no** version of the command) specifies unlimited interface instantiation on a given profile.

To define the maximum number of interfaces that the IPsec tunnel profile can instantiate:

- From IPsec Tunnel Profile Configuration mode, define the maximum number of interfaces.

```
host1(config-ipsec-tunnel-profile)#max-interfaces 500
```

Use the **no** version to return the maximum value to unlimited, indicating no limit to the number of interfaces that can be instantiated on this profile.

## Specifying IKE Settings for IPsec Tunnels

Tasks to define the IKE local identity and IKE peer identity values are:

- [Setting the IKE Local Identity on page 199](#)
- [Setting the IKE Peer Identity on page 199](#)

### Setting the IKE Local Identity

You can set the IKE local identity (phase 1 identity) used for IKE security association negotiations.

To set the IKE local identity used for IKE security association (SA) negotiations:

- From IPsec Tunnel Profile Configuration mode, set the IKE local identity.  
`host1(config-ipsec-tunnel-profile)#ike local-identity domain-name domain1`

Use the **no** version to remove the specified IKE local identity.



**NOTE:** The authentication algorithm for an IKE SA is associated with its identity. You must ensure that the client and server are set accordingly to successfully establish IKE security associations.

### Setting the IKE Peer Identity

You can set the IKE peer identity values used for IKE security association (SA) negotiations. The **ike peer-identity distinguished-name**, **ike peer-identity domain-name**, **ike peer-identity ip address**, and **ike peer-identity username** commands are used to set the required IKE peer identity values.

To set the IKE peer identity values:

- From IPsec Tunnel Profile Configuration mode, set the specified IKE peer identity value.  
`host1(config-ipsec-tunnel-profile)#ike peer-identity domain-name domain2`

Use the **no** version to remove the specified IKE peer identity.



**NOTE:** You can also use the wildcard (\*) for the username and domain name or as the first or last character in the username or domain name string.

## Appending a Domain Suffix to a Username

The VPN to which a user is to be terminated is sometimes known from the IKE identities attached to the user. However, to assist in connecting users to the correct AAA domain for authentication, you can append a domain suffix to the username. Using the default, no domain suffix, passes usernames transparently to AAA.

To append a domain suffix to user-provided usernames on a profile:

- From IPsec Tunnel Profile Configuration mode, append a domain suffix.

**host1(config-ipsec-tunnel-profile)#domain-suffix domain2**

Use the **no** version to restore the default value, no domain suffix, and usernames are passed transparently to AAA.

## Overriding IPsec Local and Peer Identities for SA Negotiations

You can override the local and peer identities used for SA negotiations. For IPsec negotiations to succeed, the local and peer identities at one end of the tunnel must match the peer and local identities at the other end (respectively).

- To override the local identity (phase 2 identity) used for IPsec security association negotiations:

From IPsec Tunnel Profile Configuration mode, override the local identity.

**host1(config-ipsec-tunnel-profile)#local ip identity range 10.30.11.1 10.30.11.50**

Use the **no** version to restore the default value, the internal IP address allocated for the subscriber.

- To override the peer identity (phase 2 identity) used for IPsec security association negotiations:

From IPsec Tunnel Profile Configuration mode, override the peer identity.

**host1(config-ipsec-tunnel-profile)#peer ip identity address 10.227.1.2**

Use the **no** version to restore the default value, the internal IP address allocated for the subscriber.

## Specifying an IP Profile for IP Interface Instantiations

You can specify the IP profile that the IPsec layer passes on to the IP layer upon request for upper-layer instantiation.

To specify the IP profile that is passed from the IPsec layer to the IP layer:

- From IPsec Tunnel Profile Configuration mode, specify the IP profile.

**host1(config-ipsec-tunnel-profile)#ip profile ipProfile1**

Use the **no** version to remove the association with this profile.

## Defining the Server IP Address

You can define the specified local IP address as the server address. The router monitors UDP port 500 for incoming login requests (that is, IKE SA negotiations) from users.



**NOTE:** This address is typically made public to all users trying to connect to a VPN on this router.



This command enables you to optionally set a global preshared key for the specified server address. When using global preshared keys, keep the following in mind:

- Global preshared keys enable a group of users to share a single authentication key, simplifying the administrative job of setting up keys for multiple users.
- Specific keys for individual users have higher priority than global keys. If both individual and global keys are configured, the individual that also has a specific key must use that key or authentication fails.
- More than one profile can specify the same local endpoint and virtual router. Because the last value set overrides the other, we recommend that you avoid this type of configuration.

To specify the given local IP address as a server address:

- From IPsec Tunnel Profile Configuration mode, specify the local IP address.

```
host1(config-ipsec-tunnel-profile)#local ip address 192.2.52.12
```

Use the **no** version to stop the router from monitoring UDP port 500 for user requests and remove any preshared key associations with the local IP address.

## Specifying Local Networks

You can specify local, reachable networks through the IPsec tunnel. This type of “split tunneling” enables a remote station to separate VPN traffic from Internet traffic. For example a client connecting to a corporate Intranet could use split-tunneling to send all traffic destined to 10.0.0.0/8 through the secure tunnel and reach the VPN. Other traffic (for example, Web browsing) would travel directly to the Internet through the local service provider without passing through the tunnel.



**NOTE:** Split tunneling functions only when supported by the client software. It is up to the client to modify its routing table with the network information for split tunneling to occur. You can configure up to 16 networks for this method of “split-tunneling.”

To specify networks that are reachable through the IPsec tunnel:

- From IPsec Tunnel Profile Configuration mode, specify the network.

```
host1(config-ipsec-tunnel-profile)#local ip network 10.0.0.0 255.255.255.252
```

Use the **no** version to remove the specified network from the reachable list.

## Defining IPsec Security Association Lifetime Parameters

You can define the IPsec SA lifetime parameters the tunnel profile can use for IPsec SA negotiations. These parameters include the phase 2 lifetime as a range in seconds or traffic volume.

To specify the IPsec lifetime parameters used on IPsec SA lifetime negotiations:

- From IPsec Tunnel Profile Configuration mode, specify the IPsec lifetime parameters.

```
host1(config-ipsec-tunnel-profile)#lifetime seconds 5000 25000
```

Use the **no** version to return the lifetime to its default value, 28800 seconds (8 hours) and no traffic volume limit.

## Defining User Reauthentication Protocol Values

You can specify the extended user authentication protocol for use during the extended user authentication protocol exchange. You can use the **re-authenticate** keyword to enable the reauthentication option (a subsequent authentication procedure). When this option is enabled, rekeying of IKE SAs uses the initial authentication protocol to reauthenticate the user. When this option is disabled, authentication is only performed at the first IKE SA establishment. Subsequent IKE SAs rekey operations inherit the initial authentication and do not reauthenticate users. You can use the **skip-peer-config** keyword to disable the router from configuring peer IP characteristics.



**NOTE:** For maximum security, enable reauthentication.

---

To specify the extended user authentication protocol for use during the extended user authentication protocol exchange:

- From IPsec Tunnel Profile Configuration mode, specify the extended user authentication.

```
host1(config-ipsec-tunnel-profile)#extended-authentication chap
```

Use the **no** version to reset the extended authentication to the default protocol, pap.

## Specifying IPsec Security Association Transforms

You can specify the IPsec transforms that IPsec SA negotiations can use for this profile. The router accepts the first transform proposed by a client that matches one of the transforms specified by this command. During an IPsec SA exchange with a client, the router proposes all transforms specified by this command and one is accepted by the client.



**NOTE:** You can specify up to six transform algorithms for this profile.

---

To specify the eligible transforms for this profile for IPsec security association negotiations:

- From IPsec Tunnel Profile Configuration mode, specify the eligible transforms.

```
host1(config-ipsec-tunnel-profile)#transform ah-hmac-md5
```

Use the **no** version to reset the transform to the default, esp-3des-sha1.

## Specifying IPsec Security Association PFS and DH Group Parameters

You can specify the IPsec SA perfect forward secrecy (PFS) option and Diffie-Hellman prime modulus group that IPsec SA negotiations can use for this profile.



**NOTE:** When the client initiates the IPsec negotiation, the router can accept Diffie-Hellman prime modulus groups that are higher than those configured.

To configure perfect forward secrecy for connections created with this IPsec tunnel configuration profile by assigning a Diffie-Hellman prime modulus group:

- From IPsec Tunnel Profile Configuration mode, specify the perfect forward secrecy.

`host1(config-ipsec-tunnel-profile)#pfs group 5`

Use the **no** version to remove PFS from the profile.

## Defining the Tunnel MTU

You can configure the maximum transmission unit size for the tunnel.

To specify the maximum transmission unit size for a particular tunnel:

- From IPsec Tunnel Profile Configuration mode, configure the size.

`host1(config-ipsec-tunnel-profile)#tunnel mtu 3000`

Use the **no** version to restore the default value, an MTU size of 1400 bytes.

### Related Documentation

- [Creating an IPsec Tunnel Profile on page 197](#)
- *extended-authentication*
- *ike local-identity*
- *ike peer-identity distinguished-name.*
- *ike peer-identity domain-name.*
- *ike peer-identity ip address.*
- *ike peer-identity username.*
- *ip profile*
- *lifetime*
- *local ip address*
- *local ip identity*
- *local ip network*
- *max-interfaces*
- *peer ip identity*
- *pfs group*
- *transform*
- *tunnel mtu*

## Defining IKE Policy Rules for IPsec Tunnels

---

This topic describes enhancements to some IKE policy rule commands to support dynamic IPsec subscribers.

- [Specification of a Virtual Router for an IKE Policy Rule Overview on page 204](#)
- [Configuring a Virtual Router for an IKE Policy Rule on page 204](#)
- [Defining Aggressive Mode for an IKE Policy Rule on page 204](#)

### Specification of a Virtual Router for an IKE Policy Rule Overview

An IKE policy rule can be configured to limit its scope to a specific local IP address on a specific virtual router. When enabled, this limitation ensures that this policy rule is evaluated for IKE security association evaluations for only the specified IP address and virtual router.

When initiating and responding to an IKE SA exchange, the router evaluates the possible policy rules as follows:

- If an IP-address-specific IKE policy rule refers to the local IP address and virtual router for this exchange, the router evaluates this policy rule before any non-IP-address-specific IKE policy rules. If more than one IP-address-specific IKE policy rule exists, the router evaluates the policy rule with the lowest priority number first and then evaluates the policy rule with the next highest priority number and so on.
- If no IP-address-specific IKE policy rule refers to the local IP address and virtual router for this exchange, the router evaluates all non-IP-address-specific IKE policy rules in the normal IKE policy rule evaluation order.

You can define an IKE policy rule without specifying an IP address or virtual router (the default). When not specifically configured, the IKE policy rule remains valid for any local IP address on any virtual router residing on the router.

### Configuring a Virtual Router for an IKE Policy Rule

You can enable an IKE policy rule to limit its scope to a specific local IP address on a specific virtual router. This limitation ensures that this policy rule is evaluated for IKE security association evaluations for only the specified IP address and virtual router.

To limit the scope of the IKE policy rule to the specified local IP address on the specified virtual router:

- From IKE Policy Configuration mode, limit the scope.

```
host1(config-ike-policy)#ip address virtual-router VR1
```

Use the **no** version to remove the IP address and virtual router limitation.

### Defining Aggressive Mode for an IKE Policy Rule

You can enable aggressive mode negotiation for the tunnel. If you specify aggressive mode negotiation, the tunnel proposes aggressive mode to the peer in connections that

the policy initiates. If the peer initiates a negotiation, the tunnel accepts the negotiation if the mode matches this policy.

To enable aggressive mode negotiation for the tunnel:

- From IKE Policy Configuration mode, enable aggressive mode.

```
host1(config-ike-policy)#aggressive-mode accepted
```

Use the **no** version to set the negotiation mode to main mode.

#### Related Documentation

- [Main Mode and Aggressive Mode on page 158](#)
- *aggressive-mode*
- *ip address virtual-router*

## Monitoring IPsec Tunnel Profiles

This topic contains information about troubleshooting and monitoring dynamic IPsec subscribers.

- [System Event Logs Used to Troubleshoot and Monitor Dynamic IPsec Subscribers on page 205](#)
- [Monitoring IPsec Tunnel Profiles on page 205](#)
- [Monitoring Active Subscribers on page 207](#)

## System Event Logs Used to Troubleshoot and Monitor Dynamic IPsec Subscribers

To troubleshoot and monitor dynamic IPsec subscribers, use the following system event logs:

- ipsecIdDb—IPsec ID database
- ipsecXcfgSM—IPsec Xauth/ModeCfg state machine
- ipsecP1Throttler—Ongoing Phase 1 negotiations

For more information about using event logs, see the *JunosE System Event Logging Reference Guide*.

## Monitoring IPsec Tunnel Profiles

**Purpose** Display information about all existing IPsec tunnel profiles or a specified tunnel profile.

Use the **detail** keyword to display detailed information about the tunnel profile.

**Action** To display information about all existing IPsec tunnel profiles:

```
host1#show ipsec tunnel profile
IPsec tunnel profile ipsec-spg is active with no subscriber
1 IPsec tunnel profile found
```

To display more detailed information about the specified IPsec tunnel profile:

```

host1#show ipsec tunnel profile detail ipsec-spg
IPsec tunnel profile ipsec-spg is active with no subscriber
Extended-authentication: pap, no re-authentication
Peer IP characteristics configuration: enabled
Virtual router: default
Local IP address: 10.227.5.31
Local IKE identity: 10.227.5.31
Peer IKE identity: IP network: not allowed
                    username: *
                    domain-name: spg.juniper.net
                    DN: not allowed
Maximum subscribers: no limit
Domain suffix: @spg
IP profile: ip-spg
Local IPsec identity: subnet 0.0.0.0 0.0.0.0, proto 0, port 0
Peer IPsec identity: invalid identity
Lifetime: between 1800 and 7200 seconds, and between 100000 and 500000 KB
Reachable networks: none
PFS not configured
Transforms: , tunnel-esp-3des-sha1
Subscribers rejected due to maximum subscribers limit: 0
Completed sessions: 43, totaling 4873 seconds, statistics:
ipsec stats:
  outbound:
    outboundUserPacketsReceived = 88
    outboundUserOctetsReceived = 74544
    outboundAccPacketsReceived = 88
    outboundAccOctetsReceived = 79168
    outboundOtherTxErrors = 0
    outboundPolicyErrors = 0
  inbound:
    inboundUserPacketsReceived = 88
    inboundUserOctetsReceived = 74880
    inboundAccPacketsReceived = 88
    inboundAccOctetsReceived = 79488
    inboundAuthenticationErrors = 0
    inboundReplayErrors = 0
    inboundPolicyErrors = 0
    inboundOtherRxErrors = 0
    inboundDecryptErrors = 0
    inboundPadErrors = 0

```

**Meaning** Table 22 on page 206 lists the **show ipsec tunnel profile** command output fields.

**Table 22: show ipsec tunnel profile Output Fields**

| Field Name                            | Field Description                                |
|---------------------------------------|--------------------------------------------------|
| Extended-authentication               | Configured extended user authentication protocol |
| Peer IP characteristics configuration | Peer IP characteristics configuration status     |
| Virtual router                        | Name of the virtual router context               |
| Local IP address                      | Local IP address on the specified virtual router |

Table 22: show ipsec tunnel profile Output Fields (*continued*)

| Field Name                                            | Field Description                                                                                |
|-------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| Local IKE identity                                    | Configured local IKE identity                                                                    |
| Peer IKE identity                                     | Configured peer IKE identity                                                                     |
| Maximum subscribers                                   | Maximum number of subscribers allowed on the profile                                             |
| Domain suffix                                         | Domain suffix appended to any usernames on the profile                                           |
| IP Profile                                            | IP profile that is passed from the IPsec layer to the IP layer                                   |
| Local IPsec identity                                  | Local identity used for IPsec security association negotiations                                  |
| Peer IPsec identity                                   | Peer identity used for IPsec security association negotiations                                   |
| Lifetime                                              | Configured lifetime parameters                                                                   |
| Reachable networks                                    | Reachable networks on the VPN                                                                    |
| PFS not configured                                    | Perfect forward secrecy configuration status                                                     |
| Transforms                                            | IPsec transforms that IPsec SA negotiations use                                                  |
| Subscribers rejected due to maximum subscribers limit | Subscribers rejected because of the configured limit of maximum number of subscribers on profile |
| Completed sessions                                    | Number of successful subscriber sessions                                                         |
| ipsec stats                                           | Inbound and Outbound IPsec statistics                                                            |

## Monitoring Active Subscribers

**Purpose** Display active subscribers on the router.

**Action** To display information about all active subscribers on the router:

```
host1#show subscribers
```

```

Subscriber List
-----
User Name      Type      Addr | Endpt      Virtual
-----
xcfgUser1@vpn1 ipsec     10.227.5.106/loca1  vpn1
User Name
-----
Interface
-----

```

```

xcfgUser1@vpn1          FastEthernet 5/2.4

      User Name          Login Time          Circuit Id
-----
xcfgUser1@vpn1          06/05/12 10:58:42      0.4.1.10.fe.25.3b.0
      User Name          Remote Id
-----
xcfgUser1@vpn1          (800) 555-1212

```

**Meaning** [Table 23 on page 208](#) lists the **show subscribers** command output fields.

**Table 23: show subscribers Output Fields**

| Field Name     | Field Description                                                                                                                                                                                                       |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| User Name      | Name of the subscriber<br><br><b>NOTE:</b> The complete username with the domain name (if available) is displayed regardless of the status of the strip domain feature on a virtual router or AAA domain map.           |
| Type           | Type of subscriber: atm, ip, ipsec, ppp, tnl (tunnel), tst (test)                                                                                                                                                       |
| Addr   Endpt   | IP or IPv6 address and source of the address: l2tp, local, dhcp, radius, user. For local, dhcp, radius, and user endpoints, the address is that of the user. When the endpoint is l2tp, the address is that of the LNS. |
| Virtual Router | Name of the virtual router context                                                                                                                                                                                      |
| Interface      | Interface specifier over which the subscriber is connected                                                                                                                                                              |
| Login Time     | Date, in YY/MM/DD format, and time the subscriber logged in                                                                                                                                                             |
| Circuit Id     | User's circuit ID value specified by PPPoE                                                                                                                                                                              |
| Remote Id      | User's remote ID value specified by PPPoE                                                                                                                                                                               |

- Related Documentation**
- [Configuring IPsec Tunnel Profiles on page 198](#)
  - [Creating an IPsec Tunnel Profile on page 197](#)
  - [Dynamic IPsec Subscribers Overview on page 193](#)
  - *show ipsec tunnel profile*
  - *show subscribers*



## CHAPTER 8

# Configuring ANCP

This chapter describes how to configure Access Node Control Protocol (ANCP), also known as Layer 2 Control (L2C), for IP multicast on an E Series router; it contains the following sections:

- [Access Node Control Protocol Overview on page 209](#)
- [ANCP Platform Considerations on page 211](#)
- [ANCP References on page 212](#)
- [Configuring ANCP on page 212](#)
- [Configuring ANCP Interfaces on page 214](#)
- [Configuring ANCP Neighbors on page 215](#)
- [Configuring Topology Discovery on page 217](#)
- [Configuring ANCP for QoS Adaptive Mode on page 218](#)
- [Triggering ANCP Line Configuration on page 219](#)
- [Adjusting the Data Rate Reported by ANCP for DSL Lines Overview on page 220](#)
- [Configuring a QoS Adjustment Factor Applied to the ANCP Reported Data Rate on page 220](#)
- [Example: Configuring Transactional Multicast for IGMP on page 221](#)
- [Overview of Triggering ANCP OAM on page 223](#)
- [Triggering ANCP OAM on page 223](#)

### Access Node Control Protocol Overview

---

Access Node Control Protocol (ANCP), also known as Layer 2 Control (L2C), is based on a subset of the General Switch Management Protocol (GSMP), as defined in the GSMPv3 Base Specification (draft-ietf-gsmp-v3-base-spec-06.txt). GSMP is a general purpose protocol used to control a label switch.

GSMP enables a controller to establish and release connections across the switch, add and delete leaves on a multicast connection, manage switch ports, request configuration information, request and delete reservation of switch resources, and request statistics. It also enables the switch to inform the controller of asynchronous events such as a link going down.

Deploying value-added services across digital subscriber line (DSL) access networks requires special attention to quality of service (QoS) and service control. This control depends on tighter coordination between network elements in the broadband access network while not causing added burden to the operations support system (OSS) layer.

ANCP is an extension to GSMPv3 that functions as a control plane between a service-oriented layer 3 edge device (the Broadband Remote Access Server) and a layer 2 access node. In this role, ANCP performs QoS-related, service-related, and subscriber-related operations. These operations include the following:

- Dynamic discovery of the access topology and enabling an authentication server to retrieve this information
- Subscriber and service data retrieval from the OSS by the Broadband Remote Access Server (B-RAS) and sending that information to the access node to simplify service management (referred to as line configuration)
- An optimized, layer 2 multicast (IGMP) replication
- On-demand access-line testing (ANCP Operation, Administration, and Maintenance)

JunosE Software supports the use of RADIUS attributes to monitor ANCP-related information, such as upstream and downstream data rates. For information about using RADIUS attributes see *JunosE Broadband Access Configuration Guide*.

## Access Topology Discovery

Many queuing or scheduling mechanisms must avoid congestion within the access network while contending with multiple flows and distinct QoS requirements. These mechanisms require that B-RAS devices obtain information about the access network topology, the links within that network, and their rates.

Operations support systems cannot enforce the consistency of this gathered information in a reliable and scalable way. ANCP discovery enables the automated discovery of the access network topology, resolving this problem.

## Line Configuration

Following access topology discovery, the B-RAS can query a subscriber management OSS component (for example, a RADIUS server) to retrieve subscriber authorization data. This type of query is typically managed by the B-RAS, but in some cases (for example, DSL-related enforcement) it can be useful to push service information to the access node for local enforcement of the corresponding subscriber line. Using the line configuration feature provides a more flexible way to achieve this on-demand service.



**NOTE:** JunosE Software supports only a CLI version of this feature.

---

## Transactional Multicast

IP multicasting in access networks often involves an access server replicating the same multicast stream to multiple subscribers. This type of replication wastes access bandwidth

when multiple subscribers access network services using the same access node. The amount of multicast replication is based on the number of subscribers, rather than the number of access nodes.

The access node sending a single copy of the multicast stream to a specific access node is a more efficient use of the bandwidth. Using this method, the access node performs the multicast replication for subscribers that reside beyond the access node.

ANCP transactional multicast enables the E Series router to set up a multicast replication state in the access node. In Asynchronous Transfer Mode (ATM) access networks, the B-RAS can use the ANCP to set up point-to-multipoint cross-connects in the access nodes.

## OAM

A simple solution based on ANCP provides B-RAS with an access-line test capability. When enabled through the CLI, the B-RAS uses an ANCP message to trigger the access-node to perform a loopback test on the local loop (between the access node and the CPE). The access node reports the results of the test by means of another ANCP message.

## Retrieval of DSL Line Rate Parameters

The router retrieves the DSL line rate parameters from ANCP and reports this information to the SRC software with the corresponding COPS messages. If the router cannot retrieve the DSL line rate parameters from ANCP, it retrieves the DSL information in the following ways:

- **From AAA layer**—For PPP interfaces, the router retrieves the DSL line rate parameters from the AAA layer and reports this information to the SRC software.
- **From DHCP options**—For DHCP external server and DHCP local server in equal-access mode, the router retrieves the DSL line rate parameters from DHCP options and reports this information to the SRC software. For more information about retrieval of DSL line rate parameters from DHCP options, see *DHCP Overview Information*.

## Learning the Partition ID from an Access Node

ANCP running on the network access server can learn the partition ID from an access node and use this partition ID to communicate with the access node. This learning option of the ANCP in the virtual router enables the network access server to learn the partition IDs from all the access nodes. This learned partition ID can be used to send messages to establish adjacency.

### Related Documentation

- [Configuring ANCP on page 212](#)
- [Monitoring ANCP Configuration on page 225](#)

---

## ANCP Platform Considerations

Configuring ANCP is supported on all E Series Broadband Services Routers.

For information about the modules supported on E Series routers:

- See the *ERX Module Guide* for modules supported on ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router.
- See the *E120 and E320 Module Guide* for modules supported on the E120 and E320 Broadband Services Routers.

**Related  
Documentation**

- [ANCP References on page 212](#)

---

## ANCP References

For more information about ANCP, see the following resources:

- GSMP extensions for layer2 control (L2C) Topology Discovery and Line Configuration—draft-wadhwa-gsmp-l2control-configuration-00.txt (July 2006 expiration)
- IGMP-based Multicast Forwarding (“IGMP Proxying”)—draft-ietf-magma-igmp-proxy-00.txt (May 2002 expiration)
- GSMPv3 Base Specification—draft-ietf-gsmp-v3-base-spec-06.txt (March 2006 expiration)

**Related  
Documentation**

- [ANCP Platform Considerations on page 211](#)

---

## Configuring ANCP

ANCP uses several global-level configuration commands to enable ANCP to function on the router. Tasks to configure ANCP are:

- [Creating a Listening TCP Socket for ANCP on page 212](#)
- [Accessing L2C Configuration Mode for ANCP on page 213](#)
- [Defining the ANCP Session Timeout on page 213](#)
- [Learning the Access Node Partition ID on page 213](#)

---

### Creating a Listening TCP Socket for ANCP

You can create a listening TCP socket for ANCP. ANCP monitors port 6068 for ANCP TCP connection requests.

To create a listening TCP socket in the current virtual router context:

- Issue the **l2c ip listen** command in Global Configuration mode.

```
host1(config)#l2c ip listen
```

You can use the **no** version to remove the listening TCP socket and stop any new sessions from being established. The **no** version does not terminate any existing GSMP sessions.

## Accessing L2C Configuration Mode for ANCP

You can launch the L2C Configuration (config-l2c) mode for ANCP. In this mode, you can define session timeout values and access the L2C Neighbor Configuration mode to configure an ANCP neighbor.

To launch the L2C Configuration (config-l2c) mode for ANCP:

- Issue the **l2c** command in Global Configuration mode.

```
host1(config)#l2c
host1(config-l2c)#
```

You can use the **no** version to remove all ANCP configurations.

## Defining the ANCP Session Timeout

You can specify the ANCP session timeout value in L2C Configuration (config-l2c) mode. The timer range is 1–25 seconds with a default value of 25 seconds.

To define the ANCP session timeout value (in seconds):

- Issue the **session-timeout** command in L2C Configuration (config-l2c) mode.

```
host1(config-l2c)#session-timeout 10
```

You can use the **no** version to revert the session timeout to its default setting, 25 seconds.

## Learning the Access Node Partition ID

You can enable the learning option in L2C Configuration (config-l2c) mode. This learning option in the virtual router enables network access server to learn the partition ID from all the access nodes.

To enable the learning option in ANCP:

- Issue the **wait-for-gsmp-syn** command in L2C Configuration (config-l2c) mode.

```
(config-l2c)# wait-for-gsmp-syn
```

You can use the **no** version to disable the learning option in ANCP.

If the access node does not send the GSMP\_SYN message after initiating the TCP session, the connection is lost because the session timer expires. To avoid this, you can use the **gsmp-syn-timeout** command to specify the timeout value in L2C Configuration (config-l2c) mode. The timer value cannot be more than the ANCP session timeout value with a default value of 60 seconds.

- Issue the **gsmp-syn-timeout** command in L2C Configuration (config-l2c) mode.

```
(config-l2c)# gsmp-syn-timeout 10
```

You can use the **no** version to revert the session timeout to its default setting, 60 seconds.

### Related Documentation

- [Access Node Control Protocol Overview on page 209](#)

- [Configuring ANCP Interfaces on page 214](#)
- [Configuring ANCP Neighbors on page 215](#)
- *gsmp-syn-timeout*
- *l2c*
- *l2c ip listen*
- *session-timeout*
- *wait-for-gsmp-syn*

## Configuring ANCP Interfaces

---

ANCP uses several interface-level configuration commands. These commands provide the ability to define GSMP input and output labels associated with the interface and specify the number of branches the ANCP end user can support. Tasks to configure ANCP interfaces include:

- [Creating GSMP Output Labels on page 214](#)
- [Configuring the Maximum Number of Branches for the ANCP User on page 214](#)
- [Creating GSMP Input Labels on page 214](#)

### Creating GSMP Output Labels

You can create the GSMP output label associated with the interface. In addition to the label, this command also specifies the access node using the neighbor keyword.

To create the GSMP output label association:

- Issue the **l2c end-user-id** command in Interface Configuration mode.

```
host1(config-if)#l2c end-user-id out_subscriber_port_6 neighbor ACCESS_NODE_1
```

You can use the **no** version to remove the output label association.

### Configuring the Maximum Number of Branches for the ANCP User

You can specify the maximum number of branches the ANCP end user can have.

To specify the maximum number of branches:

- Issue the **l2c max-branches** command in Interface Configuration mode.

```
host1(config-if)#l2c max-branches 5
```

You can use the **no** version to return the maximum number of branches to its default value, unlimited branches.

### Creating GSMP Input Labels

You can create the GSMP input label associated with the interface.

To create the GSMP input label association:

- Issue the **l2c peer-attachment-id** command in Interface Configuration mode.  
`host1(config-if)#l2c peer-attachment-id in_multicast_port_5`

You can use the **no** version to remove the input label association.

#### Related Documentation

- [Configuring ANCP on page 212](#)
- *l2c end-user-id*
- *l2c max-branches*
- *l2c peer-attachment-id*

## Configuring ANCP Neighbors

From the L2C Configuration mode (config-l2c), you can access the L2C Neighbor Configuration mode, from which you can create and manage ANCP neighbors. Tasks to configure ANCP neighbors are:

- [Accessing L2C Neighbor Configuration Mode for ANCP on page 215](#)
- [Defining an ANCP Neighbor on page 215](#)
- [Storing Topology Discovery Table Data in Mirrored Storage on page 216](#)
- [Limiting Topology Discovery Table Entries on page 216](#)
- [Clearing ANCP Neighbors on page 217](#)

### Accessing L2C Neighbor Configuration Mode for ANCP

You can create an ANCP neighbor and access the L2C Neighbor Configuration (config-l2c-neighbor) mode.

To create the ANCP neighbor and access the L2C Neighbor Configuration mode:

- Issue the **neighbor** command in L2C Configuration mode.  
`host1(config-l2c)#neighbor ACCESS-NODE-1`  
`host1(config-l2c-neighbor)#`

You can use the **no** version to remove a specific ANCP neighbor configuration or, by omitting the neighbor name, all ANCP neighbor configurations.

### Defining an ANCP Neighbor

You can define the ANCP neighbor by specifying a neighbor ID in the L2C Neighbor Configuration (config-l2c-neighbor) mode and define the maximum number of branches for the neighbor.

To specify an ANCP neighbor ID and the maximum number of branches that the neighbor can have:

1. From L2C Configuration mode, create an ANCP neighbor and specify the ANCP neighbor ID.

```
host1(config-l2c)#neighbor  
host1(config-l2c-neighbor)#id 1234.5678.9123
```

2. From L2C Neighbor Configuration mode, specify the maximum number of branches.

```
host1(config-l2c-neighbor)#max-branches 50
```

## Storing Topology Discovery Table Data in Mirrored Storage

You can enable storage of topology discovery table data in mirrored storage by using the **persist-discovery-data enable** command. By default, the storage of topology discovery table data in mirrored storage is enabled.

The topology discovery table is used to store digital subscriber line (DSL) parameters in the router. Based on the DSL parameters, quality-of-service (QoS) shaping for each subscriber is determined. When two devices such as the Broadband Remote Access Server (B-RAS) and digital subscriber line access multiplexer (DSLAM) are synchronized on the basis of the agreed capabilities, the DSLAM sends port-related information about the DSL in a topology discovery table message to the B-RAS.

The DSLAM sends topology discovery table data to the B-RAS in the following scenarios:

- When the layer 2 control (L2C) session is up
- When the line parameter changes are sensed or reported in the B-RAS by the DSLAM
- When the DSL is down

JunosE Software inserts topology discovery table data from the DSLAM into mirrored storage so that the data continues to be available even after SRP switchover. Therefore the subscriber is able to use the existing port data until the Access Node Control Protocol (ANCP) session is re-established and the DSLAM sends the updated data. When the updated port data is received from the DSLAM, corresponding entries are modified in the mirrored storage.

To enable storage of topology discovery table data in mirrored storage:

- Issue the **persist-discovery-data enable** command in L2C Configuration mode.

```
host1(config-l2c)#persist-discovery-data enable
```

Use the **no** version to disable storage of topology discovery table data in mirrored storage and completely clear existing data in mirrored storage.

## Limiting Topology Discovery Table Entries

You can specify the maximum number of discovery table entries that a neighbor can have.

To specify the maximum number of entries:

- Issue the **max-discovery-table-entries** command in L2C Neighbor Configuration mode.



```
host1(l2c-neighbor)#max-discovery-table-entries 4000
```

You can use the **no** version to return the maximum number of discovery table entries to its default value, 10,000 entries.



**NOTE:** Using this command to change the maximum number of entries when an already greater number of current entries exists in the discovery table does not remove any existing entries. Instead, future entries are prevented. For example, if the current table contains 5000 entries, and you specify a maximum of 4000 entries, the software does not remove any existing entries from the table. The software prevents any new entries until the number of table entries falls below the specified maximum.

## Clearing ANCP Neighbors

You can clear an existing ANCP neighbor and reset the specified GSMP neighbor session. Issuing the **clear l2c neighbor** command removes all QoS parameter instances associated with the neighbor, including those associated with the QoS downstream rate and QoS cell mode applications.

To clear an existing ANCP neighbor:

- Issue the **clear l2c neighbor** command in Privileged Exec mode.

```
host1#clear l2c neighbor ACCESS_NODE_1
```

There is no **no** version.

### Related Documentation

- [Clearing Entries from the Topology Discovery Table on page 218](#)
- [Configuring ANCP on page 212](#)
- [Monitoring ANCP Discovery Table Entries on page 226](#)
- [Monitoring ANCP Neighbors on page 230](#)
- *clear l2c neighbor*
- *id*
- *max-branches*
- *max-discovery-table-entries*
- *neighbor*

## Configuring Topology Discovery

You can enable the dynamic discovery of access topology. When ANCP discovery is enabled, an authentication server (like RADIUS) retrieves upstream and downstream access loop information from the configured access node. For information about configuring RADIUS, see *JunosE Broadband Access Configuration Guide*.

To enable ANCP discovery for a neighbor:

- Issue the **discovery-mode** command in L2C Configuration mode.  
`host1(l2c-neighbor)#discovery-mode`

You can use the **no** version to disable discovery mode.

**Related  
Documentation**

- [Accessing L2C Configuration Mode for ANCP on page 213](#)
- [Monitoring ANCP Discovery Table Entries on page 226](#)
- *discovery-mode*

---

## Configuring ANCP for QoS Adaptive Mode

The following topics explain how to configure ANCP for QoS adaptive mode:

- [Overview of Configuring ANCP for QoS Adaptive Mode on page 218](#)
- [Clearing Entries from the Topology Discovery Table on page 218](#)
- [Enabling QoS Adaptive Mode for ANCP on page 219](#)

### Overview of Configuring ANCP for QoS Adaptive Mode

QoS adaptive mode enables the system to shape VLAN and ATM VC downstream rates received from ANCP by dynamically creating QoS parameter instances associated with the ANCP (L2C) downstream application. The system can QoS adjust VLAN and ATM VC downstream rates received from ANCP when you enable QoS adaptive mode.

When QoS adaptive mode is enabled, ANCP dynamically creates QoS parameter instances associated with the QoS downstream rate application. ANCP also determines the value the system uses when recalculating the QoS shaping rate. The values of the parameter instances track the bandwidth of the local loop that is communicated by ANCP.

All QoS parameter instances associated with the neighbor can be removed from the topology discovery table. After clearing ANCP entries or neighbor sessions, the system recreates the QoS parameter instances when QoS adaptive mode is enabled and ANCP learns the rates again.

For more information about the QoS downstream rate application and QoS parameters, see *QoS Downstream Rate Application Overview* in *JunosE Quality of Service Configuration Guide*.

### Clearing Entries from the Topology Discovery Table

You can clear all entries or a specified entry from the topology discovery table and also the topology discovery data in mirrored storage associated with the neighbor. Issuing the **clear l2c discovery-table** command without specifying an entry removes all QoS parameter instances associated with the neighbor. Specifying an entry in the table removes the QoS parameter instance associated with that entry.

To clear entries associated with a specified neighbor from the topology discovery table and topology discovery data in mirrored storage:

- Issue the **clear l2c discovery-table** command in Privileged Exec mode.

```
host1#clear l2c discovery-table neighbor ACCESS_NODE_1
```

There is no **no** version.

## Enabling QoS Adaptive Mode for ANCP

You can QoS adjust VLAN and ATM VC downstream rates received from ANCP when you enable QoS adaptive mode.

To enable the QoS adaptive mode for ANCP:

- Issue the **qos-adaptive-mode** command in L2C Configuration mode.

```
host1(config-l2c)#qos-adaptive-mode
```

You can use the **no** version to disable QoS adaptive mode for the system.

### Related Documentation

- [Limiting Topology Discovery Table Entries on page 216](#)
- [Monitoring ANCP Discovery Table Entries on page 226](#)
- *clear l2c discovery-table*
- *qos-adaptive-mode*

## Triggering ANCP Line Configuration

You can trigger line configuration to the access node. Issuing this command sends a GSMP port management message to the access node. This message enables the B-RAS to configure a service profile name on an access loop.



**NOTE:** Before issuing the **l2c line-configuration** command, a profile must already be configured locally on the access node.

To trigger a GSMP port management message to the access node:

- Issue the **l2c line-configuration** command in L2C Configuration mode.

```
host1#l2c line-configuration interface atm 2/0.11 profile1
```

There is no **no** version.

### Related Documentation

- *l2c line-configuration*

## Adjusting the Data Rate Reported by ANCP for DSL Lines Overview

---

When a DSLAM calculates the data rate, it ignores additional headers on the DSL line. When ANCP reports the upstream data rate (L2C Type 4 Sub-type 129) or the downstream data rate (L2C Type 4 Sub-type 130), it includes the headers in its calculation and therefore reports a slightly higher value. This discrepancy causes the QoS shaping rate to be slightly higher than the actual rate.

You can set a percentage value ANCP applies to the data rate to generate a more accurate value that is reported to AAA whenever AAA requests the data rate from ANCP.

ANCP does not report the calculated data rate to RADIUS or to L2TP.

- Related Documentation**
- [Configuring a QoS Adjustment Factor Applied to the ANCP Reported Data Rate on page 220](#)

## Configuring a QoS Adjustment Factor Applied to the ANCP Reported Data Rate

---

You can configure a QoS adjustment factor that is applied to the upstream data rate and downstream data rate reported by ANCP for a DSL type. The adjustment factor is used to generate an accurate QoS shaping rate. The factor is applied for all subscribers that use the specified DSL line type.

To configure a QoS adjustment factor that is applied to the upstream and downstream data rates reported by ANCP for a DSL type:

- From L2C Configuration mode, configure a QoS adjustment factor to be applied for all subscribers that use the specified DSL line type.

```
host1(config-l2c)#adjustment-factor adsl1 45
host1(config-l2c)#adjustment-factor adsl2 55
host1(config-l2c)#adjustment-factor adsl2+ 67
host1(config-l2c)#adjustment-factor vdsl 91
host1(config-l2c)#adjustment-factor vdsl2 55
host1(config-l2c)#adjustment-factor sds 12
```

You can use the **no** version to restore the default condition, wherein no adjustment factor is applied to the ANCP-reported value. This command has the same effect as applying an adjustment factor of 100 to a DSL line type.

- Related Documentation**
- [Adjusting the Data Rate Reported by ANCP for DSL Lines Overview on page 220](#)
  - [Monitoring Configured Values for the Adjustment Rate on page 227](#)
  - *adjustment-factor*

## Example: Configuring Transactional Multicast for IGMP

---

The example in this section explains how to configure ANCP mapping.

- [Requirements on page 221](#)
- [Overview on page 221](#)
- [ANCP IGMP Configuration on page 222](#)

### Requirements

This example uses the following software and hardware components:

- JunosE Release 7.1.0 or higher-numbered releases
- E Series router (ERX7xx models, ERX14xx models, the ERX310 router, the E120 router, or the E320 router)
- ASIC-based line modules that support Fast Ethernet or Gigabit Ethernet

### Overview

By using ANCP, IGMP is no longer terminated or proxied at the access node. Instead, IGMP passes through the access node transparently. B-RAS terminates both the data PVC and IGMP. After any user permission verification, B-RAS may instruct the access node (using GSMP) to establish a multicast branch for the subscriber port.


ANCP works with a special IGMP session to collect OIF mapping events in a scalable manner. This session enables ANCP to listen to OIF mappings and, in turn, convey cross connect events to the appropriate ANCP neighbor (access node). For additional information about configuring IGMP and about OIF mapping, see *Configuring IGMP* in *JunosE Multicast Routing Configuration Guide*.

### ANCP IGMP Configuration Topology

---

In the following example ([Figure 18 on page 222](#)), two subscribers access individual multicast channels through cross connections (branches) that occur on the access node.

 Figure 18: Using ANCP with an Access Node

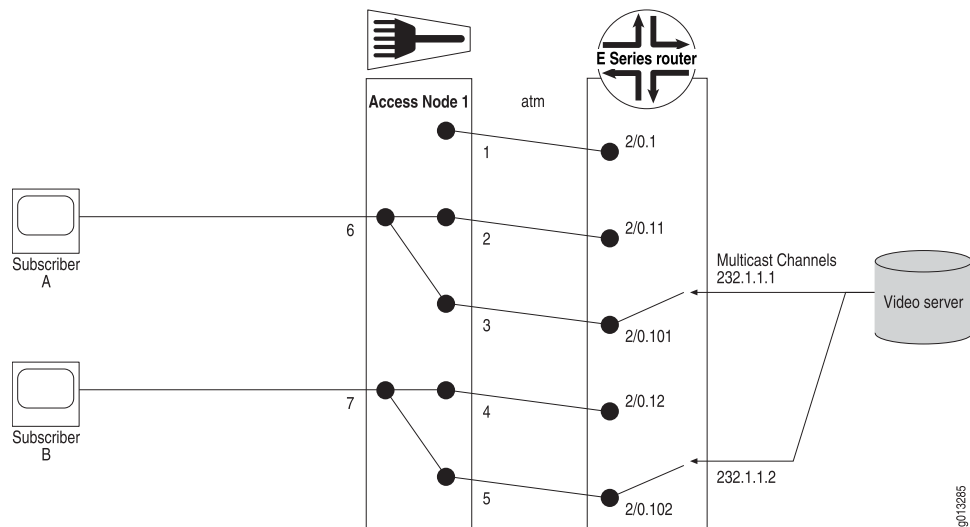

## ANCP IGMP Configuration

To configure ANCP mapping, perform these tasks:



**NOTE:** You can customize and use the following example in your own network. You can copy the text into a text editor and modify it (removing all prompts and changing values) for immediate use or save the modified example as a script (.scr) file. Script files allow you to execute commands as though they were entered at the terminal. For information about creating and executing script files, see *Command Line Interface in JunosE System Basics Configuration Guide*.

1. Configure an OIF map for the access node that maps each multicast group to an outgoing interface.

```
host1(config)#ip igmp oif-map OIFMAP atm 2/0.101 232.1.1.1 10.1.1.1
host1(config)#ip igmp oif-map OIFMAP atm 2/0.102 232.1.1.2 10.1.1.2
```

2. Define ANCP parameters.

```
host1(config)#l2c
host1(config-l2c)#session-timeout 15
```

3. Enable ANCP to listen to OIF mapping events from IGMP in this virtual router.

```
host1(config)#l2c ip oif
```

4. Create a listening TCP socket in the virtual router (TCP port 6068).

```
host1(config)#l2c ip listen
```

5. Define ANCP neighbor parameters.

```
host1(config-l2c)#neighbor ACCESS_NODE_1
host1(config-l2c-neighbor)#id 09af.15bc.3156
```



**NOTE:** The ID is a 48 bit quantity that identifies the ANCP neighbor.

6. Configure the ANCP multicast labels (input labels) on the corresponding outgoing interfaces.

```
host1(config)#interface atm 2/0.101
host1(config-interface)#ip igmp version passive
host1(config-interface)#l2c peer-attachment-id "in_multicast_port_3"
host1(config)#interface atm 2/0.102
host1(config-interface)#ip igmp version passive
host1(config-interface)#l2c peer-attachment-id "in_multicast_port_5"
```

7. Configure the ANCP output labels, the neighbor information on the subscriber interfaces, and apply the OIF map.

```
host1(config)#interface atm 2/0.11
host1(config-interface)#ip igmp apply-oif-map OIFMAP
host1(config-interface)#l2c end-user-id "out_subscriber_port_6" neighbor
ACCESS_NODE_1
host1(config)#interface atm 2/0.12
host1(config-interface)#ip igmp apply-oif-map OIFMAP
host1(config-interface)#l2c end-user-id "out_subscriber_port_7" neighbor
ACCESS_NODE_1
```

When Subscriber A requests to join 232.1.1.1, ANCP transmits an add branch message with the corresponding input and output labels that cross-connect port 3 and port 6 on Access Node 1.

**Related Documentation**

- [Configuring ANCP on page 212](#)

## Overview of Triggering ANCP OAM

You can provide an access-line test and rudimentary fault isolation capability for the B-RAS with the **l2c oam** command. Issuing this command triggers the access node to perform a loopback test on the local-loop (between the access-node and the CPE). The B-RAS generates a GSMP port management message to the neighbor specifying the access line identifier on the access node and OAM test characteristics desired by the B-RAS (for example, the number of cells/message to generate and the timeout period). The access node responds with the result of the triggered loopback test by means of a GSMP port management message. For example, when using an ATM-based local-loop, the ANCP operation can trigger the access node to generate ATM (F4/F5) loopback cells on the local loop.

**Related Documentation**

- [Triggering ANCP OAM on page 223](#)

## Triggering ANCP OAM

You can provide an access-line test and rudimentary fault isolation capability for the B-RAS.

To trigger the access node to run a local loopback test on the specified interface:

- From Privileged Exec or User Exec mode, configure the access node to run a local loopback test on the specified interface.

```
host1#l2c oam interface atm 4/1.103
```

```
request succeeded
0x503 : DSL line status showtime.
DEFAULT RESPONSE
```

- From Privilege Exec or User Exec mode, configure the access node to run a local loopback test on the specified neighbor.

```
host1#l2c oam neighbor accessnode_1002 end-user-id enduser_1002
```

```
request succeeded
0x503 : DSL line status showtime.
DEFAULT RESPONSE
```

[Table 24 on page 224](#) describes the **l2c oam** command fields.

**Table 24: l2c oam Fields**

| Field Name       | Field Description                                              |
|------------------|----------------------------------------------------------------|
| Request status   | Status of the OAM request (succeeded or failure)               |
| Response code    | Code that returned with the OAM response                       |
| DEFAULT RESPONSE | Response string (if any) that was included in the OAM response |

**Related  
Documentation**

- [Overview of Triggering ANCP OAM on page 223](#)
- *l2c oam*



## CHAPTER 9

# Monitoring ANCP

This chapter describes how to display ANCP information.

- [Monitoring ANCP Configuration on page 225](#)
- [Monitoring ANCP Discovery Table Entries on page 226](#)
- [Monitoring Configured Values for the Adjustment Rate on page 227](#)
- [Monitoring ANCP Labels on page 228](#)
- [Monitoring ANCP Neighbors on page 230](#)
- [Monitoring ANCP Statistics on page 231](#)

## Monitoring ANCP Configuration

---

**Purpose** Display information about ANCP configuration on the router.

**Action** To display information about ANCP configuration on the router:

```
host1#show l2c
L2C:
  Current session timeout: 25 seconds
  Qos adaptive mode: true
  Wait-for-gsmp-syn: true
  PersistentDiscoveryStorageFlag: true
  Gsmp-syn-timeout: 60 seconds
```

**Meaning** [Table 25 on page 225](#) lists the **show l2c** command output fields.

**Table 25: show l2c Output Fields**

| Field Name                     | Field Description                                                                                          |
|--------------------------------|------------------------------------------------------------------------------------------------------------|
| Current session timeout        | Configured session timeout (in seconds)                                                                    |
| Qos adaptive mode              | Whether QoS adaptive mode is enabled (true) or disabled (false)                                            |
| Wait-for-gsmp-syn              | Whether learning is enabled or disabled                                                                    |
| PersistentDiscoveryStorageFlag | Whether storage of topology discovery table data in mirrored storage is enabled (true) or disabled (false) |

Table 25: show l2c Output Fields (*continued*)

| Field Name        | Field Description                           |
|-------------------|---------------------------------------------|
| Gsmpp-syn-timeout | Configured TCP session timeout (in seconds) |

**Related Documentation**

- [Access Node Control Protocol Overview on page 209](#)
- [Configuring ANCP on page 212](#)
- [Storing Topology Discovery Table Data in Mirrored Storage on page 216](#)
- [show l2c](#)

## Monitoring ANCP Discovery Table Entries

**Purpose** Display ANCP discovery table entries.

You can use the optional **delta** keyword to display baseline statistics.

**Action** To display ANCP discovery table entries:

```
host1# show l2c discovery-table brief
Neighbor           Access-Loop-Id      Down/UpStream(kbps) State
-----
ACCESSNODE_10      Accessnode_10 atm 2/2:0.0      8064/1184      UP
ACCESSNODE_10      Accessnode_10 atm 2/32:0.0     8064/1184      UP
ACCESSNODE_10      Accessnode_10 atm 2/33:0.0     8064/1184      DOWN
ACCESSNODE_10      Accessnode_10 atm 2/34:0.0     8064/1184      DOWN
```

To display a topology discovery table for a particular end-user-id:

```
host1#
show l2c discovery-table end-user-id "Accessnode_10 atm 2/3:0.0"Access-Loop-Id: Dslam_10
atm 2/3:0.0      UP
Neighbor: ACCESSNODE_10
Actual-Data-Rate-Upstream: 1152(kbps)
Actual-Data-Rate-Downstream: 8064(kbps)
Attainable-Data-Rate-Upstream: 1176(kbps)
Attainable-Data-Rate-Downstream: 9376(kbps)
Line-State: 1(SHOWTIME)
Dsl-Type: 0(Invalid transmission type)
Total Line Attributes: 6
```

To display a topology discovery table for a particular neighbor:

```
host1# show l2c discovery-table neighbor "Accessnode_10"
Access-Loop-Id: Dslam_10 atm 10/5:0.0      DOWN
Neighbor: DSLAM_10
Line-State: 2(IDLE)
Dsl-Type: 0(Invalid transmission type)
Total Line Attributes: 2
Access-Loop-Id: Dslam_10 atm 10/6:0.0      DOWN
Neighbor: DSLAM_10
Line-State: 2(IDLE)
Dsl-Type: 0(Invalid transmission type)
Total Line Attributes: 2
Access-Loop-Id: Dslam_10 atm 10/7:0.0      DOWN
```

```

Neighbor: DSLAM_10
Line-State: 2(IDLE)
Dsl-Type: 0(Invalid transmission type)
Total Line Attributes: 2
Access-Loop-Id: Dslam_10 atm 2/0:0.0    UP
Neighbor: DSLAM_10
Actual-Data-Rate-Upstream: 1184(kbps)
Actual-Data-Rate-Downstream: 8064(kbps)
Attainable-Data-Rate-Upstream: 1184(kbps)
Attainable-Data-Rate-Downstream: 9408(kbps)
Line-State: 1(SHOWTIME)
Dsl-Type: 0(Invalid transmission type)
Total Line Attributes: 6

```

**Meaning** [Table 26 on page 227](#) lists the **show l2c discovery-table** command output fields.

**Table 26: show l2c discovery-table Output Fields**

| Field Name                      | Field Description                                      |
|---------------------------------|--------------------------------------------------------|
| Neighbor                        | Neighbor name                                          |
| Access-Loop-Id                  | Access loop identifier                                 |
| Down/Upstream (kbps)            | Downstream and upstream rates, in Kbps                 |
| State                           | State of the access loop, (UP or DOWN)                 |
| Actual-Data-Rate-Upstream       | Actual upstream data rate, in Kbps                     |
| Actual-Data-Rate-Downstream     | Actual downstream data rate, in Kbps                   |
| Attainable-Data-Rate-Upstream   | Attainable upstream data rate for this line, in Kbps   |
| Attainable-Data-Rate-Downstream | Attainable downstream data rate for this line, in Kbps |
| Line-State                      | State of the access loop (SHOWTIME or IDLE)            |
| Dsl-Type                        | Type of DSL                                            |
| Total Line Attributes           | Total number of line attributes reported               |

- Related Documentation**
- [Configuring Topology Discovery on page 217](#)
  - *show l2c discovery-table*

## Monitoring Configured Values for the Adjustment Rate

- Purpose** Display the configured values for the adjustment factor applied to the upstream data rate and downstream data rate reported by ANCP for each DSL type. The adjustment factor is used to generate an accurate QoS shaping rate.

**Action** To display the adjustment factor for each DSL type:

```
host1#show adjustment-factor
L2C QoS Adjustment Rates:
ADSL1: 45
ADSL2: 55
ADSL2+: 100
VDSL: 100
VDSL2: 55
SDS: 100
```

To display the adjustment factor for a specific DSL type verification criteria:

```
host1#show adjustment-factor vdsl2
VDSL2: 11
```

**Meaning** [Table 27 on page 228](#) lists the **show adjustment-factor** command output fields.

**Table 27: show adjustment-factor Output Fields**

| Field Name               | Field Description                                                      |
|--------------------------|------------------------------------------------------------------------|
| L2C QoS Adjustment Rates | List of all DSL types and the corresponding adjustment factor for each |
| ADSL1                    | Adjustment factor for the ADSL1 DSL type                               |
| ADSL2                    | Adjustment factor for the ADSL2 DSL type                               |
| ADSL2+                   | Adjustment factor for the ADSL2+ DSL type                              |
| VDSL                     | Adjustment factor for the VDSL DSL type                                |
| VDSL2                    | Adjustment factor for the VDSL2 DSL type                               |
| SDS                      | Adjustment factor for the SDS DSL type                                 |

- Related Documentation**
- [Configuring a QoS Adjustment Factor Applied to the ANCP Reported Data Rate on page 220](#)
  - *show adjustment-factor*

## Monitoring ANCP Labels

**Purpose** Display information about known ANCP labels on the router.

You can use the **neighbor-input** keyword to display labels for input ports. You can use the **neighbor-output** keyword to display labels for output ports. You can use the **brief** keyword to show limited information.

**Action** To display information about known ANCP labels on the router:

```
host1# show l2c label
```

```

Interface: ATM2/0.300
End-User-Id: Accessnode_10 atm2/2:0.0
Neighbor: accessnode _1002
Max-Branches: 5
Interface: ATM2/0.301
End-User-Id: Accessnode_10 atm2/3:0.0
Neighbor: accessnode_1002
Max-Branches: 5
Interface: ATM2/0.302
End-User-Id: Accessnode_10 atm2/4:0.0
Neighbor: accessnode _1002
Max-Branches: 5
Interface: ATM2/0.303
End-User-Id: Accessnode_10 atm2/5:0.0
Neighbor: accessnode _1004
Max-Branches: 5
Interface: ATM2/0.304
End-User-Id: Accessnode_10 atm2/6:0.0
Neighbor: accessnode _1004
Max-Branches: 5

```

To display limited details about known ANCP labels:

```
host1# show l2c label brief
```

| Interface  | End-User-Id               | Neighbor        |
|------------|---------------------------|-----------------|
| ATM4/0.300 | Accessnode_10 atm2/2:0.0  | accessnode_1002 |
| ATM4/0.301 | Accessnode_10 atm2/3:0.0  | accessnode_1002 |
| ATM4/0.302 | Accessnode_10 atm2/4:0.0  | accessnode_1002 |
| ATM4/0.303 | Accessnode_10 atm2/5:0.0  | accessnode_1004 |
| ATM4/0.304 | Accessnode_10 atm2/6:0.0  | accessnode_1004 |
| Interface  | Peer-Attach-Id            |                 |
| ATM4/0.11  | Accessnode_10 atm3/2:0.10 |                 |
| ATM4/0.12  | Accessnode_10 atm3/3:0.10 |                 |
| ATM4/0.13  | Accessnode_10 atm3/4:0.10 |                 |
| ATM4/0.14  | Accessnode_10 atm3/5:0.10 |                 |

To display limited details about known ANCP labels for input ports:

```
host1# show l2c label neighbor-input brief
```

| Interface | Peer-Attach-Id            |
|-----------|---------------------------|
| ATM4/0.11 | Accessnode_10 atm3/2:0.10 |
| ATM4/0.12 | Accessnode_10 atm3/3:0.10 |
| ATM4/0.13 | Accessnode_10 atm3/4:0.10 |
| ATM4/0.14 | Accessnode_10 atm3/5:0.10 |

**Meaning** Table 28 on page 229 lists the **show l2c label** command output fields.

**Table 28: show l2c label Output Fields**

| Field Name  | Field Description                          |
|-------------|--------------------------------------------|
| Interface   | Interface on which ANCP is configured      |
| End-User-Id | Output label associated with the interface |
| Neighbor    | Neighbor associated with the interface     |

Table 28: show l2c label Output Fields (*continued*)

| Field Name     | Field Description                                                    |
|----------------|----------------------------------------------------------------------|
| Max-Branches   | Maximum number of branches to which the ANCP interface can subscribe |
| Peer-Attach-Id | Input label associated with the interface                            |

**Related Documentation**

- [show l2c label](#)

## Monitoring ANCP Neighbors

**Purpose** Display information about all known ANCP neighbors or specified ANCP neighbors on the router along with their configurations.

You can use the **brief** keyword to show limited information. You can use the **summary** keyword to display the number of active neighbors.

**Action** To display information about a specified ANCP neighbor:

```
host1#show l2c neighbor name accessnode_1002
Neighbor Name: accessnode_1002
Neighbor Id: 0abc.0abc.1002
Maximum Branches: 10
Topology Discovery: true
Maximum Discovery Entries: 10000
Ip address: 1.1.1.2
TCP port: 1025
Connection Time: 03/02/2006 11:06:16
Add Branches Sent: 0
Delete Branches Sent: 0
Line-configurations: 0
OAM Loopback Requests Sent: 0
OAM Loopback Responses Received: 0
Protocol State: GSMP_ESTAB
```

To display limited details about ANCP neighbors on the router:

```
host1#show l2c neighbor brief
```

| Name        | Mac Address    | Remote Address | Protocol State |
|-------------|----------------|----------------|----------------|
| accessnode1 | 0abc.0abc.0abc | null           | EMPTY          |

To display the number of active neighbors on the router:

```
host1(config)#show l2c neighbor summary
L2C:
Number of configured Neighbors: 1
Number of Neighbors in GSMP_ESTAB state: 1
Number of neighbors in GSMP_EMPTY state: 0
```

**Meaning** [Table 29 on page 231](#) lists the **show l2c neighbor** command output fields.

Table 29: show l2c neighbor Output Fields

| Field Name                              | Field Description                                                |
|-----------------------------------------|------------------------------------------------------------------|
| Neighbor Name                           | Name associated with the neighbor                                |
| Neighbor Id                             | ID associated with the neighbor                                  |
| Maximum Branches                        | Maximum number of branches this neighbor can have                |
| Topology Discovery                      | Whether topology discovery is enabled (true) or disabled (false) |
| Maximum Discovery Entries               | Maximum number of discovery table entries allowed                |
| Ip address                              | IP address of the neighbor                                       |
| TCP port                                | TCP port associated with this neighbor                           |
| Connection Time                         | Date and time at which this neighbor was connected               |
| Add Branches Sent                       | Number of add branch messages sent to this neighbor              |
| Delete Branches Sent                    | Number of delete branch messages sent to this neighbor           |
| Line-configurations                     | Number of line configurations sent to this neighbor              |
| OAM Loopback Requests Sent              | Number of OAM loopback requests sent to this neighbor            |
| OAM Loopback Responses Received         | Number of OAM loopback responses received from this neighbor     |
| Protocol State                          | Protocol state of this neighbor                                  |
| Number of configured neighbors          | Number of configured ANCP neighbors                              |
| Number of Neighbors in GSMP_ESTAB state | Number of ANCP neighbors that are in an established GSMP state   |
| Number of neighbors in GSMP_EMPTY state | Number of ANCP neighbors that are in an unestablished GSMP state |

- Related Documentation**
- [Configuring ANCP Neighbors on page 215](#)
  - *show l2c neighbor*

## Monitoring ANCP Statistics

**Purpose** Display information about the ANCP statistics.

**Action** To display information about the ANCP statistics:

```
host1#show l2c statistics
L2C:
Current session timeout: 25 seconds
Discovery: Enabled
Number of configured routers: 1
Number of neighbors: 5
Number of active neighbors: 1
Number of end-user-ids: 25
Number of peer-attachment-ids: 39
Number of add-branches: 0
Number of delete-branches: 0
```

**Meaning** [Table 30 on page 232](#) lists the **show l2c statistics** command output fields.

**Table 30: show l2c statistics Output Fields**

| Field Name                    | Field Description                                 |
|-------------------------------|---------------------------------------------------|
| Current session timeout       | Configured session timeout (in seconds)           |
| Discovery                     | State of topology discovery (Enabled or Disabled) |
| Number of configured routers  | Number of ANCP configured routers                 |
| Number of neighbors           | Number of ANCP neighbors                          |
| Number of active neighbors    | Number of active ANCP neighbors                   |
| Number of end-user-ids        | Number of ANCP end user IDs (output labels)       |
| Number of peer-attachment-ids | Number of ANCP peer attachment IDs (input labels) |
| Number of add-branches        | Number of ANCP branches added                     |
| Number of delete-branches     | Number of ANCP branches deleted                   |

**Related Documentation**

- *show l2c statistics*



## CHAPTER 10

# Configuring Digital Certificates

This chapter describes how to configure digital certificates; it contains the following sections:

- [Overview on page 233](#)
- [Platform Considerations on page 234](#)
- [References on page 234](#)
- [IKE Authentication with Digital Certificates on page 235](#)
- [IKE Authentication Using Public Keys Without Digital Certificates on page 240](#)
- [Configuring Digital Certificates Using the Offline Method on page 241](#)
- [Configuring Digital Certificates Using the Online Method on page 246](#)
- [Configuring Peer Public Keys Without Digital Certificates on page 252](#)
- [Monitoring Digital Certificates and Public Keys on page 256](#)

## Overview

---

You can use digital certificates in place of preshared keys for IKE negotiations. For more information about IKE, see [“IKE Overview” on page 158](#) in [“Configuring IPsec” on page 143](#).

## Digital Certificate Terms and Acronyms

[Table 31 on page 233](#) describes terms and abbreviations that are used in this discussion of digital certificates.

**Table 31: Digital Certificate Terms and Acronyms**

| Term or Abbreviation | Description                                                                                        |
|----------------------|----------------------------------------------------------------------------------------------------|
| 3DES                 | Triple DES encryption/decryption algorithm                                                         |
| Base64               | Method used to encode certificate requests and certificates before they are sent to or from the CA |
| CA                   | Certificate authority; an organization that creates digital certificates                           |
| Certificate          | Binds a person or entity to a public key using a digital signature                                 |

Table 31: Digital Certificate Terms and Acronyms (*continued*)

| Term or Abbreviation | Description                                                                                                                                                                                  |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CRL                  | Certificate revocation list; a list of certificates that a CA has revoked                                                                                                                    |
| ESP                  | Encapsulating Security Payload; provides data integrity, data confidentiality and, optionally, sender's authentication                                                                       |
| IKE                  | Internet Key Exchange                                                                                                                                                                        |
| PKCS                 | Public-Key Cryptography Standards; a series of standards established by RSA Laboratories                                                                                                     |
| PKCS10               | PKCS #10; describes a syntax for certification requests                                                                                                                                      |
| Root CA              | CA that signs the certificates of subordinate CAs                                                                                                                                            |
| Root certificate     | Self-signed public key certificate for a root CA; root certificates are used to verify other certificates                                                                                    |
| RSA                  | Rivest-Shamir-Adleman encryption algorithm                                                                                                                                                   |
| SA                   | Security association; the set of security parameters that dictate how IPsec processes a packet, including encapsulation protocol and session keys. A single secure tunnel uses multiple SAs. |
| SCEP                 | Simple certificate enrollment protocol; used to submit requests and to download certificates and CRLs                                                                                        |

## Platform Considerations

Digital certificates are supported on all ERX routers that support configuration of IPsec.

For information about modules that support IPsec on ERX14xx models, ERX7xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support IPsec.



**NOTE:** The E120 and E320 Broadband Services Routers do not support configuration of IPsec and digital certificates.

## References

For information about digital certificates, see the following references:

- RFC 2409—The Internet Key Exchange (IKE) (November 1998)
- RFC 2459—Internet X.509 Public Key Infrastructure Certificate and CRL Profile (January 1999)
- RFC 2986—PKCS #10: Certification Request Syntax Specification Version 1.7 (November 2000)
- RFC 3280—Internet X.509 Public Key Infrastructure Certificate and Certificate Revocation List (CRL) Profile (April 2002)
- RFC 3447—Public-Key Cryptography Standards (PKCS) #1: RSA Cryptography Specifications Version 2.1 (February 2003)

For more information about IPsec and IKE, see [“Configuring IPsec” on page 143](#).

## IKE Authentication with Digital Certificates

As part of the IKE protocol, one security gateway needs to authenticate another security gateway to make sure that IKE SAs are established with the intended party. The router supports two authentication methods:

- Digital certificates (using RSA algorithms)

For digital certificate authentication, an initiator signs message interchange data using his private key, and a responder uses the initiator's public key to verify the signature. Typically, the public key is exchanged via messages containing an X.509v3 certificate. This certificate provides a level of assurance that a peer's identity—as represented in the certificate—is associated with a particular public key. E Series Broadband Services Routers provide both an offline (manual) and an online (automatic) process when using digital certificates.

- Preshared keys

With preshared key authentication, the same secret must be configured on both security gateways before the gateways can authenticate each other.

The following sections provide information about digital certificates. For information about using preshared keys, see [“IKE Overview” on page 158](#).

You can also use public keys for RSA authentication without having to obtain a digital certificate. For details, see [“IKE Authentication Using Public Keys Without Digital Certificates” on page 240](#).

## Signature Authentication

The following are key steps for using public key cryptography to authenticate a peer. These steps are described in more detail in the following sections.

1. Generating a private/public key pair

Before the router can place a digital signature on messages, it requires a private key to sign, and requires a public key so that message receivers can verify the signature.

2. Obtaining a root CA certificate

The router requires at least one root CA certificate to send to IKE peers and also to verify that a peer's certificate is genuine.

### 3. Obtaining a public key certificate

The router requires at least one public key certificate, which binds the router identity to its public key. The CA verifies the identity represented on the certificate and then signs the certificate. The router sends the certificate to IKE peers during negotiations to advertise the router public key.

### 4. Authenticating the peer

As part of IKE negotiations, the router receives its peer's digital signature in a message exchange. The router must verify the digital signature by using the peer's public key. The public key is contained in the peer's certificate, which often is received during the IKE negotiation. To ensure that the peer certificate is valid, the router verifies its digital signature by using the CA public key contained in the root CA certificate. The router and its IKE peer require at least one common trusted root CA for authentication to work.

Generally, only Step 4 is required each time a phase 1 negotiation happens. The first three steps are required only if keys are compromised or router certificates require renewal.

## Generating Public/Private Key Pairs

The ERX router needs at least one valid pair of public/private keys whenever it uses any of the public key methods for authenticating an IKE peer. The ERX router can generate its own public/private key pairs. The public/private key pair supports the RSA standard (1024 or 2048 bits).

The private key is used only by the ERX router. It is never exchanged with any other nodes. It is used to place a digital signature on IKE authentication messages. When generated, it is securely stored internally to the ERX router in nonvolatile storage (NVS). Access to the private key is never allowed, not even to a system administrator or a network management system. Private key storage includes protection mechanisms to prevent improper private key usage, including encryption with 3DES using a unique internally generated key. The key is also tied to SRP-specific data to prevent swapping flash disks between routers.

The public key is used in the generation of the router certificate request, which is sent to a CA. Based on the certificate request, the CA generates a public key certificate for the E Series router.

The router public/private key pair is a global system attribute. It does not matter how many IPsec Service modules (ISMs) exist in the router; only one set of keys is available at any given moment. The private/public key pair applies across all virtual routers and is persistent across reloads and booting to factory defaults.

## Obtaining a Root CA Certificate

The ERX router enables the use of either a manual or automatic method to download the root CA's self-signed certificate. The standards supported for obtaining root CAs are X.509v3, base64, and basic-encoding-rules (BER)–encoded certificates.

In the manual method, an operator obtains the root CA certificate, typically through a Web browser, and copies the certificate file to the E Series router so that the router can use it as part of IKE negotiations.

In the automatic method, the router uses SCEP and HTTP to authenticate with the CA and retrieve the certificate. The requested root CA certificate is automatically downloaded to the router.



**NOTE:** You cannot view certificate files by their filenames if the files were created by online enrollment. However, the certificate information will appear in the output for show commands.

## Obtaining a Public Key Certificate

After the public key is generated, the router must obtain a public key certificate from a CA, a process called certificate enrollment. The procedure to obtain public keys depends on whether the offline or online digital certificate process is being used.

The standards supported for certificate enrollment are PKCS #10 certificate requests, PKCS #7 responses, and X.509v3 certificates. For manual enrollment, certificates are encoded in base64 (MIME) so that the files are easily transferred through cut-and-paste operations and e-mail.

### Offline Certificate Enrollment

Offline certificate enrollment works as follows:

1. An operator generates a certificate request by supplying identity information.
2. The ERX router creates a certificate request file and makes it available to the operator.
3. The operator supplies the certificate request file to a CA for approval, typically by copying and pasting the file to a webpage.
4. The CA approves the request and generates a certificate.
5. The operator copies the certificate file onto the ERX router so that it can be used for IKE negotiations.

### Online Certificate Enrollment

Online certificate enrollment works as follows:



**NOTE:** The ERX router must have a root CA certificate for the specified CA before online certificate enrollment.

- The router uses SCEP and HTTP to enroll with the specified CA and retrieve the certificate that the router uses in IKE negotiations.

## Authenticating the Peer

The ERX router validates X.509v3 certificates from the peer by confirming that the ID payload passed in IKE matches the identifiers in the peer certificate. The router also verifies that the signature is correct, based on the root CA public key.

The ERX router also validates the certificate based on its time window, so correct UTC time on the router is essential. In addition to the certificate checks, the router confirms that message data received from the peer has the correct signature based on the peer's public key as found in its certificate. After the IKE authentication is done, quick-mode negotiation of SAs can proceed.

## Verifying CRLs

You can control how the router handles CRLs during negotiation of IKE phase 1 signature authentication. Both the offline and online digital certificate processes enable you to verify CRLs.

To verify CRLs in the offline certificate process, you must copy CRL files that are published by CAs to the ERX router. Using the **ipsec crl** command, you can control how the router handles CRLs during negotiation of IKE phase 1 signature authentication.

In the online certificate method you use the **crl** command to control CRL verification. The router uses HTTP to support CRL verification when the CRL distribution point that appears in the certificate has an `http://name` Uniform Resource Indicator (URI) format.

The **ipsec crl** and **crl** commands have three possible settings:

- Ignored—Allows negotiations to succeed even if a CRL is invalid or the peer's certificate appears in the CRL; this is the most lenient setting.
- Optional—If the router finds a valid CRL, the router uses it.
- Required—Requires a valid CRL, and the certificates belonging to the E Series router or the peer must not appear in the CRL; this is the strictest setting.

Based on the CRL setting, you can expect the phase 1 IKE negotiations to succeed or fail depending on the following conditions:

- CRL OK—The certificate revocation list is present for the CA and valid (not expired).
- CRL expired—The CRL is present on the ERX router but is expired.
- Missing CRL—There is no CRL on the router for the CA.
- Peer Cert revoked—The CRL contains the peer certificate.
- ERX Cert revoked—The CRL contains the E Series router's certificate.

[Table 32 on page 239](#) presents how the CRL setting affects the outcome of IKE phase 1 negotiations. It lists common problem conditions such as ERX Cert revoked.

Table 32: Outcome of IKE Phase 1 Negotiations

| Condition         | CRL Setting |          |          |
|-------------------|-------------|----------|----------|
|                   | Ignored     | Optional | Required |
| CRL OK            | Succeed     | Succeed  | Succeed  |
| CRL expired       | Succeed     | Succeed  | Fail     |
| Missing CRL       | Succeed     | Succeed  | Fail     |
| Peer Cert revoked | Succeed     | Fail     | Fail     |
| ERX Cert revoked  | Succeed     | Fail     | Fail     |

## File Extensions

Table 33 on page 239 describes the file extensions that the ERX routers use for digital certificates that are created by the offline process.

During the online digital certificate process, the certificate files are kept in NVS in hidden areas and are not visible to users (the files do not appear when you enter a **dir** shell command). Use the **show** commands to display information for the online certificate files. The router's private keys are similarly hidden from users.

Table 33: File Extensions (Offline Configuration)

| File Extension | Description                                                                                                                                                                                                                                                                                                                    |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| .crq           | Used for certificate request files that are generated on the ERX router and taken to CAs for obtaining a certificate.                                                                                                                                                                                                          |
| .cer           | Used for public certificate files. The public certificates for root CAs and the router public certificates are copied to the ERX router. They are automatically recognized as belonging to the ERX router or CA by certificate subject name and issuer name (in a CA they are the same). The ERX router supports multiple CAs. |
| .crl           | Used for certificate revocation lists that are obtained offline from CAs and copied to the ERX router. CRLs indicate which certificates from a particular CA are revoked.                                                                                                                                                      |

## Certificate Chains

In a basic CA model, there is a single CA from which the ERX router obtains the root CA certificates and the router's public key certificates. The E Series router also supports CA hierarchies, which consist of a top-level root CA and one or more sub-CAs (also called issuing CAs).

In a CA hierarchy, the router obtains its public key certificates and the CA certificate from a sub-CA. The sub-CA's certificate is signed by the root CA.

This process creates a certificate chain of trust in which the E Series router must verify all certificates in the chain until the router reaches a trusted CA, such as the root CA. For example, if the router receives traffic from a peer with a certificate signed by a sub-CA, the router first verifies the sub-CA's signature on the peer's certificate, then verifies the sub-CA's certificate, which is signed by the trusted root CA.

The ERX router supports CA hierarchies consisting of the root CA and one level of sub-CAs. When using a CA hierarchy, the router authenticates and enrolls for its public certificate with the sub-CA. When you use the **show ipsec ike-certificates** command, the root CA and sub-CA certificates are listed as CA certificates, and the router's public certificates are signed by the sub-CA.

## IKE Authentication Using Public Keys Without Digital Certificates

---

During IKE negotiations, peers exchange public keys to authenticate each other's identity and to ensure that IKE SAs are established with the intended party. Typically, public keys are exchanged in messages containing an X.509v3 digital certificate.

As an alternative to setting up digital certificates, you can configure and exchange public keys for IKE peers and use these keys for RSA signature authentication *without* having to obtain a digital certificate. This method offers the simplicity and convenience of using preshared key authentication without its inherent security risks.

With this method, you no longer need a digital certificate to do the following:

- Associate the router with its own public key
- Enable a remote peer to display the router's public key
- Learn the remote peer's public key

## Configuration Tasks

To set up public keys and peer public keys without obtaining a digital certificate, you use router commands to perform the following tasks:

- Display the router's public key by using the **show ipsec key mypubkey rsa** command. You can use the output from this command to provide information to the remote peer about the public key configured on the router. The remote peer can then enter the router's public key on its own system.
- Manually enter the public key for the remote peer with which you want to establish IKE SAs by using the **ipsec key pubkey-chain rsa** and **key-string** commands.
- Display the remote peer's public key by using the **show ipsec key pubkey-chain rsa** command.

For instructions on setting up peer public keys without a digital certificate, see [“Configuring Peer Public Keys Without Digital Certificates” on page 252](#).



## Public Key Format

RSA encryption and authentication require the use of a public key on both the ERX router and on the remote peer with which the router seeks to establish IKE SAs.

The length of the public key can be 1024 bits or 2048 bits, and the format conforms to the RSA standard defined in RFC 3447—Public-Key Cryptography Standards (PKCS) #1: RSA Cryptography Specifications Version 2.1 (February 2003).

The public key consists of three components:

- Abstract Syntax Notation 1 (ASN.1) header information
- RSA public key modulus
- RSA public key exponent

In the following example of a 1024-bit public key, the first portion of the key (shown in **bold** typeface) represents the ASN.1 header information. The second portion of the key (shown in regular typeface) represents the RSA public key modulus. The third portion of the key (shown in **bold** typeface) represents the RSA public key exponent.

```
30819F30 0D06092A 864886F7 0D010101 05000381 8D003081 89028181 00A7E43C
3E2D399F 34EF6E16 F84464A9 8A145997 CC7F34C8 3DFF8216 57780FE9 D5CE2717
86239050 7A331044 EBA90120 EC13A78D C1B24285 333A9193 D94A59C8 492D8CB9
A46403A4 37461E00 768CF45C 580211AC 72793764 51E3AB3C F9A6665E 562E3681
F120405E 30235690 6FC093AA EB0FE956 51C38EE1 54D81E40 7687C387 07020301
0001
```

For more information about the format of an RSA public key and about ASN.1 syntax, see RFC 3447—Public-Key Cryptography Standards (PKCS) #1: RSA Cryptography Specifications Version 2.1 (February 2003).

## Configuring Digital Certificates Using the Offline Method

To use the offline method to set up digital certificates on the router:

1. Generate RSA key pairs.

```
host1(config)#ipsec key generate rsa 2048
Please wait.....
.....
IPsec Generate Keys complete
```

2. In your IKE policy, set the authentication method to RSA signatures.

```
host1(config)#ipsec ike-policy-rule 1
host1(config-ike-policy)#authentication rsa-sig
host1(config-ike-policy)#exit
host1(config)#
```



**NOTE:** For more information about setting up IKE policies, see “Defining an IKE Policy” on page 172 in “Configuring IPsec” on page 143.

3. Enter IPsec Identity Configuration mode.

```
host1(config)#ipsec identity
host1(config-ipsec-identity)#
```

4. Specify the information that the router uses to generate a certificate request.

- a. Specify a country name.

```
host1(config-ipsec-identity)#country CA
```

- b. Specify a common name.

```
host1(config-ipsec-identity)#common-name Jim
```

- c. Specify a domain name.

```
host1(config-ipsec-identity)#domain-name myerx.kanata.junipernetworks.com
```

- d. Specify an organization.

```
host1(config-ipsec-identity)#organization juniperNetworks
host1(config-ipsec-identity)#exit
host1(config)#
```

5. Generate a certificate request using certificate parameters from the IPsec identity configuration.

```
host1(config)#ipsec certificate-request generate rsa myrequest.crq
```

6. After the certificate request is generated, you need to copy the file from the router and send it to the CA. Typically, you copy the file and paste it to a CA's webpage.

7. When you receive the certificate from the CA, copy the certificate to the router, and then inform the router that the new certificate exists.

```
host1(config)#ipsec certificate-database refresh
```

8. (Optional) Set the sensitivity of how the router handles CRLs.

```
host1(config)#ipsec crl ignored
```

9. (Optional) To delete RSA key pairs, use the **ipsec key zeroize** command.

```
host1(config)#ipsec key zeroize rsa
```

### ***authentication***

- Use to specify the authentication method that the router uses. For digital certificates, the method is set to RSA signature.

- Example

```
host1(config-ike-policy)#authentication rsa-sig
```

- Use the **no** version to restore the default, preshared keys.

- See *authentication*.

### ***common-name***

- Use to specify a common name used to generate certificate requests.

- Example

```
host1(config-ipsec-identity)#common-name Jim
```

- Use the **no** version to remove the common name.
- See *common-name*.

### *country*

- Use to specify a country name used to generate certificate requests.
- Example

```
host1(config-ipsec-identity)#country CA
```

- Use the **no** version to remove the country name.
- See *country*.

### *domain-name*

- Use to specify the domain name that the router uses in IKE authentication messages and to generate certificate requests.
- The domain name is used in the SubjectAlternative DNS certificate extensions and as an FQDN (fully qualified domain name) ID payload for IKE negotiations.
- Example

```
host1(config-ipsec-identity)#domain-name myerx.kanata.junipernetworks.com
```

- Use the **no** version to remove the domain name.
- See *domain-name*.

### *ike crl*

- Use to control how the router handles CRLs during negotiation of IKE phase 1 signature authentication. Specify one of the following keywords:
  - **ignored**—Allows negotiations to succeed even if a CRL is invalid or the peer's certificate appears in the CRL; this is the most lenient setting
  - **optional**—If the router finds a valid CRL, it uses it; this is the default setting
  - **required**—Requires a valid CRL; either the certificates that belong to the E Series router or the peer must not appear in the CRL; this is the strictest setting
- Example

```
host1(config)#ike crl ignored
```

- Use the **no** version to return the CRL setting to the default, optional.



**NOTE:** This command has been replaced by “[ipsec crl](#)” on page 244 and may be removed completely in a future release.

- See *ike crl*.

### *ipsec certificate-database refresh*

- Use to inform the ERX router that a public key certificate has been copied to the router. The router then verifies public certificates found on its disk against its private key and prepares the certificates for use.



**NOTE:** On reload, the router scans all certificate files and determines which files are router public certificates and which are root CA certificates.

- Example  
`host1(config)#ipsec certificate-database refresh`
- There is no **no** version.
- See *ipsec certificate-database refresh*.

### *ipsec certificate-request generate*

- Use to cause the router to generate a certificate request using certificate parameters from the IPsec identity configuration.
- Include a name for the certificate request file. The file name must have a .crq extension.
- After the router generates the certificate, use offline methods to send the certificate request file to the CA.
- Example  
`host1(config)#ipsec certificate-request generate rsa myrequest.crq`
- There is no **no** version.
- See *ipsec certificate-request generate*.

### *ipsec crl*

- Use to control how the router handles CRLs during negotiation of IKE phase 1 signature authentication. Specify one of the following keywords:
  - **ignored**—Allows negotiations to succeed even if a CRL is invalid or the peer's certificate appears in the CRL; this is the most lenient setting
  - **optional**—If the router finds a valid CRL, it uses it; this is the default setting
  - **required**—Requires a valid CRL; either the certificates that belong to the E Series router or the peer must not appear in the CRL; this is the strictest setting
- Example  
`host1(config)#ipsec crl ignored`
- Use the **no** version to return the CRL setting to the default, optional.



**NOTE:** This command replaces “ike crt” on page 243, which may be removed completely in a future release.

- See *ipsec crt*.

### *ipsec identity*

- Use to enter IPsec Identity Configuration mode in which you can specify information that the router uses in certificate requests and during negotiations with its peers.
- Example
 

```
host1(config)#ipsec identity
host1(config-ipsec-identity)#
```
- Use the **no** version to remove the identity configuration.
- See *ipsec identity*.

### *ipsec ike-policy-rule*

- Use to define an ISAKMP/IKE policy.
- When you enter the command, you include a number that identifies the policy and assigns a priority to the policy. You can number policies in the range 1–10000, with 1 having the highest priority.
- Example
 

```
host1(config)#ipsec ike-policy-rule 3
host1(config-ike-policy)#
```
- Use the **no** version to remove policies. If you do not include a priority number with the **no** version, all policies are removed.



**NOTE:** This command replaces “ipsec isakmp-policy-rule” on page 245, which may be removed completely in a future release.

- See *ipsec ike-policy-rule*.

### *ipsec isakmp-policy-rule*

- Use to define an ISAKMP/IKE policy.
- When you enter the command, you include a number that identifies the policy and assigns a priority to the policy. You can number policies in the range 1–10000, with 1 having the highest priority.
- Example
 

```
host1(config)#ipsec isakmp-policy-rule 3
host1(config-ike-policy)#
```

- Use the **no** version to remove policies. If you do not include a priority number with the **no** version, all policies are removed.



NOTE: This command has been replaced by “[ipsec ike-policy-rule](#)” on [page 245](#) and may be removed completely in a future release.

- See *ipsec isakmp-policy-rule*.

### *ipsec key generate*

- Use to generate RSA key pairs. Include a length of either 1024 or 2048 bits. The generated keys can be used only after the CA issues a certificate for them.
- Example

```
host1(config)#ipsec key generate rsa 2048
Please wait.....
.....
IPsec Generate Keys complete
```
- There is no **no** version. To remove a key pair, use the **ipsec key zeroize** command.
- See *ipsec key generate*.

### *ipsec key zeroize*

- Use to delete RSA key pairs. Include one of the following keywords:
  - **rsa**—Removes the RSA key pair from the router
  - **pre-share**—Removes all preshared keys from the router
  - **all**—Removes all keys within the VR context from the router
- Example

```
host1(config)#ipsec key zeroize rsa
```
- There is no **no** version.
- See *ipsec key zeroize*.

### *organization*

- Use to specify the organization used in the Subject Name field of certificates.
- Example

```
host1(config-ipsec-identity)#organization juniperNetworks
```
- Use the **no** version to remove the organization name.
- See *organization*.

---

## Configuring Digital Certificates Using the Online Method

To use the online configuration method to set up digital certificates on the router:

1. Generate the RSA key pair.

```
host1(config)#ipsec key generate rsa 2048
Please wait.....
.....
IPsec Generate Keys complete
```

2. In your IKE policy, set the authentication method to RSA signatures.

```
host1(config)#ipsec ike-policy-rule 1
host1(config-ike-policy)#authentication rsa-sig
host1(config-ike-policy)#exit
```



**NOTE:** For more information about setting up IKE policies, see [“Defining an IKE Policy” on page 172](#) in [“Configuring IPsec” on page 143](#).

3. Enter IPsec CA Identity Configuration mode, and specify the name of the certificate authority.

```
host1(config)#ipsec ca identity trustedca1
host1(config-ca-identity)#
```

4. Specify the name of the CA issuer.

```
host1(config-ca-identity)#issuer-identifier BetaSecurityCorp
```

5. Specify the URL of the SCEP server from which the CA certificates and the router's public certificates is retrieved.

```
host1(config-ca-identity)#enrollment url http://192.168.99.105/scepurl
```

6. (Optional) Set the sensitivity of how the router handles CRLs.

```
host1(config-ca-identity)#crl ignored
```

7. (Optional) Specify the wait period between certificate request retries.

```
host1(config-ca-identity)#enrollment retry-period 5
```

8. (Optional) Specify the absolute time limit on enrollment.

```
host1(config-ca-identity)#enrollment retry-limit 60
```

9. (Optional) Specify the URL of your network's HTTP proxy server.

```
host1(config-ca-identity)#root proxy url http://192.168.5.45
host1(config-ca-identity)#exit
```

10. Retrieve the CA certificate.

```
host1(config)#ipsec ca authenticate trustedca1
```

11. Enroll with the CA and retrieve the router's certificate from the CA.

```
host1(config)#ipsec ca enroll trustedca1 My498pWd
```

12. (Optional) To delete RSA key pairs, use the **ipsec key zeroize** command.

### *authentication*

- Use to specify the authentication method that the router uses. For digital certificates, the method is set to RSA signature.
- Example

```
host1(config-ike-policy)#authentication rsa-sig
```
- Use the **no** version to restore the default, preshared keys.
- See *authentication*.

### *crl*

- Use to control how the router handles certificate revocation lists (CRLs) during negotiation of online IKE phase 1 signature authentication. Specify one of the following keywords:
  - **ignored**—Allows negotiations to succeed even if a CRL is invalid or the peer's certificate appears in the CRL; this is the most lenient setting
  - **optional**—If the router finds a valid CRL, it uses it; this is the default setting
  - **required**—Requires a valid CRL; either the certificates that belong to the E Series router or the peer must not appear in the CRL; this is the strictest setting
- Example

```
host1(config-ca-identity)#crl ignored
```
- Use the **no** version to return the CRL setting to the default, optional.
- See *crl*.

### *enrollment retry-limit*

- Use to set the time period during which the router continues to send a certificate request to the CA. You can specify a time period in the range 0–480 minutes, with 0 specifying an infinite time period.
- Example

```
host1(config-ca-identity)#enrollment retry-limit 200
```
- Use the **no** version to restore the default of 60 minutes.
- See *enrollment retry-limit*.

### *enrollment retry-period*

- Use to set the number of minutes that the router waits after receiving no response before resending a certificate request to the CA. You can specify a wait period in the range 0–60 minutes.
- Example

```
host1(config-ca-identity)#enrollment retry-period 40
```
- Use the **no** version to restore the default, 1 minute.
- See *enrollment retry-period*.



***enrollment url***

- Use to specify the URL of the SCEP server, in the format `http://server_ipaddress`. You can then use the **ipsec ca authentication** command to retrieve CA certificates from the SCEP server, and the **ipsec ca enroll** command to retrieve the router's public key certificates from the server.
- Example
 

```
host1(config-ca-identity)#enrollment url http://192.168.99.105/scepurl
```
- Use the **no** version to delete the enrollment URL specification.
- See *enrollment url*.

***ipsec ca authenticate***

- Use to retrieve the specified CA's certificate. If authentication is successful, the fingerprint is sent, and an `ikeEnrollment` message is logged at severity info.
- The CA must be previously declared by the **ipsec ca identity** command.
- Example
 

```
host1(config)#ipsec ca authenticate trustedca1
host1(config)#INFO 10/18/2003 03:45:16 ikeEnrollment (): Received CA certificate for
ca:trustedca1
INFO 10/18/2003 03:45:16 ikeEnrollment (): Received CA certificate for ca:trustedca1
fingerprint:28:19:ba:76:d8:e0:bb:22:60:cd:b9:2d:dc:b8:58:01
host1(config)#
```
- Use the **no ipsec ca identity** command for the specified CA, or boot the router using the factory defaults to remove the CA certificate that was generated during the online configuration.
- There is no **no** version.
- See *ipsec ca authenticate*.

***ipsec ca enroll***

- Use to enroll with the specified CA and to retrieve the router's public key certificate during online digital certificate configuration. If enrollment is successful, the CA sends the certificate to the router and logs an `ikeEnrollment` message is logged at severity info.
- Use the password option, if required by the CA, to access the CA and enable enrollment.
- The CA must be previously declared by the **ipsec ca identity** command.
- Example
 

```
host1(config)#ipsec ca enroll trustedca1 My498pWd
host1(config)#INFO 10/18/2003 03:49:33 ikeEnrollment (): Received erx certificate for
ca:trustedca1
host1(config)#
```
- Use the **no ipsec ca identity** command for the specified CA or boot the router using the factory defaults to remove the router's public certificate that was generated during the online configuration.

- There is no **no** version.
- See *ipsec ca enroll*.

### *ipsec ca identity*

- Use to specify the CA that the ERX router uses for online certificate requests and to enter IPsec Identity Configuration mode.
- In IPsec Identity Configuration mode you specify information that the router uses in certificate requests and during negotiations with its peers.
- Example

```
host1(config)#ipsec ca identity trustedca1
host1(config-ipsec-identity)#
```
- Use the **no** version to remove the identity configuration.
- See *ipsec ca identity*.

### *ipsec ike-policy-rule*

- Use to define an ISAKMP/IKE policy.
- When you enter the command, you include a number that identifies the policy and assigns a priority to the policy. You can number policies in the range 1–10000, with 1 having the highest priority.
- Example

```
host1(config)#ipsec ike-policy-rule 3
host1(config-ike-policy)#
```
- Use the **no** version to remove policies. If you do not include a priority number with the **no** version, all policies are removed.



**NOTE:** This command replaces “*ipsec isakmp-policy-rule*” on page 245, which may be removed completely in a future release.

---

- See *ipsec ike-policy-rule*.

### *ipsec isakmp-policy-rule*

- Use to define an ISAKMP/IKE policy.
- When you enter the command, you include a number that identifies the policy and assigns a priority to the policy. You can number policies in the range 1–10000, with 1 having the highest priority.
- Example

```
host1(config)#ipsec isakmp-policy-rule 3
host1(config-ike-policy)#
```
- Use the **no** version to remove policies. If you do not include a priority number with the **no** version, all policies are removed.



**NOTE:** This command has been replaced by “[ipsec ike-policy-rule](#)” on [page 245](#) and may be removed completely in a future release.

- See *ipsec isakmp-policy-rule*.

### *ipsec key generate*

- Use to generate RSA key pairs. Include a length of either 1024 or 2048 bits. The generated keys can be used only after the CA issues a certificate for them.
- Example
 

```
host1(config)#ipsec key generate rsa 2048
Please wait.....
.....
IPsec Generate Keys complete
```
- There is no **no** version. To remove a key pair, use the **ipsec key zeroize** command.
- See *ipsec key generate*.

### *ipsec key zeroize*

- Use to delete RSA key pairs. Include one of the following keywords:
  - **rsa**—Removes the RSA key pair from the router
  - **pre-share**—Removes all preshared keys from the router
  - **all**—Removes all keys within the VR context from the router
- Example
 

```
host1(config)#ipsec key zeroize rsa
```
- There is no **no** version.
- See *ipsec key zeroize*.

### *issuer-identifier*

- Use to specify the name of the CA issuer for online digital certificate configuration. The identifier and the enrollment URL specified by the **enrollment url** command are used together to create the CA authentication requests.
- Example
 

```
host1(config-ca-identity)#issuer-identifier BetaSecurityCorp
```
- Use the **no** version to remove the name from the configuration.
- See *issuer-identifier*.

### *root proxy url*

- Use to specify an HTTP proxy server that can submit HTTP requests on the E Series router's behalf to retrieve the root CA certificate. Use this command if your network has an HTTP proxy server installed between the E Series router and the Internet. Use the format `http://server_ipaddress` to specify the URL of the proxy server.
- Example
 

```
host1(config-ca-identity)#root proxy url http://192.168.5.45
```
- Use the **no** version to remove the root proxy URL from the configuration.
- See *root proxy url*.

## Configuring Peer Public Keys Without Digital Certificates

During IKE negotiations, peers exchange public keys to authenticate each other's identity and to ensure that IKE SAs are established with the intended party. Typically, public keys are exchanged in messages containing an X.509v3 digital certificate. As an alternative, however, you can configure and exchange peer public keys and use them for RSA authentication *without* having to obtain a digital certificate.

To configure and exchange peer public keys without obtaining a digital certificate:

1. Generate the RSA key pair on the router.

```
host1(config)#ipsec key generate rsa 1024
Please wait...
IPsec Generate Keys complete
```

2. In your IKE policy, set the authentication method to RSA signature.

```
host1(config)#ipsec ike-policy-rule 1
host1(config-ike-policy)#authentication rsa-sig
host1(config-ike-policy)#exit
host1(config)#exit
```



**NOTE:** For more information about setting up IKE policies, see [“Defining an IKE Policy” on page 172](#) in [“Configuring IPsec” on page 143](#).

3. Display the router's public key.

```
host1#show ipsec key mypubkey rsa
30819f30 0d06092a 864886f7 0d010101 05000381 8d003081 89028181 00daaa65
8082ac0a ec42e552 10e3489b 37463ed8 9bfa2541 f46a7b30 0e908749 5b652ae5
ae604e9a 81bc3268 270e7f68 69ffd2a8 be268afa 92849fd0 4e8c96be 3eddf1c2
12d9fe7a 68e8507c 99b59ff3 bb0c3942 b0a90c76 3ae3acbb 4a777037 31527ea0
23693bdc e5393c6f 2ef3e7e7 bb1a308e d42ce0ad a095273e d718384c dd020301
0001
```

For information about the format of an RSA public key, see [“Public Key Format” on page 241](#).

4. Use the output from the **show ipsec key mypubkey rsa** command to provide information to the remote peer about the public key configured on the E Series router.

Providing this information enables the remote peer to enter the router's public key on its own system.

The **show ipsec key mypubkey rsa** command enables you to display the contents of the router's public key without having to obtain a digital certificate.

5. Obtain the public key from the remote peer.

For example, you might receive an e-mail message from the remote peer containing the public key information.

6. Configure the public key for the remote IKE peer.

- a. Access IPsec Peer Public Key Configuration mode.

You must identify the remote peer associated with the public key by specifying the remote peer's IP address, fully qualified domain name (FQDN), or FQDN preceded by an optional *user@* specification. For example, the following command enables you to enter the peer public key for the remote peer identified by IP address 192.168.15.5.

```
host1(config)#ipsec key pubkey-chain rsa address 192.168.15.5
host1(config-peer-public-key)#
```

- b. Enter the peer public key that you obtained in Step 5.

```
host1(config-peer-public-key)#key-string "
Enter remainder of text message. End with the character '"'.

```

```
30820122 300d0609 2a864886 f70d0101 01050003 82010f00 3082010a 02820101
00effc6f d91cbf23 5de66454 420db27a 0bacfc92 63a54e60 587c3e1c 951be4e8
09e7d130 da924040 0ceb797c ddc0df10 dabeb3fc a17145ff 6e7ff977 68ac0698
748d30f4 478252ed 29bf3e4e a6657cc8 cfaf1de4 e7dc2473 33231286 0ecfb15b
4aac505b 255f17ca faf884ca f0402022 5ad6f446 e0f3fb1e d48bbc00 5d4fe9b6
35f88b53 1bf4f07c b168e47b b7143181 5bad4586 0abb7b03 6dba9668 b45e3714
0b64ca82 3a53f69b 357a7d41 f512da37 71901b14 08212648 277f6d38 6bc34164
8c3ac8d4 d9c8baac dc006dac 8c09ce37 44a5d124 b69fec24 df0fc3a8 98e6efc8
5a1d65eb e4b832ba adc26c63 1996fe37 e797ecff 6e2acdd6 0981ef2c 3dd2f506
01020301 0001"
```

- c. (Optional) Verify the peer public key configuration.

```
host1#show ipsec key pubkey-chain rsa address 192.168.15.5
```

```
30820122 300d0609 2a864886 f70d0101 01050003 82010f00 3082010a 02820101
00effc6f d91cbf23 5de66454 420db27a 0bacfc92 63a54e60 587c3e1c 951be4e8
09e7d130 da924040 0ceb797c ddc0df10 dabeb3fc a17145ff 6e7ff977 68ac0698
748d30f4 478252ed 29bf3e4e a6657cc8 cfaf1de4 e7dc2473 33231286 0ecfb15b
4aac505b 255f17ca faf884ca f0402022 5ad6f446 e0f3fb1e d48bbc00 5d4fe9b6
35f88b53 1bf4f07c b168e47b b7143181 5bad4586 0abb7b03 6dba9668 b45e3714
0b64ca82 3a53f69b 357a7d41 f512da37 71901b14 08212648 277f6d38 6bc34164
8c3ac8d4 d9c8baac dc006dac 8c09ce37 44a5d124 b69fec24 df0fc3a8 98e6efc8
5a1d65eb e4b832ba adc26c63 1996fe37 e797ecff 6e2acdd6 0981ef2c 3dd2f506
01020301 0001
```

## authentication

- Use to specify in the ISAKMP/IKE policy that the router uses the RSA signature authentication method for IKE negotiations.
- Example

```
host1(config-ike-policy)#authentication rsa-sig
```
- Use the **no** version to restore the default authentication method, preshared keys.
- See *authentication*.

### *ipsec ike-policy-rule*

- Use to access IPsec IKE Policy Configuration mode to define an ISAKMP/IKE policy.
- For information about how to use this command, see [“ipsec ike-policy-rule” on page 245](#).
- Example

```
host1(config)#ipsec ike-policy-rule 2
host1(config-ike-policy)#
```
- Use the **no** version to remove policies. If you do not include a priority number with the **no** version, all policies are removed.
- See *ipsec ike-policy-rule*.

### *ipsec key generate*

- Use to generate a 1024-bit or 2048-bit RSA key pair.
- Example

```
host1(config)#ipsec key generate rsa 2048
Please wait.....
.....
IPsec Generate Keys complete
```
- There is no **no** version. To remove a key pair, use the **ipsec key zeroize** command.
- See *ipsec key generate*.

### *ipsec key pubkey-chain rsa*

- Use to access IPsec Peer Public Key Configuration mode to configure the public key for a remote peer with which you want to establish IKE SAs.
- The **ipsec key pubkey-chain rsa** command enables you to manually enter the public key data for the remote peer without having to obtain a digital certificate.
- To specify the IP address of the remote peer associated with the public key, use the **address** keyword followed by the IP address, in 32-bit dotted decimal format.
- To specify the identity of the remote peer associated with the public key, use the **name** keyword followed by either:
  - The fully qualified domain name (FQDN)
  - The FQDN preceded by an optional *user@* specification; this is also referred to as user FQDN format
- The FQDN and user FQDN identifiers are case-sensitive.

- To ensure that the public key is associated with the correct remote peer, the router requires an exact match for the identifier string. For example, a public key for user FQDN `mjones@sales.company_abc.com` does not match a public key for FQDN `sales.company_abc.com`.
- From IPsec Peer Public Key Configuration mode, use the **key-string** command to enter the peer public key data. For information about how to use this command, see [“key-string” on page 255](#).
- Example 1—Enables you to configure the public key for a remote peer with IP address 192.168.50.10
 

```
host1(config)#ipsec key pubkey-chain rsa address 192.168.50.10
host1(config-peer-public-key)#
```
- Example 2—Enables you to configure the public key for a remote peer with the FQDN `sales.company_xyz.com`

```
host1(config)#ipsec key pubkey-chain rsa name sales.company_xyz.com
host1(config-peer-public-key)#
```
- Example 3—Enables you to configure the public key for a remote peer with the FQDN `tsmith@sales.company_xyz.com`

```
host1(config)#ipsec key pubkey-chain rsa name tsmith@sales.company_xyz.com
host1(config-peer-public-key)#
```
- Use the **no** version to remove the peer public key from the router.
- See *ipsec key pubkey-chain rsa*.

### key-string

- Use to manually enter a 1024-bit or 2048-bit public key for a remote peer with which you want to establish IKE SAs.
- The key string represents the public key hexadecimal data that includes the ASN.1 object identifier and sequence tags for RSA encryption.
- Enter an alphanumeric key string with a maximum of 1999 characters.
- You must use the same character (for example, “ or x) at the beginning and end of the string to delimit the key string. The delimiter character is case-sensitive and must not occur anywhere else in the key string.
- For information about the format of an RSA public key, see [“Public Key Format” on page 241](#).
- Example 1—Configures the public key for a remote peer with IP address 192.168.50.10, using “ (double quotation marks) as the key string delimiter character
 

```
host1(config)#ipsec key pubkey-chain rsa address 192.168.50.10
host1(config-peer-public-key)#key-string "
Enter remainder of text message. End with the character '"'.

30819f30 0d06092a 864886f7 0d010101 05000381 8d003081 89028181 00d3a447
0b997844 213de4ae 13a2c09b f74051cd d404a187 c5e86867 d525cb6e 571a44f2
92bac7e8 bb282857 fb20357c d94ec241 b651596c 350dd770 6853526b c95e60c1
52ec06ce 094882a7 4a7275a6 af1b738f 29d1124d 21e49b2a 3b0b7f2f fe31f0cc
```

```
178ddbfe a587a7a9 83aa0601 e86e7de4 3ca78f60 89a758bf 4c1247ba cb020301
0001"
```

- Example 2—Configures the public key for a remote peer with the FQDN sales.company\_xyz.com, using ' (single quotation mark) as the key string delimiter character

```
host1(config)#ipsec key pubkey-chain rsa name sales.company_xyz.com
host1(config-peer-public-key)#key-string '
Enter remainder of text message. End with the character '".
```

```
30820122 300d0609 2a864886 f70d0101 01050003 82010f00 3082010a 02820101
00c03cc6 0bad55ea b4f8a01f 5cf69de5 f03185e2 1338b5cb fa8418c3 6cbe1a77
bfebfa5b 7a8f0ac2 6e2b223b 11e3c316 a30f7fb0 7bd2ab8a a614bb3d 2fce97bf
d6376467 0d5d1a16 d630c173 3ed93434 e690f355 00128ffb c36e72fa 46eae49a
5704eabe 0e34776c 7d243b8b fcb03c75 965c12f4 d68c6e63 33e0207c a985ffff
2422fb53 23d49dbb f7fd3140 a7f245ee bf629690 9356a29c b149451a 691a2531
9787ce37 2601bdf9 1434b174 4fd21cf2 48e10f58 9ac89df1 56e360b1 66fb0b3f
27ad6396 7a491d74 3b8379ea be502979 8f0270b2 6063a474 fadcf5f8 f0ca6f7a
ddea66c7 cf637598 9cdb5087 0480af29 b9c174ab 1b1d033f 67641a8c 5918ddce
1f020301 0001'
```

- Example 3—Configures the public key for a remote peer with the user FQDN tsmith@sales.company\_xyz.com, using lowercase x as the key string delimiter character

```
host1(config)#ipsec key pubkey-chain rsa name tsmith@sales.company_xyz.com
host1(config-peer-public-key)#key-string x
Enter remainder of text message. End with the character 'x'.
```

```
30819f30 0d06092a 864886f7 0d010101 05000381 8d003081 89028181 00bcc106
8694a505 0b92433e 4c27441e 3ad8955d 5628e2ea 5ee34b0c 6f82c4fd 8d5b7b51
f1a3c94f c4373f9b 70395011 79b4c2fb 639a075b 3d66185f 9cc6cdd1 6df51f74
cb69c8bb dbb44433 a1faac45 10f52be8 d7f2c8cd ad5172a6 e7f14b1c bba4037b
29b475c6 ad7305ed 7c460779 351560c6 344ccd1a 35935ea3 da5de228 bd020301
0001x
```

- There is no **no** version. Use the **no** version of the **ipsec key pubkey-chain rsa** command to remove the peer public key from the router.
- See *key-string*.

## Monitoring Digital Certificates and Public Keys

Use the following **show** commands to display information about IKE certificates, IKE configurations, CRLs, public keys, and peer public keys.

### *show ipsec ca identity*

- Use to display information about IKE CA identities used by the router for online digital certificate configuration. You can display information for a specific CA or for all CAs configured on the router.
- Field descriptions
  - CA—Certificate authority that the router uses to generate certificate requests
  - enrollment url—URL of the SCEP server where the router sends certificate requests



- issuer id—Name of the CA issuer providing the digital certificates
- retry period—Number of minutes that the router waits after receiving no response from the CA before resending a certificate request
- retry limit—Number of minutes during which the router continues to send a certificate request to the CA
- crl setting—Setting that controls how the router checks the certificate revocation lists
- proxy url—HTTP proxy server used to retrieve the root CA certificate, if any
- Example
 

```
host1#show ipsec ca identity mysecureca1

CA: mysecureca1 parameters:
enrollment url:http://192.168.10.124/scepurl
issuer id      :BetaSecurityCorp
retry period   :1
retry limit    :60
crl setting    :optional
proxy url      :
```
- See *show ipsec ca identity*.

*show ipsec certificates*

*show ike certificates*



**NOTE:** The *show ike certificates* command has been replaced by the *show ipsec certificates* command and may be removed completely in a future release.

- Use to display the IKE certificates and CRLs on the router. Specify the type of certificate you want to display:
  - **all**—All certificates configured on the router
  - **crl**—Certificate revocation lists
  - **peer**—Peer certificates
  - **public-certs**—Public certificates
  - **root-cas**—Root CA certificates
- Use the **hex-format** keyword to display certificate data, such as serial numbers, in hexadecimal format. Doing so allows easier comparison with CAs, such as Microsoft, that display certificates in hexadecimal format.
- Field descriptions
  - Ca identity—Certificate authority that the router uses to generate certificate requests
  - SubjectName—Distinguished name for the certificate

- IssuerName—Organization that signed and issued the certificate
  - SerialNumber—Unique serial number assigned to the certificate by the CA
  - SignatureAlgorithm—Algorithm used for the digital signature
  - Validity—Beginning and ending period during which the certificate is valid
  - PublicKeyInfo—Information about the public key
  - Extensions—Fields that provide additional information for the certificate
  - Fingerprints—Unique hash of the certificate, which can be used to verify that the certificate is valid
- Example 1

```
host1#show ipsec certificates public-certs
```

```
----- Public Certificates: -----
```

```
Ca Identity:[trustedca1]Certificate =
  SubjectName = <C=us, O=junipernetworks, CN=jim>
  IssuerName = <C=CA, ST=ON, L=Kanata, O=BetaSecurityCorp, OU=VT Group, CN=VT
Root CA>
  SerialNumber= 84483276204047383658902
  SignatureAlgorithm = rsa-pkcs1-sha1
  Validity =
    NotBefore = 2003 Oct 21st, 16:14:42 GMT
    NotAfter = 2004 Oct 21st, 16:24:42 GMT
  PublicKeyInfo =
    PublicKey =
      Algorithm name (SSH) : if-modn{sign{rsa-pkcs1-md5}}
      Modulus n (1024 bits) :
        13409127965307061503054050053800642488356537668078160605242622661311625

        19876607806686846822070359658649546374128540876213416858514288030584124

        05896520823533525098960335493944208019747261524241389345208872551265097

        58542773588125824612424422877870700028956172284401073039192457619002485

        5366053321117704284702619
      Exponent e ( 17 bits) :
        65537
    Extensions =
      Available = authority key identifier, subject key identifier, key usage,
        subject alternative name, authority information access, CRL distribution
        points
      SubjectAlternativeNames =
        Following names detected =
          DNS (domain name server name)
        Viewing specific name types =
          DNS = host1.kanata.junipernetworks.com
      KeyUsage = DigitalSignature
      CRLDistributionPoints =
        % Entry 1
        FullName =
          Following names detected =
            URI (uniform resource indicator)
          Viewing specific name types =
            URI = http://vtscal/CertEnroll/VTS%20Root%20CA.cr1
```

```

% Entry 2
FullName =
  Following names detected =
    URI (uniform resource indicator)
  Viewing specific name types =
    No names of type IP, DNS, URI, EMAIL, RID, UPN or DN detected.
AuthorityKeyID =
KeyID =
  15:0a:17:4d:36:b6:49:96:fa:d5:be:df:51:3e:e4:90:51:a2:c0:95
AuthorityCertificateIssuer =
  Following names detected =
    DN (directory name)
  Viewing specific name types =
    No names of type IP, DNS, URI, EMAIL, RID, UPN or DN detected.
AuthorityCertificateSerialNumber = 79592882508437425959858112994892506178

SubjectKeyID =
KeyId =
  78:e0:3e:f7:24:65:2d:4b:01:d4:91:f9:66:c7:67:26:06:74:6c:5c
AuthorityInfoAccess =
AccessMethod = 1.3.6.1.5.5.7.48.2
AccessLocation =
  Following names detected =
    URI (uniform resource indicator)
  Viewing specific name types =
    No names of type IP, DNS, URI, EMAIL, RID, UPN or DN detected.
AccessMethod = 1.3.6.1.5.5.7.48.2
AccessLocation =
  Following names detected =
    URI (uniform resource indicator)
  Viewing specific name types =
    No names of type IP, DNS, URI, EMAIL, RID, UPN or DN detected.
Fingerprints =
MD5 = c4:c9:22:b6:19:07:4e:4f:ee:81:7a:9f:cb:f9:1f:7e
SHA-1 = 58:ba:fb:0d:68:61:42:2a:52:7e:19:82:77:a4:55:4c:25:8c:c5:60

```

- Example 2

```

host1# show ipsec certificates root-cas
----- Root CAs: -----
Ca Identity:[trustedca1]Certificate =
  SubjectName = <C=CA, ST=ON, L=Kanata, O=Juniper Networks, OU=VTS Group, CN=VTS
  Root CA>
  IssuerName = <C=CA, ST=ON, L=Kanata, O=BetaSecurityCorp, OU=VT Group, CN=VT
  Root CA>
  SerialNumber= 79592882508437425959858112994892506178
  SignatureAlgorithm = rsa-pkcs1-sha1
  Certificate seems to be self-signed.
    * Signature verification success.
  Validity =
    NotBefore = 2003 Mar 26th, 15:50:53 GMT
    NotAfter  = 2006 Mar 26th, 15:59:59 GMT
  PublicKeyInfo =
    PublicKey =
      Algorithm name (SSH) : if-modn{sign{rsa-pkcs1-md5}}
      Modulus n (1024 bits) :
        14424807498766001201060433525671934401816213246866823722650117007030500

        12414152472800629737773845549310833804653975288246486381759003010224672

        53370575541853958272072875412915858260834056069053966369912244336288229

```

```

09443381900005615652631560044304863856421739848326865877661787314144447
8276502323232108941157077
Exponent e ( 17 bits) :
65537
Extensions =
  Available = subject key identifier, key usage, basic constraints(critical),
  CRL distribution points, unknown
  KeyUsage = DigitalSignature NonRepudiation KeyCertSign CRLSign
  BasicConstraints =
    cA = TRUE
    [critical]
  CRLDistributionPoints =
    % Entry 1
    FullName =
    Following names detected =
    URI (uniform resource indicator)
    Viewing specific name types =
    URI = http://vtscal/CertEnroll/VTS%20Root%20CA.crl
    % Entry 2
    FullName =
    Following names detected =
    URI (uniform resource indicator)
    Viewing specific name types =
    No names of type IP, DNS, URI, EMAIL, RID, UPN or DN detected.
  SubjectKeyID =
  KeyId =
  15:0a:17:4d:36:b6:49:96:fa:d5:be:df:51:3e:e4:90:51:a2:c0:95
  Unknown 1.3.6.1.4.1.311.21.1 =
  02:01:00
  Fingerprints =
  MD5 = 8c:56:fb:a6:bd:ab:13:67:e6:13:09:c1:d0:de:1f:24
  SHA-1 = 22:3d:84:6d:d4:5f:18:87:ae:2c:15:7d:2a:94:20:ff:c6:12:fb:6f

```

- See *show ike certificates*.
- See *show ipsec certificates*.

*show ipsec identity*

*show ike identity*



**NOTE:** The *show ike identity* command has been replaced by the *show ipsec identity* command and may be removed completely in a future release.

- Use to display the IKE identity configuration.
- Field descriptions
  - Domain Name—Domain name the router uses in IKE authentication messages and to generate certificate requests
  - Common Name—Common name used to generate certificates
  - Organization—Name of the organization used in the Subject Name field of certificates
  - Country—Country used to generate certificates

- Example

```
host1#show ipsec identity
```

```
Ike identity:
```

```
Domain Name :myerx.kanata.junipernetworks.com
Common Name :jim
Organization:junipernetworks
Country     :ca
```

- See *show ipsec identity*.
- See *show ike identity*.

***show ipsec ike-configuration***

***show ike configuration***



**NOTE:** The *show ike configuration* command has been replaced by the *show ipsec ike-configuration* command and may be removed completely in a future release.

- Use to display a summary of the IKE configuration.
- Field descriptions
  - Ike identity—Information from your IKE identify configuration that the router uses to generate certificate requests
  - CRL Check—Setting of the CRL check: optional, required, ignored

- Example

```
host1#show ipsec ike-configuration
```

```
Ike configuration:
```

```
Ike identity:
```

```
Domain Name :treverxsys2.juniper.net
Common Name :Sys2 ERX
Organization:Juniper Networks
Country     :CA
```

```
CRL Check:optional
```

- See *show ipsec ike-configuration*.
- See *show ike configuration*.

***show ipsec key mypubkey rsa***

- Use to display the 1024-bit or 2048-bit RSA public key configured on the router.
- The public key is generated as part of a public/private key pair used to perform RSA authentication during ISAKMP/IKE SA negotiations.
- For information about the format of an RSA public key, see [“Public Key Format” on page 241](#).
- Example

```

host1#show ipsec key mypubkey rsa
30819f30 0d06092a 864886f7 0d010101 05000381 8d003081 89028181 009cfbde
a16cf72c 49fbd3c1 10d5d9d4 8ba15ec0 9adcb19e 18d488f8 e0370c51 2d10e751
ddd81be4 dfc78aad 9deb797f b2c51172 18967cfb e18f6efa 69285fef 10337527
78ca6bbc 907abb9e 44b12713 ab70cb0e a86d9c6c 80c99bd1 e2bf6b70 91222295
616a88bb cc479e15 be04f3a5 a6160645 844598c3 314b66af 3a8b7602 ed020301
0001

```

- See *show ipsec key mypubkey rsa*.

### *show ipsec key pubkey-chain rsa*

- Use to display a 1024-bit or 2048-bit ISAKMP/IKE public key that a remote peer uses for RSA authentication.
- To display a brief summary of the remote peers for which public keys are configured on the router, use the **summary** keyword.
- To display the public key for a remote peer with a specific IP address, use the **address** keyword followed by the IP address, in 32-bit dotted decimal format.
- To display the public key for a remote peer with a specific identity, use the **name** keyword followed by either:
  - The fully qualified domain name (FQDN)
  - The FQDN preceded by an optional *user@* specification; this is also referred to as user FQDN format
- The FQDN and user FQDN identifiers are case-sensitive and must exactly match the identifier specified in the **ipsec key pubkey-chain rsa** command. For example, a public key for user FQDN *mjones@sales.company\_abc.com* does not match a public key for FQDN *sales.company\_abc.com*.
- For information about the format of an RSA public key, see [“Public Key Format” on page 241](#).
- Field descriptions
  - Remote Peer—IP address, FQDN, or user FQDN identifier of the remote peer for which the peer public key can be used
  - Key Type—Type of remote peer identifier: ip address (if IP address is specified) or identity (if FQDN or user FQDN is specified)
- Example 1—Displays a summary of the remote peers for which peer public keys are configured

```

host1#show ipsec key pubkey-chain rsa summary
      Remote Peer              Key Type
-----
192.168.32.3                  ip address
grp003.cust535.isp.net        identity
tsmith@grp003.cust535.isp.net identity

```

- Example 2—Displays the peer public key for a remote peer with the specified IP address

```

host1#show ipsec key pubkey-chain rsa address 192.168.32.3
30819f30 0d06092a 864886f7 0d010101 05000381 8d003081 89028181 0082065f
841aa03a fadfa9f bf8be05c d2fe3596 abc3e265 0b86b99a df9b4907 29c7a737

```

```

8bf08491 5c96e72d 28471a12 f0735ff4 04d76ad1 3a80f10c 23dcadda b68ce8ec
5fdfbe58 a52008db 9a11f867 d38d0483 e4abd53c 89a4dc3c 985ea450 f17748c4
3f04def0 a3cf5d89 b62dfeae 5990641b 370bb113 73105ba7 585a41fc 3b020301
0001

```

- Example 3—Displays the peer public key for a remote peer with the specified FQDN identifier

```
host1#show ipsec key pubkey-chain rsa name grp003.cust535.isp.net
```

```

30820122 300d0609 2a864886 f70d0101 01050003 82010f00 3082010a 02820101
00c03cc6 0bad55ea b4f8a01f 5cf69de5 f03185e2 1338b5cb fa8418c3 6cbe1a77
bfefba5b 7a8f0ac2 6e2b223b 11e3c316 a30f7fb0 7bd2ab8a a614bb3d 2fce97bf
d6376467 0d5d1a16 d630c173 3ed93434 e690f355 00128ffb c36e72fa 46eae49a
5704eabe 0e34776c 7d243b8b fcb03c75 965c12f4 d68c6e63 33e0207c a985ffff
2422fb53 23d49dbb f7fd3140 a7f245ee bf629690 9356a29c b149451a 691a2531
9787ce37 2601bdf9 1434b174 4fd21cf2 48e10f58 9ac89df1 56e360b1 66fb0b3f
27ad6396 7a491d74 3b8379ea be502979 8f0270b2 6063a474 fadc5f18 f0ca6f7a
ddea66c7 cf637598 9cdb5087 0480af29 b9c174ab 1b1d033f 67641a8c 5918ddce
1f020301 0001

```

- Example 4—Displays the peer public key for a remote peer with the specified user FQDN identifier

```
host1#show ipsec key pubkey-chain rsa name tsmith@grp003.cust535.isp.net
```

```

30819f30 0d06092a 864886f7 0d010101 05000381 8d003081 89028181 00bcc106
8694a505 0b92433e 4c27441e 3ad8955d 5628e2ea 5ee34b0c 6f82c4fd 8d5b7b51
f1a3c94f c4373f9b 70395011 79b4c2fb 639a075b 3d66185f 9cc6cdd1 6df51f74
cb69c8bb dbb44433 a1faac45 10f52be8 d7f2c8cd ad5172a6 e7f14b1c bba4037b
29b475c6 ad7305ed 7c460779 351560c6 344ccd1a 35935ea3 da5de228 bd020301
0001

```

- See *show ipsec key pubkey-chain rsa*.





## CHAPTER 11

# Configuring IP Tunnels

IP tunnels provide a way of transporting datagrams between routers separated by networks that do not support all the protocols that those routers support. This chapter describes how to configure IP tunnels on E Series routers; it contains the following sections:


- [Overview on page 265](#)
- [Platform Considerations on page 266](#)
- [References on page 267](#)
- [Configuration Tasks on page 268](#)
- [Monitoring IP Tunnels on page 272](#)

## Overview

---

E Series routers support static IP tunnels. An IP tunnel is a virtual point-to-point connection between two routers. See [Figure 19 on page 265](#). To establish an IP tunnel, you specify a tunnel type and name, and then configure an interface on each router to act as an endpoint for the tunnel.

 **Figure 19: IP Tunneling**

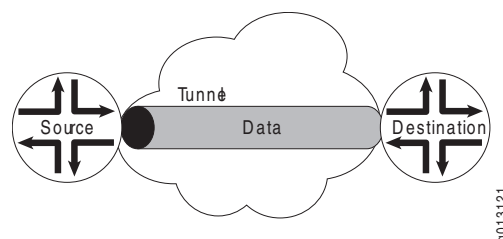

E Series routers support the following types of IP tunnels:

- Generic Routing Encapsulation (GRE) tunnels
- Distance Vector Multicast Routing Protocol (DVMRP) tunnels, also known as IP-in-IP tunnels

## GRE Tunnels

GRE encapsulates IP packets to enable data transmission through an IP tunnel. The resulting encapsulated packet contains a GRE header and a delivery header. Consequently,

the packet requires more processing than an IP packet, and GRE can be slower than native routing protocols.

GRE tunnels can be secured with IPsec. See [“Securing L2TP and IP Tunnels with IPsec” on page 303](#).

## DVMRP Tunnels

DVMRP tunnels allow the exchange of IP multicast traffic between routers separated by networks that do not support multicast routing. For information about DVMRP, see *Configuring IPv4 Multicast in JunosE Multicast Routing Configuration Guide*.

DVMRP tunnels can be secured with IPsec. See [“Securing L2TP and IP Tunnels with IPsec” on page 303](#).

## Platform Considerations

---

For information about modules that support IP tunnels on the ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support IP tunnels.

For information about modules that support IP tunnels on the E120 and E320 Broadband Services Routers:

- See *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about the modules that support IP tunnels.

## Module Requirements

The supported modules for creating IP tunnels depends on the type of E Series router that you have.

### ERX7xx Models, ERX14xx Models, and the ERX310 Router

To create IP tunnels on an ERX7xx model, ERX14xx model, or an ERX310 router, you must install a Service line module (SM) or a module that supports the use of shared tunnel-server ports. For information about installing modules in the ERX routers, see the *ERX Hardware Guide*.

SMs provide dedicated tunnel-server ports that are always configured on the module. Unlike other line modules, SMs do not pair with corresponding I/O modules that contain ingress and egress ports. Instead, they receive data from and transmit data to other line modules with access to ingress and egress ports on their own associated I/O modules. However, you must assign interfaces on other line modules or loopback interfaces to act as source endpoints for the tunnel.

You can also create IP tunnels on router modules that support shared tunnel-server ports. You can configure (provision) a shared tunnel-server port to use a portion of the module's bandwidth to provide tunnel services. For a list of the modules that support shared tunnel-server ports, see the *ERX Module Guide*.

For information about configuring tunnel services on dedicated and shared tunnel-server ports, see *Managing Tunnel Service and IPsec Service Interfaces* in *JunosE Physical Layer Configuration Guide*.

All line modules forward traffic to IP tunnels. For information about which line modules accept traffic for IP tunnels, see the *ERX Module Guide*.

---

### E120 Router and E320 Router

To create IP tunnels on an E120 router or an E320 router, you must install an ES2 4G line module (LM) or an ES2 10G ADV LM with an ES2-S1 Service I/O adapter (IOA), or an IOA that supports the use of shared tunnel-server ports. For information about installing modules in these routers, see the *E120 and E320 Hardware Guide*.

The combination of an ES2 4G LM or an ES2 10G ADV LM with an ES2-S1 Service IOA provides a dedicated tunnel-server port that is always configured on the IOA. Unlike SMs, the ES2 4G LM and the ES2 10G ADV LM require the ES2-S1 Service IOA to condition it to receive and transmit data to other line modules. The ES2-S1 Service IOA also does not have ingress or egress ports.

You can also create IP tunnels on IOAs that support shared tunnel-server ports. You can configure (provision) a shared tunnel-server port to use a portion of the bandwidth of the IOA to provide tunnel services. For a list of the IOAs that support shared tunnel-server ports, see the *E120 and E320 Module Guide*.

All line modules forward traffic to tunnels. For information about the IOAs that accept traffic for tunnels, see the *E120 and E320 Module Guide*.

## Redundancy and Tunnel Distribution

For information about the redundancy and tunnel distribution mechanisms supported for SMs, the ES2-S1 Service IOA, and shared tunnel-server ports, see *Tunnel Service Interface Considerations* in *JunosE Physical Layer Configuration Guide*.

---

## References

For more information about IP tunnels, see the following documents:

- RFC 791—Internet Protocol DARPA Internet Program Protocol Specification (September 1981)
- RFC 1700—Assigned Numbers (October 1994)
- RFC 1701—Generic Routing Encapsulation (October 1994)
- RFC 1702—Generic Routing Encapsulation over IPv4 Networks (October 1994)
- RFC 2003—IP Encapsulation within IP (October 1996)
- RFC 2784—Generic Routing Encapsulation (GRE) (March 2000)

## Configuration Tasks

---

To configure an IP tunnel:

1. Create or select a physical or loopback interface.  
This interface acts as an anchor for the source of the tunnel.
2. Assign an IP address to the physical or loopback interface.
3. Create a tunnel interface.
4. Set the source address for the tunnel.
5. Set the destination address for the tunnel.
6. (Optional) Enable error checking across a GRE tunnel.
7. Set the maximum transmission unit (MTU) size for the tunnel.



**NOTE:** On SM interfaces, issue only the commands listed below. Do not configure protocols such as Multilink PPP or Multilink Frame Relay on SM interfaces.

### *interface tunnel*

- Use to create an IP tunnel interface.
- Specify the type and name of the tunnel you want to create.
- You can use the **transport-virtual-router** keyword to establish the tunnel on a virtual router other than the current virtual router.
- Example  

```
host1(config)#interface tunnel dvmp:boston-tunnel-1 transport-virtual-router boston
```
- Use the **no** version to remove the tunnel.



**NOTE:** When you delete a virtual router that has been configured as a transport virtual router for a DVMRP tunnel, the **show configuration** output displays No Router for the transport virtual router. To remove the DVMRP tunnel interface, simply omit any reference to the transport virtual router. For example, to delete `interface tunnel dvmp:boston-tunnel-1 transport-virtual-router No Router` from the configuration, issue the command, `no interface tunnel dvmp:boston-tunnel-1`.

- See *interface tunnel*.

### *tunnel checksum*

- Use to enable checksum computation across a GRE tunnel.
- Checksum computation is not supported for DVMRP tunnels.
- Selecting this feature causes the E Series router to drop corrupted packets it receives on the tunnel interface.
- Example

```
host1(config)#interface tunnel gre:tunnel2
host1(config-if)#tunnel checksum
```
- Use the **no** version to disable the checksum option.
- See *tunnel checksum*.

#### ***tunnel destination***

- Use to configure the remote end of the tunnel.
- Specify either the IP address of an interface on the remote router or the hostname of the remote router.
  - The IP address is the address for the destination interface.
  - The hostname is the name of the destination interface.
- Example 1

```
host1(config)#interface tunnel dvmrp:tunnel2
host1(config-if)#tunnel destination 192.13.7.1
```
- Example 2

```
host1(config)#interface tunnel dvmrp:tunnel2
host1(config-if)#tunnel destination remoteHost
```
- Use the **no** version to remove the destination of a tunnel.
- See *tunnel destination*.

#### ***tunnel mtu***

- Use to set the MTU for the tunnel.
- Specify a value in the range 1024–10240 bytes.
- Example

```
host1(config-if)#tunnel mtu 7500
```
- Use the **no** version to restore the default, 10240 bytes.
- See *tunnel mtu*.

#### ***tunnel source***

- Use to configure the source of the tunnel.
- Specify either the primary IP address or the type and specifier of an interface.
- Do not specify an unnumbered interface.
- Example 1—Primary IP address

```
host1(config)#interface tunnel dvmrp:boston-tunnel-1
host1(config-if)#tunnel source 192.10.2.1
```

- Example 2—ATM interface on an ERX7xx model, ERX14xx model, or the ERX310 router that uses the *slot/port* format

```
host1(config)#interface tunnel dvmrp:boston-tunnel-1
host1(config-if)#tunnel source atm 5/0.12
```

- Example 3—ATM interface on an E320 router that uses the *slot/adaptor/port* format

```
host1(config)#interface tunnel dvmrp:boston-tunnel-1
host1(config-if)#tunnel source atm 5/1/0.12
```

- Use the **no** version to remove the source of a tunnel.
- See *tunnel source*.

## Configuration Example

In this example, two GRE tunnel interfaces are configured on different virtual routers of an E Series router. The source of the first tunnel interface matches the destination of the second tunnel interface and vice versa.



**NOTE:** This example contains an ATM interface configuration for an ERX7xx model, ERX14xx model, or ERX310 router that uses the *slot/port* format.

1. Configure a virtual router called boston that supports one end of the tunnel.

```
host1#virtual-router boston
```

2. Configure a physical or loopback interface for the end of the tunnel on virtual router boston.

The IP address of this interface appears in the header of tunneled frames and is used for forwarding traffic.

```
host1:boston#interface atm 12/0.5
host1:boston(config-if)#ip address 10.5.5.5 255.255.255.0
```

3. Configure the tunnel interface on virtual router boston.

- a. Create the tunnel interface.

```
host1:boston(config)#interface tunnel gre:ChicagoTunnel
```

- b. Configure the source and destination points of the tunnel interface.

```
host1:boston(config-if)#tunnel source 10.5.5.5
host1:boston(config-if)#tunnel destination 10.6.6.6
```

- c. Set the MTU for the tunnel.

```
host1:boston(config-if)#tunnel mtu 8000
```

- d. Configure the IP address of the tunnel interface.

```
host1:boston(config-if)#ip address 10.7.7.7 255.255.255.0
```

4. Configure a virtual router called `chicago` that supports the other end of the tunnel.

```
host1(config)#virtual-router chicago
```

5. Configure a physical or loopback interface for the end of the tunnel on virtual router `chicago`.

```
host1:chicago(config)#interface atm 12/1.5
host1:chicago(config-if)#ip address 10.6.6.6 255.255.255.0
```

6. Configure the tunnel interface on virtual router `chicago`.

- a. Create the tunnel interface.

The name of the tunnel interface can differ from the tunnel interface configured in Step 3.

```
host1:chicago(config-if)#interface tunnel gre:BostonTunnel
```

- b. Configure the source and destination points of the tunnel interface.

The destination of this tunnel interface matches the source of the tunnel interface configured in Step 3 and vice versa.

```
host1:chicago(config-if)#tunnel source 10.6.6.6
host1:chicago(config-if)#tunnel destination 10.5.5.5
```

- c. Set the MTU for the tunnel.

The MTU must match the MTU configured in Step 3.

```
host1:chicago(config-if)#tunnel mtu 8000
```

- d. Configure the IP address of the tunnel interface.

```
host1:chicago(config-if)#ip address 10.9.9.9 255.255.255.0
```

## Configuring IP Tunnels to Forward IP Frames

When a line module receives IP frames destined for a tunnel, the module forwards the frames to a tunnel-service module. Tunnel-service modules include SMs and modules that support the use of shared tunnel-server ports.

The tunnel-service module encapsulates the frames and forwards them to the tunnel through an interface determined by a route lookup of an IP frame. The source and destination addresses in the IP frame are the source and destination addresses of the tunnel.

Similarly, when a line module receives traffic from a tunnel, the module forwards the traffic to the tunnel-service module for deencapsulation. After deencapsulation, the tunnel-service module forwards the resulting IP frames to an interface determined by a route lookup.

When you have configured a tunnel interface, treat it in the same way as any IP interface on the router. For example, you can configure static IP routes or enable routing protocols on the tunnel interface. The IP configurations you apply to the tunnels control how traffic travels through the network.

## Preventing Recursive Tunnels

If routing information about the tunnel network combines with routing information about the transport networks (the networks that the tunnel services), a *recursive* tunnel can occur. In this case, the routing table defines the tunnel itself as the best path to a tunnel destination. To prevent recursive tunnels, differentiate routing information for the tunnel network and the transport networks with one or both of the following techniques:


- Use different routing protocols for the tunnel network and the transport networks.
- Define a static route to the tunnel destination.



**NOTE:** If you define a static route to a tunnel destination, be careful not to create routing loops.

Figure 20 on page 272 illustrates how to prevent recursive tunnels by using different routing protocols for the tunnel network and the transport networks.

 **Figure 20: Transport and Tunnel Networks Using Different Routing Protocols**

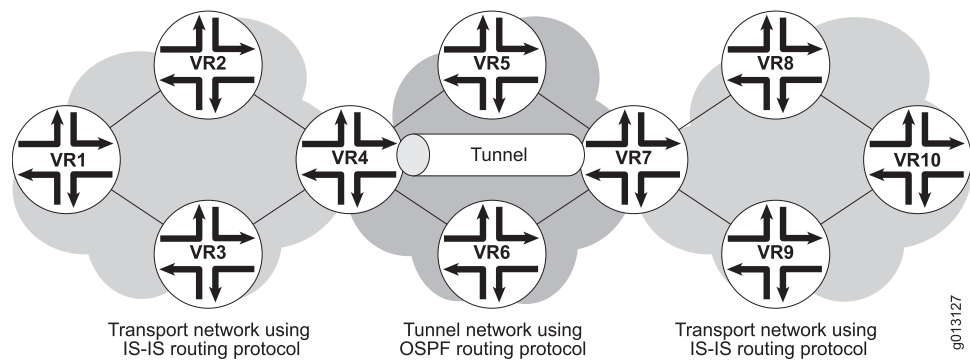

## Creating Multicast VPNs Using GRE Tunnels

For information about configuring multicast VPNs using GRE tunnels, see *Configuring PIM for IPv4 Multicast* in *JunosE Multicast Routing Configuration Guide*.

## Monitoring IP Tunnels

You can monitor DVMRP and GRE tunnels by using the following commands.

### *show dvmrp tunnel*

- Use to display information about DVMRP tunnels.
- To view detailed information about tunnels, specify the **detail** keyword.
- To view the number of tunnels in a specific state, specify the **state** keyword and the state of the tunnel (disabled, down, enabled, lower-down, not-present, up).
- To view the state of a specific tunnel, specify a tunnel name.



- To view the number of tunnels associated with that IP address, specify an IP address.
- To view the number of tunnels associated with an IP address on the virtual router, specify an IP address with the **virtual-router** keyword and the name of the virtual router.
- Field descriptions
  - Tunnel status
    - up—Tunnel is operational
    - down—Tunnel is not operational
    - not-present—Tunnel is not operational, because the hardware (such as a line module) supporting the tunnel is inaccessible
  - Tunnel name—Name of the tunnel
  - Tunnel mtu—Value of the maximum transmission unit for the tunnel
  - Tunnel source address—IP address of the source of the tunnel
  - Tunnel destination address—IP address of the destination of the tunnel
  - Tunnel transport virtual router—Name of the virtual router associated with the tunnel
  - Tunnel up/down trap—Indicates whether or not the E Series router sends traps to SNMP when the operational state of the tunnels changes, enabled or disabled
  - Tunnel server location—Location of the tunnel server in *slot/port* format (ERX7xx models, ERX14xx models, and the ERX310 router) or *slot/adaptor/port* format (E120 and E320 routers).
  - Tunnel secured by ipsec transport interface—IPsec interface that secures the tunnel.
  - Tunnel administrative state—Configured state of the tunnel: up or down
  - Statistics—Details of packets received or transmitted by the tunnel
  - Packets—Number of packets received or transmitted by the tunnel
  - Octets—Number of octets received or transmitted by the tunnel
  - Discards—Number of packets not accepted by the tunnel
  - Errors—Number of packets with errors received or transmitted by the tunnel
  - Data rx—Received data
  - Data tx—Transmitted data
  - Number of tunnels found—Total number of DVMRP tunnels found
  - Number of static tunnels—Number of tunnels created statically
- Example 1

```
host1#show dvmrp tunnel
DVMRP tunnel boston1 is up
1 DVMRP tunnel found
1 tunnel was created static
```
- Example 2

```

host1#show dvmrp tunnel detail
DVMRP tunnel boston1 is up (tunnel is static)
Tunnel operational configuration
  Tunnel name is 'boston1'
  Tunnel mtu is '10240'
  Tunnel source address is '0.0.0.0'
  Tunnel destination address is '0.0.0.0'
  Tunnel transport virtual router is vr1
  Tunnel up/down trap is enabled
  Tunnel server location is 4/0
  Tunnel secured by ipsec transport interface 1
  Tunnel administrative state is up
Statistics      packets      octets      discards      errors
Data rx        0              0            0             0
Data tx        0              0            0             0
1 DVMRP tunnel found
1 tunnel was created static

```

- Example 3

```

host1#show dvmrp tunnel state enabled
DVMRP tunnel boston1 is up
1 DVMRP tunnel found
1 tunnel was created static

```

- Example 4

```

host1#show dvmrp tunnel virtual-router vr1 ip 0.0.0.0
DVMRP tunnel boston1 is up
1 DVMRP tunnel found
1 tunnel was created static

```

- Example 5—Displays a DVMRP tunnel on an E320 router

```

host1#show dvmrp tunnel detail
DVMRP tunnel v1Tunnel1 is Up (tunnel is static)
Tunnel operational configuration
  Tunnel mtu is '10240'
  Tunnel source address is '50.1.1.1'
  Tunnel destination address is '50.1.1.2'
  Tunnel transport virtual router is v1
  Tunnel up/down trap is enabled
  Tunnel-server location is 13/0/0
  Tunnel administrative state is Up
Statistics      packets      octets      discards      errors
Data rx        5              740          0             0
Data tx        5              740          0             0

```

- See *show dvmrp tunnel*.

### *show dvmrp tunnel summary*

- Use to display a summary of information about DVMRP tunnels.
- Field descriptions
  - Administrative status
    - enabled—Tunnel is available for use
    - disabled—Tunnel is not available for use
  - Operational status

- up—Tunnel is operational
- down—Tunnel is not operational
- not-present—Tunnel is not operational, because the hardware (such as a line module) supporting the tunnel is inaccessible
- Example

```
host1#show dvmrp tunnel summary
Administrative status   enabled   disabled
                        1         0
Operational status     up        down     not-present
                        1         0         0
```

- See *show dvmrp tunnel*.

### *show gre tunnel*

- Use to display information about a GRE tunnel or a list of GRE tunnels.
- To view detailed information about tunnels, specify the **detail** keyword.
- To view the number of tunnels in a specific state, specify the **state** keyword and the state of the tunnel (disabled, down, enabled, lower-down, not-present, up).
- To view the state of a specific tunnel, specify a tunnel name.
- To view the number of tunnels associated with an IP address, specify an IP address.
- To view the number of tunnels associated with an IP address on the virtual router, specify an IP address with the **virtual-router** keyword and the name of the virtual router.
- Field descriptions
  - Tunnel name—Name of the tunnel
  - Tunnel mtu—Value of the maximum transmission unit for the tunnel
  - Tunnel source address—IP address of the source of the tunnel
  - Tunnel destination address—IP address of the destination of the tunnel
  - Tunnel transport virtual router—Name of the virtual router associated with the tunnel
  - Tunnel mdt—State of the tunnel MDT
  - Tunnel checksum option—State of the checksum feature: enabled or disabled
  - Tunnel up/down trap—Indicates whether or not the E Series router sends traps to SNMP when the operational state of the tunnels changes, enabled or disabled
  - Tunnel server location—Location of the tunnel server in *slot/port* format (ERX7xx models, ERX14xx models, and the ERX310 router) or *slot/adaptor/port* format (E120 and E320 routers).
  - Tunnel is secured by ipsec transport interface—IPsec interface that secures the tunnel.
  - Tunnel administrative state—Configured state of the tunnel: up or down

- Statistics—Details of packets received or transmitted by the tunnel
- Packets—Number of packets received or transmitted by the tunnel
- Octets—Number of octets received or transmitted by the tunnel
- Discards—Number of packets not accepted by the tunnel
- Errors—Number of packets with errors received or transmitted by the tunnel
- Data rx—Received data
- Data tx—Transmitted data
- Number of tunnels found—Total number of GRE tunnels found
- Number of static tunnels—Number of tunnels created statically

- Example 1

```
host1#show gre tunnel
3 GRE tunnels found
3 tunnels were created static
```

- Example 2

```
host1#show gre tunnel detail
Tunnel operational configuration
  Tunnel name is 'vr1'
  Tunnel mtu is '10240'
  Tunnel source address is '10.0.0.2'
  Tunnel destination address is '10.0.0.1'
  Tunnel transport virtual router is vr1
  Tunnel mdt is disabled
  Tunnel checksum option is disabled
  Tunnel up/down trap is enabled
  Tunnel server location is 4/0
  Tunnel administrative state is up
```

| Statistics | packets | octets | discards | errors |
|------------|---------|--------|----------|--------|
| Data rx    | 0       | 0      | 0        | 0      |
| Data tx    | 0       | 0      | 0        | 0      |

```
Tunnel operational configuration
  Tunnel name is 'default'
  Tunnel mtu is '10240'
  Tunnel source address is '10.0.0.1'
  Tunnel destination address is '10.0.0.2'
  Tunnel transport virtual router is default
  Tunnel checksum option is disabled
  Tunnel up/down trap is enabled
  Tunnel server location is 4/0
  Tunnel secured by ipsec transport interface 1
  Tunnel administrative state is up
```

| Statistics | packets | octets | discards | errors |
|------------|---------|--------|----------|--------|
| Data rx    | 0       | 0      | 0        | 0      |
| Data tx    | 0       | 0      | 0        | 0      |

```
Tunnel operational configuration
  Tunnel name is 'london2'
  Tunnel mtu is '10240'
  Tunnel source address is '0.0.0.0'
  Tunnel destination address is '0.0.0.0'
  Tunnel transport virtual router is vr1
```

```
Tunnel checksum option is disabled
Tunnel up/down trap is enabled
Tunnel server location is 4/0
Tunnel administrative state is up
```

| Statistics | packets | octets | discards | errors |
|------------|---------|--------|----------|--------|
| Data rx    | 0       | 0      | 0        | 0      |
| Data tx    | 0       | 0      | 0        | 0      |

```
3 GRE tunnels found
3 tunnels were created static
```

- Example 3

```
host1#show gre tunnel state up
GRE tunnel VR1 is up
GRE tunnel default is up
GRE tunnel london2 is down
3 GRE tunnels found
3 tunnels were created static
```

- Example 4

```
host1#show gre tunnel virtual-router vr1 ip 10.0.0.1
GRE tunnel VR1 is up
1 GRE tunnel found
1 tunnel was created static
```

- Example 5—Displays a GRE tunnel on an E320 router

```
host1#show gre tunnel detail
GRE tunnel start is Up (tunnel is static)
Tunnel operational configuration
  Tunnel mtu is '10240'
  Tunnel source address is '15.0.0.1'
  Tunnel destination address is '15.0.0.2'
  Tunnel transport virtual router is default
  Tunnel checksum option is disabled
  Tunnel sequence number option is disabled
  Tunnel up/down trap is enabled
  Tunnel-server location is 1/0/0
  Tunnel administrative state is Up
```

| Statistics | packets | octets | discards | errors |
|------------|---------|--------|----------|--------|
| Data rx    | 0       | 0      | 0        | 0      |
| Data tx    | 0       | 0      | 0        | 0      |

```
GRE tunnel end is Up
Tunnel operational configuration
  Tunnel mtu is '10240'
  Tunnel source address is '15.0.0.2'
  Tunnel destination address is '15.0.0.1'
  Tunnel transport virtual router is vpnA
  Tunnel checksum option is disabled
  Tunnel sequence number option is disabled
  Tunnel up/down trap is enabled
  Tunnel-server location is 1/0/0
  Tunnel administrative state is Up
```

| Statistics | packets | octets | discards | errors |
|------------|---------|--------|----------|--------|
| Data rx    | 0       | 0      | 0        | 0      |
| Data tx    | 0       | 0      | 0        | 0      |

```
2 GRE tunnels found
2 tunnels were created static
```

- See *show gre tunnel*.

***show gre tunnel summary***

- Use to display a summary of information about GRE tunnels.
- Field descriptions
  - Administrative status
    - enabled—Tunnel is available for use
    - disabled—Tunnel is not available for use
  - Operational status
    - up—Tunnel is operational
    - down—Tunnel is not operational
    - not-present—Tunnel is not operational, because the hardware (such as a line module) supporting the tunnel is inaccessible

- Example

```
host1#show gre tunnel summary
Administrative status    enabled    disabled
                        3          0
Operational status      up         down      not-present
                        3          0          0
```

- See *show gre tunnel*.

# Configuring Dynamic IP Tunnels

IP tunnels provide a way of transporting datagrams between routers separated by networks that do not support all the protocols that those routers support. This chapter describes how to configure dynamic IP tunnels on E Series routers; it contains the following sections:

- [Understanding Dynamic IP Tunnels on page 279](#)
- [Dynamic IP Tunnel Platform Considerations on page 282](#)
- [Dynamic IP Tunnel References on page 283](#)
- [Modifying the Configuration of the Default Destination Profile on page 284](#)
- [Configuring a Destination Profile for Dynamic GRE Tunnels on page 284](#)
- [Configuring a Destination Profile for Dynamic DVMRP Tunnels on page 285](#)
- [Monitoring DVMRP Destination Profiles on page 286](#)
- [Monitoring Dynamic DVMRP Tunnels on page 287](#)
- [Monitoring GRE Destination Profiles on page 290](#)
- [Monitoring Dynamic GRE Tunnels on page 292](#)

## Understanding Dynamic IP Tunnels

---

E Series routers support the following types of dynamic IP tunnels:

- Generic Routing Encapsulation (GRE) tunnels
- Distance Vector Multicast Routing Protocol (DVMRP) tunnels, also known as IP-in-IP tunnels

To establish a dynamic IP tunnel for GRE or DVMRP interfaces, you must configure a destination profile for a specific transport virtual router that is used to store tunnel configuration options, including the source and destination addresses of the dynamic IP tunnel.

A client application triggers the creation of dynamic IP tunnels based on the information stored in the GRE or DVMRP destination profile. The application specifies a tunnel source, tunnel destination, transport virtual router, and tunnel mode (GRE or DVMRP). If these parameters match those configured in the destination profile, the system creates the dynamic IP tunnel.

The application can automatically create an upper layer IPv4 interface over the GRE or DVMRP interface by using the IP characteristics defined in a profile referenced in the GRE or DVMRP destination profile.

## Data MDT for Multicast VPNs and Dynamic IP Tunnels

The data multicast distribution tree (MDT) application for multicast VPNs can create dynamic point-to-multipoint GRE tunnels.

The data MDT application enables you to solve the problem of IP routers flooding unnecessary multicast information to PE routers that have no interested receivers for a particular VPN multicast group. The multicast data MDT solution requires the creation of a new dynamic IP tunnel by the PE router if the source exceeds a configured rate threshold parameter.

The data MDT application supports a co-located tunnel interface. The base GRE interface and its co-located data MDT interface must be both static or both dynamic.

The data MDT application creates a dynamic IP tunnel using the attributes in a customized destination profile.

When creating the dynamic IP tunnel, the data MDT application assigns its name using the following format:

***mvpn-dynamic-number***

For the data MDT application, you should configure a customized destination profile. For information about configuring multicast VPNs using GRE tunnels, see *Configuring PIM for IPv4 Multicast* in *JunosE Multicast Routing Configuration Guide*.

## Mobile IP and Dynamic IP Tunnels

The Mobile IP application can create dynamic point-to-point GRE and DVMRP tunnels.

The Mobile IP application is a tunneling-based solution that enhances the utility of E Series Broadband Services Routers at the edge of the network between fixed wire and wireless network domains. This tunneling-based solution enables a router on a user's home subnet to intercept and forward IP packets to users while they roam beyond traditional network boundaries.

To achieve mobility, the mobile node takes a secondary IP address that matches the new network and redirects the traffic bound to the primary or home address to the mobile node's new network. In the Mobile IP feature, the two agents that accomplish this task are the home agent and the foreign agent.

The Mobile IP application can create a dynamic IP tunnel using the attributes in a default destination profile or a customized destination profile.

When creating the dynamic IP tunnel, the Mobile IP application assigns its name using the following format:

***mobileip-dynamic-number***



When the Mobile IP application creates the dynamic IP tunnel, it sets a Don't Fragment bit in the packet and in the outer IP header.

The Mobile IP home agent uses the dynamic IP tunnel for routing loop detection. The home agent examines packets that are intercepted by the home agent and destined for the mobile node. If the packet is already encapsulated, and the inner destination address is the same as the outer destination address, then the system examines the outer source address. If the outer source address is the same as the tunnel destination address or the foreign agent care-of-address, the system silently discards the packet. In all other cases, the tunnel encapsulation is successful.

For more information about configuring Mobile IP using GRE or DVMRP tunnels, see [“Mobile IP Overview” on page 347](#).

## Combining Dynamic and Static IP Tunnels in the Same Chassis

You can configure both dynamic and static IP tunnels in the same chassis.

A tunnel pair consists of two endpoints; one side encapsulates and the other side decapsulates. You can create a tunnel pair with two statically configured endpoints, two dynamically created endpoints, or with one static and one dynamic endpoint.

When configuring IP tunnels, you must consider that a tunnel is uniquely defined by its tunnel source, tunnel destination, transport virtual router, and mode (GRE or DVMRP). The system does not allow multiple tunnels with the same parameters. For example, when you configure a static tunnel with the same parameters as an existing dynamic IP tunnel, the system does not create the dynamic IP tunnel.

## Changing and Removing Existing Dynamic IP Tunnels

You can modify the parameters in a destination profile referenced by existing dynamic IP tunnels. The changes only affect new dynamic IP tunnels that reference the destination profile.

You can relocate a dynamic IP tunnel for the Mobile IP application.

You cannot relocate a dynamic IP tunnel for the data MDT application because it is created using a profile. The system deletes dynamic IP tunnels that are relocated. Connections between a static tunnel endpoint and a dynamic tunnel endpoint can fail if the dynamic tunnel endpoint is deleted.

The client application removes dynamic IP tunnel interfaces when one of the following situations occur:

- The transport virtual router is removed.
- The tunnel interface relocates and the tunnel had an IP interfaced stacked on it.
- The tunnel interface indicates that setup is complete when the system is warm started, but it has no upper IP interface.

### Related Documentation

- [Dynamic IP Tunnel Platform Considerations on page 282](#)
- [Dynamic IP Tunnel References on page 283](#)

## Dynamic IP Tunnel Platform Considerations

---

For information about modules that support IP tunnels on the ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support IP tunnels.

For information about modules that support IP tunnels on the E120 and E320 Broadband Services Routers:

- See *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about the modules that support IP tunnels.

## Module Requirements

The supported modules for creating IP tunnels depends on the type of E Series router that you have.

### ERX7xx Models, ERX14xx Models, and the ERX310 Router

To create dynamic IP tunnels on an ERX7xx model, ERX14xx model, or an ERX310 router, you must install a Service line module (SM) or a module that supports the use of shared tunnel-server ports. For information about installing modules in the ERX routers, see the *ERX Hardware Guide*.

SMs provide dedicated tunnel-server ports that are always configured on the module. Unlike other line modules, SMs do not pair with corresponding I/O modules that contain ingress and egress ports. Instead, they receive data from and transmit data to other line modules with access to ingress and egress ports on their own associated I/O modules. However, you must assign interfaces on other line modules or loopback interfaces to act as source endpoints for the tunnel.

You can also create IP tunnels on router modules that support shared tunnel-server ports. You can configure (provision) a shared tunnel-server port to use a portion of the module's bandwidth to provide tunnel services. For a list of the modules that support shared tunnel-server ports, see the *ERX Module Guide*.

To configure IPsec transport mode in the GRE or DVMRP destination profile, you must install an IPsec Service Module (ISM).

For information about configuring tunnel services on dedicated and shared tunnel-server ports, see *Managing Tunnel Service and IPsec Service Interfaces* in *JunosE Physical Layer Configuration Guide*.

All line modules forward traffic to IP tunnels. For information about which line modules accept traffic for IP tunnels, see the *ERX Module Guide*.

### E120 Router and E320 Router

---

To create dynamic IP tunnels on an E120 router or an E320 router, you must install an ES2 4G line module or an ES2 10G ADV line module (LM) with an ES2-S1 Service I/O adapter (IOA), or an IOA that supports the use of shared tunnel-server ports. For information about installing modules in these routers, see the *E120 and E320 Hardware Guide*.

The combination of an ES2 4G LM or an ES2 10G ADV LM with an ES2-S1 Service IOA provides a dedicated tunnel-server port that is always configured on the IOA. Unlike SMs, the ES2 4G LM and the ES2 10G ADV LM require the ES2-S1 Service IOA to condition it to receive and transmit data to other line modules. The ES2-S1 Service IOA also does not have ingress or egress ports.

You can also create IP tunnels on IOAs that support shared tunnel-server ports. You can configure (provision) a shared tunnel-server port to use a portion of the bandwidth of the IOA to provide tunnel services. For a list of the IOAs that support shared tunnel-server ports, see the *E120 and E320 Module Guide*.

All line modules forward traffic to tunnels. For information about the IOAs that accept traffic for tunnels, see the *E120 and E320 Module Guide*.

### Redundancy and Tunnel Distribution

For information about the redundancy and tunnel distribution mechanisms supported for SMs, the ES2-S1 Service IOA, and shared tunnel-server ports, see *SMs, ES2-S1 Service IOA, and Shared Tunnel-Server Modules Overview*.

- Related Documentation**
- [Understanding Dynamic IP Tunnels on page 279](#)
  - [Dynamic IP Tunnel References on page 283](#)

### Dynamic IP Tunnel References

---

For more information about IP tunnels, see the following documents:

- RFC 1700—Assigned Numbers (October 1994)
- RFC 1701—Generic Routing Encapsulation (October 1994)
- RFC 1702—Generic Routing Encapsulation over IPv4 Networks (October 1994)
- RFC 2003—IP Encapsulation within IP (October 1996)
- RFC 2784—Generic Routing Encapsulation (GRE) (March 2000)

- Related Documentation**
- [Understanding Dynamic IP Tunnels on page 279](#)
  - [Dynamic IP Tunnel Platform Considerations on page 282](#)

## Modifying the Configuration of the Default Destination Profile

---

Default destination profiles for GRE and DVMRP are generated at system startup. The system supports only one default GRE destination profile and one default DVMRP destination profile.

The default destination profile enables the application to automatically create dynamic IP tunnels without user configuration for any virtual router, destination address, or source address.

By default, the data MDT application is disabled in the default destination profiles. The Mobile IP application can use the default destination profile. You can modify the configuration of the default destination profiles.

To modify the configuration in the default destination profile:

1. Specify the default destination profile for GRE or DVMRP.  
`host1(config)#gre destination profile global any-virtual-router`
2. Modify the options for the default destination profile.  
`host1(config-dest-profile)#tunnel mtu 5000`  
`host1(config-dest-profile)#tunnel checksum`



**NOTE:** You cannot configure a tunnel source, tunnel destination, or virtual router in the default destination profile.

---

### Related Documentation

- [Understanding Dynamic IP Tunnels on page 279](#)
- [Configuring a Destination Profile for Dynamic GRE Tunnels on page 284](#)
- [Configuring a Destination Profile for Dynamic DVMRP Tunnels on page 285](#)
- *gre destination profile*
- *tunnel checksum*
- *tunnel mtu*

## Configuring a Destination Profile for Dynamic GRE Tunnels

---

To configure a destination profile for dynamic GRE tunnels:

1. Configure a destination profile for GRE.  
`host1(config-dest-profile)#gre destination profile kanata1 virtual-router vr1`
2. Set the source address for the tunnel.  
`host1(config-dest-profile)#tunnel source 1.1.1.1`
3. Set the destination address for the tunnel.

```
host1(config-dest-profile)#tunnel destination subnet 10.0.0.0 255.0.0.0
```

4. (Optional) Set the maximum transmission unit (MTU) size for the tunnel.

```
host1(config-dest-profile)#tunnel mtu 10240
```

5. (Optional) Configure an IP profile with parameters that are used to stack an upper IP interface over a dynamic GRE tunnel.

```
host1(config-dest-profile)#profile ip-kanata
```

6. (Optional) Enable error checking across a GRE tunnel.

```
host1(config-dest-profile)#tunnel checksum
```

7. (Optional) Enable sequence number generation for a GRE tunnel.

```
host1(config-dest-profile)#tunnel sequence-datagrams
```

8. (Optional) Enable IPsec transport mode.

```
host1(config-dest-profile)#enable ipsec-transport
```

9. (Optional) Create a multicast VPN tunnel.

```
host1(config-dest-profile)#tunnel mdt profile kanata-mdt
```

#### Related Documentation

- [Understanding Dynamic IP Tunnels on page 279](#)
- [Modifying the Configuration of the Default Destination Profile on page 284](#)
- [Configuring a Destination Profile for Dynamic DVMRP Tunnels on page 285](#)
- *enable ipsec-transport*
- *gre destination profile*
- *profile*
- *tunnel checksum*
- *tunnel destination*
- *tunnel mdt profile*
- *tunnel mtu*
- *tunnel sequence-datagrams*
- *tunnel source*

## Configuring a Destination Profile for Dynamic DVMRP Tunnels

To configure a destination profile for dynamic DVMRP tunnels:

1. Configure a destination profile for DVMRP.

```
host1(config-dest-profile)#dvmrp destination profile kanata1 virtual-router vr1
```

2. Set the source address for the tunnel.

```
host1(config-dest-profile)#tunnel source 1.1.1.1
```

3. Set the destination address for the tunnel.

```
host1(config-dest-profile)#tunnel destination subnet 10.0.0.0 255.0.0.0
```

4. (Optional) Set the maximum transmission unit (MTU) size for the tunnel.

```
host1(config-dest-profile)#tunnel mtu 10240
```

5. (Optional) Configure an IP profile with parameters that are used to stack an upper IP interface over a dynamic DVMRP tunnel.

```
host1(config-dest-profile)#profile ip-kanata
```

6. (Optional) Enable IPsec transport mode.

```
host1(config-dest-profile)#enable ipsec-transport
```

7. (Optional) Create a multicast VPN tunnel.

```
host1(config-dest-profile)#tunnel mdt profile kanata-mdt
```

**Related Documentation**

- [Understanding Dynamic IP Tunnels on page 279](#)
- [Modifying the Configuration of the Default Destination Profile on page 284](#)
- [Configuring a Destination Profile for Dynamic GRE Tunnels on page 284](#)
- *dvmrp destination profile*
- *enable ipsec-transport*
- *profile*
- *tunnel destination*
- *tunnel mdt profile*
- *tunnel mtu*
- *tunnel source*

---

## Monitoring DVMRP Destination Profiles

---

**Purpose** Display the configuration of DVMRP destination profiles.

**Action** To display all DVMRP destination profiles on the system:

```
host1#show dvmrp destination profile
default dvmrp destination profile global
dvmrp destination profile kanata1
dvmrp destination profile kanata2

3 dvmrp destination profiles found
the default destination profile is present
```

To display the configuration of a specific DVMRP destination profile:

```
host1#show dvmrp destination profile kanata1
dvmrp destination profile kanata1
  tunnel mtu 10240
  ipsec transport mode disabled
  tunnel mdt disabled
```

```

profile disabled
virtual router vr1
tunnel destination subnet 10.0.0.0 255.0.0.0
tunnel source 1.1.1.1
tunnel source 1.1.1.2
tunnel source 1.1.1.3

```

**Meaning** [Table 34 on page 287](#) lists the **show dvmrp destination profile** command output fields.

**Table 34: show dvmrp destination profile Output Fields**

| Field Name                        | Field Description                                                        |
|-----------------------------------|--------------------------------------------------------------------------|
| default dvmrp destination profile | Name of the modified default destination profile on the system           |
| dvmrp destination profile         | Name of the DVMRP destination profiles configured on the system          |
| tunnel checksum                   | Status of tunnel checksum configuration; enabled or disabled             |
| tunnel sequence-datagrams         | Status of tunnel sequence datagrams configuration; enabled or disabled   |
| tunnel mtu                        | Value of the tunnel MTU                                                  |
| ipsec transport mode              | Status of IPsec transport mode configuration; enabled or disabled        |
| tunnel mdt                        | Tunnel MDT state                                                         |
| profile                           | Name of the profile assigned for upper IP interfaces                     |
| virtual router                    | Name of the transport virtual router assigned to the destination profile |
| tunnel destination subnet         | Value of the configured destination address subnet                       |
| tunnel source                     | Value of the configured source address                                   |

- Related Documentation**
- [Understanding Dynamic IP Tunnels on page 279](#)
  - [Monitoring Dynamic DVMRP Tunnels on page 287](#)
  - *show dvmrp destination profile*

## Monitoring Dynamic DVMRP Tunnels

**Purpose** Display information about dynamic DVMRP tunnels. You can specify the **detail** keyword to view detailed information about tunnels. You can specify the **state** keyword and the state of the tunnel (disabled, down, enabled, lower-down, not-present, up) to view the number of tunnels in a specific state. To view the state of a specific tunnel, specify a

tunnel name. To view the number of tunnels associated with that IP address, specify an IP address. You can specify an IP address with the **virtual-router** keyword and the name of the virtual router to view the number of tunnels associated with an IP address on the virtual router.

**Action** To display three dynamic DVMRP tunnels:

```
host1:vr11#show dvmrp tunnel
DVMRP tunnel mvpn-dynamic-1 is Up
DVMRP tunnel mvpn-dynamic-2 is Up
DVMRP tunnel mvpn-dynamic-3 is Down

3 DVMRP tunnels found
3 tunnels were created dynamic
```

To display the detail of a dynamically created DVMRP tunnel for the data MDT application:

```
host1:vr11#show dvmrp tunnel detail mvpn-dynamic-1
DVMRP tunnel mvpn-dynamic-1 is Up
tunnel is dynamic
Application is MVPN
Tunnel operational configuration
  Tunnel mtu is '5000'
  Tunnel source address is '1.1.1.1'
  Tunnel destination address is '2.2.2.2'
  Tunnel transport virtual router is vr1
  Tunnel mdt is disabled
  Tunnel up/down trap is enabled
  Tunnel-server location is 4/0
  Tunnel administrative state is Up
Statistics      packets      octets      discards      errors
Data rx        0              0            0             0
Data tx        0              0            0             0

1 DVMRP tunnel found
1 tunnel was created dynamically
```

To display the detail of a dynamically created DVMRP tunnel for the Mobile IP application:

```
host1:vr12#show dvmrp tunnel detail mobileIp-dynamic-1
DVMRP tunnel mobileIp-dynamic-1 is Up
tunnel is dynamic
Application is Mobile-IP
Tunnel operational configuration
  Tunnel mtu is '5000'
  Tunnel source address is '6.6.6.6'
  Tunnel destination address is '3.3.3.3'
  Tunnel transport virtual router is vr1
  Tunnel mdt is disabled
  Tunnel checksum option is disabled
  Tunnel sequence number option is disabled
  Tunnel key is disabled
  Tunnel up/down trap is enabled
  Tunnel-server location is 6/0
  Tunnel administrative state is Up
Statistics      packets      octets      discards      errors
Data rx        0              0            0             0
Data tx        0              0            0             0
```



To display a summary of information about DVMRP tunnels:

```
host1#show dvmrp tunnel summary
Administrative status   enabled   disabled
                        1           0
Operational status     up        down    not-present
                        1           0         0
```

**Meaning** Table 35 on page 289 lists the **show dvmrp tunnel** command output fields.

**Table 35: show dvmrp tunnel Output Fields**

| Field Name                                  | Field Description                                                                                                                                                                                                                                                                                 |
|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DVMRP tunnel                                | Name and state of the dynamic DVMRP tunnel: <ul style="list-style-type: none"> <li>Up—Tunnel is operational</li> <li>Down—Tunnel is not operational</li> <li>not-present—Tunnel is not operational, because the hardware (such as a line module) supporting the tunnel is inaccessible</li> </ul> |
| Application                                 | Name of the application that created the tunnel                                                                                                                                                                                                                                                   |
| Tunnel mtu                                  | Value of the maximum transmission unit for the tunnel                                                                                                                                                                                                                                             |
| Tunnel source address                       | IP address of the source of the tunnel                                                                                                                                                                                                                                                            |
| Tunnel destination address                  | IP address of the destination of the tunnel                                                                                                                                                                                                                                                       |
| Tunnel transport virtual router             | Name of the virtual router associated with the tunnel                                                                                                                                                                                                                                             |
| Tunnel mdt                                  | Tunnel MDT state                                                                                                                                                                                                                                                                                  |
| Tunnel checksum option                      | State of the checksum feature: enabled or disabled                                                                                                                                                                                                                                                |
| Tunnel sequence number option               | State of the sequence number feature; enabled or disabled                                                                                                                                                                                                                                         |
| Tunnel up/down trap is enabled              | Indicates whether or not the E Series router sends traps to SNMP when the operational state of the tunnels changes                                                                                                                                                                                |
| Tunnel server location                      | Location of the tunnel server in <i>slot/port</i> format (ERX7xx models, ERX14xx models, and the ERX310 router) or <i>slot/adaptor/port</i> format (E120 and E320 routers).                                                                                                                       |
| Tunnel secured by ipsec transport interface | IPsec interface that secures the tunnel                                                                                                                                                                                                                                                           |
| Tunnel administrative state                 | Configured state of the tunnel: Up or Down                                                                                                                                                                                                                                                        |
| Statistics                                  | Details of packets received or transmitted by the tunnel                                                                                                                                                                                                                                          |

Table 35: show dvmrp tunnel Output Fields (*continued*)

| Field Name                   | Field Description                                                                                                                                                                                                                                                               |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| packets                      | Number of packets received or transmitted by the tunnel                                                                                                                                                                                                                         |
| octets                       | Number of octets received or transmitted by the tunnel                                                                                                                                                                                                                          |
| discards                     | Number of packets not accepted by the tunnel                                                                                                                                                                                                                                    |
| Errors                       | Number of packets with errors received or transmitted by the tunnel                                                                                                                                                                                                             |
| Data rx                      | Received data                                                                                                                                                                                                                                                                   |
| Data tx                      | Transmitted data                                                                                                                                                                                                                                                                |
| DVMRP tunnels found          | Total number of DVMRP tunnels found                                                                                                                                                                                                                                             |
| Tunnels were created dynamic | Number of tunnels created dynamically                                                                                                                                                                                                                                           |
| Administrative status        | Administrative status: <ul style="list-style-type: none"> <li>• enabled—Tunnel is available for use</li> <li>• disabled—Tunnel is not available for use</li> </ul>                                                                                                              |
| Operational status           | Operational status: <ul style="list-style-type: none"> <li>• up—Tunnel is operational</li> <li>• down—Tunnel is not operational</li> <li>• not-present—Tunnel is not operational, because the hardware (such as a line module) supporting the tunnel is inaccessible</li> </ul> |

- Related Documentation**
- [Understanding Dynamic IP Tunnels on page 279](#)
  - [Monitoring DVMRP Destination Profiles on page 286](#)
  - `show dvmrp tunnel`

## Monitoring GRE Destination Profiles

**Purpose** Display the configuration of GRE destination profiles.

**Action** To display all GRE destination profiles configured on the system:

```
host1#show gre destination profile
default gre destination profile global
gre destination profile boston1
gre destination profile boston2
```

```
3 gre destination profiles found
the default destination profile is present
```

To display a specific GRE destination profile used for dynamic IP tunnel creation:

```
host1#show gre destination profile boston1
gre destination profile boston1
  tunnel checksum disabled
  tunnel sequence-datagrams disabled
  tunnel mtu 10240
  ipsec transport mode disabled
  tunnel mdt disabled
  profile kanata
  virtual router vr1
  tunnel destination subnet 10.0.0.0 255.0.0.0
  tunnel source 1.1.1.1
  tunnel source 1.1.1.2
  tunnel source 1.1.1.3
```

To display a specific GRE destination profile used in a MVPN:

```
host1#show gre destination profile boston2
gre destination profile boston2
  tunnel checksum disabled
  tunnel sequence-datagrams disabled
  tunnel mtu 10240
  ipsec transport mode disabled
  tunnel mdt profile kanata-mdt
  profile kanata
  virtual router vr2
  tunnel destination subnet 224.0.0.0 255.0.0.0
  tunnel source 1.1.1.1
  tunnel source 1.1.1.2
  tunnel source 1.1.1.3
```

**Meaning** Table 36 on page 291 lists the **show gre destination profile** command output fields.

**Table 36: show gre destination profile Output Fields**

| Field Name                      | Field Description                                                      |
|---------------------------------|------------------------------------------------------------------------|
| default gre destination profile | Name of the modified default destination profile on the system         |
| gre destination profile         | Name of the GRE destination profiles configured on the system          |
| tunnel checksum                 | Status of tunnel checksum configuration; enabled or disabled           |
| tunnel sequence-datagrams       | Status of tunnel sequence datagrams configuration; enabled or disabled |
| tunnel mtu                      | Value of the tunnel MTU                                                |
| ipsec transport mode            | Status of IPsec transport mode configuration; enabled or disabled      |

Table 36: show gre destination profile Output Fields (*continued*)

| Field Name                | Field Description                                                        |
|---------------------------|--------------------------------------------------------------------------|
| tunnel mdt                | Status of IPsec transport mode configuration; enabled or disabled        |
| profile                   | Name of the profile assigned for upper IP interfaces                     |
| virtual router            | Name of the transport virtual router assigned to the destination profile |
| tunnel destination subnet | Value of the configured destination address subnet                       |
| tunnel source             | Value of the configured source address                                   |

- Related Documentation**
- [Understanding Dynamic IP Tunnels on page 279](#)
  - [Monitoring Dynamic GRE Tunnels on page 292](#)
  - *show gre destination profile*

## Monitoring Dynamic GRE Tunnels

**Purpose** Display information about a dynamic GRE tunnel or a list of dynamic GRE tunnels. You can specify the **detail** keyword to view detailed information about tunnels. You can specify the **state** keyword and the state of the tunnel (disabled, down, enabled, lower-down, not-present, up) to view the number of tunnels in a specific state. To view the state of a specific tunnel, specify a tunnel name. To view the number of tunnels associated with an IP address, specify an IP address. You can specify an IP address with the **virtual-router** keyword and the name of the virtual router to view the number of tunnels associated with an IP address on the virtual router.

**Action** To display three dynamic GRE tunnels:

```
host1:vr11#show gre tunnel
GRE tunnel mobileIp-dynamic-1 is Up
GRE tunnel mvpn-dynamic-2 is Up
GRE tunnel mvpn-dynamic-3 is Down

3 GRE tunnels found
3 tunnels were created dynamic
```

To display the detail of a dynamically created GRE tunnel for the data MDT application:

```
host1:vr11#show dvmrp tunnel detail mvpn-dynamic-1
GRE tunnel mvpn-dynamic-1 is Up
tunnel is dynamic
Application is MVPN
Tunnel operational configuration
  Tunnel mtu is '5000'
  Tunnel source address is '1.1.1.1'
  Tunnel destination address is '2.2.2.2'
  Tunnel transport virtual router is vr1
  Tunnel mdt is disabled
```

```

Tunnel checksum option is disabled
Tunnel sequence number option is disabled
Tunnel up/down trap is enabled
Tunnel-server location is 4/0
Tunnel administrative state is Up
Statistics      packets      octets      discards      errors
Data rx        0            0            0            0
Data tx        0            0            0            0

1 GRE tunnel found
1 tunnel was created dynamically

```

To display the detail of a dynamically created GRE tunnel for the Mobile IP application:

```

host1:vr12#show gre tunnel detail mobileip-dynamic-1
GRE tunnel mobileIp-dynamic-1 is Up
tunnel is dynamic
Application is Mobile-IP
Tunnel operational configuration
Tunnel mtu is '5000'
Tunnel source address is '6.6.6.6'
Tunnel destination address is '3.3.3.3'
Tunnel transport virtual router is vr1
Tunnel mdt is disabled
Tunnel checksum option is disabled
Tunnel sequence number option is disabled
Tunnel key is disabled
Tunnel up/down trap is enabled
Tunnel-server location is 6/0
Tunnel administrative state is Up
Statistics      packets      octets      discards      errors
Data rx        0            0            0            0
Data tx        0            0            0            0

```

To display a summary of information about dynamic GRE tunnels:

```

host1#show gre tunnel summary
Administrative status  enabled  disabled
                      3            0
Operational status    up       down    not-present
                      3            0            0

```

**Meaning** Table 37 on page 293 lists the **show gre tunnel** command output fields.

**Table 37: show gre tunnel Output Fields**

| Field Name  | Field Description                                                                                                                                                                                                                                                                               |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| GRE tunnel  | Name and state of the dynamic GRE tunnel: <ul style="list-style-type: none"> <li>Up—Tunnel is operational</li> <li>Down—Tunnel is not operational</li> <li>not-present—Tunnel is not operational, because the hardware (such as a line module) supporting the tunnel is inaccessible</li> </ul> |
| Application | Name of the application that created the tunnel                                                                                                                                                                                                                                                 |
| Tunnel mtu  | Value of the maximum transmission unit for the tunnel                                                                                                                                                                                                                                           |

Table 37: show gre tunnel Output Fields (*continued*)

| Field Name                                     | Field Description                                                                                                                                                           |
|------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tunnel source address                          | IP address of the source of the tunnel                                                                                                                                      |
| Tunnel destination address                     | IP address of the destination of the tunnel                                                                                                                                 |
| Tunnel transport virtual router                | Name of the virtual router associated with the tunnel                                                                                                                       |
| Tunnel mdt                                     | State of the tunnel MDT                                                                                                                                                     |
| Tunnel checksum option                         | State of the checksum feature: enabled or disabled                                                                                                                          |
| Tunnel sequence number option                  | State of the sequence number feature; enabled or disabled                                                                                                                   |
| Tunnel up/down trap                            | Indicates whether or not the E Series router sends traps to SNMP when the operational state of the tunnels changes, enabled or disabled                                     |
| Tunnel server location                         | Location of the tunnel server in <i>slot/port</i> format (ERX7xx models, ERX14xx models, and the ERX310 router) or <i>slot/adaptor/port</i> format (E120 and E320 routers). |
| Tunnel is secured by ipsec transport interface | IPsec interface that secures the tunnel                                                                                                                                     |
| Tunnel administrative state                    | Configured state of the tunnel: up or down                                                                                                                                  |
| Statistics                                     | Details of packets received or transmitted by the tunnel                                                                                                                    |
| packets                                        | Number of packets received or transmitted by the tunnel                                                                                                                     |
| octets                                         | Number of octets received or transmitted by the tunnel                                                                                                                      |
| discards                                       | Number of packets not accepted by the tunnel                                                                                                                                |
| Errors                                         | Number of packets with errors received or transmitted by the tunnel                                                                                                         |
| Data rx                                        | Received data                                                                                                                                                               |
| Data tx                                        | Transmitted data                                                                                                                                                            |
| Tunnels found                                  | Total number of GRE tunnels found                                                                                                                                           |
| Tunnels were created dynamic                   | Number of tunnels created dynamically                                                                                                                                       |

Table 37: show gre tunnel Output Fields (*continued*)

| Field Name            | Field Description                                                                                                                                                                                                                                                           |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Administrative status | Administrative status: <ul style="list-style-type: none"><li>• enabled—Tunnel is available for use</li><li>• disabled—Tunnel is not available for use</li></ul>                                                                                                             |
| Operational status    | Operational status: <ul style="list-style-type: none"><li>• up—Tunnel is operational</li><li>• down—Tunnel is not operational</li><li>• not-present—Tunnel is not operational, because the hardware (such as a line module) supporting the tunnel is inaccessible</li></ul> |

- Related Documentation**
- [Understanding Dynamic IP Tunnels on page 279](#)
  - [Monitoring GRE Destination Profiles on page 290](#)
  - *show gre tunnel*





# IP Reassembly for Tunnels

This chapter describes IP packet reassembly for tunneled protocols on E Series routers; it contains the following sections:

- [Overview on page 297](#)
- [Platform Considerations on page 298](#)
- [Configuring IP Reassembly on page 299](#)
- [Monitoring IP Reassembly on page 300](#)

## Overview

---


Tunneling protocols provide a method of forwarding packets of a particular protocol through a network of a different protocol type. For example, L2TP can transport a protocol such as PPP through a routed IP network. This capability requires a pair of devices that define the endpoints of the tunnel. Packets entering the tunnel are processed and encapsulated at the ingress endpoint, and packets exiting the tunnel are processed and de-encapsulated at the egress endpoint.

When packets are tunneled through an IP network, simple IP forwarding is performed. The IP forwarding process might fragment packets in the tunnel. Tunnel processing requires each packet to exit the tunnel in the same form in which it entered. Fragmented packets that are not reassembled before the tunnel egress processing are dropped.

For example, in [Figure 21 on page 298](#), traffic is tunneled through an IP network that has four hops. Because the MTU of the link between routers B and C is smaller than that of previous hops, some packets are fragmented. Router D must reassemble the packets before tunnel egress processing and de-encapsulation are performed.

For more information about configuring tunnel-service interfaces, see *Managing Tunnel Service and IPsec Service Interfaces* in *JunosE Physical Layer Configuration Guide*.

 Figure 21: Tunneling Through an IP Network That Fragments Packets

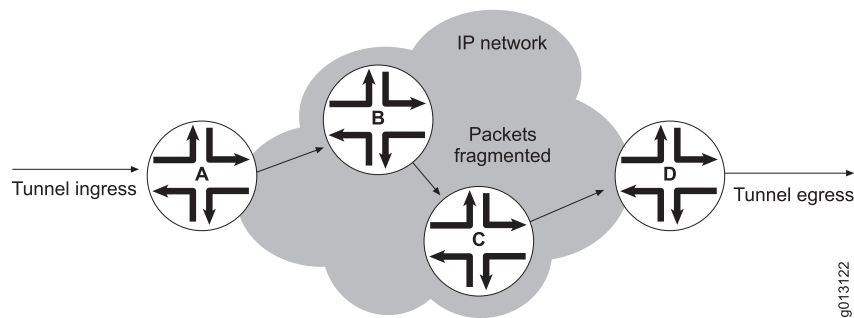

## Platform Considerations

For information about modules that support IP reassembly on the ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support IP reassembly.

For information about modules that support IP reassembly on the E120 or E320 Broadband Services Router:

- See *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about the modules that support IP reassembly.

## Module Requirements

The types of modules that support IP reassembly for tunnel packets depend on the type of E Series router that you have.

### ERX7xx Models, ERX14xx Models, and the ERX310 Router

To configure IP reassembly on ERX7xx models, ERX14xx models, and the ERX310 router, you must install one of a Service Module (SM), an IPsec Service line module (ISM), or a module that supports the use of shared tunnel-server ports. With these modules, an ERX router can perform reassembly of IP packets that it receives on DVMRP, GRE, IPsec, and L2TP tunnels.

Because IP reassembly is required only on tunnel egress packets, the router performs reassembly only on packets in which the IP destination address is local to the router and in which the underlying protocol is one of the supported tunneling protocols.

SMs provide dedicated tunnel-server ports that are always configured on the module. Unlike other line modules, SMs, and ISMs do not pair with corresponding I/O modules that contain ingress and egress ports. Instead, they receive data from and transmit data

to other line modules with access to ingress and egress ports on their own associated I/O modules.

You can also create tunnels on router modules that support shared tunnel-server ports. You can configure (provision) a shared tunnel-server port to use a portion of the module's bandwidth to provide tunnel services. For a list of the modules that support shared tunnel-server ports, see the *ERX Module Guide*.

For information about configuring tunnel services on dedicated and shared tunnel-server ports, see *Managing Tunnel Service and IPsec Service Interfaces* in *JunosE Physical Layer Configuration Guide*.

### E120 Router and E320 Router

To configure IP reassembly on an E120 router or an E320 router, you must install an ES2 4G line module (LM) or an ES2 10G ADV LM with an ES2-S1 Service I/O adapter (IOA), or an IOA that supports the use of shared tunnel-server ports. For information about installing modules in these routers, see the *E120 and 320 Hardware Guide*.

The combination of an ES2 4G LM or an ES2 10G ADV LM with an ES2-S1 Service IOA provides a dedicated tunnel-server port that is always configured on the IOA. Unlike SMs, the ES2 4G LM and the ES2 10G ADV LM require the ES2-S1 Service IOA to condition it to receive and transmit data to other line modules. The ES2-S1 Service IOA also does not have ingress or egress ports.

You can also configure IP reassembly on IOAs that support shared tunnel-server ports. You can configure (provision) a shared tunnel-server port to use a portion of the IOA's bandwidth to provide tunnel services. For a list of the IOAs that support shared tunnel-server ports, see the *E120 and E320 Module Guide*.

For information about configuring tunnel services on dedicated and shared tunnel-server ports, see *Managing Tunnel Service and IPsec Service Interfaces* in *JunosE Physical Layer Configuration Guide*.

## Configuring IP Reassembly

You can enable IP reassembly on a virtual router basis. Also, on a systemwide basis, you can control how the router handles verification of sequence numbers in data packets that it receives on L2TP tunnels.

### *ip tunnel reassembly*

- Use to enable the reassembly of fragmented IP tunnel packets that are received on the current virtual router.
- You configure tunnel reassembly on VPN routing and forwarding routers independent of the tunnel reassembly configuration on the parent virtual router.
- Example—Enables reassembly for virtual router vr12 and disables reassembly for virtual router vr8

```
host1:vr12(config)#ip tunnel reassembly
host1:vr12(config)#virtual-router vr8
host1:vr8(config)#no ip tunnel reassembly
```

- Use the **no** version to return IP tunnel reassembly to the default, disabled.
- See *ip tunnel reassembly*.

### ***l2tp ignore-receive-data-sequencing***

- Use to prevent sequence number verification for data packets received on all L2TP tunnels in the router. This command does not affect the insertion of sequence numbers in packets sent from the router.
- If you are using IP reassembly, we recommend that you set up the router to ignore sequence numbers in received data packets. Because IP reassembly can reorder L2TP packets, out-of-order packets can be dropped if sequence numbers are being used on L2TP data packets.
- Example

```
host1(config)#l2tp ignore-receive-data-sequencing
```
- Use the **no** version to cause the router to verify sequence numbers on received L2TP data packets.
- See *l2tp ignore-receive-data-sequencing*.

---

## Monitoring IP Reassembly

This section describes how to set a statistics baseline for tunnel reassembly statistics and how to display reassembly statistics.

### Setting Statistics Baselines

You can use the **baseline ip tunnel-reassembly** command to set a statistics baseline for tunnel reassembly statistics on the current virtual router. The router implements the baseline by reading and storing the statistics at the time the baseline is set and then subtracting this baseline whenever you retrieve baseline-relative statistics.

#### ***baseline ip tunnel-reassembly***

- Use to set a statistics baseline for tunnel reassembly statistics on the current virtual router.
- To display reassembly statistics relative to the baseline, use the **show ip tunnel reassembly statistics** command with the **delta** keyword. For information about displaying baselined statistics, see [“show ip tunnel reassembly statistics” on page 301](#).
- Example

```
host1:vr2#baseline ip tunnel-reassembly
```
- There is no **no** version.
- See *baseline ip tunnel-reassembly*.

## Displaying Statistics

The router keeps several statistics that are useful for diagnostic purposes. These statistics are organized by virtual router, and some are broken out by protocol as well. You can display statistics for a single virtual router or for all virtual routers. You can also display statistics relative to a baseline.

### *show ip tunnel reassembly statistics*

- Use to display tunnel reassembly statistics.
- To display statistics in brief form for the current virtual router, use the command with no keywords.
- To display statistics for all virtual routers, include the **all** keyword.
- To display detailed statistics, include the **detail** keyword.
- To display statistics relative to a baseline set with the **baseline ip tunnel-reassembly** command, include the **delta** keyword.
- Field descriptions
  - Tunnel IP Reassembly—Status of the IP reassembly feature: enabled, disabled
  - Total Fragments Received—Number of total fragments received for all tunneling protocols
  - Total Packets Reassembled—Number of packets reassembled; detailed display includes number of packets reassembled for each protocol; Control/Other increments for packets that are reassembled on a Tunnel Service module but are not forwarded, and instead sent to the SRP module
  - Reassembly Errors or Total Reassembly Errors—Number of errors in completing reassembly; detailed display includes types of reassembly errors
  - Reassembly Discards—Number of packets discarded because they were not reassembled
  - Reassembly Disabled Discards—Number of fragmented packets received when IP tunnel reassembly is disabled on the virtual router
- Example 1—Shows reassembly statistics for the default virtual router

```
host1#show ip tunnel reassembly statistics
```

```
Tunnel IP Reassembly Statistics for Virtual Router: default
```

```
Tunnel IP Reassembly enabled
Total Fragments Received:      15
Total Packets Reassembled:     5
Reassembly Errors:             0
Reassembly Discards:           0
```

- Example 2—Shows detailed reassembly statistics for the default virtual router

```
host1#show ip tunnel reassembly statistics detail
```

```
Tunnel IP Reassembly Statistics for Virtual Router: default
```

```

Tunnel IP Reassembly enabled
Total Fragments Received:          15
Total Packets Reassembled:         5
    L2TP:                          5
    GRE:                           0
    IPsec:                         0
    Control/Other:                 0
Total Reassembly Errors:           0
    Fragmentation Errors:          0
    Too Many Fragments:           0
    Out of Resources:              0
    Packet Too Big:                0
    Reassembly Timeout:            0
Reassembly Disabled Discards:      0

```

- Example 3—Shows reassembly statistics for virtual router vr2 before and after setting a statistics baseline

The following command shows reassembly statistics for vr2 before setting the baseline.

```
host1:vr2#show ip tunnel reassembly statistics
```

```
Tunnel IP Reassembly Statistics for Virtual Router: vr2
```

```

Tunnel IP Reassembly enabled
Total Fragments Received:          45
Total Packets Reassembled:         15
Reassembly Errors:                 0
Reassembly Discards:              0

```

The following command sets a baseline for reassembly statistics on vr2.

```
host1:vr2#baseline ip tunnel-reassembly
```

The following command shows reassembly statistics relative to the baseline before new packets arrive at the router for reassembly.

```
host1:vr2#show ip tunnel reassembly statistics delta
```

```
Tunnel IP Reassembly Statistics for Virtual Router: vr2
```

```

Tunnel IP Reassembly enabled
Total Fragments Received:          0
Total Packets Reassembled:         0
Reassembly Errors:                 0
Reassembly Discards:              0

```

The following command shows reassembly statistics relative to the baseline as new packets start arriving at the router for reassembly.

```
host1:vr2#show ip tunnel reassembly statistics delta
```

```
Tunnel IP Reassembly Statistics for Virtual Router: vr2
```

```

Tunnel IP Reassembly enabled
Total Fragments Received:          15
Total Packets Reassembled:         5
Reassembly Errors:                 0
Reassembly Discards:              0

```

- See *show ip tunnel reassembly statistics*.

# Securing L2TP and IP Tunnels with IPsec

This topic describes how to secure generic routing encapsulation (GRE), Distance Vector Multicast Routing Protocol (DVMRP), and Layer 2 Tunneling Protocol (L2TP) tunnels with IP Security (IPsec) on your E Series router. It contains the following sections:

- [Securing L2TP and IP Tunnels with IPsec Overview on page 304](#)
- [Securing L2TP and IP Tunnels with IPsec Platform Considerations on page 305](#)
- [Securing L2TP and IP Tunnels with IPsec References on page 305](#)
- [L2TP/IPsec Tunnels Overview on page 306](#)
- [Setting Up a Secure Connection Between the Client PC and an E Series Router on page 307](#)
- [L2TP/IPsec Control and Data Frames Overview on page 308](#)
- [L2TP/IPsec Traffic Compatibility Issues and Requirements Overview on page 308](#)
- [NAT Passthrough Mode Overview on page 310](#)
- [NAT-Traversal Overview on page 311](#)
- [Single-Shot L2TP/IPsec Tunnels Overview on page 314](#)
- [Setting Up the Client PC for an L2TP/IPsec Tunnel on page 315](#)
- [Configuring E Series Routers to Set Up an L2TP/IPsec Tunnel on page 315](#)
- [Configuring an L2TP Destination Profile to Enable IPsec Support for L2TP Tunnels on page 316](#)
- [Enabling IPsec Transport Mode on page 317](#)
- [Creating an L2TP Destination Profile on page 317](#)
- [Enabling NAT-T on a Virtual Router on page 318](#)
- [Configuring Single-Shot L2TP/IPsec Tunnels on page 319](#)
- [GRE/IPsec and DVMRP/IPsec Tunnels on page 320](#)
- [Configuring an IPsec Transport Profile on page 322](#)
- [Configuring the Type of Application Secured by Connections Created with an IPsec Transport Profile on page 324](#)
- [Creating an IPsec Transport Profile on page 324](#)
- [Setting a Lifetime Range for an IPsec Transport Profile on page 325](#)
- [Configuring a Local Endpoint for an IPsec Transport Profile on page 325](#)

- [Configuring Perfect Forward Secrecy for an IPsec Transport Profile on page 326](#)
- [Configuring an Unencrypted Preshared Key for a Local IPsec Transport Profile on page 326](#)
- [Configuring an Encrypted Preshared Key for a Local IPsec Transport Profile on page 327](#)
- [Configuring Transform Sets for an IPsec Transport Profile on page 328](#)
- [Using a System Event Log to Troubleshoot IPsec-Secured L2TP and IP Tunnels on page 328](#)

## Securing L2TP and IP Tunnels with IPsec Overview

---

You can provide additional security to L2TP and IP tunnels by protecting them with an IPsec transport connection. Secure IP interfaces are virtual IP interfaces that are configured to provide confidentiality and authentication services for the traffic flowing through the interface; that traffic can be L2TP, GRE, and DVMRP tunnel traffic. For detailed information about IPsec, see [“Configuring IPsec” on page 143](#).

The GRE, DVMRP, and L2TP over IPsec provide security only between tunnel endpoints; they do not provide end-to-end security. For end-to-end security, you need additional security for the connection beyond the router.

This section describes the following:

- [Tunnel Creation on page 304](#)
- [IPsec Secured-Tunnel Maximums on page 304](#)

### Tunnel Creation

The ERX routers can have both unsecured GRE, DVMRP, and L2TP tunnels and tunnels that are secured by IPsec. However, unsecured L2TP tunnels are not allowed on the IPsec Service module (ISM). You can use the following commands to create a secure tunnel:

- L2TP tunnels—Use the ***enable ipsec-transport*** command in the L2TP destination profile. For more information about enabling IPsec transport mode, see [“Enabling IPsec Transport Mode” on page 317](#).
- GRE and DVMRP tunnels—Use the ***ipsec-transport*** keyword in the ***interface tunnel*** command. For more information about enabling IPsec support for GRE and DVMRP tunnels, see [“Enabling IPsec Support for GRE and DVMRP Tunnels” on page 322](#).

### IPsec Secured-Tunnel Maximums

For information about the maximum number of GRE/IPsec, DVMRP/IPsec, and L2TP/IPsec connections supported on E Series routers, see the *JunosE Release Notes, Appendix A, System Maximums* corresponding to your software release.

#### Related Documentation

- [Securing L2TP and IP Tunnels with IPsec Platform Considerations on page 305](#)
- [Securing L2TP and IP Tunnels with IPsec References on page 305](#)
- [L2TP/IPsec Tunnels Overview on page 306](#)



- [GRE/IPsec and DVMRP/IPsec Tunnels Overview on page 320](#)
- [Using a System Event Log to Troubleshoot IPsec-Secured L2TP and IP Tunnels on page 328](#)

## Securing L2TP and IP Tunnels with IPsec Platform Considerations

---

For information about modules that support L2TP and IP tunnels with IPsec on the ERX7xx models, ERX14xx models, and ERX310 Broadband Services Router:

- See L2TP network server (LNS) and L2TP access concentrator (LAC) support in the *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See LNS and LAC support in the *ERX Module Guide, Appendix A, Module Protocol Support* for information about modules that support LNS and LAC.

For information about modules that support L2TP and IP tunnels with IPsec on E120 and E320 Broadband Services Routers:

- See LNS and LAC support in the *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See LNS and LAC support in the *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about modules that support LNS and LAC.

## Module Requirements

To create IPsec-secured tunnels, you must install an IPsec Service module (ISM) in the ERX router. The ISM is a security gateway and functions as one of the endpoints for secure tunnels. The tunnel endpoints are the tunnel *source* and the tunnel *destination* IP addresses. For an L2TP/IPsec tunnel, the source is the L2TP network server (LNS) and the destination is the L2TP access concentrator (LAC).

For information about installing ISMs in the ERX routers, see the *ERX Hardware Guide*.

### Related Documentation

- [Securing L2TP and IP Tunnels with IPsec Overview on page 304](#)
- [Securing L2TP and IP Tunnels with IPsec References on page 305](#)

## Securing L2TP and IP Tunnels with IPsec References

---

For more information about protocols for securing L2TP and IP tunnels with IPsec, consult the following resources:

- RFC 2401—Security Architecture for the Internet Protocol (November 1998)
- RFC 2661—Layer Two Tunneling Protocol “L2TP” (August 1999)
- RFC 3193—Securing L2TP using IPsec (November 2001)
- RFC 3715—IPsec-Network Address Translation (NAT) Compatibility Requirements (March 2004)

- Negotiation of NAT-Traversal in the IKE—draft-ietf-ipsec-nat-t-ike-08.txt (July 2004 expiration)
- UDP Encapsulation of IPsec ESP Packets—draft-ietf-ipsec-udp-encaps-09.txt (November 2004 expiration)



**NOTE:** The IETF drafts are valid for only 6 months from the date of issuance. They must be considered as works in progress. Please refer to the IETF website at <http://www.ietf.org> for the latest drafts.

For additional configuration information, see:

- [“Configuring IPsec” on page 143](#)
- [“Configuring Digital Certificates” on page 233](#)
- [“Configuring IP Tunnels” on page 265](#)
- [L2TP Overview](#)

**Related  
Documentation**

- [Securing L2TP and IP Tunnels with IPsec Overview on page 304](#)
- [Securing L2TP and IP Tunnels with IPsec Platform Considerations on page 305](#)

---

## L2TP/IPsec Tunnels Overview


---

The L2TP/IPsec remote access allows clients to connect to a corporate virtual private network (VPN) over the public Internet with a secure connection. The L2TP tunnel runs on top of an IPsec transport mode connection. The secure tunnel runs from the client PC to the E Series router that terminates the secure tunnel. For example, using L2TP with IPsec enables Broadband Remote Access Server (B-RAS) clients to securely connect to a corporate or other VPN in addition to using another unsecured connection to the Internet, depending on the client software capabilities.

On the router side of the L2TP connection, the E Series router acts as the LNS. On the PC client side of the connection, the client acts as the LAC and runs the L2TP/IPsec client software on supported platforms. (For a list of the supported platforms, see [“L2TP/IPsec Traffic Compatibility Issues and Requirements Overview” on page 308](#).) Both sides of the connection run IPsec in transport mode with Encapsulating Security Payload (ESP) encryption and authentication.

In the model shown in [Figure 22 on page 307](#), a client PC connects to its local provider, who gives the client a public IP address. Using the public IP address, the client PC initiates an IPsec connection toward the L2TP/IPsec gateway for the private network that it wants to connect to. After establishing the IPsec connection, the client establishes an L2TP tunnel to the same L2TP/IPsec gateway, which provides the client with another IP interface to access the private network that it is connecting to. The L2TP tunnel is completely protected by the IPsec connection established earlier.

 Figure 22: L2TP with IPsec Application

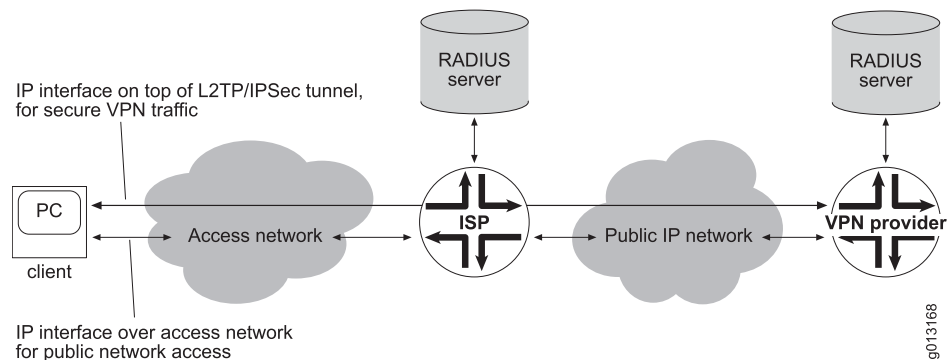


## Related Documentation

- [Securing L2TP and IP Tunnels with IPsec Overview on page 304](#)
- [Setting Up a Secure Connection Between the Client PC and an E Series Router on page 307](#)
- [L2TP/IPsec Control and Data Frames Overview on page 308](#)
- [NAT Passthrough Mode Overview on page 310](#)
- [NAT-Traversal Overview on page 311](#)
- [Single-Shot L2TP/IPsec Tunnels Overview on page 314](#)

## Setting Up a Secure Connection Between the Client PC and an E Series Router

You can set up a secure connection between the client PC and an E Series router. [Figure 23 on page 307](#) gives an overview of the process used to set up a secure connection between the client PC and an E Series router that is acting as a VPN provider.
 
### Figure 23: L2TP/IPsec Connection

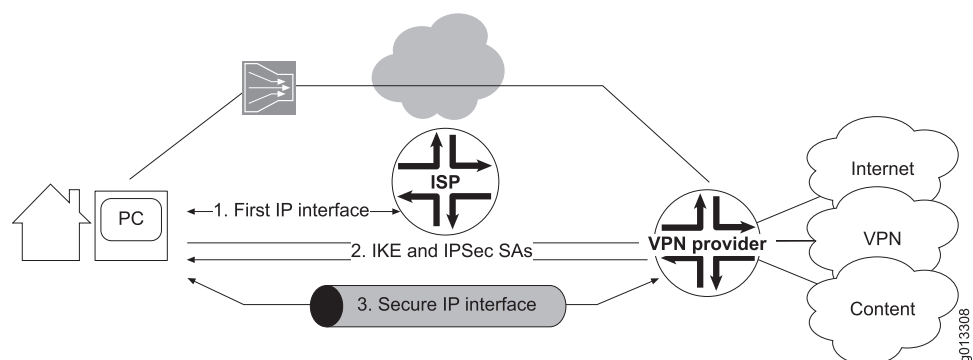

To set up a secure connection:

1. Obtain an IP address from your ISP, using a normal B-RAS termination.
2. Internet Key Exchange (IKE) signals a security association (SA) between the client PC and the E Series router that is acting as a VPN provider.
  - SAs are established to secure data traffic.

- The IPsec connection secures L2TP traffic.
3. Set up an L2TP tunnel and session between the client PC (the LAC) and the E Series router (the LNS).

The tunnel runs over the SAs that IKE established.

#### Related Documentation


- [L2TP/IPsec Tunnels Overview on page 306](#)
- [Setting Up the Client PC for an L2TP/IPsec Tunnel on page 315](#)
- [Configuring E Series Routers to Set Up an L2TP/IPsec Tunnel on page 315](#)

## L2TP/IPsec Control and Data Frames Overview

L2TP and IPsec define control and data messages used for L2TP/IPsec.


[Figure 24 on page 308](#) shows an L2TP control frame encapsulated by IPsec. The shaded area shows the encrypted portion of the frame.

 **Figure 24: L2TP Control Frame Encapsulated by IPsec**

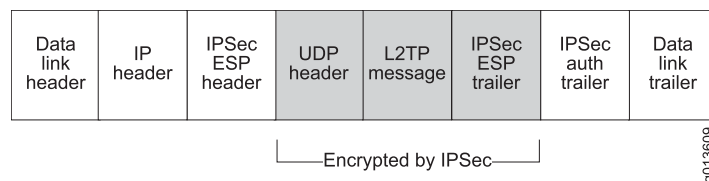

[Figure 25 on page 308](#) is an L2TP data frame encapsulated by IPsec. The shaded area shows the encrypted portion of the frame.

 **Figure 25: L2TP Data Frame Encapsulated by IPsec**

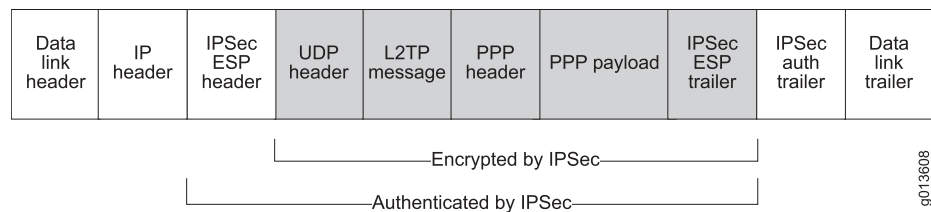

#### Related Documentation

- [L2TP/IPsec Tunnels Overview on page 306](#)
- [NAT Passthrough Mode Overview on page 310](#)
- [NAT-Traversal Overview on page 311](#)

## L2TP/IPsec Traffic Compatibility Issues and Requirements Overview

This topic covers various compatibility issues and requirements for the L2TP/IPsec traffic.

- [Client Software Supported on page 309](#)
- [Interactions with NAT on page 309](#)

- [Interaction Between IPsec and PPP on page 309](#)
- [LNS Change of Port on page 309](#)
- [Group Preshared Key on page 309](#)

## Client Software Supported

The L2TP/IPsec software supports the following client PC operating systems and L2TP and IPsec applications:

- Windows 2000 and Windows XP running built-in IPsec VPN software
- Microsoft L2TP/IPsec VPN client for Windows NT, Windows 98, and Windows ME
- SafeNet client software
- Mac OS X version 10.3 or later

## Interactions with NAT

There are two ways that you can configure E Series routers to interact with Network Address Translation (NAT) devices in the network:

- Configure the router to run in NAT passthrough mode by using the **application l2tp-nat-passthrough** command. For information about NAT passthrough, see [“NAT Passthrough Mode Overview” on page 310](#).
- Configure the virtual router to enable Network Address Translation-Traversal (NAT-T) by using the **ipsec option nat-t** command. For information about NAT-T, see [“NAT-Traversal Overview” on page 311](#).

## Interaction Between IPsec and PPP

The Point-to-Point Protocol (PPP) defines the Compression Control Protocol (CCP) and Encryption Control Protocol (ECP) modes. These modes are currently not supported in E Series routers. There is no interaction related to encryption directives between IPsec and PPP.

## LNS Change of Port

In the L2TP world, the LNS is allowed to change its port number; this functionality is currently not supported in ERX routers. IPsec allows only port 1701 to be used for L2TP/IPsec tunnels. However, the LAC is allowed to use any source port it desires.

## Group Preshared Key

Group preshared keys allow the provisioning of secure remote access by means of L2TP/IPsec to networks that do not use a certificate authority (CA) to issue certificates. A group preshared key is associated with a local IP address in an E Series router and is used to authenticate L2TP/IPsec clients that target this IP address as their VPN server address.



**CAUTION:** Group preshared keys are not fully secure, and we recommend that you use digital certificates in place of group preshared keys. Group preshared keys are open to man-in-the-middle attacks. To reduce this risk, ERX routers accept only IPsec connections that specify L2TP traffic selectors for security associations (SAs) that are negotiated over IKE connections authenticated with group preshared keys.

---

**Related  
Documentation**

- [L2TP/IPsec Tunnels Overview on page 306](#)
- [Configuring a Local Endpoint for an IPsec Transport Profile on page 325](#)
- [Configuring an Unencrypted Preshared Key for a Local IPsec Transport Profile on page 326](#)
- [Configuring an Encrypted Preshared Key for a Local IPsec Transport Profile on page 327](#)
- [Configuring the Type of Application Secured by Connections Created with an IPsec Transport Profile on page 324](#)
- *application*

---

## NAT Passthrough Mode Overview

---

NAT devices can change the IP address and port number of a traversing IP packet. Encrypted frames, in which an ESP header follows the IP header, may or may not pass through a NAT device.

You can set up a router to run in NAT passthrough mode, which causes the router to not check UDP checksums. The reason is that a NAT device may change the IP address while the UDP header is encrypted. In this case, the UDP checksum cannot be recalculated. Not checking UDP checksums does not compromise security because IPsec protects UDP with an authentication algorithm far stronger than UDP checksums. To set up the router to run in NAT passthrough mode, use the **application l2tp-nat-passthrough** command.

We recommend that you configure the router to use NAT passthrough mode when the NAT device provides a feature commonly known as IPsec passthrough.

For information about configuring NAT passthrough mode as part of an IPsec transport profile, see [“Configuring the Type of Application Secured by Connections Created with an IPsec Transport Profile” on page 324](#).

**Related  
Documentation**

- [L2TP/IPsec Tunnels Overview on page 306](#)
- [L2TP/IPsec Control and Data Frames Overview on page 308](#)
- [L2TP/IPsec Traffic Compatibility Issues and Requirements Overview on page 308](#)
- [Configuring the Type of Application Secured by Connections Created with an IPsec Transport Profile on page 324](#)
- *application*

## NAT-Traversal Overview

---

Using NAT passthrough mode is an adequate solution when a single remote user located behind a NAT device needs secure access to an E Series router. However, NAT passthrough mode does not support secure access to the router by multiple remote users at locations such as hotels or airports where a NAT device resides between the router and the remote users. In addition, NAT passthrough mode does not provide secure access for groups of remote users at corporate locations where a NAT device resides between the company's intranet and the public IP network.

To allow secure router access for multiple remote hosts located behind a NAT device, the router supports a set of IETF standards collectively known as NAT-Traversal (NAT-T). For a list of the individual standards that NAT-T comprises, see [“Securing L2TP and IP Tunnels with IPsec References” on page 305](#).

This topic describes the following:

- [How NAT-T Works on page 311](#)
- [UDP Encapsulation on page 312](#)
- [UDP Statistics on page 313](#)
- [NAT Keepalive Messages on page 313](#)
- [Configuring and Monitoring NAT-T on page 313](#)

### How NAT-T Works

By default, NAT-T is enabled on every virtual router configured on the system. With NAT-T enabled, IPsec traffic flows transparently through a NAT device, thereby allowing one or more remote hosts located behind the NAT device to use secure L2TP/IPsec tunnel connections to access the router.

After NAT-T is enabled on a specific virtual router, either by default or by using the **ipsec option nat-t** command, the router performs the following actions, in this order:

1. The router monitors the exchange of private vendor ID (VID) payloads between the client PC and the E Series router during the IKE SA negotiation process to determine whether both sides of the negotiation support NAT-T.
2. If both sides of the negotiation support NAT-T, the router detects whether a NAT device resides between the IPsec remote peers.
3. If a NAT device is detected between the remote peers, the router negotiates the appropriate type of UDP encapsulation as part of the IKE SA and uses this encapsulation method to process the IPsec traffic.

The **ipsec option nat-t** command affects only those IKE SAs negotiated on the virtual router *after* the command is issued. The command has no effect on IKE SAs that were previously negotiated.

## UDP Encapsulation

As part of the IKE SA negotiation process, the router automatically negotiates UDP encapsulation for L2TP/IPsec control and data frames.

When NAT-T is enabled, L2TP/IPsec control frames and data frames are wrapped in an additional NAT-T UDP header that enables data to flow transparently through the NAT device. The NAT device can translate the IP address of the source port associated with the NAT-T UDP header, whereas the IPsec edge service provider (ESP) header does not have a source port that the NAT device can translate.

Figure 26 on page 312 shows an L2TP control frame encapsulated with a NAT-T UDP header. The shaded area shows the portion of the frame that is encrypted by IPsec.

**Figure 26: L2TP Control Frame with NAT-T UDP Encapsulation**


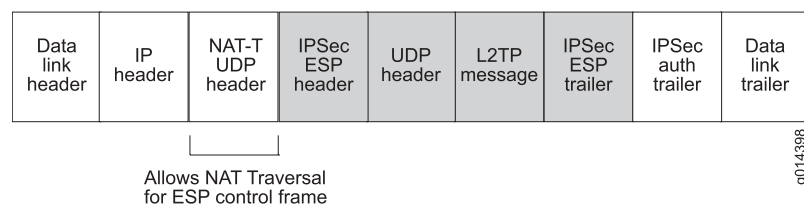 



Figure 27 on page 312 shows an L2TP data frame encapsulated with a NAT-T UDP header. The shaded area shows the portion of the frame that is encrypted by IPsec.

 **Figure 27: L2TP Data Frame with NAT-T UDP Encapsulation**

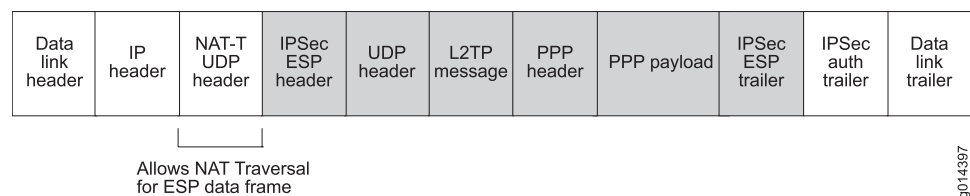

Additionally, IKE packets transmitted during the IKE SA negotiation process are encapsulated with a NAT-T UDP header, and include a non-ESP marker to distinguish them from standard ESP control and data frames. Figure 28 on page 312 shows an IKE packet encapsulated with a NAT-T UDP header.

 **Figure 28: IKE Packet with NAT-T UDP Encapsulation**

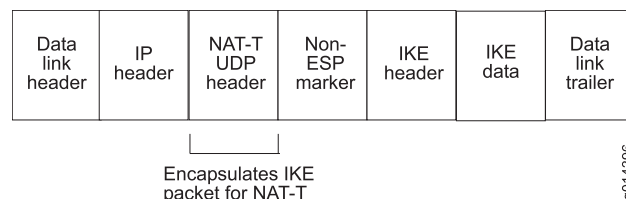

Only frames that use the ESP encryption and authentication protocol can be UDP encapsulated. Frames that use an authentication header (AH) cannot be UDP encapsulated; therefore, NAT-T is *not supported* for L2TP/IPsec connections that use an AH.



For more detailed information about encapsulation and other IPsec security parameters, see [“Configuring IPsec” on page 143](#).

## UDP Statistics

When NAT-T is enabled, UDP-encapsulated IPsec packets arriving and leaving the router look like standard UDP packets. However, the router does not forward these packets to and from the SRP module, as it does for other UDP packets. As a result, the UDP statistics maintained by the SRP module do not reflect UDP-encapsulated IPsec packets.

## NAT Keepalive Messages

The router does not generate NAT keepalive messages. The following reasons explain why this behavior does not generally pose problems for remote users.

- The primary application for using NAT-T is enabling secure L2TP/IPsec access to an E Series router for remote hosts located behind a NAT device. The L2TP protocol has its own keepalive mechanism that is sufficient for keeping NAT entries alive.
- In most NAT configurations, an ERX router does not operate behind the NAT device, thereby making the generation of keepalive messages unnecessary.

If the router receives NAT keepalive messages as part of the L2TP/IPsec traffic flow, it discards these messages at the ingress line module on which the messages were received.

## Configuring and Monitoring NAT-T

For instructions on configuring and monitoring NAT-T, see the sections listed in [Table 38 on page 313](#).

**Table 38: Configuration and Monitoring Tasks for NAT-T**

| Task                                                                       | Command                   | See Topic                                                            |
|----------------------------------------------------------------------------|---------------------------|----------------------------------------------------------------------|
| Enabling and disabling NAT-T on a virtual router                           | <b>ipsec option nat-t</b> | <a href="#">“Enabling NAT-T on a Virtual Router” on page 318</a>     |
| Displaying information about the current NAT-T setting on a virtual router | <b>show ipsec option</b>  | <a href="#">“Monitoring the Status of IPsec Options” on page 337</a> |
| Displaying information about the IKE SA negotiation when NAT-T is enabled  | <b>show ipsec ike-sa</b>  | <a href="#">“Monitoring the IKE Phase 1 SAs” on page 335</a>         |

### Related Documentation

- [L2TP/IPsec Tunnels Overview on page 306](#)
- [L2TP/IPsec Control and Data Frames Overview on page 308](#)
- [L2TP/IPsec Traffic Compatibility Issues and Requirements Overview on page 308](#)

## Single-Shot L2TP/IPsec Tunnels Overview

---

You can use the **single-shot-tunnel** command in L2TP Destination Profile Host Configuration mode to configure a single-shot L2TP tunnel. Although configuration of single-shot tunnels is more typically used with secure L2TP/IPsec tunnels, you can also configure single-shot tunnels for nonsecure L2TP tunnels that do not run over an IPsec connection.

A single-shot tunnel does not persist beyond its last connected L2TP session. As a result, using single-shot L2TP/IPsec tunnels instead of the default (standard) tunnel behavior provides better protection against a brute force attack that makes multiple, simultaneous authentication attempts.

A *single-shot tunnel* has the following characteristics:

- The L2TP tunnel can carry no more than a single L2TP session for the duration of its existence.
- The router ignores the idle timeout period for single-shot tunnels. This means that as soon as single-shot tunnel's session is removed, the single-shot tunnel proceeds to disconnect.
- The following characteristics apply only to secure L2TP/IPsec single-shot tunnels:
  - The underlying IPsec connection for a single-shot tunnel can carry no more than a single L2TP tunnel for the duration of its existence.
  - The router disconnects the underlying IPsec transport connection for a single-shot tunnel at the beginning of the destruct timeout period instead of waiting until the destruct timeout period expires.

For L2TP/IPsec single-shot tunnels, as soon as the tunnel or its single session fails negotiations or disconnects, the router prevents any further L2TP tunnels or L2TP sessions from connecting, and requires that a new IPsec connection be established for any subsequent connection attempts.

[Table 39 on page 315](#) describes the differences between how the router handles the idle timeout period (configured with the **l2tp tunnel idle-timeout** command) and the destruct timeout period (configured with the **l2tp destruct-timeout** command) for standard L2TP/IPsec tunnels and for single-shot L2TP/IPsec tunnels when the last remaining tunnel session has been disconnected.

**Table 39: Differences in Handling Timeout Periods for L2TP/IPsec Tunnels**

| Timeout Period          | Standard L2TP/IPsec Tunnels (Not Single-Shot)                                                                                                                                                                                                                                                                             | Single-Shot L2TP/IPsec Tunnels                                                                                                                                            |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Idle timeout period     | <p>The tunnel persists until the idle timeout period expires. If a new L2TP session is created before the idle timeout period expires, the tunnel persists to carry the new session and any subsequent sessions that are established.</p> <p>When the idle timeout period expires, the router disconnects the tunnel.</p> | <p>The router ignores the idle timeout period.</p> <p>This behavior prevents a single-shot tunnel from passing traffic after its single L2TP session is disconnected.</p> |
| Destruct timeout period | The router signals the underlying IPsec transport connection to disconnect when the destruct timeout period expires.                                                                                                                                                                                                      | The router signals the underlying IPsec transport connection to disconnect at the beginning of the destruct timeout period.                                               |

**Related Documentation**

- [L2TP/IPsec Tunnels Overview on page 306](#)
- [Configuring Single-Shot L2TP/IPsec Tunnels on page 319](#)

## Setting Up the Client PC for an L2TP/IPsec Tunnel

You can configure the client PC for an L2TP tunnel secured with IPsec.

To set up the client PC:

1. Create an IPsec security policy to secure L2TP traffic to the E Series router.
2. Get a certificate for the client or set up preshared keys.
3. Create a VPN connection to the router.
4. Log the client in to the E Series router.

**Related Documentation**

- [L2TP/IPsec Tunnels Overview on page 306](#)
- [Setting Up a Secure Connection Between the Client PC and an E Series Router on page 307](#)

## Configuring E Series Routers to Set Up an L2TP/IPsec Tunnel

You can configure E Series routers to set up an L2TP tunnel secured with IPsec.

The main configuration tasks for setting up L2TP/IPsec are:

1. Set up IP connectivity to L2TP clients; for example, PPPoE, DHCP, or static IP.
2. Set up digital certificates on the router, or configure preshared keys for IKE authentication.

- To set up digital certificates, see [“Configuring Digital Certificates” on page 233](#).
  - To set up preshared keys, see [“Configuring IPsec Parameters” on page 163](#) in [“Configuring IPsec” on page 143](#).
3. Create IPsec policies. See [“Defining an IKE Policy” on page 172](#) in [“Configuring IPsec” on page 143](#).
  4. Configure RADIUS authentication and accounting. See the *JunosE Broadband Access Configuration Guide*.
  5. Configure L2TP destination profiles. See [“Configuring an L2TP Destination Profile to Enable IPsec Support for L2TP Tunnels” on page 316](#).
  6. Configure NAT-T on the virtual router. See [“Enabling NAT-T on a Virtual Router” on page 318](#).
  7. Configure single-shot L2TP/IPsec tunnels. See [“Configuring Single-Shot L2TP/IPsec Tunnels” on page 319](#).
  8. Configure IPsec transport profiles. See [“Configuring an IPsec Transport Profile” on page 322](#).

**Related  
Documentation**

- [L2TP/IPsec Tunnels Overview on page 306](#)
- [Setting Up a Secure Connection Between the Client PC and an E Series Router on page 307](#)

---

## Configuring an L2TP Destination Profile to Enable IPsec Support for L2TP Tunnels

You can configure an L2TP destination profile to enable IPsec support for L2TP tunnels.

To configure an L2TP destination profile:

1. Create a destination profile that defines the location of the LAC, and access L2TP Destination Profile Configuration mode. For more information about the L2TP destination profile, see [“Creating an L2TP Destination Profile” on page 317](#).  

```
host1(config)#l2tp destination profile boston4 ip address 0.0.0.0
host1(config-l2tp-dest-profile)#
```
2. Define the L2TP host profile and enter L2TP Destination Profile Host Configuration mode.  

```
host1(config-l2tp-dest-profile)#remote host default
host1(config-l2tp-dest-profile-host)#
```
3. Specify that, for L2TP tunnels associated with this destination profile, the router accept only tunnels protected by IPsec. For more information about enabling IPsec transport mode, see [“Enabling IPsec Transport Mode” on page 317](#).  

```
host1(config-l2tp-dest-profile-host)#enable ipsec-transport
```
4. (Optional) Assign a profile name for a remote host.  

```
host1(config-l2tp-dest-profile-host)#profile georgeProfile1
```

5. Specify the local IP address to be used in any packets sent to the LAC.

```
host1(config-l2tp-dest-profile-host)#local ip address 10.0.0.1
```

For information about other L2TP destination profile commands, see *LNS Configuration Prerequisites* in the *JunosE Broadband Access Configuration Guide*.

**Related  
Documentation**

- [L2TP/IPsec Tunnels Overview on page 306](#)
- [Configuring E Series Routers to Set Up an L2TP/IPsec Tunnel on page 315](#)
- *enable ipsec-transport*
- *l2tp destination profile*
- *local ip address*
- *profile*
- *remote host*

---

## Enabling IPsec Transport Mode

You can use the **enable ipsec-transport** command to specify the router to accept only L2TP tunnels protected by an IPsec transport connection.

To specify the router to accept only L2TP tunnels secured by IPsec:

- Issue the **enable ipsec-transport** command in L2TP Destination Profile Host Configuration mode.

```
host1(config-l2tp-dest-profile-host)#enable ipsec-transport
```

Use the **no** version to disable IPsec transport mode.

**Related  
Documentation**

- [L2TP/IPsec Tunnels Overview on page 306](#)
- [Configuring an L2TP Destination Profile to Enable IPsec Support for L2TP Tunnels on page 316](#)
- [Configuring Single-Shot L2TP/IPsec Tunnels on page 319](#)
- *enable ipsec-transport*

---

## Creating an L2TP Destination Profile

You can use the **l2tp destination profile** command to create the destination profile that defines the location of the LAC and to access L2TP Destination Profile Configuration mode.

If no virtual router is specified with the **l2tp destination profile** command, the current virtual router context is used.

If the destination address is 0.0.0.0, then any LAC that can be reached via the specified virtual router is allowed to access the LNS. If the destination address is nonzero, then it must be a host-specific IP address.

To create a destination profile:

- Issue the **l2tp destination profile** command in Global Configuration mode.

```
host1:boston(config)#l2tp destination profile boston ip address 10.10.76.12
host1:boston(config-l2tp-dest-profile)#
```

Use the **no** version to delete the L2TP destination profile.



**NOTE:** When you change an L2TP destination profile, you must wait for the router to delete all L2TP tunnels associated with the deleted profile before you create the new profile.

If you remove a destination profile, all tunnels and sessions using that profile are dropped.

#### Related Documentation

- [L2TP/IPsec Tunnels Overview on page 306](#)
- [Configuring an L2TP Destination Profile to Enable IPsec Support for L2TP Tunnels on page 316](#)
- [Configuring Single-Shot L2TP/IPsec Tunnels on page 319](#)
- [Creating an L2TP Host Profile](#)
- [\*l2tp destination profile\*](#)

---

## Enabling NAT-T on a Virtual Router

You can use the **ipsec option nat-t** command to enable NAT-T on a virtual router. With NAT-T enabled, IPsec traffic flows transparently through a NAT device, thereby allowing one or more remote hosts located behind the NAT device to use secure L2TP/IPsec tunnel connections to access the router.

The **ipsec option nat-t** command affects only those IKE SAs negotiated on this virtual router after the command is issued; it has no effect on previously negotiated IKE SAs.

You can use the **no ipsec option nat-t** command to disable NAT-T for the current virtual router. You can use the **default ipsec option nat-t** command to restore the default NAT-T setting on the enabled virtual router.

To configure NAT-T on the current virtual router:

1. Select the name of the virtual router you want to configure.

```
host1(config)#virtual-router westford
host1:westford(config)#
```

2. Enable NAT-T for the current virtual router.

```
host1:westford(config)#ipsec option nat-t
```

#### Related Documentation

- [L2TP/IPsec Tunnels Overview on page 306](#)
- [NAT-Traversal Overview on page 311](#)
- [Configuring E Series Routers to Set Up an L2TP/IPsec Tunnel on page 315](#)
- *ipsec option nat-t*
- *virtual-router*

## Configuring Single-Shot L2TP/IPsec Tunnels

You can use the **single-shot-tunnel** command to configure a single-shot L2TP tunnel secured with IPsec.

To configure a single-shot L2TP/IPsec tunnel:

1. Create an L2TP destination profile, which defines the location of the LAC. The **l2tp destination profile** command accesses L2TP Destination Profile Configuration mode. For more information about creating the L2TP destination profile, see [“Creating an L2TP Destination Profile” on page 317](#).

```
host1(config)#l2tp destination profile boston4 ip address 0.0.0.0
host1(config-l2tp-dest-profile)#
```

2. Create an L2TP host profile, which defines the attributes that the router, acting as the LNS, uses when communicating with the LAC. The **remote host** command accesses L2TP Destination Profile Host Configuration mode.

```
host1(config-l2tp-dest-profile)#remote host default
host1(config-l2tp-dest-profile-host)#
```

3. Specify that, for L2TP tunnels associated with this host profile, the router accept only tunnels protected by IPsec. For more information about enabling IPsec transport mode, see [“Enabling IPsec Transport Mode” on page 317](#).

```
host1(config-l2tp-dest-profile-host)#enable ipsec-transport
```

4. Specify that the L2TP tunnels associated with this host profile are single-shot tunnels.

```
host1(config-l2tp-dest-profile-host)#single-shot-tunnel
```

5. (Optional) Configure other attributes for the L2TP host profile.
6. (Optional) Use the **show l2tp destination profile** command to verify the configuration of the single-shot tunnel for a particular L2TP host profile. For information about how to use this command, see [“Monitoring Configured L2TP Destination Profiles or Host Profiles” on page 342](#).

For information about the other commands you can use to configure L2TP destination profiles and L2TP host profiles, see *LNS Configuration Prerequisites* in the *JunosE Broadband Access Configuration Guide*.

- Related Documentation**
- [L2TP/IPsec Tunnels Overview on page 306](#)
  - [Single-Shot L2TP/IPsec Tunnels Overview on page 314](#)
  - [Configuring E Series Routers to Set Up an L2TP/IPsec Tunnel on page 315](#)
  - *enable ipsec-transport*
  - *l2tp destination profile*
  - *remote host*
  - *single-shot-tunnel*

---

## GRE/IPsec and DVMRP/IPsec Tunnels

In GRE/IPsec or DVMRP/IPsec connections, E Series routers initiate an IPsec connection with a remote router and can act as source and destination endpoints of the secure tunnel.

This section describes the following:

- [GRE/IPsec and DVMRP/IPsec Tunnels Overview on page 320](#)
- [Setting Up a Secure GRE or DVMRP Connection Between E Series Routers on page 320](#)
- [Configuring E Series Routers to Set Up GRE or DVMRP over IPsec on page 321](#)
- [Enabling IPsec Support for GRE and DVMRP Tunnels on page 322](#)

### GRE/IPsec and DVMRP/IPsec Tunnels Overview

In GRE/IPsec or DVMRP/IPsec connections, the E Series router acts as source and destination endpoints of the secure tunnel. Both sides of the connection run IPsec in transport mode with the Encapsulating Security Payload (ESP) encryption and authentication.

In a GRE/IPsec or DVMRP/IPsec connection, E Series routers initiate an IPsec connection with a remote router. After establishing the IPsec connection, the E Series routers establish a GRE or DVMRP tunnel to the remote router. The tunnel is completely protected by the IPsec connection.

- Related Documentation**
- [Securing L2TP and IP Tunnels with IPsec Overview on page 304](#)
  - [Setting Up a Secure GRE or DVMRP Connection Between E Series Routers on page 320](#)
  - [Configuring E Series Routers to Set Up GRE or DVMRP over IPsec on page 321](#)
  - [Enabling IPsec Support for GRE and DVMRP Tunnels on page 322](#)

### Setting Up a Secure GRE or DVMRP Connection Between E Series Routers

In [Figure 29 on page 321](#), a secure GRE/IPsec connection is set up between two E Series routers.

To set up a secure connection:




1. Set up the IPsec connection between the two routers. IKE signals a security association (SA) between the two IPsec tunnel endpoints.

Two unidirectional SAs are established to secure data traffic.

2. Set up a GRE tunnel between the two routers.

The GRE tunnel now runs over the SAs that IKE established.

 **Figure 29: GRE/IPsec Connection**

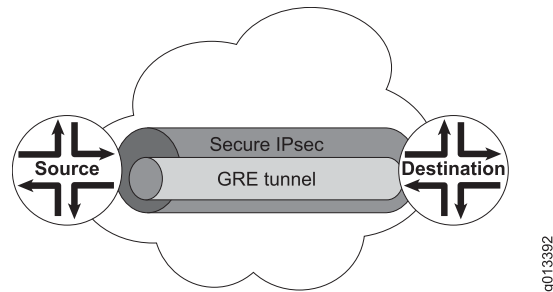

**Related Documentation**

- [GRE/IPsec and DVMRP/IPsec Tunnels Overview on page 320](#)
- [Configuring E Series Routers to Set Up GRE or DVMRP over IPsec on page 321](#)
- [Enabling IPsec Support for GRE and DVMRP Tunnels on page 322](#)

## Configuring E Series Routers to Set Up GRE or DVMRP over IPsec

You can configure the E Series routers to set up the GRE or DVMRP tunnels.

The main configuration tasks for setting up GRE or DVMRP over IPsec on E Series routers are:

- Set up the GRE or DVMRP tunnel by specifying the virtual router and destination address and enabling IPsec support. See [“Configuring IP Tunnels” on page 265](#).
- Set up digital certificates on the router or configure preshared keys for IKE authentication.
  - To set up digital certificates, see [“Configuring Digital Certificates” on page 233](#).
  - To set up preshared keys, see [“Configuring IPsec Parameters” on page 163](#) in [“Configuring IPsec” on page 143](#).
- Create IPsec policies. See [“Defining an IKE Policy” on page 172](#) in [“Configuring IPsec” on page 143](#).
- Configure IPsec transport profiles. See [“Configuring an IPsec Transport Profile” on page 322](#).

**Related Documentation**

- [GRE/IPsec and DVMRP/IPsec Tunnels Overview on page 320](#)
- [Setting Up a Secure GRE or DVMRP Connection Between E Series Routers on page 320](#)
- [Enabling IPsec Support for GRE and DVMRP Tunnels on page 322](#)

## Enabling IPsec Support for GRE and DVMRP Tunnels

You can use the **ipsec-transport** keyword with the **interface tunnel** command to create GRE and DVMRP tunnels that are protected with IPsec in transport mode. You can establish the tunnels on a virtual router other than the current virtual router.



**NOTE:** After you create a clear GRE or DVMRP tunnel, you cannot convert it to an IPsec-secured tunnel, or vice versa. You must delete the tunnel configuration, then reconfigure the tunnel as the new type.

To create a GRE tunnel that is protected with IPsec:

- Issue the **interface tunnel** command with the **ipsec-transport** keyword in Global Configuration mode.

```
host1(config)#interface tunnel gre:denver-tunnel-5 transport-virtual-router denver
ipsec-transport
host1(config-if)#
```

Use the **no** version to remove the tunnel.

### Related Documentation

- [GRE/IPsec and DVMRP/IPsec Tunnels Overview on page 320](#)
- [Setting Up a Secure GRE or DVMRP Connection Between E Series Routers on page 320](#)
- [Configuring E Series Routers to Set Up GRE or DVMRP over IPsec on page 321](#)
- *interface tunnel*

---

## Configuring an IPsec Transport Profile

To configure an IPsec transport profile that is used to secure DVMRP, GRE, or L2TP tunnels:

1. Create the profile. For more information about creating an IPsec transport profile, see [“Creating an IPsec Transport Profile” on page 324](#).

```
host1(config)#ipsec transport profile secureGre virtual-router default ip address
5.5.5.5
host1(config-ipsec-transport-profile)#
```

2. Specify one or more types of application that the profile secures. For more information about configuring the types of application created with an IPsec transport profile, see [“Configuring the Type of Application Secured by Connections Created with an IPsec Transport Profile” on page 324](#).

```
host1(config-ipsec-transport-profile)#application gre dvmrp l2tp
```

You can set any of the following parameters for the profile:

- Set a lifetime range for the IPsec connection in volume of traffic or seconds. For more information about setting a lifetime range for an IPsec transport profile, see [“Setting a Lifetime Range for an IPsec Transport Profile” on page 325](#).

```
host1(config-ipsec-transport-profile)#lifetime seconds 3600 28800 kilobytes 102400
4294967295
```

- Configure Perfect Forward Secrecy (PFS) for connections created with this IPsec transport profile. For more information about configuring the PFS for an IPsec transport profile, see [“Configuring Perfect Forward Secrecy for an IPsec Transport Profile” on page 326](#).

```
host1(config-ipsec-transport-profile)#pfs group 5
```

- Specify one or more transform sets that an IPsec transport connection uses to negotiate a transform algorithm. For more information about configuring the transform set for an IPsec transport profile, see [“Configuring Transform Sets for an IPsec Transport Profile” on page 328](#).

```
host1(config-ipsec-transport-profile)#transform-set esp-3des-hmac-sha
esp-3des-hmac-md5
```

To display the available transform sets, issue the **transform-set ?** command.

- Specify the local endpoint (for L2TP, the LNS address) of the IPsec transport connection and enter Local IPsec Transport Profile mode. For more information about configuring a local endpoint for an IPsec transport profile, see [“Configuring a Local Endpoint for an IPsec Transport Profile” on page 325](#).

```
host1(config-ipsec-transport-profile)#local ip address 10.10.1.1
host1(config-ipsec-transport-profile-local)#
```

- (Optional) Configure a key for IKE negotiations. For example:

Enter the unencrypted key. The router encrypts the key and stores it in encrypted form. You can no longer retrieve the unencrypted key. For more information about configuring an unencrypted preshared key for a local IPsec transport profile, see [“Configuring an Unencrypted Preshared Key for a Local IPsec Transport Profile” on page 326](#).

```
host1(config-ipsec-transport-profile-local)#pre-share secretforGre
```

#### Related Documentation

- [Configuring E Series Routers to Set Up an L2TP/IPsec Tunnel on page 315](#)
- *application*
- *ipsec transport profile*
- *lifetime*
- *local ip address*
- *pfs group*
- *pre-share*
- *transform-set*

## Configuring the Type of Application Secured by Connections Created with an IPsec Transport Profile

---

You can use the **application** command to specify the types of application secured by connections created with this IPsec transport profile. You can specify multiple applications on the same command line:

- **dvmrp**—Secures DVMRP tunnel traffic
- **gre**—Secures GRE tunnel traffic
- **l2tp**—Secures L2TP traffic
- **l2tp-nat-passthrough**—Secures L2TP traffic and also allows clients to connect from behind NAT devices that support IPsec passthrough. To allow these clients to connect, the router:
  - Does not generate or verify UDP checksums. This does not compromise security because IPsec protects UDP packets with an authentication algorithm far stronger than UDP checksums.
  - Provides IPsec filtering based on the received IP address (the NAT public IP address), rather than filtering based on the negotiated IKE identities.

To specify the types of application:

- Issue the **application** command in IPsec Transport Profile Configuration mode.

```
host1(config-ipsec-transport-profile)#application gre dvmrp l2tp
```

Use the **no** version to return to the default application type, L2TP.

### Related Documentation

- [L2TP/IPsec Traffic Compatibility Issues and Requirements Overview on page 308](#)
- [NAT Passthrough Mode Overview on page 310](#)
- [Configuring an IPsec Transport Profile on page 322](#)
- *application*

## Creating an IPsec Transport Profile

---

You can use the **ipsec transport profile** command to create an IPsec transport profile and enter into IPsec Transport Profile Configuration mode.

You can use the following keywords to create a new profile:

- **virtual-router**—Name of the virtual router on which you want to create the profile.
- **ip address**—Remote endpoint for the IPsec transport connection.

For L2TP/IPsec connections, you can enter a fixed IP address or the wildcard address, 0.0.0.0. If you use the wildcard address, the profile accepts any remote client connection, which is a typical scenario for secure remote access.

For GRE/IPsec and DVMRP/IPsec connections, you must enter a fixed address; the 0.0.0.0 wildcard address is not accepted and returns an error.

To create an IPsec transport profile:

- Issue the **ipsec transport profile** command in Global Configuration mode.

```
host1(config)#ipsec transport profile secureL2tp virtual-router default ip address 5.5.5.5
host1(config-ipsec-transport-profile)#
```

Use the **no** version to delete the profile.

**Related  
Documentation**

- [Configuring an IPsec Transport Profile on page 322](#)
- *ipsec transport profile*

## Setting a Lifetime Range for an IPsec Transport Profile

You can use the **lifetime** command to set a lifetime range for the IPsec connection in volume of traffic or seconds, or both. If the PC client offers a lifetime within this range, the router accepts the offer. If the PC client offers a lifetime outside this range, the router rejects the connection.

To set a lifetime range for the IPsec connection:

- Issue the **lifetime** command in IPsec Transport Profile Configuration mode.

```
host1(config-ipsec-transport-profile)#lifetime seconds 900 86400 kilobytes 100000
4294967295
```

Use the **no** version to restore the default values.

**Related  
Documentation**

- [Configuring an IPsec Transport Profile on page 322](#)
- *lifetime*

## Configuring a Local Endpoint for an IPsec Transport Profile

You can use the **local ip address** command to specify the local endpoint (for L2TP, the LNS address) of the IPsec transport connection and enter into Local IPsec Transport Profile Configuration mode.

You can enter the **local ip address** command multiple times in an IPsec transport profile. You can enter a fixed IP address or the wildcard address, 0.0.0.0. The wildcard address has a lower precedence than a fixed IP address.



**CAUTION:** We recommend that you do not use address 0.0.0.0 because it allows any address to accept IKE calls and it creates a group preshared key, which is not fully secure.

To specify the local endpoint of the IPsec transport connection:

- Issue the **local ip address** command in IPsec Transport Profile Configuration mode.

```
host1(config-ipsec-transport-profile)#local ip address 192.168.1.2
host1(config-ipsec-transport-profile-local)#
```

Use the **no** version to delete the IP address.

**Related  
Documentation**

- [L2TP/IPsec Traffic Compatibility Issues and Requirements Overview on page 308](#)
- [Configuring an L2TP Destination Profile to Enable IPsec Support for L2TP Tunnels on page 316](#)
- [Configuring an IPsec Transport Profile on page 322](#)
- *local ip address*

---

## Configuring Perfect Forward Secrecy for an IPsec Transport Profile

---

You can use the **pfs group** command to configure perfect forward secrecy (PFS) for connections created with this IPsec transport profile.

You can assign a Diffie-Hellman prime modulus group using one of the following keywords:

- 1—768-bit group
- 2—1024-bit group
- 5—1536-bit group

To configure perfect forward secrecy:

- Issue the **pfs group** command in IPsec Transport Profile Configuration mode.

```
host1(config-ipsec-transport-profile)#pfs group 5
```

Use the **no** version to remove PFS from this profile, which is the default setting.

**Related  
Documentation**

- [Configuring an IPsec Transport Profile on page 322](#)
- *pfs group*

---

## Configuring an Unencrypted Preshared Key for a Local IPsec Transport Profile

---

You can use the **pre-share** command to configure an unencrypted (red) preshared key. The router uses this key to authenticate IKE negotiations that arrive from any remote IP address specified for this transport profile and that are destined for the local IP address specified. If the remote endpoint address is a wildcard address, this preshared key is a group preshared key.



**CAUTION:** Group preshared keys are not fully secure, and we do not recommend using them. They are provided for trials and testing purposes where the missed security does not pose a risk to the provider.

To enable preshared key authentication, you must also specify the IKE policy rule as preshared by entering **authentication pre-share** in ISAKMP Policy Configuration mode.

To configure an unencrypted (red) preshared key:

- Issue the **pre-share** command in Local IPsec Transport Profile Configuration mode.

```
host1(config-ipsec-transport-profile-local)#pre-share secretforL2tp
```

Use the **no** version to remove the key.



**NOTE:** After you enter a preshared key, the original (unencrypted) key cannot be retrieved. If you need to reenter the original key (for example, the system is reset to factory default and you have only the **show config** output), you can:

1. Use the **show config** command to see the encrypted (masked) form of the key.
2. Use the **pre-shared-masked** command to enter the masked key. The system behaves the same way as when you entered the first **pre-share** key command.

#### Related Documentation

- [L2TP/IPsec Traffic Compatibility Issues and Requirements Overview on page 308](#)
- [Configuring an IPsec Transport Profile on page 322](#)
- *pre-share*

## Configuring an Encrypted Preshared Key for a Local IPsec Transport Profile

You can use the **pre-share-masked** command to specify an encrypted preshared key. To obtain this key, enter an unencrypted key by using the **pre-share** command and then run the **show config** command. The router then displays the preshared key in encrypted form. You can enter the encrypted key by using the **pre-share-masked** command.

The router uses the preshared key to authenticate IKE negotiations that arrive from any remote IP address specified for this transport profile and that are destined for any local IP address specified for this transport profile. If the remote endpoint address is a wildcard address, this preshared key is a group preshared key.



**CAUTION:** Group preshared keys are not fully secure, and we do not recommend using them. They are provided for trials and testing purposes, where the missed security does not pose a risk to the provider.

To enable preshared key authentication, you must also specify the IKE policy rule as preshared by entering **authentication pre-share** in ISAKMP Policy Configuration mode.

To specify an encrypted preshared key:

- Issue the **pre-share-masked** command in Local IPsec Transport Profile Configuration mode.

```
host1(config-ipsec-transport-profile-local)#pre-share-masked
AAAAGAAAAAcAAAACZquq4ABieTUBuNBELSY8b/L3CX/RcPX7
```

To remove a key, use the **no pre-share** command.

**Related  
Documentation**

- [L2TP/IPsec Traffic Compatibility Issues and Requirements Overview on page 308](#)
- *pre-share-masked*

## Configuring Transform Sets for an IPsec Transport Profile

You can use the **transform-set** command to specify the transform sets that an IPsec transport connection can use to negotiate a transform algorithm. Each transform in a transform set provides a different combination of data authentication and confidentiality.

You can use the **transform-set ?** command to display the available transform sets.

To specify the transform set:

- Issue the **transform-set** command in IPsec Transport Profile Configuration mode.

```
host1(config-ipsec-transport-profile)#transform-set esp-3des-hmac-sha
```

Use the **no** version to reset the transform set to the default, esp-3des-hmac-sha.

**Related  
Documentation**

- [Configuring an IPsec Transport Profile on page 322](#)
- *transform-set*

## Using a System Event Log to Troubleshoot IPsec-Secured L2TP and IP Tunnels

To troubleshoot DVMRP, GRE, and L2TP tunnels secured by IPsec, use the following system event log:

- *itm*—IPsec transport mode

For more information about using system event logs, see the *JunosE System Event Logging Reference Guide*.



- Related Documentation**
- [Securing L2TP and IP Tunnels with IPsec Overview on page 304](#)



# Monitoring L2TP and IP Tunnels Secured by IPsec

This topic explains how to use **show** commands to view generic routing encapsulation (GRE), Distance Vector Multicast Routing Protocol (DVMRP), and Layer 2 Tunneling Protocol (L2TP) tunnels with IP Security (IPsec) on your E Series router.

This topic describes:

- [Monitoring the IPsec Transport Interface Used to Secure DVMRP Tunnels on page 331](#)
- [Monitoring the IPsec Transport Interface Used to Secure GRE Tunnels on page 333](#)
- [Monitoring the IKE Phase 1 SAs on page 335](#)
- [Monitoring the Status of IPsec Options on page 337](#)
- [Monitoring the IPsec Transport Connections Information on page 337](#)
- [Monitoring the Summary of All IPsec Transport Connections on page 340](#)
- [Monitoring the Configuration Information of an IPsec Transport Profile on page 341](#)
- [Monitoring Configured L2TP Destination Profiles or Host Profiles on page 342](#)

## Monitoring the IPsec Transport Interface Used to Secure DVMRP Tunnels

**Purpose** Display information about a DVMRP tunnel or a list of DVMRP tunnels.

If the tunnel is protected by IPsec, the **show dvmrp tunnel detail** command includes a line indicating the IPsec transport interface. The line is not shown for unsecured tunnels.

**Action** To display information about a DVMRP tunnel:

```
host1#show dvmrp tunnel detail
DVMRP tunnel boston1 is up (tunnel is static)
Tunnel operational configuration
  Tunnel name is 'boston1'
  Tunnel mtu is '10240'
  Tunnel source address is '0.0.0.0'
  Tunnel destination address is '0.0.0.0'
  Tunnel transport virtual router is vr1
  Tunnel up/down trap is enabled
  Tunnel server location is 4/0
  Tunnel secured by ipsec transport interface 1
  Tunnel administrative state is up
Statistics      packets      octets      discards      errors
```

```

Data rx      0          0          0          0
Data tx      0          0          0          0
1 DVMRP tunnel found
1 tunnel was created static

```

**Meaning** [Table 40 on page 332](#) lists the output fields for the **show dvmrp tunnel detail** command.

**Table 40: show dvmrp tunnel detail Output Fields**

| Field Name                                  | Field Description                                                                                                                                                           |
|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tunnel name                                 | Name of the tunnel                                                                                                                                                          |
| Tunnel mtu                                  | Value of the maximum transmission unit for the tunnel                                                                                                                       |
| Tunnel source address                       | IP address of the source of the tunnel                                                                                                                                      |
| Tunnel destination address                  | IP address of the destination of the tunnel                                                                                                                                 |
| Tunnel transport virtual router             | Name of the virtual router associated with the tunnel                                                                                                                       |
| Tunnel up/down trap                         | Indicates whether or not the E Series router sends traps to SNMP when the operational state of the tunnels changes: enabled or disabled                                     |
| Tunnel server location                      | Location of the tunnel server in <i>slot/port</i> format (ERX7xx models, ERX14xx models, and the ERX310 router) or <i>slot/adapter/port</i> format (E120 and E320 routers). |
| Tunnel secured by ipsec transport interface | IPsec interface that secures the tunnel                                                                                                                                     |
| Tunnel administrative state                 | Configured state of the tunnel: up or down                                                                                                                                  |
| Statistics                                  | Details of packets received or transmitted by the tunnel                                                                                                                    |
| packets                                     | Number of packets received or transmitted by the tunnel                                                                                                                     |
| octets                                      | Number of octets received or transmitted by the tunnel                                                                                                                      |
| discards                                    | Number of packets not accepted by the tunnel                                                                                                                                |
| errors                                      | Number of packets with errors received or transmitted by the tunnel                                                                                                         |
| Data rx                                     | Received data                                                                                                                                                               |
| Data tx                                     | Transmitted data                                                                                                                                                            |

Table 40: show dvmrp tunnel detail Output Fields (*continued*)

| Field Name               | Field Description                    |
|--------------------------|--------------------------------------|
| Number of tunnels found  | Total number of DVMRP tunnels found  |
| Number of static tunnels | Number of tunnels created statically |

- Related Documentation**
- [Enabling IPsec Support for GRE and DVMRP Tunnels on page 322](#)
  - `show dvmrp tunnel`

## Monitoring the IPsec Transport Interface Used to Secure GRE Tunnels

**Purpose** Display information about a GRE tunnel or a list of GRE tunnels.

If the tunnel is protected by IPsec, the **show gre tunnel detail** command includes a line indicating the IPsec transport interface. The line is not shown for unsecured tunnels.

**Action** To display information about a GRE tunnel:

```
host1#show gre tunnel detail
Tunnel operational configuration
  Tunnel name is 'vr1'
  Tunnel mtu is '10240'
  Tunnel source address is '10.0.0.2'
  Tunnel destination address is '10.0.0.1'
  Tunnel transport virtual router is vr1
  Tunnel mdt is disabled
  Tunnel checksum option is disabled
  Tunnel up/down trap is enabled
  Tunnel server location is 4/0
  Tunnel administrative state is up

Statistics      packets      octets      discards    errors
Data rx        0            0            0            0
Data tx        0            0            0            0

Tunnel operational configuration
  Tunnel name is 'default'
  Tunnel mtu is '10240'
  Tunnel source address is '10.0.0.1'
  Tunnel destination address is '10.0.0.2'
  Tunnel transport virtual router is default
  Tunnel checksum option is disabled
  Tunnel up/down trap is enabled
  Tunnel server location is 4/0
  Tunnel secured by ipsec transport interface 1
  Tunnel administrative state is up

Statistics      packets      octets      discards    errors
Data rx        0            0            0            0
Data tx        0            0            0            0

Tunnel operational configuration
  Tunnel name is 'london2'
  Tunnel mtu is '10240'
  Tunnel source address is '0.0.0.0'
```

```

Tunnel destination address is '0.0.0.0'
Tunnel transport virtual router is vr1
Tunnel checksum option is disabled
Tunnel up/down trap is enabled
Tunnel server location is 4/0
Tunnel administrative state is up

Statistics      packets      octets      discards      errors
Data rx        0            0           0             0
Data tx        0            0           0             0
3 GRE tunnels found
3 tunnels were created static

```

**Meaning** Table 41 on page 334 lists the output fields for the **show gre tunnel detail** command.

**Table 41: showgre tunnel detail Output Fields**

| Field Name                                  | Field Description                                                                                                                                                          |
|---------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tunnel name                                 | Name of the tunnel                                                                                                                                                         |
| Tunnel mtu                                  | Value of the maximum transmission unit for the tunnel                                                                                                                      |
| Tunnel source address                       | IP address of the source of the tunnel                                                                                                                                     |
| Tunnel destination address                  | IP address of the destination of the tunnel                                                                                                                                |
| Tunnel transport virtual router             | Name of the virtual router associated with the tunnel                                                                                                                      |
| Tunnel mdt                                  | State of the multicast distribution tree for the tunnel: enabled or disabled                                                                                               |
| Tunnel checksum option                      | State of the checksum feature: enabled or disabled                                                                                                                         |
| Tunnel up/down trap                         | Indicates whether or not the E Series router sends traps to SNMP when the operational state of the tunnel changes: enabled or disabled                                     |
| Tunnel server location                      | Location of the tunnel server in <i>slot/port</i> format (ERX7xx models, ERX14xx models, and the ERX310 router) or <i>slot/adaptor/port</i> format (E120 and E320 routers) |
| Tunnel secured by ipsec transport interface | IPsec interface that secures the tunnel                                                                                                                                    |
| Tunnel administrative state                 | Configured state of the tunnel: up or down                                                                                                                                 |
| Statistics                                  | Details of packets received or transmitted by the tunnel                                                                                                                   |
| packets                                     | Number of packets received or transmitted by the tunnel                                                                                                                    |

Table 41: showgre tunnel detail Output Fields (*continued*)

| Field Name               | Field Description                                                   |
|--------------------------|---------------------------------------------------------------------|
| octets                   | Number of octets received or transmitted by the tunnel              |
| discards                 | Number of packets not accepted by the tunnel                        |
| errors                   | Number of packets with errors received or transmitted by the tunnel |
| Data rx                  | Received data                                                       |
| Data tx                  | Transmitted data                                                    |
| Number of tunnels found  | Total number of GRE tunnels found                                   |
| Number of static tunnels | Number of tunnels created statically                                |

**Related Documentation**

- [Enabling IPsec Support for GRE and DVMRP Tunnels on page 322](#)
- `show gre tunnel`

## Monitoring the IKE Phase 1 SAs

**Purpose** Display the Internet Key Exchange (IKE) phase 1 security associations (SAs) running on the router.

When Network Address Translation-Traversal (NAT-T) is enabled on both the client PC and E Series router and the router has negotiated NAT-T as part of the IKE SA, the local UDP port number displayed in the Local:Port column is typically 4500. When NAT-T is disabled or not supported on one or both sides of the IKE SA negotiation, the local UDP port number is 500.

**Action** To display the IKE phase 1 SAs for three remote client PCs that are accessing an E Series router (IP address 21.227.9.8):

```
host1# show ipsec ike-sa
```

```
IKE Phase 1 SA's:
```

```
Local:Port    Remote:Port    Time(Sec) State  Local Cookie    Remote Cookie
21.227.9.8:500 21.227.9.10:500 26133 DONE  0x87a943562124c711 0xaf2cf4a260399a4
21.227.9.8:4500 21.227.9.11:4500 28774 DONE  0x01f9efa234d45ad8 0xada4cb7cafee9243
21.227.9.8:4500 21.227.9.11:14500 28729 DONE  0x0c5ccb6b94b00051 0xe975c0ae3b9ca8bf
```

The first client PC listed (IP address 21.227.9.10) is *not* located behind a NAT device and is therefore not using NAT-T to access the router. This PC appears in the Remote:Port column with its own IP address (21.227.9.10) and UDP port number 500.

The remaining two client PCs are located behind a NAT device that has IP address 21.227.9.11 and are using NAT-T to access the router. These PCs appear in the Remote:Port

column with the same IP address (21.227.9.11) but with two different UDP port numbers: 4500 and 14500.

**Meaning** [Table 42 on page 336](#) lists the output fields for the **show ipsec ike-sa** command.

**Table 42: show ipsec ike-sa Output Fields**

| Field Name    | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Local:Port    | Local IP address and UDP port number of phase 1 negotiation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Remote:Port   | Remote IP address and UDP port number of phase 1 negotiation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Time(Sec)     | Time remaining in phase 1 lifetime, in seconds                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| State         | <p>Current state of the phase 1 negotiation. Corresponds to the messaging state in the main mode and aggressive mode negotiations. Possible states are:</p> <ul style="list-style-type: none"> <li>• AM_SA_I—Initiator has sent initial aggressive mode SA payload and key exchange to the responder</li> <li>• AM_SA_R—Responder has sent aggressive mode SA payload and key exchange to the initiator</li> <li>• AM_FINAL_I—Initiator has finished aggressive mode negotiation</li> <li>• AM_DONE_R—Responder has finished aggressive mode negotiation</li> <li>• MM_SA_I—Initiator has sent initial main mode SA payload to the responder</li> <li>• MM_SA_R—Responder has sent a response to the initial main mode SA</li> <li>• MM_KE_I—Initiator has sent initial main mode key exchange to the responder</li> <li>• MM_KE_R—Responder has sent a response to the key exchange</li> <li>• MM_FINAL_I—Initiator has sent the final packet in the main mode negotiation</li> <li>• MM_FINAL_R—Responder has finished main mode negotiation</li> <li>• MM_DONE_I—Initiator has finished main mode negotiation</li> <li>• DONE—Phase 1 SA negotiation is complete, as evidenced by receipt of some phase 2 messages</li> </ul> |
| Local Cookie  | Unique identifier (SPI) for the local phase 1 IKE SA                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Remote Cookie | Unique identifier (SPI) for the remote phase 1 IKE SA                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

**Related Documentation**

- [Enabling NAT-T on a Virtual Router on page 318](#)
- *show ipsec ike-sa*



- *show ike sa*

## Monitoring the Status of IPsec Options

**Purpose** Display whether NAT-T is enabled or disabled on the current virtual router. The **show ipsec option** command also displays the status of dead peer detection (DPD) on the virtual router. For information about configuring and monitoring DPD, see “Configuring IPsec” on page 143.

**Action** To display whether NAT-T is enabled or disabled on the current virtual router:

```
host1:westford#show ipsec option
```

```
IPsec options:
Dead Peer Detection: disabled
NAT Traversal      : enabled
```

**Meaning** Table 43 on page 337 lists the output fields for the **show ipsec option** command.

**Table 43: show ipsec option Output Fields**

| Field Name          | Field Description                                  |
|---------------------|----------------------------------------------------|
| Dead Peer Detection | Status of dead peer detection: enabled or disabled |
| NAT Traversal       | Status of NAT-T: enabled or disabled               |

**Related Documentation**

- [Enabling NAT-T on a Virtual Router on page 318](#)
- *show ipsec option*

## Monitoring the IPsec Transport Connections Information

**Purpose** Display information about transport connections.

**Action** To display information about transport connections:

```
host1:vr11#show ipsec transport interface
IPSEC transport interface 5 is Up
IPSEC transport interface 6 is Up
2 Ipsec transport interfaces found
```

To display information about a particular transport connection:

```
host1:vr11#show ipsec transport interface 5
IPSEC transport interface 5 is Up
```

To display detailed information about a transport connection:

```
host1:vr11#show ipsec transport interface detail 5
IPSEC transport interface 5 is Up
Configuration
  Virtual router vr00
  Application gre
  No pfs group
```

```

Mtu is 1440
Local address is 10.255.0.61
Remote address is 10.255.0.62
Local identity is subnet 10.255.0.61 255.255.255.255, proto 47, port 0
Remote identity is subnet 10.255.0.62 255.255.255.255, proto 47, port 0
Inbound spi 0x15c30204
Inbound transform transport-esp-3des-sha1
Inbound lifetime 900 seconds 102400 kilobytes
Outbound spi is 0x16a10205
Outbound transform transport-esp-3des-sha1
Outbound lifetime 900 seconds 102400 kilobytes

```

```

Statistics
InUserPackets      5
InUserOctets       270
InAccPackets       5
InAccOctets        440
InAuthErrors       0
InReplayErrors     0
InPolicyErrors     0
InOtherRxErrors    0
InDecryptErrors    0
InPadErrors        0

OutUserPackets     5
OutUserOctets      270
OutAccPackets      5
OutAccOctets       440
OutPolicyErrors    0
OutOtherTxErrors   0

```

**Meaning** [Table 44 on page 338](#) lists the output fields for the **show ipsec transport interface** command.

**Table 44: show ipsec transport interface Output Fields**

| Field Name                | Field Description                                   |
|---------------------------|-----------------------------------------------------|
| IPsec transport interface | Number and status of the IPsec transport connection |

Table 44: show ipsec transport interface Output Fields (*continued*)

| Field Name    | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Configuration | <p>Configuration information about the IPsec transport connection:</p> <ul style="list-style-type: none"> <li>• Virtual router—Virtual router on which this profile is configured</li> <li>• Application—Type of application the connection can protect</li> <li>• pfs group—PFS group being used for the connection</li> <li>• Mtu—Tunnel's MTU size</li> <li>• Local address—Local endpoint address</li> <li>• Remote address—Remote endpoint address</li> <li>• Local identity—Subnet, protocol, and port of the local endpoint</li> <li>• Remote identity—Subnet, protocol, and port of the remote endpoint</li> <li>• Inbound spi—Inbound security parameter index</li> <li>• Inbound transform—Inbound algorithm</li> <li>• Inbound lifetime—Inbound configured lifetime in seconds and kilobytes</li> <li>• Outbound spi—Outbound security parameter index</li> <li>• Outbound transform—Outbound algorithm</li> <li>• Outbound lifetime—Outbound configured lifetime in seconds and kilobytes</li> </ul> |

Table 44: show ipsec transport interface Output Fields (*continued*)

| Field Name | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Statistics | <p>Statistics about the IPsec transport connection:</p> <ul style="list-style-type: none"> <li>• InUserPackets—Number of user packets received</li> <li>• InUserOctets—Number of octets received from user packets</li> <li>• InAccPackets—Number of encapsulated packets received</li> <li>• InAccOctets—Number of octets received in encapsulated packets</li> <li>• InAuthErrors—Number of authentication errors received</li> <li>• InReplyErrors—Number of reply errors in received traffic</li> <li>• InPolicyErrors—Number of policy errors in received traffic</li> <li>• InOtherRxErrors—Number of packets received that have errors other than the following errors: <ul style="list-style-type: none"> <li>• InAuthErrors</li> <li>• InReplyErrors</li> <li>• InPolicyErrors</li> <li>• InDecryptErrors</li> <li>• InPadErrors</li> </ul> </li> <li>• InDecryptErrors—Number of decryption errors in received traffic</li> <li>• InPadErrors—Number of packets received that had invalid values after the packet was decrypted</li> <li>• OutUserPackets—Number of user packets sent</li> <li>• OutUserOctets—Number of octets sent in user packets</li> <li>• OutAccPackets—Number of encapsulated packets sent</li> <li>• OutAccOctets—Number of octets sent in encapsulated packets</li> <li>• OutPolicyErrors—Number of packets arriving at the transport connection for encapsulation that do not meet the specified identifier (selector)</li> <li>• OutOtherTxErrors—Number of outbound packets that have errors other than the OutPolicyErrors</li> </ul> |

- Related Documentation**
- [Enabling IPsec Support for GRE and DVMRP Tunnels on page 322](#)
  - *show ipsec transport interface*

## Monitoring the Summary of All IPsec Transport Connections

**Purpose** Display a summary of existing IPsec transport connections by application and state.

**Action** To display a summary of existing IPsec transport connections by application and state:

```
host1:vr11#show ipsec transport interface summary
Operational status      up      down      upper-bound
                        2       0         2
```

**Meaning** [Table 45 on page 341](#) lists the output fields for the **show ipsec transport interface summary** command.

**Table 45: show ipsec transport interface summary Output Fields**

| Field Name  | Field Description                                                                |
|-------------|----------------------------------------------------------------------------------|
| up          | Number of IPsec transport interfaces that are currently up                       |
| down        | Number of IPsec transport interfaces that are currently down                     |
| upper-bound | Number of IPsec transport interfaces that are currently bound to the upper layer |

**Related Documentation**

- [Enabling IPsec Support for GRE and DVMRP Tunnels on page 322](#)
- *show ipsec transport interface*

## Monitoring the Configuration Information of an IPsec Transport Profile

**Purpose** Display the configuration of an IPsec transport profile.

**Action** To display the configuration of any IPsec transport profile:

```
host1:vr11#show ipsec transport profile
IPSEC transport profile goi1
IPSEC transport profile goi2
2 Ipsec transport profiles found
```

To display the configuration of a particular IPsec transport profile:

```
host1:vr11#show ipsec transport profile goi1
IPSEC transport profile goi1
  Virtual router vr00
  Peer address 10.255.0.62
  Application gre,dvmrp
  Lifetime range in seconds 900 900
  Lifetime range in kilobytes 102400 4294967294
  TransformSet transport-esp-3des-sha1
  Pfs group 0
  Local ip address : 10.255.0.61
```

**Meaning** [Table 46 on page 342](#) lists the output fields for the **show ipsec transport profile** command.

Table 46: show ipsec transport profile Output Fields

| Field Name              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IPsec transport profile | <p>Name of the profile:</p> <ul style="list-style-type: none"> <li>Virtual router—Virtual router on which this profile is configured</li> <li>Peer address—Remote endpoint address</li> <li>Application—Types of application that this profile is protecting</li> <li>Lifetime range in seconds—Lifetime range in seconds configured for the profile</li> <li>Lifetime range in kilobytes—Lifetime range in kilobytes configured for the profile</li> <li>TransformSet—Transform sets configured for the profile</li> <li>Pfs group—PFS group configured for the profile; 0 (zero) means that PFS is not configured for the profile</li> <li>Local ip address—Local endpoint address</li> </ul> |

- Related Documentation**
- [Configuring an IPsec Transport Profile on page 322](#)
  - *show ipsec transport profile*

## Monitoring Configured L2TP Destination Profiles or Host Profiles

**Purpose** Display either a list of configured Layer 2 Tunneling Protocol (L2TP) destination profiles or the host profiles defined in a particular profile.

If a nondefault L2TP receive window size (RWS) is configured for a particular host profile, the command displays the RWS setting as an attribute of that host profile.

**Action** To display either a list of configured L2TP destination profiles or the host profiles defined in a particular profile:

```
host1#show l2tp destination profile
L2TP destination profile westford
1 L2TP destination profile found
```

If a nondefault L2TP RWS is configured for a particular host profile, to display the RWS setting as an attribute of that host profile:

```
host1#show l2tp destination profile westford
L2TP destination profile westford
Configuration
  Destination address
    Transport ipUdp
    Virtual router lns
    Peer address 192.168.1.99
  Destination profile maximum sessions is 5000
Current session count in group-A is 14, max-sessions configured is 3400
Current session count in group-B is 2, max-sessions configured is 4600
Statistics
```

```

Destination profile current session count is 30
Host profile attributes
Remote host is remhost22.xyz.com
Configuration
  Tunnel password is 23erf5
  Interface profile is ebcints
  Bundled group id is 1
  Bundled group id override is enabled
  Maximum sessions is 400
  Failover resync is failover-protocol
  Sessions-limit-group is group-A
Statistics
  Current session count is 14
Remote host is asciitext
Configuration
  Bundled group id is 0
  Tunnel password is 222
  Interface profile is ascints
  Default upper binding type mlppp
  Maximum sessions is 250
  Failover resync is failover-protocol
  Sessions-limit-group is group-B
Statistics
  Current session count is 2
Remote host is mexico
Configuration
  Local ip address is 10.10.2.2
  Proxy lcp is disabled
  Proxy authenticate is enabled
  mlppp upper binding type
  Disconnect-cause avp is enabled
  Receive window size is 4
  Maximum sessions is 500
  Failover resync is failover-protocol
Statistics
  Current session count is 14
Remote host is LAC
Configuration
  Tunnel password is TunnelPass
  Local host name is LNS
  Local ip address is 46.1.1.2
  Session virtual router is vr1
  Disconnect-cause avp is enabled
  Tunnels are single-shot
  Override out-of-resource-result-code is enabled
Statistics
  Current session count is 0
5 L2TP host profiles found

```

**Meaning** [Table 47 on page 343](#) lists the **show l2tp destination profile** command output fields.

**Table 47: show l2tp destination profile Output Fields**

| Field Name     | Field Description               |
|----------------|---------------------------------|
| Transport      | Method used to transfer traffic |
| Virtual router | Name of the virtual router      |

Table 47: show l2tp destination profile Output Fields (*continued*)

| Field Name                                | Field Description                                                                                |
|-------------------------------------------|--------------------------------------------------------------------------------------------------|
| Peer address                              | IP address of the L2TP access concentrator (LAC)                                                 |
| Destination profile maximum sessions      | Maximum number of sessions allowed for the destination profile                                   |
| Current session count in group-A          | Number of current sessions in group-A                                                            |
| Current session count in group-B          | Number of current sessions in group-B                                                            |
| Destination profile current session count | Number of current sessions for the destination profile                                           |
| Host profile attributes                   | Host profile attributes of the L2TP destination                                                  |
| Remote host                               | Name of the remote host                                                                          |
| Local host name                           | Name of the local host                                                                           |
| Local ip address                          | IP address of the local host                                                                     |
| Bundled group id                          | Identifier for bundled sessions                                                                  |
| Bundled group id override                 | Status of the bundled group ID override: enabled or disabled                                     |
| Tunnel password                           | Password for the tunnel                                                                          |
| Interface profile                         | Name of the host profile                                                                         |
| Default upper binding type                | The default upper binding type: mlpp                                                             |
| Proxy lcp                                 | Status of the proxy LCP for the remote host                                                      |
| mlppp upper binding type                  | Default upper binding type                                                                       |
| Proxy authenticate                        | The status of the proxy authentication: enabled or disabled                                      |
| Disconnect-cause avp                      | Status of the disconnect-cause attribute-value pair (AVP): enabled or disabled                   |
| Tunnels are single-shot                   | Indicates that single-shot tunnels are configured for this host profile                          |
| Receive window size                       | Number of packets that the peer can transmit without receiving an acknowledgment from the router |



Table 47: show l2tp destination profile Output Fields (*continued*)

| Field Name                           | Field Description                                                                                     |
|--------------------------------------|-------------------------------------------------------------------------------------------------------|
| Maximum sessions                     | Maximum number of sessions allowed for the host profile                                               |
| Failover resync                      | L2TP peer resynchronization method for the host profile                                               |
| Override out-of-resource-result-code | State of the out-of-resource-result-code override: enabled or disabled                                |
| Current session count                | Number of current sessions for the host profile                                                       |
| Sessions-limit-group                 | Name of the sessions limit group                                                                      |
| Session virtual router               | Name of the virtual router assigned to the L2TP host profile for mapping the PPP session to the TSMs. |

**Related Documentation**

- [Configuring an LNS](#)
- [Configuring an L2TP Destination Profile to Enable IPsec Support for L2TP Tunnels on page 316](#)
- [Configuring Single-Shot L2TP/IPsec Tunnels on page 319](#)
- [show l2tp destination profile](#)



# Configuring the Mobile IP Home Agent

This topic describes how to configure the Mobile IP home agent on E Series routers.

- [Mobile IP Overview on page 347](#)
- [Mobile IP Platform Considerations on page 351](#)
- [Mobile IP References on page 351](#)
- [Before You Configure the Mobile IP Home Agent on page 352](#)
- [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
- [Configuring the License Key to Enable a Mobile IP Home Agent on page 354](#)
- [Configuring the Mobile IP Home Agent Settings on page 354](#)
- [Configuring the IP Mobile Host on page 355](#)
- [Configuring the Mobile IP Security Associations for a Mobile Host on page 356](#)
- [Configuring the Mobile IP Security Associations for a Foreign Agent on page 358](#)
- [Configuring or Associating a Preconfigured Interface Profile with the Mobile IP Home Agent on page 359](#)
- [Setting a Baseline for Mobile IP Home Agent Statistics on page 359](#)
- [Clearing the IP Mobile Binding Details from the Binding Table on page 359](#)

## Mobile IP Overview

---

Mobile IP is a tunneling-based solution that enhances the utility of E Series routers at the edge of the network between fixed wire and wireless network domains. This tunneling-based solution enables a router on a user's home subnet to intercept and forward IP packets to users who roam beyond traditional network boundaries. Mobile IP is useful in environments where mobility is desired and the traditional land line dial-in model does not provide an adequate solution, and in environments where a wireless technology is used.



**NOTE:** Currently, JunosE Software does not support configuration of the Mobile IP foreign agent.

Traditionally, IP addresses are associated with a fixed network location. To achieve mobility, the mobile node assumes a secondary IP address that matches the new network

and redirects the traffic bound to the primary or home address to the mobile node's new network. In the Mobile IP architecture, the two agents that accomplish this task are the home agent and the foreign agent.

When a mobile node roams into a new network, it negotiates with the foreign agent to get a secondary IP address, which is referred to as the care-of address. The mobile node registers this care-of-address with the Mobile IP home agent. The Mobile IP home agent then establishes a tunnel to the care-of-address if the tunnel is not established earlier.



**NOTE:** You need to establish only one tunnel between the Mobile IP home agent and the care-of-address. Demultiplexing of the traffic is done through IP address inspection.

Packets sent to the home address of the mobile node are redirected by the Mobile IP home agent through the tunnel to the care-of-address at the foreign agent. The foreign agent routes the packets to the mobile node's home address. If the mobile node's home address is a private address or if the foreign agent implements ingress filtering, a reverse tunnel from the care-of-address to the Mobile IP home agent is required.

You can use the Mobile IP home agent feature to configure the home agent within a virtual router. The Mobile IP home agent handles the following tasks:

- [Mobile IP Agent Discovery on page 348](#)
- [Mobile IP Registration on page 348](#)
- [Mobile IP Routing and Forwarding on page 351](#)

## Mobile IP Agent Discovery

Mobile nodes use the agent discovery process to identify whether they are on their home network or have roamed into a different network (referred to as a foreign network). Both the foreign agent and the home agent periodically multicast their agent advertisements. You can also request an agent advertisement from the mobile node through Internet Control Message Protocol (ICMP) router solicitations.

## Mobile IP Registration

The Mobile IP home agent receives the registration requests on UDP port 434. The registration request contains the IP router ID as the home agent IP address. The Mobile IP home agent can support static home address allocation and dynamic home address allocation.

### Home Address Assignment

---

The mobile node's home address can either be preconfigured or dynamically allocated by the Mobile IP home agent. If a nonzero home address is preconfigured, the home agent processes the registration request using the home address. If the home address is dynamically allocated, the mobile node submits a nonzero home address and requests the home agent to assign an IP address. The mobile node then uses the address provided by the home agent for subsequent registration requests, until the mobile node is rebooted or the registration expires.

Home address allocation is done by one of the existing AAA back-end address mechanisms, such as:

- By RADIUS
- From an address pool returned by RADIUS
- From a local pool
- By the DHCP server

### Authentication

---

The home agent authenticates the requests based on RFC 3344—IP Mobility Support for IPv4 (August 2002). The mobile home authentication is verified and the authentication algorithm and key are retrieved by checking the security association indexed by the security parameter index (SPI) value. This verification results in a 128-bit key and the authentication algorithm with which to compute an MD-5 message digest over the registration request. The Mobile IP home agent supports both HMAC-MD5 and keyed-MD5 authentication algorithms. When the result of this computation matches the 128-bit authenticator, the mobile-home extension is authenticated.

If a security association is configured for the foreign agent, the foreign-home authentication extension is verified; otherwise, authentication success is based only on the mobile-home authenticator.

The home agent checks the identification (ID) field used for matching registration requests with response and protection against replay attacks. The home agent uses timestamp-based replay protection and the ID field represents a 64-bit Network Time Protocol (NTP)—formatted time value. By default, the timestamp must be within 7 seconds of the configured time value of the home agent.

### AAA

---

You can store the security associations and configuration information remotely on a RADIUS server. You can use the **ip mobile secure host** command and the **ip mobile secure foreign-agent** command to configure the security association (MD-5 key) for a specified user or for a group of users (also known as a domain) for the home agent. The home agent can configure the security association (MD-5 key) for a specified user or a group of users (domain).

Authentication is accomplished either by generating an authentication, authorization, and accounting (AAA) access-request or querying the locally configured security parameters, depending on whether or not you use the **aaa** keyword when you issue the **ip mobile host** command to configure the mobile node. For AAA authentication, you must include the **aaa** keyword; for local authentication, do not include the **aaa** keyword. If AAA authentication is enabled, AAA queries the security information from the RADIUS server.

When both the network access identifier (NAI) and IP address of the mobile node are present in the registration request, the authentication request from Mobile IP home agent to AAA uses the NAI as the username and the IP address as the hint IP address. If only the NAI is present in the registration request, then the NAI address is used as the username

with no hint IP address in the authentication request. If only the IP address (home address) is present in the registration request, then it is used as both the username and the hint IP address in the authentication request. If both the NAI address and the IP address are missing from the registration request, then the registration request is rejected.

If the optional **aaa** keyword is present in the **ip mobile host** command, then the authentication parameters are obtained by querying AAA. The authentication algorithm and security key are retrieved by AAA based on its configuration, depending on the SPI provided in the registration request. If the **aaa** keyword is absent, then the home agent uses authentication parameters configured locally on the router to authenticate the registration request. In both cases, if security parameters are not retrieved, then the request for mobility service is rejected, a security violation error is logged, and no registration reply is generated.

When you configure the mobile host to use RADIUS authentication for home agent users by including the **aaa** keyword in the **ip mobile host** command, the Mobile IP home agent application generates a RADIUS access-request message. The RADIUS server then uses Juniper Networks vendor-specific attributes (VSAs) to provide the appropriate authentication algorithm and secure key for the authentication request.

For information about the specific Juniper Networks VSAs used for Mobile IP RADIUS-based authentication, see *JunosE Broadband Access Configuration Guide* and *RADIUS IETF Attributes*.

---

## Subscriber Management

---

The Mobile IP home agent interoperates with the subscriber management application on E Series routers. The subscriber management application enables customers to dynamically provision new IP subscribers and quickly create new value-added services.

You can set up your subscriber management environment to create dynamic IP subscriber interfaces to provision subscribers and provide differentiated service delivery. In this configuration, the service parameters for an IP subscriber are bound to a dynamic IP subscriber interface.

During the registration process when the Mobile IP home agent has authenticated the subscriber with AAA, the home agent locates or creates the appropriate IP tunnel to carry the data traffic to the foreign agent. When Mobile IP obtains all of the parameters required for interface creation, including the tunnel ID and the authentication context, it directs the subscriber management application to create the dynamic IP subscriber interface.

During the re-registration process when there is a handoff from an initial Mobile IP foreign agent to a new Mobile IP foreign agent, the home agent reauthenticates the subscriber with AAA and locates or creates the appropriate IP tunnel to carry the data traffic to the new foreign agent. When Mobile IP obtains all the parameters required for interface creation, it directs the subscriber management application to move the dynamic IP subscriber interface from the initial tunnel for the previous foreign agent to the new tunnel that points to the new foreign agent. If this was the last subscriber on the tunnel for the previous foreign agent, then the home agent directs the IP tunneling application to tear down the initial tunnel.

For more information about subscriber management and dynamic IP subscriber interfaces, see *JunosE Broadband Access Configuration Guide*. For more information about dynamic IP subscriber interfaces, see *JunosE Broadband Access Configuration Guide*.

## Mobile IP Routing and Forwarding

The home agent supports both generic routing encapsulation (GRE) and Distance Vector Multicast Routing Protocol (DVMRP, also known as IP-in-IP) tunnel encapsulation for forward and reverse tunneling. When packets destined for the mobile node reach a home agent, the home agent encapsulates the packets and tunnels them to the care-of-address. Packets that exceed the maximum transmission unit (MTU) value of the tunnel are dropped and an ICMP error message is sent to the source IP address. Packets without an access route are returned to the source with an ICMP destination-unreachable error message. For reverse tunnels, packets are de-tunneled and forwarded toward the next hop to the destination address.

For more information about configuring GRE and DVMRP dynamic IP tunnels, see [“Configuring a Destination Profile for Dynamic GRE Tunnels” on page 284](#) and [“Configuring a Destination Profile for Dynamic DVMRP Tunnels” on page 285](#).

### Related Documentation

- [Mobile IP Platform Considerations on page 351](#)
- [Mobile IP References on page 351](#)

---

## Mobile IP Platform Considerations

For information about modules that support the Mobile IP home agent on ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router:

- See ERX Module Guide, Table 1, Module Combinations for detailed module specifications.
- See ERX Module Guide, Appendix A, Module Protocol Support for information about the modules that support the Mobile IP home agent.

For information about modules that support the Mobile IP home agent on E120 and E320 Broadband Services Routers:

- See E120 and E320 Module Guide, Table 1, Modules and IOAs for detailed module specifications.
- See E120 and E320 Module Guide, Appendix A, IOA Protocol Support for information about the modules that support the Mobile IP home agent.

### Related Documentation

- [Mobile IP Overview on page 347](#)
- [Mobile IP References on page 351](#)

---

## Mobile IP References

For more information about Mobile IP, consult the following resources:

- RFC 2006—The Definitions of Managed Objects for IP Mobility Support Using SMIv2 (October 1996)
- RFC 2486—The Network Access Identifier (January 1999)
- RFC 2794—Mobile IP Network Access Identifier Extension for IPv4 (March 2000)
- RFC 2865—Remote Authentication Dial In User Service (RADIUS) (June 2000)
- RFC 3024—Reverse Tunneling for Mobile IP, revised (January 2001)
- RFC 3344—IP Mobility Support for IPv4 (August 2002)

**Related  
Documentation**

- [Mobile IP Overview on page 347](#)
- [Mobile IP Platform Considerations on page 351](#)

---

## Before You Configure the Mobile IP Home Agent

---

Before you configure the Mobile IP home agent on a virtual router, perform the following tasks:

1. Create a virtual router to enable the Mobile IP license.

```
host1(config)#virtual-router test
```

2. (Optional) Configure the access list for filtering foreign agents. For more information about configuring virtual routers and access lists, see the *JunosE System Basics Configuration Guide*.

```
host1:test(config)#access-list test deny ip host 100.1.1.3 any log
```

3. Configure an IP interface, which is used as the care-of address. For more information about configuring IP interfaces, see the *JunosE IP, IPv6, and IGP Configuration Guide*.

```
host1:test(config)#interface loopback 0
host1:test(config-if)#ip address 10.10.10.1 255.255.255.255
```

4. Configure the router ID of the virtual router, which becomes the home agent IP address.

```
host1:test(config)#ip router-id 10.10.10.1
```

5. (Optional) Configure the B-RAS license. For more information about configuring B-RAS licenses, RADIUS authentication servers, and RADIUS accounting servers, see the *JunosE Broadband Access Configuration Guide*.

```
host1:test(config)#license b-ras demo
```

6. (Optional) Configure a RADIUS authentication server on the router.

```
host1:test(config)#radius authentication server 10.209.13.234
host1:test(config-radius)#key secret
host1:test(config-radius)#udp-port 1812
host1:test(config-radius)#radius update-source-addr 10.209.12.2
```

7. (Optional) Configure a RADIUS accounting server on the router.

```
host1:test(config-radius)#radius accounting server 10.209.13.234
host1:test(config-radius)#key secret
host1:test(config-radius)#udp-port 1813
```



8. Configure a loopback interface to be used as the primary interface for a tunnel.

```
host1:test(config)#interface loopback 1
```

9. Configure an interface profile for mobile host associations.

```
host1:test(config)#profile virDefault
```

10. Configure a destination profile for dynamic GRE or DVMRP tunnels, as described in [“Configuring a Destination Profile for Dynamic GRE Tunnels” on page 284](#) and [“Configuring a Destination Profile for Dynamic DVMRP Tunnels” on page 285](#).

**Related Documentation**

- [Mobile IP Overview on page 347](#)

## Configuring the Mobile IP Home Agent on a Virtual Router

You can configure and assign an interface profile to be referenced by the Mobile IP home agent.

To configure the Mobile IP home agent on a virtual router:

1. Create a virtual router to enable the Mobile IP license.

```
host1(config)#virtual-router test
```

2. Configure a license for the Mobile IP home agent. For more information about configuring a Mobile IP home agent license, see [“Configuring the License Key to Enable a Mobile IP Home Agent” on page 354](#).

```
host1:test(config)#license mobile-ip home-agent demo
```

3. Configure the Mobile IP home agent settings. For more information about configuring the Mobile IP home agent on a virtual router, see [“Configuring the Mobile IP Home Agent Settings” on page 354](#).

```
host1:test(config)#ip mobile home-agent care-of-access acl lifetime 2000 replay 255 reverse-tunnel-off
```

4. Configure one or more mobile hosts.

```
host1:test(config)#ip mobile host 200.1.1.1 lifetime 200
```

5. Configure the Mobile IP security associations for mobile hosts.

```
host1:test(config)#ip mobile secure host 200.1.1.1 spi 0x398 key ascii w4ex algorithm keyed-md5 replay timestamp within 225
```

6. Configure the Mobile IP security associations for foreign agents.

```
host1:test(config)#ip mobile secure foreign-agent 100.1.1.3 spi 256 key ascii secret replay timestamp within 255 algorithm hmac-md5
```

7. Assign an interface profile to be referenced by the Mobile IP home agent.

```
host1:test(config)#ip mobile profile testProfile
```

8. (Optional) Verify the Mobile IP configuration. For more information about monitoring the Mobile IP configuration, see [“Monitoring the Configuration Information of the Mobile IP Home Agent” on page 362](#).

- Related Documentation**
- [Mobile IP Overview on page 347](#)
  - [Before You Configure the Mobile IP Home Agent on page 352](#)
  - [Configuring the IP Mobile Host on page 355](#)
  - [Configuring the Mobile IP Security Associations for a Mobile Host on page 356](#)
  - [Configuring the Mobile IP Security Associations for a Foreign Agent on page 358](#)

---

## Configuring the License Key to Enable a Mobile IP Home Agent

You can use the **license mobile-ip home-agent** to configure the license key to enable a Mobile IP home agent. You can specify a name for the license key. The maximum limit provided for the name is 16 alphanumeric characters.

To configure the license key for enabling a Mobile IP home agent:

- Issue the **license mobile-ip home-agent** command in Global Configuration mode.

```
host1(config)#license mobile-ip home-agent demo
```

Use the **no** version to delete the license key configuration.

- Related Documentation**
- [Mobile IP Overview on page 347](#)
  - [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
  - [Configuring the Mobile IP Home Agent Settings on page 354](#)
  - [Monitoring the License Key for the Mobile IP Home Agent on page 368](#)
  - *license mobile-ip home-agent*

---

## Configuring the Mobile IP Home Agent Settings

You can use the **ip mobile home-agent** to configure the Mobile IP home agent on a virtual router.

You can use the following keywords to configure the mobile IP home agent:

- The **care-of-access** keyword followed by the access control list name to specify the access control list applied to the care-of address that restricts access for foreign agents or networks.
- The **lifetime** keyword followed by the number of seconds to specify the interval within which the registration requests are established. The range for the value is 5–65,535. The default value is 36,000 seconds.

- The **replay** keyword followed by the number of seconds to specify the interval within which a registration can exceed the configured value of the Mobile IP home agent. The range of the value is 1–255. The default value is 7 seconds.
- The **reverse-tunnel-off** keyword to disable reverse tunneling support by the Mobile IP home agent for denying T bit registration requests. By default, reverse tunneling is enabled.



**NOTE:** The values for lifetime, replay, and care-of-access configured per mobile host by using the **ip mobile host** command override the values configured by using the **ip mobile home-agent** command.

To configure the Mobile IP home agent on a virtual router:

- Issue the **ip mobile home-agent** command in Global Configuration mode.

```
host1(config)#ip mobile home-agent care-of-access acl lifetime 2000 replay 255
reverse-tunnel-off
```

Use the **no** version to disable the Mobile IP home agent service on the virtual router.

#### Related Documentation

- [Mobile IP Overview on page 347](#)
- [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
- [Configuring the IP Mobile Host on page 355](#)
- [Monitoring the Configuration Information of the Mobile IP Home Agent on page 362](#)
- *ip mobile home-agent*

## Configuring the IP Mobile Host

You can use the **ip mobile host** to configure a mobile node on a virtual router with an optional host NAI address or the home address (IP address of the home agent).

You can use the following keywords to configure the IP mobile host:

- The **nai** keyword to specify the NAI for the mobile node. You must choose one of the following formats, where *user* represents the username and *realm* represents the domain name: *user@realm*, *@realm*, or *@*.
- The **address** keyword followed by the IP address of the mobile node to specify a nonzero home address of the mobile node.
- The **aaa** keyword to specify that the AAA server should validate registration requests and obtain configuration and security associations.

- The **care-of-access** keyword followed by the access control list name to specify the access control list applied to the care-of address that restricts access for foreign agents or networks.
- The **lifetime** keyword followed by the number of seconds to specify the interval within which the registration requests are established. The range for the value is 5–65,535. The default value is 36,000 seconds.



**NOTE:** The values for lifetime, address, and care-of-access configured per mobile host by using the **ip mobile host** command override the values configured by using the **ip mobile home-agent** command.

To configure the IP mobile host with:

- Local Authentication

```
host1(config)#ip mobile host 200.1.1.1 lifetime 200
```

or

```
host1(config)#ip mobile host nai @amazon.net
```

- AAA Authentication

```
host1(config)#host1(config)#ip mobile host nai @yahoo.com aaa care-of-access acl2
```

or

```
host1(config)#ip mobile host nai bob@msn.net aaa lifetime 400
```

Use the **no** version to delete the configuration of the mobile node on the virtual router.

#### Related Documentation

- [Mobile IP Overview on page 347](#)
- [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
- [Configuring the Mobile IP Home Agent Settings on page 354](#)
- [Configuring the Mobile IP Security Associations for a Mobile Host on page 356](#)
- [Monitoring the Configuration of Mobile Hosts or Domain Users on page 363](#)
- [\*ip mobile host\*](#)

---

## Configuring the Mobile IP Security Associations for a Mobile Host

You can use the **ip mobile secure host** to configure the security associations for a mobile node.



**NOTE:** If you delete a mobile node host by using the **no ip mobile host** command, all security associations that you configured for this host are deleted. Configure security associations only for mobile nodes on which local authentication is configured.

You can use the following keywords to configure the security associations for a mobile node:

- The **nai** keyword to specify the NAI for the mobile node. You must choose one of the following formats, where *user* represents the username and *realm* represents the domain name: *user@realm*, *@realm*, or *@*.
- The **address** keyword followed by the IP address of the mobile node to specify a nonzero home address of the mobile node.
- The **spi** keyword followed by a four-octet hexadecimal number to specify the SPI value to authenticate inbound requests and permit authentication for outbound registration requests. The range for the value is 0x100–0xFFFFFFFF.
- The required **key** keyword followed by either the **hex** keyword or the **ascii** keyword to specify the authentication key for this security association:
  - The **hex** keyword followed by a 32-character (128-bit) hexadecimal value in the range 0x0–0xFFFFFFFFE to specify a hexadecimal key.
  - The **ascii** keyword followed by an alphanumeric value up to a maximum of 16 characters (128 bits) to specify an ASCII key.
- The optional **replay timestamp within** keywords followed by the number of seconds to specify the number of seconds by which a registration request can exceed the time value configured on the Mobile IP home agent. The range for the value is 1–255. The default value is seven seconds.
- The optional **algorithm** keyword followed by either the **hmac-md5** keyword or the **keyed-md5** keyword to specify the type of authentication algorithm for Mobile IP messages.

To configure the security associations for a mobile node:

- Issue the **ip mobile secure host** command in Global Configuration mode.  

```
host1(config)#ip mobile secure host 200.1.1.1 spi 0x398 key ascii w4ex algorithm
keyed-md5 replay timestamp within 225
```

or

```
host1(config)#ip mobile secure host nai @amazon.net spi 0x100 key ascii pD4En
algorithm keyed-md5 replay timestamp within 100
```

Use the **no** version to delete the security associations for the specified host on the virtual router.

#### Related Documentation

- [Mobile IP Overview on page 347](#)
- [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
- [Configuring the IP Mobile Host on page 355](#)
- [Monitoring the Mobile IP Security Associations Configured on Mobile Hosts on page 366](#)
- *ip mobile secure host*

## Configuring the Mobile IP Security Associations for a Foreign Agent

---

You can use the **ip mobile secure foreign-agent** to configure the security associations for a foreign agent. You can include the IP address of the foreign agent to specify a nonzero address for the foreign agent.

You can use the following keywords to configure the security associations for a foreign agent:

- The **spi** keyword followed by a four-octet hexadecimal number to specify the SPI value to authenticate inbound requests and permit authentication for outbound registration requests. The range for the value is 0x100–0xFFFFFFFF.
- The required **key** keyword followed by either the **hex** keyword or the **ascii** keyword to specify the authentication key for this security association:
  - The **hex** keyword followed by a 32-character (128-bit) hexadecimal value in the range 0x0–0xFFFFFFFFE to specify a hexadecimal key.
  - The **ascii** keyword followed by an alphanumeric value up to a maximum of 16 characters (128 bits) to specify an ASCII key.
- The optional **replay timestamp within** keywords followed by the number of seconds to specify the number of seconds by which a registration request can exceed the time value configured on the Mobile IP home agent. The range for the value is 1–255. The default value is 7 seconds.
- The optional **algorithm** keyword followed by either the **hmac-md5** keyword or the **keyed-md5** keyword to specify the type of authentication algorithm for Mobile IP messages.

To configure the security associations for a foreign agent:

- Issue the **ip mobile secure foreign-agent** command in Global Configuration mode.  

```
host1(config)#ip mobile secure foreign-agent 100.1.1.3 spi 256 key ascii secret replay  
timestamp within 255 algorithm hmac-md5
```

Use the **no** version to delete the security associations for the specified foreign agent on the virtual router.

### Related Documentation

- [Mobile IP Overview on page 347](#)
- [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
- [Configuring the IP Mobile Host on page 355](#)
- [Monitoring the Mobile IP Security Associations Configured for Foreign Agents on page 365](#)
- *ip mobile secure foreign-agent*

## Configuring or Associating a Preconfigured Interface Profile with the Mobile IP Home Agent

---

You can configure or associate a preconfigured interface profile with the Mobile IP home agent on a virtual router by using the **ip mobile profile** command. For information about configuring a virtual router, see the *JunosE System Basics Configuration Guide*.

To configure or associate a preconfigured interface profile with the Mobile IP home agent on a virtual router:

- Issue the **ip mobile profile** command in Global Configuration mode.

```
host1(config)#ip mobile profile virDefault
```

There is no **no** version to remove the profile configuration from the virtual router.

### Related Documentation

- [Mobile IP Overview on page 347](#)
- [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
- [Monitoring the Interface Profile Name Associated with the Mobile IP Home Agent on page 364](#)
- *ip mobile profile*

## Setting a Baseline for Mobile IP Home Agent Statistics

---

You can set a statistics baseline for a specified Mobile IP home agent by using the **baseline ip mobile home-agent** command.

To set a statistics baseline for a specified Mobile IP home agent:

- Issue the **baseline ip mobile home-agent** command in Privileged Exec mode.

```
host1#baseline ip mobile home-agent
```

There is no **no** version.

### Related Documentation

- [Mobile IP Overview on page 347](#)
- *baseline ip mobile home-agent*

## Clearing the IP Mobile Binding Details from the Binding Table

---

Use the **clear ip mobile binding** command to remove the binding table on the specified virtual router or a specified binding by using the home address or NAI of the mobile node.

To remove a specified binding by using the home address or NAI of the mobile node:

- Issue the **clear ip mobile binding** command in Privileged Exec mode.

```
host1#clear ip mobile binding nai john@yahoo.com
```

There is no **no** version.

- Related Documentation**
- [Mobile IP Overview on page 347](#)
  - *clear ip mobile binding*



# Monitoring the Mobile IP Home Agent

This topic explains how to use **show** commands to view your Mobile IP home agent configuration. You can monitor the configuration information of Mobile IP home agent and security associations of foreign agents and mobile hosts.

This topic describes:

- [Monitoring the Binding Table Information of the Mobile IP Home Agent on page 361](#)
- [Monitoring the Configuration Information of the Mobile IP Home Agent on page 362](#)
- [Monitoring the Configuration of Mobile Hosts or Domain Users on page 363](#)
- [Monitoring the Interface Profile Name Associated with the Mobile IP Home Agent on page 364](#)
- [Monitoring the Mobile IP Security Associations Configured for Foreign Agents on page 365](#)
- [Monitoring the Mobile IP Security Associations Configured on Mobile Hosts on page 366](#)
- [Monitoring the Protocol Statistics for the Mobile IP Home Agent Traffic on page 366](#)
- [Monitoring the License Key for the Mobile IP Home Agent on page 368](#)

## Monitoring the Binding Table Information of the Mobile IP Home Agent

---

**Purpose** Display the binding table information of the Mobile IP home agent on the virtual router.

**Action** To display the binding table information of the Mobile IP home agent on the virtual router:

```
host1#show ip mobile binding
MN-NAI: jr@zoom.com
AAA-NAI: user@zoom.com
Home IP address: 55.0.0.5
Home agent address: 66.0.0.5
Care-of-address: 72.1.1.15
Lifetime granted : 10:00:00 (36000 seconds)
Lifetime remaining : 01:46:32
Tunnel: Source 66.0.0.5, Destination 72.1.1.15, Encapsulation GRE
Reverse tunnel: enabled
```

**Meaning** [Table 48 on page 362](#) lists the output fields for the **show ip mobile binding** command.

Table 48: show ip mobile binding Output Fields

| Field Name         | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MN-NAI             | Network access identifier of the mobile node in user@realm, @realm, or @ format                                                                                                                                                                                                                                                                                                                                                            |
| AAA-NAI            | Network access identifier returned from the AAA server in user@realm, @realm, or @ format                                                                                                                                                                                                                                                                                                                                                  |
| Home IP address    | IP address of the mobile node                                                                                                                                                                                                                                                                                                                                                                                                              |
| Home agent address | IP address of the Mobile IP home agent                                                                                                                                                                                                                                                                                                                                                                                                     |
| Care-of-address    | IP care-of address or co-located care-of address of the foreign agent                                                                                                                                                                                                                                                                                                                                                                      |
| Lifetime granted   | Lifetime granted to the mobile node for registration. Number of seconds is given in parentheses. The interval is defined in the following format: hh:mm:sec.                                                                                                                                                                                                                                                                               |
| Lifetime remaining | Time remaining until the registration is expired. It has the same initial value as Lifetime granted, and is counted down by the Mobile IP home agent.                                                                                                                                                                                                                                                                                      |
| Tunnel             | Information about the tunnel used by the mobile node: <ul style="list-style-type: none"> <li>• Source—Source IP address of the tunnel</li> <li>• Destination—Destination address of the tunnel</li> <li>• Encapsulation—Encapsulation type of the tunnel: <ul style="list-style-type: none"> <li>• GRE—Generic Routing Encapsulation tunnels</li> <li>• IP-in-IP—Distance Vector Multicast Routing Protocol tunnels</li> </ul> </li> </ul> |
| Reverse tunnel     | Reverse tunneling status: enabled or disabled                                                                                                                                                                                                                                                                                                                                                                                              |

- Related Documentation**
- [show ip mobile binding](#)
  - [Mobile IP Overview on page 347](#)
  - [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
  - [Configuring the License Key to Enable a Mobile IP Home Agent on page 354](#)
  - [Clearing the IP Mobile Binding Details from the Binding Table on page 359](#)

## Monitoring the Configuration Information of the Mobile IP Home Agent

**Purpose** Display the configuration information of the Mobile IP home agent on the virtual router.

**Action** To display the configuration information of the Mobile IP home agent on the virtual router:

```
host1#show ip mobile home-agent
Home Agent Parameters
Access list name ---
Registration lifetime (in seconds) 36000
Replay protection time (in seconds) 7
Reverse tunnel enabled
```

**Meaning** [Table 49 on page 363](#) lists the output fields for the **show ip mobile home-agent** command.

**Table 49: show ip mobile home-agent Output Fields**

| Field Name                          | Field Description                                                                                                             |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| Access list name                    | Name of the access control list applied to the care-of address that restricts access for foreign agents or networks           |
| Registration lifetime (in seconds)  | Number of seconds before which the registration requests are established                                                      |
| Replay protection time (in seconds) | Time, in seconds, that the timestamp on a registration request from a mobile node may differ from the router's internal clock |
| Reverse tunnel                      | Reverse tunneling status: enabled or disabled                                                                                 |

- Related Documentation**
- [show ip mobile home-agent](#)
  - [Mobile IP Overview on page 347](#)
  - [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
  - [Configuring the Mobile IP Home Agent Settings on page 354](#)

## Monitoring the Configuration of Mobile Hosts or Domain Users

**Purpose** Display the configuration of all or specified mobile nodes or domain users.

**Action** To display the configuration of all mobile nodes or domain users:

```
host1#show ip mobile host
Home
  MN-NAI      IP address  Lifetime  Care-Of-Access  Aaa-Configured
-----
@warner.com   ---        36000    ---             no
@yahoo.com    ---        ---      ---             yes
pj@juniper.net ---        100     ---             no
pm@juniper.net ---        500     ---             no
```

To display the configuration of a specified mobile node or domain user:

```
host1#show ip mobile host nai @warner.com
Home IP
  MN-NAI      address  Lifetime  Care-Of-Access  Aaa-Configured
```

```

-----
@warner.com    ---      36000    ---      no

```

**Meaning** [Table 50 on page 364](#) lists the output fields for the **show ip mobile host** command.

**Table 50: show ip mobile host Output Fields**

| Field Name      | Field Description                                                               |
|-----------------|---------------------------------------------------------------------------------|
| MN-NAI          | Network access identifier of the mobile node in user@realm, @realm, or @ format |
| Home IP address | IP address of the mobile node                                                   |
| Lifetime        | Number of seconds the registration request is active for a mobile node          |
| Care-Of-Access  | Name of the ACL applied to the care-of address to restrict network roaming      |
| Aaa-Configured  | AAA server configuration status: yes or no                                      |

**Related Documentation**

- *show ip mobile host*
- [Mobile IP Overview on page 347](#)
- [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
- [Configuring the Mobile IP Home Agent Settings on page 354](#)
- [Configuring the IP Mobile Host on page 355](#)

## Monitoring the Interface Profile Name Associated with the Mobile IP Home Agent

**Purpose** Display the interface profile name associated with the Mobile IP home agent.

**Action** To display the interface profile name associated with the Mobile IP home agent:

```

host1#show ip mobile profile
Mobile IP profile is: mobileIpProfile

```

**Meaning** [Table 51 on page 364](#) lists the output field for the **show ip mobile profile** command.

**Table 51: show ip mobile profile Output Field**

| Field Name           | Field Description                                               |
|----------------------|-----------------------------------------------------------------|
| Mobile IP profile is | Interface profile name associated with the Mobile IP home agent |

**Related Documentation**

- *show ip mobile profile*
- [Mobile IP Overview on page 347](#)

- [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
- [Configuring the IP Mobile Host on page 355](#)
- [Configuring or Associating a Preconfigured Interface Profile with the Mobile IP Home Agent on page 359](#)

## Monitoring the Mobile IP Security Associations Configured for Foreign Agents

**Purpose** Display the security associations configured for all foreign agents on the virtual router.

**Action** To display the security associations configured for all foreign agents on the virtual router:

```
host1#show ip mobile secure foreign-agent
```

| IP address | SPI           | Algorithm | Replay | Key    |
|------------|---------------|-----------|--------|--------|
| 10.10.10.1 | 628 ( 0x274 ) | hmac-md5  | ---    | secret |
| 20.20.20.1 | 628 ( 0x274 ) | hmac-md5  | 255    | secret |
| 30.30.30.1 | 628 ( 0x274 ) | hmac-md5  | 255    | secret |

**Meaning** [Table 52 on page 365](#) lists the output fields for the **show ip mobile secure foreign-agent** command.

**Table 52: show ip mobile secure foreign-agent Output Fields**

| Field Name | Field Description                                                                                                          |
|------------|----------------------------------------------------------------------------------------------------------------------------|
| IP address | IP address of foreign agent                                                                                                |
| SPI        | Security parameter index key for authenticating registration requests                                                      |
| Algorithm  | Algorithm (hmac-md5 or keyed-md5) for authenticating Mobile IP messages                                                    |
| Replay     | Interval (in seconds) within which a registration request can exceed the time value configured on the Mobile IP home agent |
| Key        | 128-bit hexadecimal number for authenticating the security association                                                     |

- Related Documentation**
- *show ip mobile secure foreign-agent*
  - [Mobile IP Overview on page 347](#)
  - [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
  - [Configuring the Mobile IP Security Associations for a Mobile Host on page 356](#)
  - [Configuring the Mobile IP Security Associations for a Foreign Agent on page 358](#)

## Monitoring the Mobile IP Security Associations Configured on Mobile Hosts

**Purpose** Display the Mobile IP security associations configured on all mobile node hosts on the virtual router.

**Action** To display the Mobile IP security associations configured on all mobile node hosts on the virtual router:

```
host1#show ip mobile secure host
```

| MN-NAI      | Home IP<br>address | SPI           | Algorithm | Replay | Key  |
|-------------|--------------------|---------------|-----------|--------|------|
| -----       | -----              | -----         | -----     | -----  | ---- |
| @warner.com | ---                | 288 ( 0x120 ) | hmac-md5  | 255    | time |

**Meaning** [Table 53 on page 366](#) lists the output fields for the **show ip mobile secure host** command.

**Table 53: show ip mobile secure host Output Fields**

| Field Name      | Field Description                                                                                                          |
|-----------------|----------------------------------------------------------------------------------------------------------------------------|
| MN-NAI          | Network access identifier of the mobile node in user@realm, @realm, or @ format                                            |
| Home IP address | IP address of the mobile node host                                                                                         |
| SPI             | Security parameter index key for authenticating registration requests                                                      |
| Algorithm       | Algorithm (hmac-md5 or keyed-md5) for authenticating Mobile IP messages                                                    |
| Replay          | Interval (in seconds) within which a registration request can exceed the time value configured on the Mobile IP home agent |
| Key             | 128-bit hexadecimal number for authenticating the security association                                                     |

- Related Documentation**
- [show ip mobile secure host](#)
  - [Mobile IP Overview on page 347](#)
  - [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
  - [Configuring the Mobile IP Security Associations for a Mobile Host on page 356](#)
  - [Configuring the Mobile IP Security Associations for a Foreign Agent on page 358](#)

## Monitoring the Protocol Statistics for the Mobile IP Home Agent Traffic

**Purpose** Display the protocol statistics for the Mobile IP home agent traffic, including advertisements, solicitations, registrations, registration errors, and security violations.

Use the optional **delta** keyword to display the baseline-relative statistics for the Mobile IP home agent traffic.

**Action** To display the protocol statistics for the Mobile IP home agent traffic:

```
host1#show ip mobile traffic
Home Agent Registrations:
Registration requests:
Register: 0
Copyright © 2012, Juniper Networks, Inc. 321
Chapter 14: Configuring the Mobile IP Home Agent
Deregister: 0
Accept: 0
Registration rejects:
Denied: 0
Unspecified: 0
Unknown HA: 0
Administratively prohibited: 0
No Resources: 0
Authentication failed MN: 0
FA: 0
Bad identification: 0
Bad request form: 0
Unavailable encapsulation: 0
No reverse tunnel: 0
```

**Meaning** [Table 54 on page 367](#) lists the output fields for the **show ip mobile traffic** command.

**Table 54: show ip mobile traffic Output Fields**

| Field Name            | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Registration requests | <p>Total number of registration requests, de-registration requests, and accepted registration requests for mobile nodes:</p> <ul style="list-style-type: none"> <li>Register—Number of registration requests received by the Mobile IP home agent</li> <li>Deregister—Number of de-registration requests received by the Mobile IP home agent</li> <li>Accept—Number of registration requests accepted by the Mobile IP home agent</li> </ul> |

Table 54: show ip mobile traffic Output Fields (*continued*)

| Field Name           | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Registration rejects | <p>Total number of and reasons for unsuccessful responses to registration requests:</p> <ul style="list-style-type: none"> <li>• Denied—Number of registration requests denied by the Mobile IP home agent</li> <li>• Unspecified—Number of registration requests rejected for an unspecified reason, such as an internal communication failure</li> <li>• Unknown HA—Number of registration requests rejected because of an unknown Mobile IP home agent address, or because the specified Mobile IP home agent address is not serviced by this Mobile IP home agent</li> <li>• Administratively prohibited—Number of registration requests prohibited for administrative reasons, such as the broadcast or B bit being set without the corresponding D bit, or a denial by the registration filters</li> <li>• No Resources—Number of registration requests rejected due to insufficient resources, such as a full binding table, an inability to create a tunnel, or an inability of the IP subscriber management application to create a dynamic subscriber interface</li> <li>• Authentication failed MN—Number of registration requests rejected because the mobile node failed authentication</li> <li>• FA—Number of registration requests rejected because the foreign agent failed authentication</li> <li>• Bad identification—Number of registration requests rejected because the registration ID field is out of range</li> <li>• Bad request form—Number of registration requests rejected because of a malformed request</li> <li>• Unavailable encapsulation—Number of registration requests rejected because of unsupported encapsulation</li> <li>• No reverse tunnel—Number of registration requests rejected because reverse tunneling is disabled</li> </ul> |

**Related Documentation**

- [show ip mobile traffic](#)
- [Mobile IP Overview on page 347](#)
- [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
- [Configuring the Mobile IP Home Agent Settings on page 354](#)

## Monitoring the License Key for the Mobile IP Home Agent

**Purpose** Display the license key for the Mobile IP home agent.



**Action** To display the license key for the Mobile IP home agent:

```
host1#show license mobile-ip home-agent
Mobile IP license is PcZJ93Mt17 which allows 48000 users
```

**Meaning** [Table 55 on page 369](#) lists the output field for the **show license mobile-ip home-agent** command.

**Table 55: show license mobile-ip home-agent Output Field**

| Field Name           | Field Description                                                                                                      |
|----------------------|------------------------------------------------------------------------------------------------------------------------|
| Mobile IP license is | Mobile IP license key associated with the Mobile IP home agent and the maximum number of users allowed by this license |

- Related Documentation**
- *show license mobile-ip home-agent*
  - [Mobile IP Overview on page 347](#)
  - [Configuring the Mobile IP Home Agent on a Virtual Router on page 353](#)
  - [Configuring the License Key to Enable a Mobile IP Home Agent on page 354](#)



## PART 2

# Index

- [Index on page 373](#)



# Index

## A

### AAA

and Mobile IP home agent.....347

### access lists, IP

monitoring.....65, 66

redirecting traffic with null interface  
instead.....42

redistributing access routes.....6

redistributing access-internal routes.....6

access-list command.....22, 32, 96

adjustment-factor command.....220

aggregation flow caches.....116

configuring.....119

### ANCP (Access Node Control Protocol)

adjusting downstream rates.....218, 219

monitoring.....225

overview.....209

### ANCP commands

clear l2c neighbor.....217, 218

id.....215

l2c.....213, 214

l2c end-user-id.....214

l2c max-branches.....214

l2c peer-attachment-id.....214

max-branches.....215

neighbor.....215

qos-adaptive-mode.....218, 219

session-timeout.....213, 214

### authentication

Mobile IP home agent.....347

### authentication commands

authentication.....246, 253

## B

### baseline commands

baseline ip.....109

baseline ip mobile home-agent.....359, 361

baseline ip tunnel-reassembly.....300

### baseline, setting

Mobile IP home agent.....359, 361

tunnel reassembly.....300

### BFD (Bidirectional Forwarding Detection)

BGP peer reachability detection.....131

license.....135

liveness detection.....132

liveness detection interval, negotiating  
the.....132

transmit interval, negotiating the.....132

### BFD commands

clear bfd session.....137

clear ipv6 bfd session.....137

show license bfd.....138

### BGP (Border Gateway Protocol)

BFD.....131

clearing IP routing table.....62

community lists.....68

reinstalling routes in IP routing table.....62

Bidirectional Forwarding Detection. *See* BFD

## C

### cache flow, IP

monitoring.....126

certificate revocation list. *See* CRL

checksum computation.....268

### clear commands

clear ip mobile binding.....359, 361

clear l2c neighbor.....217, 218

### clear ip commands

clear ip routes.....62

community lists, BGP.....68

### conventions

notice icons.....xxi

text and syntax.....xxii

CRL (certificate revocation list).....234

checking.....236

viewing.....256

customer support.....xxiv

contacting JTAC.....xxiv

## D

dead peer detection. *See* DPD

default-information originate command.....33

destruct timeout period for single-shot

tunnels.....315

### digital certificates

authenticating the peer.....236

base64.....233

CA hierarchy.....236

certificate chains.....236

checking CRLs.....236

|                                                    |                    |                                                        |               |
|----------------------------------------------------|--------------------|--------------------------------------------------------|---------------|
| configuring.....                                   | 241                | FQDN (fully qualified domain name).....                | 151, 167, 172 |
| file extensions.....                               | 236                | aggressive mode.....                                   | 158           |
| generating private/public key pairs.....           | 236                | user@fqdn format.....                                  | 151           |
| monitoring.....                                    | 256                | with digital certificates.....                         | 151           |
| obtaining a public key certificate.....            | 236                | with preshared keys.....                               | 151           |
| obtaining a root CA certificate.....               | 236                | fully qualified domain name. <i>See</i> FQDN           |               |
| obtaining public keys without.....                 | 240, 252           |                                                        |               |
| offline configuration.....                         | 241                | <b>G</b>                                               |               |
| offline enrollment.....                            | 236                | GRE (Generic Routing Encapsulation)                    |               |
| online configuration.....                          | 246                | reassembly of tunnel packets.....                      | 298           |
| online enrollment.....                             | 236                | tunnels.....                                           | 265           |
| overview.....                                      | 233                | GRE with IPsec                                         |               |
| signature authentication.....                      | 235                | how it works.....                                      | 320           |
| standards.....                                     | 236                | setting up secure connection.....                      | 320           |
| viewing.....                                       | 236, 237, 256      |                                                        |               |
| X.509v3.....                                       | 235                | <b>H</b>                                               |               |
| documentation set                                  |                    | home agent, Mobile IP. <i>See</i> Mobile IP home agent |               |
| comments on.....                                   | xxiii              |                                                        |               |
| DPD (dead peer detection).....                     | 157                | <b>I</b>                                               |               |
| DVMRP (Distance Vector Multicast Routing Protocol) |                    | idle timeout period for single-shot tunnels.....       | 315           |
| reassembly of tunnel packets.....                  | 298                | IKE (Internet Key Exchange)                            |               |
| tunnels.....                                       | 266                | aggressive mode characteristics.....                   | 158           |
| DVMRP with IPsec                                   |                    | aggressive mode negotiations.....                      | 158           |
| how it works.....                                  | 320                | authentication without digital                         |               |
| setting up secure connection.....                  | 320                | certificates.....                                      | 240, 252      |
| dynamic IP tunnels                                 |                    | initiator proposals and policy rules.....              | 159           |
| monitoring.....                                    | 286, 287, 290, 292 | main mode characteristics.....                         | 158           |
| overview.....                                      | 279                | overview.....                                          | 158           |
| dynamic tunnels.....                               | 279                | SA negotiation.....                                    | 161           |
|                                                    |                    | using digital certificates.....                        | 235           |
|                                                    |                    | IKE commands.....                                      | 199           |
| <b>E</b>                                           |                    | ike local-identity.....                                | 198           |
| enable commands                                    |                    | ike peer-identity.....                                 | 198           |
| enable ipsec-transport.....                        | 316                | IKE message notification type.....                     | 175           |
| endpoints, tunnel.....                             | 265                | IKE policies.....                                      | 160           |
|                                                    |                    | authentication mode.....                               | 160           |
| <b>F</b>                                           |                    | Diffie-Hellman group.....                              | 160           |
| filter lists, BGP.....                             | 26                 | encryption algorithms                                  |               |
| filtering                                          |                    | 3DES.....                                              | 160           |
| undesirable traffic.....                           | 42                 | DES.....                                               | 160           |
| flow statistics commands                           |                    | hash function                                          |               |
| cache entries.....                                 | 119                | MD5.....                                               | 160           |
| cache timeout.....                                 | 119                | SHA-1.....                                             | 160           |
| enabled.....                                       | 119                | IPsec tunnels.....                                     | 204           |
| export destination .....                           | 119                | lifetime.....                                          | 161           |
| export source.....                                 | 119                | priority.....                                          | 160           |
| ip flow-aggregation cache .....                    | 119                | instance, route map.....                               | 4             |
| mask destination .....                             | 119                |                                                        |               |

- interface commands
  - interface null.....42
  - interface tunnel.....165, 268
  - ipsec-transport keyword.....321
- interfaces
  - NAT, marking.....93
- Internet Key Exchange. *See* IKE
- invalid cookies, IPsec.....175
- IP
  - managing the routing table.....62
- ip commands
  - ip bgp-community new-format.....51
  - ip refresh-route.....62
  - ip route.....42
  - ip tunnel reassembly.....299
- IP flow
  - export.....126
  - sampling.....130
- IP fragmentation
  - reassembling for tunnel packets.....297
- ip mobile commands
  - ip mobile home-agent.....354
  - ip mobile host.....355
  - ip mobile profile.....359
  - ip mobile secure foreign-agent.....358
  - ip mobile secure host.....356
- ip nat commands.....96
  - address.....96
  - ip nat.....93
  - ip nat inside source list.....97
  - ip nat inside source static.....93
  - ip nat outside source list.....97
  - ip nat outside source static.....95
  - ip nat pool.....96
  - ip nat translation.....99
  - ip nat translation max-entries.....93
  - See also* show ip nat commands
- IP reassembly of tunnel packets.....297
  - configuring.....299
  - monitoring.....300
- IP security policies.....156
- IP tunnels.....265, 279
  - configuring.....268
  - monitoring.....272, 286, 287, 290, 292
- IP-in-IP tunnels.....265, 279
- IPsec (IP Security).....193, 303
  - AH.....146
  - AH processing.....156
  - concepts.....146
  - configuration
    - examples.....176
    - tasks.....162
  - configuring
    - IKE policy.....172
    - IPsec parameters.....163
    - tunnels.....165
  - digital certificates.....233
  - encapsulation modes.....153
  - encapsulation protocols.....153
  - ESP.....146
  - ESP processing.....156
  - invalid cookies.....175
  - L2TP with IPsec.....193, 303
  - license.....162
  - monitoring.....184
  - overview.....143
  - packet encapsulation.....147
  - protocol stack.....146
  - reassembly of tunnel packets.....298
  - remote access.....193, 303
  - secure IP interfaces.....146
  - security parameters.....148
  - security parameters per policy type.....150
  - tunnel destination endpoint.....150
  - tunnel failover.....157
  - tunnel source endpoint.....150
  - See also* L2TP with IPsec
- IPsec CA identity commands
  - crl.....246
  - enrollment retry-limit.....246
  - enrollment retry-period.....246
  - enrollment url.....246
  - ipsec ca identity.....250
  - issuer-identifier.....250
  - root proxy url.....250
- ipsec certificate commands
  - ipsec certificate-database refresh.....243
  - ipsec certificate-request generate.....243
- ipsec commands.....246
  - ipsec ca authenticate.....246
  - ipsec ca enroll.....246
  - ipsec ca identity.....250
  - ipsec clear.....175
  - ipsec crl.....243, 244
  - ipsec identity.....244
  - ipsec ike-policy-rule.....174
  - ipsec isakmp-policy-rule.....174
  - ipsec key generate.....245, 250, 253

|                                        |                    |                                                    |          |
|----------------------------------------|--------------------|----------------------------------------------------|----------|
| ipsec key manual pre-share.....        | 163                | local ip address.....                              | 322      |
| ipsec key pubkey-chain rsa.....        | 253                | pfs group.....                                     | 322      |
| ipsec key zeroize.....                 | 245, 250           | transform-set.....                                 | 322      |
| ipsec lifetime.....                    | 163                | <i>See also</i> show ipsec transport commands      |          |
| ipsec local-endpoint.....              | 165                | IPsec tunnel profile commands                      |          |
| ipsec option dpd.....                  | 167                | domain-suffix.....                                 | 198      |
| ipsec option tx-invalid-cookie.....    | 175                | extended-authentication.....                       | 198      |
| ipsec transform-set.....               | 165                | ike local-identity.....                            | 198      |
| key.....                               | 165                | ike peer-identity.....                             | 198      |
| masked-key.....                        | 165                | ip profile.....                                    | 198      |
| <i>See also</i> show ipsec commands    |                    | ipsec tunnel profile.....                          | 197      |
| IPsec identity commands                |                    | lifetime.....                                      | 198      |
| common-name.....                       | 241                | local ip address.....                              | 198      |
| country.....                           | 241                | local ip identity.....                             | 198      |
| domain-name.....                       | 241                | local ip network.....                              | 198      |
| ipsec identity.....                    | 244                | max-interfaces.....                                | 198      |
| organization.....                      | 245                | peer ip identity.....                              | 198      |
| IPsec IKE policy commands              |                    | pfs group.....                                     | 198      |
| aggressive-mode.....                   | 172, 204           | transform.....                                     | 198      |
| authentication.....                    | 172, 241, 246, 253 | tunnel mtu.....                                    | 198      |
| encryption.....                        | 172                | IPsec tunnel profiles.....                         | 197      |
| group.....                             | 172                | IPv6                                               |          |
| hash.....                              | 172                | license.....                                       | 92       |
| ip address virtual-router.....         | 204                | monitoring.....                                    | 109, 138 |
| ipsec ike-policy-rule.....             | 245, 250, 253      |                                                    |          |
| ipsec isakmp-policy-rule.....          | 245, 250           | <b>J</b>                                           |          |
| lifetime.....                          | 175                | J-Flow commands                                    |          |
| IPsec security parameters              |                    | clear ip flow stats.....                           | 125      |
| in relation to IPsec interface.....    | 149                | ip flow statistics.....                            | 118      |
| inbound SAs.....                       | 148, 151           | ip flow-cache entries.....                         | 119      |
| lifetime.....                          | 148                | ip flow-cache timeout active.....                  | 119      |
| lifetime for user SAs.....             | 151                | ip flow-cache timeout inactive.....                | 119      |
| manual versus signaled.....            | 149                | ip flow-export.....                                | 119      |
| negotiating transforms.....            | 153                | ip flow-sampling-mode packet-interval.....         | 119      |
| operational VR.....                    | 148                | ip route-cache flow sampled.....                   | 118      |
| outbound SAs.....                      | 148, 151           | J-Flow statistics, clearing.....                   | 125      |
| per IPsec policy type.....             | 150                |                                                    |          |
| perfect forward secrecy (PFS).....     | 148, 151           | <b>K</b>                                           |          |
| transform combinations supported.....  | 155                | keepalive messages, NAT-T.....                     | 311      |
| transform sets.....                    | 148, 153           | key-string command.....                            | 255      |
| transforms supported.....              | 154                | keys, public                                       |          |
| transport VR.....                      | 148, 150           | displaying on router.....                          | 256      |
| IPsec transport local profile commands |                    | format of.....                                     | 241      |
| pre-share.....                         | 322                | obtaining without digital certificates.....        | 240, 252 |
| pre-share-masked.....                  | 322                |                                                    |          |
| IPsec transport profile commands.....  | 322                | <b>L</b>                                           |          |
| application.....                       | 322                | L2C (Layer 2 Control) <i>See</i> ANCP (Access Node |          |
| ipsec transport profile.....           | 322                | Control Protocol)                                  |          |
| lifetime.....                          | 322                | L2F, reassembly of tunnel packets.....             | 298      |



|                                            |          |
|--------------------------------------------|----------|
| L2TP (Layer 2 Tunneling Protocol)          |          |
| reassembly of tunnel packets.....          | 298      |
| l2tp commands                              |          |
| l2tp destination profile.....              | 316      |
| l2tp ignore-receive-data-sequencing.....   | 299      |
| L2TP RWS (receive window size)             |          |
| show l2tp destination profile command..... | 342      |
| L2TP with IPsec.....                       | 193, 303 |
| client software supported.....             | 308      |
| compatibility.....                         | 308      |
| configuring                                |          |
| client PC.....                             | 315      |
| E Series router.....                       | 315, 321 |
| IPsec transport profiles.....              | 322      |
| L2TP destination profiles.....             | 316, 321 |
| single-shot tunnels.....                   | 319      |
| control and data frames.....               | 308      |
| group preshared key.....                   | 308      |
| how it works.....                          | 306      |
| LNS change of port.....                    | 308      |
| monitoring.....                            | 331      |
| NAT interactions.....                      | 308      |
| overview.....                              | 193, 304 |
| references.....                            | 305      |
| requirements.....                          | 308      |
| setting up secure connection.....          | 307      |
| tunnel creation.....                       | 304      |
| with PPP.....                              | 308      |
| license commands                           |          |
| license ipsec-tunnels .....                | 162      |
| license mobile-ip home-agent.....          | 354      |
| license nat.....                           | 92       |
| lifetime, IPsec.....                       | 151, 161 |
| limiting translation entries.....          | 93       |
| loopback interfaces.....                   | 266, 282 |

## M

|                              |        |
|------------------------------|--------|
| manual IPsec interfaces..... | 149    |
| manuals                      |        |
| comments on.....             | xxiii  |
| map tag, route map.....      | 4      |
| match commands.....          | 14     |
| and route maps.....          | 4      |
| match as-paths.....          | 14     |
| match community.....         | 14     |
| match distance.....          | 14     |
| match extcommunity.....      | 14     |
| match ip address.....        | 14     |
| match ip next-hop.....       | 14, 48 |

|                                                  |          |
|--------------------------------------------------|----------|
| match ipv6 address.....                          | 14       |
| match ipv6 next-hop.....                         | 14       |
| match ipv6 route-source.....                     | 14       |
| match level.....                                 | 14       |
| match metric.....                                | 14       |
| match metric-type.....                           | 14       |
| match policy-list.....                           | 14       |
| match route-type.....                            | 14       |
| match tag.....                                   | 14       |
| match-set summary prefix-tree.....               | 14, 48   |
| max-interfaces command.....                      | 198, 212 |
| Mobile IP home agent                             |          |
| AAA.....                                         | 347      |
| agent discovery.....                             | 347      |
| authentication.....                              | 347      |
| clearing the binding details from binding        |          |
| table.....                                       | 359      |
| configuration prerequisites.....                 | 352      |
| configuring.....                                 | 353      |
| home address assignment.....                     | 347      |
| licensing.....                                   | 354      |
| monitoring.....                                  | 361      |
| monitoring the binding table information.....    | 361      |
| monitoring the configuration information.....    | 362      |
| monitoring the configuration of all or specified |          |
| mobile nodes or domain users.....                | 363      |
| monitoring the interface profile name.....       | 364      |
| monitoring the license key.....                  | 368      |
| monitoring the protocol statistics.....          | 366      |
| monitoring the security associations configured  |          |
| for all foreign agents.....                      | 365      |
| monitoring the security associations configured  |          |
| on all mobile node hosts.....                    | 366      |
| overview.....                                    | 347      |
| platform considerations.....                     | 351      |
| references.....                                  | 351      |
| registration.....                                | 347      |
| routing and forwarding.....                      | 350      |
| security associations                            |          |
| for foreign agents.....                          | 358      |
| for mobile nodes.....                            | 356      |
| subscriber management.....                       | 350      |
| MTU (maximum transmission unit)                  |          |
| IP tunnels.....                                  | 268      |

## N

|                                   |    |
|-----------------------------------|----|
| NAT (Network Address Translation) |    |
| access list rules, creating.....  | 95 |
| address pools, defining.....      | 96 |

|                                                         |          |
|---------------------------------------------------------|----------|
| address translation                                     |          |
| dynamic.....                                            | 90       |
| inside source.....                                      | 89       |
| outside source.....                                     | 90       |
| static.....                                             | 90       |
| bidirectional.....                                      | 88       |
| configuration examples.....                             | 101      |
| configuration types.....                                | 87       |
| configuring.....                                        | 85       |
| dynamic address translation, defining.....              | 95       |
| dynamic inside source translation,                      |          |
| creating.....                                           | 97       |
| dynamic outside source translation,                     |          |
| creating.....                                           | 97       |
| interfaces, specifying inside and outside.....          | 93       |
| license.....                                            | 92       |
| monitoring.....                                         | 109      |
| NAT-T .....                                             | 311      |
| overview.....                                           | 85       |
| passthrough mode.....                                   | 310      |
| references.....                                         | 86       |
| static address translation, defining.....               | 93       |
| terms.....                                              | 88       |
| inside global address.....                              | 88       |
| inside local address.....                               | 88       |
| outside global address.....                             | 88       |
| outside local address.....                              | 88       |
| timeouts, defining.....                                 | 99       |
| translation entries, limiting.....                      | 93       |
| translation rules, defining.....                        | 97       |
| translations, clearing.....                             | 100      |
| NAT-T (Network Address Translation Traversal)           |          |
| keepalive messages.....                                 | 311      |
| overview.....                                           | 311      |
| show ike sa command.....                                | 335      |
| show ipsec ike-sa command.....                          | 335      |
| show ipsec option command.....                          | 337      |
| tasks.....                                              | 311      |
| UDP encapsulation.....                                  | 311      |
| UDP statistics.....                                     | 312      |
| neighbor commands                                       |          |
| neighbor filter-list.....                               | 36       |
| Network Address Translation Traversal. <i>See</i> NAT-T |          |
| Network Address Translation. <i>See</i> NAT             |          |
| next-hop routers                                        |          |
| setting/redistributing routes for.....                  | 14, 17   |
| notice icons.....                                       | xxi      |
| null interface.....                                     | 42       |
| <b>O</b>                                                |          |
| OSPF (Open Shortest Path First)                         |          |
| clearing IP routing table.....                          | 62       |
| reinstalling routes in IP routing table.....            | 62       |
| <b>P</b>                                                |          |
| peer public keys                                        |          |
| displaying on router.....                               | 256      |
| obtaining without digital certificates.....             | 240, 252 |
| perfect forward secrecy.....                            | 151      |
| platform considerations                                 |          |
| routing policy.....                                     | 4        |
| preventing recursive tunnels.....                       | 270      |
| public keys                                             |          |
| displaying on router.....                               | 256      |
| format of.....                                          | 241      |
| obtaining without digital certificates.....             | 240, 252 |
| <b>Q</b>                                                |          |
| qos-adaptive-mode command.....                          | 218, 219 |
| <b>R</b>                                                |          |
| recursive tunnels, preventing .....                     | 270      |
| redistribute command.....                               | 37       |
| redistribution policy (IP), monitoring.....             | 70, 73   |
| redundancy.....                                         | 267      |
| tunnel server.....                                      | 267, 283 |
| RIP (Routing Information Protocol)                      |          |
| clearing IP routing table.....                          | 62       |
| reinstalling routes in IP routing table.....            | 62       |
| route maps                                              |          |
| and routing policy.....                                 | 4        |
| deny keyword.....                                       | 4        |
| instance.....                                           | 4        |
| IP, monitoring.....                                     | 84       |
| map tag.....                                            | 4        |
| match clause.....                                       | 4        |
| permit keyword.....                                     | 4        |
| sequence number.....                                    | 4        |
| set clause.....                                         | 4        |
| routing policy                                          |          |
| configuring.....                                        | 3        |
| managing the routing table.....                         | 62       |
| monitoring.....                                         | 65       |
| overview.....                                           | 3        |
| platform considerations.....                            | 4        |
| route maps.....                                         | 4        |

|                      |        |
|----------------------|--------|
| routing policy, BGP  |        |
| access lists.....    | 30     |
| monitoring.....      | 65     |
| route maps.....      | 4      |
| routing table        |        |
| managing the IP..... | 62     |
| routing, IP.....     | 115    |
| monitoring.....      | 74, 77 |
| <i>See also</i> IP   |        |

## S

|                                           |               |
|-------------------------------------------|---------------|
| secure IP interfaces.....                 | 146           |
| security parameters.....                  | 148           |
| sequence number, route map.....           | 4             |
| Service Modules. <i>See</i> SMS           |               |
| set commands.....                         | 17            |
| and route maps.....                       | 4             |
| set automatic-tag.....                    | 17            |
| set comm-list delete.....                 | 17            |
| set community.....                        | 17            |
| set dampening.....                        | 17            |
| set distance.....                         | 17            |
| set extcommunity.....                     | 17            |
| set ip next-hop.....                      | 17            |
| set ipv6 next-hop.....                    | 17            |
| set level.....                            | 17            |
| set local-preference.....                 | 17            |
| set metric.....                           | 17            |
| set metric-type.....                      | 17            |
| set origin.....                           | 17            |
| set route-class.....                      | 17            |
| set route-type.....                       | 17            |
| set tag.....                              | 17            |
| set weight.....                           | 17            |
| shared tunnel-server ports.....           | 266, 282, 298 |
| show access-list command.....             | 65, 66        |
| show adjustment-factor command.....       | 227           |
| show bfd session command.....             | 139           |
| show dvmrp commands                       |               |
| show dvmrp destination profile.....       | 286           |
| show dvmrp tunnel.....                    | 272, 287, 328 |
| show dvmrp tunnel summary.....            | 272, 287      |
| show gre commands                         |               |
| show gre destination profile.....         | 290           |
| show gre tunnel.....                      | 272, 292, 328 |
| show gre tunnel summary.....              | 272, 292      |
| show ike commands                         |               |
| show ike policy-rule.....                 | 184           |
| show ike sa.....                          | 184, 335      |
| show ip commands                          |               |
| show ip as-path-access-list.....          | 65, 67        |
| show ip cache flow.....                   | 126           |
| show ip cache flow aggregation.....       | 126           |
| show ip community-list.....               | 68            |
| show ip protocols.....                    | 70            |
| show ip redistribute.....                 | 73            |
| show ip route.....                        | 74            |
| show ip route slot.....                   | 77            |
| show ip static.....                       | 78            |
| show ip tunnel reassembly statistics..... | 301           |
| show ip flow sampling command.....        | 126, 130      |
| show ip mobile commands                   |               |
| show ip mobile binding.....               | 361           |
| show ip mobile home-agent.....            | 362           |
| show ip mobile host.....                  | 363           |
| show ip mobile profile.....               | 364           |
| show ip mobile secure foreign-agent.....  | 365           |
| show ip mobile secure host.....           | 366           |
| show ip mobile traffic.....               | 366           |
| show license mobile-ip home-agent.....    | 368           |
| show ip nat commands                      |               |
| show ip nat inside rule.....              | 109           |
| show ip nat outside rule.....             | 109           |
| show ip nat statistics.....               | 109           |
| show ip nat translations.....             | 109           |
| show ipsec commands                       |               |
| show ike certificates.....                | 256           |
| show ike configuration.....               | 256           |
| show ike identity.....                    | 256           |
| show ipsec ca identity.....               | 256           |
| show ipsec certificates.....              | 256           |
| show ipsec identity.....                  | 256           |
| show ipsec ike-configuration.....         | 256           |
| show ipsec ike-policy-rule.....           | 184           |
| show ipsec ike-sa.....                    | 184, 335      |
| show ipsec key mypubkey rsa.....          | 256           |
| show ipsec key pubkey-chain rsa.....      | 256           |
| show ipsec lifetime.....                  | 184           |
| show ipsec local-endpoint .....           | 184           |
| show ipsec option.....                    | 184, 337      |
| show ipsec transform-set.....             | 184           |
| show ipsec tunnel detail.....             | 184           |
| show ipsec tunnel summary.....            | 184           |
| show ipsec tunnel virtual-router.....     | 184           |
| show license ipsec-tunnels.....           | 184           |

|                                              |              |                                  |               |
|----------------------------------------------|--------------|----------------------------------|---------------|
| show ipsec transport commands                |              | tunnel local-identity.....       | 167           |
| show ipsec transport interface.....          | 337          | tunnel mtu.....                  | 167           |
| show ipsec transport interface summary.....  | 337          | tunnel peer-identity.....        | 167           |
| show ipsec transport profile.....            | 337          | tunnel pfs group.....            | 167           |
| show ipv6 commands                           |              | tunnel session-key-inbound.....  | 167           |
| show license nat.....                        | 109          | tunnel session-key-outbound..... | 167           |
| show l2c commands                            |              | tunnel signaling.....            | 167           |
| show l2c.....                                | 225          | tunnel source.....               | 167           |
| show l2c label.....                          | 225          | tunnel transform set.....        | 167           |
| show l2c neighbor.....                       | 225          | tunnel-server ports              |               |
| show l2c statistics.....                     | 225          | shared.....                      | 266, 282, 298 |
| show route-map command.....                  | 84           | tunnels, IP                      |               |
| single-shot tunnels                          |              | DVMRP.....                       | 279           |
| configuring.....                             | 319          | DVMRP (IP in IP).....            | 266           |
| handling timeout periods.....                | 315          | dynamic.....                     | 279           |
| overview.....                                | 314          | endpoints.....                   | 265           |
| SMs (Service modules)                        |              | GRE.....                         | 279           |
| installing.....                              | 86, 266, 282 | reassembling tunnel packets..... | 297           |
| monitoring parameters.....                   | 272          | shared tunnel-server ports.....  | 266, 282, 298 |
| redundancy.....                              | 267, 283     | static.....                      | 265           |
| source, tunnel.....                          | 265          | tunnels, IPsec monitoring        |               |
| static routes.....                           | 272          | DVMRP/IPsec.....                 | 331           |
| monitoring.....                              | 78           | GRE/IPsec.....                   | 331           |
| static tunnels.....                          | 265          | L2TP/IPsec.....                  | 331           |
| statistics, tunnel reassembly                |              | tunnels, single-shot             |               |
| displaying.....                              | 300          | configuring.....                 | 319           |
| setting baseline for.....                    | 300          | handling timeout periods.....    | 319           |
| subscriber management                        |              | overview.....                    | 319           |
| Mobile IP home agent.....                    | 350          |                                  |               |
| support, technical See technical support     |              |                                  |               |
|                                              |              | <b>U</b>                         |               |
| <b>T</b>                                     |              | UDP (User Datagram Protocol)     |               |
| table-map command                            |              | encapsulation for NAT-T.....     | 311           |
| IP.....                                      | 41           | statistics for NAT-T.....        | 311           |
| technical support                            |              | updates, BGP                     |               |
| contacting JTAC.....                         | xxiv         | AS-path filters.....             | 28            |
| text and syntax conventions.....             | xxii         |                                  |               |
| timeout periods for single-shot tunnels..... | 315          | <b>X</b>                         |               |
| transform sets, IPsec.....                   | 153          | X.509v3 certificates.....        | 235           |
| transport network.....                       | 272          |                                  |               |
| tunnel commands, IP                          |              |                                  |               |
| tunnel checksum.....                         | 268          |                                  |               |
| tunnel destination.....                      | 268          |                                  |               |
| tunnel mtu.....                              | 268          |                                  |               |
| tunnel source.....                           | 268          |                                  |               |
| tunnel commands, IPsec                       |              |                                  |               |
| tunnel destination.....                      | 167          |                                  |               |
| tunnel destination backup.....               | 172          |                                  |               |
| tunnel lifetime.....                         | 167          |                                  |               |