



JunosE™ Software for E Series™ Broadband Services Routers

Multicast Routing Configuration Guide

Release
12.3.x



Published: 2011-10-04

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

JunosE™ Software for E Series™ Broadband Services Routers Multicast Routing Configuration Guide
Release 12.3.x
Copyright © 2011, Juniper Networks, Inc.
All rights reserved.

Revision History
October 2011—FRS JunosE 12.3.x

The information in this document is current as of the date listed in the revision history.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Abbreviated Table of Contents

	About the Documentation	xvii
Part 1	Internet Protocol Version 4	
Chapter 1	Configuring IPv4 Multicast	3
Chapter 2	Configuring IGMP	45
Chapter 3	Configuring PIM for IPv4 Multicast	81
Chapter 4	Configuring DVMRP	125
Part 2	Internet Protocol Version 6	
Chapter 5	Configuring IPv6 Multicast	145
Chapter 6	Monitoring IPv6 Multicast	175
Chapter 7	Configuring MLD and MLD Proxy	219
Chapter 8	Monitoring MLD and MLD Proxy	241
Chapter 9	Configuring PIM for IPv6 Multicast	259
Part 3	Index	
	Index	287

Table of Contents

	About the Documentation	xvii
	E Series and JunosE Documentation and Release Notes	xvii
	Audience	xvii
	E Series and JunosE Text and Syntax Conventions	xvii
	Obtaining Documentation	xix
	Documentation Feedback	xix
	Requesting Technical Support	xix
	Self-Help Online Tools and Resources	xx
	Opening a Case with JTAC	xx
Part 1	Internet Protocol Version 4	
Chapter 1	Configuring IPv4 Multicast	3
	IPv4 Multicast Overview	3
	Reverse-Path Forwarding	4
	Multicast Packet Forwarding	5
	Platform Considerations	5
	References	6
	Before You Begin	6
	Configuring the Switch Fabric Bandwidth	6
	Enabling IP Multicast	6
	Defining Static Routes for Reverse-Path Forwarding	7
	Displaying Available Routes for Reverse-Path Forwarding	7
	Enabling and Disabling RPF Checks	9
	Using Unicast Routes for RPF	9
	Defining Permanent IP Multicast Forwarding Entries	10
	Defining a Multicast Bandwidth Map	10
	Using the Autosense Mechanism	11
	How Adaptive Mode Works	11
	Multicast Bandwidth Map Example	13
	Configuring Multicast QoS Adjustment	15
	Multicast OIF Mapping Case	15
	Multicast Traffic Receipt Without Forwarding	16
	Activating Multicast QoS Adjustment Functions	17
	Configuring Hardware Multicast Packet Replication	17
	Supported Modules and Encapsulations	20
	Relationship with OIF Mapping	21
	Hardware Multicast Packet Replication Considerations	21
	Configuring Hardware Multicast Packet Replication	22
	Configuring Hardware Multicast Packet Replication with OIF-Mapping	24

	Monitoring Hardware Multicast Packet Replication	24
	Port Statistics	24
	IP and VLAN Statistics	25
	IGMP Statistics	25
	Blocking and Limiting Multicast Traffic	25
	Blocking Mroutes	25
	Limiting Interface Admission Bandwidth	26
	Enabling Interface Admission Bandwidth Limitation	26
	OIF Interface Reevaluation Example	27
	Creating Mroute Port Limits	27
	Limiting Port Admission Bandwidth	28
	Enabling Port Admission Bandwidth Control	28
	OIF Port Reevaluation Example	29
	Deleting Multicast Forwarding Entries	30
	Monitoring IP Multicast Settings	30
	Support for Multicast Router Information	41
	BGP Multicasting	41
	Investigating Multicast Routes	42
Chapter 2	Configuring IGMP	45
	IGMP Overview	46
	Group Membership Queries	46
	Group Membership Reports	47
	Leave Group Membership Messages	47
	Platform Considerations	47
	References	48
	Before You Begin	48
	Configuring Static and Dynamic IGMP Interfaces	48
	Enabling IGMP on an Interface	50
	Configuring IGMP Settings for an Interface	51
	Specifying Multicast Groups	54
	Assigning a Multicast Group to an Interface	55
	Configuring Group Outgoing Interface Mapping	55
	Configuring Access Node Control Protocol for IGMP	56
	Configuring SSM Mapping	56
	Limiting the Number of Accepted IGMP Groups	57
	Including and Excluding Traffic	59
	Configuring Explicit Host Tracking	60
	Accepting IGMP Reports from Remote Subnetworks	61
	Disabling and Removing IGMP	62
	Monitoring IGMP	63
	IGMP Proxy Overview	73
	Configuring IGMP Proxy	74
	Establishing the IGMP Proxy Baseline	76
	Monitoring IGMP Proxy	76

Chapter 3	Configuring PIM for IPv4 Multicast	81
	Overview	82
	PIM Dense Mode	82
	Overriding Prunes	83
	Preventing Duplication	83
	PIM Sparse Mode	84
	Joining Groups	86
	Timers	86
	PIM Sparse Mode Bootstrap Router	86
	PIM Sparse-Dense Mode	87
	PIM Source-Specific Multicast	87
	Platform Considerations	88
	References	88
	Before You Begin	89
	Enabling PIM on a VR	89
	Disabling PIM on a VR	89
	Enabling PIM on an Interface	90
	Setting a Priority to Determine the Designated Router	90
	Configuring the PIM Join/Prune Message Interval	91
	Configuring an RP Router for PIM Sparse Mode and PIM Sparse-Dense Mode	92
	Configuring a Static RP Router	92
	Configuring an Auto-RP Router for PIM Sparse Mode	92
	Configuring an Auto-RP Router for PIM Sparse-Dense Mode	93
	Configuring BSR and RP Candidates for PIM Sparse Mode	94
	Migrating to BSR from Auto-RP	96
	Switching to an SPT for PIM Sparse Mode	96
	Creating Multicast VPNs	96
	Creating Multicast VPNs Using the Default MDT	97
	Multicast VPN Configuration Example	97
	Creating Multicast VPNs Using the Data MDT	100
	Data MDT Sources	101
	Data MDT Receivers	101
	Establishing a Data MDT Using ASM or SSM	102
	Configuring the Default MDT	102
	Configuring Data MDTs	104
	Using PIM Sparse Mode Join Filters	107
	Configuring PIM SSM	108
	Configuring the BFD Protocol for PIM	109
	Removing PIM	110
	Resetting PIM Counters and Mappings	110
	Monitoring PIM	111
	Monitoring PIM Events	111
	Monitoring PIM Settings	112
Chapter 4	Configuring DVMRP	125
	DVMRP Overview	126
	Identifying Neighbors	126
	Advertising Routes	126
	DVMRP Platform Considerations	127

	DVMRP References	128
	Before You Begin	128
	Enabling DVMRP on a Virtual Router	128
	Activating DVMRP on an Interface	129
	Configuring DVMRP Limits	129
	DVMRP Report Filter Overview	130
	Configuring DVMRP Summary Addresses Overview	131
	Changing the Metric for a Route	132
	Importing Routes from Other Protocols	132
	Specifying Routes to Be Advertised	133
	Preventing Dynamic Route Distribution	134
	Exchange DVMRP Unicast Routes Overview	134
	Enabling, Disabling, and Removing DVMRP	135
	Clearing DVMRP Routes	136
	Configuring DVMRP Tunnels	136
	Monitoring DVMRP	136
Part 2	Internet Protocol Version 6	
Chapter 5	Configuring IPv6 Multicast	145
	IPv6 Multicast Overview	145
	Reverse-Path Forwarding	146
	Multicast Packet Forwarding	147
	IPv6 Multicast Platform Considerations	147
	IPv6 Multicast References	148
	Before You Begin	148
	Switch Fabric Bandwidth Configuration	148
	Configuring IPv6 Multicast Attributes	149
	Enabling IPv6 Multicast	149
	Defining IPv6 Static Routes for Reverse-Path Forwarding	149
	Enabling and Disabling RPF Checks for IPv6	149
	Specifying Unicast Routes for RPF in IPv6	150
	Defining Permanent IPv6 Multicast Forwarding Entries	150
	IPv6 Multicast Bandwidth Map Overview	151
	Autosense Mechanism Overview	152
	Adaptive Mode Mechanism Overview	153
	Example: Configuring an IPv6 Multicast Bandwidth Map	155
	Multicast QoS Adjustment for IPv6	157
	Multicast OIF Mapping Case for IPv6	158
	Multicast Traffic Receipt Without Forwarding for IPv6	159
	Activating IPv6 Multicast QoS Adjustment Functions	159

	IPv6 Hardware Multicast Packet Replication Overview	160
	Supported Modules and Encapsulations	163
	Relationship with OIF Mapping	163
	IPv6 Hardware Multicast Packet Replication Considerations	164
	Configuring IPv6 Hardware Multicast Packet Replication	165
	Interface-Level Multicast Traffic Configuration for IPv6	167
	Blocking IPv6 Mroutes	167
	Interface-Level Admission Bandwidth Limits for IPv6 Overview	167
	Enabling Interface-Level Admission Bandwidth Limitation for IPv6	168
	OIF Interface Reevaluation for IPv6	169
	Port-Level Multicast Traffic Configuration for IPv6	170
	Creating IPv6 Mroute Port Limits	170
	Port-Level Admission Bandwidth Limits for IPv6 Overview	170
	Enabling Port-Level Admission Bandwidth Limitation for IPv6	171
	OIF Port Reevaluation for IPv6	172
	Deleting IPv6 Multicast Forwarding Entries	172
	BGP Multicasting	173
Chapter 6	Monitoring IPv6 Multicast	175
	Monitoring Available IPv6 Routes for Reverse-Path Forwarding	175
	Monitoring IPv6 Hardware Multicast Packet Replication	176
	Monitoring Port Statistics	177
	Monitoring VLAN Statistics	182
	Monitoring IPv6 Statistics	184
	Monitoring MLD Statistics	198
	Monitoring IPv6 Multicast Forwarding Entries	201
	Monitoring Active IPv6 Multicast Routes	204
	Monitoring Multicast Routes on Virtual Router Ports	207
	Monitoring IPv6 Multicast Entries in a Source or Group	208
	Monitoring Join Interface Details when IPv6 OIF Mapping is Configured	209
	Monitoring IPv6 Multicast Statistics	212
	Monitoring Summary Information of IPv6 Multicast Routes	214
	Monitoring IPv6 Multicast Protocols Enabled on the Router	216
	Monitoring Summary Information of IPv6 Multicast Protocols Enabled on the Router	217
	Monitoring IPv6 Multicast Status on a Virtual Router	218
Chapter 7	Configuring MLD and MLD Proxy	219
	MLD Overview	219
	Multicast Listener Queries	220
	Multicast Listener Reports	221
	Multicast Listener Done Messages	221
	MLD Platform Considerations	221
	MLD References	222
	Static and Dynamic MLD Interfaces	222
	Enabling MLD on an Interface	223
	Configuring MLD Settings on an Interface	224
	Configuring Multicast Groups for MLD	226
	Specifying MLD Multicast Groups	227
	Assigning an MLD Multicast Group to an Interface	228

	Configuring MLD Group Outgoing Interface Mapping	228
	MLD SSM Mapping Overview	230
	Overview of Limiting the Number of Accepted MLD Groups	230
	MLD Traffic Overview	231
	MLD Explicit Host Tracking Overview	231
	Configuring MLD Attributes	233
	Configuring MLD SSM Mapping	233
	Limiting the Number of Accepted MLD Groups	233
	Including and Excluding MLD Traffic	234
	Configuring MLD Explicit Host Tracking	235
	Disabling and Removing MLD	235
	MLD Proxy Overview	236
	Configuring MLD Proxy	237
	Establishing the MLD Proxy Baseline	238
Chapter 8	Monitoring MLD and MLD Proxy	241
	Monitoring MLD Information on a Virtual Router	241
	Monitoring MLD Groups	242
	Monitoring MLD Interfaces	244
	Monitoring Summary Information for MLD Interfaces	248
	Monitoring MLD on Mapped Outgoing Interfaces	249
	Monitoring MLD on Outgoing Interfaces	249
	Monitoring MLD Membership for Multicast Groups	250
	Monitoring MLD Information for Mapped Outgoing Interfaces	252
	Monitoring MLD SSM Mapping	252
	Monitoring the Number of MLD Groups on a Port	253
	Monitoring MLD Proxy Parameters	254
	Monitoring MLD Proxy Groups	255
	Monitoring MLD Proxy Interfaces	256
Chapter 9	Configuring PIM for IPv6 Multicast	259
	Overview	259
	PIM Sparse Mode	260
	Joining Groups	260
	Timers	260
	PIM Sparse Mode Bootstrap Router	261
	PIM Source-Specific Multicast	261
	Platform Considerations	262
	References	262
	Before You Begin	263
	Enabling and Disabling PIM on a VR	263
	Enabling PIM on an Interface	264
	Setting a Priority to Determine the Designated Router	264
	Configuring the PIM Join/Prune Message Interval	265
	Configuring an RP Router for PIM Sparse Mode	266
	Configuring BSR and RP Candidates for PIM Sparse Mode	266
	Switching to an SPT for PIM Sparse Mode	268
	Configuring PIM Sparse Mode Remote Neighbors	268
	Using PIM Sparse Mode Join Filters	270
	Configuring PIM SSM	271

	Configuring the BFD Protocol for PIM	272
	Removing PIM	273
	Resetting PIM Counters and Mappings	274
	Monitoring PIM	274
	Monitoring PIM Events	275
	Monitoring PIM Settings	275
Part 3	Index	
	Index	287

List of Figures

Part 1	Internet Protocol Version 4	
Chapter 1	Configuring IPv4 Multicast	3
	Figure 1: Example of Adaptive IPv4 Multicast Bandwidth Detection	12
	Figure 2: Multicast OIF Mapping	16
	Figure 3: Multicast Traffic Receipt Without Forwarding	17
	Figure 4: Packet Flow Without Hardware Multicast Packet Replication	18
	Figure 5: Packet Flow with Hardware Multicast Packet Replication	19
Chapter 2	Configuring IGMP	45
	Figure 6: Static and Dynamic IGMP Interfaces	49
	Figure 7: Upstream and Downstream Interfaces	74
Chapter 3	Configuring PIM for IPv4 Multicast	81
	Figure 8: Source-Rooted Tree	82
	Figure 9: PIM Dense Mode Operation	83
	Figure 10: Detecting Duplication	84
	Figure 11: PIM Sparse Mode Operation	85
	Figure 12: Shared Tree Versus SPT	85
	Figure 13: Multicast VPNs	97
Part 2	Internet Protocol Version 6	
Chapter 5	Configuring IPv6 Multicast	145
	Figure 14: Example of Adaptive IPv6 Multicast Bandwidth Detection	153
	Figure 15: Multicast OIF Mapping	158
	Figure 16: Multicast Traffic Receipt Without Forwarding	159
	Figure 17: Packet Flow Without Hardware Multicast Packet Replication	161
	Figure 18: Packet Flow with Optimized Multicast Packet Replication	162
Chapter 7	Configuring MLD and MLD Proxy	219
	Figure 19: Static and Dynamic MLD Interfaces	222
	Figure 20: Upstream and Downstream Interfaces	237
Chapter 9	Configuring PIM for IPv6 Multicast	259
	Figure 21: Source-Rooted Tree	260
	Figure 22: Network on Which to Configure PIM SSM	271

List of Tables

	About the Documentation	xvii
	Table 1: Notice Icons	xviii
	Table 2: Text and Syntax Conventions	xviii
Part 1	Internet Protocol Version 4	
Chapter 1	Configuring IPv4 Multicast	3
	Table 3: Function of Multicast Protocols on a Router	4
	Table 4: Adaptive Mode Algorithm Values	13
Chapter 2	Configuring IGMP	45
	Table 5: IGMP Commands	49
Chapter 4	Configuring DVMRP	125
	Table 6: Sample Routing Table for a DVMRP Router	127
	Table 7: Sample DVMRP (S,G) Pair Table	127
Part 2	Internet Protocol Version 6	
Chapter 5	Configuring IPv6 Multicast	145
	Table 8: Function of Multicast Protocols on a Router	146
	Table 9: Adaptive Mode Algorithm Values	154
Chapter 6	Monitoring IPv6 Multicast	175
	Table 10: show ipv6 rpf-route Output Fields	176
	Table 11: show interfaces gigabitEthernet Output Fields	178
	Table 12: show vlan subinterface Output Fields	182
	Table 13: show ipv6 interface Output Fields	193
	Table 14: show ipv6 mld interface Output Fields	199
	Table 15: show ipv6 mroute Output Fields	202
	Table 16: show ipv6 mroute active and show ipv6 mroute summary active Output Fields	205
	Table 17: show mroute port count Output Fields	207
	Table 18: show ipv6 mroute count Output Fields	208
	Table 19: show ipv6 mroute oif-detail Output Fields	210
	Table 20: show ipv6 mroute statistics Output Fields	213
	Table 21: show ipv6 mroute summary Output Fields	215
	Table 22: show ipv6 multicast protocols Output Fields	216
	Table 23: show ipv6 multicast protocols brief Output Fields	217
Chapter 7	Configuring MLD and MLD Proxy	219
	Table 24: Static MLD Commands	223

Chapter 8	Monitoring MLD and MLD Proxy	241
	Table 25: show ipv6 mld Output Fields	242
	Table 26: show ipv6 mld groups Output Fields	244
	Table 27: show ipv6 mld interface Output Fields	246
	Table 28: show ipv6 mld interface brief Output Fields	248
	Table 29: show ipv6 mld mapped-oif Output Fields	249
	Table 30: show ipv6 mld oif-map Output Fields	250
	Table 31: show ipv6 mld membership Output Fields	251
	Table 32: show ipv6 mld oif-mapping Output Fields	252
	Table 33: show ipv6 mld ssm-mapping Output Fields	253
	Table 34: show multicast group limit Output Fields	253
	Table 35: show ipv6 mld-proxy Output Fields	254
	Table 36: show ipv6 mld-proxy groups Output Fields	255
	Table 37: show ipv6 mld-proxy interface Output Fields	256

About the Documentation

- E Series and JunosE Documentation and Release Notes on page xvii
- Audience on page xvii
- E Series and JunosE Text and Syntax Conventions on page xvii
- Obtaining Documentation on page xix
- Documentation Feedback on page xix
- Requesting Technical Support on page xix

E Series and JunosE Documentation and Release Notes

For a list of related JunosE documentation, see
<http://www.juniper.net/techpubs/software/index.html>.

If the information in the latest release notes differs from the information in the documentation, follow the *JunosE Release Notes*.

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at
<http://www.juniper.net/techpubs/>.

Audience

This guide is intended for experienced system and network specialists working with Juniper Networks E Series Broadband Services Routers in an Internet access environment.

E Series and JunosE Text and Syntax Conventions

Table 1 on page xviii defines notice icons used in this documentation.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.

Table 2 on page xviii defines text and syntax conventions that we use throughout the E Series and JunosE documentation.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents commands and keywords in text.	<ul style="list-style-type: none"> Issue the clock source command. Specify the keyword exp-msg.
Bold text like this	Represents text that the user must type.	host1(config)#traffic class low-loss1
Fixed-width text like this	Represents information as displayed on your terminal's screen.	host1#show ip ospf 2 Routing Process OSPF 2 with Router ID 5.5.0.250 Router is an Area Border Router (ABR)
<i>Italic text like this</i>	<ul style="list-style-type: none"> Emphasizes words. Identifies variables. Identifies chapter, appendix, and book names. 	<ul style="list-style-type: none"> There are two levels of access: <i>user</i> and <i>privileged</i>. <i>clusterId</i>, <i>ipAddress</i>. <i>Appendix A, System Specifications</i>
Plus sign (+) linking key names	Indicates that you must press two or more keys simultaneously.	Press Ctrl + b.
Syntax Conventions in the Command Reference Guide		
Plain text like this	Represents keywords.	terminal length
<i>Italic text like this</i>	Represents variables.	<i>mask</i> , <i>accessListName</i>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
(pipe symbol)	Represents a choice to select one keyword or variable to the left or to the right of this symbol. (The keyword or variable can be either optional or required.)	diagnostic line
[] (brackets)	Represent optional keywords or variables.	[internal external]
[]* (brackets and asterisk)	Represent optional keywords or variables that can be entered more than once.	[level1 level2 l1]*
{ } (braces)	Represent required keywords or variables.	{ permit deny } { in out } { clusterId ipAddress }

Obtaining Documentation

To obtain the most current version of all Juniper Networks technical documentation, see the Technical Documentation page on the Juniper Networks Web site at <http://www.juniper.net/>.

To download complete sets of technical documentation to create your own documentation CD-ROMs or DVD-ROMs, see the Portable Libraries page at

<http://www.juniper.net/techpubs/resources/index.html>

Copies of the Management Information Bases (MIBs) for a particular software release are available for download in the software image bundle from the Juniper Networks Web site at <http://www.juniper.net/>.

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation to better meet your needs. Send your comments to techpubs-comments@juniper.net, or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract,

or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf> .
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/> .
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/> .
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html> .

PART 1

Internet Protocol Version 4

- [Configuring IPv4 Multicast on page 3](#)
- [Configuring IGMP on page 45](#)
- [Configuring PIM for IPv4 Multicast on page 81](#)
- [Configuring DVMRP on page 125](#)

CHAPTER 1

Configuring IPv4 Multicast

IPv4 multicast enables a device to send packets to a group of hosts rather than to a list of individual hosts. This chapter describes how to configure IP multicast on the E Series router; it contains the following sections:

- [IPv4 Multicast Overview on page 3](#)
- [Platform Considerations on page 5](#)
- [References on page 6](#)
- [Before You Begin on page 6](#)
- [Configuring the Switch Fabric Bandwidth on page 6](#)
- [Enabling IP Multicast on page 6](#)
- [Defining Static Routes for Reverse-Path Forwarding on page 7](#)
- [Displaying Available Routes for Reverse-Path Forwarding on page 7](#)
- [Enabling and Disabling RPF Checks on page 9](#)
- [Using Unicast Routes for RPF on page 9](#)
- [Defining Permanent IP Multicast Forwarding Entries on page 10](#)
- [Defining a Multicast Bandwidth Map on page 10](#)
- [Configuring Multicast QoS Adjustment on page 15](#)
- [Activating Multicast QoS Adjustment Functions on page 17](#)
- [Configuring Hardware Multicast Packet Replication on page 17](#)
- [Blocking and Limiting Multicast Traffic on page 25](#)
- [Deleting Multicast Forwarding Entries on page 30](#)
- [Monitoring IP Multicast Settings on page 30](#)
- [BGP Multicasting on page 41](#)
- [Investigating Multicast Routes on page 42](#)

IPv4 Multicast Overview

IPv4 defines three types of addresses: *unicast*, *broadcast*, and *multicast*. Each type of address enables a device to send datagrams to selected recipients:

- A unicast address enables a device to send a datagram to a single recipient.

- A broadcast address enables a device to send a datagram to all hosts on a subnetwork.
- A multicast address enables a device to send a datagram to a specified set of hosts, known as a multicast group, in different subnetworks.

Multicast IP packets contain a class D address in the Destination Address fields of their headers. A class D address is the IP address of a multicast group. See [“Configuring IGMP” on page 45](#) and *JunosE IP, IPv6, and IGP Configuration Guide*, for information about class D addresses.

IP multicast improves network efficiency by enabling a host to transmit a datagram to a targeted group of receivers. For example, for a host to send a large video clip to a group of selected recipients would be time-consuming to unicast the datagram to each recipient individually. If the host broadcasts the video clip throughout the network, network resources are not available for other tasks. The host uses only the resources it needs when multicasting the datagram.

Routers use multicast routing algorithms to determine the best route and transmit multicast datagrams throughout the network. E Series routers support a number of IP multicast protocols on virtual routers (VRs). Each VR handles the interoperability of IP multicast protocols automatically. To start multicast operation on a VR, you access the context for that VR and configure the desired protocols on the selected interfaces. [Table 3 on page 4](#) describes the function of each protocol that the router supports.

Table 3: Function of Multicast Protocols on a Router

Protocol	Function
Internet Group Membership Protocol (IGMP)	Discovers hosts that belong to multicast group.
Protocol Independent Multicast Protocol (PIM)	Discovers other multicast routers to receive multicast packets.
Distance Vector Multicast Routing Protocol (DVMRP)	Routes multicast datagrams within autonomous systems.
BGP Multicasting Protocol	Routes multicast datagrams between autonomous systems.

The router supports up to 16,384 multicast forwarding entries (multicast routes) at any time.

Reverse-Path Forwarding

IP multicasting uses reverse path forwarding (RPF) to verify that a router receives a multicast packet on the correct incoming interface. The RPF algorithm enables a router to accept a multicast datagram only on the interface from which the router sends a unicast datagram to the source of the multicast datagram.

When the router receives a multicast datagram from a source for a group, the router verifies that the packet was received on the correct RPF interface. If the packet was not

received on the correct interface, the router discards the packet. Only packets received on the correct RPF interface are considered for forwarding to downstream receivers.

When operating in sparse-mode, the routers perform an RPF lookup to identify the upstream router from which to request the data and then send join messages for the multicast stream only to that router.

When operating in dense-mode, routers that have multiple paths to the source of the multicast stream initially receive the same stream on more than one interface. In this case, the routers perform an RPF lookup to identify multicast data streams that are not arriving on the best path and send prune messages to terminate these flows.

The RPF lookup need not always be towards the source of the multicast stream. The lookup is done towards the source only when the router is using a source-rooted tree to receive the multicast stream. If the router uses a shared tree instead, the RPF lookup is toward a rendezvous point and not toward the source of the multicast stream.

Multicast Packet Forwarding

Multicast packet forwarding is based on the source (S) of the multicast packet and the destination multicast group address (G). For each (S,G) pair, the router accepts multicast packets on an incoming interface (IIF), which satisfies the RPF check (RPF-IIF). The router drops packets received on IIFs other than the RPF-IIF and notifies the routing protocols that a packet was received on the wrong interface.

The router forwards packets received on the RPF-IIF to a list of outgoing interfaces (OIFs). The list of OIFs is determined by the exchange of routing information and local group membership information. The router maintains mappings of (S,G, IIF) to {OIF1, OIF2,...} in the multicast routing table.

You can enable two or more multicast protocols on an IIF. However, only one protocol can forward packets on that IIF. The protocol that forwards packets on an IIF owns that IIF. A multicast protocol that owns an IIF also owns the (S,G) entry in the multicast routing table.

Platform Considerations

For information about modules that support IP multicasting on the ERX7xx models, ERX14xx models, and the Juniper Networks ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support IP multicasting.

For information about modules that support IP multicasting on the Juniper Networks E120 and E320 Broadband Services Routers:

- See *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about the modules that support IP multicasting.

References

For more information about IP multicast, see the following resources:

- A “traceroute” Facility for IP Multicast—draft-ietf-idmr-traceroute-ipm-07.txt (January 2001 expiration)
- RFC 2858—Multiprotocol Extensions for BGP-4 (June 2000)
- RFC 2932—IPv4 Multicast Routing MIB (October 2000)
- RFC 3292—General Switch Management Protocol (GSMP) V3 (June 2002)



NOTE: IETF drafts are valid for only 6 months from the date of issuance. They must be considered as works in progress. Refer to the IETF Web site at <http://www.ietf.org> for the latest drafts.

Before You Begin

You can configure multicasting on IPv4 and IPv6 interfaces.

For information about configuring IP and IPv6 interfaces, see *JunosE IP, IPv6, and IGP Configuration Guide*.

For information about configuring multicast on IPv6 interfaces, see “[Configuring IPv6 Multicast](#)” on page 145.

Configuring the Switch Fabric Bandwidth

By default, the switch fabric for the Juniper Networks ERX1440, ERX310, E120, and E320 Broadband Services Routers uses a bandwidth weighting ratio of 15:2 for multicast-to-unicast weighted round robin (WRR). In the absence of strict-priority traffic, and when both unicast and multicast traffic compete for switch fabric bandwidth, the switch fabric allocates 15/17ths of the available bandwidth to multicast traffic and 2/17ths of the available bandwidth to unicast traffic.

You can use the **fabric weights** command to change the ratio for multicast-to-unicast traffic on the router switch fabric. For more information about the **fabric weights** command, see *JunosE System Basics Configuration Guide*.

Enabling IP Multicast

In this implementation, IP multicast works on virtual routers (VRs). By default, IP multicast is disabled on a VR. To enable IP multicast on a VR, access the context for a VR, and then issue the **ip multicast-routing** command.

ip multicast-routing

- Use to enable IP multicast routing on the VR.
- By default, IP multicast is disabled on the VR. In the disabled state, all multicast protocols are disabled, and the VR forwards no multicast packets.
- Example

```
host1(config)#ip multicast-routing
```
- Use the **no** version to disable IP multicast routing on the VR (the default).
- See ip multicast-routing.

Defining Static Routes for Reverse-Path Forwarding

Use the **ip rpf-route** command to define reverse-path forwarding (RPF) to verify that a router receives a multicast packet on the correct incoming interface.

ip rpf-route

- Use to customize static routes that the router may use for RPF.
- Specify the IP address and subnet mask of the destination network.
- Specify either a next-hop IP address or an interface type and specifier, such as atm 3/0. For details about interface types and specifiers, see Interface Types and Specifiers in *JunosE Command Reference Guide*.
- Optionally, specify the distance (number of hops) to the next-hop address.
- Optionally, specify a route's tag number to identify a particular route in the routing table.
- Example

```
host1(config)#ip rpf-route 11.1.0.0 255.255.0.0 atm4/1.1 56 tag 25093
```
- Use the **no** version to remove the static route.
- See ip rpf-route.

Displaying Available Routes for Reverse-Path Forwarding

Use the **show ip rpf-route** command to display all available routes, only the routes to a particular destination, or routes associated with a specific unicast protocol that the router can use for Reverse-Path Forwarding (RPF).

show ip rpf-route

- Use to display routes that the router can use for RPF.
- Specify the IP address and the network mask to view routes to a particular destination.
- Specify a unicast routing protocol to view routes associated with that protocol.
- Field descriptions

- Prefix—Value of the logical AND of the IP address of the destination network and the subnet address
- Length—Length of the subnet mask in bits
- Type—Protocol type for the interface
 - Connect—Subnet directly connected to the interface
 - Static—Static route
 - *protocol-name*—Route learned through the named protocol
- Next Hop—IP address of the next hop for this route
- Dist—Distance configured for this route
- Met—Learned or configured cost associated with this route
- Intf—Type of interface and interface specifier for the next hop. For details about interface types and specifiers, see *Interface Types and Specifiers in JunosE Command Reference Guide*.
- Example 1

```
host1#show ip rpf-route
```

```
Protocol/Route type codes:
```

```
I1- ISIS level 1, I2- ISIS level2,
I- route type intra, IA- route type inter, E- route type external,
i- metric type internal, e- metric type external,
O- OSPF, E1- external type 1, E2- external type2,
N1- NSSA external type1, N2- NSSA external type2
L- MPLS label, V- VR/VRF, *- indirect next-hop
```

Prefix/Length	Type	Next Hop	Dist/Met	Intf
-----	----	-----	-----	-----
10.10.0.112/32	Static	192.168.1.1	1/1	fastEthernet0/0
10.1.1.0/24	Connect	10.1.1.1	0/1	atm3/0.100
25.25.25.25/32	Connect	25.25.25.25	0/1	loopback0

- Example 2

```
host1#show ip rpf-route static
```

```
Protocol/Route type codes:
```

```
I1- ISIS level 1, I2- ISIS level2,
I- route type intra, IA- route type inter, E- route type external,
i- metric type internal, e- metric type external,
O- OSPF, E1- external type 1, E2- external type2,
N1- NSSA external type1, N2- NSSA external type2
L- MPLS label, V- VR/VRF, *- indirect next-hop
```

Prefix/Length	Type	Next Hop	Dist/Met	Intf
-----	----	-----	-----	-----
10.10.0.112/32	Static	192.168.1.1	1/1	fastEthernet0/0

- See show ip rpf-route.

Enabling and Disabling RPF Checks

By default, the router accepts multicast packets for each Source, Group (S,G) pair on an incoming interface (IIF), which satisfies the RPF check (RPF-IIF). When the router performs RPF checks, only the interface that first accepts traffic for an (S,G) pair accepts subsequent traffic for that pair. If traffic stops arriving on that interface and starts arriving on another interface, the router does not accept or forward the traffic.

Some network configurations require the router to accept traffic on any interface. To do so, you can disable the RPF check on a specified set of (S,G) pairs by issuing the **ip multicast-routing disable-rpf-check** command.

When you disable RPF checks, the router accepts multicast packets for (S,G) pairs on any incoming interface. When the router has added the new route to its multicast routing table, it then accepts multicast packets for these pairs on any interface in the virtual router and forwards them accordingly. Multicast routes established before you issue this command are not affected.

ip multicast-routing disable-rpf-check

- Use to disable RPF checks for specified (S,G) pairs.
- Specify a standard IP access list that defines the (S,G) pairs.
- Example


```
host1(config)#ip multicast-routing disable-rpf-check boston-list
```
- Use the **no** version to restore the default, in which the router performs RPF checks for all (S,G) pairs.
- See `ip multicast-routing disable-rpf-check`.

Using Unicast Routes for RPF

You can specify that IS-IS, OSPF, or RIP routes be available for RPF. Routes available for RPF appear in the multicast view of the routing table.

ip route-type

- Use to specify whether IS-IS, OSPF, or RIP routes are available only for unicast forwarding, only for multicast RPF checks, or for both.
- Use the **show ip rpf-routes** command to view the routes available for RPF.
- By default, IS-IS, OSPF, and RIP routes are available both for unicast forwarding and multicast reverse-path forwarding checks.
- Example


```
host1(config)#router ospf
host1(config-router)#ip route-type multicast
```

- There is no **no** version.
- See `ip route-type`.

Defining Permanent IP Multicast Forwarding Entries

An mroute is a multicast traffic flow (a (Source, Group) entry used for forwarding multicast traffic. By default, forwarding mroutes (with a valid RPF incoming interface) are timed out if data for them is not received for 210 seconds. However, you can specify an mroute as permanent by using the **ip multicast-routing permanent-mroute** command.

ip multicast-routing permanent-mroute

- Use to specify that any newly created mroutes that match the specified access-list do not time out.
- Using this command does not change existing mroutes.
- Permanent mroutes are removed if a topology change occurs that affects the mroute.
- Permanent mroutes may be removed due to certain protocol actions (for example, PIM sparse-mode switching from shared to shortest-path tree).
- Outgoing interface lists of permanent mroutes may change due to protocol actions.
- Example

```
host1(config)#ip multicast-routing permanent-mroute routes1
```

- Use the **no** version to prevent any new mroutes from becoming permanent. To remove existing permanent mroutes, use the **clear ip mroute** command.
- See `ip multicast-routing permanent-mroute`.

Defining a Multicast Bandwidth Map

Multicast interface-level admission control, port-level admission control, and QoS adjustment all use a single multicast bandwidth map. The multicast bandwidth map is a route map that uses the **set admission-bandwidth**, **set qos-bandwidth**, **set admission-bandwidth adaptive**, or **set qos-bandwidth adaptive** commands. The **adaptive** commands configure an autosense mechanism for measuring the multicast bandwidth.



NOTE: Even though you can include any of the preceding commands several times in a route map entry, only the last **admission-bandwidth** command or **qos-bandwidth** command in the bandwidth map is used. In other words, if you included the **set qos-bandwidth** command first and then the **set qos-bandwidth adaptive** command, the bandwidth map uses the **set qos-bandwidth adaptive** command.

Interface-level and port-level admission control is performed when an OIF on the interface or port is added to the mroute for a given (S,G) multicast data stream and the multicast

bandwidth map contains a **set admission-bandwidth** or **set admission-bandwidth adaptive** action for that (S,G).

QoS adjustment is performed on the joining interface when an OIF is added to the mroute for a given (S,G) data stream and the multicast bandwidth map contains a **set qos-bandwidth** or **set qos-bandwidth adaptive** action for that (S,G).

You can prioritize the traffic by configuring a priority value for the <S, G> data stream on a physical port by issuing the **set priority** command. Dynamic multicast admission control enables only prioritized groups to join the interface after the configured priority limit is reached on the physical port. The system records the priority when a new <S, G> entry is created. For more information, see [“Enabling Port Admission Bandwidth Control” on page 28](#).



NOTE: You can create a single route map with the **set admission-bandwidth** command, the **set qos-bandwidth** command, or both. However, creating an entry with only one of these **set** commands enables only that specific function for the matched address (that is, only multicast traffic admission control or only QoS adjustment). The same is true for the **adaptive** commands.

Using the Autosense Mechanism

Video bandwidth is typically considered to be a constant rate—2 Mbps for standard definition television (SDTV) and 10 Mbps for high definition television (HDTV). However, in reality, and depending on achievable video compression, the bit rate can vary. For example, HDTV streams (using MPEG4 or WM9 encoding) can vary between 6 Mbps (for low-action programs) to 10 Mbps (for a fast-paced, high-action programs). The autosense mechanism causes the bandwidth value, used for admission control and QoS adjustment, to be the actual measured rate of the stream. Using this feature to measure the actual bandwidth avoids the need to configure arbitrary bandwidth limits and enables a channel to be reassigned to a different (S, G) without requiring a bandwidth map to be changed.

How Adaptive Mode Works

You configure the auto-sense mechanism in the multicast bandwidth using the **set admission-bandwidth adaptive** command, **set qos-bandwidth adaptive** command, or both. For example:

```
host1(config)#route-map mcast-bandwidths permit 10
host1(config-route-map)#match ip address sdtv
host1(config-route-map)#set admission-bandwidth adaptive
host1(config-route-map)#set qos-bandwidth adaptive
host1(config-route-map)#end
```


In this example, any stream with an (S,G) that matches the sdtv access list performs adaptive bandwidth detection for admission control and QoS adjustment.

A rate measurement mechanism runs on the ingress line card that polls the forwarding controller (FC) to obtain statistics for each mroute. This mechanism then reports the

rate measurement to the SRP to update the bandwidth map. By computing the average bandwidth over a relatively short sampling period (T_1 ; 5 seconds), the measurement approximates the peak bandwidth of the multicast stream.

As an example, assume that a new mroute (S1, G1) is added to the interface controller (IC) at time t_0 .

Figure 1: Example of Adaptive IPv4 Multicast Bandwidth Detection

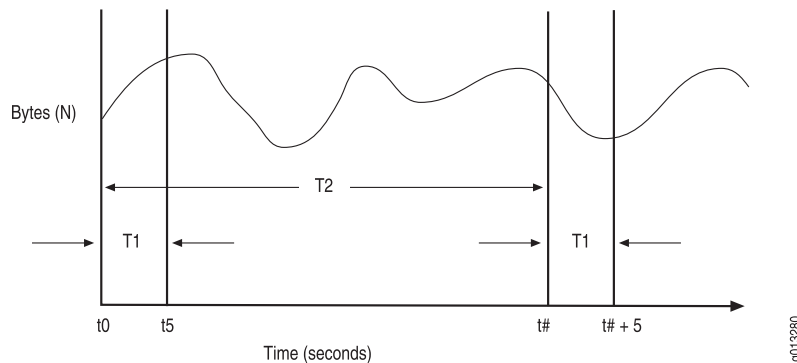

To calculate the measured bandwidth of a stream, the router uses the following equation:

$$R = (N_{t+5} - N_t) / 5$$

Where

R = Calculated bandwidth of the stream during each sampling interval

N_t = Bytes measured at the start of each sampling period (t seconds)

N_{t+5} = Bytes measured at the end of each sampling period ($t+5$ seconds)



NOTE: When the mroute is first installed in the FC (at $t = 0$), R_0 is undetermined. For multicast admission control no joins are admitted until the first bandwidth measurement is computed (that is, for admission control, R_0 is considered to be infinite). Similarly, no QoS adjustment occurs until the first bandwidth measurement is computed (that is, for QoS adjustment, R_0 is considered to be zero [0]).

Using the previous graph as a reference, the first bandwidth rate (R_1) and at time t_5 (N_5) and the bytes received values are subtracted and divided by the sampling period T_1 to yield the average rate. This process is repeated every sampling interval, T_2 , to yield rates R_1 , R_2 , R_3 , and so on.

The first two sampling interval calculations are as follows:

$$R_1 = (N_5 - N_0) / 5$$

$$R_2 = (N_{\# + 5} - N_{\#}) / 5$$

The router maintains a history of bandwidth measurements (H) for each mroute, up to a maximum of M measurements. The actual rate, R, reported to the SRP is the maximum rate measured in those H samples.

To minimize the IC to SRP traffic generated by the rate measurements, the IC reports a bandwidth change only when a newly computed rate (R#) differs from the current rate by a specified threshold. When R_s is computed at time $t = 5$ seconds, R is set to R_1 . A rate update occurs whenever a newly calculated rate (R) differs from R_1 by at least a threshold value (specified as a percentage, P) of the measured peak bandwidth. This calculation is as follows:

$R = R_t$, if and only if the absolute value of $(R - R_t) > P * R$.

Table 4 on page 13 lists values assigned to variables associated with this algorithm.

Table 4: Adaptive Mode Algorithm Values

Variable	Value	Units	Description
T1	5	Seconds	Sampling period; the time in which a sample is taken
T2	0	Seconds	Sampling interval; zero (0) seconds indicates continuous sampling
H	12	Samples	Number of history samples over which to compute measurement
M	12	Samples	Maximum number of samples maintained in history
P	1	Percent	Threshold value; percent difference by which a newly calculated rate must differ from the measured peak bandwidth before a rate update occurs

Multicast Bandwidth Map Example

The following example creates a multicast bandwidth map for both multicast traffic admission control and QoS adjustment:



NOTE: In this example, you can replace the **set admission-bandwidth** command and **set qos-bandwidth** command with their adaptive command counterparts.

1. Define a route-map using the **set admission-bandwidth** and **set qos-bandwidth** commands. You can optionally issue the **set priority** command.

```
host1(config)#route-map mcast-bandwidths permit 10
host1(config-route-map)#match ip address sdtv
host1(config-route-map)#set admission-bandwidth 2000000
host1(config-route-map)#set qos-bandwidth 2000000
host1(config-route-map)#set priority 100
host1(config-route-map)#route-map mcast-bandwidths permit 20
```

```

host1(config-route-map)#match ip address hdtv
host1(config-route-map)#set admission-bandwidth 10000000
host1(config-route-map)#set qos-bandwidth 10000000
host1(config-route-map)#set priority 200
host1(config-route-map)#end

```

2. Define the access list for use by the **match ip address** command to match (S,G) and (*,G) entries.

```

host1(config)#access-list sdtv permit ip host 31.0.0.1 232.0.0.0 0.0.0.255
host1(config)#access-list hdtv permit ip host 32.0.0.1 232.0.0.0 0.0.0.255
host1(config)#access-list hdtv permit ip host 32.0.0.2 232.0.0.0 0.0.0.255
host1(config-route-map)#end

```



NOTE: You can also define a prefix-list or a prefix-tree for use by the **match ip address** command to match (S,G) and (*,G) entries.

For additional information about configuring QoS adjustment, see [“Configuring Multicast QoS Adjustment” on page 15](#).

For additional information about configuring interface-level and port-level admission control, see [“Blocking and Limiting Multicast Traffic” on page 25](#).

For additional information about creating route maps, see *JunosE IP Services Configuration Guide*.

set admission-bandwidth

- Use to set a multicast bandwidth for admission control.
- Use the **adaptive** keyword to define the bandwidth as adaptive (automatically sensed).
- Example


```
host1(config-route-map)#set admission-bandwidth 2000000
```
- Use the **no** version to remove the set clause from a route map.
- See set admission-bandwidth.

set priority

- Use to configure a priority value for the <S, G> data stream on a physical port.
- Dynamic multicast admission control enables only prioritized groups to join the interface after the configured priority limit is reached on the physical port. The system records the priority when a new <S, G> entry is created.
- Example


```
host1(config-route-map)#set priority 100
```
- Use the **no** version to remove the priority value.
- See set priority.

set qos-bandwidth

- Use to set a multicast bandwidth for QoS adjustment.
- Use the **adaptive** keyword to define the bandwidth as adaptive (automatically sensed).
- Example


```
host1(config-route-map)#set qos-bandwidth 10000000
```
- Use the **no** version to remove the set clause from a route map.
- See set qos-bandwidth.

Configuring Multicast QoS Adjustment

When the router uses multicast OIF mapping, any multicast streams that a subscriber receives bypass any configured QoS treatment for that subscriber interface. The Multicast QoS adjust feature provides a way in which the router can account for this multicast traffic.



NOTE: For additional information about how to configure OIF mapping, see [“Configuring Group Outgoing Interface Mapping” on page 55](#).

The following sections provide two possible configuration cases for using multicast QoS adjustment.




NOTE: For additional information about QoS adjustment, see [IP Multicast Bandwidth Adjustment for QoS Overview](#).

Multicast OIF Mapping Case

Multicast OIF mapping enables the router to decrease the inefficiencies associated with replicating streams of multicast traffic. Using OIF maps, IGMP joins that the router receives on a subscriber interface can be mapped to a special interface for forwarding. This special interface can be on a different physical port or line module from that of the join interface.

Using this mapping function, the router can send a single copy of each multicast stream over the special interface and the access nodes are configured to perform any final replication to the subscribers and merge unicast and multicast data flows onto the subscriber interfaces as necessary. See [Figure 2 on page 16](#).

Figure 2: Multicast OIF Mapping

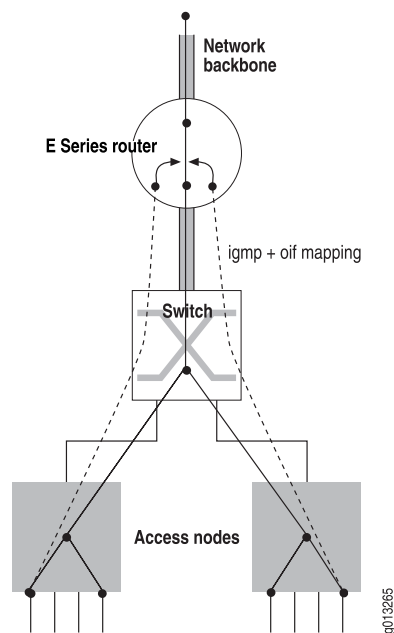

One disadvantage to using multicast OIF mapping is that the multicast traffic bypasses any QoS treatment that is applied to subscriber interfaces. Configuring QoS adjustment resolves this problem. (See Parameter Definition Attributes for QoS Administrators Overview for additional information about configuring QoS adjustment.) With QoS adjustment configured, when a subscriber requests to receive a multicast stream (or, more appropriately, when an OIF is added to the mroute), the router reduces the unicast QoS bandwidth applied to the subscriber interface (that is, the join interface) by the amount of bandwidth for that multicast stream.


Multicast Traffic Receipt Without Forwarding

In this case, the router is not given the responsibility of forwarding multicast streams. Instead, the service provider arranges for the router to receive the multicast streams so the router can detect the flow and perform QoS adjustment. An OIF map is installed that maps the traffic streams to a loopback interface configured for IGMP version passive. This means that when the traffic is received, a null mroute is installed (that is, an mroute with an empty OIF list) and the router applies the QoS adjustment to the join interface. See [Figure 3 on page 17](#).



NOTE: Ensure that PIM-SM (or any other upstream multicast protocol) is informed of the group (or source-group) interest.

Figure 3: Multicast Traffic Receipt Without Forwarding

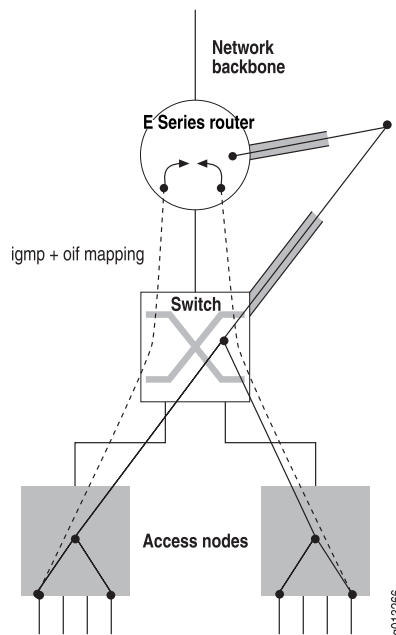

Activating Multicast QoS Adjustment Functions

The **ip multicast-routing bandwidth-map** command activates the specified bandwidth map. By activating the bandwidth map, this command also activates the multicast QoS adjustment function contained in the bandwidth map.



CAUTION: To activate multicast QoS adjustment, you must first create a bandwidth map. See [“Defining a Multicast Bandwidth Map”](#) on page 10 for details.

ip multicast-routing bandwidth-map

- Use to activate the QoS adjust function on the router.
- Example


```
host1(config)#ip multicast-routing bandwidth-map mcast-bandwidths
```
- Use the **no** version to disable the multicast QoS adjustment function on the router.
- See `ip multicast-routing bandwidth-map`.


Configuring Hardware Multicast Packet Replication

You can configure IPv4 multicast to replicate packets to optimized hardware on a logical port instead of using the forwarding controller (FC) on the router.

The bandwidth between the line module and the I/O module or IOA on the E Series router is limited. A high-density Ethernet module provides eight physical ports that can consume the bandwidth between the line module and the I/O module or IOA before providing enough traffic to support egress line rate for all of these ports.

Figure 4 on page 18 displays how multicast traffic is typically replicated on the line module. Each of these replicated packets is transmitted from the line module to the I/O module or IOA.

Figure 4: Packet Flow Without Hardware Multicast Packet Replication

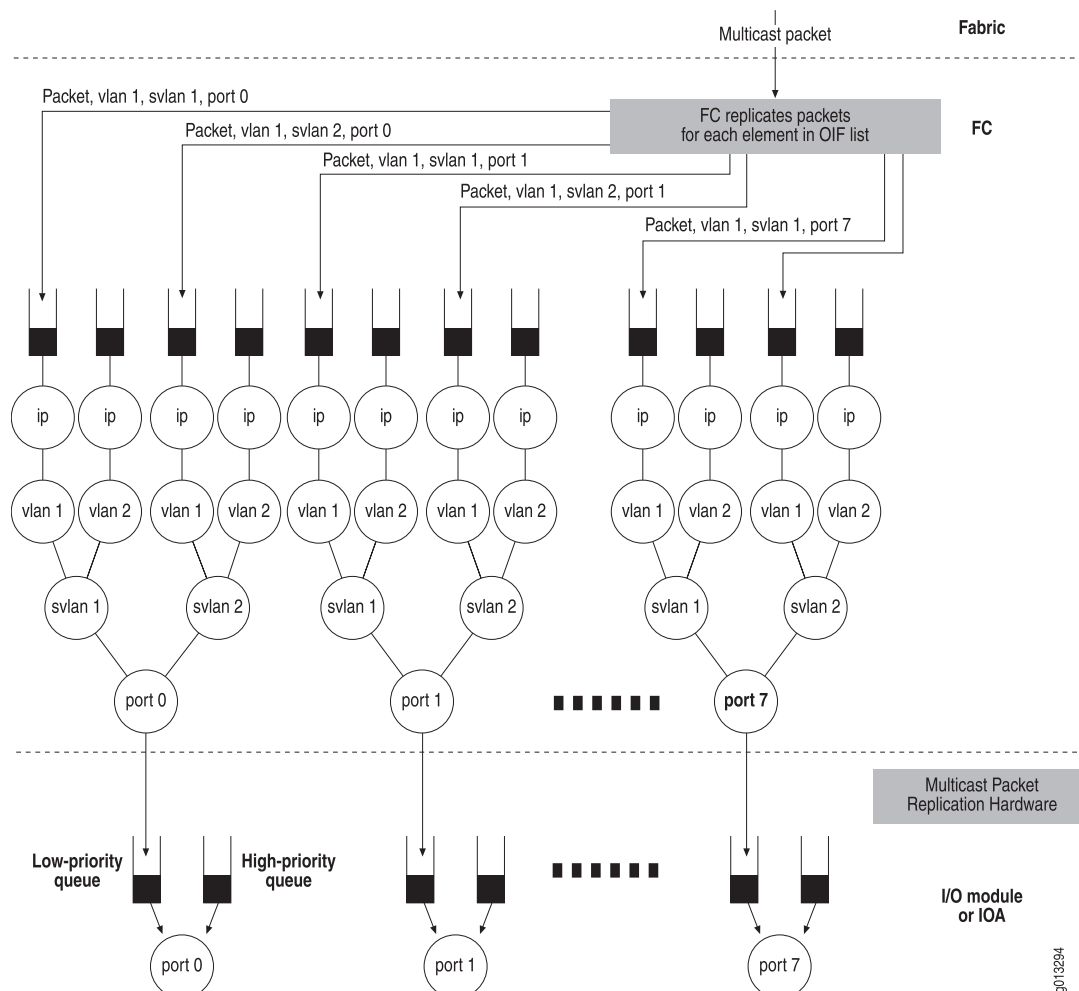

The hardware multicast packet replication feature enables you to configure multicast traffic for a VLAN or S-VLAN to be replicated on the I/O module or IOA so that only one copy of the packet is transmitted from the line module to the I/O module or IOA. Replication for each of the ports is performed on the I/O module or IOA.


Configuring hardware multicast packet replication for high-density Ethernet is useful when you want to provide the same multicast stream out of some or all of the ports, such as for IP television (IPTV). Configuring hardware multicast packet replication enables you to:

- Reduce the number of packets sent from the FC to the module.
- Reduce the CPU consumed by the FC processing each elaboration of the packet.

You can use the additional bandwidth to increase the bandwidth of multicast traffic out of each of the Gigabit Ethernet ports.

Figure 5 on page 19 displays the flow of a multicast packet using the hardware multicast packet feature.

Figure 5: Packet Flow with Hardware Multicast Packet Replication

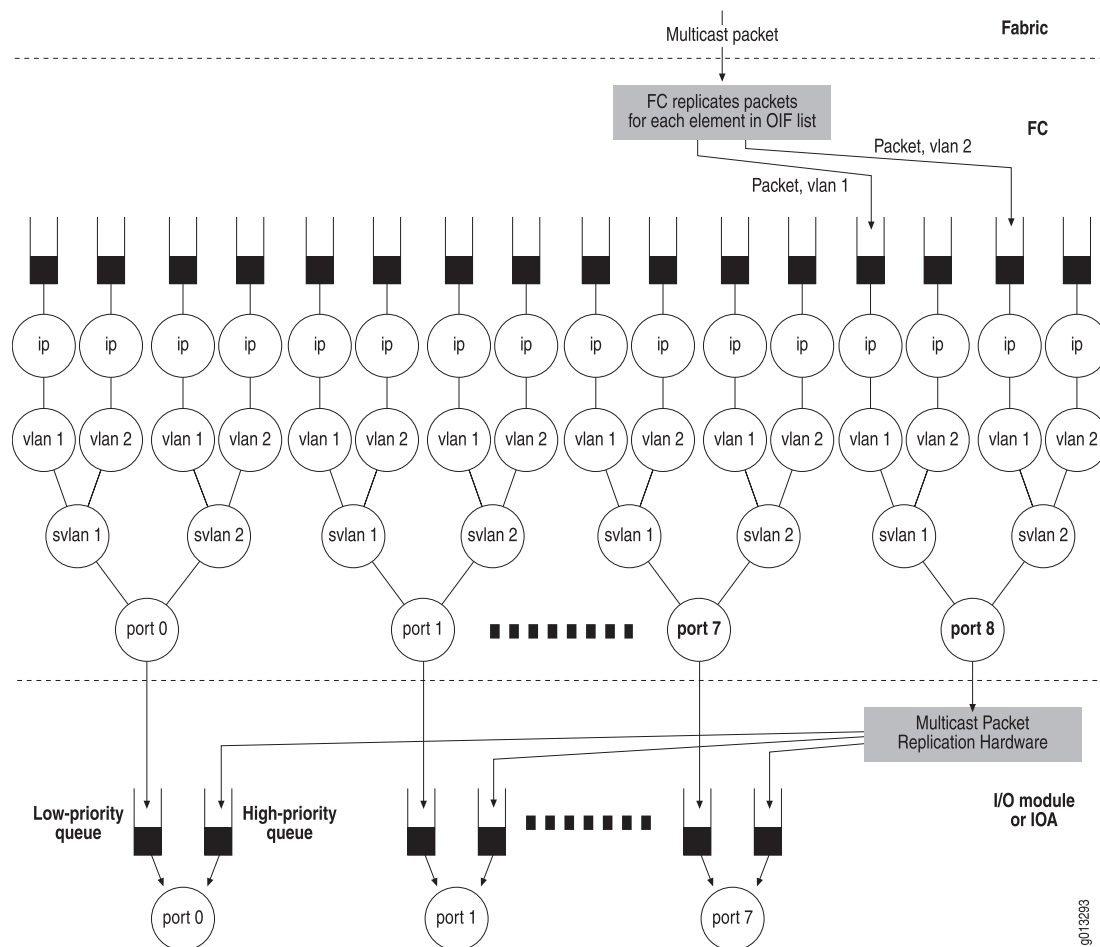

Each high-density Ethernet module has eight physical ports, numbered 0–7. A logical port is available for the hardware multicast packet replication feature, numbered port 8.

JunosE tracks the OIFs in an mroute that have been redirected to use the hardware multicast packet replication hardware. The system accepts only egress multicast traffic to traverse the interface stack on the enabled port. The system drops unicast traffic that is routed to this port.

Each port on the I/O module or IOA displayed in [Figure 5 on page 19](#) has two queues. These queues are further down the egress path than the queues found on the line module and populated by the FC.

The low-priority queue is dedicated to packets that are received from the line module queues that are dedicated to the physical ports. This queue blocks when full and provides backpressure to the line module. This queue services unicast and multicast traffic that is not using the hardware multicast packet replication feature.

The high-priority queue is dedicated to packets that are received from the line module queue for port 8. This queue is serviced at a higher priority than the first queue, and drops packets when full.

For more information about high-density Ethernet, see *Configuring Ethernet Interfaces* in the *JunosE Physical Layer Configuration Guide*.

Supported Modules and Encapsulations

You can enable hardware multicast packet replication on port 8 of the following high-density Ethernet modules:

- GE-8 I/O module (pairs with the GE-HDE line module)
- ES2-S1 GE-8 IOA (pairs with the ES2 4G LM and the ES2 10G LM)

When enabled, the hardware multicast packet replication feature defines the encapsulation of the egress multicast packet. The following encapsulations are supported:

- IPv4 over Gigabit Ethernet
- IPv4 over VLAN
- IPv4 over S-VLAN



NOTE: 802.3ad link aggregation group (LAG) bundles do not support hardware multicast packet replication.

The hardware multicast packet replication feature also provides an interface over which you can configure the following:

- IP MTU
- Ethernet MTU
- Egress IP policy
- Egress VLAN policy
- QoS

Relationship with OIF Mapping

Multicast OIF mapping enables the router to decrease the inefficiencies associated with replicating streams of multicast traffic. Using OIF maps, IGMP joins that the router receives on a subscriber interface can be mapped to a dedicated multicast VLAN.

The hardware multicast packet replication feature enables you to redirect each of the IP interfaces on a line module over a dedicated multicast VLAN to a single IP interface over port 8. The FC is only required to send a single packet per dedicated multicast VLAN to the I/O module or IOA. The module then replicates this packet to the appropriate ports.

For more information about configuring OIF mapping, see [“Configuring Group Outgoing Interface Mapping” on page 55](#) in [“Configuring IGMP” on page 45](#).

Hardware Multicast Packet Replication Considerations

When configuring hardware multicast packet replication, the following considerations apply.

- Do not configure or transmit routing protocols over port 8. The FC drops traffic routed to an IP interface stacked over port 8.
- We recommend that you configure the IP address of the IP interface over port 8 to be unnumbered.
- We recommend that you configure an IP interface over a VLAN over one of the physical ports to reference the IP interface over the same VLAN over port 8.

You cannot create the following configurations:

- When two IP interfaces configured over a port reference the same IP interface over port 8. The system does not accept this configuration attempt because you typically configure the hardware multicast packet replication feature to redirect multicast traffic over one VLAN, then redirect it to the same VLAN on port 8.
- When the IP interface configured with the hardware multicast packet replication attribute is not installed on a line module that supports hardware multicast packet replication.
- When the IP interface designated by the hardware multicast packet replication attribute is not installed on a line module that supports hardware multicast packet replication.
- When the IP interface designated by the hardware multicast packet replication attribute is not on the same line module as the IP interface configured with this attribute.
- When you configure a unique source MAC address for VLANs on port 8, the hardware multicast packet replication hardware stamps the source MAC address on the VLAN, overwriting any MAC address that you configured. For more information, see *Configuring Ethernet Interfaces* in the *JunosE Physical Layer Configuration Guide*.
- The regular multicast implementation utilizes interface stacking that provides a unique IP attachment point for each elaboration of the egress multicast packet.

For the hardware multicast packet replication feature, you must attach policies to an interface stack over port 8 that defines the encapsulation of the egress multicast traffic. The system supports policies over port 8 just as it is above any of the other ports on this line module.

Policies applied to the interface stack over port 8 affect the packets traversing this stack whether or not the packet is destined for one port or all of the physical ports. Therefore, you cannot apply different egress policies to multicast traffic for the interfaces stacked above different ports, or rate limit on an individual interface over a port. You also cannot monitor policy statistics on individual interfaces over a port.

Instead, you can apply egress policy to an interface stacked over port 8. The system applies the policy before the packet has been elaborated for each of the ports.

- The JunosE QoS component provides hierarchical egress scheduling and shaping on Gigabit Ethernet ports 0–7. The regular multicast implementation replicates packets on the FC, with each replicated packet placed on a line module queue destined for a single physical port. The line module queue can also receive QoS behavior specific to that queue.

For the hardware multicast packet replication feature, the FC does not replicate the packet for each of the individual ports. Instead, it places the packet on a special queue destined for port 8.

You can configure QoS on the packets flowing through port 8, but this has limited value because each packet passed through this port can be transmitted through one of more of the physical ports. Therefore, the packets placed on this special queue might not receive the same QoS behavior as ports 0–7.

We recommend that you configure the network so the I/O or IOA queues are not oversubscribed. The traffic transmitted by the physical port is a combination of packets from the two I/O or IOA queues. When the sum of the packets in these queues is greater than line rate, the system can drop traffic that is not using hardware multicast packet replication.

When you configure a traffic shaper on a physical port and configure hardware multicast packet replication, the packets created using the feature avoid the traffic shaper for that port. To control this, you can use traffic shaper on the physical port and port 8. The sum of the traffic shapers must be less than or equal to the line rate of the port.

A traffic shaper on port 8 can result in the overall utilization of egress bandwidth for any one port being less the line rate because the packets being replicated might not be transmitted to every port. Packets destined to some of the ports contribute to the traffic shaping for all of the ports on the I/O module or IOA.

Configuring Hardware Multicast Packet Replication

To configure hardware multicast packet replication:

1. Configure port 8 on a high-density Ethernet module to accept redirected egress multicast traffic.

- a. Specify the Gigabit Ethernet interface on port 8.
- b. Create a VLAN major interface.
- c. Create a VLAN subinterface.
- d. Assign a VLAN ID.
- e. Configure an unnumbered IP interface.
- f. Enable IGMP on the interface with only multicast-data-forwarding capability.

```
host1(config)#interface gigabitEthernet 2/8
host1(config-if)#encapsulation vlan
host1(config-if)#interface gigabitEthernet 2/8.1
host1(config-if)#vlan id 1
host1(config-if)#ip unnumbered loopback 0
host1(config-if)#ip igmp version passive
```

2. Configure an IP interface to redirect egress multicast traffic to port 8.
 - a. Create a VLAN subinterface.
 - b. Assign a VLAN ID.
 - c. Assign an IP address.
 - d. Configure the interface to redirect egress multicast traffic to port 8.

```
host1(config)#interface gigabitEthernet 2/0.101
host1(config-if)#vlan id 1
host1(config-if)#ip address 10.1.1.1 255.255.255.0
host1(config-if)#ip multicast ioa-packet-replication gigabitEthernet 2/8.1
```

encapsulation vlan

- Use to configure VLAN as the encapsulation method for the interface.
- Example


```
host1(config-if)#encapsulation vlan
```
- Use the **no** version to disable VLAN on an interface.
- See encapsulation vlan.

ip igmp version

- Use to set the IGMP version (1, 2, or 3) for the interface or specify a passive interface with only multicast-data-forwarding capability (passive).
- Example


```
host1:boston(config-if)#ip igmp version passive
```
- Use the **no** version to set the version to the default, IGMPv2.
- See ip igmp version.

ip multicast ioa-packet-replication

- Use to configure hardware multicast packet replication on port 8 of a high-density Ethernet module.
- Example

```
host1(config-if)#ip multicast ioa-packet-replication gigabitEthernet 3/8.1
```
- Use the **no** version to disable hardware multicast packet replication.
- See `ip multicast ioa-packet-replication`.

ip unnumbered

- Use to configure an unnumbered IP interface.
- This command enables IP processing on an interface without assigning an explicit IP address to the interface.
- You must specify an interface location, which is the identifier of another interface on which the router has an assigned IP address. This interface cannot be another unnumbered interface.
- Example

```
host1(config-if)#ip unnumbered loopback 10
```
- Use the **no** version to disable IP processing on the interface.
- See `ip unnumbered`.

Configuring Hardware Multicast Packet Replication with OIF-Mapping

This section describes how to configure hardware multicast packet replication with OIF-mapping.

1. Configure port 8 on a supported high-density Ethernet module to accept redirected egress multicast traffic. For the procedure see [“Configuring Hardware Multicast Packet Replication” on page 22](#). For information about supported high-density Ethernet modules see [“Supported Modules and Encapsulations” on page 20](#).
2. Use OIF maps to map the subscriber IGMP interfaces (C-VLANs) to the dedicated multicast VLAN (M-VLAN). The dedicated M-VLAN should be located on the line module containing the IOA replication interface. The C-VLAN and M-VLAN can either be on the same or different line modules. For information about configuring OIF mapping see [“Configuring Group Outgoing Interface Mapping” on page 55](#).
3. Configure the dedicated M-VLAN to redirect egress multicast traffic to port 8. For the procedure see [“Configuring Hardware Multicast Packet Replication” on page 22](#).

Monitoring Hardware Multicast Packet Replication

This section describes how to monitor hardware multicast packet replication.

Port Statistics

Use the show interfaces **gigabitEthernet** command to display port statistics for port 8. For port 8, queue statistics have no direct relationship to any of the 8 ports because each

packet transmitting through the queue can be sent through 1 or more of the 8 physical ports. For more information, see *Monitoring Ethernet Interfaces* in the *JunosE Physical Layer Configuration Guide*.

IP and VLAN Statistics

Use the **show vlan subinterface** command to display statistics for a VLAN interface configured over port 8. For more information, see *Monitoring Ethernet Interfaces* in the *JunosE Physical Layer Configuration Guide*.

Use the **show ip interface** command to display statistics for an IP interface configured over port 8. For more information, see *Monitoring IP* in the *JunosE IP, IPv6, and IGP Configuration Guide*.

Multicast traffic redirected by the hardware multicast packet replication feature is displayed in the statistics for the IP or VLAN interface over port 8, not the original IP or VLAN interface over the physical port.

The statistics for the IP or VLAN interface over port 8 reflect the number of packets that passed through this interface destined for the hardware multicast packet replication hardware. These statistics have no direct correlation to the number of packets being transmitted from any of the physical ports.

IGMP Statistics

Use the **show ip igmp interface** command to display statistics, including hardware multicast packet replication configuration, for an IP interface stacked over port 8. For more information, see “Monitoring IGMP” on page 63 in “Configuring IGMP” on page 45.

Blocking and Limiting Multicast Traffic

You can either block mroute creation, limit the multicast bandwidth admitted on an outgoing interface, or limit outgoing interface creation on a port.

Blocking Mroutes

By default, when an interface that is configured with one or more multicast protocols (for example, PIM or IGMP) receives multicast traffic, even when the scope of that traffic exceeds link-local, the virtual router creates an mroute. You can use the **ip block-multicast-sources** command to block all multicast traffic with a scope larger than link-local (for example, global) and prevent mroute creation under these conditions.



NOTE: Issuing this command does not affect reception of link-local multicast packets.

ip block-multicast-sources

- Use to prevent mroute creation by blocking multicast traffic that has a scope larger than link-local (for example, global).
- Example

`host1(config-if)#ip block-multicast-sources`

- Use the **no** version to restore the default behavior of creating mroutes on received multicast packets.
- See `ip block-multicast-sources`.

Limiting Interface Admission Bandwidth

Interface-level multicast admission control is performed when an OIF on the interface is added to the mroute for a given (S,G) multicast data stream and the multicast bandwidth map contains a **set admission-bandwidth** action for that (S,G). When enabled, the admission-bandwidth for a particular (S,G) is read from the multicast bandwidth map and recorded in the mroute when the (S,G) mroute is created.



CAUTION: Before you can limit interface-level admission bandwidth, you must first create a bandwidth map. See [“Defining a Multicast Bandwidth Map” on page 10](#) for details.

When an OIF is subsequently added to the mroute, the OIF is blocked from forwarding data if the additional bandwidth contributed by the (S,G) exceeds the admission-bandwidth limit for the interface. In JunosE releases earlier than Release 12.0.x, in an OIF mapping scenario where the DSLAM does not perform per-subscriber multicast admission control, the router disregards the multicast admission bandwidth limit configured on the join interface. If the limit configured on the mapped interface exceeds the admission-bandwidth limit for the interface, the router blocks the mapped interface from forwarding data.

Now, in an OIF mapping scenario where the DSLAM performs per-subscriber multicast admission control, the router checks the bandwidth limit configured on the join interface. If the multicast stream is forwarded over the mapped interface, the router admits the multicast stream and forwards the stream to the join interfaces whose bandwidth does not exceed the configured bandwidth limit. The router also performs QoS Adjust for the multicast stream on the unblocked (forwarding) subscriber interfaces. The router does not replicate the stream to the subscriber interfaces whose bandwidth exceeds the configured bandwidth limit and it does not perform QoS Adjust for the multicast stream on the blocked subscriber interfaces.

If the multicast stream is not forwarded over the mapped interface, the router blocks the multicast stream and does not forward the stream. The router also does not perform QoS Adjust for the multicast stream on the blocked subscriber interface.

Enabling Interface Admission Bandwidth Limitation

You can use the **ip multicast admission-bandwidth-limit** command to enable multicast admission control on interfaces (including dynamic IP interfaces) that are configured to run IGMP. You can also use this command on a PIM (sparse-mode, dense-mode, or sparse-dense-mode) interface if IGMP is configured on the interface (including the **ip igmp version passive** command).

ip multicast admission-bandwidth-limit

- Use to limit bandwidth for an interface that accepts IGMP groups.
- Example

```
host1:boston(config-if)#ip multicast admission-bandwidth-limit 2000000
```

- Use the **no** version to remove the bandwidth limitation for the interface.
- See `ip multicast admission-bandwidth-limit`.

OIF Interface Reevaluation Example

If you change the admission bandwidth for an interface, all mroutes with that interface as an OIF are reevaluated as follows:

- If the bandwidth limit is increased, blocked OIFs may become unblocked. If the interface is a blocked OIF on multiple mroutes, the order in which the mroutes are visited, and which (S,G) streams become unblocked, is not specified.
- If the bandwidth limit is decreased, no currently admitted OIFs are blocked. However, no new OIFs are admitted until the total admitted bandwidth for the interface drops below the new limit.
- If the bandwidth is increased to the point that the bandwidth limit for an interface is now exceeded, no currently admitted OIFs for the affected mroutes are blocked. However, no new OIFs are admitted until the total admitted bandwidth drops below the configured limit.



NOTE: If the multicast bandwidth map that includes the **set admission-bandwidth** command is changed, all affected mroutes are reevaluated in the same manner described previously.

As an example of this function, if the interface has accepted a total bandwidth of 2000000 bps, and you set a limit of 1000000 bps on the interface, the router does not disconnect any already connected OIFs but prevents the interfaces from accepting any more groups. Over time, some groups leave the interfaces and, eventually, the interface limit of 1000000 bps is reached and maintained by the router.

If you set limits for both a port and interfaces on that port, the router uses the lower of the two limits when determining whether or not an interface can accept any new IGMP groups. For example, if you specify an admission bandwidth limit of 2000000 bps for the port and 3000000 bps groups for each interface, additional groups can only be accepted until the port limit of 2000000 bps is reached.

Creating Mroute Port Limits

When a multicast forwarding entry (that is, an mroute) is added with an outgoing interface (OIF) on a port, the OIF count for that port is incremented. If you configure a port limit, and the OIF count on the port exceeds that limit, no OIFs on that port are added to mroutes (that is, OIFs are blocked).

mroute port limit

- Use to configure a limit on the number of mroute OIFs that can be added across different virtual routers, on a port.
- Example

```
host1(config)#mroute port 3/0 limit 10
```
- Use the **no** version to remove any OIF port limits.
- See mroute port limit.

Limiting Port Admission Bandwidth

Port-level multicast admission control is performed when an OIF on that port is added to the mroute for a given (S,G) multicast data stream and the multicast bandwidth map contains a **set admission-bandwidth** action for that (S,G).

When enabled, the admission-bandwidth for a particular (S,G) is read from the multicast bandwidth map and recorded in the mroute when the (S,G) mroute is created. If you configure a port limit and the OIF count on the port exceeds that limit, no OIFs on that port are added to mroutes (that is, OIFs are blocked).

When a multicast forwarding entry (an mroute) is added with an outgoing interface, OIF is blocked from forwarding data if the additional bandwidth contributed by the (S,G) would exceed the admission-bandwidth limit for the port on which the interface resides.



CAUTION: Before you can limit port-level admission bandwidth, you must first create a bandwidth map. See [“Defining a Multicast Bandwidth Map” on page 10](#) for details.

Enabling Port Admission Bandwidth Control

You can use the **mroute port admission-bandwidth-limit** command to limit the total multicast bandwidth that can be admitted on a port. The admitted bandwidth is summed across all virtual routers with IPv4 and IPv6 mroutes that have OIFs on the port.



NOTE: Admission bandwidth values for a given (S,G) mroute are determined from the bandwidth map. See [“Defining a Multicast Bandwidth Map” on page 10](#) for details.

Dynamic Port Admission Bandwidth Control

You can configure the system to dynamically limit the total multicast bandwidth that can be admitted on a port. The system performs dynamic port-level admission control when an OIF on that port is added to the mroute for a given <S, G> multicast stream.

After the priority bandwidth limit on the port is reached, OIFs on the prioritized <S, G> are only allowed to forward the traffic and unprioritized <S, G> streams are blocked from forwarding data on the OIF.

To enable a priority value for the <S, G> multicast stream, issue “[set priority](#)” on [page 14](#) in the multicast bandwidth map. A priority value of 0 indicates an unprioritized stream and any value other than 0 indicates a prioritized stream. Currently there is no support for classification of prioritized streams. For more information about the **set priority** command, see “[Defining a Multicast Bandwidth Map](#)” on [page 10](#).

You can configure limits for the bandwidth that is dynamically admitted on the port. The priority bandwidth limit controls the priority bandwidth admitted on a port. The hysteresis limit sets the minimum priority bandwidth limit before the system evaluates mroutes and admits any blocked OIFs.

mroute port admission-bandwidth-limit

- Use to configure a limit on the total multicast bandwidth that can be admitted on a port.
- Use the **priority-bandwidth-limit** keyword to configure the priority bandwidth admitted on a port.
- Use the **hysteresis** keyword to configure the minimum priority bandwidth limit before the system evaluates mroutes and admits any blocked OIFs.
- Example


```
host1(config)#mroute port admission-bandwidth-limit 3000000
```
- Use the **no** version to remove any OIF admission bandwidth limits.
- See mroute port admission-bandwidth-limit

OIF Port Reevaluation Example

If you change the admission bandwidth for a port, all mroutes with an OIF on that port are reevaluated as follows:

- If the bandwidth limit is increased, blocked OIFs can become unblocked. However, the order in which the mroutes are visited, and which (S,G) streams become unblocked, is not specified.
- If the bandwidth limit of a port is decreased, no currently admitted OIFs are blocked. However, no new OIFs are admitted until the total admitted bandwidth for the port drops below the new limit.
- If the bandwidth is increased to the point that the bandwidth limit for an interface is now exceeded, no currently admitted OIFs for the affected mroutes are blocked. However, no new OIFs are admitted until the total admitted bandwidth drops below the configured limit.



NOTE: If the multicast bandwidth map that includes the **set admission-bandwidth** command is changed, all affected mroutes are reevaluated in the same manner described previously.

As an example of this function, if the port has accepted a total bandwidth of 3000000 bps, and you set a limit of 2000000 bps on the port, the router does not disconnect any already connected OIFs but prevents the interfaces from accepting any more groups. Over time, some groups leave the interfaces and, eventually, the port limit of 2000000 bps is reached and maintained by the router.

If you set limits for both a port and interfaces on that port, the router uses the lower of the two limits when determining whether or not an interface can accept any new IGMP groups. For example, if you specify an admission bandwidth limit of 2000000 bps for the port and 3000000 bps groups for each interface, additional groups can only be accepted until the port limit of 2000000 bps is reached.

Deleting Multicast Forwarding Entries

You can clear one or more forwarding entries from the multicast routing table. However, if you do so, the entries might reappear in the routing table if they are rediscovered.

clear ip mroute

- Use to delete IPv4 multicast forwarding entries.
- If you specify an *, the router clears all IP multicast forwarding entries.
- If you specify the IPv4 address of a multicast group, the router clears all multicast forwarding entries for that group.
- If you specify the IPv4 address of a multicast group and the IPv4 address of a multicast source, the router clears the multicast forwarding entry that matches that group and source.
- Example

```
host1:boston#clear ip mroute *
```
- There is no **no** version.
- See *clear ip mroute*.

Monitoring IP Multicast Settings

To display general information about the IP multicast configuration on the router, use the following **show** commands.

show ip mroute

- Use to display information about all or specified multicast forwarding entries.
- Specify a multicast group IP address or both a multicast group IP address and a multicast source IP address to display information about particular multicast forwarding entries.
- Use the **active** option to display the active multicast routes with admission bandwidth greater than the specified bandwidth threshold. The default is 4000 bps.
- Use the **count** option to display the number of multicast forwarding entries.
- Use the **oif-detail** option to display the details of the join interfaces corresponding to the mapped interface when oif-mapping is configured.
- Use the **statistics** option to display statistics for packets received through all multicast forwarding entries that the router has added to the multicast routing table and established on the appropriate line modules.
- Use the **summary** option to see a summary rather than a detailed description.
- Field descriptions
 - (S, G)—IP addresses of the multicast source and the multicast group
 - Admission bandwidth—Admission bandwidth per mroute, in bps
 - QoS bandwidth—QoS bandwidth per mroute, in bps
 - Uptime—Length of time that the (S,G) pair has been active, in *days hours:minutes:seconds* format
 - Data Rate—Flow rate for the threshold entry, in Kbps
 - SPT Threshold—SPT threshold value for the entry, in Kbps
 - Threshold—Threshold value for the entry, in Kbps
 - Expires—Length of time that the (S,G) pair can be active, in *days hours:minutes:seconds* format or *never*
 - RPF route—IP address and subnetwork mask of the RPF route
 - incoming interface—Type and specifier of the incoming interface for the RPF route
 - neighbor address—IP address of the neighbor
 - State/Owner—Owner of the route
 - Local—Route belonging to the local interface
 - Static—Static route
 - Other protocols—Route established by a protocol such as RIP or OSPF
 - Incoming interface list—List of incoming interfaces on the router. Details include:
 - Type of interface and its specifier
 - Action that the interface takes with packets: Accept or Discard

- Multicast protocol that owns the interface
- Outgoing interface list—List of outgoing interfaces on the router. Details include:
 - Type of interface and its specifier
 - Action that the interface takes with packets: Forward or Blocked (intf-adm-limit, join-intf-adm-limit, port-adm-limit, port-limit, port-priority-adm-limit)
 - Protocol running on the interface: PIM, DVMRP, or IGMP
 - Amount of time that the interface has been active in this multicast forwarding entry, in *days hours:minutes:seconds* format
 - Length of time that the interface can remain active in this multicast forwarding entry, in *days hours:minutes:seconds* format or *never*
- Counts—Number of types of source group mappings
 - (S, G)—Number of (S, G) entries
 - (*, G)—Number of (*, G) entries
- Example 1—Constant bandwidth bit rate

```

host1#show ip mroute
IP Multicast Routing Table

(S, G) uptime d h:m:s
[Data rate: Kbps] [SPT Threshold: Kbps] [Threshold: Kbps]
[Admission bandwidth: bps]
[QoS bandwidth: bps]
RPF route: addr/mask, incoming interface
           neighbor address, owner route-owner
Incoming interface list:
  Interface (addr/mask), State/Owner [(RPF IIF)]
Outgoing interface list:
  Interface (addr/mask), State/Owner, Uptime/Expires

(10.0.10.1, 225.1.1.1) uptime 0 00:10:31
Data rate: 2132 Kbps, Threshold 500 Kbps
Admission bandwidth: 2000000 bps
RPF route: 10.0.10.0/24, incoming interface atm5/3.1010
           neighbor 10.0.10.8, owner Local
Incoming interface list:
  atm5/3.1010 (10.0.10.8/24), Accept/Pim (RPF IIF)
Outgoing interface list:
  atm5/1.108 (108.0.8.5/8), Forward/Pim, 0 00:02:52/never
  atm5/1.109 (107.0.8.4/8), Forward/Pim, 0 00:10:07/never

(1.1.1.1, 225.1.1.1) uptime 0 00:00:34, never expires
RPF route: 1.0.0.0/8, incoming interface ATM5/1.200
           neighbor 2.2.2.2, owner Netmgmt
Incoming interface list:
  ATM5/1.200 (2.1.1.1/8), Accept/Igmp (RPF IIF)
Outgoing interface list:
  ATM5/1.300 (3.1.1.1/8), Forward/Igmp, 0 00:00:34/never

Counts:      2 (S, G) entries
             0 (*, G) entries

```



NOTE: The (S,G) entry (1.1.1.1, 225.1.1.1) is the permanent mroute.

- Example 2—Adaptive bandwidths enabled

```
Host1#show ip mroute
IP Multicast Routing Table

(S, G) uptime d h:m:s[, expires d h:m:s]
[Admission bandwidth: bps]
[QoS bandwidth: bps]
RPF route: addr/mask, incoming interface
           neighbor address, owner route-owner
Incoming interface list:
  Interface (addr/mask), State/Owner [(RPF IIF)]
Outgoing interface list:
  Interface (addr/mask), State/Owner, Uptime/Expires

(10.0.1.9, 225.1.1.1) uptime 0 00:00:23
Admission bandwidth: 1998000 bps (adaptive)
QoS bandwidth: 1998000 bps (adaptive)
RPF route: 10.0.0.0/8, incoming interface ATM2/1.200
           neighbor 21.1.1.1, owner Netmgmt
Incoming interface list:
  ATM2/1.200 (21.2.2.2/8), Accept/Pim (RPF IIF)
Outgoing interface list:
  ATM2/1.300 (31.2.2.2/8), Blocked (port-adm-limit)/Pim, 0
00:00:23/never

Counts: 1 (S, G) entries
        0 (*, G) entries
```

- Example 3—Outgoing interface blocked when bandwidth limit of all the join interfaces exceeds configured CAC limits

```
host1#show ip mroute
IP Multicast Routing Table

(S, G) uptime d h:m:s[, expires d h:m:s]
[Admission bandwidth: bps]
[QoS bandwidth: bps]
RPF route: addr/mask, incoming interface
           neighbor address, owner route-owner
Incoming interface list:
  Interface (addr/mask), State/Owner [(RPF IIF)]
Outgoing interface list:
  Interface (addr/mask), State/Owner, Uptime/Expires

(10.0.1.9, 225.1.1.1) uptime 0 00:00:23
Admission bandwidth: 1998724 bps (adaptive)
QoS bandwidth: 1998724 bps (adaptive)
RPF route: 10.0.0.0/8, incoming interface ATM2/1.200
           neighbor 21.1.1.1, owner Netmgmt
Incoming interface list:
  ATM2/1.200 (21.2.2.2/8), Accept/Pim (RPF IIF)
Outgoing interface list:
  ATM2/1.300 (31.2.2.2/8), Blocked (join-intf-adm-limit)/IGMP, 0
00:00:23/never
```

```
Counts: 1 (S, G) entries
        0 (*, G) entries
```

- See `show ip mroute`.

show ip mroute active

- Use to display the active multicast routes with admission bandwidth greater than the specified bandwidth threshold.
- The default is 4000 bps.
- Field descriptions
 - See the **show ip mroute** command and the **show ip mroute summary** command for descriptions of all fields.
- Example 1—Displays active multicast routes with bandwidth above 10000 bps

```
host1#show ip mroute active 10000
Active IP Multicast Routes >=10000 bps

(S, G) uptime d h:m:s[, expires d h:m:s]
[Admission bandwidth: bps]
[QoS bandwidth: bps]
RPF route: addr/mask, incoming interface
           neighbor address, owner route-owner
Incoming interface list:
  Interface (addr/mask), State/Owner [(RPF IIF)]
Outgoing interface list:
  Interface (addr/mask), State/Owner, Uptime/Expires

(52.0.0.1, 232.0.0.1) uptime 0 00:01:07
Admission bandwidth: 47000 bps (adaptive)
QoS bandwidth: 47000 bps (adaptive)
RPF route: 52.0.0.0/24, incoming interface ATM2/1.17
           neighbor 17.0.0.2, owner NetmgmtRpf
Incoming interface list:
  ATM2/1.17 (17.0.0.2/24), Accept/Igmp (RPF IIF)
Outgoing interface list:
  NULL

Counts: 1 (S, G) entries
        0 (*, G) entries
```

- Example 2—Displays the summary of active multicast routes

```
host1#show ip mroute summary active
Active IP Multicast Routes >=4000 bps
```

Group Address	Source Address	RPF route	RPF Iif	#Oifs
232.0.0.1	51.0.0.1	51.0.0.0/24	ATM3/1.17	0
232.0.0.2	51.0.0.1	51.0.0.0/24	ATM3/1.17	0
232.0.0.3	51.0.0.1	51.0.0.0/24	ATM3/1.17	0
Counts: 3 (S, G) entries				
0 (*, G) entries				

- See `show ip mroute`.

show ip mroute count

- Use to display information about the number of groups and sources.
- Specify a multicast group address or both a multicast group address and a multicast source address to display information about a particular multicast forwarding entry.
- Field descriptions
 - Counts—Number of types of source group mappings
 - (S, G)—Number of (S,G) entries
 - (*, G)—Number of (*,G) entries

- Example

```
host1#show ip mroute count
                        IP Multicast Routing Table

Counts:      2 (S, G) entries
             0 (*, G) entries
```

- See `show ip mroute`.

show ip mroute oif-detail

- Use to display details of the join interfaces corresponding to the mapped interfaces when OIF mapping is configured.
- Field descriptions
 - Join interface list—List of join interfaces on the router. Details include:
 - Type of interface and its specifier
 - Action that the interface takes with packets: Forward or Blocked (intf-adm-limit, join-intf-adm-limit, port-adm-limit, port-limit, port-priority-adm-limit)
 - Protocol running on the interface: PIM, DVMRP, or IGMP
 - Amount of time that the interface has been active in this multicast forwarding entry, in *days hours:minutes:seconds* format
 - Length of time that the interface can remain active in this multicast forwarding entry, in *days hours:minutes:seconds* format or *never*
- See the **`show ip mroute`** command and the **`show ip mroute summary`** command for descriptions of all fields.
- Example 1—Displays details of the join interfaces

```
host1#show ip mroute oif-detail
                        IP Multicast Routing Table

(S, G) uptime d h:m:s[, expires d h:m:s]
[Admission bandwidth: bps]
[QoS bandwidth: bps]
RPF route: addr/mask, incoming interface
           neighbor address, owner route-owner
Incoming interface list:
  Interface (addr/mask), State/Owner [(RPF IIF)]
```

```

Outgoing interface list:
  Interface (addr/mask), State/Owner, Uptime/Expires
(10.0.1.9, 225.1.1.1) uptime 0 00:00:23
Admission bandwidth: 1998724 bps (adaptive)
QoS bandwidth: 1998724 bps (adaptive)
RPF route: 10.0.0.0/8, incoming interface ATM2/1.200
           neighbor 21.1.1.1, owner Netmgmt
Incoming interface list:
  ATM2/1.200 (21.2.2.2/8), Accept/Pim (RPF IIF)
Outgoing interface list:
  ATM2/1.300 (31.2.2.2/8), Forward/IGMP, 0 00:00:23/never
Join interface list:
  ATM2/1.2 (2.2.2.2/32), Blocked (intf-adm-limit)/IGMP, 0
00:00:23/never
  ATM2/1.3 (3.2.2.2/32), Forward/IGMP, 0 00:00:23/never

Counts: 1 (S, G) entries
        0 (*, G) entries

```

- See `show ip mroute`.

show ip mroute statistics

- Use to display statistics for packets received through multicast routes that the router has added to the multicast routing table and established on the appropriate line modules.
- Specify a multicast group IP address or both a multicast group IP address and a multicast source IP address to display information about a particular multicast forwarding entry.
- Field descriptions
 - See the **show ip mroute** command for descriptions of all fields except the Statistics field.
- Statistics



NOTE: The display shows statistics after the VR has added the multicast route to the multicast routing table and established the route on the appropriate line module. Statistics for interactions that take place before the route is established on the line module are not displayed.

- Received—Number of packets and bytes that the VR received for this multicast route
- Forwarded—Number of packets and bytes that the VR has forwarded for this multicast route
- Rcvd on OIF—Number of packets that the VR has received on the outgoing interface (OIF) for this multicast route
- Example


```

host1#show ip mroute statistics
IP Multicast Routing Table

(S, G) uptime d h:m:s[, expires d h:m:s]
[Admission bandwidth: bps]
[QoS bandwidth: bps]
RPF route: addr/mask, incoming interface
           neighbor address, owner route-owner
Incoming interface list:
  Interface (addr/mask), State/Owner [(RPF IIF)]
Outgoing interface list:
  Interface (addr/mask), State/Owner, Uptime/Expires
(10.0.1.9, 225.1.1.1) uptime 0 00:00:23
Admission bandwidth: 2000000 bps
QoS bandwidth: 2000000 bps
RPF route: 10.0.0.0/8, incoming interface ATM2/1.200
           neighbor 21.1.1.1, owner Netmgmt
Incoming interface list:
  ATM2/1.200 (21.2.2.2/8), Accept/Pim (RPF IIF)
Outgoing interface list:
  ATM2/1.300 (31.2.2.2/8), Blocked (port-adm-limit)/Pim, 0
00:00:23/never
Statistics:
  Received   : 23 pkts, 1472 bytes
  Forwarded  : 0 pkts, 0 bytes
  Rcvd on OIF: 0 pkts

Counts: 1 (S, G) entries
       0 (*, G) entries

```

- See show ip mroute.
- See statistics.

show ip mroute summary

- Use to display a summary of all or specified multicast routes.
- Specify a multicast group IP address or both a multicast group IP address and a multicast source IP address to display information about a particular multicast forwarding entry.
- Field descriptions
 - Group Address—IP address of the multicast group
 - Source Address—IP address of the multicast source
 - RPF route—IP address and network mask of the RPF route
 - RPF Iif —Type and identifier for the incoming interface for the RPF route
 - #Oifs—Number of outgoing interfaces
 - Counts—Numbers of types of (S,G) pairs
 - (S,G)—Number of (S,G) entries
 - (*G)—Number of (*G) entries
- Example

```

host1#show ip mroute summary
                        IP Multicast Routing Table

Group Address    Source Address    RPF route    RPF Iif    #0ifs
-----
224.0.1.39      52.1.1.1         51.1.1.1/32  Register IIF  0
224.0.1.40      51.1.1.1         51.1.1.1/32  loopback1    1

Counts:      2 (S, G) entries
              0 (*, G) entries

```

- See show ip mroute.

show ip multicast protocols

- Use to display information about multicast protocols enabled on the router.
- Use the **brief** option to display a summary of information rather than a detailed description.
- Field descriptions
 - Multicast Protocols—Multicast protocols on this router
 - Protocol—Name of the multicast protocol
 - Type—Mode of the multicast protocol
 - For DVMRP—Dense
 - For PIM—Sparse, Dense, or Sparse-Dense
 - For IGMP—Local
 - Interfaces
 - registered—Number of interfaces on which the protocol is configured
 - owned—Number of interfaces that a protocol owns. If you configure only IGMP on an interface, IGMP owns the interface. However, if you configure IGMP and either PIM or DVMRP on the same interface, PIM or DVMRP owns the interface.
 - Registered interfaces—Information about interfaces on which the protocol is configured:
 - Types and specifiers of interfaces. For details about interface types and specifiers, see Interface Types and Specifiers in *JunosE Command Reference Guide*.
 - Protocols configured on the interface and the protocol that owns the interface. If you configure only IGMP on an interface, IGMP owns the interface. However, if you configure IGMP and PIM or DVMRP on the same interface, PIM or DVMRP owns the interface.
- Admission-bandwidth—Actual admission bandwidth/configured admission bandwidth (in bps)
- QoS Adjust—Bandwidth of QoS adjustment, in bps
 - Count—Number of multicast protocols on the VR

- Active <S,G> count—Number of active S,G data streams on the interface
- Blocked <S,G> count—Number of blocked S,G data streams on the interface

- Example

```

host1#show ip multicast protocols
Multicast protocols:

Protocol Pim
  Type: Sparse
  Interfaces: 1 registered, 1 owned
  Registered interfaces:
    ATM2/1.103 (103.0.0.2/24) owner Pim

Protocol Igmp
  Type: Local
  Interfaces: 1000 registered, 1000 owned
  Registered interfaces:
    ATM2/0.131 (13.0.0.1/24) local Igmp owner Igmp
      Admission-bandwidth 2000000/10000000 bps
      QoS Adjust 2000000 bps
    Active <S,G> count   15
    Blocked <S,G> count  10

    ATM2/0.132 (13.0.0.2/24) local Igmp owner Igmp
      Admission-bandwidth 0/10000000 bps
      QoS Adjust 0 bps
    Active <S,G> count   25
    Blocked <S,G> count  10

    ATM2/0.133 (13.0.0.3/24) local Igmp owner Igmp
      Admission-bandwidth 8000000/10000000 bps
      QoS Adjust 0 bps
    ...
  Count: 2 protocols

```

- See show ip multicast protocols.

show ip multicast protocols brief

- Use to display a summary of information about multicast protocols enabled on the router.
- Field descriptions
 - Protocol—Name of the multicast protocol
 - Registered Interfaces—Number of interfaces on which the protocol is configured
 - Owned Interfaces—Number of interfaces that a protocol owns. If you configure only IGMP on an interface, IGMP owns the interface. However, if you configure IGMP and either PIM or DVMRP on the same interface, PIM or DVMRP owns the interface.
 - Type—Mode of the multicast protocol
 - For DVMRP—Dense
 - For PIM—Sparse, dense, or sparse-dense

- For IGMP—Local
- Count—Number of multicast protocols on the VR

- Example

```
host1#show ip multicast protocols brief
```

Protocol	Registered Interfaces	Owned Interfaces	Type
Pim	2	2	Sparse Dense
Igmp	1	0	Local

```
Count: 2 protocols
```

- See show ip multicast protocols.

show ip multicast routing

- Use to display information about the status of IP multicast on the VR.
- Example

```
host1#show ip multicast routing
```

```
Multicast forwarding is enabled on this router
```

```
Multicast graceful restart is complete (timer 0 seconds) on this router
```

```
Multicast cache-miss processing is enabled on this router
```

- See show ip multicast routing.

show mroute port count

- Use to display the mroute port outgoing interface, limits, counts, bandwidth settings, and bandwidth accepted.



NOTE: This command displays information for mroutes on a port across all virtual routers.

- Field descriptions
 - Port—Slot/port value on the router
 - Limit—Port limit value defined for the specified port; -l indicates that no mroute port limits have been configured for the port
 - Count—Number of mroute outgoing interfaces on the specified port
 - BW bps—Bandwidth limit, in bits per second
 - Priority BW bps—Priority bandwidth limit, in bits per second
 - Admitted—Bandwidth admitted on the port, in bits per second
- Example

```
host1#show mroute port count
```

BW Port	Priority Limit	Count	bps	BW bps	Hysteresis	Admitted
1/1/0	None	1	None	None	85	0
1/1/1	None	2	15000	10000	85	2000

- See show mroute port count.

Support for Multicast Router Information

When you enable multicast routing on a virtual router, the router acts as a multicast router information (mrinfo) server. This feature enables the router to respond to mrinfo requests from other network hosts. Specifically, E Series virtual routers respond to DVMRP ask neighbors and DVMRP ask neighbors2 requests.

Each virtual router responds to mrinfo requests with a list of multicast interfaces and their IP addresses. If appropriate, the virtual router also supplies the following information for each interface:

- Current functional status of the interface (for example, if the interface is down).
- Information as to whether the interface is disabled and the reason for the interface being disabled—either because IP is not configured on the interface or because the interface has been disabled through the software.
- Whether the interface is performing the IGMP queries for this subnet.
- Information about PIM neighbors:
If PIM is configured on the interface, the virtual router supplies a list of the interface's PIM neighbors and indicates which neighbors are leaf neighbors.
- Information about DVMRP and GRE tunnels:
If the interface is an endpoint of a tunnel, the virtual router specifies the IP address of the endpoint of the tunnel.

BGP Multicasting

BGP multicasting (MBGP) is an extension of the BGP unicast routing protocol. Many of the functions available for BGP unicasting are also available for MBGP.

The MBGP extensions specify that BGP can exchange information within different types of *address families*. The address families available are unicast IPv4, multicast IPv4, and VPN-IPv4. When you enable BGP, the router employs unicast IPv4 addresses by default.

We recommend you be thoroughly familiar with BGP before configuring MBGP. See *Configuring BGP Routing* in the *JunosE BGP and MPLS Configuration Guide* for detailed information about BGP and MBGP.

Investigating Multicast Routes

You can use the **mtrace** command to trace the path that multicast packets take from a source to a destination through a multicast group address. This command is similar to the **traceroute** command for investigating unicast routes.

mtrace

- Use to trace the path that multicast packets take to a destination.
- Specify the unicast IP address of the source for the packets.
- To direct the packets to a particular destination, specify the unicast address for that destination. If you do not specify a destination, the router traces the route from the device on which you issue the command.
- To direct the packets through a particular multicast group address, specify that multicast group address. If you do not specify a multicast group address, the router traces the route through the MBone audio multicast group.
- To send the trace to a particular device, specify the IP address of that device. If you do not specify a response address, the router sends the trace to an IP address on the router.
- To investigate a problem at a particular point in the route, specify the maximum number of hops for the trace. The default number of hops is 64.
- The trace starts at the destination and works back to the source.
- Field descriptions
 - Tracing multicast route from *a.a.a.a* to *b.b.b.b* for group *c.c.c.c* using response address *d.d.d.d*—A description of the trace is as follows:
 - *a.a.a.a*—IP address of the source
 - *b.b.b.b*—IP address of the destination
 - *c.c.c.c*—IP address of the multicast group
 - *d.d.d.d*—IP address of the router to which the router sends the trace
 - Received mtrace response packet of length *n*—Length of the response packet, in bytes
 - Each line of the trace has the following format: *hops. ip-address Protocol: protocol FwdingCode:forwarding code*
 - *hops*—Number of hops from the destination to this intermediate router
 - *ip-address*—IP address of the intermediate router

- *protocol*—Multicast protocol running on the intermediate router. A value of 12 indicates IGMP; other values comply with A “*traceroute*” Facility for IP Multicast – draft-ietf-idmr-traceroute-ipm-07.txt.
- *FwdingCode*—Forwarding information or error associated with this hop. For example, RPF iif indicates that the request arrived on the expected RPF interface for this source group. For more information about the forwarding information or error codes, see A “*traceroute*” Facility for IP Multicast – draft-ietf-idmr-traceroute-ipm-07.txt.
- Example

```
host1#mtrace 100.4.4.4 40.1.1.1 232.1.1.1
Tracing multicast route from 100.4.4.4 to 40.1.1.1 for group 232.1.1.1 using response address
10.6.129.56
(Press ^c to stop.)
Received mtrace response packet of length 88
1. 40.1.1.1 Protocol: PIM(3) FwdingCode: RPF iif(9)
2. 21.2.2.2 Protocol: PIM(3) FwdingCode: Reached RP(8)
```
- There is no **no** version.
- See mtrace.

CHAPTER 2

Configuring IGMP

IP hosts use Internet Group Management Protocol (IGMP) in IPv4 to report their multicast group memberships to neighboring routers. Similarly, multicast routers, such as an E Series router, use IGMP to discover which of their hosts belong to multicast groups.

This chapter describes how to configure IGMP for IP multicast on an E Series router; it contains the following sections:

- [IGMP Overview on page 46](#)
- [Platform Considerations on page 47](#)
- [References on page 48](#)
- [Before You Begin on page 48](#)
- [Configuring Static and Dynamic IGMP Interfaces on page 48](#)
- [Enabling IGMP on an Interface on page 50](#)
- [Configuring IGMP Settings for an Interface on page 51](#)
- [Specifying Multicast Groups on page 54](#)
- [Assigning a Multicast Group to an Interface on page 55](#)
- [Configuring Group Outgoing Interface Mapping on page 55](#)
- [Configuring Access Node Control Protocol for IGMP on page 56](#)
- [Configuring SSM Mapping on page 56](#)
- [Limiting the Number of Accepted IGMP Groups on page 57](#)
- [Including and Excluding Traffic on page 59](#)
- [Configuring Explicit Host Tracking on page 60](#)
- [Accepting IGMP Reports from Remote Subnetworks on page 61](#)
- [Disabling and Removing IGMP on page 62](#)
- [Monitoring IGMP on page 63](#)
- [IGMP Proxy Overview on page 73](#)
- [Configuring IGMP Proxy on page 74](#)
- [Establishing the IGMP Proxy Baseline on page 76](#)
- [Monitoring IGMP Proxy on page 76](#)

IGMP Overview

The IPv4 address scheme assigns class D addresses for IP multicast. IGMP is the protocol that uses these addresses, which can be in the range 224.0.0.0 to 239.255.255.255. The following addresses have specific functions or are unavailable:

- 224.0.0.0 is reserved—you cannot assign it to a group.
- 224.0.0.1 is the all-hosts address—a packet sent to this address reaches all hosts on a subnet.
- 224.0.0.2 is the all-routers address—a packet sent to this address reaches all routers on a subnet.

This implementation of IGMP complies with IGMP versions 1, 2, and 3. IGMPv3 supports source-specific join and leave messages and is backward compatible with IGMPv1 and IGMPv2.

IGMPv2 mode interfaces exchange the following types of messages between routers and hosts:

- Group membership queries
- Group membership reports
- Leave group membership messages

IGMPv3 mode interfaces exchange the following types of messages with IGMPv3 hosts:

- Group membership queries
- IGMPv3 group membership reports

Group Membership Queries

A multicast router can be a querier or a nonquerier. Only one querier is on a network at any time. Multicast routers monitor queries from other multicast routers to determine the status of the querier. If the querier detects a query from a router with a lower IP address, it relinquishes its role to that router.

IGMPv1 and IGMPv2 mode interfaces send two types of group membership queries to hosts on the network:

- General queries to the all-hosts group address (224.0.0.1)
- Specific queries to the appropriate multicast group address

IGMPv3 mode interfaces send the following types of queries to IGMPv3 hosts:

- General queries
- Group-specific queries
- Source-specific queries

The purpose of a group membership query is to discover the multicast groups to which a host belongs.

IGMPv2 and IGMPv3 group membership queries have a Max Response Time field. This response time is the maximum amount of time that a host can take to reply to a query.

Group Membership Reports

When a host receives a group membership query, it identifies the groups associated with the query and determines to which groups the query belongs. The host then sets a timer, with a value less than the Max Response Time field in the query, for each group to which it belongs.

When the timer expires, the host sends a group membership report to the group address. When a multicast router receives a report, it adds the group to the membership list for the network and sets a timer to the *group membership interval*. The router calculates the group membership interval using the following formula of configurable IGMP values:

$(\text{query interval} \times \text{robustness value}) + \text{query maximum response time}$

If this timer interval expires before the router receives another group membership report, the router determines that the group has no members left on the network.

IGMPv3 supports an extended report format you can use to report multiple groups and source lists in a single report.

Leave Group Membership Messages

When a host leaves a group, it sends a leave group membership message to multicast routers on the network. A host generally addresses leave group membership messages to the all-routers group address (224.0.0.2).

Platform Considerations

For information about modules that support IGMP on the ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support IGMP.

For information about modules that support IGMP on the E120 and E320 Broadband Services Routers:

- See *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about the modules that support IGMP.

References

For more information about IGMP, see the following resources:

- IGMP-based Multicast Forwarding (“IGMP Proxying”)—draft-ietf-magma-igmp-proxy-00.txt (May 2002 expiration)
- RFC 2236—Internet Group Management Protocol, Version 2 (November 1997)
- RFC 2933—Internet Group Management Protocol MIB (October 2000)
- RFC 3292—General Switch Management Protocol (GSMP) V3 (June 2002)
- RFC 3376—Internet Group Management Protocol (October 2002)
- GSMP extensions for layer2 control (L2C) Topology Discovery and Line Configuration—draft-wadhwa-gsmp-l2control-configuration-00.txt (July 2006 expiration)

Before You Begin

You can configure IGMP on IPv4 multicast interfaces.


For information about IPv4 multicasting, see [“Configuring IPv4 Multicast” on page 3](#). For information about configuring IP interfaces, see *Configuring IP* in the *JunosE IP, IPv6, and IGP Configuration Guide*. For information about configuring IPv6 interfaces, see *Configuring IPv6* in the *JunosE IP, IPv6, and IGP Configuration Guide*.

For information about configuring multicast on IPv6 interfaces, see [“Configuring IPv6 Multicast” on page 145](#).

Configuring Static and Dynamic IGMP Interfaces

The router supports *static* and *dynamic* IGMP interfaces. Unlike static interfaces, dynamic interfaces are not restored when you reboot the router. For some protocols, dynamic layers can build on static layers in an interface; however, in a dynamic IGMP interface, all the layers are dynamic. See [Figure 6 on page 49](#) for examples of static and dynamic IGMP interfaces.

Figure 6: Static and Dynamic IGMP Interfaces

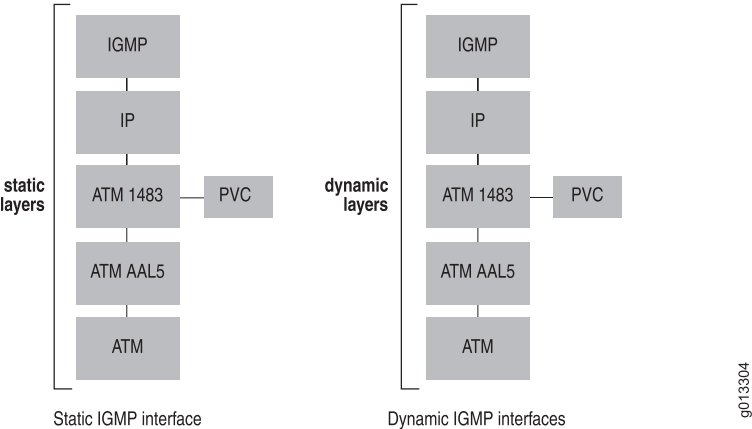

You configure static IGMP interfaces by using software such as the CLI or an SNMP application; you configure dynamic IGMP interfaces by using a profile. A profile constitutes a set of attributes for an interface; a profile for dynamic IGMP interfaces contains attributes for configuring all the layers in the interface.

You define a profile by using the same CLI commands that you use to configure a static IGMP interface; however, the mode in which you use the commands differs. Use the commands in Interface Configuration mode to configure a static IGMP interface and in Profile Configuration mode to define a profile.

When you have defined a profile, you can apply it to an interface or a group of interfaces. Profiles provide an efficient method of creating and managing large numbers of dynamic interfaces. For detailed information about creating and assigning profiles, see *Configuring Dynamic Interfaces* in the *JunosE Link Layer Configuration Guide*. When you create a profile for dynamic IGMP interfaces, specify attributes for configuring all layers in the interface.

You use the following IGMP commands to configure a static IGMP interface. You also use these commands to define the attributes for the IGMP layer when you create a profile for dynamic IGMP interfaces:

Table 5: IGMP Commands

ip igmp	ip igmp query-max-response-time
ip igmp access-group	ip igmp robustness
ip igmp access-source-group	ip igmp ssm-map enable
ip igmp apply-oif-map	ip igmp ssm-map static
ip igmp explicit-tracking	ip igmp query-interval
ip igmp group limit	ip igmp static-exclude
ip igmp immediate-leave	ip igmp static-group

Table 5: IGMP Commands (*continued*)

ip igmp last-member-query-interval	ip igmp static-include
ip igmp promiscuous	ip igmp version
ip igmp querier	multicast group port limit
ip igmp querier-timeout	

The following sections describe the tasks associated with these and other **ip igmp** commands.

You can also use various IGMP-specific RADIUS attributes in RADIUS Access-Accept messages as an alternative method of configuring certain values. See *Configuring RADIUS Attributes* in the *JunosE Broadband Access Configuration Guide* for additional information.

Enabling IGMP on an Interface

You must start IGMP on each interface that you want to use the protocol. You can configure IGMP and either PIM or DVMRP on the same interface. If you configure only IGMP on an interface, IGMP owns that interface. If you configure IGMP and either PIM or DVMRP on an interface, PIM or DVMRP owns the interface.

By enabling IGMP, the router processes incoming multicast packets and creates an entry in the multicast routing table. If neither PIM nor DVMRP own the interface (for example, when only IGMP is configured), then the packets are locally routed to other interfaces on the router. PIM or DVMRP must be configured on the interface for packets to be sent to other routers.

For networks that use only IGMPv1, you can configure an interface to operate in IGMPv1 mode. However, IGMPv2 and IGMPv3 interfaces support IGMPv1 hosts. In an IGMPv1 network, you must configure one interface to act as a querier. In an IGMPv2 or IGMPv3 network, the querier is the router with the lowest IP address.

To start IGMP, complete the following steps:

1. Enable IGMP on the interface (IGMPv2 is the default version).
2. (IGMPv1 or IGMPv3) Specify the IGMP version for the interface.
3. (IGMPv1 only) Specify that the interface act as the querier for the network.

ip igmp

- Use to enable IGMP on an interface and to set the IGMP version to IGMPv2. Use the **ip igmp version** command to specify a different IGMP version.
- Example


```
host1:boston(config-if)#ip igmp
```
- Use the **no** version to disable IGMP on an interface.
- See **ip igmp**.

ip igmp querier

- Use to specify that this IGMPv1 interface acts as a querier.



NOTE: This command is valid only for interfaces on which you configured IGMPv1.

- By default, IGMPv1 interfaces act as queriers.
- Example

```
host1:boston(config-if)#ip igmp querier
```
- Use the **no** version to cause the interface to not act as a querier.
- See `ip igmp querier`.

ip igmp version

- Use to set the IGMP version (1, 2, or 3) for the interface or specify a passive interface with only multicast-data-forwarding capability (passive).
- Example

```
host1:boston(config-if)#ip igmp version 1
```
- Use the **no** version to set the version to the default, IGMPv2.
- See `ip igmp version`.

Configuring IGMP Settings for an Interface

When you start IGMP on an interface, it operates with the default settings. You can, however, modify:

- The method that the router uses to remove hosts from multicast groups (IGMPv2 and IGMPv3 interfaces only)
- The query time interval for the querier sends group membership messages
- The time that a non-querier waits for queries from the current querier before sending query messages to assume responsibility of querier
- The time that a new querier waits before sending query messages after it assumes responsibility from another querier
- The time that a host can take to reply to a query (maximum response time)
- The number of times that the router sends each IGMP message from this interface

ip igmp immediate-leave

- Use to specify that, when the router receives a leave group membership message from a host associated with this interface, the router immediately removes that host from the multicast group.



CAUTION: Issue this command only on IGMPv2 and IGMPv3 interfaces to which one IGMP host is connected. If more than one IGMP host is connected to a LAN through the same interface, and one host sends a leave group message, the router removes all hosts on the interface from the multicast group. The router loses contact with the hosts that must remain in the multicast group until they send join requests in response to the router's next general group membership query.

- Use the IGMP-Immediate-Leave RADIUS attribute (VSA 26-97) in RADIUS Access-Accept messages as an alternative method of configuring this value. The RADIUS setting takes precedence over a CLI setting.
- Example

```
host1:boston(config-if)#ip igmp immediate-leave
```
- Use the **no** version to restore the default behavior, in which the router removes a host from a multicast group if that host does not return a group membership report within a certain length of time after receiving a group membership query from the router.
- See `ip igmp immediate-leave`.

ip igmp last-member-query-interval

- Use to specify the last-member-query-interval value, in the range 1–255 tenths of a second. When the router receives an IGMPv2 leave message or an IGMPv3 state change report, it sends out a query and expects a response within the time specified by this value.
- Using a lower value enables members to leave groups more quickly.
- Example

```
host1:boston(config-if)#ip igmp last-member-query-interval 90
```
- Use the **no** version to restore the default, 10-tenths of a second (1 second).
- See `ip igmp last-member-query-interval`.

ip igmp querier-timeout

- Use to set the time, in the range 1–400 seconds, that the interface waits for queries from the current querier before sending query messages to assume responsibility of querier.
- Example

```
host1:boston(config-if)#ip igmp querier-timeout 200
```


- Use the **no** version to set the time to the default, twice the query interval.
- See `ip igmp querier-timeout`.

ip igmp query-interval

- Use to specify how often, in the range 1–300 seconds, the interface sends group membership queries.
- Use the IGMP-Query-Interval RADIUS attribute (VSA 26-95) in RADIUS Access-Accept messages as an alternative method of configuring this value. The RADIUS setting takes precedence over a CLI setting.
- Example

```
host1:boston(config-if)#ip igmp query-interval 100
```
- Use the **no** version to set the polling interval to the default, 125 seconds.
- See `ip igmp query-interval`.

ip igmp query-max-response-time

- Use to specify the time in tenths of a second in which the host must respond to a group membership query. The possible period ranges are as follows:
 - IGMPv2: 1–255 tenths of a second
 - IGMPv3: 1–31744 tenths of a second
- IGMPv2 and IGMPv3 include this value in IGMP query messages sent out on the interface.
- You cannot set this value on interfaces running IGMPv1.
- Using a lower value enables members to join and leave groups more quickly.
- Use the IGMP-Max-Resp-Time RADIUS attribute (VSA 26-96) in RADIUS Access-Accept messages as an alternative method of configuring this value. The RADIUS setting takes precedence over a CLI setting.
- Example

```
host1:boston(config-if)#ip igmp query-max-response-time 120
```
- Use the **no** version to restore the default, 100 tenths of a second (10 seconds).
- See `ip igmp query-max-response-time`.

ip igmp robustness

- Use to specify the number of times that the router sends each IGMP message from this interface.
- Use a higher value to ensure high reliability from IGMP.
- Specify a number in the range 1–4.
- Example

```
host1:boston(config-if)#ip igmp robustness 2
```

- Use the **no** version to restore the default, 3.
- See ip igmp robustness.

Specifying Multicast Groups

You can use a standard-format or extended-format IP access list to specify the multicast groups that a host can join.

ip igmp access-group

- Use to restrict hosts on this subnetwork to join only multicast groups that appear on the specified IP access list.
- When this feature is configured, the access list is queried whenever the router receives an IGMPv2 report requesting membership of a group, and IGMPv3 ChangeToInclude or IsExclude reports. The request is rejected if the access list query fails.
- The **ip igmp access-group** command accepts standard or extended-format access lists. Because the extended format enables you to specify both the source address and the destination group address, the source address must be set to any. For example, **access-list test permit ip host 224.128.64.32 any**.
- Note that in the access list specified when you issue this command, the group is specified before the source.
- Example

```
host1:boston(config-if)#ip igmp access-group boston-list
```
- Use the **no** version to dissociate the interface from an access list and to enable hosts on the interface to join any multicast group.
- See ip igmp access-group.

ip igmp access-source-group

- Use to restrict hosts on this subnetwork to membership in those (S,G) pairs (also known as *channels*) included on the specified IP access list.
- When this feature is configured, both source and group addresses query the associated access list whenever the router receives an IGMPv3 report requesting membership of the (S,G) pairs (that is, the router receives an IGMPv3 ChangeToInclude, IsInclude, or AllowNewSource group report). The request is rejected if the access list query fails.
- The **ip igmp access-source-group** command accepts standard or extended-format access lists. The extended format enables you to specify both the source address and the destination group address; for example, **access-list test permit ip host 10.1.1.1 host 224.128.64.32**. Typically, you use the extended-format access list. If you instead use the standard-format access list, you explicitly specify the source address to create the access list, but the group address is implicitly assumed to be **any**.
- Note that in the access list specified when you issue this command, the source is specified before the group.
- Example

host1:boston(config-if)#**ip igmp access-source-group dallas-list**

- Use the **no** version to remove any access list restriction.
- See `ip igmp access-source-group`.

Assigning a Multicast Group to an Interface

You can assign an interface to send and receive all traffic for a particular multicast group. This feature enables you to control the IGMP traffic and to test the behavior of multicast protocols in the network.

ip igmp static-group

- Use to send and receive all traffic for a multicast group from a specific interface.
- The interface sets no timers for this group.
- Example

host1:boston(config-if)#**ip igmp static-group 225.1.2.3**

- Use the **no** version to stop the interface from sending all traffic for the group.
- See `ip igmp static-group`.

Configuring Group Outgoing Interface Mapping

You can configure an IGMP interface to use a different outgoing interface (OIF) for multicast-data-forwarding by applying an OIF map. When you configure an OIF map on an IGMP interface, the map is applied to all IGMP membership requests that the interface receives.

To configure OIF mapping on an interface:

1. Create an OIF map using the **ip igmp oif-map** command at the global level.
2. Apply the OIF map to an interface using the **ip igmp apply-oif-map** command.

To properly configure an interface used in the OIF map for multicast-data-forwarding capability, you must configure the interface version as passive with the **ip igmp version** command. You can either specify a passive interface as the OIF or specify the OIF as *self* (to use the IGMP interface as the OIF) in the **ip igmp oif-map** command.

ip igmp apply-oif-map

- Use to apply the specified outgoing interface (OIF) map to the current interface.
- Example

host1(config-subif)#**ip igmp apply-oif-map OIFMAP**

- Use the **no** version to remove the outgoing interface map association from the interface.
- See `ip igmp apply-oif-map`.

ip igmp oif-map

- Use to create an OIF map.
- Example

```
host1(config)#ip igmp oif-map OIFMAP atm 3/0.1 232.0.0.1/32 51.0.0.1/32
host1(config)#ip igmp oif-map OIFMAP atm 3/0.2 232.0.0.1/32 51.0.0.2/32
host1(config)#ip igmp oif-map OIFMAP atm 3/0.3 233.0.0.1/32
host1(config)#ip igmp oif-map OIFMAP atm 3/0.4 233.0.0.0/24 51.0.0.1/32
host1(config)#ip igmp oif-map OIFMAP atm 3/0.5 233.0.0.0/24 51.0.0.2/32
host1(config)#ip igmp oif-map OIFMAP self 0.0.0.0/0 51.0.0.0/24
```

- Use the **no** version to remove an outgoing interface map attribute.
- See `ip igmp apply-oif-map`.

ip igmp version

- Use to set the IGMP version (1, 2, or 3) for the interface or specify a passive interface with only multicast-data-forwarding capability (passive).
- Example

```
host1:dallas(config-if)#ip igmp version passive
```
- Use the **no** version to set the version to the default, IGMPv2.
- See `ip igmp version`.

Configuring Access Node Control Protocol for IGMP

By using ANCP, IGMP is no longer terminated or proxied at the access node. Instead, IGMP passes through the access node transparently. B-RAS terminates both the data PVC and IGMP. After possible user permission verification, B-RAS may instruct the access node, by using GSMP, to establish a multicast branch for the subscriber port.

Access Node Control Protocol (ANCP), also known as Layer 2 Control (L2C) works with a special IGMP session to collect OIF mapping events in a scalable manner. For additional information about configuring ANCP for IGMP, see *Configuring ANCP* in the *JunosE IP Services Configuration Guide*.

For additional information about OIF mapping, see [“Configuring Group Outgoing Interface Mapping” on page 55](#).

Configuring SSM Mapping

Source-specific multicast (SSM) mapping enables the router to determine one or more source addresses for group G. The mapping effectively translates IGMPv1 or IGMPv2 membership reports to an IGMPv3 report, enabling the router to continue as if it had initially received an IGMPv3 report. After the router is joined to these groups, it sends out PIM join messages and continues to enable joining from these groups, as long as it continues to receive IGMPv1 and IGMPv2 membership reports and no change occurs to the SSM mapping for the group.

When you statically configure SSM mapping, the router can discover source addresses from a statically configured table.

The following conditions apply when you configure SSM mapping:

- When SSM mapping is enabled, and either you have not configured a static SSM map or the router cannot find any matching access lists, the router continues to accept (*G) groups. The PIM SSM range must deny any unacceptable SSM group addresses.
- When you issue the **no ip igmp ssm-map enable** command, the router removes all SSM map (S,G) states and establishes a (*G) state.
- You can enter multiple **ssm-map static** commands for different access lists. Also, you can enter multiple **ssm-map static** commands for the same access list, as long as the access list uses different source addresses.
- SSM maps do not process statically configured groups.

ip igmp ssm-map enable

- Use to enable SSM mapping on the router. SSM mapping statically assigns sources to IGMPv1 and IGMPv2 groups. You must use SSM mapping for IGMPv1 and IGMPv2 hosts to interoperate with PIM SSM. SSM mapping enables the router to use a statically configured list to translate (*G) memberships to (S,G) memberships.
- Example

```
host1:boston(config)#ip igmp ssm-map enable
```
- Use the **no** version to disable SSM mapping on the router.
- See `ip igmp ssm-map enable`.

ip igmp ssm-map static

- Use to specify an access list and source address for use in SSM mapping. SSM mapping statically assigns sources to IGMPv1 and IGMPv2 groups. You must use SSM mapping for IGMPv1 and IGMPv2 hosts to interoperate with PIM SSM. SSM mapping enables the router to use a statically configured list to translate (*G) memberships to (S,G) memberships.
- Example

```
host1:boston(config)#ip igmp ssm-map static boston-list 51.0.0.1
```
- Use the **no** version to remove the SSM map association.
- See `ip igmp ssm-map static`.

Limiting the Number of Accepted IGMP Groups

By default, there is no limit on the number of IGMP groups that an IGMP interface can accept. However, you can manage multicast traffic on the router by restricting the number of IGMP groups accepted by:

- A specific port on an I/O module
- A specific IGMP interface

If you set limits for both a port and interfaces on that port, the router uses the lower of the two limits when determining how many IGMP groups an interface can accept. For example, if you set a limit of 10 groups for the port and 15 groups for each interface, only 10 groups can be accepted among the interfaces.

However, if you set a limit for a port and that limit is lower than the number of groups currently accepted by the interfaces on that port, the router does not dissociate the groups from the interfaces. The router enforces the new limit on the port when the number of groups associated with the interfaces falls to that limit. For example, if the interfaces on the port have accepted a total of 15 groups, and you set a limit of 10 groups on the port, the router does not disconnect any of the groups and prevents the interfaces from accepting any more groups. Over time, some groups leave the interfaces and, eventually, a maximum of ten groups remain connected.

ip igmp group limit

- Use to limit the number of IGMP groups that an interface can accept.



NOTE: This command is deprecated and might be removed completely in a future release. The function provided by this command has been replaced by the updated by limiting bandwidth of multicast streams using the **ip multicast admission-bandwidth-limit** command.

- Example

```
host1:boston(config-if)#ip igmp group limit 5
```

- Use the **no** version to restore the default behavior, in which there is no limit on the number of IGMP groups that an interface can accept.
- See *ip igmp group limit*.

multicast group port limit

- Use to limit the number of IGMP groups that a port can accept.



NOTE: This command is deprecated and might be removed completely in a future release. The function provided by this command has been replaced by the updated by limiting bandwidth of multicast streams using the **mroute port admission-bandwidth-limit** command.

- Specify the identifier for the port in *slot/port* format (ERX routers) or in *slot/adapter/port* format (E320 router).
 - slot—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), or 0–16 (E320)
 - adapter—Adapter number on the E320 IOA module
 - port—Port number on the I/O or IOA module

- Specify the maximum number of IGMP groups that interfaces can accept.
- Example 1—ERX models

```
host1(config)#multicast group port 3/0 limit 5
```
- Example 2—E320 router

```
host1(config)#multicast group port 3/1/0 limit 5
```
- Use the **no** version to restore the default behavior, in which there is no limit on the number of IGMP groups that a port can accept.
- See multicast group port limit.

Including and Excluding Traffic

IGMPv3 extends IGMPv2 functionality with the ability to include or exclude specific multicast traffic sources. That is, with IGMPv3, hosts signal (S,G) pairs to be included or excluded.

For hosts that cannot signal group membership dynamically, you can use the **ip igmp static-include** or **ip igmp static-exclude** command to statically include or exclude multicast traffic, respectively.

IGMPv3 is the industry-designated standard protocol for hosts to signal channel subscriptions in SSM. For additional information about SSM, see [“PIM Source-Specific Multicast” on page 87](#).

ip igmp static-exclude

- Use to statically exclude the IGMP (S,G) membership for a host that is not capable of dynamically signaling group membership.
- Example

```
host1:boston(config-if)#ip igmp static-exclude 10.1.1.5 225.1.2.3
```
- Use the **no** version to remove the static designation.
- See `ip igmp static-exclude`.

ip igmp static-include

- Use to statically include the IGMP (S,G) membership for a host that is not capable of dynamically signaling group membership.
- Example

```
host1:boston(config-if)#ip igmp static-include 10.1.1.1 225.1.2.3
```
- Use the **no** version to remove the static designation.
- See `ip igmp static-include`.

Configuring Explicit Host Tracking

Explicit host tracking enables the router to explicitly track each individual host that is joined to a group or channel on a particular multi-access network.

Explicit host tracking provides the following:

- Minimal leave latency when a host leaves a multicast group or channel. When the router receives a leave message for a group or channel on an interface, it accesses a list of hosts and immediately stops forwarding traffic if the sender is the last host to request traffic for that group or channel. The leave latency is bound only by the packet transmission latencies in the multi-access network and the processing time in the router.
- Ability to change channels quickly in networks where bandwidth is constrained between a multicast-enabled router and hosts.
- Ability to determine what multicast hosts are joined to particular multicast groups or channels, which is useful for accounting purposes.
- Reduction of control message traffic on the network because, when it receives a leave message, the router no longer needs to send out IGMP queries to verify membership. As a result, interested hosts also do not need to respond to these queries with reports.
- Tracking based on the IGMP reports for hosts in both include and exclude modes for every multicast group or channel on an interface.

When the router is configured for explicit host tracking and starts immediate leave using the host information collected, every leave message received for a group or channel is treated as follows:

- The router checks the number of hosts that receive traffic from the group or channel.
- If the host sending the leave message is the only host, it starts immediate leave for that group or channel on that interface. The router removes the interface from the multicast group or channel immediately, without sending out a group or group-source-specific query and waiting for the last member query interval.
- If the host sending the leave message is not the only host receiving traffic for that group or channel, the router removes the host from the list of hosts on that interface, but keeps the interface in the outgoing interface list for the multicast group or channel. No group or group-source-specific queries are sent.

If one or more hosts that support only IGMP V1 are present on a network, the leave latencies for the multicast groups to which those hosts are joined revert to the IGMP V1 leave latency. This affects only the multicast groups to which these legacy hosts are actually joined at any point in time.

You cannot configure explicit host tracking on passive IGMP interfaces or on IGMP V1 interfaces. When you enable IGMP V2 or V3 on an interface, explicit host tracking is not enabled by default.

When you enable explicit host tracking on an interface that has a membership state, the router does not immediately start performing immediate leave. For a maximum of group membership interval seconds, the router only performs host tracking. Any leave messages that the router receives during this period receive normal leave processing. Any leave messages received after this interval has elapsed receive immediate leave processing, when appropriate.

When explicit host tracking has been enabled on an IGMP V3 interface, even if a group has to downgrade to IGMP V2 due to the presence of an IGMP V2 host, explicit host tracking continues for that group. To avoid this, you can use the `disable-if-igmp-v2-detected` keyword. If you select this option, the router turns off explicit host tracking for the group when IGMP V2 host reports are received for the group on that interface. This option does not have any significance on an interface configured for IGMP V2 and is ignored if provided. Because IGMP V1 does not support leave messages, explicit host tracking is turned off for a group that downgrades to IGMP V1 due to the presence of IGMP V1 hosts.

Explicit host tracking cannot be enabled on an interface that has immediate-leave configured and vice versa. Any attempt to configure immediate-leave on an interface that has explicit host tracking enabled or to configure explicit host tracking on an interface that has immediate-leave enabled is rejected and an error message logged on the screen.

The following example enables IGMP V3 explicit host tracking on interface 3/0.101 with the default configuration where the router continues to perform explicit host tracking for IGMP V2 groups. To override this default configuration, you must use the **`ip igmp explicit-tracking disable-if-igmp-v2-detected`** command.

```
interface 3/0.101
ip igmp version 3
ip igmp explicit-tracking
end
```

ip igmp explicit-tracking

- Use to set explicit host tracking for IP IGMP interfaces.
- To disable explicit host tracking if IGMP V2 hosts are detected, use the `disable-if-igmp-v2-detected` keyword.
- Example


```
host1(config)#ip igmp explicit-tracking
```
- Use the `no version` to disable explicit host tracking on the interface. Use the `no version` with the `disable-if-igmp-v2-detected` keyword to revert to the default explicit host tracking behavior.
- See `ip igmp explicit-tracking`.

Accepting IGMP Reports from Remote Subnetworks

By default, IGMP interfaces accept IGMP reports only from associated subnetworks. You can configure the router to accept IGMP reports from subnetworks that are not associated

with its interfaces. The **igmp promiscuous** command in Router Configuration mode specifies whether interfaces on the router can accept IGMP reports from indirectly connected subnets. To override this global setting on a particular interface, use the **ip igmp promiscuous** command in Interface Configuration mode.

Example In the following example, the router is configured to accept IGMP reports from indirectly connected subnets on all interfaces. The interface on port 0 of the line module in slot 4 is then configured to accept IGMP reports only from directly connected subnets.

```
host1(config)#virtual-router boston
host1:boston(config)#router igmp
host1:boston(config-router)#igmp promiscuous
host1:boston(config-router)#exit
host1:boston(config)#interface serial 4/0
host1:boston(config-if)#ip igmp promiscuous off
```

igmp promiscuous

- Use to enable all IGMP interfaces on the router to accept IGMP reports from hosts on any subnetwork.
- Example

```
host1:boston(config-router)#igmp promiscuous
```
- Use the **no** version to enable IGMP interfaces on the router to accept IGMP reports only from hosts on their associated subnetworks.
- See *igmp promiscuous*.

ip igmp promiscuous

- Use to specify whether the interface accepts IGMP reports from hosts on any subnetwork.
 - Use the **on** keyword to enable the interface to accept IGMP reports from hosts on any subnetwork.
 - Use the **off** keyword to enable the interface to accept IGMP reports only from hosts on subnetworks associated with this interface.
- Example

```
host1:boston(config-if)#ip igmp promiscuous on
```
- Use the **no** version to configure an IGMP interface to use the Router Configuration mode setting to determine the subnetworks from which it can accept IGMP reports.
- See *ip igmp promiscuous*.

Disabling and Removing IGMP

You can disable and reenable IGMP on the VR. You can also remove IGMP from the VR and recreate it on the VR.

igmp disable

- Use to disable IGMP on a VR.
- Example


```
host1(config)#virtual-router boston
host1:boston(config)#router igmp
host1:boston(config-router)#igmp disable
```
- Use the **no** version to enable IGMP on a VR.
- See `igmp disable`.

router igmp

- Use to create and enable IGMP on a VR or to access IGMP Router Configuration mode.
- Example


```
host1(config)#virtual-router boston
host1:boston(config)#router igmp
```
- Use the **no** version to remove IGMP and the IGMP proxy from the VR.
- See `router igmp`.

Monitoring IGMP

You can establish a reference point for IGMP statistics by setting the statistics counters to zero.

To display IGMP parameters, use the **show** commands described in this section.



NOTE: The E120 and E320 routers output for `monitor` and `show` commands is identical to output from other E Series routers, except that the E120 and E320 routers output also includes information about the adapter identifier in the interface specifier (slot/adapter/port).

baseline ip igmp

- Use to set the counters for IGMP statistics to zero, to establish a baseline.
- Example


```
(host1)#baseline ip igmp
```
- There is no **no** version.
- See `baseline ip igmp`.

show ip igmp

- Use to display IGMP information for a VR.
- Field descriptions
 - Routing Process—Routing process for this VR (IGMP)
 - Administrative state—Status of IGMP in the software: enabled or disabled

- Operational state—Status of IGMP on the VR: enabled or disabled
- Total interfaces—Number of interfaces on which you started IGMP
- enabled—Number of interfaces on which IGMP is enabled
- disabled—Number of interfaces on which IGMP is disabled
- learnt groups—Number of multicast groups that the VR has discovered
- IGMP graceful restart duration—Restart interval in seconds
- IGMP Statistics Rcvd—Statistics for IGMP messages received
 - total—Total number of IGMP messages received
 - checksum errors—Number of IGMP messages received with checksum errors
 - unknown types—Number of IGMP messages received that are not group membership queries, group membership reports, or leave group membership messages
 - queries—Number of group membership queries
 - reports—Number of group membership reports
 - leaves—Number of leave group membership messages
- IGMP Statistics Sent—Statistics for IGMP messages sent
 - Total number of group membership queries sent
- Example

```
host1:boston#show ip igmp
Routing Process IGMP, Administrative state enabled, Operational state
enabled
  2 total interfaces, 2 enabled, 0 disabled
0 enabled interfaces performing graceful restart
2 learnt groups
IGMP Statistics:
  Rcvd: 1 total, 0 checksum errors, 0 unknown types
        0 queries, 1 reports, 0 leaves
  Sent: 11 total
```
- See show ip igmp.

show ip igmp groups

- Use to display statically joined and directly connected groups learned through IGMP.
- Field descriptions
 - Grp Address—Address of the multicast group
 - Interface—Interface that discovered the multicast group
 - oif-map—Name of the OIF map and the mapped OIF interface, when a group or source has been mapped to an OIF

- State—IGMP version on the interface
- ExpTim—Time, in seconds, at which the router stops polling for more members of this group
- oldHTo—Time at which the router stops polling for more IGMPv1 members of a group. If this value is 0, the interface has received no IGMPv1 reports for the group.
- Included Sources—Sources included in the multicast group
- Excluded Sources—Sources excluded from the multicast group
- Counts—Number of source-group mappings by version and state
- Example 1—Without OIF mapping

host1:boston#show ip igmp groups

Grp	Address	Interface	State	Reporter	ExpTim	oldHTo
228.1.1.1		FastEthernet1/1	Version3	17.0.0.2	44	0
228.1.1.2		FastEthernet1/1	Version3	17.0.0.2	50	0
228.1.1.3		FastEthernet1/1	Version3	17.0.0.2	48	0
230.1.1.1		FastEthernet1/1	Version3	17.0.0.2	44	0
Included Sources:						
	51.0.0.1					44
	51.0.0.2					44
	51.0.0.3					44
231.1.1.1		FastEthernet1/1	Version3	17.0.0.2	44	0
Excluded Sources:						
	51.0.0.1					0
	51.0.0.2					0
	51.0.0.3					0

Counts: 5 version-3, 0 version-2, 0 version-1, 0 check state, 0 disabled
(5 total)
0 excluded
Source-groups: 3 included, 3 excluded

- Example 2—With OIF mapping

host1:boston#show ip igmp groups

Grp	Address	Interface	State	Reporter	ExpTim	oldHTo
232.1.1.1		ATM5/0.12	Version3	1.1.1.2	371	0
		oif-map	OIFMAP	ATM5/0.121		
232.1.1.1		ATM5/0.13	Version3	1.1.1.3	375	0
		oif-map	OIFMAP	ATM5/0.121		
232.1.1.2		ATM5/0.12	Version3	1.1.1.2	373	0
Included Sources:						
	10.1.1.2	oif-map	OIFMAP	self		373
	10.1.1.10	oif-map	OIFMAP	ATM5/0.120		373
	10.1.1.11	oif-map	OIFMAP	ATM5/0.121		373
232.1.1.2		ATM5/0.13	Version3	1.1.1.3	375	0
Included Sources:						
	10.1.1.2	oif-map	OIFMAP	self		375
	10.1.1.10	oif-map	OIFMAP	ATM5/0.120		375
	10.1.1.11	oif-map	OIFMAP	ATM5/0.121		375

Counts: 4 version-3, 0 version-2, 0 version-1, 0 check state, 0 disabled
(4 total)

0 excluded

Source-groups: 6 included, 0 excluded

- See `show ip igmp groups`.

show ip igmp interface

- Use to display IGMP information for interfaces on which you enabled IGMP.
- Specify the **brief** keyword to see a summary of the information.
- Specify the **count** keyword to see the number of IGMP interfaces.
- Specify the **group** address keyword to see information for interfaces that belong to that group.
- Field descriptions
 - Interface—Type of interface and interface specifier. For details about interface types and specifiers, see *Interface Types and Specifiers* in *JunosE Command Reference Guide*.
 - address—IP address of the interface
 - Administrative state—Status of the interface in the software: enabled or disabled
 - Operational state—Physical status of the interface: enabled or disabled
 - Version—IGMP version
 - State—Function of the interface: querier or nonquerier
 - Query Interval—Time interval in seconds at which this interface sends query messages
 - Other querier present interval—Time in seconds that the interface waits before declaring itself as the querier
 - Maximum response time—Time interval, in tenths of a second, during which this interface waits for a host to respond
 - Last member query interval—Time, in tenths of a second, that this interface waits before sending a new query to a host that sends a group leave message
 - Robustness—Number of times this interface sends IGMP messages
 - Information about whether the interface accepts IGMP reports from hosts on any subnetwork
 - Interface defaults to global promiscuous mode—Interface uses the setting of the **igmp promiscuous** command to determine whether it accepts IGMP reports from hosts on any subnetwork
 - Information about standard IP access lists configured with the **ip igmp access-group** command
 - Inbound access group—Access list specified
 - No inbound access group—No access list specified

- Information about IP access lists configured with the **ip igmp access-source-group** command
 - Inbound access source-group—Access list specified
 - No inbound access source-group—No access list specified
- Information about OIF maps configured with the **ip igmp apply-oif-map** command
 - Inbound apply-oif-map—Map name specified
 - No inbound apply-oif-map—No map name specified
- Immediate Leave—Setting of the **ip igmp immediate-leave** command: enabled or disabled
- Explicit Host Tracking—Setting of the **ip igmp explicit-tracking** command: enabled or disabled
- Max-Group limit—Number of IGMP groups that the interface can accept, as configured with the **ip igmp group limit** command
- Admission-Bandwidth limit—Value of the admission-bandwidth limit set for an interface that accepts IGMP groups, or No Limit
- Group Count—Number of IGMP groups that the interface has accepted
- IOA packet replication—Hardware multicast packet replication interface to which egress multicast packets on this interface are redirected
- Interface statistics Rcvd—Information about IGMP messages received on this interface
 - reports—Number of group membership reports received
 - leaves—Number of group leave messages received
 - wrong version queries—Number of group membership queries received from devices running a different version of IGMP
- Interface statistics Sent—Number of IGMP messages this interface has sent
- Interface statistics Groups learnt—Number of groups this interface has discovered
- Counts—Breakdown of IGMP interfaces
 - down—Number of interfaces down
 - init state—Number of interfaces in the initialization state
 - querier—Number of querier interfaces
 - non-querier—Number of non-querier interfaces
 - Total—Total number of IGMP interfaces
- Example 1

```
host1:boston#show ip igmp interface
Interface ATM2/1.15 address 15.0.0.2/255.255.255.0
Administrative state enabled, Operational state enabled
Interface parameters:
  Version 2
  State Querier
  Query Interval 125 secs, 53 secs before the next query
  Other querier present interval 250 secs
  Maximum response time 100 (in 10ths of a second)
  Last member query interval 10 (in 10ths of a second)
  Robustness 3
  Interface defaults to global promiscuous mode
  No inbound access group
  No inbound access source-group
  No inbound apply-oif-map
  Immediate Leave: disabled
Explicit Host Tracking: enabled
Max-Group limit: No Limit
  Admission-Bandwidth limit: No Limit
  Group Count: 1
Interface statistics:
  Rcvd: 0 reports, 0 leaves, 0 wrong version queries
  Sent: 1 queries
  Groups learnt: 1

Counts: 0 down, 0 init state, 1 querier, 0 non-querier, 1 Total
Counts: 0 down, 0 init state, 1 querier, 0 non-querier, 1 Total
```

- Example 2

```
host1#show ip igmp interface gigabitEthernet 3/0.0
Interface GigabitEthernet3/0.0 address 10.1.1.1/255.255.255.0
Administrative state enabled, Operational state disabled
Interface parameters:
  Version 2
  State Down
  Query Interval 125 secs
  Other querier present interval 250 secs
  Maximum response time 100 (in 10ths of a second)
  Last member query interval 10 (in 10ths of a second)
  Robustness 3
  Interface defaults to global promiscuous mode
  No inbound access group
  No inbound access source-group
  No inbound apply-oif-map
  Immediate Leave: disabled
Explicit Host Tracking: enabled
Max-Group limit: No Limit
  Admission-Bandwidth limit: No Limit
  Group Count: 0
  IOA packet replication gigabitEthernet 3/8.1
Interface statistics:
  Rcvd: 0 reports, 0 leaves, 0 wrong version queries
  Sent: 0 queries
  Groups learnt: 0
```

- See show ip igmp interface.

show ip igmp interface brief

- Use to display a summary of IGMP information for interfaces on which you enabled IGMP.
- Field descriptions
 - Interface—Type of interface and interface specifier. For details about interface types and specifiers, see *Interface Types and Specifiers* in *JunosE Command Reference Guide*.
 - Intf Address—IP address of the interface
 - Ver—IGMP version
 - State—Function of the interface: querier or nonquerier
 - Querier—IP address of the querier on the network to which this interface connects
 - QTime—Time interval, in seconds, at which this interface sends query messages
 - QPTime—Time in seconds that the interface waits before declaring itself as the querier
 - Count—Total number of IGMP interfaces
- Example

```

host1:boston# show ip igmp interface brief
Interface      Intf Address    Ver  State   Querier      QTime  QPTime
-----
fastEthernet0/0 192.168.1.250/24 2    Querier 192.168.1.250 28      0
atm3/0.2        21.1.1.1/8      2    Querier 21.1.1.1      26      0
Count: 2 interfaces

```

- See `show ip igmp interface`.

show ip igmp mapped-oif

- Use to display the current mappings to all mapped outgoing interfaces or to the specified mapped outgoing interface.
- Field descriptions
 - OIF—Outgoing interface used in an OIF map
 - Oper—Operation status of the outgoing interface
 - Group Address—Multicast group IP address associated with the OIF
 - Source Address—Source IP address associated with the OIF
 - Join I/F—IGMP interface associated with the OIF
 - Map Name—Name of the map associated to the OIF
 - Counts—Number of source-group mappings to OIFs
- Example

```
host1# show ip igmp mapped-oif
```

OIF	Oper	Group Address	Source Address	Join I/F	Map Name
ATM5/0.120	Up	232.1.1.2	10.1.1.10	ATM5/0.12	OIFMAP
				ATM5/0.13	OIFMAP
ATM5/0.121	Up	232.1.1.1	*	ATM5/0.12	OIFMAP
				ATM5/0.13	OIFMAP
		232.1.1.2	10.1.1.11	ATM5/0.12	OIFMAP
				ATM5/0.13	OIFMAP

Counts: 3 source-group mappings

- See show ip igmp mapped-oif.

show ip igmp membership

- Use to display IGMP membership information for multicast groups and (S, G) channels.
- Specify the **tracked** keyword to see interface information only for interfaces where explicit host tracking is enabled.
- Field descriptions
 - Group—Multicast group or (S, G) channel
 - Source—(S, G) entries that are forwarding traffic
 - Reporter—Hosts that requested including sources or have not requested excluding sources. If listed under a group, host that sent exclude reports for the group. If listed under a source, host that requested traffic from this source for the group. For any (S, G), if listed under a source, indicates hosts interested in the traffic for this (S, G).
 - ExpTim—Expiration time.
 - Flags
 - M—Uses Oifmap
 - S—SSM mapped
 - T—Tracked
 - 1, 2, 3—IGMP version that the group is in
 - Interface—Type of interface and interface specifier. For details about interface types and specifiers, see Interface Types and Specifiers in *JunosE Command Reference Guide*.
- Example

```
host1# show ip igmp membership
```

```
Flags: M - Uses Oifmap S- SSM mapped T - tracked
      1,2,3 - The version of IGMP the group is in
```

```
Reporter:
```

```
<ip-address> - last reporter if the group is not explicitly tracked
```

```
<n>/<m> - <n> reporters include mode, <m> reporters in exclude
```

Group	Source	Reporter	ExpTim	Flags	Interface
224.0.1.40	*	10.10.1.1	02:41	2S	FastEthernet2/1

224.0.1.50		1/2	02:56	3MT	FastEthernet2/2
		11.10.0.21	02:56		
		11.10.2.22	02:30		
	20.30.0.11				
		11.10.0.23	02:48		
	20.30.0.12				
		11.10.0.21	02:56		
	20.30.0.13				
		11.10.0.21	02:56		
		11.10.0.22	02:30		
		11.10.0.23	02:48		
224.0.1.60		20.20.0.1	01:56	3	FastEthernet2/3
	10.30.0.100		02:45		
	10.30.0.101		02:35		
	10.30.0.102		02:15		
	10.30.0.104		stop		
224.0.1.70		30.20.0.1	stop	3	FastEthernet2/4
	40.30.0.100		01:10		
	40.30.0.101		01.24		
239.0.1.80		2/0	stop	3T	FastEthernet2/5
	50.30.0.100				
		10.10.0.10	02:48		
	50.30.0.101				
		10.10.0.20	02:56		
		10.10.0.10	02:48		
	50.30.0.102	10.10.0.20	02:56		
235.0.1.90		0/3	02:56	2T	FastEthernet2/6
	*				
		12.10.0.10	02:48		
		12.10.0.20	02:56		
		12.10.0.30	02:48		

- See show ip igmp membership.

show ip igmp oif-map

- Use to display all outgoing interface (OIF) maps or the OIF map for the specified map name.
- Field descriptions
 - Map Name—Name of the map associated to the show output
 - Group Prefix—Multicast group IP prefix
 - Source Prefix—Source IP prefix
 - OIF—Outgoing interface associated with the group and source prefix
- Example

host1#show ip igmp oif-map

Map Name	Group Prefix	Source Prefix	OIF

OIFMAP	232.1.1.0/24	0.0.0.0/0	ATM5/0.121
	232.1.1.0/24	10.1.1.2/32	self
	232.1.1.0/24	10.1.1.10/32	ATM5/0.120

232.1.1.3/32	0.0.0.0/0	ATM5/0.130
232.1.1.4/32	0.0.0.0/0	ATM5/0.130

- See `show ip igmp oif-map`.

show ip igmp oif-mapping

- Use to display the mapped OIF that is assigned to a given map-name, group address, and source address.
- Field descriptions
 - OIF-MAP Name—Name of the map requested
 - Group Address—Multicast group IP address requested
 - Source Address—Source IP address requested
 - Mapped OIF—Interface associated with the OIF map
- Example

```
host1#show ip igmp oif-mapping OIFMAP 232.1.1.1 10.1.1.10
```

```
OIF Mapping
OIF-MAP Name   : OIFMAP
Group Address  : 232.1.1.1
Source Address : 10.1.1.10
Mapped OIF     : ATM5/0.120
```

- See `show ip igmp oif-mapping`.

show ip igmp ssm-mapping

- Use to display the SSM mapping state and the source list mapping associated with a multicast group address.
- Field descriptions
 - SSM Mapping—Status of SSM mapping on the interface: Enabled or Disabled
 - Group Address—Multicast group address requested
 - Source List—List of sources mapped to the multicast group address
- Example

```
host1:boston#show ip igmp ssm-mapping 232.1.1.1
```

```
SSM Mapping   : Enabled
Group Address  : 232.1.1.1
Source List    : 172.1.1.1
                : 172.1.1.2
```

- See `show ip igmp ssm-mapping`.

show multicast group limit

- Use to display the number of IGMP groups that ports have accepted and, if configured, the maximum number of groups that ports can accept.
- A value of -1 indicates that no port group limit is configured.
- Only ports that have accepted IGMP groups and ports for which you have configured a limit for the number of IGMP groups appear in this display.
- Field descriptions
 - Port—Identifier of the port in *slot/port* format
 - slot—Number of the chassis slot in the range 0–6 (ERX7xx models) and 0–13 (ERX14xx models)
 - port—Port number on the I/O module
 - limit—Maximum number of IGMP groups that the port can accept. A value of -1 indicates that no limit has been specified.
 - count—Actual number of IGMP groups that the port has accepted
- Example

```

host1:boston#show multicast group limit
Port      limit count
-----
2/0       5      0
2/1      -1      1

```

- See show multicast group limit.


IGMP Proxy Overview

IGMP proxy enables the router to issue IGMP host messages on behalf of hosts that the router discovered through standard IGMP interfaces. The router acts as a *proxy* for its hosts. E Series routers support IGMP proxy versions 2 and 3.

[Figure 7 on page 74](#) shows a router in an IGMP proxy configuration. You enable IGMP proxy on one interface, which connects to a router closer to the root of the tree. This interface is the *upstream interface*. The router on the upstream interface is running IGMP.

You enable IGMP on the interfaces that connect the router to its hosts that are farther away from the root of the tree. These interfaces are known as *downstream interfaces*.

Figure 7: Upstream and Downstream Interfaces

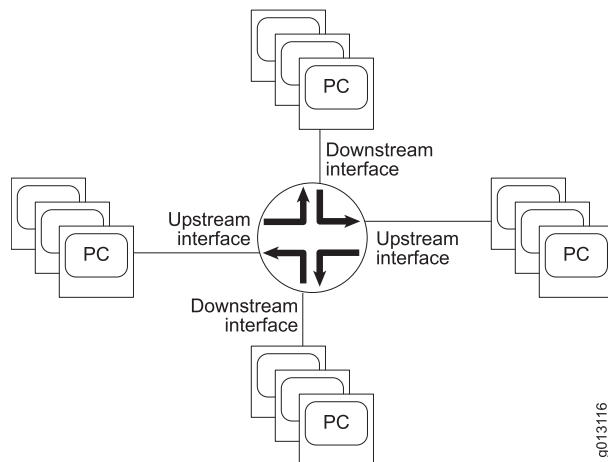

As described in “[IGMP Overview](#)” on page 46, earlier in this chapter, hosts interact with the router through the exchange of IGMP messages. Similarly, when you configure IGMP proxy, the router interacts with the router on its upstream interface through the exchange of IGMP messages. However, when acting as the proxy, the router performs the host portion of the IGMP task on the upstream interface, as follows:

- When queried, sends group membership reports to the group.
- When one of its hosts joins a multicast address group to which none of its other hosts belong, sends unsolicited group membership reports to that group.
- When the last of its hosts in a particular multicast group leaves the group, sends an unsolicited leave group membership report to the all-routers group (244.0.0.2).

Configuring IGMP Proxy

To configure a downstream interface, enable IGMP on that interface. To configure IGMP proxy on the router, complete the following tasks:

1. Enable IP multicast.
`host1(config)#ip multicast-routing`
2. Identify the interface that you want to act as the upstream interface.
3. Enable IGMP proxy on that interface.
`host1(config-if)#ip igmp-proxy`
4. (Optional) Specify how often the router sends unsolicited reports to routers on the upstream interface.
`host1(config-if)#ip igmp-proxy unsolicited-report-interval 600`
5. (Optional) Specify how long the router calculates an IGMPv1 querier router to exists on the subnetwork after the router receives an IGMPv1 query on this interface.
`host1(config-if)#ip igmp-proxy V1-router-present-time 600`

ip igmp-proxy

- Use to enable IGMP proxy on an interface.
- The interface for which you enable IGMP proxy is the upstream interface.



NOTE: You can enable only one upstream interface.

- You can specify either IGMP proxy version 2 or 3. The default is version 2.
- Example


```
host1(config)#ip multicast-routing
host1(config-if)#ip igmp-proxy
```
- Use the **no** version to disable IGMP proxy on an interface.
- See *ip igmp-proxy*.

ip igmp-proxy unsolicited-report-interval

- Use to specify the interval, in tenths of a second, at which the upstream interface transmits unsolicited reports.



NOTE: Issue this command only on the upstream interface. Otherwise, this command has no effect.

- Example


```
host1(config-if)#ip igmp-proxy unsolicited-report-interval 600
```
- Use the **no** version to transmit unsolicited reports using the default value, 400 tenths of a second.
- See *ip igmp-proxy unsolicited-report-interval*

ip igmp-proxy V1-router-present-time

- Use to specify how long, in seconds, the router calculates an IGMPv1 querier router to exist on the subnetwork after the router receives an IGMP V1 query on this interface.



NOTE: Issue this command only on the upstream interface. Otherwise, this command has no effect.

- Example


```
host1(config-if)#ip igmp-proxy V1-router-present-time 600
```
- Use the **no** version to set the time to the default value, 10 seconds.
- See *ip igmp-proxy V1-router-present-time*

Establishing the IGMP Proxy Baseline

You can set the counters for the number of queries received and reports sent on the upstream interface to zero. This feature enables you to establish a reference point, or baseline, for IGMP proxy statistics.

baseline ip igmp-proxy interface

- Use to set the counters for the number of queries received and reports sent on the upstream interface to zero.



NOTE: Issue this command only on the upstream interface. Otherwise, this command has no effect.

- Example
`(host1)#baseline ip igmp-proxy interface`
- There is no **no** version.
- See `baseline ip igmp-proxy interface`.

Monitoring IGMP Proxy

To display IGMP proxy parameters, use the following **show** commands.

show ip igmp-proxy

- Use to display IGMP proxy parameters for a VR.
- Field descriptions
 - Routing Process—IGMP proxy protocol
 - Administrative state—State of IGMP proxy in the software: enabled or disabled
 - Operational state—Operational state of IGMP proxy: enabled or disabled
 - total interface—Number of IGMP proxy interfaces on the VR; currently only one upstream interface per VR
 - state—Operational state of the IGMP proxy interfaces: enabled or disabled
 - multicast group—Number of multicast groups associated with IGMP proxy interfaces
- Example

```
host1#show ip igmp-proxy
Routing Process IGMP Proxy, Administrative state enabled, Operational
state enabled
total 1 upstream interface, state enabled
    6 multicast group
```


- See `show ip igmp-proxy`.

show ip igmp-proxy groups

- Use to display information about multicast groups that IGMP proxy reported.
- Field descriptions
 - Grp Address—Address of the multicast group
 - Interface—Type and specifier of the upstream interface associated with the multicast group
 - Member State—State of the associated group address and interface
 - Idle—Interface is going to send a group membership report to respond to a group membership query for this group
 - Delay—Interface has responded to the latest group membership query for this group
- count—Total number of multicast groups associated with this interface
- Example 1

```
host1#show ip igmp-proxy groups
```

Grp Address	Interface	Member State
225.1.1.1	atm3/0.2	Idle
225.1.1.2	atm3/0.2	Idle
225.1.1.3	atm3/0.2	Idle
225.1.1.4	atm3/0.2	Idle
225.1.1.5	atm3/0.2	Idle
225.1.1.6	atm3/0.2	Idle
count 6		

- Example 2

```
host1#show ip igmp-proxy group 225.1.1.1
```

Grp Address	Interface	Member State
225.1.1.1	atm3/0.2	Idle

- Example 3

```
host1#show ip igmp-proxy group count
```

```
Count: 6 groups
```

- See `show ip igmp-proxy groups`.

show ip igmp-proxy interface

- Use to display information about the interface on which you configured IGMP proxy.
- To view information about a particular interface, enter an interface type and specifier, such as atm 3/0. For details about interface types and specifiers, see *Interface Types and Specifiers* in *JunosE Command Reference Guide*.
- Specify the **brief** keyword to display a summary rather than a detailed description.

- Field descriptions
 - Interface—Type of upstream interface. For details about interface types, see *Interface Types and Specifiers in JunosE Command Reference Guide*.
 - address—Address of upstream interface
 - Administrative state—State of upstream interface in the software: enabled or disabled
 - Operational state—Physical state of upstream interface: enabled or disabled
 - Version—IGMP version on this interface
 - State—Presence of IGMPv1 routers on the same subnet as this upstream interface
 - Unsolicited report interval—Time interval, in tenths of a second, at which this upstream interface sends an unsolicited group membership report
 - Version 1 router present timeout—How long, in seconds, that the upstream interface calculates an IGMPv1 router to exist on the subnet after that interface receives an IGMPv1 group membership query
 - multicast group—Number of multicast groups associated with this upstream interface
 - Interface statistics Rcvd—Statistics for messages received on this interface
 - v1 queries—Number of IGMPv1 group membership queries received
 - v2 queries—Number of IGMPv2 group membership queries received
 - v1 reports—Number of IGMPv1 group membership reports received
 - v2 reports—Number of IGMPv2 group membership reports received
 - Interface statistics Sent—Statistics for messages sent from this interface
 - v1 reports—Number of IGMPv1 leave group reports sent
 - v2 reports—Number of IGMPv2 leave group reports sent
 - leaves—Number of leave group membership messages sent
- Example

```
host1#show ip igmp-proxy interface atm 3/0.2
Interface atm3/0.2 address 21.1.1.1/255.0.0.0
Administrative state enabled, Operational state enabled
Interface parameters:
  Version 2
  State No v1 Router Present
  Unsolicited report interval 10 secs
  Version 1 router present timeout 400 secs
  0 multicast group
Interface statistics:
  Rcvd:  0 v1 query, 6 v2 queries
```

```
0 v1 report, 0 v2 report  
Sent: 0 v1 report, 48 v2 reports, 0 leave
```

- See show ip igmp-proxy interface.

CHAPTER 3

Configuring PIM for IPv4 Multicast

The Protocol Independent Multicast (PIM) protocol is a collection of multicast routing protocols that enables multicast routers to identify other multicast routers to receive packets.

This chapter describes how to configure PIM for IPv4 on E Series routers; it contains the following sections:


- [Overview on page 82](#)
- [Platform Considerations on page 88](#)
- [References on page 88](#)
- [Before You Begin on page 89](#)
- [Enabling PIM on a VR on page 89](#)
- [Disabling PIM on a VR on page 89](#)
- [Enabling PIM on an Interface on page 90](#)
- [Setting a Priority to Determine the Designated Router on page 90](#)
- [Configuring the PIM Join/Prune Message Interval on page 91](#)
- [Configuring an RP Router for PIM Sparse Mode and PIM Sparse-Dense Mode on page 92](#)
- [Configuring BSR and RP Candidates for PIM Sparse Mode on page 94](#)
- [Migrating to BSR from Auto-RP on page 96](#)
- [Switching to an SPT for PIM Sparse Mode on page 96](#)
- [Creating Multicast VPNs on page 96](#)
- [Using PIM Sparse Mode Join Filters on page 107](#)
- [Configuring PIM SSM on page 108](#)
- [Configuring the BFD Protocol for PIM on page 109](#)
- [Removing PIM on page 110](#)
- [Resetting PIM Counters and Mappings on page 110](#)
- [Monitoring PIM on page 111](#)

Overview

The IPv4 implementation of PIM supports PIM dense mode, PIM sparse mode, PIM sparse-dense mode, and PIM source-specific multicast (PIM SSM).

Figure 8 on page 82 represents how PIM builds a source, group (S,G) entry in a source-rooted tree (SRT). When multiple routers are connected to a multiaccess network, one router becomes the designated router. The designated router receives data from the source on interface 1/0 and multicasts the data to its downstream neighbors on interfaces 1/1, 2/0, and 2/1. In the designated router routing table, the entry for this operation lists the source as the IP address of the source and the group as the IP address of the multicast group.

Figure 8: Source-Rooted Tree

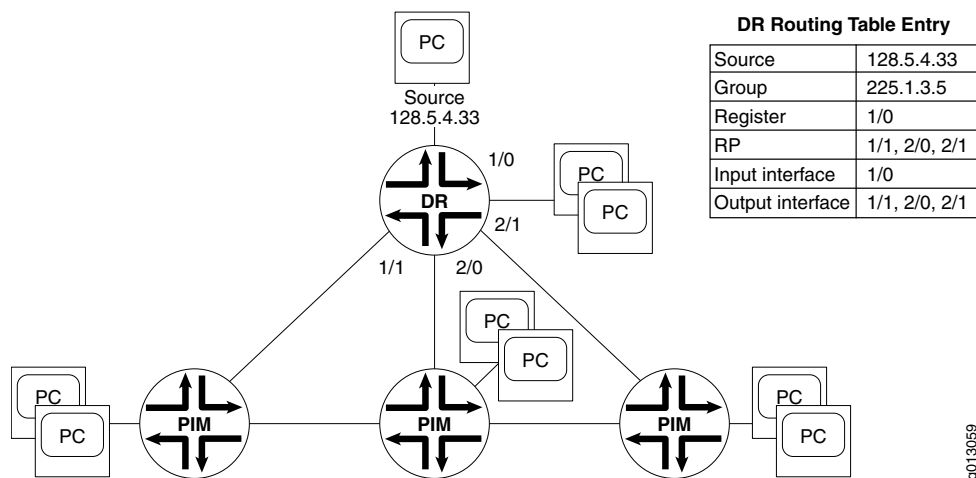

Neighbors exchange hello messages periodically to determine the designated router. The router with the highest network layer address becomes the designated router. If the designated router subsequently receives a hello message from a neighbor with a higher network layer address, that neighbor becomes the designated router.

PIM Dense Mode


PIM dense mode uses a reverse-path multicast, flood-and-prune mechanism. The protocol was developed for situations that meet one or more of the following criteria:

- Sources and receivers are close together, and there are many more receivers than sources.
- There is a constant stream of multicast data.
- There is a lot of multicast data.

Dense-mode routing protocols use *SRT algorithms*. An SRT algorithm establishes a tree that connects each source in a multicast group to the members of the group. All traffic for the multicast group passes along this tree.

Figure 9 on page 83 illustrates how PIM dense mode works. When a source sends a multicast packet to a first-hop router, the first-hop router multicasts that packet to its neighbors. Those neighbors in turn forward the packet to their neighbors and their hosts that belong to the multicast group. If a neighbor has no hosts that belong to the multicast group and has no other PIM neighbors, it returns a prune message to the first-hop router. The first-hop router does not multicast subsequent packets for that group to neighbors who respond with prune messages.

Figure 9: PIM Dense Mode Operation

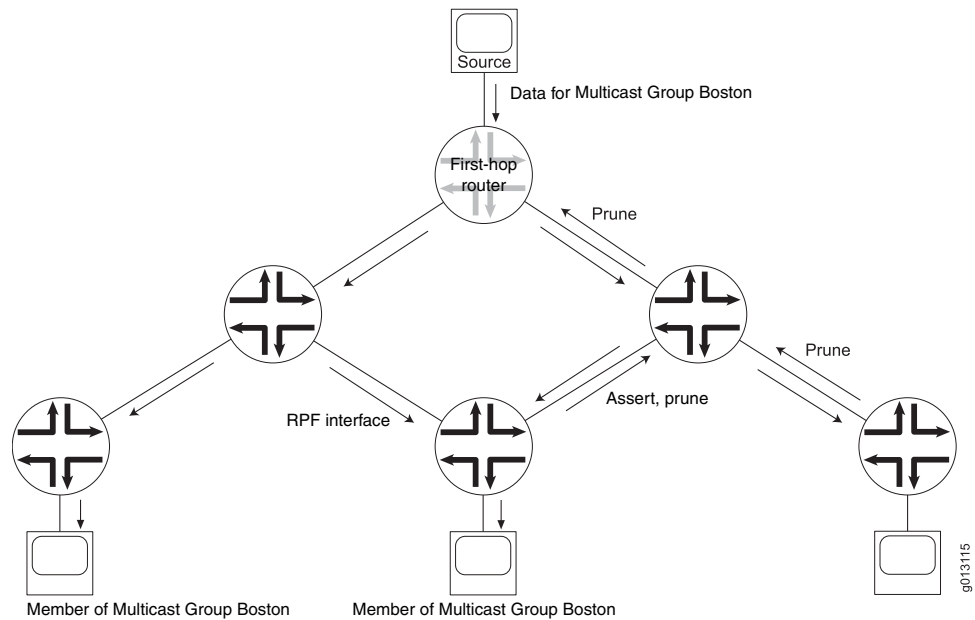

Overriding Prunes


If a host on a previously pruned branch requests to join a multicast group, it sends an IGMP message to its first-hop router. The first-hop router then sends a graft message upstream.

PIM routers send join messages on multiaccess interfaces to override prune messages. For example, if a PIM router sent a prune message to indicate that it had no hosts for a multicast group, and one of its hosts subsequently requests to send a packet to that group, the router sends a join message to the first-hop router.

Preventing Duplication

If there are parallel paths to a source, duplicate packets can travel downstream through different routers to the network. If a forwarding router receives a multicast packet on its outgoing interface, the router identifies that the packet is a duplicate and notifies the upstream routers. See Figure 10 on page 84.

Figure 10: Detecting Duplication

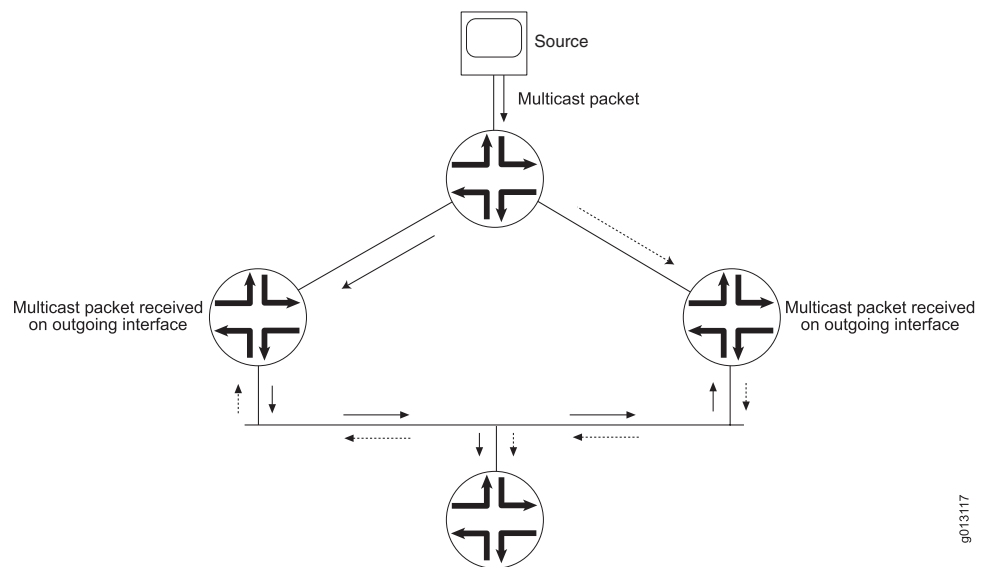

g013117

The upstream routers responsible for the duplication send assert messages to determine which router becomes the forwarder. Downstream routers listen to the assert messages to discover which router becomes the forwarder.

PIM Sparse Mode

This implementation of PIM sparse mode supports the following features:


- Rendezvous point (RP) routers
- Designated routers and designated router election
- Join/prune messages, hello messages, assert messages, and register messages
- Switching from a shared tree to a shortest path tree (SPT)
- (*,*,RP) support for interoperation with dense-mode protocols
- RPF checks of multicast entries when unicast routing configuration changes
- Timers for tree maintenance
- Border, null, Rendezvous Point Tree (RPT), SPT, and wildcard flags

PIM sparse mode resolves situations that meet one or more of the following criteria:

- The multicast group contains few receivers.
- Multicast traffic is infrequent.
- Wide area networks (WANs) separate sources and receivers.

Sparse-mode routing protocols use *shared trees*. In a shared tree, sources forward multicast datagrams to a directly connected router, the designated router. The designated router encapsulates the datagram and unicasts it to an assigned RP router, which then forwards the datagram to members of multicast groups. See [Figure 11 on page 85](#).


Figure 11: PIM Sparse Mode Operation

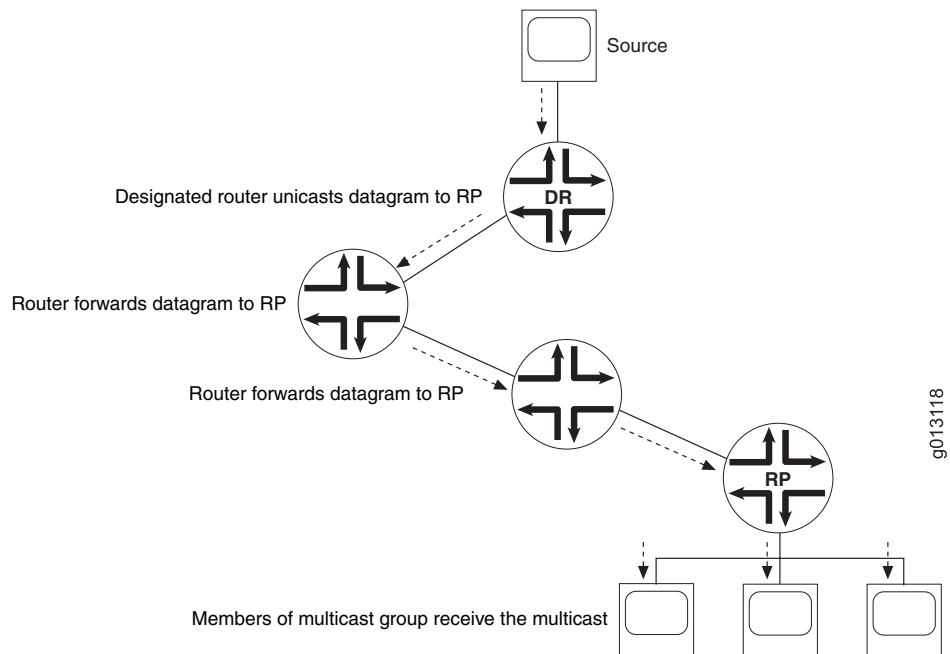

In PIM sparse mode, an RP announces a source and establishes paths from the source to members of a multicast group before multicasting any datagrams. RPs transmit join messages to become part of the shared tree that enables distribution of packets to the multicast group.

However, when a source starts multicasting datagrams, PIM sparse mode can switch to an SRT—known in PIM sparse mode as an SPT—to improve the network's efficiency. Although shared trees minimize the traffic in the network and the costs associated with unnecessary transmission of data, the routes in a shared tree might be longer than those in an SPT. See [Figure 12 on page 85](#).

Figure 12: Shared Tree Versus SPT

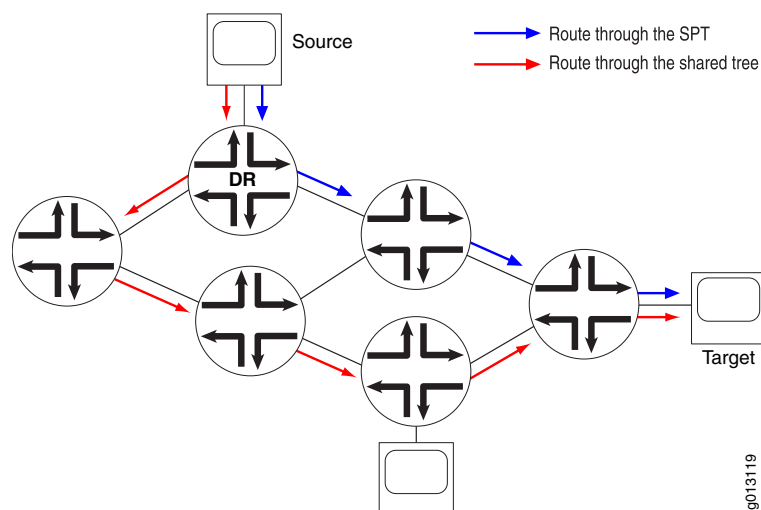

The designated routers on the network determine when the source switches from a shared tree to an SPT. A designated router switches to the SPT when it receives a certain number of packets which you can configure.

When all designated routers associated with a specific RP router have switched to the SPT, the RP router sends a join/prune message toward the multicast source. When the multicast source receives this message, it stops sending multicast data through the SPT.

Joining Groups

A host's designated router (DR) sends join messages to the RP when that host wants to join a group. When a host wants to leave a group, it communicates with its designated router through IGMP. When the designated router no longer has any hosts that belong to a particular group, it sends a prune message to the RP.

Timers

PIM sparse mode uses timers to maintain the networking trees.



NOTE: PIM sparse mode routers poll their neighbors and hosts for various pieces of information at set intervals.

If a PIM sparse mode router does not receive information from a neighbor or host within a specific time, known as the *hold time*, it removes the associated information from its routing tables.

You can configure how often an interface sends hello messages (hello interval) and how often routers send RP announce messages (RP announce interval). The hold-time associated with hello messages is 3.5 times the hello interval, and the holdtime associated with RP announce messages is 2.5 times the RP announce interval.

All other timers are fixed and take the default values recommended in RFC 2934—Protocol Independent Multicast MIB for IPv4 (October 2000).

PIM Sparse Mode Bootstrap Router

PIM sparse mode routers need the address of the rendezvous point (RP) for each group for which they have (*G) state. They obtain this address either through a bootstrap mechanism or through static configuration. PIM sparse mode routers commonly use one of two bootstrap mechanisms: bootstrap router (BSR) or auto-RP. Auto-RP is standards based, but is not used in IPv6 implementations, so BSR configuration has become more popular.

When implemented, BSR operates as follows:

1. One router in each PIM domain is elected the BSR.
2. All the routers in the domain that are configured to be RP candidates periodically unicast their candidacy to the BSR.

3. The BSR picks an RP set from the available candidates and periodically announces this set in a bootstrap message.
4. Bootstrap messages are flooded hop by hop throughout the domain until all routers in the domain learn the RP set.



NOTE: A PIM router can receive group-to-RP mappings from either BSR or auto-RP, but not from both. Because BSR and auto-RP use different mapping algorithms, the mechanisms cannot coexist.



NOTE: Static-override is configured using the override switch in the `ip pim rp-address` command.



CAUTION: The maps distributed by BSR and Auto-RP for the same RP announcements may be different. Because the Auto-RP mapping agent resolves mapping conflicts, a PIM router that applies the BSR mapping algorithm to an Auto-RP distributed map should produce the same result as a router that applies the Auto-RP mapping algorithm. However, the reverse is not true. A PIM router that applies the BSR mapping algorithm to a BSR distributed map may produce a different result to a router that applies the Auto-RP mapping algorithm. This means that a **PIM IPv4 domain can operate either BSR or Auto-RP.**

PIM Sparse-Dense Mode

In PIM sparse-dense mode, if an RP is not known for a group, the router sends data using PIM dense mode. However, if the router discovers an RP or you configure an RP statically, PIM sparse mode takes over.

You can configure both PIM dense mode and PIM sparse mode commands in PIM sparse-dense mode.

PIM Source-Specific Multicast

PIM SSM is an extension of the PIM protocol. Using SSM, a client can receive multicast traffic directly from the source. PIM SSM uses PIM sparse mode functionality to create an SPT between the client and the source, but builds the SPT without using an RP.

By default, the SSM group multicast address is limited to the IP address range 232.0.0.0 to 232.255.255.255. You can use the `ip pim ssm` command to extend SSM operations into another Class D range. (See [“Configuring PIM SSM” on page 108.](#))

An SSM-configured network has the following advantages over a traditionally configured PIM sparse mode network include the following:

- No need for shared trees or RP mapping (no RP is required).
- No need for RP-to-RP source discovery through Multicast Source Discovery Protocol (MSDP).
- Simplified administrative deployment; you need only configure PIM sparse mode on all router interfaces and issue the necessary SSM commands (including specifying IGMPv3 on the receiver local area network).
- Support for source lists; you can use source lists, supported in IGMPv3, where only specified sources send traffic to the SSM group.

In a PIM SSM-configured network, an E Series router subscribes to an SSM channel (by means of IGMPv3 or by means of IGMP ssm-mapping for IGMPv2/v1 joins), requesting to join group G and source S. The directly connected PIM sparse mode router, the designated router of the receiver, sends an (S,G) join message to its RPF neighbor for the source. For PIM SSM, the RP is not contacted in this process by the receiver (as happens in normal PIM sparse mode operations).

Platform Considerations

For information about modules that support PIM on the ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support PIM.

For information about modules that support PIM on the E120 and E320 Broadband Services Routers:

- See *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about the modules that support PIM.

References

For more information about PIM, see the following resources:

- Protocol Independent Multicast MIB for IPv4—draft-ietf-idmr-pim-mib-10.txt (July 2000 expiration)
- RFC 2362—Protocol Independent Multicast-Sparse Mode (PIM-SM): Protocol Specification (June 1998)
- RFC 3569—An Overview of Source-Specific Multicast (SSM) (July 2003)
- Source-Specific Multicast for IP—draft-ietf-ssm-arch-06.txt (March 2005 expiration)
- Source-Specific Protocol Independent Multicast in 232/8—draft-ietf-mboned-ssm232-08.txt (September 2004 expiration)

- Multicast in MPLS/BGP VPNs—draft-rosen-vpn-mcast-06.txt (April 2004 expiration)
- Multicast in MPLS/BGP IP VPNs—draft-rosen-vpn-mcast-08.txt (June 2005 expiration)



NOTE: IETF drafts are valid for only 6 months from the date of issuance. They must be considered as works in progress. Please refer to the IETF Web site at <http://www.ietf.org> for the latest drafts.

Before You Begin

You can configure PIM on IPv4 and IPv6 interfaces. However, IPv6 does not support all PIM configuration options. For information about configuring PIM on IPv6 interfaces, see “Configuring PIM for IPv6 Multicast” on page 259.

Enabling PIM on a VR

By default, PIM is disabled. To enable PIM on a VR:

1. Enable multicast routing. (See “Enabling IP Multicast” on page 6.)
2. Create a VR, or access an existing VR context.

```
host1(config)#virtual-router boston
```

3. Create and enable PIM processing.

```
host1:boston(config)#router pim
```

router pim

- Use to create and enable PIM processing on a VR or to access Router Configuration mode.
- Example


```
host1:boston(config)#router pim
```
- Use the **no** version to remove PIM from the VR.
- See `router pim`.

Disabling PIM on a VR

To disable PIM processing on a router, use the **pim disable** command.

pim disable

- Use to disable PIM processing. By default, PIM processing is enabled.
- Example


```
host1:boston(config-router)#pim disable
```

- Use the **no** version to reenabling PIM processing.
- See `pim disable`.

Enabling PIM on an Interface

You can enable PIM on an interface in one of the PIM modes (dense, sparse, or sparse-dense) and specify how often the interface sends hello messages to neighbors.

You can configure PIM and IGMP on the same interface. If you configure IGMP and PIM on an interface, the router determines that PIM owns the interface.



NOTE: You cannot configure DVMRP and PIM on the same interface.

ip pim

- Use to enable PIM on an interface; dense mode is the default.
- Example

```
host1(config-if)#ip pim sparse-dense-mode
```
- Use the **no** version to disable PIM on an interface.
- See `ip pim`.

ip pim query-interval

- Use to specify the interval, in seconds, at which the router sends hello messages to neighbors.
- Example

```
host1(config-if)#ip pim query-interval 100
```
- Use the **no** version to restore the default setting, 30 seconds.
- See `ip pim query-interval`.

ip pim sparse-mode graceful-restart-duration

- Use to set the graceful restart duration for IP PIM sparse mode.
- Example

```
host1(config-if)#ip pim sparse-mode graceful-restart-duration 10
```
- Use the **no** version to return to the default duration of 30 seconds.
- See `ip pim sparse-mode graceful-restart-duration`.

Setting a Priority to Determine the Designated Router

You can influence whether a particular router is selected as the designated router with the **ip pim dr-priority** command. A higher priority value increases the likelihood that a

router is selected as the designated router, while a lower value decreases the likelihood. The **ip pim dr-priority** command in Router Configuration mode sets the designated router priority on all the PIM interfaces on the router. To override this global setting on a particular interface, use the **ip pim dr-priority** command in Interface Configuration mode.



NOTE: You cannot set the designated router priority on PIM dense mode interfaces.

ip pim dr-priority

- Use to set a priority value, in the range 1–254, by which a router is likely to be selected as the designated router.

- Examples

In Router Configuration mode:

```
host1(config-if)#ip pim dr-priority 24
```

In Interface Configuration mode:

```
host1(config-subif)#ip pim dr-priority 24
```

- Use the **no** version to restore the default value, 1.
- See `ip pim dr-priority`.

Configuring the PIM Join/Prune Message Interval

When you use the router for PIM, the router sends join/prune messages to the upstream RPF neighbor. The default join/prune message interval is 60 seconds. You can configure the join/prune message interval using the **ip pim join-prune-interval** command. The **ip pim join-prune-interval** command in Router Configuration mode configures the join-prune interval on all the PIM interfaces on the router. To override this global setting on a particular interface, use the **ip pim join-prune-interval** command in Interface Configuration mode.

The hold-time associated with the PIM join/prune interval messages is 3.5 times the PIM join/prune message interval.



NOTE: You cannot configure the PIM join/prune message interval on PIM DM interfaces.

ip pim join-prune-interval

- Use to set an interval value, in the range 10–210 seconds, at which the router sends the PIM join/prune message; the default value is 60 seconds.
- Examples

In Router Configuration mode:

```
host1(config-if)#ip pim join-prune-interval 150
```

In Interface Configuration mode:

```
host1(config-subif)#ip pim join-prune-interval 150
```

- Use the **no** version to restore the default value, 60 seconds.

Configuring an RP Router for PIM Sparse Mode and PIM Sparse-Dense Mode

When you use the router for PIM sparse mode or PIM sparse-dense mode, some VRs must act as RP routers. You can configure static RP routers or configure the router to assign RP routers automatically.

To configure the router to assign RP routers automatically, you must define several VRs as RP routers and one VR as an RP mapping agent. RP routers send their announcement messages to the RP mapping agent, which assigns groups to RP routers and resolves any conflicts. The RP mapping agent notifies neighbors of the RP assigned to each group.

Configuring a Static RP Router

If you want to control PIM more tightly, you can configure a static RP router. To do so:

1. Configure an access list that specifies the multicast groups that can use the static RP router.

```
host1(config)#access-list boston permit 228.0.0.0 15.255.255.255
```

2. Specify a static RP router.

```
host1(config)#ip pim rp-address 122.0.0.11 boston
```

Configuring an Auto-RP Router for PIM Sparse Mode

Two multicast groups, 224.0.1.39 and 224.0.1.40, are reserved for forwarding auto-RP messages through the network. When you configure an auto-RP router for PIM sparse mode, you must assign a static RP router to these two groups. You can then specify an RP mapping agent for other multicast groups.

To configure an auto-RP router for PIM sparse mode:

1. Configure a static RP to have priority over the auto-RP for the groups that send auto-RP multicast messages.

```
host1(config)#access-list 11 permit 224.0.1.39 0.0.0.0
host1(config)#access-list 11 permit 224.0.1.40 0.0.0.0
host1(config)#ip pim rp-address 192.48.1.22 11 override
```

2. Assign an RP mapping agent.

```
host1(config)#ip pim send-rp-discovery scope 23 loopback 1
```

3. Configure routers to send auto-RP announcement messages to the mapping agent.

```
host1(config)#ip pim send-rp-announce loopback 2 scope 16 group-list 1
```


Configuring an Auto-RP Router for PIM Sparse-Dense Mode

In PIM sparse-dense mode, you must prevent routers from advertising auto-RP messages to the multicast groups 224.0.1.39 and 224.0.1.40, which are reserved for forwarding auto-RP messages through the network. To configure an auto-RP router for PIM sparse-dense mode:

1. Assign an RP mapping agent.

```
host1(config)#ip pim send-rp-discovery scope 23 loopback 1
```

2. Configure an access list that details the multicast groups that can use the static RP router.

```
host1(config)access-list boston permit 224.0.0.0 15.255.255.255
```

3. Prevent routers from advertising auto-RP messages to the multicast groups that are reserved for forwarding auto-RP messages through the network.

```
host1(config)#access-list 1 deny 224.0.1.39
host1(config)#access-list 1 deny 224.0.1.40
```

4. Configure routers to send auto-RP announcement messages to the mapping agent.

```
host1(config)#ip pim send-rp-announce loopback 2 scope 23 group-list boston interval 200
```

ip pim rp-address

- Use to specify a static PIM RP router.
- Specify a standard IP access list of multicast groups to control which multicast groups can use this RP router.
- Specify the **override** keyword if you want this static RP router to have priority over auto-RP routers.
- Example


```
host1(config)#ip pim rp-address 192.48.1.22 11 override
```
- Use the **no** version to clear the filter from this interface.
- See `ip pim rp-address`.

ip pim send-rp-announce

- Use to send auto-RP announcement messages from a router you configured as an RP.
- Specify an interface type and specifier, such as atm 3/0. For details about interface types and specifiers, see *Interface Types and Specifiers in JunosE Command Reference Guide*.
- The auto-RP announcement messages contain the IP address for the interface that you specify.
- Specify the number of hops for which the announcement is valid; default value is 64.
- Specify an access list that details which multicast groups the RP can include in announcement messages.

- Specify a time interval in the range 1–65535 seconds to control how often the router sends announcements. The default is 60 seconds.

- Example

```
host1(config)#ip pim send-rp-announce loopback 2 scope 23 group-list boston interval 200
```

- Use the **no** version to clear filters from this interface.
- See `ip pim send-rp-announce`.

ip pim send-rp-discovery scope

- Use to configure the router as an RP mapping agent, which records group-to-RP mappings and notifies PIM designated routers about the mappings.
- Specify the number of hops for which the RP discovery message is valid; default value is 64.
- To assign an interface from which the router sends auto-RP discovery messages, specify an interface type and specifier, such as `atm 3/0`. For details about interface types and specifiers, see *Interface Types and Specifiers* in *JunosE Command Reference Guide*.

- Example

```
host1(config)#ip pim send-rp-discovery scope 23 loopback 1
```

- Use the **no** version to stop the router from acting as an RP mapping agent.
- See `ip pim send-rp-discovery scope`.

Configuring BSR and RP Candidates for PIM Sparse Mode

When choosing candidate BSRs, select well-connected routers in the core of the network. Typically, candidate BSRs are a subset of the candidate RPs. A single BSR is elected for the domain of candidate BSRs. The elected BSR floods bootstrap messages (BSMs) containing their group-to-RP mappings to all PIM routers. PIM routers use the group-to-RP mappings supplied by the elected (or preferred) BSR.

ip pim bsr-candidate

- Use to define a router as a BSR candidate.
- To assign an interface from which the router sends messages, specify an interface type and specifier, such as `atm 3/0`. For details about interface types and specifiers, see *Interface Types and Specifiers* in *JunosE Command Reference Guide*.
- Specify a length (up to 32 bits) for the hash mask length field sent in BSMs that the router originates. This mask is combined with the group address before the router calls the hash function. For example, specifying a value of 24 limits the group address to the first 24 bits. The default hash mask length is 30 bits.
- Use the **priority** keyword to specify a value for the BSR-priority field of BSMs that the router originates. In the BSR election process, the BSR with the higher priority is

preferred. If the priority values are equal, the router with the higher IP address becomes the BSR. The default value is 0 (address comparison only).

- Use the **period** keyword to specify the interval, in the range 1–65535 seconds, at which the BSR sends bootstrap messages. The default value is 60 seconds.
- Example

```
host1(config)#ip pim bsr-candidate loopback 1 30 10
```
- Use the **no** version to stop the router from acting as a BSR candidate.
- See `ip pim bsr-candidate`.

ip pim rp-candidate

- Use to define a router as an RP candidate.
- To assign an interface from which the router sends messages, specify an interface type and specifier, such as `atm 3/0`. For details about interface types and specifiers, see *Interface Types and Specifiers in JunosE Command Reference Guide*.
- Use the **group-list** keyword to specify an access-list that contains the set of group prefixes supported by this candidate RP (C-RP). If you do not specify a group-list, the default is the entire multicast address range.



NOTE: Because BSR has no mechanism for distributing negative entries, you should not configure negative access-list entries (also called deny access-list entries).

- Use the **hold-time** keyword to specify the amount of time the BSR keeps an RP in its C-RP list if the BSR does not receive a C-RP advertisement message. The default value is 150 seconds.
- Use the **priority** keyword to specify a priority field value that the C-RP sends to the BSR in C-RP advertisement messages. In the RP election process, the RP with the lower priority value is preferred. The default value is 192.
- Use the **interval** keyword to specify an interval, in the range 1–65535 seconds, at which the C-RP sends advertisement messages to the BSR. The default value is 60 seconds.
- Example

```
host1(config)#access-list 1 permit 227.0.0.0 15.255.255.255
host1(config)#access-list 1 permit 228.0.0.0 15.255.255.255
host1(config)#ip pim rp-candidate loopback 1 group-list 1
```
- Use the **no** version to stop the router from acting as an RP candidate
- See `ip pim rp-candidate`.

Migrating to BSR from Auto-RP

Migrating to BSR from auto-RP requires that you upgrade all PIM routers in the domain to support BSR. However, until all routers are BSR-capable, continue to use auto-RP.

After all routers are BSR-capable, switch from auto-RP to BSR as follows:

1. Use the **no ip pim send-rp-discovery scope** command to stop PIM in the network by disabling all auto-RP mapping agents. This results in flooding to an empty map.
2. Reconfigure auto-RP mapping agents as candidate BSRs by using the **ip pim bsr-candidate** command.
3. Reconfigure auto-RP candidate RPs as BSR candidate RPs by issuing the **no ip pim send-rp-announce** command and then issuing the **ip pim rp-candidate** command.

Switching to an SPT for PIM Sparse Mode

PIM sparse mode initiates multicasting using a shared tree. You can configure PIM sparse mode to switch to an SPT when a source starts sending multicast messages, or you can prevent PIM sparse mode from switching to an SPT. Multicasting over an SPT might be more efficient than multicasting over a shared tree. (See [“PIM Sparse Mode” on page 84.](#))

ip pim spt-threshold

- Use to specify when PIM sparse mode switches from a shared tree to an SPT.
- Specify a nonzero integer or the keyword **infinity** to prevent PIM sparse mode from switching to an SPT.
- Specify a value of 0 (default) to configure PIM to switch to an SPT when a source starts sending multicast messages.
- Example

```
host1(config)#ip pim spt-threshold 4
```
- Use the **no** version to restore the default value, 0.
- See `ip pim spt-threshold`.

Creating Multicast VPNs

JunosE router software provides the ability to create multicast VPNs by using GRE tunnels. This implementation is based on *Multicast in MPLS/BGP VPNs* (draft-rosen-vpn-mcast-06.txt and draft-rosen-vpn-mcast-08.txt) and further defined by *Base Specification for Multicast in MPLS/BGP VPNs* (draft-raggarwa-13vpn-2547-mvpn-00.txt).



NOTE: Although you can configure PIM sparse mode remote neighbors, you can no longer use these remote neighbors for BGP/MPLS VPNs. For multicast VPNs, use the functionality described in this section.

The JunosE Software supports default Multicast Distribution Trees (MDTs) and data MDTs.

Creating Multicast VPNs Using the Default MDT


The JunosE Software does not support a single MDT command. Instead, you must configure the multicast tunnel interfaces (MTIs) explicitly. The MTI is an IP interface that is stacked on a GRE tunnel interface. The destination address of the GRE tunnel is the multicast VPN (MVPN) group address of the MDT.

A **tunnel mdt** command specifies that the tunnel is the MTI for the default MDT, enabling the creation of a second, layer 2 interface (interface tunnel gre:name.mdt) on which an unnumbered IP interface (tied to the provider edge loopback interface) is stacked in the context of the parent virtual router.

Multicast VPN Configuration Example

In the following example (Figure 13 on page 97), customer edge router 1 (CE1) and customer edge router 2 (CE2) exist in two separate VPNs. Each VPN is configured with its assigned Multicast Domain (235.1.1.1 and 235.1.1.2, respectively).

Figure 13: Multicast VPNs

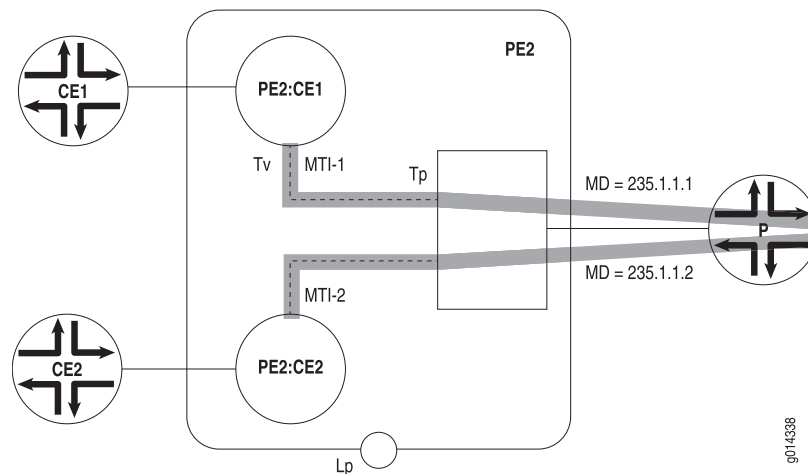

To better understand the example, keep the following in mind:

- Lp is a loopback interface in the parent router. This address is the loopback interface used as the BGP peer address of the provider edge router (PE). Its address is advertised in the provider address space.
- Tv is the MTI in the VRF. This interface is typically configured as a PIM sparse-mode interface (though you can configure it for dense-mode or sparse-dense-mode). Any packets that originate in the VRF are sent using the address of this interface as the

source address. You must set this interface address to be identical to loopback interface of the parent router (Lp).



CAUTION: Defining the Tv interface with an address other than the loopback interface of the parent router might restrict operation with non-Juniper Networks routers.

- Tp is an unnumbered IP interface that is tied to the loopback interface of the provider edge router (PE).

To configure the example, use the following general procedures:



NOTE: This example provides general information for configuring a simple Multicast VPN network. For detailed information about creating GRE tunnels, see *Configuring IP Tunnels* in the *JunosE IP Services Configuration Guide*. For detailed information about PIM sparse-mode configuration, see “[PIM Sparse Mode](#)” on page 84.

1. Configure BGP/MPLS VPN.

```
host1:PE2(config-router)#router bgp 100
host1:PE2(config-router)#address-family vpnv4 unicast
host1:PE2(config-router-af)#neighbor 1.1.1.1 activate
host1:PE2(config-router-af)#neighbor 1.1.1.1 next-hop-self
host1:PE2(config-router-af)#neighbor 3.3.3.3 activate
host1:PE2(config-router-af)#neighbor 3.3.3.3 next-hop-self
host1:PE2(config-router-af)#exit-address-family
```

See *Configuring BGP-MPLS Applications* in the *JunosE BGP and MPLS Configuration Guide* for details.

2. Configure PIM sparse mode in the core and RP for MVPN group addresses.



NOTE: For MVPN, it is a typical practice to use shared trees.

```
host1:PE1(config-router)#virtual-router PE2
host1:PE2(config)#ip multicast-routing
host1:PE2(config)#
host1:PE2(config)#! MDT RP is 72.72.72.72 (P1)
host1:PE2(config)#access-list 1 permit ip 235.0.0.0 0.255.255.255 any
host1:PE2(config)#ip pim rp-address 72.72.72.72 1
host1:PE2(config)#
host1:PE2(config)#! Do not switch from RPT for MDTs
host1:PE2(config)#ip pim spt-threshold infinity group-list 1
host1:PE2(config)#
```

3. Configure the loopback interface, Lp, in parent router PE2.

```
host1:PE2(config)#interface loopback 0
host1:PE2(config-if)#ip address 2.2.2.2 255.255.255.255
host1:PE2(config-if)#ip pim sparse-mode
```

```
host1:PE2(config-if)
```



NOTE: You must configure the loopback interface for PIM sparse mode to support unnumbered MDTs.

4. Add PIM-SM to core-facing interfaces.

```
host1:PE2(config)#interface atm2/1.20
host1:PE2(config-subif)#ip pim sparse-mode
host1:PE2(config-subif)#
```

5. Extend the BGP router configuration to contribute VPN routes into the multicast router table of the VRF using the **ip route-type both** command.

```
host1:PE2(config)#router bgp 100
host1:PE2(config-router)#address-family ipv4 unicast vrf PE21
host1:PE2(config-router-af)#ip route-type both
host1:PE2(config-router-af)#exit
host1:PE2(config-router)#
```

6. Configure the GRE tunnel for VPN1.

```
host1(config)#interface tunnel gre:MTI-21 transport-virtual-router PE2
host1(config-if)#tunnel source 2.2.2.2
host1(config-if)#tunnel destination 235.1.1.1
host1(config-if)#tunnel mdt
host1(config-if)#exit
host1(config)#
```

7. Configure the GRE tunnel for VPN2.

```
host1(config)#interface tunnel gre:MTI-22 transport-virtual-router PE2
host1(config-if)#tunnel source 2.2.2.2
host1(config-if)#tunnel destination 235.1.1.2
host1(config-if)#tunnel mdt
host1(config-if)#exit
host1(config)#
```

8. Configure the IP interface (Tv) in PE2:CE1 as a numbered or unnumbered PIM sparse-mode interface. Use the same address as the loopback interface, Lp in the parent router, PE2.

```
host1(config)#virtual-router PE2:CE1
host1:PE2:CE1(config)#interface tunnel gre:MTI-21
host1:PE2:CE1(config-if)#ip address 2.2.2.2 255.255.255.255
host1:PE2:CE1(config-if)#ip pim sparse-mode
host1:PE2:CE1(config-if)#exit
host1:PE2:CE1#
```

9. Configure the IP interface (Tv) in PE2:CE2 as a numbered or unnumbered PIM sparse-mode interface. Use the same address as the loopback interface, Lp in the parent router, PE2.

```
host1(config)#virtual-router PE2:CE2
host1:PE2:CE2(config)#interface loopback 0
host1:PE2:CE2(config-if)#ip address 2.2.2.2 255.255.255.255
host1:PE2:CE2(config-if)#exit
```

```

host1:PE2:CE2(config)#
host1:PE2:CE2(config)#interface tunnel gre:MTI-22
host1:PE2:CE2(config-if)#ip unnumbered loopback 0
host1:PE2:CE2(config-if)#ip pim sparse-mode
host1:PE2:CE2(config-if)#exit
host1:PE2:CE2#

```

10. Configure the Tp interfaces in the parent router, PE2, as unnumbered PIM sparse-mode interfaces tied to the loopback interface, Lp.

```

host1(config)#virtual-router PE2
host1:PE2(config)#interface tunnel gre:MTI-21.mdt
host1:PE2(config-if)#ip unnumbered loopback 0
host1:PE2(config-if)#ip pim sparse-mode
host1:PE2(config-if)#exit
host1:PE2(config)#

```

```

host1:PE2(config)#interface tunnel gre:MTI-22.mdt
host1:PE2(config-if)#ip unnumbered loopback 0
host1:PE2(config-if)#ip pim sparse-mode
host1:PE2(config-if)#exit
host1:PE2(config)#

```

tunnel mdt

- Use to enable multicast distribution tree operation so the IP tunnel component can create an MDT interface. This command functions for GRE interfaces only.
- Example


```
host1(config-if)#tunnel mdt
```
- The **no** version disables MDT on the interface.
- See tunnel mdt.

Creating Multicast VPNs Using the Data MDT

A data multicast distribution tree (MDT), based on section 8 of Internet draft draft-rosen-vpn-mcast-08.txt, *Multicast in MPLS/BGP IP VPNs*, solves the problem of P routers flooding unnecessary multicast information to PE routers that have no interested receivers for a particular VPN multicast group. The data MDT solution requires the creation of a new tunnel by the PE router if the source exceeds a configured rate threshold parameter. All other PE routers join the new tunnel only if the PE router has receivers in the VPN for that multicast group.

The JunosE Software uses dynamic point-to-multipoint GRE tunnels to configure data MDTs. In the current release, IPv6 transport over GRE (unicast or multicast) is not supported. For more information, see *Configuring Dynamic IP Tunnels* in the *JunosE IP Services Configuration Guide*.

Data MDTs are established using PIM-SM (shared RP Trees) and PIM-SSM (Source Trees). Profiles for dynamic interfaces in the VRF are restricted to sparse-mode only.

Data MDT Sources

A C-SG flow arriving in the source VRF is a candidate for a data MDT if the system matches the C-SG in the route map that you specify for the data MDT using the **ip pim data-mdt** command. The C-SG flow is initially forwarded on the default MDT. The system creates the data MDT when the flow rate exceeds a value you configure in the route map using the **set threshold** command.

When the Source C-PIM-SM first creates a data MDT for a C-SG flow, it sends a <C-SG, P-G> MDT join message with type, length, value (TLV) format to the default MDT. This message invites peer PE routers to join the new data MDT. It starts a timer that you can configure using the **mdt-data-delay** command to track the number of seconds before switching to the data MDT. When that timer expires, C-PIM-SM switches from sending C-SG data on the default MDT to sending data on the data MDT.

When the C-SG flow is switched to the data MDT, the Source C-PIM-SM starts a timer that you can configure using the **mdt-data-holddown** command to track the number of seconds before switching to the default MDT. When the timer expires, the data MDT is deleted and the C-SG flow switched back to the default MDT if the flow rate drops back below the threshold. If the flow rate exceeds the threshold, the timer restarts. If the timer expires and the flow rate is below the threshold, the data MDT is removed.

The Source C-PIM-SM maintains sent MDT Join TLV messages in its database as long as they are active. While the data MDT is active, C-PIM-SM resends that MLD Join TLV message using a setting that you can configure using the **mdt-interval** command to measure time in seconds between successive MLD join TLV messages.

Data MDT Receivers

When the Receiver C-PIM-SM receives a <C-SG, P-G> MDT Join TLV message from the default MDT, it extracts the C-SG and the data MDT P-Group address from the TLV and queries the route map that you specified for the data MDT to determine whether the C-SG is a candidate for a data MDT. If it matches, the C-PIM-SM adds the MDT Join TLV to its database and records the time.

If the Receiver C-PIM-SM does not receive an MDT Join TLV<C-SG, P-G> to refresh its database within the amount of time specified for the timeout in the **mdt-data-timeout** command, the MDT Join TLV<C-SG> is removed from the database and the associated data MDT is removed.

When a new MDT Join TLV<C-SG, P-G> is added to the database, the Receiver C-PIM-SM determines whether it has an SG, SPT state. If it has an SG state, and the incoming interface (IIF) is the default MDT, then C-PIM-SM creates the data MDT and deletes the corresponding forwarding entry. C-PIM-SM waits for the source to transmit data on the data MDT. During this period, data can continue to be received on the default MDT. C-PIM-SM fails the reverse-path forwarding (RPF) check, which results in a forwarding entry with a discarded IIF.

If the C-SG,SPT state is created (either as a result of a C-SSM join or switch from RPT to SPT), and it is the default MDT, the Receiver C-PIM-SM determines whether an MDT Join TLV<C-SG> is active. If it is, C-PIM-SM creates the data MDT.

Establishing a Data MDT Using ASM or SSM

A data MDT carries one C-SG flow. If the data MDTs are established using any-source multicast (ASM), then the P-Group address selected by a PE for the data MDT must be unique to that PE in the MDT (that is, the range of MDT P-Group addresses available in the core must be administratively divided among all the PEs that will source VPN multicasts). The VRFs in a PE must share the P-Group addresses in the assigned range for the PE.

If the data MDTs are established using single-source multicast (SSM), you must configure VRFs to transmit on a tunnel using the same MDT P-Group address. Each VRF transmits using a unique P-Source address; however, each data MDT created by the VRF must use a different P-Group address. There might be one sender data MDT and possibly many receiver data MDTs sharing an IP tunnel. Each PE can assign MDT P-Groups from the same range, but the P-Group addresses must be administratively divided among the VPNs.

For a receiver on the data MDT, P-PIM-SM joins the data MDT by propagating join state into the core. The P-Group for that join is extracted from the MDT Join TLV. If SSM is not activated or the P-Group is not in the SSM group range, P-PIM-SM performs a <*,G> join towards the RP for that P-Group.

If SSM is activated and the P-Group is in the SSM group range, P-PIM-SM performs an <S,G> join towards the P-Source, where the P-Source address is the SA of the MDT Join TLV.

Configuring the Default MDT

To configure the default MDT:

1. On the parent virtual-router, configure an IP interface over the MDT interface, and make it a PIM interface.

```
host1(config)#virtual-router pe1
host1:pe1(config)#ip multicast-routing
host1:pe1(config)#interface loopback 0
host1:pe1(config-if)#ip address 1.1.1.1 255.255.255.255
host1:pe1(config-if)#ip pim sparse-mode
host1:pe1(config-if)#exit
```

2. Configure the VRF.

```
host1(config)#virtual-router pe1
host1:pe1(config)#ip vrf pe13
host1:pe1(config-vrf)#rd 100:13
host1:pe1(config-vrf)#route-target both 100:3
host1:pe1(config-vrf)#exit
```

3. To enable MDT, configure a GRE multicast tunnel interface (MTI) for VPN1.

```
host1:pe1(config)#virtual-router default
host1:(config)#interface tunnel gre:MTI-11 transport-virtual-router pe1
host1:(config-if)#tunnel source 1.1.1.1
host1:(config-if)#tunnel destination 233.3.1.1
host1:(config-if)#tunnel mdt
```

```
host1:(config-if)#exit
```

The **tunnel mdt** command enables the IP tunnel component to create an MDT interface.

4. For the VRF, configure an IP interface on the MTI interface.

```
host1(config)#virtual-router pe1
host1:pe1(config)#virtual-router pe1:pe13
host1:pe1:pe13(config)#ip multicast-routing
host1:pe1:pe13(config)#interface loopback 0
host1:pe1:pe13(config-if)#ip address 1.1.1.1 255.255.255.255
host1:pe1:pe13(config-if)#exit
```



NOTE: The IP address that you configure for the VRF must be identical to the IP address of the loopback interface in the parent virtual router.

5. Configure the MTI interface in the VRF.

```
host1:pe1:pe13(config)#interface tunnel gre:MTI-11
host1:pe1:pe13(config-if)#ip unnumbered loopback 0
host1:pe1:pe13(config-if)#ip pim sparse-mode
host1:pe1:pe13(config-if)#exit
```



NOTE: You can use the **ip unnumbered loopback 0** command to configure the MTI interface on the VRF as an unnumbered interface, or the **ip address 1.1.1.1 255.255.255.255** command to configure it as a numbered interface.

6. Specify the GRE tunnel configuration for the parent virtual router.

```
host1:pe1(config)#interface tunnel gre:MTI-11.mdt
host1:pe1(config-if)#ip unnumbered loopback 0
host1:pe1(config-if)#ip pim sparse-mode
host1:pe1(config-if)#exit
host1:pe1(config)#virtual-router default
```



NOTE: The MDT interface in the parent virtual router must be unnumbered.

ip pim

- Use to enable PIM on an interface.
- Example


```
host1(config-if)#ip pim sparse-mode
```
- Use the **no** version to disable PIM on an interface.
- See `ip pim`.

tunnel mdt

- Use to enable multicast distribution tree (MDT) operation so the IP tunnel component can create an MDT interface. This command functions for GRE interfaces only.
- Example

```
host1(config-if)#tunnel mdt
```
- The **no** version disables MDT on the interface.
- See tunnel mdt.

Configuring Data MDTs

To configure data MDTs:

1. Configure a dynamic interface profile to specify the PIM configuration of the IP interface or MTI interface in the VRF.

```
host1(config)#profile pe13DataMdtMti
host1(config-profile)#ip virtual-router pe1:pe13
host1(config-profile)#ip unnumbered loopback 0
host1(config-profile)#ip pim sparse-mode
host1(config-profile)#exit
```

2. Configure a dynamic interface profile to specify the IP interface or MDT interface in the parent.

```
host1(config-profile)#profile pe1DataMdtMdt
host1(config-profile)#ip virtual-router pe1
host1(config-profile)#ip unnumbered loopback 0
host1(config-profile)#ip pim sparse-mode
host1(config-profile)#exit
```

3. Configure the destination profile for dynamic IP tunnel creation.

```
host1(config)#gre destination profile pe13DataMdtProfile virtual-router pe1
host1(config-dest-profile)#tunnel source 1.1.1.1
host1(config-dest-profile)#tunnel destination ip subnet 233.3.0.0/16
host1(config-dest-profile)#tunnel mdt profile pe1DataMdtMdt
host1(config-dest-profile)#profile pe13DataMdtMti
host1(config-dest-profile)#exit
```

The router uses this destination profile to verify whether it can create a dynamic tunnel, and to supply additional configuration parameters when it creates a tunnel. For more information about creating dynamic IP tunnels, see *Configuring Dynamic IP Tunnels* in the *JunosE IP Services Configuration Guide*.

4. Configure the group address pools in the route map.

```
host1(config)#virtual-router pe1
host1:pe1(config)#ip pim group-address-pool pe13DataMdtGroups 233.3.1.0 233.3.1.255
```

If the data MDTs are established using ASM, you must divide the range of available MDT P-Group addresses so that PEs source VPN multicasts. All VRFs in a PE draw from a single address pool that contains the range of group addresses assigned to that PE.

If the data MDTs are established using SSM, you can configure VRFs to transmit on a tunnel using the same MDT P-Group address. Each VRF transmits using a unique

P-Source address; however, each data MDT created by the VRF must use a different P-Group address. There might be one sender data MDT and possibly many receiver data MDTs sharing an IP tunnel.

For SSM, each PE can assign MDT P-Groups from the same range, but the P-Group addresses must be administratively divided among the VPNs as mentioned in the following example:

```
host1(config)#virtual-router pe1
host1:pe1(config)#ip pim group-address-pool pe1DataMdtSSMGroups 233.3.1.0
233.3.1.255
host1:pe1(config)#ip pim group-address-pool pe2DataMdtSSMGroups 233.3.2.0
233.3.2.255
host1:pe1(config)#ip pim group-address-pool pe3DataMdtSSMGroups 233.3.3.0
233.3.3.255
```

5. Configure the access list to match <S,G> and <*,G> entries.

```
host1:pe1(config)#virtual-router pe1:pe13
host1:pe1:pe13(config)#access-list pe13DataMdtSend permit ip host 10.13.0.100
225.1.1.0 0.0.0.255
host1:pe1:pe13(config)#access-list pe13DataMdt permit ip any 225.1.0.0 0.0.255.255
```

6. Specify a route map to configure the set of <S,G> for which data MDTs can be created, and the threshold to be applied for each SG.

```
host1:pe1:pe13(config)#route-map pe13MdtThresholds permit 10
host1:pe1:pe13(config-route-map)#match ip address pe13DataMdtSend
host1:pe1:pe13(config-route-map)#set threshold 0
host1:pe1:pe13(config-route-map)#route-map pe13MdtThresholds permit 20
host1:pe1:pe13(config-route-map)#match ip address pe13DataMdt
host1:pe1:pe13(config-route-map)#exit
```

7. Configure the data MDT.

```
host1:pe1:pe13(config)#ip pim data-mdt
host1:pe1:pe13(config-ip-pim-data-mdt)#tunnel source 1.1.1.1
host1:pe1:pe13(config-ip-pim-data-mdt)#tunnel group-address-pool pe13DataMdtG$
host1:pe1:pe13(config-ip-pim-data-mdt)#route-map pe13MdtThresholds
```

ip pim data-mdt

- Use to activate data MDTs and enter IP PIM Data MDT Configuration mode.
- Example


```
host1(config)#ip pim data-mdt
```
- Use the **no** version to deactivate data MDTs.
- See `ip pim data-mdt`.

ip pim group-address-pool

- Use to configure PIM group address pools from which data MDT group addresses are allocated.
- Example


```
host1(config)#ip pim group-address-pool pe21DataMDT 232.1.0.0 232.2.255.255
```

- There is no **no** version.
- See ip pim group-address-pool.

mdt-data-delay

- Use to configure a delay before switching to data MDT.
- The delay is measured by 0.1 seconds; the default is 30.
- Example

```
host1(ip-pim-data-mdt-config)#mdt-data-delay 20
```
- Use the **no** version to return to the default.
- See mdt-data-delay.

mdt-data-holddown

- Use to configure the time in seconds before switching to the default MDT group from the data MDT group.
- The default is 60.
- Example

```
host1(ip-pim-data-mdt-config)#mdt-data-holddown 200
```
- Use the **no** version to return to the default.
- See mdt-data-holddown.

mdt-data-timeout

- Use to configure the time in seconds before the flow leaves the data MDT group.
- The default is 180.
- Example

```
host1(ip-pim-data-mdt-config)#mdt-data-timeout 160
```
- Use the **no** version to return to the default.
- See mdt-data-timeout.

mdt-interval

- Use to configure the time in seconds between successive MLD join TLV messages.
- The default is 60.
- Example

```
host1(ip-pim-data-mdt-config)#mdt-interval 80
```
- Use the **no** version to return to the default.
- See mdt-interval.

set threshold

- Use to configure a threshold value for multicast VPN applications, including default MDT and data MDT.
- Example


```
host1(config)#set threshold 30
```
- Use the **no** version to remove the threshold.
- See set threshold.

tunnel group-address-pool

- Use to configure a group address pool for a data MDT tunnel.
- Example


```
host1(ip-pim-data-mdt-config)#tunnel group-address-pool dataMDT1
```
- Use the **no** version to delete the group address pool.
- See tunnel group-address-pool.

Using PIM Sparse Mode Join Filters

You can use PIM sparse mode join filters to prevent multicast state from being created in the PIM sparse mode router. The filters are applied to join entries in PIM join/prune messages that are received from PIM sparse mode neighbors.

By denying joins at the edge of a network, you can limit the multicast state and traffic in the network. By accepting only certain joins, you can control which multicast services an end user can receive. PIM join filters also reduce the potential for denial of service (DoS) attacks where large numbers of joins forwarded to each router on the RPT can result in a PIM state explosion and very high memory consumption.

For information about how to create access lists, see *Configuring Routing Policy* in the *JunosE IP Services Configuration Guide*.

ip pim join-filter

- Use to specify an extended access list that you want this PIM interface to use as a join filter.
- You can apply the join filter at the global level or at the interface level.
- If an interface-level filter exists, it takes precedence over the global-level filter.
- Example 1


```
host1(config)#ip pim join-filter gold
```
- Example 2


```
host1(config-interface)#ip pim join-filter gold
```
- Use the **no** version to remove the filter association.
- See ip pim join-filter.

Configuring PIM SSM

Source Specific Multicast (SSM) is a datagram delivery model that best supports one-to-many applications, also known as broadcast applications. SSM is networking technology that targets audio and video broadcast application environments.

To configure PIM SSM, you enable PIM SSM on the router and define the SSM range of IP multicast addresses.

To use PIM SSM, IGMPv3 must be configured on customer premise equipment (CPE)–facing interfaces to receivers, and PIM sparse mode must be configured on CPE-facing interfaces to sources and on core-facing interfaces. After configuring SSM, you can use the **show ip pim sparse-mode sg-state** command to display SSM group membership information.

To configure PIM SSM:

1. Enable PIM SSM on the E Series router. The IANA SSM range (232.0.0.0/8) is configured by default. You can modify the SSM address range by using the access list.

```
host1(config)#access-list 15 permit ip any host 239.0.0.2  
host1(config)#access-list 15 permit ip any 232.0.0.0 0.255.255.255  
host1(config)#ip pim ssm range 15
```
2. Enable PIM sparse mode on the CPE-facing interface towards the source or core.
3. Enable IGMPv3 on the CPE-facing interface towards the receiver. PIM SSM also works with IGMPv2 if you configure the ssm-map in IGMP as in the following example:

PIM SSM also works with IGMPv2 if you configure the ssm-map in IGMP as in the following example:

```
host1(config)#ip pim ssm  
host1(config)#access-list ssm_map1 permit 232.0.0.1 255.255.255.255  
host1(config)#ip igmp ssm-map enable  
host1(config)#ip igmp ssm-map static ssm_map1 51.0.0.1
```

The **no** version disables ssm-map:

```
host1(config)#no ip igmp ssm-map static ssm_map1 51.0.0.1
```

ip pim ssm

- Use to enable PIM SSM and define the SSM range for IPv4 multicast addresses.
- Use the **range** keyword to define the SSM range of IP multicast addresses.
- Example 1—Enables SSM with addresses in the IANA range. The SSM address range is set as the default and by default, the SSM group multicast address is limited to the IPv4 address range 232.0.0.0/8.

```
host1(config)#ip pim ssm
```

- Example 2—Configures Class D addresses outside of the default SSM range.

```
host1(config)#access-list alist permit any 223.0.0.0 0.255.255.255
```



```
host1(config)#ip pim ssm range alist
```

- Example 3—Resets the SSM address range to the default.

```
host1(config)#ip pim ssm default
```

- Use the **no** version to disable SSM.
- See `ip pim ssm`.

Configuring the BFD Protocol for PIM

The **ip pim bfd-liveness-detection** command configures the Bidirectional Forwarding Detection (BFD) protocol for PIM. The BFD protocol uses control packets and shorter detection time limits to more rapidly detect failures in a network. Also, because they are adjustable, you can modify the BFD timers for more or less aggressive failure detection.

PIM routers send periodic hello messages from each PIM-enabled interface. You can configure this interval using the **ip pim query-interval** command. By default, the PIM router sends a hello message every 30 seconds (with an interval range of 0–210 seconds). If it receives no response from a neighbor within 3.5 times the interval value (a minimum of 3.5 seconds), the PIM router drops the neighbor.

In contrast, when a BFD session exists between neighbors, a PIM neighbor that goes down is detected quickly (in milliseconds rather than in seconds).

When you issue the **ip pim bfd-liveness-detection** command on a PIM router, the router establishes BFD liveness detection with all BFD-enabled PIM neighbors. When the local router receives an update from a remote PIM neighbor—if BFD is enabled and if the session is not already present—the local router attempts to create a BFD session to the remote neighbor.

Each adjacent pair of neighbors negotiates an acceptable transmit interval for BFD packets. The negotiated value can be different on each neighbor. Each neighbor then calculates a BFD liveness detection interval. When a neighbor does not receive a BFD packet within the detection interval, it declares the BFD session to be down.



NOTE: Before the router can use the **ip pim bfd-liveness-detection** command, you must specify a BFD license key. To view an already configured license, use the **show license bfd** command.

For general information about configuring and monitoring the BFD protocol, see *Configuring BFD* in the *JunosE IP Services Configuration Guide*.

ip pim bfd-liveness-detection

- Use to enable BFD (bidirectional forwarding detection) and define BFD values to more quickly detect PIM data path failures.
- The neighbors in a PIM network use the configured values to negotiate the actual transmit intervals for BFD packets.

- You can use the **minimum-transmit-interval** keyword to specify the interval at which the local router proposes to transmit BFD control packets to its neighbors. The default value is 300 milliseconds.
- You can use the **minimum-receive-interval** keyword to specify the minimum interval at which the local router must receive BFD control packets from its neighbors. The default value is 300 milliseconds.
- You can use the **minimum-interval** keyword to specify the same value for both of those intervals. Configuring a minimum interval has the same effect as configuring the minimum receive interval and the minimum transmit interval to the same value. The default value is 300 milliseconds.
- You can use the **multiplier** keyword to specify the detection multiplier value. The calculated BFD liveness detection interval can be different on each neighbor. The multiplier value is roughly equivalent to the number of packets that can be missed before the BFD session is declared to be down. The default value is 3.
- For details on liveness detection negotiation, see *Negotiation of the BFD Liveness Detection Interval* in the *JunosE IP Services Configuration Guide*.
- You can change the BFD liveness detection parameters at any time without stopping or restarting the existing session; BFD automatically adjusts to the new parameter value. However, no changes to BFD parameters take place until the values resynchronize with each neighbor.
- Example

```
host1(config)#ip pim bfd-liveness-detection minimum-interval 800
```
- Use the **no** version to disable BFD on the PIM interface.
- See `ip pim bfd-liveness-detection`.

Removing PIM

To remove PIM from a VR, use the **no router pim** command.

router pim

- Use to create and enable PIM processing on a VR or to access Router Configuration mode.
- Example

```
host1:boston(config)#router pim
```
- Use the **no** version to remove PIM from the VR.
- See `router pim`.

Resetting PIM Counters and Mappings

You can use the **clear ip pim** commands to reset PIM counters and mappings.

clear ip pim auto-rp

- Use to clear the group-to-RP router mappings that the router learned through auto-RP.
- Specify the IP address of an RP to clear the group-to-RP mappings for a particular RP. If you do not specify an IP address, the router clears the group-to-RP mappings on all RP routers learned through auto-RP.
- Example

```
host1#clear ip pim auto-rp 192.34.56.7
```
- There is no **no** version.
- See `clear ip pim auto-rp`.

clear ip pim interface count

- Use to clear the counters for multicast packet statistics on all interfaces or a specified interface.
- Specify an interface type and specifier, such as atm 3/0, to clear the counters on that interface. For details about interface types and specifiers, see *Interface Types and Specifiers* in *JunosE Command Reference Guide*.
- If you do not specify an interface, the router clears the counters on all interfaces.
- Example

```
host1#clear ip pim interface atm 3/0.5 count
```
- There is no **no** version.
- See `clear ip pim interface count`.

clear ip pim remote-neighbor count

- Use to clear the counters for remote neighbor statistics on all interfaces or the specified interface.
- Specify the IP address of an interface to clear the counters for that interface.
- If you do not specify an interface, the router clears the counters on all interfaces.
- Example

```
host1#clear ipv6 pim remote-neighbor 1001::1 count
```
- There is no **no** version.
- See `clear ip pim remote-neighbor count`.

Monitoring PIM

You can display information about PIM events and parameters.

Monitoring PIM Events

You can use the debug PIM commands to view information about PIM events.

debug ip pim

- Use to show information about the selected event.
- To control the type of events displayed, specify a severity level.
- To control how much information to display, specify a verbosity level.
- Example

host1#**debug ip pim events severity 1 verbosity low**

- Use the **no** version to disable the display.
- See debug ip pim.

undebg ip pim

- Use to turn off the display of information previously enabled with the **debug ip pim** command.
 - Example
- host1#**undebg ip pim events**
- There is no **no** version.
 - See undebg ip pim.

Monitoring PIM Settings

You can use the **show ip pim** commands to display information about PIM settings.

show ip pim

- Use to view general PIM router-level information.
- Field descriptions
 - Default PIM Version—Default PIM version number (always 2)
 - Default Domain Id—Default Domain Id (always 0)
 - Default Hello period—Default interval (in minutes) at which the router sends hello messages to neighbors
 - Default Hello Hold Time—Default time (in minutes) for which the router keeps the neighbor state alive
 - Join-Prune Interval—Interval value (in seconds) set in the join/prune message originated by the PIM router
 - Join-Prune Holdtime— Hold time value (in seconds) set in the join/prune messages originated by the PIM router. The hold time is 3.5 times the PIM join/prune message interval value.
 - Keepalive Period—Time SG join state is maintained in the absence of SG Join message
 - Assert Time—Period after last assert before assert state is timed out

- Register Suppression Time—Period during which a designated router stops sending registers to the RP
- Register Probe Time—Time before register suppression time (RST) expires when a designated router might send a NULL-Register to the RP
- Register TTL—TTL value (in PIM register packets) originated by this PIM router
- SSM—State of SSM on this PIM router (enabled or disabled)
- range—Default SSM group range or name of the access list specifying the range
- Sparse-Mode Graceful Restart Duration—Restart interval in seconds
- Join filter—Name of the join filter access-list (if configured) for this PIM router
- Designated Router Priority—Designated router priority value
- Example


```

host1:1#show ip pim
Default PIM Version: 2
Default Domain Id: 0
Default Hello Period: 30
Default Hello HoldTime: 105
Join-Prune Interval: 100
Join-Prune Holdtime: 350
Keepalive Period: 210
Assert Time: 210
Register Suppression Time: 60
Register Probe Time: 5
Register TTL: 64
SSM enabled, range default
Sparse-Mode Graceful Restart Duration: 30
Graceful restart is complete (timer 0 seconds)
Join filter, access-list bronze
Designated Router Priority: 2
      
```
- See show ip pim.

show ip pim auto-rp

- Use to display information about RP routers and the RP mapping agent in a PIM sparse mode environment.
- Field descriptions
 - Configured with ttl—Number of hops for which the RP discovery message is valid
 - Using interface addr—IP address of the interface from which the router sends RP discovery messages
 - interval—Time interval, in seconds, at which the router sends RP discovery messages
 - PIM AutoRP candidate RP mapping(s)—Routers that the RP mapping agent is evaluating to determine an RP router for this interface
- Example 1

```
host1:1#show ip pim auto-rp
This PIM router is an Auto RP mapping agent.
Configured with ttl 64
[ Using interface addr 121.0.0.1, interval 60 ].
PIM AutoRP candidate RP mapping(s)
```

- Example 2

```
host1:1# show ip pim auto-rp
This PIM router is _not_ an Auto RP mapping agent.
PIM AutoRP candidate RP mapping(s)
Candidate RP 122.0.0.1
  Group(s) 224.0.0.0/4, AutoRP, ttl 64, interval 60, from access List 1
Candidate RP 122.0.0.1
  Group(s) 224.0.1.39/32 (negative), AutoRP, ttl 64, interval 60, from access List 1
Candidate RP 122.0.0.1
  Group(s) 224.0.1.40/32 (negative), AutoRP, ttl 64, interval 60, from access List 1
```

- See show ip pim auto-rp.

show ip pim bsr

- Use to display BSR information and the group prefixes for which the local router is a candidate RP in a PIM sparse mode environment.
- Field descriptions
 - Candidacy—Whether the router is a candidate BSR
 - Configured on—Interface on which the router is configured
 - address—Address of the router
 - hashMaskLen—Hash mask length
 - priority—Priority of the router
 - period—Time between bootstrap messages, in seconds
 - Elected BSR—This router or IP address of the elected bootstrap router
 - next BSM—If BSR is this router, time until the next bootstrap message is sent, in seconds
 - expires in—If BSR is not this router, time until the elected BSR expires if no bootstrap messages are received
 - Local candidate RP mapping(s)—Routers that the mapping agent is evaluating to determine an RP router for this interface
- Example 1—On a router that is the elected BSR

```
host1:1#show ip pim bsr

This PIM router is a Candidate BSR.
Configured on intf ATM3/0.101, address: 101.0.0.1
hashMaskLen 30, priority 2, period 60 seconds.
Elected BSR is this router, next BSM in 3 seconds.
```

```

Local candidate RP mapping(s):
Candidate RP 101.0.0.1
  224.0.0.0/4, BSR, hold-time 150, interval 60, priority 192
  228.0.0.0/24, BSR, hold-time 150, interval 60, priority 192, from
access-list acl
  230.0.0.0/24, BSR, hold-time 150, interval 60, priority 192, from
access-list acl

```

- Example 2—On a router that is a candidate BSR

```

host1:1#show ip pim bsr
This PIM router is a Candidate BSR.
  Configured on intf ATM3/0.100, address: 100.0.0.1
  hashMaskLen 30, priority 2, period 60 seconds.
Elected BSR is 101.0.0.1 (priority 0), expires in 73 seconds.

```

- Example 3—On a router that is not a candidate BSR

```

host1:1#show ip pim bsr
This PIM router is not a Candidate BSR.
Elected BSR is 101.0.0.1 (priority 0), expires in 73 seconds.

```

- See show ip pim bsr.

show ip pim data-mdt

- Use to display information about active data MDTs.
- To display information about data MDTs on which the provider edge transmits data, use the **sender** keyword.
- To display information about data MDTs on which the provider edge receives data, use the **receiver** keyword.
- To display information about an IP PIM group address pool, use the **group** keyword.
- To display a summary of configuration for each data MDT, use the **summary** keyword.
- To display the number of data MDTs, use the **count** keyword.
- Field descriptions
 - PE Name—Name of the PE
 - C-SG—Address of the C-SG
 - P-SG—Address of the P-SG
 - MTI—Name of the dynamic IP tunnel on which the data MDT was created
 - Data rate/Threshold—Rate and threshold of multicast data
 - Time until next MDT Join TLV—Configured delay until next MDT Join TLV
 - Time until MDT Join TLV expires—Configured delay until MDT Join TLV expires
 - Time until switchover from default-MDT—Configured delay until the data MDT switches over to the default MDT
- Example 1—Displays information about a data MDT sender

```

host1:PE1#show ip pim data-mdt 225.1.1.1
PE11 - Sender
C-SG: 10.11.0.100, 225.1.1.1
P-SG: 1.1.1.1, 235.0.1.1
MTI: TUNNEL gre:mvpn-dynamic-1
Data rate/Threshold: 10012/500 Kbps
Time until next MDT Join TLV: 25 seconds

```

- Example 2—Displays information about a data MDT receiver

```

host1:PE1#show ip pim data-mdt 225.2.2.2
PE31 - Receiver
C-SG: 10.13.0.100, 225.2.2.2
P-SG: 3.3.3.3, 235.0.1.1
MTI: TUNNEL gre:mvpn-dynamic-3
Time until MDT Join TLV expires: 29 seconds

```

- Example 3—Displays a summary of data MDT senders

```
host1:PE1#show ip pim data-mdt senders summary
```

VRF	S/R	C-Group	C-Source	P-Group	P-Source	MTI
PE11	Sender	225.1.1.1	10.11.0.100	235.0.1.1	1.1.1.1	TUNNEL gre:mvpn-dynamic-1
PE12	Sender	225.1.1.1	10.12.0.100	235.0.1.2	1.1.1.1	TUNNEL gre:mvpn-dynamic-2

Counts: 2 senders, 0 receivers, total 3.

- Example 4—Displays the number of data MDT senders and receivers

```

host1:PE1#show ip pim data-mdt count
Counts: 2 senders, 1 receivers, total 3.

```

- See show ip pim data-mdt.

show ip pim dense-mode sg-state

- Use to display information for each (Source, Group) pair for PIM dense mode.
- Field descriptions
 - (Source, Group) pair—IP addresses of multicast source and group
 - EntryExpires—Time until the (S,G) pair entry expires
 - RPF Route—Reverse-path forwarding route
 - IIF—IP address of incoming interface
 - UpNbr—IP address of upstream neighbor
 - Pruned Oifs—Outgoing interfaces that have been pruned
 - Address—IP address of outgoing interface
 - Ifid—Index of the interface
 - Pruned due to—Reason for prune: assert or explicit prune
 - Pruned time remaining—Time in seconds until the prune expires

- Example

```

host1:8#show ip pim dense-mode sg-state
PIM DM route table and pruned oif information
<122.0.0.1, 224.0.1.39> EntryExpires: 99
  RPF Route: 122.0.0.0/255.0.0.0   IIF: 107.0.8.4   UpNbr: 107.0.4.8
  Pruned Oifs:
    Address: 108.0.8.5   IfId: 95
    Pruned due to assert
    Pruned time remaining 129
<130.0.0.2, 224.0.1.39> EntryExpires: 100
  RPF Route: 130.0.0.0/255.0.0.0   IIF: 107.0.8.4   UpNbr: 107.0.4.8
  Pruned Oifs:
    Address: 108.0.8.5   IfId: 95
    Pruned due to assert
    Pruned time remaining 130
<121.0.0.1, 224.0.1.40> EntryExpires: 102
  RPF Route: 121.0.0.0/255.0.0.0   IIF: 107.0.8.4   UpNbr: 107.0.4.8
  Pruned Oifs:
    Address: 108.0.8.5   IfId: 95
    Pruned due to assert
    Pruned time remaining 133

```

- See show ip pim dense-mode sg-state.

show ip pim interface

- Use to display information about PIM interfaces.
- Specify no keywords or variables to view information about all PIM interfaces.
- Provide an interface type and specifier (such as atm 3/0) to display information about that interface only. For details about interface types and specifiers, see Interface Types and Specifiers in *JunosE Command Reference Guide*.
- Specify the **summary** keyword to view the number of configured, enabled, and disabled PIM dense mode, PIM sparse mode, and PIM sparse-dense mode interfaces.
- Specify the **count** keyword to view the number of multicast packets that the interface has sent and received.
- Field descriptions
 - Interface Addr—IP address of the interface
 - Interface Name—Type and specifier of the interface. For details about interface types and specifiers, see Interface Types and Specifiers in *JunosE Command Reference Guide*.
 - Ver—Version of PIM running on this interface
 - Mode—PIM mode running on this interface: Sparse, Dense, or SparseDense
 - Nbr Count—Number of neighbors connected to this interface
 - Hello Intvl—Time interval, in seconds, at which the interface sends hello messages to neighbors

- J/P Interval—Time interval, in seconds, at which the interface sends the join/prune messages
- DR Addr—Address of the designated router
- SM—Number of PIM sparse mode interfaces
- DM—Number of PIM dense mode interfaces
- SM/DM—Number of PIM sparse-dense mode interfaces
 - enabled—Number of interfaces administratively enabled
 - disabled—Number of interfaces administratively disabled
- DR Pri— Designated router priority value
- ControlPktCount In|Out—PIM messages received on and sent from this interface
 - Hello—Total number of hello messages
 - JoinPrune—Total number of join and prune messages
 - Assert—Total number of assert messages
- Example 1

```
host1# show ip pim interface
```

```
PIM Interface Table
```

Interface	Addr	Interface	State	Ver	Mode	Nbr Count	Hello Intvl	J/P Intvl	DR Pri	DR Addr	JoinFilter
101.0.0.1		ATM2/0.100	Up	2	Sparse	1	30	150	5	101.0.0.2	-
102.0.0.1		ATM2/0.101	Up	2	Sparse	1	30	100	2	102.0.0.2	silver
103.0.0.1		ATM3/0.102	Up	2	Sparse	1	30	100	2	103.0.0.1	gold

- Example 2

```
host1#show ip pim interface summary
```

```
PIM Interface Summary
```

```
SM:    0, 0 enabled, 0 disabled
```

```
DM:    0, 0 enabled, 0 disabled
```

```
SM/DM: 1, 0 enabled, 1 disabled
```

- Example 3

```
host1#show ip pim interface count
```

```
PIM Interface Count
```

Interface	Addr	Interface Name	ControlPktCount Hello	In Out JoinPrune	Assert
192.32.10.20		ATM3/0.20	0	0	0
			0	0	0

- See show ip pim interface.

show ip pim neighbor

- Use to display information about PIM neighbors that the router discovered.
- Provide an interface type and specifier (such as atm 3/0) to display information about that interface only. For details about interface types and specifiers, see Interface Types and Specifiers in *JunosE Command Reference Guide*.
- Field descriptions
 - Neighbor Addr—IP address of the neighbor
 - Interface Name—Type and specifier of the interface to which the neighbor connects. For details about interface types and specifiers, see Interface Types and Specifiers in *JunosE Command Reference Guide*.
 - Uptime—Time since the router discovered this neighbor in *days hours:minutes:seconds* format
 - Expires—Time available for the neighbor to send a hello message to the interface. If the neighbor does not send a hello message during this time, it no longer is a neighbor.
 - Ver—Version of PIM that the neighbor is running
 - Mode—PIM mode that the neighbor is using: Sparse, Dense, or SparseDense
 - BFD—BFD status: up or down
- Example

```
host1#show ip pim neighbor
```

Neighbor Addr	Interface Name	Uptime	Expires	Ver	Mode	BFD
1.1.1.1	FastEthernet1/1	00:02:49	00:01:27	2	Sparse	---

Neighbor Addr	Interface Name	Uptime	Expires	Ver	Mode	BFD
1.1.1.1	FastEthernet1/1	00:03:16	00:01:30	2	Sparse	up

Neighbor Addr	Interface Name	Uptime	Expires	Ver	Mode	BFD
1.1.1.1	FastEthernet1/1	00:00:07	00:01:39	2	Sparse	down

- See show ip pim neighbor.

show ip pim rp

- Use to display information about PIM group-to-RP mappings.
- Specify the address of a group to view PIM group-to-RP mappings for a particular group.
- Specify the mapping keyword to display all group-to-RP mappings that the router has recorded.
- Field descriptions

- Group(s)—Prefix of the multicast group
- RP—IP address of RP router for the multicast group
- priority—Priority of the router
- via—Method by which the RP router was assigned: AutoRP, Static RP, or BSR
- expiryTime—Time in seconds at which the RP mapping becomes invalid, unless the mapping agent (access list) reassigns the RP router to this group

- Example 1

```
host1:8#show ip pim rp mapping
PIM Group-to-RP mapping(s)
Group(s) 224.0.0.0/4
  RP 122.0.0.1, priority 0, via AutoRP, expiryTime 88
Group(s) 224.0.1.39/32 (negative)
  RP 122.0.0.1, priority 0, via AutoRP (Negative), expiryTime 88
Group(s) 224.0.1.40/32 (negative)
  RP 122.0.0.1, priority 0, via AutoRP (Negative), expiryTime 88
```

- Example 2

```
host1:8#show ip pim rp mapping
PIM Group-to-RP mapping(s)
Group(s) 224.0.0.0/4
  RP 134.0.0.1, priority 0, via Static, from access-list 1
Group(s) 232.0.0.0/16
  RP 134.0.0.1, priority 0, via BSR, expires in 121 seconds
```

- See show ip pim rp.

show ip pim rp-hash

- Use to show which RP router that a multicast group is using.
- Field descriptions
 - Group(s)—Multicast group or groups
 - RP—RP router for the multicast group
 - priority—Priority of the router
 - via—Method by which the RP router was assigned: AutoRP, Static RP, or BSR
 - expiryTime—Time in seconds at which the RP mapping becomes invalid, unless it is renewed by the mapping agent

- Example 1

```
host1:2#show ip pim rp-hash 232.1.1.1
Group(s) 224.0.0.0/4
  RP 122.0.0.1, priority 0, via AutoRP, expiryTime 128
```

- Example 2

```
host1:2#show ip pim rp-hash 226.0.0.1
Group(s) 226.0.0.0/24
```

```
RP 101.0.0.1, priority 192, via BSR, expires in 145 seconds
*RP 145.0.0.3, priority 192, via BSR, expires in 145 seconds
```

- See `show ip pim rp-hash`.

show ip pim sparse-mode sg-state

- Use to display information for each (S,G) pair for PIM sparse mode and PIM SSM.
- Field descriptions
 - (S, G) pair—Source, Group pair for which information is provided
 - Group-to-RP mapping—IP addresses and network mask of the multicast group
 - RP—IP address of RP router
 - SSM group—Indicator that this is an SSM group
 - RPF Route—IP address and network mask of the RPF route
 - IIF—IP address of the incoming interface for the RPF route
 - UpNbr—IP address of the upstream neighbor
 - Oifs—Outgoing interface
 - Auto RP Discovery SELF oif—Indicates that RP router for this group was assigned through auto-RP
 - Register Oif to RP—IP address of RP router for the outgoing interface; suppressed for SSM
 - Address—IP address of outgoing interface
 - Interface—Type and specifier of the interface. For details about interface types and specifiers, see *Interface Types and Specifiers in JunosE Command Reference Guide*.
 - Joined as—Type of mapping
 - (S, G)—Mapping from a specific source to a specific group
 - (*, G)—Mapping from any source to a specific group
 - (*, *, RP)—Mapping from any source to any group
 - Join expires—Number of seconds before the (S,G) membership expires
 - Count of entries—Total counts of (S,G) pair mappings
- Example

```
host1:2# show ip pim sparse-mode sg-state
<*, 224.0.1.40>
  Group-to-RP mapping: 224.0.0.0/240.0.0.0   RP: 123.0.0.1
  RPF Route: 123.0.0.0/255.0.0.0   IIF: 106.0.7.3   UpNbr: 106.0.3.7
  Oifs:
    Auto RP Discovery SELF oif.
    Joined as <*, G>
```

```

<*, 225.1.2.3>
  Group-to-RP mapping: 224.0.0.0/240.0.0.0   RP: 123.0.0.1
  RPF Route: 123.0.0.0/255.0.0.0   IIF: 106.0.7.3   UpNbr: 106.0.3.7
  Oifs:
    Address: 78.7.7.7   Interface: loopback7
    Local group membership present.
<*, 235.1.1.1>
  Group-to-RP mapping: 224.0.0.0/240.0.0.0   RP: 123.0.0.1
  RPF Route: 123.0.0.0/255.0.0.0   IIF: 106.0.7.3   UpNbr: 106.0.3.7
  Oifs:
    Address: 78.7.7.7   Interface: loopback7
    Local group membership present.
<118.1.33.34, 232.0.0.1>
  SSM Group
  RPF Route: 118.1.0.0/255.255.0.0   IIF: 118.1.0.1 (Directly attached)
  Oifs:
    Register Oif to RP: 141.0.0.2 suppressed for SSM Group.
    Address: 134.0.0.1   Interface: ATM3/0.104
    Joined as <S, G>   Join Expires: 161
<118.1.33.35, 232.0.0.1>
  SSM Group
  RPF Route: 118.1.0.0/255.255.0.0   IIF: 118.1.0.1 (Directly attached)
  Oifs:
    Register Oif to RP: 141.0.0.2 suppressed for SSM Group.
    Address: 134.0.0.1   Interface: ATM3/0.104
    Joined as <S, G>   Join Expires: 161
<10.0.1.8, 235.1.1.1>   EntryExpires: 143
  Group-to-RP mapping: 224.0.0.0/240.0.0.0   RP: 123.0.0.1
  RPF Route: 10.0.0.0/255.0.0.0   IIF: 106.0.7.3   UpNbr: 106.0.3.7
  Oifs:
    Address: 78.7.7.7   Interface: loopback7
    Joined as <*, G>
Count of entries - <S, G>   : 3
                  <*, G>   : 3
                  <*, *, RP>: 0

```

- See `show ip pim sparse-mode sg-state`.

show ip pim sparse-mode unicast-route

- Use to display the unicast routes that PIM sparse mode is using.
- Field descriptions
 - Route—IP address and network mask for the unicast route
 - RpfNbr—RPF neighbor
 - Iif—Incoming interface for the unicast route
 - Pref—Preference value for the unicast route
 - Metric—Value of metric for the unicast route (type of metric varies with the unicast protocol)
 - Count of entries—Number of unicast routes that PIM sparse mode is using
- Example

```

host1:2#show ip pim sparse-mode unicast-route
PIM SM unicast route table information

```

Route	RpfNbr	Iif	Pref	Metric
122.0.0.0 /255.0.0.0		122.0.0.1	255	1
Count of entries: 1				

- See `show ip pim sparse-mode unicast-route`

show ip pim spt-threshold

- Use to display the threshold for switching to the shortest path tree at a PIM designated router.
- Field descriptions
 - Access List Name—Name of the IP access list that specifies the groups to which the threshold applies
 - SptThreshold (in kbps)—Value at which PIM sparse mode switches from a shared tree to an SPT. A value of infinity indicates that PIM sparse mode never switches to an SPT.
- Example

```
host1:2#show ip pim spt-threshold
Access List Name          SptThreshold(in kbps)
-----
1                          infinity
```

- See `show ip pim spt-threshold`.

CHAPTER 4

Configuring DVMRP

E Series routers support Distance Vector Multicast Routing Protocol (DVMRP) on VRs to forward multicast datagrams through a network. DVMRP is an interior gateway protocol that supports operations within an autonomous system, but not between autonomous systems. The multicast backbone of the Internet, MBone, uses DVMRP to forward multicast datagrams. This chapter describes how to configure DVMRP on E Series routers; it contains the following sections:

- [DVMRP Overview on page 126](#)
- [DVMRP Platform Considerations on page 127](#)
- [DVMRP References on page 128](#)
- [Before You Begin on page 128](#)
- [Enabling DVMRP on a Virtual Router on page 128](#)
- [Activating DVMRP on an Interface on page 129](#)
- [Configuring DVMRP Limits on page 129](#)
- [DVMRP Report Filter Overview on page 130](#)
- [Configuring DVMRP Summary Addresses Overview on page 131](#)
- [Changing the Metric for a Route on page 132](#)
- [Importing Routes from Other Protocols on page 132](#)
- [Specifying Routes to Be Advertised on page 133](#)
- [Preventing Dynamic Route Distribution on page 134](#)
- [Exchange DVMRP Unicast Routes Overview on page 134](#)
- [Enabling, Disabling, and Removing DVMRP on page 135](#)
- [Clearing DVMRP Routes on page 136](#)
- [Configuring DVMRP Tunnels on page 136](#)
- [Monitoring DVMRP on page 136](#)

DVMRP Overview



NOTE: PIM has gained general acceptance among a large number of multicast-enabled networks. We recommend that you use PIM rather than DVMRP for applications that are not otherwise required to run DVMRP.

DVMRP is a dense-mode multicasting protocol and therefore uses a broadcast and prune mechanism. The protocol builds a source-rooted tree (SRT) in a similar way to PIM dense mode. DVMRP routers flood datagrams to all interfaces except the one that provides the shortest unicast route to the source. DVMRP uses pruning to prevent unnecessary sending of multicast messages through the SRT.

A DVMRP router sends prune messages to its neighbors if it discovers that:

- The network to which a host is attached has no active members of the multicast group.
- All neighbors, except the next-hop neighbor connected to the source, have pruned the source and the group.

When a neighbor receives a prune message from a DVMRP router, it removes that neighbor from its (S,G) pair table, which provides information to the multicast forwarding table.

When a host on a previously pruned branch attempts to join a multicast group, it sends an IGMP message to its first-hop router. The first-hop router then sends a graft message upstream.

Identifying Neighbors

In this implementation of DVMRP, a *neighbor* is a directly connected DVMRP router. When you enable DVMRP on an interface, the associated VR adds information about local networks to its DVMRP routing table. The VR then sends probe messages periodically to learn about neighbors on each of its interfaces. To ensure compatibility with other DVMRP routers that do not send probe messages, the VR also updates its DVMRP routing table when it receives route report messages from such routers.

Advertising Routes

As its name suggests, DVMRP uses a distance-vector routing algorithm. Such algorithms require that each router periodically inform its neighbors of its routing table. DVMRP routers advertise routes by sending DVMRP report messages. For each network path, the receiving router picks the neighbor advertising the lowest cost and adds that entry to its routing table for future advertisement.

The cost, or metric, for this routing protocol is the hop count back to the source. The hop count for a network device is the number of routers on the route between the source and that network device.

[Table 6 on page 127](#) shows an example of the routing table for a DVMRP router.

Table 6: Sample Routing Table for a DVMRP Router

Source Subnet	Subnet Mask	From Router	Metric	Time Before Entry Is Deleted from Routing Table	Input Port	Output Port
143.2.0.0	255.255.0.0	143.32.44.12	4	85	3/0	4/0, 4/1
143.3.0.0	255.255.0.0	143.2.55.23	2	80	3/1	4/0, 4/1
143.4.0.0	255.255.0.0	143.78.6.43	3	120	3/1	4/0, 4/1

The DVMRP router maintains an (S,G) pair table that provides information to the multicast forwarding table. The (S,G) pair table is based on:

- Information from the DVMRP routing table
- Information learned from prune messages
- If IGMP and DVMRP are on the same interface, group information learned from IGMP

The (S,G) pair table includes a route from each subnetwork that contains a source to each multicast group of which that source is a member. These routes can be static or learned routes. [Table 7 on page 127](#) shows an example of the (S,G) pair table for DVMRP. A dash (–) in the Input Port column indicates that the interface is associated with a protocol other than DVMRP.

Table 7: Sample DVMRP (S,G) Pair Table

Source Subnet	Multicast Group	Time Before Entry Is Deleted from Routing Table	Input Port	Output Port
143.2.0.0	230.1.2.3	85	3/0	4/0, 4/1
	230.2.3.4	75	3/0	4/0, 4/1
	230.3.4.5	60	3/0	4/1
	230.4.5.6	90	–	4/0
143.3.0.0	230.1.2.3	80	3/1	4/0, 4/1

DVMRP Platform Considerations

For information about modules that support DVMRP on the ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support DVMRP.

For information about modules that support DVMRP on the E120 and E320 Broadband Services Routers:

- See *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about the modules that support DVMRP.

DVMRP References

For more information about DVMRP, see the following resource:

- Distance Vector Multicast Routing Protocol—draft-ietf-idmr-dvmrp-v3-11.txt (April 2004 expiration)

Before You Begin

You can configure multicasting on IPv4 and IPv6 interfaces.

For information about configuring IP interfaces, see *Configuring IP* in the *JunosE IP, IPv6, and IGP Configuration Guide*. For information about configuring IPv6 interfaces, see *Configuring IPv6* in the *JunosE IP, IPv6, and IGP Configuration Guide*.

For information about configuring multicast on IPv6 interfaces, see [“Configuring IPv6 Multicast” on page 145](#).

Enabling DVMRP on a Virtual Router

By default, DVMRP is enabled on the router. To enable DVMRP on a VR:

1. Enable multicast routing.

```
host1(config)#ip multicast-routing
```

2. (Optional) Create a VR or access a VR context.

```
host1(config)#virtual-router boston
```



NOTE: If you do not specify a VR, you can configure DVMRP on the default router.

You must enable and configure DVMRP on one or more interfaces for DVMRP to function. See [“Activating DVMRP on an Interface” on page 129](#). You can also set DVMRP limits for the VR; see [“Configuring DVMRP Limits” on page 129](#).

Activating DVMRP on an Interface

By default, DVMRP is not activated on an interface. Configuring any DVMRP parameter on an interface automatically activates DVMRP on that interface. You can also activate DVMRP on an interface and use the default parameters.

ip dvmrp

- Use to activate DVMRP on an interface.
- This command automatically creates and enables DVMRP processing on the current VR.
- Issuing this command identifies this interface as one that DVMRP owns.
- Example

```
host1:boston(config-if)#ip dvmrp
```
- Use the **no** version to remove DVMRP from an interface.
- See `ip dvmrp`.

Configuring DVMRP Limits

You can configure DVMRP and IGMP on the same interface. If you configure DVMRP and IGMP on an interface, the router determines that DVMRP owns the interface.



NOTE: You cannot configure DVMRP and PIM on the same interface.

When you have enabled DVMRP processing on a VR, you can configure the following settings for that VR:

- The number of routes that the VR advertises on each interface.
- A maximum number of DVMRP routes at which the router generates a system log warning message and an SNMP trap.

ip dvmrp route-hog-notification

- Use to set the number of DVMRP routes that the router can record before it generates a system log warning message.
- The warning alerts you so you can identify routers that are injecting large numbers of routes into the Mbone.
- Example

```
host1:boston(config)#ip dvmrp route-hog-notification 5000
```
- Use the **no** version to restore the default value, 10,000 routes.
- See `ip dvmrp route-hog-notification`.

ip dvmrp route-limit

- Use to limit the number of routes that the router can advertise on each interface.
- Example

```
host1:boston(config)#ip dvmrp route-limit 5000
```
- Use the **no** version to restore the default value, 7000 routes.
- See `ip dvmrp route-limit`.

DVMRP Report Filter Overview

You can configure an interface to accept only reports with routes that appear on a standard IP access list. You can refine the set of accepted routes further, by defining a second access list of neighbors who can supply the specified routes.

For example, suppose you define an access list that specifies that the router accepts only reports for the route 172.16.2.0/24. You then define a second access list that specifies that only neighbors 192.168.1.1 and 193.168.1.1 can supply this route. If neighbor 192.168.2.2 supplies the route, the DVMRP router rejects this report.

You can also modify the value (distance) that the router associates with a DVMRP route when it computes the RPF interface for the source of a multicast packet. By default, the router associates a distance of 0 with DVMRP routes; this value specifies that the router use DVMRP, rather than a unicast routing protocol, to transport multicast datagrams.

However, in a configuration where PIM discovers multicast routes and a unicast routing protocol performs RPF lookups, you can increase the administrative distance to favor the unicast protocol.

For information about defining access lists, see *Configuring Routing Policy* in the *JunosE IP Services Configuration Guide*.

ip dvmrp accept-filter

- Use to filter routes in DVMRP reports in accordance with a standard IP access list.
- Specify a standard IP access list of sources for which the interface can accept routes.
- Specify a DVMRP administrative distance to favor a unicast routing protocol.
- Specify a neighbor list to restrict the neighbors from which reports for routes on the first list can be accepted.
- Example

```
host1:boston(config-if)#ip dvmrp accept-filter boston-list 4 neighbor-list
boston-neighbors
```
- Use the **no** version to disable a filter.
- See `ip dvmrp accept-filter`.

Configuring DVMRP Summary Addresses Overview

You can configure an interface to advertise a summary address with a known metric rather than a more specific route. DVMRP advertises the summary address if the DVMRP routing table contains a more specific route that matches the address and mask of the summary address.

If you want to advertise all routes rather than a summary, disable automatic summarization on the interface (**no ip dvmrp auto-summary**). By default, the router automatically summarizes DVMRP routes. DVMRP automatic summarization maps a unicast subnet route to a classful network number route when the subnet has a different network number from the IP address of the interface (or tunnel) over which the advertisement travels. If the interface is unnumbered, the router compares the network number of the numbered interface to the IP address to which the unnumbered interface points.

If you configure a summary address on an interface and do not disable automatic summarization, the interface advertises the least-specific address.

ip dvmrp auto-summary

- Use to reenable the router to summarize routes automatically for this interface. By default, automatic summarization is enabled.
- Example

```
host1:boston(config-if)#ip dvmrp auto-summary
```
- Use the **no** version to disable automatic summarization for this interface.
- See ip dvmrp auto-summary.

ip dvmrp summary-address

- Use to advertise DVMRP summary addresses on an interface. By default, an interface advertises only summary addresses generated by automatic summarization.
- If you configure multiple overlapping summary addresses on an interface, the one with the shortest mask takes preference.
- Use the **metric** keyword to specify a DVMRP metric (hop count); the default metric value is 1.
- Example

```
host1:boston(config-if)#ip dvmrp summary-address 192.48.1.2 255.255.255.0 metric 1
```
- Use the **no** version to stop advertising a summary address on the interface.
- See ip dvmrp summary-address.

Changing the Metric for a Route

The metric for DVMRP is hop count. For example, a route with two hops over a slow serial line is preferable to a route with three hops over a faster optical line.

The router increases the number of DVMRP routes in incoming reports by a default metric of one and in outgoing reports by a default of 0. You can change the metric for an interface to promote or demote the preference for associated routes.

ip dvmrp metric-offset

- Use to adjust the number of hops associated with a route. This action specifies that the route is more efficient or less efficient than an alternative route.
- Use the **in** keyword to specify the number of hops by which the router increases the number of DVMRP routes advertised in incoming DVMRP reports. This option is the default.
- Use the **out** keyword to specify the number of hops by which the router increases the number of DVMRP routes advertised in outgoing DVMRP reports.
- Example

```
host1:boston(config-if)#ip dvmrp metric-offset in 3
```
- Use the **no** version to revert to the default settings: 1 for incoming reports and 0 for outgoing reports.
- See `ip dvmrp metric-offset`.

Importing Routes from Other Protocols

You can import routing information from other protocols into the DVMRP routing table. Only routes that appear in the RPF table can be imported. To do so:

1. If you want to use IS-IS, OSPF, or RIP routes, make those routes available to multicast protocols. See [“Defining Static Routes for Reverse-Path Forwarding” on page 7](#).
2. Access Router Configuration mode.
3. Specify a route map.
4. Import information from one type of routing domain into another.

redistribute

- Use to import information from another type of routing domain to the DVMRP domain. DVMRP can import only routes that appear in the RPF table.
- Specify the source protocol from which routes are being redistributed. It can be one of the following keywords: **bgp**, **isis**, **ospf**, **static**, or **connected**.
- Use the **static** keyword to redistribute static IP multicast routes into DVMRP.

- Use the **connected** keyword to redistribute routes that are established automatically in the RPF table when another multicast routing protocol, such as PIM, is enabled on an interface.
- Use the **route-map** keyword to configure the route map to filter imported routes from the source routing protocol to the current routing protocol. If you do not specify the **route-map** option, all routes are redistributed. If you specify the **route-map** option, but no route map tags are listed, no routes are imported.
- Example—Importing routing information from BGP into DVMRP

```
host1:boston(config-router)#redistribute bgp 100 route-map boston-map
```
- Use the **no** version to disable redistribution.
- See redistribute.

route-map

- Use to specify a route map.
- Example

```
host1:boston(config-router)#route-map boston-map atm 3/2
```
- Use the **no** version to delete the route map. If you do not specify an interface, it removes the global route map if one exists.
- See route-map.

router dvmrp

- Use to create and enable DVMRP processing on a VR or to access DVMRP Router Configuration mode.
- Example

```
host1:boston(config)#router dvmrp
```
- Use the **no** version to remove DVMRP from the VR.
- See router dvmrp.

Specifying Routes to Be Advertised

By default, if DVMRP owns an interface, that interface advertises all DVMRP routes it has learned to its neighbors. You can specify the routes that the interface advertises by issuing the **ip dvmrp announce-filter** command in conjunction with a standard IP access list. The IP access list defines the DVMRP routes that are advertised.

ip dvmrp announce-filter

- Use to specify the DVMRP routes for an interface to advertise.
- Specify a standard IP access list of routes for the interface to advertise.
- Example

```
host1:boston(config-if)#ip dvmrp announce-filter boston-list
```

- Use the **no** version to enable the interface to advertise all DVMRP routes that it has learned.
- See `ip dvmrp announce-filter`.

Preventing Dynamic Route Distribution

By default, if you make changes to a route map, the router dynamically redistributes the routes in DVMRP. To prevent this dynamic redistribution, use the **disable-dynamic-redistribute** command.

disable-dynamic-redistribute

- Use to halt the dynamic redistribution of routes that are initiated by changes to a route map; dynamic redistribution is enabled by default.
- Example

```
host1(config-router)#disable-dynamic-redistribute
```
- There is no **no** version.
- See `disable-dynamic-redistribute`.

Exchange DVMRP Unicast Routes Overview

DVMRP maintains its own unicast routing table, based on distance vector calculations. The routing table defines the best-known distance to each destination and how to get there. The router updates the table by exchanging information with its neighbors. The DVMRP routing table is used solely for RPF lookups.

By default, if DVMRP owns an interface, that interface exchanges DVMRP unicast routes with its neighbors, and you cannot disable the exchange of routes. However, you can enable and disable the exchange of DVMRP unicast routes on interfaces that DVMRP does not own.

When an interface exchanges DVMRP routes, the router obtains routes from DVMRP report messages and stores them in its DVMRP routing table. Other multicast protocols, such as PIM, can then use these routes for RPF lookups. With this feature, PIM can use the DVMRP routing table even when the router is not running DVMRP.

All interfaces, including tunnels, support DVMRP unicast routing. DVMRP tunnels use DVMRP multicast routing to support DVMRP unicast routing.

ip dvmrp unicast-routing

- Use to enable the exchange of DVMRP unicast routes on an interface not owned by DVMRP.
- Example

```
host1:boston(config-if)#ip dvmrp unicast-routing
```

- Use the **no** version to disable the exchange of DVMRP unicast routes on an interface not owned by DVMRP.
- See `ip dvmrp unicast-routing`.

Enabling, Disabling, and Removing DVMRP

You can disable DVMRP on a VR or an interface without removing the configuration. You can also remove DVMRP from a VR or an interface.

disable

- Use to disable DVMRP processing on a VR without removing the DVMRP configuration. By default, DVMRP processing is enabled.
- Example

```
host1:boston(config-router)#disable
```
- Use the **no** version to reen able DVMRP processing on a VR.
- See `disable`.

ip dvmrp

- Use to activate DVMRP on an interface.
- This command automatically creates and enables DVMRP processing on the current VR.
- Issue this command to identify this interface as one that DVMRP owns.
- Example

```
host1:boston(config-if)#ip dvmrp
```
- Use the **no** version to remove DVMRP from an interface.
- See `ip dvmrp`.

ip dvmrp disable

- Use to disable DVMRP processing on an interface without removing the DVMRP configuration.
- Example

```
host1:boston(config-if)#ip dvmrp disable
```
- Use the **no** version to reen able DVMRP processing on an interface.
- See `ip dvmrp disable`.

router dvmrp

- Use to create and enable DVMRP processing on a VR or to access Router Configuration mode.
- Example

```
host1:boston(config)#router dvmrp
```

- Use the **no** version to remove DVMRP from a VR.
- See router dvmrp.

Clearing DVMRP Routes

You can clear one or more routes from the DVMRP routing table. However, if you do so, the routes might reappear in the routing table if they are rediscovered.

clear ip dvmrp routes

- Use to clear DVMRP routes from the routing table.
- If you do not specify any options, the router removes all routes except those associated with its own interfaces from the DVMRP table.
- If you specify an IP address but not a subnet mask, the router removes the longest route to that IP address from the DVMRP table.
- If you specify a subnet mask, the router removes that specific route from the DVMRP table.
- Example

```
host1:boston#clear ip dvmrp routes
```

- There is no **no** version.
- See clear ip dvmrp routes.

Configuring DVMRP Tunnels

DVMRP tunnels enable the exchange of IP multicast traffic between routers separated by networks that do not support multicast routing. For information about DVMRP tunnels, see *Configuring IP Tunnels* in the *JunosE IP Services Configuration Guide*.

Monitoring DVMRP

You can establish a reference point for DVMRP statistics by setting the statistics counters to zero.

You can display DVMRP information with the **show ip dvmrp** commands.

baseline ip dvmrp

- Use to set the counters for DVMRP statistics to zero, which establishes a reference point, or baseline, for DVMRP statistics.
- Example

```
(host1)#baseline ip dvmrp
```

- There is no **no** version.
- See baseline ip dvmrp.

show ip dvmrp

- Use to display DVMRP information for a VR.
- Field descriptions
 - Dvmrp Administrative State—State of DVMRP in the software: Enabled or Disabled
 - Mcast Administrative State—State of multicasting in the software: Enabled or Disabled
 - Dvmrp Version—Version of DVMRP with which this software is compatible
 - GenerationID—A number the router generates each time it reboots; when the number changes, neighbors discard all information previously learned from the router
 - Number of Routes—Number of routes in the DVMRP routing table
 - Number of Triggered Routes—Number of routes waiting to be advertised, because a parameter for the route changed
 - Reachable Routes—Number of routes that the router can currently reach
 - Route-hog-notification—Number of DVMRP routes that the router can record before it generates a system log warning message
 - Route-limit—Maximum number of routes that the router can advertise on each interface
 - Send-S32-Prunes-Only—Indicator of whether the router sends only S-32 prunes
 - true—Router sends only S-32 prunes and grafts to ensure compatibility with other protocols, such as PIM
 - false—Router sends S-32 and S/Prefix grafts and prunes
- Example

```

host1:boston>show ip dvmrp
Routing Process DVMRP - Distance Vector Multicast Routing Protocol
  Dvmrp Administrative State:      Enabled
  Multicast Administrative State:  Enabled
  Dvmrp Version:                  3.255
  Generation ID:                  0x46828e2b
  Number of Routes:               2
  Number of Triggered Routes:     0
  Reachable Routes:               2
  route-hog-notification:         10000
  route-limit:                    7000
  Send-S32-Prunes-Only:           true
  unicastRoutingOnly:             false
  Graceful Restart Duration:       60
  Graceful Restart is:            complete (timer 0 seconds)

```

Redistribution	None
dynamic-redistribution:	Configured
	enabled

- See show ip dvmrp.

show ip dvmrp interface

- Use to display DVMRP parameters for the specified interfaces.
- Field descriptions
 - Interface—Type and specifier of the interface connected to a source. For details about interface types and specifiers, see Interface Types and Specifiers in *JunosE Command Reference Guide*.
 - SourceAddress—IP address of the interface or, for an unnumbered interface, address of the loopback interface
 - Network/Mask—Network and mask of the subnet on which the interface resides
 - Received Bad Packets/RBdPk—Number of bad packets received on this interface
 - Received Bad Routes/RBdRt—Number of bad routes received on this interface
 - Routes Sent/SntRt—Number of bad routes advertised on this interface
 - Administrative State—Configured state of DVMRP on this interface: enabled or Disabled
 - Summary Address(es)—Specific summary address or addresses that this interface should advertise
 - auto-summary—Status of automatic summarization: Enabled or Disabled
 - metric-offset in—Number of hops by which the router increases a DVMRP route advertised in incoming DVMRP reports
 - metric-offset out—Number of hops by which the router increases a DVMRP route advertised in outgoing DVMRP reports
 - announce-filter—Routes advertised by the interface
 - accept-filter(s)—Names of IP access lists that specify the sources for which the interface accepts routes
- Example 1

```
host1:v3#show ip dvmrp interface
Interface: ATM2/0.1
  SourceAddress:                1.0.0.1
  Network/Mask:                 1.0.0.1/24
  Received Bad Packets:         0
  Received Bad Routes:         0
  Routes Sent:                 0
  Administrative State:         Enabled
  Summary Address(es)          None Configured
  auto-summary:                 Disabled
```

```

metric-offset in:          1
metric-offset out:         0
announce-filter:          None
accept-filter(s)          None Configured

```

- Example 2

```

host1:boston#show ip dvmrp interface brief

```

Interface	SourceAddress	Network/Mask	RBdPk	RBdRt	SntRt
atm5/0.14	14.0.1.1	14.0.1.1/8	0	0	2
atm5/0.15	15.0.1.1	15.0.1.1/8	0	0	2

- See show ip dvmrp interface.

show ip dvmrp mroute

- Use to display information about DVMRP routes to multicast groups.
- Field descriptions
 - (S,G) pair—Source, Group pair value
 - Uptime—Time, in seconds, that this (S, G) pair entry has been in the routing table
 - Upstream Prune—Whether the router has sent prune messages for this group
 - RPF Interface—Interface that provides the shortest path back to the source
 - Outgoing interface list—Types and specifiers of interfaces through which the VR forwards DVMRP messages, such as atm3/0. For details about interface types and specifiers, see Interface Types and Specifiers in *JunosE Command Reference Guide*.
- Example

```

host1:boston#show ip dvmrp mroute
IP DVMRP Multicast Routing Table
(40.0.0.0/16, 228.1.1.1) Uptime: 77
Upstream Prune: none
RPF Interface
  atm5/0.40
Outgoing interface list:
  atm5/0.31

```

- See show ip dvmrp mroute.

show ip dvmrp neighbor

- Use to display information about DVMRP neighbors.
- Specify the **brief** keyword to view a summary of information.
- Field descriptions
 - Neighbor Address/NbrAddress—IP address of the neighbor
 - Interface—Interface type and specifier, such as atm3/0. For details about interface types and specifiers, see Interface Types and Specifiers in *JunosE Command Reference Guide*.

- Neighbor upTime/UpTime—Length of time, in seconds, that this router has been a neighbor
- Neighbor Major Version/Maj—Major number of the DVMRP version on the neighbor
- Neighbor Minor Version/Min—Minor number of the DVMRP version on the neighbor
- Neighbor Capabilities/Cap—Capability of the neighbor
 - Prune/P—Ability to send prune messages
 - GenerationId/G—Ability to create a generation ID number
 - Mtrace/M—Ability to trace multicast routes
 - Netmask/N—Ability to send prunes and grafts with a network mask address
- Neighbor State/State—Status of communications with the neighbor
 - Active—Router is able to communicate with this neighbor
 - Down—Neighbor is down
 - Ignoring—Router is not accepting messages from this neighbor
 - Oneway—Router is receiving messages from the neighbor, but the neighbor does not include the router's IP address in the messages. This state can indicate a starting transition, or a problem.
- Generation ID—Number that the neighbor generates each time it boots; when the number changes, the VR discards all information previously learned from the router.
- Routes Received—Number of routes received from this neighbor
- Bad Routes Received—Number of bad routes received from this neighbor
- Bad Packets Received—Number of bad packets received from this neighbor
- Example 1

```
host1:boston# show ip dvmrp neighbor
Neighbor Address:      14.0.0.1
Interface:             atm5/0.14
Neighbor upTime:       28
Neighbor Major Version: 3
Neighbor Minor Version: 255
Neighbor Capabilities: Prune GenerationId Mtrace NetMask
Neighbor State:        Active
Generation ID:         0x3a13fbc2
Routes Received:       1
Bad Routes Received    0
Bad Packets Received:  0
```

- Example 2

```
host1:v3#show ip dvmrp neighbor brief
Interface      NbrAddress      UpTime Maj Min Cap  State
```


atm5/0.14	14.0.0.1	32	3	255	PGMN	Active
atm5/0.15	15.0.0.1	34	3	255	PGMN	Active

- See `show ip dvmrp neighbor`.

show ip dvmrp route

- Use to display information about DVMRP routes.
- Specify an IP address to display the best route to that address.
- Specify an IP address and subnet mask to display the route that exactly matches this IP address and subnet mask
- Specify an interface type and specifier to display routes associated with that interface. For details about interface types and specifiers, see *Interface Types and Specifiers in JunosE Command Reference Guide*.
- Specify the **brief** keyword to view a summary of information.
- Field descriptions
 - Prefix—IP address of the network
 - Length—Length of the subnet mask for the network
 - usNbr/Owner—IP address of the upstream neighbor associated with this route or a description of the origin of the route
 - Dvmrp Local—Route is associated with a directly attached network
 - Dvmrp Aggregate—Route is an aggregate route determined by summarization
 - Metric—Metric associated with this interface for this route
 - ExpireTime—Time, in seconds, until the VR starts the process for removing the route
 - UpTime—Length of time, in seconds, that the route has been in the DVMRP routing table
 - Interface—Type and specifier for the interface, such as atm3/0.
- Example 1

```

host1:boston>show ip dvmrp route
Prefix/Length      usNbr/Owner      Metric ExpireTime UpTime Interface
-----
14.0.0.0/8         Dvmrp Local      1       Never      18   atm5/0.14
    Downstream Interface(s)
    Interface
    atm5/0.15
15.0.0.0/8         Dvmrp Local      1       Never      18   atm5/0.15
    Downstream Interface(s)
    None
25.0.0.0/8         14.0.0.1         2       129        11   atm5/0.14
    Downstream Interface(s)

```

Interface
atm5/0.15

- Example 2

```
host1:v3# show ip dvmrp route brief
```

Prefix/Length	usNbr/Owner	Metric	ExpireTime	UpTime	Interface
14.0.0.0/8	Dvmrp Local	1	Never	26	atm5/0.14
15.0.0.0/8	Dvmrp Local	1	Never	26	atm5/0.15
25.0.0.0/8	14.0.0.1	2	121	19	atm5/0.14

- See show ip dvmrp route.

show ip dvmrp routeNextHop

- Use to display information about the next hop.
- Field descriptions
 - addr—IP address of the next-hop router
 - mlen—Mask length of the next-hop router
 - ifIndex—SNMP interface index for the interface that connects to the next hop
 - Type—Description of the next-hop router
 - leaf—Neighbor with no downstream neighbors
 - branch—Neighbor with downstream neighbors

- Example

```
host1:boston>show ip dvmrp routeNextHop
```

addr/mlen	ifIndex	Type
172.16.0.0/16	4	leaf
172.17.0.0/16	4	leaf
172.18.0.0/16	3	leaf
172.19.0.0/16	3	leaf
172.19.0.0/16	4	branch

- See show ip dvmrp routeNextHop.

PART 2

Internet Protocol Version 6

- [Configuring IPv6 Multicast on page 145](#)
- [Monitoring IPv6 Multicast on page 175](#)
- [Configuring MLD and MLD Proxy on page 219](#)
- [Monitoring MLD and MLD Proxy on page 241](#)
- [Configuring PIM for IPv6 Multicast on page 259](#)

CHAPTER 5

Configuring IPv6 Multicast

IPv6 multicast enables a device to send packets to a group of hosts rather than to a list of individual hosts. This chapter describes how to configure IPv6 multicast on the E Series router; it contains the following sections:

- [IPv6 Multicast Overview on page 145](#)
- [IPv6 Multicast Platform Considerations on page 147](#)
- [IPv6 Multicast References on page 148](#)
- [Before You Begin on page 148](#)
- [Switch Fabric Bandwidth Configuration on page 148](#)
- [Configuring IPv6 Multicast Attributes on page 149](#)
- [IPv6 Multicast Bandwidth Map Overview on page 151](#)
- [Autosense Mechanism Overview on page 152](#)
- [Adaptive Mode Mechanism Overview on page 153](#)
- [Example: Configuring an IPv6 Multicast Bandwidth Map on page 155](#)
- [Multicast QoS Adjustment for IPv6 on page 157](#)
- [IPv6 Hardware Multicast Packet Replication Overview on page 160](#)
- [IPv6 Hardware Multicast Packet Replication Considerations on page 164](#)
- [Configuring IPv6 Hardware Multicast Packet Replication on page 165](#)
- [Interface-Level Multicast Traffic Configuration for IPv6 on page 167](#)
- [Port-Level Multicast Traffic Configuration for IPv6 on page 170](#)
- [Deleting IPv6 Multicast Forwarding Entries on page 172](#)
- [BGP Multicasting on page 173](#)

IPv6 Multicast Overview

IPv6 defines three types of addresses: *unicast*, *anycast*, and *multicast*. Each type of address enables a device to send datagrams to selected recipients:

- A unicast address enables a device to send a datagram to a single recipient.
- An anycast address enables a device to send a datagram to one recipient out of a set of recipients.

- A multicast address enables a device to send a datagram to a specified set of hosts, known as a multicast group, in different subnetworks.

IPv6 multicast improves network efficiency by allowing a host to transmit a datagram to a targeted group of receivers. For example, a host may want to send a large video clip to a group of selected recipients. It would be time-consuming for the host to unicast the datagram to each recipient individually. If the host broadcasts the video clip throughout the network, network resources are not available for other tasks. The host uses only the resources it needs when multicasting the datagram.

Routers use multicast routing algorithms to determine the best route and transmit multicast datagrams throughout the network. E Series routers support a number of IPv6 multicast protocols on virtual routers. Each virtual router handles the interoperability of IPv6 multicast protocols automatically. To start IPv6 multicast operation on a virtual router, you access the context for that virtual router and configure the desired protocols on the selected interfaces. [Table 8 on page 146](#) describes the function of each the protocol that the router supports.

Table 8: Function of Multicast Protocols on a Router

Protocol	Function
Multicast Listener Discovery (MLD)	Discovers hosts that belong to multicast group.
Protocol Independent Multicast Protocol (PIM)	Discovers other multicast routers that should receive multicast packets.
BGP Multicast Protocol	Routes multicast datagrams between autonomous systems.

The router supports up to 16,384 multicast forwarding entries (multicast routes) at any time.

Reverse-Path Forwarding

IP multicasting uses reverse path forwarding (RPF) to verify that a router receives a multicast packet on the correct incoming interface. The RPF algorithm enables a router to accept a multicast datagram only on the interface from which the router sends a unicast datagram to the source of the multicast datagram.

When the router receives a multicast datagram from a source for a group, the router verifies that the packet was received on the correct RPF interface. If the packet was not received on the correct interface, the router discards the packet. Only packets received on the correct RPF interface are considered for forwarding to downstream receivers.

When operating in sparse-mode, the routers perform an RPF lookup to identify the upstream router from which to request the data and then send join messages for the multicast stream only to that router.

When operating in dense-mode, routers that have multiple paths to the source of the multicast stream initially receive the same stream on more than one interface. In this

case, the routers perform an RPF lookup to identify multicast data streams that are not arriving on the best path and send prune messages to terminate these flows.

The RPF lookup need not always be towards the source of the multicast stream. The lookup is done towards the source only when the router is using a source-rooted tree to receive the multicast stream. If the router uses a shared tree instead, the RPF lookup is toward a rendezvous point and not toward the source of the multicast stream.

Multicast Packet Forwarding

Multicast packet forwarding is based on the source (S) of the multicast packet and the destination multicast group address (G). For each (S,G) pair, the router accepts multicast packets on an incoming interface (IIF), which satisfies the RPF check (RPF-IIF). The router drops packets received on IIFs other than the RPF-IIF and notifies the routing protocols that a packet was received on the wrong interface.

The router forwards packets received on the RPF-IIF to a list of outgoing interfaces (OIFs). The list of OIFs is determined by the exchange of routing information and local group membership information. The router maintains mappings of (S,G, IIF) to {OIF1, OIF2...} in the multicast routing table.

You can enable two or more multicast protocols on an IIF. However, only one protocol can forward packets on that IIF. The protocol that forwards packets on an IIF *owns* that IIF. A multicast protocol that owns an IIF also owns the (S,G) entry in the multicast routing table.

- Related Documentation**
- [IPv6 Multicast Platform Considerations on page 147](#)
 - [IPv6 Multicast References on page 148](#)
 - [Switch Fabric Bandwidth Configuration on page 148](#)

IPv6 Multicast Platform Considerations

For information about modules that support IPv6 multicasting on the ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support IPv6 multicasting.

For information about modules that support IPv6 multicasting on the E120 and E320 Broadband Services Routers:

- See *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about the modules that support IPv6 multicasting.

- Related Documentation**
- [IPv6 Multicast Overview on page 145](#)
 - [IPv6 Multicast References on page 148](#)

IPv6 Multicast References

For more information about IPv6 multicast, see the following resource:

- A “traceroute” Facility for IP Multicast—draft-ietf-idmr-traceroute-ipm-07.txt (January 2001 expiration)

- Related Documentation**
- [IPv6 Multicast Overview on page 145](#)
 - [IPv6 Multicast Platform Considerations on page 147](#)

Before You Begin

Before you begin configuring multicast on IPv4 and IPv6 interfaces, you must:

- Configure IP interfaces. For more information about configuring IP interfaces, see *Configuring IP* in the *JunosE IP, IPv6, and IGP Configuration Guide*.
- Configure IPv6 interfaces. For more information about configuring IPv6 interfaces, see *Configuring IPv6* in *JunosE IP, IPv6, and IGP Configuration Guide*.

- Related Documentation**
- [Configuring IPv6 Multicast Attributes on page 149](#)
 - [Example: Configuring an IPv6 Multicast Bandwidth Map on page 155](#)
 - [Activating IPv6 Multicast QoS Adjustment Functions on page 159](#)
 - [Configuring IPv6 Hardware Multicast Packet Replication on page 165](#)
 - [Blocking IPv6 Mroutes on page 167](#)
 - [Enabling Interface-Level Admission Bandwidth Limitation for IPv6 on page 168](#)
 - [Creating IPv6 Mroute Port Limits on page 170](#)
 - [Enabling Port-Level Admission Bandwidth Limitation for IPv6 on page 171](#)
 - [Deleting IPv6 Multicast Forwarding Entries on page 172](#)

Switch Fabric Bandwidth Configuration

By default, the switch fabric for the ERX1440, ERX310, E120, and E320 Broadband Services Routers uses a bandwidth weighting ratio of 15:2 for multicast-to-unicast weighted round robin (WRR). In the absence of strict-priority traffic, and when both unicast and multicast traffic compete for switch fabric bandwidth, the switch fabric allocates 15/17ths of the available bandwidth to multicast traffic and 2/17ths of the available bandwidth to unicast traffic.

You can use the **fabric weights** command to change the ratio for multicast to unicast traffic on the router switch fabric. For more information about the **fabric weights** command, see *Managing the System* in the *JunosE System Basics Configuration Guide*.

- Related Documentation**
- [IPv6 Multicast Overview on page 145](#)
 - [fabric weights](#)

Configuring IPv6 Multicast Attributes

You can configure IPv6 multicast to control the flow of multicast traffic with the following tasks:

- [Enabling IPv6 Multicast on page 149](#)
- [Defining IPv6 Static Routes for Reverse-Path Forwarding on page 149](#)
- [Enabling and Disabling RPF Checks for IPv6 on page 149](#)
- [Specifying Unicast Routes for RPF in IPv6 on page 150](#)
- [Defining Permanent IPv6 Multicast Forwarding Entries on page 150](#)

Enabling IPv6 Multicast

IPv6 multicast works on virtual routers. By default, IPv6 multicast is disabled on a virtual router. To enable IPv6 multicast on a virtual router, access the context for a virtual router, and then issue the **ipv6 multicast-routing** command.

To enable IPv6 multicast routing on the default virtual router:

- Issue the **ipv6 multicast-routing** command in Global Configuration mode.

```
host1(config)#ipv6 multicast-routing
```

Use the **no** version to disable IPv6 multicast routing on the virtual router (the default). In the disabled state, all multicast protocols are disabled, and the virtual router forwards no multicast packets.

Defining IPv6 Static Routes for Reverse-Path Forwarding

You can use the **ipv6 rpf-route** command to define RPF to verify that a router receives a multicast packet on the correct incoming interface.

To customize the static IPv6 routes that the router may use for RPF:

- Issue the **ipv6 rpf-route** command in Global Configuration mode.

```
host1(config)#ipv6 rpf-route 1000::/64 ATM2/1.200
```

Use the **no** version to remove the static route.

Enabling and Disabling RPF Checks for IPv6

By default, the router accepts multicast packets for each (S,G) pair on an IIF, which satisfies the RPF check (RPF-IIF). When the router performs RPF checks, only the interface

that first accepts traffic for an (S,G) pair accepts subsequent traffic for that pair. If traffic stops coming on that interface and starts arriving on another interface, the router does not accept or forward the traffic.

Some network configurations require the router to accept traffic on any interface. To do so, you can disable the RPF check on a specified set of (S,G) pairs by issuing the **ipv6 multicast-routing disable-rpf-check** command.

When you disable RPF checks, the router accepts multicast packets for (S,G) pairs on any incoming interface. When the router has added the new route to its multicast routing table, it accepts multicast packets for these pairs on any interface in the virtual router and forwards them accordingly. Multicast routes established before you issue this command are not affected.

To enable and disable RPF checks:

- Enable RPF checks for all (S,G) pairs (the default situation).
`host1(config)#no ipv6 multicast-routing disable-rpf-check`
- Disable RPF checks for the (S,G) pair specified using a standard IPv6 access list.
`host1(config)#ipv6 multicast-routing disable-rpf-check denver-list`

Specifying Unicast Routes for RPF in IPv6

You can use the **ipv6 route-type** command to specify that BGP or OSPF IPv6 routes should be available for RPF. Routes available for RPF appear in the multicast view of the routing table.

To specify that BGP IPv6 routes are available for both unicast protocols and multicast protocols to perform RPF checks:

```
host1(config)#router bgp
host1(config-router)#ipv6 route-type both
```

Defining Permanent IPv6 Multicast Forwarding Entries

An mroute is a multicast traffic flow, a (S,G) entry used for forwarding multicast traffic. By default, forwarding mroutes (with a valid RPF incoming interface) are timed out if data for them is not received for 210 seconds. However, you can specify an mroute as permanent by using the **ipv6 multicast-routing permanent-mroute** command.

To specify that any newly created mroutes that match the specified access-list do not time out:

- Issue the **ipv6 multicast-routing permanent-mroute** command in Global Configuration mode.
`host1(config)#ipv6 multicast-routing permanent-mroute routesv61`

Use the **no** version to prevent any new mroutes from becoming permanent. To remove existing permanent mroutes, use the **clear ipv6 mroute** command.

**NOTE:**

- The `ipv6 multicast-routing permanent-mroute` command does not change existing mroutes.
- Permanent mroutes are removed if a topology change occurs that affects the mroute.
- Permanent mroutes may be removed due to certain protocol actions (for example, PIM sparse mode switching from shared to shortest path tree).
- Outgoing interface lists of permanent mroutes may change due to protocol actions.

Related Documentation

- [IPv6 Multicast Overview on page 145](#)
- [Before You Begin on page 148](#)
- [Deleting IPv6 Multicast Forwarding Entries on page 172](#)
- [Monitoring Available IPv6 Routes for Reverse-Path Forwarding on page 175](#)
- [Monitoring IPv6 Multicast Forwarding Entries on page 201](#)
- [Monitoring Active IPv6 Multicast Routes on page 204](#)
- [Monitoring Join Interface Details when IPv6 OIF Mapping is Configured on page 209](#)
- [Monitoring IPv6 Multicast Statistics on page 212](#)
- [Monitoring Summary Information of IPv6 Multicast Routes on page 214](#)
- [Monitoring IPv6 Multicast Status on a Virtual Router on page 218](#)
- `clear ipv6 mroute`
- `ipv6 multicast-routing`
- `ipv6 multicast-routing disable-rpf-check`
- `ipv6 multicast-routing permanent-mroute`
- `ipv6 route-type`
- `ipv6 rpf-route`

IPv6 Multicast Bandwidth Map Overview

Multicast interface-level admission control, port-level admission control, and QoS adjustment all use a single multicast bandwidth map. The multicast bandwidth map is a route map that uses the **set admission-bandwidth**, **set qos-bandwidth**, **set admission-bandwidth adaptive**, or **set qos-bandwidth adaptive** commands. The **adaptive** commands configure an auto-sense mechanism for measuring the multicast bandwidth.



NOTE: Even though you can include any of the above commands several times in a route map entry, only the last admission-bandwidth command or qos-bandwidth command in the bandwidth map is used. In other words, if you included the **set qos-bandwidth** command first and then the **set qos-bandwidth adaptive** command, the bandwidth map would use the **set qos-bandwidth adaptive** command.

Interface- and port-level admission control is performed when an outgoing interface (OIF) on the interface or port is added to the mroute for a given (S,G) multicast data stream and the multicast bandwidth map contains a **set admission-bandwidth** or **set admission-bandwidth adaptive** action for that (S,G).

QoS adjustment is performed on the joining interface when an OIF is added to the mroute for a given (S,G) data stream and the multicast bandwidth map contains a **set qos-bandwidth** or **set qos-bandwidth adaptive** action for that (S,G).



NOTE: You can create a single route map with the **set admission-bandwidth** command, the **set qos-bandwidth** command, or both. However, creating an entry with only one of these **set** commands enables only that specific function for the matched address (that is, only multicast traffic admission control or only QoS adjustment). The same is true for the **adaptive** commands.

Related Documentation

- [IPv6 Multicast Overview on page 145](#)
- [Autosense Mechanism Overview on page 152](#)
- [Adaptive Mode Mechanism Overview on page 153](#)
- [Example: Configuring an IPv6 Multicast Bandwidth Map on page 155](#)
- **set admission-bandwidth**
- **set qos-bandwidth**

Autosense Mechanism Overview

Video bandwidth is typically considered to be a constant rate—2 Mbps for standard definition television (SDTV) and 10 Mbps for high definition television (HDTV). However, in reality, and depending on achievable video compression, the bit rate can vary. For example, HDTV streams (using MPEG4 or WM9 encoding) can vary between 6 Mbps (for low-action programs) to 10 Mbps (for a fast-paced, high-action programs). The auto-sense mechanism allows the bandwidth value, used for admission control and QoS adjustment, to be the actual measured rate of the stream. Using this feature to measure the actual bandwidth avoids the need to configure arbitrary bandwidth limits and enables a channel to be reassigned to a different (S, G) without requiring a bandwidth map to be changed.

Related Documentation • [IPv6 Multicast Bandwidth Map Overview on page 151](#)

Adaptive Mode Mechanism Overview

You can configure the auto-sense mechanism in the multicast bandwidth using the **set admission-bandwidth adaptive** command, **set qos-bandwidth adaptive** command, or both. For example:


```
host1(config)#route-map mcast-bandwidths permit 10
host1(config-route-map)#match ipv6 address sdtv
host1(config-route-map)#set admission-bandwidth adaptive
host1(config-route-map)#set qos-bandwidth adaptive
host1(config-route-map)#end
```

In this example, any stream with an (S,G) that matches the sdtv access list performs adaptive bandwidth detection for admission control and QoS adjustment.

A rate measurement mechanism runs on the ingress line card that polls the forwarding controller (FC) to obtain statistics for each mroute. This mechanism then reports the rate measurement to the switch route processor (SRP) to update the bandwidth map. By computing the average bandwidth over a relatively short sampling period (T1; 5 seconds), the measurement approximates the peak bandwidth of the multicast stream.

As an example, assume that a new mroute (S1, G1) is added to the interface controller (IC) at time t0.

Figure 14: Example of Adaptive IPv6 Multicast Bandwidth Detection

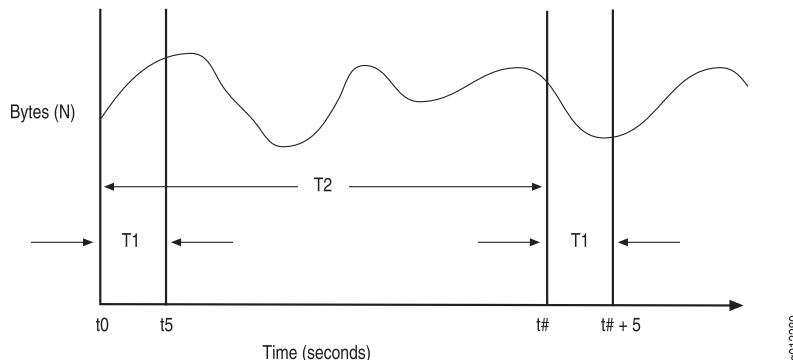

To calculate the measured bandwidth of a stream, the router uses the following equation:

$$R = (N_{t+5} - N_t) / 5$$

Where

R = Calculated bandwidth of the stream during each sampling interval

N_t = Bytes measured at the start of each sampling period (t seconds)

N_{t+5} = Bytes measured at the end of each sampling period (t+5 seconds)



NOTE: When the mroute is first installed in the FC (at $t = 0$), R_0 is undetermined. For multicast admission control no joins are admitted until the first bandwidth measurement is computed (that is, for admission control, R_0 is considered to be infinite). Similarly, no QoS adjustment occurs until the first bandwidth measurement is computed (that is, for QoS adjustment, R_0 is considered to be zero [0]).

Using the earlier graph as a reference, the first bandwidth rate (R_1) and at time t_5 (N_5) and the bytes received values are subtracted and divided by the time period T_1 to yield the average rate. This process is repeated every sampling interval, T_2 , to yield rates R_1 , R_2 , R_3 , and so on.

The first two sampling interval calculations would look like the following:

$$R_1 = (N_5 - N_0) / 5$$

$$R_2 = (N_{\#+5} - N_{\#}) / 5$$

The router maintains a history of bandwidth measurements (H) for each mroute, up to a maximum of M measurements. The actual rate, R, reported to the SRP is the maximum rate measured in those H samples.

In order to minimize the IC to SRP traffic generated by the rate measurements, the IC reports a bandwidth change only when a newly computed rate ($R_{\#}$) differs from the current rate by a specified threshold. When R_s is computed at time $t = 5$ seconds, R is set to R_1 . A rate update occurs whenever a newly calculated rate (R) differs from R_1 by at least a threshold value (specified as a percentage, P) of the measured peak bandwidth. This calculation would look like the following:

$R = R_t$, if and only if the absolute value of $(R - R_t) > P * R$.

The values assigned to variables associated with this algorithm are as shown in [Table 9 on page 154](#).

Table 9: Adaptive Mode Algorithm Values

Variable	Value	Units	Description
T1	5	Seconds	Sampling period; the time in which a sample is taken
T2	0	Seconds	Sampling interval; zero (0) seconds indicates continuous sampling
H	12	Samples	Number of history samples over which to compute measurement
M	12	Samples	Maximum number of samples maintained in history

Table 9: Adaptive Mode Algorithm Values (*continued*)

Variable	Value	Units	Description
P	1	Percent	Threshold value; percent difference by which a newly calculated rate must differ from the measured peak bandwidth before a rate update occurs

Related Documentation

- [IPv6 Multicast Bandwidth Map Overview on page 151](#)
- [Autosense Mechanism Overview on page 152](#)
- [Example: Configuring an IPv6 Multicast Bandwidth Map on page 155](#)
- match ipv6 address
- route-map
- set admission-bandwidth
- set qos-bandwidth

Example: Configuring an IPv6 Multicast Bandwidth Map

This example shows how to create a multicast bandwidth map for both multicast traffic admission control and QoS adjustment.

- [Requirements on page 155](#)
- [Overview on page 155](#)
- [Configuring an IPv6 Multicast Bandwidth Map on page 156](#)

Requirements

This example uses the following hardware and software components:

- JunosE Release 7.1.0 or higher-numbered releases
- E Series router (ERX7xx models, ERX14xx models, the ERX310 router, the E120 router, or the E320 router)
- ASIC-based line modules that support Fast Ethernet or Gigabit Ethernet

Before you begin configuring multicast on IPv6 interfaces, you must:

- Configure IPv6 interfaces. For more information about configuring IPv6 interfaces, see *Configuring IPv6 in JunosE IP, IPv6, and IGP Configuration Guide*.

Overview

The multicast bandwidth map is a route map that uses the **set admission-bandwidth**, **set qos-bandwidth**, **set admission-bandwidth adaptive**, or **set qos-bandwidth adaptive** commands. Multicast interface-level admission control, port-level admission control, and QoS adjustment all use a single multicast bandwidth map.

The **adaptive** commands configure an auto-sense mechanism for measuring the multicast bandwidth.

Configuring an IPv6 Multicast Bandwidth Map

Configuring a Route Map

Step-by-Step Procedure Define a route map using the **set admission-bandwidth** and **set qos-bandwidth** commands.



NOTE: In this example, you can replace the **set admission-bandwidth** command and **set qos-bandwidth** command with their adaptive command counterparts.

1. Define a route map.

```
[edit]
host1(config)#route-map mcast-bandwidths permit 10
```
2. Match the route map to an access list.

```
[edit]
host1(config-route-map)#match ipv6 address sdtv
```
3. Configure multicast bandwidths.

```
[edit multicast bandwidths for admission control and QoS adjustment]
host1(config-route-map)#set admission-bandwidth 2000000
host1(config-route-map)#set qos-bandwidth 2000000
```
4. Configure the route map.

```
[edit]
host1(config-route-map)#route-map mcast-bandwidths permit 20
```
5. Match the route map to an access list.

```
[edit]
host1(config-route-map)#match ipv6 address hdtv
```
6. Configure multicast bandwidths.

```
[edit multicast bandwidths for admission control and QoS adjustment]
host1(config-route-map)#set admission-bandwidth 10000000
host1(config-route-map)#set qos-bandwidth 10000000
```


Configuring an Access List

Step-by-Step Procedure Define the access list for use by the **match ipv6 address** command to match (S,G) and (*,G) entries.



NOTE: You can also define a prefix-list or a prefix-tree for use by the **match ipv6 address** command to match (S,G) and (*,G) entries.

1. Configure access lists.

```
[edit access lists]
host1(config)#access-list sdtv permit ip host 31::1 ff3e::0/112
host1(config)#access-list hdtv permit ip host 32::1 ff3e::0/112
host1(config)#access-list hdtv permit ip host 32::2 ff3e::0/112
```

Related Documentation

- [IPv6 Multicast Bandwidth Map Overview on page 151](#)
- [Autosense Mechanism Overview on page 152](#)
- [Adaptive Mode Mechanism Overview on page 153](#)
- [Activating IPv6 Multicast QoS Adjustment Functions on page 159](#)
- [Enabling Interface-Level Admission Bandwidth Limitation for IPv6 on page 168](#)
- [Enabling Port-Level Admission Bandwidth Limitation for IPv6 on page 171](#)
- [Interface-Level Admission Bandwidth Limits for IPv6 Overview on page 167](#)
- *Configuring Routing Policy in JunosE IP Services Configuration Guide*
- `access-list`
- `match ipv6 address`
- `route-map`
- `set admission-bandwidth`
- `set qos-bandwidth`

Multicast QoS Adjustment for IPv6

When the router uses multicast outgoing interface (OIF) mapping, any multicast streams that a subscriber receives bypass any configured QoS treatment for that subscriber interface. The Multicast QoS adjust feature provides a way in which the router can account for this multicast traffic.

- [Multicast OIF Mapping Case for IPv6 on page 158](#)
- [Multicast Traffic Receipt Without Forwarding for IPv6 on page 159](#)
- [Activating IPv6 Multicast QoS Adjustment Functions on page 159](#)

Multicast OIF Mapping Case for IPv6


Multicast outgoing interface (OIF) mapping enables the router to decrease the inefficiencies associated with replicating streams of multicast traffic. Using OIF maps, Multicast Listener Discovery (MLD) joins that the router receives on a subscriber interface can be mapped to a special interface for forwarding. This special interface can be on a different physical port or line module from that of the join interface.



NOTE: For additional information about how to configure OIF mapping, see [“Configuring Group Outgoing Interface Mapping” on page 55](#).

Using this mapping function, the router can send a single copy of each multicast stream over the special interface and the access nodes are configured to perform any final replication to the subscribers and merge unicast and multicast data flows onto the subscriber interfaces as necessary. See [Figure 15 on page 158](#).

Figure 15: Multicast OIF Mapping

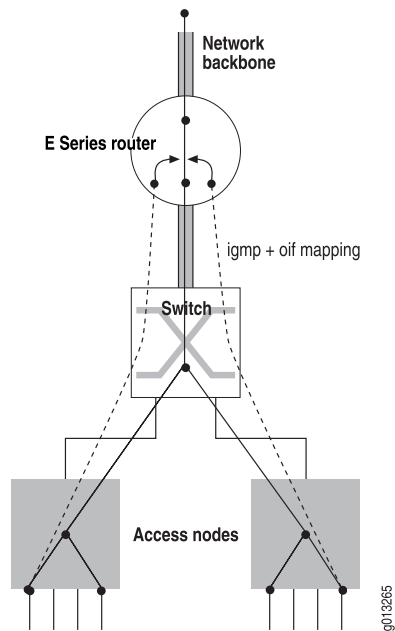

One disadvantage to using multicast OIF mapping is that the multicast traffic bypasses any QoS treatment that is applied to subscriber interfaces. Configuring QoS adjustment resolves this problem. (See Parameter Definition Attributes for QoS Administrators Overview for additional information about configuring QoS adjustment.) With QoS adjustment configured, when a subscriber requests to receive a multicast stream (or, more appropriately, when an OIF is added to the mroute), the router reduces the unicast QoS bandwidth applied to the subscriber interface (that is, the join interface) by the amount of bandwidth for that multicast stream.

Related Documentation

- [Multicast Traffic Receipt Without Forwarding for IPv6 on page 159](#)

- [Activating IPv6 Multicast QoS Adjustment Functions on page 159](#)


Multicast Traffic Receipt Without Forwarding for IPv6

In this case, the router is not given the responsibility of forwarding multicast streams. Instead, the service provider arranges for the router to receive the multicast streams so the router can detect the flow and perform QoS adjustment. An outgoing interface (OIF) map is installed that maps the traffic streams to a loopback interface configured for Multicast Listener Discovery (MLD) version passive. This means that when the traffic is received, a null mroute is installed (that is, an mroute with an empty OIF list) and the router applies the QoS adjustment to the join interface. See [Figure 16 on page 159](#).



NOTE: Ensure that Protocol Independent Multicast-single mode (PIM-SM) (or any other upstream multicast protocol) is informed of the group (or source-group) interest.

Figure 16: Multicast Traffic Receipt Without Forwarding

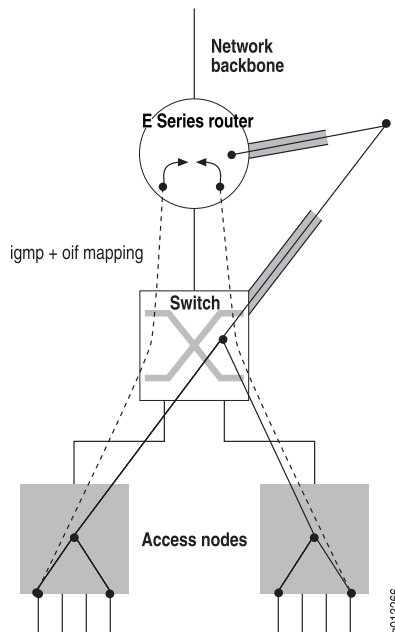

Related Documentation

- [Multicast OIF Mapping Case for IPv6 on page 158](#)
- [Activating IPv6 Multicast QoS Adjustment Functions on page 159](#)

Activating IPv6 Multicast QoS Adjustment Functions

The `ipv6 multicast-routing bandwidth-map` command activates the specified bandwidth map. By activating the bandwidth map, this command also activates the multicast QoS adjustment function contained in the bandwidth map.



CAUTION: To activate multicast QoS adjustment, you must first create a bandwidth map. See [“Example: Configuring an IPv6 Multicast Bandwidth Map” on page 155](#) for details.

To enable the QoS adjust function on the router with the configured route map:

- Issue the **ipv6 multicast-routing bandwidth-map** command in Global Configuration mode.

```
host1(config)#ipv6 multicast-routing bandwidth-map mcast-bandwidths
```

Use the **no** version to disable the multicast QoS adjustment function on the router.

Related Documentation

- [Before You Begin on page 148](#)
- [Multicast OIF Mapping Case for IPv6 on page 158](#)
- [Multicast Traffic Receipt Without Forwarding for IPv6 on page 159](#)
- [Monitoring IPv6 Multicast Forwarding Entries on page 201](#)
- [Monitoring Active IPv6 Multicast Routes on page 204](#)
- [Monitoring Join Interface Details when IPv6 OIF Mapping is Configured on page 209](#)
- [Monitoring IPv6 Multicast Statistics on page 212](#)
- [Monitoring IPv6 Multicast Protocols Enabled on the Router on page 216](#)
- `ipv6 multicast-routing bandwidth-map`


IPv6 Hardware Multicast Packet Replication Overview

You can configure IPv6 multicast to replicate packets to optimized hardware on a logical port instead of using the forwarding controller (FC) on the router.

The bandwidth between the line module and the I/O module or input/output adapter (IOA) on the E Series router is limited. A high-density Ethernet module provides eight physical ports that can consume the bandwidth between the line module and the I/O module or IOA before providing enough traffic to support egress line rate for all of these ports.

[Figure 17 on page 161](#) displays how multicast traffic is typically replicated on the line module. Each of these replicated packets is transmitted from the line module to the I/O module or IOA.

Figure 17: Packet Flow Without Hardware Multicast Packet Replication

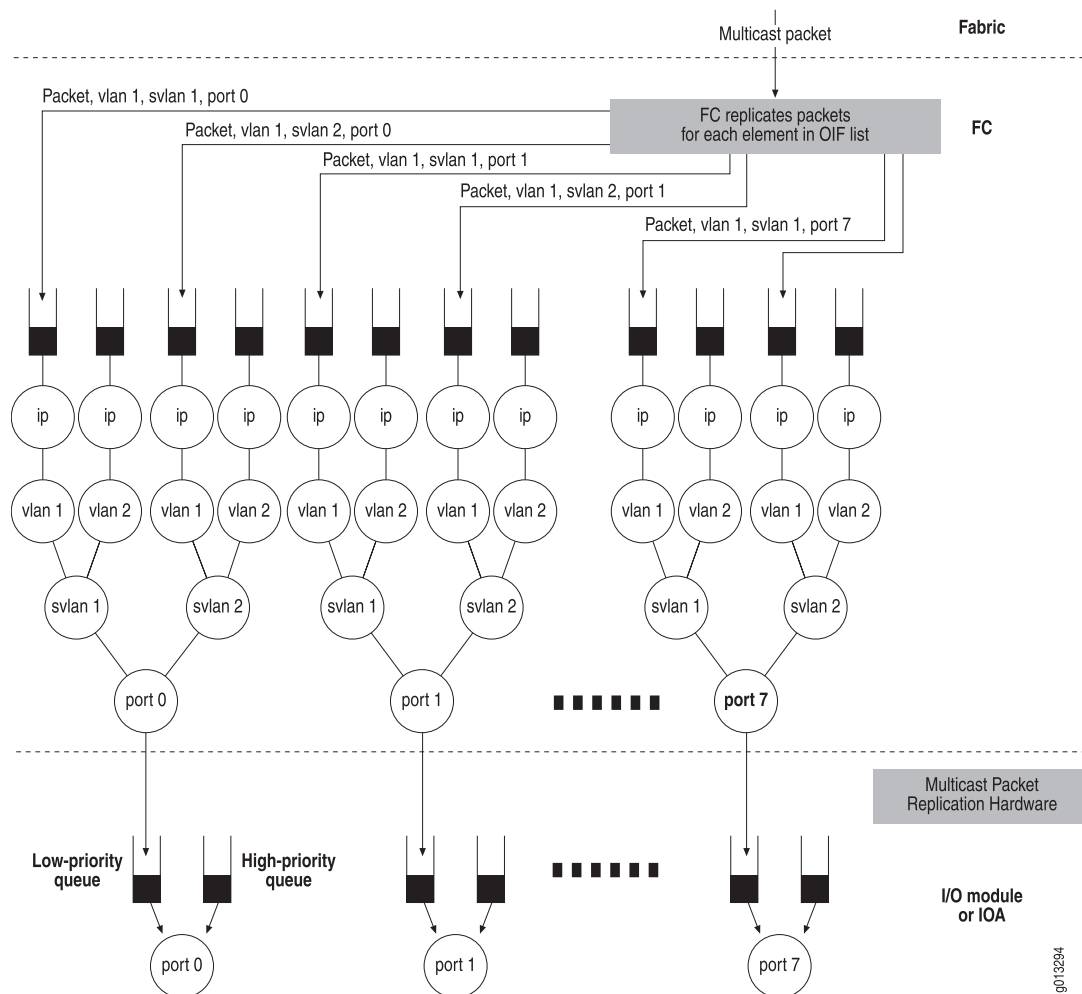

The hardware multicast packet replication feature enables you to configure multicast traffic for a virtual LAN (VLAN) or service VLAN (S-VLAN) to be replicated on the I/O module or IOA so that only one copy of the packet is transmitted from the line module to the I/O module or IOA. Replication for each of the ports is performed on the I/O module or IOA.


Configuring hardware multicast packet replication for high-density Ethernet is useful when you want to provide the same multicast stream out of some or all of the ports, such as for IP television (IPTV). Configuring hardware multicast packet replication enables you to:

- Reduce the number of packets sent from the FC to the module.
- Reduce the CPU consumed by the FC processing each elaboration of the packet.

You can use the feature to increase the bandwidth of multicast traffic out of each of the Gigabit Ethernet ports.

Figure 18 on page 162 displays the flow of a multicast packet using the hardware multicast packet feature.

Figure 18: Packet Flow with Optimized Multicast Packet Replication

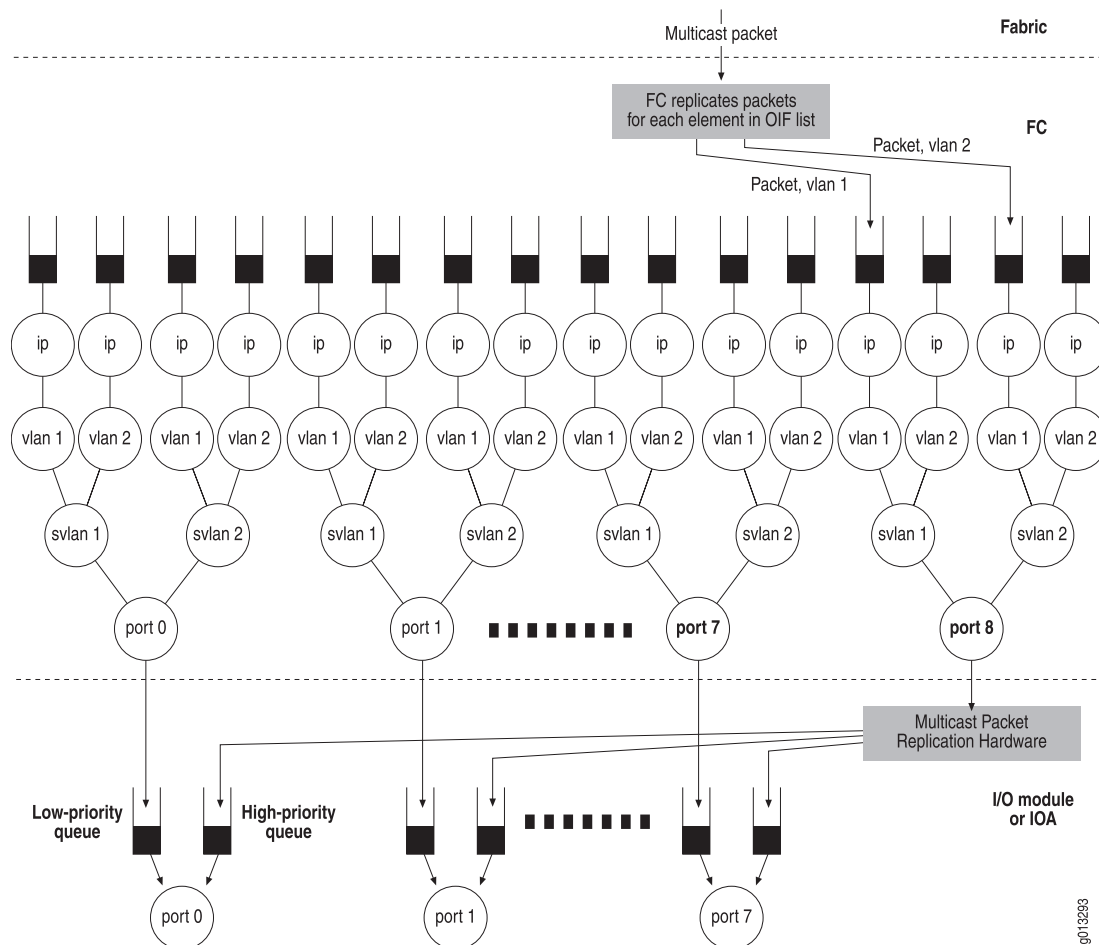

Each high-density Ethernet module has eight physical ports, numbered 0–7. A logical port is available for the hardware multicast packet replication feature, numbered port 8.

JunosE tracks the outgoing interfaces (OIFs) in an mroute that have been redirected to use the hardware multicast packet replication hardware. The system accepts only egress multicast traffic to traverse the interface stack on the enabled port. The system drops unicast traffic that is routed to this port.

Each port on the I/O module or IOA displayed in Figure 18 on page 162 has two queues. These queues are further down the egress path than the queues found on the line module and populated by the FC.

The low-priority queue is dedicated to packets that are received from the line module queues that are dedicated to the physical ports. This queue blocks when full and provides backpressure to the line module. This queue services unicast and multicast traffic that is not using the hardware multicast packet replication feature.

The high-priority queue is dedicated to packets that are received from the line module queue for port 8. This queue is serviced at a higher priority than the first queue, and drops packets when full.

For more information about high-density Ethernet, see *Configuring Ethernet Interfaces* in *JunosE Physical Layer Configuration Guide*.

Supported Modules and Encapsulations

You can enable optimized multicast packet replication on port 8 of the following high-density Ethernet modules:

- GE-8 I/O module (pairs with the GE-HDE line module)
- ES2-S1 GE-8 IOA (pairs with the ES2 4G LM and the ES2 10G LM)

When enabled, the optimized multicast packet replication feature defines the encapsulation of the egress multicast packet. The following encapsulations are supported:

- IPv6 over Gigabit Ethernet
- IPv6 over VLAN
- IPv6 over S-VLAN



NOTE: 802.3ad link aggregation group (LAG) bundles do not support optimized multicast packet replication.

The optimized multicast packet replication feature also provides an interface over which you can configure the following:

- IP maximum transmission unit (MTU)
- Ethernet MTU
- Egress IP policy
- Egress VLAN policy
- QoS

Relationship with OIF Mapping

Multicast OIF mapping enables the router to decrease the inefficiencies associated with replicating streams of multicast traffic. Using OIF maps, Multicast Listener Discovery (MLD) joins that the router receives on a subscriber interface can be mapped to a special interface for forwarding.

The hardware multicast packet replication feature enables you to redirect each of the IPv6 interfaces on a line module over a dedicated multicast VLAN to a single IPv6 interface over port 8. The FC is only required to send a single packet per dedicated multicast VLAN to the I/O module or IOA. The module then replicates this packet to the appropriate ports.

For more information about configuring OIF mapping, see [“Configuring MLD Group Outgoing Interface Mapping”](#) on page 228 in [“Configuring MLD and MLD Proxy”](#) on page 219.

**Related
Documentation**

- [IPv6 Hardware Multicast Packet Replication Considerations on page 164](#)
- [Configuring IPv6 Hardware Multicast Packet Replication on page 165](#)

IPv6 Hardware Multicast Packet Replication Considerations

When configuring hardware multicast packet replication, the following considerations apply.

- Do not configure or transmit routing protocols over port 8. The FC drops traffic routed to an IPv6 interface stacked over port 8.
- We recommend that you configure the IP address of the IPv6 interface over port 8 to be unnumbered.
- We recommend that you configure an IPv6 interface over a VLAN over one of the physical ports to reference the IPv6 interface over the same VLAN over port 8.

You cannot create the following configurations:

- When two IPv6 interfaces configured over a port reference the same IPv6 interface over port 8. The system does not accept this configuration attempt because you typically configure the hardware multicast packet replication feature to redirect multicast traffic over one VLAN, then redirect it to the same VLAN on port 8.
- When the IPv6 interface configured with the hardware multicast packet replication attribute is not installed on a line module that supports hardware multicast packet replication.
- When the IPv6 interface designated by the hardware multicast packet replication attribute is not installed on a line module that supports hardware multicast packet replication.
- When the IPv6 interface designated by the hardware multicast packet replication attribute is not on the same line module as the IPv6 interface configured with this attribute.
- When you configure a unique source MAC address for VLANs on port 8, the hardware multicast packet replication hardware stamps the source MAC address on the VLAN, overwriting any MAC address that you configured. For more information, see *Configuring Ethernet Interfaces* in *JunosE Physical Layer Configuration Guide*.
- The regular multicast implementation utilizes interface stacking that provides a unique IPv6 attachment point for each elaboration of the egress multicast packet.

For the hardware multicast packet replication feature, you must attach policies to an interface stack over port 8 that defines the encapsulation of the egress multicast traffic. The system supports policies over port 8 just as it is above any of the other ports on this line module.

Policies applied to the interface stack over port 8 affect the packets traversing this stack whether or not the packet is destined for one port or all of the physical ports. Therefore, you cannot apply different egress policies to multicast traffic for the interfaces stacked above different ports, or rate limit on an individual interface over a port. You also cannot monitor policy statistics on individual interfaces over a port.

Instead, you can apply egress policy to an interface stacked over port 8. The system applies the policy before the packet has been elaborated for each of the ports.

- The JunosE QoS component provides hierarchical egress scheduling and shaping on Gigabit Ethernet ports 0–7. The regular multicast implementation replicates packets on the FC, with each replicated packet placed on a line module queue destined for a single physical port. The line module queue can also receive QoS behavior specific to that queue.

For the hardware multicast packet replication feature, the FC does not replicate the packet for each of the individual ports. Instead, it places the packet on a special queue destined for port 8.

You can configure QoS on the packets flowing through port 8, but this has limited value because each packet passed through this port can be transmitted through one of more of the physical ports. Therefore, the packets placed on this special queue might not receive the same QoS behavior as ports 0–7.

We recommend that you configure the network so the I/O or IOA queues are not oversubscribed. The traffic transmitted by the physical port is a combination of packets from the two I/O or IOA queues. When the sum of the packets in these queues is greater than line rate, the system can drop traffic that is not using hardware multicast packet replication.

When you configure a traffic shaper on a physical port and configure hardware multicast packet replication, the packets created using the feature avoid the traffic shaper for that port. To control this, you can use traffic shaper on the physical port and port 8. The sum of the traffic shapers must be less than or equal to the line rate of the port.

A traffic shaper on port 8 can result in the overall utilization of egress bandwidth for any one port being less the line rate because the packets being replicated might not be transmitted to every port. Packets destined to some of the ports contribute to the traffic shaping for all of the ports on the I/O module or IOA.

**Related
Documentation**

- [IPv6 Hardware Multicast Packet Replication Overview on page 160](#)
- [Configuring IPv6 Hardware Multicast Packet Replication on page 165](#)

Configuring IPv6 Hardware Multicast Packet Replication

To configure hardware multicast packet replication:

1. Configure port 8 on a high-density Ethernet module to accept redirected egress multicast traffic.

- a. Specify the Gigabit Ethernet interface on port 8.
- b. Create a VLAN major interface.
- c. Create a VLAN subinterface.
- d. Assign a VLAN ID.
- e. Configure an unnumbered IPv6 interface.
- f. Enable MLD on the interface with only multicast-data-forwarding capability.

```
host1(config)#interface gigabitEthernet 2/8
host1(config-if)#encapsulation vlan
host1(config-if)#interface gigabitEthernet 2/8.1
host1(config-if)#vlan id 1
host1(config-if)#ipv6 unnumbered loopback 0
host1(config-if)#ipv6 mld version passive
```

2. Configure an IPv6 interface to redirect egress multicast traffic to port 8.
 - a. Create a VLAN subinterface.
 - b. Assign a VLAN ID.
 - c. Assign an IPv6 address.
 - d. Configure the interface to redirect egress multicast traffic to port 8.

```
host1(config)#interface gigabitEthernet 2/0.101
host1(config-if)#vlan id 1
host1(config-if)#ipv6 address 1::1/64
host1(config-if)#ipv6 multicast ioa-packet-replication gigabitEthernet 2/8.1
```

**Related
Documentation**

- [Before You Begin on page 148](#)
- [IPv6 Hardware Multicast Packet Replication Overview on page 160](#)
- [IPv6 Hardware Multicast Packet Replication Considerations on page 164](#)
- [Monitoring IPv6 Hardware Multicast Packet Replication on page 176](#)
- `encapsulation vlan`
- `interface gigabitEthernet`
- `ipv6 address`
- `ipv6 mld version`
- `ipv6 multicast ioa-packet-replication`
- `ipv6 unnumbered`
- `vlan id`

Interface-Level Multicast Traffic Configuration for IPv6

You can block mroute creation and limit the multicast bandwidth admitted on an outgoing interface.

- [Blocking IPv6 Mroutes on page 167](#)
- [Interface-Level Admission Bandwidth Limits for IPv6 Overview on page 167](#)
- [Enabling Interface-Level Admission Bandwidth Limitation for IPv6 on page 168](#)
- [OIF Interface Reevaluation for IPv6 on page 169](#)

Blocking IPv6 Mroutes

By default, when an interface receives multicast traffic, even when the scope of that traffic exceeds link-local, the virtual router creates an mroute. You can use the **ipv6 block-multicast-sources** command to block all multicast traffic with a scope larger than link-local (for example, global) and prevent mroute creation under these conditions.



NOTE: Issuing this command does not affect reception of link-local multicast packets.

To block all multicast traffic with a scope larger than link-local:

- Issue the **ipv6 block-multicast-sources** command in Global Configuration mode.

```
host1(config)#ipv6 block-multicast-sources
```

Use the **no** version to restore the default behavior of creating mroutes on receiving multicast packets.

Related Documentation

- [Before You Begin on page 148](#)
- [Monitoring IPv6 Multicast Forwarding Entries on page 201](#)
- [Monitoring Active IPv6 Multicast Routes on page 204](#)
- [Monitoring Join Interface Details when IPv6 OIF Mapping is Configured on page 209](#)
- [Monitoring IPv6 Multicast Statistics on page 212](#)
- `ipv6 block-multicast-sources`

Interface-Level Admission Bandwidth Limits for IPv6 Overview

Interface-level multicast admission control is performed when an outgoing interface (OIF) on the interface is added to the mroute for a given (S,G) multicast data stream and the multicast bandwidth map contains a **set admission-bandwidth** action for that (S,G). When enabled, the admission-bandwidth for a particular (S,G) is read from the multicast bandwidth map and recorded in the mroute when the (S,G) mroute is created.



CAUTION: Before you can limit interface-level admission bandwidth, you must first create a bandwidth map. See [“Example: Configuring an IPv6 Multicast Bandwidth Map” on page 155](#) for details.

When an OIF is subsequently added to the mroute, the OIF is blocked from forwarding data if the additional bandwidth contributed by the (S,G) exceeds the admission-bandwidth limit for the interface. In JunosE releases earlier than Release 12.0.x, in an OIF mapping scenario where the digital subscriber line access multiplexer (DSLAM) does not perform per-subscriber multicast admission control, the router disregards the multicast admission bandwidth limit configured on the join interface. If the limit configured on the mapped interface exceeds the admission-bandwidth limit for the interface, the router blocks the mapped interface from forwarding data.

Now, in an OIF mapping scenario where the DSLAM performs per-subscriber multicast admission control, the router checks the bandwidth limit configured on the join interface. If the multicast stream is forwarded over the mapped interface, the router admits the multicast stream and forwards the stream to the join interfaces whose bandwidth does not exceed the configured bandwidth limit. The router also performs QoS Adjust for the multicast stream on the unblocked (forwarding) subscriber interfaces. The router does not replicate the stream to the subscriber interfaces whose bandwidth exceeds the configured bandwidth limit and it does not perform QoS Adjust for the multicast stream on the blocked subscriber interfaces.

If the multicast stream is not forwarded over the mapped interface, the router blocks the multicast stream and does not forward the stream. The router also does not perform QoS Adjust for the multicast stream on the blocked subscriber interface.

Related Documentation

- [Enabling Interface-Level Admission Bandwidth Limitation for IPv6 on page 168](#)
- [OIF Interface Reevaluation for IPv6 on page 169](#)
- `set admission-bandwidth`

Enabling Interface-Level Admission Bandwidth Limitation for IPv6

You can use the **ipv6 multicast admission-bandwidth-limit** command to enable multicast admission control on interfaces (including dynamic IP interfaces) that are configured to run MLD. You can also use this command on a PIM (sparse-mode, dense-mode, or sparse-dense-mode) interface if MLD is configured on the interface (including the **ipv6 mld version passive** command).

To limit bandwidth for an interface that accepts MLD groups:

- Issue the **ipv6 multicast admission-bandwidth-limit** command in Interface Configuration mode.

```
host1:boston(config-if)#ipv6 multicast admission-bandwidth-limit 2000000
```

Use the **no** version to remove the bandwidth limitation for the interface.

Related Documentation

- [Before You Begin on page 148](#)
- [Example: Configuring an IPv6 Multicast Bandwidth Map on page 155](#)
- [Interface-Level Admission Bandwidth Limits for IPv6 Overview on page 167](#)
- [OIF Interface Reevaluation for IPv6 on page 169](#)
- [Monitoring IPv6 Multicast Forwarding Entries on page 201](#)
- [Monitoring Active IPv6 Multicast Routes on page 204](#)
- [Monitoring Join Interface Details when IPv6 OIF Mapping is Configured on page 209](#)
- [Monitoring IPv6 Multicast Statistics on page 212](#)
- [Monitoring IPv6 Multicast Protocols Enabled on the Router on page 216](#)
- `ipv6 mld version`
- `ipv6 multicast admission-bandwidth-limit`

OIF Interface Reevaluation for IPv6

If you change the admission bandwidth for an interface, all mroutes with that interface as an outgoing interface (OIF) are reevaluated as follows:

- If the bandwidth limit is increased, blocked OIFs may become unblocked. If the interface is a blocked OIF on multiple mroutes, the order in which the mroutes are visited, and which (S,G) streams become unblocked, is not specified.
- If the bandwidth limit is decreased, no currently admitted OIFs are blocked. However, no new OIFs are admitted until the total admitted bandwidth for the interface drops below the new limit.
- If the bandwidth is increased to the point that the bandwidth limit for an interface is now exceeded, no currently admitted OIFs for the affected mroutes are blocked. However, no new OIFs are admitted until the total admitted bandwidth drops below the configured limit.



NOTE: If the multicast bandwidth map that includes the **set admission-bandwidth** command is changed, all affected mroutes are reevaluated in the same manner described previously.

As an example of this function, if the interface has accepted a total bandwidth of 2000000 bits per second (bps), and you set a limit of 1000000 bps on the interface, the router does not disconnect any already connected OIFs but prevents the interfaces from accepting any more groups. Over time, some groups leave the interfaces and, eventually, the interface limit of 1000000 bps is reached and maintained by the router.

If you set limits for both a port and interfaces on that port, the router uses the lower of the two limits when determining whether or not an interface can accept any new Multicast Listener Discovery (MLD) groups. For example, if you specify an admission bandwidth

limit of 2000000 bps for the port and 3000000 bps groups for each interface, additional groups can only be accepted until the port limit of 2000000 bps is reached.

**Related
Documentation**

- [Interface-Level Admission Bandwidth Limits for IPv6 Overview on page 167](#)
- [Enabling Interface-Level Admission Bandwidth Limitation for IPv6 on page 168](#)
- `set admission-bandwidth`

Port-Level Multicast Traffic Configuration for IPv6

You can limit outgoing interface creation and limit the multicast bandwidth admitted on a port.

- [Creating IPv6 Mroute Port Limits on page 170](#)
- [Port-Level Admission Bandwidth Limits for IPv6 Overview on page 170](#)
- [Enabling Port-Level Admission Bandwidth Limitation for IPv6 on page 171](#)
- [OIF Port Reevaluation for IPv6 on page 172](#)

Creating IPv6 Mroute Port Limits

When a multicast forwarding entry (that is, an mroute) is added with an OIF on a port, the OIF count for that port is incremented. If you configure a port limit and the OIF count on the port count exceeds that limit, no OIFs on that port are added to mroutes (that is, new OIFs are blocked).

To configure a limit on the number of mroute OIFs that can be added across different virtual routers on a port:

- Issue the **mroute port limit** command in Global Configuration mode.

```
host1(config)#mroute port 3/0 limit 10
```

Use the **no** version to remove any OIF port limits.

**Related
Documentation**

- [Before You Begin on page 148](#)
- [Monitoring IPv6 Multicast Forwarding Entries on page 201](#)
- [Monitoring Active IPv6 Multicast Routes on page 204](#)
- [Monitoring Multicast Routes on Virtual Router Ports on page 207](#)
- [Monitoring Join Interface Details when IPv6 OIF Mapping is Configured on page 209](#)
- [Monitoring IPv6 Multicast Statistics on page 212](#)
- `mroute port limit`

Port-Level Admission Bandwidth Limits for IPv6 Overview

Port-level multicast admission control is performed when an outgoing (OIF) on that port is added to the mroute for a given (S,G) multicast data stream and the multicast bandwidth map contains a **set admission-bandwidth** action for that (S,G).

When enabled, the admission-bandwidth for a particular (S,G) is read from the multicast bandwidth map and recorded in the mroute when the (S,G) mroute is created. When an IOF is subsequently added to the mroute, the OIF is blocked from forwarding data if the additional bandwidth contributed by the (S,G) would exceed the admission-bandwidth limit for the port on which the interface resides.



CAUTION: Before you can limit port-level admission bandwidth, you must first create a bandwidth map. See [“Example: Configuring an IPv6 Multicast Bandwidth Map” on page 155](#) for details.

Related Documentation

- [Enabling Port-Level Admission Bandwidth Limitation for IPv6 on page 171](#)
- [OIF Port Reevaluation for IPv6 on page 172](#)
- `set admission-bandwidth`

Enabling Port-Level Admission Bandwidth Limitation for IPv6

You can use the **mroute port admission-bandwidth-limit** command to limit the total multicast bandwidth that can be admitted on a port. The admitted bandwidth is summed across all virtual routers with IPv4 and IPv6 mroutes that have OIFs on the port.



NOTE: Admission bandwidth values for a given (S,G) mroute are determined from the bandwidth map. See [“Example: Configuring an IPv6 Multicast Bandwidth Map” on page 155](#) for details.

To configure a limit on the admission bandwidth of OIFs containing IPv4 or IPv6 mroutes, across different virtual routers, on a port:

- Issue the **mroute port admission-bandwidth-limit** command in Global Configuration mode.

```
host1(config)#mroute port admission-bandwidth-limit 3000000
```

Use the **no** version to remove any OIF admission bandwidth limits.

Related Documentation

- [Before You Begin on page 148](#)
- [Port-Level Admission Bandwidth Limits for IPv6 Overview on page 170](#)
- [OIF Port Reevaluation for IPv6 on page 172](#)
- [Monitoring IPv6 Multicast Forwarding Entries on page 201](#)
- [Monitoring Active IPv6 Multicast Routes on page 204](#)
- [Monitoring Multicast Routes on Virtual Router Ports on page 207](#)
- [Monitoring Join Interface Details when IPv6 OIF Mapping is Configured on page 209](#)
- [Monitoring IPv6 Multicast Statistics on page 212](#)

- [Monitoring IPv6 Multicast Protocols Enabled on the Router on page 216](#)
- `mroute port admission-bandwidth-limit`

OIF Port Reevaluation for IPv6

If you change the admission bandwidth for a port, all mroutes with an outgoing interface (OIF) on that port are reevaluated as follows:

- If the bandwidth limit is increased, blocked OIFs can become unblocked. However, the order in which the mroutes are visited, and which (S,G) streams become unblocked, is not specified.
- If the bandwidth limit of a port is decreased, no currently admitted OIFs are blocked. However, no new OIFs are admitted until the total admitted bandwidth for the port drops below the new limit.
- If the bandwidth is increased to the point that the bandwidth limit for an interface is now exceeded, no currently admitted OIFs for the affected mroutes are blocked. However, no new OIFs are admitted until the total admitted bandwidth drops below the configured limit.



NOTE: If the multicast bandwidth map that includes the `set admission-bandwidth` command is changed, all affected mroutes are reevaluated in the same manner described previously.

As an example of this function, if the port has accepted a total bandwidth of 3000000 bits per second (bps), and you set a limit of 2000000 bps on the port, the router does not disconnect any already connected OIFs but prevents the interfaces from accepting any more groups. Over time, some groups leave the interfaces and, eventually, the port limit of 2000000 bps is reached and maintained by the router.

If you set limits for both a port and interfaces on that port, the router uses the lower of the two limits when determining whether or not an interface can accept any new Multicast Listener Discovery (MLD) groups. For example, if you specify an admission bandwidth limit of 2000000 bps for the port and 3000000 bps groups for each interface, additional groups can only be accepted until the port limit of 2000000 bps is reached.

Related Documentation

- [Port-Level Admission Bandwidth Limits for IPv6 Overview on page 170](#)
- [Enabling Port-Level Admission Bandwidth Limitation for IPv6 on page 171](#)
- `set admission-bandwidth`

Deleting IPv6 Multicast Forwarding Entries

You can clear one or more forwarding entries from the multicast routing table. However, if you do so, the entries may reappear in the routing table if they are rediscovered. If you specify an `*`, the router clears all IP multicast forwarding entries. If you specify the IPv6 address of a multicast group, the router clears all multicast forward entries for that group.

If you specify the IPv6 address of a multicast group and the IPv6 address of a multicast source, the router clears the multicast entry that matches that group and source.

To delete IPv6 multicast forwarding entries:

- Issue the **clear ipv6 mroute** command in Privileged Exec mode.

```
host1:boston#clear ipv6 mroute *
```

**Related
Documentation**

- [Before You Begin on page 148](#)
- [Defining Permanent IPv6 Multicast Forwarding Entries on page 150](#)
- `clear ipv6 mroute`

BGP Multicasting

BGP multicast (MBGP) is an extension of the BGP unicast routing protocol. Many of the functions available for BGP unicasting are also available for MBGP.

The MBGP extensions specify that BGP can exchange information within different types of *address families*. The address families available are unicast IPv4, multicast IPv4, VPN-IPv4, IPv6, and multicast IPv6. When you enable BGP, the router employs unicast IPv4 addresses by default.

You should be thoroughly familiar with BGP before configuring MBGP.

**Related
Documentation**

- *Configuring BGP Routing* in the *JunosE BGP and MPLS Configuration Guide*

CHAPTER 6

Monitoring IPv6 Multicast

IPv6 multicast enables a device to send packets to a group of hosts rather than to a list of individual hosts. This chapter describes how to monitor IPv6 multicast on the E Series router; it contains the following sections:

- [Monitoring Available IPv6 Routes for Reverse-Path Forwarding on page 175](#)
- [Monitoring IPv6 Hardware Multicast Packet Replication on page 176](#)
- [Monitoring IPv6 Multicast Forwarding Entries on page 201](#)
- [Monitoring Active IPv6 Multicast Routes on page 204](#)
- [Monitoring Multicast Routes on Virtual Router Ports on page 207](#)
- [Monitoring IPv6 Multicast Entries in a Source or Group on page 208](#)
- [Monitoring Join Interface Details when IPv6 OIF Mapping is Configured on page 209](#)
- [Monitoring IPv6 Multicast Statistics on page 212](#)
- [Monitoring Summary Information of IPv6 Multicast Routes on page 214](#)
- [Monitoring IPv6 Multicast Protocols Enabled on the Router on page 216](#)
- [Monitoring Summary Information of IPv6 Multicast Protocols Enabled on the Router on page 217](#)
- [Monitoring IPv6 Multicast Status on a Virtual Router on page 218](#)

Monitoring Available IPv6 Routes for Reverse-Path Forwarding

Purpose Display the IPv6 routes that the router can use for RPF. You can specify the IPv6 address and the network mask to view routes to a particular destination. You can use the **detail** keyword to view more detailed information about routes to a particular destination. You can specify a unicast routing protocol to view routes associated with that protocol.

Action To display all IPv6 routes that the router can use for RPF:

```
host1#show ipv6 rpf-route
```

```
Protocol/Route type codes:
```

```
0- OSPF, E1- external type 1, E2- external type2,
```

```
N1- NSSA external type1, N2- NSSA external type2
```

```
L- MPLS label, V- VR/VRF, *- indirect next-hop
```

Prefix/Length	Type	Dst/Met	Intf
11:1:1:10::/60	Static	1/0	ATM2/0.300
21:2:2:20::/60	Static	1/0	ATM2/0.300

```

31:2:2:20::/60          Connect  0/0    ATM2/0.300
131:1:1:10::/60         Connect  0/0    ATM2/1.1300
1000::/64                Static   1/0    ATM2/0.300

```

To display more detailed information about an IPv6 route to a particular destination:

```
host1#show ipv6 rpf-route 1000::/64 detail
```

```

1000::/64 Type:Static Distance:1 Metric:0
      NextHop:31:2:2:23::2:3 IntfIndex 18 Intf ATM2/0.300

```

Meaning [Table 10 on page 176](#) lists the **show ipv6 rpf-route** command output fields.

Table 10: show ipv6 rpf-route Output Fields

Field Name	Field Description
Protocol/Route type codes	Protocol and route type codes for the table that follows
Prefix	Value of the logical AND of the IPv6 address of the destination network and the subnet address
Length	Length of the subnet mask in bits
Type	<ul style="list-style-type: none"> Connect—Subnet directly connected to the interface Static—Static route
Dst	Distance configured for this route
Met	Learned or configured cost associated with this route
Intf	Type of interface and interface specifier for the next hop. For details about interface types and specifiers, see <i>Interface Types and Specifiers</i> in <i>JunosE Command Reference Guide</i> .

Related Documentation

- [Defining IPv6 Static Routes for Reverse-Path Forwarding on page 149](#)
- `show ipv6 rpf-route`

Monitoring IPv6 Hardware Multicast Packet Replication

You can use the commands explained in this topic to monitor hardware multicast packet replication-related statistics for port 8. For port 8, queue statistics have no direct relationship to any of the 8 ports because each packet that is transmitted through the queue can be sent through 1 or more of the 8 physical ports.

Multicast traffic redirected by the hardware multicast packet replication feature is displayed in the statistics for the IPv6 or VLAN interface over port 8, not the original IP or VLAN interface over the physical port.

The statistics for the IPv6 or VLAN interface over port 8 reflect the number of packets that passed through this interface destined for the hardware multicast packet replication hardware. These statistics have no direct correlation to the number of packets being transmitted from any of the physical ports.

The various statistics that are monitored over port 8 are:

- [Monitoring Port Statistics on page 177](#)
- [Monitoring VLAN Statistics on page 182](#)
- [Monitoring IPv6 Statistics on page 184](#)
- [Monitoring MLD Statistics on page 198](#)

Monitoring Port Statistics

Purpose Display the status of Gigabit Ethernet interfaces. You can use the **delta** keyword to view baselined statistics. You can use the **brief** keyword to view the operational status of all configured interfaces.



NOTE: The E120 and E320 routers output for **monitor** and **show** commands is identical to output from other E Series routers, except that the E120 and E320 router output also includes information about the adapter identifier in the interface specifier (*slot/adapter/port*).

Action To display the status of a Gigabit Ethernet interface:

```
host1#show interfaces gigabitEthernet 14/0/0
GigabitEthernet14/0/0 is Up, Administrative status is Up
Hardware is Intel IxF1104, address is 0090.1a42.0b87
MAU is 1000BASE-SX
TX Output Power: 469.6 uW RX Input Power: 0.5 uW
MTU: Operational 1518, Administrative 1518
Duplex Mode: Operational Full Duplex, Administrative Auto Negotiate
Speed: Operational 1000 Mbps, Administrative Auto Negotiate
Debounce: State is Disabled
5 minute input rate 0 bits/sec, 0 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
In: Bytes 0, Unicast 0
Multicast 0, Broadcast 0
Errors 0, Discards 0, Mac Errors 0, Alignment 0
CRC 0, Too Longs 0, Symbol Errors 0
Out: Bytes 0, Unicast 0
Multicast 0, Broadcast 0
Errors 0, Discards 0, Mac Errors 0, Deferred 0, No Carrier 0
Collisions: Single 0, Multiple 0, Late 0, Excessive 0
Policed Statistics:
In: 0, Out: 0
ARP Statistics:
In: ARP requests 0, ARP responses 0
Errors 0, Discards 0
Out: ARP requests 0, ARP responses 0
```

Meaning Table 11 on page 178 lists the output fields of the **show interfaces gigabitEthernet** command.

Table 11: show interfaces gigabitEthernet Output Fields

Field Name	Field Description
GigabitEthernet or tenGigabitEthernet <i>interfaceSpecifier</i>	Status of the hardware on this interface: <ul style="list-style-type: none"> up—Hardware is operational down—Hardware is not operational
Administrative status	Operational state that you configured for this interface: <ul style="list-style-type: none"> up—Interface is enabled down—Interface is disabled
Hardware	Type of MAC device on this interface
Address	MAC address of the processor on this interface
MAU	Type of MAU on the primary and secondary physical ports: <ul style="list-style-type: none"> SFP—1000BASE-LH, 1000BASE-SX, 1000BASE-ZX; for SFPs that are empty, SFP (Empty) appears in this field; for SFPs that are installed in the OC3-2 GE APS I/O module and do not have a Juniper Networks part number programmed, SFP (GE Compliant) appears in this field XFP—10GBASE-SR (10 Gbps), 10GBASE-LR (10 Gbps), 10GBASE-ER (10 Gbps); for XFPs that are empty, XFP (Empty) appears in this field
TX Output Power	Transmitted output optical power
RX Input Power	Received input optical power
MTU	Size of the MTU for this interface: <ul style="list-style-type: none"> Operational—Size of the largest packet processed Administrative—Setting for MTU size that you specified
Duplex Mode	Duplex option for this interface: <ul style="list-style-type: none"> Operational—Duplex option currently used Administrative—Setting for duplex that you specified

Table 11: show interfaces gigabitEthernet Output Fields (*continued*)

Field Name	Field Description
Speed	Line speed for this interface: <ul style="list-style-type: none"> Operational—Current rate at which packets are processed Administrative—Setting for line speed that you specified
Debounce	Debounce configuration for this interface: <ul style="list-style-type: none"> State is—Enabled, Disabled Interval is—Number of seconds that this interface maintains a given state before the state change is reported to the upper-layer links
Clear arp	State of the removal of the ARP entries on an interface with redundant ports: <ul style="list-style-type: none"> Enabled—Clears ARP entries on the interface when the primary link fails Disabled—Maintains ARP entries on the interface until the specified timeout elapses
Link	Link information for this interface: <ul style="list-style-type: none"> Operational Link Selected—Port that the I/O module is currently using: primary or secondary Administrative link selected—Port that the I/O module is configured to use: <ul style="list-style-type: none"> primary—Only primary port is configured to operate secondary—Only redundant port is configured to operate automatically—Software controls port redundancy automatically
Link Failover Timeout	Time to wait for a failed link to be active before the router uses a different active link
Primary link selected x times	Number of times that the I/O has used the primary port since the module was last rebooted
Secondary link selected x times	Number of times that the I/O has used the secondary port since the module was last rebooted`
Primary/Secondary link signal detected, Primary/Secondary link signal not detected	Specifies the port (primary or secondary) on which the router detects a signal (not displayed on GE I/O modules that do not support SFPs)
5 minute input rate	Data rates based on the traffic received in the last 5 minutes

Table 11: show interfaces gigabitEthernet Output Fields (*continued*)

Field Name	Field Description
5 minute output rate	Data rates based on the traffic sent in the last 5 minutes
In	<p>Analysis of inbound traffic on this interface:</p> <ul style="list-style-type: none"> • Bytes—Number of bytes received in error-free packets • Unicast—Number of unicast packets received • Multicast—Number of multicast packets received • Broadcast—Number of broadcast packets received • Errors—Total number of errors in all received packets; some packets might contain more than one error • Discards—Total number of discarded incoming packets • Mac Errors—Number of incoming packets discarded because of MAC sublayer failures • Alignment—Number of incomplete octets received • CRC—Number of packets discarded because the checksum that the router computed from the data does not match the checksum generated by the originating devices • Too Longs—Number of packets discarded because the size exceeded the MTU • Symbol Errors—Number of symbols received that the router did not correctly decode
Out	<p>Analysis of outbound traffic on this interface:</p> <ul style="list-style-type: none"> • Bytes—Number of bytes sent • Unicast—Number of unicast packets sent • Multicast—Number of multicast packets sent • Broadcast—Number of broadcast packets sent • Errors—Total number of errors in all transmitted packets; note that some packets might contain more than one error • Discards—Total number of discarded outgoing packets • Mac Errors—Number of outgoing packets discarded because of MAC sublayer failures • Deferred—Number of packets that the router delayed sending because the line was busy. In half duplex mode, a high number of deferrals means the link is very busy with traffic from other stations. In full duplex mode, when the link is always available for transmission, this number is zero. • No Carrier—Number of packets sent when carrier sense was unavailable

Table 11: show interfaces gigabitEthernet Output Fields (*continued*)

Field Name	Field Description
Collisions	<p>Analysis of the collisions that occurred :</p> <ul style="list-style-type: none"> • Single—Number of packets sent after one collision • Multiple—Number of packets sent after multiple collisions • Late—Number of packets aborted during sending because of collisions after 64 bytes • Excessive—Number of packets not sent because of too many collisions
Policed Statistics	Number of packets that exceeded the number allowed and were policed (or dropped)
ARP Statistics	<p>Analysis of ARP traffic on this interface; In fields are for traffic received on the interface and Out fields are for traffic sent on the interface:</p> <ul style="list-style-type: none"> • ARP requests—Number of ARP requests • ARP responses—Number of ARP responses • Errors—Total number of errors in all ARP packets • Discards—Total number of discarded ARP packets
Administrative qos-shaping-mode	<p>QoS shaping mode:</p> <ul style="list-style-type: none"> • disabled—Shaping mode is configured but not operational • frame—Statistics are reported about bytes in frames, such as transmitted bytes and dropped bytes. • cell—Shaping mode for shaping and policing rates is cell-based; resulting traffic stream conforms exactly to the policing rates configured in downstream devices. Reports statistics in bytes in cells and accounts for cell encapsulation and padding overhead. • none—Shaping mode is not configured
Operational qos-shaping-mode	<p>Actual shaping mode for the interface:</p> <ul style="list-style-type: none"> • disabled • frame • cell • none

Table 11: show interfaces gigabitEthernet Output Fields (*continued*)

Field Name	Field Description
queue	<p>Hardware packet queue associated with the specified traffic class and interface :</p> <ul style="list-style-type: none"> • traffic class—Name of traffic class • bound to—Interface to which queue is bound • Queue length—Length of the queue, in bytes • Forwarded packets, bytes—Number of packets and bytes that were forwarded on this queue • Dropped committed packets, bytes—Number of committed packets and bytes that were dropped • Dropped conformed packets, bytes—Number of conformed packets and bytes that were dropped • Dropped exceeded packets, bytes—Number of exceeded packets and bytes that were dropped

Monitoring VLAN Statistics

Purpose Display configuration and status information for a specified VLAN subinterface or for all VLAN subinterfaces configured on the router. You can use the **mac-address** keyword to display information about the VLAN subinterfaces that were configured with unique MAC addresses.

Action To display full status and configuration information for the specified VLAN subinterface:

```

host1#show vlan subinterface fastEthernet 0/0.1
      Interface      Status  MTU   Svlan Id  Vlan Id  Ethertype  Type
-----
FastEthernet 0/0.1  Up      1526    1         0       0x9100     Static

In: Bytes 39256, Packets 612
  Multicast 0, Broadcast 0
  Errors 0, Discards 0
Out: Bytes 4538652, Packets 70911
  Multicast 0, Broadcast 70296
  Errors 0, Discards 0
ARP Statistics:
  In: ARP requests 0, ARP responses 0
  Errors 0, Discards 0
  Out: ARP requests 0, ARP responses 0
  Errors 0, Discards 0

```

Meaning [Table 12 on page 182](#) lists the **show vlan subinterface** command output fields.

Table 12: show vlan subinterface Output Fields

Field Name	Field Description
Interface	Type and specifier of the VLAN subinterface
Status	Status of the VLAN subinterface: up, down, dormant, lowerLayerDown, absent

Table 12: show vlan subinterface Output Fields (*continued*)

Field Name	Field Description
MTU	Maximum allowable size (in bytes) of the MTU for the VLAN subinterface
Svlan Id	S-VLAN ID value, if configured
Vlan Id	VLAN ID value for the VLAN subinterface
Ethertype	S-VLAN Ethertype value, if configured
Type	Type of VLAN subinterface: <ul style="list-style-type: none"> • Static—VLAN or S-VLAN subinterface was configured statically • Dynamic—VLAN or S-VLAN subinterface was configured dynamically
In	Analysis of inbound traffic on this interface: <ul style="list-style-type: none"> • Bytes—Number of bytes received on the VLAN or S-VLAN subinterface • Packets—Sum of all unicast, broadcast, and multicast packets received on the VLAN or S-VLAN subinterface • Multicast—Number of multicast packets received on the VLAN or S-VLAN subinterface • Broadcast—Number of broadcast packets received on the VLAN or S-VLAN subinterface • Errors—Total number of errors in all received packets; some packets might contain more than one error • Discards—Total number of discarded incoming packets
Out	Analysis of outbound traffic on this interface: <ul style="list-style-type: none"> • Bytes—Number of bytes sent on the VLAN or S-VLAN subinterface • Packets—Number of packets sent on the VLAN or S-VLAN subinterface • Multicast—Number of multicast packets received on the VLAN or S-VLAN subinterface • Broadcast—Number of broadcast packets received on the VLAN or S-VLAN subinterface • Errors—Total number of errors in all transmitted packets; some packets might contain more than one error • Discards—Total number of discarded outgoing packets

Table 12: show vlan subinterface Output Fields (*continued*)

Field Name	Field Description
ARP Statistics	<p>Analysis of ARP traffic on this interface; In fields are for traffic received on the interface and Out fields are for traffic sent on the interface:</p> <ul style="list-style-type: none"> • ARP requests—Number of ARP requests • ARP responses—Number of ARP responses • Errors—Total number of errors in all ARP packets • Discards—Total number of discarded ARP packets

Monitoring IPv6 Statistics

Purpose Display detailed or summary information for a particular IPv6 interface or for all IPv6 interfaces.

Action To display statistics for all IPv6 interfaces:

```

host1#show ipv6 interface
null0 line protocol IpLoopback is up, ipv6 is up
  Network Protocols: IPv6
  Link local address: fe80::90:1a00:740:1d44
  Unnumbered Interface: Corresponding Numbered Interface not specified or
removed
  Operational MTU 1500 Administrative MTU 0
  Operational speed 1000000000 Administrative speed 0
  Creation type Static
  Neighbor Discovery is disabled

  In Received Packets 0, Bytes 0
    Unicast Packets 0, Bytes 0
    Multicast Packets 0, Bytes 0
  In Total Dropped Packets 0, Bytes 0
    In Policed Packets 0
    In Invalid Source Address Packets 0
    In Error Packets 0
    In Discarded Packets 0

  Out Forwarded Packets 0, Bytes 0
    Unicast Packets 0, Bytes 0
    Multicast Routed Packets 0, Bytes 0
  Out Total Dropped Packets 0, Bytes 0
    Out Scheduler Dropped Packets 0, Bytes 0
    Out Policed Packets 0
    Out Discarded Packets 0

FastEthernet9/1.5 line protocol VlanSub is up, ipv6 is up
  Description: IPv6 interface in Virtual Router Hop5
  Network Protocols: IPv6
  Link local address: fe80::90:1a00:740:31ce
  Internet address: 5:1:1::2/64
  Operational MTU 1500 Administrative MTU 0
  Operational speed 1000000000 Administrative speed 0
  Creation type Static
  ND reachable time is 3600000 milliseconds
  ND duplicate address detection attempts is 100

```

```

ND neighbor solicitation retransmission interval is 1000 milliseconds
ND proxy is enabled

In Received Packets 13, Bytes 1356
  Unicast Packets 5, Bytes 588
  Multicast Packets 8, Bytes 768
In Total Dropped Packets 0, Bytes 0
  In Policed Packets 0
  In Invalid Source Address Packets 0
  In Error Packets 0
  In Discarded Packets 0

Out Forwarded Packets 22, Bytes 2480
  Unicast Packets 22, Bytes 2480
  Multicast Routed Packets 0, Bytes 0
Out Total Dropped Packets 8, Bytes 0
  Out Scheduler Dropped Packets 0, Bytes 0
  Out Policed Packets 0
  Out Discarded Packets 8

queue 0: traffic class best-effort, bound to ipv6 FastEthernet9/1.5
  Queue length 0 bytes
  Forwarded packets 4, bytes 680
  Dropped committed packets 0, bytes 0
  Dropped conformed packets 0, bytes 0
  Dropped exceeded packets 0, bytes 0

FastEthernet9/0.6 line protocol VlanSub is up, ipv6 is up
Description: IPv6 interface in Virtual Router Hop6
Network Protocols: IPv6
Link local address: fe80::90:1a00:740:31cd
Internet address: 6:1:1::1/64
Operational MTU 1500 Administrative MTU 0
Operational speed 1000000000 Administrative speed 0
Creation type Static
ND reachable time is 3600000 milliseconds
ND duplicate address detection attempts is 100
ND neighbor solicitation retransmission interval is 1000 milliseconds
ND proxy is enabled
ND RA source link layer is advertised
ND RA interval is 200 seconds, lifetime is 1800 seconds
ND RA managed flag is disabled, other config flag is disabled
ND RA advertising prefixes configured on interface

In Received Packets 0, Bytes 0
  Unicast Packets 0, Bytes 0
  Multicast Packets 0, Bytes 0
In Total Dropped Packets 0, Bytes 0
  In Policed Packets 0
  In Invalid Source Address Packets 0
  In Error Packets 0
  In Discarded Packets 0

Out Forwarded Packets 8, Bytes 768
  Unicast Packets 8, Bytes 768
  Multicast Routed Packets 0, Bytes 0
Out Total Dropped Packets 5, Bytes 0
  Out Scheduler Dropped Packets 0, Bytes 0
  Out Policed Packets 0
  Out Discarded Packets 5

queue 0: traffic class best-effort, bound to ipv6 FastEthernet9/0.6
  Queue length 0 bytes
  Forwarded packets 0, bytes 0

```

```

Dropped committed packets 0, bytes 0
Dropped conformed packets 0, bytes 0
Dropped exceeded packets 0, bytes 0

loopback5 line protocol IpLoopback is up, ipv6 is up
Network Protocols: IPv6
Link local address: fe80::90:1a00:740:1d44
Internet address: 10:1:1:0:290:1aff:fe40:1d44/64 (eui-64)
Operational MTU 1500 Administrative MTU 0
Operational speed 1000000000 Administrative speed 0
Creation type Static
Neighbor Discovery is disabled

In Received Packets 0, Bytes 0
  Unicast Packets 0, Bytes 0
  Multicast Packets 0, Bytes 0
In Total Dropped Packets 0, Bytes 0
  In Policed Packets 0
  In Invalid Source Address Packets 0
  In Error Packets 0
  In Discarded Packets 0

Out Forwarded Packets 0, Bytes 0
  Unicast Packets 0, Bytes 0
  Multicast Routed Packets 0, Bytes 0
Out Total Dropped Packets 0, Bytes 0
  Out Scheduler Dropped Packets 0, Bytes 0
  Out Policed Packets 0
  Out Discarded Packets 0

IPv6 policy input ipv6InPol25
  rate-limit-profile Rlp2Mb classifier-group clgA entry 1
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
  rate-limit-profile Rlp8Mb
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
IPv6 policy output ipv6PolOut2
  rate-limit-profile RlpOutA classifier-group clgB entry 1
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
  rate-limit-profile RlpOutB
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
IPv6 policy local-input ipv6PolLocIn5
  rate-limit-profile Rlp1Mb classifier-group clgC entry 1
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
  rate-limit-profile Rlp5Mb
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
queue 0: traffic class best-effort, bound to ipv6 FastEthernet9/0.6
Queue length 0 bytes
Forwarded packets 0, bytes 0
Dropped committed packets 0, bytes 0
Dropped conformed packets 0, bytes 0
Dropped exceeded packets 0, bytes 0

```

To display statistics for a particular IPv6 interface:

```

host1#show ipv6 interface FastEthernet 9/0.6
FastEthernet9/0.6 line protocol VlanSub is up, ipv6 is up
  Description: IPv6 interface in Virtual Router Hop6
  Network Protocols: IPv6
  Link local address: fe80::90:1a00:740:31cd
  Internet address: 6:1:1::1/64
  Operational MTU 1500 Administrative MTU 0
  Operational speed 1000000000 Administrative speed 0
  Creation type Static
  ND reachable time is 3600000 milliseconds
  ND duplicate address detection attempts is 100
  ND neighbor solicitation retransmission interval is 1000 milliseconds
  ND proxy is enabled
  ND RA source link layer is advertised
  ND RA interval is 200 seconds, lifetime is 1800 seconds
  ND RA managed flag is disabled, other config flag is disabled
  ND RA advertising prefixes configured on interface

  In Received Packets 0, Bytes 0
    Unicast Packets 0, Bytes 0
    Multicast Packets 0, Bytes 0
  In Total Dropped Packets 0, Bytes 0
    In Policed Packets 0
    In Invalid Source Address Packets 0
    In Error Packets 0
    In Discarded Packets 0

  Out Forwarded Packets 8, Bytes 768
    Unicast Packets 8, Bytes 768
    Multicast Routed Packets 0, Bytes 0
  Out Total Dropped Packets 5, Bytes 0
    Out Scheduler Dropped Packets 0, Bytes 0
    Out Policed Packets 0
    Out Discarded Packets 5

  queue 0: traffic class best-effort, bound to ipv6 FastEthernet9/0.6
    Queue length 0 bytes
    Forwarded packets 0, bytes 0
    Dropped committed packets 0, bytes 0
    Dropped conformed packets 0, bytes 0
    Dropped exceeded packets 0, bytes 0

IPv6 policy input ipv6InPol25
  rate-limit-profile Rlp2Mb classifier-group clgA entry 1
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
  rate-limit-profile Rlp8Mb
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
IPv6 policy output ipv6PolOut2
  rate-limit-profile RlpOutA classifier-group clgB entry 1
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
  rate-limit-profile RlpOutB
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
IPv6 policy local-input ipv6PolLocIn5

```

```

rate-limit-profile Rlp1Mb classifier-group clgC entry 1
  Committed: 0 packets, 0 bytes
  Conformed: 0 packets, 0 bytes
  Exceeded: 0 packets, 0 bytes
rate-limit-profile Rlp5Mb
  Committed: 0 packets, 0 bytes
  Conformed: 0 packets, 0 bytes
  Exceeded: 0 packets, 0 bytes
queue 0: traffic class best-effort, bound to ipv6 FastEthernet9/0.6
  Queue length 0 bytes
  Forwarded packets 0, bytes 0
  Dropped committed packets 0, bytes 0
  Dropped conformed packets 0, bytes 0
  Dropped exceeded packets 0, bytes 0
Http Redirect Url: http://www.juniper.net

```

To display detailed IPv6 status and configuration information for all IPv6 interfaces:

```

host1#show ipv6 interface detail
null0 line protocol IpLoopback is up, ipv6 is up
  Network Protocols: IPv6
  Link local address: fe80::90:1a00:740:1d44

  Unnumbered Interface: Corresponding Numbered Interface not specified or
  removed
IPv6 statistics:
  Rcvd: 0 local destination
        0 hdr errors, 0 addr errors
        0 unkn proto, 0 discards
  Sent: 0 generated, 0 no routes, 0 discards

ICMPv6 statistics:
  Rcvd: 0 destination unreachable, 0 admin unreachable, 0 parameter problem
        0 time exceeded, 0 pkt too big, 0 echo requests
        0 echo replies
  Sent: 0 destination unreachable, 0 admin unreachable, 0 parameter problem
        0 time exceeded, 0 pkt too big, 0 echo requests
        0 echo replies

Operational MTU 1500 Administrative MTU 0
Operational speed 1000000000 Administrative speed 0
Creation type Static
Neighbor Discovery is disabled

ICMPv6 statistics:
  Rcvd: 0 total, 0 errors
        0 rtr solicits, 0 rtr advertisements
        0 neighbor solicits, 0 neighbor advertisements
        Group membership: 0 queries, 0 responses, 0 reductions
        0 redirects
  Sent: 0 total, 0 errors
        0 rtr solicits, 0 rtr advertisements
        0 neighbor solicits, 0 neighbor advertisements
        Group membership: 0 queries, 0 responses, 0 reductions
        0 redirects

In Received Packets 0, Bytes 0
  Unicast Packets 0, Bytes 0
  Multicast Packets 0, Bytes 0
In Total Dropped Packets 0, Bytes 0
  In Policed Packets 0
  In Invalid Source Address Packets 0

```



```

In Error Packets 0
In Discarded Packets 0

Out Forwarded Packets 0, Bytes 0
  Unicast Packets 0, Bytes 0
  Multicast Routed Packets 0, Bytes 0
Out Total Dropped Packets 0, Bytes 0
  Out Scheduler Dropped Packets 0, Bytes 0
  Out Policed Packets 0
  Out Discarded Packets 0

FastEthernet9/1.5 line protocol VlanSub is up, ipv6 is up
Description: IPv6 interface in Virtual Router Hop5
Network Protocols: IPv6
Link local address: fe80::90:1a00:740:31ce

Internet address: 5:1:1::2/64
IPv6 statistics:
  Rcvd: 0 local destination
        0 hdr errors, 0 addr errors
        0 unkn proto, 0 discards
  Sent: 0 generated, 0 no routes, 0 discards

ICMPv6 statistics:
  Rcvd: 0 destination unreachable, 0 admin unreachable, 0 parameter problem
        0 time exceeded, 0 pkt too big, 0 echo requests
        3 echo replies
  Sent: 0 destination unreachable, 0 admin unreachable, 0 parameter problem
        0 time exceeded, 0 pkt too big, 5 echo requests
        0 echo replies

Operational MTU 1500 Administrative MTU 0
Operational speed 1000000000 Administrative speed 0
Creation type Static
ND reachable time is 3600000 milliseconds
ND duplicate address detection attempts is 100
ND neighbor solicitation retransmission interval is 1000 milliseconds
ND proxy is enabled
ND RA source link layer is advertised
ND RA interval is 200 seconds, lifetime is 1800 seconds
ND RA managed flag is disabled, other config flag is disabled
ND RA advertising prefixes configured on interface

ICMPv6 statistics:
  Rcvd: 13 total, 0 errors
        0 rtr solicits, 8 rtr advertisements
        1 neighbor solicits, 1 neighbor advertisements
        Group membership: 0 queries, 0 responses, 0 reductions
        0 redirects
  Sent: 31 total, 0 errors
        0 rtr solicits, 16 rtr advertisements
        5 neighbor solicits, 5 neighbor advertisements
        Group membership: 0 queries, 0 responses, 0 reductions
        0 redirects

In Received Packets 13, Bytes 1356
  Unicast Packets 5, Bytes 588
  Multicast Packets 8, Bytes 768
In Total Dropped Packets 0, Bytes 0
  In Policed Packets 0
  In Invalid Source Address Packets 0
  In Error Packets 0
  In Discarded Packets 0

```

```
Out Forwarded Packets 22, Bytes 2480
  Unicast Packets 22, Bytes 2480
  Multicast Routed Packets 0, Bytes 0
Out Total Dropped Packets 8, Bytes 0
  Out Scheduler Dropped Packets 0, Bytes 0
  Out Policed Packets 0
  Out Discarded Packets 8

queue 0: traffic class best-effort, bound to ipv6 FastEthernet9/1.5
  Queue length 0 bytes
  Forwarded packets 4, bytes 680
  Dropped committed packets 0, bytes 0
  Dropped conformed packets 0, bytes 0
  Dropped exceeded packets 0, bytes 0

FastEthernet9/0.6 line protocol VlanSub is up, ipv6 is up
  Description: IPv6 interface in Virtual Router Hop6
  Network Protocols: IPv6
  Link local address: fe80::90:1a00:740:31cd

  Internet address: 6:1:1::1/64
IPv6 statistics:
  Rcvd: 0 local destination
        0 hdr errors, 0 addr errors
        0 unkn proto, 0 discards
  Sent: 0 generated, 0 no routes, 0 discards

ICMPv6 statistics:
  Rcvd: 0 destination unreachable, 0 admin unreachable, 0 parameter problem
        0 time exceeded, 0 pkt too big, 0 echo requests
        0 echo replies
  Sent: 0 destination unreachable, 0 admin unreachable, 0 parameter problem
        0 time exceeded, 0 pkt too big, 0 echo requests
        0 echo replies

Operational MTU 1500 Administrative MTU 0
Operational speed 1000000000 Administrative speed 0
Creation type Static
ND reachable time is 3600000 milliseconds
ND duplicate address detection attempts is 100
ND neighbor solicitation retransmission interval is 1000 milliseconds
ND proxy is enabled
ND RA source link layer is advertised
ND RA interval is 200 seconds, lifetime is 1800 seconds
ND RA managed flag is disabled, other config flag is disabled
ND RA advertising prefixes configured on interface

ICMPv6 statistics:
  Rcvd: 0 total, 0 errors
        0 rtr solicits, 0 rtr advertisements
        0 neighbor solicits, 0 neighbor advertisements
        Group membership: 0 queries, 0 responses, 0 reductions
        0 redirects
  Sent: 13 total, 0 errors
        0 rtr solicits, 9 rtr advertisements
        2 neighbor solicits, 2 neighbor advertisements
        Group membership: 0 queries, 0 responses, 0 reductions
        0 redirects

In Received Packets 0, Bytes 0
  Unicast Packets 0, Bytes 0
  Multicast Packets 0, Bytes 0
In Total Dropped Packets 0, Bytes 0
  In Policed Packets 0
```

```

In Invalid Source Address Packets 0
In Error Packets 0
In Discarded Packets 0

Out Forwarded Packets 8, Bytes 768
  Unicast Packets 8, Bytes 768
  Multicast Routed Packets 0, Bytes 0
Out Total Dropped Packets 5, Bytes 0
  Out Scheduler Dropped Packets 0, Bytes 0
  Out Policed Packets 0
  Out Discarded Packets 5

queue 0: traffic class best-effort, bound to ipv6 FastEthernet9/0.6
  Queue length 0 bytes
  Forwarded packets 0, bytes 0
  Dropped committed packets 0, bytes 0
  Dropped conformed packets 0, bytes 0
  Dropped exceeded packets 0, bytes 0

loopback5 line protocol IpLoopback is up, ipv6 is up
Network Protocols: IPv6
Link local address: fe80::90:1a00:740:1d44

Internet address: 10:1:1:0:290:1aff:fe40:1d44/64 (eui-64)
IPv6 statistics:
  Rcvd: 0 local destination
        0 hdr errors, 0 addr errors
        0 unkn proto, 0 discards
  Sent: 0 generated, 0 no routes, 0 discards

ICMPv6 statistics:
  Rcvd: 0 local destination
        0 hdr errors, 0 addr errors
        0 unkn proto, 0 discards
  Sent: 0 generated, 0 no routes, 0 discards

ICMPv6 statistics:
  Rcvd: 0 destination unreachable, 0 admin unreachable, 0 parameter problem
        0 time exceeded, 0 pkt too big, 0 echo requests
        0 echo replies
  Sent: 0 destination unreachable, 0 admin unreachable, 0 parameter problem
        0 time exceeded, 0 pkt too big, 0 echo requests
        0 echo replies

Operational MTU 1500 Administrative MTU 0
Operational speed 1000000000 Administrative speed 0
Creation type Static
Neighbor Discovery is disabled

ICMPv6 statistics:
  Rcvd: 0 total, 0 errors
        0 rtr solicits, 0 rtr advertisements
        0 neighbor solicits, 0 neighbor advertisements
        Group membership: 0 queries, 0 responses, 0 reductions
        0 redirects
  Sent: 0 total, 0 errors
        0 rtr solicits, 0 rtr advertisements
        0 neighbor solicits, 0 neighbor advertisements
        Group membership: 0 queries, 0 responses, 0 reductions
        0 redirects

In Received Packets 0, Bytes 0
  Unicast Packets 0, Bytes 0
  Multicast Packets 0, Bytes 0

```

```

In Total Dropped Packets 0, Bytes 0
  In Policed Packets 0
  In Invalid Source Address Packets 0
  In Error Packets 0
  In Discarded Packets 0

Out Forwarded Packets 0, Bytes 0
  Unicast Packets 0, Bytes 0
  Multicast Routed Packets 0, Bytes 0
Out Total Dropped Packets 0, Bytes 0
  Out Scheduler Dropped Packets 0, Bytes 0
  Out Policed Packets 0
  Out Discarded Packets 0
IPv6 policy input ipv6InPol25
  rate-limit-profile Rlp2Mb classifier-group clgA entry 1
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
  rate-limit-profile Rlp8Mb
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
IPv6 policy output ipv6PolOut2
  rate-limit-profile RlpOutA classifier-group clgB entry 1
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
  rate-limit-profile RlpOutB
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
IPv6 policy local-input ipv6PolLocIn5
  rate-limit-profile Rlp1Mb classifier-group clgC entry 1
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
  rate-limit-profile Rlp5Mb
    Committed: 0 packets, 0 bytes
    Conformed: 0 packets, 0 bytes
    Exceeded: 0 packets, 0 bytes
queue 0: traffic class best-effort, bound to ipv6 FastEthernet9/0.6
  Queue length 0 bytes
  Forwarded packets 0, bytes 0
  Dropped committed packets 0, bytes 0
  Dropped conformed packets 0, bytes 0
  Dropped exceeded packets 0, bytes 0

```

To display brief summary of IPv6 status and configuration information for all IPv6 interfaces:

```
host1# show ipv6 interface brief
```

Interface	IPv6-Address	Status	Protocol	Description
nu110	Unnumbered	up	up	
FastEthernet9/1.5	5:1:1::2/64	up	up	IPv6 interface in Virtual Router Hop 5
FastEthernet9/0.6	6:1:1::1/64	up	up	IPv6 interface in Virtual Router Hop 6

```

loopback5          10:1:1:0:290:1aff:fe up      up
                   40:1d44/64

```

Meaning [Table 13 on page 193](#) lists the **show ipv6 interface** command output fields.

Table 13: show ipv6 interface Output Fields

Field Name	Field Description
Description	Optional description for the interface or address specified
Network Protocols	Network protocols configured on this interface
Link local address	Local IPv6 address of this interface
Internet address	External address of this interface
IPv6 statistics Rcvd	<ul style="list-style-type: none"> local destination—Frames with this router as their destination hdr errors—Number of packets containing header errors addr errors—Number of packets containing addressing errors unkn proto—Number of packets received containing unknown protocols discards—Number of discarded packets
IPv6 statistics Sent	<ul style="list-style-type: none"> generated—Number of packets generated no routes—Number of packets that could not be routed discards—Number of packets that could not be routed that were discarded <p>NOTE: If you configure the router to discard packets for static routes with null 0 interfaces as the next-hop points using the reject keyword with the ipv6 route command, the value displayed in this field also includes the packets that reached the null 0 interface and were dropped.</p>

Table 13: show ipv6 interface Output Fields (*continued*)

Field Name	Field Description
ICMPv6 statistics Rcvd	<ul style="list-style-type: none"> • total—Total number of received packets • errors—Error packets received • destination unreachable—Packets received with destination unreachable • admin unreachable—Packets received because the destination was administratively unreachable (for example, the packet encountered a firewall filter) • parameter problem—Packets received with parameter errors • time exceeded—Packets received with time-to-live exceeded • pkt too big—Number of packet-too-big messages received that indicate a packet was too large to forward because of the allowed MTU size • redirects—Received packet redirects • echo requests—Echo request (ping) packets • echo replies—Echo replies received • rtr solicits—Number of received router solicitations • rtr advertisements—Number of received router advertisements • neighbor solicits—Number of received neighbor solicitations • neighbor advertisements—Number or received neighbor advertisements • Group membership (queries, responses, reductions)—Number of queries, responses, and reduction requests received from within a group to which the interface is assigned

Table 13: show ipv6 interface Output Fields (*continued*)

Field Name	Field Description
ICMPv6 statistics Sent	<ul style="list-style-type: none"> total—Total number of sent packets errors—Error packets sent destination unreachable—Packets sent with destination unreachable <p>NOTE: If you configure the router to discard packets for static routes with null 0 interfaces as the next-hop points using the reject keyword with the ipv6 route command, the value displayed in this field also includes the number of ICMPv6 unreachable messages sent out for packets that reached null 0 interfaces with static routes.</p> <ul style="list-style-type: none"> admin unreachable—Packets sent because the destination was administratively unreachable (for example, due to a firewall filter) parameter problem—Packets sent with parameter errors time exceeded—Packets sent with time-to-live exceeded pkt too big—Number of packet-too-big messages sent because a received packet was too large to forward because of the allowed MTU size redirects—Sent packet redirects echo requests—Echo request (ping) packets echo replies—Echo replies sent rtr solicits—Number of sent router solicitations rtr advertisements—Number of sent router advertisements neighbor solicits—Number of sent neighbor solicitations neighbor advertisements—Number of sent neighbor advertisements Group membership (queries, responses, reductions)—Number of queries, responses, and reduction requests sent to a group of which the interface is assigned
Operational MTU	Value of the MTU
Administrative MTU	Value of the MTU if it has been administratively overridden using the configuration
Operational speed	Speed of the interface
Administrative speed	Value of the speed if it has been administratively overridden using the configuration
Creation type	Method by which the interface was created (static or dynamic)

Table 13: show ipv6 interface Output Fields (*continued*)

Field Name	Field Description
HTTP Redirect Url	URL to which a subscriber's initial web browser session is redirected
ND reachable time	Amount of time (in milliseconds) that the neighbor is expected to remain reachable
ND duplicate address detection attempts	Number of times that the router attempts to determine a duplicate address
ND neighbor solicitation retransmission interval	Interval in which the router retransmits neighbor solicitations
ND proxy	Indicates whether the router will reply to solicitations on behalf of a known neighbor
ND RA source link layer	Indicates whether the RA includes the link layer
ND RA interval	Interval (in seconds) of the neighbor discovery router advertisement
ND RA lifetime	Lifetime (in seconds) of the neighbor discovery router advertisement
ND RA managed flag	State of the neighbor discovery router advertisement managed flag
ND RA other config flag	State of the neighbor discovery router advertisement other config flag
ND RA advertising prefixes	Configured advertisement prefixes for neighbor discovery router advertisement
In Received Packets, Bytes	<p>Total number of packets and bytes received on this interface:</p> <ul style="list-style-type: none"> • Unicast Packets, Bytes—Unicast packets and bytes received on the IPv6 interface; link-local received multicast packets (non-multicast-routed frames) are counted as unicast packets • Multicast Packets, Bytes—Multicast packets and bytes received on the IPv6 interface which are then multicast-routed are counted as multicast packets

Table 13: show ipv6 interface Output Fields (*continued*)

Field Name	Field Description
In Total Dropped Packets, Bytes	<p>Total number of inbound packets and bytes dropped on this interface:</p> <ul style="list-style-type: none"> • In Policed Packets—Packets that were received and dropped on the interface for any of the following reasons: exceeding the token bucket limit, exceeding the rate limit, a drop action in a policy, discarded MAC validation packets, a destination address lookup failure, or when the destination address is an IP interface that has a route configured to the null 0 interface. • In Invalid Source Address Packets—Packets received with invalid source address (for example, spoofed packets) • In Error Packets—Number of packets received with errors • In Discarded Packets—Packets received that were discarded for reasons other than rate limits, errors, and invalid source address
Out Forwarded Packets, Bytes	<p>Total number of packets and bytes that were sent from this interface:</p> <ul style="list-style-type: none"> • Unicast Packets, Bytes—Unicast packets and bytes that were sent from this interface • Multicast Routed Packets, Bytes—Multicast packets and bytes that were sent from this interface
Out Total Dropped Packets	<p>Total number of outbound packets and bytes dropped by this interface:</p> <ul style="list-style-type: none"> • Out Scheduler Dropped Packets, Bytes—Number of outbound packets and bytes dropped by the scheduler • Out Policed Packets, Bytes—Number of outbound packets and bytes dropped because of rate limits • Out Discarded Packets—Number of outbound packets that were discarded for reasons other than those dropped by the scheduler and those dropped because of rate limits
IPv6 policy	<p>Type (input, output, local-input) and name of policy:</p> <ul style="list-style-type: none"> • rate-limit-profile—Name of profile • classifier-group entry—Entry index • Committed—Number of packets and bytes conforming to the committed access rate • Conformed—Number of packets and bytes that exceed the committed access rate but conform to the peak access rate • Exceeded—Number of packets and bytes exceeding the peak access rate

Table 13: show ipv6 interface Output Fields (*continued*)

Field Name	Field Description
queue, traffic class, bound to ipv6	<p>Queue and traffic class bound to the specified IPv6 interface:</p> <ul style="list-style-type: none"> • Queue length—Number of bytes in queue • Dropped committed packets, bytes—Total number of committed packets and bytes dropped by this interface • Dropped conformed packets, bytes—Total number of conformed packets and bytes dropped by this interface • Dropped exceeded packets, bytes—Total number of exceeded packets and bytes dropped by this interface

Monitoring MLD Statistics

Purpose Display MLD information for interfaces on which you enabled MLD.

Action To display statistics, including hardware multicast packet replication status, for all IPv6 interfaces on which you enabled MLD:

```
host1:boston#show ipv6 mld interface
```

```
Interface ATM2/0.103 address 13.0.0.1/255.255.255.0
Administrative state enabled, Operational state enabled
Interface parameters:
  Version 2
  State Querier
  Query Interval 125 secs, 125 secs before the next query
  Other querier present interval 250 secs
  Maximum response time 255 (in 10ths of a second)
  Last member query interval 10 (in 10ths of a second)
  Robustness 3
  No inbound access group
  No inbound access source-group
  No inbound apply-oif-map
  Immediate Leave: disabled
Explicit Host Tracking: enabled
Max-Group limit: No Limit
Admission-Bandwidth limit: No limit
IOA Packet Replication: None
  Group Count: 1
Interface statistics:
  Rcvd: 2 reports, 0 leaves, 0 wrong version queries
  Sent: 2 queries
  Groups learnt: 1

Counts: 0 down, 0 init state, 1 querier, 0 non-querier, 1 Total
```

To display statistics, including hardware multicast packet replication status, for a particular IPv6 interface on which you enabled MLD:

```
host1#show ipv6 mld interface gigabitEthernet 3/0.0
Interface GigabitEthernet3/0.0 address 10.1.1.1/255.255.255.0
```

```

Administrative state enabled, Operational state enabled
Interface parameters:
  Version 1
  State Querier
  Query Interval 125 secs, 123 secs before the next query
  Other querier present interval 250 secs
  Maximum response time 100 (in 10ths of a second)
  Last member query interval 10 (in 10ths of a second)
  Robustness 3
  No inbound access group
  No inbound access source-group
  No inbound apply-oif-map
  Immediate Leave: disabled
Explicit Host Tracking: enabled
Max-Group limit: No Limit
  Group Count: 0
  IOA packet replication gigabitEthernet 3/8.1
Interface statistics:
  Rcvd: 0 reports, 0 leaves, 0 wrong version queries
  Sent: 14 queries
  Groups learnt: 0

Counts: 0 down, 0 init state, 1 querier, 0 non-querier, 1 Total

```

Meaning [Table 14 on page 199](#) lists the **show ipv6 mld interface** command output fields.

Table 14: show ipv6 mld interface Output Fields

Field Name	Field Description
Interface	Type of interface and interface specifier. For details about interface types and specifiers, see <i>Interface Types and Specifiers</i> in <i>JunosE Command Reference Guide</i> .
address	IPv6 link-local address of the interface
Administrative state	Status of the interface in the software: enabled or disabled
Operational state	Physical status of the interface: enabled or disabled
Version	MLD version
State	Function of the interface: querier or nonquerier
Query Interval	Time interval at which this interface sends query messages
Other querier present interval	Time that the interface waits before declaring itself as the querier
Maximum response time	Time interval during which this interface expects a host to respond
Graceful restart	Status of graceful restart: active or complete

Table 14: show ipv6 mld interface Output Fields (*continued*)

Field Name	Field Description
Last member query interval	Time that this interface waits before sending a new query to a host that sends a group leave message
Robustness	Number of times this interface sends MLD messages
Inbound access group	Information about IPv6 access lists configured with the ipv6 mld access-group command
No inbound access group	No IPv6 access list configured with the ipv6 mld access-group command
Inbound access source-group	Information about IPv6 access lists configured with the ipv6 mld access-source-group command
No inbound access source-group	No IPv6 access list configured with the ipv6 mld access-source-group command
Inbound apply-oif-map	Information about OIF map names configured with the ipv6 mld apply-oif-map command
No inbound apply-oif-map	No OIF map name configured with the ipv6 mld apply-oif-map command
Immediate Leave	Setting of the ipv6 mld immediate-leave command: enabled or disabled
Explicit Host Tracking	Setting of the ipv6 mld explicit-tracking command: enabled or disabled
Max-Group limit	Number of MLD groups that the interface can accept, as configured with the ipv6 mld group limit command
Group Count	Number of MLD groups that the interface has accepted
IOA packet replication	Hardware multicast packet replication interface to which egress multicast packets on this interface are redirected

Table 14: show ipv6 mld interface Output Fields (*continued*)

Field Name	Field Description
Interface statistics Rcvd	<p>Information about MLD messages received on this interface:</p> <ul style="list-style-type: none"> reports—Number of group multicast listener reports received leaves—Number of group multicast listener done messages received wrong version queries—Number of multicast listener queries received from devices running a different version of MLD Interface statistics Sent—Number of MLD messages this interface has sent Interface statistics Groups learnt—Number of groups this interface has discovered
Counts	Total number of MLD interfaces

Related Documentation

- [Configuring IPv6 Hardware Multicast Packet Replication on page 165](#)
- show interfaces
- show ipv6 interface
- show ipv6 mld interface
- show vlan subinterface

Monitoring IPv6 Multicast Forwarding Entries

Purpose Displays information about all or specified multicast forwarding entries. You can specify a multicast group IPv6 address or both a multicast group IPv6 address and a multicast source IPv6 address to display information about particular multicast forwarding entries.

Action To display all multicast forwarding entries while bandwidth rate is constant:

```

host1#show ipv6 mroute
IPv6 Multicast Routing Table

(S, G) uptime d h:m:s[, expires d h:m:s]
[Admission bandwidth: bps]
[QoS bandwidth: bps]
RPF route: addr/mask, incoming interface
           neighbor address, owner route-owner
Incoming interface list:
  Interface (addr/mask), State/Owner [(RPF IIF)]
Outgoing interface list:
  Interface (addr/mask), State/Owner, Uptime/Expires

(10:0:0:1:1::, ff0e::1) uptime 0 01:04:12
RPF route: 10:0:0:1::/64, incoming interface ATM2/3.1001
           neighbor 10:0:0:1::1, owner Local
Incoming interface list:
  ATM2/3.1001 (10:0:0:1::1/64), Accept/Pim (RPF IIF)

```

```

    Outgoing interface list:
      ATM2/0.200 (21:2:2:21::2:1/60), Forward/Pim, 0 01:04:12/never
(10:0:0:1:2::, ff0e::1) uptime 0 01:04:12
  RPF route: 10:0:0:1::/64, incoming interface ATM2/3.1001
    neighbor 10:0:0:1::1, owner Local
  Incoming interface list:
    ATM2/3.1001 (10:0:0:1::1/64), Accept/Pim (RPF IIF)
  Outgoing interface list:
    ATM2/0.200 (21:2:2:21::2:1/60), Forward/Pim, 0 01:04:12/never
Counts: 2 (S, G) entries
       0 (*, G) entries

```

To display all multicast forwarding entries when bandwidth limit of all the join interfaces exceeds configured CAC limits:

```

host1#show ipv6 mroute
IP Multicast Routing Table

(S, G) uptime d h:m:s[, expires d h:m:s]
[Admission bandwidth: bps]
[QoS bandwidth: bps]
RPF route: addr/mask, incoming interface
    neighbor address, owner route-owner
Incoming interface list:
  Interface (addr/mask), State/Owner [(RPF IIF)]
Outgoing interface list:
  Interface (addr/mask), State/Owner, Uptime/Expires

(10:0:0:1:1::, ff0e::1) uptime 0 01:04:12
  RPF route: 10:0:0:1::/64, incoming interface ATM2/3.1001
    neighbor 10:0:0:1::1, owner Local
  Incoming interface list:
    ATM2/3.1001 (10:0:0:1::1/64), Accept/Pim (RPF IIF)
  Outgoing interface list:
    ATM2/0.200 (21:2:2:21::2:1/60), Forward/Pim, 0 01:04:12/never

(10:0:0:1:2::, ff0e::1) uptime 0 01:04:12
  RPF route: 10:0:0:1::/64, incoming interface ATM2/3.1001
    neighbor 10:0:0:1::1, owner Local
  Incoming interface list:
    ATM2/3.1001 (10:0:0:1::1/64), Accept/Pim (RPF IIF)
  Outgoing interface list:
    ATM2/0.200 (21:2:2:21::2:1/60), Blocked (join-intf-adm-limit)/IGMP, 0
01:04:12/never
Counts: 2 (S, G) entries
       0 (*, G) entries

```

Meaning [Table 15 on page 202](#) lists the **show ipv6 mroute** command output fields.

Table 15: show ipv6 mroute Output Fields

Field Name	Field Description
(S,G)	IPv6 addresses of the multicast source and the multicast group
Uptime	Length of time that the (S,G) pair has been active, in <i>days hours:minutes:seconds</i> format

Table 15: show ipv6 mroute Output Fields (*continued*)

Field Name	Field Description
Expires	Length of time for which the (S,G) pair will be active, in <i>days hours:minutes:seconds</i> format
Admission bandwidth	Admission bandwidth (in bps)
QoS bandwidth	QoS bandwidth (in bps)
RPF Route	IPv6 address and prefix of the RPF route
Incoming interface	Type and specifier of the incoming interface for the RPF route
neighbor address	IPv6 address of the neighbor
owner	Owner of the route: <ul style="list-style-type: none"> • Local—route belonging to the local interface • Static—Static route • Other protocols—Route established by a protocol
Incoming interface list	List of incoming interfaces on the router. Details include: <ul style="list-style-type: none"> • Type of interface and its specifier • Action that the interface takes with packets: accept or discard • Multicast protocol that owns the interface • Time that the interface has been active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format • Time that the interface will cease to be active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format
Outgoing interface list	List of outgoing interfaces on the router. Details include: <ul style="list-style-type: none"> • Type of interface and its specifier • Action that the interface takes with packets: Forward or Blocked (intf-adm-limit, join-intf-adm-limit, port-adm-limit, port-limit, port-priority-limit) • Protocol running on the interface: PIM or MLD • Time that the interface has been active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format • Time that the interface will cease to be active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format

Table 15: show ipv6 mroute Output Fields (*continued*)

Field Name	Field Description
Counts	Numbers of types of source group mappings: <ul style="list-style-type: none"> • (S,G)—Number of (S,G) entries • (*,G)—Number of (*,G) entries

Related Documentation

- [Defining IPv6 Static Routes for Reverse-Path Forwarding on page 149](#)
- [Example: Configuring an IPv6 Multicast Bandwidth Map on page 155](#)
- [Activating IPv6 Multicast QoS Adjustment Functions on page 159](#)
- [Blocking IPv6 Mroutes on page 167](#)
- [Enabling Interface-Level Admission Bandwidth Limitation for IPv6 on page 168](#)
- [Creating IPv6 Mroute Port Limits on page 170](#)
- [Enabling Port-Level Admission Bandwidth Limitation for IPv6 on page 171](#)
- `show ipv6 mroute`

Monitoring Active IPv6 Multicast Routes

Purpose Display the active multicast routes.

- You can specify a multicast group IPv6 address or both a multicast group IPv6 address and a multicast source IPv6 address to display information about particular multicast forwarding entries.
- You can specify the bandwidth threshold to display the active multicast routes with admission bandwidth greater than the specified bandwidth threshold. The default bandwidth threshold is 4000 bps.
- You can use the **summary** option to see a summary rather than a detailed description.
- You can use the **count** option to display the number of active multicast forwarding entries.
- You can use the **oif-detail** option to display the details of the join interfaces corresponding to the mapped interface when oif-mapping is configured.
- You can use the **statistics** option to display statistics for packets received through all active multicast forwarding entries that the router has added to the multicast routing table and established on the appropriate line modules.

Action To display the active multicast routes with admission bandwidth above 10000 bps:

```
host1#show ipv6 mroute active 10000
Active IP Multicast Routes >=10000 bps
(S, G) uptime d h:m:s[, expires d h:m:s]
[Admission bandwidth: bps]
```



```

[QoS bandwidth: bps]
RPF route: addr/mask, incoming interface
neighbor address, owner route-owner
Incoming interface list:
Interface (addr/mask), State/Owner [(RPF IIF)]
Outgoing interface list:
Interface (addr/mask), State/Owner, Uptime/Expires
(52::1, ff3e::1) uptime 0 00:01:07
Admission bandwidth: 47000 bps (adaptive)
QoS bandwidth: 47000 bps (adaptive)
RPF route: 52::/112, incoming interface ATM2/1.17
neighbor 17::2, owner NetmgmtRpf
Incoming interface list:
ATM2/1.17 (fe80::90:1a00:3140:1ff8/128), Accept/MLD (RPF IIF)
Outgoing interface list:
NULL
Counts: 1 (S, G) entries
0 (*, G) entries

To display the summary of active multicast routes:

host1#show ipv6 mroute summary active
Active IP Multicast Routes >=4000 bps
Group Address Source Address RPF route RPF Iif #Oifs
-----
232.0.0.1 51.0.0.1 51.0.0.0/24 ATM3/1.17 0
232.0.0.2 51.0.0.1 51.0.0.0/24 ATM3/1.17 0
232.0.0.3 51.0.0.1 51.0.0.0/24 ATM3/1.17 0
Counts: 3 (S, G) entries
0 (*, G) entries

```

Meaning [Table 16 on page 205](#) lists the `show ipv6 mroute active` and `show ipv6 mroute summary active` commands output fields.

Table 16: show ipv6 mroute active and show ipv6 mroute summary active Output Fields

Field Name	Field Description
(S,G)	IPv6 addresses of the multicast source and the multicast group
Uptime	Length of time that the (S,G) pair has been active, in <i>days hours:minutes:seconds</i> format

Table 16: show ipv6 mroute active and show ipv6 mroute summary active Output Fields (*continued*)

Field Name	Field Description
Expires	Length of time for which the (S,G) pair will be active, in <i>days hours:minutes:seconds</i> format
Admission bandwidth	Admission bandwidth (in bps)
QoS bandwidth	QoS bandwidth (in bps)
RPF Route	IPv6 address and prefix of the RPF route
Incoming interface	Type and specifier of the incoming interface for the RPF route
neighbor address	IPv6 address of the neighbor
owner	Owner of the route: <ul style="list-style-type: none"> • Local—route belonging to the local interface • Static—Static route • Other protocols—Route established by a protocol
Incoming interface list	List of incoming interfaces on the router. Details include: <ul style="list-style-type: none"> • Type of interface and its specifier • Action that the interface takes with packets: accept or discard • Multicast protocol that owns the interface • Time that the interface has been active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format • Time that the interface will cease to be active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format
Outgoing interface list	List of outgoing interfaces on the router. Details include: <ul style="list-style-type: none"> • Type of interface and its specifier • Action that the interface takes with packets: Forward or Blocked (intf-adm-limit, join-intf-adm-limit, port-adm-limit, port-limit, port-priority-limit) • Protocol running on the interface: PIM or MLD • Time that the interface has been active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format • Time that the interface will cease to be active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format

Table 16: show ipv6 mroute active and show ipv6 mroute summary active Output Fields (*continued*)

Field Name	Field Description
Counts	Numbers of types of source group mappings: <ul style="list-style-type: none"> • (S,G)—Number of (S,G) entries • (*,G)—Number of (*,G) entries
Group Address	IP address of the multicast group
Source Address	IP address of the multicast source
RPF Iif	Type and identifier for the incoming interface for the RPF route
#Oifs	Number of outgoing interfaces

Related Documentation

- [Defining IPv6 Static Routes for Reverse-Path Forwarding on page 149](#)
- [Example: Configuring an IPv6 Multicast Bandwidth Map on page 155](#)
- [Activating IPv6 Multicast QoS Adjustment Functions on page 159](#)
- [Blocking IPv6 Mroutes on page 167](#)
- [Enabling Interface-Level Admission Bandwidth Limitation for IPv6 on page 168](#)
- [Creating IPv6 Mroute Port Limits on page 170](#)
- [Enabling Port-Level Admission Bandwidth Limitation for IPv6 on page 171](#)
- `show ipv6 mroute`

Monitoring Multicast Routes on Virtual Router Ports

Purpose Displays information for multicast routes on a port across all virtual routers.

Action To display the multicast route port outgoing interface, limits, and counts:

`host1#show mroute port count`

BW Port	Priority Limit	Count	bps	BW bps	Hysteresis	Admitted
1/1/0	None	1	None	None	85	0
1/1/1	None	2	15000	10000	85	2000

Meaning [Table 17 on page 207](#) lists the output fields of the `show mroute port count` command.

Table 17: show mroute port count Output Fields

Field Name	Field Description
Port	Slot/port value on the router

Table 17: show mroute port count Output Fields (*continued*)

Field Name	Field Description
Limit	None (reserved for future functionality)
Count	Number of multicast route outgoing interfaces on the specified port
BW bps	Bandwidth limit (in bits per second)
Admitted	Bandwidth admitted on the port (in bits per second)

Related Documentation

- [Example: Configuring an IPv6 Multicast Bandwidth Map on page 155](#)
- [Creating IPv6 Mroute Port Limits on page 170](#)
- [Enabling Port-Level Admission Bandwidth Limitation for IPv6 on page 171](#)
- `show mroute port count`

Monitoring IPv6 Multicast Entries in a Source or Group

Purpose Display information about the number of groups and sources.

- You can specify a multicast group address or both a multicast group address and a multicast source address to display information about a particular multicast forwarding entry.
- You can use the **active** option to display information for the active multicast routes.
- You can specify the bandwidth threshold along with the **active** option to display information for the active multicast routes with admission bandwidth greater than the specified bandwidth threshold. The default bandwidth threshold is 4000 bps.

Action To display the number of groups and sources:

```
host1#show ipv6 mroute count
IPv6 Multicast Routing Table
Counts: 2000 (S, G) entries
        0 (*, G) entries
```

Meaning [Table 18 on page 208](#) lists the `show ipv6 mroute count` command output fields.

Table 18: show ipv6 mroute count Output Fields

Field Name	Field Description
Counts	Number of types of source group mappings: <ul style="list-style-type: none"> • (S,G)—Number of (S,G) entries • (*,G)—Number of (*,G) entries

Related Documentation

- [show ipv6 mroute](#)

Monitoring Join Interface Details when IPv6 OIF Mapping is Configured

Purpose Display details of the join interfaces corresponding to the mapped interfaces when OIF mapping is configured.

- You can specify a multicast group address or both a multicast group address and a multicast source address to display information about a particular multicast forwarding entry.
- You can use the **active** option to display information for the active multicast routes.
- You can specify the bandwidth threshold along with the **active** option to display information for the active multicast routes with admission bandwidth greater than the specified bandwidth threshold. The default bandwidth threshold is 4000 bps.

Action To display details of the join interfaces:

```
host1#show ipv6 mroute oif-detail
IPv6 Multicast Routing Table

(S, G) uptime d h:m:s[, expires d h:m:s]
[Data rate: Kbps] [SPT threshold: Kbps]
[Threshold: Kbps]
[Admission bandwidth: bps]
[QoS bandwidth: bps]
RPF route: addr/mask, incoming interface
           neighbor address, owner route-owner
Incoming interface list:
  Interface (addr/mask), State/Owner [(RPF IIF)]
Outgoing interface list:
  Interface (addr/mask), State/Owner, Uptime/Expires
Join interface list:
  Interface (addr/mask)[, State/Owner]

(2000::1, ff1e::1) uptime 0 00:00:04
Admission bandwidth: 60000000 bps
QoS bandwidth: 0 bps (adaptive)
RPF route: 2000::1/128, incoming interface GigabitEthernet13/1/1
           neighbor 2000::1, owner Local
Incoming interface list:
  GigabitEthernet13/1/1 (fe80::290:1aff:fe42:8e5a/128), Accept/Mld (RPF IIF)

Outgoing interface list:
  GigabitEthernet13/1/4 (fe80::290:1aff:fe42:8e5d/128), Blocked
(intf-adm-limit)/Mld, 0 00:00:04/never
Join interface list:
  GigabitEthernet15/0/1.10 (fe80::290:1aff:fe42:2731/128)

Counts: 1 (S, G) entries
       0 (*, G) entries
```

Meaning [Table 19 on page 210](#) lists the **show ipv6 mroute oif-detail** command output fields.

Table 19: show ipv6 mroute oif-detail Output Fields

Field Name	Field Description
(S,G)	IPv6 addresses of the multicast source and the multicast group
Uptime	Length of time that the (S,G) pair has been active, in <i>days hours:minutes:seconds</i> format
Expires	Length of time for which the (S,G) pair will be active, in <i>days hours:minutes:seconds</i> format
Admission bandwidth	Admission bandwidth (in bps)
QoS bandwidth	QoS bandwidth (in bps)
RPF Route	IPv6 address and prefix of the RPF route
Incoming interface	Type and specifier of the incoming interface for the RPF route
neighbor address	IPv6 address of the neighbor
owner	Owner of the route: <ul style="list-style-type: none"> • Local—route belonging to the local interface • Static—Static route • Other protocols—Route established by a protocol
Incoming interface list	List of incoming interfaces on the router. Details include: <ul style="list-style-type: none"> • Type of interface and its specifier • Action that the interface takes with packets: accept or discard • Multicast protocol that owns the interface • Time that the interface has been active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format • Time that the interface will cease to be active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format

Table 19: show ipv6 mroute oif-detail Output Fields (*continued*)

Field Name	Field Description
Outgoing interface list	<p>List of outgoing interfaces on the router. Details include:</p> <ul style="list-style-type: none"> Type of interface and its specifier Action that the interface takes with packets: Forward or Blocked (intf-adm-limit, join-intf-adm-limit, port-adm-limit, port-limit, port-priority-limit) Protocol running on the interface: PIM or MLD Time that the interface has been active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format Time that the interface will cease to be active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format
Join interface list	<p>List of join interfaces on the router. Details include:</p> <ul style="list-style-type: none"> Type of interface and its specifier Action that the interface takes with packets: Forward or Blocked (intf-adm-limit, join-intf-adm-limit, port-adm-limit, port-limit, port-priority-adm-limit) Protocol running on the interface: PIM, DVMRP, or IGMP Amount of time that the interface has been active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format Length of time that the interface can remain active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format or <i>never</i>
Counts	<p>Numbers of types of source group mappings:</p> <ul style="list-style-type: none"> (S,G)—Number of (S,G) entries (*G)—Number of (*G) entries

Related Documentation

- [Defining IPv6 Static Routes for Reverse-Path Forwarding on page 149](#)
- [Example: Configuring an IPv6 Multicast Bandwidth Map on page 155](#)
- [Activating IPv6 Multicast QoS Adjustment Functions on page 159](#)
- [Blocking IPv6 Mroutes on page 167](#)
- [Enabling Interface-Level Admission Bandwidth Limitation for IPv6 on page 168](#)
- [Creating IPv6 Mroute Port Limits on page 170](#)
- [Enabling Port-Level Admission Bandwidth Limitation for IPv6 on page 171](#)
- [show ipv6 mroute](#)

Monitoring IPv6 Multicast Statistics

Purpose Display statistics for packets received through multicast routes that the router has added to the multicast routing table and established on the appropriate line modules.

- You can specify a multicast group address or both a multicast group address and a multicast source address to display information about a particular multicast forwarding entry.
- You can use the **active** option to display information for the active multicast routes.
- You can specify the bandwidth threshold along with the **active** option to display information for the active multicast routes with admission bandwidth greater than the specified bandwidth threshold. The default bandwidth threshold is 4000 bps.

Action To display the statistics of the multicast routes added to the multicast routing table:

```
host#show ipv6 mroute statistics
IPv6 Multicast Routing Table

(S, G) uptime d h:m:s[, expires d h:m:s]
[Admission bandwidth: bps]
[QoS bandwidth: bps]
RPF route: addr/mask, incoming interface
          neighbor address, owner route-owner
Incoming interface list:
  Interface (addr/mask), State/Owner [(RPF IIF)]
Outgoing interface list:
  Interface (addr/mask), State/Owner, Uptime/Expires

(10:0:0:1:1::, ff0e::1) uptime 0 01:05:23
Admission bandwidth:
RPF route: 10:0:0:1::/64, incoming interface ATM2/3.1001
          neighbor 10:0:0:1::1, owner Local
Incoming interface list:
  ATM2/3.1001 (10:0:0:1::1/64), Accept/Pim (RPF IIF)
Outgoing interface list:
  ATM2/0.200 (21:2:2:21::2:1/60), Forward/Pim, 0 01:05:23/never
Statistics:
  Received    : 346 pkts, 22144 bytes
  Forwarded   : 346 pkts, 22144 bytes
  Rcvd on OIF: 0 pkts

(10:0:0:1:2::, ff0e::1) uptime 0 01:05:23
RPF route: 10:0:0:1::/64, incoming interface ATM2/3.1001
          neighbor 10:0:0:1::1, owner Local
Incoming interface list:
  ATM2/3.1001 (10:0:0:1::1/64), Accept/Pim (RPF IIF)
Outgoing interface list:
  ATM2/0.200 (21:2:2:21::2:1/60), Forward/Pim, 0 01:05:26/never
Statistics:
  Received    : 346 pkts, 22144 bytes
  Forwarded   : 346 pkts, 22144 bytes
  Rcvd on OIF: 0 pkts
```

Meaning [Table 20 on page 213](#) lists the **show ipv6 mroute statistics** command output fields.

Table 20: show ipv6 mroute statistics Output Fields

Field Name	Field Description
(S,G)	IPv6 addresses of the multicast source and the multicast group
Uptime	Length of time that the (S,G) pair has been active, in <i>days hours:minutes:seconds</i> format
Expires	Length of time for which the (S,G) pair will be active, in <i>days hours:minutes:seconds</i> format
Admission bandwidth	Admission bandwidth (in bps)
QoS bandwidth	QoS bandwidth (in bps)
RPF Route	IPv6 address and prefix of the RPF route
Incoming interface	Type and specifier of the incoming interface for the RPF route
neighbor address	IPv6 address of the neighbor
owner	Owner of the route: <ul style="list-style-type: none"> • Local—route belonging to the local interface • Static—Static route • Other protocols—Route established by a protocol
Incoming interface list	List of incoming interfaces on the router. Details include: <ul style="list-style-type: none"> • Type of interface and its specifier • Action that the interface takes with packets: accept or discard • Multicast protocol that owns the interface • Time that the interface has been active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format • Time that the interface will cease to be active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format

Table 20: show ipv6 mroute statistics Output Fields (*continued*)

Field Name	Field Description
Outgoing interface list	<p>List of outgoing interfaces on the router. Details include:</p> <ul style="list-style-type: none"> Type of interface and its specifier Action that the interface takes with packets: Forward or Blocked (intf-adm-limit, join-intf-adm-limit, port-adm-limit, port-limit, port-priority-limit) Protocol running on the interface: PIM or MLD Time that the interface has been active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format Time that the interface will cease to be active in this multicast forwarding entry, in <i>days hours:minutes:seconds</i> format
Statistics	<ul style="list-style-type: none"> Received—Number of packets and bytes that the virtual router received for this multicast route Forwarded—Number of packets and statistics that the virtual router has forwarded for this multicast route Rcvd on OIF—Number of packets and statistics that the virtual router has received on the OIF for this multicast route <p>NOTE: The display shows statistics after the virtual router has added the multicast route to the multicast routing table and established the route on the appropriate line module. Statistics for interactions before the route is established on the line module are not displayed.</p>

- Related Documentation**
- [Defining IPv6 Static Routes for Reverse-Path Forwarding on page 149](#)
 - [Example: Configuring an IPv6 Multicast Bandwidth Map on page 155](#)
 - [Activating IPv6 Multicast QoS Adjustment Functions on page 159](#)
 - [Blocking IPv6 Mroutes on page 167](#)
 - [Enabling Interface-Level Admission Bandwidth Limitation for IPv6 on page 168](#)
 - [Creating IPv6 Mroute Port Limits on page 170](#)
 - [Enabling Port-Level Admission Bandwidth Limitation for IPv6 on page 171](#)
 - [show ipv6 mroute](#)

Monitoring Summary Information of IPv6 Multicast Routes

Purpose Display a summary of all or specified multicast routes.

- You can specify a multicast group address or both a multicast group address and a multicast source address to display information about a particular multicast forwarding entry.
- You can use the **active** option to display information for the active multicast routes.
- You can specify the bandwidth threshold along with the **active** option to display information for the active multicast routes with admission bandwidth greater than the specified bandwidth threshold. The default bandwidth threshold is 4000 bps.

Action To display a summary of all multicast routes:

```
host1#show ipv6 mroute summary
```

IPv6 Multicast Routing Table

Group Address	Source Address	RPF route	RPF Iif	#Oifs
ff0e::1	10:0:0:1:1::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:2::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:3::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:4::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:5::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:6::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:7::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:8::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:9::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:a::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:b::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:c::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:d::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:e::	10:0:0:1::/64	ATM2/3.1001	1
ff0e::1	10:0:0:1:f::	10:0:0:1::/64	ATM2/3.1001	1

Counts: 16 (S, G) entries

0 (*, G) entries

Meaning [Table 21 on page 215](#) lists the **show ipv6 mroute summary** command output fields.

Table 21: show ipv6 mroute summary Output Fields

Field Name	Field Description
Group Address	IP address of the multicast group
Source Address	IP address of the multicast source
RPF Route	IP address and network mask of the RPF route
RPF Iif	Type and identifier for the incoming interface for the RPF route
#Oifs	Number of outgoing interfaces
Counts	Numbers of types of (S,G) mappings: <ul style="list-style-type: none"> • (S,G)—Number of (S,G) entries • (*G)—Number of (*G) entries

- Related Documentation**
- [Defining IPv6 Static Routes for Reverse-Path Forwarding on page 149](#)
 - `show ipv6 mroute`

Monitoring IPv6 Multicast Protocols Enabled on the Router

Purpose Display information about multicast protocols enabled on the router.

Action To display information about enabled multicast protocols:

```
host1:2#show ipv6 multicast protocols
```

```
Multicast protocols:
```

```
Protocol Pim
```

```
Type: Sparse
```

```
Interfaces: 1 registered, 1 owned
```

```
Registered interfaces:
```

```
ATM2/1.103 (21:2:2:22::1:2/60) owner Pim
```

```
Protocol Mld
```

```
Type: Local
```

```
Interfaces: 1000 registered, 1000 owned
```

```
Registered interfaces:
```

```
ATM2/0.131 (31:2:2:22::2:2/604) local Mld owner Mld
```

```
Admission-bandwidth 2000000/10000000 bps
```

```
QoS Adjust 2000 bps
```

```
ATM2/0.132 (31:2:2:22::2:3/60) local Mld owner Mld
```

```
Admission-bandwidth 0/10000000 bps
```

```
QoS Adjust 0 bps
```

```
ATM2/0.133 (31:2:2:22::2:4/60) local Mld owner Mld
```

```
Admission-bandwidth 8000000/10000000 bps, 2 Blocked OIFs
```

```
QoS Adjust 0 bps
```

```
...
```

```
Count: 2 protocols
```

Meaning [Table 22 on page 216](#) lists the `show ipv6 multicast protocols` command output fields.

Table 22: show ipv6 multicast protocols Output Fields

Field Name	Field Description
Protocol	Name of the multicast protocol
Type	Mode of the multicast protocol: <ul style="list-style-type: none"> • For PIM—Sparse • For MLD—Local
Interfaces	<ul style="list-style-type: none"> • registered—Number of interfaces on which the protocol is configured • owned—Number of interfaces that a protocol owns. If you configure only MLD on an interface, MLD owns the interface. However, if you configure MLD and PIM on the same interface, PIM owns the interface.

Table 22: show ipv6 multicast protocols Output Fields (*continued*)

Field Name	Field Description
Registered interfaces	<p>Includes the following information about interfaces on which the protocol is configured:</p> <ul style="list-style-type: none"> Types and identifiers of interfaces. For details about interface types and specifiers, see <i>Interface Types and Specifiers</i> in <i>JunosE Command Reference Guide</i>. Protocols configured on the interface and the protocol that owns the interface. If you configure only MLD on an interface, MLD owns the interface. However, if you configure MLD and PIM on the same interface, PIM owns the interface. Admitted bandwidth / configured admission bandwidth (in bps) Number of blocked OIFs QoS adjustment bandwidth (in bps)
Count	Number of multicast protocols on the virtual router

Related Documentation

- [Example: Configuring an IPv6 Multicast Bandwidth Map on page 155](#)
- [Activating IPv6 Multicast QoS Adjustment Functions on page 159](#)
- [Enabling Interface-Level Admission Bandwidth Limitation for IPv6 on page 168](#)
- [Enabling Port-Level Admission Bandwidth Limitation for IPv6 on page 171](#)
- `show ipv6 multicast protocols`

Monitoring Summary Information of IPv6 Multicast Protocols Enabled on the Router

Purpose Display information about multicast protocols enabled on the router.

Action To display a summary of information about multicast protocols enabled on the router:

```
host1#show ipv6 multicast protocols brief
Protocol Registered Owned      Type
          Interfaces Interfaces
-----
Pim       1           1      Sparse
Mld       1           1      Local
Count: 2 protocols
```

Meaning [Table 23 on page 217](#) lists the `show ipv6 multicast protocols brief` command output fields.

Table 23: show ipv6 multicast protocols brief Output Fields

Field Name	Field Description
Protocol	Name of the multicast protocol

Table 23: show ipv6 multicast protocols brief Output Fields (*continued*)

Field Name	Field Description
Registered Interfaces	Number of interfaces on which the protocol is configured
Owned Interfaces	Number of interfaces that a protocol owns. If you configure only MLD on an interface, MLD owns the interface. However, if you configure MLD and PIM on the same interface, PIM owns the interface
Type	Mode of the multicast protocol: <ul style="list-style-type: none"> • For PIM—Sparse • For MLD—Local
Count	Number of multicast protocols on the virtual router

Related Documentation

- [show ipv6 multicast protocols](#)

Monitoring IPv6 Multicast Status on a Virtual Router

Purpose Display information about the status of IPv6 multicast on the virtual router.

Action To display information about the status of IPv6 multicast on the virtual router:

```
host1#show ipv6 multicast routing
```

```
Multicast forwarding is enabled on this router
```

```
Multicast graceful restart is complete (timer 0 seconds) on this router
```

```
Multicast cache-miss processing is enabled on this router
```

```
Multicast forwarding is enabled on this router
```

```
Multicast graceful restart is complete (timer 0 seconds) on this router
```

```
Multicast cache-miss processing is enabled on this router
```

Related Documentation

- [Enabling IPv6 Multicast on page 149](#)
- [show ipv6 multicast routing](#)

CHAPTER 7

Configuring MLD and MLD Proxy

Hosts use Multicast Listener Discovery (MLD) protocol in IPv6 to report their multicast group memberships to neighboring routers. Similarly, multicast routers, such as the E Series router, use MLD to discover which of their hosts belong to multicast groups.

This chapter describes how to configure MLD and MLD proxy on an E Series router; it contains the following sections:

- [MLD Overview on page 219](#)
- [MLD Platform Considerations on page 221](#)
- [MLD References on page 222](#)
- [Static and Dynamic MLD Interfaces on page 222](#)
- [Enabling MLD on an Interface on page 223](#)
- [Configuring MLD Settings on an Interface on page 224](#)
- [Configuring Multicast Groups for MLD on page 226](#)
- [MLD SSM Mapping Overview on page 230](#)
- [Overview of Limiting the Number of Accepted MLD Groups on page 230](#)
- [MLD Traffic Overview on page 231](#)
- [MLD Explicit Host Tracking Overview on page 231](#)
- [Configuring MLD Attributes on page 233](#)
- [MLD Proxy Overview on page 236](#)
- [Configuring MLD Proxy on page 237](#)
- [Establishing the MLD Proxy Baseline on page 238](#)

MLD Overview

The IPv6 address scheme uses hexadecimal FF at the start of an address for IPv6 multicast. Multicast Listener Discovery (MLD) is a protocol that uses these addresses. The following addresses have specific functions:

- You can assign only multicast addresses of global-scope (that is, containing an FFxE prefix, where x is the flags field) to a multicast group.
- FF02::1 is the link-scope all-nodes address—A packet sent to this address reaches all nodes on a subnetwork.

- FF02::2 is the link-scope all-routers address—A packet sent to this address reaches all routers on a subnetwork.
- FF02::16 is the link-scope all-MLDv2 routers address—A packet sent to this address reaches all MLDv2 routers on a subnetwork.

This implementation of MLD complies with MLD versions 1 and 2. MLDv2 allows for source-specific join and leave messages and is backward compatible with MLDv1. Configuring MLDv1 with the SSM mapping feature provides support for source-specific joins.

MLDv1 mode interfaces exchange the following types of messages between routers and hosts:

- [Multicast Listener Queries on page 220](#)
- [Multicast Listener Reports on page 221](#)
- [Multicast Listener Done Messages on page 221](#)

MLDv2 mode interfaces exchange the following types of messages with MLDv2 hosts:

- [Multicast Listener Queries on page 220](#)
- MLDv2 "[Multicast Listener Reports](#)" on page 221

Multicast Listener Queries

A multicast router can be a querier or a nonquerier. There is only one querier on a network at any time. Multicast routers monitor queries from other multicast routers to determine the status of the querier. If the querier hears a query from a router with a lower IPv6 address, it relinquishes its role to that router.

MLDv1 and MLDv2 mode interfaces send two types of multicast listener queries to hosts on the network:

- General queries to the all-nodes address (FF02::1)
- Specific queries to the appropriate multicast group address

MLDv2 mode interfaces send the following type of queries to MLDv2 hosts:

- General queries
- Group-specific queries
- Source-specific queries

The purpose of a membership group query is to discover the multicast groups to which a host belongs.

MLDv1 and MLDv2 multicast listener queries have a Max Response Time field. This response time is the maximum that a host can take to reply to a query.

Multicast Listener Reports

When a host receives a multicast listener query, it identifies the groups associated with the query and determines to which groups it belongs. The host then sets a timer, with a value less than the Max Response Time field in the query, for each group to which it belongs.

When the timer expires, the host sends a multicast listener report to the group address. When a multicast router receives a report, it adds the group to the membership list for the network and sets a timer to the *multicast address listening interval*. If this timer expires before the router receives another multicast listener report, the router determines that the group has no members left on the network.

If the router does not receive any reports for a specific multicast group within the *maximum response time*, it determines that the group has no members on the network. The router does not forward subsequent multicasts for that group to the network.

MLDv2 supports an extended report format that allows you to report multiple groups and source lists in a single report. These reports are addressed to the all-MLDv2 router's multicast address (FF02::16).

Multicast Listener Done Messages

When an MLDv1 host leaves a group, it sends a multicast listener done message to multicast routers on the network. A host generally addresses multicast listener done messages to the all-routers address, FF02::2.

When an MLDv2 host leaves a group, it sends a multicast listener report. This report includes an empty source list for that group.

- Related Documentation**
- [MLD Platform Considerations on page 221](#)
 - [MLD References on page 222](#)

MLD Platform Considerations

For information about modules that support MLD on the ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support MLD.

For information about modules that support MLD on the E120 and E320 Broadband Services Routers:

- See *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about the modules that support MLD.

- Related Documentation**
- [MLD Overview on page 219](#)
 - [MLD References on page 222](#)

MLD References

For more information about MLD, see the following resources:


- RFC 3710—Multicast Listener Discovery (MLD) for IPv6 (October 1999) on page 578
- IGMP/MLD-based Multicast Forwarding ('IGMP/MLD Proxying')—draft-ietf-magma-igmp-proxy-06.txt (October 2004 expiration) on page 587
- Multicast Group Membership Discovery MIB—draft-ietf-magma-mgmd-mib-06.txt (October 2004 expiration) on page 587

- Related Documentation**
- [MLD Overview on page 219](#)
 - [MLD Platform Considerations on page 221](#)

Static and Dynamic MLD Interfaces

The router supports *static* and *dynamic* Multicast Listener Discovery (MLD) interfaces. Unlike static interfaces, dynamic interfaces are not restored when you reboot the router. For some protocols, dynamic layers can build on static layers in an interface; however, in a dynamic MLD interface, all the layers are dynamic. See [Figure 19 on page 222](#) for examples of static and dynamic MLD interfaces.

Figure 19: Static and Dynamic MLD Interfaces

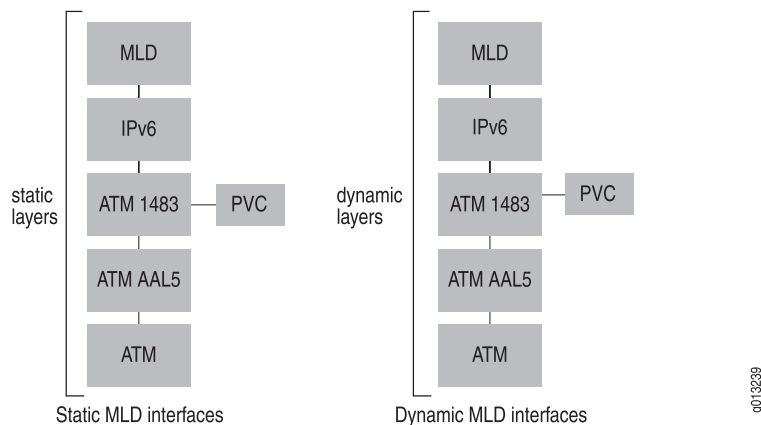

Static MLD interfaces are configured with software such as the command-line interface (CLI) or an SNMP application; dynamic MLD interfaces are configured with a profile. A profile comprises a set of attributes for an interface; a profile for dynamic MLD interfaces contains attributes for configuring all the layers in the interface.

You define a profile by using the same CLI commands that you use to configure a static MLD interface; however, the mode in which you use the commands differs. Use the commands in Interface Configuration mode to configure a static MLD interface and in Profile Configuration mode to define a profile.

When you have defined a profile, you can apply it to an interface or a group of interfaces. Profiles provide an efficient method of creating and managing large numbers of dynamic interfaces. For detailed information about creating and assigning profiles, see *Configuring Dynamic Interfaces* in the *JunosE Link Layer Configuration Guide*. When you create a profile for dynamic MLD interfaces, specify attributes for configuring all layers in the interface.

You use the MLD commands shown in [Table 24 on page 223](#) to configure a static MLD interface. You also use these commands to define the attributes for the MLD layer when you create a profile for dynamic MLD interfaces.

Table 24: Static MLD Commands

ipv6 mld	ipv6 mld query-interval
ipv6 mld access-group	ipv6 mld query-max-response-time
ipv6 mld access-source-group	ipv6 mld robustness
ipv6 mld explicit-tracking	ipv6 mld static-include
ipv6 mld group limit	ipv6 mld static-exclude
ipv6 mld immediate-leave	ipv6 mld static-group
ipv6 mld last-member-query-interval	ipv6 mld version
ipv6 mld querier-timeout	

You can also use various MLD-specific RADIUS attributes in RADIUS Access-Accept messages as an alternative method of configuring certain values. See *Juniper Networks VSAs Supported for Subscriber AAA Access Messages* for additional information.

Related Documentation

- [MLD Overview on page 219](#)
- [MLD Platform Considerations on page 221](#)
- [MLD References on page 222](#)

Enabling MLD on an Interface

You must start MLD on each interface that you want to use the protocol. You can configure MLD and PIM on the same interface. If you configure only MLD on an interface, the router determines that MLD owns that interface. If you configure MLD and PIM on an interface, the router determines that PIM owns the interface.

In an MLDv1 or MLDv2 network, the querier is the router with the lowest IPv6 address.



NOTE: You can configure MLD only on IPv6 interfaces. For information about configuring IPv6 interfaces, see *Configuring IPv6* in the *JunosE IP, IPv6, and IGP Configuration Guide*.

To start MLD and set the MLD version on the interface, complete the following steps:

1. Enable MLD on the interface (MLDv2 is the default version).

```
host1:boston(config-if)#ipv6 mld
```

Use the **no** version to disable MLD on an interface.

2. (MLDv1) Specify the MLD version for the interface.

```
host1:boston(config-if)#ipv6 mld version 1
```

Use the **no** version to set the version to the default, MLDv2.

**Related
Documentation**

- [Monitoring MLD Information on a Virtual Router on page 241](#)
- [Monitoring MLD Groups on page 242](#)
- [Monitoring MLD Interfaces on page 244](#)
- `ipv6 mld`
- `ipv6 mld version`

Configuring MLD Settings on an Interface

When you start MLD on an interface, it operates with the default settings. You can, however, modify:

- The method that the router uses to remove hosts from multicast groups
- The time interval at which the querier sends multicast listener queries
- The time that a querier waits before sending a new query to hosts from which it receives multicast listener done messages
- The time that a non-querier waits for queries from the current querier before sending query messages to assume responsibility of querier
- The time that a host can take to reply to a query (maximum response time)
- The number of times that the router sends each MLD message from this interface



NOTE: You can configure MLD only on IPv6 interfaces. For information about configuring IPv6 interfaces, see *Configuring IPv6* in the *JunosE IP, IPv6, and IGP Configuration Guide*.

To configure MLD settings for an interface:

- Enable the immediate-leave feature.

```
host1:boston(config-if)#ipv6 mld immediate-leave
```

The router immediately removes a host from a multicast group after receiving a multicast listener done message from the host associated with this interface.

Use the **no** version to restore the default behavior, in which the router removes a host from a multicast group if that host does not return a multicast listener report within a certain length of time after receiving a multicast listener query from the router.



CAUTION: Issue this command only on MLD interfaces to which one MLD host is connected. If more than one MLD host is connected to a LAN through the same interface, and one host sends a done message, the router removes all hosts on the interface from the multicast group. The router loses contact with the hosts that should remain in the multicast group until they send join requests in response to the router's next general multicast listener query.



NOTE: As an alternative method, you can configure the immediate-leave feature using the MLD-Immediate-Leave RADIUS attribute (VSA 26-100) in RADIUS Access-Accept messages. The RADIUS setting takes precedence over a CLI setting. The `radius ignore` command is used to ignore or accept RADIUS attributes from Access-Accept messages.

- Configure the last member query interval, which specifies the maximum time the router will wait for a response after sending a last member query. Using a lower value allows members to leave groups more quickly.

```
host1:boston(config-if)#ipv6 mld last-member-query-interval 90
```

Use the **no** version to restore the default, 10-tenths of a second (1 second).

- Configure the time that the interface waits before declaring itself as the querier.

```
host1:boston(config-if)#ipv6 mld querier-timeout 200
```

Use the **no** version to set the time to the default, twice the query interval.

- Configure the query interval, which specifies how often the router sends MLD host-query packets from the interface.

```
host1:boston(config-if)#ipv6 mld query-interval 100
```

Use the **no** version to set the polling interval to the default, 125 seconds.



NOTE: As an alternative method, you can configure the query interval using the MLD-Query-Interval RADIUS attribute (VSA 26-98) in RADIUS Access-Accept messages. The RADIUS setting takes precedence over a CLI setting. The `radius ignore` command is used to ignore or accept RADIUS attributes from Access-Accept messages.

- Configure the maximum response time, which specifies the period during which the host is expected to respond to an MLD query. MLDv1 and MLDv2 include this value in MLD query messages sent out on the interface. Using a lower value allows members to join and leave groups more quickly.

host1:boston(config-if)#ipv6 mld query-max-response-time 120

Use the **no** version to restore the default, 100 tenths of a second (10 seconds).



NOTE: As an alternative method, you can configure the query maximum response time using the MLD-Query-Max-Resp-Time RADIUS attribute (VSA 26-99) in RADIUS Access-Accept messages. The RADIUS setting takes precedence over a CLI setting. The **radius ignore** command is used to ignore or accept RADIUS attributes from Access-Accept messages.

- Configure the robustness value, which specifies the number of times that the router sends MLD group-specific queries before declaring a group to no longer have any members on the interface.

host1:boston(config-if)#ipv6 mld robustness 2

Use the **no** version to restore the default, 3.

**Related
Documentation**

- [Monitoring MLD Interfaces on page 244](#)
- [Monitoring Summary Information for MLD Interfaces on page 248](#)
- Juniper Networks VSAs Supported for Subscriber AAA Access Messages
- CLI Commands Used to Include or Exclude Attributes in RADIUS Messages
- `ipv6 mld immediate-leave`
- `ipv6 mld last-member-query-interval`
- `ipv6 mld querier-timeout`
- `ipv6 mld query-interval`
- `ipv6 mld query-max-response-time`
- `ipv6 mld robustness`
- `radius ignore`

Configuring Multicast Groups for MLD

You can configure various attributes related to MLD multicast groups. This topic describes how to configure multicast group attributes.



NOTE: You can configure MLD only on IPv6 interfaces. For information about configuring IPv6 interfaces, see *Configuring IPv6* in the *JunosE IP, IPv6, and IGP Configuration Guide*.

- [Specifying MLD Multicast Groups on page 227](#)
- [Assigning an MLD Multicast Group to an Interface on page 228](#)
- [Configuring MLD Group Outgoing Interface Mapping on page 228](#)

Specifying MLD Multicast Groups

You can use a standard IPv6 access list to specify the multicast groups that a host can join.

To restrict the host to join only the groups permitted by the IPv6 access list:

- Restrict hosts on this subnetwork to join only multicast groups on the specified IPv6 access list. The access list is queried whenever the router receives an MLDv1 report requesting membership of a group and MLDv2 ChangeToInclude, IsInclude, ChangeToExclude, or IsExclude reports. The request is ignored if the access list query fails. The **ipv6 mld access-group** command uses IPv6 access lists, which allow both source and destination/group addresses to be specified. You must set the source address to any.

```
host1:boston(config-if)#ipv6 mld access-group boston-list
```

Use the **no** version to dissociate the interface from an access list and to allow hosts on the interface to join any multicast group.



NOTE: As an alternative method, you can restrict the hosts using the MLD-Access-Name RADIUS attribute (VSA 26-74) in RADIUS Access-Accept messages. The **radius ignore** command is used to ignore or accept RADIUS attributes from Access-Accept messages.

- Restrict hosts on this subnetwork to membership only in (S,G) pairs (also known as channels) permitted by the specified IPv6 access list. When configured, both source and group addresses query the associated access list whenever the router receives an MLDv2 report requesting membership of the (S,G) pairs (that is, the router receives an MLDv2 ChangeToInclude, IsInclude, or AllowNewSource group report). The request is ignored if the access list query fails. The **ipv6 mld access-source-group** command uses IPv6 access lists, which allow both source and destination group addresses to be specified.

```
host1:boston(config-if)#ipv6 mld access-source-group dallas-list
```

Use the **no** version to remove any access list restriction.



NOTE: As an alternative method, you can restrict the hosts using the MLD-Access-Src-Name RADIUS attribute (VSA 26-75) in RADIUS Access-Accept messages. The `radius ignore` command is used to ignore or accept RADIUS attributes from Access-Accept messages.

Assigning an MLD Multicast Group to an Interface

You can assign an interface to send and receive all traffic for a particular multicast group. This feature allows you to control MLD traffic and to test the behavior of multicast protocols in the network.

To send and receive all traffic for a multicast group from the interface:

- Issue the **ipv6 mld static-group** command in Interface Configuration mode. The interface sets no timers for this group.

```
host1:boston(config-if)#ipv6 mld static-group ff0e::1
```

Use the **no** version to remove the group from the interface.

Configuring MLD Group Outgoing Interface Mapping

You can configure an MLD protocol interface to use a different OIF for multicast-data-forwarding by applying an OIF map. When you configure an OIF map on an MLD protocol interface, the map is applied to all MLD membership requests that the interface receives. To configure OIF mapping on an interface, you first create the OIF map using the **ipv6 mld oif-map** command and then apply that map to an interface with the **ipv6 mld apply-oif-map** command.

To properly configure an interface used in the OIF map for multicast-data-forwarding capability, you must configure the interface version as passive with the **ipv6 mld version** command. You can either specify a passive interface as the OIF or specify the OIF as *self* (to use the MLD protocol interface as the OIF) in the **ipv6 mld oif-map** command.

To configure group outgoing interface mapping:

- Create an OIF map.

```
host1(config)#ipv6 mld oif-map OIFMAP atm 3/0.1 ff0e::1:1/128 2001::1:1/128
host1(config)#ipv6 mld oif-map OIFMAP atm 3/0.2 ff0e::1:1/128 2001::1:1/128
host1(config)#ipv6 mld oif-map OIFMAP atm 3/0.3 ff0e::1:1/128
host1(config)#ipv6 mld oif-map OIFMAP atm 3/0.4 ff0e::1:0/112 2001::1:1/128
host1(config)#ipv6 mld oif-map OIFMAP atm 3/0.5 ff0e::1:0/112 2001::1:1/128
host1(config)#ipv6 mld oif-map OIFMAP self ::/0 2001::1:0/112
```

Use the **no** version to remove an outgoing interface map attribute.



NOTE: As an alternative method, you can create the OIF map using the MLD-OIF-Map-Name RADIUS attribute (VSA 26-76) in RADIUS Access-Accept messages. The `radius ignore` command is used to ignore or accept RADIUS attributes from Access-Accept messages.

2. Apply the created OIF map to the current interface.

```
host1(config-subif)#ipv6 mld apply-oif-map OIFMAP
```

Use the **no** version to remove the outgoing interface map association from the interface.

3. Configure the MLD version for the interface as passive with only multicast-data-forwarding capability.

```
host1:dallas(config-if)#ipv6 mld version passive
```

Use the **no** version to set the version to the default, MLDv2.



NOTE: As an alternative method, you can configure the MLD version using the MLD-Version RADIUS attribute (VSA 26-77) in RADIUS Access-Accept messages. The `radius ignore` command is used to ignore or accept RADIUS attributes from Access-Accept messages.

Related Documentation

- [Overview of Limiting the Number of Accepted MLD Groups on page 230](#)
- [Limiting the Number of Accepted MLD Groups on page 233](#)
- [Monitoring MLD Groups on page 242](#)
- [Monitoring MLD Interfaces on page 244](#)
- [Monitoring MLD on Mapped Outgoing Interfaces on page 249](#)
- [Monitoring MLD on Outgoing Interfaces on page 249](#)
- [Monitoring MLD Membership for Multicast Groups on page 250](#)
- [Monitoring MLD Information for Mapped Outgoing Interfaces on page 252](#)
- [Juniper Networks VSAs Supported for Subscriber AAA Access Messages](#)
- [CLI Commands Used to Include or Exclude Attributes in RADIUS Messages](#)
- `ipv6 mld access-group`
- `ipv6 mld access-source-group`
- `ipv6 mld apply-oif-map`
- `ipv6 mld oif-map`
- `ipv6 mld static-group`
- `ipv6 mld version`
- `radius ignore`

MLD SSM Mapping Overview

Source-specific multicast (SSM) mapping enables the router to determine one or more source addresses for group G. The mapping effectively translates an Multicast Listener Discovery version 1 (MLDv1) multicast listener report to an MLDv2 report, enabling the router to continue as if it had initially received an MLDv2 report. After the router is joined to these groups, it sends out Protocol Independent Multicast (PIM) join messages and continues to enable joining from these groups, as long as it continues to receive MLDv1 membership reports and no change occurs to the SSM mapping for the group.

When you statically configure SSM mapping, the router can discover source addresses from a statically configured table.

The following applies when you configure SSM mapping:

- When enabled, and either you have not configured a static SSM map or the router cannot find any matching access lists, the router continues to accept (*G) groups. The PIM SSM range must deny any unacceptable SSM group addresses.
- When you issue the **no ipv6 mld ssm-map enable** command, the router removes all SSM map (S,G) states and establishes a (*G) state.
- You can enter multiple **ipv6 mld ssm-map static** commands for different access lists. Also, you can enter multiple **ipv6 mld ssm-map static** commands for the same access list, as long as the access list uses different source addresses.
- SSM maps do not process statically configured groups.

Related Documentation

- [Configuring MLD SSM Mapping on page 233](#)
- `ipv6 mld ssm-map enable`
- `ipv6 mld ssm-map static`

Overview of Limiting the Number of Accepted MLD Groups

By default, there is no limit on the number of MLD groups that an MLD interface can accept. However, you can manage multicast traffic on the router by restricting the number of MLD groups accepted by:

- A specific port on an I/O module
- A specific MLD interface

If you set limits for both a port and interfaces on that port, the router uses the lower of the two limits when determining how many MLD groups an interface can accept. For example, if you set a limit of 10 groups for the port and 15 groups for each interface, the router allows only 10 groups to be accepted among the interfaces.

However, if you set a limit for a port and that limit is lower than the number of groups currently accepted by the interfaces on that port, the router does not dissociate the groups from the interfaces. The router enforces the new limit on the port when the number

of groups associated with the interfaces falls to that limit. For example, if the interfaces on the port have accepted a total of 15 groups, and you set a limit of 10 groups on the port, the router does not disconnect any of the groups and does not allow the interfaces to accept any more groups. Over time, some groups leave the interfaces and, eventually, a maximum of ten groups remains connected.

**Related
Documentation**

- [Configuring Multicast Groups for MLD on page 226](#)
- [Limiting the Number of Accepted MLD Groups on page 233](#)

MLD Traffic Overview

MLDv2 extends MLDv1 functionality with the ability to include or exclude specific multicast traffic sources. That is, with MLDv2, hosts signal (S,G) pairs that they want to include or exclude.

For hosts that cannot signal group membership dynamically, you can use the **ipv6 mld static-include** or **ipv6 mld static-exclude** command to statically include or exclude multicast traffic, respectively.

MLDv2 is the industry-designated standard protocol for hosts to signal channel subscriptions in SSM. For additional information about SSM, see [“PIM Source-Specific Multicast” on page 87](#).

**Related
Documentation**

- [Including and Excluding MLD Traffic on page 234](#)

MLD Explicit Host Tracking Overview

Explicit host tracking enables the router to explicitly track each individual host that is joined to a group or channel on a particular multi-access network.

Explicit host tracking provides the following benefits:

- Minimal leave latency when a host leaves a multicast group or channel. When the router receives a leave message for a group or channel on an interface, it accesses a list of hosts and immediately stops forwarding traffic if the sender is the last host to request traffic for that group or channel. The leave latency is bound only by the packet transmission latencies in the multi-access network and the processing time in the router.
- Ability to change channels quickly in networks where bandwidth is constrained between a multicast-enabled router and hosts.
- Ability to determine what multicast hosts are joined to particular multicast groups or channels; this is useful for accounting purposes.

- Reduction of control message traffic on the network because, when it receives a leave message, the router no longer needs to send out MLD queries to verify membership. As a result, interested hosts also do not need to respond to these queries with reports.
- Tracking based on MLD reports for hosts in both include and exclude modes for every multicast group or channel on an interface.

When the router is configured for explicit host tracking and starts performing immediate leave using the host information collected, every leave message received for a group or channel is treated as follows:

- The router checks the number of hosts that receive traffic from this group or channel.
- If the host sending the leave message is the only host, it performs immediate leave for that group or channel on that interface. The router removes the interface from the multicast group or channel immediately, without sending out a group or group-source specific query and waiting for the last member query interval.
- If the host sending the leave message is not the only host receiving traffic for that group or channel, the router removes the host from the list of hosts on that interface, but keeps the interface in the outgoing interface list for the multicast group or channel. No group or group-source specific queries are sent.

You can enable Multicast Listener Discovery (MLD) explicit host tracking on an interface only if MLD V1 or V2 has been previously enabled on the interface. Explicit host tracking is not enabled by default when you enable MLD on the interface. Explicit host tracking cannot be configured on passive MLD interfaces.

When you enable explicit host tracking on an interface that has a membership state, the router does not immediately start performing immediate leave. For a maximum of group membership interval seconds, the router only performs host tracking. Any leave messages that the router receives during this period receive normal leave processing. Any leave messages received after this interval has elapsed receive immediate leave processing, when appropriate.

When explicit host tracking is enabled on an MLD V2 interface, even if a group has to downgrade to MLD V1 due to the presence of an MLD V1 host, explicit host tracking continues for that group. To avoid this, you can use the **disable-if-mld-v1-detected** keyword. If you select this option, the router turns off explicit host tracking for the group when MLD V1 host reports are received for the group on that interface. This option does not have any significance on an interface configured for MLD V1 and is ignored if selected.

If you execute the command on an interface that was previously enabled for immediate-leave, the configuration is accepted, immediate-leave is turned off and an appropriate warning message logged. Any attempt to configure immediate-leave on an interface that has explicit host tracking enabled is rejected and an error message logged.

**Related
Documentation**

- [Configuring MLD Explicit Host Tracking on page 235](#)

Configuring MLD Attributes

You can configure MLD Attributes using the following set of tasks:



NOTE: You can configure MLD only on IPv6 interfaces. For information about configuring IPv6 interfaces, see *Configuring IPv6* in the *JunosE IP, IPv6, and IGP Configuration Guide*.

- [Configuring MLD SSM Mapping on page 233](#)
- [Limiting the Number of Accepted MLD Groups on page 233](#)
- [Including and Excluding MLD Traffic on page 234](#)
- [Configuring MLD Explicit Host Tracking on page 235](#)
- [Disabling and Removing MLD on page 235](#)

Configuring MLD SSM Mapping

SSM mapping statically assigns sources to MLDv1 groups. You must use SSM mapping for MLDv1 hosts to interoperate with PIM SSM. SSM mapping allows the router to use a statically configured list to translate (*G) memberships to (S,G) memberships.

The **ipv6 mld ssm-map static** command uses IPv6 access lists, which allow both source and destination/group addresses to be specified. You must set the source address to “any”.

To statically configure SSM mapping:

1. Enable SSM mapping on the router.

```
host1:boston(config)#ipv6 mld ssm-map enable
```

Use the **no** version to disable the SSM map.

2. Specify an access list and source address for use in SSM mapping.

```
host1:boston(config)#ipv6 mld ssm-map static boston-list 2001::1
```

Use the **no** version to remove the SSM map association.



NOTE: To operate correctly, the static source addresses must fall within the configured PIM SSM range.

Limiting the Number of Accepted MLD Groups

You can manage multicast traffic on the router by restricting the number of MLD groups.

To limit the number of accepted MLD groups:

1. Configure the maximum number of MLD groups that an interface can accept.

```
host1:boston(config-if)#ipv6 mld group limit 5
```

Use the **no** version to restore the default situation, in which there is no limit on the number of MLD groups that an interface can accept.

2. Configure the maximum number of MLD groups that a port can accept.

- On ERX models:

```
host1(config)#multicast group port 3/0 limit 5
```

- On E120 and E320 routers:

```
host1(config)#multicast group port 3/1/0 limit 5
```



NOTE: You can specify the identifier for the port in *slot/port* format (ERX routers) or in *slot/adapter/port* format (E120 and E320 routers) and the maximum number of MLD groups that interfaces can accept.

- **slot**—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), 0–5 (E120 router), or 0–16 (E320 router)
- **adapter**—Number of the bay in which the I/O adapter (IOA) resides. This identifier applies to the E120 and E320 routers only. In the software, adapter 0 identifies the right IOA bay (E120 router) and the upper IOA bay (E320 router); adapter 1 identifies the left IOA bay (E120 router) and the lower IOA bay (E320 router).
- **port**—Port number on the I/O module or IOA

Use the **no** version to restore the default situation, in which there is no limit on the number of MLD groups that a port can accept.

Including and Excluding MLD Traffic

MLD allows you to include or exclude specific multicast traffic sources.

To include and exclude traffic:

- Configure the interface to statically include the MLD (S,G) membership for a host that is not capable of dynamically signaling group membership.

```
host1:boston(config-if)#ipv6 mld static-include 2001::1 ff0e::1
```

Use the **no** version to remove the static designation.

- Configure the interface to statically exclude the MLD (S,G) membership for a host that is not capable of dynamically signaling group membership.

```
host1:boston(config-if)#ipv6 mld static-exclude 2001::1 ff0e::1
```

Use the **no** version to remove the static designation.

Configuring MLD Explicit Host Tracking

Explicit host tracking enables the router to explicitly track each individual host that is joined to a group or channel on a particular multi-access network.

To enable explicit host tracking on the interface:

1. Configure the MLD version for the interface.

```
host1(config)#interface 3/0.101
host1(config-if)#ipv6 mld version 2
```

2. Enable explicit host tracking on the interface without the capability of being automatically disabled even if MLD V1 hosts are detected on the MLD V2 interface. This tracking continues for a group even if the group downgrades to MLD V1 due to the presence of an MLD V1 host.

```
host1(config)#ipv6 mld explicit-tracking
```

Use the **no** version to disable explicit host tracking on the interface.

3. Enable explicit host tracking on the interface with the capability of being automatically disabled if MLD V1 hosts are detected on the MLD V2 interface. The router turns off explicit host tracking for the group when MLD V1 host reports are received for the group on the MLD V2 interface.

```
host1(config)#ipv6 mld explicit-tracking disable-if-mld-v1-detected
```

Use the **no** version with the **disable-if-mld-detected** keyword to revert to the default explicit host tracking behavior.

Disabling and Removing MLD

You can disable and reenabling MLD on the virtual router. You can also remove MLD from the virtual router and re-create it on the virtual router.

To disable and enable MLD on a virtual router:

1. Disable MLD on a virtual router.

```
host1(config)#virtual-router boston
host1:boston(config)#router mld
host1:boston(config-router)#mld disable
```

Use the **no** version to enable MLD on a virtual router.

2. Create and enable MLD on a virtual router.

- Using the **router mld** command:

```
host1(config)#virtual-router boston
host1:boston(config)#router mld
```

Use the **no** version to delete MLD and MLD proxy from the virtual router.

- Using the **ipv6 router mld** command:

```
host1(config)#virtual-router boston
host1:boston(config)#ipv6 router mld
```

Use the **no** version to delete MLD and MLD proxy from the virtual router.

**Related
Documentation**

- [Configuring Multicast Groups for MLD on page 226](#)
- [MLD SSM Mapping Overview on page 230](#)
- [Overview of Limiting the Number of Accepted MLD Groups on page 230](#)
- [MLD Traffic Overview on page 231](#)
- [MLD Explicit Host Tracking Overview on page 231](#)
- [Monitoring MLD Information on a Virtual Router on page 241](#)
- [Monitoring MLD Interfaces on page 244](#)
- [Monitoring MLD Membership for Multicast Groups on page 250](#)
- [Monitoring MLD SSM Mapping on page 252](#)
- [Monitoring the Number of MLD Groups on a Port on page 253](#)
- `interface`
- `ipv6 mld explicit-tracking`
- `ipv6 mld group limit`
- `ipv6 mld ssm-map enable`
- `ipv6 mld ssm-map static`
- `ipv6 mld static-exclude`
- `ipv6 mld static-include`
- `ipv6 mld version`
- `ipv6 router mld`
- `mld disable`
- `multicast group port limit`
- `router mld`
- `virtual-router`


MLD Proxy Overview

Multicast Listener Discovery (MLD) proxy enables the router to issue MLD host messages on behalf of hosts that the router discovered through standard MLD interfaces. The router acts as a *proxy* for its hosts. The E Series router supports MLD proxy versions 1 and 2.

[Figure 20 on page 237](#) shows a router in an MLD proxy configuration. You enable MLD proxy on one interface, which connects to a router closer to the root of the tree. This interface is the *upstream interface*. The attached upstream router on the upstream interface should be running MLD.

You enable MLD on the interfaces that connect the router to its hosts that are farther away from the root of the tree. These interfaces are known as *downstream interfaces*.

Figure 20: Upstream and Downstream Interfaces

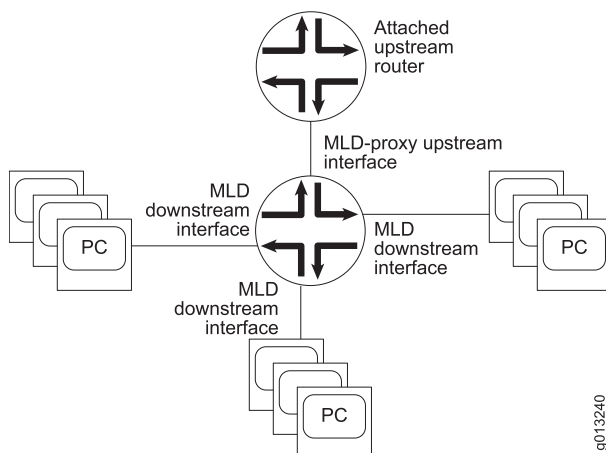

As described in “[MLD Overview](#)” on page 219, hosts interact with the router through the exchange of MLD messages. Similarly, when you configure MLD proxy, the router interacts with the router on its upstream interface through the exchange of MLD messages. However, when acting as the proxy, the router performs the host portion of the MLD task on the upstream interface as follows:

- When queried, sends multicast listener reports to the group.
- When one of its hosts joins a multicast address group to which none of its other hosts belong, sends unsolicited multicast listener reports to that group.
- When the last of its hosts in a particular multicast group leaves, the group sends either an unsolicited multicast listener done report to the all-routers address (FF02::2) for MLDv1 or an MLDv2 multicast listener report to the all-MLDv2 routers address (FF02::16).

Related Documentation

- [MLD Overview on page 219](#)
- [Configuring MLD Proxy on page 237](#)
- [Establishing the MLD Proxy Baseline on page 238](#)

Configuring MLD Proxy

To configure a downstream interface, enable MLD on that interface. To configure MLD proxy on the router, complete the following tasks:

1. Enable IPv6 multicast.
2. Identify the interface that you want to act as the upstream interface.
3. Enable MLD proxy on that interface.
4. (Optional) Specify how often the router should send unsolicited reports to routers on the upstream interface.



NOTE: You can configure MLD proxy only on IPv6 interfaces. For information about configuring IPv6 interfaces, see *Configuring IPv6 in the JunosE IP, IPv6, and IGP Configuration Guide*.

To configure MLD proxy on an interface:

1. Enable MLD proxy on the upstream interface.

```
host1(config-if)#ipv6 mld-proxy
```

Use the **no** version to disable MLD proxy on an interface.



NOTE: You can enable only one upstream interface.

2. (Optional) Configure unsolicited report interval, which specifies how often the upstream interface should transmit unsolicited reports.

```
host1(config-if)#ipv6 mld-proxy unsolicited-report-interval 600
```

Use the **no** version to transmit unsolicited reports using the default value, 100-tenths of a second (10 seconds).



NOTE: Issue this command only on the upstream interface. Otherwise, this command has no effect.

3. (Optional) Configure the MLD proxy version for the interface.

```
host1(config-if)#ipv6 mld-proxy version 1
```

Use the **no** version to set the version to its default value, MLDv2.

Related Documentation

- [MLD Proxy Overview on page 236](#)
- [Monitoring MLD Proxy Parameters on page 254](#)
- [Monitoring MLD Proxy Interfaces on page 256](#)
- `ipv6 mld-proxy`
- `ipv6 mld-proxy unsolicited-report-interval`
- `ipv6 mld-proxy version`

Establishing the MLD Proxy Baseline

You can set the counters for the numbers of queries received and reports sent on the upstream interface to zero. This feature allows you to establish a reference point for MLD proxy statistics.

To set the counters:

- Issue the **baseline ipv6 mld-proxy interface** command in Global Configuration mode.

(host1)#baseline ipv6 mld-proxy interface

.....



NOTE: Issue this command only on the upstream interface. Otherwise, this command will have no effect.

.....

**Related
Documentation**

- [MLD Proxy Overview on page 236](#)
- [Monitoring MLD Proxy Interfaces on page 256](#)
- `baseline ipv6 mld-proxy interface`

CHAPTER 8

Monitoring MLD and MLD Proxy

To display Multicast Listener Discovery (MLD) and MLD proxy parameters, use the **show** commands described in this section.



NOTE: The E120 and E320 routers output for **monitor** and **show** commands is identical to output from other E Series routers, except that the E120 and E320 routers output also includes information about the adapter identifier in the interface specifier (slot/adapter/port).

- [Monitoring MLD Information on a Virtual Router on page 241](#)
- [Monitoring MLD Groups on page 242](#)
- [Monitoring MLD Interfaces on page 244](#)
- [Monitoring Summary Information for MLD Interfaces on page 248](#)
- [Monitoring MLD on Mapped Outgoing Interfaces on page 249](#)
- [Monitoring MLD on Outgoing Interfaces on page 249](#)
- [Monitoring MLD Membership for Multicast Groups on page 250](#)
- [Monitoring MLD Information for Mapped Outgoing Interfaces on page 252](#)
- [Monitoring MLD SSM Mapping on page 252](#)
- [Monitoring the Number of MLD Groups on a Port on page 253](#)
- [Monitoring MLD Proxy Parameters on page 254](#)
- [Monitoring MLD Proxy Groups on page 255](#)
- [Monitoring MLD Proxy Interfaces on page 256](#)

Monitoring MLD Information on a Virtual Router

Purpose Display MLD information for a virtual router.

Action To display MLD information for a virtual router:

```
host1:boston#show ipv6 mld
Routing Process MLD, Administrative state enabled, Operational state enabled
  2 total interfaces, 2 enabled, 0 disabled
  2 enabled interfaces performing graceful restart
  2 learnt groups
MLD Statistics:
```

```

Rcvd: 1 total, 0 checksum errors, 0 unknown types, 0 discards
      0 queries, 1 reports, 0 leaves
Sent: 2 total

```

Meaning [Table 25 on page 242](#) lists the **show ipv6 mld** command output fields.

Table 25: show ipv6 mld Output Fields

Field Name	Field Description
Administrative state	Status of MLD in the software: enabled or disabled
Operational state	Status of MLD on the virtual router: enabled or disabled
total interfaces	Number of interfaces on which you started MLD
enabled	Number of interfaces on which MLD is enabled
disabled	Number of interfaces on which MLD is disabled
learnt groups	Number of multicast groups that the virtual router has discovered
MLD Statistics Rcvd	Statistics for MLD messages received: <ul style="list-style-type: none"> • total—Number of MLD messages received • checksum errors—Number of MLD messages received with checksum errors • unknown types—Number of messages received that are not multicast listener queries, multicast listener reports, or multicast listener done messages • discards—Number of multicast listener discards • queries—Number of multicast listener queries • reports—Number of multicast listener reports • leaves—Number of done messages
MLD Statistics Sent	Number of multicast listener queries sent

- Related Documentation**
- [Enabling MLD on an Interface on page 223](#)
 - [Configuring MLD Attributes on page 233](#)
 - [Disabling and Removing MLD on page 235](#)
 - `show ipv6 mld`

Monitoring MLD Groups

Purpose Display information about statically joined and directly connected groups learned through MLD.

Action To display statically joined and directly connected groups learned through MLD without OIF mapping:

```
host1:boston# show ipv6 mld groups
  Grp Address          Interface      State      Reporter      ExpTim oldHTo
-----
ff0e::1               ATM2/0.15      Version2    fe80::90:1a02:1 54      0
                        640:91d
ff0e::4:1             ATM2/0.15      Version2    fe80::90:1a02:1 54      0
                        640:91d

Included Sources:
  51::1                54
  51::2                54
Counts: 2 version-2, 0 version-1, 0 check state, 0 disabled
(2 total)
0 excluded
Source-groups: 2 included, 0 excluded
```

To display statically joined and directly connected groups learned through MLD with OIF mapping:

```
host1:boston# show ipv6 mld groups
  Grp Address          Interface      State      Reporter      ExpTim oldHTo
-----
ff3e::1               ATM5/0.12      Version2    fe80::f7:0:91a: 377      0
                        0
                        oif-map OIFMAP ATM5/0.
                        121
ff3e::1               ATM5/0.13      Version2    fe80::f7:0:a1a: 369      0
                        0
                        oif-map OIFMAP ATM5/0.
                        121
ff3e::2               ATM5/0.12      Version2    fe80::f7:0:91a: 370      0
                        0

Included Sources:
  10::2                oif-map OIFMAP self          370
  10::10               oif-map OIFMAP ATM5/0.      370
                        120
  10::11               oif-map OIFMAP ATM5/0.      370
                        121
ff3e::2               ATM5/0.13      Version2    fe80::f7:0:a1a: 373      0
                        0

Included Sources:
  10::2                oif-map OIFMAP self          373
  10::10               oif-map OIFMAP ATM5/0.      373
                        120
  10::11               oif-map OIFMAP ATM5/0.      373
                        121

Counts: 4 version-2, 0 version-1, 0 check state, 0 disabled
(4 total)
0 excluded
Source-groups: 6 included, 0 excluded
```

Meaning [Table 26 on page 244](#) lists the `show ipv6 mld groups` command output fields.

Table 26: show ipv6 mld groups Output Fields

Field Name	Field Description
Grp Address	Address of the multicast group
Interface	Interface that discovered the multicast group
oif-map	Name of the OIF map and the mapped OIF interface, if a group or source has been mapped to an OIF
State	MLD version of the group
Reporter	Link-local address of the host reporting the multicast group
ExpTim	Remaining time, in seconds, at which the router stops polling for more members of this group
oldHTo	Remaining time at which the router stops polling for more MLDv1 members of a group. If this value is 0, the interface has received no MLDv1 reports for the group.
Included Sources	Sources included in the multicast group
Excluded Sources	Sources excluded from the multicast group
Counts	Number of source-group mappings by version and state

Related Documentation

- [Enabling MLD on an Interface on page 223](#)
- [Configuring Multicast Groups for MLD on page 226](#)
- [Specifying MLD Multicast Groups on page 227](#)
- [Assigning an MLD Multicast Group to an Interface on page 228](#)
- [Configuring MLD Group Outgoing Interface Mapping on page 228](#)
- `show ipv6 mld groups`

Monitoring MLD Interfaces

Purpose Display MLD information for interfaces on which you enabled MLD. You can use the **brief** keyword to see a summary of the information. You can use the **count** keyword to see the number of MLD interfaces.

Action To display MLD information for all interfaces on which you enabled MLD:

```
host1:boston#show ipv6 mld interface
```

```
Interface ATM2/0.103 address 13.0.0.1/255.255.255.0
Administrative state enabled, Operational state enabled
```



```

Interface parameters:
  Version 2
  State Querier
  Query Interval 125 secs, 125 secs before the next query
  Other querier present interval 250 secs
  Maximum response time 255 (in 10ths of a second)
  Last member query interval 10 (in 10ths of a second)
  Robustness 3
  No inbound access group
  No inbound access source-group
  No inbound apply-oif-map
  Immediate Leave: disabled
Explicit Host Tracking: enabled
Max-Group limit: No Limit
Admission-Bandwidth limit: No limit
IOA Packet Replication: None
  Group Count: 1
Interface statistics:
  Rcvd: 2 reports, 0 leaves, 0 wrong version queries
  Sent: 2 queries
  Groups learnt: 1

Counts: 0 down, 0 init state, 1 querier, 0 non-querier, 1 Total

```

To display MLD information for the interface on which you enabled MLD:

```

host1#show ipv6 mld interface gigabitEthernet 3/0.0
Interface GigabitEthernet3/0.0 address 10.1.1.1/255.255.255.0
Administrative state enabled, Operational state enabled
Interface parameters:
  Version 1
  State Querier
  Query Interval 125 secs, 123 secs before the next query
  Other querier present interval 250 secs
  Maximum response time 100 (in 10ths of a second)
  Last member query interval 10 (in 10ths of a second)
  Robustness 3
  No inbound access group
  No inbound access source-group
  No inbound apply-oif-map
  Immediate Leave: disabled
Explicit Host Tracking: enabled
Max-Group limit: No Limit
  Group Count: 0
  IOA packet replication gigabitEthernet 3/8.1
Interface statistics:
  Rcvd: 0 reports, 0 leaves, 0 wrong version queries
  Sent: 14 queries
  Groups learnt: 0

Counts: 0 down, 0 init state, 1 querier, 0 non-querier, 1 Total

```

Meaning [Table 27 on page 246](#) lists the `show ipv6 mld interface` command output fields.

Table 27: show ipv6 mld interface Output Fields

Field Name	Field Description
Interface	Type of interface and interface specifier. For details about interface types and specifiers, see <i>Interface Types and Specifiers</i> in <i>JunosE Command Reference Guide</i> .
address	IPv6 link-local address of the interface
Administrative state	Status of the interface in the software: enabled or disabled
Operational state	Physical status of the interface: enabled or disabled
Version	MLD version
State	Function of the interface: querier or nonquerier
Query Interval	Time interval at which this interface sends query messages
Other querier present interval	Time that the interface waits before declaring itself as the querier
Maximum response time	Time interval during which this interface expects a host to respond
Graceful restart	Status of graceful restart: active or complete
Last member query interval	Time that this interface waits before sending a new query to a host that sends a group leave message
Robustness	Number of times this interface sends MLD messages
Inbound access group	Information about IPv6 access lists configured with the ipv6 mld access-group command
No inbound access group	No IPv6 access list configured with the ipv6 mld access-group command
Inbound access source-group	Information about IPv6 access lists configured with the ipv6 mld access-source-group command
No inbound access source-group	No IPv6 access list configured with the ipv6 mld access-source-group command
Inbound apply-oif-map	Information about OIF map names configured with the ipv6 mld apply-oif-map command
No inbound apply-oif-map	No OIF map name configured with the ipv6 mld apply-oif-map command

Table 27: show ipv6 mld interface Output Fields (*continued*)

Field Name	Field Description
Immediate Leave	Setting of the ipv6 mld immediate-leave command: enabled or disabled
Explicit Host Tracking	Setting of the ipv6 mld explicit-tracking command: enabled or disabled
Max-Group limit	Number of MLD groups that the interface can accept, as configured with the ipv6 mld group limit command
Group Count	Number of MLD groups that the interface has accepted
IOA packet replication	Hardware multicast packet replication interface to which egress multicast packets on this interface are redirected
Interface statistics Rcvd	Information about MLD messages received on this interface: <ul style="list-style-type: none"> • reports—Number of group multicast listener reports received • leaves—Number of group multicast listener done messages received • wrong version queries—Number of multicast listener queries received from devices running a different version of MLD
Interface statistics Sent	Number of MLD messages this interface has sent
Interface statistics Groups learnt	Number of groups this interface has discovered
Counts	Total number of MLD interfaces

Related Documentation

- [Enabling MLD on an Interface on page 223](#)
- [Configuring MLD Settings on an Interface on page 224](#)
- [Configuring Multicast Groups for MLD on page 226](#)
- [Specifying MLD Multicast Groups on page 227](#)
- [Configuring MLD Group Outgoing Interface Mapping on page 228](#)
- [Configuring MLD Attributes on page 233](#)
- [Limiting the Number of Accepted MLD Groups on page 233](#)
- [Configuring MLD Explicit Host Tracking on page 235](#)
- `ipv6 mld access-group`
- `ipv6 mld access-source-group`

- `ipv6 mld apply-oif-map`
- `ipv6 mld explicit-tracking`
- `ipv6 mld group limit`
- `ipv6 mld immediate-leave`
- `show ipv6 mld interface`

Monitoring Summary Information for MLD Interfaces

Purpose Display a summary of MLD information for interfaces on which you enabled MLD.

Action To display a summary of MLD information for interfaces on which you enabled MLD:

```
host1:boston# show ipv6 mld interface brief
```

Interface	Intf Address	Ver	State	Querier	QTime	QTime
ATM2/0.103	130.0.0.1/24	2	Querier	130.0.0.1	3(7)	0
ATM5/0.102	131.0.0.1/24	2	Querier	130.0.0.1	101(7)	0

Counts: 0 down, 0 init state, 2 querier, 0 non-querier, 2 Total

Meaning [Table 28 on page 248](#) lists the `show ipv6 mld interface brief` command output fields.

Table 28: show ipv6 mld interface brief Output Fields

Field Name	Field Description
Interface	Type of interface and interface specifier. For details about interface types and specifiers, see <i>Interface Types and Specifiers</i> in <i>JunosE Command Reference Guide</i> .
Intf Address	IPv6 link-local address of the interface
Ver	MLD version
State	Function of the interface: querier or nonquerier
Querier	IPv6 address of the querier on the network to which this interface connects
QTime	Remaining time interval at which this interface sends query messages
QTime	Remaining time that the interface waits before declaring itself as the querier

Related Documentation

- [Configuring MLD Settings on an Interface on page 224](#)
- `show ipv6 mld interface`

Monitoring MLD on Mapped Outgoing Interfaces

Purpose Display the current mappings to all mapped outgoing interfaces or to the specified mapped outgoing interface.

Action To display the current mappings to all mapped outgoing interfaces:

host1# show ipv6 mld mapped-oif

OIF	Oper	Group Address	Source Address	Join I/F	Map Name
ATM5/0.120	Up	ff3e::2	10::10	ATM5/0.12	OIFMAP
				ATM5/0.13	OIFMAP
ATM5/0.121	Up	ff3e::1	*	ATM5/0.12	OIFMAP
				ATM5/0.13	OIFMAP
		ff3e::2	10::11	ATM5/0.12	OIFMAP
				ATM5/0.13	OIFMAP

Counts: 3 source-group mappings

Meaning [Table 29 on page 249](#) lists the **show ipv6 mld mapped-oif** command output fields.

Table 29: show ipv6 mld mapped-oif Output Fields

Field Name	Field Description
OIF	OIF used in an OIF map
Oper	Operation status of the outgoing interface
Group Address	Multicast group IP address associated with the OIF
Source Address	Source IP address associated with the OIF
Join I/F	MLD protocol interface associated with the OIF
Map Name	Name of the map associated to the OIF
Counts	Number of source-group mappings to OIFs

- Related Documentation**
- [Configuring Multicast Groups for MLD on page 226](#)
 - [Configuring MLD Group Outgoing Interface Mapping on page 228](#)
 - `show ipv6 mld mapped-oif`

Monitoring MLD on Outgoing Interfaces

Purpose Display all OIF maps or the OIF map for the specified map name.

Action To display all OIF maps:

```
host1#show ipv6 mld oif-map
```

Map Name	Group Prefix	Source Prefix	OIF
OIFMAP	ff3e::/112	::/0	ATM5/0.121
	ff3e::/112	10::2/128	se1f
	ff3e::/112	10::10/128	ATM5/0.120
	ff3e::3/128	::/0	ATM5/0.130
	ff3e::4/128	::/0	ATM5/0.130

Meaning Table 30 on page 250 lists the **show ipv6 mld oif-map** command output fields.

Table 30: show ipv6 mld oif-map Output Fields

Field Name	Field Description
Map Name	Name of the map associated to the show output
Group Prefix	Multicast group IPv6 prefix
Source Prefix	Source IPv6 prefix
OIF	Outgoing interface associated with the group and source prefix

- Related Documentation**
- [Configuring Multicast Groups for MLD on page 226](#)
 - [Configuring MLD Group Outgoing Interface Mapping on page 228](#)
 - `show ipv6 mld oif-map`

Monitoring MLD Membership for Multicast Groups

Purpose Display MLD membership information for multicast groups and (S, G) channels. You can use the **brief** keyword to see a summary of the information. You can use the **tracked** keyword to see interface information only for interfaces where explicit host tracking is enabled.

Action To display MLD membership information for multicast groups and (S, G) channels:

```
host1:boston# show ipv6 mld membership
```

Flags: M - Uses Oifmap S- SSM mapped T - tracked

1,2 - The version of MLD the group is in

Reporter:

<ip-address> - last reporter if the group is not explicitly tracked

<n>/<m> - <n> reporters include mode, <m> reporters in exclude

Group	Source	Reporter	ExpTim	Flags	Interface
ff0e::40	*	fe80::90:1a02:1640:91d	02:41	2S	FastEthernet2/1
ff0e::50		1/2	02:56	3MT	FastEthernet2/2
		fe80::90:1a02:1640:911	02:30		
		fe80::90:1a02:1640:912	02:48		
	20::11	fe80::90:1a02:1640:913	02:56		
	20::12				

	20::13	fe80::90:1a02:1640:911	02:30		
		fe80::90:1a02:1640:911	02:30		
		fe80::90:1a02:1640:912	02:48		
ff0e::60		fe80::90:1a02:1640:913	02:56		
		fe80::90:1a02:1640:901	01:56	3	FastEthernet2/3
	10::10		02:45		
	10::11		02:35		
	10::12		02:15		
	10::14		stop		
ff0e::70		fe80::90:1a02:1640:91	stop	3	FastEthernet2/4
	40::10		01:10		
	40::11		01.24		
ff0e::80		2/0	stop	3T	FastEthernet2/5
	50::10				
		fe80::90:1a02:1650:910	02:48		
	50::11				
		fe80::90:1a02:1650:920	02:56		
		fe80::90:1a02:1650:910	02:48		
	50::12	fe80::90:1a02:1650:920	02:56		
ff0e::90		0/3	02:56	2T	FastEthernet2/6
	*				
		fe80::90:1a02:1660:910	02:48		
		fe80::90:1a02:1660:920	02:56		
		fe80::90:1a02:1660:930	02:48		

Meaning Table 31 on page 251 lists the **show ipv6 mld membership** command output fields.

Table 31: show ipv6 mld membership Output Fields

Field Name	Field Description
Group	Multicast group or (S, G) channel
Source	(S, G) entries that are forwarding traffic
Reporter	Hosts that requested including sources or that have not requested excluding sources. If listed under a group, host that sent exclude reports for the group. If listed under a source, host that requested traffic from this source for the group. For any (S, G), if listed under a source, indicates hosts interested in the traffic for this (S, G).
ExpTim	Expiration time
Flags	<ul style="list-style-type: none"> • M—Uses Oifmap • S—SSM mapped • T—Tracked • 1, 2—MLD version that the group is in
Interface	Type of interface and interface specifier. For details about interface types and specifiers, see <i>Interface Types and Specifiers</i> in <i>JunosE Command Reference Guide</i> .

- Related Documentation**
- [Configuring Multicast Groups for MLD on page 226](#)
 - [Assigning an MLD Multicast Group to an Interface on page 228](#)
 - [Configuring MLD Attributes on page 233](#)
 - [Including and Excluding MLD Traffic on page 234](#)
 - [Configuring MLD Explicit Host Tracking on page 235](#)
 - `show ipv6 mld membership`

Monitoring MLD Information for Mapped Outgoing Interfaces

Purpose Display the OIF to be assigned to a given map-name, group address, and source address.

Action To display the mapped OIF to be assigned to a given map-name, group address, and source address:

```
host1#show ipv6 mld oif-mapping OIFMAP ff3e::1 10::10
OIF Mapping
OIF-MAP Name   : OIFMAP
Group Address  : ff3e::1
Source Address : 10::10
Mapped OIF     : ATM5/0.120
```

Meaning [Table 32 on page 252](#) lists the `show ipv6 mld oif-mapping` command output fields.

Table 32: show ipv6 mld oif-mapping Output Fields

Field Name	Field Description
OIF-MAP Name	Name of the map requested
Group Address	Multicast group IP address requested
Source Address	Source IP address requested
Mapped OIF	Join interface associated with the OIF map

- Related Documentation**
- [Configuring Multicast Groups for MLD on page 226](#)
 - [Configuring MLD Group Outgoing Interface Mapping on page 228](#)
 - `show ipv6 mld oif-mapping`

Monitoring MLD SSM Mapping

Purpose Display the SSM mapping state and the source list mapping associated with a multicast group address.

Action To display the SSM mapping state and the source list mapping associated with a multicast group address:


```

host1:boston#show ipv6 mld ssm-mapping ff3e::1
SSM Mapping      : Enabled
Group Address    : ff3e::1
Source List      : 2001::1
                  : 2001::2

```

Meaning Table 33 on page 253 lists the **show ipv6 mld ssm-mapping** command output fields.

Table 33: show ipv6 mld ssm-mapping Output Fields

Field Name	Field Description
SSM Mapping	Status of SSM mapping on the interface (enabled or disabled)
Group Address	Multicast group address requested
Source List	List of sources mapped to the multicast group address

- Related Documentation**
- [Configuring MLD Attributes on page 233](#)
 - [Configuring MLD SSM Mapping on page 233](#)
 - `show ipv6 mld ssm-mapping`

Monitoring the Number of MLD Groups on a Port

Purpose Display the number of MLD groups that ports have accepted and, if configured, the maximum number of groups that ports can accept. A value of –1 indicates that no port group limit is configured. Only ports that have accepted MLD groups and ports for which you have configured a limit for the number of MLD groups appear in this display.

Action To display the number of MLD groups that ports have accepted and the maximum number of groups that ports can accept:

```

host1:boston#show multicast group limit
Port      limit count
-----
2/0       5         0
2/1       -1        1

```

Meaning Table 34 on page 253 lists the **show multicast group limit** command output fields.

Table 34: show multicast group limit Output Fields

Field Name	Field Description
Port	Identifier of the port in <i>slot/port</i> format: <ul style="list-style-type: none"> • slot—Number of the chassis slot in the range 0–6 (ERX7xx models) or 0–13 (ERX14xx models) • port—Port number on the I/O module

Table 34: show multicast group limit Output Fields (*continued*)

Field Name	Field Description
limit	Maximum number of MLD groups that the port can accept. A value of -1 indicates that no limit has been specified.
count	Actual number of MLD groups the port has accepted

- Related Documentation**
- [Configuring MLD Attributes on page 233](#)
 - [Limiting the Number of Accepted MLD Groups on page 233](#)
 - `show multicast group limit`

Monitoring MLD Proxy Parameters

Purpose Display MLD proxy parameters for a virtual router.

Action To display MLD proxy parameters for a virtual router:

```
host1#show ipv6 mld-proxy
Routing Process MLD Proxy, Administrative state enabled, Operational state
enabled
    total 1 upstream interface, state enabled
    1 multicast group
```

Meaning [Table 35 on page 254](#) lists the `show ipv6 mld-proxy` command output fields.

Table 35: show ipv6 mld-proxy Output Fields

Field Name	Field Description
Routing Process	MLD proxy protocol
Administrative state	State of MLD proxy in the software
Operational state	Operational state of MLD proxy: enabled or disabled
total interfaces	Number of MLD proxy interfaces on the virtual router; currently only one upstream interface per virtual router
state	Operational state of the MLD proxy interfaces: enabled or disabled
multicast group	Number of multicast groups associated with MLD proxy interfaces

- Related Documentation**
- [Configuring MLD Proxy on page 237](#)
 - `show ipv6 mld-proxy`

Monitoring MLD Proxy Groups

Purpose Display information about all or specified multicast groups that MLD proxy reported.

Action To display information about all multicast groups that MLD proxy reported:

```
host1#show ipv6 mld-proxy groups
```

```
Grp Address      Interface      Grp Mode
-----
ff0e::1          ATM5/1.200
ff0e::2          ATM5/1.200
ff0e::3          ATM5/1.200      Include(1):
  2001::1
ff0e::4          ATM5/1.200
ff0e::5          ATM5/1.200      Exclude(1):
  2001::2
```

```
Counts: 3 <*,G>, 1 Exclude (1 sources), 1 Include (1 sources)
        (5 total)
```

To display information about specified multicast groups that MLD proxy reported:

```
host1#show ipv6 mld-proxy groups ff0e::1
```

```
Grp Address      Interface      Grp Mode
-----
ff0e::1          ATM5/1.200
```

```
Counts: 1 <*,G>
        (1 total)
```

To display the number of multicast groups that MLD proxy reported:

```
host1#show ipv6 mld-proxy groups count
```

```
Counts: 3 <*,G>, 1 Exclude (1 sources), 1 Include (1 sources)
        (5 total)
```

Meaning [Table 36 on page 255](#) lists the **show ipv6 mld-proxy groups** command output fields.

Table 36: show ipv6 mld-proxy groups Output Fields

Field Name	Field Description
Grp Address	Address of the multicast group
Interface	Type and identifier of the upstream interface associated with the multicast group
Grp Mode	<ul style="list-style-type: none"> Blank—No sources included or excluded for this group Include—Sources included for this group Exclude—Sources excluded for this group
Count	Total number of multicast groups associated with this interface

Related Documentation

- [show ipv6 mld-proxy groups](#)

Monitoring MLD Proxy Interfaces

Purpose Display information about all or specified interfaces on which you configured MLD proxy. To view information about a particular interface, enter an interface type and specifier, such as atm 3/0. You can use the **brief** option to display a summary rather than a detailed description.

Action To display information about all interfaces on which you configured MLD proxy:

```
host1#show ipv6 mld-proxy interface
```

```
Interface ATM5/1.200 address fe80::f7:0:231a:0
Administrative state enabled, Operational state enabled
Interface parameters:
  Version 2
  State No v1 Router Present
  Unsolicited report interval 100 (in 10ths of a second)
  5 multicast groups
Interface statistics:
  Rcvd: 0 v1 query, 0 v1 report, 25 v2 queries, 0 v2 report
  Sent: 0 v1 report, 0 v1 leave, 35 v2 reports
```

To display summarized information about all interfaces on which you configured MLD proxy:

```
host1#show ipv6 mld-proxy interface brief
```

Interface	Intf Address	Ver	State	UnS	Time
ATM5/1.200	fe80::f7:0:231a:0	2	No v1 Router Present		100

Meaning [Table 37 on page 256](#) lists the **show ipv6 mld-proxy interface** command output fields.

Table 37: show ipv6 mld-proxy interface Output Fields

Field Name	Field Description
Interface	Type of upstream interface. For details about interface types, see <i>Interface Types and Specifiers</i> in <i>JunosE Command Reference Guide</i> .
Address	Address of upstream interface
Administrative state	State of upstream interface in the software: enabled or disabled
Operational state	Physical state of upstream interface: enabled or disabled
Version	MLD version on this interface
State	Presence of MLDv1 routers on the same subnetwork as this upstream interface

Table 37: show ipv6 mld-proxy interface Output Fields (continued)

Field Name	Field Description
Unsolicited report interval	Time interval at which this upstream interface sends unsolicited group membership report
multicast group	Number of multicast groups associated with this upstream interface
Interface statistics Rcvd	Statistics for messages received on this interface: <ul style="list-style-type: none">• v1 queries—Number of MLDv1 multicast listener queries received• v1 report—Number of MLDv1 multicast listener reports received• v2 queries—Number of MLDv2 multicast listener queries received• v2 report—Number of MLDv2 multicast listener reports received
Interface statistics Sent	Statistics for messages sent from this interface: <ul style="list-style-type: none">• v1 reports—Number of MLDv1 multicast listener reports sent• v1 leaves—Number of multicast listener done messages sent• v2 reports—Number of MLDv2 multicast listener reports sent

- Related Documentation
- [Configuring MLD Proxy on page 237](#)
 - [Establishing the MLD Proxy Baseline on page 238](#)
 - `show ipv6 mld-proxy interface`

CHAPTER 9

Configuring PIM for IPv6 Multicast

Protocol Independent Multicast (PIM) is a collection of multicast routing protocols that enable multicast routers to identify other multicast routers that can receive packets.

This chapter describes how to configure PIM for IPv6 multicast on the E Series router; it contains the following sections:

- [Overview on page 259](#)
- [Platform Considerations on page 262](#)
- [References on page 262](#)
- [Before You Begin on page 263](#)
- [Enabling and Disabling PIM on a VR on page 263](#)
- [Enabling PIM on an Interface on page 264](#)
- [Setting a Priority to Determine the Designated Router on page 264](#)
- [Configuring the PIM Join/Prune Message Interval on page 265](#)
- [Configuring an RP Router for PIM Sparse Mode on page 266](#)
- [Configuring BSR and RP Candidates for PIM Sparse Mode on page 266](#)
- [Switching to an SPT for PIM Sparse Mode on page 268](#)
- [Configuring PIM Sparse Mode Remote Neighbors on page 268](#)
- [Using PIM Sparse Mode Join Filters on page 270](#)
- [Configuring PIM SSM on page 271](#)
- [Configuring the BFD Protocol for PIM on page 272](#)
- [Removing PIM on page 273](#)
- [Resetting PIM Counters and Mappings on page 274](#)
- [Monitoring PIM on page 274](#)

Overview


This implementation of PIM supports PIM sparse mode and PIM source-specific multicast (PIM SSM) for IPv6 multicast.

SSM is an extension to the Any Source Multicast (ASM) service model and facilitates the deployment of broadcast (one-to-many) applications, such as Internet TV and radio where large receiver audiences require traffic from a few well-known sources.

Figure 21 on page 260 represents how PIM builds an (S,G) entry in an SRT. When multiple routers are connected to a multiaccess network, one router is assigned the role of the designated router. The designated router receives data from the source on interface 1/0 and multicasts the data to its downstream neighbors on interfaces 1/1, 2/0, and 2/1. In the designated router routing table, the entry for this operation lists the source as the IP address of the source and the group as the IP address of the multicast group.

Neighbors exchange hello messages periodically to determine the designated router. The router with the highest network layer address becomes the designated router. If the designated router subsequently receives a hello message from a neighbor with a higher network layer address, that neighbor becomes the designated router.

Figure 21: Source-Rooted Tree

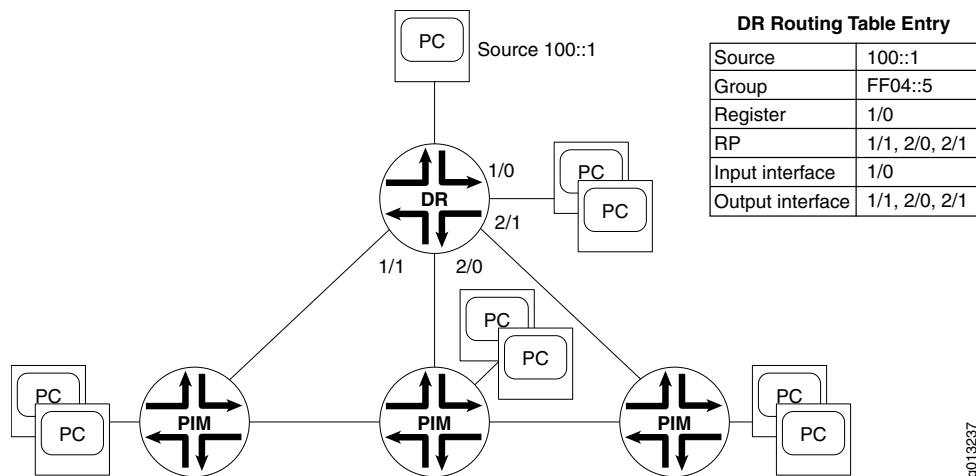

PIM Sparse Mode

In addition to the features PIM sparse mode supports for IPv4, this IPv6 implementation of PIM sparse mode also supports remote neighbors.

For a description of PIM sparse mode, see “Configuring PIM for IPv4 Multicast” on page 81.

Joining Groups

A host's designated router (DR) sends join messages to the RP when that host wants to join a group. When a host wants to leave a group, it communicates with its designated router through MLD. When the designated router no longer has any hosts that belong to a particular group, it sends a prune message to the RP.

Timers

PIM sparse mode uses timers to maintain the networking trees.



NOTE: PIM sparse mode routers poll their neighbors and hosts for various pieces of information at set intervals.

If a PIM sparse mode router does not receive information from a neighbor or host within a specific time, known as the *hold time*, it removes the associated information from its routing tables.

You can configure how often an interface sends hello messages (hello interval) and how often routers send RP announce messages (RP announce interval). The hold-time associated with hello messages is 3.5 times the hello interval, and the holdtime associated with RP announce messages is 2.5 times the RP announce interval.

All other timers are fixed and take the default values recommended in:

RFC 2934—Protocol Independent Multicast MIB for IPv4 (October 2000)

PIM Sparse Mode Bootstrap Router

PIM sparse mode routers need the address of the rendezvous point (RP) for each group for which they have (*G) state. They obtain this address either through a bootstrap mechanism or through static configuration. Two bootstrap mechanisms exist—bootstrap router (BSR) or auto-RP. Auto-RP is not used in IPv6 implementations.

When implemented, BSR operates as follows:

1. One router in each PIM domain is elected the BSR.
2. All the routers in the domain that are configured to be RP candidates periodically unicast their candidacy to the BSR.
3. The BSR picks an RP set from the available candidates and periodically announces this set in a bootstrap message.
4. Bootstrap messages are flooded hop by hop throughout the domain until all routers in the domain learn the RP Set.

PIM Source-Specific Multicast

PIM source-specific multicast (SSM) is an extension of the PIM protocol. Using SSM, a client can receive multicast traffic directly from the source. PIM SSM uses PIM sparse mode functionality to create an SPT between the client and the source, but builds the SPT without using an RP.

By default, the SSM group multicast address is limited to the IPv6 address range FF3x::/96 where x represents any valid scope. You can use the **ipv6 pim ssm range** command to change the SSM group address range.

Advantages that an SSM-configured network has over a traditionally configured PIM sparse mode network include the following:

- No need for shared trees or RP mapping (no RP is required).
- No need for RP-to-RP source discovery through Multicast Source Discovery Protocol (MSDP).
- Simplified administrative deployment; you need only configure PIM sparse mode on all router interfaces and issue the necessary SSM commands (including specifying MLDv2 on the receiver local area network).
- Support for source lists; you can use source lists, supported in MLDv2, where only specified sources send traffic to the SSM group.

In a PIM SSM-configured network, the E Series router subscribes to an SSM channel (by means of MLDv2), announcing a desire to join group G and source S. The directly connected PIM sparse mode router, the designated router of the receiver, sends an (S,G) join message to its RPF neighbor for the source. For PIM SSM, the RP is not contacted in this process by the receiver (as happens in normal PIM sparse mode operations).

Platform Considerations

For information about modules that support PIM for IPv6 multicasting on the ERX7xx models, ERX14xx models, and the ERX310 Broadband Services Router:

- See *ERX Module Guide, Table 1, Module Combinations* for detailed module specifications.
- See *ERX Module Guide, Appendix A, Module Protocol Support* for information about the modules that support PIM for IPv6 multicasting.

For information about modules that support PIM for IPv6 multicasting on the E120 and E320 Broadband Services Routers:

- See *E120 and E320 Module Guide, Table 1, Modules and IOAs* for detailed module specifications.
- See *E120 and E320 Module Guide, Appendix A, IOA Protocol Support* for information about the modules that support PIM for IPv6 multicasting.

References

For more information about IPv6 multicast, see the following resources:

- RFC 2362—Protocol Independent Multicast-Sparse Mode (PIM-SM): Protocol Specification (June 1998)
- RFC 3569—An Overview of Source-Specific Multicast (SSM) (July 2003)
- Source-Specific Multicast for IP—draft-ietf-ssm-arch-06.txt (March 2005 expiration)
- Source-Specific Protocol Independent Multicast in 232/8—draft-ietf-mboned-ssm232-08.txt (September 2004 expiration)



NOTE: IETF drafts are valid for only 6 months from the date of issuance. They must be considered as works in progress. Please refer to the IETF Web site at <http://www.ietf.org> for the latest drafts.

Before You Begin

You can configure multicast on IPv4 and IPv6 interfaces.

For information about configuring IP interfaces, see *Configuring IP* in the *JunosE IP, IPv6, and IGP Configuration Guide*. For information about configuring IPv6 interfaces, see *Configuring IPv6* in the *JunosE IP, IPv6, and IGP Configuration Guide*.

For information about configuring PIM on IPv4 interfaces, see “Configuring PIM for IPv4 Multicast” on page 81.

Enabling and Disabling PIM on a VR

By default, PIM is disabled. To enable PIM on a VR:

1. Enable multicast routing.
2. Create a VR, or access the VR context.
3. Create and enable PIM processing.

```
host1(config)#virtual-router boston
host1:boston(config)#ipv6 router pim
```

To disable PIM processing on a router, use the **pim disable** command.

ipv6 router pim

- Use to create and enable PIM processing on a VR or to access Router Configuration mode.
- Example


```
host1:boston(config)#ipv6 router pim
```
- Use the **no** version to remove PIM from the VR.
- See *ipv6 router pim*.

pim disable

- Use to disable PIM processing. By default, PIM processing is enabled.
- Example


```
host1:boston(config-router)#pim disable
```
- Use the **no** version to reenabPIM processing.
- See *pim disable*.

Enabling PIM on an Interface

You can enable PIM on an interface in one of the allowed modes and specify how often the interface sends hello messages to neighbors.

You can configure PIM and MLD on the same interface. If you configure MLD and PIM on an interface, the router considers that PIM owns the interface.

ipv6 pim query-interval

- Use to specify how often the router sends hello messages to neighbors.
- Example

```
host1(config-if)#ipv6 pim query-interval
```
- Use the **no** version to restore the default setting, 30 seconds.
- See `ipv6 pim query-interval`.

ipv6 pim sparse-mode

- Use to enable PIM in sparse mode on an interface.
- Example

```
host1(config-if)#ipv6 pim sparse-mode
```
- Use the **no** version to disable PIM in sparse mode on an interface.
- See `ipv6 pim sparse-mode`.

ipv6 pim sparse-mode graceful-restart-duration

- Use to set the graceful restart duration for PIM sparse mode.
- Example

```
host1(config-if)#ipv6 pim sparse-mode graceful-restart-duration 10
```
- Use the **no** version to return to the default duration of 30 seconds.
- See `ipv6 pim sparse-mode`.

Setting a Priority to Determine the Designated Router

You can influence whether a particular router is selected as the designated router with the **ipv6 pim dr-priority** command. A higher priority value increases the likelihood that a router is selected as the designated router, while a lower value decreases the likelihood. The **ipv6 pim dr-priority** command in Router Configuration mode sets the designated router priority on all the PIM interfaces on the router. To override this global setting on a particular interface, use the **ipv6 pim dr-priority** command in Interface Configuration mode.



NOTE: You cannot configure the designated router priority on PIM DM interfaces.

ipv6 pim dr-priority

- Use to set a priority value, in the range 1–254, by which a router is likely to be selected as the designated router.

- Examples

In Router Configuration mode:

```
host1(config-if)#ipv6 pim dr-priority 24
```

In Interface Configuration mode:

```
host1(config-subif)#ipv6 pim dr-priority 24
```

- Use the **no** version to restore the default value, 1.

Configuring the PIM Join/Prune Message Interval

When you use the router for PIM, the router sends join/prune message to the upstream RPF neighbor. The default join/prune message interval is 60 seconds. You can configure the join/prune message interval using the **ipv6 pim join-prune-interval** command. The **ipv6 pim join-prune-interval** command in Router Configuration mode configures the join-prune interval on all the PIM interfaces on the router. To override this global setting on a particular interface, use the **ipv6 pim join-prune-interval** command in Interface Configuration mode.

The hold-time associated with the PIM join/prune interval messages is 3.5 times the PIM join/prune message interval.



NOTE: You cannot configure the PIM join/prune message interval on PIM dense mode interfaces.

ipv6 pim join-prune-interval

- Use to set an interval value, in the range 10–210 seconds, at which the router sends the PIM join/prune message; the default value is 60 seconds.

- Examples

In Router Configuration mode:

```
host1(config-if)#ipv6 pim join-prune-interval 150
```

In Interface Configuration mode:

```
host1(config-subif)#ipv6 pim join-prune-interval 150
```

- Use the **no** version to restore the default value, 60 seconds.

Configuring an RP Router for PIM Sparse Mode

When you use the router for PIM sparse mode, some VRs must act as RP routers. If you want to control PIM more tightly, you can configure a static RP router. To do so:

1. Configure an access list that details the multicast groups that can use the static RP router (in this case, all globally scoped multicast groups).

```
host1(config)#ipv6 access-list boston permit ff0e::/16 any
```

2. Specify a static RP router.

```
host1(config)#ipv6 pim rp-address ::122:1 boston
```

ipv6 pim rp-address

- Use to specify a static PIM RP router.
- Specify a standard IPv6 access list of multicast groups to control which multicast groups can use this RP router.
- Specify the **override** keyword if you want this static RP router to have priority over auto-RP routers.
- Example

```
host1(config)#ipv6 pim rp-address 2001::1 76 override
```

- Use the **no** version to clear the filter from this interface.
- See `ipv6 pim rp-address`.

Configuring BSR and RP Candidates for PIM Sparse Mode

When choosing candidate BSRs or candidate RPs, select well-connected routers in the core of the network.

Typically, candidate BSRs are a subset of the candidate RPs. A single BSR is elected for the domain the set of candidate BSRs. The elected BSR floods bootstrap messages (BSMs) containing their group-to-RP mappings to all PIM routers. PIM routers use the group-to-RP mappings supplied by the elected (or preferred) BSR.

Candidate RPs are routers that are capable of performing as a rendezvous point router for one or more multicast groups. Candidate RPs periodically advertise the set of groups they support to BSRs. A candidate RP may support all the multicast group address range or any subset thereof. You can achieve redundancy by configuring more than one candidate RP for a group or range of groups.

ipv6 pim bsr-candidate

- Use to define a router as a BSR candidate.
- To assign an interface from which the router should send messages, specify an interface type and specifier, such as `atm 3/0`. For details about interface types and specifiers, see *Interface Types and Specifiers* in *JunosE Command Reference Guide*.

- Specify a length (up to a 128 bits) for the hash mask length field sent in BSMs that the router originates. This mask is combined with the group address before the router calls the hash function. For example, specifying a value of 32 limits the group address to the first 32 bits. The default and maximum hash mask length is 126 bits.
- Use the **priority** keyword to specify a value for the BSR-priority field of BSMs that the router originates. In the BSR election process, the BSR with the higher priority is preferred. If the priority values are equal, the router with the higher IP address becomes the BSR. The default value is 0 (address comparison only).
- Use the **period** keyword to specify the interval (from 1 to 65535 seconds) at which the BSR sends bootstrap messages. The default value is 60 seconds.
- Example

```
host1(config)#ipv6 pim bsr-candidate loopback 1 30 10
```
- Use the **no** version to stop the router from acting as a BSR candidate.
- See `ipv6 pim bsr-candidate`.

ipv6 pim rp-candidate

- Use to define a router as an RP router candidate.
- To assign an interface from which the router should send messages, specify an interface type and specifier, such as `atm 3/0`. For details about interface types and specifiers, see *Interface Types and Specifiers in JunosE Command Reference Guide*.
- Use the **group-list** keyword to specify an access list that contains the set of group prefixes supported by this candidate RP. If you do not specify a group list, the default is the entire multicast address range.



NOTE: You should not configure negative (that is, deny) access-list entries. BSR has no mechanism for distributing negative entries.

- Use the **hold-time** keyword to specify the amount of time the BSR keeps an RP in its candidate RP list if the BSR does not receive a candidate RP advertisement message. The default value is 150 seconds.
- Use the **priority** keyword to specify a priority field value that the candidate RP sends to the BSR in candidate RP advertisement messages. In the RP election process, the RP with the lower priority value is preferred. The default is 192.
- Use the **interval** keyword to specify an interval (from 1 to 65535 seconds) at which the candidate RP sends advertisement messages to the BSR. The default is 60 seconds.
- Example

```
host1(config)#ipv6 access-list 1 permit 1001::1
host1(config)#ipv6 access-list 1 permit 1002::1
host1(config)#ipv6 pim rp-candidate loopback 1 group-list 1
```

- Use the **no** version to stop the router from acting as an RP candidate.
- See `ipv6 pim rp-candidate`.

Switching to an SPT for PIM Sparse Mode

PIM sparse mode initiates multicast using a shared tree. You can configure PIM sparse mode to switch to an SPT when a source starts sending multicast messages, or you can prevent PIM sparse mode from switching to an SPT. Multicasting over an SPT can be more efficient than multicasting over a shared tree (see “[PIM Sparse Mode](#)” on page 84).

ipv6 pim spt-threshold

- Use to specify when PIM sparse mode switches from a shared tree to an SPT.
- Specify a nonzero integer or the keyword **infinity** to prevent PIM sparse mode from switching to an SPT.
- Specify a value of 0 to configure PIM to switch to an SPT when a source starts sending multicast messages.

- Example

```
host1(config)#ipv6 pim spt-threshold 4
```

- Use the **no** version to restore the default, 0.
- See `ipv6 pim spt-threshold`.

Configuring PIM Sparse Mode Remote Neighbors

You must use PIM sparse mode remote neighbors to run multicast services over BGP/MPLS VPNs.



NOTE: Although you can configure PIM sparse mode remote neighbors, you can not use these remote neighbors for BGP/MPLS VPNs.

To configure a pair of E Series routers to act as PIM remote neighbors:

1. On one router, specify the other router to be a remote neighbor, and identify the IP address of the interface on the other router that is used for the connection to this router.

```
host1(config-router):boston#remote-neighbor 1001::1 sparse-mode
```

2. Specify the location of the local interface whose address is used as the source address for the PIM connection to a remote neighbor.

```
host1(config-router-rn):boston#update-source atm 2/1.108
```

3. (Optional) Specify how often the router sends hello messages to the remote neighbor.


```
host1(config-router-rn):boston#query-interval 40
```

4. Repeat Steps 2 to 3 for the other router.

query-interval

- Use to specify how often the router sends hello messages to remote neighbors.
- Example

```
host1(config-router-rn)#query-interval 40
```

- Use the **no** version to restore the default setting, 30 seconds.
- See query-interval.

remote-neighbor

- Use to specify a remote neighbor for PIM sparse mode.
- Specify the IP address of the interface on the remote neighbor that PIM uses as the source address for the connection to this router.
- Example

```
host1(config-router)#remote-neighbor 1001::1 sparse-mode
```

- Use the **no** version to remove the remote neighbor and any attributes configured for the remote neighbor.
- See remote-neighbor.

update-source

- Use to specify the PIM interface whose local address is used as the source address for the PIM connection to a remote neighbor.
- You can use the same source address to form neighbor adjacencies with more than one PIM remote neighbor.
- You must use the IPv6 address of this interface when issuing the **remote-neighbor** command on the remote neighbor.
- Example

```
host1(config-router-rn)#update-source loopback 5
```

- Use the **no** version to delete the source address from the connection to the remote neighbor.

Configuration Example

This example uses the configuration shown in [Figure 21 on page 260](#). Two E Series routers called router Boston and router Chicago are running PIM and are connected by MPLS tunnels. To configure the routers as PIM remote neighbors:

1. Specify that router Chicago will be a remote neighbor of router Boston, and identify the IP address on router Chicago that will transmit datagrams to router Boston.

```
boston(config-router)#remote-neighbor 1001::1 sparse-mode
```

2. Specify the location of the interface that will transmit datagrams from router Boston to router Chicago.

```
boston(config-router-rn)#update-source atm 2/1.108
```

3. Specify that router Boston will send hello messages to router Chicago every 40 seconds.

```
boston(config-if)#ipv6 pim query-interval 40
```

4. Specify that router Boston will be a remote neighbor of router Chicago, and identify the IP address on router Boston that will transmit datagrams to router Chicago.

```
chicago(config-router)#remote-neighbor 2001::1 sparse-mode
```

5. Specify the location of the interface that will transmit datagrams from router Chicago to router Boston.

```
chicago(config-router-rn)#update-source atm 2/1.95
```

6. Specify that router Chicago will send hello messages to router Boston every 40 seconds.

```
chicago(config-if)#ipv6 pim query-interval 40
```

7. See update-source.

Using PIM Sparse Mode Join Filters

You can use PIM sparse mode join filters to prevent multicast state from being created in the PIM sparse mode router. The filters are applied to join entries in PIM join/prune messages that are received from PIM sparse mode neighbors.

By denying joins at the edge of a network, you can limit the multicast state and traffic in the network. By accepting only certain joins, you can control which multicast services an end user can receive. PIM join filters also reduce the potential for denial of service (DOS) attacks where large numbers of joins forwarded to each router on the RPT can result in a PIM state explosion and very high memory consumption.

For information about how to create access lists, see *Configuring Routing Policy* in the *JunosE IP Services Configuration Guide*.

ipv6 pim join-filter

- Use to specify an extended access list that you want this PIM interface to use as a join filter.
- You can apply the join filter at the global level or at the interface level.
- If an interface-level filter exists, it takes precedence over the global-level filter.
- Example 1

```
host1(config)#ipv6 pim join-filter gold
```
- Example 2

```
host1(config-interface)#ipv6 pim join-filter gold
```

- Use the **no** version to remove the filter association.
- See `ipv6 pim join-filter`.

Configuring PIM SSM


Source Specific Multicast (SSM) is a datagram delivery model that best supports one-to-many applications, also known as broadcast applications. SSM is networking technology that targets audio and video broadcast application environments.

To use PIM SSM, MLDv2 must be configured on customer premises equipment (CPE)–facing interfaces to receivers, and PIM sparse mode must be configured on CPE-facing interfaces to sources and on core-facing interfaces. After configuring SSM, you can use the **show ipv6 pim sparse-mode sg-state** command to display SSM group membership information.

To configure PIM SSM, you enable PIM SSM on the router and define the SSM range of IP multicast addresses.

Figure 22 on page 271 shows how PIM SSM is configured between a receiver and a source in the network. Interface 1 has MLDv2 enabled and all other interfaces towards the core or source have PIM SSM enabled.

Figure 22: Network on Which to Configure PIM SSM

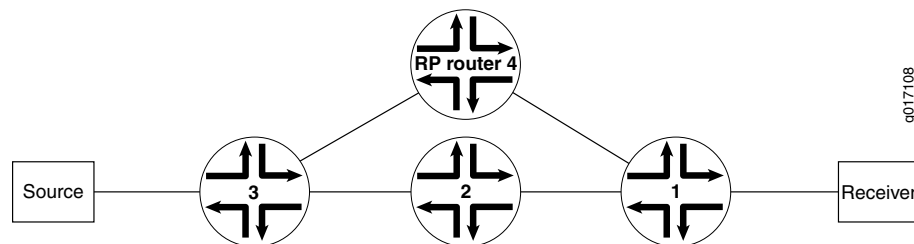

To configure PIM SSM:

1. Enable PIM SSM on the E Series router. The IANA SSM range is configured by default. You can modify the SSM address range by using the access list.

```
host1(config)#access-list 15 permit ip any host 239.0.0.2
host1(config)#access-list 15 permit ip any 232.0.0.0 0.225.225.225
host1(config)#ipv6 pim ssm range 15
```

2. Enable PIM sparse mode on the CPE-facing interface towards the source or core.
3. Enable MLDv2 on the CPE-facing interface towards the receiver.

PIM SSM also works with MLDv1 if you configure the `ssm-map` in MLD as in the following example:

```
host1(config)#ipv6 pim ssm
host1(config)#ipv6 access-list ssm_map1 permit any host ff3e::1
host1(config)#ipv6 mld ssm-map enable
host1(config)#ipv6 mld ssm-map static ssm_map1 51::1
```

The **no** version disables ssm-map:

```
host1(config)#no ipv6 mld ssm-map static ssm_map1 51::1
```

ipv6 pim ssm

- Use to enable PIM SSM and define the SSM range of IPv6 multicast addresses.
- Example 1—Enables SSM with addresses in the IANA range. The SSM address range is set as the default, which is limited to the IPv6 address range, and where x represents any valid scope.

```
host1(config)#ipv6 pim ssm FF3 x ::/96
```

- Example 2—Configures Class D addresses outside of the default SSM range.

```
host1(config)#ipv6 access-list alist permit any ff3e::1:0:0/96
host1(config)#ipv6 pim ssm range alist
```

- Example 3—Resets the SSM address range to the default.

```
host1(config)#ipv6 pim ssm default
```

- Use the **no** version to disable SSM.
- See *ipv6 pim ssm*.

Configuring the BFD Protocol for PIM

The **ipv6 pim bfd-liveness-detection** command configures the Bidirectional Forwarding Detection (BFD) protocol for PIM. The BFD protocol uses control packets and shorter detection time limits to more rapidly detect failures in a network. Also, because they are adjustable, you can modify the BFD timers for more or less aggressive failure detection.

PIM routers send periodic hello messages from each PIM-enabled interface. You can configure this interval using the **ipv6 pim query-interval** command. By default, the PIM router sends a hello message every 30 seconds (with an interval range of 0–210 seconds). If it receives no response from a neighbor within 3.5 times the interval value (a minimum of 3.5 seconds), the PIM router drops the neighbor.

In contrast, when a BFD session exists between neighbors, a PIM neighbor that goes down is detected quickly (in milliseconds rather than in seconds).

When you issue the **ipv6 pim bfd-liveness-detection** command on a PIM router, the router establishes BFD liveness detection with all BFD-enabled PIM neighbors. When the local router receives an update from a remote PIM neighbor—if BFD is enabled and if the session is not already present—the local router attempts to create a BFD session to the remote neighbor.

Each adjacent pair of neighbors negotiates an acceptable transmit interval for BFD packets. The negotiated value can be different on each neighbor. Each neighbor then calculates a BFD liveness detection interval. When a neighbor does not receive a BFD packet within the detection interval, it declares the BFD session to be down.



NOTE: Before the router can use the `ipv6 pim bfd-liveness-detection` command, you must specify a BFD license key. To view an already configured license, use the `show license bfd` command.

For general information about configuring and monitoring the BFD protocol, see *Configuring BFD* in the *JunosE IP Services Configuration Guide*.

ipv6 pim bfd-liveness-detection

- Use to enable BFD (bidirectional forwarding detection) and define BFD values to more quickly detect PIM data path failures.
- The neighbors in a PIM network use the configured values to negotiate the actual transmit intervals for BFD packets.
 - You can use the **minimum-transmit-interval** keyword to specify the interval at which the local router proposes to transmit BFD control packets to its neighbors. The default value is 300 milliseconds.
 - You can use the **minimum-receive-interval** keyword to specify the minimum interval at which the local router must receive BFD control packets from its neighbors. The default value is 300 milliseconds.
 - You can use the **minimum-interval** keyword to specify the same value for both of those intervals. Configuring a minimum interval has the same effect as configuring the minimum receive interval and the minimum transmit interval to the same value. The default value is 300 milliseconds.
- You can use the **multiplier** keyword to specify the detection multiplier value. The calculated BFD liveness detection interval can be different on each neighbor. The multiplier value is roughly equivalent to the number of packets that can be missed before the BFD session is declared to be down. The default value is 3.
- For details on liveness detection negotiation, see *Negotiation of the BFD Liveness Detection Interval* in the *JunosE IP Services Configuration Guide*.
- You can change the BFD liveness detection parameters at any time without stopping or restarting the existing session; BFD automatically adjusts to the new parameter value. However, no changes to BFD parameters take place until the values resynchronize with each neighbor.
- Example


```
host1(config)#ipv6 pim bfd-liveness-detection minimum-interval 800
```
- Use the **no** version to disable BFD on the PIM interface.
- See `ipv6 pim bfd-liveness-detection`.

Removing PIM

To remove PIM from a VR, use the **no ipv6 router pim** command.

ipv6 router pim

- Use to create and enable PIM processing on a VR or to access Router Configuration mode.
- Example

```
host1:boston(config)#no ipv6 router pim
```
- Use the **no** version to remove PIM from the VR.
- See `ipv6 router pim`.

Resetting PIM Counters and Mappings

You can use the **clear ipv6 pim** commands to reset PIM counters and mappings.

clear ipv6 pim interface

- Use to clear the counters for multicast packet statistics on all interfaces or a specified interface.
- Specify an interface type and identifier, such as `atm 3/0` to clear the counters on that interface. For details about interface types and specifiers, see *Interface Types and Specifiers* in *JunosE Command Reference Guide*.
- If you do not specify an interface, the router clears the counters on all interfaces.
- Example

```
host1#clear ipv6 pim interface atm 3/0.5 count
```
- There is no **no** version.
- See `clear ipv6 pim interface`.

clear ipv6 pim remote-neighbor

- Use to clear the counters for remote neighbor statistics on all interfaces or the specified interface.
- Specify the IP address of an interface to clear the counters for that interface.
- If you do not specify an interface, the router clears the counters on all interfaces.
- Example

```
host1#clear ipv6 pim remote-neighbor 1001::1 count
```
- There is no **no** version.
- See `clear ipv6 pim remote-neighbor`.

Monitoring PIM

You can display information about PIM events and parameters.

Monitoring PIM Events

You can use the debug PIM commands to view information about PIM events.

debug ipv6 pim

- Use to show information about the selected event.
- To control the type of events displayed, specify a severity level.
- To control how much information to display, specify a verbosity level.
- Example

```
host1#debug ipv6 pim events severity 1 verbosity low
```

- Use the **no** version to disable the display.
- See debug ipv6 pim.

undebg ipv6 pim

- Use to turn off the display of information previously enabled with the **debug ipv6 pim** command.
- Example

```
host1#undebg ipv6 pim events
```

- There is no **no** version.
- See undebg ipv6 pim.

Monitoring PIM Settings

You can use the **show ipv6 pim** commands to display information about PIM settings.

show ipv6 pim

- Use to view general PIM router-level information.
- Field descriptions
 - Default PIM Version—Default PIM version number (always 2)
 - Default Domain Id—Default Domain Id (always 0)
 - Default Hello period—Default interval (in minutes) at which the router sends hello messages to neighbors
 - Default Hello Hold Time—Default time (in minutes) for which the router keeps the neighbor state alive
 - Join-Prune Interval—Interval value (in seconds) set in the join/prune message originated by the PIM router
 - Join-Prune Holdtime— Hold time value (in seconds) set in the join/prune message originated by the PIM router. The hold time is 3.5 times the PIM join/prune message interval value.

- Keepalive Period—Time SG join state is maintained in the absence of SG Join message
- Assert Time—Period after last assert before assert state is timed out
- Register Suppression Time—Period during which a designated router stops sending registers to the RP
- Register Probe Time—Time before register suppression time (RST) expires when a designated router might send a NULL-Register to the RP
- Register TTL—TTL value (in PIM register packets) originated by this PIM router
- SSM—State of SSM on this PIM router (enabled or disabled)
- range—Default SSM group range or name of the access list specifying the range
- Join filter—Name of the join filter access-list (if configured) for this PIM router
- Designated Router Priority—Designated router priority value

- Example

```
host1:1#show ipv6 pim
Default PIM Version: 2
Default Domain Id: 0
Default Hello Period: 30
Default Hello HoldTime: 105
Join-Prune Interval: 100
Join-Prune Holdtime: 350
Keepalive Period: 210
Assert Time: 210
Register Suppression Time: 60
Register Probe Time: 5
Register TTL: 64
SSM enabled, range default
Sparse-Mode Graceful Restart Duration: 30
Graceful restart is complete (timer 0 seconds)
Join filter, access-list bronze
Designated Router Priority: 2
```

- See show ipv6 pim.

show ipv6 pim bsr

- Use to display BSR information and the group prefixes for which the local router is a candidate RP in a PIM sparse mode environment.
- Field descriptions
 - Candidacy—Whether or not the router is a candidate BSR
 - Configured on—Interface on which the router is configured
 - address—Address of the router
 - hashMaskLen—Hash mask length
 - priority—Priority of the router

- period—Time between bootstrap messages
- Elected BSR—"this router" or IP address of the elected bootstrap router
- next BSM—If BSR is "this router," time until the next bootstrap message is sent
- expires in—If BSR is not "this router," time until the elected BSR expires if no bootstrap messages are received
- Local candidate RP mapping(s)—Routers that the mapping agent is evaluating to determine an RP router for this interface
- Example 1—On a router that is the elected BSR

```

host1:1#show ipv6 pim bsr
This PIM router is a Candidate BSR.
  Configured on intf ATM3/0.101, address: ::107:9
  hashMaskLen 30, priority 2, period 60 seconds.
  Elected BSR is this router, next BSM in 3 seconds.
  Local candidate RP mapping(s):
  Candidate RP ::107:9
  ::108:86, BSR, hold-time 150, interval 60, priority 192
  ::108:87, BSR, hold-time 150, interval 60, priority 192, from access-list
  acl
  ::108:88, BSR, hold-time 150, interval 60, priority 192, from access-list
  acl

```

- Example 2—On a router that is a candidate BSR

```

host1:1#show ipv6 pim bsr
This PIM router is a Candidate BSR.
  Configured on intf ATM3/0.100, address: ::107:9
  hashMaskLen 30, priority 2, period 60 seconds.
  Elected BSR is ::107:8 (priority 0), expires in 73 seconds.

```

- Example 3—On a router that is not a candidate BSR

```

host1:1#show ipv6 pim bsr
This PIM router is not a Candidate BSR.
  Elected BSR is ::107:9 (priority 0), expires in 73 seconds.

```

- See show ipv6 pim bsr.

show ipv6 pim interface

- Use to display information about PIM interfaces.
- Specify no keywords or variables to view information about all PIM interfaces.
- Provide an interface type and specifier (such as atm 3/0) to display information about that interface only. For details about interface types and specifiers, see Interface Types and Specifiers in *JunosE Command Reference Guide*.
- Specify the **detail** keyword to view detailed information for all PIM interfaces or for a specified PIM interface.
- Specify the **summary** keyword to view the number of configured, enabled, and disabled PIM sparse-mode interfaces.

- Specify the **count** keyword to view the number of multicast packets that the interface has sent and received.
- Field descriptions
 - Interface Addr—IPv6 address of the interface
 - Interface Name—Type and identifier of the interface. For details about interface types and specifiers, see *Interface Types and Specifiers in JunosE Command Reference Guide*.
 - Ver—Version of PIM running on this interface
 - Mode—PIM mode running on this interface: Sparse
 - Nbr Count—Number of neighbors connected to this interface
 - Hello Intvl—Time interval at which the interface sends hello messages to neighbors
 - J/P Interval—Total number of join/prune message interval, in seconds, at which the interface sends the join/prune messages
 - DR Address—Address of the designated router
 - SM—Number of PIM sparse mode interfaces
 - enabled—Number of interfaces administratively enabled
 - disabled—Number of interfaces administratively disabled
 - DR Pri— Designated router priority value
 - ControlPkt Count In | Out—PIM messages received on and sent from this interface
 - Hello—Number of hello messages
 - JoinPrune—Total number of join and prune messages
 - Assert—Number of assert messages
- Example 1

```
host1# show ipv6 pim interface
```

PIM Interface Table

Interface Addr	Interface	State	Ver	Mode	Nbr Count	Hello Intvl	J/P Intvl	DR Pri	DR Addr	JoinFilter
101::1	ATM2/0.100	Up	2	Sparse	1	30	150	5	101::2	-
102::1	ATM2/0.101	Up	2	Sparse	1	30	100	2	102::2	silver
103::1	ATM3/0.102	Up	2	Sparse	1	30	100	2	103::1	gold

- Example 2

```
host1#show ipv6 pim interface summary
PIM Interface Summary
SM:    0, 0 enabled, 0 disabled
```

- Example 3

```

host1#show ipv6 pim interface count
PIM Interface Count
Interface Addr  Interface Name      ControlPktCount In|Out
Hello          JoinPrune  Assert
::107:84       ATM3/0.20      0           0      0
                0           0      0

```

- See show ipv6 pim interface

show ipv6 pim neighbor

- Use to display information about PIM neighbors that the router discovered.
- Provide an interface type and specifier (such as atm 3/0) to display information about that interface only. For details about interface types and specifiers, see *Interface Types and Specifiers* in *JunosE Command Reference Guide*.
- Specify the **detail** keyword to view detailed information for all PIM neighbors or for a specified PIM neighbor.
- Field descriptions
 - Neighbor Addr—IPv6 address of the neighbor
 - Interface Name—Type and specifier of the interface to which the neighbor connects. For details about interface types and specifiers, see *Interface Types and Specifiers* in *JunosE Command Reference Guide*.
 - Uptime—Time since the router discovered this neighbor
 - Expires—Time available for the neighbor to send a hello message to the interface. If the neighbor does not send a hello message during this time, it will no longer be a neighbor.
 - Ver—Version of PIM that the neighbor is running
 - Mode—PIM mode that the neighbor is using: sparse
- Example

```

host1#show ipv6 pim neighbor
PIM Neighbor Table
Neighbor Addr  Interface Name      Uptime          Expires  Ver Mode
::107:48       atm2/1.109          1d15:47:35      00:01:41 2   Sparse
::108:58       atm2/1.108          1d15:47:34      00:01:42 2   Sparse
::111:98       atm2/0.110          1d15:48:02      00:01:44 2   Sparse

```

- See show ipv6 pim neighbor

show ipv6 pim remote-neighbor

- Use to view information about PIM remote neighbors.
- Field descriptions
 - Remote Nbr Addr—IPv6 address of remote neighbor
 - OurEnd Addr—IPv6 address of local interface, such as the local endpoint of a tunnel, that transmits data to remote neighbor

- Ver—Version of PIM running on the local interface
- Mode—PIM mode running on the local interface; always PIM sparse mode
- Nbr Count—Number of remote neighbors detected: 0 or 1
- Hello Intvl—Time interval at which the interface sends hello messages to neighbors
- DR Addr—Address of designated router
- In interface—Type and identifier of the interface on which PIM router receives packets from remote neighbor. For details about interface types and specifiers, see *Interface Types and Specifiers* in *JunosE Command Reference Guide*.
- Out interface—Type and identifier of the interface on which PIM router sends packets to remote neighbor. For details about interface types and specifiers, see *Interface Types and Specifiers* in *JunosE Command Reference Guide*.
- Example

```
host1:boston#show ipv6 pim remote-neighbor
PIM RemoteNbr Table
RemoteNbr Addr  OurEnd Addr      Ver Mode      Nbr  Hello  DR Addr
Count Intvl
1001::1          2001::1          2   Sparse    1    30    ::107:84
In interface : atm2/1.109
Out interface: atm2/1.108
```

- See `show ipv6 pim remote-neighbor`

show ipv6 pim rp

- Use to display information about PIM group-to-RP mappings.
- Specify the address of a group to view PIM group-to-RP mappings for a particular group.
- To display all group-to-RP mappings that the router has recorded, specify the **mapping** keyword.
- Field descriptions
 - Group—Prefix of the multicast group
 - RP—IP address of RP router for the multicast group
 - priority—This field is not functional
 - via—Method by which the RP router was assigned (static, BSR)
- Example

```
host1:8#show ipv6 pim rp mapping
PIM Group-to-RP mapping(s)
Group(s) ff00::/12
RP ::122:1, priority 0, via static
```

```
Group(s) ff0e::1:0/96
RP ::120:1, priority 0, via static
```

- See `show ipv6 pim rp`

show ipv6 pim rp-hash

- Use to show which RP router a multicast group is using.
- Field descriptions
 - Group—Multicast group
 - RP—RP router for the multicast group
 - priority—This field is not functional
 - via—Method by which the RP router was assigned (static, BSR)
- Example

```
host1:2#show ipv6 pim rp-hash 232.1.1.1
Group(s) ff00::/12
RP ::122:1, priority 0, via static
```

- See `show ipv6 pim rp-hash`

show ipv6 pim sparse-mode sg-state

- Use to display information for each (S,G) entry for PIM sparse mode and PIM SSM.
- Field descriptions
 - Group-to-RP mapping—IPv6 addresses and network mask of the multicast group
 - RP—IPv6 address of RP router
 - SSM group—Indicates that this is an SSM group
 - RPF route—IPv6 address and network mask of the RPF route
 - IIF—IPv6 address of the incoming interface for the RPF route
 - UpNbr—IPv6 address of the upstream neighbor
 - Oifs—Outgoing interface
 - Register Oif to RP—IP address of RP router for the outgoing interface; suppressed for SSM
 - Address—IPv6 address of outgoing interface
 - Interface—Type and specifier of the interface. For details about interface types and specifiers, see *Interface Types and Specifiers in JunosE Command Reference Guide*.
 - Joined as—Type of mapping
 - (S,G)—Mapping from a specific source to a specific group
 - (*G)—Mapping from any source to a specific group

- (*,RP)—Mapping from any source to any group
- Join expires—Number of seconds before the (S,G) membership expires
- Count of entries—Total count of (S,G) pair mappings

- Example

```

host1:2#show ipv6 pim sparse-mode sg-state
PIM SM route table and oif information
<*, ff0e::1:3>
  Group-to-RP mapping: ff00::/12 RP: ::123:1
  RPF Route: ::123:1/96 IIF: :106:73 UpNbr: ::106:37
  Oifs:
    Address: ::78:7:7 Interface: loopback7
    Local group membership present.
<*, ff0e::a:1>
  Group-to-RP mapping: ff001:/12 RP: ::123:1
  RPF Route: :123:1/96 IIF: :106:73 UpNbr: :106:37
  Oifs:
    Address: ::78:7:7 Interface: loopback7
    Local group membership present.
<::118:34, ff3e::1>
  SSM Group
  RPF Route: ::118:0/96 IIF: :118:1 (Directly attached)
  Oifs:
    Register Oif to RP: ::141:2 suppressed for SSM Group.
    Address: ::134:1 Interface: ATM3/0.104
    Joined as <S, G> Join Expires: 161
<::118:35, ff3e::1>
  SSM Group
  RPF Route: ::118:0/96 IIF: :118:1 (Directly attached)
  Oifs:
    Register Oif to RP: ::141:2 suppressed for SSM Group.
    Address: ::134:1 Interface: ATM3/0.104
    Joined as <S, G> Join Expires: 161
<::10:8, ff0e::5:1> EntryExpires: 143
  Group-to-RP mapping: ff00::/12 RP: ::123:1
  RPF Route: ::10:0/96 IIF: ::106:73 UpNbr: ::106:37
  Oifs:
    Address: ::78:7:7 Interface: loopback7
    Joined as <*, G>
Count of entries - <S, G>      : 3
                  <*, G>      : 2
                  <*, *, RP>: 0

```

- See show ipv6 pim sparse-mode sg-state

show ipv6 pim sparse-mode unicast-route

- Use to display the unicast routes that PIM sparse mode is using.
- Field descriptions
 - Route—IPv6 address and network mask for the unicast route
 - RpfNbr—RPF neighbor
 - lif—Incoming interface for the unicast route

- Pref—Preference for the unicast route
- Metric—Value of metric for the unicast route (type of metric varies with the unicast protocol)
- Count of entries—Number of unicast routes that PIM sparse mode is using.
- Example

```
host1:2#show ipv6 pim sparse-mode unicast-route
PIM SM unicast route table information
Route                               RpfNbr          Iif          Pref  Metric
-----
::122:0 /96                        ::122:1         255         1
Count of entries: 1
```

- See `show ipv6 pim sparse-mode unicast-route`

show ipv6 pim spt-threshold

- Use to display the threshold for switching to the shortest path tree at a PIM designated router.
- Field descriptions
 - Access List Name—Name of the IPv6 access list that specifies the groups to which the threshold applies
 - SptThreshold (in kbps)—Value at which PIM sparse mode should switch from a shared tree to an SPT. A value of infinity indicates that PIM sparse mode should never switch to an SPT.
- Example

```
host1:2#show ipv6 pim spt-threshold
Access List Name          SptThreshold(in kbps)
-----
1                          infinity
```

- See `show ipv6 pim spt-threshold`.

PART 3

Index

- [Index on page 287](#)

Index

A

- access lists, IP
 - specifying multicast groups.....54
- access lists, IPv6
 - specifying multicast groups.....227
- advertising DVMRP routes.....126, 133
- assert messages.....84
- assigning multicast groups.....55, 228
- auto-RP router
 - PIM sparse mode.....92
 - PIM sparse-dense mode.....92

B

- baseline commands
 - baseline ip dvmrp.....136
 - baseline ip igmp.....63
 - baseline ip igmp-proxy interface.....76
 - baseline ipv6 mld-proxy interface.....238
- BFD (Bidirectional Forwarding Detection)
 - RIP, configuring for.....109, 272
- BGP multicasting.....41, 173

C

- Class D IPv4 addresses.....46
- clear ip commands
 - clear ip dvmrp route.....136
 - clear ip mroute.....30
 - clear ip pim auto-rp.....110
 - clear ip pim interface count.....110, 274
 - clear ip pim remote-neighbor count.....110
- clear ipv6 commands
 - clear ipv6 mroute.....172
 - clear ipv6 pim remote-neighbor count.....274
- conventions
 - notice icons.....xvii
 - text and syntax.....xviii
- customer support.....xix
 - contacting JTAC.....xix

D

- data MDT, creating.....100

- data path failure
 - detecting RIP.....109, 272
- debug commands
 - debug ip pim.....111
 - debug ipv6 pim.....274
- default MDT, creating.....96
- detecting RIP data path failure.....109, 272
- disable command.....135
- disable-dynamic-redistribute command
 - DVMRP.....134
- disabling dynamic route redistribution
 - DVMRP.....134
- Distance Vector Multicast Routing Protocol. *See* DVMRP
- documentation set
 - comments on.....xix
- downstream interface.....73, 237
- DRs (designated routers)
 - PIM routing.....82, 259
- DVMRP (Distance Vector Multicast Routing Protocol)
 - advertising routes.....126, 133
 - configuring
 - limits.....129
 - summary addresses.....131
 - default router, configuring.....128
 - deleting routes.....136
 - enabling
 - on a virtual router.....128
 - on an interface.....129
 - exchanging unicast routes.....134
 - filtering reports.....130
 - metric.....132
 - monitoring.....136
 - neighbors.....126
 - overview.....126
 - pruning.....126
 - summary addresses.....131
 - tunnels.....136
 - using with IGMP.....129
 - using with PIM.....90, 129
- dynamic route redistribution, disabling
 - in DVMRP.....134

E

- encapsulation commands
 - encapsulation vlan.....23
- exchanging DVMRP unicast routes.....134

F

filtering	
DVMRP reports.....	130

G

group membership	
queries.....	46, 219
reports.....	46, 219

H

hardware multicast packet replication	
monitoring.....	23
OIF mapping.....	19, 162
overview.....	17
hello interval.....	86, 261
PIM.....	90, 111, 264, 268, 274
hold time	
PIM sparse mode.....	86, 260
hop count.....	132

I

IGMP (Internet Group Management Protocol).....	45
configuring.....	51
disabling.....	62
enabling.....	50
limiting groups on interfaces.....	57
monitoring.....	31, 63
performing host functions.....	74
querier.....	51
removing.....	62
specifying version.....	23, 51, 55
igmp commands	
igmp disable.....	62
igmp promiscuous	62
IGMP proxy.....	73
configuring.....	74
enabling.....	74
monitoring.....	76
version.....	73
IGMP reports, accepting.....	61
IGP (interior gateway protocol).....	125
importing routes. <i>See</i> redistributing routes	
Internet Group Management Protocol. <i>See</i> IGMP	
investigating IP multicast routes.....	42
IP addresses	
class D.....	46
for multicasting.....	46

ip commands

ip block-multicast-sources.....	25
ip multicast-routing.....	6, 10
ip multicast-routing disable-rpf-check.....	9
ip multicast-routing permanent-mroute.....	10
ip route-type.....	9
ip rpf-route.....	7
ip unnumbered.....	23
mroute port limit.....	26, 28, 170

ip dvmrp commands.....129

ip dvmrp.....	129, 135
ip dvmrp accept-filter.....	130
ip dvmrp announce-list.....	133
ip dvmrp auto-summary.....	131
ip dvmrp disable.....	135
ip dvmrp metric-offset.....	132
ip dvmrp route-limit.....	129
ip dvmrp routehog-notification.....	129
ip dvmrp summary-address.....	131
ip dvmrp unicast-routing.....	134

See also show ip dvmrp commands

ip igmp commands.....50

ip igmp.....	50
ip igmp access-group.....	54
ip igmp access-source-group.....	54, 55
ip igmp group limit.....	58
ip igmp immediate-leave.....	52
ip igmp last-member query-interval.....	52
ip igmp promiscuous.....	62
ip igmp querier.....	51
ip igmp querier-timeout.....	52
ip igmp query-interval.....	53
ip igmp query-max-response-time.....	53
ip igmp robustness.....	53
ip igmp ssm-map enable.....	56
ip igmp ssm-map static.....	56
ip igmp static-exclude.....	59
ip igmp static-group.....	55
ip igmp static-include.....	59
ip igmp version.....	23, 51, 55
ip igmp-proxy.....	74
ip igmp-proxy unsolicited-report-interval.....	74
ip igmp-proxy V1-router-present-time.....	74

See also show ip igmp commands

ip multicast commands

ip multicast admission-bandwidth-limit.....	26
ip multicast ioa-packet-replication.....	23
ip multicast-routing bandwidth-map.....	17

-
- IP multicast groups
 - assigning to an interface.....55
 - identifying.....46
 - leaving.....46
 - maintaining membership of.....46
 - reporting.....45
 - specifying.....54
 - IP multicast interfaces, monitoring.....31
 - IP multicast routes.....42
 - IP multicasting
 - benefits of.....3
 - deleting routes.....30
 - enabling.....6
 - M-BONE.....125
 - monitoring.....30
 - ip pim commands.....90
 - ip pim.....90
 - ip pim bsr-candidate.....94
 - ip pim data-mdt.....105
 - ip pim group-address-pool.....105
 - ip pim join-filter.....107
 - ip pim query-interval.....90
 - ip pim rp-address.....92
 - ip pim rp-candidate.....94
 - ip pim send-rp-announce.....92
 - ip pim send-rp-discovery scope.....92
 - ip pim sparse-mode
 - graceful-restart-duration.....90
 - ip pim spt-threshold.....96
 - See also show ip pim commands
 - ip rip commands
 - ip rip bfd-liveness-detection.....109, 272
 - IP tunnels
 - monitoring.....31
 - ipv6 commands.....150
 - ipv6 block-multicast-sources.....167
 - ipv6 mld robustness.....224
 - ipv6 multicast-routing.....149
 - ipv6 multicast-routing disable-rpf-check.....149
 - ipv6 multicast-routing permanent-route.....150
 - ipv6 route-type.....150
 - ipv6 rpf-route.....149
 - See also show ipv6 commands
 - IPv6 hardware multicast packet replication
 - overview.....160
 - ipv6 mld commands
 - ipv6 mld.....223
 - ipv6 mld access-group.....227
 - ipv6 mld access-source-group.....227
 - ipv6 mld apply-oif-map.....228
 - ipv6 mld explicit-tracking.....235
 - ipv6 mld group limit.....233
 - ipv6 mld immediate-leave.....224
 - ipv6 mld last-member query-interval.....224
 - ipv6 mld oif-map.....228
 - ipv6 mld querier-timeout.....224
 - ipv6 mld query-interval.....224
 - ipv6 mld query-max-response-time.....224
 - ipv6 mld ssm-map enable.....233
 - ipv6 mld ssm-map static.....233
 - ipv6 mld static-exclude.....234
 - ipv6 mld static-group.....228
 - ipv6 mld static-include.....234
 - ipv6 mld version.....223, 228
 - ipv6 mld-proxy.....237
 - ipv6 mld-proxy
 - unsolicited-report-interval.....237
 - ipv6 mld-proxy version.....237
 - IPv6 multicast
 - benefits of.....145
 - deleting routes.....172
 - enabling.....149
 - ipv6 multicast commands
 - ipv6 multicast
 - admission-bandwidth-limit.....168
 - ipv6 multicast-routing bandwidth-map.....159
 - IPv6 multicast groups
 - assigning to an interface.....228
 - identifying.....219
 - leaving.....219
 - maintaining membership of.....219
 - reporting.....219
 - specifying.....227
 - ipv6 pim commands.....264, 268
 - ipv6 pim.....264
 - ipv6 pim bsr-candidate.....266
 - ipv6 pim join-filter.....270
 - ipv6 pim query-interval.....264
 - ipv6 pim rp-address.....266
 - ipv6 pim rp-candidate.....266
 - ipv6 pim spt-threshold.....268
 - See also show ipv6 pim commands
- J**
- join messages.....85, 260
- L**
- leave group membership messages.....46, 219

leaving an IP multicast group.....	46
leaving an IPv6 multicast group.....	219
limiting IGMP groups on interfaces.....	57
limiting MLD groups on interfaces.....	230
liveness detection	
RIP and BFD.....	109, 272

M

M-BONE (multicast backbone of the Internet).....	125
manuals	
comments on.....	xix
MDT (Multicast Distribution Tree)	
creating with default MDT.....	96
mdt commands	
mdt-data-delay.....	106
mdt-data-holddown.....	106
mdt-data-timeout.....	106
mdt-interval.....	106
metric	
DVMRP.....	132
MLD (Multicast Listener Discovery).....	219
configuring.....	224
disabling.....	235
enabling.....	223
explicit host tracking.....	231
limiting groups on interfaces.....	230
monitoring.....	241
performing host functions.....	237
removing.....	235
specifying version.....	223
SSM mapping.....	230
traffic.....	231
mld disable command.....	235
MLD explicit host tracking.....	231
MLD proxy.....	236
configuring.....	237
enabling.....	237
monitoring.....	241
version.....	236
MLD SSM mapping.....	230
MLD traffic.....	231
mrinfo requests, support for.....	31
mtrace command.....	42
multicast	
IP. <i>See</i> IP multicasting	
IPv6. <i>See</i> IPv6 multicast	
Multicast Distribution Tree. <i>See</i> MDT	
multicast group port limit command.....	58, 233
Multicast Listener Discovery. <i>See</i> MLD	

multicast VPNs	
creating with data MDTs.....	97
creating with the default MDT.....	96
overview.....	96

N

neighbors, DVMRP.....	126
notice icons.....	xvii

P

PIM (Protocol Independent Multicast).....	81, 274
displaying events.....	111, 274
enabling	
on a virtual router.....	89, 263
on an interface.....	90, 264
monitoring.....	31, 111, 274
removing.....	110, 273
resetting counters and mappings.....	110, 274
using with DVMRP.....	90, 129
using with IGMP.....	90
using with MLD.....	264
<i>See also</i> PIM dense mode, PIM sparse mode,	
PIM sparse-dense mode	
PIM dense mode.....	82
<i>See also</i> PIM	
pim disable command.....	89, 263
PIM SM. <i>See</i> PIM sparse mode	
PIM sparse mode.....	84, 260
configuring auto-RP router.....	92
joining groups.....	260
pruning.....	260
remote neighbors, configuring.....	96, 97, 268
setting a threshold.....	96, 268
timers.....	86, 260
PIM sparse-dense mode	81
configuring auto-RP router.....	92
overview.....	87
PIM SSM (PIM source-specific multicast)	
enabling.....	108, 271
requirements for IGMPv3.....	108
requirements for MLDv2.....	271
Protocol Independent Multicast. <i>See</i> PIM	
prune messages.....	83, 260
Q	
query-interval command.....	269

R

- reachability commands
 - IP multicast.....42
- redistribute command
 - DVMRP.....132
- redistributing routes, DVMRP.....132
- redistribution routes
 - disabling dynamic (DVMRP).....134
- remote neighbors
 - PIM sparse mode
 - configuring.....96, 97, 268
- remote-neighbor command.....269
- removing PIM.....110, 273
- rendezvous point router. *See* RP routers
- reporting IP multicast groups.....45
- reporting IPv6 multicast groups.....219
- resetting PIM counters and mappings.....110, 274
- reverse-path forwarding. *See* RPF
- RIP (Routing Information Protocol)
 - BFD liveness detection and.....109, 272
 - detecting path failures.....109, 272
 - purging learned routes.....109, 272
- route-map command.....133
- router commands
 - router dvmrp.....132, 135
 - router igmp.....62
 - router mld.....235
 - router pim.....89, 110, 263, 273
- routes
 - using for other protocols.....9, 150
- routing policy commands
 - set admission-bandwidth.....10
 - set qos-bandwidth.....14
- RP (rendezvous point) routers.....92, 266
 - assigning automatically.....92
 - configuring
 - automatic.....92
 - static.....92, 266
- RPF (reverse-path forwarding).....7, 145, 149
- RPF routes, monitoring.....7, 175

S

- set threshold command.....107
- setting
 - baseline
 - DVMRP.....136
 - IGMP.....63

- IGMP Proxy.....76
- MLD Proxy.....238
- DVMRP hop-count.....132
- PIM SPT threshold
 - IP.....96
 - IPv6.....268
- SFPs (small form-factor pluggable transceivers).....178
- shared trees.....84, 85, 96, 268
- shortest path trees. *See* SRTs
- show ip commands
 - show ip mroute.....31
 - show ip mroute count.....31
 - show ip mroute oif-detail.....31
 - show ip mroute summary.....31
 - show ip rpf-route.....7
 - show mroute count.....207
- show ip dvmrp commands
 - show ip dvmrp.....136
 - show ip dvmrp interface.....136
 - show ip dvmrp mroute.....136
 - show ip dvmrp neighbor.....136
 - show ip dvmrp route.....136
 - show ip dvmrp routeNextHop.....136
- show ip igmp commands
 - show ip igmp.....63
 - show ip igmp groups.....63
 - show ip igmp interface.....63
 - show ip igmp interface brief.....63
 - show ip igmp membership.....63
 - show ip igmp-proxy.....76
 - show ip igmp-proxy groups.....76
 - show ip igmp-proxy interface.....76
- show ip multicast commands
 - show ip multicast protocols.....31
 - show ip multicast protocols brief.....31
 - show ip multicast routing.....31
- show ip pim commands
 - show ip pim111
 - show ip pim auto-rp.....111
 - show ip pim bsr.....111
 - show ip pim data-mdt.....111
 - show ip pim dense-mode sg-state.....111
 - show ip pim interface.....111
 - show ip pim neighbor.....111
 - show ip pim rp.....111
 - show ip pim rp-hash.....111
 - show ip pim sparse-mode sg-state.....111

show ip pim sparse-mode unicast-route.....	111	static routes	
show ip pim spt-threshold.....	111	configuring.....	7, 149
show ipv6 commands		summary addresses	
show ipv6 interface.....	184	DVMRP routing.....	131
show ipv6 mroute.....	201	support, technical See technical support	
show ipv6 mroute active.....	204		
show ipv6 mroute count.....	208	T	
show ipv6 mroute oif-detail.....	209	technical support	
show ipv6 mroute statistics.....	212	contacting JTAC.....	xix
show ipv6 mroute summary.....	214	text and syntax conventions.....	xviii
show ipv6 rpf-route.....	175	timers	
show ipv6 mld commands		PIM sparse mode.....	86, 260
show ipv6 mld.....	241	trace packets.....	42
show ipv6 mld groups.....	242	tunnel group-address-pool command.....	107
show ipv6 mld interface.....	198, 244	tunnel mdt command.....	100, 104
show ipv6 mld interface brief.....	248		
show ipv6 mld membership.....	250	U	
show ipv6 mld oif-mapping.....	252	undebug commands	
show ipv6 mld ssm-mapping.....	252	undebug ip pim.....	111
show ipv6 mld-proxy.....	254	undebug ipv6 pim.....	274
show ipv6 mld-proxy groups.....	255	unicast routes, DVMRP.....	134
show ipv6 mld-proxy interface.....	256	update-source command.....	269
show ipv6 multicast commands		upstream interface.....	73, 236
show ipv6 multicast protocols.....	216		
show ipv6 multicast protocols brief.....	217	V	
show ipv6 multicast routing.....	218	vlan commands	
show ipv6 pim commands		encapsulation vlan.....	23
show ipv6 pim.....	274		
show ipv6 pim bsr.....	274	X	
show ipv6 pim interface.....	274	XFPs (10-gigabit small form-factor pluggable	
show ipv6 pim neighbor.....	274	transceivers).....	178
show ipv6 pim remote-neighbor.....	274		
show ipv6 pim rp.....	274		
show ipv6 pim rp-hash.....	274		
show ipv6 pim sparse-mode sg-state.....	274		
show ipv6 pim sparse-mode			
unicast-route.....	274		
show ipv6 pim spt-threshold.....	274		
show multicast group limit command.....	73, 253		
show vlan subinterface command.....	182		
source-rooted trees. See SRTs			
Source-Specific Multicast for			
IP—draft-ietf-ssm-arch-06.txt (March 2005			
expiration).....	88, 262		
specifying IP multicast groups.....	54		
specifying IPv6 multicast groups.....	227		
SPTs (shortest path trees). See SRTs			
SRTs (source-rooted trees).....	82, 96, 126, 259, 268		