



---

# JunosE™ Software for E Series™ Broadband Services Routers

## Command Reference N to Z

Release  
12.3.x



---

Published: 2011-10-04

Juniper Networks, Inc.  
1194 North Mathilda Avenue  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

*JunosE™ Software for E Series™ Broadband Services Routers Command Reference Guide N to Z*  
Release 12.3.x  
Copyright © 2011, Juniper Networks, Inc.  
All rights reserved.

Revision History  
October 2011—FRS JunosE 12.3.x

The information in this document is current as of the date listed in the revision history.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Abbreviated Table of Contents

	About the Documentation .....	xxxv
Part 1	Commands, N to Z	
Chapter 1	Command Reference Topics .....	3
Chapter 2	N Commands .....	19
Chapter 3	O Commands .....	105
Chapter 4	P Commands .....	123
Chapter 5	Q Commands .....	287
Chapter 6	R Commands .....	305
Chapter 7	S Commands .....	435
Chapter 8	T Commands .....	1275
Chapter 9	U, V, W, and Y Commands .....	1399
Part 2	Index	
	Index .....	1451





# Table of Contents

	<b>About the Documentation . . . . .</b>	<b>xxxv</b>
	E Series and JunosE Documentation and Release Notes . . . . .	xxxv
	Audience . . . . .	xxxv
	E Series and JunosE Text and Syntax Conventions . . . . .	xxxv
	Obtaining Documentation . . . . .	xxxvii
	Documentation Feedback . . . . .	xxxvii
	Requesting Technical Support . . . . .	xxxvii
	Self-Help Online Tools and Resources . . . . .	xxxviii
	Opening a Case with JTAC . . . . .	xxxviii
<b>Part 1</b>	<b>Commands, N to Z</b>	
<b>Chapter 1</b>	<b>Command Reference Topics . . . . .</b>	<b>3</b>
	Using the no Version Versus the default Version of Commands . . . . .	3
	Deprecated Commands . . . . .	4
	Filtering show Commands . . . . .	4
	Interface Types and Specifiers . . . . .	5
<b>Chapter 2</b>	<b>N Commands . . . . .</b>	<b>19</b>
	nas-port-type atm . . . . .	20
	nas-port-type ethernet . . . . .	21
	neighbor . . . . .	22
	neighbor activate . . . . .	23
	neighbor advertise-map . . . . .	24
	neighbor advertisement-interval . . . . .	25
	neighbor allow . . . . .	26
	neighbor allowas-in . . . . .	27
	neighbor as-override . . . . .	28
	neighbor bfd-liveness-detection . . . . .	29
	neighbor capability . . . . .	31
	neighbor default-originate . . . . .	33
	neighbor description . . . . .	34
	neighbor distribute-list . . . . .	35
	neighbor ebgp-multihop . . . . .	36
	neighbor filter-list . . . . .	37
	neighbor graceful-restart . . . . .	38
	neighbor graceful-restart restart-time . . . . .	39
	neighbor graceful-restart stalepaths-time . . . . .	40
	neighbor ibgp-singlehop . . . . .	41
	neighbor lenient . . . . .	42
	neighbor local-as . . . . .	43

neighbor maximum-orf-entries . . . . .	44
neighbor maximum-prefix . . . . .	45
neighbor maximum-update-size . . . . .	46
neighbor next-hop-self . . . . .	47
neighbor next-hop-unchanged . . . . .	48
neighbor passive . . . . .	49
neighbor password . . . . .	50
neighbor peer-group . . . . .	51
neighbor peer-type . . . . .	52
neighbor prefix-list . . . . .	53
neighbor prefix-tree . . . . .	54
neighbor remote-as . . . . .	55
neighbor remove-private-as . . . . .	56
neighbor rib-out disable . . . . .	57
neighbor route-map . . . . .	58
neighbor route-reflector-client . . . . .	59
neighbor send-community . . . . .	60
neighbor send-label . . . . .	61
neighbor shutdown . . . . .	62
neighbor site-of-origin . . . . .	63
neighbor soft-reconfiguration inbound . . . . .	64
neighbor timers . . . . .	65
neighbor unsuppress-map . . . . .	66
neighbor update-source . . . . .	67
neighbor weight . . . . .	68
net . . . . .	69
netbios-name-server . . . . .	70
netbios-node-type . . . . .	71
network . . . . .	72
network area . . . . .	74
next-address . . . . .	75
next-hop . . . . .	76
next-interface . . . . .	77
next-parent . . . . .	78
no area . . . . .	79
no boot hotfix all-releases . . . . .	80
no bulkstats . . . . .	81
no ip interface . . . . .	82
no log filters . . . . .	83
no radius client . . . . .	84
no rtr . . . . .	85
no rtr reaction-configuration . . . . .	86
no service-management subscriber-session force . . . . .	87
node . . . . .	88
notification id . . . . .	89
nsf ietf . . . . .	90
nsf interface wait . . . . .	91
nsf t1 . . . . .	92
nsf t2 . . . . .	93

	nsf t3 .....	94
	ntp access-group .....	95
	ntp broadcast .....	96
	ntp broadcast-client .....	97
	ntp broadcast-delay .....	98
	ntp disable .....	99
	ntp enable .....	100
	ntp master .....	101
	ntp server .....	102
	ntp server enable .....	103
	ntp source .....	104
<b>Chapter 3</b>	<b>O Commands .....</b>	<b>105</b>
	oam ais-rdi .....	106
	oam cc .....	107
	oam-pvc .....	108
	oam retry .....	109
	operational-virtual-router .....	110
	operations-per-hop .....	111
	organization .....	112
	ospf auto-cost reference-bandwidth .....	113
	ospf bandwidth .....	114
	ospf enable .....	115
	ospf log-adjacency-changes .....	116
	ospf shutdown .....	117
	overload advertise-high-metric issu .....	118
	overload shutdown .....	119
	override c2 byte .....	120
	override-user .....	121
	owner .....	122
<b>Chapter 4</b>	<b>P Commands .....</b>	<b>123</b>
	padn .....	124
	parent-group .....	125
	passive-interface .....	126
	password .....	127
	path .....	129
	path description .....	130
	path ds1 e1 .....	131
	path ds1 e1 bert .....	132
	path ds1 e1 channel-group description .....	133
	path ds1 e1 channel-group shutdown .....	134
	path ds1 e1 channel-group snmp trap link-status .....	135
	path ds1 e1 channel-group timeslots .....	136
	path ds1 e1 clock source .....	137
	path ds1 e1 description .....	138
	path ds1 e1 framing .....	139
	path ds1 e1 loopback .....	140
	path ds1 e1 shutdown .....	142
	path ds1 e1 snmp trap link-status .....	143

path ds1 fdl . . . . .	144
path ds1 fdl carrier . . . . .	145
path ds1 fdl string . . . . .	146
path ds1 fdl transmit . . . . .	147
path ds1 remote-loopback . . . . .	148
path ds3 . . . . .	149
path ds3 bert . . . . .	150
path ds3 clock source . . . . .	151
path ds3 description . . . . .	152
path ds3 equipment loopback . . . . .	153
path ds3 framing . . . . .	154
path ds3 loopback . . . . .	155
path ds3 mdl carrier . . . . .	156
path ds3 mdl string . . . . .	157
path ds3 mdl transmit . . . . .	158
path ds3 shutdown . . . . .	159
path ds3 snmp trap link-status . . . . .	160
path ds3 t1 . . . . .	161
path ds3 t1 bert . . . . .	162
path ds3 t1 clock source . . . . .	163
path ds3 t1 description . . . . .	164
path ds3 t1 fdl . . . . .	165
path ds3 t1 fdl carrier . . . . .	166
path ds3 t1 fdl string . . . . .	167
path ds3 t1 fdl transmit . . . . .	168
path ds3 t1 framing . . . . .	169
path ds3 t1 loopback . . . . .	170
path ds3 t1 remote-loopback . . . . .	171
path ds3 t1 shutdown . . . . .	172
path ds3 t1 snmp trap link-status . . . . .	173
path ds3 t1 timeslots . . . . .	174
path e1 unframed . . . . .	175
path overhead c2 . . . . .	176
path overhead j1 . . . . .	177
path shutdown . . . . .	178
path snmp trap link-status . . . . .	179
path trigger alarm prdi . . . . .	180
path trigger delay . . . . .	181
peak-burst . . . . .	182
peak-rate . . . . .	183
peer ip identity . . . . .	184
pfs group . . . . .	185
pim disable . . . . .	186
ping . . . . .	187
ping atm interface atm . . . . .	190
ping mpls ip . . . . .	191
ping mpls l2transport . . . . .	193
ping mpls l3vpn . . . . .	196
ping mpls rsvp tunnel . . . . .	199

ping mpls vpls .....	201
policer .....	204
policy-parameter hierarchical .....	205
pos description .....	206
pos framing .....	207
pos scramble-atm .....	208
ppp aaa-profile .....	209
ppp authentication .....	210
ppp chap-challenge-length .....	211
ppp description .....	212
ppp dos-protection-group .....	213
ppp fragmentation .....	214
ppp hash-link-selection .....	215
ppp initiate-ip .....	216
ppp initiate-ipv6 .....	217
ppp ipcp lockout .....	218
ppp ipcp netmask .....	219
ppp ipcp prompt-option dns .....	220
ppp keepalive .....	221
ppp log .....	222
ppp magic-number disable .....	223
ppp magic-number ignore-mismatch .....	224
ppp max-bad-auth .....	225
ppp max-negotiations .....	226
ppp mru .....	227
ppp multilink enable .....	228
ppp multilink multiclass .....	229
ppp multilink multiclass fragmentation .....	230
ppp multilink multiclass reassembly .....	231
ppp multilink multiclass traffic-class .....	232
ppp ncp-Ordering-Required .....	233
ppp passive-mode .....	234
ppp peer .....	235
ppp peer-ip-address-optional .....	236
ppp reassembly .....	237
ppp shutdown .....	238
pppoe .....	239
pppoe acName .....	240
pppoe always-offer .....	241
pppoe auto-configure .....	242
pppoe clear lockout interface .....	243
pppoe dos-protection-group .....	244
pppoe duplicate-protection .....	245
pppoe log pppoeControlPacket .....	246
pppoe max-session-vsa .....	247
pppoe motm .....	248
pppoe mtu .....	249
pppoe pads disable-ac-info .....	250
pppoe profile .....	251

pppoe remote-circuit-id	252
pppoe service-name-table	253
pppoe-service-name-table	254
pppoe sessions	255
pppoe subinterface	256
pppoe url	257
pre-authenticate	258
preference	259
prefix	260
pre-share	262
pre-share-masked	263
priority burst	264
priority over-subscription-factor	265
priority rate	266
privilege	267
privilege-group alias	268
privilege-group membership	269
privilege-group membership clear	270
privilege level	271
privilege reset	272
profile	273
profile atm1483 bulk-config-name	274
profile atm1483 bulk-config-name pvc	275
profile-reassign	276
profile vlan bulk-config	277
profile vlan override bulk-config	278
protocol burst	279
protocol drop-probability	280
protocol priority	281
protocol rate	282
protocol shutdown	283
protocol skip-priority-rate-limiter	284
protocol weight	285
pvc	286
<b>Chapter 5</b>	
<b>Q Commands</b>	<b>287</b>
qos-adaptive-mode	288
qos-interface-parent	289
qos-interface-set	290
qos-interface-superset	291
qos-mode-port	292
qos-parameter	293
qos-parameter-define	295
qos-port-type-profile	297
qos-profile	298
qos-shaping-mode	299
qos-shared-shaper-control	300
query-interval	301
queue	302

## Chapter 6

queue-profile .....	303
<b>R Commands .....</b>	<b>305</b>
radius accounting server .....	306
radius acct-session-id-format .....	307
radius algorithm .....	308
radius authentication server .....	309
radius calling-station-delimiter .....	310
radius calling-station-format .....	311
radius client .....	315
radius connect-info-format .....	316
radius disconnect client .....	317
radius dsl-port-type .....	318
radius dynamic-request server .....	319
radius ethernet-port-type .....	320
radius icr-partition-accounting .....	321
radius ignore .....	322
radius include .....	323
radius include dsl-forum-attributes .....	331
radius nas-identifier .....	333
radius nas-port-format .....	334
radius nas-port-format extended .....	335
radius override calling-station-id remote-circuit-id .....	337
radius override nas-info .....	338
radius override nas-ip-addr tunnel-client-endpoint .....	339
radius override nas-port-id remote-circuit-id .....	340
radius per-profile-attr-list .....	341
radius per-profile-attr-list (For Global Configuration) .....	342
radius-perprofilelist-name .....	343
radius pppoe nas-port-format unique .....	344
radius pre-authentication server .....	345
radius relay server .....	346
radius relay udp-checksum .....	347
radius remote-circuit-id-delimiter .....	348
radius remote-circuit-id-format .....	349
radius rollover-on-reject .....	350
radius route-download server .....	351
radius trap acct-server-not-responding .....	352
radius trap acct-server-responding .....	353
radius trap auth-server-not-responding .....	354
radius trap auth-server-responding .....	355
radius trap no-acct-server-responding .....	356
radius trap no-auth-server-responding .....	357
radius tunnel-accounting .....	358
radius udp-checksum .....	359
radius update-source-addr .....	360
radius vlan nas-port-format stacked .....	361
range .....	362
rate-limit-profile .....	363

rate-period	365
rd	366
reaction-factor	367
receive-interface	368
receive version	369
receive-window	370
redistribute	371
redistribute isis	374
redistribute isis ip	375
red-mark	376
redundancy	377
redundancy force-switchover	378
redundancy lockout	379
redundancy revert	380
redundancy revertive	381
redundant-port	382
redundant-port force-failover	383
reference-bandwidth	384
reference-rate	385
refresh-period	386
relearn	387
reload	388
reload slot	389
remote host	390
remote-neighbor	391
rename	392
request-data-size	394
request-type	395
reserve	396
reserve-bandwidth	397
resource	398
resource if-type	399
resource threshold	400
restricted	401
retransmit	402
retransmit-interval	403
rib-out disable	404
root proxy url	405
route interface	406
route-map	409
route-target	410
router bgp	411
router dvmrp	412
router-id	413
router igmp	414
router isis	415
router mld	416
router-name	417
router ospf	418



	router pim . . . . .	419
	router rip . . . . .	420
	rtr . . . . .	421
	rtr reaction-configuration . . . . .	422
	rtr reaction-configuration action-type . . . . .	423
	rtr reaction-configuration operation-failure . . . . .	424
	rtr reaction-configuration path-change . . . . .	425
	rtr reaction-configuration test-completion . . . . .	426
	rtr reaction-configuration test-failure . . . . .	427
	rtr reset . . . . .	428
	rtr schedule . . . . .	429
	rtr schedule life . . . . .	430
	rtr schedule restart-time . . . . .	431
	rtr schedule start-time . . . . .	432
	run . . . . .	433
<b>Chapter 7</b>	<b>S Commands . . . . .</b>	<b>435</b>
	sample . . . . .	436
	samples-of-history-kept . . . . .	437
	schedule macro . . . . .	438
	scheduler-profile . . . . .	439
	scramble . . . . .	440
	sdh . . . . .	441
	secret . . . . .	442
	secure ip classifier-list . . . . .	443
	secure ipv6 classifier-list . . . . .	446
	secure ip policy-list . . . . .	449
	secure ipv6 policy-list . . . . .	450
	secure l2tp policy-list . . . . .	451
	send . . . . .	452
	send-more-specific-routes-disable . . . . .	453
	send version . . . . .	454
	serial description . . . . .	455
	server-address . . . . .	456
	server-name . . . . .	457
	service . . . . .	458
	service check-config . . . . .	459
	service config-monitor-periodicity . . . . .	460
	service ctrl-x-reboot . . . . .	461
	service-description . . . . .	462
	service dhcp-external . . . . .	463
	service dhcp-local . . . . .	464
	service dhcpv6-local . . . . .	465
	service-management install . . . . .	466
	service-management owner-session . . . . .	467
	service-management service-session-profile . . . . .	468
	service-management subscriber-session . . . . .	469
	service-management subscriber-session force . . . . .	470
	service-management subscriber-session service-session . . . . .	471

service manual-commit . . . . .	472
service password-encryption . . . . .	473
service show-config . . . . .	474
service timestamps . . . . .	475
service unattended-password-recovery . . . . .	476
session-out-of-resource-result-code-override . . . . .	477
session-timeout . . . . .	478
sessions-limit-group . . . . .	479
set . . . . .	480
set admission-bandwidth . . . . .	481
set as-path prepend . . . . .	482
set automatic-tag . . . . .	483
set comm-list delete . . . . .	484
set community . . . . .	485
set dampening . . . . .	486
set dhcp relay . . . . .	487
set dhcp relay agent sub-option . . . . .	489
set dhcp relay assign-giaddr-source-ip . . . . .	490
set dhcp relay broadcast-flag-replies . . . . .	491
set dhcp relay giaddr-selects-interface . . . . .	492
set dhcp relay layer2-unicast-replies . . . . .	493
set dhcp relay max-client-packet-rate . . . . .	494
set dhcp relay options . . . . .	495
set dhcp relay override . . . . .	496
set dhcp relay preserve-trusted-client-option . . . . .	497
set dhcp relay proxy send-first-offer . . . . .	498
set dhcp relay proxy timeout . . . . .	499
set dhcp relay trust-all . . . . .	500
set dhcp vendor-option . . . . .	501
set distance . . . . .	502
set extcommunity . . . . .	503
set ip interface-profile . . . . .	504
set ip next-hop . . . . .	505
set ip service-profile . . . . .	506
set ip source-prefix . . . . .	507
set ipv6 next-hop . . . . .	508
set level . . . . .	509
set local-preference . . . . .	510
set metric . . . . .	511
set metric-type . . . . .	512
set mpls-label . . . . .	513
set origin . . . . .	514
set-overload-bit . . . . .	515
set priority . . . . .	516
set qos-bandwidth . . . . .	517
set route-class . . . . .	518
set route-type . . . . .	519
set tag . . . . .	520
set threshold . . . . .	521

set weight . . . . .	522
shadow-node . . . . .	523
shaping-rate . . . . .	524
shared-shaping-constituent . . . . .	526
shared-shaping-rate . . . . .	527
show aaa accounting . . . . .	529
show aaa accounting default . . . . .	530
show aaa accounting interval . . . . .	531
show aaa accounting vr-group . . . . .	532
show aaa authentication default . . . . .	533
show aaa delimiters . . . . .	534
show aaa domain-map . . . . .	535
show aaa dhcpv6-delegated-prefix . . . . .	536
show aaa duplicate-address-check . . . . .	537
show aaa duplicate-prefix-check . . . . .	538
show aaa duplicate-prefix-check-extension . . . . .	539
show aaa intf-desc-format . . . . .	540
show aaa ipv6-nd-ra-prefix . . . . .	541
show aaa model . . . . .	542
show aaa name-servers . . . . .	543
show aaa per-profile-attr-list . . . . .	544
show aaa profile . . . . .	545
show aaa qos downstream-rate . . . . .	546
show aaa route-download . . . . .	547
show aaa route-download routes . . . . .	548
show aaa route-download routes global . . . . .	549
show aaa service accounting interval . . . . .	550
show aaa statistics . . . . .	551
show aaa strip-domain . . . . .	552
show aaa subscriber per-port-limit . . . . .	553
show aaa subscriber per-vr-limit . . . . .	554
show aaa timeout . . . . .	555
show aaa tunnel-group . . . . .	556
show aaa tunnel-parameters . . . . .	557
show aaa user accounting interval . . . . .	558
show access-list . . . . .	559
show adjustment-factor . . . . .	560
show aps . . . . .	561
show arp . . . . .	562
show atm aal5 interface . . . . .	563
show atm atm1483 . . . . .	564
show atm bulk-config . . . . .	565
show atm interface . . . . .	566
show atm map . . . . .	567
show atm mcpt-timers . . . . .	568
show atm oam . . . . .	569
show atm ping . . . . .	570
show atm subinterface . . . . .	571
show atm vc . . . . .	572

show atm vc atm . . . . .	573
show atm vc-class . . . . .	574
show atm vp . . . . .	575
show atm vp-description . . . . .	576
show atm vp-tunnel . . . . .	577
show bandwidth oversubscription . . . . .	578
show bfd session . . . . .	579
show bgp ipv6 . . . . .	580
show bgp ipv6 advertised-routes . . . . .	583
show bgp ipv6 aggregate-address . . . . .	586
show bgp ipv6 community . . . . .	587
show bgp ipv6 community-list . . . . .	590
show bgp ipv6 dampened-paths . . . . .	592
show bgp ipv6 filter-list . . . . .	594
show bgp ipv6 flap-statistics . . . . .	596
show bgp ipv6 inconsistent-as . . . . .	598
show bgp ipv6 neighbors . . . . .	600
show bgp ipv6 neighbors dampened-routes . . . . .	601
show bgp ipv6 neighbors paths . . . . .	603
show bgp ipv6 neighbors received-routes . . . . .	604
show bgp ipv6 neighbors routes . . . . .	606
show bgp ipv6 network . . . . .	608
show bgp ipv6 next-hops . . . . .	610
show bgp ipv6 paths . . . . .	611
show bgp ipv6 peer-group . . . . .	612
show bgp ipv6 quote-regexp . . . . .	613
show bgp ipv6 regexp . . . . .	615
show bgp ipv6 summary . . . . .	617
show boot . . . . .	619
show bridge1483 interface . . . . .	620
show bridge . . . . .	621
show bridge groups . . . . .	622
show bridge interface . . . . .	623
show bridge interface vpls . . . . .	625
show bridge port . . . . .	626
show bridge table . . . . .	627
show bulkstats . . . . .	628
show bulkstats collector description . . . . .	629
show bulkstats collector interval . . . . .	630
show bulkstats collector max-size . . . . .	631
show bulkstats collector transfer-mode . . . . .	632
show bulkstats interface-type . . . . .	633
show bulkstats receiver . . . . .	634
show bulkstats schema . . . . .	635
show bulkstats statistics . . . . .	636
show bulkstats traps . . . . .	637
show bulkstats virtual-routers . . . . .	638
show cac . . . . .	639
show cac interface . . . . .	640

show calendar	641
show classifier-list	642
show clns	643
show clns interface	644
show clns neighbors	645
show clns protocol	646
show clns traffic	647
show clock	648
show color-mark-profile	649
show columns	650
show configuration	651
show control-plane policer	652
show controllers e3	653
show controllers sonet	654
show controllers sonet remote	656
show controllers t1	657
show controllers t3	658
show controllers t3 remote	659
show cops info	660
show cops statistics	661
show dhcp binding	662
show dhcp count	665
show dhcp-external	668
show dhcp host	669
show dhcp proxy-client binding	672
show dhcp relay	673
show dhcp relay proxy statistics	674
show dhcp relay statistics	675
show dhcp server	676
show dhcp summary	677
show dhcp vendor-option	678
show dos-protection-group	679
show drop-profile	680
show dvmrp destination profile	681
show dvmrp tunnel	682
show egress-queue events	683
show egress-queue rates	684
show enable-frag-stats	686
show environment	687
show ethernet oam lfm discovery	688
show ethernet oam lfm statistics	689
show ethernet oam lfm status	690
show ethernet oam lfm summary	691
show exception dump	692
show exception monitor	693
show fabric-queue	694
show fabric weights	695
show flash	696
show forwarding-table route-holddown	697

show frame-relay interface . . . . .	698
show frame-relay lip . . . . .	699
show frame-relay lmi . . . . .	700
show frame-relay map . . . . .	701
show frame-relay multilinkInterface . . . . .	702
show frame-relay pvc . . . . .	703
show frame-relay subinterface . . . . .	704
show frame-relay summary . . . . .	705
show ftp-server . . . . .	706
show gre destination profile . . . . .	707
show gre tunnel . . . . .	708
show hardware . . . . .	709
show hdlc interface . . . . .	710
show hosts . . . . .	711
show hotfix . . . . .	712
show icr-partition . . . . .	713
show icr-partitions . . . . .	714
show ike certificates . . . . .	715
show ike configuration . . . . .	716
show ike identity . . . . .	717
show ike policy-rule . . . . .	718
show ike sa . . . . .	719
show interfaces . . . . .	720
show interfaces lag . . . . .	721
show interfaces lag members . . . . .	722
show ip . . . . .	723
show ip address . . . . .	724
show ip as-path-access-list . . . . .	725
show ip bgp . . . . .	726
show ip bgp advertised-routes . . . . .	729
show ip bgp aggregate-address . . . . .	733
show ip bgp cidr-only . . . . .	734
show ip bgp community . . . . .	736
show ip bgp community-list . . . . .	739
show ip bgp dampened-paths . . . . .	742
show ip bgp filter-list . . . . .	745
show ip bgp flap-statistics . . . . .	748
show ip bgp inconsistent-as . . . . .	750
show ip bgp neighbors . . . . .	752
show ip bgp neighbors dampened-routes . . . . .	753
show ip bgp neighbors paths . . . . .	756
show ip bgp neighbors received prefix-filter . . . . .	757
show ip bgp neighbors received-routes . . . . .	758
show ip bgp neighbors routes . . . . .	761
show ip bgp network . . . . .	764
show ip bgp next-hops . . . . .	766
show ip bgp paths . . . . .	767
show ip bgp peer-group . . . . .	768
show ip bgp quote-regexp . . . . .	769

show ip bgp regexp . . . . .	773
show ip bgp summary . . . . .	777
show ip cache flow . . . . .	779
show ip cache flow aggregation . . . . .	780
show ip community-list . . . . .	781
show ip demux interface . . . . .	782
show ip dhcp-capture . . . . .	783
show ip dhcp-external binding . . . . .	784
show ip dhcp-external binding-id . . . . .	785
show ip dhcp-external configuration . . . . .	786
show ip dhcp-external statistics . . . . .	787
show ip dhcp-local . . . . .	788
show ip dhcp-local auth . . . . .	789
show ip dhcp-local binding . . . . .	790
show ip dhcp-local duplicate-clients . . . . .	791
show ip dhcp-local excluded . . . . .	792
show ip dhcp-local leases . . . . .	793
show ip dhcp-local limits . . . . .	794
show ip dhcp-local pool . . . . .	795
show ip dhcp-local reserved . . . . .	796
show ip dhcp-local statistics . . . . .	797
show ip domain-lookup . . . . .	798
show ip dvmrp . . . . .	799
show ip dvmrp interface . . . . .	800
show ip dvmrp mroute . . . . .	801
show ip dvmrp neighbor . . . . .	802
show ip dvmrp route . . . . .	803
show ip dvmrp routeNextHop . . . . .	804
show ip explicit-paths . . . . .	805
show ip extcommunity-list . . . . .	806
show ip flow . . . . .	807
show ip forwarding-table slot . . . . .	808
show ip http . . . . .	809
show ip igmp . . . . .	810
show ip igmp groups . . . . .	811
show ip igmp interface . . . . .	812
show ip igmp mapped-oif . . . . .	813
show ip igmp membership . . . . .	814
show ip igmp oif-map . . . . .	815
show ip igmp oif-mapping . . . . .	816
show ip igmp-proxy . . . . .	817
show ip igmp-proxy groups . . . . .	818
show ip igmp-proxy interface . . . . .	819
show ip igmp ssm-mapping . . . . .	820
show ip interface . . . . .	821
show ip interface shares . . . . .	822
show ip interface vrf . . . . .	823
show ip local alias . . . . .	824
show ip local pool . . . . .	825

show ip local shared-pool . . . . .	826
show ip mac-validate interface . . . . .	827
show ip match-policy-list . . . . .	828
show ip mirror interface . . . . .	829
show ip mobile binding . . . . .	830
show ip mobile home-agent . . . . .	831
show ip mobile host . . . . .	832
show ip mobile profile . . . . .	833
show ip mobile secure foreign-agent . . . . .	834
show ip mobile secure host . . . . .	835
show ip mobile traffic . . . . .	836
show ip mroute . . . . .	837
show ip multicast protocols . . . . .	838
show ip multicast routing . . . . .	839
show ip nat inside rule . . . . .	840
show ip nat outside rule . . . . .	841
show ip nat pool . . . . .	842
show ip nat statistics . . . . .	843
show ip nat translations . . . . .	844
show ip nfs . . . . .	845
show ip ospf . . . . .	846
show ip ospf border-routers . . . . .	847
show ip ospf database . . . . .	848
show ip ospf interface . . . . .	849
show ip ospf internal-statistics . . . . .	850
show ip ospf neighbors . . . . .	851
show ip ospf remote-neighbor interface . . . . .	852
show ip ospf spf-log . . . . .	853
show ip ospf virtual-links . . . . .	854
show ip pim . . . . .	855
show ip pim auto-rp . . . . .	856
show ip pim bsr . . . . .	857
show ip pim data-mdt . . . . .	858
show ip pim dense-mode sg-state . . . . .	859
show ip pim interface . . . . .	860
show ip pim neighbor . . . . .	861
show ip pim remote-neighbor . . . . .	862
show ip pim rp . . . . .	863
show ip pim rp-hash . . . . .	864
show ip pim sparse-mode sg-state . . . . .	865
show ip pim sparse-mode unicast-route . . . . .	866
show ip pim spt-threshold . . . . .	867
show ip prefix-list . . . . .	868
show ip prefix-tree . . . . .	869
show ip profile . . . . .	870
show ip protocols . . . . .	871
show ip redistribute . . . . .	872
show ip rip . . . . .	873
show ip rip database . . . . .	874



show ip rip network . . . . .	875
show ip rip peer . . . . .	876
show ip rip statistics . . . . .	877
show ip rip summary-address . . . . .	878
show ip route . . . . .	879
show ip route slot . . . . .	881
show ip rpf-route . . . . .	882
show ip service-profile . . . . .	884
show ip socket statistics . . . . .	885
show ip ssh . . . . .	886
show ip static . . . . .	887
show ip-subscriber . . . . .	888
show ip traffic . . . . .	889
show ip tunnel reassembly statistics . . . . .	890
show ip tunnel-route . . . . .	891
show ip udp statistics . . . . .	892
show ip vrf . . . . .	893
show ip vrrp . . . . .	894
show ip vrrp neighbor . . . . .	895
show ip vrrp statistics . . . . .	896
show ip vrrp tracked-objects . . . . .	897
show ipsec ca identity . . . . .	898
show ipsec certificates . . . . .	899
show ipsec identity . . . . .	900
show ipsec ike-configuration . . . . .	901
show ipsec ike-policy-rule . . . . .	902
show ipsec ike-sa . . . . .	903
show ipsec key mypubkey rsa . . . . .	904
show ipsec key pubkey-chain rsa . . . . .	905
show ipsec lifetime . . . . .	906
show ipsec local-endpoint . . . . .	907
show ipsec option . . . . .	908
show ipsec transform-set . . . . .	909
show ipsec transport interface . . . . .	910
show ipsec transport profile . . . . .	911
show ipsec tunnel . . . . .	912
show ipsec tunnel profile . . . . .	913
show ipv6 . . . . .	914
show ipv6 access-list . . . . .	915
show ipv6 address . . . . .	916
show ipv6 dhcpv6-local auth config . . . . .	917
show ipv6 dhcpv6-local binding . . . . .	918
show ipv6 dhcpv6-local dns-domain-searchlist . . . . .	919
show ipv6 dhcpv6-local dns-servers . . . . .	920
show ipv6 dhcpv6-local prefix-lifetime . . . . .	921
show ipv6 dhcpv6-local statistics . . . . .	922
show ipv6 forwarding-table slot . . . . .	923
show ipv6 interface . . . . .	924
show ipv6 local pool . . . . .	925

show ipv6 mld . . . . .	926
show ipv6 mld groups . . . . .	927
show ipv6 mld membership . . . . .	928
show ipv6 mld interface . . . . .	929
show ipv6 mld mapped-oif . . . . .	930
show ipv6 mld oif-map . . . . .	931
show ipv6 mld oif-mapping . . . . .	932
show ipv6 mld-proxy . . . . .	933
show ipv6 mld-proxy groups . . . . .	934
show ipv6 mld-proxy interface . . . . .	935
show ipv6 mld ssm-mapping . . . . .	936
show ipv6 mroute . . . . .	937
show ipv6 multicast protocols . . . . .	938
show ipv6 multicast routing . . . . .	939
show ipv6 neighbors . . . . .	940
show ipv6 ospf . . . . .	941
show ipv6 ospf border-routers . . . . .	942
show ipv6 ospf database . . . . .	943
show ipv6 ospf internal-statistics . . . . .	944
show ipv6 ospf interface . . . . .	945
show ipv6 ospf neighbors . . . . .	946
show ipv6 ospf summary-prefix . . . . .	947
show ipv6 ospf traffic . . . . .	948
show ipv6 pim . . . . .	949
show ipv6 pim bsr . . . . .	950
show ipv6 pim interface . . . . .	951
show ipv6 pim neighbor . . . . .	952
show ipv6 pim remote-neighbor . . . . .	953
show ipv6 pim rp . . . . .	954
show ipv6 pim rp-hash . . . . .	955
show ipv6 pim sparse-mode sg-state . . . . .	956
show ipv6 pim sparse-mode unicast-route . . . . .	957
show ipv6 pim spt-threshold . . . . .	958
show ipv6 prefix-list . . . . .	959
show ipv6 profile . . . . .	960
show ipv6 protocols . . . . .	961
show ipv6 redistribute . . . . .	962
show ipv6 route . . . . .	963
show ipv6 routers . . . . .	965
show ipv6 rpf-route . . . . .	966
show ipv6 static . . . . .	968
show ipv6 traffic . . . . .	969
show ipv6 tunnel-route . . . . .	970
show ipv6 udp statistics . . . . .	971
show isis database . . . . .	972
show isis mpls adjacency-log . . . . .	973
show isis mpls advertisements . . . . .	974
show isis mpls tunnel . . . . .	975
show isis nsf . . . . .	976

show isis spf-log . . . . .	977
show isis summary-addresses . . . . .	978
show isis topology . . . . .	979
show issu . . . . .	980
show l2c . . . . .	981
show l2c discovery-table . . . . .	982
show l2c label . . . . .	983
show l2c neighbor . . . . .	984
show l2c statistics . . . . .	985
show l2tp . . . . .	986
show l2tp destination . . . . .	987
show l2tp destination lockout . . . . .	988
show l2tp destination profile . . . . .	989
show l2tp dial-out . . . . .	990
show l2tp dial-out session . . . . .	991
show l2tp dial-out target . . . . .	992
show l2tp dial-out virtual-router . . . . .	993
show l2tp received-disconnect-cause-summary . . . . .	994
show l2tp session . . . . .	995
show l2tp switch-profile . . . . .	996
show l2tp tunnel . . . . .	997
show l2vpn connections . . . . .	999
show l2vpn instance . . . . .	1000
show l2vpn interface . . . . .	1001
show last-reset . . . . .	1002
show ldp . . . . .	1003
show ldp binding . . . . .	1004
show ldp graceful-restart . . . . .	1006
show ldp igp-sync . . . . .	1007
show ldp interface . . . . .	1008
show ldp neighbor . . . . .	1009
show ldp profile . . . . .	1010
show ldp statistics . . . . .	1011
show ldp targeted session . . . . .	1012
show ldp vpls . . . . .	1013
show license . . . . .	1014
show license mobile-ip home-agent . . . . .	1015
show line console 0 . . . . .	1016
show line vty . . . . .	1017
show log configuration . . . . .	1018
show log data . . . . .	1019
show memory-management protection . . . . .	1020
show mirror log . . . . .	1021
show mirror rules . . . . .	1022
show mirror subscribers . . . . .	1023
show mirror trap . . . . .	1024
show mpls . . . . .	1025
show mpls binding . . . . .	1026
show mpls cross-connects atm . . . . .	1028

show mpls explicit-paths . . . . .	1029
show mpls fast-reroute database . . . . .	1030
show mpls forwarding . . . . .	1031
show mpls interface . . . . .	1032
show mpls l2transport interface . . . . .	1033
show mpls l2transport load-balancing-group . . . . .	1034
show mpls minor-interface . . . . .	1035
show mpls next-hop . . . . .	1036
show mpls phb-id . . . . .	1037
show mpls profile . . . . .	1038
show mpls rsvp . . . . .	1039
show mpls rsvp authentication . . . . .	1040
show mpls rsvp bfd interfaces . . . . .	1041
show mpls rsvp counters . . . . .	1042
show mpls rsvp hello graceful restart . . . . .	1043
show mpls rsvp hello instance . . . . .	1044
show mpls tunnels . . . . .	1045
show mroute port count . . . . .	1046
show multicast group limit . . . . .	1047
show nbma arp . . . . .	1048
show ntp associations . . . . .	1049
show ntp status . . . . .	1050
show nvs . . . . .	1051
show parent-group . . . . .	1052
show policy-list . . . . .	1053
show policy-parameter . . . . .	1054
show ppp interface . . . . .	1055
show ppp interface summary . . . . .	1058
show pppoe interface . . . . .	1059
show pppoe interface lockout-time . . . . .	1060
show pppoe-service-name-table . . . . .	1061
show pppoe subinterface . . . . .	1062
show ppp peer-ip-address-optional . . . . .	1063
show privilege . . . . .	1064
show privilege group . . . . .	1065
show processes cpu . . . . .	1066
show processes memory . . . . .	1067
show profile . . . . .	1068
show profile brief . . . . .	1069
show qos interface-hierarchy . . . . .	1070
show qos-interface-set . . . . .	1071
show qos-interface-superset . . . . .	1072
show qos-parameter . . . . .	1073
show qos-parameter-define . . . . .	1075
show qos-port-type-profile . . . . .	1076
show qos-profile . . . . .	1077
show qos queue-thresholds . . . . .	1078
show qos scheduler-hierarchy . . . . .	1079
show qos shared-shaper . . . . .	1081

show qos-shared-shaper-control . . . . .	1083
show queue-profile . . . . .	1084
show radius acct-session-id-format . . . . .	1085
show radius algorithm . . . . .	1086
show radius attributes-ignored . . . . .	1087
show radius attributes-included . . . . .	1088
show radius calling-station-delimiter . . . . .	1089
show radius calling-station-format . . . . .	1090
show radius connect-info-format . . . . .	1091
show radius dsl-port-type . . . . .	1092
show radius ethernet-port-type . . . . .	1093
show radius icr-partition-accounting . . . . .	1094
show radius nas-identifier . . . . .	1095
show radius nas-port-format . . . . .	1096
show radius nas-port-format extended . . . . .	1097
show radius override . . . . .	1098
show radius per-profile-attr-list . . . . .	1099
show radius pppoe nas-port-format . . . . .	1100
show radius relay . . . . .	1101
show radius relay udp-checksum . . . . .	1102
show radius remote-circuit-id-delimiter . . . . .	1103
show radius remote-circuit-id-format . . . . .	1104
show radius rollover-on-reject . . . . .	1105
show radius servers . . . . .	1106
show radius statistics . . . . .	1107
show radius trap . . . . .	1108
show radius tunnel-accounting . . . . .	1109
show radius udp-checksum . . . . .	1110
show radius update-source-addr . . . . .	1111
show radius vlan nas-port-format . . . . .	1112
show rate-limit-profile . . . . .	1113
show reboot-history . . . . .	1114
show redundancy . . . . .	1115
show redundancy clients . . . . .	1116
show redundancy history . . . . .	1117
show redundancy line-card . . . . .	1118
show redundancy srp . . . . .	1119
show redundancy switchover-history . . . . .	1120
show reload . . . . .	1121
show resource . . . . .	1122
show route-map . . . . .	1123
show rtr application . . . . .	1124
show rtr collection-statistics . . . . .	1125
show rtr configuration . . . . .	1126
show rtr history . . . . .	1127
show rtr hops . . . . .	1128
show rtr operational-state . . . . .	1129
show running-configuration . . . . .	1130
show schedule macro . . . . .	1131

show scheduler-profile . . . . .	1132
show secrets . . . . .	1133
show secure classifier-list . . . . .	1134
show secure policy-list . . . . .	1135
show service config-monitor-periodicity . . . . .	1136
show service-management owner-session . . . . .	1137
show service-management service-definition . . . . .	1138
show service-management service-session-profile . . . . .	1139
show service-management subscriber-session . . . . .	1140
show service-management summary . . . . .	1141
show snmp . . . . .	1142
show snmp access . . . . .	1143
show snmp agent . . . . .	1144
show snmp community . . . . .	1145
show snmp group . . . . .	1146
show snmp interfaces . . . . .	1147
show snmp management-event . . . . .	1148
show snmp notificationLog . . . . .	1149
show snmp secure-log . . . . .	1150
show snmp trap . . . . .	1151
show snmp trap statistics . . . . .	1152
show snmp user . . . . .	1153
show snmp view . . . . .	1154
show socket statistics . . . . .	1155
show ssc info . . . . .	1156
show ssc option . . . . .	1157
show ssc statistics . . . . .	1158
show ssc version . . . . .	1159
show statistics-profile . . . . .	1160
show statistics tacacs . . . . .	1161
show subscriber-policy . . . . .	1162
show subscribers . . . . .	1163
show subsystems . . . . .	1165
show suspicious-control-flow-detection counts . . . . .	1166
show suspicious-control-flow-detection flows . . . . .	1167
show suspicious-control-flow-detection info . . . . .	1168
show suspicious-control-flow-detection protocol . . . . .	1169
show tacacs . . . . .	1170
show tcp ack-rst-and-syn . . . . .	1171
show tcp path-mtu-discovery . . . . .	1172
show tcp paws . . . . .	1173
show tcp resequence-buffers . . . . .	1174
show tcp statistics . . . . .	1175
show tech-support . . . . .	1176
show telnet . . . . .	1177
show terminal . . . . .	1178
show terminate-code . . . . .	1179
show timing . . . . .	1180
show track . . . . .	1181

show track brief . . . . .	1182
show traffic-class . . . . .	1183
show traffic-class-group . . . . .	1184
show tunnel-server . . . . .	1185
show users . . . . .	1186
show utilization . . . . .	1187
show version . . . . .	1188
show virtual-router . . . . .	1189
show vlan bulk-config . . . . .	1190
show vlan profile . . . . .	1191
show vlan subinterface . . . . .	1192
show vpls connections . . . . .	1194
shutdown . . . . .	1195
single-shot-tunnel . . . . .	1196
sleep . . . . .	1197
slot accept . . . . .	1198
slot disable . . . . .	1199
slot enable . . . . .	1200
slot erase . . . . .	1201
slot ignore-diagnostic-failure . . . . .	1202
slot replace . . . . .	1203
snmp-server . . . . .	1204
snmp-server clear secure-log . . . . .	1205
snmp-server community . . . . .	1206
snmp-server contact . . . . .	1207
snmp-server enable traps . . . . .	1208
snmp-server group . . . . .	1211
snmp-server host . . . . .	1212
snmp-server interfaces compress . . . . .	1215
snmp-server interfaces compress-restriction . . . . .	1216
snmp-server interfaces description-format . . . . .	1217
snmp-server interfaces rfc1213 . . . . .	1218
snmp-server location . . . . .	1219
snmp-server management-event . . . . .	1220
snmp-server notificationLog ageOut . . . . .	1221
snmp-server notificationLog entryLimit . . . . .	1222
snmp-server notificationLog log . . . . .	1223
snmp-server packetsize . . . . .	1224
snmp-server secure-log . . . . .	1225
snmp-server security . . . . .	1226
snmp-server trap-proxy . . . . .	1227
snmp-server trap-source . . . . .	1228
snmp-server user . . . . .	1229
snmp-server view . . . . .	1230
snmpTrap . . . . .	1231
snmp trap frame-relay link-status . . . . .	1232
snmp trap ip link-status . . . . .	1233
snmp trap link-status . . . . .	1234
source-address . . . . .	1235

speed	1236
spf-interval	1237
split-horizon	1238
srp switch	1239
sscc address	1240
sscc enable	1241
sscc option	1242
sscc protocol ipv6	1243
sscc protocol lac	1244
sscc restart	1245
sscc retryTimer	1246
sscc sourceAddress	1247
sscc sourceInterface	1248
sscc transportRouter	1249
sscc update-policy-request enable	1250
statistics	1251
statistics-profile	1252
strict-priority	1253
strip-domain	1254
subscriber	1255
subscriber disconnect	1256
subscriber-interface-type	1257
subscriber-policy	1258
summary-address	1259
summary-prefix	1260
suppress-default	1261
suspicious-control-flow-detection grouping-off	1262
suspicious-control-flow-detection off	1263
suspicious-control-flow-detection protocol backoff-time	1264
suspicious-control-flow-detection protocol low-threshold	1265
suspicious-control-flow-detection protocol threshold	1266
svlan ethertype	1267
svlan id	1268
svlan qos-parameter	1269
svlan qos-profile	1270
switch-profile	1271
synchronization	1272
synchronize	1273
<b>Chapter 8</b>	
<b>T Commands</b>	<b>1275</b>
t1 bert	1276
t1 clock source	1277
t1 description	1278
t1 fdl	1279
t1 fdl carrier	1280
t1 fdl string	1281
t1 fdl transmit	1282
t1 framing	1283
t1 lineCoding	1284



t1 loopback	1285
t1 remote-loopback	1286
t1 shutdown	1287
t1 snmp trap link-status	1288
t1 timeslots	1289
t1 yellow	1290
table-map	1291
tacacs-server host	1292
tacacs-server key	1293
tacacs-server source-address	1294
tacacs-server timeout	1295
tag	1296
tag-group	1297
tcp ack-rst-and-syn	1298
tcp mss	1299
tcp path-mtu-discovery	1300
tcp paws-disable	1301
tcp resequence-buffers connection-maximum	1302
tcp resequence-buffers default-connection-maximum	1303
tcp resequence-buffers default-vr-maximum	1304
tcp resequence-buffers global-maximum	1305
tcp resequence-buffers vr-maximum	1306
tech-support encoded-string	1307
telnet	1308
telnet listen	1310
terminal data-character-bits	1311
terminal length	1312
terminal speed	1313
terminal width	1314
terminate-code	1315
test aaa	1316
test bgp ipv6 neighbor	1317
test ip bgp neighbor	1320
threshold	1323
threshold-test	1324
time	1325
timeout	1326
timeout login response	1327
timers	1328
timers bgp	1329
timers spf	1330
time-to-live	1331
timing disable-auto-upgrade	1332
timing select	1333
timing source	1334
tos	1335
trace mpls ip	1336
trace mpls l2transport	1338
trace mpls l3vpn	1340

trace mpls rsvp tunnel . . . . .	1342
trace mpls vpls . . . . .	1344
traceroute . . . . .	1346
track . . . . .	1348
traffic-class . . . . .	1349
traffic-class-group . . . . .	1350
transform . . . . .	1351
transform-set . . . . .	1352
translate . . . . .	1353
transmit-delay . . . . .	1354
traps . . . . .	1355
trigger . . . . .	1356
trigger delay . . . . .	1357
triggered-update-disable . . . . .	1358
ttl . . . . .	1359
tunnel . . . . .	1360
tunnel checksum . . . . .	1361
tunnel destination . . . . .	1362
tunnel destination backup . . . . .	1364
tunnel group . . . . .	1365
tunnel group-address-pool . . . . .	1366
tunnel ip profile . . . . .	1367
tunnel lifetime . . . . .	1368
tunnel local-identity . . . . .	1369
tunnel mdt . . . . .	1370
tunnel mdt profile . . . . .	1371
tunnel mpls affinity . . . . .	1372
tunnel mpls autoroute announce . . . . .	1373
tunnel mpls autoroute metric . . . . .	1374
tunnel mpls bandwidth . . . . .	1375
tunnel mpls description . . . . .	1376
tunnel mpls diff-serv phb-id . . . . .	1377
tunnel mpls fast-reroute . . . . .	1378
tunnel mpls no-route retries . . . . .	1379
tunnel mpls no-route retry-time . . . . .	1380
tunnel mpls path-option . . . . .	1381
tunnel mpls priority . . . . .	1382
tunnel mpls retries . . . . .	1383
tunnel mpls retry-time . . . . .	1384
tunnel mtu . . . . .	1385
tunnel password . . . . .	1386
tunnel peer-identity . . . . .	1387
tunnel pfs group . . . . .	1388
tunnel sequence-datagrams . . . . .	1389
tunnel-server . . . . .	1390
tunnel session-key-inbound . . . . .	1391
tunnel session-key-outbound . . . . .	1392
tunnel signaling . . . . .	1393
tunnel source . . . . .	1394

	tunnel-subscriber authentication . . . . .	1395
	tunnel transform-set . . . . .	1396
	tx-connect-speed-method . . . . .	1397
	type . . . . .	1398
<b>Chapter 9</b>	<b>U, V, W, and Y Commands . . . . .</b>	<b>1399</b>
	ubr . . . . .	1400
	udp-port . . . . .	1401
	undebg ip bgp . . . . .	1402
	undebg ip mbgp . . . . .	1403
	undebg ip ospf . . . . .	1404
	undebg ip pim . . . . .	1405
	undebg ip rip . . . . .	1406
	undebg ipv6 ospf . . . . .	1407
	undebg ipv6 pim . . . . .	1408
	undebg isis . . . . .	1409
	unicast . . . . .	1410
	unknown-destination . . . . .	1411
	unknown-protocol . . . . .	1412
	update-source . . . . .	1413
	use canned-group . . . . .	1414
	use-release-grace-period . . . . .	1415
	username . . . . .	1416
	user-name . . . . .	1417
	user-packet-class . . . . .	1418
	user-prefix . . . . .	1419
	vbr-nrt . . . . .	1420
	vbr-rt . . . . .	1421
	vc-class atm . . . . .	1422
	version . . . . .	1423
	virtual-router . . . . .	1424
	vlan advisory-rx-speed . . . . .	1425
	vlan advisory-tx-speed . . . . .	1426
	vlan auto-configure . . . . .	1427
	vlan auto-configure agent-circuit-identifier . . . . .	1428
	vlan bulk-config . . . . .	1429
	vlan bulk-config modify . . . . .	1431
	vlan bulk-config shutdown . . . . .	1432
	vlan classifier-list . . . . .	1433
	vlan description . . . . .	1434
	vlan dos-protection-group . . . . .	1435
	vlan id . . . . .	1436
	vlan policy . . . . .	1437
	vlan policy-list . . . . .	1438
	vlan profile . . . . .	1439
	vlan service-profile . . . . .	1440
	volume . . . . .	1441
	wait-for-gsmp-syn . . . . .	1442
	warning . . . . .	1443

weight .....	1444
write core .....	1445
write memory .....	1446
yellow-mark .....	1447

## Part 2

## Index

Index .....	1451
-------------	------

# List of Tables

	<b>About the Documentation . . . . .</b>	<b>xxxv</b>
	Table 1: Notice Icons . . . . .	xxxvi
	Table 2: Text and Syntax Conventions . . . . .	xxxvi
<b>Part 1</b>	<b>Commands, N to Z</b>	
<b>Chapter 1</b>	<b>Command Reference Topics . . . . .</b>	<b>3</b>
	Table 3: Interface Types and Specifiers for ERX7xx Models, ERX14xx Models, and ERX310 Router . . . . .	5
	Table 4: Interface Types and Specifiers for E120 Router and E320 Router . . . . .	13



# About the Documentation

- E Series and JunosE Documentation and Release Notes on page xxxv
- Audience on page xxxv
- E Series and JunosE Text and Syntax Conventions on page xxxv
- Obtaining Documentation on page xxxvii
- Documentation Feedback on page xxxvii
- Requesting Technical Support on page xxxvii

## E Series and JunosE Documentation and Release Notes

---

For a list of related JunosE documentation, see  
<http://www.juniper.net/techpubs/software/index.html>.

If the information in the latest release notes differs from the information in the documentation, follow the *JunosE Release Notes*.

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at  
<http://www.juniper.net/techpubs/>.

## Audience

---

This guide is intended for experienced system and network specialists working with Juniper Networks E Series Broadband Services Routers in an Internet access environment.

## E Series and JunosE Text and Syntax Conventions

---

Table 1 on page xxxvi defines notice icons used in this documentation.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.

Table 2 on page xxxvi defines text and syntax conventions that we use throughout the E Series and JunosE documentation.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents commands and keywords in text.	<ul style="list-style-type: none"> <li>Issue the <b>clock source</b> command.</li> <li>Specify the keyword <b>exp-msg</b>.</li> </ul>
<b>Bold text like this</b>	Represents text that the user must type.	<b>host1(config)#traffic class low-loss1</b>
Fixed-width text like this	Represents information as displayed on your terminal's screen.	<b>host1#show ip ospf 2</b>  Routing Process OSPF 2 with Router ID 5.5.0.250  Router is an Area Border Router (ABR)
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Emphasizes words.</li> <li>Identifies variables.</li> <li>Identifies chapter, appendix, and book names.</li> </ul>	<ul style="list-style-type: none"> <li>There are two levels of access: <i>user</i> and <i>privileged</i>.</li> <li><i>clusterId</i>, <i>ipAddress</i>.</li> <li><i>Appendix A, System Specifications</i></li> </ul>
Plus sign (+) linking key names	Indicates that you must press two or more keys simultaneously.	Press Ctrl + b.
<b>Syntax Conventions in the Command Reference Guide</b>		
Plain text like this	Represents keywords.	terminal length
<i>Italic text like this</i>	Represents variables.	<i>mask</i> , <i>accessListName</i>



Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
(pipe symbol)	Represents a choice to select one keyword or variable to the left or to the right of this symbol. (The keyword or variable can be either optional or required.)	diagnostic   line
[ ] (brackets)	Represent optional keywords or variables.	[ internal   external ]
[ ]* (brackets and asterisk)	Represent optional keywords or variables that can be entered more than once.	[ level1   level2   l1 ]*
{ } (braces)	Represent required keywords or variables.	{ permit   deny } { in   out }  { clusterId   ipAddress }

## Obtaining Documentation

To obtain the most current version of all Juniper Networks technical documentation, see the Technical Documentation page on the Juniper Networks Web site at <http://www.juniper.net/>.

To download complete sets of technical documentation to create your own documentation CD-ROMs or DVD-ROMs, see the Portable Libraries page at

<http://www.juniper.net/techpubs/resources/index.html>

Copies of the Management Information Bases (MIBs) for a particular software release are available for download in the software image bundle from the Juniper Networks Web site at <http://www.juniper.net/>.

## Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation to better meet your needs. Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net), or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract,

or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf> .
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/> .
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/> .
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html> .

## PART 1

# Commands, N to Z

- [Command Reference Topics on page 3](#)
- [N Commands on page 19](#)
- [O Commands on page 105](#)
- [P Commands on page 123](#)
- [Q Commands on page 287](#)
- [R Commands on page 305](#)
- [S Commands on page 435](#)
- [T Commands on page 1275](#)
- [U, V, W, and Y Commands on page 1399](#)



## CHAPTER 1

# Command Reference Topics

- [Using the no Version Versus the default Version of Commands on page 3](#)
- [Deprecated Commands on page 4](#)
- [Filtering show Commands on page 4](#)
- [Interface Types and Specifiers on page 5](#)

### Using the no Version Versus the default Version of Commands

---

Most router configuration commands have a **no** version, which you can use to negate a command (or a portion of it specified by an optional keyword) or restore its default setting. When you use a command *without* the keyword **no**, you can reenable a disabled feature or override a default setting. You have the option of using the **default** keyword whenever the **no** keyword is also a choice; simply enter the keyword **default** instead of **no**.

In most cases, when you execute the **default** version of a command, it produces the exact results as the **no** version. There are some commands for which the **default** version yields a different result than the **no** version.

Commands for which the **default** behavior differs from the **no** behavior are clearly identified in this guide. Unless otherwise specified, therefore, the **default** command is identical to the **no** command and is neither documented nor discussed.

The syntax for each **no** command is described in this guide. Some commands do not have a **no** version; this is indicated in the individual command descriptions except for the **show** commands, none of which has a **no** version.

The CLI can act on **no** versions of commands when you have entered sufficient information to distinguish the command syntactically, and ignores all subsequent input on that line.

To be compatible with some non-E Series implementations, the **no** versions of commands accept the same options as the affirmative version of the commands. The CLI ignores the optional input if it has no effect on the command behavior. If using the option changes the behavior of the **no** version, the individual command entry in this guide describes the difference in behavior.

## Deprecated Commands

---

A command that has been deprecated in a release or in a particular configuration mode returns a notice when you issue the command manually:

**NOTICE:** This command is obsolete. It may be completely removed from a subsequent software release.

A preferred alternate command is provided in the notice. If you have a script that uses the deprecated command, the deprecated command is automatically mapped to the preferred command when you run the script. If the deprecated command no longer has a function, then that command has no effect when you run a script containing the command.

We recommend that you use the preferred command when writing new scripts.

## Filtering show Commands

---

You have access to a variety of **show** commands that display router and protocol information. You can filter the output of a **show** command by specifying **|** (the UNIX pipe symbol), one of the following keywords, and either a case-sensitive text string or a regular expression.

- **begin**—Displays output beginning with the first line that contains the text string or regular expression
- **include**—Displays output lines that contain the text string or regular expression and excludes lines that do not contain the text string or regular expression
- **exclude**—Displays output lines that do not contain the text string or regular expression and excludes lines that do contain the text string or regular expression

You can press Ctrl+c to interrupt the **show** command output.



**NOTE:** The router does not recognize beginning spaces of the text string. For example, if you enter the **include** option with **IP** as the text string on which to filter, the router ignores the space and displays lines that include words such as **RIP**.

**Example** In the following example, the output display consists only of lines that contain the string *ip*. The router omits all other lines of the output from the display because none of them contain the string *ip*.

```
host1#show config include-defaults | include ip
! Configuration script generated on FRI NOV 12 1999 16:56:41 UTC
ip address 192.168.1.229 255.255.255.0
ip rip receive version 2 1
ip rip send version 1
ip rip authentication mode md5 17
ip rip authentication key
ip route 10.6.0.0 255.255.0.0 192.168.1.1
ip route 10.10.0.0 255.255.0.0 192.168.1.1
```


```
ip route 10.10.0.166 255.255.255.255 192.168.1.1
ip debounce-time 0
router rip
```

- Related Documentation
- For a list of regular expressions, see *Using Regular Expressions* in the *JunosE IP Services Configuration Guide*

Interface Types and Specifiers


Many commands take the variables *interfaceType* and *interfaceSpecifier*. Some commands support all types of interfaces, whereas other commands support only certain types of interfaces. Similarly, some commands support all interface specifier formats for a particular interface type, whereas other commands support only certain interface specifier formats.

Table 3 on page 5 lists the interface specifiers for each type of interface on ERX7xx models, ERX14xx models, and the Juniper Networks ERX310 Broadband Services Router.



**NOTE:** On ERX7xx models, ERX14xx models, and the ERX310 router, you can use the `atm slot/port/vpi/vci` interface specifier format as an alternative to the `atm slot/port.subinterface` format with the specific `show interface` and `show subinterface` commands to monitor all ATM 1483 subinterfaces (except NBMA interfaces) as well as the upper-layer interfaces configured over an ATM 1483 subinterface. You cannot, however, use the `atm slot/port/vpi/vci` format to create or modify an ATM 1483 subinterface.

Table 4 on page 13 lists the interface specifiers for each type of interface on the Juniper Networks E120 and E320 Broadband Services Routers.



**NOTE:** On the E120 router and the E320 router you can use the `atm slot/adapter/port/vpi/vci` interface specifier format as an alternative to the `atm slot/adapter/port.subinterface` format with the specific `show interface` and `show subinterface` commands to monitor all ATM 1483 subinterfaces (except NBMA interfaces) as well as the upper-layer interfaces configured over an ATM 1483 subinterface. You cannot, however, use the `atm slot/adapter/port/vpi/vci` format to create or modify an ATM 1483 subinterface.

Table 3: Interface Types and Specifiers for ERX7xx Models, ERX14xx Models, and ERX310 Router

Interface Type	Description	Interface Specifier	Example
atm	ATM interface or ATM 1483 subinterface	Refer to the individual formats listed below.	

**Table 3: Interface Types and Specifiers for ERX7xx Models, ERX14xx Models, and ERX310 Router (*continued*)**

Interface Type	Description	Interface Specifier	Example
<ul style="list-style-type: none"> <li>ATM interface or subinterface</li> </ul>	<p>To configure an ATM interface or subinterface:</p> <p><i>slot/port[.subinterface ]</i></p> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><i>port</i>—Port number on the I/O module</li> <li><i>subinterface</i>—Number of the subinterface in the range 1–2147483647</li> </ul>	<p>atm 3/2.6</p>	
<ul style="list-style-type: none"> <li>ATM 1483 subinterface</li> </ul>	<p>To display information about an ATM 1483 subinterface by using <b>show</b> commands:</p> <p><i>slot/port/vpi/vci</i></p> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><i>port</i>—Port number on the I/O module</li> <li><i>vpi</i>—Virtual path identifier of the PVC on this ATM 1483 subinterface; allowable numeric range depends on the module capabilities and current configuration</li> <li><i>vci</i>—Virtual circuit identifier of the PVC on this ATM 1483 subinterface; allowable numeric range depends on the module capabilities and current configuration</li> </ul>	<p>atm 3/2/1/2</p>	



**Table 3: Interface Types and Specifiers for ERX7xx Models, ERX14xx Models, and ERX310 Router (*continued*)**

Interface Type	Description	Interface Specifier	Example
fastEthernet	IEEE 802.3 Fast Ethernet (FE) interface	<code>slot/port[.subinterface1[.subinterface2 ] ]</code> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><i>port</i>—Port number on the I/O module or port 0 for the Fast Ethernet management port on the SRP I/O module</li> </ul> <p>The meaning of the <i>subinterface</i> variables depends on the configuration context. You can configure Fast Ethernet interfaces with or without VLANs.</p> <ul style="list-style-type: none"> <li>VLANs: <ul style="list-style-type: none"> <li><i>subinterface1</i>—Number of the VLAN subinterface in the range 1–2147483647; no more than 4096 VLAN subinterfaces per Fast Ethernet physical port</li> <li><i>subinterface2</i>—When using PPPoE, the number of the PPPoE subinterface in the range 1–2147483647; no more than 8000 PPPoE subinterfaces per Fast Ethernet line module</li> </ul> </li> <li>No VLANs: <ul style="list-style-type: none"> <li><i>subinterface1</i>—When using PPPoE, the number of the PPPoE subinterface in the range 1–2147483647; no more than 8000 PPPoE subinterfaces per Fast Ethernet line module</li> <li><i>subinterface2</i>—Not used</li> </ul> </li> </ul>	fastEthernet 3/2.6.20

**Table 3: Interface Types and Specifiers for ERX7xx Models, ERX14xx Models, and ERX310 Router (*continued*)**

Interface Type	Description	Interface Specifier	Example
gigabitEthernet	IEEE 802.3 Gigabit Ethernet (GE) interface	<p><i>slot/port[.subinterface1[.subinterface2 ] ]</i></p> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><i>port</i>—Port number on the I/O module</li> </ul> <p>The meaning of the <i>subinterface</i> variables depends on the configuration context. You can configure Gigabit Ethernet interfaces with or without VLANs.</p> <ul style="list-style-type: none"> <li>VLANs: <ul style="list-style-type: none"> <li><i>subinterface1</i>—Number of the VLAN subinterface in the range 1–2147483647; no more than 4096 VLAN subinterfaces per Gigabit Ethernet physical port</li> <li><i>subinterface2</i>—When using PPPoE, the number of the PPPoE subinterface in the range 1–2147483647; no more than 8000 PPPoE subinterfaces per Gigabit Ethernet line module</li> </ul> </li> <li>No VLANs: <ul style="list-style-type: none"> <li><i>subinterface1</i>—When using PPPoE, the number of the PPPoE subinterface in the range 1–2147483647; no more than 8000 PPPoE subinterfaces per Gigabit Ethernet line module</li> <li><i>subinterface2</i>—Not used</li> </ul> </li> </ul>	gigabitEthernet 3/0.6.20
lag	IEEE 802.3ad link aggregation group (LAG) interface	<p><i>bundle-name[.subinterface ]</i></p> <ul style="list-style-type: none"> <li><i>bundle-name</i>—Name of the bundle</li> <li><i>subinterface</i>—Number of the LAG subinterface in the range 1–2147483647</li> </ul>	lag paris.2
loopback	Loopback interface	<p><i>integer</i></p> <ul style="list-style-type: none"> <li><i>integer</i>—Integer in the range 1–4294967293</li> </ul>	loopback 20
mlframe-relay	Multilink frame relay interface	<p><i>bundle-name[.subinterface ]</i></p> <ul style="list-style-type: none"> <li><i>bundle-name</i>—Name of the bundle</li> <li><i>subinterface</i>—Number of the MLFR subinterface in the range 1–4294967293</li> </ul>	mlframe-relay boston.1
mlppp	Multilink PPP interface	<p><i>bundle-name</i></p> <ul style="list-style-type: none"> <li><i>bundle-name</i>—Name of the bundle</li> </ul>	mlppp chicago

**Table 3: Interface Types and Specifiers for ERX7xx Models, ERX14xx Models, and ERX310 Router (*continued*)**

Interface Type	Description	Interface Specifier	Example
mplsL2shim	MPLS shim interface	<code>slot/port[.subinterface ]</code> <ul style="list-style-type: none"> <li><code>slot</code>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><code>port</code>—Port number on the I/O module</li> <li><code>subinterface</code>—Number of the subinterface in the range 1–2147483647</li> </ul>	mplsL2shim 3/2.1
mplsMajor	MPLS major interface	<code>slot/port[.subinterface ]</code> <ul style="list-style-type: none"> <li><code>slot</code>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><code>port</code>—Port number on the I/O module</li> <li><code>subinterface</code>—Number of the subinterface in the range 1–2147483647</li> </ul>	mplsMajor 3/2.1
mplsMinor	MPLS minor interface	<code>[ vr:]tunnel-name</code> <ul style="list-style-type: none"> <li><code>vr</code>—Name of a virtual router</li> <li><code>tunnel-name</code>—Name of the tunnel</li> </ul>	mplsMinor lsp-02020202-1-4
null	Null interface, which acts as a data sink and cannot forward or receive traffic. You cannot configure values on the null interface.	0	null 0
pos	Packet over SONET (POS) interface	<code>slot/port[.subinterface ]</code> <ul style="list-style-type: none"> <li><code>slot</code>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><code>port</code>—Port number on the I/O module</li> <li><code>subinterface</code>—Number of the subinterface in the range 1–2147483647</li> </ul>	pos 3/2
serial	CT3, E3 Frame, T3 Frame, or cOCx/STMx interface	Refer to the individual formats listed below.	

Table 3: Interface Types and Specifiers for ERX7xx Models, ERX14xx Models, and ERX310 Router (*continued*)

Interface Type	Description	Interface Specifier	Example
<ul style="list-style-type: none"> <li>CT3</li> </ul>		<i>slot/port:channel/subchannel[.subinterface ]</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models) and 0–13 (ERX14xx models)</li> <li><i>port</i>—Port number on the I/O module</li> <li><i>channel</i>—Number of a T1 channel on a CT3 module; in the range 1–28</li> <li><i>subchannel</i>—Number of the channel group associated with a range of DS0 timeslots on a CT3 module; in the range 1–28</li> <li><i>subinterface</i>—Number of the subinterface in the range 1–2147483647</li> </ul>	serial 3/2:20/15
<ul style="list-style-type: none"> <li>E3/T3 Frame</li> </ul>		<i>slot/port[.subinterface ]</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models) and 0–13 (ERX14xx models)</li> <li><i>port</i>—Port number on the I/O module</li> <li><i>subinterface</i>—Number of the subinterface in the range 1–2147483647</li> </ul>	serial 3/2
<ul style="list-style-type: none"> <li>cOCx/STMx: unframed E1</li> </ul>		<i>slot/port:path-channel/path-payload/ tributary-group/tributary-number/ channelNumber[.subinterface ]</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><i>port</i>—Port number on the I/O module</li> <li><i>path-channel</i>—Number of the STS-1or STM-0 line in the range 1–2147483648</li> <li><i>path-payload</i>—Number of the payload within the path</li> <li><i>tributary-group</i>—Number of the tributary group within the path</li> <li><i>tributary-number</i>—Number of the tributary within the group</li> <li><i>channelNumber</i>—1 (the router assigns the number one to an unframed E1 channel)</li> <li><i>subinterface</i>—Number of the subinterface in the range 1–2147483647</li> </ul>	serial 3/0:10/1/2/2/1

**Table 3: Interface Types and Specifiers for ERX7xx Models, ERX14xx Models, and ERX310 Router (*continued*)**

Interface Type	Description	Interface Specifier	Example
<ul style="list-style-type: none"> <li>cOCx/STMx: fractional E1/T1</li> </ul>		<i>slot/port/path-channel/path-payload/tributary-group/tributary-number/channel-group[.subinterface ]</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><i>port</i>—Port number on the I/O module</li> <li><i>path-channel</i>—Number of the STS-1or STM-0 line in the range 1–2147483648</li> <li><i>path-payload</i>—Number of the payload within the path</li> <li><i>tributary-group</i>—Number of the tributary group within the path</li> <li><i>tributary-number</i>—Number of the tributary within the group</li> <li><i>channel-group</i>—Number of a fractional T1 or E1 line</li> <li><i>subinterface</i>—Number of the subinterface in the range 1–2147483647</li> </ul>	serial 3/0:10/1/2/2/1
<ul style="list-style-type: none"> <li>cOCx/STMx: unchannelized DS3</li> </ul>		<i>slot/port/path-channel/ds3-channel-number [.subinterface ]</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><i>port</i>—Port number on the I/O module</li> <li><i>path-channel</i>—Number of the STS-1or STM-0 line in the range 1–2147483648</li> <li><i>ds3-channel-number</i>—Number of a T3 channel</li> <li><i>subinterface</i>—Number of the subinterface in the range 1–2147483647</li> </ul>	serial 3/0:1/1

**Table 3: Interface Types and Specifiers for ERX7xx Models, ERX14xx Models, and ERX310 Router (*continued*)**

Interface Type	Description	Interface Specifier	Example
<ul style="list-style-type: none"> <li>cOCx/STMx: DS3 channelized to DS0</li> </ul>		<i>slot/port:path-channel/ds3-channel-number/ds1-channel-number/subchannel-number [subinterface]</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><i>port</i>—Port number on the I/O module</li> <li><i>path-channel</i>—Number of the STS-1or STM-0 line in the range 1–2147483648</li> <li><i>ds3-channel-number</i>—Number of a T3 channel</li> <li><i>ds1-channel-number</i>—Number of a T1 channel</li> <li><i>subchannel-number</i>—Number of a fractional T1 channel</li> <li><i>subinterface</i>—Number of the subinterface in the range 1–2147483647</li> </ul>	serial 3/0:1/1/10/15
sonet – line layer	Line layer of a SONET/SDH interface	<i>slot/port</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><i>port</i>—Port number on the I/O module</li> </ul>	sonet 3/0
sonet – path layer	Path layer of a SONET/SDH interface	<i>slot/port:path-channel</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><i>port</i>—Port number on the I/O module</li> <li><i>path-channel</i>—Number of the STS-1or STM-0 line in the range 1–2147483648</li> </ul>	sonet 3/0:2
sonet – section layer	Section layer of a SONET/SDH interface	<i>slot/port</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–6 (ERX7xx models), 0–13 (ERX14xx models), and 0–2 (ERX310 router)</li> <li><i>port</i>—Port number on the I/O module</li> </ul>	sonet 3/0
tunnel	Tunnel interface	<i>tunnel-type:tunnel-name[subinterface]</i> <ul style="list-style-type: none"> <li><i>tunnel-type</i>—Type of the tunnel: dvmp, gre, ipsec, l2tp, or mpls</li> <li><i>tunnel-name</i>—Name of the tunnel</li> <li><i>subinterface</i>—For GRE tunnels, number of the subinterface in the range 1–2147483647</li> </ul>	tunnel gre:boston

Table 4: Interface Types and Specifiers for E120 Router and E320 Router

Interface Type	Description	Interface Specifier	Example
atm	ATM interface or ATM 1483 subinterface	Refer to the individual formats listed below.	
• ATM interface or subinterface		<p>To configure an ATM interface or subinterface:</p> <p><i>slot/adapter/port[.subinterface ]</i></p> <ul style="list-style-type: none"> <li>• <i>slot</i>—Number of the chassis slot in the range 0–5 (E120 router) and 0–5 or 11–16 (E320 router)</li> <li>• <i>adapter</i>—Identifier for the IOA within the chassis slot, either 0 or 1, where: <ul style="list-style-type: none"> <li>• 0 indicates that the IOA is installed in the right IOA bay (E120 router) or the upper IOA bay (E320 router).</li> <li>• 1 indicates that the IOA is installed in the left IOA bay (E120 router) or the lower IOA bay (E320 router).</li> </ul> </li> <li>• <i>port</i>—Port number on the IOA</li> <li>• <i>subinterface</i>—Number of the subinterface in the range 1–2147483647</li> </ul>	atm 3/1/7.6
• ATM 1483 subinterface		<p>To display information about an ATM 1483 subinterface by using <b>show</b> commands:</p> <p><i>slot/adapter/port/vpi/vci</i></p> <ul style="list-style-type: none"> <li>• <i>slot</i>—Number of the chassis slot in the range 0–5 (E120 router) and 0–5 or 11–16 (E320 router)</li> <li>• <i>adapter</i>—Identifier for the IOA within the chassis slot, either 0 or 1, where: <ul style="list-style-type: none"> <li>• 0 indicates that the IOA is installed in the right IOA bay (E120 router) or the upper IOA bay (E320 router).</li> <li>• 1 indicates that the IOA is installed in the left IOA bay (E120 router) or the lower IOA bay (E320 router).</li> </ul> </li> <li>• <i>port</i>—Port number on the IOA</li> <li>• <i>vpi</i>—Virtual path identifier of the PVC on this ATM1483 subinterface; numeric range for the E120 and E320 routers is 0–255</li> <li>• <i>vci</i>—Virtual circuit identifier of the PVC on this ATM1483 subinterface; numeric range for the E120 and E320 routers is 1–65535</li> </ul>	atm 3/1/7/1/2

Table 4: Interface Types and Specifiers for E120 Router and E320 Router (*continued*)

Interface Type	Description	Interface Specifier	Example
fastEthernet  (for Fast Ethernet management port on SRP IOA)	IEEE 802.3 Fast Ethernet (FE) interface	<i>slot/adapter/port</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot, either 6 or 7</li> <li><i>adapter</i>—Identifier for the SRP I/O adapter (IOA) within the chassis slot; always 0</li> <li><i>port</i>—Port number on the SRP IOA; always 0</li> </ul>	fastEthernet 6/0/0
gigabitEthernet	IEEE 802.3 Gigabit Ethernet (GE) interface	<i>slot/adapter/port[.subinterface1[.subinterface2 ]]</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–5 (E120 router) and 0–5 or 11–16 (E320 router)</li> <li><i>adapter</i>—Identifier for the IOA within the chassis slot, either 0 or 1, where: <ul style="list-style-type: none"> <li>0 indicates that the IOA is installed in the right IOA bay (E120 router) or the upper IOA bay (E320 router).</li> <li>1 indicates that the IOA is installed in the left IOA bay (E120 router) or the lower IOA bay (E320 router).</li> </ul> </li> <li><i>port</i>—Port number on the IOA</li> </ul> <p>The meaning of the <i>subinterface</i> variables depends on the configuration context. You can configure Gigabit Ethernet interfaces with or without VLANs.</p> <ul style="list-style-type: none"> <li>VLANs: <ul style="list-style-type: none"> <li><i>subinterface1</i>—Number of the VLAN subinterface in the range 1–2147483647; no more than 4096 VLAN subinterfaces per Gigabit Ethernet physical port</li> <li><i>subinterface2</i>—When using PPPoE, the number of the PPPoE subinterface in the range 1–2147483647; no more than 16,000 PPPoE subinterfaces per Gigabit Ethernet line module</li> </ul> </li> <li>No VLANs: <ul style="list-style-type: none"> <li><i>subinterface1</i>—When using PPPoE, the number of the PPPoE subinterface in the range 1–2147483647; no more than 16,000 PPPoE subinterfaces per Gigabit Ethernet line module</li> <li><i>subinterface2</i>—Not used</li> </ul> </li> </ul>	gigabitEthernet 4/0/1.20
lag	IEEE 802.3ad link aggregation group (LAG) interface	<i>bundle-name[.subinterface ]</i> <ul style="list-style-type: none"> <li><i>bundle-name</i>—Name of the bundle</li> <li><i>subinterface</i>—Number of the LAG subinterface in the range 1–2147483647</li> </ul>	lag paris.2



**Table 4: Interface Types and Specifiers for E120 Router and E320 Router (continued)**

Interface Type	Description	Interface Specifier	Example
mplsL2shim	MPLS shim interface	<i>slot/adapter/port[.subinterface ]</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–5 (E120 router) and 0–5 or 11–16 (E320 router)</li> <li><i>adapter</i>—Identifier for the IOA within the chassis slot, either 0 or 1, where: <ul style="list-style-type: none"> <li>0 indicates that the IOA is installed in the right IOA bay (E120 router) or the upper IOA bay (E320 router).</li> <li>1 indicates that the IOA is installed in the left IOA bay (E120 router) or the lower IOA bay (E320 router).</li> </ul> </li> <li><i>port</i>—Port number on the IOA</li> <li><i>subinterface</i>—Number of the subinterface in the range 1–2147483647</li> </ul>	mplsL2shim 3/0/2.1
mplsMajor	MPLS major interface	<i>slot/adapter/port[.subinterface ]</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–5 (E120 router) and 0–5 or 11–16 (E320 router)</li> <li><i>adapter</i>—Identifier for the IOA within the chassis slot, either 0 or 1, where: <ul style="list-style-type: none"> <li>0 indicates that the IOA is installed in the right IOA bay (E120 router) or the upper IOA bay (E320 router).</li> <li>1 indicates that the IOA is installed in the left IOA bay (E120 router) or the lower IOA bay (E320 router).</li> </ul> </li> <li><i>port</i>—Port number on the IOA</li> <li><i>subinterface</i>—Number of the subinterface in the range 1–2147483647</li> </ul>	mplsMajor 3/0/2.1
mplsMinor	MPLS minor interface	[ <i>vr:</i> ] <i>tunnel-name</i> <ul style="list-style-type: none"> <li><i>vr</i>—Name of a virtual router</li> <li><i>tunnel-name</i>—Name of the tunnel</li> </ul>	mplsMinor lsp-02020202-1-4

**Table 4: Interface Types and Specifiers for E120 Router and E320 Router (continued)**

Interface Type	Description	Interface Specifier	Example
pos	Packet over SONET (POS) interface	<i>slot/adapter/port</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–5 (E120 router) and 0–5 or 11–16 (E320 router)</li> <li><i>adapter</i>—Identifier for the IOA within the chassis slot, either 0 or 1, where: <ul style="list-style-type: none"> <li>0 indicates that the IOA is installed in the right IOA bay (E120 router) or the upper IOA bay (E320 router).</li> <li>1 indicates that the IOA is installed in the left IOA bay (E120 router) or the lower IOA bay (E320 router).</li> </ul> </li> <li><i>port</i>—Port number on the IOA</li> </ul>	pos 5/0/0
sonet – line layer	Line layer of a SONET/SDH interface	<i>slot/adapter/port</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–5 (E120 router) and 0–5 or 11–16 (E320 router)</li> <li><i>adapter</i>—Identifier for the IOA within the chassis slot, either 0 or 1, where: <ul style="list-style-type: none"> <li>0 indicates that the IOA is installed in the right IOA bay (E120 router) or the upper IOA bay (E320 router).</li> <li>1 indicates that the IOA is installed in the left IOA bay (E120 router) or the lower IOA bay (E320 router).</li> </ul> </li> <li><i>port</i>—Port number on the IOA</li> </ul>	sonet 3/0/0
sonet – path layer	Path layer of a SONET/SDH interface	<i>slot/adapter/port</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–5 (E120 router) and 0–5 or 11–16 (E320 router)</li> <li><i>adapter</i>—Identifier for the IOA within the chassis slot, either 0 or 1, where: <ul style="list-style-type: none"> <li>0 indicates that the IOA is installed in the right IOA bay (E120 router) or the upper IOA bay (E320 router).</li> <li>1 indicates that the IOA is installed in the left IOA bay (E120 router) or the lower IOA bay (E320 router).</li> </ul> </li> <li><i>port</i>—Port number on the IOA</li> </ul>	sonet 3/0/0

**Table 4: Interface Types and Specifiers for E120 Router and E320 Router (*continued*)**

Interface Type	Description	Interface Specifier	Example
sonet – section layer	Section layer of a SONET/SDH interface	<i>slot/adapters/port</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–5 (E120 router) and 0–5 or 11–16 (E320 router)</li> <li><i>adapter</i>—Identifier for the IOA within the chassis slot, either 0 or 1, where: <ul style="list-style-type: none"> <li>0 indicates that the IOA is installed in the right IOA bay (E120 router) or the upper IOA bay (E320 router).</li> <li>1 indicates that the IOA is installed in the left IOA bay (E120 router) or the lower IOA bay (E320 router).</li> </ul> </li> <li><i>port</i>—Port number on the IOA</li> </ul>	sonet 3/0/0
tenGigabitEthernet	IEEE 802.3ae 10-Gigabit Ethernet (GE) interface	<i>slot/adapters/port[.subinterface1[.subinterface2 ] ]</i> <ul style="list-style-type: none"> <li><i>slot</i>—Number of the chassis slot in the range 0–5 (E120 router) and 0–5 or 11–16 (E320 router)</li> <li><i>adapter</i>—Identifier for the IOA within the chassis slot. 0 indicates that this is a full-height IOA.</li> <li><i>port</i>—Port number on the IOA</li> </ul> <p>The meaning of the <i>subinterface</i> variables depends on the configuration context. You can configure 10-Gigabit Ethernet interfaces with or without VLANs.</p> <ul style="list-style-type: none"> <li>VLANs: <ul style="list-style-type: none"> <li><i>subinterface1</i>—Number of the VLAN subinterface in the range 1–2147483647; no more than 4096 VLAN subinterfaces per 10-Gigabit Ethernet physical port</li> <li><i>subinterface2</i>—When using PPPoE, the number of the PPPoE subinterface in the range 1–2147483647; no more than 16,000 PPPoE subinterfaces per 10-Gigabit Ethernet line module</li> </ul> </li> <li>No VLANs: <ul style="list-style-type: none"> <li><i>subinterface1</i>—When using PPPoE, the number of the PPPoE subinterface in the range 1–2147483647; no more than 16,000 PPPoE subinterfaces per 10-Gigabit Ethernet line module</li> <li><i>subinterface2</i>—Not used</li> </ul> </li> </ul>	tenGigabitEthernet 4/0/1.20

**Table 4: Interface Types and Specifiers for E120 Router and E320 Router** (*continued*)

Interface Type	Description	Interface Specifier	Example
tunnel	Tunnel interface	<i>tunnel-type:tunnel-name[.subinterface]</i> <ul style="list-style-type: none"><li>• <i>tunnel-type</i>—Type of the tunnel: dvmrp, gre, l2tp, or mpls</li><li>• <i>tunnel-name</i>—Name of the tunnel</li><li>• <i>subinterface</i>—For GRE tunnels, number of the subinterface in the range 1–2147483647</li></ul>	tunnel gre:boston

## CHAPTER 2

# N Commands

## nas-port-type atm

---

**Syntax**    nas-port-type atm { adsl-cap | adsl-dmt | idsl | sdsl | xdsl | cable | wireless-80211 | wireless-cdma | wireless-umts | wireless-1x-ev | wireless-other | iapp | *value* }

no nas-port-type atm

**Release Information**    Command introduced before Release 7.1.0.

**Description**    Specifies the RADIUS NAS-Port-Type attribute (61) used for ATM interfaces. The **no** version removes the NAS-Port-Type setting.

- Options**
- adsl-cap—Asymmetric DSL, Carrierless Amplitude Phase Modulation
  - adsl-dmt—Asymmetric DSL, Discrete Multi-Tone
  - idsl—ISDN DSL
  - sdsl—Symmetric DSL
  - xdsl—DSL of unknown type
  - cable—Cable
  - wireless-80211—Wireless 802.11
  - wireless-cdma—Wireless code division multiple access (CDMA)
  - wireless-umts—Wireless universal mobile telecommunications system (UMTS)
  - wireless-1x-ev—Wireless 1xEV
  - wireless-other—Wireless other
  - iapp—Inter Access Point Protocol (IAPP)
  - *value*—Number in the range 0–65535

**Mode**    AAA Profile Configuration

## nas-port-type ethernet

---

**Syntax** nas-port-type ethernet { cable | wireless-80211 | wireless-cdma | wireless-umts | wireless-1x-ev | wireless-other | iapp | *value* }

no nas-port-type ethernet

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the RADIUS NAS-Port-Type attribute (61) used for Ethernet interfaces. The **no** version removes the NAS-Port-Type setting.

- Options**
- cable—Cable
  - wireless-80211—Wireless 802.11
  - wireless-cdma—Wireless code division multiple access (CDMA)
  - wireless-umts—Wireless universal mobile telecommunications system (UMTS)
  - wireless-1x-ev—Wireless 1xEV
  - wireless-other—Wireless other
  - iapp—Inter Access Point Protocol (IAPP)
  - *value*—Number in the range 0–65535

**Mode** AAA Profile Configuration

## neighbor

---

**Syntax** For ANCP:

[ no ] neighbor *neighborName*

For OSPF:

neighbor *ipAddressOspf* [ pollinterval *seconds* | priority *number* ]

no neighbor *ipAddressOspf* [ pollinterval | priority ]

For RIP:

[ no ] neighbor *ipAddressRip*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** For ANCP, creates an ANCP neighbor and accesses the L2C Neighbor Configuration (config-l2c-neighbor) mode. For OSPF, configures OSPF neighbors on an NBMA network. For RIP, specifies a RIP neighbor to which the router sends unicast messages. The **no** version removes the specified neighbor configuration or, by omitting the neighbor name, all ANCP neighbor configurations (ANCP), removes the neighbor (OSPF and RIP), or restores the default values (OSPF).

- Options**
- *neighborName*—Name of the ANCP neighbor
  - *ipAddressOspf*—IP address of the neighbor's interface; this interface must itself be configured for the NBMA network type
  - *number*—Router priority value of the neighbor in the range 1–4294967295; default value is 0
  - *seconds*—Interval in seconds at which the neighbor is polled; should be much larger than the hello interval (per RFC 1247); in the range 0–255; default value is 120
  - *ipAddressRip*—IP address of the neighbor's interface; this interface must be defined as a passive interface with the **passive-interface** command

**Mode** Address Family Configuration (RIP), Router Configuration



## neighbor activate

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } activate

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Specifies a peer or peer group with which routes of the current address family are exchanged. A peer or peer group can be activated in more than one address family. By default, a peer or peer group is activated only for the IPv4 unicast address family. The address families that are actively exchanged over a BGP session are negotiated when the session is established. This command takes effect immediately. The **no** version indicates that routes of the current address family should not be exchanged with the peer or peer group. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

If dynamic capability negotiation was not negotiated with the peer, the session is automatically bounced so that the exchanged address families can be renegotiated in the open messages when the session comes back up.

If dynamic capability negotiation was negotiated with the peer, BGP sends a capability message to the peer to advertise or withdraw the multiprotocol capability for the address family in which this command is issued.

If a neighbor is activated, BGP also sends the full contents of the BGP routing table of the newly activated address family.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.

**Mode** Address Family Configuration, Router Configuration

**Related Documentation**

- *Configuring BGP Signaling for L2VPNs and Configuring BGP Signaling for VPLS in the JunosE BGP and MPLS Configuration Guide*

## neighbor advertise-map

---

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* }  
advertise-map *advertiseMapName* { exist-map | non-exist-map }  
*conditionMapName* [ seq *sequenceNumber* ]

**Release Information** Command introduced in JunosE Release 9.0.0.

**Description** Specifies a peer or peer group within the current address family to which routes specified by the first route map are advertised conditionally, depending on whether the second route map is matched by some other routes in the BGP routing table. The **no** version removes the conditions for advertising the routes to the peer or peer group. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group all the members of the peer group inherit the characteristic configured with this command
  - *advertiseMapName*—Name of a route map that specifies the routes controlled by conditional advertisement; no more than 50 advertise maps can be configured per peer or peer group in an address-family
  - *conditionMapName*—Name of a route map that specifies the routes that control conditional advertisement
  - *sequenceNumber*—Number, in the range 1–65535, that indicates the position an advertise route map has in the list of advertise route maps configured for a particular neighbor within the same address family; if the sequence number is not specified, the position of the route map is considered to be the sum of the current largest sequence number plus five

**Mode** Address Family Configuration

## neighbor advertisement-interval

---

**Syntax**    `neighbor { ipAddress | ipv6Address | peerGroupName } advertisement-interval seconds`  
`no neighbor { ipAddress | ipv6Address | peerGroupName } advertisement-interval`  
`[ seconds ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    Sets the minimum interval between the sending of BGP updates for a given prefix. The **no** version restores the default interval.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *seconds*—Interval in seconds between update messages; in the range 0–600; default value is 30 seconds for external peers and 5 seconds for internal peers

**Mode**    Address Family Configuration, Router Configuration

## neighbor allow

---

**Syntax** [ no ] neighbor *peerGroupName* allow *accessListName*  
[ max-peers *maxNumberDynamicPeers* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the peer group so that it accepts inbound connections from any remote address that matches the access list. The **no** version removes the configuration.

- Options**
- *peerGroupName*—Name of a BGP peer group
  - *accessListName*—Name of an access list that specifies remote addresses from which BGP connections may be accepted
  - *maxNumberDynamicPeers*—Maximum number of dynamic peers that a member of the peer group may accept

**Mode** Router Configuration

## neighbor allowas-in

---

**Syntax**    neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } allowas-in *number*  
no neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } allowas-in [ *number* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    Specifies the number of times that the AS path of a received route may contain the recipient BGP speaker's AS number and still be accepted. The **no** version restores the default state, which is to reject as a loop any route whose path contains the speaker's AS number. IBGP peers in the VPNv4 address family always accept these routes, regardless of the command configuration.

**Options**

- *ipAddress*—IP address of BGP neighbor
- *ipv6Address*—IPv6 address of BGP neighbor
- *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
- *number*—Number in the range 1–10

**Mode**    Router Configuration

## neighbor as-override

---

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } as-override

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Prevents routing loops between routers within a VPN by substituting the current router's AS number in routing tables for that of the neighboring router. When you issue this command, new policy values are applied to all routes that are sent (outbound policy) or received (inbound policy).

The **no** version halts this substitution. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command. You cannot override the characteristic for a specific member of the peer group.

**Mode** Router Configuration

## neighbor bfd-liveness-detection

**Syntax** neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } bfd-liveness-detection  
 [ minimum-interval *minInterval* ]  
 [ minimum-receive-interval *minRecInterval* ]  
 [ minimum-transmit-interval *minTransInterval* ] [ multiplier *multiplierValue* ]  
 { no | default } neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* }  
 bfd-liveness-detection

**Release Information** Command introduced in JunosE Release 7.2.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Enables BGP to determine quickly whether a BGP neighbor is unreachable by means of a BFD protocol session to the neighbor address or to each member of the specified peer group. The **no** version disables BFD liveness detection for the neighbor or peer-group members. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.



**NOTE:** BFD sessions might not be maintained when the multiplier value is 1 and configured intervals are very short. We recommend that you do not use a multiplier value of 1 with very short intervals.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *minInterval*—Minimum proposed transmit interval and required receive interval for BFD control packets; has the same effect as configuring the minimum receive interval and the minimum transmit interval to the same value; number in the range 100–65535 milliseconds—for ES2 4G LM only, the range is 10–65535 milliseconds; default value is 300 milliseconds
  - *minRecInterval*—Minimum interval at which the local peer must receive BFD control packets sent by the remote peer; number in the range 100–65535 milliseconds—for ES2 4G LM only, the range is 10–65535 milliseconds; default value is 300 milliseconds
  - *minTransInterval*—Minimum interval at which the local peer proposes to transmit BFD control packets to the remote peer; number in the range 100–65535 milliseconds—for ES2 4G LM only, the range is 10–65535 milliseconds; default value is 300 milliseconds
  - *multiplierValue*—Detection multiplier value that the remote peer router multiplies by the local peer's negotiated transmit interval to determine the remote peer's BFD liveness detection interval; equal to the number of BFD packets that can be missed before the BFD session is declared down; number in the range 1–255; default value is 3

**Mode**    Address Family Configuration, Router Configuration



## neighbor capability

**Syntax** For all capabilities except ORF:

```
[ no | default ] neighbor { ipAddress | ipv6Address | peerGroupName } capability
{ deprecated-dynamic-capability-negotiation | dynamic-capability-negotiation |
four-octet-as-numbers | negotiation | route-refresh | route-refresh-cisco }
```

For the ORF capability:

```
neighbor { ipAddress | ipv6Address | peerGroupName } capability orf
{ prefix-list | prefix-list-cisco } { send | receive | both }
```

```
{ no | default } neighbor { ipAddress | ipv6Address | peerGroupName } capability orf
{ prefix-list | prefix-list-cisco } [ send | receive | both ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Controls advertisement of BGP capabilities to peers. Capability negotiation and advertisement of all capabilities, except the ORF capability, is enabled by default. The **no** version disables capability negotiation or prevents advertisement of the specified capability. The **default** version restores the default condition, advertising the capability.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor; because IPv6 ORF prefix lists are not supported, this variable is valid for the ORF c capability only under the IPv4 address family for advertising IPv4 routes over BGP IPv6 peers
  - *peerGroupName*—Name of BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *negotiation*—Determines whether the capabilities option is sent in the open message while establishing a session; if it is not sent, no capability negotiation is conducted with that peer
  - *deprecated-dynamic-capability-negotiation*—Indicates support of negotiation of capabilities (sending new capabilities or removing previously negotiated capabilities) without performing a hard clear of the BGP session; the capability data field does not include a list of capabilities that can be dynamically negotiated
  - *dynamic-capability-negotiation*—Indicates support of negotiation of capabilities (sending new capabilities or removing previously negotiated capabilities) without performing a hard clear of the BGP session; the capability data field includes a list of capabilities that can be dynamically negotiated
  - *four-octet-as-numbers*—Indicates support of AS numbers and sub-AS numbers that are four octets in length, in the range 0–4294967295

- **route-refresh**—Indicates support of route-refresh messages that request the peer to resend its routes to the router, enabling the BGP speaker to apply modified or new policies to the routes when it receives them again
- **route-refresh-cisco**—Indicates support of Cisco-proprietary (prestandard) route-refresh messages for interoperability with older Cisco devices
- **orf**—Indicates support of cooperative route filtering to install a BGP speaker's inbound route filter as an outbound route filter on the peer
- **prefix-list**—Installs the filter (any inbound prefix list or distribute list) as an outbound prefix list
- **prefix-list-cisco**—Installs the filter (any inbound prefix list or distribute list) as an outbound Cisco proprietary prefix list
- **send**—Sends inbound route filter to the peer to install as the outbound route filter
- **receive**—Accepts inbound route filter from the peer and installs it as the outbound route filter; cannot be configured for a peer group or a peer that is a member of a peer groups
- **both**—Sends and accepts inbound route filters with the peer for installation as the outbound route filter

**Mode**    Address Family Configuration, Router Configuration

## neighbor default-originate

**Syntax** neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } default-originate  
 [ route-map *mapTag* ]

{ no | default } neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } default-originate  
 [ route-map [ *mapTag* ] ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Allows a BGP speaker (the local router) to send the default route 0.0.0.0/0 to a neighbor for use as a default route. When you issue this command in the route-target address family, BGP advertises the Default-RT-MEM-NLRI route (0:0:0/0). The **no** version halts sending a default route to the neighbor. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command. You cannot override the characteristic for a specific member of the peer group.
  - *mapTag*—Name of route map applied to modify the attributes of the default route or to filter the default route; string of up to 32 characters

**Mode** Address Family Configuration, Router Configuration

## neighbor description

---

**Syntax**    `neighbor { ipAddress | ipv6Address | peerGroupName } description text`  
`no neighbor { ipAddress | ipv6Address | peerGroupName } description`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    Associates a textual description with a BGP neighbor. The **no** version removes the description.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *text*—Up to 80 characters of text that describes the neighbor

**Mode**    Address Family Configuration, Router Configuration

## neighbor distribute-list

**Syntax** `neighbor { ipAddress | ipv6Address | peerGroupName } distribute-list  
accessListName { in | out }`

`no neighbor { ipAddress | ipv6Address | peerGroupName } distribute-list  
[ accessListName ] { in | out }`

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Distributes BGP neighbor information as specified in an access list. The **no** version removes an entry.

Using distribute lists is one of several ways to filter BGP advertisements. You can also use route maps or use AS-path filters, as with the **ip as-path access-list** Global Configuration command and the **neighbor filter-list** command.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *accessListName*—String of up to 32 alphanumeric characters identifying an access list
  - in—Applies list to incoming routes (inbound policy)
  - out—Applies list to outgoing routes (outbound policy); you cannot configure a member of a peer group to override the inherited peer group characteristic for outbound policy

**Mode** Address Family Configuration, Router Configuration

## neighbor ebgp-multihop

---

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } ebgp-multihop [ *ttl* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Allows BGP to accept route updates from external peers residing on networks that are not directly connected. The **no** version halts accepting such routers. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *ttl*—Maximum number of hops to the peer, in the range 1–255; default value is 255

**Mode** Address Family Configuration, Router Configuration

## neighbor filter-list

**Syntax** To apply an access list:

```
neighbor { ipAddress | ipv6Address | peerGroupName } filter-list
accessListName { in | out }
```

```
no neighbor { ipAddress | ipv6Address | peerGroupName } filter-list
[ accessListName ] { in | out }
```

To assign a weight:

```
neighbor { ipAddress | ipv6Address | peerGroupName } filter-list
accessListName weight value
```

```
no neighbor { ipAddress | ipv6Address | peerGroupName } filter-list
[ accessListName ] weight [ value ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Applies an AS path access list to advertisements inbound from or outbound to the specified neighbor, or assigns a weight to incoming routes that match the AS path access list. The **no** version stops the application of the list or assignment of the weight.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *accessListName*—Name of a single AS path access list; string of up to 32 characters
  - *in*—Applies access list to incoming routes (inbound policy)
  - *out*—Applies access list to outgoing routes (outbound policy); you cannot configure a member of a peer group to override the inherited peer group characteristic for outbound policy
  - *value*—Number in the range 0–65535; assigns relative importance to incoming routes matching AS paths

**Mode** Address Family Configuration, Router Configuration

## neighbor graceful-restart

---

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } graceful-restart

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Enables the BGP graceful restart capability for the peer or peer group, which enables BGP to maintain its forwarding state during a peer restart, avoiding network-wide route flaps and interruptions in traffic forwarding. Graceful restart is disabled by default. The **no** version disables the graceful restart capability. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

**Options**

- *ipAddress*—IP address of BGP neighbor
- *ipv6Address*—IPv6 address of BGP neighbor
- *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.

**Mode** Address Family Configuration, Router Configuration



## neighbor graceful-restart restart-time

**Syntax** neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } graceful-restart restart-time *seconds*

no neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } graceful-restart restart-time [ *seconds* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Sets the time period advertised to a specific peer or peer group during which a restart is expected to be complete on this BGP speaker. If the speaker does not reestablish peering sessions within this period, the peer flushes all routes from this speaker that it marked as stale when the speaker restarted and the session went down. The **no** version restores the default value, 120 seconds.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *seconds*—Integer in the range 1–3600; default value is 120 seconds

**Mode** Address Family Configuration, Router Configuration

## neighbor graceful-restart stalepaths-time

---

**Syntax**    neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } graceful-restart stalepaths-time *seconds*

no neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } graceful-restart stalepaths-time [ *seconds* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    For a peer or peer group, sets the time period after a peer session restart during which BGP waits for an End-of-RIB marker from the peer before flushing all stale routes from that peer. The period is measured from when the session is detected in a down state. The **no** version restores the default value, 360 seconds.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *seconds*—Integer in the range 1–3600; default value is 360 seconds

**Mode**    Address Family Configuration, Router Configuration

## neighbor ibgp-singlehop

---

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } ibgp-singlehop

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Configures an internal BGP peer to be a single-hop (non-multihop) peer. The **no** version restores the default, wherein internal peer cannot be a single hop. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

**Options**

- *ipAddress*—IP address of BGP neighbor
- *ipv6Address*—IPv6 address of BGP neighbor
- *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.

**Mode** Address Family Configuration, Router Configuration

## neighbor lenient

---

**Syntax** [ no ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } lenient

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Enables lenient behavior to make the BGP speaker more tolerant of malformed packet and finite state machine errors generated by peer, so that the speaker can attempt recovery from the error and avoid bringing down the session. The **no** version disables lenient behavior; this is the default condition.

**Options**

- *ipAddress*—IP address of BGP neighbor
- *ipv6Address*—IPv6 address of BGP neighbor
- *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.

**Mode** Address Family Configuration, Router Configuration

## neighbor local-as

---

**Syntax**    neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } local-as *number*  
              no neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } local-as [ *number* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              *ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    Assigns a local AS number for the specified BGP peer or peer group. The **no** version restores the default value set globally for the BGP instance with the **router bgp** command.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of the BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *number*—Number in the range 1–4294967295; the local AS to assign to the peer

**Mode**    Address Family Configuration, Router Configuration

## neighbor maximum-orf-entries

---

**Syntax**    neighbor { *ipAddress* | *ipv6Address* } maximum-orf-entries *maximum*  
              no neighbor { *ipAddress* | *ipv6Address* } maximum-orf-entries [ *maximum* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              *ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    Sets the maximum number of ORF entries of a particular type that are accepted from the specified neighbor. The **no** version restores the default value of no limits.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *maximum*—Maximum number of ORF entries in the range 0–4294967295; default value is no limit

**Mode**    Address Family Configuration, Router Configuration

## neighbor maximum-prefix

**Syntax** neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } maximum-prefix *maximum* [ *threshold* ] [ strict ] [ warning-only ]

no neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } maximum-prefix [ *maximum* ] [ *threshold* ] [ strict ] [ warning-only ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Sets the number of prefixes that can be received from a neighbor. The **no** version removes the maximum prefix limitation.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of the BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *maximum*—Maximum number of prefixes; default value is no limit
  - *threshold*—Percent of maximum at which to log a warning in the range 0–100; default value is 75
  - *strict*—Checks the maximum prefix limit against all received routes rather than the default behavior of checking it only against accepted routes
  - *warning-only*—Causes BGP software to log a warning, rather than reset the connection if the *maximum* or *threshold* value is exceeded

**Mode** Address Family Configuration, Router Configuration

## neighbor maximum-update-size

---

**Syntax**    neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } maximum-update-size *value*  
  
             no neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } maximum-update-size  
             [ *value* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             *ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    Sets the maximum size of update messages transmitted to a BGP peer. The **no** version removes the maximum update size limitation.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of the BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *value*—Maximum update size in octets in the range 256–4096; default value is 1024

**Mode**    Address Family Configuration, Router Configuration



## neighbor next-hop-self

<b>Syntax</b>	[ no   default ] neighbor { <i>ipAddress</i>   <i>ipv6Address</i>   <i>peerGroupName</i> } next-hop-self
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <i>ipv6Address</i> variable added in JunosE Release 8.0.0.
<b>Description</b>	Forces the BGP speaker to report itself as the next hop for an advertised route it advertised to a neighbor. Typically you use this command to prevent third-party next hops from being used on NBMA media such as Frame Relay. The <b>no</b> version disables the feature. The <b>default</b> version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>ipAddress</i>—IP address of BGP neighbor</li> <li>• <i>ipv6Address</i>—IPv6 address of BGP neighbor</li> <li>• <i>peerGroupName</i>—Name of a BGP peer group. If you specify a BGP peer group by using the <i>peerGroupName</i> argument, all the members of the peer group inherit the characteristic configured with this command. You cannot override the characteristic for a specific member of the peer group.</li> </ul>
<b>Mode</b>	Address Family Configuration, Router Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring BGP Signaling for L2VPNs and Configuring BGP Signaling for VPLS in the JunosE BGP and MPLS Configuration Guide</i></li> </ul>

## neighbor next-hop-unchanged

---

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* }  
next-hop-unchanged

**Release Information** Command introduced in JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Configures BGP to not modify the next hop sent to the BGP peer. Outbound route maps take precedence over this command, enabling prefixes that match the route map to be modified, regardless of this command. The **no** version reenables BGP to modify the next hop. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

**Options**

- *ipAddress*—IP address of BGP neighbor
- *ipv6Address*—IPv6 address of BGP neighbor
- *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.

**Mode** Address Family Configuration

## neighbor passive

---

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } passive

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Configures the BGP speaker so that it only accepts inbound connections from, but does not initiate outbound connections to, the peer or peer group. The **no** version permits the initiation of outbound connections. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

**Options**

- *ipAddress*—IP address of BGP neighbor
- *ipv6Address*—IPv6 address of BGP neighbor
- *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.

**Mode** Router Configuration

## neighbor password

---

**Syntax**    neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } password [ 0 | 8 ] *string*  
no neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } password

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              *ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    Enables MD5 authentication on a TCP connection between two BGP peers. The **no** version disables MD5 authentication.

- Options**
- *ipAddress*—IP address of the BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of the BGP peer group to which this neighbor belongs. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - 0—Indicates that the MD5 password is entered in unencrypted form (plaintext)
  - 8—Indicates that the MD5 password is entered in encrypted form (ciphertext)
  - *string*—MD5 password, an alphanumeric text string of up to 16 characters

**Mode**    Address Family Configuration, Router Configuration

## neighbor peer-group

**Syntax** Creating a peer group:

```
neighbor peerGroupName peer-group
```

```
no neighbor peerGroupName [ peer-group ]
```

Assigning members to a peer group:

```
neighbor { ipAddress | ipv6Address } peer-group peerGroupName
```

```
no neighbor { ipAddress | ipv6Address } peer-group [ peerGroupName ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** When used from Router Configuration mode without specifying an IP address, creates a BGP peer group. The **no** version removes a peer group.

When used from Router Configuration mode with an IP address or from Address Family Configuration mode, configures a BGP neighbor to be a member of a peer group. The **no** version removes a neighbor from a peer group.



**NOTE:** You cannot mix IPv4 and IPv6 peer members in a peer group. Only one type peer is allowed, IPv4 or IPv6. For example, the following error is generated if an IPv6 peer group member is added to a peer group that already has IPv4 members; that is, where the peer-group type is IPv4:

```
host1(config-router)#neighbor 1::1 peer-group hamburg
% Unable to set 'peer-group' for address family ipv4:unicast for peer
1::1 in core (IPv6 peer cannot be member of a peer-group of type IPv4)
```

- Options**
- *peerGroupName*—Name of BGP peer group
  - *ipAddress*—IP address of the BGP neighbor that belongs to the peer group specified by the name
  - *ipv6Address*—IPv6 address of the BGP neighbor that belongs to the peer group specified by the name
  - *peerGroupName*—Name of the BGP peer group to which this neighbor belongs

**Mode** Address Family Configuration, Router Configuration

## neighbor peer-type

---

**Syntax**    `neighbor peerGroupName peer-type { internal | external | confederation }`  
              `no neighbor peerGroupName peer-type`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the type for the peer group. The **no** version removes the configuration.

- Options**
- *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *internal*—Peers must be in the same AS; if confederations are employed, peers must be in the same sub-AS in the same confederation
  - *external*—Peers must be in a different AS
  - *confederation*—Peers must be in a different sub-AS in the same confederation; used only if confederations are employed

**Mode**    Router Configuration

## neighbor prefix-list

**Syntax** `neighbor { ipAddress | ipv6Address | peerGroupName } prefix-list  
prefixListName { in | out }`

`no neighbor { ipAddress | ipv6Address | peerGroupName } prefix-list  
[ prefixListName ] { in | out }`

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Assigns an inbound or outbound prefix list. The **no** version removes the prefix list.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *prefixListName*—Name of a BGP prefix list
  - **in**—Assigns prefix list to incoming routes (inbound policy)
  - **out**—Assigns prefix list to outgoing routes (outbound policy); you cannot configure a member of a peer group to override the inherited peer group characteristic for outbound policy

**Mode** Address Family Configuration, Router Configuration

## neighbor prefix-tree

---

**Syntax**    neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* }  
              prefix-tree *prefixTreeName* { in | out }  
  
              no neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* }  
              prefix-tree [ *prefixTreeName* ] { in | out }

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              *ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    Assigns an inbound or outbound prefix tree. The **no** version removes the prefix tree.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor; valid only under the IPv4 address family for advertising IPv4 routes over BGP IPv6 peers
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *prefixTreeName*—Name of a BGP prefix tree
  - in—Assigns prefix tree to incoming routes (inbound policy)
  - out—Assigns prefix tree to outgoing routes (outbound policy); you cannot configure a member of a peer group to override the inherited peer group characteristic for outbound policy

**Mode**    Address Family Configuration, Router Configuration



## neighbor remote-as

<b>Syntax</b>	<p>neighbor { <i>ipAddress</i>   <i>ipv6Address</i>   <i>peerGroupName</i> } remote-as <i>number</i></p> <p>no neighbor { <i>ipAddress</i>   <i>ipv6Address</i> } [ remote-as [ <i>number</i> ] ]</p> <p>no neighbor <i>peerGroupName</i> remote-as [ <i>number</i> ]</p>
<b>Release Information</b>	<p>Command introduced before JunosE Release 7.1.0.</p> <p><i>ipv6Address</i> variable added in JunosE Release 8.0.0.</p>
<b>Description</b>	<p>Adds an entry to the BGP neighbor table. Specifying a neighbor with an AS number that matches the AS number specified in the <b>router bgp</b> command identifies the neighbor as internal to the local AS. Otherwise, the neighbor is considered external. This command takes effect immediately. The <b>no</b> version removes an entry from the table.</p>
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>ipAddress</i>—IP address of BGP neighbor</li> <li>• <i>ipv6Address</i>—IPv6 address of BGP neighbor</li> <li>• <i>peerGroupName</i>—Name of a BGP peer group. If you specify a BGP peer group by using the <i>peerGroupName</i> argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.</li> <li>• <i>number</i>—Number in the range 1–4294967295; the AS to which the neighbor belongs</li> </ul>
<b>Mode</b>	<p>Address Family Configuration, Router Configuration</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring BGP Signaling for L2VPNs</i> and <i>Configuring BGP Signaling for VPLS</i> in the <i>JunosE BGP and MPLS Configuration Guide</i></li> </ul>

## neighbor remove-private-as

---

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } remove-private-as

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Removes private AS numbers in updates sent to external peers. Private AS numbers are only in the range 64,512–65,535. The **no** version halts removing private AS numbers. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

**Options**

- *ipAddress*—IP address of BGP neighbor
- *ipv6Address*—IPv6 address of BGP neighbor
- *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command. You cannot override the characteristic for a specific member of the peer group.

**Mode** Address Family Configuration, Router Configuration

## neighbor rib-out disable

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } rib-out disable

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Disables storage of routes to the Adj-RIBs-Out table (disables rib-out) for the neighbor or peer group. Storage is disabled by default. The **no** version enables the route storage. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.



**NOTE:** If you enable or disable rib-out for a peer or peer group and this action changes the current configuration, the peer session or all peer group sessions are automatically bounced.

- Options**
- *ipAddress*—IP address of BGP neighbor; you can independently enable or disable the Adj-RIBs-Out table for a peer, regardless of whether it is a member of a peer group
  - *ipv6Address*—IPv6 address of BGP neighbor; you can independently enable or disable the Adj-RIBs-Out table for a peer, regardless of whether it is a member of a peer group
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, a single Adj-RIBs-Out table is established for the peer group; BGP does not enable individual Adj-RIBs-Out tables for each peer group member.

**Mode** Address Family Configuration, Router Configuration

## neighbor route-map

---

**Syntax**    neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } route-map *mapTag*  
              { in | out }  
  
              no neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } route-map [ *mapTag* ]  
              { in | out }

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              *ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    Applies a route map to incoming or outgoing routes. If an outbound route map is specified, BGP advertises only routes that match at least one section of the route map. The **no** version removes a route map.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *mapTag*—Name of the route map; a string of up to 32 alphanumeric characters
  - in—Applies route map to incoming routes
  - out—Applies route map to outgoing routes; you cannot configure a member of a peer group to override the inherited peer group characteristic for outbound policy

**Mode**    Address Family Configuration, Router Configuration

---

## neighbor route-reflector-client

---

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* }  
route-reflector-client

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Configures a router as a BGP route reflector and configures the specified neighbor as its client. The **no** version indicates that the neighbor is not a client. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

- Options**
- *ipAddress*—IP address of BGP neighbor being identified as a client
  - *ipv6Address*—IPv6 address of BGP neighbor being identified as a client
  - *peerGroupName*—Name of BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command. You cannot override the characteristic for a specific member of the peer group.

**Mode** Address Family Configuration, Router Configuration

## neighbor send-community

---

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } send-community  
[ standard | extended | both ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Enables a BGP speaker to send a community attribute to the peer. The **no** version causes the speaker to send only standard communities to the peer. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command. You cannot override the characteristic for a specific member of the peer group.
  - standard—Sends only standard communities
  - extended—Sends only extended communities
  - both—Sends both standard and extended communities

**Mode** Address Family Configuration, Router Configuration

## neighbor send-label

---

**Syntax** [ no ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } send-label

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Configures a neighbor to distribute an MPLS label with its IPv4 and IPv6 route advertisements. This command enables BGP to dynamically negotiate SAFI 1 and SAFI 4 with this neighbor. In Router Configuration mode, the command has the same effect as if it were issued in the context of the IPv4 unicast address family. The **no** version removes the configuration.

**Options**

- *ipAddress*—IP address of BGP neighbor
- *ipv6Address*—IPv6 address of BGP neighbor
- *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command. You cannot override the characteristic for a specific member of the peer group.

**Mode** Address Family Configuration, Router Configuration

## neighbor shutdown

---

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } shutdown

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Shuts down the specified neighbor or peer group without removing the neighbor or peer group configuration. The **no** version reenables a neighbor or peer group that was previously shut down. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.

**Mode** Address Family Configuration, Router Configuration



## neighbor site-of-origin

**Syntax**    `neighbor { ipAddress | ipv6Address | peerGroupName } site-of-origin siteOfOrigin`  
               `no neighbor { ipAddress | ipv6Address | peerGroupName } site-of-origin`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                                   *ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    Specifies a site of origin that is added to the extended communities list in each route received from the specified peer, unless the extended communities list already includes a site of origin. When routes are advertised to the peer, routes whose extended communities list contain this site of origin are filtered out and not advertised to the peer. After you issue this command, the site of origin is applied to all routes that are received or advertised. The session is not bounced.

The **no** version removes the site of origin for the peer.



**NOTE:** To apply the new policy to routes that are already present in the BGP routing table, you must use the `clear ip bgp` command to perform a soft clear or hard clear of the current BGP session.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command. You cannot override the characteristic for a specific member of the peer group.
  - *siteOfOrigin*—Designator for the site of origin; in the format *AA:NN*, where any of the following is true:
    - *AA*—AS number in the range 0–65535 and *NN* is an integer in the range 0–4294967295; for example, 320:72358
    - *AA*—AS number in the range 0–4294967295 and *NN* is an integer in the range 0–65535; for example, 84511:45
    - *AA*—Dotted decimal IP address and *NN* is an integer in the range 0–65535; for example, 10.10.21.5:1256

**Mode**    Address Family Configuration, Router Configuration

## neighbor soft-reconfiguration inbound

---

**Syntax** [ no | default ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* }  
soft-reconfiguration inbound

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Initiates storage of unmodified copies of routes from the specified neighbor or all members of the specified peer group. The **no** version halts this storage. The **default** version removes the explicit configuration from the peer or peer group and reestablishes inheritance of the feature configuration.

**Options**

- *ipAddress*—IP address of BGP neighbor
- *ipv6Address*—IPv6 address of BGP neighbor
- *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.

**Mode** Address Family Configuration, Router Configuration

## neighbor timers

**Syntax** `neighbor { ipAddress | ipv6Address | peerGroupName } timers keepaliveTime holdTime`  
`no neighbor { ipAddress | ipv6Address | peerGroupName } timers [ keepaliveTime ]`  
`[ holdTime ]`

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Sets keepalive and hold-time timers for the specified neighbor or peer group. Overrides values set for the router with the **timers bgp** command. The **no** version restores the default values.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *keepaliveTime*—Interval in seconds between keepalive messages, in the range 0–65535 seconds; default value is 30 seconds; a value of zero prevents BGP from sending keepalive messages
  - *holdTime*—Period in seconds that BGP waits for keepalive messages before declaring the neighbor to be unavailable, in the range 0–65535 seconds; default value is 90 seconds; a value of zero informs BGP not to expect any keepalive messages

**Mode** Address Family Configuration, Router Configuration

## neighbor unsuppress-map

---

**Syntax**    `neighbor { ipAddress | ipv6Address | peerGroupName } unsuppress-map mapTag`  
`no neighbor { ipAddress | ipv6Address | peerGroupName } unsuppress-map [ mapTag ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    Restores the advertisement of routes suppressed by policy-based route flap dampening. The **no** version restores the default values.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command. You cannot override the characteristic for a specific member of the peer group.
  - *mapTag*—Name of the route map; a string of up to 32 alphanumeric characters

**Mode**    Address Family Configuration, Router Configuration

## neighbor update-source

**Syntax** `neighbor { ipAddress | ipv6Address | peerGroupName } update-source  
[ interfaceType interfaceSpecifier | updateSourceAddress | updateSourceev6Address ]`

`no neighbor { ipAddress | ipv6Address | peerGroupName } update-source  
[ interfaceType interfaceSpecifier | updateSourceAddress | updateSourceev6Address ]`

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable and *updateSourceev6Address* variable added in JunosE Release 8.0.0.

**Description** Allows a BGP session to use the IP address of a specific operational interface as the source address of TCP connections used by BGP. This command takes effect immediately and automatically bounces the BGP session. If you specify an interface in this command and later remove the interface, this command is also removed from the router configuration. The **no** version restores the interface assignment to the closest interface.



**NOTE:** Removing an interface that was specified in this command effectively removes this command from the router configuration as well.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *updateSourceAddress*—Source IP address
  - *updateSourceev6Address*—Source IPv6 address

**Mode** Address Family Configuration, Router Configuration

**Related Documentation**

- *Configuring BGP Signaling for L2VPNs in the JunosE BGP and MPLS Configuration Guide*

## neighbor weight

---

**Syntax**    neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } weight *value*  
no neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } weight [ *value* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description**    Assigns a weight to a neighbor connection. The **no** version removes a weight assignment. All routes learned from this neighbor will have the assigned weight initially. The route with the highest weight will be chosen as the preferred route when multiple routes are available to a particular network.

The weights assigned with the match as-path and **set weight route-map** commands override the weights assigned with the **neighbor weight** and **neighbor filter-list** commands.

- Options**
- *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - *value*—Number in the range 0–65535; the weight to assign

**Mode**    Address Family Configuration, Router Configuration

## net

**Syntax** [ no ] net *networkEntityTitle*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures an IS-IS network entity title for the specified routing process. The **no** version removes a specific NET. You must specify a NET. You can add multiple manual area IDs by adding multiple NETs with the same system ID. The last NET cannot be removed.

**Options**

- *networkEntityTitle*—NET that specifies the area ID and the system ID for an IS-IS routing process; can be either an address or a name; in the form of: *areaID.systemID.nSelector*. For example:

47.0010.0000.0000.0001.0001.1111.1111.1111.00

area ID	system ID	N selector

- *areaID*—All bytes in front of the system ID; the number of bytes can vary from 1–13 bytes
- *systemID*—Always 6 bytes and cannot vary
- *nSelector*—Last byte; always 0

**Mode** Router Configuration

## netbios-name-server

---

**Syntax**    netbios-name-server *ipAddressPrimary* [ *ipAddressSecondary* ]  
              no netbios-name-server

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns a NetBIOS server to subscribers of an address pool. The **no** version removes the association between the address pool and the NetBIOS server.

- Options**
- *ipAddressPrimary*—IP address of preferred NetBIOS server
  - *ipAddressSecondary*—IP address of secondary DNS server

**Mode**    DHCP Local Pool Configuration



## netbios-node-type

---

**Syntax**    netbios-node-type *nodeType*  
              no netbios-node-type

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies a NetBIOS node type. The **no** version restores the default situation, in which the node type is unspecified.

**Options**    • *nodeType*—One of the following types of NetBIOS servers:

- b-node—NetBIOS Broadcast node
- p-node—NetBIOS Peer-to-Peer node
- m-node—NetBIOS mixed node
- h-node—NetBIOS hybrid node

**Mode**    DHCP Local Pool Configuration

## network

**Syntax** For BGP:

```
[ no ] network { networkNumber [ [ mask ] networkMask ] | ipv6Prefix | rtfPrefix }
[ route-map mapTag ] [ weight weight ] [ backdoor ]
```

For DHCP local server:

```
network networkAddress { networkMask | prefix }
```

```
no network [ force ]
```

For RIP:

```
[ no ] network networkAddress [ networkMask ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
*rtMemNlri* variable added in JunosE Release 9.0.0.  
*rtMemNlri* variable replaced by *rtfPrefix* variable in JunosE Release 9.1.0.

**Description** For BGP, does one of the following:

- Configures a BGP speaker with an IPv6 or IPv4 prefix originating within its AS that it advertises to its peers if a non-BGP route to the prefix exists in the IP forwarding table. The **no** version removes the prefix.
- Originates a RT-MEM-NLRI route for the prefix that represents the route-target membership NLRI. This route is advertised to all peers that have negotiated the route-target address family. The advertisement is used by the speaker to exhibit interest in or request routes from a specific VPN that is not configured locally. The **no** version removes the prefix.

For DHCP local server, specifies IP addresses that the DHCP local server can provide from an address pool. The **no** version removes the network address and mask.

For RIP, enables RIP on a specific network (not on a range of networks). If you do not associate a network with RIP, the router cannot advertise the network in any RIP update. The **no** version disables RIP on a specific network. If you do not specify a network mask, the router applies the natural mask. Use the **ip rip** commands to configure RIP attributes on the network.

- Options**
- networkNumber*—Prefix that BGP will advertise
  - networkMask*—Subnet mask for the network
  - ipv6Prefix*—IPv6 prefix that BGP will advertise
  - rtfPrefix*—Prefix representing the route-target membership NLRI (RT-MEM-NLRI), in the format *asNumber:extendedCommunity/prefixLength* (for example, 320:320:524/36) where:

- *asNumber*—AS number for origin of route target information, in the range 1–4294967295
- *extendedCommunity*—Two-part number in the format *number1:number2* that identifies an extended community of VPNs, in the format *number1 : number2*, where:
  - *number1*—Autonomous system (AS) number, in the range 1–4294967295, or an IP address
  - *number2*—Unique integer, in the range 1–4294967295; 32 bits if *number1* is a 16-bit AS number; 16 bits if *number1* is an IP address or a 32-bit AS number
- *prefixLength*—Number that specifies the length of the route prefix, in the range 32–96
- *mapTag*—Name of the route map; a string of up to 32 alphanumeric characters; does not currently work with *rtMemNLri*
- *weight*—Number in the range 0–65535; default value is 32768; assigns an absolute weight to the network route that overrides a weight assigned by the **redistribute** command
- *backdoor*—Lowers the preference of an EBGp route to the specified prefix by setting the administrative distance to the value of an internal BGP route. Use this option to favor an IGP backdoor route over an EBGp route to a specific network. BGP does not advertise the prefix specified with this option.
- *networkAddress*—IP address of the network
- *prefix*—Network prefix
- *force*—Deletes address pool even if the pool is in use

**Mode** Address Family Configuration (BGP, RIP), DHCP Local Pool Configuration (for DHCP local server), Router Configuration (BGP, RIP)

## network area

---

**Syntax** [ no ] network *ipNet maskWildCard* area { *areald* | *arealdInt* }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Defines the interfaces on which OSPF runs and the area ID for those interfaces. The **no** version deletes OSPF interfaces, ranges, and areas.



.....  
**NOTE:** Before you issue this command, you must first configure one or more interfaces with an IP address that is within the range specified by *ipNet*.

Create address ranges that do not overlap; you can attach only the same range of interfaces to a single area.

.....

- Options**
- *ipNet*—Network number
  - *maskWildCard*—Wild-card mask for the network number
  - *areald*—OSPF area ID in IP address format
  - *arealdInt*—OSPF area ID as a decimal value, in the range 0–4294967295

**Mode** Router Configuration

**Related Documentation**

- *Configuring Routing in the Core Network for VPLS* in the *JunosE BGP and MPLS Configuration Guide*

## next-address

---

**Syntax**    `next-address ipAddress [ [ mask ] ipMask ] [ loose ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures an IPv4 hop at the end of the MPLS explicit path. There is no **no** version.

- Options**
- *ipAddress*—Address of the node
  - *ipMask*—[not currently used] Mask for the next adjacent address
  - *loose*—Indicates that the node is not necessarily directly connected (adjacent) to the previous node in the path. If *loose* is not configured, the configuration defaults to *strict*. *Strict* indicates that the node is directly connected to the previous node.

**Mode**    Explicit Path Configuration

## next-hop

---

**Syntax** [ no ] [ suspend ] next-hop *address* [ classifier-group *clacName* ]  
[ precedence *precValue* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Defines the IP address of the next hop for an IP policy list. The **no** version removes a next-hop rule from a policy list; the **suspend** keyword temporarily suspends the rule; the **no suspend** version resumes application of a suspended rule.



.....  
**NOTE:** The **next-hop** command has been replaced by the **forward next-hop** command and may be removed completely in a future release.

The SRP module Fast Ethernet port cannot be the destination of the **next-hop** command.

- .....
- Options**
- *address*—IP address for the next hop
  - *clacName*—In Policy List Configuration, specifies the classifier control list used to classify packets for this next-hop policy. If you do not specify a classifier group, the router selects all packets from the interface associated with this policy list for this rule.
  - *precValue*—In Policy List Configuration, specifies the precedence of this rule in relation to other rules within this set

**Mode** Classifier Group Configuration, Policy List Configuration

**Related Documentation**

- Policy Rule Precedence

## next-interface

**Syntax** [ no ] [ suspend ] next-interface *interfaceType interfaceSpecifier*  
[ next-hop *nextHop* ] [ classifier-group *clacName* ] [ precedence *precValue* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Defines an output interface for an IP policy list. When the *interfaceType* is a broadcast medium, specify a next hop using the **next-hop** command. The **no** version removes a next interface rule from a policy list; the **suspend** keyword temporarily suspends the rule; the **no suspend** version resumes application of a suspended rule. For IP interfaces, this command is supported only on input policies.



**NOTE:** The **next-interface** command has been replaced by the **forward interface** command and may be removed completely in a future release.

The SRP module Fast Ethernet port cannot be the destination of the **next-interface** command.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *nextHop*—Next-hop IP address
  - *clacName*—In Policy List Configuration, specifies the classifier control list used to classify packets for this next-hop policy. If you do not specify a classifier group, the router selects all packets from the interface associated with this policy list for this rule.
  - *precValue*—In Policy List Configuration, specifies the precedence of this rule in relation to other rules within this set

**Mode** Classifier Group Configuration, Policy List Configuration

**Related Documentation**

- Policy Rule Precedence

## next-parent

---

**Syntax**    `next-parent parentGroupName`

`no next-parent`

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Links the current parent group to the next parent group in a hierarchy. Only external parent groups can be configured as next parent. The **no** version deletes the next parent group.

**Options**    • *parentGroupName*—Name of the next parent group

**Mode**    Parent Group Configuration

**Related Documentation**    • Creating a Classifier Group for a Policy List



## no area

---

**Syntax**    no area { *areald* | *arealdInt* }

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Removes the specified OSPF area if there are no OSPF interfaces configured in the area. This command has only a **no** version.

**Options**

- *areald*—OSPF area ID in IP address format
- *arealdInt*—OSPF area ID as a decimal value in the range 0–4294967295

**Mode**    Router Configuration

## no boot hotfix all-releases

---

**Syntax**    no boot hotfix *hfixFilename* all-releases

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Disarms all armed hotfixes for all releases. This command has only a **no** version.



---

**NOTE:** See also the boot hotfix command.

---

**Options**    • *hfixFileName*—Name of a hotfix software file (.hfx) on the local file system

**Mode**    Boot

## no bulkstats

---

**Syntax** no bulkstats

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Removes all bulkstats configurations from the router at one time. This command has only a **no** version.

**Mode** Router Configuration

## no ip interface

---

**Syntax**    no ip interface

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Removes the IP configuration from the interface or subinterface and disables IP processing on the interface. This command has only a **no** version.

**Mode**    Interface Configuration, Subinterface Configuration

## no log filters

---

**Syntax** no log filters

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Turns off all log filters. To turn off a specific filter, use the **no** version of the **log severity** command that you used to add the filter. This command has only a **no** version.

**Mode** Global Configuration

## no radius client

---

**Syntax**    no radius client

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Unconfigures all RADIUS servers for the virtual router context and deletes the RADIUS client for the virtual router context. This command has only a **no** version.

**Mode**    Global Configuration

## no rtr

---

**Syntax**    no rtr

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Removes all RTR configuration information from the router. This command has only a **no** version.

**Mode**    Global Configuration

## **no rtr reaction-configuration**

---

**Syntax**    no rtr reaction-configuration *rtrIndex*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Clears all traps for all the **rtr reaction-configuration** command options. This command has only a **no** version.

**Options**    • *rtrIndex*—Number of the operation to be configured, in the range 1–4294967295

**Mode**    Global Configuration



## **no service-management subscriber-session force**

---

**Syntax** no service-management subscriber-session *subscriberSessionId* force

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Immediately terminates the specified subscriber session and deletes all service sessions associated with the subscriber session. This command has only a **no** version.

**Options** • *subscriberSessionId*—ID of the subscriber session

**Mode** Global Configuration

## node

---

<b>Syntax</b>	[ no ] { <i>typeOfInterface</i>   set   superset } node [ group <i>trafficClassGroup</i>   scheduler-profile <i>schedulerProfileName</i> ]*
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>svlan</b> keyword added in JunosE Release 7.1.0. <b>set</b> and <b>superset</b> keywords added in JunosE Release 9.2.0.
<b>Description</b>	Specifies that a scheduler node be configured for each interface of the given interface type. The <b>no</b> version removes this rule from the QoS profile.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>typeOfInterface</i>—Interface types for scheduler nodes to be configured: atm, atm-vc, atm-vp, bridge, ethernet, fr-vc, ip, ip-tunnel, ipv6, l2tp-session, l2tp-tunnel, lsp, serial, server-port, svlan, vlan</li><li>• set—Configures the node for an interface set</li><li>• superset—Configures the node for an interface superset</li><li>• <i>trafficClassGroup</i>—Name of the traffic class group</li><li>• <i>schedulerProfileName</i>—Name of the scheduler profile</li><li>• *—Indicates that one or more parameters can be repeated multiple times in a list in the command line</li></ul>
<b>Mode</b>	QoS Profile Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Configuring a QoS Profile</li><li>• Configuring Shadow Nodes</li><li>• Configuring a Basic Parameter Definition for QoS Administrators</li><li>• Attaching a QoS Profile to an Interface Superset or an Interface Set</li></ul>

## notification id

---

**Syntax** notification id { mteEventSetFailure | mteTriggerFailure | mteTriggerFalling | mteTriggerRising }

no notification [ id ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies a trap notification for an event. The **no** version removes the notification.

- Options**
- id—MIB object for notification use
  - mteEventSetFailure—Trap to indicate an event set failure
  - mteTriggerFailure—Global trap to indicate the failure of a trigger
  - mteTriggerFalling—Trap to indicate a falling trigger event
  - mteTriggerRising—Trap to indicate a rising trigger event

**Mode** SNMP Event Configuration

## nsf ietf

---

**Syntax** [ no ] nsf ietf

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables the IS-IS graceful restart mechanism on the router as defined in RFC 3847—Restart Signaling for Intermediate System to Intermediate System (IS-IS) (July 2004). Graceful restart, which is also known as nonstop forwarding (NSF), allows an IS-IS router to restart with minimal routing disruption to the network. The **no** version restores the default state (disabled) for IS-IS graceful restart on the router.

**Mode** Router Configuration

## nsf interface wait

---

**Syntax** [ no ] nsf interface wait [ *seconds* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the maximum amount of time, in seconds, that an IS-IS process on a restarting router waits for all interfaces with IS-IS adjacencies to come up before completing the restart process. The **no** version restores the default maximum wait time, 10 seconds.

**Options**

- *seconds*—Maximum wait time, in the range 5–120 seconds, before the IS-IS restart process is completed; default value is 10 seconds

**Mode** Router Configuration

## nsf t1

---

**Syntax** [ no ] nsf t1 { interval [ *seconds* ] | retry-times [ *number* ] }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies either the interval, in seconds, between IS-IS restart requests sent by a restarting router on a particular interface to neighboring IS-IS routers in the network, or the number of times the restarting router resends unacknowledged restart requests on this interface at the specified interval. The **no** version restores the default time interval, 5 seconds, or the default number of retry attempts, 1.

- Options**
- *seconds*—Time interval in the range 5–120 seconds between transmission of IS-IS restart requests; default value is 5 seconds
  - *number*—Number of times in the range 1–3 that the router tries to resend unacknowledged restart requests; default value is 1

**Mode** Router Configuration

## nsf t2

---

**Syntax** [ no ] nsf t2 { level-1 | level-2 } [ *seconds* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the maximum amount of time, in seconds, that an IS-IS restarting router waits for the LSP database to synchronize. You must configure separate instances of the T2 timer for each IS-IS level at which the router operates. The **no** version restores the default T2 wait time, 30 seconds.

- Options**
- **level-1**—Sets the T2 wait time independently for level 1 routing
  - **level-2**—Sets the T2 wait time independently for level 2 routing
  - **seconds**—Maximum wait time, in the range 5–120 seconds, for LSP database synchronization; default value is 30 seconds

**Mode** Router Configuration

## nsf t3

---

**Syntax** [ no ] nsf t3 { manual [ *seconds* ] | adjacency }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the maximum amount of time, in seconds, that the restarting router waits before setting the overload bit to indicate that the LSP database has not been synchronized and the IS-IS graceful restart operation has failed. The **no** version restores the default T3 wait time, 30 seconds.

**Options**

- **manual**—Sets the T3 wait time manually to the specified number of seconds
- **seconds**—Maximum wait time, in the range 5–120 seconds, before the restarting router sets the overload bit; default value is 30 seconds
- **adjacency**—Specifies that the restarting router should obtain its T3 wait time from neighboring IS-IS routers that have active adjacencies to this router. This option sets the wait time to the minimum of the remaining times specified in the restart TLVs contained in the hello packets that the router receives from its neighbors.

**Mode** Router Configuration



## ntp access-group

**Syntax** ntp access-group { peer | serve-only | serve | query-only } *accessListName*  
 no ntp access-group { peer | serve-only | serve | query-only }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the type of broadcasts that the router will accept and respond to, and specifies the servers from which the router will accept broadcasts. The **no** version enables the router to receive all NTP broadcasts on interfaces configured to receive broadcasts.



**NOTE:** The router can accept, but does not use, NTP control queries.

- Options**
- **peer**—Enables the router to receive time requests, receive NTP control queries, and synchronize itself to the servers specified on the access list
  - **serve-only**—Enables the router to receive time requests and NTP control queries from servers specified on the access list, but not to synchronize itself to the specified servers
  - **serve**—Enables the router only to receive time requests from the servers specified on the access list
  - **query-only**—Enables the router only to receive NTP control queries from the servers specified on the access list
  - ***accessListName***—Name of the access list

**Mode** Global Configuration

## ntp broadcast

---

**Syntax** [ no ] ntp broadcast [ version *number* ] [ *pollInterval* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables NTP broadcast server on a server interface to transmit NTP broadcast packets periodically. You can enable up to 100 NTP broadcast server interfaces. The **no** version prevents the interface from sending NTP broadcast packets.

- Options**
- *number*—Integer in the range 1–4; indicates the version of the NTP software on the NTP broadcast server; default value is 3
  - *pollInterval*—Integer in the range 4–17; specifies the poll interval in seconds (as a power of 2) for broadcasting NTP messages; default value is 6 (64 seconds)

**Mode** Interface Configuration

## ntp broadcast-client

---

**Syntax** [ no ] ntp broadcast-client

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables an interface to receive NTP broadcasts. The **no** version prevents an interface from receiving NTP broadcasts.

**Mode** Interface Configuration

## ntp broadcast-delay

---

**Syntax**    ntp broadcast-delay *delayTime*  
              no ntp broadcast-delay

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the estimated round-trip delay between the broadcast NTP server and the router. The **no** version restores the round-trip delay to the default value, 3000 microseconds.

**Options**    • *delayTime*—Value in the range 0–9999999 microseconds

**Mode**    Global Configuration

## ntp disable

---

**Syntax** [ no ] ntp disable

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Disables NTP on an interface. The **no** version enables NTP on an interface. The default setting is enable.

**Mode** Interface Configuration

## ntp enable

---

**Syntax** [ no ] ntp enable

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables NTP services on the router and attaches the NTP client to the current virtual router. The **no** version disables reception of NTP packets on the router and removes the association between NTP and the virtual router. The default setting is disable.

**Mode** Global Configuration

---

## ntp master

---

**Syntax** [ no ] ntp master [ *stratumNumber* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the stratum number of a virtual router you configured as an NTP server. By default, if the router is configured as an NTP server, the stratum number is set to the stratum number of the master plus one. The **no** version restores the default stratum number.



.....  
**NOTE:** Although you can specify a stratum number of 1, the router does not support stratum 1 service. The router can synchronize only with an NTP server, and not directly with an atomic clock or a radio clock.  
.....

**Options**

- *stratumNumber*—Number, in the range 1–15, that indicates how many hops the NTP server is from an accurate time source, such as a radio clock or atomic clock. Stratum *n* servers are *n* hops from an accurate time source; default value is 8

**Mode** Global Configuration

## ntp server

---

**Syntax**    ntp server *ipAddress* [ version *number* ] [ prefer ]  
              [ source *interfaceType interfaceSpecifier* ]  
  
              no ntp server *ipAddress*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies an NTP server for time synchronization. The **source** option for this command overrides the **ntp source** command. The **no** version terminates NTP communications between this server and the interface.

- Options**
- *ipAddress*—IP address of the NTP server
  - *number*—Value from 1 to 4; indicates the version of the NTP software on the server
  - *prefer*—Indicates that this server is the first choice for time synchronization
  - *source*—Directs responses from the NTP server to a specific interface on the router; overrides the **ntp source** command
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)

**Mode**    Global Configuration



## ntp server enable

---

**Syntax** [ no ] ntp server enable

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables a virtual router to act as an NTP server. The **no** version prevents a virtual router from acting as an NTP server.

**Mode** Global Configuration

## ntp source

---

**Syntax**    `ntp source interfaceType interfaceSpecifier`  
`no ntp source`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Directs responses from all NTP servers to a specific interface. Using the **source** option with the **ntp server** command overrides the **ntp source** command. The **no** version restores the default situation in which servers reply to the interface from which the NTP request was sent.

**Options**

- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)

**Mode**    Global Configuration

## CHAPTER 3

# O Commands

## oam ais-rdi

---

**Syntax**    oam ais-rdi [ *alarmDownCount* [ *alarmClearTimeout* ] ]

no oam ais-rdi

**Release Information**    Command introduced in JunosE Release 7.1.0.  
ATM VC Class Configuration mode added in JunosE Release 7.3.0.

**Description**    In ATM VC Configuration mode, configures surveillance parameters for alarm indication signal (AIS) and remote defect indication (RDI) F5 OAM fault management cells on an ATM PVC. The **oam ais-rdi** command is valid only for data PVCs; you cannot use this command for control (ILMI or signaling) PVCs. The **no** version restores the default behavior, which disables F5 OAM alarm surveillance and restores the default values for alarm down count and alarm clear timeout duration.

In ATM VC Class Configuration mode, configures alarm surveillance parameters for AIS and RDI F5 OAM cells as part of a VC class definition that you assign to an ATM data PVC. The **no** version restores the default behavior, which disables F5 OAM alarm surveillance and restores the default values for alarm down count and alarm clear timeout duration, in the VC class.



**NOTE:** To configure the alarm down count and alarm clear timeout F5 OAM surveillance parameters, you must use the **oam ais-rdi** command. There is no equivalent **atm pvc** command to configure these parameters.

- Options**
- *alarmDownCount*—Number of successive alarm cells, in the range 1–60, for the router to receive before reporting that a PVC is down; default value is 1
  - *alarmClearTimeout*—Number of seconds, in the range 3–60, for the router to wait before reporting that a PVC is up after the PVC has stopped receiving alarm cells; default value is 3

**Mode**    ATM VC Configuration, ATM VC Class Configuration

---

## oam cc

---

**Syntax**    oam cc [ segment | end-to-end ] { source | sink | both }  
              no oam cc

**Release Information**    Command introduced in JunosE Release 7.1.0.  
                              ATM VC Class Configuration mode added in JunosE Release 7.3.0.

**Description**    In ATM VC Configuration mode, enables F5 OAM continuity check (CC) verification on an ATM PVC. The **oam cc** command is valid only for data PVCs; you cannot use this command for control (ILMI or signaling) PVCs. The **no** version restores the default behavior, which disables F5 OAM CC verification and restores the default setting for cell termination, **end-to-end**.

In ATM VC Class Configuration mode, enables F5 OAM CC verification as part of a VC class definition that you assign to an ATM data PVC. The **no** version restores the default setting for cell termination, **end-to-end**, in the VC class.

- Options**
- segment—Opens an F5 OAM CC segment cell flow
  - end-to-end—Opens an F5 OAM CC end-to-end cell flow
  - source—Enables this VC as the source point (cell generator)
  - sink—Enables this VC as a sink point (cell receiver)
  - both—Enables this VC as both a sink point and a source point

**Mode**    ATM VC Configuration, ATM VC Class Configuration

## oam-pvc

---

**Syntax**    oam-pvc [ *manage* ] [ *loopbackFrequency* ]  
              no oam-pvc [ *manage* ]

**Release Information**    Command introduced in JunosE Release 7.1.0.  
                              ATM VC Class Configuration mode added in JunosE Release 7.3.0.

**Description**    In ATM VC Configuration mode, enables generation of F5 OAM loopback cells on an ATM PVC and, optionally, enables F5 OAM VC integrity features that affect the operational state of the circuit. The **oam-pvc** command is valid only for data PVCs configured with **aal5snap**, **aal5autoconfig**, or **aal5mux ip** encapsulation; you cannot use this command for data PVCs with other encapsulation types or for control (ILMI or signaling) PVCs. The **no** version restores the default behavior, which disables F5 OAM VC integrity and restores the default value for loopback frequency.

In ATM VC Class Configuration mode, enables generation of F5 OAM loopback cells and, optionally, enables F5 OAM VC integrity features as part of a VC class definition that you assign to an ATM data PVC. The **no** version restores the default behavior, which disables F5 OAM VC integrity and restores the default loopback frequency, in the VC class.

**Options**    • *manage*—Enables F5 OAM VC integrity on the ATM PVC  
              • *loopbackFrequency*—Number of seconds, in the range 1–600, for the router to wait between the transmission of loopback cells during normal operation; default value is 10

**Mode**    ATM VC Configuration, ATM VC Class Configuration

## oam retry

**Syntax** `oam retry [ upRetryCount [ downRetryCount retryFrequency ] ]`

`no oam retry`

**Release Information** Command introduced in JunosE Release 7.1.0.  
ATM VC Class Configuration mode added in JunosE Release 7.3.0.

**Description** In ATM VC Configuration mode, configures parameters for F5 OAM VC integrity on an ATM PVC. The **oam retry** command is valid only for data PVCs; you cannot use this command for control (ILMI or signaling) PVCs. The **no** version restores the default values for all of these parameters.

In ATM VC Class Configuration mode, configures F5 OAM VC integrity parameters as part of a VC class definition that you assign to an ATM PVC. The **no** version restores the default values for all of these parameters in the VC class.



**NOTE:** To configure the up retry count, down retry count, and retry frequency F5 OAM VC integrity parameters, you must use the **oam retry** command. There is no equivalent **atm pvc** command to configure these parameters.

- Options**
- *upRetryCount*—Number of successive loopback cell responses, in the range 1–60, for the router to receive before reporting that a PVC is up; default value is 3
  - *downRetryCount*—Number of successive loopback cell responses, in the range 1–60, for the router to miss before reporting that a PVC is down; default value is 5
  - *retryFrequency*—Number of seconds, in the range 1–600, for the router to wait between the transmission of loopback cells when it is verifying the state of the PVC; default value is 1

**Mode** ATM VC Configuration, ATM VC Class Configuration

## operational-virtual-router

---

**Syntax**    `operational-virtual-router vrName`  
              `no operational-virtual-router`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the virtual router parameter for a user entry in the local user database. The subscriber is assigned to the operational virtual router only if the default virtual router performs the authentication. The **no** version deletes the operational virtual router parameter from the user entry in the local user database.

**Options**    • *vrName*—Name of virtual router

**Mode**    Local User Configuration



## operations-per-hop

---

**Syntax**    `operations-per-hop operationsHopValue`  
              `no operations-per-hop`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the number of operations sent to a designated hop before the TTL value is increased. This option applies only to the `pathEcho` type. The **no** version restores the default value, 3.

**Options**    • *operationsHopValue*—Number of operations per hop; default value is 3

**Mode**    RTR Configuration

## organization

---

**Syntax** [ no ] organization *organizationName*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the organization used in the Subject Name field of certificates. The **no** version removes the organization name.

**Options** • *organizationName*—Name used in certificate requests; up to 60 characters

**Mode** IPSec Identity Configuration

## ospf auto-cost reference-bandwidth

---

**Syntax** [ no ] ospf auto-cost reference-bandwidth *refBw*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Controls how OSPF calculates default metrics for the interface. The **no** version assigns cost based only on the interface type.

**Options**

- *refBw*—Bandwidth in megabits per second, in the range 1–4294967; default value is 100

**Mode** Router Configuration

## ospf bandwidth

---

**Syntax** [ no ] ospf bandwidth

**Release Information** Command introduced in JunosE Release 10.3.0.

**Description** Directs the router to use the bandwidth configured on an OSPF interface for OSPF interface cost calculation. If you configure the bandwidth and then issue the **no ospf bandwidth** command, the router ignores the cost that is calculated using the configured bandwidth. The **no** version disables the use of the bandwidth for OSPF interface cost calculation.

**Mode** Router Configuration

## ospf enable

---

**Syntax** ospf enable

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables OSPF on the router. There is no **no** version.



.....  
**NOTE:** The **no ospf enable** command has been replaced by the **ospf shutdown** command and may be removed completely in a future release.  
.....

**Mode** Router Configuration

## ospf log-adjacency-changes

---

**Syntax** [ no ] ospf log-adjacency-changes  
[ severity { *severityValue* | *severityNumber* } ] [ verbosity *verbosityLevel* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the router to send a system log message when the state of an OSPFv2 neighbor changes. For OSPFv3 neighbors, use the log-adjacency-changes command. The **no** version turns off this feature.

- Options**
- **severity**—Minimum severity of the log messages displayed for the selected category; described either by a descriptive term—*severityValue*—or by a corresponding number—*severityNumber*—in the range 0–7; the lower the number, the higher the priority:
    - *emergency or 0*—System unusable
    - *alert or 1*—Immediate action needed
    - *critical or 2*—Critical condition exists
    - *error or 3*—Error condition
    - *warning or 4*—Warning condition
    - *notice or 5*—Normal but significant condition
    - *info or 6*—Informational message
    - *debug or 7*—Debug message
  - **verbosityLevel**—Specifies the verbosity of the log category's messages; can be any of the following:
    - *low*—Terse
    - *medium*—Moderate detail
    - *high*—Verbose

**Mode** Router Configuration

---

## ospf shutdown

---

**Syntax** [ no ] ospf shutdown

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Administratively disables OSPF on the router. The **no** version reenables OSPF on the router.



.....

**NOTE:** This command is replacing the **no ospf enable** command to disable OSPF on the router. The **no ospf enable** command may be removed completely in a future release.

.....

**Mode** Router Configuration

## overload advertise-high-metric issu

---

**Syntax** [ no ] overload advertise-high-metric issu

**Release Information** Command introduced in JunosE Release 9.0.0.

**Description** Configures IS-IS or OSPF to advertise the maximum link cost on each interface to its neighbors when a unified in-service software upgrade is started, causing neighbors to route around the upgrading router. The **no** version restores the default behavior, which is to advertise configured link costs.

**Mode** Router Configuration



## overload shutdown

---

**Syntax** [ no ] overload shutdown

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Causes BGP to shut down when it runs out of resources. The **no** version restores the default behavior, which is to continue running.

**Mode** Router Configuration

## override c2 byte

---

**Syntax** [ no ] override c2 byte

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Overrides the default value of the Path Signal Label (C2) byte for SONET and SDH interfaces. The **no** version restores the default setting.

**Mode** Controller Configuration

## override-user

---

**Syntax**    `override-user [ name newName ] password newPassword`  
              `no override-user`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies a single username and single password for all users from a domain. The **no** version removes the username and reverts to the original username.

**Options**

- *newName*—Identifier that replaces the username
- *newPassword*—Password that replaces the user's password

**Mode**    Domain Map Configuration

## owner

---

**Syntax**    `owner ownerValue`

`no owner`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the owner of the RTR operation. The **no** version restores the default value.

**Options**    • *ownerValue*—Specifies the owner's identifier: 0–255 ASCII characters; by default, no owner is configured

**Mode**    RTR Configuration

## CHAPTER 4

# P Commands

## padn

---

**Syntax**    *padn ipAddress ipMask distance*  
              *no padn ipAddress ipMask*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures PADN parameters for a domain name. The **no** version deletes the PADN parameters from the domain name.

- Options**
- *ipAddress*—Destination IP address
  - *ipMask*—IP mask for the destination
  - *distance*—Administrative distance metric for this route in the range 0–255

**Mode**    Domain Map Configuration

## parent-group

<b>Syntax</b>	<p>In Global Configuration mode:</p> <pre>[ no ] parent-group <i>parentGroupName</i></pre> <p>In Policy List Configuration mode:</p> <pre>parent-group <i>parentGroupName</i> [ [ parent-group <i>intParentGroupName</i> ]   [ external parent-group <i>extParentGroupName</i> parameter <i>parameterName</i> ] ]</pre> <pre>no parent-group <i>parentGroupName</i></pre>
<b>Release Information</b>	<p>Command introduced in JunosE Release 7.2.0.</p> <p>Global Configuration mode added in JunosE Release 8.0.0.</p> <p><b>external</b>, <b>parent-group</b>, and <b>parameter</b> keywords and <i>extParentGroupName</i> and <i>parameterName</i> variables added in JunosE Release 8.0.0.</p>
<b>Description</b>	<p>In Global Configuration mode, creates an external parent group and accesses Parent Group Configuration mode. The <b>no</b> version removes the external parent group.</p> <p>In Policy List Configuration mode, creates an internal parent group in the policy list and accesses Policy List Parent Group Configuration mode. The <b>no</b> version removes the parent group from the policy list.</p>
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>parentGroupName</i>—Name of the parent group</li> <li>• <i>intParentGroupName</i>—Name of the next internal parent group to connect to in the hierarchy</li> <li>• <i>extParentGroupName</i>—Name of the next external parent group to connect to in the hierarchy</li> <li>• <i>parameterName</i>—Name of the parameter</li> </ul>
<b>Mode</b>	Global Configuration, Policy List Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• Creating a Classifier Group for a Policy List</li> </ul>

## passive-interface

**Syntax** IS-IS:

```
passive-interface interfaceType interfaceSpecifier [ tag tagValue ]
[ metric metricValue [ level-1 | level-2 ] ]
```

```
no passive-interface interfaceType interfaceSpecifier [ tag ] [ metric [ level-1 |
level-2 ] ]
```

OSPF and RIP:

```
[ no ] passive-interface interfaceType interfaceSpecifier
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**metric** keyword and *metricValue* variable for IS-IS added in JunosE Release 9.0.0.

**Description** Modifies the transmission of routing updates for IS-IS, OSPF, and RIP.

For IS-IS, configures an IS-IS interface only to advertise its IP address in the link-state PDUs; the interface does not send or receive IS-IS packets. Issue the complementary **interface** command to enable the interface to send and receive IS-IS packets. Optionally, you can set a route tag value for the IP addresses on an IS-IS passive interface before the route is propagated to other routers in an IS-IS domain. You can set a metric value for the passive interface; the default value is 0. The **no** version disables advertisement of the IP address, or unconfigures the tag, the metric, or both.

For OSPF, halts the transmission of routing updates on an OSPF interface. OSPF neither sends nor receives routing information through the specified interface, which appears as a stub network in the OSPF network. The **no** version reenables the transmission of routing updates.

For RIP, halts the transmission of multicast RIP messages. RIP messages are unicast to the interface (if it is the best path to a configured neighbor). The **no** version reenables the transmission of multicast messages on the interface.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *tagValue*—Number, in the range 1–4294967295, that identifies the route tag assigned to the IS-IS passive interface
  - *metricValue*—Metric used when advertising the passive interface; in the range 1–16777215; default value is 0

**Mode** Address Family Configuration (RIP), Router Configuration (IS-IS, OSPF, RIP)



## password

**Syntax** Login password:

`password [ encryptionType ] passwordValue`

`no password`

L2TP tunnel password:

`password tunnelPassword`

`no password`

IP service profile password:

`password servicePassword`

`no password`

Local user database password:

`password [ encryptionType ] passwordValue`

`no password`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures a password to be used at login on the console, a line or a range of lines. For L2TP, specifies the password for an AAA domain map or tunnel group tunnel. For IP service profiles, specifies the password for the profile. For the local authentication server feature, adds a password to a user entry in the local user database. The **no** version removes the password.



**NOTE:** To use an encrypted password, you must follow the procedure in *Creating Encrypted Passwords* in the *JunosE System Basics Configuration Guide* to obtain the encrypted password. You cannot create your own encrypted password; you must use a router-generated password or secret.

- Options**
- *encryptionType*—One of the following types:
    - 0—Unencrypted (the default)
    - 5—Secret
    - 7—Encrypted
  - *passwordValue*—Character string that specifies the line password. The first character cannot be a number. The string can contain any alphanumeric characters, including spaces, up to 50 characters. The password checking is case sensitive.

- *tunnelPassword*—Password of up to 32 characters
- *servicePassword*—Password of up to 32 characters
- *encryptionType*—One of the following types:
  - 0—Unencrypted password (the default)
  - 8—Two-way encrypted password
- *passwordValue*—Character string that specifies the password. The string can contain any alphanumeric character, including spaces, up to 64 characters. Passwords are case sensitive.

**Mode** Domain Map Tunnel Configuration (for a tunnel password), IP Service Profile Configuration (for a service profile password), Line Configuration (for a login password), Local User Configuration (for a local user database password), Tunnel Group Tunnel Configuration (for a tunnel group tunnel password)

## path

**Syntax** `path pathChannel [ pathSpeed [ pathHierarchy ] ]`  
`no path pathChannel`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures paths over channelized SONET and SDH interfaces. The **no** version deletes a path.



**NOTE:** Although the path speed appears to be optional in the software, you must specify a value.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the STS-1 or STM-0 line
  - *pathSpeed*—Speed of the path
    - oc1, oc3, or oc12 for SONET—Only oc1 is available for cOC3/STM1 interfaces
    - stm0, stm1, or stm4 for SDH—Only stm0 or stm1 is available for cOC3/STM1 interfaces
  - *pathHierarchy*—Identifier that defines the structure of the path
    - If you specify a path speed that matches the speed of the module (for example, a path speed of stm1 for a cOC3/STM1 interface), do not specify an identifier.
    - If you specify a speed of oc1 or stm0 for a cOC3/STM1 interface, the identifier is a number, in the range 1–3, that represents either the STS-1 within the STS-3 or the STM-0 within the STM-1.
    - If you specify a speed of stm1 for a cOC12/STM4 interface, the identifier is a number, in the range 1–4, that represents the STM-1 within the STM-4.
    - If you specify a speed of oc1 or stm0 for a cOC12/STM4 interface, the identifier is of the form X/Y. X is a number, in the range 1–4, that represents either the STS-3 within the STS-12 or the STM-1 within the STM-4; Y is a number, in the range 1–3, that represents either the STS-1 within the STS-3 or the STM-0 within the STM-1.

**Mode** Controller Configuration

## path description

---

**Syntax** For unchannelized SONET/SDH interfaces:

[ no ] path description *name*

For channelized SONET/SDH interfaces:

[ no ] path *pathChannel* description *name*

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Assigns a text description or an alias to a path on a channelized or unchannelized SONET/SDH interface. The **no** version removes the description or alias.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *name*—Text string or alias of up to 80 characters

**Mode** Controller Configuration

## path ds1|e1

---

**Syntax** `path pathChannel { ds1 | e1 } tributaryIdentifier [ tributaryType ]`  
`[ no ] path pathChannel { ds1 | e1 } tributaryIdentifier [ tributaryType ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates and configures SONET and SDH tributaries. The **no** version deletes a tributary.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format `pathChannel { ds1 | e1 } pathPayload/tributaryGroup/tributaryNumber`
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - *tributaryType*—Virtual tributary type
    - vt15—Default for SONET DS1 tributaries
    - tu11—Default for SDH DS1 tributaries
    - tu12—Default for SDH E1 tributaries

**Mode** Controller Configuration

## path ds1|e1 bert

---

**Syntax**    `path pathChannel { ds1 | e1 } tributaryIdentifier bert`  
              `pattern pattern interval time [ unframed ]`  
  
              `no path pathChannel { ds1 | e1 } tributaryIdentifier bert`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables bit error rate tests using the specified pattern at the DS1/E1 over SONET/SDH VT layer on channelized SONET and SDH interfaces. The **no** version stops the test that is running.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format `pathChannel { ds1 | e1 } pathPayload/tributaryGroup/tributaryNumber`
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - *pattern*—One of the following test patterns:
    - 2<sup>11</sup>—Pseudorandom test pattern, 2,047 bits long
    - 2<sup>15</sup>—Pseudorandom test pattern, 32,767 bits long
    - 2<sup>20</sup>-O153—Pseudorandom test pattern, 1,048,575 bits long
  - *time*—Duration of the test, in the range 1–1440 minutes
  - *unframed*—Test bit pattern occupies all bits on the link, overwriting the framing bits. If you do not specify this keyword, the test bit pattern occupies only T1/E1 payload bits.

**Mode**    Controller Configuration

## path ds1|e1 channel-group description

**Syntax** path *pathChannel* { ds1 | e1 } *tributaryIdentifier*  
channel-group *channelGroupNumber* description *name*

no path *pathChannel* { ds1 | e1 } *tributaryIdentifier*  
channel-group *channelGroupNumber* description

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Assigns a text description or an alias to a DS1 (T1) or an E1 channel group for channelized SONET and SDH interfaces. Use the [show controllers sonet](#) command to display the text description. The **no** version removes the description or alias.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format *pathChannel* { ds1 | e1 } *pathPayload/tributaryGroup/tributaryNumber*
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - *channelGroupNumber*—Either a fractional T1 interface in the range 1–24 or a fractional E1 interface in the range 1–31
  - *name*—Text string or alias of up to 80 characters for the DS1 or E1 channel group for channelized SONET and SDH interfaces

**Mode** Controller Configuration

## path ds1|e1 channel-group shutdown

---

**Syntax** [ no ] path *pathChannel* { ds1 | e1 } *tributaryIdentifier*  
channel-group *channelGroupNumber* shutdown

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Disables a DS1 or an E1 channel group on channelized SONET and SDH interfaces. DS1 and E1 channel groups are enabled by default. The **no** version restarts a disabled interface.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format *pathChannel* { ds1 | e1 } *pathPayload*/*tributaryGroup*/*tributaryNumber*
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - *channelGroupNumber*—Either a fractional T1 interface in the range 1–24 or a fractional E1 interface in the range 1–31

**Mode** Controller Configuration



## path ds1|e1 channel-group snmp trap link-status

**Syntax** [ no ] path *pathChannel* { ds1 | e1 } *tributaryIdentifier*  
channel-group *channelGroupNumber* snmp trap link-status

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables SNMP link status processing on a DS1 or an E1 channel group of channelized SONET and SDH interfaces. The **no** version disables SNMP link status processing on a DS1 or an E1 channel group.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format *pathChannel* { ds1 | e1 } *pathPayload*/*tributaryGroup*/*tributaryNumber*
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - *channelGroupNumber*—Either a fractional T1 interface in the range 1–24 or a fractional E1 interface in the range 1–31

**Mode** Controller Configuration

## path ds1|e1 channel-group timeslots

---

**Syntax**    *path pathChannel { ds1 | e1 } tributaryIdentifier*  
              *channel-group channelGroupNumber timeslots range [ speed { 56 | 64 } ]*  
  
              *no pathChannel { ds1 | e1 } tributaryIdentifier channel-group channelGroupNumber*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures DS1 or E1 line parameters on channelized SONET and SDH interfaces. To configure a line, you specify a DS1 or an E1 channel group number and assign a range of timeslots. To configure a whole DS1 or E1 line, assign all the timeslots to the channel group. You can specify a line speed that applies to all DS0 timeslots assigned to a channel group. The **no** version removes the timeslots from the channel group.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format *pathChannel { ds1 | e1 } pathPayload/tributaryGroup/tributaryNumber*
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - *channelGroupNumber*—Either a fractional T1 interface in the range 1–24 or a fractional E1 interface in the range 1–31
  - *range*—Timeslot assigned to the T1 or E1 channel in the range 1–31. A dash represents a range of timeslots, and a comma separates timeslots. For example, 1-10, 15-18 assigns timeslots 1–10 and 15 –18.
  - *speed*—Specifies the data rate for the T1 or E1 channel, either 56 Kbps or 64 Kbps; default value is 64 Kbps

**Mode**    Controller Configuration

## path ds1|e1 clock source

**Syntax** path *pathChannel* { ds1 | e1 } *tributaryIdentifier* clock source  
 { line | internal { module | chassis } }  
 no path *pathChannel* { ds1 | e1 } *tributaryIdentifier* clock source

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the transmit clock source for DS1 or E1 channels over channelized SONET and SDH interfaces. The **no** version restores the default value.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format *pathChannel* { ds1 | e1 } *pathPayload/tributaryGroup/tributaryNumber*
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - line—Interface transmits data from a clock recovered from the line's receive data stream.
  - internal—Interface transmits data using its internal clock. You must specify one of the following for internal clocking:
    - module—Internal clock is from the line module itself
    - chassis—Internal clock is from the configured system clock

**Mode** Controller Configuration

## path ds1|e1 description

---

**Syntax**    `path pathChannel { ds1 | e1 } tributaryIdentifier [ tributaryType ] description name`  
`no path pathChannel { ds1 | e1 } tributaryIdentifier [ tributaryType ] description`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns a text description or an alias to a DS1 or an E1 signal. This command applies to a DS1/E1 over SONET/SDH VT layer on channelized SONET and SDH interfaces. Use the [show controllers sonet](#) command to display the text description. The **no** version removes the description or alias.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format `pathChannel { ds1 | e1 } pathPayload/tributaryGroup/tributaryNumber`
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - *tributaryType*—Virtual tributary type
    - vt15—Default for SONET DS1 tributaries
    - tu11—Default for SDH DS1 tributaries
    - tu12—Default for SDH E1 tributaries
  - *name*—Text string or alias of up to 80 characters for the T1/E1 over SONET/SDH VT layer on channelized SONET and SDH interfaces

**Mode**    Controller Configuration

## path ds1|e1 framing

**Syntax** `path pathChannel { ds1 | e1 } tributaryIdentifier framing framingType`  
`no path pathChannel { ds1 | e1 } tributaryIdentifier framing`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the framing format for a DS1 or an E1 signal when DS1/E1 is configured over channelized SONET and SDH interfaces. The **no** version restores the default value.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format `pathChannel { ds1 | e1 } pathPayload/tributaryGroup/tributaryNumber`
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - *framingType*—One of the following types:
    - *crc4*—Cyclic redundancy check (default for E1); not available for T1
    - *no-crc4*—No cyclic redundancy check; not available for T1
    - *esf*—Extended superframe (T1 default); not available for E1
    - *sf*—Superframe; not available for E1

**Mode** Controller Configuration

## path ds1|e1 loopback

**Syntax** `path pathChannel { ds1 | e1 } tributaryIdentifier loopback`  
`{ local | network { line | payload } }`

`no path pathChannel { ds1 | e1 } tributaryIdentifier loopback`

`path pathChannel ds1 tributaryIdentifier loopback remote`  
`{ line fdl { ansi | bellcore } | payload [ fdl ] [ ansi ] }`

`no path pathChannel { ds1 | e1 } tributaryIdentifier loopback remote`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures a loopback at the DS1/E1 over SONET/SDH VT layer on channelized SONET and SDH interfaces. The **no** version turns off the loopback.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format `pathChannel { ds1 | e1 } pathPayload/tributaryGroup/tributaryNumber`
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - *local*—Loops the router output data back toward the router at the T1/E1 framer; on supported line modules also sends an alarm indication signal (AIS) out toward the network.
  - *network { line | payload }*—Specify the **line** keyword to loop the data back toward the network before the T1/E1 framer and automatically set a local loopback at the HDLC controllers. Specify the **payload** keyword to loop the payload data back toward the network at the T1/E1 framer and automatically set a local loopback at the HDLC controllers.
  - *remote line fdl ansi* (T1 line only)—Sends a repeating 16-bit ESF data link code word (00001110 11111111) to the remote end requesting that it enter into a network line loopback. Specify the **ansi** keyword to enable the remote line FDL ANSI bit loopback on the T1 channel, according to the ANSI T1.403 specification.
  - *remote line fdl bellcore* (T1 line only)—Sends a repeating 16-bit ESF data link code word (00010010 11111111) to the remote end requesting that it enter into a network line loopback. Specify the **bellcore** keyword to enable the remote line FDL Bellcore bit loopback on the T1 channel, according to the Bellcore TR-TSY-000312 specification.
  - *remote payload [ fdl ] [ ansi ]* (T1 line only)—Sends a repeating 16-bit ESF data link code word (00010100 11111111) to the remote end requesting that it enter into a network

payload loopback. Enables the remote payload FDL ANSI bit loopback on the T1 channel. You can optionally specify **fdl** and **ansi**, but it is not necessary.



.....  
**NOTE:** You cannot send an inband pattern to the remote end requesting that it enter into a network line loopback.  
.....

**Mode**    Controller Configuration

## path ds1|e1 shutdown

---

**Syntax** [ no ] path *pathChannel* { ds1 | e1 } *tributaryIdentifier* shutdown

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Disables DS1 or E1 over channelized SONET and SDH interfaces. DS1 and E1 interfaces are enabled by default. The **no** version restarts a disabled interface.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format *pathChannel* { ds1 | e1 } *pathPayload/tributaryGroup/tributaryNumber*
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12

**Mode** Controller Configuration



## path ds1|e1 snmp trap link-status

---

**Syntax** [ no ] path *pathChannel* { ds1 | e1 } *tributaryIdentifier* snmp trap link-status

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables SNMP link status processing for DS1 or E1 over channelized SONET and SDH interfaces. The **no** version disables SNMP link status processing.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format *pathChannel* { ds1 | e1 } *pathPayload*/*tributaryGroup*/*tributaryNumber*
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12

**Mode** Controller Configuration

## path ds1 fdl

---

**Syntax**    `path pathChannel ds1 tributaryIdentifier fdl { ansi | att | all | none }`  
              `no path pathChannel ds1 tributaryIdentifier fdl [ ansi | att | all ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the FDL standard for a DS1 signal when DS1 is configured over a channelized SONET or SDH interface. The **no** version restores the default, none.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format `pathChannel { ds1 | e1 } pathPayload/tributaryGroup/tributaryNumber`
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - *ansi*—Specifies ANSI T1.403 Standard for extended superframe FDL exchange support
  - *att*—Specifies AT&T Technical Reference 54016 for extended superframe FDL exchange support
  - *all*—Specifies both the AT&T and ANSI mode for extended superframe FDL exchange support
  - *none*—Removes the current FDL mode settings

**Mode**    Controller Configuration

## path ds1 fdl carrier

---

**Syntax** [ no ] path *pathChannel* ds1 *tributaryIdentifier* fdl carrier

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies that a DS1 signal is used in the carrier environment. This command applies to a DS1 over channelized SONET or SDH interface. The **no** version restores the default situation, in which an interface does not operate in the carrier environment.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format *pathChannel* { ds1 | e1 } *pathPayload*/*tributaryGroup*/*tributaryNumber*
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12

**Mode** Controller Configuration

## path ds1 fdl string

**Syntax** `path pathChannel ds1 tributaryIdentifier fdl string { eic eicValue | fic ficValue |  
lic licValue | unit unitValue | pfi pfiValue | port portValue |  
generator generatorValue }`

`no path pathChannel ds1 tributaryIdentifier fdl string { eic | fic | lic | unit | pfi | port | generator  
}`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Defines an FDL message for a DS1 signal, as defined in the ANSI T1.403 specification. This command applies to a DS1 over channelized SONET or SDH interface. Currently, FDL strings can only be configured locally. The **no** version restores the default value to the specified FDL message or to all FDL messages.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format `pathChannel { ds1 | e1 } pathPayload/tributaryGroup/tributaryNumber`
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - *eicValue*—Equipment identification code; 1–10 characters; default value is the null value
  - *ficValue*—Frame identification code; 1–10 characters; default value is the null value
  - *licValue*—Line identification code; 1–10 characters; default value is the null value
  - *unitValue*—Unit identification code; 1–6 characters; default value is the null value.
  - *pfiValue*—Facility identification code to send in the FDL path message; 1–38 characters; default value is the null value
  - *portValue*—Equipment port number to send in the FDL idle signal message; 1–38 characters; default value is the null value
  - *generatorValue*—Generator number to send in the FDL test signal message; 1–38 characters; default value is the null value

**Mode** Controller Configuration

## path ds1 fdl transmit

**Syntax** [ no ] path *pathChannel* ds1 *tributaryIdentifier* fdl transmit  
 { path-id | idle-signal | test-signal }

no path *pathChannel* ds1 *tributaryIdentifier* fdl transmit

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the router to send the specified FDL message on a DS1 signal. This command applies to a DS1 over channelized SONET or SDH interface. The **no** version stops the router from sending the specified FDL message or all FDL messages.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format *pathChannel* { ds1 | e1 } *pathPayload/tributaryGroup/tributaryNumber*
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12
  - path-id—Transmits a path identification message every second; default value is disabled
  - idle-signal—Transmits an idle signal message every second; default value is disabled
  - test-signal—Transmits a test signal message every second; default value is disabled

**Mode** Controller Configuration

## path ds1 remote-loopback

---

**Syntax** [ no ] path *pathChannel* ds1 *tributaryIdentifier* remote-loopback

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables acceptance of remote loopback requests at the DS1/E1 over SONET/SDH VT layer on channelized SONET and SDH interfaces. The **no** version restores the factory default value, which is to reject remote loopback requests.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format *pathChannel* { ds1 | e1 } *pathPayload*/*tributaryGroup*/*tributaryNumber*
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12

**Mode** Controller Configuration

## path ds3

---

**Syntax**    `path pathChannel ds3 ds3Channel { [ channelized ] | unchannelized }`  
              `no path pathChannel ds3 ds3Channel`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Creates and configures a DS3 signal. This command applies to a DS3 over channelized SONET interface. If you do not specify whether or not the path should be channelized, the router creates a channelized path by default. The **no** version deletes a path.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the path

**Mode**    Controller Configuration

## path ds3 bert

---

**Syntax**    `path pathChannel ds3 ds3Channel bert pattern pattern interval time`  
              `no path pathChannel ds3 ds3Channel bert`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables bit error rate tests using the specified pattern for a DS3 signal. This command applies to a DS3 over channelized SONET interface. The **no** version stops the test that is running.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
  - *pattern*—One of the following test patterns:
    - 0s—Repetitive test pattern of all zeros, 00000...
    - 1s—Repetitive test pattern of all ones, 11111...
    - 2^9—Pseudorandom test pattern, 511 bits long
    - 2^11—Pseudorandom test pattern, 2047 bits long
    - 2^15—Pseudorandom test pattern, 32,767 bits long
    - 2^20—Pseudorandom test pattern, 1,048,575 bits long
    - 2^20-QRSS—Pseudorandom QRSS test pattern, 1,048,575 bits long
    - 2^23—Pseudorandom test pattern, 8,388,607 bits long
    - alt-0-1—Repetitive alternating test pattern of zeros and ones, 01010101...
  - *time*—Duration of the test, in the range 1–1440 minutes

**Mode**    Controller Configuration



## path ds3 clock source

---

**Syntax** `path pathChannel ds3 ds3Channel clock source { line | internal  
{ module | chassis } }`

`no path pathChannel ds3 ds3Channel clock source`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the transmit clock source for a DS3 signal. This command applies to a DS3 over channelized SONET interface. The **no** version restores the default value.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the path
  - *line*—Interface transmits data from a clock recovered from the line's receive data stream
  - *internal*—Interface transmits data using its internal clock. You must specify one of the following for internal clocking:
    - *module*—Internal clock is from the line module itself
    - *chassis*—Internal clock is from the configured system clock

**Mode** Controller Configuration

## path ds3 description

---

**Syntax**    *path pathChannel ds3 ds3Channel description name*  
              *no path pathChannel ds3 ds3Channel description*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns a text description or an alias to a DS3 signal. This command applies to a DS3 over channelized SONET/SDH interface. Use the [show controllers sonet](#) command to display the text description. The **no** version removes the description or alias.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the path
  - *name*—Text string or alias of up to 80 characters for the T3 over channelized SONET/SDH interface

**Mode**    Controller Configuration

## path ds3 equipment loopback

---

**Syntax**    `path pathChannel ds3 ds3Channel equipment { customer | network } loopback`  
`no path pathChannel ds3 ds3Channel equipment`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables or disables the router's ability to be placed in loopback by a remote device connected at the DS3 layer for a DS3 signal. This command applies to a DS3 over channelized SONET interface. The **no** version restores the default behavior, which disables the router's ability to be placed in loopback by a remote device. Using the **no** version has the same effect as issuing the command with the **network** keyword.

**Options**

- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
- *ds3Channel*—Number, in the range 1–3, that identifies the path
- *customer*—Enables the router to start loopback testing when it receives an appropriate signal from the remote interface
- *network*—Disables the router's ability to start loopback testing when it receives an appropriate signal from the remote interface; this is the default behavior

**Mode**    Controller Configuration

## path ds3 framing

---

**Syntax**    *path pathChannel ds3 ds3Channel framing framingType*  
              *no path pathChannel ds3 ds3Channel framing*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the framing format for a DS3 signal. This command applies to a DS3 over channelized SONET interface. The **no** version restores the default value.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the path
  - *framingType*—Choose one of the following:
    - *c-bit*—Default; specifies C-bit parity framing
    - *m23*—Specifies M23 multiplexer framing

**Mode**    Controller Configuration

## path ds3 loopback

**Syntax**    `path pathChannel ds3 ds3Channel loopback { local | network { line | payload } }`  
               `no path pathChannel ds3 ds3Channel loopback`  
               `[ no ] path pathChannel ds3 ds3Channel loopback remote`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures a loopback at the DS3 layer for a DS3 signal. This command applies to a DS3 over channelized SONET interface. The **no** version turns off the loopback.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the path
  - **local**—Loops the data back toward the router; on supported line modules also sends an alarm indication signal (AIS) out toward the network.
  - **network { line | payload }**—Specify the **line** keyword to loop the data toward the network before the data reaches the framer. Specify the **payload** keyword to loop the data toward the network after the framer has processed the data.
  - **remote**—Sends a far end alarm code in the C-bit framing, as defined in ANSI T1.404, to notify the remote end to activate or (when you use the **no** version) deactivate the line loopback

**Mode**    Controller Configuration

## path ds3 mdl carrier

---

**Syntax** [ no ] path *pathChannel* ds3 *ds3Channel* mdl carrier

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies that a DS3 signal is used in the carrier environment. This command applies to a DS3 over channelized SONET interface. The **no** version restores the default situation, in which an interface does not operate in the carrier environment.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the path

**Mode** Controller Configuration

## path ds3 mdl string

**Syntax** `path pathChannel ds3 ds3Channel mdl string { eic eicValue | fic ficValue | generator genValue | lic licValue | pfi pfiCode | port portValue | unit unitValue }`

`no path pathChannel ds3 ds3Channel mdl string { eic | fic | generator | lic | pfi | port | unit }`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Allows you to configure an MDL message on a DS3 signal as defined in the ANSI T1.107a-1990 specification. This command applies to a DS3 over channelized SONET interface. The **no** version restores the default value to the specified MDL message or to all MDL messages.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the path
  - *eicValue*—Equipment identification code; 1–10 characters; default value is the null value
  - *ficValue*—Frame identification code; 1–10 characters; default value is the null value
  - *genValue*—Generator number to send in the MDL test signal message; 1–38 characters; default value is the null value
  - *licValue*—Line identification code; 1–11 characters; default value is the null value
  - *pfiCode*—Facility identification code to send in the MDL path message; 1–38 characters; default value is the null value
  - *portValue*—Equipment port number to send in the MDL idle signal message; 1–38 characters; default value is the null value
  - *unitValue*—Unit identification code; 1–6 characters; default value is the null value

**Mode** Controller Configuration

## path ds3 mdl transmit

---

**Syntax** [ no ] path *pathChannel* ds3 *ds3Channel* mdl transmit  
{ path-id | idle-signal | test-signal }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables you to transmit an MDL message on a DS3 signal. This command applies to a DS3 over channelized SONET interface. The **no** version disables transmission of the specified message or all messages.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the path
  - path-id—Transmits a path identification message every second; default value is disabled
  - idle-signal—Transmits an idle signal message every second; default value is disabled
  - test-signal—Transmits a test signal message every second; default value is disabled

**Mode** Controller Configuration



## path ds3 shutdown

---

**Syntax** [ no ] path *pathChannel* ds3 *ds3Channel* shutdown

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Disables a DS3 signal. This command applies to a DS3 over channelized SONET interface. DS3 interfaces are enabled by default. The **no** version restarts a disabled interface.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the path

**Mode** Controller Configuration

## path ds3 snmp trap link-status

---

**Syntax** [ no ] path *pathChannel* ds3 *ds3Channel* snmp trap link-status

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables SNMP link status processing for a DS3 signal. This command applies to a DS3 over channelized SONET interface. The **no** version disables SNMP link status processing on an interface.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the path

**Mode** Controller Configuration

## path ds3 t1

---

**Syntax** [ no ] path *pathChannel* ds3 *ds3Channel* t1 *t1Channel*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates and configures a T1 channel on a DS3 signal. This command applies to a T1 channel on a DS3 over channelized SONET interface. The **no** version deletes a path.

**Options**

- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
- *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
- *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27

**Mode** Controller Configuration

## path ds3 t1 bert

---

**Syntax**    `path pathChannel ds3 ds3Channel t1 t1Channel bert`  
              `pattern pattern interval time [ unframed ]`  
  
              `no path pathChannel ds3 ds3Channel t1 t1Channel bert`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables bit error rate tests using the specified pattern for a T1 channel on a DS3 signal. This command applies to a T1 channel on a DS3 over channelized SONET interface. The **no** version stops the test that is running.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
  - *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *pattern*—One of the following test patterns:
    - 2<sup>11</sup>—Pseudorandom test pattern, 2047 bits long
    - 2<sup>15</sup>—Pseudorandom test pattern, 32,767 bits long
    - 2<sup>20</sup>-O153—Pseudorandom test pattern, 1,048,575 bits long
  - *time*—Duration of the test in the range 1–1440 minutes
  - *unframed*—Test bit pattern occupies all bits on the link, overwriting the framing bits. If you do not specify this keyword, the test bit pattern occupies only T1/E1 payload bits.

**Mode**    Controller Configuration

## path ds3 t1 clock source

**Syntax** `path pathChannel ds3 ds3Channel t1 t1Channel clock source`  
`{ line | internal { module | chassis } }`  
`no path pathChannel ds3 ds3Channel t1 t1Channel clock source`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the transmit clock source for a T1 channel on a DS3 signal. This command applies to a T1 channel on a DS3 over channelized SONET interface. The **no** version restores the default value, line.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
  - *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *line*—Interface transmits data from a clock recovered from the line's receive data stream
  - *internal*—Interface transmits data using its internal clock. You must specify one of the following for internal clocking:
    - *module*—Internal clock is from the line module itself
    - *chassis*—Internal clock is from the configured system clock

**Mode** Controller Configuration

## path ds3 t1 description

---

**Syntax** [ no ] path *pathChannel* ds3 *ds3Channel* t1 *t1Channel* [ /*subchannel* ] description *name*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Assigns a text description or an alias to a T1 channel group or subchannel on a DS3 signal. This command applies to a T1 channel group or subchannel on a DS3 over channelized SONET/SDH interface. Use the [show controllers sonet](#) command to display the text description. The **no** version removes the description or alias.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
  - *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *subchannel*—Fractional T1 interface in the range 1–24
  - *name*—Text string or alias of up to 80 characters for the T1 channel group or subchannel on a T3 over channelized SONET/SDH interface

**Mode** Controller Configuration

## path ds3 t1 fdl

---

**Syntax** `path pathChannel ds3 ds3Channel t1 t1Channel fdl { ansi | att | all | none }`  
`no path pathChannel ds3 ds3Channel t1 t1Channel fdl [ ansi | att | all ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the facilities data link (FDL) standard for a T1 channel on a DS3 signal. This command applies to a T1 channel on a DS3 over channelized SONET interface. The **no** version restores the default, none.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
  - *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *ansi*—Specifies ANSI T1.403 Standard for extended superframe FDL exchange support
  - *att*—Specifies AT&T Technical Reference 54016 for extended superframe FDL exchange support
  - *all*—Specifies both the AT&T and ANSI mode for extended superframe FDL exchange support
  - *none*—Removes the current FDL mode settings

**Mode** Controller Configuration

## path ds3 t1 fdl carrier

---

**Syntax** [ no ] path *pathChannel* ds3 *ds3Channel* t1 *t1Channel* fdl carrier

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies that a T1 channel on a DS3 signal is used in the carrier environment. This command applies to a T1 channel on a DS3 over channelized SONET interface. The **no** version restores the default situation, in which an interface does not operate in the carrier environment.

**Options**

- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
- *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
- *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27

**Mode** Controller Configuration



## path ds3 t1 fdl string

**Syntax** `path pathChannel ds3 ds3Channel t1 t1Channel fdl string { eic eicValue | fic ficValue | lic licValue | unit unitValue | pfi pfiValue | port portValue | generator generatorValue }`

`no path pathChannel ds3 ds3Channel t1 t1Channel fdl string { eic | fic | lic | unit | pfi | port | generator }`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Defines an FDL message for a T1 channel on a DS3 signal, as defined in the ANSI T1.403 specification. This command applies to a T1 channel on a DS3 over channelized SONET interface. Currently, FDL strings can only be configured locally. The **no** version restores the default value to the specified FDL message or to all FDL messages.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
  - *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *eicValue*—Equipment identification code; 1–10 characters; default value is the null value
  - *ficValue*—Frame identification code; 1–10 characters; default value is the null value
  - *licValue*—Line identification code; 1–10 characters; default value is the null value
  - *unitValue*—Unit identification code; 1–6 characters; default value is the null value
  - *pfiValue*—Facility identification code to send in the FDL path message; 1–38 characters; default value is the null value
  - *portValue*—Equipment port number to send in the FDL idle signal message; 1–38 characters; default value is the null value
  - *generatorValue*—Generator number to send in the FDL test signal message; 1–38 characters; default value is the null value

**Mode** Controller Configuration

## path ds3 t1 fdl transmit

---

**Syntax** [ no ] path *pathChannel* ds3 *ds3Channel* t1 *t1Channel* fdl transmit  
{ path-id | idle-signal | test-signal }

no path *pathChannel* ds3 *ds3Channel* t1 *t1Channel* fdl transmit

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the router to send the specified type of FDL message for a T1 channel on a DS3 signal. This command applies to a T1 channel on a DS3 over channelized SONET interface. The **no** version stops the router from sending the specified type of FDL message or all FDL messages.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
  - *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - path-id—Transmits a path identification message every second; default value is disabled
  - idle-signal—Transmits an idle signal message every second; default value is disabled
  - test-signal—Transmits a test signal message every second; default value is disabled

**Mode** Controller Configuration

## path ds3 t1 framing

---

**Syntax**    `path pathChannel ds3 ds3Channel t1 t1Channel framing framingType`  
              `no path pathChannel ds3 ds3Channel t1 t1Channel framing`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the framing format for a T1 channel on a DS3 signal. This command applies to a T1 channel on a DS3 over channelized SONET interface. The **no** version restores the default value.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
  - *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *framingType*—One of the following types:
    - *esf*—Default; specifies extended superframe
    - *sf*—Specifies superframe

**Mode**    Controller Configuration

## path ds3 t1 loopback

**Syntax** `path pathChannel ds3 ds3Channel t1 t1Channel loopback`  
`{ local | network { line | payload } }`

`no path pathChannel ds3 ds3Channel t1 t1Channel loopback`

`path pathChannel ds3 ds3Channel t1 t1Channel loopback remote`  
`{ line fdl { ansi | bellcore } | payload [ fdl ] [ ansi ] }`

`no path pathChannel ds3 ds3Channel t1 t1Channel loopback remote`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures a loopback for a T1 channel on a DS3 signal. This command applies to a T1 channel on a DS3 over channelized SONET interface. The **no** version turns off the loopback.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
  - *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *local*—Loops the router output data back toward the router at the T1 framer; on supported line modules also sends an alarm indication signal (AIS) out toward the network.
  - *network { line | payload }*—Specify the **line** keyword to loop the data back toward the network before the T1 framer and automatically set a local loopback at the HDLC controllers. Specify the **payload** keyword to loop the payload data back toward the network at the T1 framer and automatically set a local loopback at the HDLC controllers.
  - *remote line fdl ansi*—Sends a repeating 16-bit ESF data link code word (00001110 11111111) to the remote end requesting that it enter into a network line loopback. Specify the **ansi** keyword to enable the remote line FDL ANSI bit loopback on the T1 channel, according to the ANSI T1.403 specification.
  - *remote line fdl bellcore*—Sends a repeating 16-bit ESF data link code word (00010010 11111111) to the remote end requesting that it enter into a network line loopback. Specify the **bellcore** keyword to enable the remote line FDL Bellcore bit loopback on the T1 channel, according to the Bellcore TR-TSY-000312 specification.
  - *remote payload [ fdl ] [ ansi ]*—Sends a repeating 16-bit ESF data link code word (00010100 11111111) to the remote end requesting that it enter into a network payload loopback. Enables the remote payload FDL ANSI bit loopback on the T1 channel. You can optionally specify **fdl** and **ansi**, but it is not necessary.

**Mode** Controller Configuration

## path ds3 t1 remote-loopback

---

**Syntax** [ no ] path *pathChannel* ds3 *ds3Channel* t1 *t1Channel* remote-loopback

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables acceptance of remote loopback requests by a T1 channel on a DS3 signal. This command applies to a T1 channel on a DS3 over channelized SONET interface. The **no** version restores the default value, which is to reject remote loopback requests.

**Options**

- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
- *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
- *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27

**Mode** Controller Configuration

## path ds3 t1 shutdown

---

**Syntax** [ no ] path *pathChannel* ds3 *ds3Channel* t1 *t1Channel* [/ *subchannel* ] shutdown

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Disables a T1 channel or subchannel on a DS3 signal. This command applies to a T1 channel or subchannel on a DS3 over channelized SONET interface. T1 channels are enabled by default. The **no** version restarts a disabled interface.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
  - *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *subchannel*—Fractional T1 interface in the range 1–24

**Mode** Controller Configuration

## path ds3 t1 snmp trap link-status

---

**Syntax** [ no ] path *pathChannel* ds3 *ds3Channel* t1 *t1Channel* [ /*subchannel* ]  
snmp trap link-status

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables SNMP link status processing for a T1 channel group or subchannel on a DS3 signal. This command applies to a T1 channel or subchannel on a DS3 over channelized SONET interface. The **no** version disables SNMP link status processing for a T1 channel.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
  - *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *subchannel*—Fractional T1 interface, in the range 1–24

**Mode** Controller Configuration

## path ds3 t1 timeslots

---

**Syntax** `path pathChannel ds3 ds3Channel t1 t1Channel/subchannel timeslots range`  
[ speed { 56 | 64 } ]

`no path pathChannel ds3 ds3Channel t1 t1Channel/subchannel`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Assigns a range of DS0 timeslots to a subchannel as a single data stream for a T1 channel on a DS3 signal. This command applies to a T1 channel on a DS3 over channelized SONET interface. You can optionally specify a line speed that applies to all DS0 timeslots assigned to a subchannel. The **no** version deletes the fractional T1 circuit.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *ds3Channel*—Number, in the range 1–3, that identifies the DS3 channel
  - *t1Channel*—Number, in the range 1–28, that identifies the T1 channel
  - *subchannel*—Fractional T1 interface, in the range 1–24
  - *range*—Timeslots assigned to the T1 channel in the range 1–24; a dash represents a range of timeslots, and a comma separates timeslots. For example, 1-10, 15-18 assigns timeslots 1–10 and 15–18.
  - *speed*—Specifies the data rate for the T1 channel, either 56 Kbps or 64 Kbps; default value is 64 Kbps

**Mode** Controller Configuration



## path e1 unframed

**Syntax** [ no ] path *pathChannel* e1 *tributaryIdentifier* unframed

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates and configures an unframed E1 signal on a channelized SONET or SDH interface. The **no** version deletes an unframed E1 interface from the path.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path
  - *tributaryIdentifier*—Specifier for the tributary in the format *pathChannel* { ds1 | e1 } *pathPayload/tributaryGroup/tributaryNumber*
    - *pathPayload*—Payload number for the path; value is 1 for SONET and in the range 1–3 for SDH
    - *tributaryGroup*—Number, in the range 1–7, that identifies the group within the path
    - *tributaryNumber*—Number of the tributary within the tributary group; the value is in the range 1–4 if the tributary type is vt15 or tu11 and in the range 1–3 if the tributary type is tu12

**Mode** Controller Configuration

## path overhead c2

---

**Syntax** For channelized OCx/STMx interfaces:  
[ no ] path *pathChannel* overhead c2 *byteValue*

For unchannelized OCx/STMx interfaces:

[ no ] path overhead c2 *byteValue*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Overrides the default value of the path signal label (C2) byte for SONET and SDH interfaces. The **no** version restores the default setting, which depends on the types of interface layers configured above the SONET/SDH interface.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path on a channelized interface
  - *byteValue*—Value for C2 byte; integer, in the range 0–255

**Mode** Controller Configuration

## path overhead j1

---

**Syntax** For channelized OCx/STMx interfaces:

```
[ no ] path pathChannel overhead j1 { msg | exp-msg } [ message ]
```

For unchannelized OCx/STMx interfaces:

```
[ no ] path overhead j1 { msg | exp-msg } [ message ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies trace messages to check for connectivity between the router and the SONET/SDH device at the other end of the line. The **no** version restores the default situation, in which all characters of the trace message are zeros.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path on a channelized interface
  - *msg*—Specifies that the message is one that the router sends
  - *exp-msg*—Specifies that the message is one that the router expects to receive
  - *message*—Text of the message; the maximum is 15 characters for SDH mode and 62 characters for SONET mode

**Mode** Controller Configuration

## path shutdown

---

**Syntax** For channelized OCx/STMx interfaces:

[ no ] path *pathChannel* shutdown

For unchannelized OCx/STMx interfaces:

[ no ] path shutdown

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Disables a path on channelized and unchannelized SONET/SDH interfaces. On channelized interfaces, you must specify the path channel number. By default, paths are enabled. The **no** version restarts the path.

**Options**

- *pathChannel*—Number, in the range 1–2147483648, that identifies the path on a channelized interface

**Mode** Controller Configuration

## path snmp trap link-status

---

**Syntax** For channelized OCx/STMx interfaces:  
[ no ] path *pathChannel* snmp trap link-status

For unchannelized OCx/STMx interfaces:  
[ no ] path snmp trap link-status

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables SNMP link-status processing for the path layer of SONET and SDH interfaces. The **no** version disables SNMP link-status processing.

**Options**

- *pathChannel*—Number, in the range 1–2147483648, that identifies the path on a channelized interface

**Mode** Controller Configuration

## path trigger alarm prdi

---

**Syntax** For channelized OCx/STMx interfaces:  
[ no ] path *pathChannel* trigger alarm prdi  
For unchannelized OCx/STMx interfaces:  
[ no ] path trigger alarm prdi

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies that the router uses remote defect indications (RDIs) at the path layer to determine the operational state of a path. The **no** version restores the default setting, in which loss of pointer and alarm indication signal (AIS) defects at the path layer determine the operational state of a path.

**Options**

- *pathChannel*—Number, in the range 1–2147483648, that identifies the path on a channelized interface

**Mode** Controller Configuration

## path trigger delay

---

**Syntax** For channelized OCx/STMx interfaces:

```
path pathChannel trigger delay msec delayTime  
no path pathChannel trigger delay
```

For unchannelized OCx/STMx interfaces:

```
path trigger delay msec delayTime  
no path trigger delay
```

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the time duration that the router uses to determine when a SONET/SDH defect at the path layer becomes an alarm. The **no** version restores the default setting, 2500 milliseconds.

- Options**
- *pathChannel*—Number, in the range 1–2147483648, that identifies the path on a channelized interface
  - *delayTime*—Time, in the range 0–2500 milliseconds

**Mode** Controller Configuration

## peak-burst

---

**Syntax**    `peak-burst size { millisecond milliseconds }`  
              `no peak-burst`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              *milliseconds* variable added in JunosE Release 8.1.0.

**Description**    Sets the peak burst for a rate-limit profile. The **no** version restores the default value, 100 ms; if 100ms is less than 8K, then 8K (8192).

**Options**

- *size*—Size in bytes in the range 1–4294967295
- *milliseconds*—Milliseconds in the range 1–10000

**Mode**    Rate Limit Profile Configuration

**Related Documentation**

- Creating a Two-Rate Rate-Limit Profile



## peak-rate

---

**Syntax**    `peak-rate { rate | parameterName percentage percentValue }`  
              `no peak-rate`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              *parameterName* and *percentValue* variables added in JunosE Release 8.1.0.

**Description**    Sets the peak rate for a rate-limit profile. The **no** version restores the default value, 0.

- Options**
- *rate*—Rate in bits per second in the range 0–4294967295
  - *parameterName*—Name of policy parameter up to 40 characters
  - *percentValue*—Percentage in the range 0–100

**Mode**    Rate Limit Profile Configuration

**Related Documentation**

- Creating a Two-Rate Rate-Limit Profile

## peer ip identity

---

**Syntax** peer ip identity  
          { address *ipAddress* | range *ipRangeLow* *ipRangeHigh* | subnet *netAddress* *netMask* }  
  
no peer ip identity

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Overrides the peer identity (phase 2 identity) used for IPSec security association negotiations. For IPSec negotiations to succeed, the local and peer identities at one end of the tunnel must match the peer and local identities at the other end (respectively). The **no** version restores the default value, the internal IP address allocated for the subscriber.

- Options**
- *ipAddress*—IP address used as the peer identity for IPSec security association negotiations
  - *ipRangeLow*—Low end of a range used as the peer identity for IPSec security association negotiations
  - *ipRangeHigh*—High end of a range used as the peer identity for IPSec security association negotiations
  - *netAddress*—IP network address used as the peer identity for IPSec security association negotiations
  - *netMask*—IP network mask used as the peer identity for IPSec security association negotiations

**Mode** IPSec Tunnel Profile Configuration

## pfs group

---

**Syntax**    pfs group { 1 | 2 | 5 }

no pfs group

**Release Information**    Command introduced before JunosE Release 7.1.0.  
IPSec Tunnel Profile mode added in JunosE Release 7.3.0.

**Description**    Configures perfect forward secrecy for connections created with this IPSec transport or tunnel profile by assigning a Diffie-Hellman prime modulus group. The **no** version removes PFS from the profile.

- Options**
- 1—768-bit Diffie-Hellman prime modulus group
  - 2—1024-bit Diffie-Hellman prime modulus group
  - 5—1536-bit Diffie-Hellman prime modulus group

**Mode**    IPSec Transport Profile Configuration, IPSec Tunnel Profile Configuration

## pim disable

---

**Syntax** [ no ] pim disable

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Disables PIM on a virtual router. The **no** version reenables PIM on a virtual router.

**Mode** Router Configuration

## ping

**Syntax** ping [ vrf *vrfName* ] [ ip ] *destination* [ *packetCount* ] [ timeout *timeOutVal* ]  
 [ transmit-delay *delayVal* ] [ ttl *ttlValue* ] [ data-size *dataSize* ]  
 [ data-pattern { ones | zeros | random | hex-data *hexData* } ]  
 [ source { interface *interfaceType interfaceSpecifier* | address *sourceAddr* } ]  
 [ sweep-sizes *sweepMin sweepMax* [ sweep-interval *sweepInt* ] ]  
 [ extended [ tos *tosVal* ] [ set-dont-fragment-bit ] [ set-router-alert ]  
 [ { loose-source-route | strict-source-route } [ *srtAddrs* ]\* ]  
 [ record-route *numRoutes* ] [ timestamp *numTstamps* ]  
 [ interface *interfaceType Interfacespecifier* ] ]

ping ipv6 [ vrf *vrfName* ] *destination* [ *packetCount* ] [ timeout *timeOutVal* ]  
 [ transmit-delay *delayVal* ] [ hop-limit *hopLimit* ] [ data-size *dataSize* ]  
 [ data-pattern { ones | zeros | random | hex-data *hexData* } ]  
 [ source { interface *interfaceType interfaceSpecifier* | address *sourceAddr* } ]  
 [ sweep-sizes *sweepMin sweepMax* [ sweep-interval *sweepInt* ] ]  
 [ extended [ dscp *trafficClass* ] [ flow-label *flowLabel* ] ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**vrf** keyword and *vrfName* variable added to IPv6 version in JunosE Release 7.2.0.

**Description** Sends an ICMP echo request packet to the IP or IPv6 address that you specify. There is no **no** version.

- Options**
- *vrfName*—Name of the VRF context
  - **ip**—Specifies optional keyword for compatibility with non-E Series implementations
  - **ipv6**—Specifies the destination address as IPv6 format
  - *destination*—IP address, IPv6 address, or domain name of the host to ping
  - *packetCount*—Number of packets to send to the destination IP address, in the range 0–4294967295; default value is 5; 0 means ping forever
  - *timeOutVal*—Number of seconds, in the range 1–20, to wait for an ICMP echo reply packet before the connection attempt times out
  - *delayVal*—Number of milliseconds, in the range 1–50, between transmission of each ICMP request; default value is 10 ms
  - *hopLimit*—Specifies a hop limit, in the range 1–255; default value is 255
  - *ttlValue*—Specifies a hop count by setting the time-to-live field in the IP header in the range 1–255; default value is 32
  - *dataSize*—Number of bytes comprising the IP packet and reflected in the IP header, in the range 0–64000; default value is 100 bytes
  - **data-pattern**—Type of bits contained in the packet. You can set the bits to all ones, all zeros, a random mixture of ones and zeros, or a specific hexadecimal data pattern that can range from 0x0 – 0xFFFFFFFF. The default data pattern is all zeros.

- source interface—Specifies an interface as the source of the packets
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
- source address—Specifies an IP address as the source of the packets
  - *sourceAddr*—IP address or domain name used as the source address
- sweep-sizes—Configures payload sizes, enabling you to vary the sizes of the echo packets being sent. This capability is useful for determining the minimum sizes of the MTUs configured on the nodes along the path to the destination address. This reduces packet fragmentation which contributes to performance problems. The default is not to sweep (all packets are the same size).
  - *sweepMin*—Minimum payload size in the range 0–64000
  - *sweepMax*—Maximum payload size in the range 0–64000
  - *sweepInt*—Number of bytes to add to the size of the packet; the change in the size of subsequent ping packets while sweeping across a range of sizes. For example, you can configure the sweep interval to sweep across the range of packets from 100 bytes to 1000 bytes in increments of *sweepInt*. By default, send 100, 101, 102, 103...1000. If *sweepInt* is 5, send 100, 105, 110, 115...1000). When “sweeping,” the default interval is 1.
- extended—Enables you to configure extended header attributes
  - *tosVal*—Specifies the value set in the ToS byte in the range 0–255 to support QoS offerings
  - set-dont-fragment-bit—Sets the don't-fragment bit in the IP header to prevent IP from fragmenting the packet if it is too long for the MTU of a link; if the nonfragmented packet cannot be delivered, it is discarded
  - set-router-alert—Sets the router alert bit in the IP header to indicate that all routers should examine this packet more closely to determine whether further processing is necessary
  - loose-source-route—Specifies a set of hops through which the packet must traverse; the hops do not have to be adjacent
  - strict-source-route—Specifies every hop through which the packet must traverse and generates an ICMP error if the exact path cannot be followed
  - *srtAddrs*—IP addresses or domain name of the intermediate hops on the way to the destination to be used in the loose-source or strict-source route
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - *numRoutes*—Specifies how many routes are to be recorded as the packet travels, in the range 1–9

- *numTstamps*—Specifies how many timestamps from routers are to be recorded as the packet travels, in the range 1–9
- *interfaceType*—Interface type of a destination address on the router that is connected for external loopback by means of a cable or plug that loops Tx to Rx. The command succeeds only if the specified interface is connected for external loopback and the encapsulation type is ATM, Frame Relay, HDLC, or PPP. The command does not work for Ethernet or VLAN encapsulations. See [Interface Types and Specifiers on page 5](#)
- *interfaceSpecifier*—Particular interface of a destination address on the router that is connected for external loopback by means of a cable or plug that loops Tx to Rx. The command succeeds only if the specified interface is connected for external loopback and the encapsulation type is ATM, Frame Relay, HDLC, or PPP. The command does not work for Ethernet or VLAN encapsulations. Format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
- *trafficClass*—Specifies the traffic class value to match in the Traffic Class field of each IPv6 packet header, in the range 1 to 255
- *flowLabel*—Specifies the flow label value to match in the Flow Label field of each IPv6 packet header, in the range 1 to 1048576

**Mode** Privileged Exec, User Exec

## ping atm interface atm

---

**Syntax** ping atm interface atm *interfaceSpecifier vpi vci*  
[ end-loopback | seg-loopback [ *destination* ] ] [ count *cellCount* ]  
[ timeout *#OfSeconds* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets up the ATM interface or circuit to send loopback cells. There is no **no** version.

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *vpi*—Virtual path identifier
  - *vci*—Virtual circuit identifier; by default F5 end-to-end loopback OAM cells are used for the ping operation
    - To send F4 segment loopback cells, set the VCI to 3.
    - To send F5 end-to-end loopback cells, set the VCI to 4.
  - end-loopback—Sends the ping to the connection endpoint
  - seg-loopback—Sends the ping to the first segment endpoint
  - *destination*—Value of the location ID included the loopback cell. The location ID is a 16-octet field, and the destination portion is 4 octets. You can set the destination to a specific location ID or to 0s (zeros) or 1s (ones). If the destination is set to:
    - 0s—Loopback location ID in the loopback cell is initialized to all 0s, and each segment endpoint in the network responds to the ping
    - 1s—Loopback location ID in the loopback cell is initialized to all 1s, and only the connection endpoint responds to the ping
- The default value is 0xFFFFFFFF, which causes the loopback location ID in the loopback cell to be initialized to all 1s.
- *cellCount*—Number of OAM echo cells to send to the destination, in the range 1–32; default value is 5
  - timeout—Amount of time to wait for a response to the sent OAM cell. If no response is received when this time expires, the router sends the next cell. This process is repeated for the number of cells specified in the *cellCount* parameter.
  - *#OfSeconds*—Number of seconds in the timeout period, in the range 1–5; default value is 5

**Mode** Privileged Exec



## ping mpls ip

**Syntax** ping mpls ip [ vrf *vrfName* ] { *targetIpAddress* *targetIpv4Mask* | *targetIpv6Prefix* }  
 [ destination *startIpAddress* *endIpAddress* *increment* ]  
 [ source address *sourceAddr* ] [ [ repeat ] *packetCount* ]  
 [ ttl *ttlValue* ] [ timeout *timeOutVal* ]  
 [ data-size *dataSize* | sweep-sizes *sweepMin* *sweepMax* *sweepInt* ]  
 [ pad { ones | zeros | random | hex-data *hexData* } ]  
 [ reply mode { ipv4-udp | ipv4-udp-with-router-alert } ]  
 [ reply pad-tlv ] [ reply dscp *trafficClass* ]  
 [ interval *txdelayVal* ] [ exp-bits *bitValue* ] [ detail ]

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Sends an MPLS echo request packet to the specified IP or IPv6 address or, alternatively, sends MPLS echo packets to the egress node in a point-to-multipoint LSP. There is no **no** version.

The MPLS echo request packets and echo reply packets created by this command use the LDP IPv4 LSP sub-TLV described in RFC 4379—Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures (February 2006).

The MPLS echo request packets and echo reply packets created by this command to detect connectivity to egress nodes in point-to-multipoint LSPs use the P2MP Responder Identifier TLV described in the IETF draft, Detecting Data Plane Failures in Point-to-Multipoint Multiprotocol Label Switching (MPLS) - Extensions to LSP Ping—draft-ietf-mpls-p2mp-lsp-ping-08.txt (February 2010 expiration).

- Options**
- *vrfName*—Name of the VRF context; when you specify a VRF name, the LSP to the specified prefix must originate from the VRF because the ping is generated from the specified VRF
  - *targetIpAddress*—IP address of the ping target
  - *targetIpv4Mask*—Network mask for target IP address
  - *targetIpv6Prefix*—IPv6 address of the ping target
  - *startIpAddress*—First IP address within the 127.0.0.0/8 destination range
  - *endIpAddress*—Last IP address within the 127.0.0.0/8 destination range
  - *increment*—Number in the range 0–255 that specifies the increment between addresses in the destination address range
  - *sourceAddr*—IP address used as the packet source address
  - repeat—Specifies that multiple ping packets are sent
  - *packetCount*—Number of packets to send to the destination address, in the range 0–4294967295; default value is 5; 0 means ping forever
  - *ttlValue*—Hop count specified by setting the time-to-live field in the header, in the range 1–255; default value is 32

- *timeOutVal*—Number of seconds, in the range 1–32 to wait for an MPLS echo reply packet before the connection attempt times out
- *dataSize*—Number of bytes comprising the MPLS packet, including the header, in the range 0–64000; default value is 100 bytes
- *sweep-sizes*—Configures payload sizes, enabling you to vary the sizes of the echo packets being sent. This capability is useful for determining the minimum sizes of the MTUs configured on the nodes along the path to the destination address. This reduces packet fragmentation which contributes to performance problems. The default is not to sweep; all packets are the same size.
  - *sweepMin*—Minimum payload size in the range 0–64000
  - *sweepMax*—Maximum payload size in the range 0–64000
  - *sweepInt*—Number of bytes to add to the size of the packet; the change in the size of subsequent ping packets while sweeping across a range of sizes. For example, you can configure the sweep interval to sweep across the range of packets from 0 bytes to 10,000 bytes in increments of *sweepInt*. By default, send 100, 101, 102, 103...1000. If *sweepInt* is 5, send 100, 105, 110, 115...1000). When “sweeping,” the default interval is 1.
- *pad*—Specifies the type of bits contained in the pad TLV. You can set the bits to all ones, all zeros, a random mixture of ones and zeros, or a specific hexadecimal data pattern, in the range from 0x0–0xFFFFFFFF. The default data pattern is all zeros.
- *reply mode*—Specifies the reply mode for the echo request packet
  - *ipv4-udp*—Specifies that the echo request packet is an IPv4 UDP packet
  - *ipv4-udp-with-router-alert*—Specifies that the echo request packet is an IPv4 UDP packet with the router alert bit set in the header so all routers examine this packet more closely to determine whether further processing is necessary
- *reply pad-tlv*—Requests sender of an echo reply to send a pad TLV
- *trafficClass*—Number in the range 0–255 that represents the value of the traffic class that the sender of an echo reply is requested to set
- *txDelayVal*—Number of milliseconds in the range 1–50 between transmission of each echo request; default value is 10 ms
- *bitValue*—Value of the EXP bits in the range 0–7 included in the MPLS echo request packet
- *detail*—Displays detailed information about MPLS echo request sent and echo replies received

**Mode** Privileged Exec, User Exec

## ping mpls l2transport

**Syntax** ping mpls l2transport [ vrf *vrfName* ]  
 { *interfaceType* *interfaceSpecifier* }  
 [ destination *startIpAddress* *endIpAddress* *increment* ]  
 [ source address *sourceAddr* ] [ [ repeat ] *packetCount* ]  
 [ ttl *ttlValue* ] [ timeout *timeOutVal* ]  
 [ data-size *dataSize* | sweep-sizes *sweepMin* *sweepMax* *sweepInt* ]  
 [ pad { ones | zeros | random | hex-data *hexData* } ]  
 [ reply mode { ipv4-udp | ipv4-udp-with-router-alert } ]  
 [ reply pad-tlv ] [ reply dscp *trafficClass* ]  
 [ interval *txdelayVal* ] [ exp-bits *bitValue* ] [ bottom-label-ttl *bottomLabelTtl* ]  
 [ detail ]

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Sends an MPLS echo request packet to the specified layer 2 cross-connect virtual (Martini) circuit or, alternatively, sends MPLS echo packets to the egress node in a point-to-multipoint LSP. There is no **no** version.

The echo request packet generated by this command contains the FEC 128 Pseudowire (Current) sub-TLV described in RFC 4379—Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures (February 2006).



**NOTE:** This command is not supported for local cross-connects because local cross-connects do not employ an LSP.

The MPLS echo request packets and echo reply packets created by this command to detect connectivity to egress nodes in point-to-multipoint LSPs use the P2MP Responder Identifier TLV described in the IETF draft, Detecting Data Plane Failures in Point-to-Multipoint Multiprotocol Label Switching (MPLS) - Extensions to LSP Ping—draft-ietf-mpls-p2mp-lsp-ping-08.txt (February 2010 expiration).

- Options**
- *vrfName*—Name of the VRF context; when you specify a VRF name, the ping is generated from the specified VRF—for that reason the MPLS shim interface must exist in the VRF
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *startIpAddress*—First IP address within the 127.0.0.0/8 destination range
  - *endIpAddress*—Last IP address within the 127.0.0.0/8 destination range
  - *increment*—Number in the range 0–255 that specifies the increment between addresses in the destination address range
  - *sourceAddr*—IP address used as the packet source address

- *repeat*—Specifies that multiple ping packets are sent
- *packetCount*—Number of packets to send to the destination address, in the range 0–4294967295; default value is 5; 0 means ping forever
- *ttlValue*—Hop count specified by setting the time-to-live field in the header, in the range 1–255; default value is 32; however, by default, the TTL on the inner (stacked) label is set to 1 while transmitting the echo request packet, which causes the packet to be exceptioned to the SRP module when the stacked label is exposed
- *timeOutVal*—Number of seconds in the range 1–32 to wait for an MPLS echo reply packet before the connection attempt times out
- *dataSize*—Number of bytes comprising the MPLS packet, including the header, in the range 0–64000; default value is 100 bytes
- *sweep-sizes*—Configures payload sizes, enabling you to vary the sizes of the echo packets being sent. This capability is useful for determining the minimum sizes of the MTUs configured on the nodes along the path to the destination address. This reduces packet fragmentation which contributes to performance problems. The default is not to sweep; all packets are the same size.
  - *sweepMin*—Minimum payload size in the range 0–64000
  - *sweepMax*—Maximum payload size in the range 0–64000
  - *sweepInt*—Number of bytes to add to the size of the packet; the change in the size of subsequent ping packets while sweeping across a range of sizes. For example, you can configure the sweep interval to sweep across the range of packets from 0 bytes to 10,000 bytes in increments of *sweepInt*. By default, send 100, 101, 102, 103...1000. If *sweepInt* is 5, send 100, 105, 110, 115...1000). When “sweeping,” the default interval is 1.
- *pad*—Specifies the type of bits contained in the pad TLV. You can set the bits to all ones, all zeros, a random mixture of ones and zeros, or a specific hexadecimal data pattern, in the range from 0x0–0xFFFFFFFF. The default data pattern is all zeros.
- *reply mode*—Specifies the reply mode for the echo request packet
  - *ipv4-udp*—Specifies that the echo request packet is an IPv4 UDP packet
  - *ipv4-udp-with-router-alert*—Specifies that the echo request packet is an IPv4 UDP packet with the router alert bit set in the header so all routers examine this packet more closely to determine whether further processing is necessary
- *reply pad-tlv*—Requests sender of an echo reply to send a pad TLV
- *trafficClass*—Number in the range 0–255 that represents the value of the traffic class that the sender of an echo reply is requested to set
- *txDelayVal*—Number of milliseconds in the range 1–50 between transmission of each echo request; default value is 10 ms
- *bitValue*—Value of the EXP bits in the range 0–7 included in the MPLS echo request packet

- *bottomLabelTtl*—Time-to-live value of the bottom label in the stack
- *detail*—Displays detailed information about MPLS echo request sent and echo replies received

**Mode** Privileged Exec, User Exec

## ping mpls l3vpn

**Syntax** ping mpls l3vpn [ vrf *vrfName* ]  
 { *targetAddress targetMask* | *targetIpv6Prefix* }  
 [ destination *startIpAddress endIpAddress increment* ]  
 [ source address *sourceAddr* ] [ [ repeat ] *packetCount* ]  
 [ ttl *tvlValue* ] [ timeout *timeOutVal* ]  
 [ data-size *dataSize* | sweep-sizes *sweepMin sweepMax sweepInt* ]  
 [ pad { ones | zeros | random | hex-data *hexData* } ]  
 [ reply mode { ipv4-udp | ipv4-udp-with-router-alert } ]  
 [ reply pad-tlv ] [ reply dscp *trafficClass* ]  
 [ interval *txdelayVal* ] [ exp-bits *bitValue* ] [ bottom-label-ttl *bottomLabelTtl* ]  
 [ detail ]

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Sends an MPLS echo request packet to the specified L3VPN IP or IPv6 prefix, or alternatively, sends MPLS echo packets to the egress node in a point-to-multipoint LSP. There is no **no** version.

The echo request packet generated by this command contains either the VPN IPv4 sub-TLV or VPN IPv6 sub-TLV described in RFC 4379—Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures (February 2006). Which sub-TLV is included depends on whether the ping is intended for an IPv4 prefix or an IPv6 prefix.

You can use this command to send a request to a VPNv4 prefix in the specified VRF. If you do not specify a VRF, then you must issue the command from the VRF context. In any case, the ping originates from the parent router.

The MPLS echo request packets and echo reply packets created by this command to detect connectivity to egress nodes in point-to-multipoint LSPs use the P2MP Responder Identifier TLV described in the IETF draft, Detecting Data Plane Failures in Point-to-Multipoint Multiprotocol Label Switching (MPLS) - Extensions to LSP Ping—draft-ietf-mpls-p2mp-lsp-ping-08.txt (February 2010 expiration).

- Options**
- *vrfName*—Name of the VRF context
  - *targetAddress*—IP address of the target VPN network
  - *targetMask*—Netmask for the target address
  - *targetIpv6Prefix*—IPv6 prefix for the target VPN network
  - *startIpAddress*—First IP address within the 127.0.0.0/8 destination range
  - *endIpAddress*—Last IP address within the 127.0.0.0/8 destination range
  - *increment*—Number in the range 0–255 that specifies the increment between addresses in the destination address range
  - *sourceAddr*—IP address used as the packet source address
  - repeat—Specifies that multiple ping packets are sent

- *packetCount*—Number of packets to send to the destination address, in the range 0–4294967295; default value is 5; 0 means ping forever
- *ttlValue*—Hop count specified by setting the time-to-live field in the header, in the range 1–255; default value is 32
- *timeOutVal*—Number of seconds in the range 1–32 to wait for an MPLS echo reply packet before the connection attempt times out
- *dataSize*—Number of bytes comprising the MPLS packet, including the header, in the range 0–64000; default value is 100 bytes
- *sweep-sizes*—Configures payload sizes, enabling you to vary the sizes of the echo packets being sent. This capability is useful for determining the minimum sizes of the MTUs configured on the nodes along the path to the destination address. This reduces packet fragmentation which contributes to performance problems. The default is not to sweep; all packets are the same size.
  - *sweepMin*—Minimum payload size in the range 0–64000
  - *sweepMax*—Maximum payload size in the range 0–64000
  - *sweepInt*—Number of bytes to add to the size of the packet; the change in the size of subsequent ping packets while sweeping across a range of sizes. For example, you can configure the sweep interval to sweep across the range of packets from 0 bytes to 10,000 bytes in increments of *sweepInt*. By default, send 100, 101, 102, 103...1000. If *sweepInt* is 5, send 100, 105, 110, 115...1000). When “sweeping,” the default interval is 1.
- *pad*—Specifies the type of bits contained in the pad TLV. You can set the bits to all ones, all zeros, a random mixture of ones and zeros, or a specific hexadecimal data pattern, in the range from 0x0–0xFFFFFFFF. The default data pattern is all zeros.
- *reply mode*—Specifies the reply mode for the echo request packet
  - *ipv4-udp*—Specifies that the echo request packet is an IPv4 UDP packet
  - *ipv4-udp-with-router-alert*—Specifies that the echo request packet is an IPv4 UDP packet with the router alert bit set in the header so all routers examine this packet more closely to determine whether further processing is necessary
- *reply pad-tlv*—Requests sender of an echo reply to send a pad TLV
- *trafficClass*—Number in the range 0–255 that represents the value of the traffic class that the sender of an echo reply is requested to set
- *txDelayVal*—Number of milliseconds in the range 1–50 between transmission of each echo request; default value is 10 ms
- *bitValue*—Value of the EXP bits in the range 0–7 included in the MPLS echo request packet
- *bottomLabelTtl*—Time-to-live value of the bottom label in the stack
- *detail*—Displays detailed information about MPLS echo request sent and echo replies received

**Mode** Privileged Exec, User Exec



## ping mpls rsvp tunnel

**Syntax** ping mpls { traffic-eng | rsvp } [ vrf *vrfName* ] tunnel *tunnelName*  
 [ destination *startIpAddress endIpAddress increment* ]  
 [ source address *sourceAddr* ] [ [ repeat ] *packetCount* ]  
 [ ttl *ttlValue* ] [ timeout *timeOutVal* ]  
 [ data-size *dataSize* | sweep-sizes *sweepMin sweepMax sweepInt* ]  
 [ pad { ones | zeros | random | hex-data *hexData* } ]  
 [ reply mode { ipv4-udp | ipv4-udp-with-router-alert } ]  
 [ reply pad-tlv ] [ reply dscp *trafficClass* ]  
 [ interval *txdelayVal* ] [ exp-bits *bitValue* ] [ detail ]

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Sends an MPLS echo request packet to the specified RSVP-TE tunnel, or alternatively, sends MPLS echo packets to the egress node in a point-to-multipoint LSP. There is no **no** version.

The MPLS echo request packets and echo reply packets created by this command use the RSVP IPv4 sub-TLV described in RFC 4379—Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures (February 2006).

The MPLS echo request packets and echo reply packets created by this command to detect connectivity to egress nodes in point-to-multipoint LSPs use the P2MP Responder Identifier TLV described in the IETF draft, Detecting Data Plane Failures in Point-to-Multipoint Multiprotocol Label Switching (MPLS) - Extensions to LSP Ping—draft-ietf-mpls-p2mp-lsp-ping-08.txt (February 2010 expiration).

- Options**
- **traffic-eng**—Specifies optional keyword for compatibility with non-E Series implementations
  - **vrfName**—Name of the VRF context; specify the VRF only when the RSVP-TE tunnel originates in the VRF because the ping is generated from the specified VRF
  - **tunnelName**—Name of the RSVP-TE tunnel; can be a bypass tunnel
  - **startIpAddress**—First IP address within the 127.0.0.0/8 destination range
  - **endIpAddress**—Last IP address within the 127.0.0.0/8 destination range
  - **increment**—Number in the range 0–255 that specifies the increment between addresses in the destination address range
  - **sourceAddr**—IP address used as the packet source address
  - **repeat**—Specifies that multiple ping packets are sent
  - **packetCount**—Number of packets to send to the destination address, in the range 0–4294967295; default value is 5; 0 means ping forever
  - **ttlValue**—Hop count specified by setting the time-to-live field in the header in the range 1–255; default value is 32

- *timeOutVal*—Number of seconds in the range 1–32 to wait for an MPLS echo reply packet before the connection attempt times out
- *dataSize*—Number of bytes comprising the MPLS packet, including the header, in the range 0–64000; default value is 100 bytes
- *sweep-sizes*—Configures payload sizes, enabling you to vary the sizes of the echo packets being sent. This capability is useful for determining the minimum sizes of the MTUs configured on the nodes along the path to the destination address. This reduces packet fragmentation which contributes to performance problems. The default is not to sweep; all packets are the same size.
  - *sweepMin*—Minimum payload size in the range 0–64000
  - *sweepMax*—Maximum payload size in the range 0–64000
  - *sweepInt*—Number of bytes to add to the size of the packet; the change in the size of subsequent ping packets while sweeping across a range of sizes. For example, you can configure the sweep interval to sweep across the range of packets from 0 bytes to 10,000 bytes in increments of *sweepInt*. By default, send 100, 101, 102, 103...1000. If *sweepInt* is 5, send 100, 105, 110, 115...1000). When “sweeping,” the default interval is 1.
- *pad*—Specifies the type of bits contained in the pad TLV. You can set the bits to all ones, all zeros, a random mixture of ones and zeros, or a specific hexadecimal data pattern, in the range from 0x0–0xFFFFFFFF. The default data pattern is all zeros.
- *reply mode*—Specifies the reply mode for the echo request packet
  - *ipv4-udp*—Specifies that the echo request packet is an IPv4 UDP packet
  - *ipv4-udp-with-router-alert*—Specifies that the echo request packet is an IPv4 UDP packet with the router alert bit set in the header so all routers examine this packet more closely to determine whether further processing is necessary
- *reply pad-tlv*—Requests sender of an echo reply to send a pad TLV
- *trafficClass*—Number in the range 0–255 that represents the value of the traffic class that the sender of an echo reply is requested to set
- *txDelayVal*—Number of milliseconds in the range 1–50 between transmission of each echo request; default value is 10 ms
- *bitValue*—Value of the EXP bits in the range 0–7 included in the MPLS echo request packet
- *detail*—Displays detailed information about MPLS echo request sent and echo replies received

**Mode** Privileged Exec, User Exec

## ping mpls vpls

**Syntax** ping mpls vpls [ vrf *vrfName* ] *vplsName*  
 [ sender-site-id *senderSiteId* ] remote-site-id *remoteSiteId*  
 [ destination *startIpAddress endIpAddress increment* ]  
 [ source address *sourceAddr* ] [ [ repeat ] *packetCount* ]  
 [ ttl *ttlValue* ] [ timeout *timeOutVal* ]  
 [ data-size *dataSize* | sweep-sizes *sweepMin sweepMax sweepInt* ]  
 [ pad { ones | zeros | random | hex-data *hexData* } ]  
 [ reply mode { ipv4-udp | ipv4-udp-with-router-alert } ]  
 [ reply pad-tlv ] [ reply dscp *trafficClass* ]  
 [ interval *txdelayVal* ] [ exp-bits *bitValue* ] [ bottom-label-ttl *bottomLabelTtl* ]  
 [ detail ]

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Sends an MPLS echo request packet to the specified VPLS instance, or alternatively, sends MPLS echo packets to the egress node in a point-to-multipoint LSP. There is no **no** version.

The echo request packet generated by this command contains the layer 2 VPN endpoint sub-TLV described in RFC 4379—Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures (February 2006).

The MPLS echo request packets and echo reply packets created by this command to detect connectivity to egress nodes in point-to-multipoint LSPs use the P2MP Responder Identifier TLV described in the IETF draft, Detecting Data Plane Failures in Point-to-Multipoint Multiprotocol Label Switching (MPLS) - Extensions to LSP Ping—draft-ietf-mpls-p2mp-lsp-ping-08.txt (February 2010 expiration).

- Options**
- *vrfName*—Name of the VRF context from which to generate the ping
  - *vplsName*—Name of a VPLS instance created with the bridge vpls transport-virtual-router command
  - *senderSiteId*—Numerical identifier for the site sending the MPLS echo request packet; must be an unsigned 16-bit integer greater than zero that is unique across the VPLS domain
  - *remoteSiteId*—Numerical identifier for the site receiving the MPLS echo request packet; must be an unsigned 16-bit integer greater than zero that is unique across the VPLS domain
  - *startIpAddress*—First IP address within the 127.0.0.0/8 destination range
  - *endIpAddress*—Last IP address within the 127.0.0.0/8 destination range
  - *increment*—Number in the range 0–255 that specifies the increment between addresses in the destination address range
  - *sourceAddr*—IP address used as the packet source address
  - repeat—Specifies that multiple ping packets are sent

- *packetCount*—Number of packets to send to the destination address, in the range 0–4294967295; default value is 5; 0 means ping forever
- *ttlValue*—Hop count specified by setting the time-to-live field in the header, in the range 1–255; default value is 32; however, by default, the TTL on the inner (stacked) label is set to 1 while transmitting the echo request packet, which causes the packet to be exceptioned to the SRP module when the stacked label is exposed
- *timeOutVal*—Number of seconds, in the range 1–32 to wait for an MPLS echo reply packet before the connection attempt times out
- *dataSize*—Number of bytes comprising the MPLS packet, including the header, in the range 0–64000; default value is 100 bytes
- *sweep-sizes*—Configures payload sizes, enabling you to vary the sizes of the echo packets being sent. This capability is useful for determining the minimum sizes of the MTUs configured on the nodes along the path to the destination address. This reduces packet fragmentation which contributes to performance problems. The default is not to sweep; all packets are the same size.
  - *sweepMin*—Minimum payload size in the range 0–64000
  - *sweepMax*—Maximum payload size in the range 0–64000
  - *sweepInt*—Number of bytes to add to the size of the packet; the change in the size of subsequent ping packets while sweeping across a range of sizes. For example, you can configure the sweep interval to sweep across the range of packets from 0 bytes to 10,000 bytes in increments of *sweepInt*. By default, send 100, 101, 102, 103...1000. If *sweepInt* is 5, send 100, 105, 110, 115...1000). When “sweeping,” the default interval is 1.
- *pad*—Specifies the type of bits contained in the pad TLV. You can set the bits to all ones, all zeros, a random mixture of ones and zeros, or a specific hexadecimal data pattern, in the range from 0x0–0xFFFFFFFF. The default data pattern is all zeros.
- *reply mode*—Specifies the reply mode for the echo request packet
  - *ipv4-udp*—Specifies that the echo request packet is an IPv4 UDP packet
  - *ipv4-udp-with-router-alert*—Specifies that the echo request packet is an IPv4 UDP packet with the router alert bit set in the header so all routers examine this packet more closely to determine whether further processing is necessary
- *reply pad-tlv*—Requests sender of an echo reply to send a pad TLV
- *trafficClass*—Number in the range 0–255 that represents the value of the traffic class that the sender of an echo reply is requested to set
- *txDelayVal*—Number of milliseconds in the range 1–50 between transmission of each echo request; default value is 10 ms
- *bitValue*—Value of the EXP bits in the range 0–7 included in the MPLS echo request packet

- *bottomLabelTtl*—Time-to-live value of the bottom label in the stack
- *detail*—Displays detailed information about MPLS echo request sent and echo replies received

**Mode** Privileged Exec, User Exec

## policer

---

**Syntax**    `policer protocol protocolValue rate rateSize burst-size burstSize`  
              `no policer protocol protocolValue`

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Configures token bucket policing to rate limit SRP module traffic flows. The **no** version disables policing for a specific protocol or for all protocols.

- Options**
- *protocolValue*—Name of the protocol
  - *rateSize*—Rate, in packets per second in the range 0–10000
  - *burstSize*—Size, in bytes, in the range 0–10000

**Mode**    Control Plane Configuration

**Related Documentation**

- Rate-Limiting Traffic Flows

## policy-parameter hierarchical

---

**Syntax**    `policy-parameter parameterName hierarchical`  
              `no policy-parameter parameterName`

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Creates a policy parameter for a hierarchical rate limit. The **no** version removes the policy parameter and its contents.

**Options**    • *parameterName*—Name of policy parameter

**Mode**    Global Configuration

**Related Documentation**    • Creating a Classifier Group for a Policy List

## pos description

---

**Syntax**    pos description *name*

             no pos description

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns a text description or an alias to a POS HDLC interface. Use the [show interfaces pos](#) command to display the text description. The **no** version removes the description or alias.

**Options**    • *name*—Text string or alias of up to 80 characters for the POS interface

**Mode**    Interface Configuration



## pos framing

---

**Syntax**    pos framing { sdh | sonet }

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the type of framing for a POS interface. There is no **no** version.

- Options**
- sdh—Uses SDH framing format
  - sonet—Uses SONET framing format (the default)

**Mode**    Interface Configuration

## pos scramble-atm

---

**Syntax** [ no ] pos scramble-atm

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables payload scrambling on a POS interface. When enabled, both sides of the connection must be using the scrambling algorithm. The router uses a 43rd-order synchronous scrambler to scramble the output data. Scrambling is enabled by default. The **no** version disables scrambling on the POS interface.

**Mode** Interface Configuration

## ppp aaa-profile

---

**Syntax**    `ppp aaa-profile profileName`  
              `no ppp aaa-profile`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Maps an AAA profile to static and dynamic, multilink and nonmultilink PPP interfaces.  
                    The **no** version removes the AAA profile assignment to the PPP interface.

**Options**    • *profileName*—Name of the AAA profile; 32 characters maximum

**Mode**    Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp authentication

---

**Syntax**    ppp authentication [ virtual-router *vrName* ] { *authProtocol* }  
              no ppp authentication

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **eap** keyword added in JunosE Release 7.3.0.

**Description**    Requests authentication from a PPP peer router. The **no** version removes the authentication requirement.

- Options**
- *vrName*—Name of a virtual router to be used as the authentication virtual router
  - *authProtocol*—One or more of the following protocols, in order of preference; if the peer router refuses to negotiate the first choice, then the local router requests the next specified protocol, and so on; if the peer router refuses to negotiate authentication, the local router terminates the session
    - eap—Specifies EAP authentication protocol
    - chap—Specifies CHAP authentication protocol
    - pap—Specifies PAP authentication protocol

**Mode**    Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp chap-challenge-length

**Syntax**    `ppp chap-challenge-length minLength maxLength`  
               `no ppp chap-challenge-length`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Modifies the length of the CHAP challenge by specifying the minimum and maximum allowable length. The **no** version restores the defaults.



**CAUTION:** Do *not* use the `ppp chap-challenge-length` command; increasing the minimum length (from the default 16 bytes) or decreasing the maximum length (from the default 32 bytes) reduces the security of your router.

- Options**
- *minLength*—Minimum length of the CHAP challenge in bytes, in the range 8–63; default value is 16 bytes
  - *maxLength*—Maximum length of the CHAP challenge in bytes, in the range 8–63; value must be equal to or greater than the minimum length; default value is 32 bytes

**Mode**    Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp description

---

**Syntax**    ppp description *name*  
              no ppp description

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns a text description or an alias to a static PPP interface. The **no** version removes the text description or alias.

**Options**    • *name*—Text description or alias for the ppp interface; up to 64 characters

**Mode**    Interface Configuration, Subinterface Configuration

## ppp dos-protection-group

---

**Syntax**    `ppp dos-protection-group groupName`  
              `no ppp dos-protection-group`

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Attaches a PPP denial of service (DoS) protection group to an interface. The **no** version removes the attachment of the DoS protection group from the interface.

**Options**    • *groupName*—Name of the DoS protection group; string of up to 31 alphanumeric characters

**Mode**    Interface Configuration

## ppp fragmentation

---

**Syntax**    ppp fragmentation [ *fragmentSize* ]

no ppp fragmentation

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables fragmentation on an MLPPP link interface and optionally specifies the maximum fragment size, in octets, to be used on the link. The **no** version disables fragmentation on the link and restores the default fragment size, which is the link's MTU.

**Options**    • *fragmentSize*—Maximum allowable size of the fragment, in the range 128–65535; the default fragment size is the link's MTU

**Mode**    Interface Configuration, Profile Configuration, Subinterface Configuration



## ppp hash-link-selection

---

**Syntax** [ no ] ppp hash-link-selection

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Enables use of a hash-based algorithm to select the link on which the router transmits high-priority (non-best-effort) packets, such as voice or video, on an MLPPP interface. If hash-based link selection is enabled, the router uses the IP source address and IP destination address of the packet as a hash to select the MLPPP member link on which to transmit the packet. Using the hash-based algorithm instead of the default round-robin algorithm for MLPPP link selection ensures that the router maintains the proper packet order when transmitting high-priority packets. The **no** version restores the default round-robin algorithm for MLPPP link selection.

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp initiate-ip

---

**Syntax** [ no ] ppp initiate-ip

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Initiates IPv4 for passive clients. By default, PPP creates IP instances when it receives client requests. The **no** version disables initiation.

Passive PPP clients are those subscribers configured with passive mode on dynamic or static PPP interfaces using the **ppp passive-mode** command. By default, passive mode is enabled on a PPP interface. Passive mode causes the PPP interfaces to wait for a period of one second before initiating LCP negotiation. This waiting period enables slow clients to start up and initiate LCP negotiation. Active PPP clients initiate the LCP negotiation process without waiting for the other side of the connection to initiate the negotiation.

If you configure a PPP interface without an IP interface or profile by not entering the **ppp initiate-ip** command, the router performs LCP negotiation for 2 to 3 minutes for passive clients. LCP negotiation is terminated after this period. To enable LCP negotiations to continue to occur for passive clients, you must enter the **ppp initiate-ip** command to enable PPP to create IP instances.

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

**Related Documentation**

- *Link Control Protocol* in the *JunosE Link Layer Configuration Guide*

## ppp initiate-ipv6

---

**Syntax** [ no ] ppp initiate-ipv6

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Initiates IPv6 for passive clients. By default, PPP creates IPv6 instances when it receives client requests. The **no** version disables initiation.

Passive PPP clients are those subscribers configured with passive mode on dynamic or static PPP interfaces using the **ppp passive-mode** command. By default, passive mode is enabled on a PPP interface. Passive mode causes the PPP interfaces to wait for a period of one second before initiating LCP negotiation. This waiting period enables slow clients to start up and initiate LCP negotiation. Active PPP clients initiate the LCP negotiation process without waiting for the other side of the connection to initiate the negotiation.

If you configure a PPP interface without an IPv6 interface or profile by not entering the **ppp initiate-ipv6** command, the router performs LCP negotiation for 2 to 3 minutes for passive clients. LCP negotiation is terminated after this period. To enable LCP negotiations to continue to occur for passive clients, you must enter the **ppp initiate-ipv6** command to enable PPP to create IP instances.

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp ipcp logout

---

**Syntax** [ no ] ppp ipcp logout

**Release Information** Command introduced in JunosE Release 11.0.0.

**Description** Terminates invalid IPv4 subscribers and prevents additional IPCP negotiations. The subscriber can negotiate IPv4 addresses, IPv6 addresses, or both. When Internet Protocol version 6 Control Protocol (IPv6CP) is active, this command enables unused IPv4 addresses, which are allocated for the IPv6 subscribers, to be available for the IPCP services for an internally defined time interval (10 seconds). When the time interval elapses, the subscriber must connect again to negotiate IPCP. The **no** version disables the logout option.

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp ipcp netmask

---

**Syntax** [ no ] ppp ipcp netmask

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Explicitly enables the IPCP option 0x90 on a per-PPP interface basis, either in a profile or on a static interface. By default, the IPCP option 0x90 is disabled on the interface. The **no** version disables the IPCP option 0x90.

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp ipcp prompt-option dns

---

**Syntax** [ no ] ppp ipcp prompt-option dns

**Release Information** Command introduced in JunosE Release 11.0.0

**Description** Prompts the CPE (Customer Premises Equipment) to negotiate the IPCP primary and secondary DNS options that are locally available with the broadband remote access server

**Mode** Interface Configuration, Profile Configuration

## ppp keepalive

---

**Syntax**    ppp keepalive [ *seconds* ]

no ppp keepalive

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies a keepalive value. The keepalive mechanism tracks the status of the connection. To restore the default of 30 seconds, enter **ppp keepalive** without a value. High-density mode is automatically selected when PPP is layered over ATM, tunnel, or PPPoE. Low-density mode is selected when PPP is layered over HDLC. The **no** version disables keepalive.

**Options**    • *seconds*—Keepalive timeout period, in the range 30–64800 seconds for high-density mode, 1–64800 seconds for POS uplink interfaces in low-density mode, or 10–64800 seconds for all other HDLC interfaces in low-density mode; default value is 30 seconds

**Mode**    Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp log

---

**Syntax**    [ no ] ppp log *logCategory*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables PPP packet or state machine logging on any dynamic interface that uses the profile being configured. The **no** version disables the logging.

**Options**    • *logCategory*—One of the following categories

- pppPacket—Enables PPP packet logging
- pppStateMachine—Enables PPP state machine logging

**Mode**    Profile Configuration



## ppp magic-number disable

---

**Syntax** [ no ] ppp magic-number disable

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Disables negotiation of the local magic number. Issuing this command prevents the router from detecting loopback configurations. The **no** version enables negotiation.

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp magic-number ignore-mismatch

---

**Syntax** [ no ] ppp magic-number ignore-mismatch

**Release Information** Command introduced in JunosE Release 9.0.0.

**Description** Causes the router to ignore a mismatch of the Link Control Protocol (LCP) peer magic number and retain the PPP connection when the peer has not negotiated an LCP magic number. The **no** version restores the default behavior, in which the router terminates the PPP connection if it detects an LCP peer magic number mismatch.

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp max-bad-auth

---

**Syntax**    ppp max-bad-auth *maxBadAuth*  
              no ppp max-bad-auth

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the maximum number of authentication retries the router accepts before terminating a PPP session. The **no** version returns the value to the default.

**Options**    • *maxBadAuth*—Number of authentication retries after which the interface resets itself; in the range 0–7; default value is 0, which indicates that no retries are allowed

**Mode**    Interface Configuration, Subinterface Configuration

## ppp max-negotiations

---

**Syntax**    ppp max-negotiations [ lcp | ipcp | ipv6cp ] [ *maxNegotiationsCount* ]

no ppp max-negotiations [ lcp | ipcp | ipv6cp ]

**Release Information**    Command introduced in JunosE Release 10.0.0.

**Description**    Configures the maximum number of LCP, IPCP, or IPv6CP renegotiation attempts the router accepts before terminating a PPP session. If you do not specify the optional **lcp**, **ipcp**, or **ipv6cp** keyword, the command sets the maximum number of renegotiation attempts for each of LCP, IPCP, and IPv6CP to the value you specify, or to the default value (30) if you omit the optional *maxNegotiationsCount* value. When a PPP client exceeds the configured maximum number of renegotiation attempts, the router sends a termination request to end the PPP session. The **no** version restores the default value, 30 renegotiation attempts.

- Options**
- **lcp**—Sets the maximum number of renegotiation attempts for the Link Control Protocol (LCP)
  - **ipcp**—Sets the maximum number of renegotiation attempts for the Internet Protocol Control Protocol (IPCP)
  - **ipv6cp**—Sets the maximum number of renegotiation attempts for the Internet Protocol version 6 Control Protocol (IPv6CP)
  - *maxNegotiationsCount*—Maximum number of renegotiation attempts the router accepts before terminating a PPP session, in the range 1–65535; default value is 30

**Mode**    Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp mru

---

**Syntax**    `ppp mru mruSize`

`no ppp mru`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the maximum allowable size in bytes of the maximum receive unit for PPP or MLPPP interfaces. If you issue the command in the context of an encapsulated PPP or MLPPP interface, it affects only that interface. If you issue the command in the context of an MLPPP bundle, it affects all member links within that bundle. The **no** version restores the default value, the lower-layer MRU minus the PPP header length, which varies according to module type.

**Options**    • *mruSize*—Maximum allowable size of the MRU; number of bytes in the range 64–65535

**Mode**    Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp multilink enable

---

**Syntax** [ no ] ppp multilink enable

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables creation of dynamic MLPPP interfaces when used in a profile. The **no** version causes the LNS to reject any incoming requests to establish dynamic MLPPP interfaces.

**Mode** Profile Configuration

## ppp multilink multiclass

---

<b>Syntax</b>	<code>ppp multilink multiclass [ multilink-classes <i>classNumber</i> ]</code> <code>no ppp multilink multiclass [ multilink-classes ]</code>
<b>Release Information</b>	Command introduced in JunosE Release 11.1.0.
<b>Description</b>	Enables multiclass MLPPP on the router, and optionally creates a specified number of multilink classes. The <b>no</b> version without the <b>multilink-classes</b> keyword disables multiclass MLPPP on the router. The <b>no</b> version with the <b>multilink-classes</b> keyword restores the number of multilink classes to the default value, 1.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>classNumber</i>—Number of multilink classes that can be created in the range 1–8, with a default value of 1.</li></ul>
<b>Mode</b>	Interface Configuration, Profile Configuration, Subinterface Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Enabling Multiclass MLPPP</li><li>• Configuring Multiclass MLPPP</li></ul>

## ppp multilink multiclass fragmentation

---

**Syntax** [ no ] ppp multilink multiclass fragmentation [ *trafficClassName* ]\*

**Release Information** Command introduced in JunosE Release 11.1.0.

**Description** Enables fragmentation on a specified multilink class. The fragment size of each class is the same as that of the MLPPP link. The **no** version disables fragmentation on all multilink classes, or on the specified multilink classes if you include one or more traffic class names.

- Options**
- *trafficClassName*—Name of a QoS traffic class. You can enable fragmentation for up to eight traffic classes. You must specify the best-effort traffic class in the command or the command fails.
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

- Related Documentation**
- Configuring Fragmentation on Multiclass MLPPP Interfaces
  - Configuring Multiclass MLPPP



---

## ppp multilink multiclass reassembly

---

**Syntax** [ no ] ppp multilink multiclass reassembly [ *trafficClassName* ]\*

**Release Information** Command introduced in JunosE Release 11.1.0.

**Description** Enables reassembly on a specified multilink class. The maximum received reconstructed unit (MRRU) value of each class is the same as that of the MLPPP link. The **no** version disables reassembly on all multilink classes, or on the specified multilink classes if you include one or more traffic class names.

- Options**
- *trafficClassName*—Name of a QoS traffic class. You can enable reassembly for up to eight traffic classes. You must specify the best-effort traffic class in the command or the command fails.
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

- Related Documentation**
- Configuring Multiclass MLPPP
  - Configuring Reassembly on Multiclass MLPPP Interfaces

## ppp multilink multiclass traffic-class

---

<b>Syntax</b>	[ no ] ppp multilink multiclass traffic-class best-effort [ <i>trafficClassName</i> ]*
<b>Release Information</b>	Command introduced in JunosE Release 11.1.0.
<b>Description</b>	Configures mapping of QoS traffic classes to multilink classes. The <b>no</b> version deletes the mapping of QoS traffic classes to multilink classes.
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>best-effort</b>—Specifies best-effort as the default traffic class for the router. The best-effort traffic class forwards as many packets as possible in as reasonable a time as possible. The best-effort traffic class is mapped to multilink class 0 by default. You must specify the best-effort traffic class in the command or the command fails.</li><li>• <i>trafficClassName</i>—Name of a QoS traffic class. You can map up to eight traffic classes to multilink classes. The order of the traffic class names specified determines the multilink class number which is used for the traffic class; for example, <i>trafficClassName1</i> corresponds to multilink class 1, <i>trafficClassName2</i> corresponds to multilink class 2, and so on.</li><li>• <b>*</b>—Indicates that one or more parameters can be repeated multiple times in a list in the command line</li></ul>
<b>Mode</b>	Interface Configuration, Profile Configuration, Subinterface Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Configuring Multiclass MLPPP</li><li>• Configuring Traffic Classes on Multiclass MLPPP Interfaces</li></ul>

## ppp ncp-Ordering-Required

---

**Syntax** [ no ] ppp ncp-Ordering-Required

**Release Information** Command introduced in JunosE Release 12.3.0.

**Description** Enables PPP sessions to be established and packet over SONET (POS) interfaces that are configured with PPP encapsulation to be moved to the up state only when the Network Control Protocol (NCP) packets are received in a sequence format. If the NCP packets arrive out-of-sequence, the POS interfaces remain in the down state. By default, PPP sessions are established only when NCP packets arrive in a sequenced format. The **no** version enables PPP sessions to be activated even when the NCP packets arrive in an out-of-sequence format. In such a case, the POS interfaces with PPP encapsulation transition to the up state even when the NCP packets are out-of-sequence.

**Mode** Global Configuration

**Related Documentation**

- Overview of Sequencing NCP Packets for POS Interfaces with PPP Encapsulation
- Sequencing NCP Packets for POS Interfaces with PPP Encapsulation

## ppp passive-mode

---

**Syntax** [ no ] ppp passive-mode

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Forces dynamic and static PPP interfaces into passive mode before LCP negotiation begins for a period of one second, enabling slow clients time to start up and to initiate LCP negotiation. The **no** version disables passive mode.

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp peer

---

**Syntax** [ no ] ppp peer { dns | wins }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Resolves conflicts when the router and the PPP peer router have the primary and secondary DNS and WINS name server addresses configured with different values. If the PPP peer router has the address and the router does not, the peer always supplies the address regardless of how you have configured the PPP peer. The **no** version configures the router to take precedence during setup negotiations between the router and the remote personal computer client.

- Options**
- **dns**—Sets the peer to take precedence over the router for resolving conflicts in the DNS primary and secondary addresses
  - **wins**—Sets the peer to take precedence over the router for resolving conflicts in the WINS primary and secondary addresses

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp peer-ip-address-optional

---

**Syntax** [ no ] ppp peer-ip-address-optional

**Release Information** Command introduced in JunosE Release 11.2.0.

**Description** Allows the IPCP negotiation to succeed even though the peer does not include the IP address option in an IPCP configuration request. By default, the command is disabled.

**Mode** Global Configuration

## ppp reassembly

---

**Syntax**    ppp reassembly [ *mrru* ]  
              no ppp reassembly

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables reassembly on an MLPPP link interface and optionally specifies the administrative MRRU value, in octets, for the link. The **no** version disables reassembly on the link and restores the default value, which is the link's local MRU.

**Options**    • *mrru*—Maximum allowable size of the PPP packet payload that the router can receive, in the range 64–65535; default value is the link's local MRU

**Mode**    Interface Configuration, Profile Configuration, Subinterface Configuration

## ppp shutdown

---

**Syntax** [ no ] ppp shutdown [ ip | ipv6 | mpls | osi ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Stops a PPP session. For MLPPP, issue only in the context of a network interface; the command disables the service for the MLPPP network interface (MLPPP bundle). The **no** version restarts a PPP session.

- Options**
- ip—Disables the IPCP service
  - ipv6—Disables the IPv6CP service
  - mpls—Disables MPLS service
  - osi—Disables the OSINLCP service

**Mode** Interface Configuration, Subinterface Configuration



## pppoe

**Syntax** To create a PPPoE major interface in Interface Configuration mode or in Subinterface Configuration mode:

```
[ no ] pppoe
```

To modify the subscriber policy for PPPoE packets in Subscriber Policy Configuration mode:

```
pppoe { permit | deny }
```

```
no pppoe
```

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** In Interface Configuration and Subinterface Configuration modes, creates a PPPoE major interface. The **no** version removes the interface.

In Subscriber Policy Configuration mode, modifies the subscriber policy for PPPoE to define whether the subscriber (client) interfaces that belong to a bridge group or to a VPLS instance forward (permit) or filter (deny) PPPoE packets. The **no** version restores the default value, permit PPPoE packets.

In Subscriber Policy Configuration mode, you cannot change the default subscriber policy values for trunk (server) interfaces that belong to a bridge group or to a VPLS instance. You also cannot change the default subscriber policy values for a VPLS virtual core interface, which acts as a trunk interface. The VPLS virtual core interface represents all the MPLS tunnels from the router to the remote VPLS edge (VE) devices.

- Options**
- **permit**—Specifies that the subscriber interface associated with the bridge group or VPLS instance forwards PPPoE packets
  - **deny**—Specifies that the subscriber interface associated with the bridge group or VPLS instance filters PPPoE packets

**Mode** Interface Configuration, Subinterface Configuration, Subscriber Policy Configuration

## pppoe acName

---

**Syntax**    pppoe acName *string*  
              no pppoe acName

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Allows you to configure an access concentrator name for a PPPoE interface or profile. If no AC name is configured, the router name is used. The **no** version removes the access concentrator name.

**Options**    • *string*—AC name; 64 characters maximum

**Mode**    Interface Configuration, Profile Configuration

## pppoe always-offer

---

**Syntax** [ no ] pppoe always-offer

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets up the router to offer to set up a session, even if the router has insufficient resources to establish a session. The **no** version disables this feature, and is the default setting.

**Mode** Profile Configuration, Subinterface Configuration

## pppoe auto-configure

---

**Syntax**    pppoe auto-configure [ lockout-time { *minValue* *maxValue* | none } ]

no pppoe auto-configure

**Release Information**    Command introduced before JunosE Release 7.1.0.  
**lockout-time** keyword, *minValue* variable, *maxValue* variable, and **none** keyword added in JunosE Release 7.2.0.

**Description**    Configures the router to dynamically create PPPoE subinterfaces over static PPPoE major interfaces. Optionally, specifies the lockout time range for the PPPoE clients associated with the dynamic PPPoE subinterface column on the PPPoE major interface. The **no** version terminates dynamic creation of PPPoE subinterfaces on the static PPPoE major interface.

- Options**
- *minValue*—Minimum lockout time, in the range 1–86400 seconds (24 hours)
  - *maxValue*—Maximum lockout time, in the range 1–86400 seconds (24 hours)
  - **none**—Disables lockout for the PPPoE clients associated with the dynamic PPPoE subinterface column on the static PPPoE major interface; this is the default value

**Mode**    Interface Configuration, Subinterface Configuration

## pppoe clear lockout interface

**Syntax** pppoe clear lockout interface *interfaceType interfaceSpecifier macAddress*

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** In configurations with dynamic PPPoE subinterfaces over static PPPoE major interfaces, clears the lockout condition configured for the individual PPPoE client associated with the specified source media access control (MAC) address.

There is no **no** version.

- Options**
- *interfaceType*—One of the following interface types listed in [“Interface Types and Specifiers” on page 5](#):
    - atm
    - fastEthernet
    - gigabitEthernet
    - lag
    - serial—PPPoE is not currently supported on serial interfaces
    - tenGigabitEthernet
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *macAddress*—Source MAC address of the PPPoE client; a unique 48-bit (6-byte) number that is programmed into each LAN network interface card (NIC) at the time of manufacture; also known as a hardware address or physical address. The MAC address format is a dotted triple of four-digit hexadecimal numbers; for example, 0090.1a40.4c7c

**Mode** Privileged Exec

## pppoe dos-protection-group

---

**Syntax**    pppoe dos-protection-group *groupName*  
              no pppoe dos-protection-group

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Attaches a PPPoE denial of service (DoS) protection group to an interface. The **no** version removes the attachment of the DoS protection group from the interface.

**Options**    • *groupName*—Name of the DoS protection group; string of up to 31 alphanumeric characters

**Mode**    Interface Configuration

## pppoe duplicate-protection

---

**Syntax** [ no ] pppoe duplicate-protection

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets up the router to prevent a client from establishing more than one session using the same MAC address. The **no** version disables this feature, and is the default setting for PPPoE sessions that do not contain the IWF-Session DSL VSA (26–254) in the PPPoE Active Discovery Request (PADR) packet sent from PPPoE clients to the access concentrator.

**Mode** Profile Configuration, Subinterface Configuration

## pppoe log pppoeControlPacket

---

**Syntax** [ no ] pppoe log pppoeControlPacket

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables packet trace logging on PPPoE dynamic interfaces that are created with the profile being configured. Packet trace information is logged to the pppoeControlPacket log. The **no** version disables the logging.

**Mode** Profile Configuration



## pppoe max-session-vsa

**Syntax**    pppoe max-session-vsa { override | ignore }  
               no pppoe max-session-vsa override

**Release Information**    Command introduced in JunosE Release 9.3.0.

**Description**    Configures the PPPoE application to override the current PPPoE maximum session value set with the **pppoe sessions** command with the PPPoE maximum session value returned by the RADIUS server in the Max-Clients-Per-Interface VSA [26-143] in Access-Accept messages. The **no** version restores the default behavior, which ignores the PPPoE maximum session value returned by RADIUS.



**NOTE:** The router never overrides the maximum number of PPPoE subinterfaces supported per line module with a value from RADIUS that is either 0 (zero) or greater than the maximum number of supported PPPoE subinterfaces. See *JunosE Release Notes, Appendix A, System Maximums* corresponding to your software release for information about the maximum number of PPPoE subinterfaces supported for each line module.

**Mode**    Interface Configuration, Profile Configuration, Subinterface Configuration

## pppoe motm

---

**Syntax**    pppoe motm *string*  
              no pppoe motm

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Causes the PPPoE application to send a PADM message of the minute message. The **no** version disables the message.

The recipient of the message is determined by the mode from which the command is issued. From Privileged Exec mode the message is sent to all PPPoE clients connected to the router; from Interface Configuration mode the PADM message is sent to the client as it is configured (if connected); and from Profile Configuration mode the message is sent to the new client created when the profile is dynamically attached to an IP interface. The MOTM string is passed with no changes.

**Options**    • *string*—Message sent

**Mode**    Interface Configuration, Privileged Exec, Profile Configuration

## pppoe mtu

---

**Syntax**    pppoe mtu { *maximumMtu* | use-lower-layer | use-mtu-tag }  
              no pppoe mtu

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Enables you to control the deployment of larger packet sizes. The **no** version restores the default behavior, which specifies a maximum MTU value.

- Options**
- *maximumMtu*—Maximum transfer unit parameter in bytes, in the range 66-65535 with the default value 1494
  - use-lower-layer—Specifies use of the lower layer interface value minus any PPPoE overhead
  - use-mtu-tag—Specifies use of the provided PPPoE mtu tag value

**Mode**    Interface Configuration, Profile Configuration, Subinterface Configuration

## pppoe pads disable-ac-info

---

**Syntax** [ no ] pppoe pads disable-ac-info

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Prevents the router from sending the AC-Name and AC-Cookie tags in the PPPoE Active Discovery Session (PADS) packet. The **pppoe pads disable-ac-info** command affects PADS packets sent on all PPPoE interfaces configured on the router after the command is issued; it has no effect on previously created PPPoE interfaces. The **no** version restores the default behavior, which is to send the AC-Name and AC-Cookie tags in the PADS packet.

**Mode** Global Configuration

## pppoe profile

---

**Syntax** [ no ] pppoe profile [ bridgedEthernet | ip | ppp | pppoe | any ] *profileName*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Assigns a profile to a static PPPoE major interface. The profile configuration is used to dynamically configure an upper bridged Ethernet, IP, PPP, and/or PPPoE interface. The **no** version removes the profile assignment from the interface.

- Options**
- **bridgedEthernet**—Specifies a bridged Ethernet encapsulation type to which the profile applies
  - **ip**—Specifies an IP encapsulation type to which the profile applies
  - **ppp**—Specifies a PPP encapsulation type to which the profile applies
  - **pppoe**—Specifies a PPPoE encapsulation type to which the profile applies
  - **any**—Specifies any autoconfigured encapsulation that does not have a specific profile assignment
  - *profileName*—Profile name of up to 80 characters

**Mode** Interface Configuration, Subinterface Configuration

## pppoe remote-circuit-id

---

**Syntax** [ no ] pppoe remote-circuit-id

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables a static or dynamic PPPoE interface on the router to capture and process a vendor-specific tag containing a remote circuit ID transmitted from a DSLAM device. The router can then send this value to a RADIUS server or to an L2TP network server (LNS) to uniquely identify subscriber locations. The **no** version restores the default behavior, which is not to capture and process the remote circuit ID.

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

## pppoe service-name-table

---

**Syntax**    pppoe service-name-table *tableName*  
              no pppoe service-name-table

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    From Interface Configuration or Subinterface Configuration mode, assigns a PPPoE service name table to a PPPoE major interface for use by a static ATM or Ethernet interface. The **no** version removes the PPPoE service name table assignment.

From Profile Configuration mode, assigns a PPPoE service name table to a profile for use by the dynamic PPPoE interface column associated with the profile. The **no** version removes the PPPoE service name table assignment.

**Options**    • *tableName*—Name of the PPPoE service name table; string of up to 31 alphanumeric characters

**Mode**    Interface Configuration, Profile Configuration, Subinterface Configuration

## pppoe-service-name-table

---

**Syntax** [ no ] pppoe-service-name-table *tableName*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates a PPPoE service name table and accesses PPPoE Service Name Table Configuration mode, which enables you to configure entries for the PPPoE service name table. PPPoE clients use the entries in a PPPoE service name table to request that an AC, such as an E Series router, support certain services. The **no** version removes the specified PPPoE service name table from the router.

**Options**

- *tableName*—Name of the PPPoE service name table; string of up to 31 alphanumeric characters

**Mode** Global Configuration



## pppoe sessions

**Syntax** `pppoe sessions sessions`

`no pppoe sessions`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the number of subinterfaces permitted on a PPPoE interface. The command affects only subinterfaces that are created *after* the command is entered. *Previously* created interfaces remain, even if their number exceeds the new value of the parameter. The **no** version restores the default value, 8000 (ERX routers) and 16,000 (E120 and E320 routers). For ES2 10G ADV LM, the default value is 32,000 (E120 and E320 routers).

**Options**

- *sessions*—Number of subinterfaces permitted on the interface in the range 1–8000 (ERX routers) or 1–32,000 (E120 and E320 routers). On the ES2 10G ADV LM (E120 and E320 routers), you can have PPPoE subinterfaces in the range 1–32,000. The default value is 8000 (ERX routers) or 16,000 (E120 and E320 routers). For ES2 10G ADV LM, the default value is 32,000 (E120 and E320 routers).



**NOTE:** The number of subinterfaces permitted on the interface for E120 and E320 routers is in the range 1–32,000 irrespective of the type of line module. However, if you specify a value greater than the number of subinterfaces supported by a line module, the number of subinterfaces created is the default maximum value for that line module. For example, if you specify the number of subinterfaces for a ES2 4G LM as 32,000 interfaces, the number of subinterfaces created is 16,000, which is the default maximum value for the ES2 4G LM.

**Mode** Interface Configuration, Profile Configuration, Subinterface Configuration

## pppoe subinterface

---

**Syntax** [ no ] pppoe subinterface *interfaceType interfaceSpecifier*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates a PPPoE subinterface on the specified interface. The **no** version removes the interface.

- Options**
- *interfaceType*—One of the following interface types listed in [“Interface Types and Specifiers” on page 5](#):
    - atm
    - fastEthernet
    - gigabitEthernet
    - lag
    - serial—PPPoE is not currently supported on serial interfaces
    - tenGigabitEthernet
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)

**Mode** Global Configuration

## pppoe url

---

**Syntax**    `pppoe url url`  
              `no pppoe url`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Causes the PPPoE application to send a string to the new client. The **no** version disables the message.

The recipient of the message is determined by the mode from which the command is issued. From Interface Configuration mode the PADM message is sent to the client as it is configured (if connected). From Profile Configuration mode the message is sent to the new client created when the profile is dynamically attached to an IP interface.

**Options**    • *url*—URL string sent

**Mode**    Interface Configuration, Profile Configuration

## pre-authenticate

---

**Syntax** [ no ] pre-authenticate

**Release Information** Command introduced in JunosE Release 8.1.0.

**Description** Configures an AAA profile to support RADIUS preauthentication. During the preauthentication process, the router sends an Access-Request message to a RADIUS preauthentication server to obtain an AAA logical line identifier (LLID) for each subscriber. In response, the preauthentication server returns the LLID in the RADIUS Calling-Station-Id [31] attribute of an Access-Accept message. The **no** version removes preauthentication support from the AAA profile.

**Mode** AAA Profile Configuration

## preference

---

**Syntax**    *preference tunnelPreference*

*no preference*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the preference value for an L2TP tunnel. The **no** version restores the default value, 0.

**Options**    • *tunnelPreference*—Tunnel preference, in the range 0–2000; 0 is the highest preference

**Mode**    Domain Map Tunnel Configuration, Tunnel Group Tunnel Configuration

## prefix

**Syntax** `prefix startIpv6Prefix { assignedPrefixLength | endIpv6Prefix } [ [ preferred | valid ] { days [ hours [ minutes [ seconds ] ] ] | infinite } ]`

`no prefix startIpv6Prefix [ force | preferred [ valid ] | valid ]`

**Release Information** Command introduced in JunosE Release 10.1.0.

**Description** Specifies the prefix range from which IPv6 prefixes can be assigned to the DHCPv6 client. Also, configures the duration of time for which the requesting router can use the delegated prefix. If no value is specified for preferred or valid lifetime, the default lifetime of 1 day is used for the delegated prefix. The **no** version removes the IPv6 prefix range from the local address pool. You can also forcibly delete an IPv6 prefix range from which prefixes have been allocated.



**NOTE:** If you attempt to configure a prefix range that overlaps with an existing prefix range in the same pool, an error message is displayed and the configuration fails. Also, an error message is displayed if you try to configure a prefix range that overlaps with a prefix range in another IPv6 local address pool on the same virtual router.

- Options**
- *startIpv6Prefix*—Starting IPv6 prefix of the range of prefixes to be delegated to requesting routers.
  - *endIpv6Prefix*—Ending IPv6 prefix of the range of prefixes to be delegated to requesting routers.
  - *assignedPrefixLength*—Length of the IPv6 prefix to be assigned from this range of prefixes to the requesting router.
  - *preferred*—Specifies use of the preferred period of time for the requesting router to use the prefix delegated by the DHCPv6 server. If the preferred lifetime is not specified, the prefix can be used by the requesting router for the default period of 1 day.
  - *valid*—Specifies use of the valid period of time for the requesting router to use the prefix delegated by the DHCPv6 server. If the valid lifetime is not specified, the prefix can be used by the requesting router for the default period of 1 day.



**NOTE:** Although you can configure the valid lifetime for a prefix, the DHCPv6 server does not consider this value. The DHCPv6 server uses only the preferred lifetime for a prefix to determine the amount of time for which a prefix can be used by the requesting router.

- *days*—Number of days for the preferred or valid lifetime; in the range 0-32768.
- *hours*—Number of hours for the preferred or valid lifetime; in the range 0-24.

- *minutes*—Number of minutes for the preferred or valid lifetime; in the range 0-60.
- *seconds*—Number of seconds for the preferred or valid lifetime; in the range 0-60.
- *infinite*—Assigns a preferred or valid lifetime that does not expire for the delegated prefix.
- *force*—Forcibly deletes the IPv6 prefix range from the local address pool.

**Mode**    IPv6 Local Pool Configuration

## pre-share

---

**Syntax**    `pre-share key`  
  
              `no pre-share`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures an unencrypted (red) preshared key. The router uses this key to authenticate IKE negotiations that arrive from any remote IP address specified for this transport profile and that are destined for the local IP address specified. The **no** version removes the key.



.....  
**NOTE:** To have preshared key authentication take place, you must also specify the IKE policy rule as preshared by issuing the authentication command with the **pre-share** keyword in ISAKMP Policy Configuration mode.  
.....

**Options**    • *key*—Key value in ASCII format

**Mode**    Local IPSec Transport Profile Configuration



---

## pre-share-masked

---

**Syntax**    `pre-share-masked key`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies an encrypted (black) preshared key. The router uses this key to authenticate IKE negotiations that arrive from any remote IP address specified for this transport profile and that are destined for any local IP address specified for this transport profile. There is no **no** version. To remove a key, use the **no pre-share** command.



.....  
**NOTE:** To have preshared key authentication take place, you must also specify the IKE policy rule as preshared by issuing the authentication command with the **pre-share** keyword in ISAKMP Policy Configuration mode.  
.....

**Options**    • *key*—Encrypted key value; to obtain this value, enter the unencrypted key using the **pre-share** command and then display the encrypted version of the key using the **show configuration** command

**Mode**    Local IPSec Transport Profile Configuration

## priority burst

---

**Syntax**    *priority priorityValue burst burstSize*

*no priority priorityValue burst*

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Sets the burst size for each priority. The **no** version returns to the default value.

- Options**
- *priorityValue*—Hi-Green-IC, Hi-Green-SC, Hi-Yellow-IC, Hi-Yellow-SC, Lo-Green-IC, Lo-Green-SC, Lo-Yellow-IC, Lo-Yellow-SC
  - *burstSize*—Number of packets, in the range 32–65535; 0 denotes no burst size: default value is equal to half of the configured maximum rate

**Mode**    DoS Protection Group Configuration

## priority over-subscription-factor

---

**Syntax**    *priority priorityValue over-subscription-factor oversubscriptionValue*  
              *no priority priorityValue over-subscription-factor*

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Sets the oversubscription value for each priority rate limiter. The **no** version returns to the default value.

- Options**
- *priorityValue*—Hi-Green-IC, Hi-Green-SC, Hi-Yellow-IC, Hi-Yellow-SC, Lo-Green-IC, Lo-Green-SC, Lo-Yellow-IC, Lo-Yellow-SC
  - *oversubscriptionValue*—Percentage of packets in the range 100–1000; default value is 500

**Mode**    DoS Protection Group Configuration

## priority rate

---

**Syntax**    *priority priorityValue rate rateValue*  
              *no priority priorityValue rate*

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Sets the rate for each priority. The **no** version returns to the default value.

- Options**
- *priorityValue*—Hi-Green-IC, Hi-Green-SC, Hi-Yellow-IC, Hi-Yellow-SC, Lo-Green-IC, Lo-Green-SC, Lo-Yellow-IC, Lo-Yellow-SC
  - *rateValue*—Packets per second, in the range 64–65535

**Mode**    DoS Protection Group Configuration

## privilege

**Syntax** `privilege mode [ all ] level levelValue commandPrefix`  
`no privilege mode [ all ] [ level levelValue ] commandPrefix`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Assigns a privilege level to the specified command that appears in the specified mode. The **no** version sets the privilege level for the command to its default value and displays the default privilege level in the [show configuration](#) output.



**NOTE:** You must access the CLI at privilege level 15 to view or use this command. You cannot modify the privilege level of this command.

- Options**
- *mode*—Mode in which the command appears; for example, User Exec mode, Global Configuration mode, Router Configuration mode
  - *all*—Specifies that this command assigns the specified privilege level to all commands in the specified mode and/or to all commands that match the specified command prefix
  - *levelValue*—Level, in the range 0–15, at which you want the command to be accessible
  - *commandPrefix*—Command prefix that you want to change; can be a partial keyword, the starting keyword(s) of a command, or a complete command

**Mode** Global Configuration

## privilege-group alias

---

**Syntax** [ no ] privilege-group alias

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Gives the privilege group name alias to the privilege group. The **no** version removes the privilege group alias.



.....  
**NOTE:** You must access the CLI at privilege level 15 to view or use this command. You cannot modify the privilege level of this command.  
.....

**Mode** Global Configuration

---

## privilege-group membership

---

**Syntax** `privilege-group membership privilegeGroup privilegeGroupName [ add | remove ] memberGroup memberGroupName`

`no privilege-group membership privilegeGroup`

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Adds a member group to or removes a member group from a privilege group. The **no** version restores one or all privilege groups to the default settings. When all privilege groups are reset to default settings, the privilege group membership is hierarchical.



.....  
**NOTE:** You must access the CLI at privilege level 15 to view or use this command. You cannot modify the privilege level of this command.  
.....

- Options**
- *privilegeGroupName*—Privilege group name
  - *memberGroupName*—Member group name

**Mode** Global Configuration

## privilege-group membership clear

---

**Syntax**    `privilege-group membership clear privilegeGroup privilegeGroupName`

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Clears a privilege group or all members from a privilege group. There is no **no** version.



.....  
**NOTE:** You must access the CLI at privilege level 15 to view or use this command. You cannot modify the privilege level of this command.  
.....

**Options**    • *privilegeGroupName*—Privilege group name

**Mode**    Global Configuration



---

## privilege level

---

**Syntax**    `privilege level levelValue`  
`no privilege level`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the default login privilege level of the console line or one or more vty lines. The **no** version restores the default login privilege level for the command.



.....  
**NOTE:** You must access the CLI at privilege level 15 to view or use this command.  
.....

**Options**    • *levelValue*—Level in the range 0–15 at which you want the command accessible

**Mode**    Line Configuration

## privilege reset

---

**Syntax** `privilege mode [ all ] reset commandPrefix`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Restores the privilege level of the command. After issuing this command, the [show configuration](#) output does not display the default privilege setting of the command. There is no **no** version.

- Options**
- *mode*—Mode in which the command appears; for example, User Exec mode, Global Configuration mode, Router Configuration mode
  - *all*—Specifies that this command assigns the specified privilege level to all commands in the specified mode and/or to all commands that match the specified command prefix
  - *reset*—Restores the privilege level of the command to its default
  - *commandPrefix*—Command prefix for which you want to restore its default privilege level; can be a partial keyword, the starting keyword(s) of a command, or a complete command

**Mode** Global Configuration

## profile

**Syntax** To assign a profile name for a remote host:

```
[ no ] profile profileName
```

To create a profile or assign a profile to an interface:

```
profile [ bridgedEthernet | ip | l2tp | ppp | pppoe | vlan | any ] profileName
```

```
no profile [ bridgedEthernet | ip | l2tp | ppp | pppoe | vlan | any ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.

**vlan** keyword added in JunosE Release 7.1.0.

IP Tunnel Destination Profile Configuration mode added in JunosE Release 8.2.0.

**Description** When used from Global Configuration mode, creates a profile. Use profiles to configure interfaces dynamically, which enables you to manage a large number of interfaces effectively. The **no** version removes the profile.

When used from Interface Configuration mode and Subinterface Configuration mode, assigns a profile to an interface. Use profiles to configure interfaces dynamically, which enables you to manage a large number of interfaces effectively. The **no** version removes the profile assigned to the interface.

When used in IP Tunnel Destination Profile Configuration mode, defines an IP profile with parameters that are used to stack an upper IP interface over a dynamic GRE or DVMRP tunnel. The **no** version removes the IP profile from the destination profile.

When used from L2TP Destination Profile Host Configuration mode, sets an attribute of the current remote host. The **no** version removes the attribute from the remote host.

- Options**
- **bridgedEthernet**—Specifies a bridged Ethernet encapsulation type to which the profile applies
  - **ip**—Specifies an IP encapsulation type to which the profile applies
  - **l2tp**—Specifies an L2TP encapsulation type to which the profile applies
  - **ppp**—Specifies a PPP encapsulation type to which the profile applies
  - **pppoe**—Specifies a PPPoE encapsulation type to which the profile applies
  - **vlan**—Specifies a VLAN encapsulation type to which the profile applies
  - **any**—Specifies any autoconfigured encapsulation that does not have a specific profile assignment
  - ***profileName***—Profile name of up to 80 characters

**Mode** Global Configuration, Interface Configuration, IP Tunnel Destination Profile Configuration, L2TP Destination Profile Host Configuration, Subinterface Configuration

## profile atm1483 bulk-config-name

---

**Syntax**    profile atm1483 bulk-config-name *bulkConfigName* *profileName*  
              no profile atm1483 bulk-config-name *bulkConfigName*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns the base profile configured for a dynamic ATM 1483 subinterface to the VC range configured on a static ATM AAL5 interface with the atm bulk-config command. The **no** version removes the profile assignment.

- Options**
- *bulkConfigName*—Name associated with the VC range on the static ATM AAL5 interface, as specified in the atm bulk-config command
  - *profileName*—Base profile name associated with the dynamic ATM 1483 subinterface

**Mode**    Interface Configuration

## profile atm1483 bulk-config-name pvc

**Syntax**    profile atm1483 bulk-config-name *bulkConfigName* pvc *vpi vci overrideProfileName*  
               no profile atm1483 bulk-config-name *bulkConfigName* pvc *vpi vci*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns an overriding profile to a single ATM PVC that exists within a VC subrange previously configured with the atm bulk-config command. The **profile atm1483 bulk-config-name pvc** command enables you to troubleshoot the specified PVC by overriding the currently assigned base profile with one that has debugging attributes enabled. After the overriding profile is assigned, it is used instead of the previously assigned base profile to create any ATM 1483 dynamic subinterface columns over the specified PVC. The **no** version removes the overriding profile assignment for the PVC and restores the original base profile assignment.

- Options**
- *bulkConfigName*—Name associated with the VC range configured for use by a dynamic ATM 1483 subinterface, as specified in the atm bulk-config command
  - *vpi*—Virtual path identifier of the PVC; must exist between the starting VPI value and ending VPI value of a bulk-configured VC subrange
  - *vci*—Virtual circuit identifier of the PVC; must exist between the starting VCI value and ending VCI value of a bulk-configured VC subrange
  - *overrideProfileName*—Name of the profile that overrides the previously assigned base profile for the specified ATM PVC

**Mode**    Interface Configuration

## profile-reassign

---

**Syntax**    `profile-reassign atm interfaceSpecifier { ppp | pppoe | any } profileName`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Reassigns the profile currently assigned to the specified encapsulation type for the specified ATM 1483 subinterface. For troubleshooting purposes, the **profile-reassign** command enables you to “swap” the currently assigned profile for one that has PPP or PPPoE packet-logging attributes enabled. There is no **no** version.



.....  
**NOTE:** Issuing the **profile-reassign** command causes the router to tear down any dynamic interfaces that exist above the ATM 1483 subinterface. After the profile is reassigned, the router restores the interfaces based on the necessary client reconnections.  
.....

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - ppp—Specifies a PPP encapsulation type to which the profile applies
  - pppoe—Specifies a PPPoE encapsulation type to which the profile applies
  - any—Specifies any autoconfigured encapsulation that does not have a specific profile assignment; valid only if neither the ppp encapsulation type nor the pppoe encapsulation type has an existing profile assignment
  - *profileName*—Profile name of up to 80 characters

**Mode**    Privileged Exec (at privilege level 5 or higher)

## profile vlan bulk-config

---

**Syntax**    `profile vlan bulk-config bulkConfigName profileName`  
              `no profile vlan bulk-config bulkConfigName`

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Assigns the base profile configured for a dynamic VLAN subinterface to the VLAN range configured on a static VLAN major interface with the **vlan bulk-config** command. The **no** version removes the base profile assignment.

**Options**

- *bulkConfigName*—Name of the VLAN range; string of up to 80 characters
- *profileName*—Profile name of up to 80 characters

**Mode**    Interface Configuration

## profile vlan override bulk-config

---

**Syntax** To configure an override for a single-tagged VLAN ID:

```
profile vlan override bulk-config bulkConfigName vlan vlanIdValue overrideProfileName
```

To configure an override for a double-tagged S-VLAN ID:

```
profile vlan override bulk-config bulkConfigName svlan s-vlanIdValue  
{ vlanIdValue | any } overrideProfileName
```

To remove the profile override assignment:

```
no profile vlan override bulk-config bulkConfigName { svlan s-vlanId | vlan }  
{ vlanId | any }
```

**Release Information** Command introduced in JunosE Release 7.1.0.

**bulk-config** keyword and *bulkConfigName* variable added in JunosE Release 7.3.0.

**Description** Assigns an overriding profile to a single-tagged VLAN ID or double-tagged S-VLAN ID that exists within a VLAN subrange previously configured with the **vlan bulk-config** command. The **profile vlan override bulk-config** command enables you to assign a special profile for the subscribers associated with a specific DSLAM. After the overriding profile is assigned, it is used instead of the previously assigned base profile to create any VLAN dynamic subinterface columns over the specified VLAN ID or double-tagged S-VLAN ID. The **no** version removes the overriding profile assignment for the VLAN ID or double-tagged S-VLAN ID and restores the original base profile assignment.

- Options**
- *bulkConfigName*—Name of the VLAN range; string of up to 80 characters
  - *s-vlanIdValue*—S-VLAN ID number, in the range 0–4095
  - *vlanIdValue*—VLAN ID number, in the range 0–4095
  - *overrideProfileName*—Name of the profile for which you want to assign an override
  - *any*—Specifies the VLAN ID as a wildcard

**Mode** Interface Configuration



## protocol burst

---

**Syntax**    `protocol protocolValue burst burstSize`  
              `no protocol protocolValue burst`

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Sets the burst size for the protocol. The **no** version sets the value to the default packet value, which is equal to half of the configured maximum rate.

**Options**

- *protocolValue*—Name of the protocol
- *burstSize*—Number of packets, in the range 32–65535; default value is one half the maximum rate

**Mode**    DoS Protection Group Configuration

## protocol drop-probability

---

**Syntax**    protocol *protocolValue* drop-probability *dropValue*  
              no protocol *protocolValue* drop-probability

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Sets the drop probability for the protocol. The **no** version sets the drop probability value to the drop probability specified in the associated preconfigured group.

- Options**    • *protocolValue*—Name of the protocol  
              • *dropValue*—Percentage, in the range 10–100; default value is 100

**Mode**    DoS Protection Group Configuration

## protocol priority

---

**Syntax**    `protocol protocolValue priority priorityValue`  
              `no protocol protocolValue priority`

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Sets the priority of the protocol. The **no** version sets the priority value to the priority value specified in the associated preconfigured group.

**Options**    • *protocolValue*—Name of the protocol  
              • *priorityValue*—dataPath, Hi-Green, Hi-Yellow, Lo-Green, Lo-Yellow

**Mode**    DoS Protection Group Configuration

## protocol rate

---

**Syntax**    `protocol protocolValue rate rateValue`  
              `no protocol protocolValue rate`

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Sets the maximum rate for the specified protocol. The **no** version sets the rate to the value of the associated preconfigured protocol.

- Options**    • *protocolValue*—Name of the protocol  
              • *rateValue*—Packets per second per line card, in the range 64–65335

**Mode**    DoS Protection Group Configuration

## protocol shutdown

---

**Syntax** [ no ] protocol shutdown

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Disables the IS-IS protocol without removing the IS-IS configuration. The **no** version reenables the IS-IS protocol.

**Mode** Router Configuration

## protocol skip-priority-rate-limiter

---

**Syntax** [ no ] protocol *protocolValue* skip-priority-rate-limiter

**Release Information** Command introduced in JunosE Release 8.1.0.

**Description** Configures the protocol to skip or not skip the priority rate limiter. The **no** version sets the value to the default, which is do not skip priority rate limiter.

**Options** • *protocolValue*—Name of the protocol

**Mode** DoS Protection Group Configuration

## protocol weight

---

**Syntax**    protocol *protocolValue* weight *weightValue*  
              no protocol *protocolValue* weight

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Sets the weight for the protocol and affects all protocols in group. The **no** version sets the weight to the value specified in the associated preconfigured group.

- Options**
- *protocolValue*—Name of the protocol
  - *weightValue*—Number relative to 100 in the range 100–500

**Mode**    DoS Protection Group Configuration

## pvc

---

**Syntax** To create a control PVC from Interface Configuration mode:

```
pvc vcd vpi/vci ilmi
```

```
no pvc vcd
```

To create a data PVC from Subinterface Configuration mode and access ATM VC Configuration mode:

```
pvc vcd vpi/vci
```

```
no pvc vcd
```

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** From Interface Configuration mode, creates a control PVC that supports ILMI services. To create a control PVC, you must specify the VCD, VPI, VCI, and the **ilmi** encapsulation type. The **no** version removes the specified control PVC from the router.

From Subinterface Configuration mode, creates a data PVC and accesses ATM VC Configuration mode, from which you can configure and modify individual PVC attributes one at a time. To create a data PVC, you must specify the VCD, VPI, and VCI. The **no** version removes the specified data PVC from the router.

- Options**
- **vcd**—Virtual circuit descriptor that is an identifier for the VC in other commands; number, in the range 1–2147483647
  - **vpi**—Virtual path identifier for this PVC. The numeric range depends on the module capabilities and current configuration.
  - **vci**—Virtual circuit identifier for this PVC. The numeric range depends on the module capabilities and current configuration. For control PVCs, the recommended VCI value is 16 for **ilmi** encapsulation and 5 for **qsaal** encapsulation. The VCI value cannot be 0.
  - **ilmi**—Configures Integrated Local Management Interface encapsulation for a control PVC

**Mode** Interface Configuration, Subinterface Configuration



## CHAPTER 5

# Q Commands

## qos-adaptive-mode

---

**Syntax** [ no ] qos-adaptive-mode

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Enables ANCP to dynamically create QoS parameter instances associated with the ANCP downstream rate application. ANCP also determines the value the system uses when recalculating the QoS shaping rate. The values of the parameter instances track the bandwidth of the local loop that is communicated by ANCP. The **no** version disables QoS adaptive mode.

**Mode** Layer 2 Control Configuration

## qos-interface-parent

**Syntax** In QoS Interface Set Configuration mode:

[ no ] qos-interface-parent *interfaceSupersetName*

In QoS Interface Superset Configuration mode:

[ no ] qos-interface-parent interface *supersetInterfaceType interfaceSpecifier*

In Interface Configuration mode:

[ no ] qos-interface-parent *interfaceSetName*

**Release Information** Command introduced in JunosE Release 9.2.0.

**Description** In QoS Interface Superset Configuration mode, assigns a parent interface for the interface superset. The parent interface can be an Ethernet major interface, an ATM major interface, or a LAG. The **no** version deletes the parent from the superset.

In QoS Interface Set Configuration mode, assigns a QoS interface superset as the parent for the interface set. The **no** version deletes the parent from the set.

In Interface Configuration mode, assigns a QoS interface set as the parent for the member interface. The **no** version deletes the parent from the interface.

- Options**
- *interfaceSupersetName*—Name of the QoS interface superset that is the parent of this interface set
  - *supersetInterfaceType*—One of the following superset interface types: fastEthernet, gigabitEthernet, tenGigabitEthernet, atm, or lag
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [“Interface Types and Specifiers” on page 5](#)
  - *interfaceSetName*—Name of the QoS interface set that is the parent of the interface

**Mode** Interface Configuration, QoS Interface Set Configuration; QoS Interface Superset Configuration

- Related Documentation**
- Configuring Interface Sets for QoS
  - Configuring Interface Supersets for QoS

## qos-interface-set

---

**Syntax** [ no ] qos-interface-set *interfaceSetName*

**Release Information** Command introduced in JunosE Release 9.2.0.

**Description** Configures a QoS interface set and enters QoS Interface Set Configuration mode. The **no** version deletes the interface set.

**Options** • *interfaceSetName*—Name of the QoS interface set

**Mode** Global Configuration

**Related Documentation** • [Configuring Interface Sets for QoS](#)

## qos-interface-superset

---

**Syntax** [ no ] qos-interface-superset *interfaceSupersetName*

**Release Information** Command introduced in JunosE Release 9.2.0.

**Description** Configures a QoS interface superset and enters QoS Interface Superset Configuration mode. The **no** version deletes the interface superset.

**Options** • *interfaceSupersetName*—Name of the QoS interface superset

**Mode** Global Configuration

**Related Documentation** • [Configuring Interface Supersets for QoS](#)

## qos-mode-port

---

**Syntax** [ no ] qos-mode-port [ low-cdv | low-latency ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures an ATM port for per-port queuing. The **no** version restores the default integrated mode, removing per-port queuing from the ATM port; in this state, shaping done by the SAR is controlled by ATM.

- Options**
- low-cdv—HRR scheduler and SAR scheduler operate in concert. The SAR runs with more buffering than in low-latency mode, shaping rates are driven by QoS profiles, VC backpressure is disabled, and lenient port backpressure is enabled.
  - low-latency—Shaping done by the SAR is controlled by QoS. The HRR scheduler controls the traffic rate. The SAR runs with minimal buffering, VC backpressure is disabled, and aggressive port backpressure is enabled. This is the behavior enforced if you do not specify an option.

**Mode** Interface Configuration

- Related Documentation**
- Integrating the HRR Scheduler and SAR Scheduler
  - Configuring Default Integrated Mode for ATM Interface
  - Configuring Low-Latency Mode for Per-Port Queuing on ATM Interfaces
  - Configuring Low-CDV Mode for Per-Port Queuing on ATM Interfaces
  - Disabling Per-Port Queuing on ATM Interfaces

## qos-parameter

**Syntax** In Global Configuration, Interface Configuration, QoS Interface Set Configuration, and QoS Interface Superset Configuration modes:

```
qos-parameter qosParameterInstanceName qosParameterInstanceValue
```

```
no qos-parameter
```

In Profile Configuration mode:

```
qos-parameter qosParameterInstanceName [ qosParameterInstanceValue ]
```

```
add qosParameterAddValue [ initial-value qosParameterInitialValue ] ]
```

```
no qos-parameter qosParameterInstanceName [ add ]
```

**Release Information** Command introduced in JunosE Release 7.1.0.  
**add** and **initial-value** keywords added in JunosE Release 7.2.0.  
 Profile Configuration mode added in JunosE Release 7.2.0.  
 QoS Interface Set Configuration and QoS Interface Superset Configuration modes added in JunosE Release 9.2.0.

**Description** In Global Configuration mode, creates a QoS parameter instance and assigns a value to the parameter. A global parameter instance is typically used to provide a global default for a parameter value. The **no** version deletes the parameter instance.

In Interface Configuration mode, creates a parameter instance, assigns a value to the parameter, and attaches the parameter instance to the interface. The **no** version detaches the parameter instance from the interface.

In Profile Configuration mode, creates a parameter instance command in a profile for use with Service Manager. When the service is activated, the parameter instances are created for the subscriber interface. The **no** version removes the parameter instance command from the profile.

In QoS Interface Set Configuration mode, creates a parameter instance, assigns a value to the parameter, and attaches the parameter instance to a QoS interface set. The **no** version detaches the parameter instance from the interface set.

In QoS Interface Superset Configuration mode, creates a parameter instance, assigns a value to the parameter, and attaches the parameter instance to a QoS interface superset. The **no** version detaches the parameter instance from the interface superset.

- Options**
- *qosParameterInstanceName*—Name of the QoS parameter instance
  - *qosParameterInstanceValue*—Number of the rate for the parameter instance; the default value is the minimum value defined in the parameter definition

- *qosParameterAddValue*—Number of the rate that is added to an existing parameter instance
- *qosParameterInitialValue*—Number of the initial rate of a newly created parameter instance

**Mode** Global Configuration, Interface Configuration, Profile Configuration, QoS Interface Set Configuration, QoS Interface Superset Configuration

**Related Documentation**

- Creating Parameter Instances
- Creating a QoS Parameter on an Interface Superset or Interface Set



## qos-parameter-define

<b>Syntax</b>	[ no ] qos-parameter-define <i>qosParameterDefinitionName</i> [ application <i>applicationName</i> ] [ hierarchical ]
<b>Release Information</b>	Command introduced in JunosE Release 7.1.0.
<b>Description</b>	Specifies a QoS parameter name and accesses QoS Parameter Definition mode. The <b>no</b> version deletes the QoS parameter definition.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>qosParameterDefinitionName</i>—Name of the parameter definition</li> <li>• <i>applicationName</i>—Name of the application that you want to associate with the parameter definition: <ul style="list-style-type: none"> <li>• ip-multicast—Specifies the IP multicast bandwidth adjustment application. You must also specify the <b>hierarchical</b> keyword when you specify this application.</li> <li>• qos-byte-adjustment—Specifies the cell byte-adjustment application, which enables you to adjust the shaping rate to account for different layer 2 encapsulations in ADSL configurations. If you have configured the QoS shaping mode as cell, the system adjusts the shaping rate to account for the ATM cell pad, header, and trailer.</li> <li>• qos-frame-byte-adjustment—Specifies the frame byte-adjustment application, which enables you to shape traffic based on frames for VDSL configurations. If you have configured the QoS shaping mode as frame, the system adjusts the shaping rate based on bytes within frames.</li> <li>• qos-cell-mode—Specifies the QoS cell mode application, which enables you to configure the operational shaping mode (frame or cell) for ATM, Gigabit Ethernet, or 10-Gigabit Ethernet interfaces.</li> <li>• qos-downstream-rate—Specifies the QoS downstream rate application, which enables you to adjust the downstream rate of VLANs and ATM VCs based on parameter instances that are created dynamically by ANCP or AAA. The values of the parameter instances track the bandwidth of the local loop that are communicated by ANCP.</li> </ul> </li> <li>• hierarchical—Specifies that the parameter instance is hierarchical. Hierarchical parameters have explicit instances that are associated with the logical interfaces of instance-interface types, as well as implicit instances that are associated with the logical interfaces of controlled-interface types. The system computes the values of an implicit instance as the sum of the values of the explicit instances stacked above the implicit instance.</li> </ul>
<b>Mode</b>	Global Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• Configuring a Basic Parameter Definition for QoS Administrators</li> <li>• Configuring a Parameter Definition to Calculate Hierarchical Instances</li> </ul>

- Configuring a Parameter Definition for IP Multicast Bandwidth Adjustment
- Configuring a Parameter Definition to Shape Ethernet Traffic Using Cell Mode
- Configuring a Parameter Definition to Adjust Cell Shaping Rates for ADSL Traffic
- Configuring a Parameter Definition to Adjust Frame Shaping Rates for VDSL Traffic
- Configuring a Parameter Definition for QoS Downstream Rate

## qos-port-type-profile

---

<b>Syntax</b>	<code>qos-port-type-profile <i>typeOfInterface</i> qos-profile <i>qosProfileName</i></code>
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>lag</b> keyword added in JunosE Release 8.1.0.
<b>Description</b>	Associates a QoS profile with all the ports of a given interface type. There is no <b>no</b> version.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>typeOfInterface</i>—One of the following interface types to be associated with the QoS port-type profile; atm, ethernet, lag, serial, server-port</li><li>• <i>qosProfileName</i>—Name of the QoS profile</li></ul>
<b>Mode</b>	Global Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Attaching a QoS Profile to an Interface</li><li>• Enabling Default Subscriber Load Balancing for 802.3ad Link Aggregation Groups</li></ul>

## qos-profile

---

**Syntax** [ no ] qos-profile *qosProfileName*

**Release Information** Command introduced before JunosE Release 7.1.0.  
Profile Configuration mode added in JunosE Release 7.2.0.  
QoS Interface Set Configuration and QoS Interface Superset Configuration modes added in JunosE Release 9.2.0.

**Description** In Global Configuration mode, creates a QoS profile on the router and enters QoS Profile Configuration mode. The **no** version deletes the QoS profile.

In Interface Configuration mode, attaches a QoS profile to an interface. The **no** version detaches the QoS profile from the interface.

In Profile Configuration mode, adds a QoS profile command for use with Service Manager. When the service is activated, the QoS profile is created and attached to the subscriber interface. The **no** version removes the QoS profile from the profile.

In QoS Interface Set Configuration mode, attaches a QoS profile to the QoS interface set. The **no** version detaches the QoS profile from the interface set.

In QoS Interface Superset Configuration mode, attaches a QoS profile to the QoS interface superset. The **no** version detaches the QoS profile from the interface superset.

**Options** • *qosProfileName*—Name of the QoS profile

**Mode** Global Configuration, Interface Configuration, Profile Configuration, QoS Interface Set Configuration, QoS Interface Superset Configuration

**Related Documentation**

- Configuring a QoS Profile
- Attaching a QoS Profile to an Interface
- Configuring Shadow Nodes
- Configuring a Basic Parameter Definition for QoS Administrators
- Creating Parameter Instances
- Attaching a QoS Profile to an Interface Superset or an Interface Set
- Creating a QoS Parameter on an Interface Superset or Interface Set

## qos-shaping-mode

---

**Syntax** [ no ] qos-shaping-mode [ cell | frame ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies either cell-based or frame-based traffic shaping for ATM, Gigabit Ethernet, or 10-Gigabit Ethernet interfaces. The shaping mode is configured for a major interface and affects scheduling for all nodes and queues stacked above the interface. In cell shaping mode, queues and nodes are scheduled as if they were ATM cells. All newly configured ports use the shaping mode from port 0; frame is the default shaping mode for port 0. If you do not specify an option, the command restores the default, frame. The **no** version restores the default, frame.

- Options**
- cell—Shapes traffic based on the number of bytes in a cell, and accounts for ATM cell encapsulation and padding overhead
  - frame—Shapes traffic based on the number of bytes in a frame, without considering cell encapsulation and padding overhead; the default shaping mode for port 0

**Mode** Interface Configuration

- Related Documentation**
- Configuring the QoS Shaping Mode for ATM Interfaces
  - Configuring the QoS Shaping Mode for Ethernet Interfaces

## qos-shared-shaper-control

---

**Syntax** [ no ] qos-shared-shaper-control

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Enables the user-configurable variables in the QoS simple shared shaper algorithm and enters QoS Shared Shaper Control Configuration mode. The **no** version disables the user-configurable variables in the QoS simple shared shaper algorithm.

**Mode** Global Configuration

**Related Documentation**

- [Configuring Simple Shared Shaper Algorithm Variables](#)

---

## query-interval

---

**Syntax**    `query-interval queryTime`  
`no query-interval`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies how often the router sends PIM router query messages to remote neighbors. The **no** version specifies the default time interval, 30 seconds.



.....  
**NOTE:** This command is typically used when you configure PIM remote neighbors to run multicast services over BGP/MPLS VPNs. That functionality is no longer supported.  
.....

**Options**    • *queryTime*—Interval, in the range 0–210 seconds, at which the router sends PIM router query messages from this interface

**Mode**    Interface Configuration

## queue

---

<b>Syntax</b>	<code>[ no ] { <i>typeOfInterface</i>   set   superset } queue traffic-class <i>trafficClassName</i> [ queue-profile <i>queueProfileName</i> [ scheduler-profile <i>schedProfileName</i> ]   scheduler-profile <i>schedProfileName</i> [ queue-profile <i>queueProfileName</i> ] ] [ drop-profile <i>dropProfileName</i> ] [ statistics-profile <i>statisticsProfileName</i> ]</code>
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>svlan</b> keyword added in JunosE Release 7.1.0. <b>set</b> and <b>superset</b> keywords added in JunosE Release 9.2.0.
<b>Description</b>	Specifies that a queue traffic class be configured for the selected interface type. The <b>no</b> version removes this rule from the QoS profile.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>typeOfInterface</i>—Interface type for queue traffic classes to be configured; atm, atm-vp, atm-vc, bridge, ethernet, fr-vc, ip, ipv6, ip-tunnel, l2tp-session, l2tp-tunnel, lsp, serial, server-port, svlan, vlan</li><li>• set—Configures a queue for an interface set</li><li>• superset—Configures a queue for an interface superset</li><li>• <i>trafficClassName</i>—Name of the traffic class</li><li>• <i>queueProfileName</i>—Name of the queue profile</li><li>• <i>schedProfileName</i>—Name of the scheduler profile</li><li>• <i>dropProfileName</i>—Name of the drop profile</li><li>• <i>statisticsProfileName</i>—Name of the statistics profile</li></ul>
<b>Mode</b>	QoS Profile Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Configuring a QoS Profile</li><li>• Configuring Shadow Nodes</li><li>• Configuring a Basic Parameter Definition for QoS Administrators</li><li>• Configuring Rate Statistics</li><li>• Configuring Event Statistics</li><li>• Attaching a QoS Profile to an Interface Superset or an Interface Set</li></ul>



## queue-profile

---

**Syntax** [ no ] queue-profile *queueProfileName*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures a queue profile. The **no** version removes the named queue profile.

**Options** • *queueProfileName*—Name of the queue profile

**Mode** Global Configuration

**Related Documentation** • [Configuring Queue Profiles to Manage Buffers and Thresholds](#)



## CHAPTER 6

# R Commands

## radius accounting server

---

**Syntax** [ no ] radius accounting server *ipAddress*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the IP address of a RADIUS accounting server and puts the E Series router into RADIUS Configuration mode. The **no** version deletes the instance of the RADIUS server.

**Options** • *ipAddress*—IP address of the server

**Mode** Global Configuration

## radius acct-session-id-format

**Syntax** radius acct-session-id-format { decimal | description }  
no radius acct-session-id-format

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the RADIUS client's use of a specific format for RADIUS attribute 44, Acct-Session-Id. The **no** version negates the Acct-Session-Id format.



**NOTE:** For subscribers connected over the link aggregation group (LAG) interface in DHCP standalone authenticate mode, the LAG interface ID is used as the interface identifier.

- Options**
- decimal—Configures the RADIUS client to use a decimal format
  - description—Configures the RADIUS client to use the generic format:  
`ex interfaceType interfaceSpecifier:hexNumber`
    - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
    - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
    - *hexNumber*—Hexadecimal number identifying the session

**Mode** Global Configuration

## radius algorithm

---

**Syntax**    radius algorithm { direct | round-robin }  
              no radius algorithm

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the algorithm that the RADIUS client uses to contact the RADIUS server. The **no** version restores the default value, direct.

- Options**
- direct—Contacts the first AAA server on the list for each user, the second AAA server if the first one fails, and so on
  - round-robin—Contacts the first AAA server for the first user, the second AAA server for the second user, and so on

**Mode**    Global Configuration

## radius authentication server

---

**Syntax** [ no ] radius authentication server *ipAddress*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the IP address of a RADIUS authentication server and puts the E Series router into RADIUS Configuration mode. The **no** version deletes the instance of the RADIUS server.

**Options** • *ipAddress*—IP address of the server

**Mode** Global Configuration

## radius calling-station-delimiter

---

**Syntax**    radius calling-station-delimiter *delimiter*  
              no radius calling-station-delimiter

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the delimiter for DSL PPP users for RADIUS attribute 31, Calling-Station-Id. The **no** version removes the delimiter.

**Options**    • *delimiter*—Special character to set off items in the Calling-Station-Id's definition (for example, # or %)

**Mode**    Global Configuration



## radius calling-station-format

**Syntax** radius calling-station-format { delimited | fixed-format [ stacked ] |  
fixed-format-adapter-embedded [ stacked ] | fixed-format-adapter-new-field [ stacked  
] }  
  
no radius calling-station-format

**Release Information** Command introduced before JunosE Release 7.1.0.  
**fixed-format-adapter-embedded** and **fixed-format-adapter-new-field** keywords added in JunosE Release 8.1.0.  
**stacked** keyword added in JunosE Release 9.3.0.

**Description** On a virtual router, specifies the format of RADIUS attribute 31, Calling-Station-Id, when the PPP user is terminated at the non-LNS E Series router. Depending on the keyword you use, the virtual router uses the specified format for each interface type, replacing variables in the format with their actual values for your configuration. The **no** version restores the default Calling-Station-Id format, **delimited**.



### NOTE:

- Attribute 31, Calling-Station-Id, is used with Attribute 30, Called-Station-Id, in a standard way when the router is the LNS and the LAC is a dial-up LAC (not an E Series router). When the LNS receives the Calling-Station-Id and Called-Station-Id AVPs, the router includes the values as they are, with no format changes in the RADIUS messages.
- For subscribers connected over the LAG interface in DHCP standalone authenticate mode, the **radius override calling-station-id remote-circuit-id** command enables RADIUS to use the PPPoE remote circuit ID for the Calling-Station-Id attribute. By default, RADIUS uses a delimited format for the interface description. You cannot use this command to change the value of the Calling-Station-Id attribute.

- Options**
- **delimited**—Specifies that the RADIUS client uses the delimited format:
    - Format for ATM interfaces:  
*delimiter systemName delimiter interfaceDescription delimiter  
VPI delimiter VCI delimiter*
    - Format for Ethernet interfaces:  
*delimiter systemName delimiter interfaceDescription delimiter VLAN*

Where *interfaceDescription* is one of the following items:

- *port name*—The default setting
- *VP description*—Appears if you use the **atm vp-description** command to assign a text description to an individual VP on an ATM interface

- *VC description*—Appears if you use the **atm atm1483 description** command to assign a text description to VCs on an ATM 1483 subinterface and you use the **atm1483 export-subinterface-description** command to enable sending of VC interface descriptors to AAA
- *fixed-format*—Specifies that the RADIUS client uses a fixed format of up to 15 characters consisting of all ASCII fields:
  - Format for ATM interfaces:  
*systemName* (up to 4 bytes) *slot* (2 bytes) *port* (1 byte) *VPI* (3 bytes) *VCI* (5 bytes)
  - Format for Ethernet interfaces:  
*systemName* (up to 4 bytes) *slot* (2 bytes) *port* (1 byte) *VLAN* (8 bytes)
  - Format for serial interfaces:  
*systemName* (up to 4 bytes) *slot* (2 bytes) *port* (1 byte) *O* (8 bytes)
  - In the case of PPP terminated from LNS, the Calling-Station-Id attribute value is based on the received L2TP calling number AVP
- *fixed-format-adapter-embedded*—Specifies that the RADIUS client uses a fixed format of up to 15 characters consisting of all ASCII fields with a 1-byte *slot* field, 1-byte *adapter* field, and 1-byte *port* field:
  - Format for ATM interfaces:  
*systemName* (up to 4 bytes) *slot* (1 byte) *adapter* (1 byte) *port* (1 byte) *VPI* (3 bytes) *VCI* (5 bytes)
  - Format for Ethernet interfaces:  
*systemName* (up to 4 bytes) *slot* (1 byte) *adapter* (1 byte) *port* (1 byte) *VLAN* (8 bytes)
  - Format for serial interfaces:  
*systemName* (up to 4 bytes) *slot* (1 byte) *adapter* (1 byte) *port* (1 byte) *O* (8 bytes)
  - For E120 routers and E320 routers, *adapter* is the number of the bay in which the I/O adapter (IOA) resides, either 0 (representing the right IOA bay on the E120 router and the upper IOA bay on the E320 router) or 1 (representing the left IOA bay on the E120 router or the lower IOA bay on the E320 router). For ERX7xx models, ERX14xx models, and ERX310 routers, *adapter* is always shown as 0.
  - Slot numbers 0 through 16 are shown as ASCII characters in the 1-byte slot field according to the following translation:

Slot Number	ASCII Character	Slot Number	ASCII Character
0	0	9	9
1	1	10	A
2	2	11	B

Slot Number	ASCII Character	Slot Number	ASCII Character
3	3	12	C
4	4	13	D
5	5	14	E
6	6	15	F
7	7	16	G
8	8	—	—

For example, slot 16 is shown as the ASCII character uppercase G.

- **fixed-format-adapter-new-field**—Specifies that the RADIUS client uses a fixed format of up to 17 characters consisting of all ASCII fields with a 2-byte *slot* field, 1-byte *adapter* field, and 2-byte *port* field:
  - Format for ATM interfaces:  
*systemName* (up to 4 bytes) *slot* (2 bytes) *adapter* (1 byte) *port* (2 bytes)  
*VPI* (3 bytes) *VCI* (5 bytes)
  - Format for Ethernet interfaces:  
*systemName* (up to 4 bytes) *slot* (2 bytes) *adapter* (1 byte) *port* (2 bytes) *VLAN* (8 bytes)
  - Format for serial interfaces:  
*systemName* (up to 4 bytes) *slot* (2 bytes) *adapter* (1 byte) *port* (2 bytes)  
*O* (8 bytes)
  - For E120 routers and E320 routers, *adapter* is the number of the bay in which the IOA resides, either 0 or 1. For ERX7xx models, ERX14xx models, and ERX310 routers, *adapter* is always shown as 0.
  - Slot numbers 0 through 16 are shown as integers in the 2-byte *slot* field.



**NOTE:** You must use this field when you configure the format of the Calling-Station-ID attribute on routers that have line modules that support more than seven physical ports.

- **stacked**—Includes a 4-byte stacked VLAN (S-VLAN ID) for Ethernet interfaces when the RADIUS client uses the fixed-format, fixed-format-adapter-embedded, or fixed-format-adapter-new-field format; by default, these formats do not include the S-VLAN ID unless you specify the optional **stacked** keyword; if you include the stacked keyword, the S-VLAN ID is displayed in decimal format in the range 0–4095

- Format for Ethernet interfaces that use **fixed-format**:  
*systemName* (up to 4 bytes) *slot* (2 bytes) *port* (1 byte) *S-VLAN* (4 bytes) *VLAN* (4 bytes)
- Format for Ethernet interfaces that use **fixed-format-adapter-embedded**:  
*systemName* (up to 4 bytes) *slot* (1 byte) *adapter* (1 byte) *port* (1 byte) *S-VLAN* (4 bytes) *VLAN* (4 bytes)
- Format for Ethernet interfaces that use **fixed-format-adapter-new-field**:  
*systemName* (up to 4 bytes) *slot* (2 bytes) *adapter* (1 byte) *port* (2 bytes) *S-VLAN* (4 bytes) *VLAN* (4 bytes)



---

**NOTE:**

- The use of the **stacked** keyword is not supported for VLAN subinterfaces based on agent-circuit-identifier information, otherwise known as ACI VLANs. When you issue the **radius calling-station-format fixed-format stacked**, **radius calling-station-format fixed-format-adapter-embedded stacked**, or **radius calling-station-format fixed-format-adapter-new-field stacked** command for an ACI VLAN, the values that appear in the 4-byte S-VLAN ID and 4-byte VLAN ID fields are incorrect.
  - The S-VLAN ID field in the Calling-Station-Id [31] attribute is set to 0 (zero) under the following conditions:
    - You do not specify the optional **stacked** keyword.
    - You specify the optional **stacked** keyword but the Ethernet interface does not have an S-VLAN ID.
- 

**Mode**    Global Configuration

## radius client

---

**Syntax**    no radius client

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    This command has only a **no** version. See the [no radius client](#) command for a complete description and syntax.

**Mode**    Global Configuration

## radius connect-info-format

---

**Syntax** radius connect-info-format { l2tp-connect-speed |  
l2tp-connect-speed-rx-when-equal }  
  
no radius connect-info-format

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the format and enables the generation of RADIUS attribute 77, Connect-Info, on the LNS. The format uses the received L2TP connect-speed AVPs that the LAC sends to the LNS. The **no** version restores the default, in which the LNS does not generate the Connect-Info attribute.

- Options**
- l2tp-connect-speed—Specifies that the Connect-Info attribute include only the RX speed when the RX speed is different from the TX speed and is greater than zero.
  - l2tp-connect-speed-rx-when-equal—Specifies that the Connect-Info attribute always include the RX speed when the speed is greater than zero.

**Mode** Global Configuration

---

## radius disconnect client

---

**Syntax** [ no ] radius disconnect client *ipAddress*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures a RADIUS disconnect client and enters RADIUS Disconnect Configuration mode. The **no** version removes the RADIUS disconnect client.



.....  
**NOTE:** This command is deprecated and may be removed completely in a future release. The function provided by this command has been replaced by the **subscriber disconnect** command and the RADIUS dynamic-request server feature. The RADIUS Disconnect Configuration mode is also deprecated.  
.....

**Options** • *ipAddress*—IP address of the RADIUS server that is acting as the disconnect client

**Mode** Global Configuration

## radius dsl-port-type

---

**Syntax** radius dsl-port-type { sdsl | adsl-cap | adsl-dmt | idsl | xdsl | virtual }  
no radius dsl-port-type

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets RADIUS attribute 61, NAS-Port-Type, in RADIUS access request packets and accounting start and stop packets for ATM interfaces. The **no** version restores the default setting, xdsl.



---

**NOTE:**

- If the interface (port) is Ethernet, then it sets the attribute to Ethernet and disregards the parameter set with this command. If the interface (port) is DSL, then the attribute can have any value listed in the command and uses the value configured.
  - For subscribers connected over the LAG interface in DHCP standalone authenticate mode, RADIUS calculates the value of the Nas-Port-Type attribute.
- 

- Options**
- sdsl—Symmetric DSL
  - adsl-cap—Asymmetric DSL, carrierless amplitude phase modulation
  - adsl-dmt—Asymmetric DSL, discrete multitone
  - idsl—ISDN DSL
  - xdsl—DSL of unspecified type (default)
  - virtual—Virtual

**Mode** Global Configuration



---

## radius dynamic-request server

---

**Syntax** [ no ] radius dynamic-request server *ipAddress*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the IP address of a RADIUS dynamic-request server and puts the E Series router into RADIUS Configuration mode. The **no** version deletes the instance of the RADIUS server.



.....

**NOTE:** The **radius dynamic-request server** command replaces the functionality of the **radius disconnect client** command.

The RADIUS Disconnect Configuration mode is deprecated. Use the **radius dynamic-request server** command to enter RADIUS Configuration mode and configure options formerly available in RADIUS Disconnect Configuration mode.

.....

**Options** • *ipAddress*—IP address of the server

**Mode** Global Configuration

**Related Documentation** • Configuring RADIUS-Based Mirroring

## radius ethernet-port-type

---

**Syntax**    radius ethernet-port-type [ virtual | ethernet ]  
              no radius ethernet-port-type

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Indicates to RADIUS which Ethernet port type to use in RADIUS attribute 61, NAS-Port-Type, for all Ethernet users on the E Series router. The **no** version restores the default, ethernet.



.....  
**NOTE:** For subscribers connected over the link aggregation group (LAG) interface in DHCP standalone authenticate mode, RADIUS calculates the value of the Nas-Port-Type attribute.  
.....

- Options**    • virtual—Sets RADIUS NAS-Port-Type to virtual  
              • ethernet—Sets RADIUS NAS-Port-Type to Ethernet

**Mode**    Global Configuration

## radius icr-partition-accounting

---

**Syntax**    radius icr-partition-accounting { enable | disable }  
              no radius icr-partition-accounting

**Release Information**    Command introduced in JunosE Release 10.3.0.

**Description**    Enables or disables sending of the ICR Partition-Accounting-On or Partition-Accounting-Off messages to the RADIUS servers. Both Partition-Accounting messages include the ICR-Partition-Id VSA and are sent to the RADIUS accounting server configured on the virtual router where the ICR partition is configured or the virtual router on which the ICR control interface is set up. The **no** version restores the default value, disable.

**Options**

- enable—Configures the RADIUS client to enable the use of Partition-Accounting-On and Partition-Accounting-Off messages. When this option is used, these messages are sent to the accounting server configured on the virtual router.
- disable— Configures the RADIUS client to disable the use of Partition-Accounting-On and Partition-Accounting-Off messages; this is the default setting. When this option is used, the Partition-Accounting messages are not sent to the accounting server configured on the virtual router.

**Mode**    Global Configuration

## radius ignore

---

**Syntax**    radius ignore *attributeName* { enable | disable }

no radius ignore *attributeName*

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **pppoe-max-session** keyword added in JunosE Release 9.3.0.

**Description**    Ignores the specified attribute in RADIUS Access-Accept messages. All attributes are disabled by default except for Framed-Ip-Netmask and Max-Clients-Per-Interface (pppoe-max-session). The **no** version restores the default.

- Options**
- *attributeName*—One of the following RADIUS attributes:
    - atm-mbs—Mbs, VSA 26-17
    - atm-pcr—Pcr, VSA 26-15
    - atm-scr—Scr, VSA 26-16
    - atm-service-category—Service-Category, VSA 26-14
    - egress-policy-name—Egress-Policy-Name, VSA 26-11
    - framed-ip-netmask—Framed-Ip-Netmask, attribute 9; when you ignore this attribute, the default subnet mask 255.255.255.255 is provided by AAA and used for internet protocol control protocol (IPCP) negotiations; when you enable this attribute, the router passes the IP address and the subnet mask specified by this attribute to the CPE during IPCP negotiations; ignoring the attribute guards against any breaks in the IPCP negotiation
    - pppoe-max-session—Max-Clients-Per-Interface, VSA 26-143
    - ingress-policy-name—Ingress-Policy-Name, VSA 26-10
    - virtual-router—Virtual-Router, VSA 26-1
  - **enable**—Specifies the feature; this is the default setting for **framed-ip-netmask** and **pppoe-max-session**
  - **disable**—Disables the feature; this is the default setting for all attributes except **framed-ip-netmask** and **pppoe-max-session**

**Mode**    Global Configuration

## radius include

**Syntax** radius include *attributeName*  
 { access-request | acct-on | acct-off | acct-start | acct-stop } { enable | disable }  
 no radius include *attributeName*  
 { access-request | acct-on | acct-off | acct-start | acct-stop }

**Release Information** Command introduced before JunosE Release 7.1.0.  
**l2c-access-loop-parameters** attribute added in JunosE Release 7.2.0.  
**l2cd** attributes added in JunosE Release 9.0.0.  
**framed-interface-id** and **framed-ipv6-prefix** attributes, and acct-stop support for **framed-ip-addr** attribute added in JunosE Release 9.0.0.  
**downstream-calculated-qos-rate** and **upstream-calculated-qos-rate** attributes added in JunosE Release 9.1.0.  
**ipv6-accounting**, **delegated-ipv6-prefix**, **framed-ipv6-pool**, **framed-ipv6-route**, **ipv6-local-interface**, **ipv6-nd-ra-prefix**, **ipv6-primary-dns**, **ipv6-secondary-dns**, and **ipv6-virtual-router** attributes added in JunosE Release 10.2.0.  
**icr-partition-id** attribute added in JunosE Release 10.3.0.  
**framed-route** attribute added in JunosE Release 11.3.0.

**Description** Configures the inclusion of RADIUS attributes in RADIUS messages. Not all attributes are available in all message types. The listed attributes are included by default except where noted. The **no** version restores the default.

**Options** • *attributeName*—One of the following RADIUS attributes; not all attributes are available in all message types.

Attributes available for Access-Request, Acct-Start, and Acct-Stop messages:

- acct-multi-session-id—Includes RADIUS attribute 50, Acct-Multi-Session-Id
- acct-tunnel-connection—Includes RADIUS attribute 68, Acct-Tunnel-Connection
- ascend-num-in-multilink—Includes RADIUS attribute 188, Ascend-Num-In-Multilink
- called-station-id—Includes RADIUS attribute 30, Called-Station-Id
- calling-station-id—Includes RADIUS attribute 31, Calling-Station-Id
- connect-info—Includes RADIUS attribute 77, Connect-Info
- dhcp-options—Includes RADIUS attribute 26-55, DHCP-Options
- dhcp-option-82—Includes RADIUS attribute 26-159, DHCP-Option 82
- dhcp-gi-address—Includes RADIUS attribute 26-57, DHCP-GI-Address
- dhcp-mac-address—Includes RADIUS attribute 26-56, DHCP-MAC Address
- downstream-calculated-qos-rate—Excluded by default; includes RADIUS attribute 26-141, Downstream-Calculated-Qos-Rate

- `framed-interface-id`—Excluded by default; includes RADIUS attribute 96, `Framed-Interface-Id`, if an IPv6 interface ID is assigned to the subscriber
- `framed-ip-addr`—Includes RADIUS attribute 8, `Framed-IP-Address`, if an IP address is assigned to the subscriber
- `framed-ipv6-prefix`—Excluded by default; includes RADIUS attribute 97, `Framed-Ipv6-Prefix`, if at least one IPv6 prefix is assigned to the subscriber
- `icr-partition-id`—Excluded by default; includes RADIUS attribute 26-150, `ICR-Partition-Id`, which is a user-configured value of up to 128 characters
- `interface-description`—Excluded by default; includes RADIUS attribute 26-63, `Interface-Desc`; attribute automatically included in `Interim-Acct` messages when included in `Acct-Stop` messages
- `l2c-downstream-data`—Excluded by default; includes RADIUS attribute 26-92, `L2C-Down-Stream-Data`
- `l2c-upstream-data`—Excluded by default; includes RADIUS attribute 26-93, `L2C-Up-Stream-Data`
- `l2cd-acc-loop-cir-id`—Excluded by default; includes RADIUS attribute 26-110, `Acc-Loop-Cir-Id`; attribute automatically included in `Interim-Acct` messages when included in `Acct-Stop` messages
- `l2cd-acc-aggr-cir-id-bib`—Excluded by default; includes RADIUS attribute 26-111, `Acc-Aggr-Cir-Id-Bin`; attribute automatically included in `Interim-Acct` messages when included in `Acct-Stop` messages
- `l2cd-acc-aggr-cir-id-asc`—Excluded by default; includes RADIUS attribute 26-112, `Acc-Aggr-Cir-Id-Asc`; attribute automatically included in `Interim-Acct` messages when included in `Acct-Stop` messages
- `l2cd-act-data-rate-up`—Excluded by default; includes RADIUS attribute 26-113, `Act-Data-Rate-Up`; attribute automatically included in `Interim-Acct` messages when included in `Acct-Stop` messages
- `l2cd-act-data-rate-dn`—Excluded by default; includes RADIUS attribute 26-114, `Act-Data-Rate-Dn`; attribute automatically included in `Interim-Acct` messages when included in `Acct-Stop` messages
- `l2cd-min-data-rate-up`—Excluded by default; includes RADIUS attribute 26-115, `Min-Data-Rate-Up`; attribute automatically included in `Interim-Acct` messages when included in `Acct-Stop` messages
- `l2cd-min-data-rate-dn`—Excluded by default; includes RADIUS attribute 26-116, `Min-Data-Rate-Dn`; attribute automatically included in `Interim-Acct` messages when included in `Acct-Stop` messages
- `l2cd-att-data-rate-up`—Excluded by default; includes RADIUS attribute 26-117, `Att-Data-Rate-Up`; attribute automatically included in `Interim-Acct` messages when included in `Acct-Stop` messages

- `l2cd-att-data-rate-dn`—Excluded by default; includes RADIUS attribute 26-118, `Att-Data-Rate-Dn`; attribute automatically included in Interim-Acct messages when included in Acct-Stop messages
- `l2cd-max-data-rate-up`—Excluded by default; includes RADIUS attribute 26-119, `Max-Data-Rate-Up`; attribute automatically included in Interim-Acct messages when included in Acct-Stop messages
- `l2cd-max-data-rate-dn`—Excluded by default; includes RADIUS attribute 26-120, `Max-Data-Rate-Dn`; attribute automatically included in Interim-Acct messages when included in Acct-Stop messages
- `l2cd-min-lp-data-rate-up`—Excluded by default; includes RADIUS attribute 26-121, `Min-LP-Data-Rate-Up`; attribute automatically included in Interim-Acct messages when included in Acct-Stop messages
- `l2cd-min-lp-data-rate-dn`—Excluded by default; includes RADIUS attribute 26-122, `Min-LP-Data-Rate-Dn`; attribute automatically included in Interim-Acct messages when included in Acct-Stop messages
- `l2cd-max-interlv-delay-up`—Excluded by default; includes RADIUS attribute 26-123, `Max-Interlv-Delay-Up`; attribute automatically included in Interim-Acct messages when included in Acct-Stop messages
- `l2cd-act-interlv-delay-up`—Excluded by default; includes RADIUS attribute 26-124, `Act-Interlv-Delay-Up`; attribute automatically included in Interim-Acct messages when included in Acct-Stop messages
- `l2cd-max-interlv-delay-dn`—Excluded by default; includes RADIUS attribute 26-125, `Max-Interlv-Delay-Dn`; attribute automatically included in Interim-Acct messages when included in Acct-Stop messages
- `l2cd-act-interlv-delay-dn`—Excluded by default; includes RADIUS attribute 26-126, `Act-Interlv-Delay-Dn`; attribute automatically included in Interim-Acct messages when included in Acct-Stop messages
- `l2cd-dsl-line-state`—Excluded by default; includes RADIUS attribute 26-127, `DSL-Line-State`; attribute automatically included in Interim-Acct messages when included in Acct-Stop messages
- `l2cd-dsl-type`—Excluded by default; includes RADIUS attribute 26-128, `DSL-Type`; attribute automatically included in Interim-Acct messages when included in Acct-Stop messages
- `mlppp-bundle-name`—Excluded by default; includes RADIUS attribute 26-62, `MLPPP-Bundle-Name`; attribute automatically included in Interim-Acct messages when included in Acct-Stop messages
- `nas-port`—Includes RADIUS attribute 5, `NAS-Port`
- `nas-port-id`—Includes RADIUS attribute 87, `NAS-Port-Id`



**NOTE:** For subscribers connected over the link aggregation group (LAG) interface in DHCP standalone authenticate mode, RADIUS uses the LAG interface ID for the Nas-Port-Id attribute.

- nas-port-type—Includes RADIUS attribute 61, NAS-Port-Type



**NOTE:** For subscribers connected over the LAG interface in DHCP standalone authenticate mode, RADIUS calculates the value of the Nas-Port-Type attribute.

- pppoe-description—Includes RADIUS attribute 26-24, Pppoe-Description
- profile-service-description—Includes RADIUS attribute 26-53, Service-Description
- tunnel-client-auth-id—Includes RADIUS attribute 90, Tunnel-Client-Auth-Id
- tunnel-client-endpoint—Includes RADIUS attribute 66, Tunnel-Client-Endpoint
- tunnel-interface-id—Excluded by default; includes RADIUS attribute 26-44, Tunnel-Interface-ID
- tunnel-medium-type—Includes RADIUS attribute 65, Tunnel-Medium-Type
- tunnel-server-attributes—Excluded by default; includes all supported tunnel server attributes; that is, the attributes of the tunnel client when PPP is terminated at the LNS on the router
- tunnel-server-auth-id—Includes RADIUS attribute 91, Tunnel-Server-Auth-Id
- tunnel-server-endpoint—Includes RADIUS attribute 67, Tunnel-Server-Endpoint
- tunnel-type—Includes RADIUS attribute 64, Tunnel-Type
- upstream-calculated-qos-rate—Excluded by default; includes RADIUS attribute 26-142, Upstream-Calculated-Qos-Rate

Attributes available for Access-Request messages only:

- access-loop-parameters—Excluded by default; includes RADIUS attribute 26-81, L2c-Information

Attributes available for Acct-Start and Acct-Stop messages only:

- acct-link-count—Includes RADIUS attribute 51, Acct-Link-Count
- class—Includes RADIUS attribute 25, Class
- egress-policy-name—Includes RADIUS attribute 26-11, Egress-Policy-Name
- framed-compression—Includes RADIUS attribute 13, Framed-Compression



- **framed-ip-netmask**—Includes RADIUS attribute 9, Framed-IP-Netmask
- **framed-route**—Excluded by default; includes RADIUS attribute 22, Framed-Route
- **ingress-policy-name**—Includes RADIUS attribute 26-10, Ingress-Policy-Name
- **tunnel-assignment-id**—Includes RADIUS attribute 82, Tunnel-Assignment-Id
- **tunnel-preference**—Includes RADIUS attribute 83, Tunnel-Preference

Attributes available for Acct-Stop messages only:

- **delegated-ipv6-prefix**—Excluded by default; includes RADIUS attribute 123, Delegated-Ipv6-Prefix
  - The attribute value received from the RADIUS server in the Access-Accept message is used in the accounting messages
  - When prefix delegation occurs, an immediate-update (if enabled) message, which contains the delegated prefix information, is sent to the RADIUS server
  - When the prefix to be delegated to clients is obtained from the IPv6 local address server and not the RADIUS server and the **aaa dhcpv6-delegated-prefix delegated-ipv6-prefix** command is configured, the delegated prefix is sent to the RADIUS server in this attribute in the immediate accounting, Acct-Stop, or Interim-Acct messages
  - When the prefix to be delegated to clients is allocated from the IPv6 local address server and the **aaa dhcpv6-delegated-prefix delegated-ipv6-prefix** command is not configured, the delegated prefix is sent to the RADIUS server in the Framed-Ipv6-Prefix attribute in the immediate accounting, Acct-Stop, or Interim-Acct messages
  - For static interfaces, although the prefix configured using the CLI command is used for DHCPv6 Prefix Delegation instead of the value returned by the RADIUS server, the immediate accounting, Acct-Stop, or Interim-Acct messages contain the prefix returned from the RADIUS server
  - If this attribute is not returned from the RADIUS server, the immediate accounting, Acct-Stop, or Interim-Acct messages do not report this attribute
- **framed-ipv6-pool**—Excluded by default; includes RADIUS attribute 100, Framed-IPv6-Pool; the attribute value received from the RADIUS server in the Access-Accept message is used in the accounting messages; if this attribute is configured in the AAA domain map using the CLI and is not returned from RADIUS server, the Acct-Start, Acct-Stop, or Interim-Acct messages report the value configured in the domain map
- **framed-ipv6-route**—Excluded by default; includes RADIUS attribute 99, Framed-IPv6-Route; the attribute value received from the RADIUS server in the Access-Accept message is used in the accounting messages; when this attribute is not returned from the RADIUS server in the Access-Accept message, the immediate accounting, Acct-Stop, or Interim-Acct messages do not report this attribute

- input-gigapkts—Includes RADIUS attribute 26-35, Acct-Input-Gigapackets
- input-gigawords—Includes RADIUS attribute 52, Acct-Input-Gigawords
- ipv6-accounting—Excluded by default; automatically included in Interim-Acct messages when included in Acct-Stop messages; includes the following RADIUS attributes:
  - IPv6-Acct-Input-Octets [26-151]
  - IPv6-Acct-Output-Octets [26-152]
  - IPv6-Acct-Input-Packets [26-153]
  - IPv6-Acct-Output-Packets [26-154]
  - IPv6-Acct-Input-Gigawords [26-155]
  - IPv6-Acct-Output-Gigawords [26-156]
- ipv6-local-interface—Excluded by default; includes RADIUS attribute 26-46, Ipv6-Local-Interface; the attribute value received from the RADIUS server in the Access-Accept message is used in the accounting messages; if IPv6 local interface is configured in the AAA domain map and is not returned from the RADIUS server, the Acct-Start, Acct-Stop, or Interim-Acct messages report the value configured in the domain map
- ipv6-nd-ra-prefix—Excluded by default; includes RADIUS attribute 26-129, Ipv6-NdRa-Prefix; the attribute value received from the RADIUS server in the Access-Accept message is included in the accounting messages; for dynamic interfaces, if the Ipv6-NdRa-Prefix attribute is configured in the profile and is not returned from RADIUS server, this attribute is not included in the Acct-Start, Acct-Stop, and Interim-Acct messages
- ipv6-primary-dns—Excluded by default; includes RADIUS attribute 26-47, Ipv6-Primary-DNS; the attribute value received from the RADIUS server in the Access-Accept message is used in the accounting messages; if the IPv6 primary DNS server is configured in the AAA domain map and is not returned from the RADIUS server, the Acct-Start, Acct-Stop, or Interim-Acct messages report the value configured in the AAA domain map
- ipv6-secondary-dns—Excluded by default; includes RADIUS attribute 26-48, Ipv6-Secondary-DNS; the attribute value received from the RADIUS server in the Access-Accept message is used in the accounting messages; if the IPv6 secondary DNS server is configured in the AAA domain map and is not returned from the RADIUS server, the Acct-Start, Acct-Stop, or Interim-Acct messages report the value configured in the AAA domain map
- ipv6-virtual-router—Excluded by default; includes RADIUS attribute 26-45, Ipv6-Virtual-Router

- The attribute value received from the RADIUS server in the Access-Accept message is used in the accounting messages
- If the IPv6 virtual router is configured in the AAA domain map and is not returned from the RADIUS server, the Acct-Start, Acct-Stop, or Interim-Acct messages report the value configured in the domain map
- If IPv6 virtual router is not configured in the AAA domain map and is not returned from the RADIUS server, it is not included in the Acct-Start message because the value is not yet known
- If the IPv6 virtual router context is configured from the profile, it is reported in the immediate-update message for DHCPv6 prefix delegation
- l2tp-ppp-disconnect-cause—Includes RADIUS attribute 26-51, Disconnect-Cause
- output-gigapkts—Includes RADIUS attribute 26-36, Acct-Output-Gigapackets
- output-gigawords—Includes RADIUS attribute 53, Acct-Output-Gigawords

Attributes available for Access-Request, Acct-Start, Acct-Stop, Acct-On, and Acct-Off messages:

- nas-identifier—Includes RADIUS attribute 32, NAS-Identifier

Attributes available for Access-Request, Acct-On, and Acct-Off messages:

- acct-session-id—Includes RADIUS attribute 44, Acct-Session-Id; can be optionally included in the change-of-authorization (CoA) message from the RADIUS server or in the user login request if the packet mirroring operation is required; the Acct-Session-Id VSA is used:
  - In the RADIUS-initiated CoA message to start the mirroring session when the user is already logged in
  - As a trigger in user-initiated mirroring to identify the user whose traffic is to be mirrored

Attributes available for Acct-Start, Acct-Stop, Acct-On, and Acct-Off messages:

- event-timestamp—Includes RADIUS attribute 55, Event-Timestamp

Attributes available for Acct-On and Acct-Off messages only:

- acct-authentic—Includes RADIUS attribute 45, Acct-Authentic
- acct-delay-time—Includes RADIUS attribute 41, Acct-Delay-Time

Attributes available for Acct-Off messages only:

- acct-terminate-cause—Includes RADIUS attribute 49, Acct-Terminate-Cause
- access-request—Specifies RADIUS Access-Request messages
- acct-on—Specifies RADIUS Acct-On messages
- acct-off—Specifies RADIUS Acct-Off messages

- acct-start—Specifies RADIUS Acct-Start messages
- acct-stop—Specifies RADIUS Acct-Stop messages
- enable—Enables attribute inclusion
- disable—Disables attribute inclusion; the attribute is excluded

**Mode**    Global Configuration

## radius include dsl-forum-attributes

**Syntax** radius include dsl-forum-attributes  
 { access-request | acct-start | acct-stop } { enable | disable }  
 no radius include dsl-forum-attributes { access-request | acct-start | acct-stop }

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Enables the inclusion of a set of DSL Forum vendor-specific attributes (VSAs) in Access-Request, Acct-Start, or Acct-Stop messages that the router sends to RADIUS. If you specify the Acct-Stop message, the router also includes the DSL Forum VSAs in outgoing RADIUS Interim-Acct messages. The **no** version restores the default behavior, which excludes the DSL Forum VSAs from these outgoing RADIUS messages.

If you enable the inclusion of DSL Forum VSAs in RADIUS messages, the router includes all of the following DSL Forum VSAs in the specified message type, provided that the VSA is available in the information that the router receives from the DSLAM.

Agent-Circuit-Id [26-1]	Maximum-Data-Rate-Downstream [26-136]
Agent-Remote-Id [26-2]	Minimum-Data-Rate-Upstream-Low-Power [26-137]
Actual-Data-Rate-Upstream [26-129]	Minimum-Data-Rate-Downstream-Low-Power [26-138]
Actual-Data-Rate-Downstream [26-130]	Maximum-Interleaving-Delay-Upstream [26-139]
Minimum-Data-Rate-Upstream [26-131]	Actual-Interleaving-Delay-Upstream [26-140]
Minimum-Data-Rate-Downstream [26-132]	Maximum-Interleaving-Delay-Downstream [26-141]
Attainable-Data-Rate-Upstream [26-133]	Actual-Interleaving-Delay-Downstream [26-142]
Attainable-Data-Rate-Downstream [26-134]	Access-Loop-Encapsulation [26-144]
Maximum-Data-Rate-Upstream [26-135]	IWF-Session [26-254]

- Options**
- access-request—Specifies RADIUS Access-Request messages
  - acct-start—Specifies RADIUS Acct-Start messages
  - acct-stop—Specifies RADIUS Acct-Stop messages and Interim-Acct messages
  - enable—Causes the router to include the DSL Forum VSAs, if available, in the specified outgoing RADIUS message
  - disable—Causes the router to exclude the DSL Forum VSAs from the specified outgoing RADIUS message; this is the default behavior

**Mode**    Global Configuration

## radius nas-identifier

---

**Syntax**    radius nas-identifier *identifierValue*  
              no radius nas-identifier

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the RADIUS client's value for RADIUS attribute 32, NAS-Identifier. The **no** version deletes the NAS-Identifier.

**Options**    • *identifierValue*—Number, in the range 1–64 characters; used in the NAS-Identifier attribute for authentication and accounting requests

**Mode**    Global Configuration

## radius nas-port-format

---

**Syntax**    radius nas-port-format { 0ssssppp | ssss0ppp }

no radius nas-port-format

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the RADIUS client's use of a specific format for RADIUS attribute 5, NAS-Port. The NAS-Port format attribute is set only for ATM and Ethernet interfaces. The format is a 4-octet integer in which only the bits representing slot and port are changed. The remaining bits are not changed (8 bits VPI and 16 bits VCI; or 12 bits S-VLAN and 12 bits VLAN). The **no** version removes the format.



**NOTE:** For subscribers connected over the link aggregation group (LAG) interface in DHCP standalone authenticate mode, RADIUS derives a unique value from the subscriber's profileHandle and uses the value for the Nas-Port attribute. You cannot use this command to change the value of the Nas-Port attribute.

- Options**
- 0ssssppp—Sets the RADIUS client to use the 0ssssppp format where *s* is slot and *p* is port
  - ssss0ppp—Sets the RADIUS client to use the ssss0ppp format where *s* is slot and *p* is port

**Mode**    Global Configuration



## radius nas-port-format extended

**Syntax** For ATM interfaces:

```
radius nas-port-format extended atm [ field-widths [ slot slotWidth ]
[ adapter adapterWidth ] [ port portWidth ] [ vpi vpiWidth ] [ vci vciWidth ] ]
```

```
no radius nas-port-format extended atm
```

For Gigabit and 10-Gigabit Ethernet interfaces:

```
radius nas-port-format extended ethernet [ field-widths [ slot slotWidth ]
[ adapter adapterWidth ] [ port portWidth ] [ svlan svlanWidth ] [ vlan vlanWidth ] ]
```

```
no radius nas-port-format extended ethernet
```

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** Configures the RADIUS client's use of an extended format for RADIUS attribute 5, NAS-Port, on ATM, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces on the E120 router and the E320 router. If you do not set the extended format for E120 or E320 routers, the RADIUS client uses the default format set through the **radius nas-port-format** command, which does not accommodate the number of bits required by the ATM interface specifier *slot/adapter/port/vpi/vci* or the Gigabit Ethernet and 10-Gigabit Ethernet interface specifier *[ slot/adapter/port ] [ .vlanSubinterface ]* on E120 and E320 routers. Issuing this command enables you to encode the interface information in the attribute by specifying the number of bits available for each field in the interface specifier. The **no** version removes the format.



### NOTE:

- You must use this command with the **extended** keyword when you configure the NAS-Port format attribute on routers that have line modules that support more than seven physical ports.
- If you do not specify a value for a field, the number of bits is set to 0. The total number of bits for all fields cannot exceed 32. When the total number of bits is less than 32, the NAS-Port attribute is right-justified and the extra bits are set to 0.

- Options**
- *field-widths*—Configures the width of the fields in the NAS-Port attribute
  - *slotWidth*—Number of bits for the slot field; default value is 5
  - *adapterWidth*—Number of bits for the adapter field; default value is 0
  - *portWidth*—Number of bits for the port field; default value is 3
  - *vpiWidth*—Number of bits for the VPI subinterface field on ATM interfaces; default value is 8

- *vciWidth*—Number of bits for the VCI subinterface field on ATM interfaces; default value is 16
- *svlanWidth*—Number of bits for the S-VLAN subinterface field on Gigabit Ethernet and 10-Gigabit Ethernet interfaces; default value is 12



.....

**NOTE:** You must include S-VLAN IDs in the NAS-Port attribute by issuing the **radius vlan nas-port-format stacked** command for setting valid S-VLAN widths.

.....

- *vlanWidth*—Number of bits for the VLAN subinterface field on Gigabit Ethernet and 10-Gigabit Ethernet interfaces; default value is 12

**Mode**    Global Configuration

## radius override calling-station-id remote-circuit-id

---

**Syntax** radius override calling-station-id remote-circuit-id  
no radius override calling-station-id

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures RADIUS to override the standard use of the Calling-Station-Id [31] RADIUS attribute and instead use the PPPoE remote circuit ID transmitted from a DSLAM device. The **no** version restores the default Calling-Station-Id value, which is the telephone number from which the call originated.

**Mode** Global Configuration

## radius override nas-info

---

**Syntax** [ no ] radius override nas-info

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the RADIUS client for a virtual router context to override the standard use of the NAS-IP-Address [4] and NAS-Identifier [32] attributes when the client performs AAA broadcast accounting. Normally, AAA accounting packets include the NAS-IP-Address and NAS-Identifier attributes of the virtual router that generates the accounting information. However, this command specifies that the broadcast accounting packets instead include the authenticating virtual router's NAS-IP-Address and NAS-Identifier attributes. The **no** version restores the standard use of the two attributes in AAA accounting information.

**Mode** Global Configuration

## radius override nas-ip-addr tunnel-client-endpoint

---

**Syntax**    radius override nas-ip-addr tunnel-client-endpoint  
              no radius override nas-ip-addr

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the RADIUS client (LNS) to override the standard use of the NAS-IP-Address [4] RADIUS attribute and instead use the tunnel-client-endpoint (LAC) IP address. The **no** version restores the default address.

**Mode**    Global Configuration

## radius override nas-port-id remote-circuit-id

---

**Syntax**    radius override nas-port-id remote-circuit-id  
              no radius override nas-port-id

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures RADIUS to override the standard use of the NAS-Port-Id [87] RADIUS attribute and instead use the PPPoE remote circuit ID transmitted from a DSLAM device. The **no** version restores the default NAS-Port-Id value, which is the physical interface of the network access server (NAS) that is authenticating the user.



.....  
**NOTE:** For subscribers connected over the link aggregation group (LAG) interface in DHCP standalone authenticate mode, RADIUS uses the LAG interface ID for the Nas-Port-Id attribute.  
.....

**Mode**    Global Configuration

## radius per-profile-attr-list

---

<b>Syntax</b>	[ no ] radius per-profile-attr-list <i>profileName</i>
<b>Release Information</b>	Command introduced in JunosE Release 12.1.0.
<b>Description</b>	Creates a new RADIUS per-profile attribute list and puts the E Series router into RADIUS-Profile Configuration mode. The <b>no</b> version removes the configured RADIUS per-profile attribute list. By default, no attribute list is configured.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>profileName</i>—Name of the RADIUS per-profile; string of up to 32 characters</li></ul>
<b>Mode</b>	Global Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring a Per-Profile RADIUS Attribute List</i> in the <i>JunosE Broadband Access Configuration Guide</i></li><li>• <a href="#">radius include on page 323</a></li></ul>

## radius per-profile-attr-list (For Global Configuration)

---

**Syntax** radius per-profile-attr-list *profileName* request-type { access-request | acct-start | acct-stop } { enable | disable } attributes [ *attributeName* ]\*

[ no ] radius per-profile-attr-list *profileName*

**Release Information** Command introduced in JunosE Release 12.1.0.

**Description** Allows the user to configure a RADIUS per-profile list with attributes. The **no** version removes the configured RADIUS per-profile attribute list. By default, no attribute list is configured.

- Options**
- *profileName*—Name of the RADIUS per-profile; string of up to 32 characters
  - access-request—Configures RADIUS to include the attribute in Access-Request packets
  - acct-start—Configures RADIUS to include the attribute in Acct-Start packets
  - acct-stop—Configures RADIUS to include the attribute in Acct-Stop packets and Acct-Update message
  - enable—Includes the attribute in the request packets
  - disable—Excludes the attribute in the request packets
  - *attributeName*—The following RADIUS attributes can be specified:
    - calling-station-id
    - override-nas-ip-addr
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line

**Mode** Global Configuration

- Related Documentation**
- *Configuring a RADIUS Per-Profile Attribute List* in the *JunosE Broadband Access Configuration Guide*
  - [radius include on page 323](#)
  - [radius override nas-ip-addr tunnel-client-endpoint on page 339](#)



## radius-perprofilelist-name

---

**Syntax** [ no | default ] radius-perprofilelist-name [ *perProfileName* ]

**Release Information** Command introduced in JunosE Release 12.1.0.

**Description** Allows the user to attach RADIUS per-profile name in an AAA profile. The **no** version restores the default value. By default, the profile name is not configured.

**Options** • *perProfileName*—Name of RADIUS per-profile; string of up to 32 characters

**Mode** AAA Profile Configuration

## radius pppoe nas-port-format unique

---

**Syntax** [ no ] radius pppoe nas-port-format unique

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Allows the E Series RADIUS client to use a unique value for the NAS-Port attribute for subscribers on PPPoE interfaces. The router derives the unique value from the subscriber's profileHandle. The **no** version restores the default value, determined by the interface.



.....

**NOTE:** For subscribers connected over the link aggregation group (LAG) interface in DHCP standalone authenticate mode, RADIUS derives a unique value from the subscriber's profileHandle and uses the value for the Nas-Port attribute. You cannot use this command to change the value of the Nas-Port attribute.

.....

**Mode** Global Configuration

## radius pre-authentication server

---

**Syntax** [ no ] radius pre-authentication server *ipAddress*

**Release Information** Command introduced in JunosE Release 8.1.0.

**Description** Specifies the IP address of a RADIUS preauthentication server and accesses RADIUS Configuration mode. The **no** version deletes the instance of the RADIUS preauthentication server.

**Options** • *ipAddress*—IP address of the server

**Mode** Global Configuration

## radius relay server

---

**Syntax**    radius relay { authentication | accounting } server  
              no radius relay [ { authentication | accounting } server ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures a RADIUS relay authentication or accounting server, and enters RADIUS Relay Configuration mode. The **no** version deletes all RADIUS relay servers or the specific authentication or accounting server.

**Options**    • authentication—Configure the RADIUS relay authentication server  
              • accounting—Configure the RADIUS relay accounting server

**Mode**    Global Configuration

## radius relay udp-checksum

---

**Syntax** radius relay udp-checksum { enable | disable }  
no radius relay udp-checksum

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables or disables UDP checksum for RADIUS relay packets on virtual routers that you configure for B-RAS. The **no** version restores the default value, enable.

- Options**
- enable—Enables UDP checksum
  - disable—Disables UDP checksum

**Mode** Global Configuration

## radius remote-circuit-id-delimiter

---

**Syntax**    radius remote-circuit-id-delimiter *delimiter*  
              no radius remote-circuit-id-delimiter

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the delimiter character that sets off components in the PPPoE remote circuit ID value sent from a DSLAM and captured on the router. The **no** version restores the default delimiter character, #.

**Options**    • *delimiter*—Special character (for example, ! or %) to set off components in the PPPoE remote circuit ID value captured from a DSLAM; the default delimiter character is #

**Mode**    Global Configuration

## radius remote-circuit-id-format

**Syntax** radius remote-circuit-id-format { [ nas-identifier ] { agent-circuit-id | agent-remote-id | agent-circuit-id agent-remote-id } | dsl-forum-1 }

no radius remote-circuit-id format

**Release Information** Command introduced before JunosE Release 7.1.0.  
**dsl-forum-1** keyword added in JunosE Release 7.2.0.

**Description** Specifies the format of the PPPoE remote circuit ID value sent from a DSLAM and captured on the router. You can format the PPPoE remote circuit ID value to include either or both of the agent-circuit-ID (suboption 1) and agent-remote-id (suboption 2) suboptions of the DHCP relay agent information option (option 82) or the PPPoE intermediate agent tags, with or without the NAS-Identifier [32] RADIUS attribute. The **no** version restores the default format, agent-circuit-id.

- Options**
- **nas-identifier**—Formats the PPPoE remote circuit ID value to include the NAS-Identifier [32] RADIUS attribute with either or both of the agent-circuit-id and agent-remote-id suboptions. If you include the **nas-identifier** keyword, you must also include either or both of the **agent-circuit-id** and **agent-remote-id** keywords.
  - **agent-circuit-id**—Formats the PPPoE remote circuit ID value to include only the agent-circuit-id suboption; this is the default format
  - **agent-remote-id**—Formats the PPPoE remote circuit ID value to include only the agent-remote-id suboption
  - **agent-circuit-id agent-remote-id**—Formats the PPPoE remote circuit ID value to include both the agent-circuit-id and agent-remote-id suboptions
  - **dsl-forum-1**—Formats the PPPoE remote circuit ID value to append the agent-circuit-id suboption value to an interface specifier that is consistent with the recommended format in the DSL Forum Technical Report (TR)-101—Migration to Ethernet-Based DSL Aggregation (April 2006).

**Mode** Global Configuration

## radius rollover-on-reject

---

**Syntax**    radius rollover-on-reject { enable | disable }  
              no radius rollover-on-reject

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    On a virtual router, specifies whether the router should roll over to the next RADIUS server when the router receives an access-reject message for the user it is authenticating. The **no** version restores the default value, disable.

**Options**

- enable—Specifies the feature
- disable—Disables the feature; this is the default setting

**Mode**    Global Configuration



## radius route-download server

---

**Syntax** [ no ] radius route-download server *ipAddress*

**Release Information** Command introduced in JunosE Release 8.1.0.

**Description** Specifies the IP address of a RADIUS server that downloads routes and puts the E Series router into RADIUS Configuration mode. The **no** version deletes the instance of the RADIUS route-download server.

**Options** • *ipAddress*—IP address of the RADIUS server

**Mode** Global Configuration

## radius trap acct-server-not-responding

---

**Syntax**    radius trap acct-server-not-responding { enable | disable }  
              no radius trap acct-server-not-responding

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables or disables SNMP traps when a RADIUS accounting server fails to respond to a RADIUS accounting request. The **no** version restores the default, disable.

**Options**    • enable—Specifies the feature  
              • disable—Disables the feature; this is the default setting

**Mode**    Global Configuration

## radius trap acct-server-responding

---

**Syntax**    radius trap acct-server-responding { enable | disable }  
              no radius trap acct-server-responding

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables or disables SNMP traps when a RADIUS accounting server returns to service after being marked as unavailable. The **no** version restores the default, disable.

**Options**    • enable—Specifies the feature  
              • disable—Disables the feature; this is the default setting

**Mode**    Global Configuration

## radius trap auth-server-not-responding

---

**Syntax**    radius trap auth-server-not-responding { enable | disable }  
             no radius trap auth-server-not-responding

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables or disables SNMP traps when a RADIUS authentication server fails to respond to a RADIUS Access-Request message. The **no** version restores the default, disable.

**Options**    • enable—Specifies the feature  
             • disable—Disables the feature; this is the default setting

**Mode**    Global Configuration

## radius trap auth-server-responding

---

**Syntax**    radius trap auth-server-responding { enable | disable }  
              no radius trap auth-server-responding

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables or disables SNMP traps when a RADIUS authentication server returns to service after being marked as unavailable. The **no** version restores the default, disable.

**Options**    • enable—Specifies the feature  
              • disable—Disables the feature; this is the default setting

**Mode**    Global Configuration

## radius trap no-acct-server-responding

---

**Syntax**    radius trap no-acct-server-responding { enable | disable }  
              no radius trap no-acct-server-responding

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables or disables SNMP traps when all the configured RADIUS accounting servers per VR fail to respond to a RADIUS accounting request. The **no** version restores the default, disable.

**Options**

- enable—Specifies the feature
- disable—Disables the feature; this is the default setting

**Mode**    Global Configuration

## radius trap no-auth-server-responding

---

**Syntax**    radius trap no-auth-server-responding { enable | disable }  
              no radius trap no-auth-server-responding

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables or disables SNMP traps when all the configured RADIUS authentication servers per VR fail to respond to a RADIUS Access-Request message. The **no** version restores the default, disable.

**Options**    • enable—Specifies the feature  
              • disable—Disables the feature; this is the default setting

**Mode**    Global Configuration

## radius tunnel-accounting

---

**Syntax**    radius tunnel-accounting { enable | disable }  
              no radius tunnel-accounting

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables or disables tunnel accounting. The **no** version restores the default value, disable.

**Options**    • enable—Specifies the feature  
              • disable—Disables the feature; this is the default setting

**Mode**    Global Configuration



## radius udp-checksum

---

**Syntax**    radius udp-checksum { enable | disable }  
              no radius udp-checksum

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables or disables UDP checksum for RADIUS packets on virtual routers that you configure for B-RAS. The **no** version restores the default value, enable.

**Options**    • enable—Specifies the feature; this is the default setting  
              • disable—Disables the feature

**Mode**    Global Configuration

## radius update-source-addr

---

**Syntax**    radius update-source-addr *sourceAddr*  
              no radius update-source-addr

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies an alternate source IP address for the router to use rather than the default router ID. The **no** version deletes the alternate address, and the router uses the router ID.

**Options**    • *sourceAddr*—Source address of the RADIUS client

**Mode**    Global Configuration

---

## radius vlan nas-port-format stacked

---

**Syntax**    radius vlan nas-port-format stacked  
              no radius vlan nas-port-format

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the RADIUS NAS-Port attribute to include the S-VLAN ID, in addition to the VLAN ID, for subscribers on Ethernet interfaces. The **no** version restores the default situation, which does not include the S-VLAN ID.



.....  
**NOTE:** For subscribers connected over the link aggregation group (LAG) interface in DHCP standalone authenticate mode, RADIUS derives a unique value from the subscriber's profileHandle and uses the value for the Nas-Port attribute. You cannot use this command to change the value of the Nas-Port attribute.  
.....

**Mode**    Global Configuration

## range

---

**Syntax**    *range minimumParameterValue maximumParameterValue*  
*no range*

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Assigns a range of minimum and maximum values to a specific QoS parameter definition. QoS clients can specify only values within this range when creating QoS parameter instances. The **no** version removes the range from the QoS parameter definition.

- Options**
- *minimumParameterValue*—Minimum parameter value, in the range 0–2147483647
  - *maximumParameterValue*—Maximum parameter value, in the range 0–2147483647

**Mode**    QoS Parameter Definition

**Related Documentation**

- [Configuring a Basic Parameter Definition for QoS Administrators](#)

## rate-limit-profile

**Syntax** To create or modify a rate-limit profile:

```
[ no ] profileType rate-limit-profile profileName [ rateLimitType ]
```

To specify a rate-limit profile in a policy in classifier-group mode:

```
[ no ] [ suspend ] rate-limit-profile profileName
```

To create a hierarchical rate-limit profile:

```
[ no ] rate-limit-profile profileName [ two-rate | one-rate ] hierarchical
```

To specify a rate-limit for an external parent group:

```
rate-limit-profile profileName
```

```
no rate-limit-profile
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**hierarchical** keyword added in JunosE Release 7.2.0.  
 Parent Group Configuration mode added in JunosE Release 8.0.0.

**Description** From Global Configuration mode, creates a rate-limit profile and enters Rate Limit Profile Configuration mode. The **no** version deletes the rate-limit profile.

From Classifier Group Configuration mode, creates a rate-limit profile rule in a policy list. The **no** version removes a rate-limit profile from a policy list; the **suspend** version suspends the rule; the **no suspend** resumes a suspended rule.



**NOTE:** The Classifier Group Configuration mode version of the **rate-limit-profile** command replaces the Policy List Configuration mode version, which may be removed completely in a future release.

From Parent Group Configuration mode, creates a parent group in a hierarchy.

The **hierarchical** keyword creates a hierarchical rate limit. The **no** version removes a hierarchical rate-limit profile.

- Options**
- *profileType*—ip, ipv6, l2tp, or mpls; for backward compatibility, if you do not specify a profile type, the router creates an IP profile
  - *profileName*—Name of the rate-limit profile
  - *rateLimitType*—One-rate or two-rate

**Mode** Classifier Group Configuration, Global Configuration, Parent Group Configuration

- Related Documentation**
- Policy Rule Precedence
  - Creating a One-Rate Rate-Limit Profile
  - Creating a Two-Rate Rate-Limit Profile

## rate-period

---

**Syntax**    `rate-period ratePeriod`

`no rate-period`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the length of time during which statistics are logged. The **no** version deletes the rate period and results in no statistics being gathered.

**Options**    • *ratePeriod*—Number of seconds in the range 1–43200

**Mode**    Statistics Profile Configuration

**Related Documentation**    • Configuring Rate Statistics  
• Configuring Event Statistics

## rd

---

**Syntax** `rd distinguisher`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the unique two-part route distinguisher for a VRF. You must specify a route distinguisher for a VRF. Otherwise, the VRF will not operate. After you have configured the route distinguisher, you can change it only by removing and recreating the VRF.

There is no **no** version.

- Options**
- *distinguisher*—Unique two-part identifier in the format *number1:number2*
    - *number1*—AS number or an IP address
    - *number2*—Unique integer; 32 bits if *number1* is an AS number; 16 bits if *number1* is an IP address

**Mode** VRF Configuration



## reaction-factor

---

**Syntax**    `reaction-factor` *reactionFactor*

`no reaction-factor`

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Specifies the reaction factor for all simple shared shapers on the router. The reaction factor determines how the shared shaper reacts to changes in the measured rate. The **no** version removes the specified reaction factor from all simple shared shapers on the router.

**Options**    • *reaction-factor*—Percentage in the range 0–1000; default value is 200

**Mode**    QoS Shared Shaper Control Configuration

**Related Documentation**    • [Configuring Simple Shared Shaper Algorithm Variables](#)

## receive-interface

---

**Syntax**    `receive-interface interfaceType interfaceSpecifier`

`no receive-interface`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the interface on which the RTR probe expects to receive responses. You must set this attribute when multiple RTR entries are configured to use the same target address. Specifying a receiving interface enables the router to map incoming RTR responses to the proper RTR entry, even when multiple RTR entries have the same target address. The **no** version restores the default value, which is to receive a response on any interface.

**Options**

- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)

**Mode**    RTR Configuration

## receive version

---

**Syntax** [ no ] receive version [ 1 ] [ 2 ] [ off ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Restricts the RIP version that the router can receive on a RIP remote-neighbor interface. The **no** version sets the remote-neighbor interface back to the default value, receiving both RIP version 1 and version 2.

- Options**
- 1—Specifies RIP version 1 only
  - 2—Specifies RIP version 2 only
  - off—Turns reception off

**Mode** Remote Neighbor Configuration

## receive-window

---

**Syntax**    `receive-window receiveWindowSize`

`no receive-window`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the L2TP receive window size (RWS) for a tunnel on the LAC (in Domain Map Tunnel Configuration and Tunnel Group Tunnel Configuration modes) or on the LNS (in L2TP Destination Profile Host Configuration mode). The RWS is the number of packets that the peer can transmit without receiving an acknowledgment from the router. The **no** version reverts to the systemwide RWS setting configured with the `l2tp tunnel default-receive-window` command.

**Options**

- *receiveWindowSize*—Tunnel receive window size, in packets; currently, the only supported value is 4

**Mode**    Domain Map Tunnel Configuration, L2TP Destination Profile Host Configuration, Tunnel Group Tunnel Configuration

## redistribute

**Syntax** The options available vary depending on the routing protocol context; that is, on whether you are configuring BGP, DVMRP, IS-IS, OSPF, or RIP.

For BGP:

```
redistribute { fromProtocol | [ ospf match internal [ external [ 1 | 2 ] ] |
ospf match external [ 1 | 2 ] [ internal ] ] } [ metric absoluteValue |
route-map mapTag | weight wtValue ]*
```

```
no redistribute { fromProtocol | [ ospf match internal [ external [ 1 | 2 ] ] |
ospf match external [ 1 | 2 ] [ internal ] ] } [ metric [ absoluteValue ] |
route-map [ mapTag ] | weight [ wtValue ] ]*
```

For DVMRP:

```
[ no ] redistribute fromProtocol [ route-map mapTag ]
```

For IS-IS:

```
redistribute { fromProtocol | static ip |
[ ospf match internal [ external [ 1 | 2 ] ] |
ospf match external [ 1 | 2 ] [ internal ] ] } [ level-1 | level-1-2 | level-2 |
metric absoluteValue | metric-type { external | internal } |
route-map mapTag ]*
```

```
no redistribute { fromProtocol | static ip |
[ ospf match internal [ external [ 1 | 2 ] ] |
ospf match external [ 1 | 2 ] [ internal ] ] } [ level-1 | level-1-2 | level-2 |
metric [ absoluteValue ] | metric-type [ external | internal ] | route-map [ mapTag ] ]*
```

For OSPFv2:

```
redistribute { fromProtocol | ospf match internal }
[ metric-type { 1 | 2 } | metric absoluteValue | route-map mapTag | tag tagValue ]*
```

```
no redistribute { fromProtocol | ospf match internal }
[ metric-type [ 1 | 2 ] | metric [ absoluteValue ] | route-map [ mapTag ] |
tag [ tagValue ] ]*
```

```
redistribute ospf
{ match internal external [ 1 | 2 ] | match external [ 1 | 2 ] [ internal ] }
[ metric absoluteValue | route-map mapTag | tag tagValue ]*
```

```
no redistribute ospf
{ match internal external [ 1 | 2 ] | match external [ 1 | 2 ] [ internal ] }
[ metric [ absoluteValue ] | route-map [ mapTag ] | tag [ tagValue ] ]*
```

For OSPFv3:

```
redistribute { fromProtocol | ospf match internal } | metric-type { 1 | 2 }
```

```
[ metric absoluteValue | tag tagValue | route-map mapTag ]*

no redistribute { fromProtocol | ospf match internal } | metric-type [ 1 | 2 ]
[ metric [ absoluteValue ] | tag [ tagValue ] | route-map [ mapTag ] ]*

[ no ] redistribute ospf
{ match internal external [ 1 | 2 ] | match external [ 1 | 2 ] [ internal ] }
[ metric [ absoluteValue ] | route-map [ mapTag ] | tag [ tagValue ] ]*

For RIP:

redistribute { fromProtocol | ospf match internal [ external [ 1 | 2 ] ] |
ospf match external [ 1 | 2 ] [ internal ] } [ metric absoluteValue |
route-map mapTag ]*

no redistribute { fromProtocol | ospf match internal } [ external [ 1 | 2 ] ] |
ospf match external [ 1 | 2 ] [ internal ] } [ metric [ absoluteValue ] |
route-map [ mapTag ] ]*
```

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Redistributes routes from one routing domain into another routing domain. For DVMRP, only routes that appear in the RPF table can be redistributed. The **no** version ends redistribution of information.

- Options**
- *fromProtocol*—Source protocol from which routes are being redistributed; default value is no source protocol defined
    - *access*—Redistributes access-server routes (framed routes sourced by AAA)
    - *access-internal*—Redistributes internal host routes to directly connected clients
    - *bgp*—Routes sourced from BGP protocol
    - *connected*—Routes that are established automatically when IP is enabled on an interface (non-multicast routing protocols). For routing protocols such as OSPF and IS-IS, these routes are redistributed as external to the AS. When you specify the **connected** keyword, only those connected networks that are configured on an interface that is *not* configured to run IS-IS will be redistributed. For DVMRP, specifying this keyword redistributes routes that are established automatically in the RPF table when another multicast routing protocol, such as PIM, is enabled on an interface.
    - *dvmrp*—Routes sourced from DVMRP
    - *isis*—Routes sourced from IS-IS
    - *ospf*—Routes sourced from OSPF
    - *rip*—Routes sourced from RIP
    - *static*—Redistributes static routes
  - *static ip*—Redistributes static routes for IS-IS

- *ospf match*—Determines what type(s) of routes to redistribute from OSPF; all OSPF routes are redistributed if you do not specify a type
  - *internal*—Redistributes OSPF internal routes
  - *external 1*—Redistributes OSPF external routes of metric-type 1
  - *external 2*—Redistributes OSPF external routes of metric-type 2
- *absoluteValue*—Metric that is applied to all routes from the source protocol, in the range 0–4294967295; in BGP this value is the MED, which defaults to the IGP metric of the redistributed route
- *mapTag*—String of up to 32 alphanumeric characters that specifies a route map applied to all routes from the source protocol; all routes are redistributed if you do not specify a route map
- *wtValue*—Administrative weight (relative importance) for routes redistributed into the protocol; a number, in the range 0–65535
- *level-1*—Specifies the redistribution of routes into only IS-IS level 1
- *level-1-2*—Specifies the redistribution of routes into both IS-IS level 1 and level 2
- *level-2*—Specifies the redistribution of routes into only IS-IS level 2; this is the default behavior
- *metric-type*—Specifies the OSPF or IS-IS metric type for all routes from the source protocol

For routes redistributed into IS-IS:

- *metric-type external*—Only the metric of the route itself is considered for comparison
- *metric-type internal*—Both the metric of the route and the cost to the router that advertised the route are considered for comparison; this is the IS-IS default

For routes redistributed into OSPF:

- *metric-type 1*—Cost of the external routes is equal to the sum of all internal costs and the external cost
- *metric-type 2*—Cost of the external routes is equal to the external cost alone; this is the OSPF default
- *tagValue*—Tag that is applied to all routes from the source protocol, in the range 0–4294967295
- *\**—Indicates that one or more parameters can be repeated multiple times in a list in the command line

**Mode**    Address Family Configuration, Router Configuration

## redistribute isis

---

**Syntax** [ no ] redistribute isis from { level-1 into level-2 | level-2 into level-1 }  
route-map *mapTag*

**Release Information** Command introduced in JunosE Release 8.2.0.

**Description** Redistributes IPv6 routes from one IS-IS routing level into the other. The **no** version ends the redistribution.

**Options**

- **level-1**—Specifies the redistribution of routes from or into IS-IS level 1
- **level-2**—Specifies the redistribution of routes from or into IS-IS level 2
- **mapTag**—String of up to 32 alphanumeric characters specifying the route map applied to all routes from the source protocol; if you do not specify a route map, all routes are redistributed

**Mode** Address Family Configuration



## redistribute isis ip

---

**Syntax** [ no ] redistribute isis ip { level-1 into level-2 | level-2 into level-1 }  
{ distribute-list *accessListName* | route-map *mapTag* }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Redistributes routes from one IS-IS routing level into the other. You must specify either an IP access list or a route map to define the IS-IS routes to be redistributed. The **no** version ends the redistribution.

- Options**
- **level-1**—Specifies the redistribution of routes from or into IS-IS level 1
  - **level-2**—Specifies the redistribution of routes from or into IS-IS level 2
  - ***accessListName***—String of up to 32 alphanumeric characters specifying the IP access list used to filter routes between levels
  - ***mapTag***—String of up to 32 alphanumeric characters specifying the route map applied to all routes from the source protocol; if you do not specify a route map, all routes are redistributed

**Mode** Router Configuration

## red-mark

---

**Syntax** [ no ] red-mark *colorMarkValue*

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Applies ToS mark value to red packets, which can be from policy actions, earlier policies, or rate-limit hierarchies. The **no** version deletes the ToS mark value.

**Options**

- *colorMarkValue*—Value of the ToS mark to be applied, in the range 0–255

**Mode** Color Mark Profile Configuration

**Related Documentation**

- Hierarchical Rate Limits Overview
- Policy Rule Precedence

## redundancy

---

**Syntax**   redundancy

**Release Information**   Command introduced before JunosE Release 7.1.0.

**Description**   Enables redundancy configuration mode. There is no **no** version.

**Mode**   Global Configuration

## redundancy force-switchover

---

**Syntax**    redundancy force-switchover { *slotNumber* | srp }

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Forces the router to switch from the primary line module in the specified slot or the primary SRP module to the spare line module or SRP module. This command overrides the **redundancy lockout** command. With the **srp** option, the command is equivalent to the **srp switch** command. There is no **no** version.



.....  
**NOTE:** This command replaces the **redundancy force-failover** command, which has been deprecated.  
.....

- Options**
- *slotNumber*—Number of the slot in which the primary line module resides
  - **srp**—Indicates that the router should switch from the active to the standby SRP module

**Mode**    Privileged Exec

## redundancy lockout

---

**Syntax** [ no ] redundancy lockout *slotNumber*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Prevents the router from switching automatically to a spare line module if the primary module fails on a slot. The **no** version reverts to the default situation, in which the router switches automatically to a spare line module if the primary module fails on a slot. The **redundancy force-switchover** command overrides this command.

**Options** • *slotNumber*—Number of the slot in which the primary line module resides

**Mode** Global Configuration

## redundancy revert

---

**Syntax** [ no ] redundancy revert *slotNumber*  
[ *startTime* [ [ *startMonth startDay* | *startDay startMonth* ] *startYear* ] ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Forces the router to revert to the primary line module in the specified slot. If you specify a time or time and date, reversion occurs when the primary line module becomes available after that time. Otherwise, reversion occurs immediately. Issuing this command causes reversion once; after reboot, the router returns to the settings configured in the software. The **no** version has no effect.

- Options**
- *slotNumber*—Number of the slot in which the primary line module resides
  - *startTime*—Time, in 24-hour format (00:00:00), at which the router reverts to this line module
  - *startMonth*—Name of the month in which the router reverts to this line module
  - *startDay*—Day of the month on which the router reverts to this line module
  - *startYear*—Four-digit year in which the router reverts to this line module

**Mode** Privileged Exec

## redundancy revertive

---

**Syntax** [ no ] redundancy revertive [ *timeOfDay* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables the router to revert from spare line modules to available primary line modules automatically. The **no** version reverts to the default situation, in which there is no automatic reversion from spare to primary line modules.

**Options**

- *timeOfDay*—Time, in 24-hour format (00:00:00), at which the router reverts to the available primary line modules every day

**Mode** Global Configuration

## redundant-port

---

**Syntax** To specify a member interface with optional failover timeout and packet sampling settings:

```
[ no ] redundant-port interfaceType interfaceSpecifier [ [ failover timeout failoverTime ] [ packet-sampling [ delay delayTime ] ] ]
```

To specify a member interface with optional auto-reversion, transmitter, and failover timeout settings:

```
[ no ] redundant-port interfaceType interfaceSpecifier [ [ auto-revert ] [ transmitter { on | off } ] [ failover timeout failoverTime ] ]
```

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Specifies a member link of a LAG bundle as redundant. The **no** version disables the redundant status of the member link or disables the specified redundancy setting for the member link.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *failoverTime*—Time between the current link event leading to failover or reversion and the previous link failover or reversion, in the range 100-10000 milliseconds (ms). The default value is 1000 milliseconds.
  - packet-sampling—Enables packet sampling to determine a failed port. By default, packet sampling is disabled.
  - *delayTime*—Minimum time difference between redundant and active port samples, in the range 100–10000 milliseconds (ms). The default value is 0 millisecond.
  - auto-revert—Specifies that the failed port automatically resumes as active. By default, auto revert is disabled.
  - transmitter—Enable or disable the transmitter when in redundant mode
    - on—Enabling the transmitter provides for a quick LAG failover in the event one of the non-redundant links in the LAG fail. This is particularly true when LACP has been enabled on the LAG, because it can take several seconds for LACP to converge on a link
    - off—Disabling the transmitter enables the remote end of the redundant link to also be in the operational Down state, which might be a requirement for third-party equipment when supporting redundancy over LAG

**Mode** Global Configuration



---

## redundant-port force-failover

---

**Syntax**    `redundant-port interfaceType interfaceSpecifier [ force-failover ]`

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Specifies a member link of a LAG bundle to fail over when more than one active member link exists. There is no **no** version.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *force-failover*—Forces the specified port to fail over

**Mode**    Global Configuration

## reference-bandwidth

---

**Syntax**    `reference-bandwidth refBandwidth`  
              `no reference-bandwidth`

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Configures a reference bandwidth on which the default routing metric for an IS-IS interface is based in the absence of a configured metric. The default metric is calculated as the reference bandwidth divided by the interface's bandwidth. The **no** version removes the reference bandwidth.

**Options**    • *refBandwidth*—Number of bits per second, in the range 1000–10000000000000

**Mode**    Router Configuration

## reference-rate

---

**Syntax**    `reference-rate refRate`

`no reference-rate`

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Specifies the reference rate for the policy parameter. The **no** version sets the reference rate to the default value.

**Options**    • *refRate*—Value of reference rate, in the range 0–4294967295, default value is 65536

**Mode**    Policy Parameter Configuration

**Related Documentation**    • Policy Rule Precedence

## refresh-period

---

**Syntax**    refresh-period *period*  
              no refresh-period

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the timeout period in milliseconds between generation of RSVP refresh messages. The **no** version restores the default value, 30000 milliseconds.

**Options**    • *period*—Interval from 0–4294967295

**Mode**    RSVP Profile Configuration

---

## relearn

---

**Syntax**    `relearn { permit | deny }`  
  
              `no relearn`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Modifies the relearning subscriber policy for the subscriber (client) interfaces that belong to a bridge group or to a VPLS instance. A bridge group or a VPLS instance learns the addresses of network nodes by examining the MAC source address of every incoming packet and creating an entry in the forwarding table that consists of the address and associated interface where the packet was received. The **relearn** command defines whether subscriber interfaces that belong to a bridge group or to a VPLS instance can relearn a MAC address entry on a different interface from the one initially associated with this entry in the forwarding table. The **no** version restores the default value, permit relearning.

You cannot change the default subscriber policy values for trunk (server) interfaces that belong to a bridge group or to a VPLS instance. You also cannot change the default subscriber policy values for a VPLS virtual core interface, which acts as a trunk interface. The VPLS virtual core interface represents all the MPLS tunnels from the router to the remote VPLS edge (VE) devices.

- Options**
- **permit**—Enables the subscriber interfaces that belong to a bridge group or to a VPLS instance to relearn a MAC address entry on a different interface from the one initially associated with this entry in the forwarding table
  - **deny**—Prevents the subscriber interfaces that belong to a bridge group or to a VPLS instance from relearning a MAC address entry on a different interface from the one initially associated with this entry in the forwarding table; with this option, the interface waits until the entry expires from the forwarding table to relearn it on the new interface

**Mode**    Subscriber Policy Configuration

## reload

**Syntax** reload [ *reason* | force [ *reason* ] | in *inTime* [ *reason* ] |  
at *atTime* [ *month day* | *day month* ] [ *reason* ] | cancel | standby-srp ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Reloads the operating system in the designated interval or at the designated time. There is no **no** version.



**NOTE:** Reloading the standby SRP module causes high availability to be temporarily disabled until the standby SRP module reloads and resynchronizes with the active SRP module.

- Options**
- *reason*—Reason for the reload (1–255 characters long)
  - *force*—Prompts for confirmation to reboot if the router is in certain states, such as during the synchronization of SRP modules, that could lead to a loss of configuration data or an NVS corruption.
  - *inTime*—Interval in minutes or hours and minutes ([ *hh*: ] *mm*) at the end of which the operating system is reloaded. If the router is in a state at that time that could lead to a loss of configuration data or an NVS corruption, the reload is automatically delayed for one minute, up to five times. If the router cannot reload on its sixth attempt, the scheduled reload fails.
  - *atTime*—Time (*hh:mm* using a 24-hour clock) at which the software is reloaded. If you specify the month and day, the reload takes place at the specified time and date. If you do not specify the month and day, the reload takes place at the specified time on the current day (if the specified time is later than the current time) or on the next day (if the specified time is earlier than the current time). Specifying 00:00 schedules the reload for midnight. If the router is in a state at that time that could lead to a loss of configuration data or an NVS corruption, the reload is automatically delayed for one minute, up to five times. If the router cannot reload on its sixth attempt, the scheduled reload fails.
  - *month*—Name of the month (any number of characters in a unique string)
  - *day*—Number of the day of the month, in the range 1–31
  - *cancel*—Cancels a scheduled reload
  - *standby-srp*—Reloads the standby SRP module without having to look up its slot number to use with the **reload slot** command

**Mode** Privileged Exec

---

## reload slot

---

**Syntax** reload slot *slotNumber* [ *subsystem* ] [ force ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Reboot the module in the selected slot. You can reboot the subsystems on the SRP modules on the E120 router or the E320 router separately. There is no **no** version.

- Options**
- *slotNumber*—Number of a selected slot in the router; for ERX7xx models, a number, in the range 0–6; for ERX14xx models, a number, in the range 0–13; for the ERX310 router, a number, in the range 0–2; for E120 and E320 routers, a number, in the range 0–16
  - *subsystem*—Type of subsystem on E120 and E320 routers; use when the specified *slotNumber* is a slot that contains an SRP module
    - *srp*—Indicates the system controller (SC) on one or both SRP modules; specify this keyword to reboot only the portion of the SC on the individual SRP module
    - *fabric*—Indicates the portion of the switch fabric on the SRP modules; specify this keyword to reboot only an individual fabric slice
  - *force*—Prompts for confirmation to reboot if the router is in certain states, such as during the synchronization of SRP modules, that could lead to a loss of configuration data or an NVS corruption.

**Mode** Privileged Exec

## remote host

---

**Syntax** [ no ] remote host { *hostname* | default }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Defines an L2TP host profile. Accesses the L2TP Destination Profile Host Configuration mode. The **no** version removes an L2TP host profile.

- Options**
- *hostname*—Name the LAC must supply in the hostname AVP of the receive SCCRQ; can be up to 64 characters in length (no spaces)
  - default—Allows the LAC to use any hostname in the hostname AVP

**Mode** L2TP Destination Profile Configuration



## remote-neighbor

**Syntax** For OSPF:

```
[ no ] remote-neighbor ipAddress area { areald | arealdInt }
```

For PIM:

```
[ no ] remote-neighbor [ ipAddress | ipv6Address ] sparse-mode
```

For RIP:

```
[ no ] remote-neighbor ipAddress
```

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures an OSPF, PIM, or RIP remote neighbor. The **no** version removes the remote neighbor and any attributes configured for the neighbor.



**NOTE:** For PIM, this command is typically used when you configure PIM remote neighbors to run multicast services over BGP/MPLS VPNs. That functionality is no longer supported.

- Options**
- *ipAddress*—IPv4 address identifying the remote neighbor
  - *areald*—OSPF area ID in IP address format
  - *arealdInt*—OSPF area ID as a decimal value, in the range 0–4294967295
  - *ipv6Address*—IPv6 address identifying the remote neighbor

**Mode** Router Configuration

## rename

**Syntax** `rename [ sourcePath ] sourceFilename [ destinationPath ] destinationFilename`

**Release Information** Command introduced before JunosE Release 7.1.0.  
*hostName* and *deviceName* variables added in JunosE Release 7.2.0.

**Description** Renames a local file. There is no **no** version.



**NOTE:** You cannot change the extension of a file, for example, from .mac to .scr. See *Renaming Files* in the *JunosE System Basics Configuration Guide* for detailed information on file type usage with the **rename** command.

- Options**
- *sourcePath*—Path to the source in the format:  
*hostName*: | *deviceName*: | /incoming/*subdirectory*/ | /outgoing/*subdirectory*/
    - *hostName*:—Name of the network host
    - *deviceName*:—Name of the device specifying a flash card slot
    - *disk0*—Specifies flash card slot 0 on the primary SRP module; if no device is specified for the primary SRP module, then *disk0* is used
    - *disk1*—Specifies flash card slot 1 on the primary SRP module; source and destination file types must be .dmp; supported only on the E120 router and the E320 router
    - *standby*—Specifies flash card slot 0 on the standby SRP module for backward compatibility
    - *standby-disk0*—Specifies flash card slot 0 on the standby SRP module
    - *standby-disk1*—Specifies flash card slot 1 on the standby SRP module; source and destination file types must be .dmp; supported only on E120 and E320 routers
    - *incoming*—Specifies the router's incoming FTP directory
    - *subdirectory*—Name of a subdirectory on the router's FTP server. If the subdirectory does not exist, the router creates it.
    - *outgoing*—Specifies the router's outgoing FTP directory
  - *sourceFileName*—File to rename
  - *destinationPath*—Path to the destination in the format:  
*networkPath* | /incoming/*subdirectory* | /outgoing/*subdirectory*
    - *networkPath*—Path to the network host
    - *incoming*—Specifies the incoming router's FTP directory

- *subdirectory*—Name of a subdirectory on the router's FTP server. If the subdirectory does not exist, the router creates it.
- *outgoing*—Specifies the router's outgoing FTP directory
- *destinationFileName*—New filename

**Mode** Privileged Exec

## request-data-size

---

**Syntax**    `request-data-size requestSizeValue`

`no request-data-size`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the request payload data size. The **no** version restores the default value.

**Options**    • *requestSizeValue*—Size of the data in bytes in the request packet's payload; default value is 1 byte

**Mode**    RTR Configuration

## request-type

---

**Syntax** [ no | default ] request-type { access-request | acct-start | acct-stop }

**Release Information** Command introduced in JunosE Release 12.1.0.

**Description** Configures the RADIUS request message type. The **no** version restores the default value. By default, the access request type is configured.

**Options**

- access-request—Configures RADIUS to include the attribute in Access-Request packets
- acct-start—Configures RADIUS to include the attribute in Acct-Start packets
- acct-stop—Configures RADIUS to include the attribute in Acct-Stop packets

**Mode** RADIUS Per-Profile List Configuration

## reserve

---

**Syntax**    *reserve ipAddress macAddress*  
              *no reserve ipAddress*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    For DHCP local server clients, reserves an IP address for a specific MAC address. The **no** version removes the reservation.

**Options**    • *ipAddress*—IP address to reserve  
              • *macAddress*—MAC address for which the IP address is reserved.

**Mode**    DHCP Local Pool Configuration

---

## reserve-bandwidth

---

**Syntax**    `reserve-bandwidth { 90 | 80 | 50 }`  
`no reserve-bandwidth`

**Release Information**    Command introduced in JunosE Release 11.2.0.

**Description**    Directs the router to reserve a percentage of the total bandwidth for forwarding on a shared server port. The remaining bandwidth is used for tunnel processing. The default bandwidth percentage reserved for forwarding is 90. The **no** version reserves the default percentage of the total bandwidth, 90.



**NOTE:** This command is supported only for the ES2 10G ADV LM when configured in shared server mode. It is not supported on other line modules that support tunnel server configuration.

- Options**
- 90—Sets the percentage of reservable bandwidth on a shared server port for forwarding to 90. The remaining 10 percent is used for tunnel processing. This is the default option.
  - 80—Sets the percentage of reservable bandwidth on a shared server port for forwarding to 80. The remaining 20 percent is used for tunnel processing.
  - 50—Sets the percentage of reservable bandwidth on a shared server port for forwarding to 50. The remaining 50 percent is used for tunnel processing.

**Mode**    Tunnel Server Configuration

## resource

---

**Syntax**    `resource resourceValue`

`no resource`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the total number of triggers that the virtual router allows. The **no** version returns the resource level to its default (50).

**Options**    • *resourceValue*—Total number of triggers , in the range 1–1000, that the virtual router allows.

**Mode**    SNMP Server Event Manager Configuration



## resource if-type

**Syntax** [ no ] resource if-type { atm-active-sub-if | atm-sub-if | atm-vc | ip | ppp-link }  
 { slot *slot* | system }  
 threshold { falling *fallingValue* | hold-down-time *holdDownTime* | rising  
*risingValue* }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies threshold values for specific interface types on a slot or systemwide basis. The **no** version sets the threshold parameter to its default value (for rising, 90% of the maximum value of the resource; for falling, 1% of the maximum value of the resource; for hold-down time, 300 seconds).



**CAUTION:** Do not specify a falling value larger than the specified rising value; do not specify a rising value smaller than the specified falling value.

- Options**
- atm-active-sub-if—Configures active ATM subinterfaces
  - atm-sub-if—Configures both active and inactive ATM subinterfaces
  - atm-vc—Configures ATM virtual circuits
  - ip—Configures IP interfaces
  - ppp-link—Configures PPP link interfaces
  - *slot*—Number of the chassis slot in the range 0–2 (ERX310 model), 0–6 (ERX7xx models), 0–13 (ERX14xx models), 0–5 (E120 router), and 0–16 (E320 router)
  - For ERX7xx models, a number in the range 0–6; for ERX14xx models, a number in the range 0–13; for the ERX310 router, a number in the range 1–2; for the E120 router, a number in the range 0–5; for the E320 router, a number in the range 0–16
  - *fallingValue*—Falling threshold for the resource, in the range 0–4294967295
  - *holdDownTime*—Hold-down time for the resource, in the range 0–4294967295 seconds
  - *risingValue*—Rising threshold for the resource, in the range 0–4294967295

**Mode** Global Configuration

## resource threshold

---

**Syntax** [ no ] resource threshold disable traps

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Disables the issuance of traps when the resource reaches a preset threshold. The **no** version reenables traps for resource threshold conditions.

**Mode** Global Configuration

## restricted

---

<b>Syntax</b>	[ no ] restricted interface <i>restrictedInterfaceType</i> <i>interfaceSpecifier</i> [ <i>atmVpi</i>   <i>s-vlanIdValue</i> ]
<b>Release Information</b>	Command introduced in JunosE Release 9.2.0.
<b>Description</b>	Configures an interface superset as restricted to a particular ATM-VPI or S-VLAN ID. The <b>no</b> version deletes the restriction for the interface superset.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>restrictedInterfaceType</i>—One of the following restricted interface types: atm-vp, fastEthernet, gigabitEthernet, svlan, tenGigabitEthernet</li> <li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">“Interface Types and Specifiers” on page 5</a></li> <li>• <i>atmVpi</i>—Virtual path identifier of this PVC; number in the range 0–255</li> <li>• <i>s-vlanIdValue</i>—S-VLAN ID number in the range 0–4095</li> </ul>
<b>Mode</b>	QoS Interface Superset Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Interface Supersets for QoS</a></li> </ul>

## retransmit

---

**Syntax**    `retransmit retries`

`no retransmit`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the maximum number of times a router retransmits a RADIUS packet to an authentication or accounting server. The **no** version restores the default value.

**Options**    • *retries*—Number of retries, in the range 0–100; default value is 3

**Mode**    RADIUS Configuration

## retransmit-interval

---

**Syntax**    retransmit-interval *retransInterval*  
              no retransmit-interval

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the time between LSA retransmissions for the OSPF remote-neighbor interface when an acknowledgment for the LSA is not received. The **no** version restores the default value.

**Options**    • *retransInterval*—Number of seconds, in the range 0–3600; default value is 5

**Mode**    Remote Neighbor Configuration

## rib-out disable

---

**Syntax** [ no | default ] rib-out disable

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Disables storage of routes to the Adj-RIBs-Out tables (disables rib-out) for all BGP peers. Storage is disabled by default. The **no** version enables the route storage. The **default** version removes the explicit global configuration for all peers and reestablishes inheritance of the feature configuration.



.....  
**NOTE:** If you enable or disable rib-out globally and this action changes the current configuration, all sessions are automatically bounced.  
.....

**Mode** Router Configuration

## root proxy url

---

**Syntax**    root proxy url *name*  
              no root proxy url

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies your network's HTTP proxy server, which can submit HTTP requests on the E Series router's behalf to retrieve the root CA certificate during online digital certificate configuration. The **no** version removes the URL from the configuration.

**Options**    • *name*—Name of proxy server in the format `http://server_ipaddress`; 1 to 200 characters

**Mode**    IPSec CA Identity Configuration

## route interface

**Syntax** route interface tunnel *lspName* [ *vc-id* ] *vcidValue* [ *groupID* *groupidValue* ]  
 [ *control-word* | *no-control-word* ] [ *sequencing* | *no-sequencing* ]  
 [ *relay-format* { *ethernet* | *frame-relay* | *ppp* | *vlan* | *ethernet-raw-mode* } ]  
 no route interface

**Release Information** Command introduced before JunosE Release 7.1.0.  
**control-word**, **no-control-word**, **no-sequencing**, and **vlan** keywords added in JunosE Release 7.1.0.  
**frame-relay** keyword added in JunosE Release 9.1.0.  
**ethernet-raw-mode** keyword added in JunosE Release 10.0.0.

**Description** Routes layer 2 traffic on a specified MPLS tunnel. You must issue this command in the virtual router where the remote address can be reached; that is, in the virtual router providing core connections. You cannot enter the command in a VRF. The **no** version negates this command. See also the *mpls-relay* command.



**NOTE:** This command is supported for configuration on an ATM port (ATM Adaptation Layer 5 [AAL5] over an ATM major interface). Before you can specify VPI/VCI ranges and cell concatenation parameters on the ATM port to enable transmission of multiple ATM virtual circuits over a single pseudowire, you must associate the ATM port with the corresponding pseudowire using the *mpls-relay* or *router interface tunnel* command. For more information about the support for multiple VCs over a single pseudowire, see *Multiple ATM Virtual Circuits over a Single Pseudowire Overview* in the *JunosE BGP and MPLS Configuration Guide*

- Options**
- *lspName*—Name of the MPLS LSP
  - *vcidValue*—Integer, in the range 1–4294967295, that identifies the virtual connection; the two ends across the MPLS core must match inside each VC type



**NOTE:** The VLAN ID, DLCI, or ATM VPI/VCI are not related to the VC ID and can be different on each end of the connection.

- *groupidValue*—Integer, in the range 0–4294967295, that identifies a group of virtual connections
- *control-word*—Indicates that the local preference is to use the control word for the layer 2 packets encapsulated in MPLS packets sent to the remote PE router. The default preference is determined by the interface stack on which the MPLS interface is stacked.
- *no-control-word*—Indicates that the local preference is to not use the control word for the layer 2 packets encapsulated in MPLS packets sent to the remote PE router. The



default preference is determined by the interface stack on which the MPLS interface is stacked.

- sequencing—Specifies that the local preference is to include nonzero sequence numbers with the control word, enabling the remote PE to detect out-of-order packets; has no effect if no control word is sent in the packets. The router always accepts zero sequence numbers and checks the order of nonzero sequence numbers of MPLS packets received from the remote PE; any out-of-order packets are dropped, regardless of whether sequencing is configured.
- no-sequencing—Specifies that the sequencing number in the control word is set to zero, instructing the remote PE router not to attempt to detect out-of-order packets; has no effect if no control word is sent in the packets
- relay-format ethernet—Specifies that the router uses Ethernet signaling and encapsulation, which causes the VLAN interface to appear as an Ethernet interface to the other side of the connection; enables a VLAN interface on one side of an MPLS tunnel to communicate with an Ethernet or a bridged Ethernet interface on the other side of an MPLS tunnel. The VLAN tag is not included in the MPLS encapsulation. This option is not available on serial or POS interfaces for HDLC layer 2 circuits. It is available only on VLAN interfaces.
- relay-format frame-relay—Specifies that the router uses legacy (pre-RFC 4619) Frame Relay pseudowire type value for signaling and encapsulation. Enables a router running JunosE Software that supports the pseudowire type value defined in RFC 4619, Encapsulation methods for transport of Frame Relay over MPLS Networks, to interoperate with a router that uses the legacy (pre-RFC 4619) pseudowire type value. This option is available on serial or POS interfaces for Frame Relay layer 2 circuits. It is not supported on E120 and E320 routers.
- relay-format ppp—Specifies that the router uses VC-type PPP signaling and PPP encapsulation instead of VC-type HDLC signaling and HDLC encapsulation. The router uses VC-type HDLC signaling and HDLC encapsulation by default. This option is available only on serial and POS interfaces for HDLC layer 2 circuits.
- relay-format vlan—Specifies that the router uses VLAN signaling and encapsulation. This option is not available on serial or POS interfaces for HDLC layer 2 circuits. It is available for VLAN interfaces.
- relay-format ethernet-raw-mode—Specifies that the router uses Ethernet raw mode encapsulation for packets entering and leaving pseudowires. This service corresponds to PW type 0x0005 "Ethernet" [IANA]. When configured on an S-VLAN subinterface, enables the provider edge (PE) device to strip the S-VLAN tags from all packets entering the Martini circuit (MPLS packet switched network). It is supported on ES2 4G, ES2 10G, and ES2 10G Uplink LMs on E120 and E320 routers. You can enable the raw mode configuration only for MPLS shim interfaces stacked on SVLAN interfaces.



**NOTE:** The **relay-format** keyword determines the pseudowire PW Type value that is used in LDP protocol messages. For a complete list of pseudowire Type values, see <http://www.iana.org/assignments/pwe3-parameters>.

If you do not specify the **relay-format** keyword in the **mpls-relay** or **route interface** command, the pseudowire Type value is chosen based on the type of the interface. For Ethernet interfaces, the pseudowire Type value is chosen as Ethernet (0x0005). For VLAN interfaces, the pseudowire Type value is chosen as Ethernet Tagged Mode (0x0004)

**Mode**    Interface Configuration

**Related Documentation**

- *Configuring Ethernet/VLAN Layer 2 Services, Configuring Frame Relay Layer 2 Services, Configuring HDLC Layer 2 Services, Configuring Ethernet Raw Mode Encapsulation for Martini Layer 2 Transport, and Configuring S-VLAN Tunnels for Layer 2 Services in the JunosE BGP and MPLS Configuration Guide*

## route-map

**Syntax** Specifying a route map for DVMRP or RIP:

```
[ no ] route-map mapTag [ interfaceType interfaceSpecifier ]
```

Defining a route map:

```
[ no ] route-map mapTag [ permit | deny ] [ sequence ]
```

Defining a route map for data MDTs:

```
route-map routeMapName
```

```
no route-map
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
IP PIM Data MDT Configuration mode added in JunosE Release 8.2.0.

**Description** Specifies a route map for DVMRP, RIP, or data MDTs, or defines the conditions for applying routing policies to filter or modify routes redistributed into or propagated by a routing protocol. The **no** version deletes the route map.

- Options**
- *mapTag*—String of up to 32 alphanumeric characters.
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *mapTag*—String of up to 32 alphanumeric characters. The **redistribute** Router Configuration command uses this string to reference this route map. Multiple route maps may share the same map tag.
  - **permit**—If the match criteria are met for this route map and **permit** is specified, the route is redistributed as controlled by the set actions.
  - **deny**—If the match criteria are met for the route map and **deny** is specified, the route is not redistributed, and no further route maps sharing the same map tag are examined.
  - *sequence*—Number, in the range 0–65535, that indicates the position a new route map is to have in the list of route maps already configured with the same map tag. If given with the **no** version of this command, it specifies the position of the route map that should be deleted.

**Mode** Address Family Configuration (RIP), Global Configuration, IP PIM Data MDT Configuration

## route-target

---

**Syntax** [ no ] route-target { import | export | both } *extendedCommunity*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates or adds to a list of VPN extended communities used to determine which routes are imported by a VRF. The **no** version removes a route target from the specified list.

A route is installed in the VRF's forwarding table when both of the following conditions are met:

- An update message with a route-target export list advertises a route.
- That list contains at least one route target that matches a route target in the route-target import list associated with a VRF.

- Options**
- **import**—Adds the route target to the current VRF's import list; the VRF accepts only routes that have at least one route target that matches a route target in the import list
  - **export**—Adds the route target to the current VRF's export list; all routes advertised from this VRF are associated with the export list; at least one route target in the export list must match a route target in the import list of a VRF receiving the route for the route to be installed in the VRF's forwarding table
  - **both**—Adds the route target to both the import list and export list of the current VRF
  - ***extendedCommunity***—Two-part number of the format *number1:number2* that identifies an extended community of VPNs where:
    - *number1*—AS number or IP address
    - *number2*—Unique integer; 32 bits if *number1* is an AS number; 16 bits if *number1* is an IP address

**Mode** VRF Configuration

---

## router bgp

---

<b>Syntax</b>	[ no ] router bgp <i>autonomousSystem</i>
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Configures the BGP routing process. Allows you to set up a distributed routing core that automatically guarantees the loop-free exchange of routing information between ASs. All subsequent BGP configuration commands are placed within the context of this router and AS; you can have only a single BGP instance per virtual router. The <b>no</b> version removes the BGP routing process.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>autonomousSystem</i>—Number, in the range 1–4294967295; the AS number that identifies the router to other BGP routers</li></ul>
<b>Mode</b>	Global Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring BGP Signaling for L2VPNs and Configuring BGP Signaling for VPLS</i> in the <i>JunosE BGP and MPLS Configuration Guide</i></li></ul>

## router dvmrp

---

**Syntax** [ no ] router dvmrp

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates and enables DVMRP on a virtual router; accesses DVMRP router configuration mode. The **no** version deletes DVMRP from a virtual router.

**Mode** Global Configuration

## router-id

---

**Syntax** [ no ] router-id *ipAddress*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies an IP address that the router uses as a router ID for OSPF. The **no** version forces OSPF to use the previous OSPF router ID.

**Options** • *ipAddress*—IP address that the router uses as a router ID for OSPF.

**Mode** Router Configuration

## router igmp

---

**Syntax** [ no ] router igmp

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates and enables IGMP on a virtual router; accesses IGMP router configuration mode. The **no** version disables IGMP on a virtual router.

**Mode** Global Configuration



## router isis

---

**Syntax** [ no ] router isis [ *tag* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables the IS-IS routing protocol and specifies an IS-IS process for IP. The **no** version disables IS-IS routing.

**Options**

- *tag*—Meaningful name for a routing process; name must be unique among all IP router processes for a given router; if not specified, a null tag is assumed, and the process is referenced with a null tag

**Mode** Global Configuration

## router mld

---

**Syntax** [ no ] router mld

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates and enables MLD on a virtual router; accesses MLD router configuration mode. The **no** version disables MLD on a virtual router.



.....  
**NOTE:** This command is identical to the **ipv6 router mld** command.  
.....

**Mode** Global Configuration

---

## router-name

---

**Syntax**    `router-name vrName`  
              `no router-name [ vrName ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Maps a virtual router to a user domain name. The **no** version deletes the router name parameter, and the router defaults to the default virtual router.



.....  
**NOTE:** This command is deprecated and might be removed completely in a future release. The functionality provided by this command has been replaced by the **auth-router-name** and **ip-router-name** commands.  
.....

**Options**    • *vrName*—Name of the virtual router to map to the user domain name

**Mode**    Domain Map Configuration, Tunnel Group Tunnel Configuration

## router ospf

---

**Syntax** [ no ] router ospf *processId* [ vrf *vrfName* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures an OSPF routing process. The **no** version disables an OSPF routing process.

- Options**
- *processId*—Number, in the range 1–65535, that identifies the OSPF process
  - *vrfName*—Name of the VRF; string of 1–32 alphanumeric characters; available only in virtual router context, not VRF context

**Mode** Global Configuration

**Related Documentation**

- *Configuring Routing in the Core for VPLS* in the *JunosE BGP and MPLS Configuration Guide*

## router pim

---

**Syntax** [ no ] router pim

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates and enables PIM on a virtual router; accesses PIM router configuration mode.  
The **no** version deletes PIM from a virtual router.

**Mode** Global Configuration

## router rip

---

**Syntax** [ no ] router rip

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables RIP routing protocol configuration. The **no** version deletes the RIP process and removes the configuration from the router.

**Mode** Global Configuration

---

**rtr**

---

**Syntax** [ no ] rtr *rtrIndex*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets the number of the RTR operation to be configured and accesses the RTR Configuration mode. The **no** version removes all configuration information for a specified RTR operation.



NOTE: The **no rtr** command has a different function than the **no rtr *rtrIndex*** command.

**Options**

- *rtrIndex*—Number of the operation to be configured, in the range 1–4294967295; there is no default

**Mode** Global Configuration

**Related Documentation**

- [no rtr on page 85](#)

## **rtr reaction-configuration**

---

**Syntax**    no rtr reaction-configuration *rtrIndex*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    This command has only a **no** version. See the [no rtr reaction-configuration](#) command for a complete description and syntax.

**Mode**    Global Configuration



---

## rtr reaction-configuration action-type

---

**Syntax** `rtr reaction-configuration rtrIndex [ action-type actionType ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets certain actions to occur based on events under control of the RTR. The default is that traps of enabled events are taken. There is no **no** version. See the [no rtr reaction-configuration](#) command.

- Options**
- *rtrIndex*—Number of the operation to be configured, in the range 1–4294967295
  - *actionType*—One of the following types:
    - none—No action; selecting this option clears all traps for the given operation
    - trapOnly—Trap only action; this is the default; enabled events trigger the trap

**Mode** Global Configuration

## **rtr reaction-configuration operation-failure**

---

**Syntax**    `rtr reaction-configuration rtrIndex operation-failure [ operationFailureValue ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables operation-failure reaction. When the type of RTR entry is echo, you can also configure a value that triggers the operation-failure trap. When the type of RTR entry is pathEcho, you cannot configure the operation-failure trap. There is no **no** version. See the [no rtr reaction-configuration](#) command.

- Options**
- *rtrIndex*—Number of the operation to be configured, in the range 1–4294967295
  - *operationFailureValue*—Number, in the range 0–15; default value is 1

**Mode**    Global Configuration

## **rtr reaction-configuration path-change**

---

**Syntax**    `rtr reaction-configuration rtrIndex path-change`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables path change reaction. When the type of RTR entry is echo, you cannot configure the path-change trap. There is no **no** version. See the [no rtr reaction-configuration](#) command.

**Options**

- *rtrIndex*—Number of the operation to be configured, in the range 1–4294967295; no default

**Mode**    Global Configuration

## **rtr reaction-configuration test-completion**

---

**Syntax**    `rtr reaction-configuration rtrIndex test-completion`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables test completion reaction. There is no **no** version. See the [no rtr reaction-configuration](#) command.

**Options**

- *rtrIndex*—Number of the operation to be configured, in the range 1–4294967295

**Mode**    Global Configuration

---

## rtr reaction-configuration test-failure

---

**Syntax**    `rtr reaction-configuration rtrIndex test-failure [ testFailureValue ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables test failure reaction to occur. When the type of RTR entry is echo, you can also configure a value that triggers the test-failure trap. There is no **no** version. See the [no rtr reaction-configuration](#) command.

- Options**
- *rtrIndex*—Number of the operation to be configured, in the range 1–4294967295; no default
  - *testFailureValue*—Number, in the range 0–15; default value is 1

**Mode**    Global Configuration

## rtr reset

---

**Syntax** [ no ] rtr reset

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Shuts down all RTR operations and clears the RTR configuration for the given virtual router. The **no** version negates the reset operation.

**Mode** Global Configuration

## rtr schedule

---

**Syntax** [ no ] rtr schedule *rtrIndex*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the RTR time parameters for an RTR operation. The **no** version stops the operation by putting it in the pending state. The **no** version also resets the restart-time attribute and the life attribute.

**Options**

- *rtrIndex*—Number of the operation to be configured, in the range 1–4294967295; no default

**Mode** Global Configuration

## rtr schedule life

---

**Syntax** `rtr schedule rtrIndex life lifeValue`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the length of the RTR probe. There is no **no** version.

- Options**
- *rtrIndex*—Number of the operation to be configured, in the range 1–4294967295; no default
  - *lifeValue*—Number of operations or maximum TTL in the range 1–2147483647; value that depends on the type of the RTR entry
    - If the type of the RTR entry is echo, *lifeValue* relates to the number of operations sent until a test finishes. The default value is 90. If you use 60 operations \* 60 seconds, the frequency between each operation that a test completes is 3,600 seconds (one hour).
    - If the type of the RTR entry is pathEcho, *lifeValue* relates to the maximum number of hops used by the traceRoute trap. The default value is 30. If you use 30 (as the maximum hops) \* 3 (operations per hop) \* 60 seconds frequency between each operation, a test is completed within 3,600 seconds. If a destination is reached in fewer than 30 hops, the test is completed earlier.

**Mode** Global Configuration



## **rtr schedule restart-time**

---

**Syntax**    `rtr schedule rtrIndex restart-time restartValue`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the interval at which the RTR probe restarts, in seconds. There is no **no** version.

- Options**
- *rtrIndex*—Number of the operation to be configured, in the range 1–4294967295; no default
  - *restartValue*—Interval in seconds until test restarts, in the range 0–2147483647; default value is 0, which specifies no restart after the test finishes

**Mode**    Global Configuration

## rtr schedule start-time

---

**Syntax**    `rtr schedule rtrIndex start-time { now | pending }`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures an entry's start. There is no **no** version.

- Options**
- *rtrIndex*—Number of the operation to be configured, in the range 1–4294967295; no default
  - *now*—RTR immediately begins to collect information.
  - *pending*—RTR does not begin to collect information. This is the default.

**Mode**    Global Configuration

## run

---

**Syntax**    `run execCommand`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Allows you to issue an Exec mode command from any configuration command mode. This command functions the same as the **do** command. There is no **no** version.

**Options**    • *execCommand*—CLI command that you can issue from User Exec or Privileged Exec mode

**Mode**    All configuration command modes



## CHAPTER 7

# S Commands

## sample

---

**Syntax**    sample value-id *mibId*  
              no sample

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the MIB object that you want to sample for the trigger that you are configuring. The **no** version removes the MIB object from the trigger.

**Options**    • *mibId*—Object ID for the MIB object that you want to sample, for example, 1.3.6.1.2.1.60.1.2.1.1.7

**Mode**    SNMP Server Event Manager Configuration

## **samples-of-history-kept**

---

**Syntax**    `samples-of-history-kept samples`  
             `no samples-of-history-kept`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the number of entries kept in the history table for each RTR operation. The **no** version restores the default value.

**Options**    • *samples*—Number of entries for each RTR index in the history table; default value is 16 for a pathEcho type and 1 for an echo type

**Mode**    RTR Configuration

## schedule macro

---

**Syntax**    `schedule macro { interval { frequency freqInMinutes | time-of-day dayTime [ day-of-week dayOfWeek | day-of-month dayOfMonth ] } | at atTime [ month day | day month ] } fileName macroName [ macroArg ]*`

`no schedule macro [ fileName [ macroName ] ]`

**Release Information**    Command introduced in JunosE Release 9.3.0.

**Description**    Schedules a macro to run once at a specific time, after a periodic interval, or at a periodic time, such as time of day, day of the week or day of the month. In Global Configuration mode, the setting persists on reboot, but in Privileged Exec mode, it does not persist on reboot. Both methods support high availability. The **no** version unschedules the macro time to run.

- Options**
- **interval**—Schedule a macro to run at a specified time once, after a periodic interval, or at a periodic time of the day, day of the week, or day of the month
  - ***fileName***—Name of the file on which to schedule a time to run
  - ***freqInMinutes***—Interval start time start in minutes in which to schedule a macro to run
  - ***dayTime***—Interval time of day for a macro to run
  - ***dayOfWeek***—Interval day of the week for a macro to run
  - ***dayOfMonth***—Interval day of the month for a macro to run
  - ***atTime***—Time at which to start a macro to run
  - ***macroName***—Name of the interval macro file
  - ***macroArg***—Name of the macro

**Mode**    Global Configuration, Privileged Exec

**Related Documentation**

- *Scheduling Macros in the JunosE System Basics Configuration Guide*



## scheduler-profile

---

**Syntax** [ no ] scheduler-profile *schedulerProfileName*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures a scheduler profile. The router supports up to 1000 scheduler profiles. The **no** version deletes the scheduler profile.

**Options** • *schedulerProfileName*—Name of the scheduler profile

**Mode** Global Configuration

**Related Documentation**

- Configuring a Scheduler Hierarchy
- Configuring a Scheduler Profile for a Scheduler Node or Queue
- Configuring a Basic Parameter Definition for QoS Administrators

## scramble

---

**Syntax** [ no ] scramble

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables cell scrambling on a T3 Frame interface. The **no** version disables cell scrambling on the interface. If you issue this command, be sure to issue the **dsu mode** and **dsu bandwidth** commands. Otherwise, the interface may drop packets unexpectedly.

**Mode** Controller Configuration

## sdh

---

**Syntax**    [ no ] sdh

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies that the interface supports SDH. The **no** version restores SONET operation on this interface.

**Mode**    Controller Configuration

## secret

---

**Syntax**    `secret [ encryptionType ] secretText`  
`no secret`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Adds a secret to a user entry in the local user database. The new secret replaces an existing secret or password. The **no** version deletes the secret (or password) from the user entry in the local user database.

- Options**
- *encryptionType*—one of the following:
    - 0—Unencrypted secret (the default)
    - 5—MD5-encrypted secret
  - *secretText*—Character string that specifies the secret. The string can contain any alphanumeric character, including spaces, up to 64 characters. Secrets are case sensitive.

**Mode**    Local User Configuration

## secure ip classifier-list

**Syntax** secure ip classifier-list *classifierName* { { classifier-auth-id { 0 } } | { [ traffic-class *trafficClassName* ]  
 [ color { green | yellow | red } ] [ user-packet-class *userPacketClassValue* ]  
 [ source-route-class *routeClassValue* ] [ destination-route-class *routeClassValue* ]  
 [ local { true | false } ] [ not ] { *protocol* }  
 [ not ] { *sourceAddress* *sourceMask* | host *sourceHostAddress* | any }  
 [ *sourceQualifier* ]  
 [ not ] { *destinationAddress* *destinationMask* | host *destinationHostAddress* | any }  
 [ *destinationQualifier* ] [ *tcpQualifier* ] [ ip-flags *ipFlags* ]  
 [ ip-frag-offset { eq 0 | eq 1 | gt 1 } ]  
 [ precedence *precNum* | dsField *dsFieldNum* | tos *tosNum* ] } }

no secure ip classifier-list *classifierName* [ *classifierNumber* ] [ classifier-auth-id { 0 } ]

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Creates or modifies a secure classifier control list. Use the **not** keyword to deny traffic for a specific protocol, source address, or destination address. Use the **any** keyword to allow traffic to any source or destination address. The **no** version removes the classifier control list.

- Options**
- *classifierName*—Name of the classifier control list entry
  - *classifierAuthId*—Number of the authentication ID to match (0)
  - *trafficClassName*—Name of the traffic class to match
  - green—Matches packet color to green, indicating a low drop preference
  - yellow—Matches packet color to yellow, indicating a medium drop preference
  - red—Matches packet color to red, indicating a high drop preference
  - *userPacketClassValue*—User packet value to match; in the range 0–15
  - *routeClassValue*—Value of the route-class; in the range 0–255
  - local—Specifies traffic destined for this interface
    - true—Matches packets that are locally destined
    - false—Matches packets that are not locally destined
  - not—Matches any except the immediately following protocol or address
  - *protocol*—Protocol name (IGMP, IP, TCP, or UDP) or number (in the range 0–255) to match
  - *sourceAddress*—Source address to match
  - *sourceMask*—Wild-card mask to apply to the source address
  - host—Matches source or destination address as a host

- *sourceHostAddress*—Source host address to match
- *any*—Matches any source or destination address
- *sourceQualifier*—For UDP or TCP protocols, one of the following protocol-specific classifier parameters. See *Creating or Modifying Classifier Control Lists for IP Policy Lists* in the *JunosE Policy Management Configuration Guide*, for details.
  - *portOperator*—One of the following Boolean operator keywords: **lt** (less than), **gt** (greater than), **eq** (equal to), **ne** (not equal), or **range** (range of port numbers)
  - *range*—Single port number or a range of port numbers
- *destinationAddress*—Destination address to match
- *destinationMask*—Wild-card mask to apply to the destination address
- *destinationHostAddress*—Destination host address to match
- *destinationQualifier*—One of the following protocol-specific classifier parameters for destination TCP or UDP ports, ICMP code and type, or IGMP type. The *portOperator* and *port range* are used with TCP and UDP. The *icmpType*, *icmpCode*, and *igmpType* parameters are used with ICMP and IGMP.
  - *portOperator*—one of the following Boolean operator keywords: **lt** (less than), **gt** (greater than), **eq** (equal to), or **ne** (not equal), or **range** (range of port numbers) (TCP and UDP only)
  - *range*—Single port number or a range of port numbers
  - *icmpType*—ICMP message type (ICMP only)
  - *icmpCode*—ICMP message code (ICMP only)
  - *igmpType*—IGMP message type (IGMP only)
- *tcpQualifier*—TCP flags classification parameters
- *tcpFlag*—For TCP only; a logic equation that specifies flag bit values; ! means logical NOT and & means logical AND; use any of the following flag names:
  - *ack*—0x10
  - *fin*—0x01
  - *push*—0x08
  - *rst*—0x04
  - *syn*—0x02
  - *urgent*—0x20
- *ipFlags*—Logic equation that specifies flag bit values; ! means logical NOT and & means logical AND; use any of the following flag names:
  - *dont-fragment*—0x02
  - *more-fragments*—0x01

- reserved—0x04
- ip-frag-offset—Matches the specified IP fragmentation offset; use any of the following:
  - eq 0—Equals 0
  - eq 1—Equals 1
  - gt 1—Greater than 1
- *precNum*—Upper three bits of the ToS byte; in the range 0–7
- *dsFieldNum*—Upper six bits of the ToS byte; in the range 0–63
- *tosNum*—Whole eight bits of the ToS byte; in the range 0–255
- *classifierNumber*—Index of the classifier control list entry to be deleted

**Mode**    Global Configuration

**Related Documentation**    • Configuring CLI-Based Mirroring

## secure ipv6 classifier-list

**Syntax** secure ipv6 classifier-list *classifierName* { { classifier-auth-id { 0 } } | { [ traffic-class *trafficClassName* ]  
 [ color { green | yellow | red } ] [ user-packet-class *userPacketClassValue* ecopy.]  
 [ source-route-class *routeClassValue* ] [ destination-route-class *routeClassValue* ]  
 [ local { true | false } ] [ not ] { *protocol* }  
 [ not ] { *sourceAddress* *sourceMask* | host *sourceHostAddress* | any }  
 [ *sourceQualifier* ]  
 [ not ] { *destinationAddress* *destinationMask* | host *destinationHostAddress* | any }  
 [ *destinationQualifier* ] [ *tcpQualifier* ] [ ipv6-flags *ipv6Flags* ]  
 [ precedence *precNum* | dsField *dsFieldNum* | tos *tcNum* ] } }

no secure ipv6 classifier-list *classifierName* [ *classifierNumber* ] [ classifier-auth-id { 0 } ]

**Release Information** Command introduced in JunosE Release 10.1.0.

**Description** Creates or modifies a secure classifier control list. Use the **not** keyword to deny traffic for a specific protocol, source address, or destination address. Use the **any** keyword to allow traffic to any source or destination address. The **no** version removes the classifier control list.

- Options**
- *classifierName*—Name of the classifier control list entry
  - *classifierAuthId*—Number of the authentication ID to match (0)
  - *trafficClassName*—Name of the traffic class to match
  - green—Matches packet color to green, indicating a low drop preference
  - yellow—Matches packet color to yellow, indicating a medium drop preference
  - red—Matches packet color to red, indicating a high drop preference
  - *userPacketClassValue*—User packet value to match; in the range 0–15
  - *routeClassValue*—Value of the route-class; in the range 0–255
  - local—Specifies traffic destined for this interface
    - true—Matches packets that are locally destined
    - false—Matches packets that are not locally destined
  - not—Matches any except the immediately following protocol or address
  - *protocol*—Protocol name (IGMP, IP, TCP, or UDP) or number (in the range 0–255) to match
  - *sourceAddress*—Source address to match
  - *sourceMask*—Wild-card mask to apply to the source address
  - host—Matches source or destination address as a host



- *sourceHostAddress*—Source host address to match
- *any*—Matches any source or destination address
- *sourceQualifier*—For UDP or TCP protocols, one of the following protocol-specific classifier parameters. See *Creating or Modifying Classifier Control Lists for IP Policy Lists* in the *JunosE Policy Management Configuration Guide*, for details.
  - *portOperator*—One of the following Boolean operator keywords: **lt** (less than), **gt** (greater than), **eq** (equal to), **ne** (not equal), or **range** (range of port numbers)
  - *range*—Single port number or a range of port numbers
- *destinationAddress*—Destination address to match
- *destinationMask*—Wild-card mask to apply to the destination address
- *destinationHostAddress*—Destination host address to match
- *destinationQualifier*—One of the following protocol-specific classifier parameters for destination TCP or UDP ports, ICMP code and type, or IGMP type. The *portOperator* and *port range* are used with TCP and UDP. The *icmpType*, *icmpCode*, and *igmpType* parameters are used with ICMP and IGMP.
  - *portOperator*—one of the following Boolean operator keywords: **lt** (less than), **gt** (greater than), **eq** (equal to), or **ne** (not equal), or **range** (range of port numbers) (TCP and UDP only)
  - *range*—Single port number or a range of port numbers
  - *icmpType*—ICMP message type (ICMP only)
  - *icmpCode*—ICMP message code (ICMP only)
  - *igmpType*—IGMP message type (IGMP only)
- *tcpQualifier*—TCP flags classification parameters
- *tcpFlag*—For TCP only; a logic equation that specifies flag bit values; ! means logical NOT and & means logical AND; use any of the following flag names:
  - *ack*—0x10
  - *fin*—0x01
  - *push*—0x08
  - *rst*—0x04
  - *syn*—0x02
  - *urgent*—0x20
- *ipFlags*—Logic equation that specifies flag bit values; ! means logical NOT and & means logical AND; use any of the following flag names:
  - *dont-fragment*—0x02
  - *more-fragments*—0x01

- reserved—0x04
- ip-frag-offset—Matches the specified IP fragmentation offset; use any of the following:
  - eq 0—Equals 0
  - eq 1—Equals 1
  - gt 1—Greater than 1
- *precNum*—Upper three bits of the ToS byte; in the range 0–7
- *dsFieldNum*—Upper six bits of the ToS byte; in the range 0–63
- *tosNum*—Whole eight bits of the ToS byte; in the range 0–255
- *classifierNumber*—Index of the classifier control list entry to be deleted

**Mode** Global Configuration

**Related Documentation** • [Configuring CLI-Based Mirroring](#)

## secure ip policy-list

---

**Syntax** [ no ] secure ip policy-list *policyName*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates or modifies a secure IP policy list. Enters Policy List Configuration mode, enabling you to specify the parameters of the secure IP policy list. If you enter Policy List Configuration mode and then type **exit** without specifying any parameters, the router creates a policy list with a mirror disable rule. Attaching this policy list to an interface results in no packet mirroring. The **no** version removes the specified policy list.

**Options** • *policyName*—Name of the secure IP policy list

**Mode** Global Configuration

**Related Documentation** • [Configuring CLI-Based Mirroring](#)

## secure ipv6 policy-list

---

**Syntax** [ no ] secure ipv6 policy-list *policyName*

**Release Information** Command introduced in JunosE Release 10.1.0.

**Description** Creates or modifies a secure IPv6 policy list. Enters Policy List Configuration mode, enabling you to specify the parameters of the secure IPv6 policy list. If you enter Policy List Configuration mode and then type **exit** without specifying any parameters, the router creates a policy list with a mirror disable rule. Attaching this policy list to an interface results in no packet mirroring. The **no** version removes the specified policy list.

**Options** • *policyName*—Name of the secure IPv6 policy list

**Mode** Global Configuration

**Related Documentation** • [Configuring CLI-Based Mirroring](#)

## secure l2tp policy-list

---

**Syntax** [ no ] secure l2tp policy-list *policyName*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates or modifies a secure L2TP policy list. Enters Policy List Configuration mode, enabling you to specify the parameters of the secure L2TP policy list. If you enter Policy List Configuration mode and then type **exit** without specifying any parameters, the router creates a policy list with a mirror disable rule. Attaching this policy list to an interface results in no packet mirroring. The **no** version removes the specified policy list.

**Options** • *policyName*—Name of the secure L2TP policy list

**Mode** Global Configuration

**Related Documentation** • Configuring CLI-Based Mirroring

## send

---

**Syntax**    `send { * | absoluteLineNumber | console consoleLineNumber | vty vtyLineNumber }  
              [ message ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sends a message to one or more terminals. If you begin the message on the same line as the command, the first character is a delimiter; you must end the message with the same delimiter. If you begin the message on another line, you must enter Ctrl+z to end the message. There is no **no** version.

- Options**
- **\***—Sends the message to all terminals
  - *absoluteLineNumber*—Line number of a terminal to which the message is sent
  - *consoleLineNumber*—Line number of a console to which the message is sent
  - *vtyLineNumber*—Line number of a vty to which the message is sent
  - *message*—Text of message to send; a string of up to 1023 alphanumeric characters

**Mode**    Privileged Exec

## send-more-specific-routes-disable

---

**Syntax** [ no ] send-more-specific-routes-disable

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies that RIP does not send a more-specific route if it has a less-specific route with any metric. The **no** version restores the default condition, wherein RIP always sends a more-specific route even if a less-specific route with a metric is available.

**Mode** Address Family Configuration, Router Configuration

## send version

---

**Syntax** [ no ] send version [ 1 | 2 | off ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Restricts the RIP version that the router can send on a remote-neighbor interface. The **no** version sets the remote-neighbor interface back to the default value, sending only RIP version 1.

- Options**
- 1—Specifies RIP version 1 only
  - 2—Specifies RIP version 2 only
  - off —Turns reception off

**Mode** Remote Neighbor Configuration



## serial description

---

**Syntax**    serial description *name*  
              no serial description

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns a text description or an alias to a serial HDLC interface. Use the [show interfaces serial](#) command to display the text description. The **no** version removes the description or alias.

**Options**    • *name*—Text string or alias of up to 80 characters for the serial interface

**Mode**    Interface Configuration

## server-address

---

**Syntax**    `server-address address`

`no server-address [ address ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the DHCP server address that is sent to DHCP clients. The **no** version removes server address.

**Options**    • *address*—DHCP server address

**Mode**    DHCP Local Pool Configuration

## server-name

---

**Syntax**    `server-name serverName`

`no server-name`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the hostname expected from the L2TP LNS when you set up a tunnel. The **no** version removes the server name.

**Options**    • *serverName*—Hostname; can be up to 64 characters in length (no spaces)

**Mode**    Domain Map Tunnel Configuration, Tunnel Group Tunnel Configuration

## service

---

**Syntax**    service { empty-service-name action *actionValue* | *serviceName* [ action *actionValue* ] | unknown-service-name action *actionValue* }

no service { empty-service-name | *serviceName* | unknown-service-name }

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **unknown-service-name** keyword added in JunosE Release 10.1.0.

**Description**    Enables you to configure entries for the PPPoE service name table. PPPoE clients use the entries in a PPPoE service name table to request that an AC, such as an E Series router, support certain services. You can add three types of entries to a PPPoE service name table: an empty service name, a custom service name (*serviceName*), and an unknown service name. For empty service name and unknown service name entries, use the **action** keyword to specify that the AC either **drop** or **terminate** all PADI requests from the PPPoE client. For custom entries, the **action** keyword is optional. The default **action** for a custom entry is **terminate**. The **no** version removes the specified service entry from the PPPoE service name table.

- Options**
- **empty-service-name**—Specifies an empty service name entry of zero length, indicating that any service is acceptable.
  - **actionValue**—One of the following actions for the empty service name entry, custom service name entry, or the unknown service name entry:
    - **drop**—Directs the AC to ignore all PADI requests and not respond with a PPPoE Active Discovery Offer (PADO) packet
    - **terminate**—Directs the AC to respond to a PADI request by sending a PADO packet; this is the default action
  - **serviceName**—Name of a nonempty service name entry that specifies a custom value, such as an ISP name or class of service; string of up to 31 alphanumeric characters
  - **unknown-service-name**—Specifies a service that has not been configured in the service name table. The default action for this service depends on the service name table configuration. If all the services in the table are configured to **drop**, the default action for the unknown service name entry is **terminate**. If all the services are configured to **terminate**, the default action for the unknown service name entry is **drop**. If both **terminate** and **drop** are configured, all unknown service name entries are dropped by default.

**Mode**        PPPoE Service Name Table Configuration

---

## service check-config

---

**Syntax** [ no ] service check-config [ auto | fileName *fileName* | running-configuration | running-configuration recover | auto-recover ]

**Release Information** Command introduced in JunosE Release 9.3.0.  
**auto-recover** keyword added in JunosE Release 10.3.0.

**Description** Detects corruption of running configuration on both primary and standby SRP due to fatal duplicate key error. In addition, the command detects corruption of CNF files on the primary SRP for invalid CFG types and invalid information. If the Cyclic Redundancy Check (CRC) value is set for a configuration file, this command calculates and validates the CRC value to ensure that there are no data errors. If the configuration file has errors, the command creates a system log identifying the error.

The **no** version restores the default action, manual detection.

- Options**
- **auto**—Checks the running configuration at regular intervals; cannot be used for CNF files.
  - **fileName**—Name of an existing configuration file (.cnf) that needs to be validated for corruption
  - **running-configuration**—Specifies that the running configuration needs to be validated for corruption
  - **running-configuration recover**—Recovers the corrupted configuration files in the running configuration
  - **auto-recover**—Specifies that the running configuration needs to be validated for corruption and the corrupted files need to be recovered

**Mode** Global Configuration

## service config-monitor-periodicity

---

**Syntax**    service config-monitor-periodicity *time*

**Release Information**    Command introduced in JunosE Release 9.3.0.

**Description**    Sets the time of the monitoring task for detecting corruption of a running configuration on both the primary and the standby SRP. There is no **no** version.

**Options**    • *time*—Periodicity value of the monitor task in seconds

**Mode**    Global Configuration

## service ctrl-x-reboot

---

**Syntax** [ no ] service ctrl-x-reboot

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables the Ctrl+x key combination to reboot the router at all times, except that the key combination has no effect if you are accessing the router through a Telnet session. The **no** version restores the default condition, disabled.

**Mode** Global Configuration

## service-description

---

**Syntax**    `service-description serviceDescription`  
              `no service-description`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Provides a description that is associated with the AAA profile. The description can be used for RADIUS authentication and accounting. The **no** version negates the command.

**Options**    • *serviceDescription*—Description of the service; maximum of 64 characters

**Mode**    AAA Profile Configuration



## service dhcp-external

---

**Syntax** [ no ] service dhcp-external

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables the DHCP external server. The **no** version disables the DHCP external server and does not save the previous settings.

**Mode** Global Configuration

## service dhcp-local

---

**Syntax** [ no ] service dhcp-local [ equal-access | standalone [ authenticate ] ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables the DHCP local server. In standalone mode, the **authenticate** keyword enables AAA-based authentication for incoming DHCP clients. The **no** version disables the DHCP local server and does not save the previous settings.

- Options**
- equal-access—Enables the DHCP local server to work with the SRC (formerly SDX or SSC) or HTTP local server for non-PPP equal access, the default option
  - standalone—Configures the router as a DHCP local server
  - authenticate—Enables AAA-based authentication of incoming DHCP clients

**Mode** Global Configuration

## service dhcpv6-local

---

**Syntax** [ no ] service dhcpv6-local [ standalone [ authenticate ] ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**standalone** and **authenticate** keywords added in JunosE Release 12.2.0.

**Description** Enables the DHCPv6 local server. In standalone mode, the **authenticate** keyword enables AAA-based authentication for incoming DHCPv6 clients. The **no** version disables the DHCPv6 local server and does not save the previous settings.

**Options**

- **standalone**—Configures the router as a DHCPv6 local server
- **authenticate**—Enables AAA-based authentication of incoming DHCPv6 clients

**Mode** Global Configuration

**Related Documentation**

- Authentication and Accounting of IPv6 Subscribers Using the DHCPv6 Local Server Overview
- Interoperation of Authentication of IPv6 Clients and Display of Active Subscriber Information
- Configuring AAA Authentication for DHCPv6 Local Server Standalone Mode

## service-management install

---

**Syntax** [ no ] service-management install *fileName*.mac

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Installs the specified Service Manager definition. The **no** version removes the specified definition.

**Options** • *fileName*—Name of the service definition macro file, including the .mac extension

**Mode** Global Configuration

## service-management owner-session

---

**Syntax** [ no ] service-management owner-session *ownerName* *ownerId*  
service-session *serviceName* [ service-session-profile *profileName* ]

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Activates subscriber service sessions based on the specified owner and owner-generated ID. The **no** version gracefully removes the specified service session for the specified owner session.

Privileged Exec mode creates a dynamic subscriber service session that is deleted after a router reboot. Global Configuration mode creates a persistent service session.

- Options**
- *ownerName*—Name of the owner for the owner session; AAA for RADIUS-based subscribers
  - *ownerId*—Unique ID that is generated by the owner; Acct-Session-ID for AAA subscriber sessions
  - *serviceName*—Name of the service session to use
  - *profileName*—Name of the service session profile to use for the service session

**Mode** Global Configuration, Privileged Exec

## service-management service-session-profile

---

**Syntax** [ no ] service-management service-session-profile *profileName*

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Creates a new Service Manager service session profile or specifies the name of an existing service session profile, then enters Service Session Profile Configuration mode. The **no** version removes the service session profile.

**Options** • *profileName*—Name of the service session profile

**Mode** Global Configuration

## service-management subscriber-session

**Syntax** [ no ] service-management subscriber-session *subscriberName*  
interface *interfaceType* *interfaceSpecifier*

**Release Information** Command introduced in JunosE Release 7.2.0.  
Privileged Exec mode added in JunosE Release 8.0.0.

**Description** Activates a subscriber session for the specified subscriber. The **no** version gracefully removes the subscriber session and all service sessions associated with this subscriber session.

Privileged Exec mode creates a dynamic subscriber session that is deleted after a router reboot. Global Configuration mode creates a persistent subscriber session.



**NOTE:** Always activate at least one service session for a subscriber session. The ability to create a subscriber session without a service session (by omitting the **service-session** keyword) is not currently supported.

- Options**
- *subscriberName*—Name of the subscriber for this subscriber session
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)

**Mode** Global Configuration, Privileged Exec

## **service-management subscriber-session force**

---

**Syntax**    no service-management subscriber-session *subscriberSessionId* force

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    This command has only a **no** version. See the [no service-management subscriber-session force](#) command for a complete description and syntax.

**Mode**    Global Configuration



## service-management subscriber-session service-session

**Syntax** [ no ] service-management subscriber-session *subscriberName*  
 interface *interfaceType* *interfaceSpecifier* service-session *serviceName* |  
 [ service-session-profile *profileName* ]

**Release Information** Command introduced in JunosE Release 7.2.0.  
 Privileged Exec mode added in JunosE Release 8.0.0.

**Description** Activates a subscriber session and service session for the specified subscriber. The **no** version gracefully removes all service sessions or the specified service session.

Privileged Exec mode creates a dynamic subscriber session that is deleted after a router reboot. Global Configuration mode creates a persistent subscriber session.

- Options**
- *subscriberName*—Name of the subscriber for this subscriber session
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *serviceName*—Name of the service session to use for this subscriber session
  - *profileName*—Name of the service session profile to use for this service session

**Mode** Global Configuration, Privileged Exec

## service manual-commit

---

**Syntax** [ no ] service manual-commit

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Stops the router from automatically saving configuration changes to nonvolatile storage. Places the router into Manual Commit mode; this mode has no effect on the CLI prompt. Causes an immediate save of configuration data not yet committed to nonvolatile storage. If you issue this command while high availability is initializing, the CLI notifies you of the state and requests that you try again later. The **no** version returns the E Series router to Automatic Commit mode (with no effect on the CLI prompt).

**Mode** Global Configuration

## service password-encryption

---

**Syntax** [ no ] service password-encryption

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Directs the router to encrypt passwords that are saved in the configuration file. The command should be used as a simple cipher to prevent unauthorized users from viewing passwords. The **no** version removes the encryption assignment.

**Mode** Global Configuration

## service show-config

---

**Syntax**    service show-config format { 1 | 2 }

no service show-config format

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Formats **show configuration** command output. The **no** version reverts the **show configuration** command format to its default (format 1).

- Options**
- 1—Format of the original **show configuration** command output
  - 2—Format enhancement to the **show configuration** command that can significantly reduce the amount of time it takes to generate and display output for configurations that contain three or more virtual routers and a large number of interfaces

**Mode**    Global Configuration

## service timestamps

---

**Syntax**    service timestamps log datetime [ show-timezone [ localtime ] ]  
              no service timestamps [ log ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Formats timestamps associated with log messages. The **no** version removes timestamps from log messages.

- Options**
- log—Indicates that a timestamp will appear on log messages
  - datetime—Displays the date and time
  - show-timezone—Displays the time zone
  - localtime—Displays the timestamp in local time

**Mode**    Global Configuration

## service unattended-password-recovery

---

**Syntax** [ no ] service unattended-password-recovery

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Allows you to delete all passwords and secrets from the console without being physically present at the router. When executed, this command changes the behavior of the erase secrets command, which will not take any parameters and will not be available through a vty session. The **no** version reverts erase secrets to factory default settings.

**Mode** Global Configuration

## session-out-of-resource-result-code-override

---

**Syntax** [ no ] session-out-of-resource-result-code-override

**Release Information** Command introduced in JunosE Release 9.2.0.

**Description** Overrides out-of-resource result codes 4 [Call failed due to lack of appropriate facilities being available (temporary condition)] and 5 [Call failed due to lack of appropriate facilities being available (permanent condition)] with code 2 (Call disconnected for the reason indicated in error code) on a router configured as an LNS. The **no** version halts the overriding of codes 4 and 5.

**Mode** L2TP Destination Profile Host Configuration

## session-timeout

---

**Syntax** [ no ] session-timeout *timeOutValue*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Defines the ANCP session timeout value (in seconds). The **no** version reverts the session timeout to its default setting (25 seconds).

**Options**

- *timeOutValue*—Session timeout in seconds, in the range 1–25; default value is 25 seconds

**Mode** L2C Configuration



---

## sessions-limit-group

---

**Syntax** [ no ] sessions-limit-group *groupName*

**Release Information** Command introduced before JunosE Release 12.2.0.

**Description** Defines a session limit group. The **no** version removes the session limit group.



.....  
**NOTE:** Under each destination profile, you can define a maximum of 4096 session limit groups.  
.....

**Options** • *groupName*—Name of the group

**Mode** L2TP Destination Profile Configuration, L2TP Destination Profile Host Configuration

**Related Documentation** • Configuring Groups for LNS Sessions

## set

---

**Syntax**    set object  
              { context-name *contextName* [ wildcard ] | id *mibId* | value *objectValue* }  
  
              no set [ object { context-name | id | value } ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Performs an SNMP set operation under certain event conditions. The **no** version removes the set operation.

- Options**
- *contextName*—Context name of the MIB object SNMP agent
  - *wildcard*—Specifies the context name as a wildcard
  - *mibId*—MIB object ID that you want to set; for example, 1.3.6.1.2.1.60.1.2.1.1.7
  - *objectValue*—Value to which you want to set the configured MIB object

**Mode**    SNMP Event Manager Configuration

## set admission-bandwidth

---

**Syntax**    set admission-bandwidth { *bandwidthValue* | adaptive }  
              no set admission-bandwidth

**Release Information**    Command introduced in JunosE Release 7.1.0.  
                              **adaptive** keyword added in JunosE Release 7.2.0.

**Description**    Sets a specific multicast bandwidth for admission control or defines the bandwidth as adaptive (automatically sensed). The **no** version removes the set clause from a route map.

**Options**    • *bandwidthValue*—Number in the range 0–4294967259 kilobits per second used for admission control  
              • adaptive—Defines the admission bandwidth as being automatically sensed

**Mode**    Route Map Configuration

## set as-path prepend

---

**Syntax**    set as-path prepend { list *listName* | *asPathNumber* [ *asPathNumber* ]\* }  
              no set as-path prepend

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Prepends one or more AS numbers or a list of AS numbers to the AS path for BGP routes. The **no** version removes the set clause from a route map.

- Options**
- *listName*—Name of a list of AS path numbers; string of up to 32 characters
  - *asPathNumber*—Number, in the range 1–65535, that appends the string following the keyword **prepend** to the AS path of the route that is matched by the route map. Applies to outbound BGP route maps.
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line

**Mode**    Route Map Configuration

## set automatic-tag

---

**Syntax** [ no ] set automatic-tag

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Automatically computes the tag value. The **no** version removes the set clause from a route map.

**Mode** Route Map Configuration

## set comm-list delete

---

**Syntax**    set comm-list { *communityList* | *regularExpression* } delete  
              no set comm-list

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Removes communities specified by the community list from the community attribute of routes matching the route map. The **no** version removes the set clause from a route map.

**Options**    • *communityList*—Community list identifier; a string of up to 32 characters  
              • *regularExpression*—Regular expression that matches the community

**Mode**    Route Map Configuration

## set community

**Syntax** set community { list *communityListName* [ additive ] | none }

set community { *communityNumber* | *knownCommunity* | *asCommunNumber* }  
 [ *communityNumber* | *knownCommunity* | *asCommunNumber* ]\* [ additive ]

no set community

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets the BGP community attribute to one or more community numbers or a list of community numbers. The **no** version removes the set clause from a route map.

- Options**
- *communityListName*—Name of a community; a string of up to 32 characters
  - additive—Adds the community number to the community list
  - none—Removes the community attribute
  - *communityNumber*—Number, in the range 1– 4294967295, that specifies the community number
  - *knownCommunity*—Any of the following well-known communities; the Internet community is not an option:
    - local-as—Prevents advertisement outside of the local AS
    - no-advertise—Prevents advertisement to any peer
    - no export—Prevents advertisement beyond the BGP confederation boundary
  - *asCommunNumber*—AS community number in the format AA:NN:
    - AA—Number, in the range 1–65535, that identifies an AS
    - NN—Number, in the range 1–65535, that uniquely identifies a community within an AS
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line

**Mode** Route Map Configuration

## set dampening

---

**Syntax**    `set dampening halfLife reuse suppress maxSuppressTime [ halfLifeUnreachable ]`  
`no set dampening`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables route flap dampening and optionally specifies dampening parameters for routes passing through the route map. The **no** version removes the set clause from a route map.

- Options**
- *halfLife*—Half-life period in minutes, in the range 1–45; default value is 10. When a BGP route has been assigned a penalty, the penalty is decreased by half after each half-life period. Each time a route flaps, the router configured for route flap dampening assigns the route a penalty. Penalties are cumulative. BGP stores the penalty for all reachable and unreachable routes that have experienced recent flaps.
  - *reuse*—Reuse limit in the range 1–20000; default value is 750. As the penalty for a flapping route decreases and falls below this reuse limit, the route is unsuppressed. That is, the route is added back to the BGP table and used for forwarding.
  - *suppress*—Suppress limit in the range 1–20000; default value is 2000; a route is suppressed when its penalty exceeds this limit
  - *maxSuppressTime*—Maximum suppression time in minutes, in the range 1–255; default value is 60; maximum amount of time a route can be suppressed
  - *halfLifeUnreachable*—Alternate half-life period in minutes for unreachable routes; a number in the range 1–45; default value is 20. If you do not specify this value, the router uses the same half-life period for both reachable and unreachable routes.

**Mode**    Route Map Configuration



## set dhcp relay

**Syntax** To create the DHCP relay independent of any DHCP servers and to explicitly delete the DHCP server

```
[ no ] set dhcp relay
```

To create and disable the DHCP relay for a specific DHCP server

```
set dhcp relay { dhcpServerAddress [ proxy ] | agent [ circuit-ID-only |
remote-ID-only ] |inhibit-access-route-creation | discard-access-routes
{ all | interfaceType interfaceSpecifier | | unknown } }
```

```
no set dhcp relay { dhcpServerAddress | agent | inhibit-access-route-creation }
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
Command used without any keywords introduced in JunosE Release 8.2.0.  
**unknown** keyword added in JunosE Release 9.2.0.

**Description** When used without any optional keywords, creates and enables DHCP relay in the current virtual router independent of any DHCP servers.

When used with optional keywords, adds a new DHCP/BOOTP server and specifies that the E Series router is either a DHCP relay or DHCP relay proxy between the DHCP client and DHCP server. Optionally, configures the DHCP relay agent, including specifying the DHCP relay agent information (option 82) that is included in all packets forwarded to the DHCP server.

If you issue the **set dhcp relay** command when a local server has been configured, the local server is deactivated.

The **no** version used without other keywords deletes the DHCP relay agent and its configuration from the virtual route. The **no** version used with optional keywords removes the specified server or disables the specified relay agent configuration.



**NOTE:** The **set dhcp relay agent** command, when used to configure option 82 suboptions, is a legacy command, which JunosE Software continues to support to provide backward-compatibility for existing scripts. We recommend that you use the **dhcp relay agent sub-option** command for new option 82 suboption configurations.

- Options**
- *dhcpServerAddress*—IP address of the DHCP server
  - *proxy*—Specifies that the router is a DHCP relay proxy between the DHCP client and DHCP server; if omitted, the router functions as a DHCP server
  - *agent*—Adds the agent information suboptions (circuit-ID and remote-ID) to every packet the router relays from a DHCP client to a DHCP server

- **circuit-ID-only**—Specifies circuit ID suboption (suboption 1) only
- **remote-ID-only**—Specifies remote-ID suboption (suboption 2) only
- **inhibit-access-route-creation**—Specifies that host routes are not installed; enforces consistent state of route/client database
  - In relay mode, removes all installed host routes from IP; deletes all host routes data in the routing table and NVS; stops accumulating host route information
  - In relay proxy mode, removes all installed host routes from IP; deletes all NVS client data and stops installing host routes for newly bound clients in IP; preserves the routing table client data and continues preservation of newly bound clients in the routing table
- **discard-access-routes**—Removes existing access routes from the routing table and from NVS
- **all**—Removes all existing access routes
- **interfaceType**—Interface type whose access routes should be discarded; see [Interface Types and Specifiers on page 5](#)
- **interfaceSpecifier**—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
- **unknown**—Removes existing host routes from unknown (nonexistent) interfaces—dynamic interfaces for which DHCP relay retains route information after these interfaces have been deleted

**Mode**    Global Configuration

## set dhcp relay agent sub-option

**Syntax** set dhcp relay agent sub-option { circuit-id | remote-id | vendor-specific  
 { layer2-circuit-id | user-packet-class } }

no set dhcp relay agent sub-option { circuit-id | remote-id | vendor-specific  
 [ layer2-circuit-id | user-packet-class ] }

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Configures DHCP relay and DHCP relay proxy to add values into the DHCP relay agent information option (option 82) of the packets sent to a DHCP server. The **no** version restores the default configuration, in which the specified values are not relayed to the DHCP server.



**NOTE:** We recommend that you use this command for new option 82 suboption configurations. However, JunosE Software continues to support the **set dhcp relay agent** command, with option 82 suboptions, to provide backward-compatibility for existing scripts.

- Options**
- circuit-id—Specifies the Agent Circuit ID suboption (suboption 1)
  - remote-id—Specifies the Agent Remote ID suboption (suboption 2)
  - vendor-specific—Specifies the Vendor-Specific suboption (suboption 9)
  - layer2-circuit-id—Specifies the SVLAN ID or VLAN ID or both for Ethernet interfaces or the VPI/VCI for ATM 1483 interfaces
  - user-packet-class—Specifies the user packet class, whose value is configured by the JunosE Software layer 2 policy application

**Mode** Global Configuration

## set dhcp relay assign-giaddr-source-ip

---

**Syntax** [ no ] set dhcp relay assign-giaddr-source-ip

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** Configures DHCP relay and DHCP relay proxy to assign the gateway IP address (giaddr) to the source IP address of traffic they send to DHCP servers. The **no** version restores the default, in which the DHCP relay and DHCP relay proxy do not assign the giaddr to the source IP address.

**Mode** Global Configuration

---

## set dhcp relay broadcast-flag-replies

---

**Syntax** [ no ] set dhcp relay broadcast-flag-replies

**Release Information** Command introduced in JunosE Release 8.1.0.

**Description** Configures DHCP relay and DHCP relay proxy to use the setting of the broadcast flag in the DHCP request packet to control how DHCP Offer reply packets and ACK and NAK reply packets are transmitted to DHCP clients during the discovery process. If the broadcast flag is set in the request packet, DHCP relay and DHCP relay proxy broadcast DHCP reply packets to clients. If the broadcast flag is not set in the request packet, DHCP relay and DHCP relay proxy use the layer 2 unicast transmission method to send DHCP reply packets using the client's layer 2 (MAC) address and layer 3 (IP) unicast address. The **no** version causes the router not to use the broadcast flag setting and restores the default behavior, which broadcasts DHCP Offer reply packets and ACK and NAK reply packets to all clients during the discovery process.



.....

**NOTE:** The **set dhcp relay broadcast-flag-replies** command and the **set dhcp relay layer2-unicast-replies** command are mutually exclusive. If you attempt to issue the **set dhcp relay broadcast-flag-replies** command when the **set dhcp relay layer2-unicast-replies** command is already in effect, the operation fails and the router displays an error.

.....

**Mode** Global Configuration

## set dhcp relay giaddr-selects-interface

---

**Syntax** [ no ] set dhcp relay giaddr-selects-interface

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Configures DHCP relay to use information in the giaddr in the DHCP ACK packets that are generated by the server and destined for the DHCP client. The DHCP server uses this information to determine the primary interface that is used to optionally build dynamic subscriber interfaces.

The **no** version restores the default that builds dynamic subscriber interfaces on the IP interface on which DHCP client discover packets are received.

**Mode** Global Configuration

---

## set dhcp relay layer2-unicast-replies

---

**Syntax** [ no ] set dhcp relay layer2-unicast-replies

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Configures DHCP relay and DHCP relay proxy to use the optional layer 2 unicast and layer 3 broadcast transmission method to transmit DHCP Offer reply packets and ACK reply packets to DHCP clients during the discovery process. The **no** version restores the default method that broadcasts DHCP Offer reply packets and ACK reply packets to all DHCP clients during the discovery process.



.....  
**NOTE:** The `set dhcp relay layer2-unicast-replies` command and the `set dhcp relay broadcast-flag-replies` command are mutually exclusive. If you attempt to issue the `set dhcp relay layer2-unicast-replies` command when the `set dhcp relay broadcast-flag-replies` command is already in effect, the operation fails and the router displays an error.  
.....

**Mode** Global Configuration

## set dhcp relay max-client-packet-rate

---

**Syntax** [ no ] set dhcp relay max-client-packet-rate [ *packetsPerSecond* ]

**Release Information** Command introduced in JunosE Release 11.2.0.

**Description** Configures DHCP relay to limit the maximum number of client packets that DHCP relay processes per second. The **no** version returns to the default, in which DHCP relay processes 4096 packets per second.

**Options**

- *packetsPerSecond*—Number of client packets that are processed per second in the range 0–4096.

**Mode** Global Configuration



## set dhcp relay options

---

**Syntax**    set dhcp relay options { hostname | vrname | exclude-subinterface-id }  
              no set dhcp relay options [ hostname | vrname | exclude-subinterface-id ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the relay agent option 82 information that the router adds to DHCP packets before it relays the packets to the DHCP server. You can add either the E Series hostname or the virtual router name to the front of the Circuit-Id field. You cannot add both hostname and virtual router name. The last option specified is the one in use. You can also strip the subinterface ID from the Interface-Id field. The **no** version returns to the default, in which no information is added to the Circuit-Id field and/or the subinterface ID is not stripped from the interface string.

- Options**
- hostname—Adds the router's hostname to the front of the Circuit-Id field; the hostname is separated from the circuit information by a colon
  - vrname—Adds the router's virtual router name to the front of the Circuit-Id field; the virtual router name is separated from the circuit information by a colon
  - exclude-subinterface-id—Strips the subinterface ID from the Interface-Id field

**Mode**    Global Configuration

## set dhcp relay override

---

**Syntax** [ no ] set dhcp relay override { agent-option | giaddr }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures DHCP relay to override the relay agent option 82 or giaddr values in packets destined for a DHCP server. The **no** version returns to the default, in which the option 82 or giaddr value is not overridden.

**Options**

- agent-option—Overrides the option 82 information
- giaddr—Overrides giaddr

**Mode** Global Configuration

## set dhcp relay preserve-trusted-client-option

---

**Syntax** [ no ] set dhcp relay preserve-trusted-client-option

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** Configures DHCP relay and DHCP relay proxy to prevent option 82 information from being stripped from packets destined for a trusted client. The **no** version restores the default, in which the option 82 information is stripped from the packets.

**Mode** Global Configuration

## set dhcp relay proxy send-first-offer

---

**Syntax** [ no ] set dhcp relay proxy send-first-offer

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Configures the DHCP relay proxy to immediately send the first DHCP offer it receives from any DHCP server to the DHCP client. The **no** version restores the default value, in which DHCP relay proxy sends the single most appropriate address offer it receives from multiple DHCP servers.

**Mode** Global Configuration

## set dhcp relay proxy timeout

---

**Syntax**    set dhcp relay proxy timeout *hours*  
              no set dhcp relay proxy timeout

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the time that the DHCP relay proxy waits for a renewal message from the DHCP client after a reboot or switchover occurs. The **no** version restores the default value.

**Options**    • *hours*—Number of hours for the timeout, in the range 1–168 (1 hour to 7 days); default value is 72 hours

**Mode**    Global Configuration

## set dhcp relay trust-all

---

**Syntax** [ no ] set dhcp relay trust-all

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables the DHCP relay trust-all method. When the trust-all method is enabled, the DHCP relay processes packets that are destined for a DHCP server as if they are from trusted sources. The **no** version restores the default, which disables the trust-all method.

**Mode** Global Configuration

## set dhcp vendor-option

**Syntax** To set the default action to take when the option 60 string does not match a configured vendor-option string:

```
[ no ] set dhcp vendor-option default [ drop | local-server | proxy-client |
relay address | relay-server-list ]
```

To set the action to take when the option 60 string matches a configured vendor-option string:

```
[ no ] set dhcp vendor-option { equals | starts-with } string [ local-server | relay address
]
```

**Release Information** Command introduced in JunosE Release 8.2.0.

**Description** Configures vendor-option strings that control DHCP client traffic. Creates DHCP vendor-option servers by configuring DHCP relay to match DHCP option 60 strings and to specify the action the router takes when it receives DHCP option 60 strings. The **no** version disables the setting.

- Options**
- **drop**—Discards packets
  - **local-server**—Forwards packets to the DHCP local server
  - **proxy-client**—Forwards packets to the DHCP proxy client server
  - ***address***—IP address of the vendor-option server to which packets are forwarded
  - **relay-server-list**—Forwards packets to all non-vendor option DHCP servers. The relay-server-list consists of all non-vendor option servers. Non-vendor option servers are those servers that are configured with the **set dhcp relay** command but not with the **set dhcp vendor-option** command.
  - **equals**—Configures a string that must be matched exactly for option 60 processing
  - **starts-with**—Configures the string that is matched from left-to-right for option 60 processing
  - ***string***—Option 60 string to match; up to 254 hexadecimal characters

**Mode** Global Configuration

## set distance

---

**Syntax**    `set distance distance`  
`no set distance`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures an administrative distance to apply to routes that match the route map. The **no** version removes the set clause from a route map.



.....  
**NOTE:** Setting a distance in a route map is useful only when it is set on a route being installed into the routing table. Distance is used to establish preference between routes to the same prefix to identify the best route to that prefix. Setting distance in any other circumstance has no effect.  
.....

**Options**    • *distance*—Administrative distance in the range 0–255

**Mode**    Route Map Configuration



## set extcommunity

**Syntax** set extcommunity  
 { rt *extCommValue* [ *extCommValue* ]\* [ additive ] } | { soo *extCommValue* }  
 no set extcommunity

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets the BGP extended communities attribute. The **no** version removes the set clause from a route map.

- Options**
- **rt**—Specifies a route-target extended community, which consists of one or more routers that can receive a set of routes advertised by BGP that carry the extended-community attribute
  - **soo**—Specifies a site-of-origin extended community, which consists of one or more routers that inject into BGP a set of routes that carry the extended-community attribute
  - ***extCommValue***—Number identifying the extended community in one of the following formats:
    - ***AS:nn***—Autonomous system number, in the range 1–65535, followed by an integer in the range 1–4294967295; for example, 320:72358
    - ***AS:nn***—Autonomous system number, in the range 1–4294967295 followed by an integer in the range 1–65535; for example, 84511:45
    - ***ipAddress:nn***—Dotted decimal IP address followed by an integer in the range 1–65535; for example, 10.10.21.5:1256
  - **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - **additive**—Adds the specified extended communities to any previously configured for the attribute; if omitted, the specified extended communities replace any previously configured for the attribute

**Mode** Route Map Configuration

## set ip interface-profile

---

**Syntax**    set ip interface-profile *profileName*  
              no set ip interface-profile

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies a dynamic IP interface profile that is used in the route map. The **no** version removes the interface profile from the route map.

**Options**    • *profileName*—Name of the dynamic profile

**Mode**    Route Map Configuration

## set ip next-hop

**Syntax** set ip next-hop { *ipAddress* | interface *interfaceType* *interfaceSpecifier* | *peerAddress* }

no set ip next-hop [ *ipAddress* | *peerAddress* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Indicates where to send packets that pass a match clause of a route map for policy routing. The **no** version removes the set clause from a route map.



**NOTE:** Beginning with JunosE Release 7.1.0, this command is not supported for route maps used by the **table-map** command.

- Options**
- *ipAddress*—IP address of next hop to which packets are sent; does not need to be an adjacent router
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *peerAddress*—On outbound route maps, disables the next hop-calculation by setting the next hop to the IP address of the BGP speaker; on inbound route maps, overrides any third-party next-hop configuration by setting the next hop to the IP address of the peer

**Mode** Route Map Configuration

## set ip service-profile

---

**Syntax**    set ip service-profile *profileName*  
              no set ip service-profile

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the name of a subscriber's service profile that is used in the route map. The **no** version removes the service profile from the route map.

**Options**    • *profileName*—Name of service profile

**Mode**    Route Map Configuration

## set ip source-prefix

---

**Syntax** [ no ] set ip source-prefix *ipAddress ipMask* { deny | primary }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies a source address range that will be inserted into a specific interface and the action to take with the range. The **no** version removes the source address range from the route map.

- Options**
- *ipAddress*—IP address for the range
  - *ipMask*—IP address mask for the range
  - deny—Drops the addresses that appear in the source address range
  - primary—Associates the source prefix with the primary IP interface

**Mode** Route Map Configuration

## set ipv6 next-hop

---

**Syntax** [ no ] set ipv6 next-hop *ipv6Address* [ *localAddress* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Indicates where to send packets that pass a match clause of a route map for IPv6 policy routing. The **no** version removes the set clause from a route map.

- Options**
- *ipv6Address*—IPv6 address of next hop to which you want to send packets; does not need to be an adjacent router
  - *localAddress*—IP address of the specific interface

**Mode** Route Map Configuration

## set level

---

**Syntax**    `set level atLevel`

`no set level`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies where to import routes when all of a route map's match criteria are met. The **no** version removes the set clause from a route map.

- Options**
- *atLevel*—Specifies one of the following levels:
    - level-1—Imports routes into a level 1 area
    - level-1-2—Imports routes into a level 1 and a level 2 area
    - level-2—Imports routes into a level 2 subdomain
    - stub-area—Imports routes into an OSPF NSSA area
    - backbone—Imports routes into an OSPF backbone area

**Mode**    Route Map Configuration

## set local-preference

---

**Syntax**    set local-preference *value*

              no set local-preference

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies a preference value for the AS path. The **no** version removes the set clause from a route map.

**Options**    • *value*—Preference number, in the range 0–4294967295

**Mode**    Route Map Configuration



## set metric

**Syntax** set metric [ *+relValue* | *-relValue* | *absValue* ]

no set metric

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Modifies the metric value (for BGP, the MED) for a route that matches the route map by applying a relative or absolute metric. The **no** version removes the set clause from a route map.



**NOTE:** You cannot have an absolute and a relative metric within the same route map sequence. Issuing either command overrides any previously configured metric in the route map.

- Options**
- **+**—Specifies that the value is added to the metric for routes matching the route map; immediately precedes the metric value with no intervening space
  - **-**—Specifies that the value is subtracted from the metric for routes matching the route map; immediately precedes the metric value with no intervening space
  - *relValue*—Number, in the range 0–4294967295
  - *absValue*—Number, in the range 0–4294967295

**Mode** Route Map Configuration

## set metric-type

---

**Syntax**    set metric-type *atMetric*

no set metric-type

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the metric type for the destination routing protocol. The **no** version removes the set clause from a route map.

**Options**    • *atMetric*—Specifies the metric type from the following choices:

For BGP:

- external—Reverts to the normal BGP rules for propagating the MED; this is the BGP default
- internal—Sets the MED of a received route that is being propagated to an external peer equal to the IGP cost of the indirect next hop

For IS-IS:

- external—Only the metric of the route itself is considered for comparison
- internal—Both the metric of the route and the cost to the router that advertised the route are considered for comparison; this is the IS-IS default

For OSPF:

- 1—Cost of the external routes is equal to the sum of all internal costs and the external cost
- 2—Cost of the external routes is equal to the external cost alone; this is the OSPF default

**Mode**    Route Map Configuration

## set mpls-label

---

**Syntax** [ no ] set mpls-label

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** Configures BGP to advertise prefixes that match the route map as labeled prefixes. The **no** version removes the configuration.

**Mode** Route Map Configuration

## set origin

---

**Syntax**    set origin *atOrigin*

              no set origin

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the BGP origin of an advertised route. The **no** version removes the set clause from a route map.

- Options**    • *atOrigin*—Specifies the origin from the following choices:
- *egp*—Remote exterior gateway protocol
  - *igp*—Local interior gateway protocol
  - *incomplete*—Origin unknown

**Mode**    Route Map Configuration

## set-overload-bit

---

**Syntax** [ no ] set-overload-bit [ on-startup *seconds* | on-startup wait-for-bgp  
[ *bgpSeconds* ] ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets the overload bit, indicating to other IS-IS routers not to use this router as an intermediate hop in their SPF calculations. The **no** version restores the default value, clearing the overload bit.

- Options**
- **on-startup**—Sets the overload bit only after a system reload; prevents other routers from routing through this router before it is fully operational
  - **seconds**—Period after the reload during which the overload bit is set, in the range 5–86400 seconds; the overload bit is cleared when the period expires
  - **wait-for-bgp**—Specifies that the overload bit is not cleared until BGP has completed convergence
  - **bgpSeconds**—Maximum period to wait for BGP to converge, in the range 5–86400 seconds with a default value of 600 seconds; the overload bit is cleared when the period expires

**Mode** Router Configuration

## set priority

---

**Syntax**    `set priority priorityValue`

`no set priority`

**Release Information**    Command introduced in JunosE Release 8.2.0.

**Description**    Configures a priority value for the <S, G>data stream. Dynamic multicast admission control enables only prioritized groups to join the interface after the configured priority limit is reached on the physical port. The system records the priority when a new <S, G> entry is created. The **no** version removes the priority value.

**Options**    • *priorityValue*—Priority value for the <S, G> data stream; the default is 0

**Mode**    Route Map Configuration

## set qos-bandwidth

---

**Syntax**    set qos-bandwidth { *bandwidthValue* | adaptive }  
              no set qos-bandwidth

**Release Information**    Command introduced in JunosE Release 7.1.0.  
                              **adaptive** keyword added in JunosE Release 7.2.0.

**Description**    Sets a multicast bandwidth for QoS adjustment or defines the bandwidth as adaptive (automatically sensed). The **no** version removes the set clause from a route map.

- Options**
- *bandwidthValue*—Number, in the range 0–4294967259 kilobits per second, used for QoS adjustment
  - **adaptive**—Defines the QoS bandwidth as being automatically sensed

**Mode**    Route Map Configuration

## set route-class

---

**Syntax**    set route-class *routeClass*

             no set route-class

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the route class attribute for a route map. The **no** version deletes the route class attribute.

**Options**    • *routeClass*—Value in the range 0–255

**Mode**    Route Map Configuration



## set route-type

---

**Syntax** set route-type { internal | internal-intra | internal-inter | external }  
no set route-type

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets routes of the specified type. The **no** version removes the set clause from a route map.

**Options**

- internal—Internal route (including OSPF intra-area and interarea)
- internal-intra—Intra-area route
- internal-inter—Interarea route
- external—External route (BGP and OSPF type 1/2)

**Mode** Route Map Configuration

## set tag

---

**Syntax**    set tag *tagValue*

             no set tag

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the tag value of the destination routing protocol. The **no** version removes the set clause from a route map.

**Options**    • *tagValue*—Preference number, in the range 0–4294967295

**Mode**    Route Map Configuration

## set threshold

---

**Syntax**    `set threshold thresholdValue`  
              `no set threshold`

**Release Information**    Command introduced in JunosE Release 8.2.0.

**Description**    Configures a threshold value for multicast VPN applications. The **no** version removes the threshold value.

**Options**    • *thresholdValue*—Threshold value for multicast VPN applications

**Mode**    Global Configuration

## set weight

---

**Syntax** [ no ] set weight *value*

no set weight

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the BGP weight for the routing table. Overrides the weights assigned by using the [neighbor weight](#) and [neighbor filter-list](#) commands. The **no** version removes the set clause from a route map.

**Options** • *value*—Weight value in the range 0–4294967295

**Mode** Route Map Configuration

## shadow-node

---

<b>Syntax</b>	<code>[ no ] typeOfInterface shadow-node [ group trafficClassGroup   scheduler-profile schedulerProfileName ]*</code>
<b>Release Information</b>	Command introduced in JunosE Release 8.0.0.
<b>Description</b>	Specifies that a shadow node be configured for each interface of the given interface type. The <b>no</b> version removes this rule from the QoS profile.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>typeOfInterface</i>—Interface types for shadow nodes to be configured: atm, atm-vc, atm-vp, bridge, ethernet, fr-vc, ip, ip-tunnel, ipv6, l2tp-session, l2tp-tunnel, lsp, serial, server-port, svlan, vlan</li><li>• <i>trafficClassGroup</i>—Name of the traffic-class group</li><li>• <i>schedulerProfileName</i>—Name of the scheduler profile</li><li>• *—Indicates that one or more parameters can be repeated multiple times in a list in the command line</li></ul>
<b>Mode</b>	QoS Profile Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Configuring Shadow Nodes</li></ul>

## shaping-rate

**Syntax** `shaping-rate shapingRate [ operator operandValue ]* [ bps | kbps ]`  
`[ burst burstSize [ milliseconds | bytes ] ]`

`shaping-rate operandValue [ operator operandValue ]* [ bps | kbps ]`

`no shaping-rate`

**Release Information** Command introduced before JunosE Release 7.1.0.  
**milliseconds** and **bytes** keywords added in JunosE Release 7.1.0.  
**bps** and **kbps** keywords added in JunosE Release 8.0.0.

**Description** Sets the shaping rate and burst size. The **no** version deletes the shaping rate.

- Options**
- *shapingRate*—Constant shaping rate in bits per second or kilobits per second; in the range 1–10000000000 bps/kbps. You can set the shaping rate to vary from 1 bps to 1000 gbps (which is denoted by entering 10000000000 kbps in the CLI for this command).
  - *operator*—Mathematical function
  - *operandValue*—Input for the operator; can be a QoS parameter definition name or an integer
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - bps—Specifies shaping rate in bits per second
  - kbps—Specifies shaping rate in kilobits per second



**NOTE:** The lower and higher limits for the shaping rate range apply to both the **bps** and **kbps** keywords available with this command. For example, if you want to set the shaping rate to 1 mbps, you can either enter 1000 as the value for the *shapingRate* argument and suffix it with the **kbps** keyword, or enter 1000000 as the value for the *shapingRate* argument and suffix it with the **bps** keyword. Both the methods of configurations result in the same shaping rate value to be set.

- *burstSize*—Number, in the range 0–522240 (0–510 KB); 0 enables the router to select an applicable default value
- milliseconds—Specifies burst size in milliseconds
- bytes—Specifies burst size in bytes

**Mode** Scheduler Profile Configuration

**Related  
Documentation**

- [Configuring Rate Shaping for a Scheduler Node or Queue](#)
- [Configuring Port Shaping](#)
- [Configuring a Basic Parameter Definition for QoS Administrators](#)

## shared-shaping-constituent

---

**Syntax**    shared-shaping-constituent [ priority [ *priorityValue* ] | weight [ *weightValue* ] ]  
              no shared-shaping-constituent

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the attributes of implicit and explicit shared-shaping constituents and specifies explicit shared-shaping constituents. Constituents default to priority with a priority value of 8. Priority constituents are ordered before weighted constituents. The **no** version deletes the attributes or explicit constituent.

- Options**
- *priorityValue*—Value, in the range 1–8, that specifies the order in which the constituent can claim bandwidth from among all priority constituents; a lower value correlates to a higher claim; 8 is the default value
  - *weightValue*—Value, in the range 1–31, that specifies the order in which the constituent can claim bandwidth from among all weighted constituents; a lower value correlates to a higher claim; 8 is the default value

**Mode**    Scheduler Profile Configuration

- Related Documentation**
- Configuring Implicit Constituents for Simple or Compound Shared Shaping
  - Configuring Explicit Constituents for Simple or Compound Shared Shaping



## shared-shaping-rate

**Syntax** `shared-shaping-rate sharedShapingRate [ operator operandValue ]* [ bps | kbps ]`  
`[ burst burstSize [ milliseconds | bytes ] ] { simple | compound | auto }`  
`[ explicit-constituents ]`

`shared-shaping-rate operandValue [ operator operandValue ]* [ bps | kbps ]`  
`[ burst burstSize [ milliseconds | bytes ] ] { simple | compound | auto }`  
`[ explicit-constituents ]`

`no shared-shaping-rate`

**Release Information** Command introduced before JunosE Release 7.1.0.  
*operator* and *operandValue* variables added in JunosE Release 7.1.0.  
**milliseconds** and **bytes** keywords added in JunosE Release 7.1.0.  
**bps** and **kbps** keywords added in JunosE Release 8.0.0.

**Description** Sets the shared-shaping rate and burst size for the logical interface. This command must appear in the scheduler profile for either the best-effort queue or the best-effort scheduler node. The **no** version deletes the shared-shaping rate.

- Options**
- *sharedShapingRate*—Constant shared-shaping rate in bits per second or kilobits per second; in the range 1–1000000000 bps/kbps. You can set the shaping rate to vary from 1 bps to 1000 gbps (which is denoted by entering 1000000000 kbps in the CLI for this command).
  - *operator*—Mathematical function
  - *operandValue*—Input for the operator; can be a QoS parameter definition name or an integer
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - bps—Specifies shared-shaping rate in bits per second
  - kbps—Specifies shared-shaping rate in kilobits per second



**NOTE:** The lower and higher limits for the shaping rate range apply to both the **bps** and **kbps** keywords available with this command. For example, if you want to set the shaping rate to 1 mbps, you can either enter 1000 as the value for the *shapingRate* argument and suffix it with the **kbps** keyword, or enter 1000000 as the value for the *shapingRate* argument and suffix it with the **bps** keyword. Both the methods of configurations result in the same shaping rate value to be set.

- *burstSize*—Number, in the range 0–522240 (0–510 KB); 0 enables the router to select an applicable default value
- milliseconds—Specifies burst size in milliseconds

- **bytes**—Specifies burst size in bytes
- **simple**—Specifies the simple form of shared shaping, which does not manage voice and video traffic, but shapes data queue rates to the value of the shared rate minus the combined voice and video traffic rate
- **auto**—Specifies that the router automatically selects the type of shared shaping depending on the module; compound is selected only for line modules that support it, and simple is selected for all other line modules; this is the default mode
- **compound**—Specifies the compound form of shared shaping, which actively shapes voice and video traffic so that the shared rate cannot be exceeded, and shapes data queue rates to the value of the shared rate minus the combined voice and video traffic rate; requires special hardware
- **explicit-constituents**—Overrides automatic selection of compound shared-shaping constituents and enables you to explicitly specify constituents and bandwidth allocation; generates an error message and has no effect when applied to modules that do not support compound shared shaping

**Mode** Scheduler Profile Configuration

**Related  
Documentation**

- [Configuring Simple Shared Shaping](#)
- [Configuring Implicit Constituents for Simple or Compound Shared Shaping](#)
- [Configuring Explicit Constituents for Simple or Compound Shared Shaping](#)
- [Configuring a Basic Parameter Definition for QoS Administrators](#)

## show aaa accounting

---

**Syntax**    show aaa accounting [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays AAA accounting configuration information, including the destinations where broadcast and duplicate accounting records are sent.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa accounting default

---

**Syntax**    show aaa accounting { *subscriberType* } default [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the AAA accounting method used for the particular type of subscriber.

- Options**
- *subscriberType*—Specifies the type of subscriber:
    - atm1483—ATM 1483 subscribers
    - ip—IP subscriber management interfaces
    - ipsec—IPSec subscribers
    - ppp—PPP subscribers
    - radius-relay—RADIUS relay subscriber
    - tunnel—Tunnel subscribers
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa accounting interval

---

**Syntax**    show aaa accounting interval [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the user and service accounting interval.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa accounting vr-group

---

**Syntax**    show aaa accounting vr-group [ *vrGroupName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the name of a particular virtual router group or the names of all virtual router groups configured on the router. Virtual router groups contain a list of virtual routers to which AAA broadcast accounting information can be sent.

- Options**
- *vrGroupName*—Name of a specific virtual router group; a string of up to 32 characters; if omitted, names of all virtual router groups are displayed
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa authentication default

---

**Syntax** show aaa authentication { *subscriberType* } default [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the AAA authentication method list used for the particular type of subscriber.

- Options**
- *subscriberType*—Specifies the type of subscriber:
    - atm1483—ATM 1483 subscribers
    - ip—IP subscriber management interfaces
    - ipsec—IPSec subscribers
    - ppp—PPP subscribers
    - radius-relay—RADIUS relay subscriber
    - tunnel—Tunnel subscribers
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## show aaa delimiters

---

**Syntax**    show aaa delimiters [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the domain name and realm name delimiters, parse order, and parse direction configured on the router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show aaa domain-map

---

**Syntax**    show aaa domain-map [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the mapping between user domains and virtual routers. The display includes a tunnel group if one is assigned to the domain map.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## **show aaa dhcpv6-delegated-prefix**

---

**Syntax**    show aaa dhcpv6-delegated-prefix [ *filter* ]

**Release Information**    Command introduced in JunosE Release 10.1.0.

**Description**    Displays the RADIUS attribute used for DHCPv6 Prefix Delegation.

**Options**    • *filter*—See “[Filtering show Commands](#)” on page 4.

**Mode**    Privileged Exec

## show aaa duplicate-address-check

---

**Syntax**    show aaa duplicate-address-check [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures AAA to query the routing table for duplicate address assignment before granting access.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa duplicate-prefix-check

---

**Syntax**    show aaa duplicate-prefix-check [ *filter* ]

**Release Information**    Command introduced in JunosE Release 11.2.0.

**Description**    Displays whether duplicate IPv6 prefix checking is enabled or disabled.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa duplicate-prefix-check-extension

---

**Syntax**    show aaa duplicate-prefix-check-extension [ *filter* ]

**Release Information**    Command introduced in JunosE Release 12.2.0.

**Description**    Displays whether enhanced duplicate IPv6 prefix checking is enabled or disabled.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa intf-desc-format

---

**Syntax**    show aaa intf-desc-format

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays whether the router includes or excludes the subinterface number and adapter in the interface description that the router passes to RADIUS for inclusion in the NAS-Port-Id attribute

**Mode**    Privileged Exec

## show aaa ipv6-nd-ra-prefix

---

**Syntax**    show aaa ipv6-nd-ra-prefix [ *filter* ]

**Release Information**    Command introduced in JunosE Release 10.1.0.

**Description**    Displays the RADIUS attribute used for IPv6 Neighbor Discovery router advertisements.

**Options**    • *filter*—See [“Filtering show Commands” on page 4](#).

**Mode**    Privileged Exec

## show aaa model

---

**Syntax**    show aaa model [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays AAA model.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show aaa name-servers

---

**Syntax**    show aaa name-servers [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the IP addresses of the primary and secondary DNS and WINS name servers.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa per-profile-attr-list

---

**Syntax**    show aaa per-profile-attr-list [ *brief* | *profileName* ]

**Release Information**    Command introduced in JunosE Release 12.1.0.

**Description**    Displays all the attributes configured in the AAA per-profile lists.

- Options**
- *brief*—Displays the AAA per-profile list
  - *profileName*—Name of the AAA per-profile list; string of up to 32 characters

**Mode**    Privileged Exec

## show aaa profile

---

**Syntax**    show aaa profile [ *brief* | name *profileName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays AAA profile names and the actions associated with each specified AAA profile name.

- Options**
- *brief*—Displays the status and number of configured VCs for all ATM interfaces configured in the router
  - *profileName*—Name of the profile you want to display
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa qos downstream-rate

---

**Syntax**    show aaa qos downstream-rate

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Displays whether the QoS downstream rate application is enabled to use downstream rates obtained from the Actual-Data-Rate-Downstream [26-30] DSL Forum VSA.

**Mode**    Privileged Exec

**Related Documentation**

- Monitoring the AAA Downstream Rate for QoS

## show aaa route-download

---

**Syntax**    show aaa route-download [ statistics [ delta ] ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Displays AAA route download statistics.

- Options**
- delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa route-download routes

---

**Syntax**    show aaa route-download routes [ *vrfName* ] [ detail ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Displays information about AAA downloaded routes.

- Options**
- *vrfName*—Name of a virtual routing and forwarding instance to display
  - detail—Displays detailed information about downloaded routes
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa route-download routes global

---

**Syntax**    show aaa route-download routes global [ start *startString* ] [ detail ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Displays information about AAA downloaded routes for all virtual routers and VRFs.

- Options**
- *startString*—String that specifies the first router context to display in the output; a maximum of 32 alphanumeric characters
  - detail—Displays detailed information about the downloaded routes
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa service accounting interval

---

**Syntax**    show aaa service accounting interval [ *filter* ]

**Release Information**    Command introduced in JunosE Release 9.0.0.

**Description**    Displays the default accounting interval used by the Service Manager application for RADIUS-initiated services associated with users attached to this virtual router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show aaa statistics

---

**Syntax**    show aaa statistics [ *delta* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the authentication and authorization statistics.

- Options**
- *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa strip-domain

---

**Syntax**    show aaa strip-domain

**Release Information**    Command introduced in JunosE Release 12.0.0.

**Description**    Displays information about the aaa domain-name stripping functionality per virtual router.

**Mode**    Privileged Exec

**Related Documentation**

- aaa strip-domain

## **show aaa subscriber per-port-limit**

---

**Syntax**    show aaa subscriber per-port-limit [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the number of active subscribers on each interface.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## **show aaa subscriber per-vr-limit**

---

**Syntax**    show aaa subscriber per-vr-limit [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the number of active subscribers on each virtual router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa timeout

---

**Syntax**    show aaa timeout [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the idle and session timeouts.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa tunnel-group

---

**Syntax**    show aaa tunnel-group [ *tunnelGroupName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays currently configured tunnel groups.

- Options**
- *tunnelGroupName*—Name of the tunnel group
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa tunnel-parameters

---

**Syntax**    show aaa tunnel-parameters [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays default tunnel parameters that are configured for tunnel definitions.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show aaa user accounting interval

---

**Syntax**    show aaa user accounting interval [ *filter* ]

**Release Information**    Command introduced in JunosE Release 9.0.0.

**Description**    Displays the default accounting interval for users attached to this virtual router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show access-list

---

**Syntax**    show [ ip ] access-list [ *accessListName* ] [ detail ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays access list information about the access list specified.

- Options**
- *accessListName*—Name of the access list
  - detail—Displays detailed information about the access list
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show adjustment-factor

---

**Syntax**    show adjustment-factor [ adsl1 | adsl2 | adsl2+ | vdsl | vdsl2 | sds ]

**Release Information**    Command introduced in JunosE Release 9.1.0.

**Description**    Displays the configured QoS adjustment factor that is applied to the ANCP-reported downstream and upstream data rate for all DSL line types or for the specified DSL line types.

**Options**    • *dsl Type*—Type of DSL line for which the QoS adjustment rate is displayed: **adsl1**, **adsl2**, **adsl2+**, **vdsl**, **vdsl2**, or **sds**

**Mode**    L2C Configuration

## show aps

---

**Syntax**    show aps [ all [ group [ *groupName* ] ] ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **all** keyword added in JunosE Release 7.2.0.

**Description**    Displays information about APS/MSP interfaces or groups from APS-capable controllers in the system.

**Options**    • all—Displays information from all APS/MSP groups  
              • *groupName*—Name of the APS/MSP group

**Mode**    Privileged Exec

## show arp

---

**Syntax**    `show [ ip ] arp [ vrfName ] [ ipAddress ] [ interfaceType interfaceSpecifier ] [ all ]  
[ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the Address Resolution Protocol cache.

- Options**
- *vrfName*—Name of the VRF
  - *ipAddress*—IP address of the ARP entry
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *all*—Displays all ARP entries
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show atm aal5 interface

---

**Syntax**    show atm aal5 interface atm *interfaceSpecifier* [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays configuration information about an ATM AAL5 interface.

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show atm atm1483

---

**Syntax**    show atm atm1483

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays whether or not the router is set up to export ATM 1483 subinterface descriptions to line modules.

**Mode**    Privileged Exec, User Exec

**Syntax** show atm bulk-config [ atm *interfaceSpecifier* ] [ name *bulkConfigName* ] [ override ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

<b>Description</b>	Displays information, including base profile assignments and overriding profile assignments, for the bulk-configured VC ranges on an ATM AAL5 interface. You can display information for all VC ranges on the router, for all VC ranges on a particular ATM AAL5 interface, or for the VC range associated with a particular bulk configuration name.
--------------------	---

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *bulkConfigName*—Name associated with a VC range on the ATM AAL5 interface, as specified in the atm bulk-config command
  - *override*—Displays information only about each overriding profile assignment configured for a specific ATM PVC within a bulk-configured VC subrange; when you use the **override** keyword, information about base profile assignments is not displayed
  - *filter*—See [Filtering show Commands on page 4](#)

<b>Mode</b>	Privileged Exec, User Exec
-------------	----------------------------

## show atm interface

---

<b>Syntax</b>	show atm interface {atm <i>interfaceSpecifier</i>   brief } [ delta ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays configuration information about an ATM interface or a brief description of all ATM (major) interfaces configured in the router.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li><li>• brief—Displays the status and number of configured VCs for all ATM interfaces configured in the router</li><li>• delta—Displays baselined statistics</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring the QoS Configuration of ATM Interfaces</li><li>• Monitoring the Policy Configuration of ATM Subinterfaces</li></ul>



## show atm map

---

**Syntax**    show atm map [ *mapName* ] [ brief ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the list of all configured ATM static maps to remote hosts on an ATM network.

- Options**
- *mapName*—Name of the map list
  - brief—Displays information in a condensed format
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show atm mcpt-timers

---

<b>Syntax</b>	show atm mcpt-timers [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays the current systemwide values configured on the router for the three ATM Martini cell packing timers.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring an MPLS Pseudowire with VCC Cell Relay Encapsulation and Monitoring ATM Martini Cell Packing Timers for Layer 2 Services over MPLS in the JunosE BGP and MPLS Configuration Guide</i></li></ul>

## show atm oam

---

**Syntax**    `show atm oam interfaceSpecifier [ vpi ] [ segment | end-to-end ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays F4 OAM statistics.

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *vpi*—Virtual path identifier
  - *segment*—Displays information about segment F4 OAM circuits
  - *end-to-end*—Displays information about end-to-end F4 OAM circuits
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show atm ping

---

**Syntax**    show atm ping [atm *interfaceSpecifier* [ *vpi vci* ] ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays a summary of the results (number of ping cells sent, number of ping cells received, success rate) of the ping operation. These results are overwritten when a new ATM ping is invoked for the circuit. If you do not specify any of the options, the command shows ping entries for the entire router.

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *vpi*—Virtual path identifier
  - *vci*—Virtual circuit identifier
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show atm subinterface

---

<b>Syntax</b>	show atm subinterface [ summary   atm <i>interfaceSpecifier</i>   summary atm <i>interfaceSpecifier</i>   status <i>operatingStatus</i> ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays the current state of all ATM subinterfaces that you specify.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li> <li>• summary—Specifies that summary information is displayed</li> <li>• status—Displays information only for the ATM subinterfaces with the specified operating status</li> <li>• <i>operatingStatus</i>—One of the following operating states: <ul style="list-style-type: none"> <li>• dormant</li> <li>• dormantLockout</li> <li>• down</li> <li>• lowerLayerDown</li> <li>• notPresent</li> <li>• up</li> </ul> </li> <li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li> </ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring an MPLS Pseudowire with VCC Cell Relay Encapsulation and Monitoring ATM Subinterfaces for Layer 2 Services over MPLS</i> in the <i>JunosE BGP and MPLS Configuration Guide</i></li> </ul>

## show atm vc

---

**Syntax**    `show atm vc [ atm interfaceSpecifier ] { [ vpi vpi ] [ category categoryType ]`  
              `[ status statusType ] | reserved } [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays a summary of all configured ATM virtual circuits (VCs) and reserved VC ranges.

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *vpi*—Virtual path identifier
  - *categoryType*—One of the following service categories for which VCs are displayed:
    - cbr
    - nrt-vbr
    - rt-vbr
    - ubr
    - ubr-pc
  - *statusType*—Status of VC to be displayed, up or down
  - reserved—Displays only a summary of all reserved VC ranges on the router, including those reserved for use by dynamic ATM 1483 subinterfaces and by MPLS
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show atm vc atm

---

**Syntax** `show atm vc { description | atm interfaceSpecifier { vcd | vpi-vci vpi vci } } [ delta ] [ filter ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays OAM statistics on a VC. You can specify the circuit to display by entering the VCD, or by using the **vpi-vci** keyword and specifying the VPI and VCI. You can also specify the circuit to display by entering the description configured for the ATM 1483 subinterface on which the VC resides.

- Options**
- *description*—Text string or alias assigned to the ATM 1483 subinterface (with the atm atm1483 description command) on which the VC resides; up to 255 characters
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *vcd*—VCD identifying the VC
  - *vpi*—Virtual path identifier
  - *vci*—Virtual circuit identifier
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show atm vc-class

---

**Syntax**    show atm vc-class [ *vcClassName* [ include-defaults ] ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Displays the names of all VC classes configured on the router, or, when issued with a VC class name, displays detailed information about the attributes configured in the specified VC class.

**Options**

- *vcClassName*—Name of the VC class configured with the [vc-class atm](#) command
- include-defaults—Includes commands that set default values for various parameters
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show atm vp

---

**Syntax**    `show atm vp atm interfaceSpecifier vpi [ delta ] [ filter ]`

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays detailed statistics for a specific ATM virtual path (VP) configured on the router.

- Options**
- *interfaceSpecifier*—ATM interface specifier; see [Interface Types and Specifiers on page 5](#)
  - *vpi*—Virtual path identifier
  - *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show atm vp-description

---

**Syntax**    show atm vp-description [ *interfaceSpecifier* [ *vpi* ] ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays descriptions configured for virtual paths (VPs) on an ATM interface. You can display all VP descriptions configured on the router, all VP descriptions configured for a particular interface, or the VP description configured for a particular VPI.

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *vpi*—Virtual path identifier number, in the range 0–255
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show atm vp-tunnel

---

**Syntax**    show atm vp-tunnel [ *interfaceSpecifier* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays a summary of all configured ATM virtual path tunnels.

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bandwidth oversubscription

---

**Syntax**    show bandwidth oversubscription [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the bandwidth oversubscription status.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bfd session

---

**Syntax**    show bfd session [ address [ *ipAddress* | *ipv6Address* ] ] [ detail ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays Bidirectional Forwarding Detection (BFD) protocol session information.

- Options**
- *ipAddress*—IPv4 address of the session
  - *ipv6Address*—IPv6 address of the session
  - detail—Displays detailed information about the BFD session
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bgp ipv6

**Syntax** To display information about networks in address families other than the route-target address family:

```
show bgp ipv6 [ unicast | multicast | vpnv6 all | vpnv6 vrf vrfName ]
ipv6Prefix [ longer-prefixes ] [ fields { fieldOptions } ] [ filter ]
```

To display information about networks in only the route-target address family:

```
show bgp ipv6 route-target signaling { rtfPrefix [ longer-prefixes ] | rtfAddress }
[ fields { fieldOptions } ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**route-target signaling** keywords and *rtMemNlri* variable added in JunosE Release 8.2.0.  
*rtMemNlri* variable replaced by two variables, *rtfAddress* and *rtfPrefix*, in JunosE Release 9.1.0.

**Description** Displays filtered information about a specified network, or all networks, in the IPv6 BGP routing table. Only those fields that you specify are displayed, except that the prefix field is always displayed. Default fields can be set with the **default-fields route** command.

- Options**
- **unicast**—Specifies the IPv6 unicast address family and routing table; the default option
  - **multicast**—Specifies the IPv6 multicast address family and routing table
  - **vpnv6 all**—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - **vpnv6 vrf *vrfName***—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - ***ipv6Prefix***—Prefix that defines the IPv6 network that you want to filter
  - **longer-prefixes**—Displays all routes with a prefix that is equal to or more specific than the specified prefix
  - **route-target signaling**—Specifies the route-target address family
  - ***rtfPrefix***—Prefix representing the route-target membership NLRI (RT-MEM-NLRI), in the format *asNumber:extendedCommunity/prefixLength* (for example, 320:320:524/36) where:
    - *asNumber*—AS number for origin of route target information, in the range 1–4294967295
    - *extendedCommunity*—Two-part number in the format *number1:number2* that identifies an extended community of VPNs, in the format *number1 : number2*, where:
      - *number1*—Autonomous system (AS) number, in the range 1–4294967295, or an IP address
      - *number2*—Unique integer, in the range 1–4294967295; 32 bits if *number1* is a 16-bit AS number; 16 bits if *number1* is an IP address or a 32-bit AS number

- *prefixLength*—Number that specifies the length of the route prefix, in the range 32–96
- *rtfAddress*—*rtfPrefix* with a prefix length of 96; representing the route-target membership NLRI (RT-MEM-NLRI), in the format *asNumber:extendedCommunity* (for example, 320:320:524 or 320:50.2.3.4:524)
- *fields*—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
- *fieldOptions*—Fields to be displayed, in the format  
all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*

For peers, all described options are available. For peer groups, all options are available except the following:

best | imported | intro | next-hop-cost | peer | peer-type | stale | weight

- all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
- afi—Address family identifier
- aggregator—AS number and IP address of aggregator
- as-path—AS path through which this route has been advertised
- atomic-aggregate—Whether the atomic aggregate attribute is present
- best—Whether this is the best route for the prefix
- clusters—List of cluster IDs through which the route has been advertised
- communities—Community number associated with the route
- extended-communities—Extended community
- imported—Whether the route was imported
- intro—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- in-label—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- loc-pref—Local preference for the route
- med—Multiexit discriminator for the route
- next-hop—IP address of the next router that is used when forwarding a packet to the destination network
- next-hop-cost—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop

- origin—Origin of the route
- originator-id—Router ID of the router in the local AS that originated the route
- out-label—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- peer—IP address of BGP peer from which route was learned
- peer-type—Type of BGP peer: internal, external, or confederation
- rd—Route distinguisher
- safi—Subsequent address family identifier
- stale—Route that has gone stale due to peer restart
- unknown-types—Attribute codes for unknown path attributes
- weight—Weight of the route
- \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec



## show bgp ipv6 advertised-routes

**Syntax** To display routes advertised to a neighbor or peer group in all address families or a particular address family other than the route-target address family:

```
show bgp ipv6 [ unicast | multicast | vpnv6 all | vpnv6 vrf vrfName ]
{ neighbors { ipAddress | ipv6Address } | peer-group peerGroupName }
advertised-routes [ ipv6Prefix [ longer-prefixes ] ]
[ fields { fieldOptions } ] [ delta ] [ filter ]
```

To display routes advertised to a neighbor or peer group in only the route-target address family:

```
show bgp ipv6 route-target signaling
{ neighbors { ipAddress | ipv6Address } | peer-group peerGroupName }
advertised-routes [ fields { fieldOptions } ] [ delta ] [ filter ]
```

To display routes advertised to the specified peer group for all VPN address families or for a particular VPN address family; optionally after the application of route-target filters advertised by the specified member of the peer group:

```
show bgp ipv6 [ vpnv6 all | vpnv6 vrf vrfName | l2vpn [ all ] |
route-target signaling ] peer-group peerGroupName advertised-routes
[ route-target-filter neighbor { ipRtfnbrAddress | ipv6RtfnbrAddress } ]
[ fields { fieldOptions } ] [ delta ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.  
**route-target signaling** and **route-target-filter neighbor** keywords and *ipRtfnbrAddress* and *ipv6RtfnbrAddress* variables added in JunosE Release 8.2.0.

**Description** Displays IPv6 BGP routes advertised to the specified BGP peer or peer group.

- Options**
- **unicast**—Specifies the IPv6 unicast address family and routing table; the default option
  - **multicast**—Specifies the IPv6 multicast address family and routing table
  - **vpnv6 all**—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - **vpnv6 vrf *vrfName***—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - ***ipAddress***—IP address of the IPv6 BGP neighbor
  - ***ipv6Address***—IPv6 address of the IPv6 BGP neighbor
  - ***peerGroupName***—Name of the IPv6 BGP peer group
  - ***ipv6Prefix***—Prefix that defines the IPv6 network that you want to filter
  - **longer-prefixes**—Displays all routes with a prefix that is equal to or more specific than the specified prefix

- route-target signaling—Specifies the route-target address family
- l2vpn—Displays information for only the L2VPN address family
- all—Optional keyword; has no effect
- route-target-filter neighbor—Displays routes actually advertised to the specified peer group member (neighbor); which routes are advertised is determined by the application of the route-target filter received from that neighbor to routes in the peer group's Adj-RIBs-Out table
- *ipRtfNbrAddress*—IP address of a peer group member that has advertised route-target membership filtering information
- *ipv6RtfNbrAddress*—IPv6 address of a peer group member that has advertised route-target membership filtering information
- fields—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
- *fieldOptions*—Fields to be displayed, in the format  
all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
  - all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
  - afi—Address family identifier
  - aggregator—AS number and IP address of aggregator
  - as-path—AS path through which this route has been advertised
  - atomic-aggregate—Whether the atomic aggregate attribute is present
  - best—Whether this is the best route for the prefix
  - clusters—List of cluster IDs through which the route has been advertised
  - communities—Community number associated with the route
  - extended-communities—Extended community
  - imported—Whether the route was imported
  - intro—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
  - in-label—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
  - loc-pref—Local preference for the route
  - med—Multiexit discriminator for the route

- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **delta**—Displays baselined statistics
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 aggregate-address

---

**Syntax**    show bgp ipv6 [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* ]  
             aggregate-address [ *ipv6Prefix* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about IPv6 BGP aggregate addresses.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpnv6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - *ipv6Prefix*—Aggregate IPv6 prefix
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bgp ipv6 community

**Syntax** show bgp ipv6  
 [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ] community  
 { *communityNumber* | local-as | no-advertise | no-export }  
 [ *communityNumber* | local-as | no-advertise | no-export ]\*  
 [ exact-match ] [ fields { *fieldOptions* } ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays routes that belong to the specified BGP community.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpn6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - *communityNumber*—Filters routes according to this community number, specified either as a number in the range 1–4294967295 or in AA:NN format (autonomous system number:community number); displays only routes that are members of the specified community
  - local-as—Displays only routes belonging to the local AS community
  - no-advertise—Displays only routes belonging to the no-advertise community
  - no-export—Displays only routes belonging to the no-export community
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - exact-match—Displays only routes that have exactly the specified communities
  - fields—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - *fieldOptions*—Fields to be displayed, in the format  
 all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
    - all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
    - afi—Address family identifier
    - aggregator—AS number and IP address of aggregator

- **as-path**—AS path through which this route has been advertised
- **atomic-aggregate**—Whether the atomic aggregate attribute is present
- **best**—Whether this is the best route for the prefix
- **clusters**—List of cluster IDs through which the route has been advertised
- **communities**—Community number associated with the route
- **extended-communities**—Extended community
- **imported**—Whether the route was imported
- **intro**—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 community-list

**Syntax** show bgp ipv6  
 [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
 community-list *communityListName* [ exact-match ] [ fields { *fieldOptions* } ]  
 [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays routes that belong to the BGP community specified by the community list.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpnv6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - *communityListName*—Filters routes according to community list; displays only routes that are members of a community on the specified list
  - exact-match—Displays only routes that have exactly the specified communities
  - fields—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - *fieldOptions*—Fields to be displayed, in the format  
 all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
    - all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
    - afi—Address family identifier
    - aggregator—AS number and IP address of aggregator
    - as-path—AS path through which this route has been advertised
    - atomic-aggregate—Whether the atomic aggregate attribute is present
    - best—Whether this is the best route for the prefix
    - clusters—List of cluster IDs through which the route has been advertised
    - communities—Community number associated with the route



- **extended-communities**—Extended community
- **imported**—Whether the route was imported
- **intro**—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 dampened-paths

---

**Syntax**    show bgp ipv6  
             [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
             dampened-paths [ fields { *fieldOptions* } ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             **route-target signaling** keywords added in JunosE Release 8.2.0.

**Description**    Displays information about dampened IPv6 BGP routes.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpn6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - fields—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - *fieldOptions*—Fields to be displayed, in the format  
all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
    - all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
    - afi—Address family identifier
    - aggregator—AS number and IP address of aggregator
    - as-path—AS path through which this route has been advertised
    - atomic-aggregate—Whether the atomic aggregate attribute is present
    - best—Whether this is the best route for the prefix
    - clusters—List of cluster IDs through which the route has been advertised
    - communities—Community number associated with the route
    - extended-communities—Extended community
    - imported—Whether the route was imported
    - intro—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword

- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 filter-list

---

**Syntax**    show bgp ipv6  
             [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
             filter-list *asPathAccessListName* [ fields { *fieldOptions* } ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             **route-target signaling** keywords added in JunosE Release 8.2.0.

**Description**    Displays all routes whose AS path matches the specified AS path access list.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpn6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - *asPathAccessListName*—Name of AS path access list to filter routes; displays only routes that have AS paths matching the specified list
  - fields—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - *fieldOptions*—Fields to be displayed, in the format  
all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
    - all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
    - afi—Address family identifier
    - aggregator—AS number and IP address of aggregator
    - as-path—AS path through which this route has been advertised
    - atomic-aggregate—Whether the atomic aggregate attribute is present
    - best—Whether this is the best route for the prefix
    - clusters—List of cluster IDs through which the route has been advertised
    - communities—Community number associated with the route
    - extended-communities—Extended community
    - imported—Whether the route was imported

- **intro**—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 flap-statistics

---

**Syntax** To display IPv6 BGP flap statistics for any case other than for the route-target address family:

```
show bgp ipv6 [ unicast | multicast | vpnv6 all | vpnv6 vrf vrfName ]  
flap-statistics [ ipv6Prefix ] [ filter ]
```

To display IPv6 BGP flap statistics for the route-target address family:

```
show bgp ipv6 route-target signaling flap-statistics [ rtfPrefix | rtfAddress ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**route-target signaling** keywords and *rtMemNlri* variable added in JunosE Release 8.2.0.  
*rtMemNlri* variable replaced by two variables, *rtfAddress* and *rtfPrefix*, in JunosE Release 9.1.0.

**Description** Displays IPv6 BGP flap statistics.

- Options**
- **unicast**—Specifies the IPv6 unicast address family and routing table; the default option
  - **multicast**—Specifies the IPv6 multicast address family and routing table
  - **vpnv6 all**—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - **vpnv6 vrf *vrfName***—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - ***ipv6Prefix***—IPv6 prefix for which you want information displayed. If no prefix is specified, the fields are displayed for all networks.
  - **route-target signaling**—Specifies the route-target address family
  - ***rtfPrefix***—Prefix representing the route-target membership NLRI (RT-MEM-NLRI), in the format *asNumber:extendedCommunity/prefixLength* (for example, 320:320:524/36) where:
    - ***asNumber***—AS number for origin of route target information, in the range 1–4294967295
    - ***extendedCommunity***—Two-part number in the format *number1:number2* that identifies an extended community of VPNs, in the format *number1:number2*, where:
      - ***number1***—Autonomous system (AS) number, in the range 1–4294967295, or an IP address
      - ***number2***—Unique integer, in the range 1–4294967295; 32 bits if *number1* is a 16-bit AS number; 16 bits if *number1* is an IP address or a 32-bit AS number
    - ***prefixLength***—Number that specifies the length of the route prefix, in the range 32–96

- *rtfAddress*—*rtfPrefix* with a prefix length of 96; representing the route-target membership NLRI (RT-MEM-NLRI), in the format *asNumber:extendedCommunity* (for example, 320:320:524 or 320:50.2.3.4:524)
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 inconsistent-as

---

**Syntax**    show bgp ipv6  
             [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
             inconsistent-as [ fields { *fieldOptions* } ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             **route-target signaling** keywords added in JunosE Release 8.2.0.

**Description**    Displays information only about routes with inconsistent AS paths.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpn6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - fields—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - *fieldOptions*—Fields to be displayed, in the format  
all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
    - all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
    - afi—Address family identifier
    - aggregator—AS number and IP address of aggregator
    - as-path—AS path through which this route has been advertised
    - atomic-aggregate—Whether the atomic aggregate attribute is present
    - best—Whether this is the best route for the prefix
    - clusters—List of cluster IDs through which the route has been advertised
    - communities—Community number associated with the route
    - extended-communities—Extended community
    - imported—Whether the route was imported
    - intro—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword



- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 neighbors

---

**Syntax** show bgp ipv6  
[ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
neighbors [ *ipAddress* | *ipv6Address* ] [ delta ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays information about BGP neighbors.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpn6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - *ipAddress*—IP address of a neighbor whose routes the router has learned
  - *ipv6Address*—IPv6 address of a neighbor whose routes the router has learned
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 neighbors dampened-routes

**Syntax** show bgp ipv6  
 [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
 neighbors { *ipAddress* | *ipv6Address* } dampened-routes [ fields { *fieldOptions* } ]  
 [ delta ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays information about IPv6 BGP routes with a dampening history for the specified BGP neighbor.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpnv6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - *ipAddress*—IP address of a neighbor whose routes the router has learned
  - *ipv6Address*—IPv6 address of a neighbor whose routes the router has learned
  - fields—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - *fieldOptions*—Fields to be displayed, in the format  
 all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities |  
 extended-communities | imported | intro | in-label | loc-pref | med | next-hop |  
 next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale |  
 unknown-types | weight ]\*
  - all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
  - afi—Address family identifier
  - aggregator—AS number and IP address of aggregator
  - as-path—AS path through which this route has been advertised
  - atomic-aggregate—Whether the atomic aggregate attribute is present
  - best—Whether this is the best route for the prefix
  - clusters—List of cluster IDs through which the route has been advertised
  - communities—Community number associated with the route

- **extended-communities**—Extended community
- **imported**—Whether the route was imported
- **intro**—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **delta**—Displays baselined statistics
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 neighbors paths

**Syntax** show bgp ipv6  
 [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
 neighbors { *ipAddress* | *ipv6Address* } paths [ *pathExpression* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays IPv6 BGP path information for the specified BGP neighbor.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpn6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - *ipAddress*—IP address of a neighbor whose routes the router has learned
  - *ipv6Address*—IPv6 address of a neighbor whose routes the router has learned
  - *pathExpression*—See the [show ip bgp regexp](#) command for descriptions
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 neighbors received-routes

---

**Syntax**    show bgp ipv6  
             [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
             neighbors { *ipAddress* | *ipv6Address* } received-routes [ fields { *fieldOptions* } ]  
             [ delta ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             *ipv6Address* variable added in JunosE Release 8.0.0.  
                             **route-target signaling** keywords added in JunosE Release 8.2.0.

**Description**    Displays IPv6 BGP routes originating from the specified BGP neighbor before inbound policy is applied.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpn6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - *ipAddress*—IP address of a neighbor whose routes the router has learned
  - *ipv6Address*—IPv6 address of a neighbor whose routes the router has learned
  - fields—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - *fieldOptions*—Fields to be displayed, in the format  
all | [ *afi* | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
  - all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
  - *afi*—Address family identifier
  - aggregator—AS number and IP address of aggregator
  - as-path—AS path through which this route has been advertised
  - atomic-aggregate—Whether the atomic aggregate attribute is present
  - best—Whether this is the best route for the prefix
  - clusters—List of cluster IDs through which the route has been advertised
  - communities—Community number associated with the route

- `extended-communities`—Extended community
- `imported`—Whether the route was imported
- `intro`—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- `in-label`—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- `loc-pref`—Local preference for the route
- `med`—Multiexit discriminator for the route
- `next-hop`—IP address of the next router that is used when forwarding a packet to the destination network
- `next-hop-cost`—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- `origin`—Origin of the route
- `originator-id`—Router ID of the router in the local AS that originated the route
- `out-label`—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- `peer`—IP address of BGP peer from which route was learned
- `peer-type`—Type of BGP peer: internal, external, or confederation
- `rd`—Route distinguisher
- `safi`—Subsequent address family identifier
- `stale`—Route that has gone stale due to peer restart
- `unknown-types`—Attribute codes for unknown path attributes
- `weight`—Weight of the route
- `*`—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- `delta`—Displays baselined statistics
- `filter`—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 neighbors routes

**Syntax** show bgp ipv6  
 [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
 neighbors { *ipAddress* | *ipv6Address* } routes [ fields { *fieldOptions* } ] [ delta ]  
 [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays IPv6 BGP routes originating from the specified BGP neighbor after inbound policy is applied.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpnv6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - *ipAddress*—IP address of a neighbor whose routes the router has learned
  - *ipv6Address*—IPv6 address of a neighbor whose routes the router has learned
  - fields—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - *fieldOptions*—Fields to be displayed, in the format  
 all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities |  
 extended-communities | imported | intro | in-label | loc-pref | med | next-hop |  
 next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale |  
 unknown-types | weight ]\*
  - all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
  - afi—Address family identifier
  - aggregator—AS number and IP address of aggregator
  - as-path—AS path through which this route has been advertised
  - atomic-aggregate—Whether the atomic aggregate attribute is present
  - best—Whether this is the best route for the prefix
  - clusters—List of cluster IDs through which the route has been advertised
  - communities—Community number associated with the route



- `extended-communities`—Extended community
- `imported`—Whether the route was imported
- `intro`—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- `in-label`—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- `loc-pref`—Local preference for the route
- `med`—Multiexit discriminator for the route
- `next-hop`—IP address of the next router that is used when forwarding a packet to the destination network
- `next-hop-cost`—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- `origin`—Origin of the route
- `originator-id`—Router ID of the router in the local AS that originated the route
- `out-label`—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- `peer`—IP address of BGP peer from which route was learned
- `peer-type`—Type of BGP peer: internal, external, or confederation
- `rd`—Route distinguisher
- `safi`—Subsequent address family identifier
- `stale`—Route that has gone stale due to peer restart
- `unknown-types`—Attribute codes for unknown path attributes
- `weight`—Weight of the route
- `*`—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- `delta`—Displays baselined statistics
- `filter`—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 network

---

**Syntax** To display information about a prefix configured for all address families or for a specific address family other than the route-target address family:

```
show bgp ipv6 [ unicast | multicast | vpnv6 all | vpnv6 vrf vrfName ]  
network [ ipv6Prefix ] [ filter ]
```

To display information about about a prefix configured for the route-target address family:

```
show bgp ipv6 route-target signaling network [ rtfPrefix ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**route-target signaling** keywords and *rtMemNlri* variable added in JunosE Release 9.0.0.  
*rtMemNlri* variable replaced by *rtfPrefix* variable in JunosE Release 9.1.0.

**Description** Displays information about a potentially originated prefix that was configured with the **network** command.

- Options**
- **unicast**—Specifies the IPv6 unicast address family and routing table; the default option
  - **multicast**—Specifies the IPv6 multicast address family and routing table
  - **vpnv6 all**—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - **vpnv6 vrf *vrfName***—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - ***ipv6Prefix***—Prefix that defines the IPv6 network that you want to filter
  - **route-target signaling**—Displays information for only the route-target address family
  - ***rtfPrefix***—Prefix representing the route-target membership NLRI (RT-MEM-NLRI), in the format *asNumber:extendedCommunity/prefixLength* (for example, 320:320:524/36) where:
    - ***asNumber***—AS number for origin of route target information, in the range 1–4294967295
    - ***extendedCommunity***—Two-part number in the format *number1:number2* that identifies an extended community of VPNs, in the format *number1:number2*, where:
      - ***number1***—Autonomous system (AS) number, in the range 1–4294967295, or an IP address
      - ***number2***—Unique integer, in the range 1–4294967295; 32 bits if *number1* is a 16-bit AS number; 16 bits if *number1* is an IP address or a 32-bit AS number
    - ***prefixLength***—Number that specifies the length of the route prefix, in the range 32–96
  - ***filter***—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 next-hops

---

**Syntax**    show bgp ipv6  
              [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
              next-hops [ *ipv6Address* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             **route-target signaling** keywords added in JunosE Release 8.2.0.

**Description**    Displays information about IPv6 BGP next hops.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpn6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - *ipv6Address*—Information only for this indirect next hop
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

---

## show bgp ipv6 paths

---

**Syntax**    show bgp ipv6  
             [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
             paths [ *pathExpression* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             **route-target signaling** keywords added in JunosE Release 8.2.0.

**Description**    Displays information about IPv6 BGP AS paths.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpn6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - *pathExpression*—See the [show ip bgp regexp](#) command for descriptions
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bgp ipv6 peer-group

---

**Syntax**    show bgp ipv6  
              [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
              peer-group [ *peerGroupName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             **route-target signaling** keywords added in JunosE Release 8.2.0.

**Description**    Displays information about BGP peer groups.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpn6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - *peerGroupName*—Name of the BGP peer group
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bgp ipv6 quote-regexp

**Syntax** show bgp ipv6  
 [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
 quote-regexp *pathExpression* [ fields { *fieldOptions* } ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays information about IPv6 BGP routes whose AS path matches the specified regular expression. Regular expressions match numbers for which the specified path is a substring—for example, if you specify *20*, *200* matches because *20* is a substring of *200*. You can disallow substring matching by using the underscore (*\_*) metacharacter to constrain matching to the specified pattern; for example, *\_20\_*. You can use output filtering on the display.

- Options**
- **unicast**—Specifies the IPv6 unicast address family and routing table; the default option
  - **multicast**—Specifies the IPv6 multicast address family and routing table
  - **vpnv6 all**—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - **vpnv6 vrf *vrfName***—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - **route-target signaling**—Specifies the route-target address family
  - **quote-regexp**—Indicates that only a single element is matched
  - ***pathExpression***—See the [show ip bgp regexp](#) command for descriptions
  - **fields**—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - ***fieldOptions***—Fields to be displayed, in the format  
 all | [ *afi* | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
    - **all**—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
    - **afi**—Address family identifier
    - **aggregator**—AS number and IP address of aggregator
    - **as-path**—AS path through which this route has been advertised
    - **atomic-aggregate**—Whether the atomic aggregate attribute is present
    - **best**—Whether this is the best route for the prefix
    - **clusters**—List of cluster IDs through which the route has been advertised

- communities—Community number associated with the route
- extended-communities—Extended community
- imported—Whether the route was imported
- intro—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- in-label—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- loc-pref—Local preference for the route
- med—Multiexit discriminator for the route
- next-hop—IP address of the next router that is used when forwarding a packet to the destination network
- next-hop-cost—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- origin—Origin of the route
- originator-id—Router ID of the router in the local AS that originated the route
- out-label—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- peer—IP address of BGP peer from which route was learned
- peer-type—Type of BGP peer: internal, external, or confederation
- rd—Route distinguisher
- safi—Subsequent address family identifier
- stale—Route that has gone stale due to peer restart
- unknown-types—Attribute codes for unknown path attributes
- weight—Weight of the route
- \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec



## show bgp ipv6 regexp

**Syntax** show bgp ipv6  
 [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
 regexp *pathExpression* [ fields { *fieldOptions* } ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays information about IPv6 BGP routes whose AS path matches one or more specified regular expressions. Regular expressions match numbers for which the specified path is a substring—for example, if you specify *20,200* matches because *20* is a substring of *200*. You can disallow substring matching by using the underscore (*\_*) metacharacter to constrain matching to the specified pattern; for example, *\_20\_*. You can use output filtering on the display.

- Options**
- **unicast**—Specifies the IPv6 unicast address family and routing table; the default option
  - **multicast**—Specifies the IPv6 multicast address family and routing table
  - **vpnv6 all**—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - **vpnv6 vrf *vrfName***—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - **route-target signaling**—Specifies the route-target address family
  - **regexp**—Indicates that multiple elements can be matched
  - ***pathExpression***—See the [show ip bgp regexp](#) command for descriptions
  - **fields**—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - ***fieldOptions***—Fields to be displayed, in the format  
 all | [ *afi* | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
    - **all**—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
    - **afi**—Address family identifier
    - **aggregator**—AS number and IP address of aggregator
    - **as-path**—AS path through which this route has been advertised
    - **atomic-aggregate**—Whether the atomic aggregate attribute is present
    - **best**—Whether this is the best route for the prefix
    - **clusters**—List of cluster IDs through which the route has been advertised

- communities—Community number associated with the route
- extended-communities—Extended community
- imported—Whether the route was imported
- intro—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- in-label—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- loc-pref—Local preference for the route
- med—Multiexit discriminator for the route
- next-hop—IP address of the next router that is used when forwarding a packet to the destination network
- next-hop-cost—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- origin—Origin of the route
- originator-id—Router ID of the router in the local AS that originated the route
- out-label—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- peer—IP address of BGP peer from which route was learned
- peer-type—Type of BGP peer: internal, external, or confederation
- rd—Route distinguisher
- safi—Subsequent address family identifier
- stale—Route that has gone stale due to peer restart
- unknown-types—Attribute codes for unknown path attributes
- weight—Weight of the route
- \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show bgp ipv6 summary

**Syntax** show bgp ipv6  
 [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
 summary [ fields { *fieldOptions* } ] [ delta ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays filtered information about the status of all BGP connections. Only those fields that you specify are displayed, except that the prefix field is always displayed. Default fields can be set with the **default-fields peer** command.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpnv6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Displays information for only the route-target address family
  - fields—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - *fieldOptions*—Fields to be displayed, in the format  
 all | [ dynamic | intro | last-reset-reason | messages-received | messages-sent |  
 more-in-queue | peer-type | prefixes-received | remote-as | rib-version |  
 send-queue-length | state | times-up | up-down-time | updates-received | updates-sent  
 ]\*
  - dynamic —Nature of peer, dynamic or not
  - intro—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
  - last-reset-reason—Reason for most recent reset
  - messages-received—Total number of messages received from the peer
  - messages-sent—Total number of messages sent to the peer
  - more-in-queue—Status indicating whether any messages are waiting to be sent to this peer
  - peer-type—Type of BGP peer: internal, external, or confederation
  - prefixes-received—Number of unique prefixes received from the peer
  - remote-as—Remote AS number of the peer
  - rib-version—Last RIB version queued to be sent to this peer

- `send-queue-length`—Number of messages queued to be sent to this peer
- `state`—State of the BGP session
- `times-up`—Number of times the session has been established
- `up-down-time`—How long the session has been up or down
- `updates-received`—Number of update messages received from the peer
- `updates-sent`—Number of update messages sent to the peer
- `*`—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- `delta`—Displays baselined statistics
- `filter`—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show boot

---

**Syntax**    show boot [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the configuration and router settings that are used at startup.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bridge1483 interface

---

**Syntax**    show bridge1483 interface [ atm *interfaceSpecifier* ] [ *filter* ]

To display summary information:

show bridge1483 interface summary

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **atm** keyword and *interfaceSpecifier* variable added in JunosE Release 7.2.0.

**Description**    Displays configuration and status information for all bridged Ethernet interfaces currently configured on the router. Alternatively, you can use the **summary** keyword to display only brief summary information for all bridged Ethernet interfaces.

- Options**
- **atm**—Specifies ATM interfaces
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)
  - **summary**—Displays only the total number of bridged Ethernet interfaces currently configured on the router

**Mode**    Privileged Exec, User Exec

---

## show bridge

---

<b>Syntax</b>	show bridge { <i>bridgeGroupName</i>   <i>vplsName</i> } [ all [ delta ] ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <i>vplsName</i> variable added in JunosE Release 7.1.0.
<b>Description</b>	Displays configuration and statistics information for the specified bridge group or VPLS instance.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>bridgeGroupName</i>—Name of a bridge group specified with the bridge command</li><li>• <i>vplsName</i>—Name of a VPLS instance created with the bridge vpls transport-virtual-router command</li><li>• all—Displays address table and statistics information for each network interface assigned to the bridge group or VPLS instance</li><li>• delta—Displays baselined statistics</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Monitoring VPLS Configuration and Statistics for a Specific VPLS Instance</i> in the <i>JunosE BGP and MPLS Configuration Guide</i></li></ul>

## show bridge groups

---

<b>Syntax</b>	show bridge groups [ details ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays configuration information for all bridge groups and VPLS instances currently configured on the router.
<b>Options</b>	<ul style="list-style-type: none"><li>• details—Displays configuration settings for each bridge group or VPLS instance on the router; if you omit this keyword, the router displays only the names of each bridge group or VPLS instance</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Monitoring VPLS Configuration and Statistics for all VPLS Instances in the JunosE BGP and MPLS Configuration Guide</i></li></ul>



## show bridge interface

**Syntax** To display information about a specified network interface that belongs to a bridge group or to a VPLS instance:

```
show bridge interface interfaceType interfaceSpecifier [ delta ] [ filter ]
```

To display information about all interfaces that belong to a bridge group or to a VPLS instance, including the VPLS virtual core interface for a VPLS instance:

```
show bridge { bridgeGroupName | vplsName } interface [ brief | delta ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
*vplsName* variable added in JunosE Release 7.1.0.

**Description** Displays configuration, statistics, and status information for a specified network interface that belongs to a bridge group or to a VPLS instance, or for all interfaces that belong to a bridge group or to a VPLS instance.

When you use the **show bridge interface** command to display information for all interfaces in a VPLS instance, the router displays information about the network interfaces that belong to the VPLS instance and about the VPLS virtual core interface, which represents all the MPLS tunnels from the router to the remote VPLS edge (VE) devices.

- Options**
- *interfaceType*—One of the following interface types listed in [Interface Types and Specifiers on page 5](#)
    - atm
    - fastEthernet
    - gigabitEthernet
    - tenGigabitEthernet
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)
  - *bridgeGroupName*—Name of a bridge group specified with the bridge command
  - *vplsName*—Name of a VPLS instance created with the bridge vpls transport-virtual-router command
  - *brief*—Displays the type, specifier, associated port number, and operational status for each interface
  - *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation** • *Monitoring Configuration, Statistics, and Status for VPLS Network Interfaces in the JunosE BGP and MPLS Configuration Guide*

---

## show bridge interface vpls

---

<b>Syntax</b>	show bridge interface vpls <i>vplsName</i> [ <i>delta</i> ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced in JunosE Release 7.1.0.
<b>Description</b>	Displays configuration, statistics, and status information for a VPLS instance on the VPLS virtual core interface, which represents all the MPLS tunnels from the router to the remote VPLS edge (VE) devices.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>vplsName</i>—Name of a VPLS instance created with the bridge vpls transport-virtual-router command</li><li>• <i>delta</i>—Displays baselined statistics</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Monitoring Configuration, Statistics, and Status for VPLS Core Interfaces</i> in the <i>JunosE BGP and MPLS Configuration Guide</i></li></ul>

## show bridge port

---

<b>Syntax</b>	show bridge { <i>bridgeGroupName</i>   <i>vplsName</i> } port [ <i>portNumber</i> ] [ brief   delta ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <i>vplsName</i> variable added in JunosE Release 7.1.0.
<b>Description</b>	Displays configuration, statistics, and status information for ports (interfaces) associated with a bridge group or VPLS instance.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>bridgeGroupName</i>—Name of a bridge group specified with the bridge command</li><li>• <i>vplsName</i>—Name of a VPLS instance created with the bridge vpls transport-virtual-router command</li><li>• <i>portNumber</i>—Port number for which you want to display information; if you omit the port number, the router displays information for all ports that belong to the bridge group or to the VPLS instance</li><li>• brief—Displays the port number, interface type, interface specifier, and operational status for each port that belongs to the bridge group or to the VPLS instance</li><li>• delta—Displays baselined statistics</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Monitoring Configuration, Statistics, and Status for VPLS Ports in the JunosE BGP and MPLS Configuration Guide</i></li></ul>

## show bridge table

---

<b>Syntax</b>	show bridge { <i>bridgeGroupName</i>   <i>vplsName</i> } table [ static   dynamic ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <i>vplsName</i> variable added in JunosE Release 7.1.0.
<b>Description</b>	Displays information about the entries in the MAC address table for the specified bridge group or VPLS instance. You can display information only for static entries, only for dynamic entries, or for both static and dynamic entries.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>bridgeGroupName</i>—Name of a bridge group specified with the bridge command</li> <li>• <i>vplsName</i>—Name of a VPLS instance created with the bridge vpls transport-virtual-router command</li> <li>• static—Displays information for only static (nonlearned) entries in the MAC address table</li> <li>• dynamic—Displays information for only dynamic (learned) entries in the MAC address table</li> <li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li> </ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Monitoring MAC Address Entries for a Specific VPLS Instance</i> in the <i>JunosE BGP and MPLS Configuration Guide</i></li> </ul>

## show bulkstats

---

**Syntax**    show bulkstats [ *brief* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays bulkstats statistical information.

- Options**
- *brief*—Displays a brief description for each collector type
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bulkstats collector description

---

**Syntax**    show bulkstats collector description [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the collector's file description.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bulkstats collector interval

---

**Syntax**    show bulkstats collector interval [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the time for which the router transfers data to the receivers.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show bulkstats collector max-size

---

**Syntax**    show bulkstats collector max-size [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the maximum size of the bulkstats file.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bulkstats collector transfer-mode

---

**Syntax**    show bulkstats collector transfer-mode [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the way in which the router transfers data to the receivers.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bulkstats interface-type

---

**Syntax**    show bulkstats interface-type [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the collection of statistical data for the particular interface type (for example, ATM).

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bulkstats receiver

---

**Syntax**    show bulkstats receiver [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the configuration of the receiver's remote files.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bulkstats schema

---

**Syntax**    show bulkstats schema [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays data on the selected schema.

**Options**    • *filter*—if-stack or if-stats; see [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bulkstats statistics

---

**Syntax**    show bulkstats statistics [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about statistics counters.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bulkstats traps

---

**Syntax**    show bulkstats traps [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about bulkstats traps.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show bulkstats virtual-routers

---

**Syntax**    show bulkstats virtual-routers

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays information about bulkstats router groups.

**Mode**    Privileged Exec, User Exec



## show cac

---

**Syntax**    `show cac [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays global call admission control configuration.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show cac interface

---

**Syntax**    show cac interface [ *brief* | *interfaceType interfaceSpecifier* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays all interfaces on which TE bandwidth accounting is configured, or information only for the specified interface.

- Options**
- *brief*—Displays summary information about the interface
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show calendar

---

**Syntax**    show calendar [ *filter* ]

**Release Information**    Command introduced in JunosE Release 12.2.0.

**Description**    Displays the real-time clock hardware time and date. Also, displays the state of the real-time clock chip if it has encountered an error.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show classifier-list

---

**Syntax**    show classifier-list [ *classifierName* [ *classifierNumber* ] ] [ brief | detailed ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about classifier control lists.

- Options**
- *classifierName*—Name of classifier control list
  - *classifierNumber*—Number associated with a classifier control list entry
  - brief—Displays information in a condensed format
  - detailed—Displays detailed information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring Classifier Control Lists

---

## show clns

---

**Syntax**    show clns [ es-neighbors | is-neighbors ] [ *interfaceType interfaceSpecifier* ]  
              [ detail ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the CLNS network.

- Options**
- es-neighbors—Displays IS-IS related information for IS-IS end-system adjacencies. Neighbor entries are sorted according to the area in which they are located.
  - is-neighbors—Displays IS-IS related information for IS-IS intermediate-system adjacencies. Neighbor entries are sorted according to the area in which they are located.
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - detail—Displays area addresses and IP addresses; if not specified, a summary display is provided
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show clns interface

---

**Syntax**    show clns interface [ *interfaceType interfaceSpecifier* ] [ *brief* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **brief** keyword added in JunosE Release 8.0.0.

**Description**    Lists the Connectionless Network Service information about each interface.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *brief*—Displays summary information about the interface or all interfaces
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show clns neighbors

---

**Syntax**    `show clns neighbors [ interfaceType interfaceSpecifier ] [ detail ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays both ES and IS neighbors.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *detail*—When specified, the area addresses advertised by the neighbor in the hello messages are displayed; otherwise, a summary display is provided
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show clns protocol

---

**Syntax**    show clns protocol [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Lists the protocol-specific information for each IS-IS routing process in the router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show clns traffic

---

**Syntax**    `show clns traffic [ interfaceType interfaceSpecifier ] [ detail ] [ delta ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays IS-IS protocol statistics globally for the router or for only a specified interface.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *detail*—Displays detailed statistics; statistics for hello packets, CSNPs, and PSNPs are displayed only when an interface is also specified
  - *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show clock

---

**Syntax**    show clock [ detail ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the router's clock source.

- Options**
- detail—Provides expanded information about the clock settings, rather than a summary
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show color-mark-profile

---

**Syntax**    show color-mark-profile *colorMarkProfileName* [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays color mark profile entries.

- Options**
- *colorMarkProfileName*—Name of the color mark profile
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**

- Monitoring Color-Mark Profiles

## show columns

---

**Syntax**    show columns

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays configuration information of bridged Ethernet over ATM, IP over ATM, PPP, or PPPoE static and dynamic interface columns. It is designed to categorize interface subscribers into PPP, PPPoE, bridged, or routed.

**Mode**    Privileged Exec, User Exec

## show configuration

---

**Syntax** show configuration [ interface *interfaceType* *interfaceSpecifier* ] |  
 [ category *categoryName* [ *categoryName* ]\* ] [ virtual-router *routerName* ]  
 [ [ exclude-category interface *interfaceType* ]\* ] [ include-defaults ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the current (running) configuration of the router, a specified virtual router, a specified interface, or a specified category of router settings. You can create a configuration script from this output by saving it as a file with the .scr extension. This command was formerly documented as **show config**; that abbreviation is still supported.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *categoryName*—Name of the category or subcategory of router settings; first *categoryName* variable in the syntax represents the category; repeated *categoryName* variables represent subcategories of the category
  - *routerName*—Name of the virtual router
  - exclude-category—Excludes information associated with a particular type of interface
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - include-defaults—Includes commands that set default values for various parameters
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## show control-plane policer

---

**Syntax**    show control-plane policer protocol *protocolValue*

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Displays control plane information for a specified protocol or for all protocols.

**Options**    • *protocolValue*—Name of the protocol

**Mode**    Privileged Exec, User Exec

**Related Documentation**    • Monitoring Control Plane Policer Information

## show controllers e3

---

**Syntax** show controllers e3 [ brief | { *interfaceSpecifier* [ brief | all | summary ] | serial [ *interfaceSpecifier* ] } ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about E3 controller interfaces.

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - brief—Abbreviated display of E3 controller information
  - all—Detailed display of all available E3 controller information
  - summary—Displays link status summary
  - serial—Displays information about serial interfaces
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show controllers sonet

---

**Syntax** show controllers sonet { [ *brief* ] | *interfaceSpecifier* [ *:controllerSpecifier* ]  
{ [ *configuration* ] | *layerType* [ *interval* | *total* [ *delta* ] ] |  
*controllerType* [ *interval* ] | *all* [ *total* [ *delta* ] ] } } [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the statistics or the configuration for the different layers of channelized SONET and SDH interfaces.

- Options**
- *brief*—Displays a summary of information about all controllers
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *controllerSpecifier*—One of the following:
    - For a section or line, there is no *controllerSpecifier*
    - For a path, the number of the path
    - For a tributary, specified in the format  
*pathChannel* [ */pathPayload* ] [ */tributaryGroup* ] [ */tributaryNumber* ]
    - For an E1 or a DS1 controller, specified in the format  
*pathChannel* [ */pathPayload* ] [ */tributaryGroup* ] [ */tributaryNumber* ]  
[ */channelGroup* ]
    - For a DS3 controller, specified in the format  
*pathChannel ds3-channel-number* [ *ds1-channel-number* ]  
[ *subchannelNumber* ]
      - *pathChannel*—Number of the path
      - *pathPayload*—Number of the payload within the path. In SONET mode, *pathPayload* is always 1. In SDH mode, *pathPayload* is the number of the TUG-3 group.
      - *tributaryGroup*—Number of the tributary group within the path. In SONET mode, *tributary group* is the number of the VT group. In SDH mode, tributary group is the number of the TUG-2 group.
      - *tributaryNumber*—Number of the tributary within the group. In SONET mode, *tributaryNumber* is the number of the VT. In SDH mode, *tributaryNumber* is the number of the TUG-1 group or tributary unit.
      - *channelGroup*—Number of the channel group
      - *ds3-channel-number*—Number of the ds3 channel
      - *ds1-channel-number*—Number of the ds1 channel in the range 1–28
      - *subchannelNumber*—Number of the subchannel in the range 1–24



- *configuration*—Displays the configuration of each controller at the specified level and above
- *layerType*—Type of SONET/SDH layer
  - *section*—Section layer of an interface
  - *line*—Line layer of an interface
  - *path*—SONET or SDH path
- *interval*—Number of 15-minute intervals over which the router monitors information; a value in the range 1–96; default value is the current interval, number 1
- *controllerType*—Type of interface or channel
  - *tributary*—SONET or SDH virtual tributary
  - *e1*—E1 channel over SDH virtual tributary
  - *ds1*—T1 channel over SONET/SDH virtual tributary
  - *ds3*—T3 over channelized SONET interface
  - *t1*—T1 channel on T3 over channelized SONET interface
- *total*—Displays the MIB statistics for all intervals
- *delta*—Displays baselined statistics for all intervals
- *all*—Shows statistics for all time intervals, rather than statistics for selected time intervals
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show controllers sonet remote

**Syntax** show controllers sonet { *interfaceSpecifier* [ *:controllerSpecifier* ] remote [ all ] }  
[ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about the statistics on the remote device when MDL is configured on a T3 over channelized SONET interface or FDL is configured on either a T1 channel on a T3 over channelized SONET interface or a T1 over SONET/SDH interface.

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *controllerSpecifier*—One of the following:
    - For a section or line, there is no *controllerSpecifier*
    - For a T3 over channelized SONET interface, specified in the format *pathChannel ds3-channel-number* [ *ds1-channel-number* ] [ *subchannelNumber* ]
    - For a T1 over SONET/SDH interface, specified in the format *pathChannel* [ */pathPayload* ] [ */tributaryGroup* ] [ */tributaryNumber* ] [ */channelGroup* ]
      - *pathChannel*—Number of the path
      - *pathPayload*—Number of the payload within the path. In SONET mode, *pathPayload* is always 1. In SDH mode, *pathPayload* is the number of the TUG-3 group.
      - *tributaryGroup*—Number of the tributary group within the path. In SONET mode, *tributary group* is the number of the VT group. In SDH mode, tributary group is the number of the TUG-2 group.
      - *tributaryNumber*—Number of the tributary within the group. In SONET mode, *tributaryNumber* is the number of the VT. In SDH mode, *tributaryNumber* is the number of the TUG-1 group or tributary unit.
      - *channelGroup*—Number of the channel group
      - *ds3-channel-number*—Number of the ds3 channel
      - *ds1-channel-number*—Number of the ds1 channel in the range 1–28
      - *subchannelNumber*—Number of the subchannel in the range 1–24
  - all—Shows statistics for all time intervals, rather than statistics for selected time intervals
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show controllers t1

---

**Syntax** show controllers t1 [ brief | { { fractional | serial } [ *interfaceSpecifier* ] | *interfaceSpecifier* [ brief | all | summary ] } ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about the T1 controller interfaces.

- Options**
- fractional—Displays information about T1 fractional interfaces
  - serial—Displays information about T1 serial interfaces
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - brief —Abbreviated display of T1 controller information
  - all—Shows statistics for all time intervals, rather than statistics for selected time intervals
  - summary—Displays link status summary
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show controllers t3

---

**Syntax** show controllers t3 [ brief | { *interfaceSpecifier* [ brief | all | summary ] | { ft1 | serial } [ *interfaceSpecifier* ] } ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about the T3 controller interfaces.

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - brief—Abbreviated display of T3 controller information
  - all—Shows statistics for all time intervals, rather than statistics for selected time intervals
  - summary—Displays link status summary
  - ft1—Displays information about fractional T1 subchannels
  - serial—Displays information about serial interfaces
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show controllers t3 remote

---

**Syntax**    show controllers t3 *interfaceSpecifier* remote [ all ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the statistics on the remote device when MDL is configured on a T3 interface or FDL is configured on a T1 channel.

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - all—Shows statistics for all time intervals, rather than statistics for selected time intervals
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show cops info

---

**Syntax**    show cops info [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about SRC (formerly SDX) sessions and about the COPS layer created for SRC sessions.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show cops statistics

---

**Syntax**    show cops statistics [ *delta* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays statistics about SRC (formerly SDX) sessions.

- Options**
- *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show dhcp binding

**Syntax** To display information for the specified binding ID:

```
show dhcp binding bindingId
```

To display information for DHCP client bindings on the specified subnet:

```
show dhcp binding [ local | external | relay-proxy ] [ subnetAddress ] [ detail ] [ filter ]
```

To display information for DHCP client bindings for the specified IP prefix:

```
show dhcp binding [ local | external | relay-proxy ] [ subnetAddress ] ip-prefix ipPrefix [ detail ] [ filter ]
```

To display information for DHCP client bindings for the specified interface string:

```
show dhcp binding [ local | external | relay-proxy ] [ subnetAddress ] interface string [ detail ] [ filter ]
```

To display information for DHCP client bindings without a lower-layer interface:

```
show dhcp binding [ local | external | relay-proxy ] [ subnetAddress ] no-interface [ detail ] [ filter ]
```

To display information for DHCP client bindings for the specified agent-circuit-id suboption (suboption 1) string of the DHCP relay agent information option (option 82):

```
show dhcp binding [ local | external | relay-proxy ] [ subnetAddress ] circuit-id string [ detail ] [ filter ]
```

To display information for DHCP client bindings for the specified agent-remote-id suboption (suboption 2) string of the DHCP relay agent information option (option 82):

```
show dhcp binding [ local | external | relay-proxy ] [ subnetAddress ] remote-id string [ detail ] [ filter ]
```

**Release Information** Command introduced in JunosE Release 8.1.0.

**local**, **external**, **relay-proxy**, **interface**, **no-interface**, **ip-prefix**, **circuit-id**, and **remote-id** keywords and *subnetAddress*, *ipAddress*, and *string* variables added in JunosE Release 9.3.0.

**Description** Displays information for specified DHCP client bindings, with results ordered by binding ID.



**NOTE:** This command replaces the deprecated **show ip dhcp-external binding**, **show ip dhcp-external binding-id**, and **show ip dhcp-local binding** commands, which may be removed completely in a future release.



- Options**
- *bindingId*—DHCP binding ID for a specific client
  - *local*—Specifies DHCP local server client bindings that meet the display criteria
  - *external*—Specifies DHCP external server client bindings that meet the display criteria
  - *relay-proxy*—Specifies DHCP relay proxy client bindings that meet the display criteria
  - *subnetAddress*—IP address of the subnet on which the DHCP clients reside
  - *ipPrefix*—IP prefix (address and subnetwork mask) of the DHCP clients; for example, 10.10.10.0/24
  - *no-interface*—Specifies DHCP clients without a lower-layer interface; use this keyword to display information for DHCP client bindings configured over dynamic interfaces for which the lower-layer interface has been shut down
  - *detail*—Shows detailed information for the specified DHCP bindings
  - *filter*—See [Filtering show Commands on page 4](#)
  - *string*—Regular expression string that represents the interface, circuit ID, or remote ID to be matched; you must enclose elements containing a space within double quotes (“one element”)

Each element is either a literal string, a metacharacter, or a combination. You can remove the special meaning of a metacharacter by preceding it with a backslash (\). Regular expressions support the following metacharacters:

- `^` Matches the beginning of the input string. Alternatively, when used as the first character within brackets—`[^ ]`—matches any number except the ones specified within the brackets.
- `$` Matches the end of the input string
- `.` (period) Matches any single character, including white space
- `*` Matches 0 or more sequences of the immediately previous character or pattern.
- `+` Matches 1 or more sequences of the immediately previous character or pattern
- `?` Matches 0 or 1 sequence of the immediately previous character or pattern
- `( )` Specifies patterns for multiple use when followed by one of the multiplier metacharacters: asterisk `*`, plus sign `+`, or question mark `?`
- `[ ]` Matches any enclosed character; specifies a range of single characters
- `–` (hyphen) Used within brackets to specify a range of AS or community numbers
- `_` (underscore) Matches a `^`, a `$`, a comma, a space, a `{`, or a `}`. Placed on either side of a string to specify a literal and disallow substring matching. Numerals enclosed by underscores can be preceded or followed by any of the characters listed above
- `|` Matches characters on either side of the metacharacter; logical OR

You must specify the interface string as a regular expression without spaces; for example, `fastEthernet1.1/100` or `fastEthernet.*100`

The following rules apply for representing nonprintable character sequences in the circuit ID string or the remote ID string:

- To represent the binary sequence 0d 0a (hex), use the string '\\r\\n'. This consists of four ASCII characters: 5c for \\, 72 for r, 5c for \\, and 6e for n.

For example, to match the sequence 74 65 73 74 0d 0a 6f 6e 65 (hex), use the string 'test\\r\\n'. In this string, 74 is represented by t, 65 is represented by e, 73 is represented by s, 74 is represented by t, 0d 0a is represented by \\r\\n, 6f is represented by o, 6e is represented by n, and 65 is represented by e.

- To represent the binary sequence 0d 00 (hex), use the string '\\r'. This consists of two ASCII characters: 5c for \\, and 72 for r.
- To represent the binary sequence 0a 00 (hex), use the string '\\n'. This consists of two ASCII characters: 5c for \\, and 6e for n.

For example, to match the sequence 74 65 73 74 0a 00 6f 6e 65 (hex), use the string 'test\\n'. In this string, 74 is represented by t, 65 is represented by e, 73 is represented by s, 74 is represented by t, 0a 00 is represented by \\n, 0a is represented by \\n, 6f is represented by o, 6e is represented by n, and 65 is represented by e.

- To represent all other cases, use the string '\\xab', where ab is a hex code of the byte. For example, to represent byte 3A, use '\\x3a'. This consists of four ASCII characters: 5c for \\, 78 for x, 33 for 3, and 61 for a.

As another example, to match the sequence 74 65 73 74 f3 6f 6e 65 (hex), use the string 'test\\xf3'. In this string, 74 is represented by t, 65 is represented by e, 73 is represented by s, 74 is represented by t, byte F3 is represented by \\xf3, 6f is represented by o, 6e is represented by n, and 65 is represented by e.

**Mode** Privileged Exec

**Related Documentation** • [Monitoring DHCP Binding Information](#)

## show dhcp count

**Syntax** To display counts of DHCP client bindings and interfaces on the specified subnet:

```
show dhcp count [ local | external | relay-proxy ] [ subnetAddress ] [ filter ]
```

To display counts of DHCP client bindings and interfaces for the specified IP prefix:

```
show dhcp count [ local | external | relay-proxy ] [ subnetAddress ] ip-prefix ipPrefix [ filter ]
```

To display counts of DHCP client bindings and interfaces for the specified interface string:

```
show dhcp count [ local | external | relay-proxy ] [ subnetAddress ] interface string [ filter ]
```

To display counts of DHCP client bindings and interfaces without a lower-layer interface:

```
show dhcp count [ local | external | relay-proxy ] [ subnetAddress ] no-interface [ filter ]
```

To display counts of DHCP client bindings and interfaces for the specified agent-circuit-id suboption (suboption 1) string of the DHCP relay agent information option (option 82):

```
show dhcp count [ local | external | relay-proxy ] [ subnetAddress ] circuit-id string [ filter ]
```

To display counts of DHCP client bindings and interfaces for the specified agent-remote-id suboption (suboption 2) string of the DHCP relay agent information option (option 82):

```
show dhcp count [ local | external | relay-proxy ] [ subnetAddress ] remote-id string [ filter ]
```

**Release Information** Command introduced in JunosE Release 9.3.0.

**Description** Displays counts of DHCP client bindings and interfaces.

- Options**
- **local**—Specifies DHCP local server client bindings that meet the display criteria
  - **external**—Specifies DHCP external server client bindings that meet the display criteria
  - **relay-proxy**—Specifies DHCP relay proxy client bindings that meet the display criteria
  - ***subnetAddress***—IP address of the subnet on which the DHCP clients reside
  - ***ipPrefix***—IP prefix (address and subnetwork mask) of the DHCP clients; for example, 10.10.10.0/24
  - **no-interface**—Specifies DHCP clients without a lower-layer interface; use this keyword to display count information for DHCP client bindings configured over dynamic interfaces for which the lower-layer interface has been shut down

- *filter*—See [Filtering show Commands](#) on page 4
- *string*—Regular expression string that represents the interface, circuit ID, or remote ID to be matched; you must enclose elements containing a space within double quotes (“one element”)

Each element is either a literal string, a metacharacter, or a combination. You can remove the special meaning of a metacharacter by preceding it with a backslash (\). Regular expressions support the following metacharacters:

- `^` Matches the beginning of the input string. Alternatively, when used as the first character within brackets—`[^ ]`—matches any number except the ones specified within the brackets.
- `$` Matches the end of the input string
- `.` (period) Matches any single character, including white space
- `*` Matches 0 or more sequences of the immediately previous character or pattern.
- `+` Matches 1 or more sequences of the immediately previous character or pattern
- `?` Matches 0 or 1 sequence of the immediately previous character or pattern
- `( )` Specifies patterns for multiple use when followed by one of the multiplier metacharacters: asterisk `*`, plus sign `+`, or question mark `?`
- `[ ]` Matches any enclosed character; specifies a range of single characters
- `–` (hyphen) Used within brackets to specify a range of AS or community numbers
- `_` (underscore) Matches a `^`, a `$`, a comma, a space, a `{`, or a `}`. Placed on either side of a string to specify a literal and disallow substring matching. Numerals enclosed by underscores can be preceded or followed by any of the characters listed above
- `|` Matches characters on either side of the metacharacter; logical OR

You must specify the interface string as a regular expression without spaces; for example, `fastEthernet1.1/100` or `fastEthernet.*100`

The following rules apply for representing nonprintable character sequences in the circuit ID string or the remote ID string:

- To represent the binary sequence `0d 0a` (hex), use the string `'\\r\\n'`. This consists of four ASCII characters: `5c` for `\\`, `72` for `r`, `5c` for `\\`, and `6e` for `n`.

For example, to match the sequence `74 65 73 74 0d 0a 6f 6e 65` (hex), use the string `'test\\r\\nnone'`. In this string, `74` is represented by `t`, `65` is represented by `e`, `73` is represented by `s`, `74` is represented by `t`, `0d 0a` is represented by `\\r\\n`, `6f` is represented by `o`, `6e` is represented by `n`, and `65` is represented by `e`.

- To represent the binary sequence `0d 00` (hex), use the string `'\\r'`. This consists of two ASCII characters: `5c` for `\\`, and `72` for `r`.
- To represent the binary sequence `0a 00` (hex), use the string `'\\n'`. This consists of two ASCII characters: `5c` for `\\`, and `6e` for `n`.

For example, to match the sequence 74 65 73 74 0a 00 6f 6e 65 (hex), use the string 'test\\none'. In this string, 74 is represented by t, 65 is represented by e, 73 is represented by s, 74 is represented by t, 0a 00 is represented by \\n, 0a is represented by \\n, 6f is represented by o, 6e is represented by n, and 65 is represented by e.

- To represent all other cases, use the string '\\xab', where ab is a hex code of the byte. For example, to represent byte 3A, use '\\x3a'. This consists of four ASCII characters: 5c for \\, 78 for x, 33 for 3, and 61 for a.

As another example, to match the sequence 74 65 73 74 f3 6f 6e 65 (hex), use the string 'test\\xf3one'. In this string, 74 is represented by t, 65 is represented by e, 73 is represented by s, 74 is represented by t, byte F3 is represented by \\xf3, 6f is represented by o, 6e is represented by n, and 65 is represented by e.

**Mode** Privileged Exec

## show dhcp-external

---

**Syntax**    show dhcp-external

**Release Information**    Command introduced in JunosE Release 9.3.0.

**Description**    Displays global configuration information for the DHCP external server application. Currently, this command indicates whether the ability to use a combination of the MAC address and giaddr to uniquely identify DHCP clients with duplicate MAC addresses is enabled or disabled for the DHCP external server application.

**Mode**    Privileged Exec

**Related Documentation**

- Monitoring DHCP External Server Duplicate MAC Address Setting

## show dhcp host

**Syntax** To display information for DHCP client bindings on the specified subnet:

```
show dhcp host [ local | external | relay-proxy ] [ subnetAddress ] [ detail ] [ filter ]
```

To display information for DHCP client bindings for the specified IP prefix:

```
show dhcp host [ local | external | relay-proxy ] [ subnetAddress ] ip-prefix ipPrefix [ detail ] [ filter ]
```

To display information for DHCP client bindings for the specified interface string:

```
show dhcp host [ local | external | relay-proxy ] [ subnetAddress ] interface string [ detail ] [ filter ]
```

To display information for DHCP client bindings without a lower-layer interface:

```
show dhcp host [ local | external | relay-proxy ] [ subnetAddress ] no-interface [ detail ] [ filter ]
```

To display information for DHCP client bindings for the specified agent-circuit-id suboption (suboption 1) string of the DHCP relay agent information option (option 82):

```
show dhcp host [ local | external | relay-proxy ] [ subnetAddress ] circuit-id string [ detail ] [ filter ]
```

To display information for DHCP client bindings for the specified agent-remote-id suboption (suboption 2) string of the DHCP relay agent information option (option 82):

```
show dhcp host [ local | external | relay-proxy ] [ subnetAddress ] remote-id string [ detail ] [ filter ]
```

**Release Information** Command introduced in JunosE Release 9.3.0.

**Description** Displays information for specified DHCP client bindings, with results ordered by IP address. This command displays information only for DHCP client bindings with assigned IP addresses.

**Options**

- **local**—Specifies DHCP local server client bindings that meet the display criteria
- **external**—Specifies DHCP external server client bindings that meet the display criteria
- **relay-proxy**—Specifies DHCP relay proxy client bindings that meet the display criteria
- ***subnetAddress***—IP address of the subnet on which the DHCP clients reside
- ***ipPrefix***—IP prefix (address and subnetwork mask) of the DHCP clients; for example, 10.10.10.0/24
- **no-interface**—Specifies DHCP clients without a lower-layer interface; use this keyword to display information for DHCP client bindings configured over dynamic interfaces for which the lower-layer interface has been shut down

- *detail*—Shows detailed information for the specified DHCP bindings
- *filter*—See [Filtering show Commands on page 4](#)
- *string*—Regular expression string that represents the interface, circuit ID, or remote ID to be matched; you must enclose elements containing a space within double quotes (“one element”)

Each element is either a literal string, a metacharacter, or a combination. You can remove the special meaning of a metacharacter by preceding it with a backslash (\). Regular expressions support the following metacharacters:

- `^` Matches the beginning of the input string. Alternatively, when used as the first character within brackets—`[^ ]`—matches any number except the ones specified within the brackets.
- `$` Matches the end of the input string
- `.` (period) Matches any single character, including white space
- `*` Matches 0 or more sequences of the immediately previous character or pattern.
- `+` Matches 1 or more sequences of the immediately previous character or pattern
- `?` Matches 0 or 1 sequence of the immediately previous character or pattern
- `( )` Specifies patterns for multiple use when followed by one of the multiplier metacharacters: asterisk `*`, plus sign `+`, or question mark `?`
- `[ ]` Matches any enclosed character; specifies a range of single characters
- `–` (hyphen) Used within brackets to specify a range of AS or community numbers
- `_` (underscore) Matches a `^`, a `$`, a comma, a space, a `{`, or a `}`. Placed on either side of a string to specify a literal and disallow substring matching. Numerals enclosed by underscores can be preceded or followed by any of the characters listed above
- `|` Matches characters on either side of the metacharacter; logical OR

You must specify the interface string as a regular expression without spaces; for example, `fastEthernet1.1/100` or `fastEthernet.*100`

The following rules apply for representing nonprintable character sequences in the circuit ID string or the remote ID string:

- To represent the binary sequence `0d 0a` (hex), use the string `'\\r\\n'`. This consists of four ASCII characters: `5c` for `\\`, `72` for `r`, `5c` for `\\`, and `6e` for `n`.

For example, to match the sequence `74 65 73 74 0d 0a 6f 6e 65` (hex), use the string `'test\\r\\nnone'`. In this string, `74` is represented by `t`, `65` is represented by `e`, `73` is represented by `s`, `74` is represented by `t`, `0d 0a` is represented by `\\r\\n`, `6f` is represented by `o`, `6e` is represented by `n`, and `65` is represented by `e`.

- To represent the binary sequence `0d 00` (hex), use the string `'\\r'`. This consists of two ASCII characters: `5c` for `\\`, and `72` for `r`.



- To represent the binary sequence 0a 00 (hex), use the string '\n'. This consists of two ASCII characters: 5c for \, and 6e for n.

For example, to match the sequence 74 65 73 74 0a 00 6f 6e 65 (hex), use the string 'test\none'. In this string, 74 is represented by t, 65 is represented by e, 73 is represented by s, 74 is represented by t, 0a 00 is represented by \n, 0a is represented by \n, 6f is represented by o, 6e is represented by n, and 65 is represented by e.

- To represent all other cases, use the string '\\xab', where ab is a hex code of the byte. For example, to represent byte 3A, use '\\x3a'. This consists of four ASCII characters: 5c for \, 78 for x, 33 for 3, and 61 for a.

As another example, to match the sequence 74 65 73 74 f3 6f 6e 65 (hex), use the string 'test\\xf3one'. In this string, 74 is represented by t, 65 is represented by e, 73 is represented by s, 74 is represented by t, byte F3 is represented by \\xf3, 6f is represented by o, 6e is represented by n, and 65 is represented by e.

**Mode** Privileged Exec

## show dhcp proxy-client binding

---

**Syntax**    show dhcp proxy-client binding

**Release Information**    Command introduced in JunosE Release 12.2.0.

**Description**    Displays the configured DHCP proxy client bindings.

**Mode**    Privileged Exec

## show dhcp relay

---

<b>Syntax</b>	show dhcp relay [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays DHCP relay configuration information and IP addresses of configured DHCP servers.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring DHCP Relay Configuration Information</li></ul>

## show dhcp relay proxy statistics

---

**Syntax**    show dhcp relay proxy statistics [ *delta* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the statistics of the configured DHCP relay proxy.

- Options**
- *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring DHCP Server and DHCP Relay Agent Statistics

## show dhcp relay statistics

---

**Syntax**    show dhcp relay statistics [ detail ] [ delta ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **detail** keyword added in JunosE Release 7.2.0.

**Description**    Displays statistics that are common to both DHCP relay and DHCP relay proxy, and also to display DHCP server statistics for DHCP relay only.

**Options**

- statistics—Displays statistics for the DHCP relay
- detail—Displays a subset of statistics on a per-DHCP server basis
- delta—Displays baselined statistics
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**

- Monitoring DHCP Relay Statistics

## show dhcp server

---

**Syntax**    show dhcp server [ statistics [ delta ] ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the IP address(es) and statistics of the configured DHCP server.

- Options**
- server—DHCP Proxy Client configuration
  - statistics—Displays statistics for the DHCP server or relay agent
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring DHCP Server and DHCP Relay Agent Statistics

## show dhcp summary

---

**Syntax**    show dhcp summary

**Release Information**    Command introduced in JunosE Release 8.2.0.

**Description**    Displays the currently configured DHCP applications and indicates whether they are active.

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring Status of DHCP Applications

## show dhcp vendor-option

---

<b>Syntax</b>	show dhcp vendor-option [ default   vendor-option-relay-server <i>ServerAddress</i> ]
<b>Release Information</b>	Command introduced in JunosE Release 8.2.0.
<b>Description</b>	Displays configuration and action information for the DHCP vendor-option feature.
<b>Options</b>	<ul style="list-style-type: none"><li>• default—Displays where DHCP client packets that do not match a configured vendor-string are sent by default</li><li>• vendor-option-relay-server—Displays DHCP string matches that are sent to the specified vendor-option server</li><li>• <i>ServerAddress</i>—IP address of the DHCP vendor-option server</li></ul>
<b>Mode</b>	Privileged Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring DHCP Option 60 Information</li></ul>



## show dos-protection-group

---

**Syntax**    `show dos-protection-group groupName rates slot slotNumber [ filter ] ]`

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Displays information about denial of service (DoS) protection groups.

- Options**
- *groupName*—Name of the DoS protection group
  - *rate*—Calculated values for the minimum rate, maximum rate, minimum burst, and maximum burst
  - *slotNumber*—Number of the slot
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show drop-profile

---

**Syntax**    show drop-profile [ *dropProfileName* ] [ brief | references ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the drop profile.

- Options**
- *dropProfileName*—Name for the drop profile
  - brief —Displays information in a condensed format
  - references—Displays QoS profiles which reference the drop profile
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring Drop Profiles for RED and WRED

## show dvmrp destination profile

---

**Syntax**    show dvmrp destination profile [ *profileName* ]

**Release Information**    Command introduced in JunosE Release 8.2.0.

**Description**    Displays the configuration and status of a destination profile for dynamic DVMRP tunnels.

**Options**    • *profileName*—Name of the destination profile

**Mode**    Privileged Exec

## show dvmrp tunnel

---

**Syntax** show dvmrp tunnel [ detail ] [ state *tunnelStatus* ] [ *tunnelName* |  
[ virtual-router *vrName* ] ip *ipAddress* [ *tunnelName* ] ] [ *filter* ]

To display summary information:

show dvmrp tunnel summary [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about DVMRP tunnels.

- Options**
- detail—Shows detailed tunnel information about DVMRP tunnels
  - *tunnelStatus*—State of tunnels for which information is displayed; one of the following:
    - disabled—Tunnel is disabled
    - down—Tunnel is not operational
    - enabled—Tunnel is enabled
    - lower-down—Interface layer below the tunnel is not operational
    - not-present—Tunnel service module is not in slot
    - up—Tunnel is operational
  - *tunnelName*—Name of a tunnel for which you want to display information
  - *vrName*—Name of a virtual router for which tunnel information is displayed
  - *ipAddress*—IP address associated with tunnel
  - *filter*—See [Filtering show Commands on page 4](#)
  - summary—Displays summary information

**Mode** Privileged Exec

## show egress-queue events

<b>Syntax</b>	show egress-queue events { interface <i>interfaceType</i> <i>interfaceSpecifier</i>   l2tp session <i>sessionName</i>   tunnel-server <i>interfaceType</i> } [ <i>atmVpi</i>   <i>s-vlanIdValue</i> ] [ explicit   summary ] [ traffic-class <i>trafficClassName</i> ] [ event-exceeding <i>eventExceedingNumber</i> { committed   conformed   exceeded   forwarded } ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <i>atmVpi</i> and <i>s-vlanIdValue</i> variables added in JunosE Release 7.1.0.
<b>Description</b>	Displays events that track the number of times egress queuing rates exceed thresholds you have configured.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>interfaceType</i>—Interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li> <li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li> <li>• <i>sessionName</i>—Name of the L2TP session</li> <li>• <i>atmVpi</i>—Virtual path identifier of this PVC; number in the range 0–255</li> <li>• <i>s-vlanIdValue</i>—S-VLAN ID number in the range 0–4095</li> <li>• explicit—Displays events for queues only on the specified interface and not for queues stacked above the interface</li> <li>• summary—Displays the sum of events for the queues bound to interfaces that are stacked above the specified interface</li> <li>• <i>trafficClassName</i>—Name of a traffic class for which egress queue events are displayed</li> <li>• <i>eventExceedingNumber</i>—Number of events, in the range 1–1073741824</li> <li>• committed—Displays queues in which the committed drop count exceeds the <i>eventExceedingNumber</i></li> <li>• conformed—Displays queues in which the conformed drop count exceeds the <i>eventExceedingNumber</i></li> <li>• exceeded—Displays queues in which the exceeded drop count exceeds the <i>eventExceedingNumber</i></li> <li>• forwarded—Displays queues in which the forwarding event count exceeds the <i>eventExceedingNumber</i></li> <li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li> </ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Monitoring Forwarding and Drop Events on the Egress Queue</a></li> </ul>

## show egress-queue rates

**Syntax** show egress-queue rates [ color ] [ previous | current ] [ full | brief ]  
 { interface *interfaceType interfaceSpecifier* |  
 l2tp session *sessionName* | tunnel-server *interfaceType* } [ *atmVpi* | *s-vlanIdValue* ]  
 [ explicit | summary ] [ traffic-class *trafficClassName* ]  
 [ rate-exceeding *rateExceedingNumber* { aggregate | committed | conformed |  
 exceeded | forwarded | minimum | maximum } ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
*atmVpi* and *s-vlanIdValue* variables added in JunosE Release 7.1.0.

**Description** Displays statistics associated with egress queuing rates.

- Options**
- color—Displays drop rates by color without minimum and maximum rates, rather than as an aggregate of all colors
  - previous—Displays rate statistics for the previous rate period; the default option
  - current—Displays rate statistics for the current rate period
  - full—Displays rate statistics for all queues
  - brief—Displays rate statistics only for queues that have queue rate statistics enabled; the default option
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *sessionName* —Name of the L2TP session
  - *atmVpi*—Virtual path identifier of this PVC; number in the range 0–255
  - *s-vlanIdValue*—S-VLAN ID number in the range 0–4095
  - explicit—Displays rate statistics for queues only on the specified interface and not queues stacked above the interface
  - summary—Displays the sum of rates for the queues bound to interfaces that are stacked above the specified interface
  - *trafficClassName*—Name of a traffic class for which egress queue rate statistics are displayed
  - *rateExceedingNumber*—Bits per second in the range 1–1073741824
  - aggregate—Displays queues in which the aggregate drop rate exceeds the *rateExceedingNumber*
  - committed—Displays queues in which the committed drop rate exceeds the *rateExceedingNumber*
  - conformed—Displays queues in which the conformed drop rate exceeds the *rateExceedingNumber*

- **exceeded**—Displays queues in which the exceeded drop rate exceeds the *rateExceedingNumber*
- **forwarded**—Displays queues in which the forwarding rate exceeds the *rateExceedingNumber*
- **minimum**—Displays queues in which the minimum queue rate exceeds the *rateExceedingNumber*
- **maximum**—Displays queues in which the maximum queue rate exceeds the *rateExceedingNumber*
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

- Related Documentation**
- [Monitoring Forwarding and Drop Rates on the Egress Queue](#)
  - [Troubleshooting Memory and Processor Use for Egress Queue Rate Statistics and Events](#)

## show enable-frag-stats

---

**Syntax**    show enable-frag-stats

**Release Information**    Command introduced in JunosE Release 12.3.0.

**Description**    Displays whether collection and storage of output policy statistics for traffic on tunnel interfaces is performed by the number of fragments or the number of packets. By default, the output policy statistics for tunnel interfaces are stored as a measure of the number of packets.

**Mode**    Privileged Exec

**Related Documentation**

- Statistics Collection for Output Policies on Tunnel Interfaces Overview
- Configuring Statistics Collection for Output Policies on Tunnel Interfaces
- Verifying Statistics Collection for Output Policies on Tunnel Interfaces
- enable-frag-stats



## show environment

---

**Syntax**    show environment [ all ] [ table ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the router's physical environment, such as power and temperature.

**Options**

- all—Displays router environment information and temperature status table
- table—Displays temperature status table only
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ethernet oam lfm discovery

---

<b>Syntax</b>	show ethernet oam lfm discovery <i>interfaceType interfaceSpecifier</i>
<b>Release Information</b>	Command introduced in JunosE Release 11.1.0.
<b>Description</b>	Displays the results of the Ethernet OAM link-fault management discovery process for a particular interface.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>interfaceType</i>—One of the following interface types listed in <a href="#">“Interface Types and Specifiers” on page 5</a>:<ul style="list-style-type: none"><li>• fastEthernet</li><li>• gigabitEthernet</li><li>• tenGigabitEthernet</li></ul></li><li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• OAM Discovery Feature</li><li>• Monitoring OAM Link-Fault Management Discovery Settings for an Interface</li></ul>

---

## show ethernet oam lfm statistics

---

<b>Syntax</b>	show ethernet oam lfm statistics <i>interfaceType interfaceSpecifier</i>
<b>Release Information</b>	Command introduced in JunosE Release 11.1.0.
<b>Description</b>	Displays detailed information about the Ethernet OAM link-fault management packets that are processed by a particular interface.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>interfaceType</i>—One of the following interface types listed in <a href="#">“Interface Types and Specifiers” on page 5</a>:<ul style="list-style-type: none"><li>• fastEthernet</li><li>• gigabitEthernet</li><li>• tenGigabitEthernet</li></ul></li><li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring OAM Link-Fault Management Statistics for an Interface</li></ul>

## show ethernet oam lfm status

---

<b>Syntax</b>	show ethernet oam lfm status <i>interfaceType interfaceSpecifier</i>
<b>Release Information</b>	Command introduced in JunosE Release 11.1.0.
<b>Description</b>	Displays the current Ethernet OAM link-fault management configuration for a particular interface. OAM must be operational on the interface when you run this command.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>interfaceType</i>—One of the following interface types listed in <a href="#">“Interface Types and Specifiers” on page 5</a>:<ul style="list-style-type: none"><li>• fastEthernet</li><li>• gigabitEthernet</li><li>• tenGigabitEthernet</li></ul></li><li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring OAM Link-Fault Management Configuration for an Interface</li></ul>

## show ethernet oam lfm summary

---

<b>Syntax</b>	show ethernet oam lfm summary
<b>Release Information</b>	Command introduced in JunosE Release 11.1.0.
<b>Description</b>	Displays a summary of the MAC-layer OAM status of all Ethernet links on which OAM link-fault management is enabled.
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring OAM Link-Fault Management Sessions on All Configured Interfaces</li></ul>

## show exception dump

---

**Syntax**    show exception dump [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the parameters for transferring core dump files.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show exception monitor

---

**Syntax**    show exception monitor [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about core dump monitor status and configuration.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show fabric-queue

---

**Syntax**    show fabric-queue [ traffic-class *trafficClassName* [ detail ] |  
              egress-slot *egressSlotNumber* | detail |  
              traffic-class *trafficClassName* egress-slot *egressSlotNumber* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays forwarded and dropped statistics for the queues in the fabric.

- Options**
- *trafficClassName*—Name of the traffic class
  - detail—Provides detailed information about the queues in the fabric
  - *egressSlotNumber*—Number of the egress slot
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**    • Monitoring Queue Statistics for the Fabric



## show fabric weights

---

**Syntax**    show fabric weights

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays the multicast-to-unicast ratio for the router switch fabric.

**Mode**    Privileged Exec, User Exec

## show flash

---

**Syntax**    show flash

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about installed flash cards.

**Mode**    Privileged Exec, User Exec

## show forwarding-table route-holddown

---

**Syntax** show forwarding-table route-holddown

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the configured route hold-down time (in seconds) that is allowed after an initial routing table change for the accumulation and subsequent distribution of a set of routing table updates to the line modules.

**Mode** Privileged Exec, User Exec

## show frame-relay interface

---

**Syntax** show frame-relay interface [ *interfaceType* *interfaceSpecifier* ] [ members ]  
[ brief ] [ delta ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays Frame Relay statistics for interfaces.

- Options**
- *interfaceType*—One of the following interface types listed in [Interface Types and Specifiers on page 5](#):
    - serial
    - pos
    - mlframe-relay
    - tunnel—GRE tunnel
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - members—Displays the status of MLFR links
    - displays the status of all MLFR links if you specify the interface type **mlframe-relay** without a specifier for an MLFR bundle
    - displays the status of MLFR links in an MLFR bundle if you specify that bundle
  - brief—Displays a summary of interface information
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

---

## show frame-relay lip

---

**Syntax** show frame-relay lip [ interface *interfaceType interfaceSpecifier* ] [ brief ] [ delta ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays Link Integrity Protocol state and statistics for a link in an MLFR bundle.

- Options**
- *interfaceType*—One of the following interface types listed in [“Interface Types and Specifiers” on page 5](#):
    - serial
    - pos
  - *interfaceSpecifier*—Particular interface in the format *slot/port:link*:
    - *slot*—Number of the chassis slot of the line module in the range 0–13 (ERX14xx models) and 0–6 (ERX7xx models)
    - *port*—Port number in the range 0–2
    - *link*—Number of a link in the range 1–8
  - brief—Summarized format
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show frame-relay lmi

---

**Syntax** show frame-relay lmi [ interface *interfaceType* *interfaceSpecifier* ] [ brief ]  
[ delta ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays state and statistics for the local management interface.

- Options**
- *interfaceType*—One of the following interface types listed in [Interface Types and Specifiers on page 5](#):
    - serial
    - pos
    - mlframe-relay
    - tunnel—GRE tunnel
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - brief—Summarized format
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show frame-relay map

---

**Syntax**    show frame-relay map [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the current Frame Relay map entries and information about the Frame Relay connections.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show frame-relay multilinkInterface

---

**Syntax** show frame-relay multilinkInterface [ *interfaceType interfaceSpecifier* ] [ brief ]  
[ delta ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays statistics about all MLFR interfaces or the specified MLFR interfaces.

- Options**
- *interfaceType*—One of the following interface types listed in [“Interface Types and Specifiers” on page 5](#):
    - serial
    - pos
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - brief —Displays a summary of interface information
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec



## show frame-relay pvc

---

**Syntax** show frame-relay pvc [ *dlci* ] interface *interfaceType* *interfaceSpecifier* ]  
[ *brief* ] [ *delta* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays permanent virtual circuit statistics for Frame Relay or MLFR interfaces.

- Options**
- *dlci*—DLCI number to be used on the specified subinterface to identify a virtual circuit in the range 16–1007
  - *interfaceType*—One of the following interface types listed in [“Interface Types and Specifiers” on page 5](#):
    - serial
    - pos
    - mlframe-relay
    - tunnel—GRE tunnel
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *brief*—Displays the abbreviated version of the command output
  - *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show frame-relay subinterface

---

<b>Syntax</b>	show frame-relay subinterface [ <i>interfaceType interfaceSpecifier</i> ] [ brief ] [ delta ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays statistics about Frame Relay subinterfaces.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>interfaceType</i>—One of the following interface types listed in <a href="#">“Interface Types and Specifiers” on page 5</a>:<ul style="list-style-type: none"><li>• serial</li><li>• pos</li><li>• mlframe-relay</li></ul></li><li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li><li>• brief—Displays a summary of subinterface information</li><li>• delta—Displays baselined statistics</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring the Policy Configuration of Frame Relay Subinterfaces</li></ul>

## show frame-relay summary

---

**Syntax**    show frame-relay summary [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Scans all defined Frame Relay interfaces and circuits and reports aggregate status counts.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ftp-server

---

**Syntax**    show ftp-server

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the FTP server.

**Mode**    Privileged Exec

## show gre destination profile

---

**Syntax**    show gre destination profile [ *profileName* ]

**Release Information**    Command introduced in JunosE Release 8.2.0.

**Description**    Displays the configuration and status of a destination profile for dynamic GRE tunnels.

**Options**    • *profileName*—Name of the destination profile

**Mode**    Privileged Exec

## show gre tunnel

---

**Syntax**    show gre tunnel [ detail ] [ state *tunnelStatus* ]  
              [ *tunnelName* | [ virtual-router *vrName* ] ip *ipAddress* ] [ *filter* ] [ summary ]

To display summary information:

show gre tunnel summary [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about GRE tunnels.

- Options**
- detail—Shows detailed tunnel information about GRE tunnels
  - *tunnelStatus*—State of tunnels for which information is displayed; one of the following:
    - disabled—Tunnel is disabled
    - down—Tunnel is not operational
    - enabled—Tunnel is enabled
    - lower-down—Interface layer lower below the tunnel is not operational
    - not-present—Tunnel service module is not in slot
    - up—Tunnel is operational
  - *tunnelName*—Name of a tunnel for which you want to display information
  - *vrName*—Name of a virtual router for which tunnel information is displayed
  - *ipAddress*—IP address associated with tunnel
  - *filter*—See [Filtering show Commands on page 4](#)
  - summary—Displays summary information

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring GRE Tunnel Information

## show hardware

---

**Syntax**    show hardware [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the modules installed in the router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show hdlc interface

---

**Syntax** show hdlc interface [ { *dataRestriction* [ *dataRestriction* ]\* } | full ]  
[ delta ] [ *stateRestriction* ] [ { *interfaceType* } *interfaceSpecifier* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays statistics about specified Cisco HDLC interfaces.

- Options**
- *dataRestriction*—Specify one or more of the following keywords:
    - config—Displays information about the HDLC interface configuration
    - status—Displays information about the HDLC interface operational status
    - statistics—Displays information about the HDLC interface statistics
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - full—Displays configuration, status, and statistics information; equivalent to specifying **config status statistics**
  - delta—Displays baselined statistics
  - *stateRestriction*—Specify only one of the following keywords:
    - open—Displays an interface that is administratively enabled, which means that the **no ppp shutdown** command is operational
    - closed—Displays an interface that is administratively disabled, which means that the **ppp shutdown** command is operational
    - up—Displays an interface that is up, which means that the LCP has been negotiated
    - down—Displays an interface that is down, which means that the LCP has not been negotiated, the negotiations have failed, or the connection has been terminated
    - lower-layer-down—Displays an interface that is not up and is waiting for the lower layer to come up to initiate negotiations for LCP
    - not present—Displays an interface on which traffic cannot flow because hardware is unavailable
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec



## show hosts

---

**Syntax**    show hosts [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays a list of configured network servers.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show hotfix

---

**Syntax**    show hotfix [ *hfixFileName* ] [ detail ]

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays information for any hotfix available on the local file system. The information includes name and ID of the hotfix, activation and arming status, and any other required hotfixes.

**Options**

- *hfixFileName*—Name of a hotfix software file (.hfx) on the local file system
- detail—Displays a synopsis describing the purpose of each hotfix; when you also specify a particular hotfix, displays additional details about that hotfix

**Mode**    User Exec

---

## show icr-partition

---

<b>Syntax</b>	show icr-partition [ <i>interfaceType interfaceSpecifier</i> [ <i>vid</i> ] ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced in JunosE Release 10.3.0.
<b>Description</b>	Displays ICR partition information for the VRID configured on the specified interface.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>interfaceType</i>—One of the following interface types listed in <a href="#">Interface Types and Specifiers on page 5</a><ul style="list-style-type: none"><li>• fastEthernet</li><li>• gigabitEthernet</li><li>• tenGigabitEthernet</li></ul></li><li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li><li>• <i>vid</i>—Virtual router ID identifier; a number in the range 1– 255</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring the Configuration of an ICR Partition Attached to an Interface</li><li>• Monitoring the Status of ICR Partition Accounting</li><li>• Monitoring the Configuration of ICR Partitions</li></ul>

## show icr-partitions

---

**Syntax** show icr-partitions [ backup | dormant | master | summary ] [ *filter* ]

**Release Information** Command introduced in JunosE Release 10.3.0.

**Description** Displays a list of all configured ICR partitions in different states, and a summary of all configured ICR partitions on the router. Includes information about the state of the partition, the partition identifier, the virtual router identifier, and the interface identifier.

**Options**

- backup—Displays the total number of backup ICR partitions configured on the router
- dormant—Displays the total number of dormant ICR partitions configured on the router
- master—Displays the total number of master ICR partitions configured on the router
- summary—Displays a summary of all ICR partitions configured on the router
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

**Related Documentation**

- Monitoring the Configuration of ICR Partitions
- Monitoring the Configuration of an ICR Partition Attached to an Interface
- Monitoring the Status of ICR Partition Accounting

---

## show ike certificates

---

**Syntax** show ike certificates { all | crl | peer | public-certs | root-cas } [ hex-format ]  
[ filter ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the IKE certificates configured on the E Series router.



.....  
**NOTE:** This command has been replaced by the [show ipsec certificates](#) command and may be removed completely in a future release.  
.....

- Options**
- all—Displays all certificates configured on the router
  - crl—Displays certificate revocation lists
  - peer—Displays peer certificates
  - public-certs—Displays public certificates
  - root-cas—Displays root CA certificates
  - hex-format—Displays certificate data in hexadecimal format
  - filter—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ike configuration

---

**Syntax**    show ike configuration [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays a summary of the IKE configuration.



.....  
**NOTE:** This command has been replaced by the [show ipsec ike-configuration](#) command and may be removed completely in a future release.  
.....

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

---

## show ike identity

---

**Syntax**    show ike identity [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the IKE identity configuration.



.....  
**NOTE:** This command has been replaced by the [show ipsec identity](#) command and may be removed completely in a future release.  
.....

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ike policy-rule

---

**Syntax**    show ike policy-rule [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays configuration of IKE phase 1 policy rules.



.....  
**NOTE:** This command has been replaced by the [show ipsec ike-policy-rule](#) command and may be removed completely in a future release.  
.....

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



---

## show ike sa

---

**Syntax**    show ike sa [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays IKE phase 1 SAs running on the router.



.....  
**NOTE:** This command has been replaced by the [show ipsec ike-sa](#) command and may be removed completely in a future release.  
.....

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show interfaces

---

<b>Syntax</b>	show interfaces <i>interfaceType interfaceSpecifier</i> [ <i>delta</i> ] [ <i>brief</i> ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays the current state of the interface you specify.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>interfaceType</i>—Interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li><li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">“Interface Types and Specifiers” on page 5</a>; for ATM, subinterfaces are not supported by the syntax</li><li>• <i>delta</i>—Displays baselined statistics</li><li>• <i>brief</i>—Displays a brief summary of the interface</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring the QoS Configuration of ATM Interfaces</li><li>• Monitoring the QoS Configuration of Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet Interfaces</li><li>• Monitoring Interfaces and Policy Lists</li></ul>

## show interfaces lag

---

**Syntax** show interfaces *interfaceType interfaceSpecifier* lag [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about a specified Ethernet member link in an IEEE 802.3ad link aggregation group (LAG) bundle.

- Options**
- *interfaceType*—One of the following interface types listed in [Interface Types and Specifiers on page 5](#)
    - fastEthernet
    - gigabitEthernet
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show interfaces lag members

---

**Syntax**    show interfaces lag [ *interfaceSpecifier* ] members [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the Ethernet member links in all IEEE 802.3ad link aggregation group (LAG) bundles configured on the router, or about the member links in a specified IEEE 802.3ad LAG bundle.

- Options**
- *interfaceSpecifier*—LAG interface specifier; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**

- [Monitoring the QoS Configuration of IEEE 802.3ad Link Aggregation Group Bundles](#)

## show ip

---

**Syntax**    `show ip [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays general information for IP.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip address

---

**Syntax**    `show ip address [ vrfName ] [ brief | detail ] localAddress [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays interface information for the specified IP address.

- Options**
- *vrfName*—Name of the VRF
  - *brief*—Displays summary information about the interface
  - *detail*—Displays detailed information about the interface
  - *localAddress*—IP address of the specific interface
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip as-path-access-list

---

**Syntax**    show ip as-path-access-list [ *accessListName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about AS-path access lists.

**Options**

- *accessListName*—Name of an AS-path access list
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip bgp

**Syntax** To display information about networks for all address families or for a specific address family other than the L2VPN address family and the route-target address family:

```
show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf vrfName ]
[ network [ networkMask [ longer-prefixes ] ] ] [ fields fieldOptions ] [ filter ]
```

To display information for networks associated with only the L2VPN address family:

```
show ip bgp { l2vpn all | l2vpn vpls vplsName | l2vpn vpws vpwsName }
[ site-id siteId block-offset blockOffset ] [ fields fieldOptions ] [ filter ]
```

To display information for networks associated with only the route-target address family:

```
show ip bgp route-target signaling rtfPrefix [ longer-prefixes ]
[ fields fieldOptions ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**l2vpn** and **all** keywords added in JunosE Release 7.1.0.  
**vpls** keyword and *vplsName* variable added in JunosE Release 7.1.0.  
**site-id** keyword and *siteId* variable added in JunosE Release 7.1.0.  
**block-offset** keyword and *blockOffset* variable added in JunosE Release 7.1.0.  
**vpws** keyword and *vpwsName* variable added in JunosE Release 8.1.0.  
**route-target signaling** keywords and *rtMemNlri* variable added in JunosE Release 8.2.0.  
*rtMemNlri* variable replaced by *rtfPrefix* variable in JunosE Release 9.1.0.

**Description** Displays filtered information about a specified network, or all networks, in the BGP routing table associated with a specified address family or all address families. Only those fields that you specify are displayed, except that the prefix field is always displayed. Default fields can be set with the **default-fields route** command.

- Options**
- **ipv4 unicast**—Specifies the IPv4 unicast address family and routing table; the default option
  - **ipv4 multicast**—Specifies the IPv4 multicast address family and routing table
  - **vpnv4 all**—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - **vpnv4 vrf *vrfName***—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - ***network***—IP address for which the best matching route is displayed; if no network is specified, displays the fields for all networks
  - ***networkMask***—Address mask to be applied to the network address
  - **longer-prefixes**—Displays all routes with a prefix that is equal to or more specific than the specified prefix
  - **l2vpn all**—Specifies all VPLS and VPWS instances in the L2VPN address family
  - **l2vpn vpls *vplsName***—Specifies the VPLS instance with the name *vplsName*



- *l2vpn vpws vpwsName*—Specifies the VPWS instance with the name *vpwsName*
- *siteId*—Numerical identifier for the site; must be an unsigned 16-bit integer greater than zero that is unique across the VPLS domain
- *blockOffset*—Integer in the range 1–65535 that identifies a block offset for which information is displayed
- *route-target signaling*—Specifies the route-target address family
- *rtfPrefix*—Prefix representing the route-target membership NLRI (RT-MEM-NLRI), in the format *asNumber:extendedCommunity/prefixLength* (for example, 320:320:524/36) where:
  - *asNumber*—AS number for origin of route target information, in the range 1–4294967295
  - *extendedCommunity*—Two-part number in the format *number1:number2* that identifies an extended community of VPNs, in the format *number1:number2*, where:
    - *number1*—Autonomous system (AS) number, in the range 1–4294967295, or an IP address
    - *number2*—Unique integer, in the range 1–4294967295; 32 bits if *number1* is a 16-bit AS number; 16 bits if *number1* is an IP address or a 32-bit AS number
  - *prefixLength*—Number that specifies the length of the route prefix, in the range 32–96
- *fields*—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
- *fieldOptions*—Fields to be displayed, in the format *all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\**
  - *all*—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
  - *afi*—Address family identifier
  - *aggregator*—AS number and IP address of aggregator
  - *as-path*—AS path through which this route has been advertised
  - *atomic-aggregate*—Whether the atomic aggregate attribute is present
  - *best*—Whether this is the best route for the prefix
  - *clusters*—List of cluster IDs through which the route has been advertised
  - *communities*—Community number associated with the route
  - *extended-communities*—Extended community
  - *imported*—Whether the route was imported

- **intro**—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation**

- *Monitoring BGP-Related Settings for L2VPNs and Monitoring Layer 2 NLRI for VPLS Instances* in the *JunosE BGP and MPLS Configuration Guide*

## show ip bgp advertised-routes

**Syntax** To display routes advertised to a neighbor or peer group in all address families or a particular address family:

```
show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf vrfName |
l2vpn [ all ] | route-target signaling ]
{ neighbors { ipAddress | ipv6Address } | peer-group peerGroupName }
advertised-routes [ fields { fieldOptions } ] [ delta ] [ filter ]
```

To display routes advertised to the specified peer group for all VPN address families or for a particular VPN address family after the application of route-target filters advertised by the specified member of the peer group:

```
show ip bgp [ vpnv4 all | vpnv4 vrf vrfName ] | l2vpn [ all ] | route-target signaling ]
peer-group peerGroupName advertised-routes
route-target-filter neighbor { ipRtfnbrAddress | ipv6RtfnbrAddress }
[ fields { pgfieldOptions } ] [ delta ] [ filter ]
```

To display the route that best matches the specified address for all address families or for a particular address family; not available for the L2VPN address family:

```
show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf vrfName ]
{ neighbors { ipAddress | ipv6Address } | peer-group peerGroupName }
advertised-routes network [ networkMask [ longer-prefixes ] ]
[ fields { fieldOptions } ] [ delta ] [ filter ]
```

To display routes advertised to a neighbor or peer group with the specified site ID and block offset in the L2VPN address family:

```
show ip bgp l2vpn all
{ neighbors { ipAddress | ipv6Address } | peer-group peerGroupName }
advertised-routes site-id siteId block-offset blockOffset
[ fields { fieldOptions } ] [ delta ] [ filter ]
```

To display all routes or the route that best matches the specified address advertised to a neighbor or peer group in only the route-target address family:

```
show ip bgp route-target signaling
{ neighbors { ipAddress | ipv6Address } | peer-group peerGroupName }
advertised-routes rtfPrefix [ longer-prefixes ]
[ fields { fieldOptions } ] [ delta ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**l2vpn** and **all** keywords added in JunosE Release 7.1.0.  
**site-id** keyword and *siteId* variable added in JunosE Release 7.1.0.  
**block-offset** keyword and *blockOffset* variable added in JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.  
**route-target signaling** and **route-target-filter neighbor** keywords and *ipRtfnbrAddress*, *ipv6RtfnbrAddress*, and *rtMemNlri* variables added in JunosE Release 8.2.0.

*rtMemNlri* variable replaced by *rtfPrefix* variable in JunosE Release 9.1.0.

**Description** Displays the routes in the Adj-RIBs-Out table of the specified peer or peer group. For peers, displays routes that have been previously advertised to the peer and the attributes for the routes before the application of outbound policy.

For peer groups, displays routes that will be advertised to the peer group, but includes the full set of route attributes associated with the routes after the application of outbound policy. This command returns an error message unless you first enable rib-out with the **no neighbor rib-out disable** command or the **no rib-out disable** command.

- Options**
- *ipv4 unicast*—Specifies the IPv4 unicast address family and routing table; the default option
  - *ipv4 multicast*—Specifies the IPv4 multicast address family and routing table
  - *vpn4 all*—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - *vpn4 vrf vrfName*—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - *l2vpn all*—Displays information for only the L2VPN address family; the **all** keyword is optional unless you specify a site ID and block offset
  - *route-target signaling*—Specifies the route-target address family
  - *ipAddress*—IP address of a neighbor whose routes the router has learned
  - *ipv6Address*—IPv6 address of a neighbor whose routes the router has learned
  - *peerGroupName*—Name of a BGP peer group
  - *route-target-filter neighbor*—Displays routes actually advertised to the specified peer group member (neighbor); which routes are advertised is determined by the application of the route-target filter received from that neighbor to routes in the peer group's Adj-RIBs-Out table
  - *ipRtfNbrAddress*—IP address of a peer group member that has advertised route-target membership filtering information
  - *ipv6RtfNbrAddress*—IPv6 address of a peer group member that has advertised route-target membership filtering information
  - *network*—Route that best matches this IP address; if no network is specified, displays the fields for all networks
  - *networkMask*—Address mask to be applied to the network address
  - *longer-prefixes*—Displays all routes with a prefix that is equal to or more specific than the specified prefix
  - *siteId*—Numerical identifier for the site; must be an unsigned 16-bit integer greater than zero that is unique across the VPLS domain
  - *blockOffset*—Integer in the range 1–65535 that identifies a block offset for which information is displayed

- *rtfPrefix*—Prefix representing the route-target membership NLRI (RT-MEM-NLRI), in the format *asNumber:extendedCommunity/prefixLength* (for example, 320:320:524/36) where:
  - *asNumber*—AS number for origin of route target information, in the range 1–4294967295
  - *extendedCommunity*—Two-part number in the format *number1:number2* that identifies an extended community of VPNs, in the format *number1:number2*, where:
    - *number1*—Autonomous system (AS) number, in the range 1–4294967295, or an IP address
    - *number2*—Unique integer, in the range 1–4294967295; 32 bits if *number1* is a 16-bit AS number; 16 bits if *number1* is an IP address or a 32-bit AS number
  - *prefixLength*—Number that specifies the length of the route prefix, in the range 32–96
- *fields*—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
- *fieldOptions*—Fields to be displayed, in the format  
all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
  - all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
  - afi—Address family identifier
  - aggregator—AS number and IP address of aggregator
  - as-path—AS path through which this route has been advertised
  - atomic-aggregate—Whether the atomic aggregate attribute is present
  - best—Whether this is the best route for the prefix
  - clusters—List of cluster IDs through which the route has been advertised
  - communities—Community number associated with the route
  - extended-communities—Extended community
  - imported—Whether the route was imported
  - intro—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
  - in-label—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
  - loc-pref—Local preference for the route

- med—Multiexit discriminator for the route
- next-hop—IP address of the next router that is used when forwarding a packet to the destination network
- next-hop-cost—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- origin—Origin of the route
- originator-id—Router ID of the router in the local AS that originated the route
- out-label—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- peer—IP address of BGP peer from which route was learned
- peer-type—Type of BGP peer: internal, external, or confederation
- rd—Route distinguisher
- safi—Subsequent address family identifier
- stale—Route that has gone stale due to peer restart
- unknown-types—Attribute codes for unknown path attributes
- weight—Weight of the route
- \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- delta—Displays baselined statistics
- filter—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation**

- *Monitoring BGP-Related Settings for L2VPNs in the JunosE BGP and MPLS Configuration Guide*

## show ip bgp aggregate-address

---

**Syntax** show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf *vrfName* ]  
aggregate-address [ *ipAddress mask* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about aggregate addresses.

- Options**
- *ipv4 unicast*—Specifies the IPv4 unicast address family and routing table; the default option
  - *ipv4 multicast*—Specifies the IPv4 multicast address family and routing table
  - *vpnv4 all*—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - *vpnv4 vrf vrfName*—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - *ipAddress*—Aggregate address
  - *mask*—Aggregate address mask
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip bgp cidr-only

---

**Syntax** show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf *vrfName* ]  
cidr-only [ fields { *fieldOptions* } ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information only about routes having nonnatural network masks.

- Options**
- *ipv4 unicast*—Specifies the IPv4 unicast address family and routing table; the default option
  - *ipv4 multicast*—Specifies the IPv4 multicast address family and routing table
  - *vpnv4 all*—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - *vpnv4 vrf vrfName*—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - *fields*—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - *fieldOptions*—Fields to be displayed, in the format  
all | [ *afi* | *aggregator* | *as-path* | *atomic-aggregate* | *best* | *clusters* | *communities* | *extended-communities* | *imported* | *intro* | *in-label* | *loc-pref* | *med* | *next-hop* | *next-hop-cost* | *origin* | *originator-id* | *out-label* | *peer* | *peer-type* | *rd* | *safi* | *stale* | *unknown-types* | *weight* ]\*
  - *all*—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
  - *afi*—Address family identifier
  - *aggregator*—AS number and IP address of aggregator
  - *as-path*—AS path through which this route has been advertised
  - *atomic-aggregate*—Whether the atomic aggregate attribute is present
  - *best*—Whether this is the best route for the prefix
  - *clusters*—List of cluster IDs through which the route has been advertised
  - *communities*—Community number associated with the route
  - *extended-communities*—Extended community
  - *imported*—Whether the route was imported
  - *intro*—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
  - *in-label*—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers



- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip bgp community

**Syntax** show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf *vrfName* | l2vpn all | l2vpn vpls *vplsName* | l2vpn vpws *vpwsName* | route-target signaling ] community { *communityNumber* | local-as | no-advertise | no-export } [ *communityNumber* | local-as | no-advertise | no-export ]\* [ exact-match ] [ fields *fieldOptions* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**l2vpn** and **all** keywords added in JunosE Release 7.1.0.  
**vpls** keyword and *vplsName* variable added in JunosE Release 7.1.0.  
**vpws** keyword and *vpwsName* variable added in JunosE Release 8.1.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays routes that belong to the specified BGP community.

- Options**
- **ipv4 unicast**—Specifies the IPv4 unicast address family and routing table; the default option
  - **ipv4 multicast**—Specifies the IPv4 multicast address family and routing table
  - **vpnv4 all**—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - **vpnv4 vrf *vrfName***—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - **l2vpn all**—Specifies all VPLS and VPWS instances in the L2VPN address family
  - **l2vpn vpls *vplsName***—Specifies the VPLS instance with the name *vplsName*
  - **l2vpn vpws *vpwsName***—Specifies the VPWS instance with the name *vpwsName*
  - **route-target signaling**—Specifies the route-target address family
  - ***communityNumber***—Filters routes according to this community number, specified either as a number in the range 1–4294967295 or in *AA:NN* format (autonomous system number:community number); displays only routes that are members of the specified community
  - **local-as**—Displays only routes belonging to the local-AS community
  - **no-advertise**—Displays only routes belonging to the no-advertise community
  - **no-export**—Displays only routes belonging to the no-export community
  - **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - **exact-match**—Displays only routes that have exactly the specified communities
  - **fields**—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - ***fieldOptions***—Fields to be displayed, in the format

all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*

- all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
- afi—Address family identifier
- aggregator—AS number and IP address of aggregator
- as-path—AS path through which this route has been advertised
- atomic-aggregate—Whether the atomic aggregate attribute is present
- best—Whether this is the best route for the prefix
- clusters—List of cluster IDs through which the route has been advertised
- communities—Community number associated with the route
- extended-communities—Extended community
- imported—Whether the route was imported
- intro—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- in-label—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- loc-pref—Local preference for the route
- med—Multiexit discriminator for the route
- next-hop—IP address of the next router that is used when forwarding a packet to the destination network
- next-hop-cost—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- origin—Origin of the route
- originator-id—Router ID of the router in the local AS that originated the route
- out-label—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- peer—IP address of BGP peer from which route was learned
- peer-type—Type of BGP peer: internal, external, or confederation
- rd—Route distinguisher

- safi—Subsequent address family identifier
- stale—Route that has gone stale due to peer restart
- unknown-types—Attribute codes for unknown path attributes
- weight—Weight of the route
- \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation**

- *Monitoring BGP-Related Settings for L2VPNs in the JunosE BGP and MPLS Configuration Guide*

## show ip bgp community-list

<b>Syntax</b>	show ip bgp [ ipv4 unicast   ipv4 multicast   vpnv4 all   vpnv4 vrf <i>vrfName</i>   l2vpn all   l2vpn vpls <i>vplsName</i>   l2vpn vpws <i>vpwsName</i>   route-target signaling ] community-list <i>communityListName</i> [ exact-match ] [ fields <i>fieldOptions</i> ] [ <i>filter</i> ]
<b>Release Information</b>	<p>Command introduced before JunosE Release 7.1.0.</p> <p><b>l2vpn</b> and <b>all</b> keywords added in JunosE Release 7.1.0.</p> <p><b>vpls</b> keyword and <i>vplsName</i> variable added in JunosE Release 7.1.0.</p> <p><b>vpws</b> keyword and <i>vpwsName</i> variable added in JunosE Release 8.1.0.</p> <p><b>route-target signaling</b> keywords added in JunosE Release 8.2.0.</p>
<b>Description</b>	Displays routes that belong to the BGP community specified by the community list.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>ipv4 unicast</b>—Specifies the IPv4 unicast address family and routing table; the default option</li> <li>• <b>ipv4 multicast</b>—Specifies the IPv4 multicast address family and routing table</li> <li>• <b>vpnv4 all</b>—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances</li> <li>• <b>vpnv4 vrf <i>vrfName</i></b>—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name <i>vrfName</i></li> <li>• <b>l2vpn all</b>—Specifies all VPLS and VPWS instances in the L2VPN address family</li> <li>• <b>l2vpn vpls <i>vplsName</i></b>—Specifies the VPLS instance with the name <i>vplsName</i></li> <li>• <b>l2vpn vpws <i>vpwsName</i></b>—Specifies the VPWS instance with the name <i>vpwsName</i></li> <li>• <b>route-target signaling</b>—Specifies the route-target address family</li> <li>• <b><i>communityListName</i></b>—Filters routes according to community list; displays only routes that are members of a community on the specified list</li> <li>• <b>exact-match</b>—Displays only routes that have exactly the specified communities</li> <li>• <b>fields</b>—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them</li> <li>• <b><i>fieldOptions</i></b>—Fields to be displayed, in the format all   [ <i>afi</i>   aggregator   as-path   atomic-aggregate   best   clusters   communities   extended-communities   imported   intro   in-label   loc-pref   med   next-hop   next-hop-cost   origin   originator-id   out-label   peer   peer-type   rd   safi   stale   unknown-types   weight ]*</li> <li>• <b>all</b>—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read</li> <li>• <b>afi</b>—Address family identifier</li> <li>• <b>aggregator</b>—AS number and IP address of aggregator</li> <li>• <b>as-path</b>—AS path through which this route has been advertised</li> </ul>

- atomic-aggregate—Whether the atomic aggregate attribute is present
- best—Whether this is the best route for the prefix
- clusters—List of cluster IDs through which the route has been advertised
- communities—Community number associated with the route
- extended-communities—Extended community
- imported—Whether the route was imported
- intro—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- in-label—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- loc-pref—Local preference for the route
- med—Multiexit discriminator for the route
- next-hop—IP address of the next router that is used when forwarding a packet to the destination network
- next-hop-cost—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- origin—Origin of the route
- originator-id—Router ID of the router in the local AS that originated the route
- out-label—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- peer—IP address of BGP peer from which route was learned
- peer-type—Type of BGP peer: internal, external, or confederation
- rd—Route distinguisher
- safi—Subsequent address family identifier
- stale—Route that has gone stale due to peer restart
- unknown-types—Attribute codes for unknown path attributes
- weight—Weight of the route
- \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation** • *Monitoring BGP-Related Settings for L2VPNs in the JunosE BGP and MPLS Configuration Guide*

## show ip bgp dampened-paths

---

**Syntax** show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf *vrfName* | l2vpn all | l2vpn vpls *vplsName* | l2vpn vpws *vpwsName* | route-target signaling ] dampened-paths [ fields *fieldOptions* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**l2vpn** and **all** keywords added in JunosE Release 7.1.0.  
**vpls** keyword and *vplsName* variable added in JunosE Release 7.1.0.  
**vpws** keyword and *vpwsName* variable added in JunosE Release 8.1.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays information about dampened BGP routes.

- Options**
- **ipv4 unicast**—Specifies the IPv4 unicast address family and routing table; the default option
  - **ipv4 multicast**—Specifies the IPv4 multicast address family and routing table
  - **vpnv4 all**—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - **vpnv4 vrf *vrfName***—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - **l2vpn all**—Specifies all VPLS and VPWS instances in the L2VPN address family
  - **l2vpn vpls *vplsName***—Specifies the VPLS instance with the name *vplsName*
  - **l2vpn vpws *vpwsName***—Specifies the VPWS instance with the name *vpwsName*
  - **route-target signaling**—Specifies the route-target address family
  - **fields**—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - ***fieldOptions***—Fields to be displayed, in the format  
all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
    - **all**—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
    - **afi**—Address family identifier
    - **aggregator**—AS number and IP address of aggregator
    - **as-path**—AS path through which this route has been advertised
    - **atomic-aggregate**—Whether the atomic aggregate attribute is present
    - **best**—Whether this is the best route for the prefix



- **clusters**—List of cluster IDs through which the route has been advertised
- **communities**—Community number associated with the route
- **extended-communities**—Extended community
- **imported**—Whether the route was imported
- **intro**—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

- Related Documentation**
- *Monitoring BGP-related Settings for L2VPNs in the JunosE BGP and MPLS Configuration Guide*

## show ip bgp filter-list

<b>Syntax</b>	show ip bgp [ ipv4 unicast   ipv4 multicast   vpnv4 all   vpnv4 vrf <i>vrfName</i>   l2vpn all   l2vpn vpls <i>vplsName</i>   l2vpn vpws <i>vpwsName</i>   route-target signaling ] filter-list <i>asPathAccessListName</i> [ fields <i>fieldOptions</i> ] [ <i>filter</i> ]
<b>Release Information</b>	<p>Command introduced before JunosE Release 7.1.0.</p> <p><b>l2vpn</b> and <b>all</b> keywords added in JunosE Release 7.1.0.</p> <p><b>vpls</b> keyword and <i>vplsName</i> variable added in JunosE Release 7.1.0.</p> <p><b>vpws</b> keyword and <i>vpwsName</i> variable added in JunosE Release 8.1.0.</p> <p><b>route-target signaling</b> keywords added in JunosE Release 8.2.0.</p>
<b>Description</b>	Displays all routes whose AS path matches the specified AS path access list.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>ipv4 unicast</b>—Specifies the IPv4 unicast address family and routing table; the default option</li> <li>• <b>ipv4 multicast</b>—Specifies the IPv4 multicast address family and routing table</li> <li>• <b>vpnv4 all</b>—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances</li> <li>• <b>vpnv4 vrf <i>vrfName</i></b>—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name <i>vrfName</i></li> <li>• <b>l2vpn all</b>—Specifies all VPLS and VPWS instances in the L2VPN address family</li> <li>• <b>l2vpn vpls <i>vplsName</i></b>—Specifies the VPLS instance with the name <i>vplsName</i></li> <li>• <b>l2vpn vpws <i>vpwsName</i></b>—Specifies the VPWS instance with the name <i>vpwsName</i></li> <li>• <b>route-target signaling</b>—Displays information for only the route-target address family</li> <li>• <b><i>asPathAccessListName</i></b>—Name of AS path access list to filter routes; displays only routes that have AS paths matching the specified list</li> <li>• <b>fields</b>—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them</li> <li>• <b><i>fieldOptions</i></b>—Fields to be displayed, in the format all   [ <i>afi</i>   aggregator   as-path   atomic-aggregate   best   clusters   communities   extended-communities   imported   intro   in-label   loc-pref   med   next-hop   next-hop-cost   origin   originator-id   out-label   peer   peer-type   rd   safi   stale   unknown-types   weight ]*</li> <li>• <b>all</b>—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read</li> <li>• <b>afi</b>—Address family identifier</li> <li>• <b>aggregator</b>—AS number and IP address of aggregator</li> <li>• <b>as-path</b>—AS path through which this route has been advertised</li> <li>• <b>atomic-aggregate</b>—Whether the atomic aggregate attribute is present</li> </ul>

- **best**—Whether this is the best route for the prefix
- **clusters**—List of cluster IDs through which the route has been advertised
- **communities**—Community number associated with the route
- **extended-communities**—Extended community
- **imported**—Whether the route was imported
- **intro**—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

- Related Documentation**
- See *Monitoring BGP-Related Settings for L2VPNs in JunosE BGP and MPLS Configuration Guide*

## show ip bgp flap-statistics

---

**Syntax** To display information about dampened routes for address families other than the L2VPN and route-target signaling address families:

```
show ip bgp
[ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf vrfName ] flap-statistics
[ network [ networkMask ] ] [ filter ]
```

To display information about dampened routes for only the route-target signaling address family:

```
show ip bgp route-target signaling flap-statistics [ rtfPrefix | rtfAddress ] [ filter ]
```

To display information about dampened routes for only the L2VPN address family:

```
show ip bgp
{ l2vpn all | l2vpn vpls vplsName | l2vpn vpws vpwsName } flap-statistics
[ site-id siteId block-offset blockOffset ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**l2vpn** and **all** keywords added in JunosE Release 7.1.0.  
**vpls** keyword and *vplsName* variable added in JunosE Release 7.1.0.  
**site-id** keyword and *siteId* variable added in JunosE Release 7.1.0.  
**block-offset** keyword and *blockOffset* variable added in JunosE Release 7.1.0.  
**vpws** keyword and *vpwsName* variable added in JunosE Release 8.1.0.  
**route-target signaling** keywords and *rtMemNlri* variable added in JunosE Release 8.2.0.  
*rtMemNlri* variable replaced by two variables, *rtfAddress* and *rtfPrefix*, in JunosE Release 9.1.0.

**Description** Displays information about routes that are dampened.

- Options**
- **ipv4 unicast**—Specifies the IPv4 unicast address family and routing table; the default option
  - **ipv4 multicast**—Specifies the IPv4 multicast address family and routing table
  - **vpnv4 all**—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - **vpnv4 vrf *vrfName***—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - ***network***—IP address of the network for which you want information displayed; if no network is specified, the fields are displayed for all networks
  - ***networkMask***—Address mask to be applied to the network address
  - **route-target signaling**—Displays information for only the route-target address family
  - ***rtfPrefix***—Prefix representing the route-target membership NLRI (RT-MEM-NLRI), in the format *asNumber:extendedCommunity/prefixLength* (for example, 320:320:524/36) where:

- *asNumber*—AS number for origin of route target information, in the range 1–4294967295
- *extendedCommunity*—Two-part number in the format *number1:number2* that identifies an extended community of VPNs, in the format *number1 : number2*, where:
  - *number1*—Autonomous system (AS) number, in the range 1–4294967295, or an IP address
  - *number2*—Unique integer, in the range 1–4294967295; 32 bits if *number1* is a 16-bit AS number; 16 bits if *number1* is an IP address or a 32-bit AS number
- *prefixLength*—Number that specifies the length of the route prefix, in the range 32–96
- *rtfAddress*—*rtfPrefix* with a prefix length of 96; representing the route-target membership NLRI (RT-MEM-NLRI), in the format *asNumber : extendedCommunity* (for example, 320:320:524 or 320:50.2.3.4:524)
- *l2vpn all*—Specifies all VPLS and VPWS instances in the L2VPN address family
- *l2vpn vpls vplsName*—Specifies the VPLS instance with the name *vplsName*
- *l2vpn vpws vpwsName*—Specifies the VPWS instance with the name *vpwsName*
- *siteId*—Numerical identifier for the site; must be an unsigned 16-bit integer greater than zero that is unique across the VPLS domain
- *blockOffset*—Integer in the range 1–65535 that identifies a block offset for which information is displayed
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation** • See *Monitoring BGP-Related Settings for L2VPNs* in *JunosE BGP and MPLS Configuration Guide*

## show ip bgp inconsistent-as

---

**Syntax**    show ip bgp  
              [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf *vrfName* |  
              route-target signaling ] inconsistent-as [ fields { *fieldOptions* } ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             **route-target signaling** keywords added in JunosE Release 8.2.0.

**Description**    Displays information only about routes with inconsistent AS paths.

- Options**
- **ipv4 unicast**—Specifies the IPv4 unicast address family and routing table; the default option
  - **ipv4 multicast**—Specifies the IPv4 multicast address family and routing table
  - **vpnv4 all**—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - **vpnv4 vrf *vrfName***—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - **route-target signaling**—Displays information for only the route-target address family
  - **fields**—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - ***fieldOptions***—Fields to be displayed, in the format  
all | [ *afi* | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
    - **all**—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
    - **afi**—Address family identifier
    - **aggregator**—AS number and IP address of aggregator
    - **as-path**—AS path through which this route has been advertised
    - **atomic-aggregate**—Whether the atomic aggregate attribute is present
    - **best**—Whether this is the best route for the prefix
    - **clusters**—List of cluster IDs through which the route has been advertised
    - **communities**—Community number associated with the route
    - **extended-communities**—Extended community
    - **imported**—Whether the route was imported



- **intro**—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip bgp neighbors

---

<b>Syntax</b>	show ip bgp [ ipv4 unicast   ipv4 multicast   vpnv4 all   vpnv4 vrf <i>vrfName</i>   l2vpn [ all ]   route-target signaling ] neighbors [ <i>ipAddress</i>   <i>ipv6Address</i> ] [ delta ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>l2vpn</b> and <b>all</b> keywords added in JunosE Release 7.1.0. <i>ipv6Address</i> variable added in JunosE Release 8.0.0. <b>route-target signaling</b> keywords added in JunosE Release 8.2.0.
<b>Description</b>	Displays information about the BGP neighbors.
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>ipv4 unicast</b>—Specifies the IPv4 unicast address family and routing table; the default option</li><li>• <b>ipv4 multicast</b>—Specifies the IPv4 multicast address family and routing table</li><li>• <b>vpnv4 all</b>—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances</li><li>• <b>vpnv4 vrf <i>vrfName</i></b>—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name <i>vrfName</i></li><li>• <b>l2vpn</b>—Displays information for only the L2VPN address family</li><li>• <b>all</b>—Optional keyword; has no effect</li><li>• <b>route-target signaling</b>—Displays information for only the route-target address family</li><li>• <i>ipAddress</i>—IP address of a neighbor whose routes the router has learned</li><li>• <i>ipv6Address</i>—IPv6 address of a neighbor whose routes the router has learned</li><li>• <b>delta</b>—Displays baselined statistics</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• See <i>Monitoring BGP-Related Settings for L2VPNs</i> in <i>JunosE BGP and MPLS Configuration Guide</i></li></ul>

## show ip bgp neighbors dampened-routes

**Syntax** show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf *vrfName* | l2vpn [ all ] | route-target signaling ] neighbors { *ipAddress* | *ipv6Address* } dampened-routes [ fields *fieldOptions* ] [ delta ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**l2vpn** and **all** keywords added in JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays information about routes with a dampening history for the specified BGP neighbor.

- Options**
- **ipv4 unicast**—Specifies the IPv4 unicast address family and routing table; the default option
  - **ipv4 multicast**—Specifies the IPv4 multicast address family and routing table
  - **vpnv4 all**—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - **vpnv4 vrf *vrfName***—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - **l2vpn**—Displays information for only the L2VPN address family
  - **all**—Optional keyword; has no effect
  - **route-target signaling**—Displays information for only the route-target address family
  - ***ipAddress***—IP address of a neighbor whose routes the router has learned
  - ***ipv6Address***—IPv6 address of a neighbor whose routes the router has learned
  - **fields**—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - ***fieldOptions***—Fields to be displayed, in the format  
all | [ *afi* | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
  - **all**—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
  - **afi**—Address family identifier
  - **aggregator**—AS number and IP address of aggregator
  - **as-path**—AS path through which this route has been advertised
  - **atomic-aggregate**—Whether the atomic aggregate attribute is present

- **best**—Whether this is the best route for the prefix
- **clusters**—List of cluster IDs through which the route has been advertised
- **communities**—Community number associated with the route
- **extended-communities**—Extended community
- **imported**—Whether the route was imported
- **intro**—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **delta**—Displays baselined statistics
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation** • See *Monitoring BGP-Related Settings for L2VPNs in JunosE BGP and MPLS Configuration Guide*

## show ip bgp neighbors paths

---

**Syntax**    show ip bgp  
              [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf *vrfName* |  
              route-target signaling ] neighbors { *ipAddress* | *ipv6Address* } paths [ *regularExpression*  
              ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              *ipv6Address* variable added in JunosE Release 8.0.0.  
                              **route-target signaling** keywords added in JunosE Release 8.2.0.

**Description**    Displays path information for the specified BGP neighbor.

- Options**
- *ipv4 unicast*—Specifies the IPv4 unicast address family and routing table; the default option
  - *ipv4 multicast*—Specifies the IPv4 multicast address family and routing table
  - *vpnv4 all*—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - *vpnv4 vrf vrfName*—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - *route-target signaling*—Displays information for only the route-target address family
  - *ipAddress*—IP address of a neighbor whose routes the router has learned
  - *ipv6Address*—IPv6 address of a neighbor whose routes the router has learned
  - *regularExpression*—Regular expression to match the AS path. See [show ip bgp regexp](#) for information about regular expressions.
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip bgp neighbors received prefix-filter

---

**Syntax** `show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf vrfName ]  
neighbors { ipAddress | ipv6Address } received prefix-filter [ filter ]`

**Release Information** Command introduced before JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.

**Description** Displays prefix-list outbound route filters received from the neighbor.

- Options**
- *ipv4 unicast*—Specifies the IPv4 unicast address family and routing table; the default option
  - *ipv4 multicast*—Specifies the IPv4 multicast address family and routing table
  - *vpnv4 all*—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - *vpnv4 vrf *vrfName**—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - *ipAddress*—IP address of a neighbor whose routes the router has learned
  - *ipv6Address*—IPv6 address of a neighbor whose routes the router has learned
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip bgp neighbors received-routes

**Syntax** show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf *vrfName* | l2vpn all | route-target signaling ] neighbors { *ipAddress* | *ipv6Address* } received-routes [ fields *fieldOptions* ] [ delta ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**l2vpn** and **all** keywords added in JunosE Release 7.1.0.  
*ipv6Address* variable added in JunosE Release 8.0.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays routes originating from the specified BGP neighbor before inbound policy is applied.

- Options**
- **ipv4 unicast**—Specifies the IPv4 unicast address family and routing table; the default option
  - **ipv4 multicast**—Specifies the IPv4 multicast address family and routing table
  - **vpnv4 all**—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - **vpnv4 vrf *vrfName***—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - **l2vpn**—Displays information for only the L2VPN address family
  - **all**—Optional keyword; has no effect
  - **route-target signaling**—Displays information for only the route-target address family
  - ***ipAddress***—IP address of a neighbor whose routes the router has learned
  - ***ipv6Address***—IPv6 address of a neighbor whose routes the router has learned
  - **fields**—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
  - ***fieldOptions***—Fields to be displayed, in the format  
all | [ *afi* | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
  - **all**—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
  - **afi**—Address family identifier
  - **aggregator**—AS number and IP address of aggregator
  - **as-path**—AS path through which this route has been advertised
  - **atomic-aggregate**—Whether the atomic aggregate attribute is present



- **best**—Whether this is the best route for the prefix
- **clusters**—List of cluster IDs through which the route has been advertised
- **communities**—Community number associated with the route
- **extended-communities**—Extended community
- **imported**—Whether the route was imported
- **intro**—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **delta**—Displays baselined statistics
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation** • See *Monitoring BGP-Related Settings for L2VPNs* in *JunosE BGP and MPLS Configuration Guide*

## show ip bgp neighbors routes

<b>Syntax</b>	show ip bgp [ ipv4 unicast   ipv4 multicast   vpnv4 all   vpnv4 vrf <i>vrfName</i>   l2vpn [ all ]   route-target signaling ] neighbors { <i>ipAddress</i>   <i>ipv6Address</i> } routes [ fields <i>fieldOptions</i> ] [ delta ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>l2vpn</b> and <b>all</b> keywords added in JunosE Release 7.1.0. <i>ipv6Address</i> variable added in JunosE Release 8.0.0. <b>route-target signaling</b> keywords added in JunosE Release 8.2.0.
<b>Description</b>	Displays routes originating from the specified BGP neighbor after inbound policy is applied.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>ipv4 unicast</b>—Specifies the IPv4 unicast address family and routing table; the default option</li> <li>• <b>ipv4 multicast</b>—Specifies the IPv4 multicast address family and routing table</li> <li>• <b>vpnv4 all</b>—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances</li> <li>• <b>vpnv4 vrf <i>vrfName</i></b>—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name <i>vrfName</i></li> <li>• <b>l2vpn</b>—Displays information for only the L2VPN address family</li> <li>• <b>all</b>—Optional keyword; has no effect</li> <li>• <b>route-target signaling</b>—Displays information for only the route-target address family</li> <li>• <i>ipAddress</i>—IP address of a neighbor whose routes the router has learned</li> <li>• <i>ipv6Address</i>—IPv6 address of a neighbor whose routes the router has learned</li> <li>• <b>fields</b>—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them</li> <li>• <i>fieldOptions</i>—Fields to be displayed, in the format all   [ <i>afi</i>   aggregator   as-path   atomic-aggregate   best   clusters   communities   extended-communities   imported   intro   in-label   loc-pref   med   next-hop   next-hop-cost   origin   originator-id   out-label   peer   peer-type   rd   safi   stale   unknown-types   weight ]*</li> <li>• <b>all</b>—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read</li> <li>• <b>afi</b>—Address family identifier</li> <li>• <b>aggregator</b>—AS number and IP address of aggregator</li> <li>• <b>as-path</b>—AS path through which this route has been advertised</li> <li>• <b>atomic-aggregate</b>—Whether the atomic aggregate attribute is present</li> </ul>

- best—Whether this is the best route for the prefix
- clusters—List of cluster IDs through which the route has been advertised
- communities—Community number associated with the route
- extended-communities—Extended community
- imported—Whether the route was imported
- intro—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- in-label—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- loc-pref—Local preference for the route
- med—Multiexit discriminator for the route
- next-hop—IP address of the next router that is used when forwarding a packet to the destination network
- next-hop-cost—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- origin—Origin of the route
- originator-id—Router ID of the router in the local AS that originated the route
- out-label—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- peer—IP address of BGP peer from which route was learned
- peer-type—Type of BGP peer: internal, external, or confederation
- rd—Route distinguisher
- safi—Subsequent address family identifier
- stale—Route that has gone stale due to peer restart
- unknown-types—Attribute codes for unknown path attributes
- weight—Weight of the route
- \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- delta—Displays baselined statistics
- filter—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation** • See *Monitoring BGP-Related Settings for L2VPNs in JunosE BGP and MPLS Configuration Guide*

## show ip bgp network

---

**Syntax** To display information about a prefix configured for all address families or for a specific address family other than the route-target address family:

```
show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf vrfName ]  
network [ networkNumber [ [ mask ] networkMask ] ] [ filter ]
```

To display information about about a prefix configured for the route-target address family:

```
show ip bgp route-target signaling network [ rtfPrefix ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**route-target signaling** keywords and *rtMemNlri* variable added in JunosE Release 9.0.0.  
*rtMemNlri* variable replaced by *rtfPrefix* variable in JunosE Release 9.1.0.

**Description** Displays information about a potentially originated prefix that was configured with the **network** command.

- Options**
- *ipv4 unicast*—Specifies the IPv4 unicast address family and routing table; the default option
  - *ipv4 multicast*—Specifies the IPv4 multicast address family and routing table
  - *vpnv4 all*—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - *vpnv4 vrf vrfName*—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - *networkNumber*—IP address of the network for which you want information displayed; if no network is specified, the fields are displayed for all networks
  - *networkMask*—Address mask to be applied to the network address
  - *route-target signaling*—Displays information for only the route-target address family
  - *rtfPrefix*—Prefix representing the route-target membership NLRI (RT-MEM-NLRI), in the format *asNumber:extendedCommunity/prefixLength* (for example, 320:320:524/36) where:
    - *asNumber*—AS number for origin of route target information, in the range 1–4294967295
    - *extendedCommunity*—Two-part number in the format *number1:number2* that identifies an extended community of VPNs, in the format *number1:number2*, where:
      - *number1*—Autonomous system (AS) number, in the range 1–4294967295, or an IP address
      - *number2*—Unique integer, in the range 1–4294967295; 32 bits if *number1* is a 16-bit AS number; 16 bits if *number1* is an IP address or a 32-bit AS number

- *prefixLength*—Number that specifies the length of the route prefix, in the range 32–96
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip bgp next-hops

---

<b>Syntax</b>	show ip bgp [ ipv4 unicast   ipv4 multicast   vpnv4 all   vpnv4 vrf <i>vrfName</i>   l2vpn all   l2vpn vpls <i>vplsName</i>   l2vpn vpws <i>vpwsName</i> }   route-target signaling ] next-hops [ <i>ipAddress</i> ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>l2vpn</b> and <b>all</b> keywords added in JunosE Release 7.1.0. <b>vpls</b> keyword and <i>vplsName</i> variable added in JunosE Release 7.1.0. <b>vpws</b> keyword and <i>vpwsName</i> variable added in JunosE Release 8.1.0. <b>route-target signaling</b> keywords added in JunosE Release 8.2.0.
<b>Description</b>	Displays information about BGP next hops.
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>ipv4 unicast</b>—Specifies the IPv4 unicast address family and routing table; the default option</li><li>• <b>ipv4 multicast</b>—Specifies the IPv4 multicast address family and routing table</li><li>• <b>vpnv4 all</b>—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances</li><li>• <b>vpnv4 vrf <i>vrfName</i></b>—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name <i>vrfName</i></li><li>• <b>l2vpn all</b>—Specifies all VPLS and VPWS instances in the L2VPN address family</li><li>• <b>l2vpn vpls <i>vplsName</i></b>—Specifies the VPLS instance with the name <i>vplsName</i></li><li>• <b>l2vpn vpws <i>vpwsName</i></b>—Specifies the VPWS instance with the name <i>vpwsName</i></li><li>• <b>route-target signaling</b>—Displays information for only the route-target address family</li><li>• <b><i>ipAddress</i></b>—Displays information only for this indirect next hop</li><li>• <b><i>filter</i></b>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Monitoring BGP-Related Settings for L2VPNs, Monitoring BGP Next Hops for L2VPNs, and Monitoring BGP Next Hops for VPLS in the JunosE BGP and MPLS Configuration Guide</i></li></ul>



## show ip bgp paths

<b>Syntax</b>	show ip bgp [ ipv4 unicast   ipv4 multicast   vpnv4 all   vpnv4 vrf <i>vrfName</i>   l2vpn all   l2vpn vpls <i>vplsName</i>   l2vpn vpws <i>vpwsName</i>   route-target signaling ] paths [ <i>regularExpression</i> ] [ <i>filter</i> ]
<b>Release Information</b>	<p>Command introduced before JunosE Release 7.1.0.</p> <p><b>l2vpn</b> and <b>all</b> keywords added in JunosE Release 7.1.0.</p> <p><b>vpls</b> keyword and <i>vplsName</i> variable added in JunosE Release 7.1.0.</p> <p><b>vpws</b> keyword and <i>vpwsName</i> variable added in JunosE Release 8.1.0.</p> <p><b>route-target signaling</b> keywords added in JunosE Release 8.2.0.</p>
<b>Description</b>	Displays information about BGP AS paths.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>ipv4 unicast</b>—Specifies the IPv4 unicast address family and routing table; the default option</li> <li>• <b>ipv4 multicast</b>—Specifies the IPv4 multicast address family and routing table</li> <li>• <b>vpnv4 all</b>—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances</li> <li>• <b>vpnv4 vrf <i>vrfName</i></b>—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name <i>vrfName</i></li> <li>• <b>l2vpn all</b>—Specifies all VPLS and VPWS instances in the L2VPN address family</li> <li>• <b>l2vpn vpls <i>vplsName</i></b>—Specifies the VPLS instance with the name <i>vplsName</i></li> <li>• <b>l2vpn vpws <i>vpwsName</i></b>—Specifies the VPWS instance with the name <i>vpwsName</i></li> <li>• <b>route-target signaling</b>—Displays information for only the route-target address family</li> <li>• <b><i>regularExpression</i></b>—Regular expression to match that specifies the desired AS paths. See <a href="#">show ip bgp regexp</a> for information about regular expressions.</li> <li>• <b><i>filter</i></b>—See <a href="#">Filtering show Commands on page 4</a></li> </ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Monitoring BGP-Related Settings for L2VPNs in the JunosE BGP and MPLS Configuration Guide</i></li> </ul>

## show ip bgp peer-group

---

<b>Syntax</b>	show ip bgp [ ipv4 unicast   ipv4 multicast   vpnv4 all   vpnv4 vrf <i>vrfName</i>   l2vpn [ all ]   route-target signaling ] peer-group [ <i>peerGroupName</i> ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>l2vpn</b> and <b>all</b> keywords added in JunosE Release 7.1.0. <b>route-target signaling</b> keywords added in JunosE Release 8.2.0.
<b>Description</b>	Displays information about BGP peer groups.
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>ipv4 unicast</b>—Specifies the IPv4 unicast address family and routing table; the default option</li><li>• <b>ipv4 multicast</b>—Specifies the IPv4 multicast address family and routing table</li><li>• <b>vpnv4 all</b>—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances</li><li>• <b>vpnv4 vrf <i>vrfName</i></b>—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name <i>vrfName</i></li><li>• <b>l2vpn</b>—Displays information for only the L2VPN address family</li><li>• <b>all</b>—Optional keyword; has no effect</li><li>• <b>route-target signaling</b>—Displays information for only the route-target address family</li><li>• <b><i>peerGroupName</i></b>—Name of the BGP peer group</li><li>• <b><i>filter</i></b>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Monitoring BGP-Related Settings for L2VPNs in the JunosE BGP and MPLS Configuration Guide</i></li></ul>

## show ip bgp quote-regex

**Syntax** show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf *vrfName* | l2vpn all | l2vpn vpls *vplsName* | l2vpn vpws *vpwsName* | route-target signaling ] quote-regex *pathExpression* [ fields *fieldOptions* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**l2vpn** and **all** keywords added in JunosE Release 7.1.0.  
**vpls** keyword and *vplsName* variable added in JunosE Release 7.1.0.  
**vpws** keyword and *vpwsName* variable added in JunosE Release 8.1.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays information about BGP routes whose AS path matches the specified regular expression. Regular expressions match numbers for which the specified path is a substring—for example, if you specify *20*, *200* matches because *20* is a substring of *200*. You can disallow substring matching by using the underscore (*\_*) metacharacter to constrain matching to the specified pattern; for example, *\_20\_*. You can use output filtering on the display.

- Options**
- **ipv4 unicast**—Specifies the IPv4 unicast address family and routing table; the default option
  - **ipv4 multicast**—Specifies the IPv4 multicast address family and routing table
  - **vpnv4 all**—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - **vpnv4 vrf *vrfName***—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - **l2vpn all**—Specifies all VPLS and VPWS instances in the L2VPN address family
  - **l2vpn vpls *vplsName***—Specifies the VPLS instance with the name *vplsName*
  - **l2vpn vpws *vpwsName***—Specifies the VPWS instance with the name *vpwsName*
  - **route-target signaling**—Displays information for only the route-target address family
  - **quote-regex**—Indicates that only a single element is matched
  - ***pathExpression***—Regular expression string describing the AS path or community to be matched. You must enclose elements containing a space within double quotes (" *one element* ").

Each element is either an AS number, a metacharacter, or a combination:

`^` Matches the beginning of the path unless appearing as the first character within brackets; see below

`[ ^ ]` Matches any AS number except the ones specified within the brackets

`$` Matches the end of the path

`{` Matches the beginning of an AS\_SET

`}` Matches the end of an AS\_SET

`(` Matches the start of an AS\_CONFED\_SET or AS\_CONFED\_SEQ

`)` Matches the end of an AS\_CONFED\_SET or AS\_CONFED\_SEQ

`.` Matches any single character

`*` Matches zero or more occurrences of the preceding character

`+` Matches one or more occurrences of the preceding character

`?` Matches zero or one occurrence of the preceding character. To use the `?` metacharacter in a regular expression, you must enter the following key sequence: `Ctrl-v-?`. Otherwise, the CLI considers this to be a request for assistance in completing the command, rather than understanding it as a metacharacter.

`()` Used with a multiplier metacharacter (`*`, `+`, `?`) to specify patterns for multiple use. You can specify that a parenthesis be construed as a literal token instead of a metacharacter by immediately preceding it with a backslash:

`\(` matches the beginning of an AS\_CONFED\_SET or AS\_CONFED\_SEQ

`\)` matches the end of an AS\_CONFED\_SET or AS\_CONFED\_SEQ.

`[ ]` Matches any enclosed character; specifies a range of single characters

`-` Used within brackets to specify a range of AS numbers

`_` Matches a `^`, a `$`, a comma, a space, a `{`, or a `}`. Placed on either side of a string to specify a literal and disallow substring matching. Numerals enclosed by underscores can be preceded or followed by any of the characters listed above.

`|` Matches characters on either side of the metacharacter; logical OR

- **fields**—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
- **fieldOptions**—Fields to be displayed, in the format  
all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
  - all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
  - afi—Address family identifier
  - aggregator—AS number and IP address of aggregator

- **as-path**—AS path through which this route has been advertised
- **atomic-aggregate**—Whether the atomic aggregate attribute is present
- **best**—Whether this is the best route for the prefix
- **clusters**—List of cluster IDs through which the route has been advertised
- **communities**—Community number associated with the route
- **extended-communities**—Extended community
- **imported**—Whether the route was imported
- **intro**—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation** • *Monitoring BGP-Related Settings for L2VPNs in the JunosE BGP and MPLS Configuration Guide*

## show ip bgp regexp

**Syntax** show ip bgp [ ipv4 unicast | ipv4 multicast | vpnv4 all | vpnv4 vrf *vrfName* | l2vpn all | l2vpn vpls *vplsName* | l2vpn vpws *vpwsName* | route-target signaling ] regexp *pathExpression* [ fields *fieldOptions* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**l2vpn** and **all** keywords added in JunosE Release 7.1.0.  
**vpls** keyword and *vplsName* variable added in JunosE Release 7.1.0.  
**vpws** keyword and *vpwsName* variable added in JunosE Release 8.1.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Displays information about BGP routes whose AS path matches the specified regular expression. Regular expressions match numbers for which the specified path is a substring—for example, if you specify *20*, *200* matches because *20* is a substring of *200*. You can disallow substring matching by using the underscore (*\_*) metacharacter to constrain matching to the specified pattern; for example, *\_20\_*. You can use output filtering on the display.

- Options**
- **ipv4 unicast**—Specifies the IPv4 unicast address family and routing table; the default option
  - **ipv4 multicast**—Specifies the IPv4 multicast address family and routing table
  - **vpnv4 all**—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - **vpnv4 vrf *vrfName***—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - **l2vpn all**—Specifies all VPLS and VPWS instances in the L2VPN address family
  - **l2vpn vpls *vplsName***—Specifies the VPLS instance with the name *vplsName*
  - **l2vpn vpws *vpwsName***—Specifies the VPWS instance with the name *vpwsName*
  - **route-target signaling**—Displays information for only the route-target address family
  - **regexp**—Indicates that multiple elements can be matched
  - ***pathExpression***—Regular expression string describing the AS paths to be matched. You do not have to enclose elements containing a space within quotation marks (“ *one element* ”).

Each element is either an AS number, a metacharacter, or a combination:

`^` Matches the beginning of the path unless appearing as the first character within brackets; see below

`[ ^ ]` Matches any AS number except the ones specified within the brackets

`$` Matches the end of the path

`{` Matches the beginning of an AS\_SET

`}` Matches the end of an AS\_SET

`(` Matches the start of an AS\_CONFED\_SET or AS\_CONFED\_SEQ

`)` Matches the end of an AS\_CONFED\_SET or AS\_CONFED\_SEQ

`.` Matches any single character

`*` Matches zero or more occurrences of the preceding character

`+` Matches one or more occurrences of the preceding character

`?` Matches zero or one occurrence of the preceding character. To use the `?` metacharacter in a regular expression, you must enter the following key sequence: `Ctrl-v-?`. Otherwise, the CLI considers this to be a request for assistance in completing the command, rather than understanding it as a metacharacter.

`()` Used with a multiplier metacharacter (`*`, `+`, `?`) to specify patterns for multiple use. You can specify that a parenthesis be construed as a literal token instead of a metacharacter by immediately preceding it with a backslash:

`\(` matches the beginning of an AS\_CONFED\_SET or AS\_CONFED\_SEQ

`\)` matches the end of an AS\_CONFED\_SET or AS\_CONFED\_SEQ.

`[ ]` Matches any enclosed character; specifies a range of single characters

`-` Used within brackets to specify a range of AS numbers

`_` Matches a `^`, a `$`, a comma, a space, a `{`, or a `}`. Placed on either side of a string to specify a literal and disallow substring matching. Numerals enclosed by underscores can be preceded or followed by any of the characters listed above.

`|` Matches characters on either side of the metacharacter; logical OR

- **fields**—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
- **fieldOptions**—Fields to be displayed, in the format  
all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
  - all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
  - afi—Address family identifier
  - aggregator—AS number and IP address of aggregator



- **as-path**—AS path through which this route has been advertised
- **atomic-aggregate**—Whether the atomic aggregate attribute is present
- **best**—Whether this is the best route for the prefix
- **clusters**—List of cluster IDs through which the route has been advertised
- **communities**—Community number associated with the route
- **extended-communities**—Extended community
- **imported**—Whether the route was imported
- **intro**—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- **in-label**—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- **loc-pref**—Local preference for the route
- **med**—Multiexit discriminator for the route
- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation** • *Monitoring BGP-Related Settings for L2VPNs in the JunosE BGP and MPLS Configuration Guide*

## show ip bgp summary

<b>Syntax</b>	show ip bgp [ ipv4 unicast   ipv4 multicast   vpnv4 all   vpnv4 vrf <i>vrfName</i>   l2vpn all   l2vpn vpls <i>vplsName</i>   l2vpn vpws <i>vpwsName</i>   route-target signaling ] summary [ fields <i>fieldOptions</i> ] [ delta ] [ filter ]
<b>Release Information</b>	<p>Command introduced before JunosE Release 7.1.0.</p> <p><b>l2vpn</b> and <b>all</b> keywords added in JunosE Release 7.1.0.</p> <p><b>vpls</b> keyword and <i>vplsName</i> variable added in JunosE Release 7.1.0.</p> <p><b>vpws</b> keyword and <i>vpwsName</i> variable added in JunosE Release 8.1.0.</p> <p><b>route-target signaling</b> keywords added in JunosE Release 8.2.0.</p>
<b>Description</b>	Displays filtered information about the status of all BGP connections. Only those fields that you specify are displayed, except that the prefix field is always displayed. Default fields can be set with the <b>default-fields peer</b> command.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>ipv4 unicast</b>—Specifies the IPv4 unicast address family and routing table; the default option</li> <li>• <b>ipv4 multicast</b>—Specifies the IPv4 multicast address family and routing table</li> <li>• <b>vpnv4 all</b>—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances</li> <li>• <b>vpnv4 vrf <i>vrfName</i></b>—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name <i>vrfName</i></li> <li>• <b>l2vpn all</b>—Specifies all VPLS and VPWS instances in the L2VPN address family</li> <li>• <b>l2vpn vpls <i>vplsName</i></b>—Specifies the VPLS instance with the name <i>vplsName</i></li> <li>• <b>l2vpn vpws <i>vpwsName</i></b>—Specifies the VPWS instance with the name <i>vpwsName</i></li> <li>• <b>route-target signaling</b>—Displays information for only the route-target address family</li> <li>• <b>fields</b>—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them</li> <li>• <b><i>fieldOptions</i></b>—Fields to be displayed, in the format all   [ dynamic   intro   last-reset-reason   messages-received   messages-sent   more-in-queue   peer-type   prefixes-received   remote-as   rib-version   send-queue-length   state   times-up   up-down-time   updates-received   updates-sent ]* <ul style="list-style-type: none"> <li>• <b>dynamic</b> —Nature of peer, dynamic or not</li> <li>• <b>intro</b>—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword</li> <li>• <b>last-reset-reason</b>—Reason for most recent reset</li> <li>• <b>messages-received</b>—Total number of messages received from the peer</li> <li>• <b>messages-sent</b>—Total number of messages sent to the peer</li> </ul> </li> </ul>

- **more-in-queue**—Status indicating whether any messages are waiting to be sent to this peer
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **prefixes-received**—Number of unique prefixes received from the peer
- **remote-as**—Remote AS number of the peer
- **rib-version**—Last RIB version queued to be sent to this peer
- **send-queue-length**—Number of messages queued to be sent to this peer
- **state**—State of the BGP session
- **times-up**—Number of times the session has been established
- **up-down-time**—How long the session has been up or down
- **updates-received**—Number of update messages received from the peer
- **updates-sent**—Number of update messages sent to the peer
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **delta**—Displays baselined statistics
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation** • *Monitoring BGP-Related Settings for L2VPNs in the JunosE BGP and MPLS Configuration Guide*

## show ip cache flow

---

**Syntax** show ip cache flow [ history | active [ brief | detail  
[ *interfaceType* *interfaceNumber* ] ] ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays IP flow cache operational statistics.

- Options**
- history—Displays a history (running total) of cache flows since the J-Flow statistics started or were last cleared
  - active—Displays information for only active flows
  - brief—Displays a summary rather than detailed information for active flows
  - detail—Displays detailed information for active flows
  - *interfaceType*—Interface type against which all flow records are filtered
  - *interfaceNumber*—Interface number against which all flow records are filtered
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip cache flow aggregation

---

**Syntax** show ip cache flow aggregation *aggregationType* [ history | active [ brief | detail ] ]  
[ *filter* ]

**Release Information** Command introduced before JunosE Release 8.1.0.

**Description** Displays IP flow cache operational statistics for an aggregation cache.

- Options**
- *aggregationType*—Displays information for an aggregation cache flow
  - history—Displays a history (running total) of cache flows since the J-Flow statistics started or were last cleared
  - active—Displays information for only active flows
  - brief—Displays a summary rather than detailed information for active flows
  - detail—Displays detailed information for active flows
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip community-list

---

**Syntax**    show ip community-list [ *listName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays community list information.

- Options**
- *listName*—Name of a community list
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip demux interface

---

**Syntax**    show ip demux interface *interfaceType interfaceSpecifier* [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about a subscriber interface.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show ip dhcp-capture

---

**Syntax**    show ip dhcp-capture [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Displays the per-interface DHCP packet capture configuration information.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring Duplicate MAC Addresses Use By DHCP Local Server Clients

## show ip dhcp-external binding

---

**Syntax**    show ip dhcp-external binding [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays binding for DHCP external clients.



**NOTE:** This command is deprecated and might be removed completely in a future release. The function provided by this command has been replaced by the **show dhcp binding** command.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • [Monitoring DHCP Bindings \(Displaying IP Address-to-MAC Address Bindings\)](#)

---

## show ip dhcp-external binding-id

---

**Syntax**    show ip dhcp-external binding-id [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays binding information for DHCP clients.



**NOTE:** This command is deprecated and might be removed completely in a future release. The function provided by this command has been replaced by the **show dhcp binding** command.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • [Monitoring DHCP Bindings \(Displaying DHCP Bindings Based on Binding ID\)](#)

## show ip dhcp-external configuration

---

**Syntax**    show ip dhcp-external configuration [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays configuration information for the DHCP external server.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring DHCP Local Server Configuration

## show ip dhcp-external statistics

---

<b>Syntax</b>	show ip dhcp-external statistics [ <i>delta</i> ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays statistics for the DHCP external server.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>delta</i>—Displays baselined statistics</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring DHCP External Server Statistics</li></ul>

## show ip dhcp-local

---

**Syntax**    show ip dhcp-local

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays DHCP local server configuration information, including the status of SNMP traps and client roaming support.

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring DHCP Local Server Configuration

## show ip dhcp-local auth

---

**Syntax**    show ip dhcp-local auth { config | statistics [ delta ] } [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays information about the DHCP local server authentication configuration.

- Options**
- config—Specifies that configuration information is shown
  - statistics—Specifies that statistics are shown
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring DHCP Local Server Authentication Information

## show ip dhcp-local binding

---

**Syntax** show ip dhcp-local binding [ *ipAddress* | interface *interfaceType* *interfaceValue* ]  
[ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays DHCP local server binding information for DHCP local server clients.



**NOTE:** This command is deprecated and might be removed completely in a future release. The function provided by this command has been replaced by the **show dhcp binding** command.

- Options**
- *ipAddress*—IP address of the subscriber's personal computer
  - *interfaceType*—Interface type; see [“Interface Types and Specifiers” on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

**Related Documentation**

- [Monitoring DHCP Bindings \(Local Server Binding Information\)](#)



## show ip dhcp-local duplicate-clients

---

<b>Syntax</b>	show ip dhcp-local duplicate-clients [ <i>macAddress</i> ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced in JunosE Release 7.2.0.
<b>Description</b>	Displays information about all, or specific, MAC addresses being used by more than one DHCP local server client.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>macAddress</i>—Specific MAC address</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Monitoring Duplicate MAC Addresses Use By DHCP Local Server Clients</a></li></ul>

## show ip dhcp-local excluded

---

**Syntax**    show ip dhcp-local excluded [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays IP addresses that have been excluded. These are addresses that the DHCP local server does not allocate because they are already used by devices on the subnet.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring the Maximum Number of Available Leases

## show ip dhcp-local leases

---

<b>Syntax</b>	show ip dhcp-local leases [ <i>ipAddress</i> ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays DHCP local server lease and binding information.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>ipAddress</i>—Specific IP address</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring the Maximum Number of Available Leases</li></ul>

## show ip dhcp-local limits

---

<b>Syntax</b>	show ip dhcp-local limits [ interface <i>InterfaceType</i> <i>InterfaceSpecifier</i>   <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>interface</b> keyword and <i>interfaceType</i> and <i>interfaceSpecifier</i> variables added in JunosE Release 7.1.0.
<b>Description</b>	Displays the maximum number of leases available for each VPI/VCI, VLAN, and Ethernet subnetwork, or for a particular interface or subinterface from the DHCP local server.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>interfaceType</i>—Interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li><li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring the Maximum Number of Available Leases</li></ul>

## show ip dhcp-local pool

---

**Syntax**    show ip dhcp-local pool [ groups ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the configuration of DHCP local pools.

- Options**
- groups—Displays DHCP local server pool group information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**

- Monitoring DHCP Local Address Pools

## show ip dhcp-local reserved

---

**Syntax**    show ip dhcp-local reserved [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the static IP address/MAC address pairs that the DHCP local server supplies in standalone mode. This command does not display address pairs that the DHCP local server supplies in non-PPP equal access mode.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring Static IP Address and MAC Address Pairs Supplied by DHCP Local Server

## show ip dhcp-local statistics

---

<b>Syntax</b>	show ip dhcp-local statistics [ interface [ <i>interfaceType</i> <i>interfaceSpecifier</i> ] ] [ delta ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays statistics for the DHCP local server.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>interfaceType</i>—Interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li><li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li><li>• delta—Displays baselined statistics</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Monitoring DHCP Local Server Statistics</a></li></ul>

## show ip domain-lookup

---

**Syntax**    show ip domain-lookup [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the name servers that you have specified on the router with the **ip name-server** command.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show ip dvmrp

---

**Syntax**    show ip dvmrp [ *delta* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays DVMRP information for a virtual router.

- Options**
- *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip dvmrp interface

---

**Syntax**    show ip dvmrp interface  
             { { [ *brief* ] [ *interfaceType interfaceSpecifier* ] } | summary } [ *delta* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays DVMRP parameters for the specified interfaces.

- Options**
- *brief*—Specifies that a summary rather than detailed information is displayed
  - *delta*—Displays baselined statistics
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip dvmrp mroute

---

**Syntax**    `show ip dvmrp mroute [ group [ sourceAddress [ sourceMask ] ] ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about DVMRP routes to multicast groups.

- Options**
- *group*—IP address of a specific multicast group
  - *sourceAddress*—IP address of the network on which the source resides
  - *sourceMask*—Subnet mask
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip dvmrp neighbor

---

**Syntax**    show ip dvmrp neighbor [ *interfaceType interfaceSpecifier* [ *ipAddress* ] ]  
              [ *brief* ] [ *delta* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about DVMRP neighbors.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *ipAddress*—IP address of the neighbor for which information is displayed
  - *brief*—Specifies that a summary rather than detailed information is displayed
  - *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip dvmrp route

---

**Syntax**    show ip dvmrp route  
             [ *ipAddress* [ *addressMask* ] | *interfaceType* *interfaceSpecifier* ] [ *brief* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about DVMRP routes.

- Options**
- *ipAddress*—IP address for which the best route is displayed
  - *addressMask*—Subnet mask applied to IP address
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *brief*—Displays a summary rather than detailed information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip dvmrp routeNextHop

---

**Syntax**    show ip dvmrp routeNextHop  
             [ *ipAddress* [ *addressMask* [ *interfaceType* *interfaceSpecifier* ] ] ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the next hop.

- Options**
- *ipAddress*—IP address of the network
  - *addressMask*—Mask for the subnet
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip explicit-paths

---

**Syntax**    show { mpls | ip } explicit-paths  
             [ detail | { name *pathName* | identifier *pathNum* } ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays all explicit paths or a particular explicit path in a non-E Series implementation. See the [show mpls explicit-paths](#) command for a complete description and syntax definitions.

**Mode**    Privileged Exec, User Exec

## show ip extcommunity-list

---

**Syntax**    show ip extcommunity-list [ *listName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays all extended-community lists or a specific extended-community list.

- Options**
- *listName*—Name of the extended-community list
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show ip flow

---

**Syntax**    show ip flow { export | sampling }

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays configuration values for either J-Flow sampling or export.

**Options**

- export—Displays export configuration settings
- sampling—Displays sampling configuration settings

**Mode**    Privileged Exec, User Exec

## show ip forwarding-table slot

---

**Syntax**    show ip forwarding-table slot *slotNumber*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about routing table memory, load errors, and status for the forwarding table of a specific line module.

**Options**    • *slotNumber*—Number of the slot containing the line module

**Mode**    Privileged Exec, User Exec

---

## show ip http

---

**Syntax** show ip http [ scalar | server | statistics [ delta ] ] [ *filter* ]

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Displays information about HTTP local servers, information about the parameters configured for the HTTP local server, and statistics about the connections to the HTTP local server.

- Options**
- scalar—Displays information about the connections to the HTTP local server
  - server—Displays information about the parameters configured for the HTTP local server
  - statistics—Display statistics about the connections to the HTTP local server
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

**Related Documentation**

- Monitoring the Configuration of the HTTP Local Server

## show ip igmp

---

**Syntax**    show ip igmp [ *delta* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays IGMP information for a virtual router.

- Options**
- *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip igmp groups

---

**Syntax**    show ip igmp groups [ *count* ] [ *groupAddress* ]  
              [ *interfaceType interfaceSpecifier* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about statically joined and directly connected groups learned by means of IGMP.

**Options**

- *count*—Displays the total number of groups learned
- *groupAddress*—IP address of the group
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip igmp interface

---

**Syntax** show ip igmp interface [ brief | count ] [ delta ]  
[ *interfaceType* *interfaceSpecifier* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays IGMP information for interfaces on which you enabled IGMP.

- Options**
- **brief**—Displays a summary of the information
  - **count**—Displays the total number of interfaces on which you enabled IGMP
  - **delta**—Displays baselined statistics
  - ***interfaceType***—Interface type; see [Interface Types and Specifiers on page 5](#)
  - ***interfaceSpecifier***—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - ***filter***—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip igmp mapped-oif

---

**Syntax**    show ip igmp mapped-oif [ *interfaceType interfaceSpecifier* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the current mappings to all mapped outgoing interfaces or to the specified outgoing interface.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip igmp membership

---

**Syntax**    show ip igmp membership [ *groupAddress* ] [ tracked ]  
              [ *interfaceType interfaceSpecifier* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 8.2.0.

**Description**    Displays IGMP membership information for multicast groups and (S, G) channels.

- Options**
- *groupAddress*—Address of the group whose membership information you want to display
  - tracked—Displays interface information only for interfaces where explicit host tracking is enabled
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ip igmp oif-map

---

**Syntax**    show ip igmp oif-map [ *mapName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays all outgoing interface (OIF) maps or the OIF map for the specified interface.

- Options**
- *mapName*—Outgoing interface multicast map name
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip igmp oif-mapping

---

**Syntax**    show ip igmp oif-mapping *mapName* [ *groupAddress* [ *sourceAddress* ] ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the mapped OIF that would be assigned to a given map name, group address, and source address.

- Options**
- *mapName*—Outgoing interface multicast map name
  - *groupAddress*—IP address of a multicast group
  - *sourceAddress*—IP address of a multicast source
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip igmp-proxy

---

**Syntax**    show ip igmp-proxy [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays IGMP proxy parameters on a virtual router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip igmp-proxy groups

---

**Syntax**    show ip igmp-proxy groups [ *groupAddress* | count ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about multicast groups that IGMP proxy interfaces reported.

- Options**
- *groupAddress*—IP address of a group for which you want to display information
  - count—Displays the number of groups that IGMP proxy reported
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip igmp-proxy interface

---

**Syntax**    show ip igmp-proxy interface [ *brief* ] [ *delta* ] [ *interfaceType interfaceSpecifier* ]  
              [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the interface on which you configured IGMP proxy.

- Options**
- *brief*—Displays summarized information
  - *delta*—Displays baselined statistics
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip igmp ssm-mapping

---

**Syntax**    show ip igmp ssm-mapping [ *groupAddress* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the SSM mapping state and the source list mapping associated with a multicast group address.

- Options**
- *groupAddress*—IP address of the group
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip interface

<b>Syntax</b>	<pre>show ip interface [ vrf <i>vrfName</i> ] { { [ brief   detail   other   show-virtual-router [ <i>virtualRouterName</i> ] ] [ <i>interfaceType interfaceSpecifier</i> ] }   summary } [ delta ] [ <i>filter</i> ]</pre>
<b>Release Information</b>	<p>Command introduced before JunosE Release 7.1.0.</p> <p><b>show-virtual-router</b> keyword and <i>virtualRouterName</i> variable added in JunosE Release 7.3.0.</p> <p><b>other</b> keyword added in JunosE Release 8.0.0.</p>
<b>Description</b>	Displays current state of all IP interfaces or the IP interfaces you specify. The default is all interface types and all interfaces.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>vrfName</i>—Name of the VRF</li> <li>• <b>brief</b>—Displays a brief summary of IP status and configuration information</li> <li>• <b>detail</b>—Shows a detailed display of IP status and configuration information</li> <li>• <b>other</b>—Shows hidden interfaces and routes to the local address that are used internally so that from a given CE you can now ping the local address of any VRF that has a VPN overlapping a VPN to which the CE belongs</li> <li>• <i>virtualRouterName</i>—Name of the virtual router</li> <li>• <i>interfaceType</i>—Interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li> <li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li> <li>• <b>summary</b>—Shows a detailed summary of IP status and configuration</li> <li>• <b>delta</b>—Displays baselined statistics</li> <li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li> </ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• Monitoring the QoS Configuration of IP Interfaces</li> <li>• Monitoring the Policy Configuration of IP Interfaces</li> <li>• Monitoring the Packet Mirroring Configuration of IP Interfaces</li> </ul>

## show ip interface shares

---

**Syntax**    show ip interface shares [ vrf *vrfName* ] [ brief | detail ]  
              [ *interfaceType interfaceSpecifier* ] [ delta ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about shared IP interfaces for all IP interfaces or for the IP interfaces you specify. The default is all interface types and all interfaces.

- Options**
- *vrfName*—Name of the VRF
  - brief—Displays a brief summary of IP status and configuration information
  - detail—Shows a detailed display of IP status and configuration information
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ip interface vrf

---

**Syntax**    show ip interface vrf *vrfName* [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays current state of all interfaces on the specified VRF.

- Options**
- *vrfName*—Name of the VRF
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip local alias

---

**Syntax**    show ip local alias [ *aliasName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the aliases for local address pools configured on your system.

- Options**
- *aliasName*—Name of a specific alias
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show ip local pool

---

**Syntax**    show ip local pool [ *poolName* | statistics [ delta ] ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the local address pools configured on the router.

- Options**
- *poolName*—Name of a specific local address pool
  - statistics—Specifies that local pool statistics are to be shown
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show ip local shared-pool

---

**Syntax**    show ip local shared-pool [ *poolName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the shared local address pools configured on the router.

- Options**
- *poolName*—Name of a specific shared local address pool
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show ip mac-validate interface

---

**Syntax** show ip mac-validate interface *interfaceType interfaceSpecifier* [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the status of MAC address validation on the physical interface that you specify.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## show ip match-policy-list

---

**Syntax**    show ip match-policy-list [ *listName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays all the policy lists or the policy list that you specify. The default is all policy lists.

- Options**
- *listName*—Name of a policy list
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show ip mirror interface

**Syntax** `show ip mirror interface [ vrf vrfName ] [ interfaceType interfaceSpecifier ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about the interface mirroring configuration of all interfaces, or for a specific interface on which mirroring is enabled.



**NOTE:** This command is deprecated and might be removed completely in a future release. The function provided by this command has been replaced by the `show secure policy-list` command.

- Options**
- *vrfName*—Name of the VRF
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)

**Mode** Privileged Exec

**Related Documentation**

- Monitoring the Packet Mirroring Configuration of IP Interfaces

## show ip mobile binding

---

**Syntax**    show ip mobile binding [ nai { *user@realm* | *@realm* | *@* } | *ipAddress* |  
summary ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 9.0.0.

**Description**    Displays the contents of the binding table for the Mobile IP home agent in the current virtual router. By default, all mobility bindings are displayed.

- Options**
- *user@realm*—Name of the user for the mobile node specification when the **nai** keyword is specified, in the format *user@realm*, where *realm* is the domain name
  - *@realm*—Name of the user for the mobile node specification when the **nai** keyword is specified, in the format *@realm*, where *realm* is the domain name
  - *@*—Name of the user for the mobile node specification when the **nai** keyword is specified, in the format *@*
  - *ipAddress*—IP address of the home agent
  - **summary**—Displays aggregate information about the binding table
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ip mobile home-agent

---

**Syntax**    show ip mobile home-agent

**Release Information**    Command introduced in JunosE Release 9.0.0.

**Description**    Displays configuration information for the Mobile IP home agent in the current virtual router. This information includes access list name, registration lifetime, replay protection time, and reverse tunnel setting.

**Mode**    Privileged Exec, User Exec

## show ip mobile host

---

**Syntax**    show ip mobile host [ nai { *user@realm* | *@realm* | *@* } | *ipAddress* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 9.0.0.

**Description**    Displays configuration information for all or specified mobile nodes or domain users.

- Options**
- *user@realm*—Name of the user for the mobile node specification when the **nai** keyword is specified, in the format *user@realm*, where *realm* is the domain name
  - *@realm*—Name of the user for the mobile node specification when the **nai** keyword is specified, in the format *@realm*, where *realm* is the domain name
  - *@*—Name of the user for the mobile node specification when the **nai** keyword is specified, in the format *@*
  - *ipAddress*—IP address of the home agent
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip mobile profile

---

**Syntax**    show ip mobile profile

**Release Information**    Command introduced in JunosE Release 9.0.0.

**Description**    Displays the name of the interface profile associated with the Mobile IP home agent in the current virtual router.

**Mode**    Privileged Exec, User Exec

## show ip mobile secure foreign-agent

---

**Syntax**    show ip mobile secure foreign-agent [ *ipAddress* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 9.0.0.

**Description**    Displays the security associations configured for all Mobile IP foreign agents in the current virtual router.

**Options**

- *ipAddress*—IP address of the foreign agent
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip mobile secure host

---

**Syntax** show ip mobile secure host [ nai { *user@realm* | *@realm* | *@* } | *ipAddress* ]  
[ *filter* ]

**Release Information** Command introduced in JunosE Release 9.0.0.

**Description** Displays the security associations configured for all mobile nodes or domains in the current virtual router.

- Options**
- *user@realm*—Name of the user for the mobile node specification when the **nai** keyword is specified, in the format *user@realm*, where *realm* is the domain name
  - *@realm*—Name of the user for the mobile node specification when the **nai** keyword is specified, in the format *@realm*, where *realm* is the domain name
  - *@*—Name of the user for the mobile node specification when the **nai** keyword is specified, in the format *@*
  - *ipAddress*—IP address of the foreign agent
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip mobile traffic

---

**Syntax**    show ip mobile traffic [ delta ]

**Release Information**    Command introduced in JunosE Release 9.0.0.

**Description**    Displays protocol statistics for the Mobile IP home agent traffic, including advertisements, solicitations, registrations, registration errors, and security violations.

**Options**    • delta—Displays baselined statistics

**Mode**    Privileged Exec, User Exec

## show ip mroute

<b>Syntax</b>	show ip mroute [ <i>groupIpAddress</i> [ <i>sourceIpAddress</i> ] ] [ summary   count   oif-detail   statistics ] [ active [ <i>bandwidth</i> ] ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>active</b> keyword added in JunosE Release 8.1.0. <b>oif-detail</b> keyword added in JunosE Release 12.0.0.
<b>Description</b>	Displays information about all or specified multicast routes.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>groupIpAddress</i>—IP address of a multicast group</li> <li>• <i>sourceIpAddress</i>—IP address of a multicast source</li> <li>• summary—Displays brief information about the multicast routes</li> <li>• count—Displays the number of groups and sources</li> <li>• oif-detail—Displays details of the join interfaces corresponding to the mapped interface when OIF-mapping is configured</li> <li>• statistics—Displays statistics for packets received through multicast routes that the router has added to the multicast routing table and established on the appropriate line modules</li> <li>• active—Displays active mroutes</li> <li>• <i>bandwidth</i>—Admission bandwidth for active multicast routes that is greater than the specified bandwidth threshold; default is 4000 bps</li> <li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li> </ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Limiting Interface Admission Bandwidth</i> in the <i>JunosE Multicast Routing Configuration Guide</i></li> <li>• <i>Limiting Port Admission Bandwidth</i> in the <i>JunosE Multicast Routing Configuration Guide</i></li> </ul>

## show ip multicast protocols

---

**Syntax**    show ip multicast protocols [ *brief* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the multicast protocols enabled on the router.

- Options**
- *brief*—Displays a summary rather than detailed information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ip multicast routing

---

**Syntax**    show ip multicast routing

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the status of multicast routing on the router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip nat inside rule

---

**Syntax**    show ip nat inside rule [ *accessListName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays NAT inside rule information.

- Options**
- *accessListName*—Name of the access list
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    User Exec

## show ip nat outside rule

---

**Syntax**    show ip nat outside rule [ *accessListName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays NAT outside rule information.

- Options**
- *accessListName*—Name of the access list
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    User Exec

## show ip nat pool

---

**Syntax**    show ip nat pool [ *poolName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays NAT address pool information.

- Options**
- *poolName*—Name of the pool
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    User Exec

## show ip nat statistics

---

**Syntax**    show ip nat statistics [ global [ pool ] | pool [ *poolName* ] ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays internal NAT statistics.

- Options**
- **global**—Displays system-wide statistics
  - **pool**—Displays address pool statistics
  - ***poolName***—Name of the pool
  - ***filter***—See [Filtering show Commands on page 4](#)

**Mode**    User Exec

## show ip nat translations

---

**Syntax** show ip nat translations [ static | dynamic ] [ gre | icmp | tcp | udp ]\* [ verbose ]  
[ *filter* ]

show ip nat translations inside *insideLocalIpAddress* [ *localPort* ]  
[ *insideGlobalIpAddress* [ *globalPort* ] ] [ verbose ] [ *filter* ]

show ip nat translations outside *outsideGlobalIpAddress* [ *globalPort* ]  
[ *outsideLocalIpAddress* [ *localPort* ] ] [ verbose ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0  
**gre** keyword added in JunosE Release 7.3.0.

**Description** Displays translations that reside in the NAT translation table.

- Options**
- static—Displays static translations
  - dynamic—Displays dynamic translations
  - tcp—Displays TCP port translations
  - udp—Displays UDP port translations
  - icmp—Displays ICMP port translations
  - gre—Displays GRE translations
  - \*—Indicates that you can specify one or more protocol keywords, in any order, in a list in the command line
  - inside—Specifies an inside address
  - *insideLocalIpAddress*—Inside local IP address
  - *localPort*—Local port value
  - *insideGlobalIpAddress*—Inside global IP address
  - *globalPort*—Global port value
  - outside—Specifies an outside address
  - *outsideGlobalIpAddress*—Inside global IP address
  - *outsideLocalIpAddress*—Inside local IP address
  - verbose—Additionally displays the time since creation and time since last use for each translation entry
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** User Exec

## show ip nfs

---

**Syntax**    show ip nfs [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the interface that the current virtual router uses to exchange messages with the NFS server.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip ospf

---

**Syntax**    `show ip ospf [ vrf vrfName ] [ delta ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays general information about OSPF routing processes.

- Options**
- *vrfName*—Name of the VRF
  - *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ip ospf border-routers

---

**Syntax**    show ip ospf border-routers [ vrf *vrfName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays routing table entries for area border and AS boundary routers.

- Options**
- *vrfName*—Name of the VRF
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip ospf database

---

**Syntax** show ip ospf database [ vrf *vrfName* ] [ database-summary | area *areald* | *arealdInt* | { asbr-summary | external | network | nssa-external | router | summary | opaque-area | link-local } [ *ipAddress* | internal ] ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
*areald* and *arealdInt* variables added in JunosE Release 7.3.0.

**Description** Displays the full IP OSPF database, a summary of the database, the number of LSAs available in each category, or the number of LSAs that have reached the maximum age in each category.

- Options**
- *vrfName*—Name of the VRF
  - database-summary—Displays summary of the database
  - *areald*—Area ID as an IP address
  - *arealdInt*—Area ID as an integer
  - asbr-summary—Displays AS boundary router summary link states
  - external—Displays External link states
  - network—Displays network link states
  - nssa-external—Displays NSSA external link states
  - router—Displays router link states
  - summary—Displays network summary link states
  - opaque-area—Displays traffic-engineering opaque LSA states
  - link-local—Displays link local link states
  - *ipAddress*—Link-state IP address
  - internal—Displays internal LSA information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip ospf interface

---

**Syntax**    `show ip ospf interface [ vrf vrfName ] [ interfaceType interfaceSpecifier ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays a list of OSPFv2 interfaces.

- Options**
- *vrfName*—Name of the VRF
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## **show ip ospf internal-statistics**

---

**Syntax**    `show ip ospf internal-statistics [ vrf vrfName ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays internal OSPFv2 statistics.

- Options**
- *vrfName*—Name of the VRF
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip ospf neighbors

---

**Syntax**    `show ip ospf neighbors [ vrf vrfName ] [ history ] [ neighborAddress ]  
              [ interfaceType interfaceSpecifier ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **history** keyword added in JunosE Release 7.3.0.

**Description**    Displays a list of OSPF neighbors.

- Options**
- *vrfName*—Name of the VRF
  - *history*—Displays history of events for the listed neighbors
  - *neighborAddress*—Router ID of a specified neighbor
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## **show ip ospf remote-neighbor interface**

---

**Syntax**    `show ip ospf remote-neighbor [ ipAddress ] interface [ vrf vrfName ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays interfaces associated with OSPF remote neighbors.

- Options**
- *ipAddress*—Source IP address of a remote neighbor
  - *vrfName*—Name of the VRF
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip ospf spf-log

---

**Syntax**    `show ip ospf spf-log [ vrf vrfName ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays how often and why the router has run a full SPF calculation.

- Options**
- *vrfName*—Name of the VRF
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip ospf virtual-links

---

**Syntax**    `show ip ospf virtual-links [ vrf vrfName ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the parameters and the current state of OSPF virtual links. A virtual link is a logical connection between two routers. To establish or maintain connectivity to the backbone, you can configure virtual links through nonbackbone areas. Virtual links serve to connect physically separate components of the backbone—the two endpoints of a virtual link area.

- Options**
- *vrfName*—Name of the VRF
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ip pim

---

**Syntax**    show ip pim

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays general PIM router-level information.

**Mode**    Privileged Exec, User Exec

## show ip pim auto-rp

---

**Syntax**    show ip pim auto-rp [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about rendezvous point routers and the RP mapping agent in a PIM sparse mode environment.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip pim bsr

---

**Syntax**    show ip pim bsr [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays BSR information and the group prefixes for which the local router is a C-RP in a PIM sparse mode environment.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip pim data-mdt

---

**Syntax** show ip pim data-mdt [ senders | receivers ] [ group *groupIPAddress* ]  
[ source *sourceIPAddress* ] [ summary | count ]

**Release Information** Command introduced in JunosE Release 8.2.0.

**Description** Displays the configuration and status of a data MDT. There is no **no** version.

- Options**
- **senders**—Displays data MDTs on which the provider edge transmits data
  - **receivers**—Displays data MDTs on which the provider edge receives data
  - **groupIPAddress**—IP address of the group
  - **sourceIPAddress**—IP address of the source
  - **summary**—Displays a summary of configuration for each data MDT
  - **count**—Displays the number of data MDTs

**Mode** Privileged Exec

## show ip pim dense-mode sg-state

---

**Syntax**    show ip pim dense-mode sg-state  
             [ group *groupAddress* [ source *sourceAddress* ] ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information for each SG entry that PIM dense mode knows about.

**Options**

- *groupAddress*—IP address of a multicast group
- *sourceAddress*—IP address of a multicast source
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip pim interface

---

**Syntax** show ip pim interface { summary | [ *interfaceType interfaceSpecifier* ] [ count ]  
[ *filter* ] }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about each PIM dense mode interface.

- Options**
- **summary**—Displays the number of configured, enabled, and disabled PIM dense mode, PIM sparse mode, and PIM sparse-dense mode interfaces
  - **interfaceType**—Interface type; see [Interface Types and Specifiers on page 5](#)
  - **interfaceSpecifier**—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - **count**—Displays the number of incoming and outgoing PIM control packets
  - **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip pim neighbor

---

**Syntax**    `show ip pim neighbor [ interfaceType interfaceSpecifier ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about each PIM neighbor that the router has discovered.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip pim remote-neighbor

---

**Syntax**    show ip pim remote-neighbor [ *ipAddress* ] [ *count* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about all PIM remote neighbors or the specified remote neighbor.



.....  
**NOTE:** This command is typically used when you configure PIM remote neighbors to run multicast services over BGP/MPLS VPNs. That functionality is no longer supported.  
.....

- Options**
- *ipAddress*—IP address of a remote neighbor
  - *count*—Display the number of remote neighbors
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show ip pim rp

---

**Syntax**    `show ip pim rp { groupAddress | mapping } [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about PIM group-to-RP mappings.

- Options**
- *groupAddress*—Address of a group for which you want to view group-to-RP mappings
  - *mapping*—Displays all group-to-RP mappings that the router has recorded
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip pim rp-hash

---

**Syntax**    show ip pim rp-hash *groupAddress* [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Shows which RP a multicast group is using.

- Options**
- *groupAddress*—IP address of multicast group for which you want to view the RP
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

Mode	Privileged Exec, User Exec
------	----------------------------

## show ip pim sparse-mode unicast-route

---

**Syntax**    show ip pim sparse-mode unicast-route [ *routeAddress routeMask* ] [ *count* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the unicast routes that PIM sparse mode is using.

- Options**
- *routeAddress*—IP address associated with a unicast route
  - *routeMask*—Network mask associated with a unicast route
  - *count*—Shows the number of unicast routes that PIM sparse mode is using.
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip pim spt-threshold

---

**Syntax**    show ip pim spt-threshold [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the threshold for switching to the shortest-path-tree at a PIM designated router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip prefix-list

---

**Syntax** show ip prefix-list [ *listName* [ seq *seqNum* | *ipPrefix* [ longer | first-match ] ] ]  
[ *filter* ]

To display summary or detail info:

show ip prefix-list { summary | detail } [ *listName* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about prefix lists.

- Options**
- *listName*—Prefix list for which information is displayed
  - *seqNum*—Sequence number of prefix list entry for which information is displayed
  - *ipPrefix*—Prefix in the format *IPbaseaddress / length*; for example, 10.10.10.0/24
  - longer—Displays all entries for a prefix that are equal to or more specific than the specified prefix
  - first-match—Displays only an entry that matches the specified prefix
  - *filter*—See [Filtering show Commands on page 4](#)
  - summary—Displays summary information
  - detail—Displays detailed information

**Mode** Privileged Exec

---

## show ip prefix-tree

---

**Syntax**    `show ip prefix-tree [ treeName [ ipPrefix [ longer ] ] ] [ filter ]`

To display summary or detail info:

`show ip prefix-tree { summary | detail } [ treeName ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about prefix trees.

- Options**
- *treeName*—Name of the prefix tree
  - *ipPrefix*—Prefix in the format *IPbaseaddress/length*; for example, 10.10.10.0/24
  - *longer*—Displays all entries for a prefix that are equal to or more specific than the specified prefix
  - *filter*—See [Filtering show Commands on page 4](#)
  - *summary*—Displays summary information
  - *detail*—Displays detailed information

**Mode**    Privileged Exec

## show ip profile

---

**Syntax**    show ip profile *profileName* [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about a specific IP profile.

- Options**
- *profileName*—Name of the profile you want to display
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ip protocols

---

**Syntax**    `show ip protocols [ vrf vrfName ] [ summary ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays detailed information about IP protocols currently configured on the router.

- Options**
- *vrfName*—Displays information about protocols only for the specified VRF
  - *summary*—Displays only a list of currently configured protocols
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip redistribute

---

**Syntax**    show ip redistribute [ *vrfName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays configured route redistribution policy.

- Options**
- *vrfName*—Name of the VRF
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip rip

---

**Syntax**    `show ip rip [ vrf vrfName ] [ brief ] [ ifconfig ] [ ipAddress ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays limited RIP general status information.

- Options**
- *vrfName*—Name of the VRF
  - *brief*—Displays limited information
  - *ifconfig*—Displays address and interface configuration information instead of the default operational data
  - *ipAddress*—Displays information only for specific RIP network
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip rip database

---

**Syntax**    show ip rip database [ vrf *vrfName* ] [ all ] [ inactive ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays route entries in the RIP routing table (RIP database).

- Options**
- *vrfName*—Name of the VRF
  - all—Displays active and inactive routes learned through RIP updates
  - inactive—Displays routes the router will discard in the immediate future
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip rip network

---

**Syntax**    `show ip rip network [ vrf vrfName ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the networks associated with the RIP routing process.

- Options**
- *vrfName*—Name of the VRF
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip rip peer

---

**Syntax**    show ip rip peer [ vrf *vrfName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays all RIP neighbors, with limited information about each peer.

- Options**
- *vrfName*—Name of the VRF
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip rip statistics

---

**Syntax**    `show ip rip statistics [ vrf vrfName ] [ ipAddress ] [ delta ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays global statistics associated with the RIP routing process. If you specify an IP address, additionally displays statistics for that interface.

- Options**
- *vrfName*—Name of the VRF
  - *ipAddress*—Address of IP interface where RIP is running; identifies RIP network
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip rip summary-address

---

**Syntax**    show ip rip summary-address [ vrf *vrfName* ] [ *ipAddress* [ *ipMask* ] ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays RIP summary addresses.

- Options**
- *vrfName*—Name of the VRF
  - *ipAddress*—Address of IP interface where RIP is running
  - *ipMask*—IP mask of the specific address
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ip route

**Syntax** `show ip route [ vrf vrfName ] [ destination [ ipMask ] [ detail ] ] [ all ] [ protocol ] [ filter ]`

To display summary information:

`show ip route summary [ vrf vrfName ] [ filter ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays current state of the routing table.

- Options**
- *vrfName*—Displays the contents of the IP routing table associated with a VRF
  - *destination*—Specifies the IP address or domain name of the host to show
  - *ipMask*—IP mask of the specific address to show
  - *detail*—Displays detailed information about the specific prefix; currently shows the tag added by means of the **ip route** command
  - *all*—Displays all routes in the routing table inserted from all protocols (not just the *best* routes that are used for forwarding)
  - *protocol*—One of the following protocols for which you want to display the best routes in the routing table; no routes are displayed if routes for the specified protocol are not present in the routing table
    - *access*—Displays the best access-server routes (BGP) in the routing table
    - *access-internal*—Displays the best access-internal routes in the routing table
    - *bgp*—Displays the best BGP routes in the routing table
    - *bgp-tunnel*—Displays the best BGP tunnel routes in the routing table
    - *dvmrp*—Displays the best DVMRP routes in the routing table
    - *isis*—Displays the best IS-IS routes in the routing table
    - *ldp*—Displays the best LDP tunnel routes in the routing table
    - *local*—Displays the best locally connected routes in the routing table
    - *mbgp*—Displays the best MBGP routes in the routing table
    - *ospf*—Displays the best OSPF routes owned by in the routing table
    - *other*—Displays the best internal control routes in the routing table
    - *rip*—Displays the best RIP routes in the routing table
    - *rsvp*—Displays the best RSVP tunnel routes in the routing table

- *static*—Displays the best static routes added by network management to the routing table
- *static-rpf*—Displays the best static RPF routes added by network management to the routing table
- *summary*—Displays summary counters for all routes in the IP routing table
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip route slot

---

**Syntax**    `show ip route slot slotNumber [ vrf vrfName ] ipAddress`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the interface and next hop for an IP address in the routing table of a line module.

- Options**
- *slotNumber*—Number of slot containing the line module
  - *vrfName*—Name of the VRF
  - *ipAddress*—IP address to look up in the routing table

**Mode**    Privileged Exec, User Exec

## show ip rpf-route

---

**Syntax**    `show ip rpf-route [ vrf vrfName ] [ destination [ ipMask ] [ detail ] ]`  
              `[ all ] [ protocol ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays routes that the router can use to verify source addresses in multicast packets.

- Options**
- *vrfName*—Displays the contents of the IP routing table associated with a VRF
  - *destination*—Specifies the IP address or domain name of the host to show
  - *ipMask*—IP mask of the specific address to show
  - detail—Displays detailed information about the specific prefix; currently shows the tag added by means of the **ip route** command
  - all—Displays all routes in the routing table inserted from all protocols (not just the *best* routes that are used for forwarding)
  - *protocol*—One of the following protocols for which you want to display the best routes in the routing table; no routes are displayed if routes for the specified protocol are not present in the routing table
    - access—Displays the best access-server routes (BGP) in the routing table
    - access-internal—Displays the best access-internal routes in the routing table
    - bgp—Displays the best BGP routes in the routing table
    - bgp-tunnel—Displays the best BGP tunnel routes in the routing table
    - dvmrp—Displays the best DVMRP routes in the routing table
    - isis—Displays the best IS-IS routes in the routing table
    - ldp—Displays the best LDP tunnel routes in the routing table
    - local—Displays the best locally connected routes in the routing table
    - mbgp—Displays the best MBGP routes in the routing table
    - ospf—Displays the best OSPF routes owned by in the routing table
    - other—Displays the best internal control routes in the routing table
    - rip—Displays the best RIP routes in the routing table
    - rsvp—Displays the best RSVP tunnel routes in the routing table

- `static`—Displays the best static routes added by network management to the routing table
- `static-rpf`—Displays the best static RPF routes added by network management to the routing table
- `filter`—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip service-profile

---

**Syntax**    show ip service-profile [ *profileName* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information for IP service profiles.

**Options**    • *profileName*—Name of a specific service profile

**Mode**    Privileged Exec

## show ip socket statistics

---

**Syntax**    show ip socket statistics [ detailed ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays BSD socket-emulation statistics.

- Options**
- detailed—Displays detailed statistics for each TCP socket
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip ssh

---

**Syntax**    show ip ssh [ detail ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the current state of the SSH server.

- Options**
- detail—Displays detailed information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show ip static

---

**Syntax**    `show ip static [ vrfName ] [ ipAddress ipMask [ all ] ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays general status information for static routes added by network management to the routing table.

- Options**
- *vrfName*—Name of the VRF
  - *ipAddress*—IP address to show
  - *ipMask*—IP mask of the specific address to show
  - *all*—Displays all routes starting at the specified prefix
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip-subscriber

---

**Syntax**    `show ip-subscriber [ subscriberId | interface interfaceType interfaceSpecifier | username userName | virtual-router vrName | summary ] [ detail ] [ filter ]`

**Release Information**    Command introduced in JunosE Release 8.1.0.  
*filter* variable added in JunosE Release 9.1.0.

**Description**    Displays information about the active IP subscribers that are created by subscriber manager.

- Options**
- *subscriberId*—ID of the IP subscriber
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *userName*—Username of a specific active subscriber
  - *vrName*—Name of the virtual router to which interfaces of active IP subscribers are bound
  - *summary*—Displays the number of IP subscribers for each virtual router
  - *detail*—Displays detailed information about IP subscribers
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show ip traffic

---

**Syntax**    `show ip traffic [ vrfName ] [ delta ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays statistics about IP traffic.

- Options**
- *vrfName*—Name of the VRF
  - *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip tunnel reassembly statistics

---

**Syntax**    show ip tunnel reassembly statistics [ detail ] [ all ] [ delta ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             **delta** keyword added in JunosE Release 8.0.0.

**Description**    Displays statistics on the reassembly of fragmented tunnel packets within the current virtual router context.

**Options**

- detail—Displays detailed reassembly statistics that include packets reassembled or discarded per protocol
- all—Displays reassembly statistics for all virtual routers on the router
- delta—Displays baselined reassembly statistics
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip tunnel-route

**Syntax** `show ip tunnel-route [ vrf vrfName ] [ destination [ ipMask ] [ detail ] ]`  
`[ all ] [ protocol ] [ filter ]`

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** Displays current state of the IPv4 tunnel routing table.

- Options**
- *vrfName*—Contents of the IPv4 tunnel routing table associated with a VRF
  - *destination*—IP address or domain name of the host to show
  - *ipMask*—IP mask of the specific address to show
  - *detail*—Displays detailed information about the specific prefix
  - *all*—Displays all routes in the IPv4 tunnel routing table inserted from all protocols, not just the best routes
  - *protocol*—One of the following protocols for which you want to display the best route or all routes in the tunnel routing table; no routes are displayed if routes for the specified protocol are not present in the tunnel routing table



**NOTE:** Other protocol options are available in the CLI, but they are not applicable to the tunnel routing table.

- *bgp-tunnel*—Displays the BGP tunnel routes in the tunnel routing table
- *ldp*—Displays the LDP tunnel routes in the tunnel routing table
- *rsvp*—Displays the RSVP tunnel routes in the tunnel routing table
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ip udp statistics

---

**Syntax**    show ip udp statistics [ *vrfName* ] [ delta ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays UDP statistics.

- Options**
- *vrfName*—Name of the VRF
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip vrf

---

**Syntax**    show ip vrf [ [ detail ] [ *vrfName* ] | interfaces [ detail ] ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information for a specified VRF and its associated interfaces or all VRFs and their associated interfaces for the current virtual router context.

**Options**

- detail—Displays detailed VRF information
- *vrfName*—Name of the VRF for which information is displayed
- interfaces—Displays all VRFs in the virtual router and their associated interfaces
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ip vrrp

---

**Syntax**    `show ip vrrp [ brief ] [ interface interfaceType interfaceSpecifier [ vrid ] ] [ filter ]`

To display summary information:

`show ip vrrp summary [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information for the VRID configured on the specified interface, all VRIDs configured on the specified interface, or summary information.

- Options**
- *brief*—Displays a brief summary of VRIDs
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *vrid*—Virtual router ID
  - *filter*—See [Filtering show Commands on page 4](#)
  - *summary*—Displays a summary count on all configured VRIDs

**Mode**    Privileged Exec



---

## show ip vrrp neighbor

---

**Syntax** show ip vrrp neighbor [ interface *interfaceType* *interfaceSpecifier* [ *vrid* ] ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays summary of all neighbors known to the VRRP router configured on the specified interface. A neighbor—a router that shares a given VRID with the VRRP router—is known to the VRRP router only when the neighbor becomes a master for an IP address and sends VRRP advertisements to that effect. If a router sharing the VRID has not yet become a master, then the local router remains unaware of this neighbor and this command does not display that neighbor.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *vrid*—Virtual router ID
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## show ip vrrp statistics

---

**Syntax** show ip vrrp statistics [ global | [ interface *interfaceType* *interfaceSpecifier* [ *vrid* ] ] ]  
[ delta ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays global statistics, interface statistics, or statistics per interface and VRID.

- Options**
- **global**—Displays global counters
  - ***interfaceType***—Interface type; see [Interface Types and Specifiers on page 5](#)
  - ***interfaceSpecifier***—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - ***vrid***—Virtual router ID
  - **delta**—Displays baselined statistics
  - ***filter***—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## show ip vrrp tracked-objects

---

**Syntax**    show ip vrrp tracked-objects [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays VRRP tracked objects.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show ipsec ca identity

---

**Syntax**    show ipsec ca identity { *name* | all } [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information for a specific IKE CA identity or for all IKE CA identities that are configured on the E Series router and that support the online digital certificate process.

**Options**

- *name*—Name of specific CA
- all—Displays information for all CAs
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

---

## show ipsec certificates

---

**Syntax** show ipsec certificates { all | crl | peer | public-certs | root-cas } [ hex-format ]  
[ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the IKE certificates configured on the E Series router.



.....

**NOTE:** This command is replacing the [show ike certificates](#) command. The [show ike certificates](#) command may be removed completely in a future release.

.....

- Options**
- all—Displays all certificates configured on the router
  - crl—Displays certificate revocation lists
  - peer—Displays peer certificates
  - public-certs—Displays public certificates
  - root-cas—Displays root CA certificates
  - hex-format—Displays certificate data in hexadecimal format
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ipsec identity

---

**Syntax**    show ipsec identity [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the IKE identity configuration.



.....  
**NOTE:** This command is replacing the [show ike identity](#) command. The [show ike identity](#) command may be removed completely in a future release.  
.....

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

---

## show ipsec ike-configuration

---

**Syntax**    show ipsec ike-configuration [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays a summary of the IKE configuration.



.....  
**NOTE:** This command is replacing the [show ike configuration](#) command.  
The [show ike configuration](#) command may be removed completely in a future release.  
.....

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipsec ike-policy-rule

---

**Syntax**    show ipsec ike-policy-rule [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays configuration of IKE phase 1 policy rules.



NOTE: This command is replacing the [show ike policy-rule](#) command. The [show ike policy-rule](#) command may be removed completely in a future release.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show ipsec ike-sa

---

**Syntax**    show ipsec ike-sa [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays IKE phase 1 SAs running on the router.



.....  
**NOTE:** This command is replacing the [show ike sa](#) command. The [show ike sa](#) command may be removed completely in a future release.  
.....

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show ipsec key mypubkey rsa

---

**Syntax**    show ipsec key mypubkey rsa [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays the ISAKMP/IKE public key configured on the router. The public key is generated as part of a public/private key pair used to perform RSA authentication for IKE SA negotiations.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

---

## show ipsec key pubkey-chain rsa

---

**Syntax** show ipsec key pubkey-chain rsa { summary | address *ipAddress* | name *identityString* } [ *filter* ]

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** Displays the ISAKMP/IKE public key that a remote peer uses for RSA authentication without the need for a digital certificate.

- Options**
- **summary**—Displays a brief summary of the remote peers for which peer public keys are configured on the router
  - ***ipAddress***—IP address of the peer for which the public key can be used, in 32-bit dotted decimal format (for example, 192.168.32.2)
  - ***identityString***—Identity of the remote peer for which the public key can be used, either in fully qualified domain name (FQDN) format (for example, group003.customer535.isp.net) or in FQDN format preceded by an optional *user@* specification (for example, tsmith@group003.customer535.isp.net); maximum of 80 characters
  - ***filter***—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## show ipsec lifetime

---

**Syntax**    show ipsec lifetime

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the configured default lifetime of phase II SAs.

**Mode**    Privileged Exec

## show ipsec local-endpoint

---

**Syntax**    show ipsec local-endpoint [ transport-virtual-router *transportVirtualRouter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the address and transport virtual router of local endpoints.

**Options**    • *transportVirtualRouter*—Name of virtual router that includes source or destination addresses or both assigned to tunnel interfaces

**Mode**    Privileged Exec

## show ipsec option

---

**Syntax**    show ipsec option

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the dead peer detection (DPD), Network Address Translation Traversal (NAT-T) status (enabled or disabled), and invalid cookie transmission status (enabled or disabled) for the current virtual router.

**Mode**    Privileged Exec, User Exec

## show ipsec transform-set

---

**Syntax**    show ipsec transform-set [ *transformSetName* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays transform sets configured on the router.

**Options**    • *transformSetName*—Name of a transform set

**Mode**    Privileged Exec

## show ipsec transport interface

---

**Syntax** show ipsec transport interface [ detail ] [ application *applicationType* ]  
[ state { up | down } ] [ *interfaceName* |  
[ virtual-router *vrName* ] destination *destAddress* | local *localAddress* ] [ *filter* ]

To display summary information:

show ipsec transport interface summary

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays all details, including statistics, of IPSec transport connections that match the specified criteria.

- Options**
- detail—Includes statistics for the displayed connection
  - *applicationType*—Application protected by IPSec transport connections
  - state—Displays connections that are in the specified state, up or down
  - *interfaceName*—Connection number that you want to display
  - *vrName*—Name of a virtual router. If you do not specify a virtual router, the router displays connections on the current virtual router context. Notice that the local and destination IP addresses exist in the current virtual router context.
  - *destAddress*—IP address of remote endpoint
  - *localAddress*—IP address of local endpoint
  - *filter*—See [Filtering show Commands on page 4](#)
  - summary—Displays a summary of all IPSec transport connections

**Mode** Privileged Exec



## show ipsec transport profile

---

**Syntax**    show ipsec transport profile [ *profileName* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the configuration of an IPSec transport profile.

**Options**    • *profileName*—Name of the profile that you want to display

**Mode**    Privileged Exec

## show ipsec tunnel

---

**Syntax** show ipsec tunnel [ *tunnelName* | [ virtual-router *vrName* ] ip *ipAddress* ]  
[ state { *adminState* | *operStatus* } ] [ *filter* ] [ detail ] [ delta ]

To display summary information:

show ipsec tunnel summary [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about tunnels that are configured on a specific virtual router.

- Options**
- *tunnelName*—Name of tunnel
  - *vrName*—Name of virtual router on which tunnels are configured
  - *ipAddress*—IP address used by tunnels
  - state—Restricts display to tunnels in one of the following states:
    - *adminState*—Administrative state of enabled or disabled
    - *operStatus*—Operational state of up, down, lower-down, or not-present
  - *filter*—See [Filtering show Commands on page 4](#)
  - detail—Displays configuration and statistics of tunnels
  - delta—Displays baselined statistics
  - summary—Displays a summary of all tunnels configured on the router

**Mode** Privileged Exec

## show ipsec tunnel profile

---

**Syntax**    show ipsec tunnel profile [ detail ] [ *profileName* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Displays information about all existing IPSec tunnel profiles or the specified tunnel profile.

**Options**

- detail—Displays detailed information about the profile
- *profileName*—Name of a specific IPSec tunnel configuration profile
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show ipv6

---

**Syntax**    `show ipv6 [ vrf vrfName ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             **vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description**    Displays general information for IPv6.

**Options**    • *vrfName*—Name of the VRF

**Mode**    Privileged Exec, User Exec

## show ipv6 access-list

---

**Syntax**    `show ipv6 access-list [ accessListName ] [ detail ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays access list information about the specified IPv6 access list.

- Options**
- *accessListName*—Name of the access list
  - detail—Displays detailed information about the access list
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show ipv6 address

---

**Syntax**    `show ipv6 address [ vrf vrfName ] [ brief | detail ] localAddress`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description**    Displays interface information for the specified IPv6 address.

- Options**
- *vrfName*—Name of the VRF
  - **brief**—Displays summary information about the interface
  - **detail**—Displays detailed information about the interface
  - *localAddress*—IPv6 address of the specific interface

**Mode**    Privileged Exec, User Exec

## **show ipv6 dhcpv6-local auth config**

---

**Syntax**    show ipv6 dhcpv6-local auth config

**Release Information**    Command introduced in JunosE Release 12.2.0.

**Description**    Displays information about the DHCPv6 local server authentication configuration.

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring DHCPv6 Local Server Authentication Information

## show ipv6 dhcpv6-local binding

---

**Syntax**    show ipv6 dhcpv6-local binding [ *ipv6Prefix* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the mapping between the token or enduring IPv6 prefix and the DHCP unique ID (DUID) of the client computer.

- Options**
- *ipv6Prefix*—IPv6 address of the subscriber's personal computer
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring DHCPv6 Local Server Binding Information



## **show ipv6 dhcpv6-local dns-domain-searchlist**

---

**Syntax**    show ipv6 dhcpv6-local dns-domain-searchlist [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the DHCPv6 local server's DNS search list.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring DHCPv6 Local Server DNS Search Lists

## show ipv6 dhcpv6-local dns-servers

---

**Syntax**    show ipv6 dhcpv6-local dns-servers [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays DNS servers that are configured on the DHCPv6 local server.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring DHCPv6 Local Server DNS Servers

## show ipv6 dhcpv6-local prefix-lifetime

---

**Syntax**    show ipv6 dhcpv6-local prefix-lifetime [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the DHCPv6 default prefix lifetime.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring DHCPv6 Local Server Prefix Lifetime

## show ipv6 dhcpv6-local statistics

---

**Syntax**    show ipv6 dhcpv6-local statistics [ *delta* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays statistics for the DHCPv6 local server.

- Options**
- *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**

- Monitoring DHCPv6 Local Server Statistics

## show ipv6 forwarding-table slot

---

**Syntax**    show ipv6 forwarding-table slot *slotNumber*

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays information about routing table memory, load errors, and status for the IPv6 forwarding table of a specific line module.

**Options**    • *slotNumber*—Number of the slot containing the line module

**Mode**    Privileged Exec, User Exec

## show ipv6 interface

---

**Syntax**    show ipv6 interface [ vrf *vrfName* ] [ brief | detail ]  
              [ *interfaceType interfaceSpecifier* ][ delta ] [ *filter* ]

To display summary information:

show ipv6 interface summary [ vrf *vrfName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description**    Displays current state of all IPv6 interfaces or the IPv6 interfaces that you specify. The default is all interface types and all interfaces.

- Options**
- *vrfName*—Name of the VRF
  - brief—Displays a brief summary of IPv6 status and configuration information
  - detail—Shows a detailed display of IP status and configuration information
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)
  - summary—Shows a detailed summary of IP status and configuration

**Mode**    Privileged Exec, User Exec

**Related Documentation**    • Monitoring the Policy Configuration of IPv6 Interfaces

## show ipv6 local pool

---

**Syntax**    show ipv6 local pool [ *poolName* | statistics [ delta ] ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 10.1.0.

**Description**    Displays information for all IPv6 local address pools configured on a virtual router, a particular IPv6 local address pool, or the IPv6 local address pool statistics for DHCPv6 prefix delegation.

- Options**
- *poolName*—Name of the IPv6 local address pool configured on the virtual router for which you want to view statistics, such as the number of clients to which prefixes have been allocated from this pool, starting and ending prefixes of the address range, and other prefix configuration parameters .
  - statistics—Displays the IPv6 local address pool statistics details.
  - delta—Displays statistics that have changed since the last baseline was set.
  - *filter*—See “[Filtering show Commands](#)” on page 4.

**Mode**    Privileged Exec, User Exec

## show ipv6 mld

---

**Syntax**    show ipv6 mld [ *delta* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays MLD information for a virtual router.

- Options**
- *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ipv6 mld groups

---

**Syntax**    show ipv6 mld groups [ *count* ] [ *groupAddress* ]  
              [ *interfaceType interfaceSpecifier* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about statically joined and directly connected groups learned through MLD.

**Options**

- *count*—Displays the total number of groups learned
- *groupAddress*—IPv6 address of the group
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 mld membership

---

**Syntax**    show ipv6 mld membership [ *groupAddress* ] [ tracked ]  
              [ *interfaceType interfaceSpecifier* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 8.2.0.

**Description**    Displays MLD membership information for multicast groups and (S, G) channels.

- Options**
- *groupAddress*—Address of the group whose membership information you want to display
  - tracked—Displays interface information only for interfaces where explicit host tracking is enabled
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 mld interface

---

**Syntax**    show ipv6 mld interface [ *brief* | *count* ] [ *delta* ]  
             [ *interfaceType interfaceSpecifier* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays MLD information for interfaces on which you enabled MLD.

- Options**
- *brief*—Displays a summary of the information
  - *count*—Displays the total number of interfaces on which you enabled MLD
  - *delta*—Displays baselined statistics
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 mld mapped-oif

---

**Syntax**    `show ipv6 mld mapped-oif [ interfaceType interfaceSpecifier ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the current mappings to all mapped outgoing interfaces or to the specified outgoing interface.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 mld oif-map

---

**Syntax**    show ipv6 mld oif-map [ *mapName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays all outgoing interface (OIF) maps or the OIF map for the specified interface.

- Options**
- *mapName*—Outgoing interface multicast map name
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 mld oif-mapping

---

**Syntax**    `show ipv6 mld oif-mapping mapName [ groupAddress [ sourceAddress ] ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the mapped OIF to be assigned to a given map name, group address, and source address.

- Options**
- *mapName*—Outgoing interface multicast map name
  - *groupAddress*—IPv6 address of a multicast group
  - *sourceAddress*—IPv6 address of a multicast source
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 mld-proxy

---

**Syntax**    show ipv6 mld-proxy [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays MLD proxy parameters on a virtual router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 mld-proxy groups

---

**Syntax**    `show ipv6 mld-proxy groups [ count ] [ groupAddress ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about multicast groups that MLD proxy interfaces reported.

- Options**
- `count`—Displays the number of groups that MLD proxy reported
  - `groupAddress`—IPv6 address of a group for which you want to display information
  - `filter`—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ipv6 mld-proxy interface

---

**Syntax**    show ipv6 mld-proxy interface [ *brief* ] [ *delta* ] [ *interfaceType interfaceSpecifier* ]  
              [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the interface on which you configured MLD proxy.

- Options**
- *brief*—Displays summarized information
  - *delta*—Displays baselined statistics
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 mld ssm-mapping

---

**Syntax**    show ipv6 mld ssm-mapping [ *groupAddress* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the SSM mapping state and the source list mapping associated with a multicast group address.

- Options**
- *groupAddress*—IP address of the group
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 mroute

<b>Syntax</b>	show ipv6 mroute [ <i>groupIpAddress</i> [ <i>sourceIpAddress</i> ] ] [ summary   count   oif-detail   statistics ] [ active [ <i>bandwidth</i> ] ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>active</b> keyword added in JunosE Release 8.1.0. <b>oif-detail</b> keyword added in JunosE Release 12.0.0.
<b>Description</b>	Displays information about all or specified multicast routes.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>groupIpAddress</i>—IPv6 address of a multicast group</li> <li>• <i>sourceIpAddress</i>—IPv6 address of a multicast source</li> <li>• summary—Displays brief information about the multicast routes</li> <li>• count—Displays the number of groups and sources</li> <li>• oif-detail—Displays details of the join interfaces corresponding to the mapped interface when OIF-mapping is configured</li> <li>• statistics—Displays statistics for packets received through multicast routes that the router has added to the multicast routing table and established on the appropriate line modules</li> <li>• active—Displays active mroutes</li> <li>• <i>bandwidth</i>—Admission bandwidth for active multicast routes that is greater than the specified bandwidth threshold; default is 4000 bps</li> <li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li> </ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Limiting Interface Admission Bandwidth</i> in the <i>JunosE Multicast Routing Configuration Guide</i></li> <li>• <i>Limiting Port Admission Bandwidth</i> in the <i>JunosE Multicast Routing Configuration Guide</i></li> </ul>

## show ipv6 multicast protocols

---

**Syntax**    show ipv6 multicast protocols [ *brief* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the multicast protocols enabled on the router.

- Options**
- *brief*—Displays a summary rather than detailed information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 multicast routing

---

**Syntax**    show ipv6 multicast routing [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the status of multicast routing on the router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 neighbors

---

**Syntax**    `show ipv6 neighbors [ vrf vrfName ] [ ipv6Address ] [ interfaceType interfaceSpecifier ]  
              [ static | dynamic | summary ] [ filter ]`

`show ipv6 neighbors summary [ vrf vrfName ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             **vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description**    Displays IPv6 neighbor discovery cache information for both static and dynamic entries.

- Options**
- *vrfName*—Name of the VRF
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - static—Displays information for only static entries
  - dynamic—Displays information for only dynamic entries
  - summary—Displays summary information
  - *ipv6Address*—Specific IPv6 address
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 ospf

---

**Syntax**    show ipv6 ospf [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays general information about OSPFv3 routing processes.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 ospf border-routers

---

**Syntax**    `show ipv6 ospf border-routers [ vrf vrfName ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays IPv6 routing table entries for area border and AS boundary routers.

- Options**
- *vrfName*—Name of the VRF
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ipv6 ospf database

**Syntax** `show ipv6 ospf database [ vrf vrfName ] [ database-summary | { router | intra-area-prefix | link | network | inter-area-net | inter-area-router | external | grace } [ advRouterId ] ] [ filter ]`

**Release Information** Command introduced before JunosE Release 7.1.0.  
**database-summary** keyword added in JunosE Release 7.3.0.  
**grace** keyword added in JunosE Release 8.1.0.

**Description** Displays an area-scoped link-state database for each area of which the router is a part, an interface-scoped link-state database for each interface, the external link-state database, the number of LSAs available in each category, and the number of LSAs that have reached the maximum age in each category. Specifying an LSA type, with or without identifying an advertising router, provides more detailed information for those LSAs.

- Options**
- *vrfName*—Name of the VRF
  - **database-summary**—Displays summary of the database
  - **router**—Displays V3 router link states
  - **intra-area-prefix**—Displays V3 intra-area-prefix link states
  - **link**—Displays V3 link local link states
  - **network**—Displays V3 network link states
  - **inter-area-net**—Displays V3 inter-area network link states
  - **inter-area-router**—Displays V3 inter-area AS link states
  - **external**—Displays V3 external link states
  - **grace**—Displays V3 grace link states
  - *advRouterId*—Advertising router ID
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ipv6 ospf internal-statistics

---

**Syntax**    show ipv6 ospf internal-statistics [ *delta* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays internal OSPFv3 statistics.

- Options**
- *delta*—Displays baselined information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 ospf interface

---

**Syntax**    show ipv6 ospf [ *areald* | *arealdInt* ] interface  
             [ *interfaceType interfaceSpecifier* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays a list of OSPFv3 interfaces.

- Options**
- *areald*—OSPF area ID in IP address format
  - *arealdInt*—OSPF area ID as a decimal value (0–4294967295)
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 ospf neighbors

---

**Syntax**    `show ipv6 ospf [ areald | arealdInt ] neighbors [ neighborAddress ]  
                  [ interfaceType interfaceSpecifier ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays a list of OSPFv3 neighbors.

- Options**
- *areald*—OSPF area ID in IP address format
  - *arealdInt*—OSPF area ID as a decimal value (0–4294967295)
  - *neighborAddress*—Router ID of a specified neighbor
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 ospf summary-prefix

---

**Syntax**    `show ipv6 ospf summary-prefix [ vrfName ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays summary prefixes configured to summarize externals.

- Options**
- *vrfName*—Name of the VRF
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 ospf traffic

---

**Syntax**    show ipv6 ospf traffic [ *delta* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays OSPFv3 packet statistics.

- Options**
- *delta*—Displays baselined information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 pim

---

**Syntax**    show ipv6 pim

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays general PIM router-level information.

**Mode**    Privileged Exec, User Exec

## show ipv6 pim bsr

---

**Syntax**    show ipv6 pim bsr [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays BSR information and the group prefixes for which the local router is a C-RP in a PIM sparse mode environment.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



---

## show ipv6 pim interface

---

**Syntax** show ipv6 pim interface  
{ summary | [ *interfaceType interfaceSpecifier* ] [ detail | count ] [ *filter* ] }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about each PIM IPv6 interface.

- Options**
- **summary**—Displays the number of configured, enabled, and disabled PIM sparse mode interfaces
  - ***interfaceType***—Interface type; see [Interface Types and Specifiers on page 5](#)
  - ***interfaceSpecifier***—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - **detail**—Displays detailed information for all PIM interfaces or for a specified PIM interface
  - **count**—Displays the number of incoming and outgoing PIM control packets
  - ***filter***—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ipv6 pim neighbor

---

**Syntax**    `show ipv6 pim neighbor [ interfaceType interfaceSpecifier ] [ detail ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about each PIM IPv6 neighbor that the router has discovered.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *detail*—Displays detailed information for all PIM neighbors or for a specified PIM neighbor
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 pim remote-neighbor

---

**Syntax**    show ipv6 pim remote-neighbor [ *ipv6Address* ] [ count ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about all PIM IPv6 remote neighbors or the specified IPv6 remote neighbor.

**Options**

- *ipv6Address*—IPv6 address of a remote neighbor
- count—Displays the number of remote neighbors
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show ipv6 pim rp

---

**Syntax**    `show ipv6 pim rp { groupAddress | mapping } [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about PIM IPv6 group-to-RP mappings.

- Options**
- *groupAddress*—IPv6 address of a group for which you want to view group-to-RP mappings
  - *mapping*—Displays all group-to-RP mappings that the router has recorded
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 pim rp-hash

---

**Syntax**    `show ipv6 pim rp-hash groupAddress [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays which RP an IPv6 multicast group is using.

- Options**
- *groupAddress*—IPv6 address of multicast group for which you want to view the RP
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## **show ipv6 pim sparse-mode sg-state**

---

**Syntax**    `show ipv6 pim sparse-mode sg-state`  
             `[ group groupAddress [ source sourceAddress ] | rp rpAddress ] [ count ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information for each SG entry that PIM sparse mode knows about.

- Options**
- *groupAddress*—IPv6 address of a multicast group
  - *sourceAddress*—IPv6 address of a multicast source
  - *rpAddress*—IPv6 address of an RP router
  - *count*—Displays the number of SG entries
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 pim sparse-mode unicast-route

---

**Syntax** show ipv6 pim sparse-mode unicast-route [ *routeAddress routeMask* | *ipv6Prefix* ]  
[ *count* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the IPv6 unicast routes that PIM sparse mode is using.

**Options**

- *routeAddress*—IPv6 address associated with a unicast route
- *routeMask*—Network mask associated with a unicast route
- *ipv6Prefix*—Prefix in the format *IPv6BaseAddress / length*; for example, 1::1/32
- *count*—Shows the number of unicast routes that PIM sparse mode is using
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ipv6 pim spt-threshold

---

**Syntax**    show ipv6 pim spt-threshold [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the threshold for switching to the shortest-path-tree at a PIM designated router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ipv6 prefix-list

---

**Syntax** show ipv6 prefix-list  
 [ *listName* [ seq *seqNum* | *ipv6Prefix* [ longer | first-match ] ] ] [ *filter* ]

To display summary or detailed information:

show ipv6 prefix-list { summary | detail } [ *listName* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about IPv6 prefix lists.

- Options**
- *listName*—Name of IPv6 prefix list
  - *seqNum*—Sequence number of prefix list entry
  - *ipv6Prefix*—Prefix of prefix list entry: in the format *IPv6baseaddress / length*; for example, 1::1/32
  - longer—Displays all entries for a prefix that are equal to or more specific than the specified prefix
  - first-match—Displays only an entry that matches the specified prefix
  - *filter*—See [Filtering show Commands on page 4](#)
  - summary—Displays summary information for all prefix lists or for a specified prefix list
  - detail—Displays detailed information for all prefix lists or for a specified prefix list

**Mode** Privileged Exec

## show ipv6 profile

---

**Syntax**    show ipv6 profile *profileName* [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the IPv6 profile configuration.

- Options**
- *profileName*—Name of the profile you want to display
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 protocols

---

**Syntax**    `show ipv6 protocols [ vrf vrfName ] [ summary ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description**    Displays detailed information about IPv6 protocols currently configured on the router.

**Options**

- *vrfName*—Name of the VRF
- **summary**—Displays only a list of currently configured protocols
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 redistribute

---

**Syntax**    `show ipv6 redistribute [ vrf vrfName ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description**    Displays configured IPv6 route redistribution policy.

**Options**

- *vrfName*—Name of the VRF
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 route

**Syntax** `show ipv6 route [ vrf vrfName ] [ ipv6Address [ detail ] | ipv6Prefix [ detail ] ] [ all ] [ protocol ] [ filter ]`

To display summary information:

`show ipv6 route summary [ vrf vrfName ] [ filter ]`

**Release Information** Command introduced before JunosE Release 7.1.0.  
**vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description** Displays current state of the IPv6 routing table.

- Options**
- *vrfName*—Name of the VRF
  - *ipv6Address*—IPv6 address
  - *ipv6Prefix*—Prefix of prefix list entry; in the format *IPv6baseaddress / length*; for example, 1::1/32
  - detail—Displays detailed information about the specific route
  - all—Displays routes from all sources to a prefix
  - *protocol*—One of the following protocols for which you want to display the best routes in the routing table; no routes are displayed if routes for the specified protocol are not present in the routing table
    - access—Displays the best access-server routes (BGP) in the routing table
    - access-internal—Displays the best access-internal routes in the routing table
    - bgp—Displays the best BGP routes in the routing table
    - bgp-tunnel—Displays the best BGP tunnel routes in the routing table
    - dvmrp—Displays the best DVMRP routes in the routing table
    - isis—Displays the best IS-IS routes in the routing table
    - ldp—Displays the best LDP tunnel routes in the routing table
    - local—Displays the best locally connected routes in the routing table
    - mbgp—Displays the best MBGP routes in the routing table
    - ospf—Displays the best OSPF routes owned by in the routing table
    - other—Displays the best internal control routes in the routing table
    - rip—Displays the best RIP routes in the routing table
    - rsvp—Displays the best RSVP tunnel routes in the routing table

- *static*—Displays the best static routes added by network management to the routing table
- *static-rpf*—Displays the best static RPF routes added by network management to the routing table
- *filter*—See [Filtering show Commands on page 4](#)
- *summary*—Displays summary counters for all routes in the IPv6 routing table

**Mode** Privileged Exec, User Exec

## show ipv6 routers

---

**Syntax**    `show ipv6 routers [ vrf vrfName ] [ interfaceType interfaceSpecifier ] [ ipv6Address ]`  
              `[ conflicts ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description**    Displays IPv6 router advertisement information received by the E Series router.

- Options**
- *vrfName*—Name of the VRF
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *ipv6Address*—IPv6 address
  - *conflicts*—Displays router advertisements that differ from the currently configured advertisements
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 rpf-route

---

**Syntax**    `show ipv6 rpf-route [ vrf vrfName ] [ ipv6Address [ detail ] | ipv6Prefix [ detail ] ]`  
              `[ all ] [ protocol ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description**    Displays IPv6 routes that the router can use to verify source addresses in multicast packets.

- Options**
- *vrfName*—Name of the VRF
  - *ipv6Address*—Specific IPv6 address to show
  - *ipv6Mask*—IPv6 mask of the specific address to show
  - detail—displays detailed information about the specified route
  - all—Displays routes from all sources to a prefix
  - *protocol*—One of the following protocols for which you want to display the best routes in the routing table; no routes are displayed if routes for the specified protocol are not present in the routing table
    - access—Displays the best access-server routes (BGP) in the routing table
    - access-internal—Displays the best access-internal routes in the routing table
    - bgp—Displays the best BGP routes in the routing table
    - bgp-tunnel—Displays the best BGP tunnel routes in the routing table
    - dvmrp—Displays the best DVMRP routes in the routing table
    - isis—Displays the best IS-IS routes in the routing table
    - ldp—Displays the best LDP tunnel routes in the routing table
    - local—Displays the best locally connected routes in the routing table
    - mbgp—Displays the best MBGP routes in the routing table
    - ospf—Displays the best OSPF routes owned by in the routing table
    - other—Displays the best internal control routes in the routing table
    - rip—Displays the best RIP routes in the routing table
    - rsvp—Displays the best RSVP tunnel routes in the routing table



- `static`—Displays the best static routes added by network management to the routing table
- `static-rpf`—Displays the best static RPF routes added by network management to the routing table
- `filter`—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ipv6 static

---

**Syntax**    `show ipv6 static [ vrf vrfName ] [ ipv6Prefix [ all ] ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description**    Displays general status information for static routes added by network management to the routing table.

- Options**
- *vrfName*—Name of the VRF
  - *ipv6Prefix*—Prefix in the format *IPv6baseaddress / length*; for example, 1::1/32
  - all—Displays all routes starting at the specified prefix
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 traffic

---

**Syntax**    `show ipv6 traffic [ vrf vrfName ] [ delta ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             **vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description**    Displays statistics about IPv6 traffic.

**Options**

- *vrfName*—Name of the VRF
- *delta*—Displays baselined statistics
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ipv6 tunnel-route

---

**Syntax** `show ipv6 tunnel-route [ vrf vrfName ] [ ipv6Address [ detail ] | ipv6Prefix [ detail ] ]`  
`[ all ] [ protocol ] [ filter ]`

**Release Information** Command introduced in JunosE Release 7.1.0.  
**vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description** Displays current state of the IPv6 tunnel routing table.

- Options**
- *vrfName*—Name of the VRF
  - *ipv6Address*—IPv6 address
  - *ipv6Prefix*—Prefix of prefix list entry; in the format *IPv6baseaddress / length*; for example, 1::1/32
  - detail—Displays detailed information about the specific route
  - all—Displays all routes in the IPv6 tunnel routing table inserted from all protocols, not just the best routes
  - *protocol*—The following protocols for which you want to display the best route or all routes in the tunnel routing table; no routes are displayed if routes for the specified protocol are not present in the tunnel routing table



**NOTE:** Other protocol options are available in the CLI, but they are not applicable to the tunnel routing table.

---

- bgp-tunnel—Displays the BGP tunnel routes in the tunnel routing table
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ipv6 udp statistics

---

**Syntax**    `show ipv6 udp statistics [ vrf vrfName ] [ delta ] [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                             **vrf** keyword and *vrfName* variable added in JunosE Release 7.2.0.

**Description**    Displays IPv6 UDP statistics.

**Options**

- *vrfName*—Name of the VRF
- *delta*—Displays baselined statistics
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show isis database

---

**Syntax** show isis database [ level-1 | level-2 | l1 | l2 | *lspid* | *hostname* | detail | verbose ]\*  
[ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
*hostname* variable added in JunosE Release 7.3.0.

**Description** Displays the IS-IS link-state database.

- Options**
- level-1—Displays the IS-IS link-state database for level 1
  - level-2—Displays the IS-IS link-state database for level 2
  - l1—Displays the IS-IS link-state database for level 1
  - l2—Displays the IS-IS link-state database for level 2
  - *lspid*—Link-state PDU identifier in the form xxxx.xxxx.xxxx.yy.zz; when specified, displays the contents of a single link-state PDU by its ID number
  - *hostname*—Displays the IS-IS link-state database for the specified hostname
  - detail—Additionally displays contents of each link-state PDU; if not specified, a summary display is provided
  - verbose—Additionally displays MPLS traffic engineering information
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show isis mpls adjacency-log

---

**Syntax**    show isis mpls [ traffic-eng ] adjacency-log [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays a log of the last 20 IS-IS adjacency changes.

- Options**
- traffic-eng—Specifies optional keyword for compatibility with non-E Series implementations
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show isis mpls advertisements

---

**Syntax**    show isis mpls [ traffic-eng ] advertisements [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the last record flooded from MPLS.

- Options**
- traffic-eng—Specifies optional keyword for compatibility with non-E Series implementations
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show isis mpls tunnel

---

**Syntax**    show isis mpls [ traffic-eng ] tunnel [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about tunnels used in the calculation of IS-IS next hops.

- Options**
- traffic-eng—Specifies optional keyword for compatibility with non-E Series implementations
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show isis nsf

---

**Syntax**    show isis nsf

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the configured and operational settings on the router for IS-IS graceful restart. Graceful restart is also known as nonstop forwarding (NSF).

**Mode**    Privileged Exec, User Exec

## show isis spf-log

---

**Syntax**    show isis spf-log [ detail ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays how often and why the router has run a full SPF calculation.

- Options**
- detail—Displays the time it takes to perform the route table update and the time it takes to leak the routes across ISIS levels
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show isis summary-addresses

---

**Syntax**    show isis summary-addresses [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays aggregate address information for IS-IS.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

---

## show isis topology

---

**Syntax** show isis topology [ [ level-1 | level-2 | l1 | l2 ]\* [ *nsap* ]  
[ level-1 | level-2 | l1 | l2 ]\* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the paths to all intermediate systems.

- Options**
- level-1—Displays paths to all level 1 routers in the area
  - level-2—Displays paths to all level 2 routers in the domain
  - l1—Displays paths to all level 1 routers in the area
  - l2—Displays paths to all level 2 routers in the domain
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - *nsap*—NSAP address
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show issu

---

**Syntax**    show issu [ *brief* | *detail* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 9.0.0.

**Description**    Displays the current status of unified ISSU operation.

- Options**
- *brief*—Displays hardware and software criteria required for unified ISSU to begin and whether criteria are met
  - *detail*—Displays detailed information about unified ISSU status and warnings in addition to criteria required for unified ISSU and whether criteria are met
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show l2c

---

**Syntax**    show l2c

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the ANCP configuration on the router.

**Mode**    Privileged Exec

## show l2c discovery-table

---

**Syntax**    show l2c discovery-table [ neighbor *neighborName* ] [ end-user-id *userIdString* ]  
              [ brief ]

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays information about ANCP discovery table entries.

- Options**
- *neighborName*—Name of the neighbor for which you want to view ANCP discovery table information
  - *userIdString*—ID of the neighbor for which you want to view ANCP discovery table information
  - *brief*—Displays limited information

**Mode**    Privileged Exec



## show l2c label

---

**Syntax**    show l2c label [ interface *interfaceType* *interfaceSpecifier* ]  
              [ neighbor-input | neighbor-output ] [ brief ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about known ANCP labels on the router.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - neighbor-input—Displays labels for input ports
  - neighbor-output—Displays labels for output ports
  - brief—Displays limited information

**Mode**    Privileged Exec

## show l2c neighbor

---

**Syntax** To display information about all ANCP neighbors:

```
show l2c neighbor [ name neighborName | id neighborIdMac ] [ brief ]
```

To display the number of active neighbors:

```
show l2c neighbor [ summary ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about known ANCP neighbors on the router and their configurations.

- Options**
- *neighborName*—Name of the neighbor for which you want to view ANCP information
  - *neighborIdMac*—ID of the neighbor for which you want to view ANCP information
  - *brief*—Displays limited information
  - *summary*—Displays the number of active neighbors

**Mode** Privileged Exec

## show l2c statistics

---

**Syntax**    show l2c statistics [ delta ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the ANCP statistics.

**Options**    • delta—Limits the display to events that occurred after the baseline

**Mode**    Privileged Exec

## show l2tp

---

**Syntax**    show l2tp [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the L2TP configuration on the router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

```
show l2tp destination summary [ filter ]
```

**Description** Displays information about selected L2TP destinations.

Mode	Privileged Exec
------	-----------------

## show l2tp destination lockout

---

**Syntax**    show l2tp destination lockout [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays information about the L2TP destinations that are currently unavailable because they are in the lockout state.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show l2tp destination profile

---

**Syntax**    show l2tp destination profile [ *profileName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays destination profile configuration.

- Options**
- *profileName*—Name of a profile
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show l2tp dial-out

---

**Syntax** show l2tp dial-out [ [ detail ] [ state *operState* ] | summary ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the chassis-wide configuration, operational state, and statistics for L2TP dial-out.

- Options**
- detail—Displays configuration, states, and statistics
  - *operState*—One of the following operational states:
    - inService
    - initIncomplete
    - restricted
  - summary—Displays aggregate counts for virtual routers, targets, and sessions in each of the possible operational and administrative states
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec



## show l2tp dial-out session

---

**Syntax** show l2tp dial-out session [ *triggerIpAddress* | allVirtualRouters ] [ detail ]  
[ state *operState* ] [ *filter* ]

To display summary information:

show l2tp dial-out session summary [ allVirtualRouters ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the status of L2TP dial-out sessions.

- Options**
- *triggerIpAddress*—Trigger IP address for the session that you want to display
  - allVirtualRouters—Displays dial-out information for all virtual routers
  - detail—Displays configuration, state, and statistics
  - *operState*—One of the following operational states:
    - authenticating
    - connecting
    - dormant
    - failed
    - inService
    - inhibited
    - pending
    - postInhibited
  - *filter*—See [Filtering show Commands on page 4](#)
  - summary—Displays aggregate counts for dial-out sessions in each of the possible operational and administrative states

**Mode** Privileged Exec

## show l2tp dial-out target

---

**Syntax**    show l2tp dial-out target [ *targetIpAddress targetIpAddressMask* | allVirtualRouters ]  
              [ detail ] [ state *operState* ] [ *filter* ]

To display summary information:

show l2tp dial-out target summary [ allVirtualRouters ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays configured dial-out targets within the current virtual router context.

- Options**
- *targetIpAddress*—Trigger IP address for the target that you want to display
  - *targetIpAddressMask*—Mask for the trigger IP address
  - allVirtualRouters—Displays dial-out information for all virtual routers
  - detail—Displays configuration, state, and statistics
  - *operState*—One of the following operational states:
    - down
    - inService
    - inhibited
  - *filter*—See [Filtering show Commands on page 4](#)
  - summary—Displays aggregate counts for targets in each of the possible operational and administrative states

**Mode**    Privileged Exec

---

## show l2tp dial-out virtual-router

---

**Syntax** show l2tp dial-out virtual-router [ allVirtualRouters ] [ detail ] [ state *operState* ]  
[ *filter* ]

To display summary information:

show l2tp dial-out virtual-router summary [ allVirtualRouters ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays dial-out state machine operational status and statistics within the current virtual router context.

- Options**
- allVirtualRouters—Displays dial-out information across all virtual routers
  - detail—Displays configuration, state, and statistics
  - *operState*—One of the following operational states:
    - down
    - inService
    - initFailed
    - initPending
  - *filter*—See [Filtering show Commands on page 4](#)
  - summary—Displays aggregate counts for dial-out state machines in each of the possible operational and administrative states

**Mode** Privileged Exec

## **show l2tp received-disconnect-cause-summary**

---

**Syntax**    show l2tp received-disconnect-cause-summary [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays aggregate summary statistics for all information received by an LAC from an LNS about the cause of an L2TP session disconnection. The LAC receives this information from the LNS by means of a PPP Disconnect Cause Code attribute value pair (AVP) included in an L2TP Call-Disconnect-Notify (CDN) message.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show l2tp session

---

**Syntax** `show l2tp session [ detail ] [ state { adminState | ifOperStatus } ]  
[ l2tpName | [ virtual-router vrName ] ip ipAddress [ l2tpNameNoDest ] ] [ filter ]`

To display summary information:

`show l2tp session summary [ filter ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays detailed information about selected L2TP sessions or summary information for all L2TP sessions.

- Options**
- *detail*—Provides complete information about the specified sessions
  - *state*—Restricts display to sessions in a specific state
  - *adminState*—Effective administrative state
  - *ifOperStatus*—Operational state
  - *l2tpName*—Session name
  - *vrName*—Name of the virtual router on which the session exists
  - *ipAddress*—IP address
  - *l2tpNameNoDest*—Name of the session
  - *filter*—See [Filtering show Commands on page 4](#)
  - *summary*—Displays the configured and operational status of all L2TP sessions

**Mode** Privileged Exec

## show l2tp switch-profile

---

**Syntax**    show l2tp switch-profile [ *profileName* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays the names of all L2TP tunnel switch profiles currently configured on the router, or displays detailed information about a particular L2TP tunnel switch profile.

- Options**
- *profileName*—Name of the tunnel switch profile; a string of up to 64 alphanumeric characters
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show l2tp tunnel

**Syntax** show l2tp tunnel [ detail ] [ state { *adminState* | *ifOperStatus* |  
failover-resync *failoverResyncMode* } ]  
[ *l2tpName* | [ virtual-router *vrName* ] ip *ipAddress* [ *l2tpNameNoDest* ] ] [ *filter* ]

To display summary information:

show l2tp tunnel summary [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**failover-resync** keyword and *failoverResyncMode* variable added in JunosE Release 9.0.0.

**Description** Displays detailed information about the configured and operational status of selected L2TP tunnels or summary information for all L2TP tunnels.

- Options**
- detail—Provides complete information about the specified sessions, including the L2TP host profile name
  - *adminState*—Displays information about tunnels only with the specified effective administrative state
    - enabled—Effective administrative state is disabled
    - disabled—Effective administrative state is enabled
    - drain—Effective administrative state is drain
  - *ifOperStatus*—Displays information about tunnels only with the specified operational state
    - up—Operational state is up
    - down—Operational state is down
    - lower-down—Operational state is lower down
    - not-present—Operational state is not-present
  - *failoverResyncMode*—Displays information about tunnels that use the specified failover resynchronization mode:
    - disable—Peer failover resynchronization is disabled
    - failover-protocol—Uses the L2TP failover protocol method
    - failover-protocol-fallback-to-silent-failover—Uses the L2TP failover protocol method; however, if the peer does not support this method, the silent failover method is used
    - not-configured—Uses the global failover method because peer failover resynchronization is not configured for L2TP host profiles and AAA domain map tunnels
    - silent-failover—Uses the L2TP silent failover method

- *l2tpName*—Tunnel name
- *vrName*—Name of the virtual router on which the tunnel exists
- *ipAddress*—IP address
- *l2tpNameNoDest*—Tunnel name
- *filter*—See [Filtering show Commands on page 4](#)
- *summary*—Displays the configured and operational status of all L2TP tunnels

**Mode** Privileged Exec



---

## show l2vpn connections

---

<b>Syntax</b>	show l2vpn connections [ details   instance <i>l2VpnName</i>   remote-site <i>siteId</i>   state down   state up ]* [ <i>filter</i> ]
<b>Release Information</b>	Command introduced in JunosE Release 8.1.0.
<b>Description</b>	Displays information about VPWS connections.
<b>Options</b>	<ul style="list-style-type: none"><li>• details—Displays detailed information about all VPWS connections</li><li>• <i>l2VpnName</i>—Name of the VPWS instance</li><li>• <i>siteId</i>—Numerical identifier for the site, in the range 1–65535</li><li>• state down—Displays information about nonoperational VPWS connections</li><li>• state up—Displays information about operational VPWS connections</li><li>• *—Indicates that one or more parameters can be repeated multiple times in a list in the command line; parameters can be entered in any order</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Monitoring L2VPN Connections</i> in the <i>JunosE BGP and MPLS Configuration Guide</i></li></ul>

## show l2vpn instance

---

**Syntax**    show l2vpn instance { all | *l2VpnName* } [ detail ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Displays all VPWS instances on the VR or information about the specified VPWS instance.

- Options**
- all—Displays information for all VPWS instances
  - *l2VpnName*—Name of the VPWS instance
  - detail—Displays detailed information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**    • *Monitoring L2VPN Interfaces* in the *JunosE BGP and MPLS Configuration Guide*

## show l2vpn interface

---

<b>Syntax</b>	show l2vpn interface [ instance <i>l2VpnName</i>   <i>interfaceType interfaceSpecifier</i> ] [ detail ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced in JunosE Release 8.1.0.
<b>Description</b>	Displays information about layer 2 interfaces configured to be members of VPWS L2VPNs in the current VR: all layer 2 interfaces in the specified VPWS instance, all layer 2 interfaces in all VPWS instances, or a specific layer 2 interface.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>l2VpnName</i>—Name of the VPWS instance</li> <li>• <i>interfaceType</i>—Interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li> <li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li> <li>• detail—Displays detailed information</li> <li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li> </ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Monitoring L2VPN Interfaces in the JunosE BGP and MPLS Configuration Guide</i></li> </ul>

## show last-reset

---

**Syntax**    show last-reset [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information describing the reason for the router's last reload, whether specified by the user or resulting from a router problem.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ldp

---

**Syntax**    show [ mpls ] ldp [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays the status of LDP.

**Options**

- mpls—Specifies optional keyword for compatibility with non-E Series implementations
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    User Exec

## show ldp binding

**Syntax** For MPLS binding information:

```
show [ mpls ] ldp { [ ip ] binding | binding ip }
[ destAddr [ maskLength | maskAddress ] [ longer-prefixes ] ]
[ interface interfaceType interfaceSpecifier ]
[ neighbor ipAddress ] [ generic | atm ] [ local | remote ]
[ label { atm vpi vci | explicit-null-label | implicit-null-label |
labelNumber [ labelRangeEnd ] } ]
[ brief ] [ filter ]
```

For layer 2 over MPLS binding information:

```
show [ mpls ] ldp binding layer2-vc [ vc-type vcType [ vc-id vcId ] ]
[ interface interfaceType interfaceSpecifier ]
[ neighbor ipAddress ] [ generic | atm ] [ local | remote ]
[ label { atm vpi vci | explicit-null-label | implicit-null-label |
labelNumber [ labelRangeEnd ] } ]
[ brief ] [ filter ]
```

**Release Information** Command introduced in JunosE Release 7.1.0.  
**explicit-null-label** keyword and optional **mpls** keyword added in JunosE Release 7.2.0.

**Description** Displays label bindings from the MPLS label information base. This command displays the same output as the [show mpls binding](#) command.

- Options**
- **mpls**—Specifies optional keyword for compatibility with non-E Series implementations
  - **ip**—Specifies optional keyword for compatibility with non-E Series implementations when placed before the **binding** keyword; when present (either before or after this keyword) displays label binding information only for IP prefixes
  - **destAddr**—Destination address for which you want information displayed; if not specified, displays all destinations
  - **maskLength**—Prefix length for the destination address
  - **maskAddress**—Address mask to be applied to the destination address
  - **longer-prefixes**—Displays information for prefixes that are equal to or more specific than the specified prefix
  - **interface**—Displays labels associated with the specified interface
    - **interfaceType**—Interface type; see [Interface Types and Specifiers on page 5](#)
    - **interfaceSpecifier**—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - **ipAddress**—Displays labels associated with the specified neighbor
  - **generic**—Displays only generic labels

- *atm*—Displays only ATM VPI/VCI labels
- *local*—Displays only local labels
- *remote*—Displays only remote labels
- *atm*—Displays the specified ATM VPI/VCI labels
  - *vpi*—Specifies ATM VPI that partially designates a label
  - *vci* —Specifies ATM VCI that partially designates a label
- *explicit-null-label*—Displays binding information for the explicit null label
- *implicit-null-label*—Displays binding information for the implicit null label
- *labelNumber*—Label for which binding information is displayed; number in the range 16–1048575
- *labelRangeEnd*—Label designating the high end of a range of labels for which binding information is specified; number in the range 16–1048575
- *brief*—Displays limited information
- *filter*—See [Filtering show Commands on page 4](#)
- *layer2-vc*—Displays binding information for layer 2 over MPLS
- *vcType*—One of the following types of virtual circuit over MPLS for which binding information is displayed: aal5-vc, ethernet, frame-relay, vlan
- *vcId*—Virtual circuit identifier, number in the range 1–4294967295

**Mode** Privileged Exec, User Exec

## show ldp graceful-restart

---

**Syntax**    show [ mpls ] ldp graceful-restart [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays the status of LDP graceful restart.

- Options**
- mpls—Specifies optional keyword for compatibility with non-E Series implementations
  - graceful-restart—Displays graceful restart information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    User Exec



## show ldp igp-sync

---

**Syntax**    show [ mpls ] ldp igp-sync [ interface *interfaceType* *interfaceSpecifier* ]

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Displays information about all interfaces that are synchronizing with LDP or about the specified interface that is synchronizing with LDP.

**Options**

- mpls—Specifies optional keyword for compatibility with non-E Series implementations
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)

**Mode**    Privileged Exec, User Exec

## show ldp interface

---

**Syntax** show [ mpls ] ldp interface [ *interfaceType interfaceSpecifier* | [ brief ] ] [ *filter* ]

**Release Information** Command introduced in JunosE Release 7.1.0.  
Optional **mpls** keyword added in JunosE Release 7.2.0.

**Description** Displays information about all LDP interfaces or a specific LDP interface.

- Options**
- **mpls**—Specifies optional keyword for compatibility with non-E Series implementations
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - **brief**—Displays only brief or summary information about the interface or all interfaces
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** User Exec

## show ldp neighbor

---

**Syntax** show [ mpls ] ldp neighbor [ *ipAddress* ] [ brief | graceful-restart | statistics ]  
[ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**graceful-restart** keyword added in JunosE Release 7.1.0.  
**mpls** keyword made optional in JunosE Release 7.2.0.  
**brief** and **statistics** keywords added in JunosE Release 8.1.0.

**Description** Displays information about LDP neighbors.

- Options**
- **mpls**—Specifies optional keyword for compatibility with non-E Series implementations
  - ***ipAddress***—IP address of the remote peer
  - **brief**—Displays only brief or summary information about the LDP neighbors
  - **graceful-restart**—Displays graceful restart information for the neighbor
  - **statistics**—Displays statistics about the sessions with each LDP neighbor
  - ***filter***—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show ldp profile

---

**Syntax**    show [ mpls ] ldp profile [ *profileName* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays a specific LDP profile, or all LDP profiles.

- Options**
- mpls—Specifies optional keyword for compatibility with non-E Series implementations
  - *profileName*—Name of the profile to be displayed
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ldp statistics

---

**Syntax**    show [ mpls ] ldp statistics [ *filter* ]

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Displays statistics information for LDP on the current virtual router.

**Options**

- mpls—Specifies optional keyword for compatibility with non-E Series implementations
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    User Exec

## show ldp targeted session

---

**Syntax**    show [ mpls ] ldp targeted session [ all | receive | send ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **mpls** keyword made optional in JunosE Release 7.2.0.

**Description**    Displays information about the LDP targeted sessions.

**Options**

- mpls—Specifies optional keyword for compatibility with non-E Series implementations
- all—Displays all targeted sessions
- receive—Displays only targeted receive sessions
- send—Displays only targeted send sessions

**Mode**    Privileged Exec, User Exec

---

## show ldp vpls

---

**Syntax** show [ mpls ] ldp vpls [ *vplsName* | neighbor *ipAddress* ] [ *filter* ]

**Release Information** Command introduced in JunosE Release 8.2.0.

**Description** Displays MPLS configuration information for a VPLS instance that uses LDP as the signaling protocol. You can display information for a specific VPLS instance, for a specific neighbor address, or for all VPLS instances configured on the router.

**Options**

- *mpls*—Specifies optional keyword for compatibility with non-E Series implementations
- *vplsName*—Name of a VPLS instance created with the bridge vpls transport-virtual-router command
- *ipAddress*—IP address of a neighbor in the VPLS domain
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation**

- *Monitoring LDP-Related Settings for VPLS* in the *JunosE BGP and MPLS Configuration Guide*

## show license

---

**Syntax**    show license [ *licenseType* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **service-management** keyword added in JunosE Release 7.2.0.

**Description**    Displays all licenses or a specified license.



.....  
**NOTE:** The **show license l2tp-session** command remains in the CLI even though a separate L2TP license is no longer required to enable support for 32,000 L2TP sessions on supported systems.  
.....

**Options**    • *licenseType*—bfd, b-ras, ipsec-tunnels, ipv6, l2tp-session, nat, or service-management  
              • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## **show license mobile-ip home-agent**

---

**Syntax**    show license mobile-ip home-agent

**Release Information**    Command introduced in JunosE Release 9.0.0.

**Description**    Displays the license key information for the Mobile IP home agent in the current virtual router.

**Mode**    Privileged Exec, User Exec

## show line console 0

---

**Syntax**    show line console 0 [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the speed configured for all future console sessions and the current console session.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show line vty

---

**Syntax**    show line vty *lineNumber* [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the configuration of vty lines.

- Options**
- *lineNumber*—Number of the vty line; only line numbers that you have configured are available for display
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show log configuration

---

**Syntax**    show log configuration [ category *eventCategory* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the logging configuration settings for a selected category.

- Options**
- *eventCategory*—Log category to be displayed; refer to the CLI online help for available options
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show log data

---

**Syntax** show log data [ nv-file | category *eventCategory* ]  
[ severity { *severityValue* | *severityNumber* } ] [ delta ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the system log.

- Options**
- *nv-file*—Displays the nv-file log
  - *eventCategory*—Log category to display; refer to the CLI online help for available options
  - *severity*—Minimum severity of the log messages displayed; described either by a descriptive term—*severityValue*—or by a corresponding number—*severityNumber*—in the range 0–7; the lower the number, the higher the priority:
    - *emergency or 0*—System unusable
    - *alert or 1*—Immediate action needed
    - *critical or 2*—Critical condition exists
    - *error or 3*—Error condition
    - *warning or 4*—Warning condition
    - *notice or 5*—Normal but significant condition
    - *info or 6*—Informational message
    - *debug or 7*—Debug message
  - *delta*—Limits the display to events that occurred after the baseline
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## **show memory-management protection**

---

**Syntax**    show memory-management protection [ detail ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays information about memory management protection of the router. You can use this command only in support mode and it is not user configurable.

**Options**

- detail—Displays detailed information about memory management protection
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show mirror log

---

<b>Syntax</b>	show mirror log [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays a log of failure messages for secure policy lists. By default, you must have CLI user access level 13 or above to use this command; an administrator can modify the user access level requirement.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring Failure Messages for Secure Policies</li><li>• Monitoring Information for Secure Policies</li><li>• Logging Packet Mirroring Information</li></ul>

## show mirror rules

---

**Syntax**    show mirror rules [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the policy rules that are configured for packet mirroring.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring Packet Mirroring Triggers



## show mirror subscribers

---

**Syntax**    show mirror subscribers [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about subscribers who have current packet mirroring sessions.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show mirror trap

---

**Syntax**    show mirror trap

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays the status (enabled or disabled) of SNMP secure traps.

**Mode**    Privileged Exec, User Exec

**Related Documentation**    • Monitoring SNMP Secure Packet Mirroring Traps

## show mpls

---

**Syntax**    show mpls [ detail ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **detail** keyword added in JunosE Release 7.1.0.

**Description**    Displays status and configuration information about MPLS on the router or on specific interfaces.

**Options**    • detail—Displays detailed information  
              • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show mpls binding

**Syntax** For MPLS binding information:

```
show mpls { [ ip ] binding | binding ip }
[ destAddr [ maskLength | maskAddress ] [ longer-prefixes ] ]
[ interface interfaceType interfaceSpecifier ]
[ neighbor ipAddress ] [ generic | atm ] [ local | remote ]
[ label { atm vpi vci | explicit-null-label | implicit-null-label |
labelNumber [ labelRangeEnd ] } ]
[ brief ] [ filter ]
```

For layer 2 over MPLS binding information:

```
show mpls binding layer2-vc [ vc-type vcType [ vc-id vcid ] ]
[ interface interfaceType interfaceSpecifier ]
[ neighbor ipAddress ] [ generic | atm ] [ local | remote ]
[ label { atm vpi vci | explicit-null-label | implicit-null-label |
labelNumber [ labelRangeEnd ] } ]
[ brief ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**explicit-null-label** keyword added in JunosE Release 7.2.0.

**Description** Displays label bindings from the MPLS label information base. This command displays the same output as the [show ldp binding](#) command.

- Options**
- **ip**—Specifies optional keyword for compatibility with non-E Series implementations when placed before the **binding** keyword; when present (either before or after this keyword) displays label binding information only for IP prefixes
  - **destAddr**—Destination address for which you want information displayed; if not specified, displays all destinations
  - **maskLength**—Prefix length for the destination address
  - **maskAddress**—Address mask to be applied to the destination address
  - **longer-prefixes**—Displays information for prefixes that are equal to or more specific than the specified prefix
  - **interface**—Displays labels associated with the specified interface
    - **interfaceType**—Interface type; see [Interface Types and Specifiers on page 5](#)
    - **interfaceSpecifier**—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - **ipAddress**—Displays labels associated with the specified neighbor
  - **generic**—Displays only generic labels
  - **atm**—Displays only ATM VPI/VCI labels

- *local*—Displays only local labels
- *remote*—Displays only remote labels
- *atm*—Displays the specified ATM VPI/VCI labels
  - *vpi*—Specifies ATM VPI that partially designates a label
  - *vci*—Specifies ATM VCI that partially designates a label
- *explicit-null-label*—Displays binding information for the explicit null label
- *implicit-null-label*—Displays binding information for the implicit null label
- *labelNumber*—Label for which binding information is displayed; number in the range 16–1048575
- *labelRangeEnd*—Label designating the high end of a range of labels for which binding information is specified; number in the range 16–1048575
- *brief*—Displays limited information
- *filter*—See [Filtering show Commands on page 4](#)
- *layer2-vc*—Displays binding information for layer 2 over MPLS
- *vcType*—One of the following types of virtual circuit over MPLS for which binding information is displayed: aal5-vcc, ethernet, frame-relay, vlan
- *vcId*—Virtual circuit identifier, number in the range 1–4294967295

**Mode** Privileged Exec, User Exec

## show mpls cross-connects atm

---

**Syntax**    show mpls cross-connects atm [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays all ATM passthrough connections between local subinterfaces.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**    • *Monitoring ATM Cross-Connects for Layer 2 Services over MPLS and Configuring Local ATM Cross-Connects with AAL5 Encapsulation* in the *JunosE BGP and MPLS Configuration Guide*

## show mpls explicit-paths

---

**Syntax** show { mpls | ip } explicit-paths  
[ detail | { name *pathName* | identifier *pathNum* } ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays all explicit paths or a particular explicit path.

- Options**
- mpls—Specifies keyword for JunosE MPLS implementation
  - ip—Specifies keyword for compatibility with non-E Series implementations
  - detail—Specifies a verbose display [not currently supported]
  - *pathName*—Name that identifies an explicit path
  - *pathNum*—Number that identifies an explicit path
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show mpls fast-reroute database

---

**Syntax** show mpls [ *traffic-eng* ] fast-reroute database [ *ipAddress* ]  
[ name *tunnelName* ] [ interface *interfaceType* *interfaceSpecifier* ]  
[ status { all | desired | establishing | established | active | unknown } ]  
[ count-only ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about the backup state of protected primary tunnels.

- Options**
- *traffic-eng*—Specifies optional keyword for compatibility with non-E Series implementations
  - *ipAddress*—Address of the endpoint for the primary LSP; meaningful only for the tunnel ingress node
  - *tunnelName*—Name of the primary LSP; meaningful only for the tunnel ingress node
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - status—Displays only entries with the specified status:
    - all—Displays all entries regardless of backup protection status
    - desired—Displays entries where backup protection is desired
    - establishing—Displays entries where backup protection is being established
    - established—Displays entries where backup protection is established
    - active—Displays entries where backup protection is active
    - unknown—Displays entries where status of backup protection is unknown
  - count-only—Displays count of entries matching command specification
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec



## show mpls forwarding

<b>Syntax</b>	<pre>show mpls forwarding [ interface <i>interfaceType</i> <i>interfaceSpecifier</i> ] [ bgp   ldp   rsvp-te ] [ label { atm <i>vpi vci</i>   <i>labelNumber</i> [ <i>labelRangeEnd</i> ] } ] [ brief   bindings   bindings delta   delta ] [ <i>filter</i> ]</pre>
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays the MPLS forwarding table.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <i>interfaceType</i>—Interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li> <li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li> <li>• bgp—Displays BGP-specific forwarding information</li> <li>• ldp—Displays LDP-specific forwarding information</li> <li>• rsvp-te—Displays RSVP-TE-specific forwarding information</li> <li>• atm—Displays information for the specified ATM VPI/VCI labels <ul style="list-style-type: none"> <li>• <i>vpi</i>—Specifies ATM VPI that partially designates a label</li> <li>• <i>vci</i>—Specifies ATM VCI that partially designates a label</li> </ul> </li> <li>• <i>labelNumber</i>—Label number, in the range 16–1048575</li> <li>• <i>labelRangeEnd</i>—Number, in the range 16–1048575, that specifies the high end of a range of labels</li> <li>• brief—Displays only brief or summary information about the tunnels</li> <li>• bindings—Displays protocol-specific label-to-FEC bindings</li> <li>• detail—Displays detailed information</li> <li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li> </ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Monitoring LDP-Related Settings for VPLS, Monitoring MPLS Forwarding for Layer 2 Services over MPLS, and Monitoring MPLS Forwarding State for L2VPN (VPWS) Instances in the JunosE BGP and MPLS Configuration Guide</i></li> </ul>

## show mpls interface

---

<b>Syntax</b>	<code>show mpls interface [ major   shim   minor ] [ summary   [ state not-up ] [ brief   detail ] [ <i>interfaceType interfaceSpecifier</i>   name <i>tunnelName</i> ] [ delta ] [ <i>filter</i> ]</code>
<b>Release Information</b>	Command introduced in JunosE Release 7.1.0. <b>minor</b> , <b>detail</b> , and <b>delta</b> keywords added in JunosE Release 7.1.0. <b>name</b> keyword and <i>tunnelName</i> variable added in JunosE Release 7.1.0. <b>summary</b> keyword added in JunosE Release 8.0.0.
<b>Description</b>	Displays status and configuration information about MPLS major interfaces, shim interfaces, minor interfaces or all MPLS interfaces (the default) on the router.
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>major</b>—Displays information about MPLS major interfaces</li><li>• <b>shim</b>—Displays information about shim interfaces used for layer 2 over MPLS</li><li>• <b>minor</b>—Displays information about MPLS minor interfaces</li><li>• <b>summary</b>—Displays summary information about MPLS interfaces</li><li>• <b>state not-up</b>—Displays information only about interfaces that are not operationally up</li><li>• <b>brief</b>—Displays limited interface information</li><li>• <b>detail</b>—Displays detailed information</li><li>• <i>interfaceType</i>—Interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li><li>• <i>interfaceSpecifier</i>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li><li>• <i>tunnelName</i>—Name of the tunnel represented by the MPLS minor interface</li><li>• <b>delta</b>—Displays baselined statistics</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Monitoring MPLS Layer 2 Interfaces for Layer 2 Services over MPLS in the JunosE BGP and MPLS Configuration Guide</i></li></ul>

## show mpls l2transport interface

<b>Syntax</b>	show mpls l2transport interface [ summary   [ <i>interfaceType</i> <i>interfaceSpecifier</i> ] [ brief   detail ] [ state not-up ] [ delta ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>summary</b> keyword added in JunosE Release 8.0.0.
<b>Description</b>	Displays status and configuration information about layer 2 services over MPLS (also known as Martini, or layer 2 transport) on the router or on specific interfaces.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>summary</b>—Displays summary information about layer 2 services over MPLS</li> <li>• <b><i>interfaceType</i></b>—Displays information only for the specified MPLS interface; if not specified, information for all interfaces is displayed</li> <li>• <b><i>interfaceSpecifier</i></b>—Particular interface; format varies according to interface type; see <a href="#">Interface Types and Specifiers on page 5</a></li> <li>• <b>brief</b>—Displays limited interface information</li> <li>• <b>detail</b>—Provides expanded information about layer 2 services, rather than a summary</li> <li>• <b>state not-up</b>—Displays information only about interfaces that are not up</li> <li>• <b>delta</b>—Displays baselined statistics</li> <li>• <b><i>filter</i></b>—See <a href="#">Filtering show Commands on page 4</a></li> </ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• See <i>Monitoring MPLS Layer 2 Interfaces for Layer 2 Services over MPLS</i> in <i>JunosE BGP and MPLS Configuration Guide</i></li> <li>• Monitoring the Policy Configuration of Layer 2 Services over MPLS</li> </ul>

## show mpls l2transport load-balancing-group

---

**Syntax**    show mpls l2transport load-balancing-group [ *groupNumber* ]  
              [ member-circuits [ *brief* ] ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about all configured load-balanced Martini circuits or a specified circuit.

- Options**
- *groupNumber*—Displays information for the specified group number
  - member-circuits—Displays member circuit information, including candidate ports, member circuits, and member subinterfaces
  - *brief*—Displays summary information for the member circuits
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show mpls minor-interface

---

**Syntax** show mpls minor-interface  
[ summary | [ state not-up ] [ brief | detail ] [ name *tunnelName* ] [ delta ] ]  
[ *filter* ]

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** Displays status and configuration for all minor interfaces in the current router context.

**Options**

- summary—Displays summary information about minor interfaces
- state not-up—Displays information only about interfaces that are not operationally up
- brief—Displays only brief or summary information about the minor interfaces
- detail—Provides expanded information about minor interfaces, rather than a summary
- *tunnelName*—Name of the tunnel represented by the MPLS minor interface
- delta—Displays baselined statistics
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show mpls next-hop

---

**Syntax**    show mpls next-hop [ *nextHopIndex* ] [ delta ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays MPLS next hops and any available next-hop statistics. Next hops can be pointed to by MPLS forwarding entries on an LSR, IP or IPv6 routes on an LER, and VPLS bridge groups.

**Options**

- *nextHopIndex*—Number identifying a next hop, in the range 1–1048575
- delta—Displays baselined statistics
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show mpls phb-id

---

**Syntax**    show mpls phb-id

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the PHB identifiers for MPLS.

**Mode**    Privileged Exec, User Exec

## show mpls profile

---

**Syntax**    show mpls { rsvp | tunnels } profile [ *profileName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays a specific RSVP-TE or tunnel profile, or all RSVP-TE or tunnel profiles.

- Options**
- rsvp—Specifies the RSVP-TE profile
  - tunnels—Specifies the tunnel profile
  - *profileName*—Name of the profile to be displayed
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show mpls rsvp

---

**Syntax**    show mpls rsvp { psb | rsb | sessions }

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays RSVP path control blocks, reservation state control blocks, or complete RSVP session information for the virtual router.

**Options**

- psb—Displays path state control blocks
- rsb—Displays reservation state control blocks
- sessions—Displays RSVP session information

**Mode**    Privileged Exec, User Exec

## show mpls rsvp authentication

---

**Syntax**    show mpls rsvp authentication [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about RSVP authentication.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show mpls rsvp bfd interfaces

---

**Syntax** show mpls rsvp bfd interfaces [ *filter* ]

**Release Information** Command introduced in JunosE Release 8.1.0.

**Description** Displays session information for RSVP-TE interfaces on which BFD is enabled, including minimum interval, minimum receive interval, minimum transmit interval, and multiplier values.

**Options** • *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show mpls rsvp counters

---

**Syntax**    show mpls rsvp counters [ interface *interfaceType* *interfaceSpecifier* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              *filter* variable added in JunosE Release 7.1.0.

**Description**    Displays various counters for RSVP interfaces.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## **show mpls rsvp hello graceful restart**

---

**Syntax**    show mpls rsvp hello graceful restart [ *filter* ]

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Displays status of RSVP-TE graceful restart.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show mpls rsvp hello instance

---

**Syntax**    show mpls rsvp hello instance [ *detail* ] [ *peerAddress* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Displays information from RSVP-TE hello adjacency instances, either in summary or detailed format.

- Options**
- *detail*—Displays the contents of a specific adjacency instance or of all adjacency instances
  - *peerAddress*—IP address of an RSVP-TE hello adjacency peer
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show mpls tunnels

**Syntax** show mpls [ traffic-eng ] tunnels [ name *tunnelName* ]  
 [ role { all | head | tail | middle | remote } | up | down ]  
 [ source-id *sourceAddress* [ *srcId* ] ] [ destination *destAddr* ]  
 [ interface *interfaceType* *interfaceSpecifier* ] [ brief | count-only ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays status and configuration for all tunnels or for a specific tunnel in the current router context.

- Options**
- traffic-eng—Specifies optional keyword for compatibility with non-E Series implementations
  - *tunnelName*—Name of tunnel or minor interface to be displayed
  - role—Displays tunnels in which the router has a specified role:
    - all—Displays all tunnels of which the router is a part
    - head—Displays tunnels where the router is the ingress router, or tunnel headend
    - tail—Displays tunnels where router is the egress router, or tunnel tailend (endpoint or destination of the tunnel)
    - middle—Displays tunnels where router is a transit router on the tunnel
    - remote—Displays tunnels where router is a transit router or egress router (tailend)
  - up—Displays tunnels that are up
  - down—Displays tunnels that are down
  - *sourceAddress*—Source address of tunnels to be displayed
  - *srcId*—Local ID associated with source address of tunnels to be displayed, an integer in the range 0–65535
  - *destAddress*—Destination address of tunnels to be displayed
  - interface—Displays information for the specified interface
    - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
    - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - brief—Displays only brief or summary information about the tunnels
  - count-only—Displays a count for entries that match the specified conditions
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show mroute port count

---

**Syntax**    show mroute port [ *portNumber* ] count [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the mroute port outgoing interface limits and counts.

- Options**
- *portNumber*—Port number (in the form *slot/port*) for which you want to display information; if you omit the port number, the router displays information for all ports belonging to the bridge group
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show multicast group limit

---

**Syntax**    show multicast group limit [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the number of IGMP or MLD groups associated with a port, and if configured, the maximum number of groups that a port can accept.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show nbma arp

---

**Syntax**    `show nbma arp [ interfaceType interfaceSpecifier ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays ARP table entries for NBMA interfaces.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)

**Mode**    Privileged Exec, User Exec

## show ntp associations

---

**Syntax**    show ntp associations [ detail ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about NTP servers.

- Options**
- detail—Provides expanded information about the ntp servers, rather than a summary
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ntp status

---

**Syntax**    show ntp status [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the NTP configuration and status for the router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show nvs

---

**Syntax**    `show nvs [ filter ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about NVS.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show parent-group

---

**Syntax**    show parent-group name *parentGroup* [ *brief* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Displays information about an external parent group. If you do not provide a parent group name, displays all parent groups.

**Options**

- *parentGroup*—Name of parent group
- *brief*—Displays information in a condensed format
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**

- Monitoring External Parent Groups

## show policy-list

---

**Syntax**    show policy-list [ *policyName* [ precedence *precValue* [ rule *ruleNumber* ] ] ]  
              [ brief ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about policy lists.

- Options**
- *policyName*—Name of policy
  - *precValue*—Precedence for policy rule
  - *ruleNumber*—Number of policy rule
  - brief—Displays information in a condensed format
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**    • Monitoring Policy Lists

## show policy-parameter

---

**Syntax**    show policy-parameter [ *parameterName* ] [ *brief* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Displays information about a policy parameter. If you do not provide a parameter name, displays all parameters.

**Options**

- *parameterName*—Name of parameter
- *brief*—Displays information in a condensed format
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**

- Monitoring Policy List Parameters



## show ppp interface

**Syntax** `show ppp interface [ interfaceType interfaceSpecifier ]`  
`[ full | { dataRestriction }* [ protocolRestriction ]* ] [ state stateRestriction ]`  
`[ delta ] [ filter ]`

For multilinked PPP interfaces, the following options are additionally available:

`show ppp interface mlppp [ interfaceSpecifier ] members [ filter ]`

`show ppp interface mlppp links [ filter ]`

**Release Information** Command introduced before JunosE Release 7.1.0.  
**eap** keyword added in JunosE Release 7.3.0.

**Description** Displays information about the PPP interface type that you specify.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *full*—Displays configuration, status, and statistics information for the interface, including information specific to LCP, IPCP, OSINLCP, MPLSCP, PAP, and CHAP; equivalent to specifying **config status statistics**
  - *dataRestriction*—One or more of the following keywords; you can repeat a keyword without effect
    - *config*—Displays information about the PPP interface configuration
    - *status*—Displays information about the PPP interface operational status
    - *statistics*—Displays information about the PPP interface statistics
  - *\**—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - *protocolRestriction*—One or more of the following keywords
    - *eap*—Displays EAP-specific information
    - *lcp*—Displays LCP-specific information
    - *ip*—Displays IPCP-specific information
    - *ipv6*—Displays IPv6CP-specific information
    - *osi*—Displays OSINLCP-specific information
    - *mpls*—Displays MPLSCP-specific information
    - *pap*—Displays PAP-specific information
    - *chap*—Displays CHAP-specific information

- *stateRestriction*—Information is displayed only for interfaces in one of the following specified states:
  - open—Interface is administratively enabled, meaning that the **no ppp shutdown** command is operational
  - closed—Interface is administratively disabled, meaning that the **ppp shutdown** command is operational
  - up—Interface on which the LCP has been negotiated
  - down—Interface on which the LCP has not been negotiated, the negotiations have failed, or the connection has been ended
  - lower-layer-down—Interface that is not up and is waiting for the lower layer to come up to initiate negotiations for LCP
  - not-present—Interface that is not present because the hardware is not available. When the interface is in this state, no detailed information is available.
  - passive—Interface with the operational status passive
  - tunneled—Tunneled PPP interfaces
  - no-ip—Interface on which IPCP is not configured
  - ip-open—Interface on which IPCP is administratively enabled, meaning that the **no ppp shutdown ip** command is operational
  - ip-closed—Interface on which IPCP is administratively disabled, meaning that the **ppp shutdown ip** command is operational
  - ip-up—Interface on which the IPCP has been negotiated
  - ip-down—Interface on which the IPCP has not been negotiated, the negotiations failed, or the connection has been ended
  - no-ipv6—Interface on which IPv6CP is not configured
  - ipv6-open—Interface on which IPv6CP is administratively enabled, meaning that the **no ppp shutdown ipv6** command is operational
  - ipv6-closed—Interface on which IPv6CP is administratively disabled, meaning that the **ppp shutdown ipv6** command is operational
  - ipv6-up—Interface on which the IPv6CP has been negotiated
  - ipv6-down—Interface on which the IPv6CP has not been negotiated, the negotiations failed, or the connection has been ended
  - no-osi—Interface on which OSINLCP is not configured
  - osi-open—Interface on which OSINLCP is administratively enabled, meaning that the **no ppp shutdown osi** command is operational

- **osi-closed**—Interface on which OSINLCP is administratively disabled, meaning that the **ppp shutdown osi** command is operational
- **osi-up**—Interface on which the OSINLCP has been negotiated
- **osi-down**—Interface on which the OSINLCP has not been negotiated, the negotiations failed, or the connection has been ended
- **no-mpls**—Interface on which MPLSCP is not configured
- **mpls-open**—Interface on which MPLSCP is administratively enabled, meaning that the **no ppp shutdown mpls** command is operational
- **mpls-closed**—Interface on which MPLSCP is administratively disabled, meaning that the **ppp shutdown mpls** command is operational
- **mpls-up**—Interface on which the MPLSCP has been negotiated
- **mpls-down**—Interface on which the MPLSCP has not been negotiated, the negotiations failed, or the connection has been ended
- **delta**—Displays baselined statistics
- **filter**—See [Filtering show Commands on page 4](#)
- **members**—Lists all MLPPP member links, or only those for a specified MLPPP bundle
- **links**—Lists all MLPPP encapsulated links, regardless of whether the links are members of an MLPPP bundle

**Mode** Privileged Exec, User Exec

## show ppp interface summary

---

**Syntax**    show ppp interface summary [ config | admin | oper ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays a summary of all nonmultilinked and multilinked PPP interfaces configured on the router.

**Options**

- config—Displays summary information about PPP configuration status
- admin—Displays summary information about PPP administration status
- oper—Displays summary information about PPP operational status
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show pppoe interface

---

**Syntax**    show pppoe interface [ *interfaceType interfaceSpecifier* ] [ delta ] [ *filter* ]  
               show pppoe interface [ full ] [ summary ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the PPPoE interface you specify. Use the **summary** keyword to display information for all configured PPPoE interfaces.

- Options**
- *interfaceType*—One of the following interface types listed in [Interface Types and Specifiers on page 5](#):
    - atm
    - fastEthernet
    - gigabitEthernet
    - lag
    - serial—PPPoE is not currently supported on serial interfaces
    - tenGigabitEthernet
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)
  - full—Displays configuration, status, and statistics information
  - summary—Displays administrative and operational status of all configured PPPoE interfaces

**Mode**    Privileged Exec, User Exec

## show pppoe interface lockout-time

---

**Syntax**    show pppoe interface [ *interfaceType interfaceSpecifier* ] lockout-time [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    In configurations with dynamic PPPoE subinterfaces over static PPPoE major interfaces, displays detailed information about the current encapsulation type lockout condition for each PPPoE client associated with the dynamic PPPoE subinterface column. The output of this command displays multiple entries for the same MAC Address, one for each interworking function (IWF) PPPoE session, if multiple IWF sessions contain the same MAC address.

- Options**
- *interfaceType*—One of the following interface types listed in [“Interface Types and Specifiers” on page 5](#):
    - atm
    - fastEthernet
    - gigabitEthernet
    - lag
    - serial—PPPoE is not currently supported on serial interfaces
    - tenGigabitEthernet
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show pppoe-service-name-table

---

**Syntax**    show pppoe-service-name-table { brief | name *tableName* } [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the contents of the specified PPPoE service name table. The command displays the table name, the name of each specific service name entry in the table, action (terminate or drop) associated with the service name tag, and the action configured for custom service name tags.

- Options**
- **brief**—Displays the names of all PPPoE service name tables configured on the router
  - **tableName**—Name of the PPPoE service name table; string of up to 32 alphanumeric characters
  - **filter**—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show pppoe subinterface

---

**Syntax**    show pppoe subinterface [ *interfaceType interfaceSpecifier* ] [ *delta* ] [ *filter* ]  
              show pppoe subinterface [ *full* ] [ *summary* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays all available data for a specific PPPoE subinterface. Use the **summary** keyword to display information for all configured PPPoE subinterfaces.

- Options**
- *interfaceType*—One of the following interface types listed in [Interface Types and Specifiers on page 5](#):
    - atm
    - fastEthernet
    - gigabitEthernet
    - lag
    - serial—PPPoE is not currently supported on serial interfaces
    - tenGigabitEthernet
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *delta*—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)
  - *full*—Displays configuration, status, and statistics information
  - *summary*—Displays administrative and operational status of all configured PPPoE subinterfaces

**Mode**    Privileged Exec, User Exec



## **show ppp peer-ip-address-optional**

---

**Syntax**    show ppp peer-ip-address-optional

**Release Information**    Command introduced in JunosE Release 11.2.0.

**Description**    Displays whether an IP address is required in a client request for an IPCP negotiation.

**Mode**    Global Configuration

## show privilege

---

**Syntax**    show privilege

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the privilege level of the current user.

**Mode**    Privileged Exec, User Exec

## show privilege group

---

**Syntax**    show privilege group *privilegeGroupName*

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Displays information for all privilege groups or for the specified privilege group.

**Options**    • *privilegeGroupName*—Name of the privilege group

**Mode**    Privileged Exec

## **show processes cpu**

---

**Syntax**    show processes [ *cpu* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays CPU resources used by system processes.

- Options**
- *cpu*—Displays CPU use; default display if you omit any keyword
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show processes memory

**Syntax** show processes memory [ detail ] [ *filter* ]

show processes memory [ slot { *slotNumber* | all } ] application [ *applicationName*  
[ virtual-router [ *virtualRouterName* [ :*vrfName* ] ] ] ] [ detail ] [ *filter* ]

show processes memory [ slot { *slotNumber* | all } ] virtual-router [ *virtualRouterName*  
[ :*vrfName* ] [ application [ *applicationName* ] ] ] [ detail ] [ *filter* ]

show processes memory slot { *slotNumber* | all } detail

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the amount of memory-related resources used by system processes. Because the router allocates memory to system processes in chunks, issuing this command performs a cleanup process to gather unused, available memory for reallocation.

- Options**
- detail—Displays detailed system memory listing
  - *filter*—See [Filtering show Commands on page 4](#)
  - slot *slotNumber*—Displays memory usage for just the controller in the specified slot
  - slot all—Displays memory usage for all slot controllers
  - application—Displays system memory usage on a per-application basis
  - *applicationName*—Name of the application for which you want to view system memory usage
  - virtual-router—Displays memory usage for all virtual routers on a per-router basis
  - virtual-router *virtualRouterName*—Displays memory usage for each data store associated with the specified router
  - *vrfName*—Name of the VRF (note the use of the colon before you specify a VRF name)

**Mode** Privileged Exec

## show profile

---

**Syntax** show profile name *profileName* [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about a specific IP profile, such as the available PPPoE profile information: PPPoE URL string, PPPoE MOTM string, or both. If neither exists, the fields do not appear in the display.

- Options**
- *profileName*—Name of the profile
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show profile brief

---

**Syntax**    show profile brief [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the names of all IP profiles.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show qos interface-hierarchy

---

**Syntax** To display the interface hierarchy for interfaces:

```
show qos interface-hierarchy interface interfaceType interfaceSpecifier [ atmVpi |  
s-vlanIdValue ] [ filter ]
```

To display the interface hierarchy for L2TP sessions:

```
show qos interface-hierarchy l2tp session sessionName [ filter ]
```

To display the interface hierarchy for tunnel-service interfaces:

```
show qos interface-hierarchy tunnel-server interfaceSpecifier [ filter ]
```

To display the interface hierarchy for an interface set:

```
show qos interface-hierarchy qos-interface-set interfaceSetName [ filter ]
```

To display the interface hierarchy for an interface superset:

```
show qos interface-hierarchy qos-interface-superset interfaceSupersetName [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
*atmVpi* and *s-vlanIdValue* variables added in JunosE Release 7.1.0.  
**qos-interface-set** keyword and *interfaceSetName* variable added in JunosE Release 9.2.0.  
**qos-interface-superset** keyword and *interfaceSupersetName* variable added in JunosE Release 9.2.0.

**Description** Displays information about the router's QoS interface hierarchy.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *atmVpi*—Virtual path identifier of this PVC; number in the range 0–255
  - *s-vlanIdValue*—S-VLAN ID number in the range 0–4095
  - *sessionName* —Name of the L2TP session
  - *interfaceSupersetName*—Name of the interface superset
  - *interfaceSetName*—Name of the interface set
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation**

- Monitoring the QoS Profiles Attached to an Interface



## show qos-interface-set

---

**Syntax**    show qos-interface-set [ *interfaceSetName* [ detail ] ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 9.2.0.

**Description**    Displays information about the configured QoS interface sets.

- Options**
- *interfaceSetName*—Name of the QoS interface set
  - detail—Displays information in expanded format
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**    • Monitoring the Configuration of QoS Interface Sets

## show qos-interface-superset

---

**Syntax**    show qos-interface-superset [ *interfaceSupersetName* [ detail ] ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 9.2.0.

**Description**    Displays information about the configured QoS interface supersets.

- Options**
- *interfaceSupersetName*—Name of the QoS interface superset
  - detail—Displays information in expanded format
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**

- Monitoring the Configuration of QoS Interface Supersets

## show qos-parameter

**Syntax** To display settings for a specific parameter instance with references:

```
show qos-parameter [ qosParameterInstanceName ] references [ brief | full ] [ filter ]
```

To display references globally:

```
show qos-parameter [ qosParameterInstanceName ] references global  
[ qosParameterInstanceName ] [ brief | full ] [ filter ]
```

To display references for interfaces:

```
show qos-parameter [ qosParameterInstanceName ] references [ interface interfaceType  
interfaceSpecifier [ atmVpi | s-vlanIdValue ] ] [ explicit ] [ brief | full ]  
[ filter ]
```

To display references for L2TP sessions:

```
show qos-parameter [ qosParameterInstanceName ] references lt2p session sessionName  
[ explicit ] [ filter ]
```

**Release Information** Command introduced in JunosE Release 7.1.0.  
full keyword added in JunosE Release 7.2.0.

**Description** Displays QoS parameter instance settings for QoS clients.

- Options**
- *qosParameterInstanceName*—Name of the parameter instance
  - *references*—Displays interfaces that reference this parameter instance
  - *global*—Displays information about global parameter instances
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *atmVpi*—Virtual path identifier of this PVC; number in the range 0–255
  - *s-vlanIdValue*—S-VLAN ID number in the range 0–4095
  - *sessionName* —Name of the L2TP session
  - *brief*—Displays information in a condensed format
  - *full*—Displays information in expanded format
  - *explicit*—Displays parameter instances only on the specified interface and not parameter instances stacked above the interface
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation**

- [Monitoring QoS Parameter Instances](#)

## show qos-parameter-define

---

<b>Syntax</b>	show qos-parameter-define [ <i>qosParameterDefinitionName</i> ] [ brief   references ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced in JunosE Release 7.1.0.
<b>Description</b>	Displays QoS parameter definition settings for QoS administrators.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>qosParameterDefinitionName</i>—Name of the parameter definition</li><li>• brief—Displays information in a condensed format</li><li>• references—Display references to this parameter definition</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring QoS Parameter Definitions</li></ul>

## show qos-port-type-profile

---

<b>Syntax</b>	show qos-port-type-profile [ <i>typeOfInterface</i> ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. lag option added in JunosE Release 8.1.0.
<b>Description</b>	Displays information about the QoS port-type profile for particular interface type.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>typeOfInterface</i>—One of the following interface types to be associated with the QoS port-type profile: atm, ethernet, lag, serial, server-port</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Monitoring the Configuration of QoS Port-Type Profiles</a></li></ul>

## show qos-profile

**Syntax** To display information about all QoS profiles or a specific QoS profile:

```
show qos-profile [ qosProfileName ] [ brief ] [ filter ]
```

To display information about the QoS profiles attached to a specific interface:

```
show qos-profile references interface interfaceType interfaceSpecifier  
[ atmVpi | s-vlanIdValue ] [ explicit ] [ brief ] [ filter ]
```

To display information about the QoS profiles attached to a specific L2TP session:

```
show qos-profile references lt2p session sessionName [ explicit ] [ brief ] [ filter ]
```

To display information about the QoS profiles attached to a specific tunnel-service interface:

```
show qos-profile references tunnel-server interfaceType [ explicit ] [ brief ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**references** keyword added in JunosE Release 7.1.0.

**Description** Displays information about QoS profiles configured on the router. Use the **references** keyword to display information about QoS profiles attached to an interface, L2TP session, or tunnel-service interface.

- Options**
- *qosProfileName*—Name of the QoS profile
  - *references*—Displays interface profiles that reference this profile
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *atmVpi*—Virtual path identifier of this PVC; number in the range 0–255
  - *s-vlanIdValue*—S-VLAN ID number in the range 0–4095
  - *sessionName* —Name of the L2TP session
  - *explicit*—Displays attachments for QoS profiles only on the specified interface and not QoS profiles stacked above the interface
  - *brief*—Displays information in a condensed format
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation**

- Monitoring the Configuration of QoS Profiles

## show qos queue-thresholds

---

<b>Syntax</b>	show qos queue-thresholds egress-slot <i>egressSlot</i> [ queue-profile [ <i>queueProfileName</i> ]   region [ <i>regionNumber</i> ] ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	<p>Displays the color-based thresholds for queues on each egress slot.</p> <p>Displaying queue thresholds by queue profile shows buffer memory information by queue profile, and, within that profile, shows the thresholds for each region.</p> <p>Displaying queue thresholds by region organizes the buffer memory information by queue region, and, within each region, shows the buffer allocations for each queue profile.</p>
<b>Options</b>	<ul style="list-style-type: none"><li>• queue-thresholds—Displays color-based thresholds for queues on an egress slot</li><li>• <i>egressSlot</i>—Displays color-based thresholds for an egress slot</li><li>• queue-profile—Displays thresholds for each region of the queue profile</li><li>• <i>queueProfileName</i>—Name of the queue profile</li><li>• region—Displays egress memory or buffer region oversubscription</li><li>• <i>regionNumber</i>—Number identifying the egress memory or buffer region on the line module</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring Queue Thresholds</li></ul>



## show qos scheduler-hierarchy

**Syntax** To display information about the scheduler hierarchy on a specified interface:

```
show qos scheduler-hierarchy interfaceType interfaceSpecifier
[ atmVpi | s-vlanIdValue ] [ explicit | level levelNumber ]
[ traffic-class-group { trafficClassGroupName | default } ] [ brief | full | summary ]
[ filter ]
```

To display information about the scheduler hierarchy on a specified tunnel-service interface:

```
show qos scheduler-hierarchy tunnel-server interfaceType [ explicit |
level levelNumber ] [ traffic-class-group { trafficClassGroupName | default } ] [ brief | full
| summary ] [ filter ]
```

To display information about the scheduler hierarchy on a specified L2TP session:

```
show qos scheduler-hierarchy lt2p session sessionName [ explicit | level levelNumber ]
[ traffic-class-group { trafficClassGroupName | default } ] [ brief | full | summary ] [ filter
]
```

To display information about the scheduler hierarchy for an interface set:

```
show qos scheduler-hierarchy qos-interface-set interfaceSetName [ full | brief | summary
] [ filter ]
```

To display information about the scheduler hierarchy for an interface superset:

```
show qos scheduler-hierarchy qos-interface-superset interfaceSupersetName [ full | brief
| summary ] [ filter ]
```

**Release Information** Command introduced in JunosE Release 7.1.0.

**qos-interface-set** keyword and *interfaceSetName* variable added in JunosE Release 9.2.0.

**qos-interface-superset** keyword and *interfaceSupersetName* variable added in JunosE Release 9.2.0.

**Description** Displays information about the scheduler hierarchy on a specified interface, L2TP session, or tunnel-service interface.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *atmVpi*—Virtual path identifier of this PVC; number in the range 0–255
  - *s-vlanIdValue*—S-VLAN ID number in the range 0–4095
  - *explicit*—Displays scheduler profiles for the specified interface rather than those stacked above the interface

- *levelNumber*—Number of scheduler levels above specified interface to report; 0 indicates the specified interface
- *trafficClassGroupName*—Name of the traffic-class group for which to display the scheduler hierarchy
- *sessionName* —Name of the L2TP session
- *interfaceSetName*—Name of the interface set
- *interfaceSupersetName*—Name of the interface superset
- *default*—Displays the scheduler hierarchy of the default traffic-class group
- *brief*—Displays information in condensed format
- *full*—Displays information in expanded format
- *summary*—Displays summary of scheduler profiles stacked above the specified interface
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation**

- [Monitoring the QoS Scheduler Hierarchy](#)

## show qos shared-shaper

**Syntax** To display information about shared shapers for a specified interface:

```
show qos shared-shaper interface interfaceType interfaceSpecifier
[ atmVpi | s-vlanIdValue ] [ summary ] [ explicit ] [ brief | full ] [ filter ]
```

To display information about shared shapers on an L2TP session:

```
show qos shared-shaper lt2p session sessionName
[ summary ] [ explicit ] [ brief | full ] [ filter ]
```

To display information about shared shapers on a tunnel-service interface:

```
show qos shared-shaper tunnel-server interfaceType
[ summary ] [ explicit ] [ brief | full ] [ filter ]
```

To display information about shared shapers associated with an interface set:

```
show qos shared-shaper qos-interface-set interfaceSetName [ summary ] [ explicit ] [
brief | full ] [ filter ]
```

To display information about shared shapers associated with an interface superset:

```
show qos shared-shaper qos-interface-superset
interfaceSupersetName [ summary ] [ explicit ] [ brief | full ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
*atmVpi* and *s-vlanIdValue* variables added in JunosE Release 7.1.0.  
**qos-interface-set** keyword and *interfaceSetName* variable added in JunosE Release 9.2.0.  
**qos-interface-superset** keyword and *interfaceSupersetName* variable added in JunosE Release 9.2.0.

**Description** Displays information about shared shapers for an interface, L2TP session, or tunnel-service interface.

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *atmVpi*—Virtual path identifier of this PVC; number in the range 0–255
  - *s-vlanIdValue*—S-VLAN ID number in the range 0–4095
  - *sessionName* —Name of the L2TP session
  - *interfaceSetName*—Name of the QoS interface set associated with the shared shaper
  - *interfaceSuperSetName*—Name of the QoS interface superset associated with the shared shaper
  - **summary**—Displays summary of shared shapers stacked above the specified interface

- **explicit**—Displays shared shapers for the specified interface rather than those stacked above the interface
- **brief**—Displays information in condensed format
- **full**—Displays information in expanded format
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation**

- [Monitoring Shared Shapers](#)

## show qos-shared-shaper-control

---

<b>Syntax</b>	show qos-shared-shaper-control
<b>Release Information</b>	Command introduced in JunosE Release 8.0.0.
<b>Description</b>	Displays information about the user-configurable variables for controlling the simple shared shaper algorithm.
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Monitoring Shared Shaper Algorithm Variables</a></li></ul>

## show queue-profile

---

**Syntax**    show queue-profile [ *queueProfileName* ] [ brief | references ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about queue profiles configured on the E Series router.

- Options**
- *queueProfileName*—Name of the queue profile
  - brief—Displays information in a condensed format
  - references—Displays QoS profiles that reference this profile
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**    • Monitoring Queue Profiles

## show radius acct-session-id-format

---

**Syntax**    show radius acct-session-id-format [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays RADIUS Acct-Session-Id format used for RADIUS attribute 44, Acct-Session-Id.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius algorithm

---

**Syntax**    show radius algorithm [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the RADIUS algorithm that the RADIUS servers use.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show radius attributes-ignored

---

**Syntax**    show radius attributes-ignored [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays whether the RADIUS server accepts or ignores RADIUS attributes in Access-Accept messages. See the **radius ignore** command.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius attributes-included

---

**Syntax**    show radius attributes-included [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the RADIUS attributes that are included in and excluded from Access-Request, Acct-Start, and Acct-Stop messages. You configure attribute inclusion using the **radius include** commands.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius calling-station-delimiter

---

**Syntax**    show radius calling-station-delimiter [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the delimiter used in RADIUS attribute 30, Calling-Station-Id, for the authenticated ATM PPP users.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius calling-station-format

---

**Syntax**    show radius calling-station-format [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the format of RADIUS attribute 31, Calling-Station-Id.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius connect-info-format

---

**Syntax**    show radius connect-info-format [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the format of RADIUS attribute 77, Connect-Info.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius dsl-port-type

---

**Syntax**    show radius dsl-port-type [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the DSL port type used in RADIUS attribute 61, NAS-Port-Type, for ATM users.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius ethernet-port-type

---

**Syntax**    show radius ethernet-port-type [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Display RADIUS attribute 61, NAS-Port-Type, for Ethernet interfaces.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## **show radius icr-partition-accounting**

---

**Syntax**    show radius icr-partition-accounting [ *filter* ]

**Release Information**    Command introduced in JunosE Release 10.3.0.

**Description**    Displays whether ICR partition accounting is enabled on the virtual router

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show radius nas-identifier

---

**Syntax**    show radius nas-identifier [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the RADIUS client's value for RADIUS attribute 32, NAS-Identifier.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius nas-port-format

---

**Syntax**    show radius nas-port-format [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the format used for RADIUS attribute 5, NAS-Port.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius nas-port-format extended

---

**Syntax**    show radius nas-port-format extended { atm | ethernet } [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays the format used for RADIUS attribute 5, NAS-Port, on the E120 router and the E320 router.

**Options**

- atm—Displays information about ATM interfaces
- ethernet—Displays information about Gigabit Ethernet and 10-Gigabit Ethernet interfaces
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius override

---

**Syntax**    show radius override [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the current override settings configured on the RADIUS client (LNS) for the NAS-IP-Address [4], NAS-Port-Id [87], Calling-Station-Id [31], and NAS-Identifier [32] RADIUS attributes. The nas-info field in the command output indicates the virtual router that generates the NAS-IP-Address and NAS-Identifier attributes for AAA broadcast accounting packets.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius per-profile-attr-list

---

**Syntax**    show radius per-profile-attr-list [ *brief* | *profileName* ]

**Release Information**    Command introduced in JunosE Release 12.1.0.

**Description**    Displays all the attributes configured in the RADIUS per-profile lists.

- Options**
- *brief*—Displays the RADIUS per-profile list
  - *profileName*—Name of the RADIUS per-profile list; string of up to 32 characters

**Mode**    Privileged Exec

## **show radius pppoe nas-port-format**

---

**Syntax**    show radius pppoe nas-port-format [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the configuration of the NAS-Port-Format for PPPoE subscribers.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius relay

---

**Syntax** show radius relay [ authentication | accounting ]  
{ servers | statistics [ *ipAddress* ] [ delta ] } [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about RADIUS relay authentication and accounting servers.

- Options**
- authentication—Displays authentication information only
  - accounting—Displays accounting information only
  - servers—Displays a list of authentication and/or accounting servers
  - statistics—Displays authentication and/or accounting statistics
  - *ipAddress*—Address of a RADIUS relay client for which statistics are displayed
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## show radius relay udp-checksum

---

**Syntax**    show radius relay udp-checksum [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about RADIUS relay UDP checksums.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show radius remote-circuit-id-delimiter

---

**Syntax**    show radius remote-circuit-id-delimiter

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the delimiter character that the router uses to set off components in the PPPoE remote circuit ID value sent from a DSLAM and captured on the router. The default delimiter character is #.

**Mode**    Privileged Exec

## show radius remote-circuit-id-format

---

**Syntax**    show radius remote-circuit-id-format

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the format of the PPPoE remote circuit ID value sent from a DSLAM and captured on the router.

If the PPPoE remote circuit ID value is configured to include any or all of the agent-circuit-id, agent-remote-id, and nas-identifier components, the display lists the components included and the order in which they appear.

If the PPPoE remote circuit ID value is configured to use the format for the **dsl-forum-1** keyword of the [radius remote-circuit-id-format](#) command, the display indicates that this format is in effect.

**Mode**    Privileged Exec

## show radius rollover-on-reject

---

**Syntax**    show radius rollover-on-reject [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the configuration of the rollover-on-reject feature.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius servers

---

**Syntax**    show radius [ *serverType* ] servers [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **pre-authentication** keyword added in JunosE Release 8.1.0.

**Description**    Displays information about the RADIUS servers configured on the router.

**Options**    • *serverType*—One of the following RADIUS server types:

- authentication—Displays authentication information only
- accounting—Displays accounting information only
- dynamic-request—Displays dynamic-request information only
- pre-authentication—Displays preauthentication information only

• *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring RADIUS Dynamic-Request Server Information

## show radius statistics

---

<b>Syntax</b>	show radius [ <i>serverType</i> ] statistics [ delta ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>pre-authentication</b> keyword added in JunosE Release 8.1.0.
<b>Description</b>	Displays statistics for the RADIUS servers configured on the router.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>serverType</i>—One of the following RADIUS server types:<ul style="list-style-type: none"><li>• authentication—Displays authentication statistics only</li><li>• accounting—Displays accounting statistics only</li><li>• dynamic-request—Displays dynamic-request statistics only</li><li>• pre-authentication—Displays preauthentication statistics only</li></ul></li><li>• delta—Displays baselined statistics</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring RADIUS Dynamic-Request Server Information</li></ul>

## show radius trap

---

**Syntax**    show radius trap [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the configuration of RADIUS SNMP traps.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius tunnel-accounting

---

**Syntax**    show radius tunnel-accounting [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about RADIUS accounting for L2TP tunnels.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show radius udp-checksum

---

**Syntax**    show radius udp-checksum [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about UDP checksums.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## **show radius update-source-addr**

---

**Syntax**    show radius update-source-addr [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the IP source address of the RADIUS client.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## **show radius vlan nas-port-format**

---

**Syntax**    show radius vlan nas-port-format [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays whether the S-VLAN ID is included in RADIUS attribute 5, NAS-Port.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show rate-limit-profile

---

**Syntax**    show rate-limit-profile [ *rateLimitProfileName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about rate-limit profiles.

- Options**
- *rateLimitProfileName*—Name of a rate-limit profile
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**

- [Monitoring Rate-Limit Profiles](#)

## show reboot-history

---

**Syntax** show reboot-history [ *fileName.nty* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about the reboot history of the router.

- Options**
- *fileName*—Name of a history file to display; if not specified, displays the current reboot.nty file
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show redundancy

---

**Syntax**    show redundancy [ brief | detail ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the supported redundancy modes as well as other status relating to high availability. In particular, the output indicates any conditions that are preventing the operational mode from being high availability.

- Options**
- **brief**—Displays summary redundancy information for line modules, SRP modules, or both
  - **detail**—Displays detailed information for line modules, SRP modules, or both
  - ***filter***—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show redundancy clients

---

**Syntax** show redundancy clients [ all | supported | unsafe | unsupported ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays high availability clients and their various levels of high availability support.

- Options**
- all—Displays all clients registered with high availability
  - supported—Displays only clients that are supported by high availability
  - unsafe—Displays only clients with an unsafe high availability state
  - unsupported—Displays only clients that are not supported by high availability.
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

---

## show redundancy history

---

**Syntax** show redundancy history [ srp ] [ line-card [ slot *slotNum* ] ] [ detail ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**line-card** and **slot** keywords and *slotNum* variable added in JunosE Release 11.3.0.

**Description** Displays information about dates, times, and the number of occurrences for starts and switchovers for an SRP module and for a line module installed in a particular slot. If you enter this command without the **slot** keyword, redundancy details for all line modules on a router are displayed.

- Options**
- **srp**—Displays history information specific to the SRP modules
  - **line-card**—Displays the configuration for line module redundancy
  - **slotNum**—Number of the slot in which the line module resides in the router; for the E120 router, a number in the range 0–5; for the E320 router, a number in the range 0–5 or 11–16
  - **detail**—Displays detailed history information
  - **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## show redundancy line-card

---

**Syntax**    show redundancy line-card [ slot *slotNum* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **slot** keyword and *slotNum* variable added in JunosE Release 11.3.0.

**Description**    Displays redundancy information specific to line modules, including supported redundancy modes and high availability status for a line module installed in a particular slot. If you enter this command without the **slot** keyword, redundancy details for all line modules on a router are displayed.

**Options**

- *slotNum*—Number of the slot in which the line module resides in the router; for the E120 router, a number in the range 0–5; for the E320 router, a number in the range 0–5 or 11–16
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec



## show redundancy srp

---

**Syntax**    show redundancy srp [ *brief* | *detail* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays redundancy information specific to SRP modules.

- Options**
- *brief*—Displays summary redundancy information for SRP modules
  - *detail*—Displays detailed information for SRP modules
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## **show redundancy switchover-history**

---

**Syntax**    show redundancy switchover-history [ *srp* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the high availability switchover history for the router.

- Options**
- *srp*—Displays history information specific to the SRP modules
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show reload

---

**Syntax**    show reload [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the reload status on the router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show resource

---

**Syntax** show resource [ [ if-type { atm-active-sub-if | atm-sub-if | atm-vc | ip | ppp-link }  
[ system | slot *slot* ] ] ] [ threshold [ trap [ status ] ] ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays statistical information about resources and their current threshold configurations.

- Options**
- if-type—Indicates interface type; see [“Interface Types and Specifiers” on page 5](#)
  - atm-active-sub-if—Active ATM subinterfaces
  - atm-sub-if—Both active and inactive ATM subinterfaces
  - atm-vc—ATM virtual circuits
  - ip—IP interfaces
  - ppp-link—PPP link interfaces
  - system—All slots on the system
  - *slot*—Number of the chassis slot in the range 0–2 (ERX310 model), 0–6 (ERX7xx models), and 0–13 (ERX14xx models)
  - threshold—Displays threshold information (optional keyword when used alone)
  - trap—Displays threshold trap status
  - status—Displays threshold trap status (optional keyword)

**Mode** Privileged Exec

## show route-map

---

**Syntax**    show route-map [ *listName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays all the route maps or the route map you specify. The default is all route maps.

- Options**
- *listName*—Name of a route map
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show rtr application

---

**Syntax**    show rtr application [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays RTR application information.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show rtr collection-statistics

---

**Syntax**    show rtr collection-statistics [ *rtrIndex* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays RTR collection information.

- Options**
- *rtrIndex*—Number of the operation
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show rtr configuration

---

**Syntax**    show rtr configuration [ *rtrIndex* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the configuration for all RTR entries or for a specified entry.

- Options**
- *rtrIndex*—Number of the operation
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show rtr history

---

**Syntax**    show rtr history [ *rtrIndex* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the history collected for all RTR entries or for a specified entry.

- Options**
- *rtrIndex*—Number of the operation
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show rtr hops

---

**Syntax**    show rtr hops [ *rtrIndex* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information discovered on each of the hops.

- Options**
- *rtrIndex*—Number of the operation
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show rtr operational-state

---

**Syntax**    show rtr operational-state [ *rtrIndex* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the operational state for all RTR entries or for a specified entry.

- Options**
- *rtrIndex*—Number of the operation
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show running-configuration

---

**Syntax** show running-configuration [ interface *interfaceType* *interfaceSpecifier* ] |  
[ category *categoryName* [ *categoryName* ]\* ] [ virtual-router *routerName* ]  
[ [exclude-category interface *interfaceType* ]\* ] [ include-defaults ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays the configuration currently running on the router, a specified virtual router, a specified interface, or a specified category of router settings. Available only if the router is in Manual Commit mode (configuration changes affect only the current system configuration).

- Options**
- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *categoryName*—Name of the category or subcategory of router settings; first *categoryName* variable in the syntax represents the category; repeated *categoryName* variables represent subcategories of the category
  - *routerName*—Name of the virtual router
  - exclude-category—Excludes information associated with a particular type of interface
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
  - include-defaults—Includes commands that set default values for various parameters
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## show schedule macro

---

**Syntax**    show schedule macro [ *fileName* [ *macroName* ] ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 9.3.0.

**Description**    Displays information about the scheduled macros configured on the E Series router.

- Options**
- *fileName*—Name of the file
  - *macroName*—Name of the macro (.mac)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**    • Scheduling Macros

## show scheduler-profile

---

**Syntax** show scheduler-profile [ *schedulerProfileName* ] [ brief | references ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays information about scheduler profiles configured on the E Series router.

- Options**
- *schedulerProfileName*—Name of the scheduler profile
  - brief—Displays information in a condensed format
  - references—Displays QoS profiles that reference this profile
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

**Related Documentation**

- [Monitoring the Configuration of Scheduler Profiles](#)

## show secrets

---

**Syntax**    show secrets [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays passwords and secrets.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show secure classifier-list

---

<b>Syntax</b>	show secure classifier-list [ <i>classifierName</i> [ <i>classifierNumber</i> ] ] [ brief   detailed ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced in JunosE Release 8.0.0.
<b>Description</b>	Displays information about secure classifier lists.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>classifierName</i>—Name of the secure classifier list</li><li>• <i>classifierNumber</i>—Number of the classifier list</li><li>• brief—Displays information in a condensed, summary format</li><li>• detailed—Provides a detailed description of the trace, rather than a summary</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring Secure CLACL Configurations</li></ul>



## show secure policy-list

---

**Syntax**    show secure policy-list [ name *policyName* ] [ brief ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the secure policy lists that are configured for packet mirroring.

- Options**
- *policyName*—Name of the secure policy-list
  - *brief*—Displays information in a condensed format
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**    • Monitoring Secure Policy Lists

## **show service config-monitor-periodicity**

---

**Syntax**    show service config-monitor-periodicity

**Release Information**    Command introduced in JunosE Release 9.3.0.

**Description**    Displays the time interval that the monitoring task detects corruption of a running configuration on both the primary and the standby SRP.

**Mode**    Privileged Exec

## show service-management owner-session

---

**Syntax** show service-management owner-session { *brief* | *subscriberId* | *ownerName* *ownerId* [ *service-session* *serviceName* ] } [ *filter* ]

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Displays subscriber session information based on the session owner.

- Options**
- *brief*—Displays limited information about the owner sessions
  - *subscriberId*—ID of the subscriber
  - *ownerName*—Name of the owner for the owner session; AAA for RADIUS-based subscribers
  - *ownerId*—Unique ID of the owner for the owner session; Acct-Session-ID for RADIUS-based subscribers
  - *serviceName*—Name of the service session used for the owner session
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## **show service-management service-definition**

---

**Syntax**    show service-management service-definition { *fileName*.mac | brief } [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays information for all service definitions or for the specified service definition.

- Options**
- *fileName*—Name of the service definition macro file
  - brief—Displays limited information about the service definitions
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show service-management service-session-profile

---

**Syntax**    show service-management service-session-profile { *profileName* | brief } [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays information for user sessions.

- Options**
- *profileName*—Name of the service session profile
  - brief—Displays limited information about the user sessions
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show service-management subscriber-session

---

**Syntax** show service-management subscriber-session { *brief* | *subscriberId* | *subscriberName* [ *interface* *interfaceType* *interfaceSpecifier* [ *service-session* *serviceName* ] ] } [ *filter* ]

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Displays information for subscriber sessions.

- Options**
- *brief*—Displays limited information about the user sessions
  - *subscriberId*—ID of the subscriber
  - *subscriberName*—Name of the subscriber
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *serviceName*—Name of the service session used for the subscriber session
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## **show service-management summary**

---

**Syntax**    show service-management summary [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays summary information for all subscriber and service sessions.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show snmp

---

**Syntax**    show snmp [ delta ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the status of communications between the SNMP agent and the SNMP manager.

**Options**

- delta—Displays baselined statistics
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show snmp access

---

**Syntax**    show snmp access [ storage ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **storage** keyword added in JunosE Release 7.2.0.

**Description**    Displays information about the groups you configured.

**Options**    • storage—Displays SNMP storage information  
              • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show snmp agent

---

**Syntax**    show snmp agent [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the SNMP MIB agent.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show snmp community

---

**Syntax**    show snmp community [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about configured communities.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show snmp group

---

**Syntax**    show snmp group [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays the list of available groups (dynamic and static). Detailed information is available through the [show snmp access](#) command.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show snmp interfaces

---

**Syntax**    show snmp interfaces [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the configuration of the SNMP interface tables.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show snmp management-event

---

**Syntax** show snmp management-event [ events | resource | triggers | statistics [ error | event ] [ trigger *triggerOwner triggerName* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Displays statistical SNMP event information for event table entries, router resources, and trigger table entries.

- Options**
- events—Displays event table entries
  - resource—Displays resource information
  - triggers—Displays trigger table entries
  - statistics—Displays statistical information
  - error—Displays error statistics
  - event—Displays event statistics
  - *triggerOwner*—Owner of trigger for which statistics are displayed; string of up to 32 alphanumeric characters
  - *triggerName*—Name of trigger for which statistics are displayed; string of up to 32 alphanumeric characters
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## show snmp notificationLog

---

**Syntax**    show snmp notificationLog [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the configuration of the SNMP notification log.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show snmp secure-log

---

**Syntax**    show snmp secure-log [ *filter* ]

**Release Information**    Command introduced in JunosE Release 8.0.0.

**Description**    Displays the contents of the SNMP secure audit log.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring SNMP Secure Audit Logs



## show snmp trap

---

**Syntax**    show snmp trap [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about configured traps and trap destinations.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

**Related Documentation**    • Monitoring SNMP Secure Packet Mirroring Traps

## show snmp trap statistics

---

**Syntax**    show snmp trap statistics [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays statistics on SNMP traps sent and received on the router.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show snmp user

---

**Syntax**    show snmp user [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about users.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show snmp view

---

**Syntax**    show snmp view [ storage ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about the views you created.

- Options**
- storage—Displays SNMP storage information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show socket statistics

---

**Syntax**    show socket statistics [ detailed ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays BSD socket-emulation statistics.

- Options**
- detailed—Displays detailed statistics for each TCP socket
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ssc info

---

**Syntax**    show ssc info [ *brief* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about SRC (formerly SDX or SSC) servers and SRC client (formerly SSCC) statistics.

- Options**
- *brief*—Displays abbreviated SRC client and server information
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show ssc option

---

**Syntax**    show ssc option

**Release Information**    Command introduced in JunosE Release 10.2.0.

**Description**    Displays information about SRC client options for the virtual router.

**Mode**    Privileged Exec, User Exec

## show sssc statistics

---

**Syntax**    show sssc statistics [ *delta* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Displays statistics about SRC (formerly SDX or SSC) servers and SRC client (formerly SSSC) statistics.

**Options**

- *delta*—Displays baselined statistics
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show ssc version

---

**Syntax**    show ssc version [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the SRC client (formerly SSCC) version number.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show statistics-profile

---

**Syntax**    show statistics-profile [ *statisticsProfileName* ] [ brief | references ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about statistics profiles configured on the E Series router.

- Options**
- *statisticsProfileName*—Name of the statistics profile
  - brief—Displays information in a condensed format
  - references—Displays QoS profiles that reference this profile
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**

- Monitoring the Configuration of Statistics Profiles

## show statistics tacacs

---

**Syntax**    show statistics tacacs [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays TACACS+ server or TACACS+ statistics information.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show subscriber-policy

---

**Syntax**    show subscriber-policy [ *subscriberPolicyName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the set of forwarding (permit) and filtering (deny) rules for all subscriber policies configured on the router, or for a specified subscriber policy. If you omit the policy name, the router displays information about the default subscriber (client) policy, the default trunk (server) policy, and any nondefault subscriber policies that are configured for a subscriber interface associated with a bridge group or VPLS instance.

- Options**
- *subscriberPolicyName*—Name of the subscriber policy specified with the [subscriber-policy](#) command
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**    • *Monitoring Subscriber Policy Rules* in the *JunosE BGP and MPLS Configuration Guide*

## show subscribers

**Syntax** To display detailed information:

```
show subscribers [ ipv6 [ ipv6Prefix ] ]
[ domain domainName | icr-partition icrPartitionLocationId |
interface { atm | ethernet | lag } interfaceSpecifier |
port interfaceSpecifier | slot slotNumber | username userName |
virtual-router vrName ] [ filter ]
```

To display summary information:

```
show subscribers summary [ domain | icr-partition | interface | port | slot | virtual-router
| lag ] [ filter ]
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**interface**, **atm**, and **ethernet** keywords added in JunosE Release 7.3.0.  
**slot** keyword and *slotNumber* variable added in JunosE Release 7.3.0.  
**icr-partition** keyword and *icrPartitionLocationId* variable added in JunosE Release 10.3.0.  
**lag** keyword added to the **show subscribers** command in JunosE Release 11.0.0.  
**lag** keyword added to the **show subscribers summary** command in JunosE Release 12.3.0.

**Description** Displays the active subscribers on your router.

- Options**
- **ipv6**—Displays IPv6 subscribers for the domain
  - *ipv6Prefix*—Prefix that defines the IPv6 network that you want to filter
  - *userName*—Username of active subscriber
  - **domain**—Displays active subscribers for the domain
  - *domainName*—Domain name matching usernames of active subscribers
  - **icr-partition**—Displays active subscribers for the ICR partition
  - *icrPartitionLocationId*—A unique identifier for each ICR partition on a chassis. Note that this ID different from the partition ID, which is configured using the **ip vrrp vrid icr-partition partitionId** command. The partition location ID that you specify here is a combination of the interface within the chassis on which the ICR partition is configured and the VRRP ID, which is system-defined and nonconfigurable.
  - **interface**—Displays active subscribers for the specified interface: **atm**, **ethernet**, or **lag**. In the **summary** version, displays active subscribers for all ATM, Ethernet, and LAG interfaces
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - **port**—Displays active subscribers for the port
  - **slot**—Displays active subscribers for the slot

- *slotNumber*—Number of the chassis slot of the line module in the range 0–2 (ERX310 model), 0–6 (ERX7xx models), 0–13 (ERX14xx models), 0–5 (E120 router), and 0–16 (E320 router)
- *virtual-router*—Displays active subscribers for the VR
- *vrName*—Name of the VR to which interfaces of active subscribers are bound
- *lag*—Displays the consolidated information on active subscribers that are logged in on top of a LAG bundle
- *filter*—See [Filtering show Commands on page 4](#)
- *summary*—Displays the active subscribers for each domain, interface, port, slot, or virtual router

**Mode** Privileged Exec

## show subsystems

---

**Syntax**    show subsystems [ file *fileName.rel* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays the names of subsystem files in the current software release or in a specified release file.

- Options**
- *fileName*—Name of the software release file; you can specify a file on a remote server by including the path as part of the filename; absence of a path indicates a local file
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## **show suspicious-control-flow-detection counts**

---

**Syntax**    show suspicious-control-flow-detection counts [ slot *slotNumber* ] [ delta ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Displays statistics for the suspicious flow control detection system.

- Options**
- delta—Displays statistics for the current baseline
  - *slotNumber*—Number of the slot
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



## show suspicious-control-flow-detection flows

---

**Syntax**    show suspicious-control-flow-detection flows [ slot *slotNumber* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Displays suspicious flows.

- Options**
- *slotNumber*—Number of the slot
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show suspicious-control-flow-detection info

---

**Syntax**    show suspicious-control-flow-detection info [ slot *slotNumber* ] [ brief ] [ delta ]  
              [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Displays information about the suspicious flow control detection system.

- Options**
- **brief**—Displays only suspicious information
  - **delta**—Displays statistics for the current baseline
  - **slotNumber**—Number of the slot for which information is displayed
  - **filter**—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show suspicious-control-flow-detection protocol

---

**Syntax**    show suspicious-control-flow-detection protocol [ *protocolValue* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Displays suspicious control flow information for a specific protocol. If no protocol is specified, information is displayed for all protocols.

**Options**

- *protocolValue*—Name of the protocol
- *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show tacacs

---

**Syntax**    show tacacs [ statistics | delta ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays general or detailed TACACS+ information.

- Options**
- statistics—Specifies TACACS+ server statistics
  - delta—Displays baselined statistics
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show tcp ack-rst-and-syn

---

**Syntax**    show [ ip ] tcp ack-rst-and-syn [ vrf *vrfName* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0  
                              ip keyword made optional in JunosE Release 7.2.0.

**Description**    Displays the status of TCP ACK, RST, and SYN protection.

**Options**    • *vrfName*—Name of the VRF  
              • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show tcp path-mtu-discovery

---

**Syntax**    show [ ip ] tcp path-mtu-discovery [ vrf *vrfName* ]

**Release Information**    Command introduced before JunosE Release 7.1.0  
                              ip keyword made optional in JunosE Release 7.2.0.

**Description**    Displays the path MTU information.

**Options**    • *vrfName*—Name of the VRF

**Mode**    Privileged Exec, User Exec

## show tcp paws

---

**Syntax**    show [ ip ] tcp paws [ vrf *vrfName* ]

**Release Information**    Command introduced in JunosE Release 7.1.0  
                              **ip** keyword made optional in JunosE Release 7.2.0.

**Description**    Displays TCP PAWS status information.

**Options**    • *vrfName*—Displays the PAWS information associated with a VRF

**Mode**    Privileged Exec, User Exec

## show tcp resequence-buffers

---

**Syntax**    show [ ip ] tcp resequence-buffers [ vrf *vrfName* ]

**Release Information**    Command introduced before JunosE Release 7.1.0  
                              **ip** keyword made optional in JunosE Release 7.2.0.

**Description**    Displays the configuration, current per-VR and per-router state of the TCP resequencing buffer management functions.

**Options**    • *vrfName*—Name of the VRF

**Mode**    Privileged Exec, User Exec



## show tcp statistics

**Syntax** show [ ip | ipv6 ] tcp statistics [ vrf vrfName ] [ brief | detailed | diagnostic ]  
[ delta ] [ local-address *localAddress* ] [ local-port *localPort* ]  
[ remote-address *remoteAddress* ] [ remote-port *remotePort* ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**ip** keyword made optional in JunosE Release 7.2.0.  
**ipv6** keyword added in JunosE Release 7.2.0.

**Description** Displays all TCP statistics or only IPv4 or IPv6 TCP statistics.



**NOTE:** Order is important when you enter options for this command. Even though you can skip options, you cannot enter options out of sequence.

- Options**
- **ip**—Displays only IPv4 TCP statistics
  - **ipv6**—Displays only IPv6 TCP statistics
  - **vrfName**—Name of the VRF
  - **brief**—Displays a brief summary of each TCP connection
  - **detailed**—Displays detailed statistics for each TCP connection
  - **diagnostic**—Displays diagnostic information collected on all TCP connections, including per-connection logging information
  - **delta**—Displays baselined statistics
  - **localAddress**—Local IPv4 or IPv6 address for which session statistics are displayed
  - **localPort**—Local port number for which session statistics are displayed
  - **remoteAddress**—Remote IP v4 or IPv6 address for which session statistics are displayed
  - **remotePort**—Remote port number for which session statistics are displayed
  - **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show tech-support

---

**Syntax**    show tech-support [ [ *description* ] [ *filter* ] | defunct-commands ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays technical support information for use in troubleshooting the router. Runs various commands to collect the information. By default, this command requires level 15 access.

**Options**

- *description*—Any string you wish to include that describes the problem that prompted you to run the command
- *filter*—See [Filtering show Commands on page 4](#)
- *defunct-commands*—Displays commands that hang the system and cause the commands to be ignored until the hang condition for that command clears; clearing the hang condition can require a reboot of the router

**Mode**    Privileged Exec

## show telnet

---

**Syntax**    show telnet

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays telnet daemons.

**Mode**    Privileged Exec

## show terminal

---

**Syntax**    show terminal [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about terminal configuration settings for the current terminal line.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show terminate-code

---

**Syntax** `show terminate-code { application [ terminateReason | translationApplication ] | translationApplication [ terminateCode ] } [ filter ]`

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Displays information about the current mappings of application terminate reasons to standards-based terminate codes.

- Options**
- *application*— Application; AAA, L2TP, PPP, or RADIUS client
  - *terminateReason*—Reason that the subscriber's session was terminated
  - *translationApplication*—Application whose terminate code is used for the mapping; for example, RADIUS
  - *terminateCode*—Code used by the translation application to identify the terminate reason; for example, a RADIUS Acct-Terminate-Cause code
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## show timing

---

**Syntax**    show timing [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays router timing settings and operational status.

**Options**    • *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show track

---

**Syntax**    `show track objectName [ filter ]`

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays tracking details for the object you specify.

- Options**
- *objectName*—Name of the IPv4 prefix object
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Global Configuration

## show track brief

---

**Syntax**    show track brief

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Displays a one-line summary of all IPv4 prefix objects being tracked.

**Mode**    Global Configuration



## show traffic-class

---

**Syntax**    show traffic-class [ *trafficClassName* ] [ brief | references ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about traffic class(es) configured on the E Series router.

- Options**
- *trafficClassName*—Name of the traffic class
  - brief—Displays information in a condensed format
  - references—Displays QoS profiles and traffic class groups that reference this profile
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

**Related Documentation**

- Monitoring Service Levels with Traffic Classes

## show traffic-class-group

---

<b>Syntax</b>	show traffic-class-group [ <i>trafficClassGroupName</i> [ slot [ <i>trafficClassGroupSlotNumber</i> ] ] ] [ brief   references ] [ <i>filter</i> ]
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0.
<b>Description</b>	Displays information about a traffic class group configured on the E Series router.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>trafficClassGroupName</i>—Name of the traffic class group</li><li>• <i>trafficClassGroupSlotNumber</i>—Number of the slot associated with the group, in the range 0–17</li><li>• brief—Displays information in a condensed format</li><li>• references—Displays QoS profiles and traffic class groups that reference this profile</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec, User Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• Monitoring Service Levels with Traffic-Class Groups</li></ul>

## show tunnel-server

---

**Syntax**    show tunnel-server [ *config* ] [ *interfaceSpecifier* ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays status and configuration information for dedicated and shared tunnel-server ports configured on the router. You can display information for a specific tunnel-server port or for all tunnel-server ports.

- Options**
- *config*—Displays configuration information about available and provisioned tunnel-service interfaces on each port, and indicates whether modules that support dedicated or shared tunnel-server ports are currently installed in the router
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#); port number specified must have the dedicated or shared tunnel-server port assigned to it
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show users

---

**Syntax**    show users [ detail ] [ all ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays information about users of the vty lines.

- Options**
- detail—Displays detailed information
  - all—Displays information about all lines
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

---

## show utilization

---

**Syntax** show utilization [ detail ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**detail** keyword added in JunosE Release 8.0.0.

**Description** Displays information about the resources that the installed modules consume and forces the router to release available memory on the SRP module. The **detail** keyword displays additional information about the average CPU utilization percentage calculated over 5-second, 1-minute, and 5-minute intervals for each module installed in the router.



**NOTE:** When you issue this command, the router releases available memory on the SRP module immediately, but takes a few seconds to display the resources.

- Options**
- **detail**—Displays the average CPU utilization percentage for 5-second, 1-minute, and 5-minute intervals for each installed module
  - **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## show version

---

**Syntax**    show version [ all ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays armed and running releases for every slot in the router and also displays the operational status of the SRP module and line modules for all E Series routers. The **all** keyword displays the operational status of the IOAs for the E120 router and the E320 router.

- Options**
- **all**—Displays the version of the SRP modules, line modules, and IOAs on the E120 and E320 routers
  - **filter**—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec

## show virtual-router

---

**Syntax**    show virtual-router [ *routerName* ] [ summary ] [ detail ] [ *filter* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Displays virtual routers configured on the router.

- Options**
- *routerName*—Name of the virtual router
  - *summary*—Displays only the total number of virtual routers and the total number of VRF instances
  - *detail*—Displays detailed information about the virtual router
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec

## show vlan bulk-config

---

**Syntax**    show vlan bulk-config [ { *interfaceType* } *interfaceSpecifier* ]  
              [ name *bulkConfigName* ] [ *filter* ]

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Displays information, including base profile assignments, for the bulk-configured VLAN ranges on a VLAN subinterface. You can display information for all VLAN ranges on the router, for all VLAN ranges on a particular VLAN subinterface, or for the VLAN range associated with a particular bulk configuration name.

- Options**
- *interfaceType*—One of the following interface types listed in [“Interface Types and Specifiers” on page 5](#):
    - fastEthernet
    - gigabitEthernet
    - tenGigabitEthernet
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *bulkConfigName*—Name associated with a VLAN range, as specified in the **vlan bulk-config** command
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode**    Privileged Exec, User Exec



---

## show vlan profile

---

**Syntax** show vlan [ bulk-config ] profile [ { *interfaceType* } *interfaceSpecifier* ] override [ *filter* ]

**Release Information** Command introduced in JunosE Release 7.1.0.  
bulk-config keyword and *interfaceType* variable added in JunosE Release 7.3.0.

**Description** Displays information about overriding profile assignments for the bulk-configured VLAN ranges on a VLAN subinterface. Information about base profile assignments is not displayed. You can display information for all VLAN ranges on the router, for all VLAN ranges on a particular VLAN subinterface, or for the VLAN range associated with a particular bulk configuration name.

- Options**
- bulk-config—Displays information about bulk-configured ranges
  - *interfaceType*—One of the following interface types listed in [“Interface Types and Specifiers” on page 5](#):
    - fastEthernet
    - gigabitEthernet
    - tenGigabitEthernet
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## show vlan subinterface

**Syntax** `show vlan subinterface [ interfaceType interfaceSpecifier ] [ mac-address ] [ filter ]`

To display summary information:

`show vlan subinterface summary`

To display by VLAN ID or S-VLAN ID:

`show vlan subinterface { svlan s-vlanIdValue | vlan } { vlanIdValue | any }  
[ mac-address ] [ filter ]`

To display VLAN subinterfaces that are created based on agent-circuit-identifier information:

`show vlan subinterface [ interfaceType interfaceSpecifier | svlan s-vlanIdValue ]  
agent-circuit-identifier [ filter ]`

**Release Information** Command introduced before JunosE Release 7.1.0.  
**s-vlan** keyword and *s-vlanIdValue* variable added in JunosE Release 7.1.0.  
**vlan** keyword and *vlanIdValue* variable added in JunosE Release 7.1.0.  
**any** and **mac-address** keywords added in JunosE Release 7.1.0.  
**agent-circuit-identifier** keyword added in JunosE Release 7.3.0.

**Description** Displays configuration and status information for a specified VLAN subinterface or for all VLAN subinterfaces configured on the router. Alternatively, you can use the **summary** keyword to display only brief summary information for all VLAN interfaces. You can also display information about the VLAN IDs or S-VLAN IDs for the specified VLAN subinterface.

- Options**
- *interfaceType*—One of the following interface types listed in [“Interface Types and Specifiers” on page 5](#):
    - atm
    - fastEthernet
    - gigabitEthernet
    - lag
    - tenGigabitEthernet
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *mac-address*—Displays VLAN subinterfaces configured with unique MAC addresses
  - *filter*—See [Filtering show Commands on page 4](#)
  - *summary*—Displays only the total number of VLAN subinterfaces and the total number of VLAN major interfaces configured on the router
  - *s-vlanIdValue*—S-VLAN ID number in the range 0–4095

- *vlanIdValue*—VLAN ID number in the range 0–4095
- *any*—Specifies the VLAN ID as a wildcard
- *agent-circuit-identifier*—Specifies VLAN subinterfaces that are created based on *agent-circuit-identifier* information

**Mode** Privileged Exec, User Exec

## show vpls connections

---

<b>Syntax</b>	show vpls connections [ state up   state down   details   bridge-group <i>vplsName</i>   remote-site <i>siteId</i> ]* [ <i>filter</i> ]
<b>Release Information</b>	Command introduced in JunosE Release 7.2.0.
<b>Description</b>	Displays connection information for a specified VPLS instance configured on the router, or for all VPLS instances configured on the router. You can display detailed configuration and status information for one or for all VPLS connections on the router, or you can display information only for VPLS connections with a specified operational state (up or down) or remote site ID.
<b>Options</b>	<ul style="list-style-type: none"><li>• state up—Displays information only for operational (up) VPLS connections</li><li>• state down—Displays information only for nonoperational (down) VPLS connections</li><li>• details—Displays detailed configuration and status information for VPLS connections</li><li>• <i>vplsName</i>—Name of a specific VPLS instance created with the bridge vpls transport-virtual-router command; if you omit the <b>bridge-group</b> keyword and VPLS instance name, the command displays connection information for all VPLS instances configured on the router</li><li>• <i>siteId</i>—Integer, in the range 1–65535, that uniquely identifies the remote site for a VPLS instance; the site ID is configured with the bridge vpls site-name site-id command</li><li>• *—Indicates that one or more parameters can be repeated multiple times in a list in the command line</li><li>• <i>filter</i>—See <a href="#">Filtering show Commands on page 4</a></li></ul>
<b>Mode</b>	Privileged Exec
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Monitoring VPLS-Specific Settings</i> in the <i>JunosE BGP and MPLS Configuration Guide</i></li></ul>

## shutdown

---

**Syntax** [ no ] shutdown

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** In Controller Configuration Mode, disables CT3, E3, SONET, and T3 controllers. These controllers are disabled by default. In Interface Configuration mode, disables Ethernet interfaces, the HDLC layer of serial interfaces, and the SONET layer of ATM or POS interfaces. These interfaces are enabled by default. In Subinterface Configuration mode, disables ATM 1483, Ethernet, Frame Relay, PPPoE, and VLAN subinterfaces. These subinterfaces are enabled by default. The **no** version restarts disabled controllers, interfaces, and subinterfaces.

**Mode** Controller Configuration, Interface Configuration, Subinterface Configuration

## single-shot-tunnel

---

**Syntax** [ no ] single-shot-tunnel

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Configures the L2TP/IPSec tunnels associated with a particular L2TP host profile as single-shot tunnels. The underlying IPSec connection for a single-shot tunnel can carry no more than a single L2TP tunnel for the duration of its existence, and the L2TP tunnel can carry no more than a single L2TP session for the duration of its existence. The **no** version restores the default behavior for L2TP/IPSec tunnels, which disables the single-shot attribute.



**NOTE:** Although configuration of single-shot tunnels is more typically used with secure L2TP/IPSec tunnels, you can also configure single-shot tunnels for nonsecure L2TP tunnels that do *not* run over an IPSec transport connection.

**Mode** L2TP Destination Profile Host Configuration

## sleep

---

**Syntax**    `sleep sleepFor`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Causes the CLI to pause for a specified period of time. There is no **no** version.

**Options**    • *sleepFor*—Number of seconds in the range 0–4294967295

**Mode**    All modes

## slot accept

---

**Syntax**    slot accept *slotNum* [ *subsystem* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Erases from NVS the type and configuration of the previous module in the specified slot, and allows you to configure a new module. Issue this command after you have installed a different type of module in a slot. You can use this command only when the state of the module in the slot is not present or disabled (mismatch). There is no **no** version.

- Options**
- *slotNum*—For ERX7xx models, a number in the range 0–6; for ERX14xx models, a number in the range 0–13; for the ERX310 router, a number in the range 1–2; for the E120 router, a number in the range 0–5; for the E320 router, a number in the range 0–16
  - *subsystem*—Type of subsystem on the E120 and E320 routers; use when the specified *slotNumber* is a slot that contains an SRP module
    - *srp*—Indicates the SC on one or both SRP modules; specify this keyword to accept only the configuration of the portion of the SC on the individual SRP module
    - *fabric*—Indicates the portion of the switch fabric on the SRP modules; specify this keyword to accept only the configuration of an individual fabric slice

**Mode**    Global Configuration



## slot disable

---

**Syntax** `slot disable slotNum [ subsystem ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Disables the module installed in the specified slot. You cannot use this command on a slot that contains a primary SRP module. There is no **no** version.

- Options**
- *slotNum*—Number of the selected slot in the router; for ERX7xx models, a number in the range 0–6; for ERX14xx models, a number in the range 0–13; for the ERX310 router, a number in the range 1–2; for the E120 router, a number in the range 0–5; for the E320 router, a number in the range 0–16
  - *subsystem*—Type of subsystem on the E120 and E320 routers; use when the specified *slotNumber* is a slot that contains an SRP module
    - *srp*—Indicates the SC on one or both SRP modules; specify this keyword to disable only the portion of the SC on the individual SRP module
    - *fabric*—Indicates the portion of the switch fabric on the SRP modules; specify this keyword to disable only an individual fabric slice

**Mode** Global Configuration

## slot enable

---

**Syntax** `slot enable slotNum [ subsystem ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables the module installed in the specified slot. You cannot use this command on a slot that contains a primary SRP module. There is no **no** version.

- Options**
- *slotNum*—Number of the selected slot in the router; for ERX7xx models, a number in the range 0–6; for ERX14xx models, a number in the range 0–13; for the ERX310 router, a number in the range 1–2; for the E120 router, a number in the range 0–5; for the E320 router, a number in the range 0–16
  - *subsystem*—Type of subsystem on the E320 router; use when the specified *slotNumber* is a slot that contains an SRP module
    - *srp*—Indicates the SC on one or both SRP modules; specify this keyword to enable only the portion of the SC on the individual SRP module
    - *fabric*—Indicates the portion of the switch fabric on the SRP modules; specify this keyword to enable only an individual fabric slice

**Mode** Global Configuration

---

## slot erase

---

**Syntax** `slot erase slotNum [ subsystem ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Erases from NVS the type and configuration of the previous module in the specified slot, and allows you to configure a new module. Issue this command before you install a different type of module in a slot. There is no **no** version.

- Options**
- *slotNum*—Number of the selected slot in the router; for ERX7xx models, a number in the range 0–6; for ERX14xx models, a number in the range 0–13; for the ERX310 router, a number in the range 1–2; for the E120 router, a number in the range 0–5; for the E320 router, a number in the range 0–16
  - *subsystem*—Type of subsystem on the E120 and E320 routers; use when the specified *slotNumber* is a slot that contains an SRP module
    - *srp*—Indicates the SC on one or both SRP modules; specify this keyword to erase only the configuration of the portion of the SC on the individual SRP module
    - *fabric*—Indicates the portion of the switch fabric on the SRP modules; specify this keyword to erase only the configuration of an individual fabric slice

**Mode** Global Configuration

## slot ignore-diagnostic-failure

---

**Syntax** [ no ] slot ignore-diagnostic-failure *slotNum*

**Release Information** Command introduced in JunosE Release 9.3.0.

**Description** Enables you to ignore diagnostics test failures on the line module or SRP. The **no** version returns you to the default allowing diagnostic test failures to occur.

**Options**

- *slotNum*—Number of the selected slot in the router; for ERX7xx models, a number in the range 0–6; for ERX14xx models, a number in the range 0–13; for the ERX310 router, a number in the range 1–2; for the E120 router, a number in the range 0–5; for the E320 router, a number in the range 0–16

**Mode** Global Configuration

## slot replace

---

**Syntax**    slot replace *slotNum*

**Release Information**    Command introduced in JunosE Release 9.1.0.

**Description**    Enables you to replace an ES2 4G LM or an ES2 10G LM with a different type of module without erasing the interface configuration on the slot. You can use this command to replace these line modules if they both are paired with the ES2-S1 GE-8 IOA or the ES2-S1 Redund IOA installed. Issue this command after you install the new type of line module in the slot. There is no **no** version.

**Options**

- *slotNum*—Number of the selected slot in the router; for the E120 router, a number in the range 0–5; for the E320 router, a number in the range 0–5 or 11–16

**Mode**    Global Configuration

## snmp-server

---

**Syntax**    [ no ] snmp-server

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables the SNMP agent operation. The **no** version disables this operation.

**Mode**    Global Configuration

## snmp-server clear secure-log

---

**Syntax** snmp-server clear secure-log

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Clears SNMP secure logs, which are used by the JunosE Software packet mirroring feature. There is no **no** version.

**Mode** Global Configuration

**Related Documentation**

- Monitoring SNMP Secure Audit Logs

## snmp-server community

---

**Syntax**    `snmp-server community commString [ view viewName ] [ priv ] [ accessListName ]`  
              `no snmp-server community commString`

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **view** keyword and *viewName* variable added in JunosE Release 7.1.0.

**Description**    Configures an authorized SNMP community and associates SNMPv1/v2c communities with SNMPv3 views. The **no** version removes an authorized community from the list of communities.

- Options**
- *commString*—Name of the SNMPv1/v2c community
  - *viewName*—Name of the SNMPv3 view, which allows configuration using available dynamic views
  - *priv*—Privileged Exec level: ro (read-only), rw (read-write), or admin (administrator)
  - *accessListName*—Name of IP access list to filter SNMP clients

**Mode**    Global Configuration



## snmp-server contact

---

**Syntax**    `snmp-server contact text`  
              `no snmp-server contact`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the router's contact information. The **no** version clears the router's contact information.

**Options**    • *text*—String that describes the router's contact person

**Mode**    Global Configuration

## snmp-server enable traps

---

**Syntax** To enable and configure trap severity level on a global basis:

```
[ no ] snmp-server enable traps [ trapCategory | snmp authentication ]  
[ trapfilters trapFilter ]
```

To specify the trap severity level on a per-category basis:

```
snmp-server enable traps { trapCategory | snmp authentication } per-category-trapFilters  
trapFilter
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**ip** keyword added in JunosE Release 7.1.0.  
**packetMirror** keyword added in JunosE Release 7.2.0.  
**per-category-trapFilters** keyword added in JunosE Release 9.3.0.

**Description** Enables and configures global and category-level SNMP trap generation. The **no** version disables SNMP trap generation globally. There is no **no** version for the command to specify the trap severity level on a per-category basis.

- Options**
- **trapCategory**—SNMP trap category
    - **addrPool**—Local address pool traps
    - **atmPing**—E Series router proprietary ATM ping traps
    - **bfdmib**—BFD MIB traps
    - **bgp**—BGP state change traps
    - **bulkstats**—Bulkstats file full and nearly full traps
    - **cliSecurityAlert**—Security alerts traps
    - **dhcp**—DHCP traps
    - **dismanEvent**—Distributed management (disman) event traps
    - **dosProtectionPlatform**—DoS protection platform traps
    - **dvmrp**—DVMRP traps
    - **dvmrpProp**—E Series router proprietary DVMRP traps
    - **environment**—Power, temperature, fan, and memory utilization traps
    - **fileXfer**—File transfer status change traps
    - **haRedundancy**—High availability and redundancy traps
    - **inventory**—Router inventory and status traps
    - **ip**—Internet Protocol traps

- `ldp`—LDP traps
- `link`—SNMP linkUp and linkDown traps
- `log`—System log capacity traps
- `mobileipv4`—Mobile IPv4 traps
- `mplste`—Mplste traps
- `mrout`—Mrouter traps
- `ntp`—E Series router proprietary traps
- `ospf`—OSPF traps
- `packetMirror`—Secure packet mirroring traps; visible only if packet mirroring is enabled
- `pim`—PIM traps
- `ping`—Ping operation traps (in `disman remops` MIB)
- `radius`—RADIUS authentication and authorization servers
- `routeTable`—Maximum route limit and warning threshold traps; when this trap is generated, the actual value of the exceeded warning threshold is displayed
- `sonet`—SONET traps
- `snmp`—SNMP coldStart, warmStart, link, and authenticationFailure traps
- `traceroute`—Traceroute operation traps (in `disman remops` MIB)
- `vrrp`—VRRP traps
- `snmp`—Specifies the SNMP coldStart, warmStart, and authenticationFailure traps
- `authentication`—Specifies the SNMP authenticationFailure trap
- `trapFilters`—Specifies the trap severity level at a global level; if the per-category trap severity level is not set for a particular category, this setting is applied to that category
- `trapFilter`—Minimum severity level for filtering traps at a global level or for a specified category
  - `emergency`—Severity level 0
  - `alert`—Severity level 1
  - `critical`—Severity level 2
  - `error`—Severity level 3
  - `warning`—Severity level 4
  - `notice`—Severity level 5

- informational—Severity level 6
- debug—Severity level 7
- per-category-trapFilters—Specifies the trap severity level for a particular category; this setting overrides the severity level set at the global level for this category
- *trapFilter*—Minimum severity level for filtering traps for the specified category

**Mode**    Global Configuration

**Related Documentation**    • Monitoring SNMP Secure Packet Mirroring Traps

## snmp-server group

**Syntax** `snmp-server group groupName securityModel authenticationLevel [ read readView ] [ write writeView ] [ notify notifyView ] [ storageType ]`

`no snmp-server group groupName securityModel authenticationLevel`

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** Dynamically configures an SNMP server group. The **no** version removes the dynamically created group.



**NOTE:** You must access the CLI at privilege level 15 to view or use this command.

- Options**
- *groupName*—Name of the SNMPv3 group
  - *securityModel*—Security model
    - v1—SNMPv1
    - v2c—SNMPv2c
    - usm—SNMPv3
  - *authenticationLevel*—Method for authentication and privacy
    - none—No authentication and no privacy
    - auth—Authentication only
    - priv—Authentication and privacy
  - *readView*—Name of the view for read access; the default is no access
  - *writeView*—Name of the view for write access; the default is no access
  - *notifyView*—Name of the view for notification; the default is no access
  - *storageType*—Storage type
    - volatile—Loses contents on warm or cold start
    - nonvolatile—Preserves contents across warm or cold start. This is the default.

**Mode** Global Configuration

## snmp-server host

---

**Syntax** To specify the SNMP version, community, UDP port, trap category and trap severity:

```
snmp-server host ipAddress [ version ver ] securityString [ udp-port port ]  
[ trapCategory ]* [ trapFilters trapFilter ]
```

```
no snmp-server host ipAddress
```

To specify the ping timeout and trap queue:

```
snmp-server host ipAddress pingTimeOut timeOutValue  
[ trapQueue { drainRate queueDrainRate | full queueFull |  
size queueSize }  
[ drainRate queueDrainRate | full queueFull | size queueSize ]*
```

```
snmp-server host ipAddress trapQueue  
{ drainRate queueDrainRate | full queueFull | size queueSize }  
[ drainRate queueDrainRate | full queueFull | size queueSize ]*  
[ pingTimeOut timeOutValue ]
```

```
no snmp-server host ipAddress { pingTimeOut | trapQueue { drainRate | full | size } }
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
**ip** keyword added in JunosE Release 7.1.0.  
**packetMirror** keyword added in JunosE Release 7.2.0.

**Description** Configures one or more hosts to receive an SNMP trap. The **no** version removes the specified host from the list of recipients.

- Options**
- *ipAddress*—IP address of the SNMP trap recipient
  - *ver*—SNMP protocol version for traps sent to host; one of the following values: v1, v2c, or v3
  - *securityString*—SNMP community string
  - *port*—UDP port number of SNMP trap recipient
  - *trapCategory*—SNMP trap category
    - *addrPool*—Local address pool traps
    - *atmPing*—E Series router proprietary ATM ping traps
    - *bfdmib*—BFD MIB traps
    - *bgp*—BGP state change traps
    - *bulkstats*—Bulkstats file full and nearly full traps
    - *cliSecurityAlert*—Security alerts traps
    - *dosProtectionPlatform*—DoS protection platform traps

- dvmrp—DVMRP traps
- dvmrpUni—E Series router proprietary DVMRP traps
- environment—Power/temperature/fan traps
- fileXfer—File transfer status change traps
- inventory—Router inventory/status traps
- ip—Internet Protocol traps
- ldp—LDP traps
- link—SNMP linkUp/linkDown traps
- log—System log capacity traps
- mobileIpv4—Mobile IPv4 traps
- mplste—Mplste traps
- mrouter—Mrouter traps
- packetMirror—Secure packet mirroring traps; visible only if packet mirroring is enabled
- ospf—OSPF traps
- ping—Ping operation traps (in disman remops MIB)
- radius—RADIUS traps
- snmp—SNMP coldstart, warmstart, link, authenticationFailure traps
- traceroute—Traceroute operation traps (in disman remops MIB)
- \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- *trapFilter*—Minimum severity level for filtering traps sent to this host
  - alert—Severity level 1
  - critical—Severity level 2
  - debug—Severity level 7
  - emergency—Severity level 0
  - error—Severity level 3
  - informational—Severity level 6
  - notice—Severity level 5
  - warning—Severity level 4

- *timeOutValue*—Ping timeout in minutes, in the range 1–90; default value is 1
- *trapQueue*—Configures the SNMP trap queue for traps sent to this host
- *queueDrainRate*—Maximum number of traps per second to be sent to the host, in the range 0–2147483647; default value is 0. By default, there is no limit on the number of traps sent per second to the host.
- *queueFull*—Method used to drop traps when the trap queue is full
  - *dropFirstIn*—Drops the oldest trap in the queue
  - *dropLastIn*—Drops the most recent trap added to the queue
- *queueSize*—Maximum number of traps to be kept in the trap queue, in the range 32–214748364; default value is 32

**Mode**    Global Configuration

**Related Documentation**    • Monitoring SNMP Secure Packet Mirroring Traps



## snmp-server interfaces compress

**Syntax** [ no ] snmp-server interfaces compress [ *interfaceLayer* ]\* table-type *TableType*

**Release Information** Command introduced before JunosE Release 7.1.0.  
The **table-type** keyword added in JunosE Release 10.2.0.

**Description** Removes a set of sublayers from the ifTable, the ifStackTable, and the ipAddrTable. You can enter this command multiple times to remove multiple interfaces. By specifying a table type, you can restrict interface compression only to the specified table types in the SNMP interface configuration. The **no** version negates the compression.

- Options**
- *interfaceLayer*—Interface layer that you want to remove from the ifTable, the ifStackTable, and the ipAddrTable. If you do not specify an interface layer, the router removes the following interface layers:
    - ip
    - ppp
    - ethernetSubinterface
    - hdlc
    - pppoeInterface
    - ipLoopback
    - ipVirtual
    - pppLinkInterface
    - slepInterface/ciscoHdlc
  - *TableType*—Table type on the SNMP interface configuration to which you want to limit the interface compression. The supported table types are **interface-table** and **interface-stack-table**.
  - \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line

**Mode** Global Configuration

## **snmp-server interfaces compress-restriction**

---

**Syntax** [ no ] snmp-server interfaces compress-restriction ifAdminStatusDown

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Excludes interfaces from the ifTable, the ifStackTable, and the ipAddrTable if the ifAdminStatus of the interfaces is down. The **no** version negates the restriction.

**Mode** Global Configuration

## snmp-server interfaces description-format

---

**Syntax** [ no ] snmp-server interfaces description-format { common | legacy | proprietary }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets the encoding scheme of the ifDescr and ifName objects. The **no** version returns the encoding method to the proprietary encoding scheme.

- Options**
- **common**—Sets the encoding scheme to the conventional industry method, and provides compatibility with software that uses the industry encoding scheme
  - **legacy**—Sets the encoding scheme for legacy E Series routers
  - **proprietary**—Sets the encoding scheme to a method that is proprietary to the E Series router

**Mode** Global Configuration

## snmp-server interfaces rfc1213

---

**Syntax**    `snmp-server interfaces rfc1213 [ maxIfIndex ] [ maxIfNumber ]`  
`[ no ] snmp-server interfaces rfc1213`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies that the router bases numbering in the IfTable on RFC 1213. The **no** version restores the default value, which is to use RFC 1573 style numbering in interface tables.



.....  
**CAUTION:** Reducing the value of the *maxIfIndex*, the *maxIfNumber*, or both, causes the router to automatically reboot to factory default settings.  
.....

The router does *not* reboot to factory defaults if you:

- Options**
- Increase the values of *maxIfIndex* and/or *maxIfNumber*.
  - Issue a **no** version of the **snmp-server interfaces rfc1213** command when the router is already set up for RFC 1573 style numbering.
  - Enter the **snmp-server interfaces rfc1213** command with the same options multiple times.
  - *maxIfIndex*—Maximum value of index numbers in the interface tables, in the range 100–65535; default value is 65535
  - *maxIfNumber*—Maximum number of interfaces in each interface table, in the range 100–65535; default value is 65535

**Mode**    Global Configuration

## snmp-server location

---

**Syntax**    `snmp-server location text`  
             `no snmp-server location`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets information about the router's location. The **no** version clears this information.

**Options**    • *text*—String that describes the router's location

**Mode**    Global Configuration

## **snmp-server management-event**

---

**Syntax**    [ no ] snmp-server management-event

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Launches the SNMP server event manager. The **no** version removes all configuration from the event manager.

**Mode**    Global Configuration

## snmp-server notificationLog ageOut

---

**Syntax**    snmp-server notificationLog ageOut *ageOut*  
              no snmp-server notificationLog ageOut

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies when the notification log ages out. The **no** version returns the ageout limit to the default value, 1440 minutes.

**Options**    • *ageOut*—Notification log ageout in minutes, in the range 0–214748364; default value is 1440

**Mode**    Global Configuration

## snmp-server notificationLog entryLimit

---

**Syntax**    snmp-server notificationLog entryLimit *entryLimit*  
              no snmp-server notificationLog entryLimit

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the maximum number of notifications kept. The **no** version returns the limit to the default value, 500.

**Options**    • *entryLimit*—Maximum number of notifications kept, in the range 1–500; default value is 500



.....  
**NOTE:** You can allocate up to 500 notifications across all virtual routers on the router. As you allocate entry limits for virtual routers, the available range changes to reflect the number of notifications that you have allocated.  
.....

**Mode**    Global Configuration



## snmp-server notificationLog log

---

**Syntax** [ no ] snmp-server notificationLog log *ipAddress* [ adminStatus ] [ includeVarbinds ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the SNMP notification log tables. The **no** version removes the notification log configuration.

- Options**
- *ipAddress*—IP address of the host for which the notification logs are kept
  - adminStatus—Enables administrative status
  - includeVarbinds—Specifies that log names and log indexes are included in the trap's variable bindings

**Mode** Global Configuration

## snmp-server packetsize

---

**Syntax**    `snmp-server packetsize byteCount`  
              `no snmp-server packetsize`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the maximum SNMP packet size in bytes. The **no** version restores the default value.

**Options**    • *byteCount*—Size of an SNMP packet in bytes

**Mode**    Global Configuration

## snmp-server secure-log

---

**Syntax** [ no ] snmp-server secure-log

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Enables secure logs, which are used by the JunosE Software's packet mirroring feature. The **no** version disables secure logs.

**Mode** Global Configuration

**Related Documentation**

- Monitoring SNMP Secure Packet Mirroring Traps

## snmp-server security

---

**Syntax**    snmp-server security { no-access | read | read-write }  
              no snmp-server security

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies a security access level for the SNMP agent. The **no** version returns the SNMP security level to its default, no access.

- Options**
- no-access—Specifies that no other virtual routers can access this router for read or write actions
  - read—Specifies that other virtual routers can access this router for read only actions
  - read-write—Specifies that other virtual routers can access this router for both read and write actions

**Mode**    Global Configuration

## snmp-server trap-proxy

---

**Syntax** [ no ] snmp-server trap-proxy { enable | disable }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables or disables the SNMP trap proxy. The **no** version disables the SNMP trap proxy.

- Options**
- enable—Enables SNMP trap proxy
  - disable—Disables SNMP trap proxy

**Mode** Global Configuration

## snmp-server trap-source

---

**Syntax**    `snmp-server trap-source interfaceType interfaceSpecifier`  
              `no snmp-server trap-source`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the interface whose IP address is the source address for SNMP traps. The **no** version disables this feature.

**Options**

- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)

**Mode**    Global Configuration

## snmp-server user

---

**Syntax** `snmp-server user userName group groupName`  
`[ authentication authType authKey [ privacy des privKey ] ]`

`no snmp-server user userName`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates and modifies SNMPv3 users. The **no** version removes the user.

- Options**
- *userName*—Name of the SNMPv3 user
  - *groupName*—Name of the group to which the user belongs
    - one of the three predefined groups (admin, public, or private) or a custom group created with SNMPv3 commands
  - *authType*—One of the following authentication protocols:
    - md5—HMAC-MD5-96
    - sha—HMAC-SHA-96
  - *authKey*—Password for the authentication procedure; use a 16-character password for HMAC-MD5-96 and a 20-character password for HMAC-SHA-96
  - des—Specifies CBC-DES encryption algorithm for privacy
  - *privKey*—Password for the privacy verification; use a 16-character password for CBC-DES

**Mode** Global Configuration

## snmp-server view

---

**Syntax**    `snmp-server view viewName oidTree [ viewType ] [ storageType ]`  
`no snmp-server view viewName oid-tree`

**Release Information**    Command introduced in JunosE Release 7.1.0.

**Description**    Dynamically configures an SNMP server view. The **no** version removes the dynamically created view.



.....  
**NOTE:** You must access the CLI at privilege level 15 to view or use this command.  
.....

- Options**
- *viewName*—SNMP dynamic view name
  - *oidTree*—Name of the object identifier (OID) tree
  - *viewType*—OID type
    - *included*—OID is included
    - *excluded*—OID is excluded
  - *storageType*—Storage type
    - *volatile*—Loses contents on warm or cold start
    - *nonvolatile*—Preserves contents across warm or cold start. This is the default.

**Mode**    Global Configuration



## snmpTrap

---

**Syntax** [ no ] snmpTrap

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables SNMP traps for DHCP local address pool utilization. You can set the maximum and minimum threshold values for local address pool utilization by using the [warning](#) command. The **no** version disables SNMP traps for local address pool utilization.

**Mode** DHCP Local Pool Configuration

## snmp trap frame-relay link-status

---

**Syntax** [ no ] snmp trap frame-relay link-status

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables processing of SNMP link status information about a Frame Relay major interface (if issued from Interface Configuration mode) or subinterface (if issued from Subinterface Configuration mode). The **no** version disables the processing of SNMP link status information.

**Mode** Interface Configuration, Subinterface Configuration

## snmp trap ip link-status

---

**Syntax**   snmp trap ip link-status  
          no snmp trap ip

**Release Information**   Command introduced before JunosE Release 7.1.0.

**Description**   Enables link status traps on an IP interface. The **no** version disables link status traps on an IP interface.

**Mode**   Interface Configuration

## snmp trap link-status

---

**Syntax**    [ no ] snmp trap link-status

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables processing of SNMP link status information about an interface. The **no** version disables the processing of SNMP link status information.

**Mode**    Controller Configuration, Interface Configuration

## source-address

---

**Syntax**    `source-address sourceAddress`  
`no source-address`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies a source IP address for the LAC tunnel endpoint. The **no** version removes the source address.

**Options**    • *sourceAddress*—Address of the local tunnel endpoint (the LAC); can be up to 32 characters (no spaces)

**Mode**    Domain Map Tunnel Configuration, Tunnel Group Tunnel Configuration

## speed

---

**Syntax** For console sessions:

*speed baudRate*

*no speed*

For Ethernet interfaces on line modules:

*speed speedValue*

*no speed*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** When used from Line Configuration mode, sets the speed for the current and all new console sessions immediately. The **no** version reverts to the default value, 9600 bps.

When used from Interface Configuration mode, specifies the line speed for an Ethernet interface. This command works with the **duplex** command; if you set or accept the automatically negotiate setting for either duplex mode or speed, the router negotiates both parameters with the remote device. The **no** version specifies the default, automatically negotiate or 100 Mbps (FE-8 SFP I/O module only). This command is not available for the Ethernet interface on the SRP module.

- Options**
- *baudRate*—Terminal speed for the current console session; one of the following values: 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, 115200
  - *speedValue*—Line speed; one of the following values:
    - automatically negotiate—Specifies that the router negotiates the line speed with the remote device; not valid for the FE-8 SFP I/O module
    - 10—Specifies that the router uses a line speed of 10 Mbps on a Fast Ethernet interface; not valid for Gigabit Ethernet interfaces or the FE-8 SFP I/O module
    - 100—Specifies that the router uses a line speed of 100 Mbps on a Fast Ethernet interface; not valid for Gigabit Ethernet interfaces
    - 1000—Specifies that the router uses a line speed of 1000 Mbps on a Gigabit Ethernet interface; not valid for Fast Ethernet interfaces

**Mode** Interface Configuration, Line Configuration

## spf-interval

---

**Syntax**    `spf-interval [ level-1 | level-2 ] seconds`  
              `no spf-interval [ level-1 | level-2 ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the maximum wait time between two successive IS-IS shortest-path-first calculations. If you do not specify a level, the interval applies to both level 1 and level 2. The **no** version restores the default value, 5 seconds.

**Options**

- `level-1`—Specifies a level 1 SPF
- `level-2`—Specifies a level 2 SPF
- `seconds`—Maximum time between SPF calculations in the range 0–120 seconds; default value is 5

**Mode**    Router Configuration

## split-horizon

---

**Syntax** [ no ] split-horizon

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Controls the split horizon and poison reverse features for RIP remote neighbors. Split horizon is enabled by default; poison reverse routing updates are disabled by default. The **no** version disables the split horizon and enables poison reverse routing updates, which set the metric for routes originating on the interface to infinity to explicitly advertise that the network is unreachable, reducing the possibility of routing loops.

**Mode** Remote Neighbor Configuration



---

## srp switch

---

**Syntax**    `srp switch [ [ force ] [ reason ] ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Switches from the primary SRP module to the standby. This command is equivalent to the **redundancy force-switchover** command with the **srp** option. There is no **no** version.



**NOTE:** When the high availability state is active, this command does not take effect until all transaction data, up to when you issue the command, has been mirrored to the standby SRP module. This behavior preserves legacy behavior that requires SRP modules to be synchronized before the switchover.

- Options**
- **force**—Prompts the user to confirm that the router should switch from the primary SRP module to the standby if the SRP modules are in certain states, such as writing configuration data to NVS, that could lead to loss of configuration data or corruption of NVS
  - **reason**—Reason for the change

**Mode**    Privileged Exec

## sscc address

---

**Syntax**    `sscc { primary | secondary | tertiary } address ipAddress [ port portNumber ]`  
              `no sssc { primary | secondary | tertiary } address [ ipAddress [ port portNumber ] ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the SRC client (formerly SSCC) with the IP addresses of the SRC servers and the ports on which the servers listen for activity. The **no** version removes the specified server (primary, secondary, or tertiary) from the list of SRC servers.

- Options**
- **primary**—Primary SRC server
  - **secondary**—Secondary SRC server
  - **tertiary**—Tertiary SRC server
  - ***ipAddress***—IP address of an SRC server
  - ***portNumber***—SRC server port number on which the server listens for activity; default port is 3288

**Mode**    Global Configuration

## sscc enable

---

**Syntax**    `sscc enable cops-pr`  
`no sscc enable`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables the SRC client's COPS support, which is used when the SRC service application engine communicates with a policy decision point, such as the SRC application. The **no** version disables COPS support.

**Options**

- `cops-pr`—Enables COPS-policy provisioning operation.

**Mode**    Global Configuration

## sscc option

---

**Syntax**    `sscc option { user-ip-mask-override | send-calling-station-id |  
                  send-local-qos-profile-config | send-lac-nas-ip | send-lac-nas-port }`  
  
              `no sssc option`

**Release Information**    Command introduced in JunosE Release 10.2.0.  
                              **send-calling-station-id** keyword added in JunosE Release 11.1.0.  
                              **send-local-qos-profile-config** keyword added in JunosE Release 11.2.0.  
                              **send-lac-nas-ip** and **send-lac-nas-port** keyword added in JunosE Release 12.2.0.

**Description**    When used with the **user-ip-mask-override** option, enables the user IP address mask to be sent to the Policy Decision Point (PDP) in place of the interface IP address mask for a virtual router. If user IP address mask is not available, then the interface IP address mask is sent. The **no** version disables user IP address mask override.

When used with the **send-calling-station-id** option, enables the calling station ID to be sent to the PDP for a virtual router. The **no** version disables the option to send the calling station ID.

When used with the **send-local-qos-profile-config** option, enables the local QoS profile attachment information to be sent to the PDP for a virtual router. The **no** version disables the option to send the local QoS profile attachment information.

When used with the **send-lac-nas-ip** option, enables the LAC side NAS-IP address information to be sent to the PDP for a virtual router. The **no** version disables the option to send the NAS-IP address information.

When used with the **send-lac-nas-port** option, enables the LAC side NAS-Port information to be sent to the PDP for a virtual router. The **no** version disables the option to send the LAC side NAS-Port information.

- Options**
- **user-ip-mask-override**—Enables user IP address mask to be sent to PDP
  - **send-calling-station-id**—Enables calling station ID to be sent to PDP
  - **send-local-qos-profile-config**—Enables local QoS profile attachment information to be sent to the PDP
  - **send-lac-nas-ip**—Enables the LAC side NAS-IP address information to be sent to the PDP
  - **send-lac-nas-port**—Enables the LAC side NAS-Port information to be sent to the PDP

**Mode**        Global Configuration

## sscc protocol ipv6

---

**Syntax** [ no ] ssc protocol ipv6

**Release Information** Command introduced in JunosE Release 8.1.0.

**Description** Configures the SRC client to support policy and QoS configuration on IPv6 interfaces. The **no** version disables IPv6 support.

**Mode** Global Configuration

## sscc protocol lac

---

**Syntax** [ no ] sssc protocol lac

**Release Information** Command introduced in JunosE Release 11.0.0.

**Description** Configures the SRC client to support policy and QoS configuration on L2TP interfaces on a virtual router that functions as an L2TP access concentrator (LAC) on one side of an L2TP tunnel. The **no** version disables SRC client support for L2TP LAC interfaces.



.....

**NOTE:** You must enable the SRC client by using the **sscc enable cops-pr** command on the virtual router to be able to configure policy and QoS support for L2TP LAC interfaces by the COPS messages.

.....

**Mode** Global Configuration

## sscc restart

---

**Syntax**    `sscc restart [ clean-state ]`

**Release Information**    Command introduced in JunosE Release 11.0.0.

**Description**    Forces the router to restart a COPS connection to, and resynchronize with, the SRC software, without removing the SRC client. The **no ssc enable cops** command removes the SRC client. There is no **no** version.

**Options**

- **clean-state**—Enables a complex restart where the SRC client closes the connection and clears the Policy Information Base (PIB) structures and tables. Then the SRC client connects to the SRC software, which requests full synchronization, which restores correct policy and QoS provisioning.

**Mode**    Privileged Exec

## sscc retryTimer

---

**Syntax**    `sscc retryTimer timer`

`no ssc retryTimer [ timer ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the delay period during which the SRC client (formerly SSCC) waits for a response from an SRC (formerly SDX or SSC) server. When the timer expires, the client submits the request to the next server and waits again for the timer to expire. The request is sent to each timer in rotation until there is a response. The **no** version restores the default delay period, 90 seconds.

**Options**    • *timer*—Time in the range 5–300 seconds

**Mode**    Global Configuration



## sscc sourceAddress

---

**Syntax**    `sscc sourceAddress ipAddress`

`no sscc sourceAddress [ ipAddress ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies a fixed source address for the TCP/COPS connection. The **no** version removes the address specification.

**Options**    • *ipAddress*—Source (or local) IP address of the TCP/COPS connection

**Mode**    Global Configuration

## sscc sourceInterface

---

**Syntax**    `sscc sourceInterface interfaceType interfaceSpecifier`  
              `no sscc sourceInterface [ interfaceType interfaceSpecifier ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies a fixed source (local) interface for the TCP/COPS connection. The **no** version removes the interface.

**Options**

- *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)

**Mode**    Global Configuration

## sscc transportRouter

---

**Syntax**    `sscc transportRouter name`  
              `no sscc transportRouter [ name ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the router on which the TCP/COPS connection is to be established. The **no** version removes the SRC client transport router.

**Options**    • *name*—Name of a transport router

**Mode**    Global Configuration

## sscc update-policy-request enable

---

**Syntax** [ no ] sscc update-policy-request enable

**Release Information** Command introduced in JunosE Release 9.3.0.

**Description** Configures the router to collect updated DSL line rate parameters from an access node using the ANCP topology discovery message and transmit the information to the COPS server with corresponding COPS messages. If you enable this feature, the access node sends line rate parameters not only during connection establishment, but also whenever any of the line rate values changes after the connection is built. The **no** version restores the default, which disables line rate parameters to be sent to the COPS server.



**NOTE:** When you configure the **sscc update-policy-request enable** command, a warning message is displayed, prompting you to confirm whether you want to enable the router that functions as the SRC client to forcibly send updated line rate information parameters to the COPS server, which is running a release of SRC software earlier than Release 3.0.0 that is not compatible with the line rate message format.

**Mode** Global Configuration

**Related Documentation**

- *Configuring the SRC Client* in the *JunosE Broadband Access Configuration Guide*
- Retrieval of DSL Line Rate Information from Access Nodes Overview

## statistics

---

**Syntax**    statistics { time | volume-time }  
             no statistics

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Enables statistics for the service session profile. The **no** version disables statistics for the service session profile.

**Options**    • time—Displays statistics for the time attribute  
             • volume-time—Displays statistics for both the volume and time attributes

**Mode**    Service Session Profile Configuration

## statistics-profile

---

**Syntax** [ no ] statistics-profile *statisticsProfileName*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures a statistics profile. The **no** version removes the named statistics profile.

**Options** • *statisticsProfileName*—Name of the statistics profile

**Mode** Global Configuration

**Related Documentation**

- Configuring Statistic Profiles for QoS
- Configuring Rate Statistics
- Configuring Event Statistics

## strict-priority

---

**Syntax** [ no ] strict-priority

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets strict-priority scheduling for the scheduler node. The **no** version deletes the strict priority setting.

**Mode** Scheduler Profile Configuration

**Related Documentation**

- [Configuring Strict-Priority Scheduling](#)

## strip-domain

---

**Syntax** strip-domain { enable | disable }

no strip-domain

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Strips the domain name from the username before sending an access-request message to the RADIUS server. The domain name is the text after the last @ character. For example, xyz.com is the domain name of the following: fred@abc.com@xyz.com. To stop stripping the domain name, use the **disable** keyword. The **no** version resets the default, **disable**.

- Options**
- enable—Specifies the feature
  - disable—Disables the feature; this is the default setting

**Mode** Domain Map Configuration



## subscriber

---

**Syntax** subscriber { bridgedEthernet | ip } { user | user-prefix } *userName*  
 domain *domainName* [ { password | password-prefix } *password* ]  
 [ no-authenticate ]

no subscriber { bridgedEthernet | ip }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures a local subscriber (when one cannot be obtained externally, as in PPP) on the E Series router to support authentication and configuration from the RADIUS server. The **no** version negates the command.

- Options**
- **bridgedEthernet**—Specifies bridgedEthernet as the upper interface type
  - **ip**—Specifies IP as the upper interface type
  - **user**—Employs the username as specified
  - **user-prefix**—Appends the interface physical location to the username
  - ***userName***—RADIUS username
  - ***domainName***—Domain name
  - **password**—Employs the password as specified
  - **password-prefix**—Appends the interface physical location to the password
  - ***password***—RADIUS password
  - **no-authenticate**—Disables authentication

**Mode** Interface Configuration, Subinterface Configuration

## subscriber disconnect

---

**Syntax** [ no ] subscriber disconnect

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables the E Series router to receive RADIUS-initiated disconnect messages from the RADIUS server. The **no** version restores the default, in which support for RADIUS-initiated disconnect messages is disabled on the router.



.....  
**NOTE:** This command and the RADIUS dynamic-request server feature replace the **radius disconnect client** command, which has been deprecated and may be removed completely in a future release. The RADIUS Disconnect Configuration mode has also been deprecated.  
.....

**Mode** RADIUS Configuration

## subscriber-interface-type

---

<b>Syntax</b>	<code>subscriber-interface-type <i>subscriberInterfaceType</i></code>  <code>no subscriber-interface-type { <i>subscriberInterfaceType</i>   all }</code>
<b>Release Information</b>	Command introduced in JunosE Release 7.1.0.
<b>Description</b>	Assigns a subscriber-interface type to a QoS parameter definition. Subscriber-interface types represent subscriber interfaces to which QoS clients can apply QoS parameter instances obtained through RADIUS, SRC, or QoS profiles. You can specify up to four subscriber-interface types for each parameter definition. The <b>no</b> version removes the subscriber-interface type from the parameter definition.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>subscriberInterfaceType</i>—One of the following subscriber-interface types: atm-vc, ip, ipv6, l2tp-session, vlan</li><li>• all—Removes all subscriber-interface types</li></ul>
<b>Mode</b>	QoS Parameter Definition
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring a Basic Parameter Definition for QoS Administrators</a></li></ul>

## subscriber-policy

---

**Syntax** [ no ] subscriber-policy *subscriberPolicyName*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates a nondefault subscriber policy for a subscriber (client) interface that belongs to a bridge group or to a VPLS instance, and accesses Subscriber Policy Configuration mode from which you define the policy. A subscriber policy is a set of forwarding and filtering rules that specifies how the subscriber interface handles various packet types. The **no** version removes the nondefault subscriber policy from the router.

You cannot change the default subscriber policy values for trunk (server) interfaces that belong to a bridge group or to a VPLS instance. You also cannot change the default subscriber policy values for a VPLS virtual core interface, which acts as a trunk interface. The VPLS virtual core interface represents all the MPLS tunnels from the router to the remote VPLS edge (VE) devices.

**Options**

- *subscriberPolicyName*—Name of the subscriber policy; alphanumeric string of up to 32 characters

**Mode** Global Configuration

## summary-address

**Syntax** IS-IS:

```
summary-address address mask [ level-1 | level-1-2 | level-2 ] [ metric ]
[ tag tagValue ]
```

```
no summary-address address mask [ level-1 | level-1-2 | level-2 ]
```

OSPF:

```
[ no ] summary-address address mask
```

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates aggregate addresses for IS-IS or aggregates external routes at the border of the OSPF domain. The **no** version restores the default.

- Options**
- *address*—Summary IP address designated for a range of addresses
  - *mask*—IP subnet mask used for the summary route
  - *level-1*—Summarizes routes redistributed into level 1; when distributing routes domain wide, summarizes routes leaked from level 2 into level 1
  - *level-1-2*—Summarizes routes redistributed into level 1 and level 2 IS-IS, and routes leaked between levels
  - *level-2*—Summarizes routes learned by level 1 routing into the level 2 backbone with the configured address/mask value; also summarizes routes redistributed into level 2 IS-IS
  - *metric*—Number in the range 1–16777215; the default metric value. The summary uses this value when advertising the summary address. When no metric is supplied, uses the value of the lowest-cost route that this is summarizing (default).
  - *tagValue*—Number in the range 1–4294967295 that identifies the route tag assigned to the IS-IS summary address

**Mode** Router Configuration

## summary-prefix

---

**Syntax** For IS-IS from Address Family Configuration mode:

```
summary-prefix ipv6Prefix [ level-1 | level-1-2 | level-2 ] [ metricValue ] [ tagValue ]
```

```
no summary-prefix ipv6Prefix
```

For OSPFv3 from Router Configuration mode:

```
[ no ] summary-prefix ipv6Prefix/ipv6prefixLength
```

**Release Information** Command introduced before JunosE Release 7.1.0.  
IS-IS version added in JunosE Release 8.2.0.

**Description** In Address Family configuration mode, aggregates external IPv6 routes at the border of the IS-IS domain. In Router Configuration mode, aggregates external IPv6 routes at the border of the OSPFv3 domain. The **no** version restores the default.

- Options**
- **level-1**—Specifies the aggregation of IPv6 routes into IS-IS level 1
  - **level-1-2**—Specifies the aggregation of IPv6 routes into IS-IS level 1 and level 2
  - **level-2**—Specifies the aggregation of IPv6 routes into IS-IS level 2
  - ***metricValue***—Metric (cost) for the interface to links at the specified level; number in the range 1–16777215
  - ***tagValue***—Number in the range 1–4294967295 that identifies the route tag assigned to the IS-IS interface
  - ***ipv6Prefix***—IPv6 network number
  - ***ipv6PrefixLength***—Length of the IPv6 prefix; a decimal value that indicates how many of the higher-order contiguous bits of the IPv6 address comprise the prefix (the network portion of the IPv6 address). A slash (/) must precede this value.

**Mode** Address Family Configuration (IS-IS), Router Configuration (OSPFv3)

## suppress-default

---

**Syntax** [ no ] suppress-default

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Suppresses an IS-IS level 1-2 router from indicating that it can reach destinations outside the area, thus preventing level 1 routers from installing a default route to the level 1-2 router. The **no** version disables suppression of default routes.

**Mode** Router Configuration

## suspicious-control-flow-detection grouping-off

---

**Syntax** [ no ] suspicious-control-flow-detection grouping-off

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Turns off suspicious control flow detection overflow protection; flows are grouped into larger entities when the line module flow table overflows. The **no** version turns on overflow protection, which is the default.

**Mode** Global Configuration



## suspicious-control-flow-detection off

---

**Syntax** [ no ] suspicious-control-flow-detection off

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Turns off suspicious control flow detection. The **no** version turns on suspicious control flow detection, which is the default.

**Mode** Global Configuration

## suspicious-control-flow-detection protocol backoff-time

---

**Syntax**    suspicious-control-flow-detection protocol *protocolValue* backoff-time *backoffTimeValue*  
              no suspicious-control-flow-detection protocol *protocolValue* backoff-time

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Sets the backoff expiration time when the flow is no longer considered suspicious for a specific protocol. The **no** version restores the default value of 300 seconds for a protocol.

**Options**    • *protocolValue*—Name of the protocol  
              • *backoffTimeValue*—Period of time in seconds; 0 or a number in the range 10–1000; a value of zero means that a suspicious flow does not change to the nonsuspicious state because of a timeout; if the low threshold value is zero and the backoff time is zero, the flow is only considered no longer suspicious if the rate (in packets per second) goes to zero

**Mode**    Global Configuration

## suspicious-control-flow-detection protocol low-threshold

---

**Syntax** suspicious-control-flow-detection protocol *protocolValue*  
low-threshold *lowThresholdValue*

no suspicious-control-flow-detection protocol *protocolValue* low-threshold

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Sets the low threshold rate at which a suspicious flow becomes no longer suspicious for a specific protocol. The **no** version restores the default for a protocol, which is a protocol-dependent non-zero numeric value.

- Options**
- *protocolValue*—Name of the protocol
  - *lowThresholdValue*—Threshold value in packets per second; 0 or a number in the range 1–32767; a value of zero means that a suspicious flow cannot change to the nonsuspicious state via a threshold; a flow can only become nonsuspicious via a backoff time; if the low threshold value is zero and the backoff time is zero, the flow can only be considered nonsuspicious if the rate (in packets per second) goes to zero

**Mode** Global Configuration

## suspicious-control-flow-detection protocol threshold

---

**Syntax**    suspicious-control-flow-detection protocol *protocolValue* threshold *thresholdValue*  
              no suspicious-control-flow-detection protocol *protocolValue* threshold

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Sets a threshold rate at which a flow becomes suspicious for a specific protocol. The **no** version restores the default for a protocol, which is a protocol-dependent numeric value.

**Options**    • *protocolValue*—Name of the protocol  
              • *thresholdValue*—Zero or a number in the range 3–65535; when set to zero, no flows for the protocol type are considered suspicious

**Mode**    Global Configuration

---

## svlan ethertype

---

<b>Syntax</b>	<code>svlan ethertype <i>ethertypeValue</i></code>  <code>no svlan ethertype</code>
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>88a8</b> keyword added in JunosE Release 7.1.0.
<b>Description</b>	<p>In Interface Configuration mode, specifies the EtherType of an S-VLAN. The <b>no</b> version restores the default value, 9100.</p> <p>In Profile Configuration mode, specifies the available EtherTypes that the packet must use to create a dynamic VLAN subinterface. The <b>no</b> version restores the default value, <code>autoconfig</code>.</p>
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>ethertypeValue</i>—One of the following EtherType values:<ul style="list-style-type: none"><li>• 8100—Specifies EtherType value 0x8100, as defined in IEEE Standard 802.1q</li><li>• 88a8—Specifies EtherType value 0x88a8, as defined in draft IEEE Standard 802.1ad</li><li>• 9100—Specifies EtherType value 0x9100, which is the default for Interface Configuration mode</li><li>• <code>autoconfig</code>—Specifies in a VLAN profile that the packet can use any EtherType to create a dynamic VLAN subinterface; this is the default for Profile Configuration mode</li></ul></li></ul>
<b>Mode</b>	Interface Configuration, Profile Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring S-VLAN Tunnels for Layer 2 Services</i> in the <i>JunosE BGP and MPLS Configuration Guide</i></li></ul>

## svlan id

---

<b>Syntax</b>	<code>svlan id s-vlanIdValue { vlanIdValue   any   anyuntagged } [ icr-control-interface ] [ mac-address macAddress ]</code>
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>anyUntagged</b> keyword added in JunosE Release 10.0.0. <b>icr-control-interface</b> keyword added in JunosE Release 10.3.0.
<b>Description</b>	Assigns an S-VLAN ID and a VLAN ID to a VLAN subinterface, or, with the use of the <b>any</b> keyword, creates an S-VLAN tunnel. Sets the C-VLAN ID as 0 or untagged to transport both customer-tagged and customer-VLAN-untagged frames inside a predefined stacked-tag over a single pseudowire. Sets an S-VLAN ID and a VLAN ID to a VLAN subinterface on which an ICR partition is to be configured. There is no <b>no</b> version.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>s-vlanIdValue</i>—S-VLAN ID number in the range 0–4095, which is unique within the Ethernet interface.</li><li>• <i>vlanIdValue</i>—VLAN ID number in the range 0–4095, which is unique within the Ethernet interface.</li><li>• <i>any</i>—Tunnels traffic from VLANs configured with the specified S-VLAN ID and any VLAN ID to the same destination across an MPLS network.</li><li>• <i>anyUntagged</i>—Sets the customer-VLAN (C-VLAN) ID configured inside an S-VLAN as part of a pseudowire as 0. Tunnels traffic from VLANs configured with the specified S-VLAN ID, whose Ethertype is not 8100, and an untagged C-VLAN ID to the same destination across an MPLS network. Enables both double-tagged and single-tagged traffic that matches the S-VLAN ID to pass through the subinterface.</li><li>• <i>icr-control-interface</i>—Sets the VLAN subinterface as an ICR control interface on which you want to configure the ICR partition. We recommend that you use this option only if you want the VLAN subinterface to be used to create ICR partitions.</li><li>• <i>macAddress</i>—MAC address of the interface; when you do not specify a unique MAC address, the S-VLAN uses the MAC address of the Ethernet interface.</li></ul>
<b>Mode</b>	Interface Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring S-VLAN Tunnels for Layer 2 Services</i>, and <i>Configuring an S-VLAN Subinterface with an Untagged C-VLAN ID</i> in the <i>JunosE BGP and MPLS Configuration Guide</i></li></ul>

## svlan qos-parameter

---

**Syntax** `svlan s-vlanIdValue qos-parameter qosParameterInstanceName qosParameterValue`  
`no svlan s-vlanIdValue qos-parameter qosParameterInstanceName`

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** Attaches a QoS parameter instance to the specified S-VLAN ID on the Ethernet major interface. The **no** version detaches the parameter instance from the S-VLAN ID.

- Options**
- *s-vlanIdValue*—S-VLAN ID number in the range 0–4095
  - *qosParameterInstanceName*—Name of the parameter instance that you want to attach to the VP
  - *qosParameterInstanceValue*—Number of the scheduler rate for the parameter instance; the default value is the minimum value defined in the parameter definition

**Mode** Interface Configuration

**Related Documentation**

- Creating Parameter Instances

## svlan qos-profile

---

**Syntax** [ no ] svlan *s-vlanIdValue* qos-profile *qosProfileName*

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** Attaches a QoS profile to the specified S-VLAN ID on the interface. The **no** version detaches the QoS profile from the S-VLAN ID.

**Options**

- *s-vlanIdValue*—S-VLAN ID number in the range 0–4095
- *qosProfileName*—Name of the QoS profile that you want to attach to the S-VLAN ID

**Mode** Interface Configuration

**Related Documentation**

- Attaching a QoS Profile to an Interface



## switch-profile

---

**Syntax**    `switch-profile profileName`

`no switch-profile`

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    From Domain Map Tunnel Configuration mode, applies the specified L2TP tunnel switch profile to sessions associated with an AAA domain map. From Tunnel Group Tunnel Configuration mode, applies the specified L2TP tunnel switch profile to sessions associated with an AAA tunnel group. An L2TP tunnel switch profile defines the L2TP tunnel switching behavior for the interfaces to which this profile is assigned. The **no** version removes the tunnel switch profile assignment from the AAA domain map or AAA tunnel group.

**Options**

- *profileName*—Name of the tunnel switch profile; a string of up to 64 alphanumeric characters

**Mode**    Domain Map Tunnel Configuration, Tunnel Group Tunnel Configuration

## synchronization

---

**Syntax** [ no ] synchronization

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables synchronization between BGP and your IGP. The **no** version advertises a network route without waiting for the IGP.

**Mode** Address Family Configuration, Router Configuration

---

## synchronize

---

**Syntax** To force the NVS file system of the redundant SRP module to synchronize with the NVS file system of the primary SRP module:

synchronize

To force the system to validate all NVS files or only configuration files, and to synchronize all files that failed the checksum test as well as any other unsynchronized files:

synchronize low-level-check { all | configuration }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Forces the NVS file system of the redundant SRP module to synchronize with the NVS file system of the primary SRP module. Optionally, you can use the **low-level-check** keyword to force the system to validate all files or only configuration files in NVS, and to synchronize all files that failed the checksum validation test during the flash-disk compare command as well as any other files that are unsynchronized. There is no **no** version.

- Options**
- **all**—Validates all files in NVS, and synchronizes all files that failed the checksum test as well as any other unsynchronized files; this option can take several minutes to complete
  - **configuration**—Validates all configuration files in NVS, and synchronizes all files that failed the checksum test as well as any other unsynchronized files; this option takes less time to complete because it validates only a subset of the files in the NVS file system

**Mode** Privileged Exec



## CHAPTER 8

# T Commands

## t1 bert

---

**Syntax**    `t1 channel bert pattern pattern interval time [ unframed ]`  
`no t1 channel bert`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables bit error rate tests using the specified pattern on a T1 line on a CT3 module. The **no** version stops the test that is running.

- Options**
- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *pattern*—One of the following test patterns
    - 0s—Repetitive test pattern of all zeros, 00000...
    - 1s—Repetitive test pattern of all ones, 11111...
    - 2^11—Pseudorandom test pattern, 2047 bits in length
    - 2^15—Pseudorandom test pattern, 32767 bits in length
    - 2^20-O153—Pseudorandom test pattern, 1048575 bits in length
    - 2^20-QRSS—Pseudorandom QRSS test pattern, 1048575 bits in length
    - 2^23—Pseudorandom test pattern, 8388607 bits in length
    - alt-0-1—Repetitive alternating test pattern of zeros and ones, 01010101...
  - *time*—Duration of the test in the range 1–1440 minutes
  - *unframed*—Specifies that the test bit pattern occupies all bits on the link, overwriting the framing bits. If you do not specify the **unframed** keyword, then the test bit pattern occupies only T1 payload bits.

**Mode**    Controller Configuration

## t1 clock source

---

**Syntax**    `t1 channel clock source { line | internal { module | chassis } }`  
`no t1 channel clock source`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Determines which end of the T1 interface provides clocking. The **no** version uses the default value, **line**.

- Options**
- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *line*—Interface transmits data from a clock recovered from the line's receive data stream
  - *internal*—Interface transmits data using its internal clock. You must specify one of the following for internal clocking:
    - *module*—Internal clock is from the line module itself
    - *chassis*—Internal clock is from the configured system clock

**Mode**    Controller Configuration

## t1 description

---

**Syntax**    `t1 channel [ /subchannel ] description name`  
              `no t1 channel [ /subchannel ] description`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns a text description or an alias to a T1 or fractional T1 channel on a CT3 module. Use the [show controllers t1](#) command to display the text description. The **no** version removes the description or alias.

- Options**
- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *subchannel*—FT1 subchannel on a T1 interface in the range 1–24
  - *name*—Text string or alias of up to 80 characters for the T1 or fractional T1 channel on the CT3 module

**Mode**    Controller Configuration



## t1 fdl

---

**Syntax**    `t1 channel fdl { ansi | att | all | none }`  
`no t1 channel fdl [ ansi | att | all ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the FDL standard used by a specific T1 channel on the CT3 interface. The **no** version restores the default, none.

- Options**
- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *ansi*—Specifies ANSI T1.403 Standard for extended superframe FDL exchange support
  - *att*—Specifies AT&T Technical Reference 54016 for extended superframe FDL exchange support
  - *all*—Specifies both the AT&T and ANSI mode for extended superframe FDL exchange support
  - *none*—Removes the current FDL mode settings

**Mode**    Controller Configuration

## t1 fdl carrier

---

**Syntax** [ no ] t1 *channel* fdl carrier

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies that an interface is used in the carrier environment of a T1 channel on a CT3 interface. The **no** version restores the default situation, in which an interface does not operate in the carrier environment.

**Options**

- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27

**Mode** Controller Configuration

## t1 fdl string

**Syntax** `t1 channel fdl string { eic eicValue | fic ficValue | lic licValue | unit unitValue | pfi pfiValue | port portValue | generator generatorValue }`

`no t1 channel fdl string { eic | fic | lic | unit | pfi | port | generator }`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Defines an FDL message on a T1 channel on a CT3 interface as defined in the ANSI T1.403 specification. Currently, FDL strings can be configured only locally. The **no** version restores the default value to the specified FDL message or to all FDL messages.

- Options**
- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *eicValue*—Equipment identification code; 1–10 characters; default value is the null value
  - *ficValue*—Frame identification code; 1–10 characters; default value is the null value
  - *licValue*—Line identification code; 1–10 characters; default value is the null value
  - *unitValue*—Unit identification code; 1–6 characters; default value is the null value.
  - *pfiValue*—Facility identification code to send in the FDL path message; 1–38 characters; default value is the null value.
  - *portValue*—Equipment port number to send in the FDL idle signal message; 1–38 characters; default value is the null value.
  - *generatorValue*—Generator number to send in the FDL test signal message; 1–38 characters; default value is the null value.

**Mode** Controller Configuration

## t1 fdl transmit

---

**Syntax**    `t1 channel fdl transmit { path-id | idle-signal | test-signal }`  
              `no t1 channel fdl transmit [ path-id | idle-signal | test-signal ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the router to send the specified FDL message on a T1 channel on a CT3 interface. The **no** version stops the router from sending the specified FDL message or all FDL messages.

- Options**
- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *path-id*—Transmits a path identification message every second; default value is disabled
  - *idle-signal*—Transmits an idle signal message every second; default value is disabled
  - *test-signal*—Transmits a test signal message every second; default value is disabled

**Mode**    Controller Configuration

## t1 framing

---

**Syntax**    `t1 channel framing { esf | sf }`  
`no t1 channel framing`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the type of framing used by a specific T1 channel on a CT3 interface. The **no** version restores the default value, `esf`.

- Options**
- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *esf*—Specifies extended superframe
  - *sf*—Specifies superframe

**Mode**    Controller Configuration

## t1 lineCoding

---

**Syntax**    `t1 channel lineCoding { ami | b8zs }`

`no t1 channel lineCoding`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the type of line coding used by a specific T1 channel on a CT3 interface. The **no** version restores the default value, b8zs.



.....  
**NOTE:** This command is deprecated and may be removed completely in a future release. No alternate command exists, because line coding can be specified only on the bottom layer.  
.....

- Options**
- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *ami*—Specifies alternate mark inversion
  - *b8zs*—Specifies bipolar with eight-zero substitution

**Mode**    Controller Configuration

## t1 loopback

**Syntax** `t1 t1Channel loopback [ local | network { line | payload } ]`

`no t1 t1Channel loopback`

`t1 t1Channel loopback remote { line { fdl { ansi | bellcore } | inband } | payload [ fdl ] [ ansi ] }`

`no t1 t1Channel loopback remote`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures a loopback test for a T1 line on a CT3 module. The `no` version deactivates the loopback test; if you specify the **remote** keyword, the `no` version sends the 16-bit ESF data link code word or inband pattern to deactivate the loopback at the remote end based on the last activate request sent to the remote end. If you do not specify the **remote** keyword, the `no` version clears the local loopback configuration.

- Options**
- *t1Channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - `local`—Loops the router output data back toward the router at the T1 framer; on supported line modules also sends an alarm indication signal (AIS) out toward the network. This is the default setting if you specify no optional keywords.
  - `network line`—Loops the data back toward the network before the T1 framer and automatically sets a local loopback at the HDLC controllers
  - `network payload`—Loops the payload data back toward the network at the T1 framer and automatically sets a local loopback at the HDLC controllers
  - `remote line fdl ansi`—Sends a repeating 16-bit ESF data link code word (00001110 11111111) to the remote end requesting that it enter into a network line loopback. The **ansi** keyword enables the remote line FDL ANSI bit loopback on the T1 channel, according to the ANSI T1.403 specification.
  - `remote line fdl bellcore`—Sends a repeating 16-bit ESF data link code word (00010010 11111111) to the remote end, requesting that it enter into a network line loopback. The **bellcore** keyword enables the remote line FDL Bellcore bit loopback on the T1 channel, according to the Bellcore TR-TSY-000312 specification.
  - `remote line inband`—Sends a repeating 5-bit inband pattern (00001) to the remote end, requesting that it enter into a network line loopback
  - `remote payload [ fdl ] [ ansi ]`—Sends a repeating 16-bit ESF data link code word (00010100 11111111) to the remote end, requesting that it enter into a network payload loopback. Enables the remote payload FDL ANSI bit loopback on the T1 channel. You can optionally specify `fdl` and `ansi`, but it is not necessary.

**Mode** Controller Configuration

## t1 remote-loopback

---

**Syntax** [ no ] t1 *channel* remote-loopback

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables the acceptance of loopback commands issued from a remote router. The **no** version restores the default value, which is to reject loopback commands issued from a remote router.

**Options**

- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27

**Mode** Controller Configuration



## t1 shutdown

---

**Syntax**    [ no ] t1 *channel* [ /*subchannel* ] shutdown

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Disables a T1 or fractional T1 channel on a CT3 interface. The **no** version restarts a disabled interface.

- Options**
- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *subchannel*—FT1 subchannel on a T1 interface, in the range 1–24

**Mode**    Controller Configuration

## t1 snmp trap link-status

---

**Syntax**    [ no ] t1 *channel* [ /*subchannel* ] snmp trap link-status

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Enables processing of SNMP link status information about a T1 or fractional T1 channel on a CT3 interface. The **no** version disables the processing of SNMP link status information.

- Options**
- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27
  - *subchannel*—Specifies the FT1 subchannel on a T1 interface, in the range 1–24

**Mode**    Controller Configuration

## t1 timeslots

---

**Syntax**    `t1 channel/subchannel timeslots range [ speed { 56 | 64 } ]`  
`no t1 subchannel`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the timeslots and data rate used on each T1 channel on the CT3 interface. The **no** version deletes the fractional T1 circuit.

- Options**
- *channel*—T1 channel number in the range 1–28
  - *subchannel*—Subchannel specifies the logical subchannel on a T1 in the range 1–24
  - *range*—Specifies the timeslot assigned to the T1 channel, in the range 1–24. A dash represents a range of timeslots, and a comma separates timeslots. For example, 1-10, 15-18 assigns timeslots 1 through 10 and 15 through 18.
  - *speed*—Specifies the data rate for the T1 channel, either 56 Kbps or 64 Kbps; default value is 64 Kbps

**Mode**    Controller Configuration

## t1 yellow

---

**Syntax** [ no ] t1 *channel* yellow { generate | detect }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Generates or detects a yellow alarm for a T1 channel on a CT3 interface. The **no** version restores the default value, to not generate or to not detect a yellow alarm.

**Options**

- *channel*—One or more individual T1 channels, ranges of T1 channels, or combination of individual channels and ranges, in the range 1–28 (no spaces); for example, 3,7-15,19-13,27

**Mode** Controller Configuration

---

## table-map

---

**Syntax** `table-map mapTag`

For removing route maps for IS-IS IPv6 only:

`no table-map`

For removing route maps for all other cases:

`no table-map [ mapTag ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Applies the specified route map to all BGP, IS-IS, OSPF, or RIP routes about to be added to the IP routing table. The **no** version halts application of the route map.

- Options**
- *mapTag*—A string of up to 32 alphanumeric characters that specifies the name of the route map; for each protocol, the route map can set only the following values:
    - BGP—Distance, IP next hop, level, metric, metric type, route type, and tag values
    - IS-IS—Distance, level, metric, metric type, origin, preference, route type, and tag values; IS-IS IPv6 supports only a single route map
    - OSPF—Distance, metric, metric type, route type, and tag values
    - RIP—Distance, metric, and tag values

**Mode** Address Family Configuration (BGP, IS-IS, RIP), Router Configuration (BGP, IS-IS, OSPF, RIP)

## tacacs-server host

---

**Syntax**    tacacs-server host *ipAddress* [ port *portNumber* ]  
              [ timeout *timeoutValue* ] [ key *keyValueString* ] [ primary ]  
  
              no tacacs-server host *ipAddress*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Adds or deletes a host to or from the list of TACACS+ servers. If the host is not assigned as the primary host, the router assigns an existing host as the primary. The **no** version deletes the host from the list of TACACS+ servers.

- Options**
- *ipAddress*—IP address of the TACACS+ server
  - *portNumber*—TACACS+ server's TCP port number in the range 1–65535
  - *timeoutValue*—Response timeout interval for the TACACS+ client to server exchange; number in the range 1–255; default value is 5
  - *keyValueString*—Secret used in TACACS+ client to server exchange; string of up to 100 characters
  - *primary*—Assigns the host as the primary host

**Mode**    Global Configuration

## **tacacs-server key**

---

**Syntax**    `tacacs-server key keyValueString`  
`no tacacs-server key`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets or resets the authentication and encryption key value shared by all TACACS+ servers that do not have a server-specific key set up by the **tacacs-server host** command. The **no** version removes the key value shared by all TACACS+ servers.

**Options**

- *keyValueString*—String of up to 100 characters; must match key configured on the TACACS+ daemon

**Mode**    Global Configuration

## **tacacs-server source-address**

---

**Syntax**    tacacs-server source-address *ipAddress*

             no tacacs-server source-address

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets or resets an alternative source address to be used for TACACS+ server communications. The **no** version removes the address.

**Options**    • *ipAddress*—IP address used as source by the TACACS+ server

**Mode**    Global Configuration



## **tacacs-server timeout**

---

**Syntax**    tacacs-server timeout *timeoutValue*

no tacacs-server timeout

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the interval in seconds that the server waits for the TACACS+ server host to reply. This value is shared by those TACACS+ servers that do not have a timeout interval set by the **tacacs-server host** command. The **no** version resets the timeout interval shared by all TACACS+ servers.

**Options**    • *timeoutValue*—Response timeout interval for the TACACS+ client to server exchange; number in the range 1–255; default value is 5

**Mode**    Global Configuration

## tag

---

**Syntax**    `tag tagValue`

`no tag`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies a user-defined tag. You can configure a tag for both echo and echoPath types. The **no** version removes the tag from the operation.

**Options**    • *tagValue*—Name of a group to which the operation belongs; string of 0–255 ASCII characters; default value is to have no tag

**Mode**    RTR Configuration

## tag-group

---

**Syntax**    `tag-group tagGroup`

`no tag-group`

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Configures an interface tag group. The **no** version removes the tag group.

**Options**    • *tagGroup*—Name of the interface tag group

**Mode**    Interface Configuration

## tcp ack-rst-and-syn

---

**Syntax** [ no ] [ ip ] tcp ack-rst-and-syn [ vrf *vrfName* ]

**Release Information** Command introduced before JunosE Release 7.1.0  
**ip** keyword made optional in JunosE Release 7.2.0.

**Description** Enables TCP ACK message validation along with TCP RST and SYN attack protection on the virtual router. The **no** version disables this protection.

**Options**

- **ip**—Optional keyword for use with older scripts
- **vrfName**—Name of the VRF; string of 1–32 alphanumeric characters

**Mode** Global Configuration

## tcp mss

**Syntax** [ ip ] tcp mss [ vrf *vrfName* ] *mssValue*

no [ ip ] tcp mss [ vrf *vrfName* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
ip keyword made optional in JunosE Release 7.2.0.

**Description** Specifies the MSS value for TCP to use. The **no** version removes the MSS value, and the router uses the advertised MSS derived from the MTU of the output interface.



**NOTE:** The MSS value is equal to the MTU value minus the IP or IPv6 and TCP headers. This means that the MSS value is generally 40 bytes less than the MTU (for IPv4) and 60 bytes less than the MTU (for IPv6).

- Options**
- **ip**—Optional keyword for use with older scripts
  - **vrfName**—Name of the VRF; string of 1–32 alphanumeric characters
  - **mssValue**—Value for MSS that you want TCP to use; in the range 536–65495 bytes for IPv4 and 1280–65495 bytes for IPv6

**Mode** Interface Configuration

## tcp path-mtu-discovery

---

**Syntax** [ ip ] tcp path-mtu-discovery [ vrf *vrfName* ] [ age-timer [ indefinite | *minutes* [ *minutes\_2* ] ] | max-mtu *maxMtu* | min-mtu *minMtu* | black-hole-detect-threshold *blackHoleThreshold* ]

no [ ip ] tcp path-mtu-discovery [ vrf *vrfName* ] [ age-timer | max-mtu | min-mtu | black-hole-detect-threshold ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**ip** keyword made optional in JunosE Release 7.2.0.

**Description** Enables and configures path MTU discovery on the virtual router. Issuing the command without any keywords enables path MTU discovery. Using the keywords with the command configures specified values. The **no** version, when issued with a keyword, deletes the value. When issued without any keywords, the **no** version disables path MTU discovery on the virtual router.

- Options**
- **ip**—Optional keyword for use with older scripts
  - **vrfName**—Name of the VRF; string of 1–32 alphanumeric characters
  - **indefinite**—Disables aging functions. That is, TCP does not attempt to increase the path MTU; the path MTU decreases only in response to received ICMP Too Big messages.
  - **minutes**—Time (in minutes) that TCP waits after receiving an ICMP Too Big message before attempting to increase the path MTU. The timer range is 1–30 minutes.
  - **minutes\_2**—Time (in minutes) that TCP waits after a successful path MTU increase before attempting to increase it again. The timer range is 1–30 minutes.
  - **maxMtu**—Maximum MTU size that the virtual router can accept; number, in the range 68–65535; default value is no limit
  - **minMtu**—Minimum MTU value that the virtual router can accept; number, in the range 68–65535; default value is no limit
  - **blackHoleThreshold**—Black hole threshold value that you want all connections on this virtual router to use. The range is 0–65535.

**Mode** Router Configuration

## tcp paws-disable

---

**Syntax** [ no ] [ ip ] tcp paws-disable [ vrf *vrfName* ]

**Release Information** Command introduced in JunosE Release 7.1.0.  
**ip** keyword made optional in JunosE Release 7.2.0.

**Description** Disables the Protect Against Wrapped Sequence (PAWS) number option in TCP segments. The **no** version restores PAWS processing (the default mode).

- Options**
- **ip**—Optional keyword for use with older scripts
  - *vrfName*—Name of the VRF; string of 1–32 alphanumeric characters

**Mode** Global Configuration

## tcp resequence-buffers connection-maximum

---

**Syntax** [ ip ] tcp resequence-buffers [ vrf *vrfName* ] connection-maximum *connMaxValue*  
no [ ip ] tcp resequence-buffers [ vrf *vrfName* ] connection-maximum

**Release Information** Command introduced before JunosE Release 7.1.0.  
**ip** keyword made optional in JunosE Release 7.2.0.

**Description** Defines the maximum number of buffers that connections on the current or specified virtual router can use. Specifying a value of zero (0) turns off the connection maximum. The **no** version reverts the connection maximum value to its default (10 buffers).

- Options**
- **ip**—Optional keyword for use with older scripts
  - *vrfName*—Name of the VRF; string of 1–32 alphanumeric characters
  - *connMaxValue*—Maximum number of buffers for each virtual router connection, in the range 1–65535

**Mode** Global Configuration



## tcp resequence-buffers default-connection-maximum

---

**Syntax** [ ip ] tcp resequence-buffers default-connection-maximum *defaultConnMaxValue*  
no [ ip ] tcp resequence-buffers default-connection-maximum

**Release Information** Command introduced before JunosE Release 7.1.0.  
**ip** keyword made optional in JunosE Release 7.2.0.

**Description** Specifies the default buffer limit assigned to all TCP connections on a virtual router unless a specific limit is set for the VR in which the connection is established. Specifying a value of zero (0) buffers turns off the default limit. The **no** version reverts the connection maximum value to its default (10 buffers).

**Options**

- **ip**—Optional keyword for use with older scripts
- *defaultConnMaxValue*—Default number of maximum buffers for newly created connections on a virtual router, in the range 1–65535

**Mode** Global Configuration

## tcp resequence-buffers default-vr-maximum

---

**Syntax** [ ip ] tcp resequence-buffers default-vr-maximum *defaultVrMaxValue*  
no [ ip ] tcp resequence-buffers default-vr-maximum

**Release Information** Command introduced before JunosE Release 7.1.0.  
**ip** keyword made optional in JunosE Release 7.2.0.

**Description** Specifies the default buffer limit assigned to all virtual routers when the virtual router is established. Specifying a value of zero (0) turns off the limit assignment. The **no** version reverts the virtual router maximum value to its default (100 buffers).

**Options**

- **ip**—Optional keyword for use with older scripts
- *defaultVrMaxValue*—Default number of maximum buffers for newly established virtual routers, in the range 1–65535

**Mode** Global Configuration

## tcp resequence-buffers global-maximum

---

**Syntax**    ip tcp resequence-buffers global-maximum *globalMaxValue*  
              no [ ip ] tcp resequence-buffers global-maximum

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **ip** keyword made optional in JunosE Release 7.2.0.

**Description**    Specifies a router-wide maximum number of buffers that resequencing queues can contain. Specifying a value of zero (0) turns off the limit. The **no** version reverts the global maximum buffer value to its default (1000 buffers).

**Options**    • ip—Optional keyword for use with older scripts  
              • *globalMaxValue*—Maximum number of buffers in the range 1–65535

**Mode**    Global Configuration

## tcp resequence-buffers vr-maximum

---

**Syntax** [ ip ] tcp resequence-buffers [ vrf *vrfName* ] vr-maximum *vrMaxValue*  
no [ ip ] tcp resequence-buffers [ vrf *vrfName* ] vr-maximum

**Release Information** Command introduced before JunosE Release 7.1.0.  
**ip** keyword made optional in JunosE Release 7.2.0.

**Description** Defines the maximum number of buffers that the current or specified virtual router can use. Specifying a value of zero (0) turns off the limit assignment. The **no** version reverts the virtual router maximum value to its default (100 buffers).

- Options**
- **ip**—Optional keyword for use with older scripts
  - *vrfName*—Name of the VRF; string of 1–32 alphanumeric characters
  - *vrMaxValue*—Virtual router maximum in the range 1–65535

**Mode** Global Configuration

## tech-support encoded-string

---

**Syntax**    tech-support slot *slotNumber* [ connection { reliable | fast } ] encoded-string *string*

**Release Information**    Command introduced before JunosE Release 7.1.0.  
                              **slot and connection** keywords added in JunosE Release 9.1.0.

**Description**    Executes the specified encoded command string to gather information to return to Juniper Networks customer support. Use this command only under the direction of Juniper Networks customer support. By default, this command requires level 15 access. There is no **no** version.

- Options**
- *slotNumber*—Number of a selected slot in the router
  - connection—Specifies the connection type:
    - reliable—Use a reliable connection with a slower response time, which is the default
    - fast—Use a less reliable connection with a faster response time, which could be unsuccessful for certain conditions
  - *string*—Encoded string provided by Juniper Networks Customer Support

**Mode**    Privileged Exec

## telnet

---

**Syntax** `telnet ipAddress | hostname [ vrf vrfName ] [ ipPortNumber | ipPortType ]`  
`[ source-interface interfaceType interfaceSpecifier | noecho | line | debug |`  
`verbose ]*`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables connections to remote routers via the embedded Telnet client. There is no **no** version.

- Options**
- *ipAddress*—IP address of the remote router
  - *hostname*—Name of the remote router
  - *vrfName*—Name of the VRF to which the command applies; string of 1–32 alphanumeric characters
  - *ipPortNumber*—Number of the port for the connection to the remote router, in the range 0–65535; default value is port number 23, the Telnet port. For more information about port numbers and associated processes, see [www.iana.org](http://www.iana.org).
  - *ipPortType*—Name of a well-known port, as follows:
    - *bgp*—Border Gateway Protocol (port 179)
    - *chargen*—Character generator (port 19)
    - *cmd*—Remote commands (port 514)
    - *daytime*—Daytime (port 13)
    - *discard*—Discard (port 9)
    - *domain*—Domain Name Service (port 53)
    - *echo*—Echo (port 7)
    - *exec*—Exec (port 512)
    - *finger*—Finger (port 79)
    - *ftp*—File Transfer Protocol (port 21)
    - *ftp-data*—FTP data connections (port 20)
    - *gopher*—Gopher (port 70)
    - *hostname*—NIC hostname server (port 101)
    - *ident*—Ident Protocol (port 113)
    - *irc*—Internet Relay Chat (port 194)
    - *klogin*—Kerberos login (port 543)

- kshell—Kerberos shell (port 544)
- login—Login (port 513)
- lpd—Printer service (port 515)
- nntp—Network News Transport Protocol (port 119)
- pim-auto-rp—Protocol Independent Multicast Auto RP (port 496)
- pop2—Post Office Protocol version 2 (port 109)
- pop3—Post Office Protocol version 2 (port 110)
- smtp—Simple Mail Transport Protocol (port 25)
- sunrpc—Sun Remote Procedure Call (port 111)
- syslog—Syslog (port 514)
- tacacs—Terminal Access Concentrator Access Control System (port 49)
- talk—Talk (port 517)
- telnet—Telnet (port 23)
- time—Time (port 37)
- uucp—Unix-to-Unix Copy Program (port 540)
- whois—Nickname (port 43)
- www —World Wide Web (port 80)
- source-interface—Forces Telnet to use the IP address of the specified interface as the source address for the Telnet connection
  - *interfaceType*—Type of interface to use to obtain the source address for the Telnet connection; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Number of interface to use to obtain the source address for the Telnet connection; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
- noecho—Disables local echo of user input
- line—Enables line mode
- debug—Enables debugging
- verbose—Enables verbose mode
- \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line

**Mode** Privileged Exec

## telnet listen

---

**Syntax**    telnet listen [ port *portValue* ]  
              no telnet listen

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the Telnet daemon to listen in a virtual router other than the default. The **no** version deletes the Telnet daemon.

**Options**    • *portValue*—TCP port on which the Telnet daemon listens; if not specified, uses the default, port 23

**Mode**    Global Configuration



## terminal data-character-bits

---

**Syntax**    terminal data-character-bits { 7 | 8 }

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the number of data bits available for characters for the current session on the terminal screen. There is no **no** version.

- Options**
- 7—Seven data bits per character; this setting supports only characters in the standard ASCII set
  - 8—Eight data bits per character; this is the default setting, which supports the full set of 8-bit international characters

**Mode**    Privileged Exec, User Exec

## terminal length

---

**Syntax**    terminal length *value*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the number of lines on the current terminal screen for the current session. There is no **no** version.

**Options**

- *value*—Number for the screen length in the range 0–512. If 0, the router does not pause between screens of output. If not 0, the router pauses between screens.

**Mode**    Privileged Exec, User Exec

## terminal speed

---

**Syntax**    terminal speed *baudRate*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the speed for the current console session. There is no **no** version.

**Options**    • *baudRate*—Terminal speed for the current console session; one of the following values:  
2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, 115200

**Mode**    Privileged Exec

## terminal width

---

**Syntax**    terminal width *value*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the number of character columns on the current terminal screen for the current line for a session. There is no **no** version.

**Options**    • *value*—Number of characters in the range 30–512

**Mode**    Privileged Exec, User Exec

---

## terminate-code

---

**Syntax**    `terminate-code application terminateReason translationApplication terminateCode`  
`no terminate-code application terminateReason translationApplication`

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Configures custom mappings of application terminate reasons to RADIUS Acct-Terminate-Cause codes. The **no** version restores the default mappings.

- Options**
- *application*—Application; AAA, L2TP, PPP, or RADIUS client
  - *terminateReason*—Reason that the subscriber's session was terminated
  - *translationApplication*—Application whose terminate code is used for the mapping; for example, RADIUS
  - *terminateCode*—Standards-based code used by the translation application to identify the terminate reason; for example, a RADIUS Acct-Terminate-Cause code

**Mode**    Global Configuration

## test aaa

---

**Syntax** test aaa { ppp | mlppp } *userName* [ *password* ] [ virtual-router *vrContext* ]  
[ aaa-profile *profileName* ] [ zero-stats ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Verifies RADIUS authentication and accounting and IP (or IPv6) address assignment setup. The test uses a username and password and attempts to authenticate a user, get an address assignment, and issue a start accounting request. The test immediately terminates the session by issuing a stop accounting request and an address release. Optionally, a virtual router context may be specified. There is no **no** version.

- Options**
- ppp—Indicates a PPP user
  - mlppp—Simulates Multilink PPP
  - *userName*—Username to test
  - *password*—Password to associate with username; the password is optional—when omitted, the RADIUS access request has no User-Password attribute
  - *vrContext*—Virtual router context in which to authenticate the user
  - *profileName*—Name of AAA profile for the user
  - zero-stats—Specifies that accounting statistics should be set to zero for this test
  - *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec

## test bgp ipv6 neighbor

**Syntax** test bgp ipv6  
 [ unicast | multicast | vpnv6 all | vpnv6 vrf *vrfName* | route-target signaling ]  
 neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* }  
 { advertised-routes | routes } [ *ipv6Prefix* ]  
 [ distribute-list *accessListName* |  
 filter-list *asPathAccessListName* [ weight *weightValue* ] |  
 prefix-list *prefixListName* | prefix-tree *prefixTreeName* | route-map *mapTag* ]\*  
 [ fields { *fieldOptions* } ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Tests BGP policy for IPv6 BGP routes advertised to or received from peers without implementing the policy. There is no **no** version.

- Options**
- unicast—Specifies the IPv6 unicast address family and routing table; the default option
  - multicast—Specifies the IPv6 multicast address family and routing table
  - vpnv6 all—Specifies the VPN-IPv6 address family and all IPv6 VPN routing and forwarding instances
  - vpn6 vrf *vrfName*—Specifies the VPN-IPv6 address family and only the IPv6 VPN routing and forwarding instance with the name *vrfName*
  - route-target signaling—Specifies the route-target address family
  - *ipAddress*—IP address of BGP neighbor
  - *ipv6Address*—IPv6 address of BGP neighbor
  - *peerGroupName*—Name of a BGP peer group
  - advertised-routes—Tests only the outgoing advertisements to the specified BGP neighbor or peer group
  - routes—Tests only the incoming routes originating from the specified BGP neighbor or peer group
  - *ipv6Prefix*—IPv6 prefix for which you want information displayed
  - *accessListName*—Name of the access list to use as the distribute list to filter routes by prefix; string of up to 32 alphanumeric characters
  - *asPathAccessListName*—Name of a single AS path access list used to filter routes by AS path; string of up to 32 characters
  - *weightValue*—Weight assigned to incoming routes matched by the AS path access list; integer in the range 0–4294967295
  - *prefixListName*—Name of a BGP prefix list used to filter routes by prefix
  - *prefixTreeName*—Name of a BGP prefix tree used to filter routes by prefix

- *mapTag*—Name of a route map; string of up to 32 alphanumeric characters
- \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- *fields*—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
- *fieldOptions*—Fields to be displayed, in the format  
all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
- all—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
- afi—Address family identifier
- aggregator—AS number and IP address of aggregator
- as-path—AS path through which this route has been advertised
- atomic-aggregate—Whether the atomic aggregate attribute is present
- best—Whether this is the best route for the prefix
- clusters—List of cluster IDs through which the route has been advertised
- communities—Community number associated with the route
- extended-communities—Extended community
- imported—Whether the route was imported
- intro—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- in-label—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- loc-pref—Local preference for the route
- med—Multiexit discriminator for the route
- next-hop—IP address of the next router that is used when forwarding a packet to the destination network
- next-hop-cost—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- origin—Origin of the route
- originator-id—Router ID of the router in the local AS that originated the route



- out-label—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- peer—IP address of BGP peer from which route was learned
- peer-type—Type of BGP peer: internal, external, or confederation
- rd—Route distinguisher
- safi—Subsequent address family identifier
- stale—Route that has gone stale due to peer restart
- unknown-types—Attribute codes for unknown path attributes
- weight—Weight of the route
- \*—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- *filter*—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## test ip bgp neighbor

**Syntax** test ip bgp  
 [ ipv4 unicast | ipv4 multicast | vpnv6 all | vpnv6 vrf *vrfName* |  
 route-target signaling ] neighbor { *ipAddress* | *ipv6Address* | *peerGroupName* } {  
 advertised-routes |  
 routes } [ *routeAddr* [ *routeMask* [ route-rd *distinguisher* ] ] ]  
 [ distribute-list *accessListName* |  
 filter-list *asPathAccessListName* [ weight *weightValue* ] |  
 prefix-list *prefixListName* | prefix-tree *prefixTreeName* | route-map *mapTag* ]\*  
 [ fields { *fieldOptions* } ] [ *filter* ]

**Release Information** Command introduced before JunosE Release 7.1.0.  
**route-target signaling** keywords added in JunosE Release 8.2.0.

**Description** Tests BGP policy for routes advertised to or received from peers without implementing the policy. There is no **no** version.

- Options**
- **ipv4 unicast**—Specifies the IPv4 unicast address family and routing table; the default option
  - **ipv4 multicast**—Specifies the IPv4 multicast address family and routing table
  - **vpnv6 all**—Specifies the IPv4 VPN address family and all IPv4 VPN routing and forwarding instances
  - **vpnv6 vrf *vrfName***—Specifies the IPv4 VPN address family and only the IPv4 VPN routing and forwarding instance with the name *vrfName*
  - **route-target signaling**—Specifies the route-target address family
  - ***ipAddress***—IP address of BGP neighbor
  - ***ipv6Address***—IPv6 address of BGP neighbor
  - ***peerGroupName***—Name of a BGP peer group. If you specify a BGP peer group by using the *peerGroupName* argument, all the members of the peer group inherit the characteristic configured with this command, unless it is overridden for a specific peer.
  - **advertised-routes**—Tests only outgoing advertisements to the specified neighbor
  - **routes**—Tests only the incoming advertisements from the specified neighbor
  - ***routeAddr***—Prefix advertised by BGP
  - ***routeMask***—Subnet mask associated with prefix; if not specified, a best match on *routeAddr* is performed
  - ***distinguisher***—Unique two-part identifier of the format *number1:number2* where:
    - ***number1***—AS number or an IP address
    - ***number2***—Unique integer; 32 bits if *number1* is an AS number; 16 bits if *number1* is an IP address

If not specified, considers all destinations with the same *routeAddress* and *routeMask*.

- *accessListName*—Name of an access list used as a distribute list to filter routes by prefix; string of up to 32 alphanumeric characters
- *asPathAccessListName*—Name of a single AS path access list used to filter routes by AS path; string of up to 32 characters
- *weightValue*—Weight assigned to incoming routes matched by the AS path access list; integer in the range 0–4294967295
- *prefixListName*—Name of a BGP prefix list used to filter routes by prefix
- *prefixTreeName*—Name of a BGP prefix tree used to filter routes by prefix
- *mapTag*—Name of a route map; a string of up to 32 alphanumeric characters
- *\**—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- *fields*—Displays only the specified fields; the display order of the fields is hard-coded and not affected by the order in which you enter them
- *fieldOptions*—Fields to be displayed, in the format  
all | [ afi | aggregator | as-path | atomic-aggregate | best | clusters | communities | extended-communities | imported | intro | in-label | loc-pref | med | next-hop | next-hop-cost | origin | originator-id | out-label | peer | peer-type | rd | safi | stale | unknown-types | weight ]\*
- *all*—All available information; not recommended, because this information for each network does not fit on a single line and is difficult to read
- *afi*—Address family identifier
- *aggregator*—AS number and IP address of aggregator
- *as-path*—AS path through which this route has been advertised
- *atomic-aggregate*—Whether the atomic aggregate attribute is present
- *best*—Whether this is the best route for the prefix
- *clusters*—List of cluster IDs through which the route has been advertised
- *communities*—Community number associated with the route
- *extended-communities*—Extended community
- *imported*—Whether the route was imported
- *intro*—Introductory information about the state of various BGP attributes; this information is displayed only if you specify this keyword
- *in-label*—MPLS label for the route; the label received with incoming MPLS frames; typically, but not always, this is the label advertised to MP-BGP peers
- *loc-pref*—Local preference for the route
- *med*—Multiexit discriminator for the route

- **next-hop**—IP address of the next router that is used when forwarding a packet to the destination network
- **next-hop-cost**—Whether the indirect next hop of the route is unreachable, if not, displays IGP cost to the indirect next hop
- **origin**—Origin of the route
- **originator-id**—Router ID of the router in the local AS that originated the route
- **out-label**—MPLS label for the route; the label sent with outgoing MPLS frames; also the label received from MP-BGP peer; typically, but not always, this is the label received from MP-BGP peers
- **peer**—IP address of BGP peer from which route was learned
- **peer-type**—Type of BGP peer: internal, external, or confederation
- **rd**—Route distinguisher
- **safi**—Subsequent address family identifier
- **stale**—Route that has gone stale due to peer restart
- **unknown-types**—Attribute codes for unknown path attributes
- **weight**—Weight of the route
- **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- **filter**—See [Filtering show Commands on page 4](#)

**Mode** Privileged Exec, User Exec

## threshold

---

**Syntax**    `threshold { sd-ber | sf-ber } rate`  
`no threshold { sd-ber | sf-ber }`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the threshold values for bit error rates used in APS/MSP alarms. This command applies only to the protect interface, and not to the working interface. The **no** version restores the default value, 5 (for the sd-ber bit error rate) or 3 (for the sf-ber bit error rate), for the specified alarm.

- Options**
- **sd-ber**—Bit error rate that specifies signal degradation
  - **sf-ber**—Bit error rate that specifies signal failure
  - **rate**—Integer *n* with available values depending on the bit error rate type you specify; a value of *n* corresponds to a rate of  $10^{-n}$  ( $10e^{-n}$ ) errors per second
    - For sd-ber, an integer in the range 5–9; default value is 5
    - For sf-ber, an integer in the range 3–5; default value is 3

**Mode**    Controller Configuration

## threshold-test

---

**Syntax** threshold-test startup { falling | rising | risingorfalling }

threshold-test absolute-value rising *risingValue* falling *fallingValue*

threshold-test event { rising *eventOwner eventName* | falling *eventOwner eventName* |  
delta-rising *eventOwner eventName* | delta-falling *eventOwner eventName* }

threshold-test delta-value rising *risingValue* falling *fallingValue*

no threshold-test [ startup | absolute-value | delta-value | event rising | event falling |  
event delta-rising | event delta-falling ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Defines the values for an SNMP threshold-test trigger. The **no** version deletes the threshold-test values for this trigger or removes either the threshold startup condition or event binding.

- Options**
- startup—Startup threshold condition that you predict the sample to follow
    - falling—Specifies that the sample values are expected to be falling values
    - rising—Specifies that the sample values are expected to be rising values
    - risingorfalling—Specifies that the sample values might be either rising values or falling values
  - absolute-value—Specifies that the trigger is monitoring absolute threshold values
  - *risingValue*—Rising threshold value for the trigger, in the range -2147483648–2147483648
  - *fallingValue*—Falling threshold value for the trigger, in the range -2147483648–2147483648
  - event—Binds an event owner and name to specific events on which the threshold-test might trigger: rising values within a sample, falling values within a sample, rising values between samples, or falling values between samples
  - *eventOwner*—Event owner name; string of up to 32 alphanumeric characters
  - *eventName*—Event name; string of up to 32 alphanumeric characters
  - delta-value—Specifies that the trigger is monitoring the difference (delta)( between sample values

**Mode** SNMP Trigger Configuration

## time

---

**Syntax**    `time seconds`

`no time`

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Configures the threshold for the amount of time that the service session can be active for a subscriber. The service is terminated when the time expires. The **no** version removes the time attribute from the service session profile.

**Options**    • `seconds`—Number of seconds in the range 0–16777251

**Mode**    Service Session Profile Configuration

## timeout

---

**Syntax**    RADIUS:

`timeout waitTime`

`no timeout`

              RTR:

`timeout timeoutValue`

`no timeout`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    When used from RADIUS Configuration mode, specifies the interval, in seconds, before the router retransmits a RADIUS packet to an authentication or accounting server. The **no** version restores the default.

When used from RTR Configuration mode, specifies the timeout for a Response Time Reporter operation. The **no** version returns the operation to the default value. You can apply this parameter only to *echo* entries.

- Options**    • *waitTime*—Number of seconds in the range 1–1000; default value is 3
- *timeoutValue*—Number in milliseconds that the operation waits for a response; if the value is set to 0 or is larger than frequency, it will be ignored; default value is 5000

**Mode**    RADIUS Configuration, RTR Configuration



## timeout login response

---

**Syntax**    timeout login response *seconds*  
              no timeout login response

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets a time limit during which users must provide a password when they log into the console or a vty line. Specifying a value of 0 indicates that there is no time limit during which users must enter a password. The **no** version restores the default value, 30.

**Options**    • *seconds*—Length of the timeout in the range 0–300 seconds

**Mode**    Line Configuration

## timers

---

**Syntax**    `timers update invalid holddown flush`  
`no timers`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures RIP timers. The **no** version restores the default values.

- Options**
- *update*—Interval in seconds at which routing updates are sent; default value is 30
  - *invalid*—Interval in seconds after which a route is declared invalid (null); default value is 180
  - *holddown*—Interval in seconds during which routing information regarding better paths is disregarded by the router; default value is 120
  - *flush*—Interval in seconds that must pass before a route is removed from the routing table; set this value greater than the invalid value; default value is 300

**Mode**    Address Family Configuration, Router Configuration

## timers bgp

---

**Syntax** `timers bgp keepaliveTime holdTime`

`no timers bgp [ keepaliveTime [ holdTime ] ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Sets keepalive and hold-time timers for all neighbors. The **no** version restores the default values.

- Options**
- *keepaliveTime*—Interval in seconds between keepalive messages, in the range 0–65535 seconds; default value is 30; a value of zero prevents BGP from sending keepalive messages
  - *holdTime*—Period in seconds that BGP waits for keepalive messages before declaring the neighbor to be unavailable, in the range 0–65535 seconds; default value is 90; a value of zero informs BGP not to expect any hold-time messages

**Mode** Router Configuration

## timers spf

---

**Syntax**    [ no ] timers spf *holdTime*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the delay time between when OSPF receives a topology change and when it starts an SPF calculation and the hold time between two consecutive SPF calculations. The **no** version restores the default value.

**Options**    • *holdTime*—Number in the range 1–5 seconds; default value is 3; the hold time between consecutive SPF calculations

**Mode**    Router Configuration

## time-to-live

---

**Syntax**    time-to-live *tvlValue*

             no time-to-live

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies a hop count by setting the value of the time-to-live field used by packets sent to a RIP remote neighbor. The **no** version restores the default value.

**Options**    • *tvlValue*—Number in the range 1–16; default value is 16

**Mode**    Remote Neighbor Configuration

## timing disable-auto-upgrade

---

**Syntax** [ no ] timing disable-auto-upgrade

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Disables the autoupgrade feature of the router timing. The **no** version enables the autoupgrade feature.

**Mode** Global Configuration

## timing select

---

**Syntax**    timing select *selector*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the preferred timing selector. There is no **no** version.

- Options**
- *selector*—Timing selector; one of the following:
    - primary—Highest-priority preferred selection
    - secondary—Middle-priority preferred selection
    - tertiary—Lowest-priority preferred selection

**Mode**    Global Configuration

## timing source

---

**Syntax**    timing source *selector* { internal | line *lineType* | *uidType* *interfaceSpecifier* }

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures the router's timing sources. Only one of these timing sources can be an external source received through an interface on an I/O module other than the SRP I/O module; the other two must be either internal sources or external sources received through the SRP I/O modules. There is no **no** version.

- Options**
- *selector*—Priority of the timing source; in descending order: **primary**, **secondary**, or **tertiary**
  - internal—Specifies the internal SC oscillator
  - line—Specifies external timing input on the SRP module
  - *lineType*—One of the following timing sources:
    - e1:a—E1 clock, port A on SRP module
    - e1:b—E1 clock, port B on SRP module
    - t1:a—T1 clock, port A on SRP module
    - t1:b—T1 clock, port B on SRP module
  - *uidType*—One of the following interfaces:
    - ds1—Specifies a DS1 interface
    - ds3—Specifies a DS3 interface
    - e1—Specifies an E1 interface
    - e3—Specifies an E3 interface
    - sonet—Specifies a SONET interface
  - *interfaceSpecifier*—Particular interface; in the form *slot/port[:subPort]*

**Mode**    Global Configuration



## tos

---

**Syntax**    *tos tosValue*

              no tos

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Defines a type of service byte in the RTR operation's IP header. The **no** version returns the operation to the default value.

**Options**    • *tosValue*—ToS byte in the IP header; number in the range 0–255; default value is 0 for both RTR types

**Mode**    RTR Configuration

## trace mpls ip

---

**Syntax** trace mpls ip [ vrf *vrfName* ]  
          { *targetIpAddress* *targetIpv4Mask* | *targetIpv6Prefix* }  
          [ *data-size* *dataSize* ]  
          [ destination *startIpAddress* *endIpAddress* *increment* ]  
          [ source address *sourceAddr* ]  
          [ ttl *ttlValue* ] [ timeout *timeOutVal* ]  
          [ reply mode { ipv4-udp | ipv4-udp-with-router-alert } ]  
          [ reply pad-tlv ] [ reply dscp *trafficClass* ]  
          [ exp-bits *bitValue* ] [ detail ]

**Release Information** Command introduced in JunosE Release 8.0.0.  
**data-size** keyword and *dataSize* variable added in JunosE Release 11.1.0.

**Description** Sends MPLS echo request packets with successively higher TTL values to the specified IP or IPv6 address. Discovers the path MPLS packets follow to the destination. There is no **no** version.

The MPLS echo request packets and echo reply packets created by this command use the LDP IPv4 sub-TLV described in RFC 4379—Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures (February 2006).

- Options**
- *vrfName*—Name of the VRF context; when you specify a VRF name, the LSP to the specified prefix must originate from the VRF because the ping is generated from the specified VRF
  - *targetIpAddress*—IP address of the ping target
  - *targetIpv4Mask*—Network mask for target IP address
  - *targetIpv6Prefix*—IPv6 address of the ping target
  - *dataSize*—Size of the LSP ping message (does not include the UDP, IP, and MPLS headers of the packet); in the range 0–6400 bytes. The default value is 100 bytes.
  - *startIpAddress*—First IP address within the 127.0.0.0/8 destination range
  - *endIpAddress*—Last IP address within the 127.0.0.0/8 destination range
  - *increment*—Number in the range 0–255 that specifies the increment between addresses in the destination address range
  - *sourceAddr*—IP address used as the packet source address
  - *ttlValue*—Hop count specified by setting the time-to-live field in the header, in the range 1–255; default value is 32
  - *timeOutVal*—Number of seconds in the range 1–32 to wait for an MPLS echo reply packet before the connection attempt times out
  - reply mode—Specifies the reply mode for the echo request packet
    - ipv4-udp—Specifies that the echo request packet is an IPv4 UDP packet

- *ipv4-udp-with-router-alert*—Specifies that the echo request packet is an IPv4 UDP packet with the router alert bit set in the header so all routers examine this packet more closely to determine whether further processing is necessary
- *reply pad-tlv*—Requests sender of an echo reply to send a pad TLV
- *trafficClass*—Number in the range 0–255 that represents the value of the traffic class that the sender of an echo reply is requested to set
- *bitValue*—Value of the EXP bits in the range 0–7 included in the MPLS echo request packet
- *detail*—Displays detailed information about MPLS echo request sent and echo replies received

**Mode** Privileged Exec, User Exec

## trace mpls l2transport

**Syntax** trace mpls l2transport [ vrf *vrfName* ]  
           { *interfaceType interfaceSpecifier* }  
           [ data-size *dataSize* ]  
           [ destination *startIpAddress endIpAddress increment* ]  
           [ source address *sourceAddr* ]  
           [ ttl *ttlValue* ] [ timeout *timeOutVal* ]  
           [ reply mode { ipv4-udp | ipv4-udp-with-router-alert } ]  
           [ reply pad-tlv ] [ reply dscp *trafficClass* ]  
           [ exp-bits *bitValue* ] [ bottom-label-ttl *bottomLabelTtl* ] [ detail ]

**Release Information** Command introduced in JunosE Release 8.0.0.  
**data-size** keyword and *dataSize* variable added in JunosE Release 11.1.0.

**Description** Sends MPLS echo request packets with successively higher TTL values to the specified layer 2 cross-connect virtual (Martini) circuit. Discovers the path MPLS packets follow to the destination. There is no **no** version.

The echo request packet generated by this command contains the FEC 128 Pseudowire (Current) sub-TLV described in RFC 4379—Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures (February 2006).



**NOTE:** This command is not supported for local cross-connects because local cross-connects do not employ an LSP.

- Options**
- *vrfName*—Name of the VRF context
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *dataSize*—Size of the LSP ping message (does not include the UDP, IP, and MPLS headers of the packet); in the range 0–6400 bytes. The default value is 100 bytes.
  - *startIpAddress*—First IP address within the 127.0.0.0/8 destination range
  - *endIpAddress*—Last IP address within the 127.0.0.0/8 destination range
  - *increment*—Number in the range 0–255 that specifies the increment between addresses in the destination address range
  - *sourceAddr*—IP address used as the packet source address
  - *ttlValue*—Hop count specified by setting the time-to-live field in the header, in the range 1–255; default value is 32; however, by default, the TTL on the inner (stacked) label is set to 1 while transmitting the echo request packet, which causes the packet to be exceptioned to the SRP module when the stacked label is exposed

- *timeOutVal*—Number of seconds in the range 1–32 to wait for an MPLS echo reply packet before the connection attempt times out
- *reply mode*—Specifies the reply mode for the echo request packet
  - *ipv4-udp*—Specifies that the echo request packet is an IPv4 UDP packet
  - *ipv4-udp-with-router-alert*—Specifies that the echo request packet is an IPv4 UDP packet with the router alert bit set in the header so all routers examine this packet more closely to determine whether further processing is necessary
- *reply pad-tlv*—Requests sender of an echo reply to send a pad TLV
- *trafficClass*—Number in the range 0–255 that represents the value of the traffic class that the sender of an echo reply is requested to set
- *bitValue*—Value of the EXP bits in the range 0–7 included in the MPLS echo request packet
- *bottomLabelTtl*—Time-to-live value of the bottom label in the stack
- *detail*—Displays detailed information about MPLS echo request sent and echo replies received

**Mode** Privileged Exec, User Exec

## trace mpls l3vpn

**Syntax** trace mpls l3vpn [ vrf *vrfName* ]  
 { *targetAddress targetMask* | *targetIpv6Prefix* }  
 [ *data-size dataSize* ]  
 [ destination *startIpAddress endIpAddress increment* ]  
 [ source address *sourceAddr* ]  
 [ ttl *ttlValue* ] [ timeout *timeOutVal* ]  
 [ reply mode { ipv4-udp | ipv4-udp-with-router-alert } ]  
 [ reply pad-tlv ] [ reply dscp *trafficClass* ]  
 [ exp-bits *bitValue* ] [ bottom-label-ttl *bottomLabelTtl* ] [ detail ]

**Release Information** Command introduced in JunosE Release 8.0.0.  
**data-size** keyword and *dataSize* variable added in JunosE Release 11.1.0.

**Description** Sends MPLS echo request packets with successively higher TTL values to the specified L3VPN IP or IPv6 prefix. Discovers the path MPLS packets follow to the destination. There is no **no** version.

The echo request packet generated by this command contains either the VPN IPv4 sub-TLV or VPN IPv6 sub-TLV described in RFC 4379—Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures (February 2006). Which sub-TLV is included depends on whether the trace is intended for an IPv4 prefix or an IPv6 prefix.

You can use this command to send a request to a VPNv4 prefix in the specified VRF. If you do not specify a VRF, then you must issue the command from the VRF context. In either case, the trace originates from the parent router.

- Options**
- *vrfName*—Name of the VRF context
  - *targetAddress*—IP address of the target VPN network
  - *targetMask*—Netmask for the target address
  - *targetIpv6Prefix*—IPv6 prefix for the target VPN network
  - *dataSize*—Size of the LSP ping message (does not include the UDP, IP, and MPLS headers of the packet); in the range 0–6400 bytes. The default value is 100 bytes.
  - *startIpAddress*—First IP address within the 127.0.0.0/8 destination range
  - *endIpAddress*—Last IP address within the 127.0.0.0/8 destination range
  - *increment*—Number in the range 0–255 that specifies the increment between addresses in the destination address range
  - *sourceAddr*—IP address used as the packet source address
  - *ttlValue*—Hop count specified by setting the time-to-live field in the header, in the range 1–255; default value is 32
  - *timeOutVal*—Number of seconds in the range 1–32 to wait for an MPLS echo reply packet before the connection attempt times out

- **reply mode**—Specifies the reply mode for the echo request packet
  - **ipv4-udp**—Specifies that the echo request packet is an IPv4 UDP packet
  - **ipv4-udp-with-router-alert**—Specifies that the echo request packet is an IPv4 UDP packet with the router alert bit set in the header so all routers examine this packet more closely to determine whether further processing is necessary
- **reply pad-tlv**—Requests sender of an echo reply to send a pad TLV
- **trafficClass**—Number in the range 0–255 that represents the value of the traffic class that the sender of an echo reply is requested to set
- **bitValue**—Value of the EXP bits in the range 0–7 included in the MPLS echo request packet
- **bottomLabelTtl**—Time-to-live value of the bottom label in the stack
- **detail**—Displays detailed information about MPLS echo request sent and echo replies received

**Mode** Privileged Exec, User Exec

## trace mpls rsvp tunnel

---

**Syntax** trace mpls { traffic-eng | rsvp } [ vrf *vrfName* ] tunnel *tunnelName*  
[ destination *startIpAddress endIpAddress increment* ]  
[ data-size *dataSize* ]  
[ source address *sourceAddr* ]  
[ ttl *ttlValue* ] [ timeout *timeOutVal* ]  
[ reply mode { ipv4-udp | ipv4-udp-with-router-alert } ]  
[ reply pad-tlv ] [ reply dscp *trafficClass* ]  
[ exp-bits *bitValue* ] [ detail ]

**Release Information** Command introduced in JunosE Release 8.0.0.  
**data-size** keyword and *dataSize* variable added in JunosE Release 11.1.0.

**Description** Sends MPLS echo request packets with successively higher TTL values to the specified RSVP-TE tunnel. Discovers the path MPLS packets follow to the destination. There is no **no** version.

The MPLS echo request packets and echo reply packets created by this command use the RSVP IPv4 sub-TLV described in RFC 4379—Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures (February 2006).

- Options**
- **traffic-eng**—Specifies optional keyword for compatibility with non-E Series implementations
  - **vrfName**—Name of the VRF context; specify the VRF only when the RSVP-TE tunnel originates in the VRF because the ping is generated from the specified VRF
  - **tunnelName**—Name of the RSVP-TE tunnel; can be a bypass tunnel
  - **startIpAddress**—First IP address within the 127.0.0.0/8 destination range
  - **endIpAddress**—Last IP address within the 127.0.0.0/8 destination range
  - **increment**—Number in the range 0–255 that specifies the increment between addresses in the destination address range
  - **dataSize**—Size of the LSP ping message (does not include the UDP, IP, and MPLS headers of the packet); in the range 0–6400 bytes. The default value is 100 bytes.
  - **sourceAddr**—IP address used as the packet source address
  - **ttlValue**—Hop count specified by setting the time-to-live field in the header, in the range 1–255; default value is 32
  - **timeOutVal**—Number of seconds in the range 1–32 to wait for an MPLS echo reply packet before the connection attempt times out
  - **reply mode**—Specifies the reply mode for the echo request packet
    - **ipv4-udp**—Specifies that the echo request packet is an IPv4 UDP packet
    - **ipv4-udp-with-router-alert**—Specifies that the echo request packet is an IPv4 UDP packet with the router alert bit set in the header so all routers examine this packet more closely to determine whether further processing is necessary



- `reply pad-tlv`—Requests sender of an echo reply to send a pad TLV
- `trafficClass`—Number in the range 0–255 that represents the value of the traffic class that the sender of an echo reply is requested to set
- `bitValue`—Value of the EXP bits in the range 0–7 included in the MPLS echo request packet
- `detail`—Displays detailed information about MPLS echo request sent and echo replies received

**Mode** Privileged Exec, User Exec

## trace mpls vpls

---

**Syntax** trace mpls vpls [ vrf *vrfName* ] *vplsName*  
[ sender-site-id *senderSiteId* ] remote-site-id *remoteSiteId*  
[ data-size *dataSize* ]  
[ destination *startIpAddress endIpAddress increment*  
]  
[ source address *sourceAddr* ]  
[ ttl *ttlValue* ] [ timeout *timeOutVal* ]  
[ reply mode { ipv4-udp | ipv4-udp-with-router-alert } ]  
[ reply pad-tlv ] [ reply dscp *trafficClass* ]  
[ exp-bits *bitValue* ] [ bottom-label-ttl *bottomLabelTtl* ] [ detail ]

**Release Information** Command introduced in JunosE Release 8.0.0.  
**data-size** keyword and *dataSize* variable added in JunosE Release 11.1.0.

**Description** Sends MPLS echo request packets with successively higher TTL values to the specified VPLS instance. Discovers the path MPLS packets follow to the destination. There is no **no** version.

The MPLS echo request packets and echo reply packets created by this command use the L2 endpoint sub-TLV described in RFC 4379—Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures (February 2006).

- Options**
- *vrfName*—Name of the VRF context from which to generate the ping
  - *vplsName*—Name of a VPLS instance created with the bridge vpls transport-virtual-router command
  - *senderSiteId*—Numerical identifier for the site sending the MPLS echo request packet; must be an unsigned 16-bit integer greater than zero that is unique across the VPLS domain
  - *remoteSiteId*—Numerical identifier for the site receiving the MPLS echo request packet; must be an unsigned 16-bit integer greater than zero that is unique across the VPLS domain
  - *dataSize*—Size of the LSP ping message (does not include the UDP, IP, and MPLS headers of the packet); in the range 0–6400 bytes. The default value is 100 bytes. You can use this option to enable the pad TLV to be added to the MPLS LSP ping message (echo request), which results in the future MPLS LSP ping echo requests to be of the same specified number of bytes.
  - *startIpAddress*—First IP address within the 127.0.0.0/8 destination range
  - *endIpAddress*—Last IP address within the 127.0.0.0/8 destination range
  - *increment*—Number in the range 0–255 that specifies the increment between addresses in the destination address range
  - *sourceAddr*—IP address used as the packet source address

- *ttlValue*—Hop count specified by setting the time-to-live field in the header, in the range 1–255; default value is 32; however, by default, the TTL on the inner (stacked) label is set to 1 while transmitting the echo request packet, which causes the packet to be exceptioned to the SRP module when the stacked label is exposed
- *timeOutVal*—Number of seconds in the range 1–32 to wait for an MPLS echo reply packet before the connection attempt times out
- *reply mode*—Specifies the reply mode for the echo request packet
  - *ipv4-udp*—Specifies that the echo request packet is an IPv4 UDP packet
  - *ipv4-udp-with-router-alert*—Specifies that the echo request packet is an IPv4 UDP packet with the router alert bit set in the header so all routers examine this packet more closely to determine whether further processing is necessary
- *reply pad-tlv*—Requests sender of an echo reply to send a pad TLV
- *trafficClass*—Number in the range 0–255 that represents the value of the traffic class that the sender of an echo reply is requested to set
- *bitValue*—Value of the EXP bits in the range 0–7 included in the MPLS echo request packet
- *bottomLabelTtl*—Time-to-live value of the bottom label in the stack
- *detail*—Displays detailed information about MPLS echo request sent and echo replies received

**Mode** Privileged Exec, User Exec

## traceroute

**Syntax** `traceroute [ vrf vrfName ] destination [ ttl maxTTLCount ]  
 [ timeout timeOutVal ] [ data-size sizeValue ]  
 [ source { interface interfaceType interfaceSpecifier | address sourceAddress } ]  
 [ extended [ tos tosVal ] [ set-dont-fragment-bit ] [ interface iType iNumber ]`

`traceroute ipv6 [ vrf vrfName ] destination [ hop-limit hopLimit ]  
 [ timeout timeOutVal ] [ data-size sizeValue ] [ source { interface interfaceType  
interfaceSpecifier |  
 address sourceAddress } ] [ extended [ dscp trafficClass ] [ flow-label flowLabel ] ]`

**Release Information** Command introduced before JunosE Release 7.1.0.  
**vrf** keyword and *vrfName* variable added to IPv6 version in JunosE Release 7.2.0.

**Description** Discovers the paths that router packets follow when traveling to their destinations. There is no **no** version.

- Options**
- *vrfName*—Name of the VRF context; string of 1–32 alphanumeric characters
  - *ipv6*—Specifies the destination address as IPv6 format
  - *destination*—IP address, IPv6 address, or domain name of the trace
  - *hopLimit*—Maximum number of hops of the trace in the range 1–255; default value is 32
  - *maxTTLCount*—Maximum number of hops of the trace in the range 1–255; default value is 32
  - *timeOutVal*—Time in seconds to wait for trace responses in the range 1–20; default value is 2
  - *sizeValue*—Number of bytes comprising the IP packet and reflected in the IP header in the range 0–64000
  - source interface—Specifies an interface as the source for the transmitted packets
    - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
    - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - source address—Specifies an IP address as source for the transmitted packets
    - *sourceAddress*—IP address or domain name used as the source address
  - extended—Specifies extended IP header attributes
    - *tosVal*—Value of the ToS byte
    - set-dont-fragment-bit—Specifies the don't-fragment bit
    - *iType*—Interface type
    - *iNumber*—Interface location

- *trafficClass*—Specifies the traffic class value to match in the Traffic Class field of each IPv6 packet header, in the range 1–255
- *flowLabel*—Specifies the flow label value to match in the Flow Label field of each IPv6 packet header, in the range 1–1048576

**Mode** Privileged Exec, User Exec

## track

---

**Syntax**    `track objectName [ vrf vrfName ] ip-route ipPrefix reachability`  
              `no track objectName`

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Specifies the name of an object you want to track and tracks the reachability of that object by its IPv4 prefix. The **no** version deletes the object and stops tracking for that object.

- Options**
- *objectName*—Name of the object you want to track; string of 1–32 alphanumeric characters
  - *vrfName*—Name of the VRF on which the object resides; string of 1–32 alphanumeric characters
  - *ipPrefix*—IP prefix (address and subnetwork mask) of the object you want to track

**Mode**    Global Configuration

## traffic-class

**Syntax** In Classifier Group Configuration mode:

```
[ no ] [ suspend ] traffic-class trafficClassName1
```

In Global Configuration and Traffic Class Group Configuration modes:

```
[ no ] traffic-class trafficClassName2
```

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** In Classifier Group Configuration mode, specifies a traffic class in a policy list for policy management. The **no** version removes a traffic class from a policy list; the **suspend** version temporarily suspends the policy rule; the **no suspend** version resumes application of a suspended rule.



**NOTE:** This command replaces the Policy List Configuration version of the **traffic-class** command, which may be removed completely in a future release.

In Global Configuration mode, configures a traffic class in the E Series router. In Traffic Class Group Configuration mode, specifies a traffic class that belongs to the traffic-class group. The **no** version deletes the traffic class.

- Options**
- *trafficClassName1*—Name of the traffic class; up to 40 characters
  - *trafficClassName2*—Name of the traffic class; up to 31 characters

**Mode** Classifier Group Configuration, Global Configuration, Traffic Class Group Configuration

- Related Documentation**
- Configuring Traffic Classes That Define Service Levels
  - Configuring Traffic-Class Groups That Define Service Levels
  - Policy Rule Precedence

## traffic-class-group

---

**Syntax** [ no ] traffic-class-group *trafficClassGroupName*  
[ slot *slotNumber* | auto-strict-priority | extended ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures a traffic-class group. The **no** version deletes the selected traffic-class group. You must remove all local (slot-based) instances of a traffic-class group before you can remove the global group.

- Options**
- *trafficClassGroupName*—Name of the traffic class group; up to 31 characters
  - *slotNumber*—Number of the slot associated with the group, in the range 0–17
  - auto-strict-priority—Specifies strict-priority scheduling for the group, regardless of whether the scheduler profile associated with the group node specifies strict-priority scheduling. Only one auto-strict-priority group can exist; this is the default behavior for a group.
  - extended—Specifies that strict-priority scheduling for the group is determined by the scheduler profile associated with the group node; scheduling is either hierarchical round-robin or strict priority, but if a strict-priority traffic-class group already exists, this group must be scheduled via HRR

**Mode** Global Configuration

- Related Documentation**
- Configuring Traffic Classes That Define Service Levels
  - Configuring Traffic-Class Groups That Define Service Levels
  - Configuring QoS for an L2TP Session



## transform

---

**Syntax**    `transform transform0`  
              `[ transform1 [ transform2 [ transform3 [ transform4 [ transform5 ] ] ] ] ]`  
  
              `no transform`

**Release Information**    Command introduced in JunosE Release 7.3.0.

**Description**    Specifies the eligible transforms for this profile for IPSec source address negotiations. You can specify up to six transform algorithms for this profile. The **no** version resets the transform to the default, esp-3des-sha1.

**Options**    • *transform0* through *transform5*—AH or ESP transform

**Mode**    IPSec Tunnel Profile Configuration

## transform-set

---

**Syntax**    transform-set *transform0*  
              [ *transform1* [ *transform2* [ *transform3* [ *transform4* [ *transform5* ] ] ] ] ]  
  
              no transform-set

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the transform set(s) that an IPSec transport connection can use to negotiate a transform algorithm. You can specify up to six transform algorithms. The **no** version resets the transform to the default, esp-3des-hmac-sha.

**Options**    • *transform0* through *transform5*—AH or ESP transform; use the online Help to view available transforms

**Mode**    IPSec Transport Profile Configuration

## translate

---

**Syntax**    `translate domainName mappedDomainName`  
              `no translate domainName`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Maps the original domain name to the mapped domain name for domain map lookup.  
                    The **no** version negates the command.

**Options**    • *domainName*—Name of the domain; maximum of 64 characters  
              • *mappedDomainName*—Name of the mapped domain name; maximum of 64 characters

**Mode**    AAA Profile Configuration

## transmit-delay

---

**Syntax**    `transmit-delay transmDelay`  
              `no transmit-delay`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the estimated time it takes to transmit a link-state update packet on the OSPF remote-neighbor interface. The **no** version restores the default value.

**Options**    • *transmDelay*—Link-state transmit delay in seconds; a number in the range 0–3600; default value is 1

**Mode**    Remote Neighbor Configuration

## traps

**Syntax** [ no ] traps { all | [ virtIfStateChange | nbrStateChange | virtNbrStateChange | ifConfigError | virtIfConfigError | ifAuthFailure | virtIfAuthFailure | ifRxBadPkt | virtIfRxBadPkt | txRetransmit | virtTxRetransmit | originateLsa | maxAgeLsa | ifStateChange ]\* }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies OSPF trap settings. The **no** version removes all OSPF trap settings or any specified traps.

- Options**
- **all**—Enables all OSPF traps
  - **virtIfStateChange**—Sets a trap to indicate a state change on an OSPF virtual interface
  - **nbrStateChange**—Sets a trap to indicate a state change on a nonvirtual OSPF neighbor
  - **virtNbrStateChange**—Sets a trap to indicate a state change on a virtual OSPF neighbor
  - **ifConfigError**—Sets a trap to indicate a configuration mismatch with a nonvirtual neighbor
  - **virtIfConfigError**—Sets a trap to indicate a configuration mismatch with a virtual neighbor
  - **ifAuthFailure**—Sets a trap to indicate an authentication failure on a nonvirtual interface
  - **virtIfAuthFailure**—Sets a trap to indicate an authentication failure on a virtual interface
  - **ifRxBadPkt**—Sets a trap to indicate that a packet has been received that cannot be parsed
  - **virtIfRxBadPkt**—Sets a trap to indicate that a packet has been received on a virtual interface that cannot be parsed
  - **txRetransmit**—Sets a trap to indicate that a packet has been retransmitted on a nonvirtual interface
  - **virtTxRetransmit**—Sets a trap to indicate that a packet has been retransmitted on a virtual interface
  - **originateLsa**—Sets a trap to indicate that a new LSA has been originated by this router
  - **maxAgeLsa**—Sets a trap to indicate that an LSA in this router LSDB has reached MaxAge
  - **ifStateChange**—Sets a trap to indicate a state change on an OSPF interface
  - **\***—Indicates that one or more parameters can be repeated multiple times in a list in the command line

**Mode** Router Configuration

## trigger

---

**Syntax**    `trigger triggerOwner triggerName`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Creates an event and launches the event configuration mode in the SNMP server event manager. The **no** version removes the trigger.

- Options**
- *triggerOwner*—Owner associated with this trigger; string of up to 32 alphanumeric characters
  - *triggerName*—Name associated with this trigger; string of up to 32 alphanumeric characters

**Mode**    SNMP Event Manager Configuration

## trigger delay

---

**Syntax**    trigger delay msec *delayTime*  
              no trigger delay

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the time duration used to determine when a SONET/SDH defect at the line or section layer becomes an alarm. The **no** version restores the default setting, 2500 milliseconds.

**Options**    • *delayTime*—Time in the range 0–2500 milliseconds

**Mode**    Controller Configuration

## triggered-update-disable

---

**Syntax** [ no ] triggered-update-disable

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies that RIP does not send triggered routing updates. The **no** version restores the default condition, wherein RIP does send triggered updates.

**Mode** Address Family Configuration, Router Configuration



## ttl

---

**Syntax**    `ttl tvlValue`

`no ttl`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies a hop count by setting the value of the time-to-live field used by packets sent to an OSPF remote neighbor. The **no** version restores the default value.

**Options**    • *tvlValue*—Number in the range 1–255; default value is 1

**Mode**    Remote Neighbor Configuration

## tunnel

---

**Syntax** [ no ] tunnel *tag*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies an L2TP tunnel and changes the mode to Domain Map Tunnel Configuration. In Domain Map Tunnel Configuration mode, you can set the attributes of the tunnel. The **no** version deletes the L2TP tunnel configuration from the router.

From Tunnel Group Configuration mode, adds up to 31 tunnel definitions to the L2TP tunnel group and changes the mode to Tunnel Group Tunnel Configuration mode. In Tunnel Group Tunnel Configuration mode, you can set tunnel attributes. The **no** version deletes the L2TP tunnel group configuration from the router.

**Options** • *tag*—Number in the range 1–31

**Mode** Domain Map Configuration, Tunnel Group Configuration

## tunnel checksum

---

**Syntax** [ no ] tunnel checksum

**Release Information** Command introduced before JunosE Release 7.1.0.  
IP Tunnel Destination Profile Configuration mode added in JunosE Release 8.2.0.

**Description** In Interface Configuration mode, enables end-to-end checksum computation for static GRE tunnels.

In IP Tunnel Destination Profile Configuration mode, enables end-to-end checksum computation for dynamic GRE tunnels. The **no** version disables the checksum option.

**Mode** Interface Configuration, IP Tunnel Destination Profile Configuration

## tunnel destination

---

**Syntax** For DVMRP and GRE in Interface Configuration mode:

tunnel destination { *ipAddress1* | *hostname* }

no tunnel destination

For DVMRP and GRE in IP Tunnel Destination Profile Configuration mode:

tunnel destination { subnet *ipAddress2 mask* | range *ipAddressLow ipAddressHigh* }

For IPSec:

tunnel destination { *ipAddress3* | identity *fqdn* }

no tunnel destination

For MPLS in Interface Configuration mode:

tunnel destination *ipAddress4*

no tunnel destination

For MPLS in Tunnel Profile Configuration mode:

[ no ] tunnel destination

{ { isis-level-2 | ospf-bdr } [ { access-list | prefix-list } *listName* ] |

{ *ipAddress* [ *ipAddress4* ]\* }

**Release Information** Command introduced before JunosE Release 7.1.0.

IP Tunnel Destination Profile Configuration mode added in JunosE Release 8.2.0.

**Description** For DVMRP or GRE in Interface Configuration mode, configures the tunnel endpoint for static tunnels. The **no** version deletes the endpoint.

For DVMRP or GRE in IP Tunnel Destination Profile Configuration mode, configures the tunnel endpoint for dynamic tunnels. The **no** version deletes the endpoint.

For IPSec, configures the remote tunnel endpoint. You can identify the remote peer by either IP address or fully qualified domain name (FQDN). The **no** version deletes the endpoint.

For MPLS in Interface Configuration mode, configures the tunnel endpoint for static MPLS tunnels. The **no** version deletes the endpoint.

For MPLS in Tunnel Profile Configuration mode, configures the source of tunnel endpoints (destinations) within a tunnel profile. You can specify that the endpoints are to be learned from IS-IS or OSPF so that tunnels are created when the destinations are learned from the specified IGP, or you can provide one or more IP addresses as the endpoint(s) so that tunnels are created as soon as the destination addresses are configured. If you specify the destination address, it must be the address of the MPLS interface or the router ID of the destination router. The **no** version deletes the endpoints.

- Options**
- *ipAddress1*—IP address of the interface on the remote router
  - *hostname*—Name of the host to serve as the tunnel endpoint
  - *ipAddress2*—IP address of the tunnel destination address subnet
  - *mask*—IP mask of the tunnel destination address subnet
  - *ipAddressLow*—First IP address in a destination address range
  - *ipAddressHigh*—Last IP address in a destination address range
  - *ipAddress3*—IP address of the interface on the remote router or the router ID of the destination router that serves as the tunnel endpoint
  - *fqdn*—Fully qualified domain name of the interface on the remote router that serves as the tunnel endpoint; a maximum of 80 characters
  - *isis-level-2*—Specifies IS-IS level-2 routers as acceptable destinations
  - *ospf-bdr*—Specifies OSPF border routers as acceptable destinations
  - *listName*—Name of access list or prefix list that contains the IP addresses that are acceptable as tunnel endpoints
  - *ipAddress4*—IP address of the interface on the remote router or the router ID of the destination router that serves as the tunnel endpoint; for a tunnel profile, you can list multiple addresses
  - *\**—Indicates that one or more parameters can be repeated multiple times in a list in the command line
- Mode**    Interface Configuration, IP Tunnel Destination Profile Configuration, Tunnel Profile Configuration

## tunnel destination backup

---

**Syntax**    tunnel destination backup [ *ipAddress* | identity *fqdn* ]

no tunnel destination backup

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures a backup tunnel destination for the remote IPsec tunnel endpoint. The backup tunnel is used when the IPsec tunnel destination is detected as unreachable by DPD. You can use either the IP address or fully qualified domain name (FQDN) to identify the backup tunnel; however, you must use the same type of identity that is used for the regular tunnel destination. The **no** version restores the default, in which the regular tunnel destination is also the backup tunnel destination.

- Options**
- *ipAddress*—IP address of the interface on the destination router that serves as the backup IPsec tunnel endpoint
  - *fqdn*—Fully qualified domain name of the interface on the destination router that serves as the backup IPsec tunnel endpoint; a maximum of 80 characters

**Mode**    Interface Configuration

---

## tunnel group

---

**Syntax**    `tunnel group tunnelGroupName`  
`no tunnel group`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns the specified tunnel group to the domain map. The **no** version deletes the tunnel group.



.....  
**NOTE:** By default, no tunnel group is assigned to the domain map. You can assign a tunnel group to the domain map only if tunnels are not currently defined for the domain map in Domain Map Tunnel mode.  
.....

**Options**    • *tunnelGroupName*—String of up to 64 characters (no spaces)

**Mode**    Domain Map Configuration

## tunnel group-address-pool

---

**Syntax**    tunnel group-address-pool [ *poolName* ]

             no tunnel group-address-pool

**Release Information**    Command introduced in JunosE Release 8.2.0.

**Description**    Configures a group address pool for a data MDT tunnel. The **no** version deletes the group address pool.

**Options**    • *poolName*—Name of the group address pool

**Mode**    IP PIM Data MDT Configuration



## tunnel ip profile

---

**Syntax**    tunnel ip profile *ipProfileId*  
              no tunnel ip profile

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns an IP profile to the MPLS tunnel. The **no** version removes the IP profile from the tunnel. The **no mpls tunnels profile** command deletes the IP profile.

**Options**    • *ipProfileId*—Name of an IP profile

**Mode**    Tunnel Profile Configuration

## tunnel lifetime

---

**Syntax**    tunnel lifetime { kilobytes *kbytes* | seconds *secs* | seconds *secs* kilobytes *kbytes* }  
              no tunnel lifetime { seconds | kilobytes }

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the lifetime of IPSec SAs running on this tunnel. You can specify the lifetime in seconds and/or volume of traffic. Before either limit is reached, the SA is renegotiated, ensuring that the tunnel does not go down before the renegotiation is finished. The **no** version sets the lifetime to the default lifetime of 28800 seconds and an unlimited volume.

- Options**
- *secs*—Number of seconds security SAs on this tunnel live before expiring, in the range 1800–864000
  - *kbytes*—Volume of traffic in kilobytes that can pass between the tunnel endpoints using a given SA before the SA expires, in the range 102400–4294967295

**Mode**    Interface Configuration

## tunnel local-identity

---

**Syntax** tunnel local-identity { address *ipAddress* | subnet *ipAddress subnetMask* | range *ipAddressLow ipAddressHigh* }

no tunnel local-identity

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the local identity of the IPSec tunnel. The **no** version removes the local endpoint and sets the default identity, which is subnet 0.0.0.0 0.0.0.0.

- Options**
- *ipAddress*—IP address of the local identity
  - *subnetMask*—Mask applied to the subnet IP address of the local identity
  - *ipAddressLow*—Lower bound of the range of IP addresses of the local identity
  - *ipAddressHigh*—Upper bound of the range of IP addresses of the local identity

**Mode** Interface Configuration

## tunnel mdt

---

**Syntax** [ no ] tunnel mdt

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Enables multicast distribution tree operation by allowing the IP tunnel component to create an MDT interface. This command functions for static GRE and DVMRP tunnel interfaces only. The **no** version disables MDT on the interface.

**Mode** Interface Configuration

## tunnel mdt profile

---

**Syntax** [ no ] tunnel mdt profile *profileName*

**Release Information** Command introduced in JunosE Release 8.2.0.

**Description** Enables multicast distribution tree operation by enabling the IP tunnel component to create an MDT interface. This command also defines an IP profile with parameters that are used to stack an upper IP interface over a dynamic GRE or DVMRP tunnel. This command functions for dynamic GRE and DVMRP tunnel interfaces only. The **no** version disables MDT on the interface.

**Options** • *profileName*—Profile name of up to 80 characters

**Mode** IP Tunnel Destination Profile Configuration

## tunnel mpls affinity

---

**Syntax**    tunnel mpls [ traffic-eng ] affinity *affinity* [ mask *mask* ]  
              no tunnel mpls [ traffic-eng ] affinity

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns an affinity to the tunnel that specifies the class of resources—resource attributes—associated with the tunnel. The **no** version removes the affinity from the tunnel.

- Options**
- **traffic-eng**—Specifies optional keyword for compatibility with non-E Series implementations
  - **affinity**—Attributes that must be configured on the interface in order to be considered by the tunnel; in the range 0x0–0xFFFFFFFF; default value is 0x0
  - **mask**—Mask to identify attributes to be checked and therefore the attribute flags that a link (interface) must have in order to be used by a tunnel: a 1 signifies that the attribute value must match the tunnel's corresponding affinity bit; a 0 signifies that the attribute value does not matter and does not have to match the tunnel's affinity bit; in the range 0x0–0xFFFFFFFF; default value is 0x0000FFFF

**Mode**    Interface Configuration, Tunnel Profile Configuration

## tunnel mpls autoroute announce

---

**Syntax** [ no ] tunnel mpls [ traffic-eng ] autoroute announce [ ospf | isis ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures the LSP tunnel to register its endpoint (the egress router) with the configured routing protocol so that the protocol can use the tunnel to determine routes. If you do not specify a routing protocol, the default is both IS-IS and OSPF. The **no** version disables endpoint announcements.

- Options**
- traffic-eng—Specifies optional keyword for compatibility with non-E Series implementations
  - ospf—Endpoint is announced to OSPF
  - isis—Endpoint is announced to IS-IS

**Mode** Interface Configuration, Tunnel Profile Configuration

## tunnel mpls autoroute metric

---

**Syntax**    tunnel mpls [ traffic-eng ] autoroute metric { absolute | relative } *metricValue*  
              no tunnel mpls [ traffic-eng ] autoroute metric

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the tunnel metric. The value determines tunnel preference when there is more than one tunnel or native IP path to a tunnel endpoint. A lower value is preferred to a higher value. When you set up multiple tunnels, if the primary tunnel goes down, the existing tunnel with the lowest metric is used immediately. If you specify an absolute value from 1–2147483647, this value overrides the metric for the path provided by the IGP. If you specify a relative value from –10 to +10, this value is subtracted from (–) or added to (+) the metric for the path provided by the IGP. The **no** version restores the default value, relative 0, meaning that the tunnel metric is the IGP value.

- Options**
- traffic-eng—Specifies optional keyword for compatibility with non–E Series implementations
  - absolute—Specifies that the metric is an absolute value
  - relative—Specifies that the metric is a signed relative value
  - *metricValue*—Preference value for a path; absolute values are in the range 1–2147483647; relative values are in the range –10–+10

**Mode**    Interface Configuration, Tunnel Profile Configuration



---

## tunnel mpls bandwidth

---

**Syntax** tunnel mpls [ traffic-eng ] bandwidth *bandwidth*

no tunnel mpls [ traffic-eng ] bandwidth

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the bandwidth required for the tunnel. The **no** version removes the bandwidth constraint from the tunnel.

When the bandwidth constraint is configured, MPLS automatically creates and attaches a QoS profile to the tunnel to enforce the bandwidth reservation. The QoS profile creates a scheduler node at the LSP level, with a scheduler profile that has an assured rate corresponding to the reserved bandwidth. The QoS profile also creates queues above the scheduler node so that traffic of a particular class will be subject to the scheduler node. If no queue are created at the LSP level for a particular class, the traffic of that class enters that class's queue at a lower level, bypassing the bandwidth reservation enforcement.

- Options**
- **traffic-eng**—Specifies optional keyword for compatibility with non-E Series implementations
  - **bandwidth**—Amount of bandwidth required for the tunnel in kilobits per second, in the range 0–4294967295; default value is 0

**Mode** Interface Configuration, Tunnel Profile Configuration

## tunnel mpls description

---

**Syntax**    tunnel mpls description *textString*  
              no tunnel mpls description

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Associates a text description with the MPLS tunnel. The **no** version deletes the description.

**Options**    • *textString*—Description or name of the tunnel; string of up to 40 alphanumeric characters

**Mode**    Interface Configuration, Tunnel Profile Configuration

## tunnel mpls diff-serv phb-id

---

**Syntax** tunnel mpls diff-serv phb-id { private *privateId* | standard *standardId* } [ exp-bits *expBits* ]

no tunnel mpls diff-serv phb-id { private *privateId* | standard *standardId* }

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the PHB supported by a signaled tunnel.

For E-LSPs, this command also maps the PHB to the specified EXP bits *bitValue*. You can repeat the command for up to eight PHB mappings.

For L-LSPs, the exp-bits keyword is not used. If you repeat the command, the most recent command overwrites the previous command.

The **no** version removes the mapping association.

- Options**
- *privateId*—Number, in the range 0–4095, designating the private PHB identifier
  - *standardId*—Number, in the range 0–63, designating the standard identifier using the DSCP bits
  - *expBits*—Number, in the range 0–7, designating the EXP bits

**Mode** Interface Configuration, Tunnel Profile Configuration

## tunnel mpls fast-reroute

---

**Syntax** [ no ] tunnel mpls [ traffic-eng ] fast-reroute

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures local protection for the ingress router of the primary LSP by causing RSVP-TE to signal at LSP setup that the primary LSP needs local protection. The **no** version removes the configuration.

**Options**

- **traffic-eng**—Specifies optional keyword for compatibility with non-E Series implementations

**Mode** Interface Configuration

## tunnel mpls no-route retries

---

**Syntax**    tunnel mpls no-route retries *retryNum*  
              no tunnel mpls no-route retries

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies for a particular tunnel the number of attempts that will be made to set up an LSP for RSVP-TE after a failure due to no available route. The **no** version restores the default value, 0, which means the attempts will be made until successful.

**Options**    • *retryNum*—Number of retry attempts in the range 0–65535

**Mode**    Interface Configuration, Tunnel Profile Configuration

## tunnel mpls no-route retry-time

---

**Syntax**    tunnel mpls no-route retry-time *retryTime*  
              no tunnel mpls no-route retry-time

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies for a particular tunnel the interval in seconds between attempts to set up an LSP for RSVP-TE after a failure due to no available route. The **no** version restores the default value, 5 seconds.

**Options**    • *retryTime*—Number of seconds in the range 1–60

**Mode**    Interface Configuration, Tunnel Profile Configuration

## tunnel mpls path-option

**Syntax** tunnel mpls [ traffic-eng ] path-option *number*  
 { dynamic | explicit { name *pathName* | identifier *idNumber* } }  
 [ hop-by-hop | ospf | isis ] [ lockdown ]

no tunnel mpls [ traffic-eng ] path-option *number*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the path options for a tunnel. You can configure one or more path options—each identified by a unique number—for a given tunnel. The path option number expresses the preference for that option; lower numbers have a higher preference, with 1 having the highest preference. The **no** version deletes the path options.

- Options**
- traffic-eng—Specifies optional keyword for compatibility with non-E Series implementations
  - *number*—Identifier for a set of path options
  - dynamic—Specifies that the path is dynamically calculated
  - explicit—Specifies that an explicit path is used
  - *pathName*—Name of the explicit path; string of up to 20 characters
  - *idNumber*—Number identifying the explicit path; in the range 1–65535
  - hop-by-hop—Specifies that hop-by-hop routing is used for this path option
  - ospf—Specifies that OSPF routing is used for this path option
  - isis—Specifies that IS-IS routing is used for this path option
  - lockdown—Specifies that optimization is not done for this path option

**Mode** Interface Configuration, Tunnel Profile Configuration

## tunnel mpls priority

---

**Syntax**    tunnel mpls [ traffic-eng ] priority *setupPriority* [ *holdPriority* ]  
              no tunnel mpls [ traffic-eng ] priority

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Assigns a setup priority and optionally a hold priority to the tunnel. The priority can range from 0 (the highest) to 7 (the lowest). The hold priority, if set, must be equal to or better (lower numerically) than the setup priority. In the event of insufficient resources when a tunnel is being established, its setup priority is evaluated against the hold priorities of existing tunnels. Tunnels with lower hold priorities (higher values) are preempted and torn down to free their resources for the new tunnel. The **no** version restores the default value.

- Options**
- **traffic-eng**—Specifies optional keyword for compatibility with non-E Series implementations
  - **setupPriority**—Priority for the tunnel as it is being established; default value is 4
  - **holdPriority**—Priority for the tunnel after it has been established; default value is equal to the value of the setup priority

**Mode**    Interface Configuration, Tunnel Profile Configuration



## tunnel mpls retries

---

**Syntax**    tunnel mpls retries *retryNum*  
              no tunnel mpls retries

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies for a particular tunnel the number of attempts that will be made to set up an LSP for RSVP-TE after a failure other than one due to no available route. The **no** version restores the default value, 0, which means the attempts will be made until successful.

**Options**    • *retryNum*—Number of retry attempts in the range 0–65535

**Mode**    Interface Configuration, Tunnel Profile Configuration

## tunnel mpls retry-time

---

**Syntax**    tunnel mpls [ no-route ] retry-time *retryTime*  
              no tunnel mpls retry-time

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies for a particular tunnel the interval in seconds between attempts to set up an LSP for RSVP-TE after a failure other than one due to no available route. The **no** version restores the default value, 5 seconds.

**Options**    • *retryTime*—Number of seconds in the range 1–60

**Mode**    Interface Configuration, Tunnel Profile Configuration

## tunnel mtu

---

**Syntax**    tunnel mtu *mtuSize*

no tunnel mtu

**Release Information**    Command introduced before JunosE Release 7.1.0  
IPSec Tunnel Profile Configuration mode added in JunosE Release 7.3.0.  
IP Tunnel Destination Profile Configuration mode added in JunosE Release 8.2.0.

**Description**    Configures the maximum transmission unit size for the particular tunnel. The **no** version restores the default value, 1024 for static DVMRP and GRE tunnels, 10240 for dynamic DVMRP and GRE tunnels, 1440 for static IPSec tunnels, and 1400 for dynamic IPSec tunnels.

**Options**    • *mtuSize*—Packet size in bytes allowed for transmission through the tunnel in the range; in the range 1024–10240 for DVMRP and GRE tunnels, in the range 160–9000 for IPSec tunnels.

**Mode**    Interface Configuration, IP Tunnel Destination Profile Configuration, IPSec Tunnel Profile Configuration

## tunnel password

---

**Syntax**    tunnel password *tunnelPassword*  
              no tunnel password

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures a password for the L2TP tunnel. The **no** version removes the password.

**Options**    • *tunnelPassword*—Password used for challenge response to the tunnel peer; in the domain map, it is used only by the LAC

**Mode**    L2TP Destination Profile Host Configuration

## tunnel peer-identity

---

**Syntax**    tunnel peer-identity { address *ipAddress* | subnet *ipAddress subnetMask* |  
                 range *ipAddressLow ipAddressHigh* }

no tunnel peer-identity

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the peer identity of the IPSec tunnel. The **no** version removes the peer endpoint.

- Options**
- *ipAddress*—IP address of the peer identity
  - *subnetMask*—Mask applied to the subnet IP address of the peer identity
  - *ipAddressLow*—Lower bound of the range of IP addresses of the peer identity
  - *ipAddressHigh*—Upper bound of the range of IP addresses of the peer identity

**Mode**    Interface Configuration

## tunnel pfs group

---

**Syntax**    tunnel pfs group { 1 | 2 | 5 }  
             no tunnel pfs group

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Configures perfect forward secrecy for the IPSec tunnel by assigning a Diffie-Hellman prime modulus group. The **no** version removes PFS from this tunnel.

- Options**
- 1—Assigns a 768-bit Diffie-Hellman prime modulus group
  - 2—Assigns a 1024-bit Diffie-Hellman prime modulus group
  - 5—Assigns a 1536-bit Diffie-Hellman prime modulus group

**Mode**    Interface Configuration

## tunnel sequence-datagrams

---

**Syntax** [ no ] tunnel sequence-datagrams

**Release Information** Command introduced before JunosE Release 7.1.0.  
IP Tunnel Destination Profile Configuration mode added in JunosE Release 8.2.0.

**Description** Enables the use of GRE sequence numbers. The **no** version disables the use of GRE sequence numbers.

**Mode** Global Configuration, IP Tunnel Destination Profile Configuration

## tunnel-server

---

**Syntax** [ no ] tunnel-server *interfaceSpecifier*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the location of a dedicated or shared tunnel-server port on a module and accesses Tunnel Server Configuration mode, which enables you to provision the maximum number of tunnel-service interfaces to be used on the tunnel-server port. The **default** version restores the default configuration. On dedicated tunnel-server ports, the default configuration is the maximum number of tunnel-service interfaces that the tunnel-service module supports. On shared tunnel-server ports, the default configuration is zero tunnel-service interfaces provisioned. The **no** version unprovisions the tunnel-server port by reducing the number of provisioned tunnel-service interfaces to zero.

**Options**

- *interfaceSpecifier*—Particular interface; format varies according to interface type; see [“Interface Types and Specifiers” on page 5](#); port number specified must have the tunnel-server port assigned to it

**Mode** Global Configuration

**Related Documentation**

- Configuring QoS for Tunnel-Server Ports for L2TP LNS Sessions



---

## tunnel session-key-inbound

---

**Syntax** tunnel session-key-inbound *inSaAlgorithms* { *encryptKey* *authKey* | *authKey* }  
no tunnel session-key-inbound

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the encryption and authentication algorithm set and session keys for manual inbound SAs. The **no** version removes the keys.

- Options**
- *inSaAlgorithms*—Algorithms to use for manual inbound SAs; use the online Help to see a list of available algorithms
  - *encryptKey*—Encryption key; string of hexadecimal characters; length varies according to algorithm
    - DES—16 hexadecimal characters for the 8-byte key
    - 3DES—48 hexadecimal characters for the 24-byte key
    - MD5—32 hexadecimal characters for the 16-byte key
    - SHA—40 hexadecimal characters for the 20-byte key
  - *authKey*—Authentication key; string of up to 48 characters

**Mode** Interface Configuration

## tunnel session-key-outbound

---

**Syntax**    tunnel session-key-outbound *outSAalgorithms spi*  
              { *encryptKey authKey* | *encryptKey* | *authKey* }  
  
              no tunnel session-key-outbound

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the encryption and authentication algorithm set, SPI, and session keys for manual outbound SAs. The **no** version removes the keys.

- Options**
- *outSAalgorithms*—Algorithms to use for manual outbound SAs; use the online Help to see a list of available algorithms
  - *spi*—Number that uniquely identifies an SA, in the range 256–4294967295 (0xFFFFFFFF)
  - *encryptKey*—Encryption key; string of hexadecimal characters; length varies according to algorithm
    - DES—16 hexadecimal characters for the 8-byte key
    - 3DES—48 hexadecimal characters for the 24-byte key
    - MD5—32 hexadecimal characters for the 16-byte key
    - SHA—40 hexadecimal characters for the 20-byte key
  - *authKey*—Authentication key; string of up to 48 characters

**Mode**    Interface Configuration

## tunnel signaling

---

**Syntax**    tunnel signaling { isakmp | manual }  
              no tunnel signaling

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the signaling protocol used to negotiate security parameters and keys. The **no** version restores the default, isakmp.

**Options**    • isakmp—Uses ISAKMP/IKE to negotiate parameters  
              • manual—Specifies that security parameters are configured manually

**Mode**    Interface Configuration

## tunnel source

---

**Syntax** For DVMRP and GRE tunnels in Interface Configuration mode:

tunnel source { *ipAddress* | *interfaceType interfaceSpecifier* }

no tunnel source

For IPSec tunnels in Interface Configuration mode:

tunnel source { *ipAddress* | identity *fqdn* }

no tunnel source

For DVMRP and GRE tunnels in IP PIM Data MDT Configuration mode and in IP Tunnel Destination Profile Configuration mode:

[ no ] tunnel source *ipAddress*

**Release Information** Command introduced before JunosE Release 7.1.0.  
IP PIM Data MDT Profile Configuration mode, and IP Tunnel Destination Profile Configuration mode added in JunosE Release 8.2.0.

**Description** In Interface Configuration mode, configures the source for a DVMRP, GRE, or IPSec tunnel. The **no** version deletes the tunnel source.

In IP Tunnel Destination Profile Configuration mode, configures the source in the destination profile for dynamic IP tunnels. The **no** version deletes the tunnel source.

In IP PIM Data MDT Configuration mode, configures the source in the IP PIM Data MT profile for multicast VPNs. The **no** version deletes the tunnel source.

- Options**
- *ipAddress*—IP address of an existing interface that will serve as the tunnel's source
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *fqdn*—Fully qualified domain name of the interface to serve as the tunnel's source; a maximum of 80 characters

**Mode** Interface Configuration, IP PIM Data MDT Configuration, IP Tunnel Destination Profile Configuration

## tunnel-subscriber authentication

---

<b>Syntax</b>	tunnel-subscriber authentication { enable   disable }  no tunnel-subscriber authentication
<b>Release Information</b>	Command introduced in JunosE Release 9.1.0.
<b>Description</b>	Configures whether tunnel subscribers within the domain map are authenticated with the authentication server or are granted access without individual authentication. The <b>no</b> version restores the default condition, where users are not authenticated by an authentication server.
<b>Options</b>	<ul style="list-style-type: none"><li>• enable—Enables tunnel subscriber authentication by the authentication server</li><li>• disable—Disables tunnel subscriber authentication by the authentication server; all users in the domain are granted access without individual authentication; this is the default condition</li></ul>
<b>Mode</b>	Domain Map Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Tunnel Subscriber Authentication in the JunosE Broadband Access Configuration Guide</i></li></ul>

## tunnel transform-set

---

**Syntax** [ no ] tunnel transform-set *transformSetName*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies a transform set that ISAKMP uses during SA negotiations on this tunnel. Transform sets used for manually configured tunnels can have only one transform. The **no** version removes the transform set from a tunnel.

**Options** • *transformSetName*—Name of the transform set

**Mode** Interface Configuration

---

## tx-connect-speed-method

---

**Syntax** tx-connect-speed-method { static-layer2 | dynamic-layer2 | qos | actual }  
no tx-connect-speed-method

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Configures for an AAA domain map (when used from Domain Map Tunnel Configuration mode) or for an AAA tunnel group (when used from Tunnel Group Tunnel Configuration mode) the method used to calculate the transmit connect speed of the subscriber's access interface for establishing a tunneled L2TP session. This speed is reported in L2TP Transmit (TX) Speed AVP 24. The **no** version removes configuration of the transmit connect speed calculation method from the AAA domain map or AAA tunnel group.

- Options**
- **static-layer2**—Calculates the transmit connect speed of the subscriber's access interface based on statically configured settings for the underlying layer 2 interface
  - **dynamic-layer2**—Calculates the transmit connect speed of the subscriber's access interface based on dynamically configured settings for the underlying layer 2 interface
  - **qos**—Calculates the transmit connect speed of the subscriber's access interface based on settings determined by QoS
  - **actual**—Calculates the transmit connect speed of the subscriber's access interface as the lesser of the **dynamic-layer2** value or the **qos** value

**Mode** Domain Map Tunnel Configuration, Tunnel Group Tunnel Configuration

## type

---

**Syntax** To configure the RTR operation:

```
[ no ] type rtrType protocol ipicmpEcho destination  
[ source-ipaddr srcAddr | source interfaceType interfaceSpecifier ]
```

To specify the L2TP tunnel type:

```
type tunnelType
```

```
no type
```

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** From RTR Configuration mode, configures an RTR operation. The **no** version removes the configured type from the operation and resets all configuration for an RTR index.



**NOTE:** You must configure the operation's type before you can configure any other characteristics of the operation.

From Domain Map Configuration and Tunnel Group Tunnel Configuration modes, specifies the L2TP tunnel type (RADIUS attribute 64, Tunnel-Type).

- Options**
- *rtrType*—One of the following types of operation:
    - *echo*—Performs end-to-end operation only
    - *pathEcho*—Discovers a path to the destination and echoes each device on the path
  - *destination*—IP address or an IP hostname or domain name
  - *srcAddr*—Source IP address
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)
  - *tunnelType*—L2TP tunnel type

**Mode** Domain Map Configuration, RTR Configuration, Tunnel Group Tunnel Configuration



## CHAPTER 9

# U, V, W, and Y Commands

## ubr

---

**Syntax**    `ubr [ pcr ]`

`no ubr`

**Release Information**    Command introduced in JunosE Release 7.1.0.  
ATM VC Class Configuration mode added in JunosE Release 7.3.0.

**Description**    In ATM VC Configuration mode, configures the unspecified bit rate (UBR) service category on an ATM PVC. Optionally, you can specify a peak cell rate (PCR). The **ubr** command is valid only for data PVCs; you cannot use this command for control (ILMI or signaling) PVCs. The **no** version restores the default service category, UBR without a PCR.

In ATM VC Class Configuration mode, configures the UBR service category as part of a VC class definition that you assign to an ATM data PVC. The **no** version restores the default service category, UBR without a PCR, in the VC class.

**Options**    • *pcr*—Peak cell rate, in Kbps, in the range 0–149760 (for OC3 ATM modules) or 0–599040 (for OC12 ATM modules)

**Mode**    ATM VC Configuration, ATM VC Class Configuration

---

## udp-port

---

**Syntax**    `udp-port port`  
`no udp-port`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    From RADIUS Configuration mode, specifies the UDP port on the router where the RADIUS authentication, accounting, or dynamic-request servers reside. The router uses this port to communicate with the RADIUS servers. The **no** version restores the default value.

From RADIUS Relay Configuration mode, specifies the UDP port on the router where the RADIUS relay authentication or accounting server resides. The router uses this port to communicate with the RADIUS relay servers. The **no** version restores the default value.

- Options**
- *port*—Port number in the range 1–65535
    - 1812—Default for RADIUS and RADIUS relay authentication servers
    - 1813—Default for RADIUS and RADIUS relay accounting servers
    - 1700—Default for RADIUS dynamic-request servers

**Mode**    RADIUS Configuration, RADIUS Relay Configuration

**Related Documentation**

- [Configuring RADIUS-Based Mirroring](#)

## undebg ip bgp

---

**Syntax**    undebg ip bgp [ in | out ] [ *peerAddress* [ *peerAddressMask* ] ]  
              [ *bgpLog* ] [ *router routerName* ] [ filtering-router *filteringRouterName* ]  
              [ *accessClassName* ] [ route-map *mapName* ]

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Turns off the display of information previously enabled with the **debug ip bgp** command. There is no **no** version.

- Options**
- in—Displays information for inbound events
  - out—Displays information for outbound events
  - *peerAddress*—IP address of BGP peer for which information is displayed
  - *peerAddressMask*—Network mask of BGP peer for which information is displayed
  - *bgpLog*—BGP log of interest; one of the following options:
    - dampening—BGP dampening event; route is suppressed or no longer suppressed by route-flap dampening
    - events—BGP finite state machine events and transitions
    - keepalives—BGP keepalive message events
    - next-hops—BGP next hop events
    - updates—BGP routing table update events
  - *routerName*—Name of the virtual router that owns the BGP router for which information is being displayed
  - *filteringRouterName*—Name of the virtual router that owns the access class and route map parameters
  - *accessClassName*—Name of an access list to filter output
  - *mapName*—Name of a route map to filter output

**Mode**    Privileged Exec

## undebg ip mbgp

**Syntax** undebg ip mbgp [ in | out ] [ *peerAddress* [ *peerAddressMask* ] ]  
 [ *bgpLog* ] [ router *routerName* ] [ filtering-router *filteringRouterName* ]  
 [ *accessClassName* ] [ route-map *mapName* ]

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Turns off the display of information previously enabled with the **debug ip mbgp** command. There is no **no** version.

- Options**
- *in*—Displays information for inbound events
  - *out*—Displays information for outbound events
  - *peerAddress*—IP address of BGP peer for which information is displayed
  - *peerAddressMask*—Network mask of BGP peer for which information is displayed
  - *bgpLog*—BGP log of interest; one of the following options:
    - *dampening*—BGP dampening event; route is suppressed or no longer suppressed by route-flap dampening
    - *events*—BGP finite state machine events and transitions
    - *keepalives*—BGP keepalive message events
    - *next-hops*—BGP next hop events
    - *updates*—BGP routing table update events
  - *routerName*—Name of the virtual router that owns the BGP router for which information is being displayed
  - *filteringRouterName*—Name of the virtual router that owns the access class and route map parameters
  - *accessClassName*—Name of an access list to filter output
  - *mapName*—Name of a route map to filter output

**Mode** Privileged Exec

## undebg ip ospf

---

**Syntax**    undebg ip ospf *ospfLog*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Turns off the display of information for the selected variable. See **debug ip ospf** command for a complete list of the ospfLog variables. There is no **no** version.

**Options**    • *ospfLog*—OSPF log of interest; one of the following options:

- adj—OSPF adjacency events
- elect-dr—OSPF designated router election
- events—OSPF general events
- lsa—OSPF link-state advertisements events
- neighbor—OSPF neighbor state machine
- packets-rcvd—OSPF packets received
- packets-sent—OSPF packets sent
- route—OSPF route events
- spf—All OSPF shortest path first calculation events
- spf-ext—OSPF shortest path first external route calculation events
- spf-inter—OSPF shortest path first interarea route calculation events
- spf-intra—OSPF shortest path first intra-area route calculation events

**Mode**    Privileged Exec

## undebbug ip pim

---

**Syntax**    undebbug ip pim *pimLog*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Turns off the display of information previously enabled with the debug ip bgp command. There is no **no** version.

**Options**    • *pimLog*—PIM log of interest

**Mode**    Privileged Exec

## undebbug ip rip

---

**Syntax**    undebbug ip rip *ripLog*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Turns off the display of information previously enabled with the **debug ip rip** command. There is no **no** version.

**Options**    • *ripLog*—RIP log of interest; one of the following options:

- *events*—General RIP events, such as removing RIP from an interface or creating the RIP process
- *route*—Events associated with two RIP routers exchanging routes

**Mode**    Privileged Exec



---

## undebg ipv6 ospf

---

**Syntax**    undebg ipv6 ospf *ospfLog*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Turns off the display of information for the selected variable. See **debug ipv6 ospf** command for a complete list of the ospfLog variables. There is no **no** version.

**Options**    • *ospfLog*—OSPF log of interest; one of the following options:

- adj—OSPF adjacency events
- elect-dr—OSPF designated router election
- events—OSPF general events
- lsa—OSPF link-state advertisements events
- neighbor—OSPF neighbor state machine
- packets-rcvd—OSPF packets received
- packets-sent—OSPF packets sent
- route—OSPF route events
- spf—All OSPF shortest path first calculation events
- spf-ext—OSPF shortest path first external route calculation events
- spf-inter—OSPF shortest path first interarea route calculation events
- spf-intra—OSPF shortest path first intra-area route calculation events

**Mode**    Privileged Exec

## undebbug ipv6 pim

---

**Syntax**    undebbug ipv6 pim *pimLog*

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Turns off the display of information previously enabled with the **debug ipv6 pim** command. There is no **no** version.

**Options**    • *pimLog*—PIM log of interest

**Mode**    Privileged Exec

---

## undebg isis

---

**Syntax** undebg isis *isisLog*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Turns off the display of information for the selected variable. See the debug isis command for a complete list of the IS-IS log variables. There is no **no** version.

- Options**
- *isisLog*—IS-IS log of interest; one of the following options:
    - adj-packets—IS-IS adjacency-related packets, such as hello packets sent and IS-IS received adjacencies going up and down
    - mpls traffic-eng advertisements—MPLS traffic-engineering agent advertisements
    - mpls traffic-eng agents—MPLS traffic-engineering agents
    - snp-packets—IS-IS CSNPs/PSNPs
    - spf-events—Shortest path first events
    - spf-statistics—SPF timing and statistic data
    - spf-triggers—SPF triggering events
    - update-packets—Update-related packets

**Mode** Privileged Exec

## unicast

---

**Syntax**    unicast { permit | deny }  
              no unicast

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Modifies the subscriber policy for the unicast (user-to-user) protocol to define whether the subscriber (client) interfaces that belong to a bridge group or to a VPLS instance forward (permit) or filter (deny) unicast packets. The **no** version restores the default value, permit unicast packets.

You cannot change the default subscriber policy values for trunk (server) interfaces that belong to a bridge group or to a VPLS instance. You also cannot change the default subscriber policy values for a VPLS virtual core interface, which acts as a trunk interface. The VPLS virtual core interface represents all the MPLS tunnels from the router to the remote VPLS edge (VE) devices.

- Options**
- permit—Specifies that the subscriber interface associated with the bridge group or VPLS instance forwards unicast packets
  - deny—Specifies that the subscriber interface associated with the bridge group or VPLS instance filters unicast packets

**Mode**    Subscriber Policy Configuration

## unknown-destination

---

**Syntax**    unknown-destination { permit | deny }

no unknown-destination

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Modifies the subscriber policy for packets with unknown unicast destination addresses (DAs) to define whether the subscriber (client) interfaces that belong to a bridge group or to a VPLS instance forward (permit) or filter (deny) packets with unknown unicast DAs. The **no** version restores the default value, deny packets with unknown unicast DAs.

You cannot change the default subscriber policy values for trunk (server) interfaces that belong to a bridge group or to a VPLS instance. You also cannot change the default subscriber policy values for a VPLS virtual core interface, which acts as a trunk interface. The VPLS virtual core interface represents all of the MPLS tunnels from the router to the remote VPLS edge (VE) devices.

- Options**
- permit—Specifies that the subscriber interface associated with the bridge group or VPLS instance forwards packets with unknown unicast DAs
  - deny—Specifies that the subscriber interface associated with the bridge group or VPLS instance filters packets with unknown unicast DAs

**Mode**    Subscriber Policy Configuration

## unknown-protocol

---

**Syntax**    unknown-protocol { permit | deny }  
              no unknown-protocol

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Modifies the subscriber policy for packets containing an unknown protocol to define whether the subscriber (client) interfaces that belong to a bridge group or to a VPLS instance forward (permit) or filter (deny) these packets. The **no** version restores the default value, permit unknown protocol packets.

You cannot change the default subscriber policy values for trunk (server) interfaces that belong to a bridge group or to a VPLS instance. You also cannot change the default subscriber policy values for a VPLS virtual core interface, which acts as a trunk interface. The VPLS virtual core interface represents all of the MPLS tunnels from the router to the remote VPLS edge (VE) devices.

- Options**
- permit—Specifies that the subscriber interface associated with the bridge group or VPLS instance forwards packets containing an unknown protocol
  - deny—Specifies that the subscriber interface associated with the bridge group or VPLS instance filters packets containing an unknown protocol

**Mode**    Subscriber Policy Configuration

## update-source

**Syntax** For OSPF:

[ no ] update-source loopback *interfaceSpecifier*

For PIM:

update-source *interfaceType interfaceSpecifier*

no update-source [ *interfaceType interfaceSpecifier* ]

For RIP:

[ no ] update-source *interfaceType interfaceSpecifier*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Specifies the loopback interface whose local address is used as the source address for the OSPF, PIM, or RIP connection to a remote neighbor. The **no** version deletes the source address from the connection.



**NOTE:** For PIM, this command is typically used when you configure PIM remote neighbors to run multicast services over BGP/MPLS VPNs. That functionality is no longer supported.

- Options**
- *interfaceSpecifier*—Integer, in the range 1–4294967293, identifying the loopback interface
  - *interfaceType*—Interface type; see [Interface Types and Specifiers on page 5](#)
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see [Interface Types and Specifiers on page 5](#)

**Mode** Remote Neighbor Configuration

## use canned-group

---

**Syntax**    use canned-group *groupName* [ revert ]  
              no use canned-group

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Creates a DoS protection group that uses a preconfigured (canned) set of parameters. The **revert** keyword returns to the original values, which are the default for the group. The **no** version associates the group with the default preconfigured group settings.

**Options**    • *groupName*—Name of the DoS protection template

**Mode**    DoS Protection Group Configuration



## use-release-grace-period

---

**Syntax** [ no ] use-release-grace-period

**Release Information** Command introduced in JunosE Release 8.0.0.

**Description** Applies the grace period, which is specified by the **grace-period** command, to the DHCP local address pool addresses that are explicitly released by clients. When a client releases an address, the address enters the grace period and can be reassigned only to the original client. The **no** version restores the default, which disables the use of the grace period for explicitly released addresses.

**Mode** DHCP Local Pool Configuration

## username

---

**Syntax** `username userName [ nopassword | password [ encryptionType ] passwordValue | secret [ encryptionType ] secretValue ]`

`no username userName`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Configures a user entry and optional password or secret in the default local user database. This command creates the database if it does not already exist. The **no** version deletes the username entry from the default local user database. The **nopassword** keyword removes the password or secret.

- Options**
- *userName*—Name of user
  - **nopassword**—Specifies that a password is not required for the specified username; deletes the password or secret from an existing username
  - *encryptionType*—One of the following:
    - 0—Unencrypted password or secret (the default)
    - 5—MD5-encrypted secret
    - 8—Two-way encrypted password
  - *passwordValue*—Character string that specifies the password. The string can contain any alphanumeric character, including spaces, up to 64 characters. Passwords are case sensitive.
  - *secretValue*—Character string that specifies the secret. The string can contain any alphanumeric characters, including spaces, up to 64 characters. Secrets are case sensitive.

**Mode** Global Configuration

## user-name

---

**Syntax**    `user-name serviceUsername`

`no user-name`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the username for an IP service profile. The **no** version removes the username.

**Options**    • *serviceUsername*—Up to 32-character username

**Mode**    IP Service Profile Configuration

## user-packet-class

---

**Syntax** [ no ] [ suspend ] user-packet-class *userPacketClassValue*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Adds a user packet class rule to a policy list that sets the user packet class attribute of packets that match the current classifier control list. The **no** version removes a user packet class from a policy list; the **suspend** version temporarily suspends the policy rule; the **no suspend** version resumes application of a suspended rule.



.....  
**NOTE:** This command replaces the Policy List Configuration version of the **user-packet-class** command, which may be removed completely in a future release.  
.....

**Options** • *userPacketClassValue*—User packet class value assigned to packets, in the range 0–15

**Mode** Classifier Group Configuration

**Related Documentation** • Policy Rule Precedence

## user-prefix

---

**Syntax**    `user-prefix prefixString`

`no user-prefix`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the user prefix for an IP service profile. The **no** version removes the user prefix.

**Options**    • *prefixString*—Appends the interface physical location to the username

**Mode**    IP Service Profile Configuration

## vbr-nrt

---

**Syntax**    `vbr-nrt pcr scr mbs`

`no vbr-nrt`

**Release Information**    Command introduced in JunosE Release 7.1.0.  
ATM VC Class Configuration mode added in JunosE Release 7.3.0.

**Description**    In ATM VC Configuration mode, configures the variable bit rate, nonreal time (VBR-NRT) service category on an ATM PVC. You must specify the peak cell rate (PCR), sustained cell rate (SCR), and maximum burst size (MBS). The **vbr-nrt** command is valid only for data PVCs; you cannot use this command for control (ILMI or signaling) PVCs. The **no** version restores the default service category, unspecified bit rate (UBR) without a PCR.

In ATM VC Class Configuration mode, configures the VBR-NRT service category as part of a VC class definition that you assign to an ATM PVC. The **no** version restores the default service category, UBR without a PCR, in the VC class.

- Options**
- *pcr*—Peak cell rate, in Kbps, in the range 0–149760 (for OC3 ATM modules) or 0–599040 (for OC12 ATM modules)
  - *scr*—Sustained cell rate, in Kbps, in the range 0–149760 (for OC3 ATM modules) or 0–599040 (for OC12 ATM modules)
  - *mbs*—Maximum burst size, in cells, in the range 0–16777215

**Mode**    ATM VC Configuration, ATM VC Class Configuration

## vbr-rt

---

**Syntax** `vbr-rt pcr scr mbs`  
`no vbr-rt`

**Release Information** Command introduced in JunosE Release 7.1.0.  
 ATM VC Class Configuration mode added in JunosE Release 7.3.0.

**Description** In ATM VC Configuration mode, configures the variable bit rate, real time (VBR-RT) service category on an ATM PVC. You must specify the peak cell rate (PCR), sustained cell rate (SCR), and maximum burst size (MBS). The **vbr-rt** command is valid only for data PVCs; you cannot use this command for control (ILMI or signaling) PVCs. The **no** version restores the default service category, unspecified bit rate (UBR) without a PCR.

In ATM VC Class Configuration mode, configures the VBR-RT service category as part of a VC class definition that you assign to an ATM PVC. The **no** version restores the default service category, UBR without a PCR, in the VC class.

- Options**
- *pcr*—Peak cell rate, in Kbps, in the range 0–149760 (for OC3 ATM modules) or 0–599040 (for OC12 ATM modules)
  - *scr*—Sustained cell rate, in Kbps, in the range 0–149760 (for OC3 ATM modules) or 0–599040 (for OC12 ATM modules)
  - *mbs*—Maximum burst size, in cells, in the range 0–16777215

**Mode** ATM VC Configuration, ATM VC Class Configuration

## vc-class atm

---

**Syntax** [ no ] vc-class atm *vcClassName*

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Creates and names a VC class for an ATM data PVC. This command accesses ATM VC Class Configuration mode, from which you can configure a set of attributes for an ATM data PVC. The VC class can include attributes for the service category, encapsulation method, F5 OAM options, and Inverse ARP. You then apply the attributes as a group by assigning the VC class to an individual PVC, to all PVCs created on a specified ATM major interface, to all PVCs created on a specified ATM 1483 subinterface, or to a base profile from which bulk-configured VC ranges are dynamically created. The **no** version removes the named VC class from the router.

You cannot remove a VC class that is currently assigned to at least one ATM PVC, ATM 1483 subinterface, or ATM major interface without first issuing the **no class-vc** command or the **no show ip dhcp-local binding** command to remove the VC class association with the PVC, interface, or subinterface.



**NOTE:** For information about the total number of ATM VC classes supported on the router, see *JunosE Release Notes, Appendix A, System Maximums*.

**Options** • *vcClassName*—Name of the VC class; a string of up to 32 alphanumeric characters

**Mode** Global Configuration



## version

---

**Syntax**    `version { 1 | 2 }`

`no version`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Specifies the global RIP version. The **no** version reverts to the default value, RIP version 1. Use the **ip rip receive** and **ip rip send version** commands to specify the RIP version for a specific interface.

- Options**
- 1—RIP version 1
  - 2—RIP version 2

**Mode**    Address Family Configuration, Router Configuration

## virtual-router

---

**Syntax**    `virtual-router vrName | :vrfName | vrName:vrfName`  
`no virtual-router vrName [ wait-for-completion [ waitSeconds ] ]`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Creates a virtual router or accesses the context of a previously created virtual router or a VRF. The **no** version deletes the virtual router, and the router defaults to the default virtual router. Issuing a **no** version that specifies an existing VRF only displays the error message: "Cannot delete a VRF with this command." You must use the **no ip vrf** command to remove a VRF.



**NOTE:** In Domain Map Configuration mode, the **virtual-router** command has been replaced by the **router-name** command and may be removed completely from Domain Map Configuration mode in a future release.

- Options**
- *vrName*—Name of the virtual router; a string of 1–32 alphanumeric characters
  - :*vrfName*—Name of a VRF in the current VR context; a string of 1–32 alphanumeric characters
  - *vrName*:*vrfName*—Name of a VRF in the context of a VR other than the current VR
  - wait-for-completion—Specifies (in the absence of *waitSeconds*) that the CLI waits for completion of the **no** version operation before it returns a prompt, regardless of how long that takes
  - *waitSeconds*—Number of seconds, in the range 1–64000, that the CLI waits before it returns a prompt, regardless of whether the **no** version operation has been completed

**Mode**    Global Configuration, Privileged Exec

## vlan advisory-rx-speed

---

**Syntax**    `vlan advisory-rx-speed speed`  
              `no vlan advisory-rx-speed`

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Sets an advisory receive (Rx) speed that the LAC sends to the LNS. The **no** version restores the default behavior, in which the Rx speed is not sent to the LNS.

**Options**    • *speed*—Speed in the range 0–2147483647 kbps; 0 indicates no advisory speed setting

**Mode**    Profile Configuration, Subinterface Configuration

## vlan advisory-tx-speed

---

**Syntax**    `vlan advisory-tx-speed speed`  
              `no vlan advisory-rx-speed`

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Sets an advisory connect (Tx) speed that the LAC sends in the Tx connect speed to the LNS. The **no** version restores the default behavior, in which the Tx speed is not sent to the LNS.

**Options**    • *speed*—Speed in the range 0–2147483647 kbps; 0 indicates no advisory speed setting

**Mode**    Profile Configuration, Subinterface Configuration

## vlan auto-configure

---

**Syntax** `vlan auto-configure upperInterfaceType [ lockout-time { minTime maxTime | none } ]`

`no vlan auto-configure upperInterfaceType [ lockout-time ]`

**Release Information** Command introduced in JunosE Release 7.1.0.  
**lockout-time** keyword added in JunosE Release 7.3.0.

**Description** Specifies the types of dynamic upper interface encapsulations that are accepted or detected by a dynamic VLAN subinterface. You can issue this command repeatedly in Profile Configuration mode to include autodetection of multiple upper interface encapsulation types within the base profile for a dynamic VLAN subinterface. The **no** version terminates detection of the specified encapsulation type.

- Options**
- *upperInterfaceType*—One of the following dynamic encapsulation types:
    - ip
    - pppoe
  - *minTime*—Minimum lockout time in the range 1–86400 seconds (24 hours); default value is 1 second
  - *maxTime*—Maximum lockout time in the range 1–86400 seconds (24 hours); default value is 1 second
  - none—Disables lockout time for the specified dynamic encapsulation type

**Mode** Profile Configuration

## vlan auto-configure agent-circuit-identifier

---

**Syntax** [ no ] vlan auto-configure agent-circuit-identifier

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Configures the router to dynamically create VLAN subinterfaces based on the agent-circuit-id option (suboption 1) of the option 82 field in DHCP messages, or based on the DSL Forum VSA 26-1 (Agent-Circuit-Id) in PPPoE PADR and PADI packets. The **no** version disables the creation of VLAN subinterfaces based on agent-circuit-identifier information.

**Mode** Profile Configuration

## vlan bulk-config

**Syntax** To configure or remove a bulk configuration or a specific VLAN range:

```
vlan bulk-config bulkConfigName [ vlan-range vlanIdStart vlanIdEnd ]*
```

```
no vlan bulk-config bulkConfigName [ vlan-range vlanIdStart vlanIdEnd ]
```

To configure a VLAN range containing double-tagged S-VLAN IDs:

```
vlan bulk-config bulkConfigName [ svlan-range s-vlanIdStart s-vlanIdEnd vlanIdStart vlanIdEnd ]*
```

To configure a VLAN range containing S-VLAN IDs with any VLAN ID:

```
vlan bulk-config bulkConfigName [ svlan-range s-vlanIdStart s-vlanIdEnd any ]*
```

To configure a VLAN range that is based on agent-circuit-identifier information:

```
vlan bulk-config bulkConfigName [ svlan-range s-vlanIdStart s-vlanIdEnd agent-circuit-identifier ]*
```

To remove a VLAN range containing S-VLAN IDs or agent-circuit-identifier information:

```
no vlan bulk-config bulkConfigName [ svlan-range s-vlanIdStart s-vlanIdEnd { vlanIdStart vlanIdEnd | any | agent-circuit-identifier } ]
```

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Configures a range of single-tagged VLAN IDs and double-tagged S-VLAN IDs for use by a dynamic VLAN subinterface, and assigns a name to the VLAN range. Each VLAN range consists of one or more nonoverlapping VLAN subranges. A VLAN subrange is a group of VLAN IDs that resides within the specified VLAN ID ranges. You can configure multiple VLAN ranges on a major VLAN interface. The **no** version removes the specified VLAN range (including all subranges in the range) from the VLAN major interface or the specified subrange from the VLAN range. The **no** version also removes any overriding profile assignments for VLAN IDs within the deleted VLAN range or VLAN subrange.

- Options**
- *bulkConfigName*—Name of the VLAN range; string of up to 80 characters
  - *vlanIdStart*—Starting VLAN ID of the VLAN subrange you are configuring
  - *vlanIdEnd*—Ending VLAN ID of the VLAN subrange you are configuring
  - *s-vlanIdStart*—Starting S-VLAN ID of the VLAN subrange you are configuring
  - *s-vlanIdEnd*—Ending S-VLAN ID of the VLAN subrange you are configuring
  - *any*—Specifies the VLAN ID as a wildcard
  - *agent-circuit-identifier*—Specifies a VLAN range that is based on agent-circuit-identifier information
  - *\**—Indicates that one or more parameters can be repeated multiple times in a list in the command line

**Mode**    Interface Configuration



## vlan bulk-config modify

**Syntax** To modify VLAN ranges containing single-tagged VLAN IDs:

```
vlan bulk-config bulkConfigName modify vlan-range vlanIdStart vlanIdEnd
```

To modify VLAN ranges containing double-tagged S-VLAN IDs or based on agent-circuit-identifier:

```
vlan bulk-config bulkConfigName modify svlan-range s-vlanIdStart s-vlanIdEnd
{ vlanIdStart vlanIdEnd | any | agent-circuit-identifier }
```

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Modifies the VLAN subrange values for the specified bulk configuration VLAN range. If the new subrange encompasses previously configured subranges within that range, those subranges are merged into the new one, freeing subrange resources. There is no **no** version.

- Options**
- *bulkConfigName*—Name of the VLAN range; string of up to 80 characters
  - *vlanIdStart*—Starting VLAN ID of the VLAN subrange you are configuring
  - *vlanIdEnd*—Ending VLAN ID of the VLAN subrange you are configuring
  - *s-vlanIdStart*—Starting S-VLAN ID of the S-VLAN subrange you are configuring
  - *s-vlanIdEnd*—Ending S-VLAN ID of the S-VLAN subrange you are configuring
  - *any*—Specifies the VLAN ID as a wildcard
  - *agent-circuit-identifier*—Specifies a VLAN range that is based on agent-circuit-identifier information

**Mode** Interface Configuration

## vlan bulk-config shutdown

---

**Syntax** To shut down or reenables the specified bulk configuration or a specific VLAN range:

[ no ] vlan bulk-config *bulkConfigName* shutdown

[ no ] vlan bulk-config *bulkConfigName* shutdown vlan-range *vlanIdStart* *vlanIdEnd*

To shut down or reenables VLAN ranges containing double-tagged S-VLAN IDs or based on agent-circuit-identifier information:

[ no ] vlan bulk-config *bulkConfigName* shutdown svlan-range *s-vlanIdStart* *s-vlanIdEnd*  
{ *vlanIdStart* *vlanIdEnd* | any | agent-circuit-identifier }

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Administratively disables (shuts down) the specified bulk configuration, or a specified VLAN range or subrange. When you shut down a specified bulk configuration, all VLAN ranges, including those based on double-tagged S-VLAN IDs or agent-circuit-identifier information, are disabled. The **no** version reenables the specified bulk configuration, the specified VLAN range, or the specified subranges; this is the default condition.

- Options**
- *bulkConfigName*—Name of the VLAN range; string of up to 80 characters
  - *vlanIdStart*—Starting VLAN ID of the VLAN subrange you are configuring
  - *vlanIdEnd*—Ending VLAN ID of the VLAN subrange you are configuring
  - *s-vlanIdStart*—Starting S-VLAN ID of the S-VLAN subrange you are configuring
  - *s-vlanIdEnd*—Ending S-VLAN ID of the S-VLAN subrange you are configuring
  - any—Specifies the VLAN ID as a wildcard
  - agent-circuit-identifier—Specifies a VLAN range that is based on agent-circuit-identifier information

**Mode** Interface Configuration

## vlan classifier-list

---

**Syntax** `vlan classifier-list classifierName`  
`[ traffic-class className ] [ color { green | yellow | red } ]`  
`[ user-packet-class userPacketClassValue ] [ user-priority userPriorityValue ]`  
`no vlan classifier-list classifierName [ classifierNumber ]`

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates or modifies a VLAN classifier control list. The **no** version deletes the classifier control list.

- Options**
- *classifierName*—Name of a classifier list entry
  - *className*—Name of a traffic class; the router supports up to eight traffic classes
  - green—Matches packet color to green, indicating a low drop preference
  - yellow—Matches packet color to yellow, indicating a medium drop preference
  - red—Matches packet color to red, indicating a high drop preference
  - *userPacketClassValue*—Value of the user packet class in the range 0–15
  - *userPriorityValue*—Value of the user priority bits in the range 0–7
  - *classifierNumber*—Index of the classifier control list entry to be deleted; an integer in the range 1–10000

**Mode** Global Configuration

**Related Documentation**

- Creating or Modifying Classifier Control Lists for VLAN Policy Lists

## vlan description

---

**Syntax**   vlan description *aliasName*  
             no vlan description

**Release Information**   Command introduced before JunosE Release 7.1.0.  
                          Profile Configuration mode added in JunosE Release 7.2.0.

**Description**   Assigns an alias or a description to a VLAN subinterface. The **no** version removes the description.

**Options**

- *aliasName*—Alias or description; string of up to 64 characters

**Mode**    Interface Configuration, Profile Configuration

## vlan dos-protection-group

---

**Syntax**    `vlan dos-protection-group groupName`  
              `no vlan dos-protection-group`

**Release Information**    Command introduced in JunosE Release 8.1.0.

**Description**    Attaches a VLAN denial of service (DoS) protection group to an interface. The **no** version removes the attachment of the DoS protection group from the interface.

**Options**    • *groupName*—Name of the DoS protection group

**Mode**    Interface Configuration

## vlan id

---

<b>Syntax</b>	<code>vlan id <i>idValue</i> [ icr-control-interface ] [ untagged ] [ mac-address <i>macAddress</i> ]</code>
<b>Release Information</b>	Command introduced before JunosE Release 7.1.0. <b>icr-control-interface</b> keyword added in JunosE Release 10.3.0.
<b>Description</b>	Specifies a VLAN ID to a VLAN subinterface. Assigns a VLAN ID to a VLAN subinterface on which an ICR partition is to be configured. There is no <b>no</b> version.
<b>Options</b>	<ul style="list-style-type: none"><li>• <i>idValue</i>—Number unique within the Ethernet interface, in the range 0–4095.</li><li>• <b>icr-control-interface</b>—Sets the VLAN subinterface as an ICR control interface on which you want to configure the ICR partition. We recommend that you use this option only if you want the VLAN subinterface to be used to create ICR partitions.</li><li>• <b>untagged</b>—Specifies that frames be sent untagged; valid only for VLAN ID 0.</li><li>• <i>macAddress</i>—MAC address of the interface; when you do not specify a unique MAC address, the VLAN uses the MAC address of the Ethernet interface.</li></ul>
<b>Mode</b>	Interface Configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Ethernet/VLAN Layer 2 Services</i>, <i>Configuring Local ATM Cross-Connect with AAL5 Encapsulation</i>, and <i>Configuring Local Cross-Connects Between Ethernet/VLAN Interfaces</i> in the <i>JunosE BGP and MPLS Configuration Guide</i></li></ul>

## vlan policy

**Syntax** `vlan policy { input | output } policyName`  
`[ statistics { enabled [ baseline { enabled | disabled } ] [ preserve | merge ] |`  
`disabled [ merge ] } | merge ]`  
  
`no vlan policy { input | output } [ policyName ]`

**Release Information** Command introduced before JunosE Release 7.1.0.  
**merge** keyword added in JunosE Release 7.2.0.  
 Profile Configuration mode added in JunosE Release 7.2.0.

**Description** Assigns a VLAN policy list to an interface. If you enter the **vlan policy** command and the policy list does not exist, the router creates a policy list with no rules, the default. When no rules are found in a policy list, the router performs a routing table lookup and forwards packets on the interface based on the routing table information. You must specify the **input** or **output** keyword to assign the policy list to the ingress or egress of the interface.

In Profile Configuration mode, assigns the policy list to a profile, which then assigns the policy to an interface.

In Interface Configuration mode, the **no** version removes the association between a policy list and an interface. In Profile Configuration mode, the **no** version removes the policy reference from the profile.

- Options**
- **input**—Applies policy to data arriving at this interface
  - **output**—Applies policy to data leaving this interface
  - ***policyName***—Name of the policy; a maximum of 40 characters
  - **statistics**—Enables or disables collection of policy routing statistics
    - **enabled**—Enables collection of policy routing statistics
    - **baseline enabled**—Enables baselining of policy routing statistics
    - **baseline disabled**—Disables baselining of policy routing statistics
    - **preserve**—Preserves existing statistics for any classifier list that is the same for both the new and old policy attachments when you attach a new policy to an interface
    - **disabled**—Disables collection of policy routing statistics
  - **merge**—Enables merging of multiple policies to form a single policy

**Mode** Interface Configuration, Profile Configuration

**Related Documentation**

- Setting a Statistics Baseline for Policies

## vlan policy-list

---

**Syntax** [ no ] vlan policy-list *policyName*

**Release Information** Command introduced before JunosE Release 7.1.0.

**Description** Creates the specified policy list and accesses Policy List Configuration mode. The **no** version deletes the policy list.

**Options** • *policyName*—Name of a policy list; string of up to 40 alphanumeric characters

**Mode** Global Configuration

**Related Documentation** • Creating Policy Lists for VLANs



## vlan profile

---

**Syntax** [ no ] vlan profile *upperInterfaceType* *profileName*

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** Adds a nested profile assignment to a base profile for a dynamic VLAN subinterface. A nested profile assignment references another profile that dynamically configures upper interface encapsulation types over the VLAN subinterface. The **no** version removes the profile assignment for the upper interface type.

- Options**
- *upperInterfaceType*—One of the following dynamic encapsulation types:
    - ip
    - pppoe
  - *profileName*—Profile name of up to 80 characters

**Mode** Profile Configuration

## vlan service-profile

---

**Syntax** [ no ] vlan service-profile *profileName*

**Release Information** Command introduced in JunosE Release 7.1.0.

**Description** Assigns an IP service profile to a VLAN subinterface. The service profile must be defined in the default virtual router. The **no** version removes the IP service profile from the VLAN subinterface.

**Options** • *profileName*—Name of the IP service profile

**Mode** Profile Configuration

## volume

---

**Syntax**    volume *megabytes*

no volume

**Release Information**    Command introduced in JunosE Release 7.2.0.

**Description**    Configures the threshold for the volume of traffic allowed for the service session. The service is terminated when the threshold is exceeded. The **no** version removes the volume attribute from the service session profile.

**Options**    • *megabytes*—Number of megabytes in the range 0–16777251

**Mode**    Service Session Profile Configuration

## wait-for-gsmp-syn

---

**Syntax** [ no ] wait-for-gsmp-syn

**Release Information** Command introduced in JunosE Release 11.0.0.

**Description** Enables the learning option in ANCP.

The **no** version disables the learning option.

**Mode** L2C Configuration

---

## warning

---

**Syntax**    warning *maximumUtilization minimumUtilization*  
              no warning

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the minimum and maximum threshold values for DHCP local address pool utilization. If you issue the [snmp-server](#) command, SNMP traps are generated when utilization occurs above or below the specified threshold values. The **no** version restores the default threshold values for local address pool utilization.

**Options**    • *maximumUtilization*—Maximum utilization value for the DHCP local address pool  
              • *minimumUtilization*—Minimum utilization value for the DHCP local address pool

**Mode**    DHCP Local Pool Configuration

## weight

---

**Syntax**    `weight weightValue [ operator operandValue ]*`  
`no weight`

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Sets the weighted round-robin weight of the scheduler node or queue. A queue weight of 0 (zero) gives the queue infinite weight. The **no** version restores the default value, 8.

**Options**

- *weightValue*—Number in the range 0–4080; default value is 8
- *operator*—Mathematical function
- *operandValue*—Input for the operator; can be a QoS parameter definition name or an integer
- *\**—Indicates that one or more parameters can be repeated multiple times in a list in the command line

**Mode**    Scheduler Profile Configuration

**Related Documentation**

- Configuring the HRR Weight for a Scheduler Node or Queue

## write core

**Syntax** write core [ standby-srp | slot *slotNumber* ] [ force ] [ reason *reasonText* ]

**Release Information** Command introduced in JunosE Release 7.3.0.

**Description** Reboots the active SRP module, the standby SRP module, or the module in a specified slot, and writes the core dump to a file. There is no **no** version.

- Options**
- **standby-srp**—Specifies the standby SRP module
  - **slotNumber**—Number of a selected slot in the router; for ERX7xx models, a number in the range 0–6; for ERX14xx models, a number in the range 0–13; for the ERX310 router, a number in the range 0–2; for the E120 router, a number in the range 0–5; for the E320 router, a number in the range 0–16
  - **force**—Prompts for confirmation to reboot when the router is in certain states, such as during the synchronization of SRP modules, that can lead to a loss of configuration data or an NVS corruption



**NOTE:** The **force** keyword is available when you specify a slot only if that slot is an SRP module slot.

- **reasonText**—Alphanumeric text string (1–255 characters long) that explains the request for a core dump and logs it in the reboot

**Mode** Privileged Exec

## write memory

---

**Syntax**    write memory

**Release Information**    Command introduced before JunosE Release 7.1.0.

**Description**    Saves all outstanding (unsaved) configuration changes to nonvolatile storage; an exact alias of the **copy running-configuration startup-configuration** command. Available if the router is in either Automatic Commit mode or Manual Commit mode. If issued while in Automatic Commit mode, the CLI notifies you that the command is not necessary, but allows you to proceed. There is no **no** version.

**Mode**    Privileged Exec



## yellow-mark

---

**Syntax** [ no ] yellow-mark *colorMarkValue*

**Release Information** Command introduced in JunosE Release 7.2.0.

**Description** Applies ToS mark value to yellow packets, which can be from policy actions, earlier policies, or rate-limit hierarchies. The **no** version deletes the ToS mark value.

**Options** • *colorMarkValue*—Value of the ToS mark to be applied, in the range 0–255

**Mode** Color Mark Profile Configuration

**Related Documentation** • Hierarchical Rate Limits Overview  
• Policy Rule Precedence



## PART 2

# Index

- [Index on page 1451](#)



# Index

## Symbols

10-Gigabit Ethernet interface.....17

## A

### AAA commands

show aaa accounting.....529  
 show aaa accounting default.....530  
 show aaa accounting interval.....531  
 show aaa accounting vr-group.....532  
 show aaa authentication default.....533  
 show aaa delimiters.....534  
 show aaa domain-map.....535  
 show aaa duplicate-address-check.....537  
 show aaa duplicate-prefix-check.....538  
 show aaa  
   duplicate-prefix-check-extension.....539  
 show aaa model.....542  
 show aaa name-servers.....543  
 show aaa per-profile-attr-list.....544  
 show aaa qos downstream-rate.....546  
 show aaa service accounting interval.....550  
 show aaa statistics.....551  
 show aaa subscriber per-port-limit.....553  
 show aaa subscriber per-vr-limit.....554  
 show aaa timeout.....555  
 show aaa tunnel-group.....556  
 show aaa tunnel-parameters.....557  
 show aaa user accounting interval.....558  
 switch-profile.....1271  
 test aaa.....1316  
 tunnel group.....1365  
 tx-connect-speed-method.....1397

### AAA domain map commands

tunnel-subscriber authentication.....1395

### AAA profile commands

nas-port-type atm.....20  
 nas-port-type ethernet.....21  
 ppp aaa-profile.....209  
 pre-authenticate.....258  
 service-description.....462  
 show aaa profile.....545

show aaa route-download.....547  
 show aaa route-download routes.....548  
 show aaa route-download routes global.....549  
 translate.....1353

### ANCP commands

qos-adaptive-mode.....288  
 session-timeout.....478  
 show adjustment-factor.....560  
 show l2c discovery-table.....982  
 show l2c label.....983  
 show l2c neighbor.....984  
 show l2c statistics.....985  
 wait-for-gsmp-syn.....1442

### APS/MSP commands

show aps.....561  
 threshold.....1323  
 threshold-test.....1324

### ARP commands

show arp.....562

ATM 1483 subinterface.....6, 13

### ATM commands

oam ais-rdi.....106  
 oam cc.....107  
 oam retry.....109  
 oam-pvc.....108  
 ping atm interface atm.....190  
 profile atm1483 bulk-config-name.....274  
 profile atm1483 bulk-config-name pvc.....275  
 profile-reassign.....276  
 pvc.....286  
 show atm aal5 interface.....563  
 show atm atm1483.....564  
 show atm bulk-config.....565  
 show atm interface.....566  
 show atm map.....567  
 show atm mcpt-timers.....568  
 show atm oam.....569  
 show atm ping.....570  
 show atm subinterface.....571  
 show atm vc.....572  
 show atm vc atm.....573  
 show atm vc-class.....574  
 show atm vp.....575  
 show atm vp-description.....576  
 show atm vp-tunnel.....577  
 show interfaces.....720  
 show nbma arp.....1048  
 shutdown.....1195  
 ubr.....1400

vbr-nrt.....	1420
vbr-rt.....	1421
vc-class atm.....	1422
ATM interface.....	6, 13

## B

### B-RAS commands

nas-port-type atm.....	20
nas-port-type ethernet.....	21
no radius client.....	84
override c2 byte.....	119
override-user.....	121
password.....	127
ppp aaa-profile.....	209
pre-authenticate.....	258
preference.....	259
profile.....	273
profile-reassign.....	276
radius accounting server.....	306
radius acct-session-id-format.....	307
radius algorithm.....	308
radius authentication server.....	309
radius calling-station-delimiter.....	310
radius calling-station-format.....	311
radius client.....	315
radius connect-info-format.....	316
radius dsl-port-type.....	318
radius dynamic-request server.....	319
radius ethernet-port-type.....	320
radius icr-partition-accounting.....	321
radius ignore.....	322
radius include.....	323
radius include dsl-forum-attributes.....	331
radius nas-identifier.....	333
radius nas-port-format.....	334
radius override calling-station-id	
remote-circuit-id.....	337
radius override nas-info.....	338
radius override nas-ip-addr	
tunnel-client-endpoint.....	339
radius override nas-port-id	
remote-circuit-id.....	340
radius per profile configuration.....	341, 342, 395
radius per profile list name.....	343
radius pppoe nas-port-format unique.....	344
radius pre-authentication server.....	345
radius relay server.....	346
radius relay udp-checksum.....	347
radius rollover-on-reject.....	350
radius route-download server.....	351
radius trap acct-server-not-responding.....	352
radius trap acct-server-responding.....	353
radius trap auth-server-not-responding.....	354
radius trap auth-server-responding.....	355
radius trap no-acct-server-responding.....	356
radius trap no-auth-server-responding.....	357
radius tunnel-accounting.....	358
radius udp-checksum.....	359
radius update-source-addr.....	360
radius vlan nas-port-format stacked.....	361
retransmit.....	402
router-name.....	417
service-description.....	462
sessions-limit-group.....	479
set dhcp relay.....	487
set dhcp relay agent sub-option.....	489
set dhcp relay assign-giaddr-source-ip.....	490
set dhcp relay broadcast-flag-replies.....	491
set dhcp relay giaddr-selects-interface.....	492
set dhcp relay layer2-unicast-replies.....	493
set dhcp relay max-client-packet-rate .....	494
set dhcp relay options.....	495
set dhcp relay override.....	496
set dhcp relay	
preserve-trusted-client-option.....	497
set dhcp relay proxy set dhcp relay proxy	
send-first-offer.....	498
set dhcp relay proxy timeout.....	499
set dhcp relay trust-all.....	500
set dhcp vendor-option.....	501
set ip interface-profile.....	504
set ip service-profile.....	506
set ip source-prefix.....	507
show aaa accounting.....	529
show aaa accounting default.....	530
show aaa accounting interval.....	531
show aaa accounting vr-group.....	532
show aaa authentication default.....	533
show aaa delimiters.....	534
show aaa dhcpv6-delegated-prefix.....	536
show aaa domain-map.....	535
show aaa duplicate-address-check.....	537
show aaa duplicate-prefix-check.....	538
show aaa	
duplicate-prefix-check-extension.....	539
show aaa ipv6-nd-ra-prefix.....	541
show aaa model.....	542
show aaa name-servers.....	543

show aaa per-profile-attr-list.....	544	show radius nas-port-format.....	1096
show aaa profile.....	545	show radius override.....	1098
show aaa qos downstream-rate.....	546	show radius per-profile-attr-list.....	1099
show aaa route-download.....	547	show radius pppoe nas-port-format.....	1100
show aaa route-download routes.....	548	show radius relay.....	1101
show aaa route-download routes global.....	549	show radius relay udp-checksum.....	1101
show aaa service accounting interval.....	550	show radius remote-circuit-id-delimiter.....	1103
show aaa statistics.....	551	show radius remote-circuit-id-format.....	1104
show aaa subscriber per-port-limit.....	553	show radius rollover-on-reject.....	1105
show aaa subscriber per-vr-limit.....	554	show radius servers.....	1106
show aaa timeout.....	555	show radius statistics.....	1107
show aaa tunnel-group.....	556	show radius trap.....	1108
show aaa tunnel-parameters.....	557	show radius tunnel-accounting.....	1109
show aaa user accounting interval.....	558	show radius udp-checksum.....	1110
show cops info.....	660	show radius update-source-addr.....	1111
show cops statistics.....	661	show radius vlan nas-port-format.....	1112
show dhcp binding.....	662	show sccc info.....	1156
show dhcp count.....	665	show sccc option.....	1157
show dhcp host.....	669	show sccc statistics.....	1158
show dhcp proxy-client binding.....	672	show sccc version.....	1159
show dhcp relay.....	673	show statistics tacacs.....	1161
show dhcp relay proxy statistics.....	674	show subscribers.....	1163
show dhcp relay statistics.....	675	show tacacs.....	1170
show dhcp server.....	676	show terminate-code.....	1179
show dhcp summary.....	677	sscc address.....	1240
show dhcp vendor-option.....	678	sscc enable.....	1241
show dhcp-external.....	668	sscc option.....	1242
show ip dhcp-capture.....	783	sscc protocol ipv6.....	1243
show ip dhcp-external binding.....	784	sscc protocol lac.....	1244
show ip dhcp-external binding-id.....	785	sscc restart.....	1245
show ip dhcp-external configuration.....	786	sscc retryTimer.....	1246
show ip dhcp-external statistics.....	787	sscc sourceAddress.....	1247
show ip local alias.....	824	sscc sourceInterface.....	1248
show ip local pool.....	825	sscc transportRouter.....	1249
show ip local shared-pool.....	826	strip-domain.....	1254
show ip service-profile.....	884	subscriber.....	1255
show ip-subscriber.....	888	subscriber disconnect.....	1256
show license b-ras.....	1014	tacacs-server host.....	1292
show radius acct-session-id-format.....	1085	tacacs-server key.....	1293
show radius algorithm.....	1086	tacacs-server source-address.....	1294
show radius attributes-ignored.....	1087	tacacs-server timeout.....	1295
show radius attributes-included.....	1088	terminate-code.....	1315
show radius calling-station-delimiter.....	1089	test aaa.....	1316
show radius calling-station-format.....	1090	timeout.....	1326
show radius connect-info-format.....	1091	translate.....	1353
show radius dsl-port-type.....	1092	tunnel.....	1360
show radius ethernet-port-type.....	1093	udp-port.....	1401
show radius icr-partition-accounting.....	1094	use-release-grace-period.....	1415
show radius nas-identifier.....	1095	user-name.....	1417

user-prefix.....	1419	rd.....	366
vlan service-profile.....	1440	redistribute.....	371
BGP commands		rib-out disable.....	404
neighbor activate.....	23	route-target.....	410
neighbor advertise-map.....	24	router bgp.....	411
neighbor advertisement-interval.....	25	set as-path prepend.....	482
neighbor allow.....	26	set comm-list delete.....	484
neighbor allowas-in.....	27	set community.....	485
neighbor as-override.....	28	set dampening.....	486
neighbor bfd-liveness-detection.....	29	set extcommunity.....	503
neighbor capability.....	31	set ip next-hop.....	505
neighbor default-originate.....	33	set local-preference.....	510
neighbor description.....	34	set metric.....	511
neighbor distribute-list.....	35	set metric-type.....	512
neighbor ebgp-multihop.....	36	set mpls-label.....	513
neighbor filter-list.....	37	set origin.....	514
neighbor graceful-restart.....	38	set tag.....	520
neighbor graceful-restart restart-time.....	39	set weight.....	522
neighbor graceful-restart stalepaths-time.....	40	show bgp ipv6.....	580
neighbor ibgp-singlehop.....	41	show bgp ipv6 advertised-routes.....	583
neighbor lenient.....	42	show bgp ipv6 aggregate-address.....	586
neighbor local-as.....	43	show bgp ipv6 community.....	587
neighbor maximum-orf-entries.....	44	show bgp ipv6 community-list.....	590
neighbor maximum-prefix.....	45	show bgp ipv6 dampened-paths.....	592
neighbor maximum-update-size.....	46	show bgp ipv6 filter-list.....	594
neighbor next-hop-self.....	47	show bgp ipv6 flap-statistics.....	596
neighbor next-hop-unchanged.....	48	show bgp ipv6 inconsistent-as.....	598
neighbor passive.....	49	show bgp ipv6 neighbors.....	600
neighbor password.....	50	show bgp ipv6 neighbors	
neighbor peer-group.....	51	dampened-routes.....	601
neighbor peer-type.....	52	show bgp ipv6 neighbors paths.....	603
neighbor prefix-list.....	53	show bgp ipv6 neighbors	
neighbor prefix-tree.....	54	received-routes.....	604
neighbor remote-as.....	55	show bgp ipv6 neighbors routes.....	606
neighbor remove-private-as.....	56	show bgp ipv6 network.....	608
neighbor rib-out disable.....	57	show bgp ipv6 next-hops.....	610
neighbor route-map.....	58	show bgp ipv6 paths.....	611
neighbor route-reflector-client.....	59	show bgp ipv6 peer-group.....	612
neighbor send-community.....	60	show bgp ipv6 quote-regexp.....	613
neighbor send-label.....	61	show bgp ipv6 regexp.....	615
neighbor shutdown.....	62	show bgp ipv6 summary.....	617
neighbor site-of-origin.....	63	show ip as-path access-list.....	725
neighbor soft-reconfiguration inbound.....	64	show ip bgp.....	726
neighbor timers.....	65	show ip bgp advertised-routes.....	729
neighbor unsuppress-map.....	66	show ip bgp aggregate-address.....	733
neighbor update-source.....	67	show ip bgp cidr-only.....	734
neighbor weight.....	68	show ip bgp community.....	736
network.....	72	show ip bgp community-list.....	739
overload shutdown.....	119	show ip bgp dampened-paths.....	742



- 
- show ip bgp filter-list.....745
  - show ip bgp flap-statistics.....748
  - show ip bgp inconsistent-as.....750
  - show ip bgp neighbors.....752
  - show ip bgp neighbors dampened-routes.....753
  - show ip bgp neighbors paths.....756
  - show ip bgp neighbors received
    - prefix-filter.....757
  - show ip bgp neighbors received-routes.....758
  - show ip bgp neighbors routes.....761
  - show ip bgp network.....764
  - show ip bgp next-hops.....766
  - show ip bgp paths.....767
  - show ip bgp peer-group.....768
  - show ip bgp quote-regexp.....769
  - show ip bgp regexp.....773
  - show ip bgp summary.....777
  - show ip community-list.....781
  - show ip extcommunity-list.....806
  - synchronization.....1272
  - table-map.....1291
  - test bgp ipv6 neighbor.....1317
  - test ip bgp neighbor.....1320
  - timers bgp.....1329
  - undebg ip bgp.....1402
  - undebg ip mbgp.....1403
  - BGP/MPLS VPN commands
    - neighbor activate.....23
    - neighbor allowas-in.....27
    - neighbor as-override.....28
    - neighbor default-originate.....33
    - neighbor maximum-prefix.....45
    - neighbor next-hop-unchanged.....48
    - neighbor send-label.....61
    - neighbor site-of-origin.....63
    - rd.....366
    - route-target.....410
    - set mpls-label.....513
    - show ip bgp next-hops.....766
    - show ip interface vrf.....823
    - show ip protocols.....871
    - show ip vrf.....893
    - show mpls tunnels.....1045
    - undebg ip mbgp.....1403
    - virtual-router.....1424
  - booting commands
    - no boot hotfix all-releases.....80
    - reload.....388
    - reload slot.....389
  - show boot.....619
  - show last-reset.....1002
  - show reload.....1121
  - bridged Ethernet commands
    - show bridge1483 interface.....620
    - show ip mac-validate.....827
  - bridged IP commands
    - set dhcp relay.....487
    - set dhcp relay proxy timeout.....499
    - show dhcp relay.....673
    - show dhcp relay proxy statistics.....674
    - show dhcp relay statistics.....675
  - bridging commands
    - pppoe.....239
    - relearn.....387
    - show bridge.....621
    - show bridge groups.....622
    - show bridge interface.....623
    - show bridge port.....626
    - show bridge table.....627
    - show subscriber-policy.....1162
    - subscriber-policy.....1258
    - unicast.....1410
    - unknown-destination.....1411
    - unknown-protocol.....1412
  - bulkstats commands
    - bulkstats.....81
    - no bulkstats.....81
  - C**
  - Cisco HDLC commands
    - show hdlc interface.....710
    - show interfaces serial.....720
  - CLNS commands
    - show clns.....643
    - show clns interface.....644
    - show clns neighbors.....645
    - show clns protocol.....646
    - show clns traffic.....647
  - cOCx/STMx commands
    - path.....129
    - path ds1 fdl.....144
    - path ds1 fdl carrier.....145
    - path ds1 fdl string.....146
    - path ds1 fdl transmit.....147
    - path ds1 remote-loopback.....148
    - path ds1|e1.....131
    - path ds1|e1 bert.....132
    - path ds1|e1 channel-group description.....133

path ds1 e1 channel-group shutdown.....	134
path ds1 e1 channel-group snmp trap	
link-status.....	135
path ds1 e1 channel-group timeslots.....	136
path ds1 e1 clock source.....	137
path ds1 e1 description.....	138
path ds1 e1 framing.....	139
path ds1 e1 loopback.....	140
path ds1 e1 shutdown.....	142
path ds1 e1 snmp trap link-status.....	143
path ds3.....	149
path ds3 bert.....	150
path ds3 clock source.....	151
path ds3 description.....	152
path ds3 equipment loopback.....	153
path ds3 framing.....	154
path ds3 loopback.....	155
path ds3 mdl carrier.....	156
path ds3 mdl string.....	157
path ds3 mdl transmit.....	158
path ds3 shutdown.....	159
path ds3 snmp trap link-status.....	160
path ds3 t1.....	161
path ds3 t1 bert.....	162
path ds3 t1 clock source.....	163
path ds3 t1 description.....	164
path ds3 t1 fdl.....	165
path ds3 t1 fdl carrier.....	166
path ds3 t1 fdl string.....	167
path ds3 t1 fdl transmit.....	168
path ds3 t1 framing.....	169
path ds3 t1 loopback.....	170
path ds3 t1 remote-loopback.....	171
path ds3 t1 shutdown.....	172
path ds3 t1 snmp trap link-status.....	173
path ds3 t1 timeslots.....	174
path e1 unframed.....	175
path overhead c2.....	176
path overhead j1.....	177
path snmp trap link-status.....	179
path trigger alarm.....	180
path trigger delay.....	181
sdh.....	441
serial description.....	455
show controllers sonet.....	654
show controllers sonet remote.....	656
show interfaces.....	720
shutdown.....	1195
trigger delay.....	1357

conventions	
notice icons.....	xxxv
text and syntax.....	xxxvi
CT3 commands	
serial description.....	455
show controllers t3.....	658
show controllers t3 remote.....	659
show interfaces serial.....	720
shutdown.....	1195
snmp trap link-status.....	1234
t1 bert.....	1276
t1 clock source.....	1277
t1 description.....	1278
t1 fdl.....	1279
t1 fdl carrier.....	1280
t1 fdl string.....	1281
t1 fdl transmit.....	1282
t1 framing.....	1283
t1 lineCoding.....	1284
t1 loopback.....	1285
t1 remote-loopback.....	1286
t1 shutdown.....	1287
t1 snmp trap link-status.....	1288
t1 timeslots.....	1289
t1 yellow.....	1290
customer support.....	xxxvii
contacting JTAC.....	xxxvii

## D

default commands vs. no commands.....	3
deprecated commands.....	4
DHCP commands	
service dhcp-external.....	463
service dhcp-local.....	464
service dhcpv6-local.....	465
show ip dhcp-local auth.....	789
DHCP external server commands	
show dhcp proxy-client binding.....	672
show dhcp-external.....	668
DHCP local server commands	
network.....	72
reserve.....	396
server-address.....	456
show ip dhcp-local excluded.....	792
show ip dhcp-local leases.....	793
show ip dhcp-local pool.....	795
show ip dhcp-local reserved.....	796

DHCPv6 local server commands	
show ipv6 dhcpv6-local dns-servers.....	920
show ipv6 dhcpv6-local prefix-lifetime.....	921
show ipv6	
dhcpv6-localdns-domain-searchlist.....	919
digital certificate commands	
organization.....	112
root proxy url.....	405
show ike certificates.....	715
show ike configuration.....	716
show ike identity.....	717
show ipsec ca identity.....	898
show ipsec certificates.....	899
show ipsec identity.....	900
show ipsec ike-configuration.....	901
show ipsec key pubkey-chain rsa.....	905
show ipsec mypubkey rsa.....	904
DNS commands	
show ip domain-lookup.....	798
documentation set	
comments on.....	xxvii
DoS protection group commands	
ppp dos-protection-group.....	213
pppoe dos-protection-group.....	244
priority burst.....	264
priority over-subscription-factor.....	265
priority rate.....	266
protocol burst.....	279
protocol drop-probability.....	280
protocol priority.....	281
protocol rate.....	282
protocol skip-priority-rate-limiter.....	284
protocol weight.....	285
show dos-protection-group.....	679
use canned-group.....	1414
vlan dos-protection-group.....	1435
DVMRP commands	
redistribute.....	371
router dvmrp.....	412
show dvmrp destination profile.....	681
show dvmrp tunnel.....	682
show ip dvmrp.....	799
show ip dvmrp interface.....	800
show ip dvmrp mroute.....	801
show ip dvmrp neighbor.....	802
show ip dvmrp route.....	803
show ip dvmrp routeNextHop.....	804
tunnel destination.....	1362
tunnel mdt.....	1370
dynamic interface commands	
pppoe auto-configure.....	242
pppoe clear lockout interface.....	243
pppoe profile.....	251
profile.....	273
profile atm1483 bulk-config-name.....	274
profile atm1483 bulk-config-name pvc.....	275
profile vlan bulk-config.....	277
profile vlan override bulk-config.....	278
profile-reassign.....	276
show atm bulk-config.....	565
show columns.....	650
show profile.....	1068
show profile brief.....	1069
show vlan bulk-config.....	1190
show vlan profile.....	1191
vlan advisory-rx-speed.....	1425
vlan advisory-tx-speed.....	1426
vlan auto-configure.....	1427
vlan auto-configure	
agent-circuit-identifier.....	1428
vlan bulk-config.....	1429
vlan bulk-config modify.....	1431
vlan bulk-config shutdown.....	1432
vlan profile.....	1439
<b>E</b>	
E120 routers	
interface types and specifiers.....	13
E3 commands	
show controllers e3.....	653
shutdown.....	1195
E320 routers	
interface types and specifiers.....	13
ERX14xx models	
interface types and specifiers.....	5
ERX310 router	
interface types and specifiers.....	5
ERX7xx models	
interface types and specifiers.....	5
Ethernet commands	
link-fault management	
show ethernet oam lfm discovery.....	688
show ethernet oam lfm statistics.....	689
show ethernet oam lfm status.....	690
show ethernet oam lfm summary.....	691
show interfaces.....	720
show interfaces lag.....	721
show interfaces lag members.....	722

show ip mac-validate.....	827	IEEE 802.3ad link aggregation group	
shutdown.....	1195	interface.....	8, 14
speed.....	1236	IGMP commands	
svlan ethertype.....	1267	router igmp.....	414
svlan id.....	1268	show ip igmp.....	810
<b>F</b>		show ip igmp groups.....	811
Fast Ethernet interface.....	7, 14	show ip igmp interface.....	812
file management commands		show ip igmp mapped-oif.....	813
rename.....	392	show ip igmp membership.....	813
show hotfix.....	712	show ip igmp oif-map.....	815
write memory.....	1446	show ip igmp oif-mapping.....	816
filtering show commands.....	4	show multicast group limit.....	1047
Frame Relay commands		IGMP proxy commands	
show frame-relay interface.....	698	show ip igmp-proxy.....	817
show frame-relay lip.....	699	show ip igmp-proxy groups.....	818
show frame-relay lmi.....	700	show ip igmp-proxy interface.....	819
show frame-relay map.....	701	interface commands	
show frame-relay multilinkInterface.....	702	serial description.....	455
show frame-relay pvc.....	703	show interfaces.....	720
show frame-relay subinterface.....	704	show interfaces lag.....	721
show frame-relay summary.....	705	show interfaces lag members.....	722
shutdown.....	1195	show ip interface.....	821
snmp trap frame-relay link-status.....	1232	show ip interface shares.....	822
FTP server commands		show ip interface vrf.....	823
show ftp-server.....	706	show ip vrf interfaces.....	893
show users.....	1186	show ipv6 interface.....	924
<b>G</b>		snmp trap ip link-status.....	1233
Gigabit Ethernet interface.....	8, 14	tag-group.....	1297
GRE commands		tcp mss.....	1299
show gre destination profile.....	707	interface types and specifiers.....	5
show gre tunnel.....	708	E120 routers.....	13
tunnel destination.....	1362	E320 routers.....	13
tunnel mdt.....	1370	ERX14xx models.....	5
tunnel sequence-datagrams.....	1389	ERX310 routers.....	5
<b>H</b>		ERX7xx models.....	5
HDLC commands, Cisco		IP commands	
show hdlc interface.....	710	clear ip ospf database.....	249
show interfaces serial.....	720	ip interface.....	82
HTTP local server commands		no ip interface.....	82
show ip http.....	809	ping.....	187
<b>I</b>		profile.....	273
ICR commands		profile-reassign.....	276
show icr partition.....	713	route-map.....	409
show icr partitions.....	714	router rip.....	420
svlan id.....	1268	show access-list.....	559
		show arp.....	562
		show forwarding-table route-holddown.....	697
		show ip.....	723
		show ip address.....	724

- 
- show ip as-path-access-list.....725
  - show ip demux interface.....782
  - show ip domain-lookup.....798
  - show ip explicit-paths.
    - show mpls explicit-paths See MPLS
    - commands
  - show ip extcommunity-list.....806
  - show ip forwarding-table slot.....808
  - show ip interface.....821
  - show ip interface shares.....822
  - show ip mac-validate.....827
  - show ip match-policy-list.....828
  - show ip mirror interface.....829
  - show ip prefix-list.....868
  - show ip prefix-tree.....869
  - show ip profile.....870
  - show ip protocols.....871
  - show ip redistribute.....872
  - show ip route.....879
  - show ip route slot.....881
  - show ip rpf-route.....882
  - show ip socket statistics.....885
  - show ip ssh.....886
  - show ip static.....887
  - show ip tcp statistics.....1175
  - show ip traffic.....889
  - show ip tunnel reassembly statistics.....890
  - show ip tunnel-route.....891
  - show ip udp statistics.....892
  - show ip vrrp.....894
  - show ip vrrp neighbor.....895
  - show ip vrrp statistics.....896
  - show ip vrrp tracked-objects.....897
  - show ipv6 forwarding-table slot.....923
  - show profile.....1068
  - show profile brief.....1069
  - show route-map.....1123
  - show socket statistics.....1155
  - timers.....1328
  - traceroute.....1346
  - IP multicast commands
    - show ip mroute.....837
    - show ip multicast protocols.....838
    - show ip multicast routing.....839
  - IP TCP commands. See TCP commands
  - IP tunnel commands
    - show gre tunnel.....708
    - tunnel checksum.....1361
    - tunnel mtu.....1385
    - tunnel source.....1394
  - IPSec commands
    - show ike policy-rule.....718
    - show ike sa.....719
    - show ipsec ca identity.....898
    - show ipsec ike-policy-rule.....902
    - show ipsec ike-sa.....903
    - show ipsec key pubkey-chain rsa.....905
    - show ipsec lifetime.....906
    - show ipsec local-endpoint.....907
    - show ipsec mypubkey rsa.....904
    - show ipsec option.....908
    - show ipsec transform-set.....909
    - show ipsec tunnel.....912
    - show ipsec tunnel profile.....913
    - show license ipsec-tunnels.....1014
    - single-shot-tunnel.....1196
    - tunnel destination backup.....1364
    - tunnel lifetime.....1368
    - tunnel local-identity.....1369
    - tunnel mtu.....1385
    - tunnel peer-identity.....1387
    - tunnel pfs group.....1388
    - tunnel session-key-inbound.....1391
    - tunnel session-key-outbound.....1392
    - tunnel signaling.....1393
    - tunnel source.....1394
    - tunnel transform-set.....1396
  - IPSec identity commands
    - organization.....112
  - IPSec transport local profile commands
    - pre-share.....262
    - pre-share-masked.....263
  - IPSec transport profile commands
    - pfs group.....185
    - show ipsec transport interface.....910
    - show ipsec transport profile.....911
    - transform-set.....1352
  - IPSec tunnel commands
    - peer ip identity.....184
  - IPSec tunnel profile commands
    - transform.....1351
  - IPv6 commands
    - set ipv6 next-hop.....508
    - show bgp ipv6.....580
    - show bgp ipv6 advertised-routes.....583
    - show bgp ipv6 aggregate-address.....586
    - show bgp ipv6 dampened-paths.....592

show bgp ipv6 flap-statistics.....	596	redistribute isis ip.....	375
show bgp ipv6 neighbors.....	600	reference-bandwidth.....	384
show bgp ipv6 neighbors paths.....	603	router isis.....	415
show bgp ipv6 neighbors		set-overload-bit.....	515
received-routes.....	604	show clns.....	643
show bgp ipv6 neighbors routes.....	606	show clns interface.....	644
show bgp ipv6 network.....	608	show clns neighbors.....	645
show bgp ipv6 next-hops.....	610	show clns protocol.....	646
show bgp ipv6 paths.....	611	show clns traffic.....	647
show bgp ipv6 peer-group.....	612	show isis database.....	972
show bgp ipv6 quote-regexp.....	613	show isis mpls adjacency-log.....	973
show bgp ipv6 regexp.....	615	show isis mpls advertisements.....	974
show bgp ipv6 summary.....	617	show isis mpls tunnel.....	975
show ipv6.....	914	show isis nsf.....	976
show ipv6 access-list.....	915	show isis spf-log.....	977
show ipv6 address.....	916	show isis summary-addresses.....	978
show ipv6 interface.....	924	show isis topology.....	979
show ipv6 neighbors.....	940	show ldp igp-sync.....	1007
show ipv6 prefix-list.....	958	spf-interval.....	1237
show ipv6 profile.....	960	summary-address.....	1259
show ipv6 protocols.....	961	summary-prefix.....	1260
show ipv6 redistribute.....	962	suppress-default.....	1261
show ipv6 route.....	963	undebg isis.....	1409
show ipv6 routers.....	965		
show ipv6 rpf-route.....	966	<b>J</b>	
show ipv6 static.....	968	J-Flow commands	
show ipv6 traffic.....	969	show ip cache flow.....	779
show ipv6 tunnel-route.....	970	show ip cache flow aggregation.....	780
show ipv6 udp statistics.....	971	show ip flow.....	807
show license ipv6.....	1014		
test bgp ipv6 neighbor.....	1317	<b>L</b>	
IPv6 local address pool commands		L2C commands. See ANCP commands	
prefix.....	260	L2TP commands	
show ipv6 local pool.....	925	receive-window.....	370
IPv6 multicast commands		remote host.....	390
show ipv6 mroute.....	937	server-name.....	457
show ipv6 multicast protocols.....	938	session-out-of-resource-result-code-override.....	477
show ipv6 multicast routing.....	939	sessions-limit-group.....	479
IS-IS commands		show dhcp relay.....	673
net.....	69	show dhcp relay proxy statistics.....	674
nsf ietf.....	90	show dhcp relay statistics.....	675
nsf interface wait.....	91	show dhcp server.....	676
nsf t1.....	92	show l2tp.....	986
nsf t2.....	93	show l2tp destination.....	987
nsf t3.....	94	show l2tp destination lockout.....	988
overload advertise-high-metric issu.....	118	show l2tp destination profile.....	989
passive-interface.....	126	show l2tp dial-out.....	990
redistribute.....	371	show l2tp dial-out session.....	991
redistribute isis.....	374	show l2tp dial-out target.....	992

- show l2tp dial-out virtual-router.....993
- show l2tp
  - received-disconnect-cause-summary.....994
- show l2tp session.....995
- show l2tp switch-profile.....996
- show l2tp tunnel.....997
- show license l2tp-session.....1014
- single-shot-tunnel.....1196
- source-address.....1235
- switch-profile.....1271
- tunnel.....1360
- tunnel password.....1386
- tx-connect-speed-method.....1397
- LDP commands
  - show ldp.....1003
  - show ldp binding.....1004
  - show ldp graceful-restart.....1006
  - show ldp interface.....1008
  - show ldp neighbor.....1009
  - show ldp profile.....1010
  - show ldp statistics.....1011
  - show ldp targeted session.....1012
  - show mpls.....1025
  - show mpls ldp profile.
    - show mpls profile See MPLS commands
- link aggregation commands
  - redundant-port.....382
  - redundant-port force-failover.....383
  - show interfaces lag.....721
  - show interfaces lag members.....722
- link aggregation group interface, IEEE
  - 802.3ad.....8, 14
- link-fault management commands
  - show ethernet oam lfm discovery.....688
  - show ethernet oam lfm statistics.....689
  - show ethernet oam lfm status.....690
  - show ethernet oam lfm summary.....691
- local user database commands
  - operational-virtual-router.....110
  - password.....127
  - secret.....442
  - username.....1416
- loopback interface.....8
- M**
- manuals
  - comments on.....xxvii
- mirror commands
  - secure ip policy-list.....449
  - secure ipv6 policy-list.....450
  - secure l2tp policy-list.....451
  - show mirror rules.....1022
  - show mirror subscribers.....1023
  - show mirror trap.....1024
  - show secure classifier-list.....1134
  - show secure policy-list.....1135
  - show snmp secure-log.....1150
  - snmp-server clear secure-log.....1205
  - snmp-server secure-log.....1225
- MLD commands
  - router mld.....416
  - show ip igmp ssm-mapping.....820
  - show ipv6 mld.....926
  - show ipv6 mld groups.....927
  - show ipv6 mld interface.....929
  - show ipv6 mld mapped-oif.....930
  - show ipv6 mld membership.....927
  - show ipv6 mld oif-map.....931
  - show ipv6 mld oif-mapping.....932
  - show ipv6 mld ssm-mapping.....936
- MLD proxy commands
  - show ipv6 mld-proxy.....933
  - show ipv6 mld-proxy groups.....934
  - show ipv6 mld-proxy interface.....935
- MLFR commands
  - show frame-relay interface.....698
  - show frame-relay ip.....699
  - show frame-relay lmi.....700
  - show frame-relay map.....701
  - show frame-relay multilinkInterface.....702
  - show frame-relay pvc.....703
  - show frame-relay subinterface.....704
  - show frame-relay summary.....705
- Mobile IP commands
  - show ip mobile binding.....830
  - show ip mobile home-agent.....831
  - show ip mobile host.....832
  - show ip mobile profile.....833
  - show ip mobile secure foreign-agent.....834
  - show ip mobile secure host.....835
  - show ip mobile traffic.....836
- MPLS commands
  - next-address.....75
  - ping mpls ip.....191
  - ping mpls l2transport.....193
  - ping mpls l3vpn.....196



ping mpls rsvp tunnel.....	199
ping mpls vpls.....	201
refresh-period.....	386
route interface.....	406
show cac.....	639
show cac interface.....	640
show ip explicit-paths.	
show mpls explicit-paths See MPLS	
commands	
show ip tunnel-route.....	891
show ldp.....	1003
show ldp binding.....	1004
show ldp graceful-restart.....	1006
show ldp igp-sync.....	1007
show ldp interface.....	1008
show ldp neighbor.....	1009
show ldp profile.....	1010
show ldp statistics.....	1011
show ldp targeted session.....	1012
show mpls.....	1025
show mpls binding.....	1026
show mpls cross-connects atm.....	1028
show mpls explicit-paths.....	1029
show mpls fast-reroute database.....	1030
show mpls forwarding.....	1031
show mpls interface.....	1032
show mpls l2transport interface.....	1033
show mpls l2transport	
load-balancing-group.....	1034
show mpls minor-interface.....	1035
show mpls next-hop.....	1036
show mpls phb-id.....	1037
show mpls profile.....	1038
show mpls rsvp.....	1039
show mpls rsvp authentication.....	1040
show mpls rsvp bfd interfaces.....	1041
show mpls rsvp counters.....	1042
show mpls rsvp hello graceful restart.....	1043
show mpls rsvp hello instance.....	1044
show mpls rsvp profile.	
show mpls profile See MPLS commands	
show mpls tunnels.....	1045
show mpls tunnels profile.	
show mpls profile See MPLS commands	
trace mpls ip.....	1336
trace mpls l2transport.....	1338
trace mpls l3vpn.....	1340
trace mpls rsvp tunnel.....	1342
trace mpls vpls.....	1344

tunnel destination.....	1362
tunnel ip profile.....	1367
tunnel mpls affinity.....	1372
tunnel mpls autoroute announce.....	1373
tunnel mpls autoroute metric.....	1374
tunnel mpls bandwidth.....	1375
tunnel mpls description.....	1376
tunnel mpls diff-serv phb-id.....	1377
tunnel mpls fast-reroute.....	1378
tunnel mpls no-route retries.....	1379
tunnel mpls no-route retry-time.....	1380
tunnel mpls path-option.....	1381
tunnel mpls priority.....	1382
tunnel mpls retries.....	1383
tunnel mpls retry-time.....	1384
multicast commands	
set priority.....	516
show mroute port count.....	1046
show multicast group limit.....	1047
multilink frame relay interface.....	8
multilink PPP interface.....	8

## N

### NAT commands

show ip nat inside rule.....	840
show ip nat outside rule.....	841
show ip nat pool.....	842
show ip nat statistics.....	843
show ip nat translations.....	844

### NBMA commands

show nbma arp.....	1048
--------------------	------

### NFS commands

show ip nfs.....	845
------------------	-----

### no commands vs. default commands.....

### non-PPP equal access commands

netbios-name-server.....	70
netbios-node-type.....	71
show ip dhcp-local.....	788
show ip dhcp-local binding.....	790
show ip dhcp-local limits.....	794
show ip dhcp-local statistics.....	797
show ipv6 dhcpv6-local auth config .....	917
show ipv6 dhcpv6-local binding.....	918
show ipv6 dhcpv6-local statistics.....	922

### notice icons.....

### NTP commands

ntp access-group.....	95
ntp broadcast.....	96
ntp broadcast-client.....	97



ntp broadcast-delay.....	98
ntp disable.....	99
ntp enable.....	100
ntp master.....	101
ntp server.....	102
ntp server enable.....	103
ntp source.....	104
show calendar.....	641
show clock.....	648
show ntp associations.....	1049
show ntp status.....	1050
null interface.....	9

## O

### OCx/STMx commands

path.....	129
path overhead c2.....	176
path overhead j1.....	177
path trigger alarm.....	180
path trigger delay.....	181
sdh.....	441
show controllers sonet.....	654
shutdown.....	1195
trigger delay.....	1357

### OSPF commands

area.....	79
neighbor.....	22
network area.....	74
no area.....	79
ospf auto-cost reference-bandwidth.....	113
ospf bandwidth.....	114
ospf enable.....	115
ospf log-adjacency-changes.....	116
ospf shutdown.....	117
overload advertise-high-metric issu.....	118
passive-interface.....	126
redistribute.....	371
remote-neighbor.....	391
retransmit-interval.....	403
router ospf.....	418
show bfd session.....	579
show ip ospf.....	846
show ip ospf border-routers.....	847
show ip ospf database.....	848
show ip ospf interface.....	849
show ip ospf internal-statistics.....	850
show ip ospf neighbors.....	851
show ip ospf remote-neighbor interface.....	852
show ip ospf spf-log.....	853

show ip ospf virtual-links.....	854
show ipv6 ospf.....	941
show ipv6 ospf border-routers.....	942
show ipv6 ospf database.....	943
show ipv6 ospf interface.....	945
show ipv6 ospf internal-statistics.....	944
show ipv6 ospf neighbors.....	946
show ipv6 ospf summary-prefix.....	947
show ipv6 ospf traffic.....	948
show ldp igp-sync.....	1007
summary-address.....	1259
summary-prefix.....	1260
timers spf.....	1330
transmit-delay.....	1354
traps.....	1355
ttl.....	1359
undebg ip ospf.....	1404
undebg ipv6 ospf.....	1407
update-source.....	1413

## P

### PIM commands

ip pim.....	1297
ip pim data-mdt.....	1366
pim disable.....	186
query-interval.....	301
remote-neighbor.....	391
router pim.....	419
set threshold.....	521
show ip pim.....	855
show ip pim auto-rp.....	856
show ip pim bsr.....	857
show ip pim data-mdt.....	858
show ip pim dense-mode sg-state.....	859
show ip pim interface.....	860
show ip pim neighbor.....	861
show ip pim remote-neighbor.....	862
show ip pim rp.....	863
show ip pim rp-hash.....	864
show ip pim sparse-mode sg-state.....	865
show ip pim sparse-mode unicast-route.....	866
show ip pim spt-threshold.....	867
show ipv6 pim.....	949
show ipv6 pim bsr.....	950
show ipv6 pim interface.....	951
show ipv6 pim neighbor.....	952
show ipv6 pim remote-neighbor.....	953
show ipv6 pim rp.....	954
show ipv6 pim rp-hash.....	955

show ipv6 pim sparse-mode sg-state.....	956	ppp ipcp lockdown.....	218
show ipv6 pim sparse-mode		ppp ipcp netmask.....	219
unicast-route.....	957	ppp ipcp prompt-option dns.....	220
show ipv6 pim spt-threshold.....	958	ppp keepalive.....	221
undebg ip pim.....	1405	ppp log.....	222
undebg ipv6 pim.....	1408	ppp magic-number disable.....	223
update-source.....	1413	ppp magic-number ignore-mismatch.....	224
policy management commands		ppp max-bad-auth.....	225
color mark profile.....	376	ppp max-negotiations.....	226
next-hop.....	76	ppp mru.....	227
next-interface.....	77	ppp multilink enable.....	228
next-parent.....	78	ppp ncp-Ordering-Required.....	233
parent group.....	125	ppp passive-mode.....	234
peak-burst.....	182	ppp peer.....	235
peak-rate.....	183	ppp reassembly.....	237
policer.....	204	ppp shutdown.....	238
policy-parameter hierarchical.....	205	show ppp interface.....	1055
rate-limit-profile.....	363	show ppp interface summary.....	1058
reference-rate.....	385	PPPoE commands	
secure ip classifier-list.....	443	pppoe.....	239
secure ipv6 classifier-list.....	446	pppoe acName.....	240
show classifier-list.....	642	pppoe always-offer.....	241
show color-mark profile.....	649	pppoe auto-configure.....	242
show enable-frag-stats.....	686	pppoe clear lockdown interface.....	243
show mirror log.....	1021	pppoe duplicate-protection.....	245
show parent-group.....	1052	pppoe log pppoeControlPacket.....	246
show policy-list.....	1053	pppoe motm.....	248
show policy-parameter.....	1054	pppoe pads disable-ac-info.....	250
show rate-limit-profile.....	1113	pppoe profile.....	251
user-packet-class.....	1418	pppoe remote-circuit-id.....	252
vlan policy.....	1437	pppoe service-name-table.....	253
vlan policy-list.....	1438	pppoe sessions.....	255
yellow-mark.....	1447	pppoe subinterface.....	256
POS commands		pppoe url.....	257
pos description.....	206	pppoe-service-name-table.....	254
pos framing.....	207	service.....	458
pos scramble-atm.....	208	show pppoe interface.....	1059
show interfaces.....	720	show pppoe interface lockdown-time.....	1060
shutdown.....	1195	show pppoe subinterface.....	1062
POS interface.....	9, 16	show pppoe-service-name-table.....	1061
PPP commands		shutdown.....	1195
ppp aaa-profile.....	209	Q	
ppp authentication.....	210	QoS commands	
ppp chap-challenge-length.....	211	node.....	88
ppp description.....	211, 212	qos-adaptive-mode.....	288
ppp fragmentation.....	214	qos-mode-port.....	292
ppp hash-link-selection.....	215	qos-parameter.....	293
ppp initiate-ip.....	216	qos-parameter-define.....	295
ppp initiate-ipv6.....	217		

qos-port-type-profile.....	297	show qos-interface-set .....	1071
qos-profile.....	298	show qos-interface-superset .....	1072
qos-shaping-mode.....	299		
qos-shared-shaper-control.....	300	<b>R</b>	
queue.....	302	RADIUS commands	
queue-profile.....	303	no radius client.....	84
range.....	362	radius accounting server.....	306
rate-period.....	365	radius acct-session-id-format.....	307
reaction-factor.....	367	radius algorithm.....	308
scheduler-profile.....	439	radius authentication server.....	309
shadow-node.....	523	radius calling-station-delimiter.....	310
shaping-rate.....	524	radius calling-station-format.....	311
shared-shaping-constituent.....	526	radius client.....	315
shared-shaping-rate.....	527	radius client.	
show aaa qos downstream-rate.....	546	no radius client See RADIUS commands	
show adjustment-factor.....	560	radius connect-info-format.....	316
show drop-profile.....	680	radius disconnect client.....	317
show egress-queue events.....	683	radius dsl-port-type.....	318
show egress-queue rates.....	684	radius dynamic-request server.....	319
show fabric-queue.....	694	radius ethernet-port-type.....	320
show qos interface-hierarchy.....	1070	radius icr-partition-accounting.....	321
show qos queue-thresholds.....	1078	radius ignore.....	322
show qos shared-shaper.....	1081	radius include.....	323
show qos-parameter.....	1073	radius include dsl-forum-attributes.....	331
show qos-parameter-define.....	1075	radius nas-identifier.....	333
show qos-port-type-profile.....	1076	radius nas-port-format.....	334
show qos-profile.....	1077	radius override calling-station-id	
show qos-shared-shaper-control.....	1083	remote-circuit-id.....	337
show queue-profile.....	1084	radius override nas-info.....	338
show scheduler-profile.....	1132	radius override nas-ip-addr	
show statistics-profile.....	1160	tunnel-client-endpoint.....	339
show traffic-class.....	1183	radius override nas-port-id	
show traffic-class-group.....	1184	remote-circuit-id.....	340
statistics-profile.....	1252	radius per profile configuration.....	341, 342
strict-priority.....	1253	radius per profile list name.....	343
subscriber-interface-type.....	1257	radius pppoe nas-port-format unique.....	344
svlan qos-parameter.....	1269	radius pre-authentication server.....	345
svlan qos-profile.....	1270	radius relay server.....	346
traffic-class.....	1349	radius relay udp-checksum.....	347
traffic-class-group.....	1350	radius remote-circuit-id-delimiter.....	348
vlan classifier-list.....	1433	radius remote-circuit-id-format.....	349
vlan policy-list.....	1438	radius rollover-on-reject.....	350
weight.....	1444	radius route-download server.....	351
QoS commands,		radius trap acct-server-not-responding.....	352
qos-interface-parent .....	289	radius trap acct-server-responding.....	353
qos-interface-set .....	290	radius trap auth-server-not-responding.....	354
qos-interface-superset .....	291	radius trap auth-server-responding.....	355
restricted .....	401	radius trap no-acct-server-responding.....	356
		radius trap no-auth-server-responding.....	357

radius tunnel-accounting.....	358	srp switch.....	1239
radius udp-checksum.....	359	synchronize.....	1273
radius update-source-addr.....	360	resource threshold manager commands	
radius vlan nas-port-format stacked.....	361	resource if-type.....	399
show aaa intf-desc-format.....	540	resource threshold.....	400
show radius acct-session-id-format.....	1085	show resource.....	1122
show radius algorithm.....	1086	Response Time Reporter commands	
show radius attributes-ignored.....	1087	no rtr.....	85
show radius attributes-included.....	1088	no rtr reaction-configuration.....	86
show radius calling-station-delimiter.....	1089	operations-per-hop.....	111
show radius calling-station-format.....	1090	owner.....	122
show radius connect-info-format.....	1091	receive-interface.....	368
show radius dsl-port-type.....	1092	request-data-size.....	394
show radius ethernet-port-type.....	1093	rtr.....	85, 421
show radius icr-partition-accounting.....	1094	rtr reaction-configuration action-type.....	423
show radius nas-identifier.....	1095	rtr reaction-configuration	
show radius nas-port-format.....	1096	operation-failure.....	424
show radius override.....	1098	rtr reaction-configuration path-change.....	425
show radius per-profile-attr-list.....	1099	rtr reaction-configuration	
show radius pppoe nas-port-format.....	1100	test-completion.....	426
show radius relay.....	1101	rtr reaction-configuration test-failure.....	427
show radius relay udp-checksum.....	1101	rtr reaction-configuration.....	422
show radius remote-circuit-id-delimiter.....	1103	rtr reset.....	428
show radius remote-circuit-id-format.....	1104	rtr schedule.....	429
show radius rollover-on-reject.....	1105	rtr schedule life.....	430
show radius trap.....	1108	rtr schedule restart-time.....	431
show radius tunnel-accounting.....	1109	rtr schedule start-time.....	432
show radius udp-checksum.....	1110	samples-of-history-kept.....	437
show radius update-source-addr.....	1111	show rtr application.....	1124
show radius vlan nas-port-format.....	1112	show rtr application collection-statistics.....	1125
strip-domain.....	1254	show rtr application configuration.....	1126
subscriber.....	1255	show rtr application history.....	1127
subscriber disconnect.....	1256	show rtr application hops.....	1128
timeout.....	1326	show rtr application operational-state.....	1129
udp-port.....	1401	tag.....	1296
radius commands		timeout.....	1326
request-type.....	395	tos.....	1335
redundancy commands		type.....	1398
redundancy.....	377	RIP commands	
redundancy force-switchover.....	378	neighbor.....	22
redundancy lockout.....	379	network.....	72
redundancy revert.....	380	receive version.....	369
redundancy revertive.....	381	redistribute.....	371
show redundancy.....	1115	remote neighbor.....	391
show redundancy clients.....	1116	route-map.....	409
show redundancy history.....	1117	router rip.....	420
show redundancy line-card.....	1118	send version.....	454
show redundancy srp.....	1119	send-more-specific-routes-disable.....	453
show redundancy switchover-history.....	1120	show ip rip.....	873

- show ip rip database.....874
- show ip rip network.....875
- show ip rip peer.....876
- show ip rip statistics.....877
- show ip rip summary-address.....878
- split-horizon.....1238
- table-map.....1291
- time-to-live.....1331
- timers.....1328
- triggered-update-disable.....1358
- undebg ip rip.....1406
- update-source.....1413
- version.....1423
- router commands
  - tcp path-mtu-discovery.....1300
  - tcp path-mtu-discovery
    - black-hole-detect-threshold.....1300
  - tcp path-mtu-discovery max-mtu.....1300
  - tcp path-mtu-discovery min-mtu.....1300
- routing policy commands
  - route-map.....409
  - set admission-bandwidth.....481
  - set as-path prepend.....482
  - set automatic-tag.....483
  - set comm-list delete.....484
  - set community.....485
  - set dampening.....486
  - set distance.....502
  - set extcommunity.....503
  - set ip interface-profile.....504
  - set ip next-hop.....505
  - set ip service-profile.....506
  - set ip source-prefix.....507
  - set ipv6 next-hop.....508
  - set level.....509
  - set local-preference.....510
  - set metric.....511
  - set metric-type.....512
  - set origin.....514
  - set qos-bandwidth.....517
  - set route-class.....518
  - set route-type.....519
  - set tag.....520
  - set weight.....522
- RSVP-TE commands
  - refresh-period.....386
  - show cac.....639
  - show cac interface.....640
  - show mpls.....1025
  - show mpls fast-reroute database.....1030
  - show mpls rsvp.....1039
  - show mpls rsvp authentication.....1040
  - show mpls rsvp bfd interfaces.....1041
  - show mpls rsvp counters.....1042
  - show mpls rsvp hello graceful restart.....1043
  - show mpls rsvp hello instance.....1044
  - show mpls rsvp profile.
    - show mpls profile See MPLS commands
  - tunnel mpls diff-serv phb-id.....1377
  - tunnel mpls fast-reroute.....1378
- S**
  - S-VLAN commands
    - svlan ethertype.....1267
    - svlan id.....1268
  - SDH commands. See cOCx/STMx commands and OCx/STMx commands
  - serial interface.....9
  - service
    - check-config.....459
    - config-monitor-periodicity.....460
  - Service Manager commands
    - no service-management subscriber-session
      - force.....87
    - service-management install.....466
    - service-management owner-session.....467
    - service-management
      - service-session-profile.....468
    - service-management subscriber-session
      - force.....87
    - service-management subscriber-session force.
      - See no service-management
      - subscriber-session force
    - service-management subscriber-session
      - service-session.....471
    - show service-management
      - service-definition.....1138
    - show service-management summary.....1141
    - show
      - service-managementsubscriber-session.....1137
    - show
      - service-managementservice-session-profile.1139
    - show
      - service-managementsubscriber-session.....1140
    - statistics.....1251
    - time.....1325
    - volume.....1441
  - show commands, filtering.....4

SNMP commands	
set.....	480
show bulkstats.....	628
show bulkstats collector description.....	629
show bulkstats collector interval.....	630
show bulkstats collector max-size.....	631
show bulkstats collector transfer-mode.....	632
show bulkstats interface-type.....	633
show bulkstats receiver.....	634
show bulkstats schema.....	635
show bulkstats statistics.....	636
show bulkstats traps.....	637
show bulkstats virtual routers.....	637
show snmp.....	1142
show snmp access.....	1143
show snmp agent.....	1144
show snmp community.....	1145
show snmp group.....	1146
show snmp interfaces.....	1146
show snmp management-event.....	1148
show snmp notificationLog.....	1149
show snmp secure-log.....	1150
show snmp trap.....	1151
show snmp trap statistics.....	1152
show snmp user.....	1153
show snmp view.....	1154
snmp security.....	1226
snmp trap frame-relay link-status.....	1232
snmp trap ip link-status.....	1233
snmp trap link-status.....	1234
snmp-server.....	1204
snmp-server clear secure-log.....	1205
snmp-server community.....	1206
snmp-server contact.....	1207
snmp-server enable traps.....	1208
snmp-server group.....	1208
snmp-server host.....	1212
snmp-server interfaces compress.....	1215
snmp-server interfaces	
compress-restriction.....	1216
snmp-server interfaces	
description-format.....	1217
snmp-server interfaces rfc1213.....	1218
snmp-server location.....	1219
snmp-server management-event.....	1220
snmp-server notificationLog ageOut.....	1221
snmp-server notificationLog entryLimit.....	1222
snmp-server notificationLog log.....	1223
snmp-server packetsize.....	1224
snmp-server secure-log.....	1225
snmp-server trap-proxy.....	1227
snmp-server trap-source.....	1228
snmp-server user.....	1229
snmp-server view.....	1230
snmpTrap.....	1231
t1 snmp trap link-status.....	1288
warning.....	1443
SNMP server event manager commands	
resource.....	398
sample.....	436
trigger.....	1356
SONET commands. See cOCx/STMx commands	
and OCx/STMx commands	
SONET/SDH interface.....	12, 16
SSH commands	
show ip ssh.....	886
subscriber interface commands	
set dhcp relay giaddr-selects-interface.....	492
show ip dhcp-external binding.....	784
show ip dhcp-external binding-id.....	785
show ip dhcp-external configuration.....	786
show ip dhcp-external statistics.....	787
show ip service-profile.....	884
subscriber policy commands	
pppoe.....	239
relearn.....	387
show subscriber-policy.....	1162
unicast.....	1410
unknown-destination.....	1411
unknown-protocol.....	1412
support, technical See technical support	
suspicious control flow detection commands	
show suspicious-control-flow-detection	
flows.....	1167
show	
suspicious-control-flow-detectioncounts....	1166
show	
suspicious-control-flow-detectionprotocol.	1169
suspicious-control-flow-detection	
grouping-off.....	1262
suspicious-control-flow-detection info.....	1168
suspicious-control-flow-detection off.....	1263
suspicious-control-flow-detection protocol	
backoff-time.....	1264
suspicious-control-flow-detection protocol	
threshold.....	1266
suspicious-control-flow-detectionlow-threshold.	1265

system commands	
password.....	127
privilege.....	267
privilege level.....	271
privilege reset.....	271
privilege-group alias.....	268
privilege-group membership.....	269
privilege-group membership clear.....	270
service ctrl-x-reboot.....	461
service manual-commit.....	472
service password-encryption.....	473
service unattended-password-recovery.....	476
show bandwidth oversubscription.....	578
show columns.....	650
show configuration.....	651
show control-plane policer.....	652
show environment.....	687
show exception dump.....	692
show exception monitor.....	693
show fabric weights.....	695
show flash.....	696
show hardware.....	709
show hosts.....	711
show hotfix.....	712
show ip domain-lookup.....	798
show ip nfs.....	845
show ip ssh.....	886
show line console 0.....	1016
show line vty.....	1017
show nvs.....	1051
show privilege.....	1064
show privilege group.....	1065
show processes cpu.....	1066
show processes memory.....	1067
show reboot-history.....	1114
show running-configuration.....	1130
show secrets.....	1133
show service config-monitor-periodicity.....	1136
show subsystems.....	1165
show tech-support.....	1176
show telnet.....	1177
show timing.....	1180
show users.....	1186
show utilization.....	1187
show version.....	1188
slot accept.....	1198
slot disable.....	1199
slot enable.....	1200
slot erase.....	1201
slot replace.....	1203
speed.....	1236
telnet.....	1308
timeout login response.....	1327
timing disable-auto-upgrade.....	1332
timing select.....	1333
timing source.....	1334
write core.....	1445
write memory.....	1446
<b>T</b>	
T1 commands	
show controllers t1.....	657
T3 commands	
scramble.....	440
serial description.....	455
show controllers t3.....	658
shutdown.....	1195
TACACS+ commands	
show statistics tacacs.....	1161
show tacacs.....	1170
tacacs-server host.....	1292
tacacs-server key.....	1293
tacacs-server source-address.....	1294
tacacs-server timeout.....	1295
TCP commands	
show tcp ack-rst-and-syn.....	1171
show tcp path-mtu-discovery.....	1172
show tcp paws.....	1173
show tcp resequence-buffers.....	1174
tcp ack-rst-and-syn.....	1298
tcp mss.....	1299
tcp path-mtu-discovery.....	1300
tcp path-mtu-discovery	
black-hole-detect-threshold.....	1300
tcp path-mtu-discovery max-mtu.....	1300
tcp path-mtu-discovery min-mtu.....	1300
tcp paws-disable.....	1301
tcp resequence-buffers	
connection-maximum.....	1302
tcp resequence-buffers	
default-connection-maximum.....	1303
tcp resequence-buffers	
default-vr-maximum.....	1304
tcp resequence-buffers	
global-maximum.....	1305
tcp resequence-buffers vr-maximum.....	1306
technical support	
contacting JTAC.....	xxxvii



text and syntax conventions.....	xxxvi
time commands, system	
ntp access-group.....	95
ntp broadcast.....	96
ntp broadcast-client.....	97
ntp broadcast-delay.....	98
ntp disable.....	99
ntp enable.....	100
ntp master.....	101
ntp server.....	102
ntp source.....	104
show calendar.....	641
show clock.....	648
show ntp associations.....	1049
show ntp status.....	1050
timing commands	
show timing.....	1180
t1 clock source.....	1277
timing disable-auto-upgrade.....	1332
timing select.....	1333
timing source.....	1334
tracking commands	
show track.....	1181
show track brief.....	1182
troubleshooting commands	
log filters.....	83
no log filters.....	83
service show-config.....	474
service timestamps.....	475
show ip socket statistics.....	885
show log configuration.....	1018
show log data.....	1019
show socket statistics.....	1155
tech-support encoded-string.....	1307
undebg ip bgp.....	1402
undebg ip mbgp.....	1403
undebg ip ospf.....	1404
undebg ip pim.....	1405
undebg ip rip.....	1406
undebg ipv6 ospf.....	1407
undebg ipv6 pim.....	1408
undebg isis.....	1409
tunnel interface.....	12
tunnel service commands	
show tunnel-server.....	1185
tunnel-server.....	1390
tunnel-server commands	
reserve-bandwidth.....	397

## U

unified ISSU commands	
overload advertise-high-metric issu.....	118
show issu.....	980
user interface commands	
run.....	433
send.....	452
show terminal.....	1178
sleep.....	1197
telnet listen.....	1310
terminal data-character- bits.....	1311
terminal length.....	1312
terminal speed.....	1313
terminal width.....	1314

## V

virtual router commands	
show configuration.....	651
show virtual-router.....	1189
virtual-router.....	1424
VLAN commands	
profile vlan bulk-config.....	277
profile vlan override bulk-config.....	278
show vlan bulk-config.....	1190
show vlan profile.....	1191
show vlan subinterface.....	1192
shutdown.....	1195
svlan ethertype.....	1267
svlan id.....	1268
vlan advisory-rx-speed.....	1425
vlan advisory-tx-speed.....	1426
vlan auto-configure.....	1427
vlan auto-configure	
agent-circuit-identifier.....	1428
vlan bulk-config.....	1429
vlan bulk-config modify.....	1431
vlan bulk-config shutdown.....	1432
vlan classifier-list.....	1433
vlan description.....	1434
vlan id.....	1436
vlan policy.....	1437
vlan policy-list.....	1438
vlan profile.....	1439
vlan service-profile.....	1440
VPLS commands	
ping mpls vpls.....	201
pppoe.....	239
relearn.....	387
show bridge.....	621



show bridge groups.....	622	show l2vpn connections.....	999
show bridge interface.....	623	show l2vpn instance.....	1000
show bridge interface vpls.....	625	show l2vpn interface.....	1001
show bridge port.....	626	VRRP commands	
show bridge table.....	627	show icr partition.....	713
show ip bgp.....	726	show icr partitions.....	714
show ip bgp advertised-routes.....	729	show ip vrrp.....	894
show ip bgp community.....	736	show ip vrrp neighbor.....	895
show ip bgp community-list.....	739	show ip vrrp statistics.....	896
show ip bgp dampened-paths.....	742	show ip vrrp tracked-objects.....	897
show ip bgp filter-list.....	745	vty line commands	
show ip bgp flap-statistics.....	748	show users.....	1186
show ip bgp neighbors.....	752		
show ip bgp neighbors dampened-routes.....	753		
show ip bgp neighbors received-routes.....	758		
show ip bgp neighbors routes.....	761		
show ip bgp next-hops.....	766		
show ip bgp paths.....	767		
show ip bgp peer-group.....	768		
show ip bgp quote-regexp.....	769		
show ip bgp regexp.....	773		
show ip bgp summary.....	777		
show ldp vpls.....	1013		
show subscriber-policy.....	1162		
subscriber-policy.....	1258		
trace mpls vpls.....	1344		
unicast.....	1410		
unknown-destination.....	1411		
unknown-protocol.....	1412		
VPN commands			
virtual-router.....	1424		
VPWS commands			
show ip bgp.....	726		
show ip bgp advertised-routes.....	729		
show ip bgp community.....	736		
show ip bgp community-list.....	739		
show ip bgp dampened-paths.....	742		
show ip bgp filter-list.....	745		
show ip bgp flap-statistics.....	748		
show ip bgp neighbors.....	752		
show ip bgp neighbors dampened-routes.....	753		
show ip bgp neighbors received-routes.....	758		
show ip bgp neighbors routes.....	761		
show ip bgp next-hops.....	766		
show ip bgp paths.....	767		
show ip bgp peer-group.....	768		
show ip bgp quote-regexp.....	769		
show ip bgp regexp.....	773		
show ip bgp summary.....	777		

