

## exceeded-fraction

---

**Syntax**    exceeded-fraction *exceededFraction*  
              no exceeded-fraction

**Release Information**    Command introduced before JUNOS Release 7.1.0.

**Description**    Sets the percentage of the total queue length that can be occupied before dropping exceeded packets. The **no** version returns the exceeded fraction to its default setting.

**Options**    ■    *exceededFraction*—Percentage range 0–100; default value is 25

**Mode**    Queue Profile Configuration

**Related Topics**    ■    Configuring Queue Profiles to Manage Buffers and Thresholds

---

Published: 2010-01-12