

member-interface

Syntax [no] member-interface *interfaceType* *interfaceSpecifier*

Release Information Command introduced before JUNOS Release 7.1.0.

Description Adds a member interface, also known as a bundle member, to an MLPPP bundle, an MLFR bundle, or an IEEE 802.3ad link aggregation group (LAG) bundle. The **no** version removes the specified member interface from the bundle.

- Options**
- *interfaceType*—One of the following interface types listed in Interface Types and Specifiers
 - serial (MLFR bundle or MLPPP bundle)
 - pos (MLFR bundle only)
 - fastEthernet (IEEE 802.3ad LAG bundle only)
 - gigabitEthernet (IEEE 802.3ad LAG bundle only)
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers

Mode Interface Configuration, Subinterface Configuration

Published: 2010-01-12