

operational-virtual-router

Syntax `operational-virtual-router vrName`
`no operational-virtual-router`

Release Information Command introduced before JUNOS Release 7.1.0.

Description Specifies the virtual router parameter for a user entry in the local user database. The subscriber is assigned to the operational virtual router only if the default virtual router performs the authentication. The **no** version deletes the operational virtual router parameter from the user entry in the local user database.

Options ■ *vrName*—Name of virtual router

Mode Local User Configuration

Published: 2010-01-07