

radius udp-checksum

Syntax radius udp-checksum { enable | disable }
no radius udp-checksum

Release Information Command introduced before JUNOS Release 7.1.0.

Description Enables or disables UDP checksum for RADIUS packets on virtual routers that you configure for B-RAS. The **no** version restores the default value, enable.

- Options**
- enable—Specifies the feature; this is the default setting
 - disable—Disables the feature

Mode Global Configuration

Published: 2010-01-07