

show configuration

Syntax show configuration [interface *interfaceType* *interfaceSpecifier*] |
[category *categoryName* [*categoryName*]*] [virtual-router *routerName*]
[[exclude-category interface *interfaceType*]*] [include-defaults] [*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Displays the current (running) configuration of the router, a specified virtual router, a specified interface, or a specified category of router settings. You can create a configuration script from this output by saving it as a file with the .scr extension. This command was formerly documented as **show config**; that abbreviation is still supported.

- Options**
- *interfaceType*—Interface type; see Interface Types and Specifiers
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
 - *categoryName*—Name of the category or subcategory of router settings; first *categoryName* variable in the syntax represents the category; repeated *categoryName* variables represent subcategories of the category
 - *routerName*—Name of the virtual router
 - exclude-category—Excludes information associated with a particular type of interface
 - *—Indicates that one or more parameters can be repeated multiple times in a list in the command line
 - include-defaults—Includes commands that set default values for various parameters
 - *filter*—See Filtering show Commands

Mode Privileged Exec

Published: 2010-01-07