

## show qos-profile

---

**Syntax** To display information about all QoS profiles or a specific QoS profile:

```
show qos-profile [ qosProfileName ] [ brief ] [ filter ]
```

To display information about the QoS profiles attached to a specific interface:

```
show qos-profile references interface interfaceType interfaceSpecifier  
[ atmVpi | s-vlanIdValue ] [ explicit ] [ brief ] [ filter ]
```

To display information about the QoS profiles attached to a specific L2TP session:

```
show qos-profile references lt2p session sessionName [ explicit ] [ brief ] [ filter ]
```

To display information about the QoS profiles attached to a specific tunnel-service interface:

```
show qos-profile references tunnel-server interfaceType [ explicit ] [ brief ] [ filter ]
```

**Release Information** Command introduced before JUNOS Release 7.1.0.  
**references** keyword added in JUNOS Release 7.1.0.

**Description** Displays information about QoS profiles configured on the router. Use the **references** keyword to display information about QoS profiles attached to an interface, L2TP session, or tunnel-service interface.

- Options**
- *qosProfileName*—Name of the QoS profile
  - *references*—Displays interface profiles that reference this profile
  - *interfaceType*—Interface type; see Interface Types and Specifiers
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
  - *atmVpi*—Virtual path identifier of this PVC; number in the range 0–255
  - *s-vlanIdValue*—S-VLAN ID number in the range 0–4095
  - *sessionName* —Name of the L2TP session
  - *explicit*—Displays attachments for QoS profiles only on the specified interface and not QoS profiles stacked above the interface
  - *brief*—Displays information in a condensed format
  - *filter*—See Filtering show Commands

**Mode** Privileged Exec, User Exec

**Related Topics** ■ Monitoring the Configuration of QoS Profiles

---

Published: 2010-01-12