

show radius remote-circuit-id-delimiter

Syntax show radius remote-circuit-id-delimiter

Release Information Command introduced before JUNOS Release 7.1.0.

Description Displays the delimiter character that the router uses to set off components in the PPPoE remote circuit ID value sent from a DSLAM and captured on the router. The default delimiter character is #.

Mode Privileged Exec

Published: 2010-01-07