

show redundancy

Syntax show redundancy [brief | detail] [*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Displays the supported redundancy modes as well as other status relating to high availability. In particular, the output indicates any conditions that are preventing the operational mode from being high availability.

- Options**
- brief—Displays summary redundancy information for line modules, SRP modules, or both
 - detail—Displays detailed information for line modules, SRP modules, or both
 - *filter*—See Filtering show Commands

Mode Privileged Exec

Published: 2010-01-07