

## tacacs-server timeout

---

**Syntax**    tacacs-server timeout *timeoutValue*  
  
             no tacacs-server timeout

**Release Information**    Command introduced before JUNOS Release 7.1.0.

**Description**    Sets the interval in seconds that the server waits for the TACACS+ server host to reply. This value is shared by those TACACS+ servers that do not have a timeout interval set by the **tacacs-server host** command. The **no** version resets the timeout interval shared by all TACACS+ servers.

**Options**    ■    *timeoutValue*—Response timeout interval for the TACACS+ client to server exchange; number in the range 1–255; default value is 5

**Mode**    Global Configuration

---

Published: 2010-01-07