

tunnel password

Syntax tunnel password *tunnelPassword*
 no tunnel password

Release Information Command introduced before JUNOS Release 7.1.0.

Description Configures a password for the L2TP tunnel. The **no** version removes the password.

Options ■ *tunnelPassword*—Password used for challenge response to the tunnel peer; in the domain map, it is used only by the LAC

Mode L2TP Destination Profile Host Configuration

Published: 2010-01-07