

## tunnel-subscriber authentication

---

**Syntax** tunnel-subscriber authentication { enable | disable }  
no tunnel-subscriber authentication

**Release Information** Command introduced in JUNOS Release 9.1.0.

**Description** Configures whether tunnel subscribers within the domain map are authenticated with the authentication server or are granted access without individual authentication. The **no** version restores the default condition, where users are not authenticated by an authentication server.

- Options**
- enable—Enables tunnel subscriber authentication by the authentication server
  - disable—Disables tunnel subscriber authentication by the authentication server; all users in the domain are granted access without individual authentication; this is the default condition

**Mode** Domain Map Configuration

**Related Topics**

- *Configuring Tunnel Subscriber Authentication in the JUNOS Broadband Access Configuration Guide*

---

Published: 2010-01-07