

Monitoring the Configuration of QoS Port-Type Profiles

Purpose Display information about QoS port-type profiles.

Action To display information about all interface types:

```
host1#show qos-port-type-profile
default-port-profile ethernet qos-profile ethernet-default
default-port-profile atm qos-profile atm-default
default-port-profile serial qos-profile serial-default
default-port-profile server-port qos-profile server-default
default-port-profile lag qos-profile lag-default
```

Meaning Displays a list of all **qos-port-type-profile** commands as they have been entered.

- Related Topics**
- Configuring a QoS Profile
 - Attaching a QoS Profile to an Interface
 - Creating Parameter Instances
 - Example: Port-Type QoS Profile Attachment
 - show qos-port-type-profile

Published: 2009-12-16