

Monitoring the Configuration of Statistics Profiles

Purpose Display information about statistics profiles.

Action To display information about all statistics profiles:

```
host1#show statistics-profile
      forwarding committed conformed exceeded
statistics rate drop drop drop
profile threshold threshold threshold threshold rate
-----
default <none> <none> <none> <none> <none>
statpro-1 10000000 2000000 4000000 6000000 30
```

To display the number of times that a QoS profile references the statistics profile:

```
host1#show statistics-profile rates1 brief
```

To display a list of QoS profiles that reference the statistics profile:

```
host1#show statistics-profile rates1 references
```

Meaning Table 1 lists the **show statistics-profile** command output fields.

Table 1: show statistics-profile Output Fields

| Field Name | Field Description |
|---------------------------|--|
| statistics profile | Name of the statistics profile |
| forwarding rate threshold | Threshold above which forwarded-rate-exceeded events are counted |
| committed drop threshold | Threshold above which committed-drop-events are counted |
| conformed drop threshold | Threshold above which conformed-drop-events are counted |
| exceeded drop threshold | Threshold above which exceeded-drop-events are counted |
| rate period | Time frame during which statistics are gathered |

- Related Topics**
- Configuring Rate Statistics
 - Configuring Event Statistics

- show statistics-profile

Published: 2009-12-16