

conformed-drop-threshold

Syntax conformed-drop-threshold *conformedDropThreshold*
no conformed-drop-threshold

Release Information Command introduced before JUNOS Release 7.1.0.
conditional, **unconditional**, and **final** keywords added in JUNOS Release 7.2.0.

Description Configures the threshold above which conformed-drop-events are logged. The **no** version removes the threshold.

Options ■ *conformedDropThreshold*—Bits per second in the range 0–1073741824

Mode Statistics Profile Configuration

Related Topics ■ Configuring Event Statistics

Published: 2010-01-12