

conformed-fraction

Syntax conformed-fraction *conformedFraction*
 no conformed-fraction

Release Information Command introduced before JUNOS Release 7.1.0.

Description Sets the percentage of the total queue that can be occupied before dropping conformed packets. The **no** version returns the conformed fraction to its default setting.

Options ■ *conformedFraction*—Percentage in the range 0–100; default value is 50

Mode Queue Profile Configuration

Related Topics ■ Configuring Queue Profiles to Manage Buffers and Thresholds

Published: 2010-01-12