

diag-level

Syntax diag-level [normal] [bypass]

Release Information Command introduced in JUNOS Release 9.2.0.

Description Sets the diagnostics level on the active or standby SRP module to reduce boot time during a cold and a warm boot. The default diagnostics level is normal. There is no **no** version.

Options ■ normal—executes full diagnostics on the boot of the line card
 bypass—skips diagnostic tests on the boot of the line card

Mode Global Configuration

Published: 2010-01-11