

## forwarding-rate-threshold

---

**Syntax** forwarding-rate-threshold *forwardingRateThreshold*  
no forwarding-rate-threshold

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Configures the threshold above which forwarded-rate-exceeded events are logged. The **no** version removes the threshold.

**Options** ■ *forwardingRateThreshold*—Bits per second in the range 0–1073741824

**Mode** Statistics Profile Configuration

**Related Topics** ■ Configuring Event Statistics

---

Published: 2010-01-12