

ip vrrp icr-partition

Syntax [no] ip vrrp *vrid* icr-partition *partitionId*

Release Information Command introduced in JUNOS Release 10.3.0.

Description Creates an ICR partition that corresponds to the VRRP instance. The state of the ICR partition depends on the state of the VRRP instance. If the VRRP instance is disabled, the ICR partition is in the dormant state. If the VRRP instance is enabled, the ICR partition follows the state of the VRRP instance. The **no** version deletes the partition from the router.

- Options**
- *vrid*—VRID identifier; a number in the range 1–255
 - *partitionId*—Name that identifies the ICR partition; a string of up to 128 alphanumeric characters



NOTE: Use the ICR-Partition-Id VSA to determine the ICR partition on which subscribers are logged in. You can configure the same ICR-Partition-Id string for an active ICR partition and its corresponding backup partition. For more information on ICR-PARTITION-ID VSA, see Interaction with RADIUS for ICR.

Mode Interface Configuration, Subinterface Configuration

- Related Topics**
- Naming ICR Partitions
 - Configuring an ICR Partition

Published: 2010-01-11