

## member-interface-type

---

**Syntax**    member-interface-type {vlan | atm-vc | ip}  
              no member-interface-type

**Release Information**    Command introduced in JUNOS Release 9.2.0.

**Description**    Configures the member-interface type for a QoS interface set. The **no** version removes the member-interface type from the parameter definition.

- Options**
- vlan—Specifies the member-interface-type as VLAN
  - atm-vc—Specifies the member-interface-type as VLAN
  - ip—Specifies the member-interface-type as VLAN

**Mode**    QoS Interface Set Configuration

**Related Topics**    ■    Configuring Interface Sets for QoS

---

Published: 2010-01-11