

## radius disconnect client

---

**Syntax** [ no ] radius disconnect client *ipAddress*

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Configures a RADIUS disconnect client and enters RADIUS Disconnect Configuration mode. The **no** version removes the RADIUS disconnect client.



**NOTE:** This command is deprecated and may be removed completely in a future release. The function provided by this command has been replaced by the **subscriber disconnect** command and the RADIUS dynamic-request server feature. The RADIUS Disconnect Configuration mode is also deprecated.

---

**Options** ■ *ipAddress*—IP address of the RADIUS server that is acting as the disconnect client

**Mode** Global Configuration

---

Published: 2010-01-07