

radius tunnel-accounting

Syntax radius tunnel-accounting { enable | disable }
no radius tunnel-accounting

Release Information Command introduced before JUNOS Release 7.1.0.

Description Enables or disables tunnel accounting. The **no** version restores the default value, disable.

- Options**
- enable—Specifies the feature
 - disable—Disables the feature; this is the default setting

Mode Global Configuration

Published: 2010-01-07