

show aaa qos downstream-rate

Syntax show aaa qos downstream-rate

Release Information Command introduced in JUNOS Release 8.1.0.

Description Displays whether the QoS downstream rate application is enabled to use downstream rates obtained from the Actual-Data-Rate-Downstream [26-30] DSL Forum VSA.

Mode Privileged Exec

Related Topics ■ Monitoring the AAA Downstream Rate for QoS

Published: 2010-01-12