

show atm interface

Syntax show atm interface { atm *interfaceSpecifier* | brief } [delta] [*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Displays configuration information about an ATM interface or a brief description of all ATM (major) interfaces configured in the router.

- Options**
- *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
 - brief—Displays the status and number of configured VCs for all ATM interfaces configured in the router
 - delta—Displays baselined statistics
 - *filter*—See Filtering show Commands

Mode Privileged Exec, User Exec

- Related Topics**
- Monitoring the QoS Configuration of ATM Interfaces
 - Monitoring the Policy Configuration of ATM Subinterfaces

Published: 2010-01-07