

## show frame-relay subinterface

---

**Syntax** show frame-relay subinterface [ *interfaceType interfaceSpecifier* ] [ brief ]  
[ delta ] [ *filter* ]

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Displays statistics about Frame Relay subinterfaces.

- Options**
- *interfaceType*—One of the following interface types listed in Interface Types and Specifiers:
    - serial
    - pos
    - mlframe-relay
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
  - brief—Displays a summary of subinterface information
  - delta—Displays baselined statistics
  - *filter*—See Filtering show Commands

**Mode** Privileged Exec, User Exec

**Related Topics** ■ Monitoring the Policy Configuration of Frame Relay Subinterfaces

---

Published: 2010-01-07