

show interfaces

Syntax show interfaces *interfaceType interfaceSpecifier* [*delta*] [*brief*] [*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Displays the current state of the interface you specify.

- Options**
- *interfaceType*—Interface type; see Interface Types and Specifiers
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers; for ATM, subinterfaces are not supported by the syntax
 - *delta*—Displays baselined statistics
 - *brief*—Displays a brief summary of the interface
 - *filter*—See Filtering show Commands

Mode Privileged Exec, User Exec

- Related Topics**
- Monitoring the QoS Configuration of ATM Interfaces
 - Monitoring the QoS Configuration of Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet Interfaces
 - Monitoring Interfaces and Policy Lists

Published: 2010-01-12