

show ip dhcp-local limits

Syntax show ip dhcp-local limits [interface *InterfaceType* *InterfaceSpecifier* | *filter*]

Release Information Command introduced before JUNOS Release 7.1.0.
interface keyword and *interfaceType* and *interfaceSpecifier* variables added in JUNOS Release 7.1.0.

Description Displays the maximum number of leases available for each VPI/VCI, VLAN, and Ethernet subnetwork, or for a particular interface or subinterface from the DHCP local server.

- Options**
- *interfaceType*—Interface type; see Interface Types and Specifiers
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
 - *filter*—See Filtering show Commands

Mode Privileged Exec

- Related Topics**
- Monitoring the Maximum Number of Available Leases

Published: 2010-01-07