

## show ip dhcp-local statistics

---

**Syntax** show ip dhcp-local statistics [ interface [ *interfaceType interfaceSpecifier* ] ]  
[ delta ] [ *filter* ]

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Displays statistics for the DHCP local server.

- Options**
- *interfaceType*—Interface type; see Interface Types and Specifiers
  - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
  - delta—Displays baselined statistics
  - *filter*—See Filtering show Commands

**Mode** Privileged Exec

- Related Topics**
- Monitoring DHCP Local Server Statistics

---

Published: 2010-01-07