

show ipv6 forwarding-table slot

Syntax show ipv6 forwarding-table slot *slotNumber*

Release Information Command introduced in JUNOS Release 7.1.0.

Description Displays information about routing table memory, load errors, and status for the IPv6 forwarding table of a specific line module.

Options ■ *slotNumber*—Number of the slot containing the line module

Mode Privileged Exec, User Exec

Published: 2010-01-07