

## **tacacs-server key**

---

**Syntax**    tacacs-server key *keyValueString*  
              no tacacs-server key

**Release Information**    Command introduced before JUNOS Release 7.1.0.

**Description**    Sets or resets the authentication and encryption key value shared by all TACACS+ servers that do not have a server-specific key set up by the **tacacs-server host** command. The **no** version removes the key value shared by all TACACS+ servers.

**Options**    ■    *keyValueString*—String of up to 100 characters; must match key configured on the TACACS+ daemon

**Mode**    Global Configuration

---

Published: 2010-01-07