

## Clearing QoS Statistics on the Egress Queue

---

To clear statistics from the egress queue for the specified interface and traffic class:

- Issue the **clear egress-queue** command.

host1#**clear egress-queue atm 3/0 explicit traffic-class class15**

Use the **explicit** keyword to clear queues only on the specified interface and not queues stacked above the interface.

- Related Topics**
- Monitoring QoS Statistics for Rates and Events
  - clear egress-queue

---

Published: 2010-01-12