

Monitoring Queue Statistics for the Fabric

Purpose Display forwarded and dropped statistics for the fabric.

Action To display general information about the fabric queue:

```
host1#show fabric-queue
      traffic    egress
      class      slot    type    forwarded  forwarded  dropped  dropped
                        type    packets   bytes     packets   bytes
-----
best-effort    all    committed    0         0         0         0
best-effort    all    conformed    0         0         0         0
best-effort    all    exceeded    0         0         0         0
```

To display detailed information about the fabric queue in a specific traffic class:

```
host1#show fabric-queue traffic-class video detail
```

To display information about the fabric queue on the egress slot:

```
host1#show fabric-queue egress-slot 0
```

Meaning Table 1 lists the **show fabric-queue** command output fields.

Table 1: show fabric-queue Output Fields

Field Name	Field Description
traffic class	Name of the traffic class
egress slot	Egress slot for which statistics are being displayed
type	Type of packet
forwarded packets	Number of forwarded packet
forwarded bytes	Number of forwarded bytes
dropped packets	Number of dropped packets
dropped bytes	Number of dropped bytes

- Related Topics**
- Configuring Rate Statistics
 - Configuring Event Statistics
 - show fabric-queue