

## buffer-weight

---

**Syntax**    `buffer-weight bufferWeight`  
              `no buffer-weight`

**Release Information**    Command introduced before JUNOS Release 7.1.0.

**Description**    Sets the buffer weight of the queue. The **no** version returns the queue to its default buffer weight.

**Options**    ■    *bufferWeight*—Range 1–63; default value is 8

**Mode**    Queue Profile Configuration

**Related Topics**    ■    [Configuring Queue Profiles to Manage Buffers and Thresholds](#)

---

Published: 2010-04-09