

## committed-drop-threshold

---

**Syntax** committed-drop-threshold *committedDropThreshold*  
no committed-drop-threshold

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Configures the threshold above which committed-drop-events are logged. The **no** version removes the threshold.

**Options** ■ *committedDropThreshold*—Bits per second in the range 0–1073741824

**Mode** Statistics Profile Configuration

**Related Topics** ■ [Configuring Event Statistics](#)

---

Published: 2010-04-09