

## conformed-drop-threshold

---

**Syntax** conformed-drop-threshold *conformedDropThreshold*  
no conformed-drop-threshold

**Release Information** Command introduced before JUNOS Release 7.1.0.  
**conditional**, **unconditional**, and **final** keywords added in JUNOS Release 7.2.0.

**Description** Configures the threshold above which conformed-drop-events are logged. The **no** version removes the threshold.

**Options** ■ *conformedDropThreshold*—Bits per second in the range 0–1073741824

**Mode** Statistics Profile Configuration

**Related Topics** ■ [Configuring Event Statistics](#)

---

Published: 2010-04-09