

## debounce

---

**Syntax**    `debounce [ seconds ]`  
  
              `no debounce`

**Release Information**    Command introduced in JUNOS Release 9.3.0.

**Description**    Enables the debounce timer and sets the time interval that the interface waits before reporting a state change to the upper-layer protocols. The **no** version restores the default behavior, disabling debounce on the interface.

**Options**    ■    *seconds*—Interval for which an interface must maintain a given state before the interface reports the state change to the upper-layer protocols. Number in the range 1–5 seconds; default value is 1 second.

**Mode**    Interface Configuration

---

Published: 2010-04-09