

instance-interface-type

Syntax instance-interface-type { *instanceInterfaceType* | set | superset }
no instance-interface-type { *instanceInterfaceType* | all }

Release Information Command introduced in JUNOS Release 7.1.0.
lag keyword added in JUNOS Release 8.1.0.
set and **superset** keywords added in JUNOS Release 9.2.0.

Description Assigns an instance-interface type to a QoS parameter definition. Instance-interface types indicate the interfaces for which QoS clients can assign QoS parameter instances. You can specify up to eight instance-interface types for each parameter definition. The **no** version removes the specified instance-interface type from the parameter definition.

- Options**
- *instanceInterfaceType*—One of the following instance-interface types: atm, atm-vc, atm-vp, bridge, ethernet, fr-vc, ip, ip-tunnel, ipv6, lag, l2tp-session, l2tp-tunnel, lsp, pppoe, serial, server-port, svlan, vlan
 - set—Specifies an interface set as an instance-interface type
 - superset—Specifies an interface superset as an instance-interface type
 - all—Removes all instance-interface types

Mode QoS Parameter Definition

- Related Topics**
- Configuring a Basic Parameter Definition for QoS Administrators
 - Creating a QoS Parameter on an Interface Superset or Interface Set

Published: 2010-04-09