

issu initialize

Syntax issu initialize

Release Information Command introduced in JUNOS Release 9.0.0.

Description Starts the initialization phase of unified ISSU. There is no **no** version.

Mode Privileged Exec

Published: 2010-04-09