

minimum-links

Syntax minimum-links *minimumLinkValue*
 no minimum-links

Release Information Command introduced in JUNOS Release 10.0.0.

Description Configures the minimum number of member links in the link aggregation group (LAG) bundle that must be in the Collecting/Distributing state for the LAG interface to be considered up. The **no** version resets the minimum number of member links to the default value.

Options ■ *minimumLinkValue*—Minimum number of links in the LAG bundle in the range 1-8 (8 is the maximum number of member links per LAG bundle); default value is 1.

Mode Interface Configuration

Related Topics ■ *Configuring 802.3ad Link Aggregation and Link Redundancy* in the *JUNOS Link Layer Configuration Guide*

Published: 2010-04-09