

## radius dynamic-request server

---

**Syntax** [ no ] radius dynamic-request server *ipAddress*

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Specifies the IP address of a RADIUS dynamic-request server and puts the E Series router into RADIUS Configuration mode. The **no** version deletes the instance of the RADIUS server.



**NOTE:** The **radius dynamic-request server** command replaces the functionality of the **radius disconnect client** command.

The RADIUS Disconnect Configuration mode is deprecated. Use the **radius dynamic-request server** command to enter RADIUS Configuration mode and configure options formerly available in RADIUS Disconnect Configuration mode.

---

**Options** ■ *ipAddress*—IP address of the server

**Mode** Global Configuration

**Related Topics** ■ [Configuring RADIUS-Based Mirroring](#)

---

Published: 2010-04-08