

## radius relay server

---

**Syntax** radius relay { authentication | accounting } server  
no radius relay [ { authentication | accounting } server ]

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Configures a RADIUS relay authentication or accounting server, and enters RADIUS Relay Configuration mode. The **no** version deletes all RADIUS relay servers or the specific authentication or accounting server.

- Options**
- authentication—Configure the RADIUS relay authentication server
  - accounting—Configure the RADIUS relay accounting server

**Mode** Global Configuration

---

Published: 2010-04-08