

radius rollover-on-reject

Syntax radius rollover-on-reject { enable | disable }
no radius rollover-on-reject

Release Information Command introduced before JUNOS Release 7.1.0.

Description On a virtual router, specifies whether the router should roll over to the next RADIUS server when the router receives an access-reject message for the user it is authenticating. The **no** version restores the default value, disable.

- Options**
- enable—Specifies the feature
 - disable—Disables the feature; this is the default setting

Mode Global Configuration

Published: 2010-04-08