

retransmit

Syntax retransmit *retries*
 no retransmit

Release Information Command introduced before JUNOS Release 7.1.0.

Description Specifies the maximum number of times a router retransmits a RADIUS packet to an authentication or accounting server. The **no** version restores the default value.

Options ■ *retries*—Number of retries, in the range 0–100; default value is 3

Mode RADIUS Configuration

Published: 2010-04-08