

## service dhcp-local

---

**Syntax** [ no ] service dhcp-local [ equal-access | standalone [ authenticate ] ]

**Release Information** Command introduced before JUNOS Release 7.1.0.

**Description** Enables the DHCP local server. In standalone mode, the **authenticate** keyword enables AAA-based authentication for incoming DHCP clients. The **no** version disables the DHCP local server and does not save the previous settings.

- Options**
- equal-access—Enables the DHCP local server to work with the SRC (formerly SDX or SSC) or HTTP local server for non-PPP equal access, the default option
  - standalone—Configures the router as a DHCP local server
  - authenticate—Enables AAA-based authentication of incoming DHCP clients

**Mode** Global Configuration

---

Published: 2010-04-08