

show aaa accounting default

Syntax show aaa accounting { *subscriberType* } default [*filter*]

Release Information Command introduced before JUNOS Release 7.1.0.

Description Displays the AAA accounting method used for the particular type of subscriber.

- Options**
- *subscriberType*—Specifies the type of subscriber:
 - atm1483—ATM 1483 subscribers
 - ip—IP subscriber management interfaces
 - ipsec—IPSec subscribers
 - ppp—PPP subscribers
 - radius-relay—RADIUS relay subscriber
 - tunnel—Tunnel subscribers
 - *filter*—See Filtering show Commands

Mode Privileged Exec

Published: 2010-04-08