

show icr-partition

Syntax show icr-partition [*interfaceType interfaceSpecifier* [*vrid*]] [*filter*]

Release Information Command introduced in JUNOS Release 10.3.0.

Description Displays ICR partition information for the VRID configured on the specified interface.

- Options**
- *interfaceType*—One of the following interface types listed in Interface Types and Specifiers
 - fastEthernet
 - gigabitEthernet
 - tenGigabitEthernet
 - *interfaceSpecifier*—Particular interface; format varies according to interface type; see Interface Types and Specifiers
 - *vrid*—Virtual router ID identifier; a number in the range 1– 255
 - *filter*—See Filtering show Commands

Mode Privileged Exec

- Related Topics**
- Monitoring the Configuration of an ICR Partition Attached to an Interface
 - Monitoring the Status of ICR Partition Accounting
 - Monitoring the Configuration of ICR Partitions

Published: 2010-04-08